

TOYOTA INDUSTRIAL VEHICLE

PARTS CATALOG

**02—2TD15, 18
02—2TD20, 23, 25**

No.G708—4

TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.

TOYOTA

TOWING TRACTOR

PARTS CATALOG

MODEL	2TD
FRAME NO.	2TD25
ENGINE NO.	1DZ

DESCRIPTION

Cyclone Air Cleaner Single Element	

TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.

QUICK REFERENCE INDEX

INTRODUCTION

ENGINE

FUEL SYSTEM

CHASSIS

BODY

ELECTRICAL SYSTEM

G708-3 1DZ MTM

G708-4 1DZ ATM 9209

GENERAL INFORMATION

This parts catalog has been prepared for the customers of Toyota Industrial Vehicles and this shows only the part name codes instead of parts numbers.

When ordering parts from your local Toyota dealer, please specify the complete model number of the truck, the engine number or frame number. Also it is essential that you specify the part name codes described in the pages of illustrations and text.

The complete model number and frame number are shown in the front page of this catalog. All the columns in this quick reference index are supposed to be filled out by both the factory and your local dealer.

For the industrial vehicle with optional equipment, which is described in the lower part of the DESCRIPTION, it is imperative for you to specify optional equipment when ordering parts.

Your Toyota dealer has always been furnished with enough information to decode the correct part numbers based on your information of model number, engine number or frame number as well as part name code.

INFORMATIONS D'ORDRE GENERAL

Ce catalogue de pièces a été préparé pour les propriétaires de Véhicules Industriels Toyota. On n'y trouvera que les codes de désignation de pièces au lieu des numéros de pièces.

Pour la commande de pièces auprès de votre concessionnaire Toyota, prière de spécifier le numéro de modèle complet de l'engin, le numéro du moteur ou le numéro du châssis. Il est aussi nécessaire de spécifier les codes de désignation de pièces comme ils sont décrits dans les pages d'illustrations et dans le texte.

Le numéro de modèle complet et le numéro de châssis sont indiqués en première page de ce catalogue. Toutes les colonnes de l'index de référence rapide devraient être remplies par l'usine et par votre concessionnaire.

Pour le véhicule industriel avec équipement optionnel, décrit en bas de page sous la rubrique "DESCRIPTION", il convient de bien spécifier qu'il s'agit de cet équipement lors de commande de pièces.

Votre concessionnaire Toyota est toujours suffisamment informé pour décoder les numéros de pièces sur la base de votre information du numéro de modèle, du numéro de moteur ou de châssis, et des codes de désignation de pièces.

INFORMACION GENERAL

Este catálogo de piezas ha sido preparado para los clientes de vehículos industriales de TOYOTA, e incluye tan sólo los códigos de nombre de pieza en lugar de los números de pieza.

Cuando solicite piezas a su distribuidor local de TOYOTA especifique por favor el número de modelo completo del vehículo, el número de motor o el número de bastidor. Asimismo, es esencial que Vd. especifique los códigos de nombre de pieza descritos en las páginas de ilustraciones y de texto.

El número completo de modelo y el número de bastidor se indican en la portada de este catálogo. Se supone que todas las columnas de este índice de referencia se han rellenado, tanto por parte de la fábrica como por parte de su distribuidor local.

En lo que concierne a los vehículos industriales con equipos opcionales, que se describen en la parte baja de la DESCRIPCION, es absolutamente necesario que especifique equipos opcionales cuando solicite piezas de repuesto.

Su distribuidor local de TOYOTA posee la información necesaria para descifrar los números correctos de cada pieza a base de su información de número de modelo, número de motor o número de bastidor, así como el código de nombre de la pieza.

ALLGEMEINE INFORMATION

Dieser Teilekatalog wurde für die Benutzer von Toyota Industriefahrzeugen zusammengestellt und zeigt anstelle von Teilenummern nur die Teilennamen-Kodes.

Geben Sie bei Teilebestellungen von Ihrem Toyota-Händler am Platz bitte die vollständige Modellnummer des Fahrzeugs, die Motornummer oder Fahrgestellnummer an. Es ist auch erforderlich, daß Sie die in den Illustrationen und im Text beschriebenen Teilennamen-Kodes angeben.


Die vollständige Modellnummer und Fahrgestellnummer finden Sie auf der Vorderseite dieses Katalogs. Alle Spalten in dieser Bezugstabelle sollten sowohl vom Werk als von Ihrem Händler am Platz ausgefüllt werden.

Für Industriefahrzeuge mit Sonderausrüstung, welche im unteren Teil der BESCHREIBUNG erläutert ist, müssen Sie bei der Bestellung von Teilen unbedingt diesbezügliche Angaben machen.

Ihr Toyota-Händler verfügt stets über genügend Information, um die richtigen Teilenummern zu entschlüsseln, basiert auf Ihren Angaben zu Modellnummer, Motornummer oder Fahrgestellnummer und den Teilennamen-Kodes.

ILLUSTRATION AND PART NAME CODE TEXT PAGE COMPOSITION

 Essentially, one (1) page will present both the illustration and part name code. However, when the space for text page is not enough the next page will be used in succession.

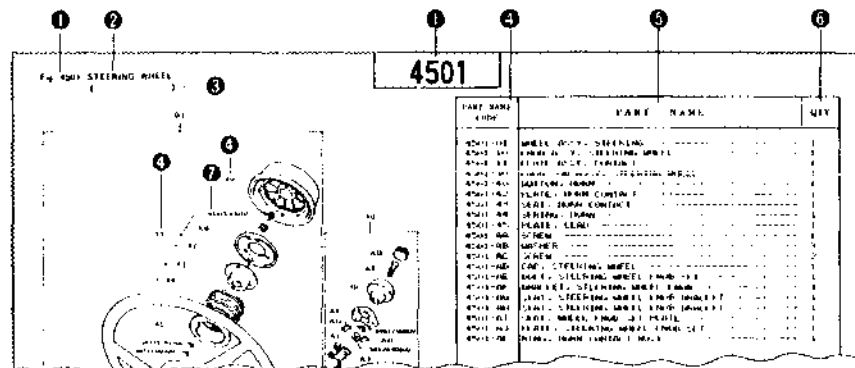

- 1 Figure number
This parts catalog has been prepared according to the figure numbers.
- 2 Figure title
A representative part name which is the major assembly part name is shown as the figure title of the illustration.
- 3 Sub title
The optional name or special specification of each illustration are indicated.
- 4 Part name code
This is a combination of figure number and codes of illustrations pertaining to each part. This is a key for your Toyota dealer to find the correct part numbers.
- 5 Part name
As a rule, the part name is indicated for each of the part name codes.
- 6 QTY (Quantity)
The quantity column indicates the utilized pieces of part name code unit. When the utilized quantity changes according to each of the vehicles, maximum is indicated.
When the utilized quantity of the parts differs or is more than 100 pieces, quantity 99 is indicated.
- 7 Standard parts numbers
The standard parts such as the bolts, nuts, washer, etc., are described with parts numbers. When ordering these parts, specify parts numbers.

COMPOSICION DE LAS PAGINAS DE ILUSTRACIONES Y DE TEXTO DE CODIGOS DE NOMBRE DE PIEZAS


Básicamente, una (1) página incluirá tanto la ilustración como el código de nombre de la pieza.

No obstante, si el espacio no fuese suficiente, se utilizará la página siguiente.

- 1 Número de figura
Este catálogo de piezas se ha preparado de acuerdo con los números de las figuras.
- 2 Título de las figuras
Como título de las figuras de la página de ilustraciones, se incluye un nombre que sea representativo del nombre del mayor conjunto.
- 3 Subtítulo
Se indican el nombre opcional o las especificaciones especiales de cada ilustración.
- 4 Código de nombre de pieza
Se trata de una combinación de número de figura y de código de las ilustraciones correspondientes a cada pieza. Esta es la clave para que su distribuidor local de TOYOTA pueda encontrar el número de pieza correcto.
- 5 Nombre de la pieza
Como norma, se indica el nombre de cada uno de los códigos de nombre de pieza.
- 6 QTY (Cantidad)
La columna de cantidad indica el número de piezas utilizadas de cada unidad de código de nombre de pieza.
Cuando la cantidad utilizada es intercambiable entre cada uno de los vehículos, se indica el máximo.
Cuando la cantidad de piezas utilizadas pueda diferir o ser superior a 100, se indica como cantidad 99.
- 7 Números de piezas normalizadas
Las piezas corrientes, tales como pernos, tuercas, arandelas etc., se describen con número de pieza. Cuando solicite tales piezas, indique su número de pieza.

ILLUSTRATION ET COMPOSITION DU DE TEXTE DE CODE DE DESIGNATION DE PIECE

 Une (1) page contiendra essentiellement une illustration et ses codes de désignation de pièce. Toutefois, lorsque l'espace réservé au texte est insuffisant, la continuation se trouvera sur la page suivante.

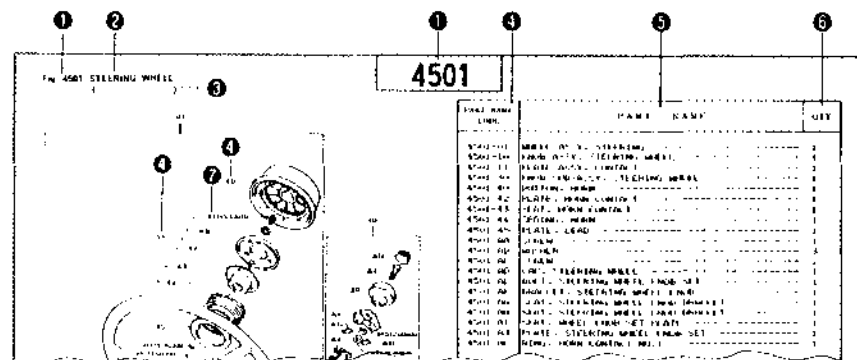

- 1 Numéro de figure
Ce catalogue de pièces a été préparé en fonction des numéros de figures.
- 2 Titre de figure
Une désignation de pièce représentative, celle d'une pièce d'un ensemble important, est indiquée comme titre de figure de l'illustration.
- 3 Sous-titre
La désignation optionnelle ou les spécifications spéciales de chaque illustration sont indiquées.
- 4 Code de désignation de pièce
Obtenu en combinant le numéro de figure et les codes des illustrations inhérents à chaque pièce, ce code permettra à votre concessionnaire Toyota de trouver les numéros de pièces corrects.
- 5 Désignation de pièce
La désignation de la pièce est indiquée pour chacun des codes de désignation de pièce.
- 6 Q'ty (quantité)
La colonne quantité indique les pièces utilisées de l'unité de code de désignation de pièce. La quantité maximum est indiquée quand la quantité utilisée diffère pour chacun des véhicules. Quand la quantité de pièces utilisées diffère ou lorsqu'elle dépasse 100 pièces, la quantité 99 est indiquée.
- 7 Numéros de pièces standard
Les pièces standard comme les boulons, les écrous, les rondelles, etc., sont décrits dans les numéros de pièces. Pour commander ces pièces, prière de spécifier les numéros de pièces.

ABBILDUNG UND TEXTSEITENAUFBAU FÜR TEILENAMEN-KODE

Grundsätzlich finden Sie auf einer (1) Seite sowohl die Abbildung als auch den Teilnamen-Kode.

Wenn für den Text jedoch nicht genügend Platz vorhanden ist, wird er auf der nächsten Seite fortgesetzt.

- 1 Abbildungsnummer
Dieser Teilekatalog wurde nach Abbildungsnummern zusammengestellt.
- 2 Abbildungstitel
Ein stellvertretender Teilname, welcher zugleich die Bezeichnung für die Hauptbaugruppe ist, wird als Abbildungstitel der Illustration angegeben.
- 3 Untertitel
Ein zusätzlicher Name oder eine besondere Kennzeichnung werden für jede Illustration angegeben.
- 4 Teilnamen-Kode
Dies ist eine Kombination von Ziffern und Abbildungskodes, die jedes Teil betreffen. Es ist ein Schlüssel für Ihren Toyota Händler, um die richtigen Teilenummern zu finden.
- 5 Teilname
Grundsätzlich wird der Teilname für alle Teilnamen-Kodes angegeben.
- 6 QTY (Menge)
Die Mengenspalte gibt die benutzte Stückzahl von Teilnamen-Kode Einheiten an. Wenn die benutzte Stückzahl je nach Fahrzeug verschieden ist, wird die Höchstmenge angegeben. Wenn die benutzte Menge 100 Stück überschreiten kann, wird als Menge 99 angegeben.
- 7 Standardteile Nummern
Die Standardteile, wie Schrauben, Muttern, Unterlegscheiben usw., sind in den Teilenummern beschrieben. Geben Sie bei Bestellung dieser Teile die Teilenummern an.

DATA PLATE & SERIAL NUMBERS

For retrieving correct part numbers, it's indispensable to know the truck model, as well as frame number (or engine number). Customers can obtain said information in the data plate on the truck or in this user parts catalog.

PLAQUE DE DONNEES TECHNIQUES & NUMEROS DE SERIE

Pour relever correctement le numéro des pièces, il est indispensable de connaître le modèle de l'engin, ainsi que le numéro du châssis (ou du moteur). Les propriétaires peuvent trouver l'adite information sur la plaque de données techniques de l'engin ou dans le présent ouvrage.

Data plate
Placa de datos
Plaque de données techniques
Datenplatte

TOYOTA TOWING TRACTOR

MODEL

SERIAL NO.
FRAME NO.
MAXIMUM
TOWING CAP.
WEIGHT



TOYOTA AUTOMATIC
LOOM WORKS, LTD.
KARIYA, JAPAN

AT 57852-40100-71

PLACA DE DATOS Y NUMEROS DE SERIE

Para obtener los números de pieza correctos, es indispensable conocer el modelo del vehículo, así como el número del bastidor (o del motor). Los clientes pueden obtener dicha información por la placa de datos del vehículo o en este catálogo de piezas para el usuario.

DATENPLATTE & SERIENNUMMERN

Um die richtige Teilenummer zu ermitteln, müssen unbedingt das Fahrzeugmodell sowie die Fahrgestellnummer (oder die Motornummer) bekannt sein. Kunden können diese Angaben von der Datenplatte am Fahrzeug oder in diesem Teilekatalog für Benutzer entnehmen.

Data plate
Placa de datos
Plaque de données techniques
Datenplatte

Engine Number
(Top of the cylinder head)
Número de motor
(Parte superior de la culata)

Numéro de moteur
(sur la culasse)
Motornummer
(Oben am Zylinderkopf)

Frame Number
(Top of the frame)
Número de bastidor
(Parte superior del bastidor)

Numéro de châssis
(haut du châssis)
Fahrgestellnummer
(Oben am Fahrgestell)


 
 
 
 
 
 
 
 
 
 
 
 
 
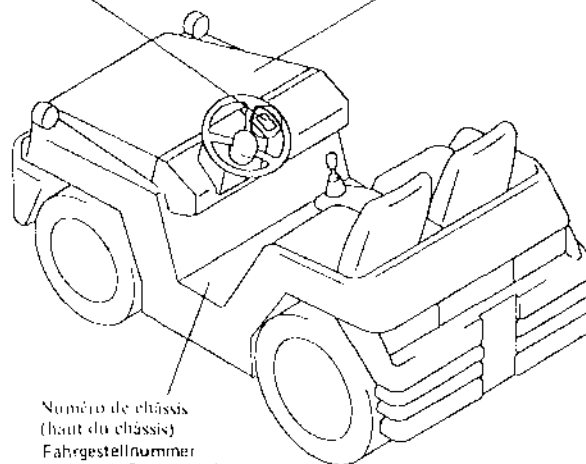 


FIG. INDEX

FIG. 1101  Engine Assembly	FIG. 1101  Short Block Assembly	FIG. 1101  Overhaul Gasket Kit	FIG. 1104  Cylinder Head	FIG. 1105  Cylinder Block	FIG. 1106  Gear Cover & End Plate	FIG. 1107  Mounting					
ENGINE GROUP (1/2)											
											
FIG. 1703  Air Cleaner						FIG. 1201  Ventilation Hose					
						FIG. 1301  Crankshaft & Piston					
						FIG. 1302  Crankshaft & Valve					
						FIG. 1303  Timing Chain					
FIG. 1702  Exhaust Pipe	FIG. 1701  Manifold	FIG. 1603  Radiator & Fan	FIG. 1601  Water Pump	FIG. 1503  Oil Cooler	FIG. 1502  Oil Filter	FIG. 1501  Oil Pump					

ILLUSTRATED INDEX
INDEX ILLUSTRÉ
ILLUSTRIERTES INHALTSVERZEICHNIS
INDICE ILLUSTRADO

 FIG. INDEX




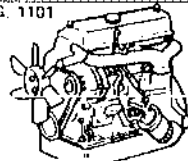
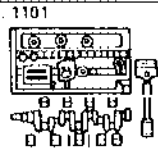
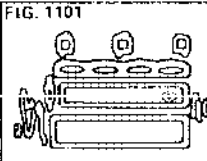
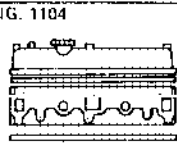
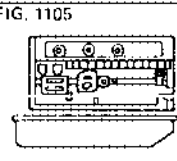
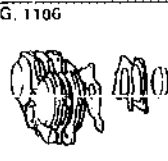
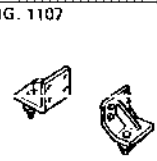
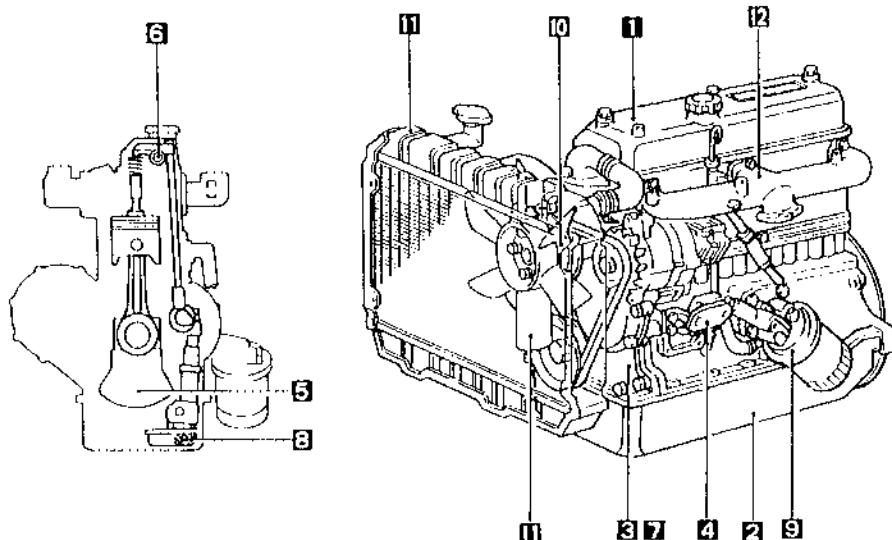

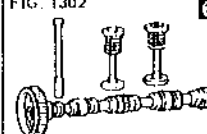



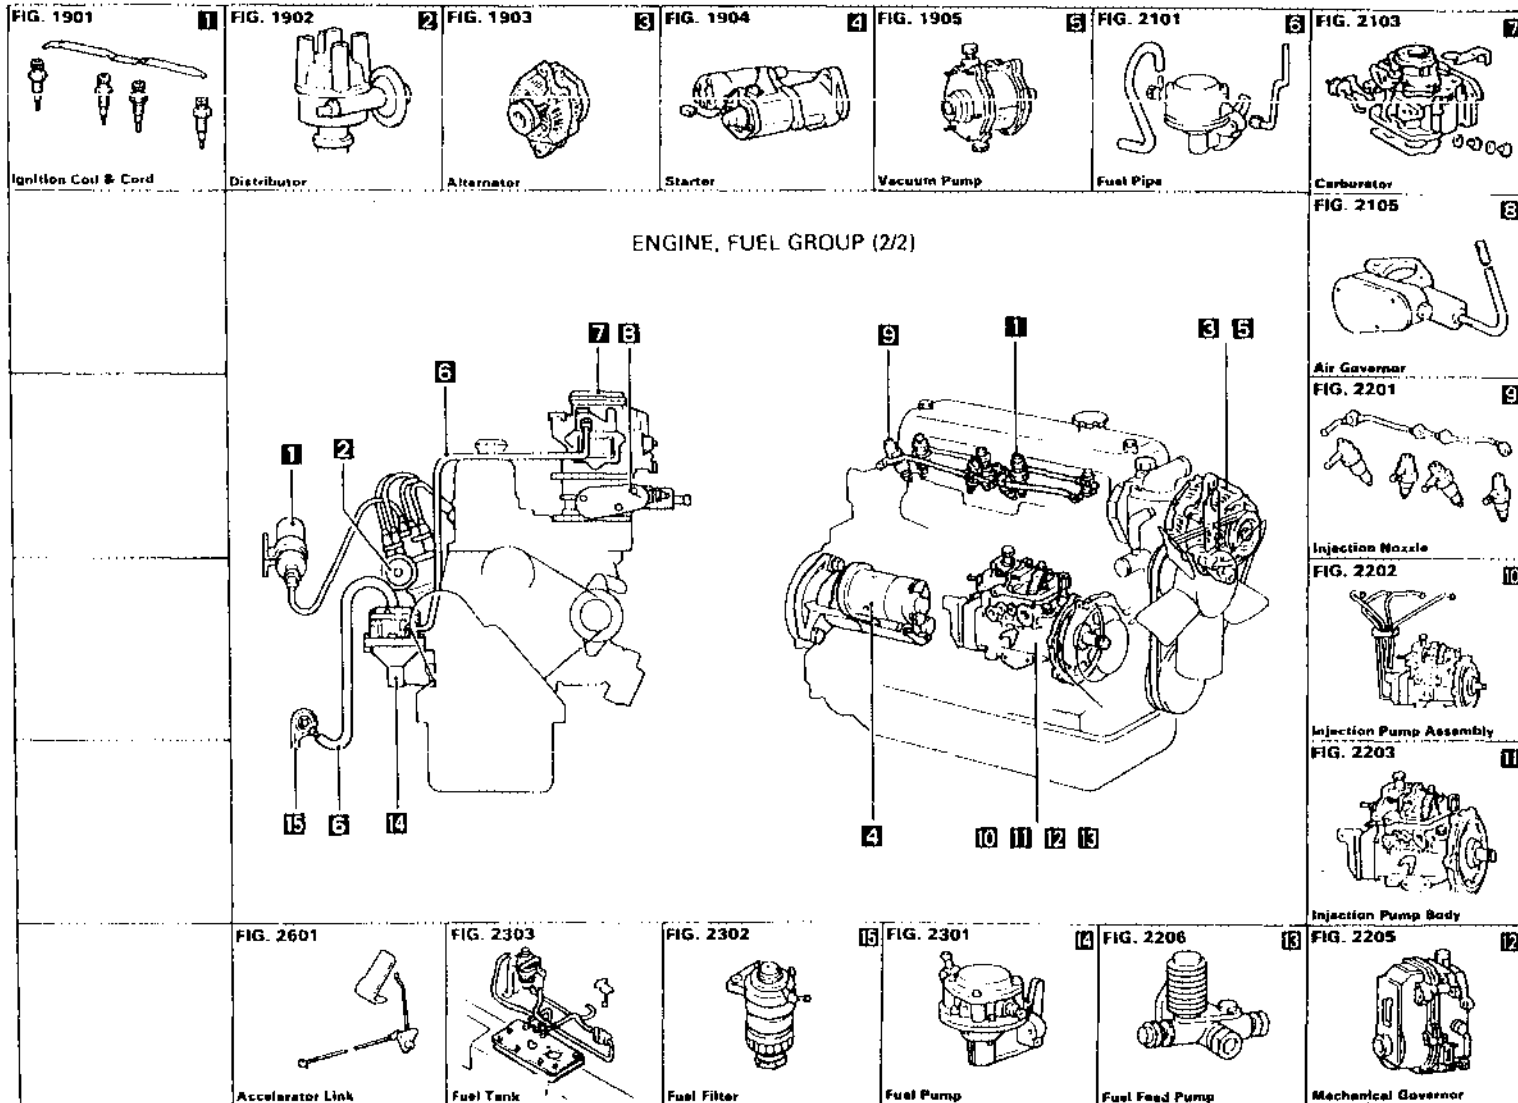


1000-11-50

G708-002

ILLUSTRATED INDEX
INDEX ILLUSTRÉ
ILLUSTRIRTES INHALTSVERZEICHNIS
INDICE ILLUSTRADO

FIG. INDEX

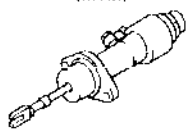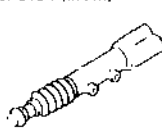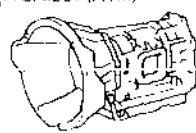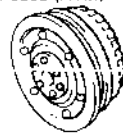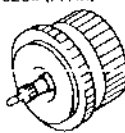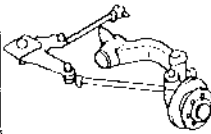          
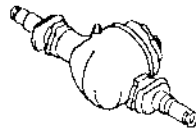 
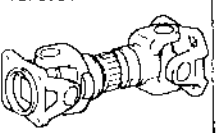 
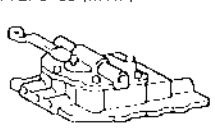 
 
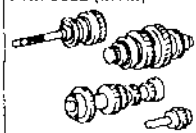 
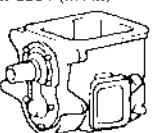 
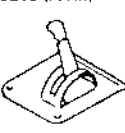 
FIG. 3101 (MTM)  Clutch	FIG. 3102 (MTM)  Clutch Pedal	FIG. 3103 (MTM)  Clutch Master Cylinder	FIG. 3104 (MTM)  Clutch Release Cylinder	FIG. 3201 (ATM)  Torqueconverter Housing	FIG. 3202 (ATM)  Torqueconverter	FIG. 3203 (ATM)  Torqueconverter Clutch
CHASSIS GROUP (1 / 2)						
						FIG. 3204 (ATM)  Torqueconverter Gear
						FIG. 3206 (ATM)  Control Valve
FIG. 4306  Front Axle & Tie-Rod						FIG. 3212 (ATM)  Governor
FIG. 4205  Rear Axle Shaft						FIG. 3213 (ATM)  Torqueconverter Piping
FIG. 4101  Differential	FIG. 3701  Propeller Shaft & Universal Joint	FIG. 3303 (MTM)  Gear Shift Fork	FIG. 3303 (MTM)  Gear Shift Fork	FIG. 3302 (MTM)  Transmission Gear	FIG. 3301 (MTM)  Transmission Case	FIG. 3215 (ATM)  Shift Lever

0900-484

G708-003

ILLUSTRATED INDEX
INDEX ILLUSTRÉ
ILLUSTRIRTES INHALTSVERZEICHNIS
INDICE ILLUSTRADO

FIG. INDEX




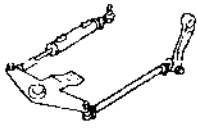 
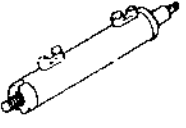 
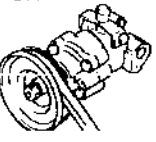 
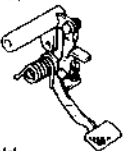 
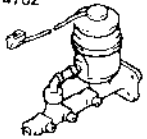 
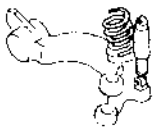 
 
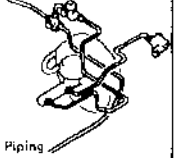 
FIG. 4401  Front Wheel & Tire (Single)	FIG. 4403  Rear Wheel & Tire	FIG. 4501  Steering Wheel	FIG. 4502  Steering Post	FIG. 4507  Drag Link & Steering Piping	FIG. 4508  Steering Power Cylinder	FIG. 4511  Steering Vane Pump
CHASSIS GROUP (2/2)						FIG. 4601  Parking Brake
						FIG. 4701  Brake Pedal
						FIG. 4702  Brake Master Cylinder
						FIG. 4707  Brake Booster
		FIG. 4801  Suspension Spring	FIG. 4801  Suspension Spring	FIG. 4716  Disc Brake	FIG. 4715  Drum Brake	FIG. 4714  Brake Piping

0000-485

G708-004

ILLUSTRATED INDEX
INDEX ILLUSTRÉ
ILLUSTRIRTES INHALTSVERZEICHNIS
INDICE ILLUSTRADO

FIG. INDEX

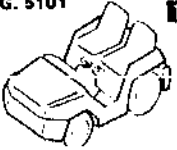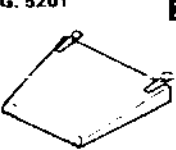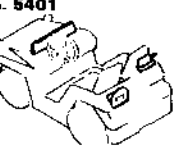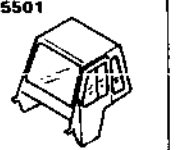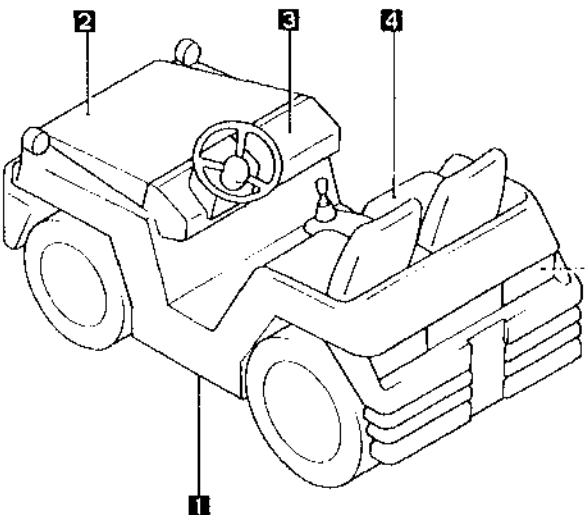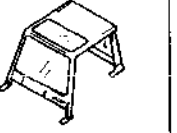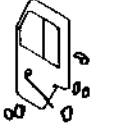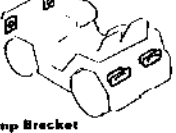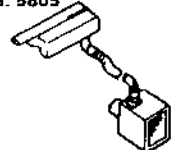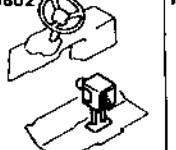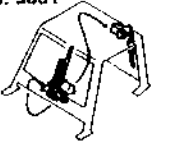           FIG. 5101  Frame & Weight	FIG. 5201  Hood & Hinge	FIG. 5301  Instrument Panel & Floor	FIG. 5308  Driver Seat	FIG. 5401  Head Guard & Accessory	FIG. 5405  Indicator Plate	FIG. 5501  Steel Cabin
BODY, ELECTRICAL GROUP 						FIG. 5502  Front Grass
						FIG. 5504  Door Lock
						FIG. 5601  Wiring & Clamp
						FIG. 5611  Lamp
						FIG. 5612  Lamp Bracket
FIG. 5805  Defroster	FIG. 5802  Heater	FIG. 5801  Wiper Motor & Blade	FIG. 5708  Speedometer & Speed Alarm	FIG. 5701  Meter & Switch		

UNDA-30113

G708-005E

MEMO

FIG. 1101
ENGINE ASSY

1101

 
102

92/08

107

102 (SHORT BLOCK ASSY)


00

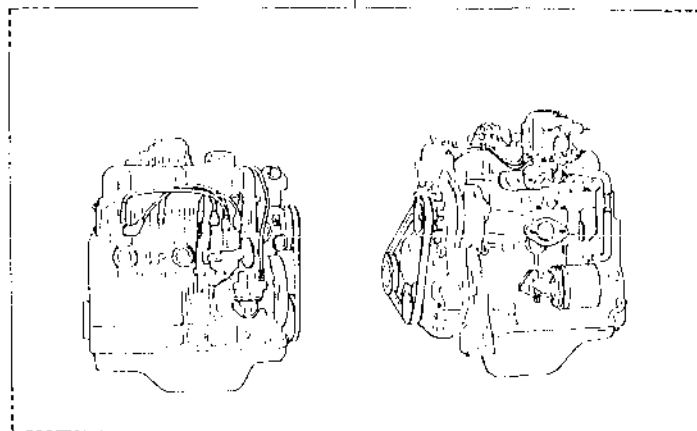

1101-007A


102 (PARTIAL ENGINE ASSY)

 01

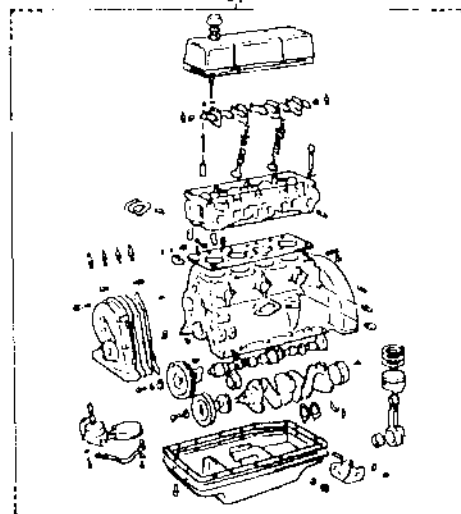

1101 004

 02

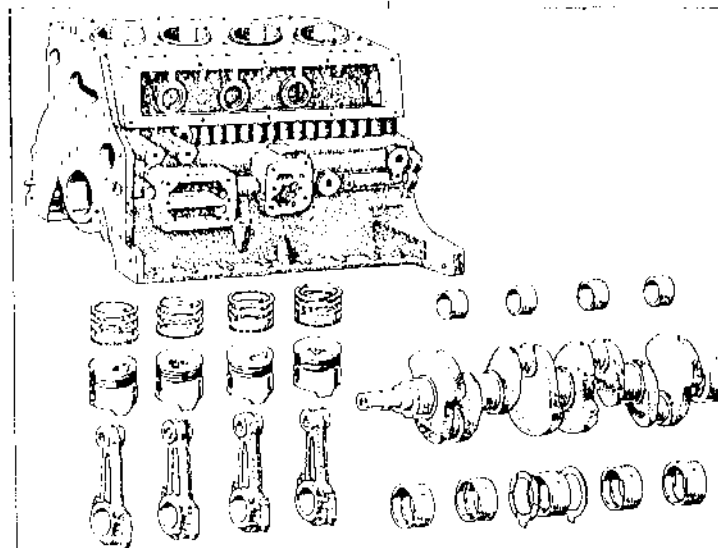

1101 006

G/08-001

1101 002A
1101 002B

1101 002C

FIG. 1101
ENGINE ASSY

 
1101

1DZ


92/08

1DZ

00K

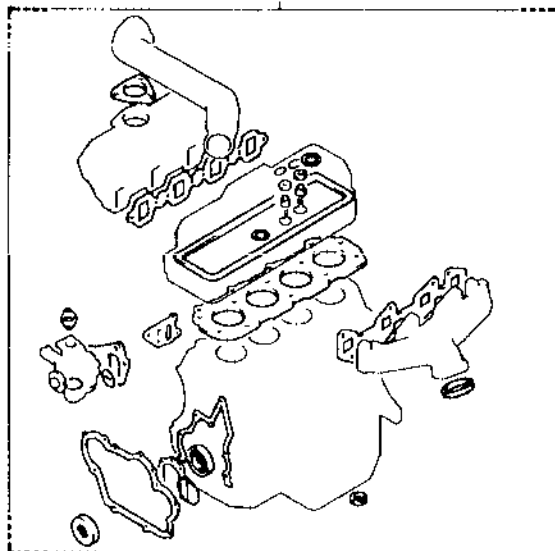

00L

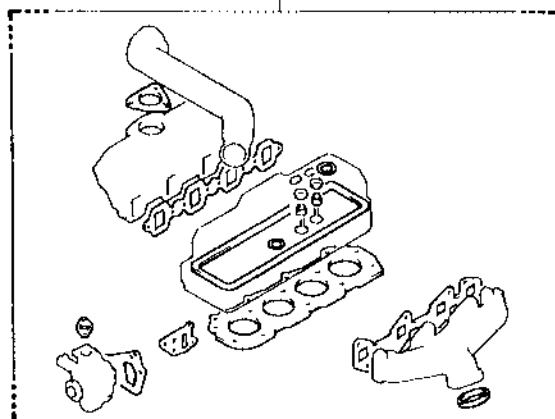 

1101-077

PART NAME CODE	PART NAME	QTY
1101-00	ENGINE ASSY	1
1101-00K	GASKET KIT, ENGINE O/H	1
1101-00L	GASKET KIT, ENGINE VALVE GRIND	1

G708-002E


FIG. 1104
CYLINDER HEAD

1104

10Z

9Z/08

 10Z

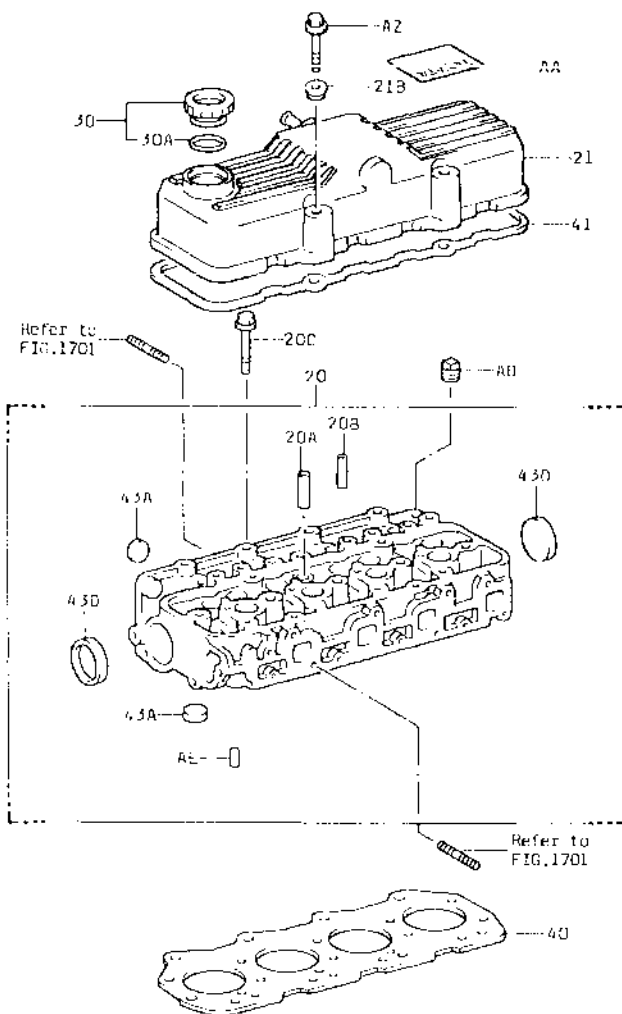

1104-067A

PART NAME CODE	PART NAME	QTY
1104-20	HEAD SUB-ASSY, CYLINDER	1
1104-20A	BUSHING, VALVE GUIDE INTAKE	4
1104-20B	BUSHING, VALVE GUIDE EXHAUST	4
1104-20C	BOLT (FOR CYLINDER HEAD SET)	18
1104-21	COVER SUB-ASSY, CYLINDER HEAD	1
1104-21B	WASHER, SEAL (FOR CYLINDER HEAD COVER)	4
1104-30	CAP SUB-ASSY, OIL FILLER	1
1104-30A	GASKET (FOR OIL FILLER CAP)	1
1104-40	GASKET, CYLINDER HEAD	1
1104-41	GASKET, CYLINDER HEAD COVER	1
1104-43A	PLUG, TIGHT, NO.1	11
1104-43D	PLUG, TIGHT, NO.4	2
1104-AA	PLATE, CAUTION	1
1104-AB	PLUG, W/HEAD TAPER SCREW	1
1104-AE	TUBE	4
1104-AZ	BOLT	4

G708-001E

FIG. 1105
CYLINDER BLOCK

 
 
 
 
1105

10Z

92/08

10Z

10Z (IN-LINE PUMP)

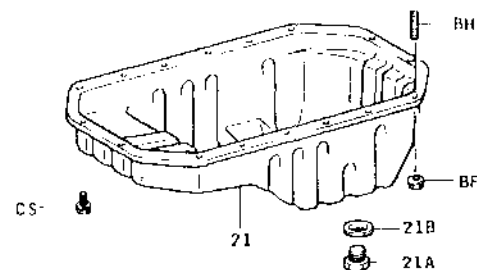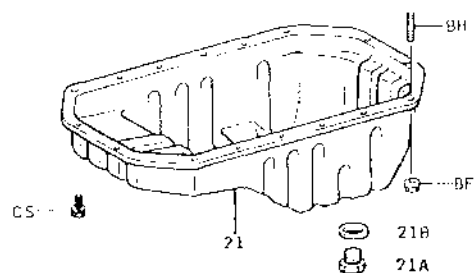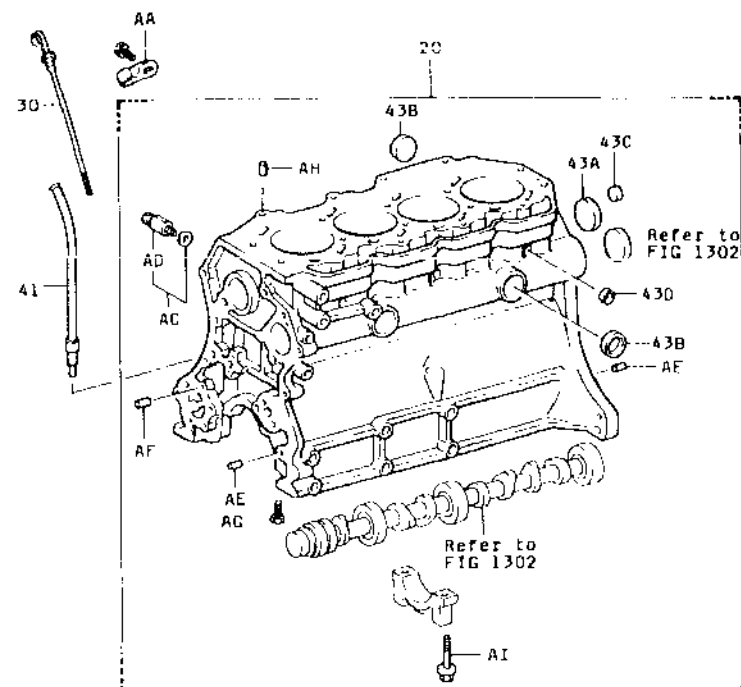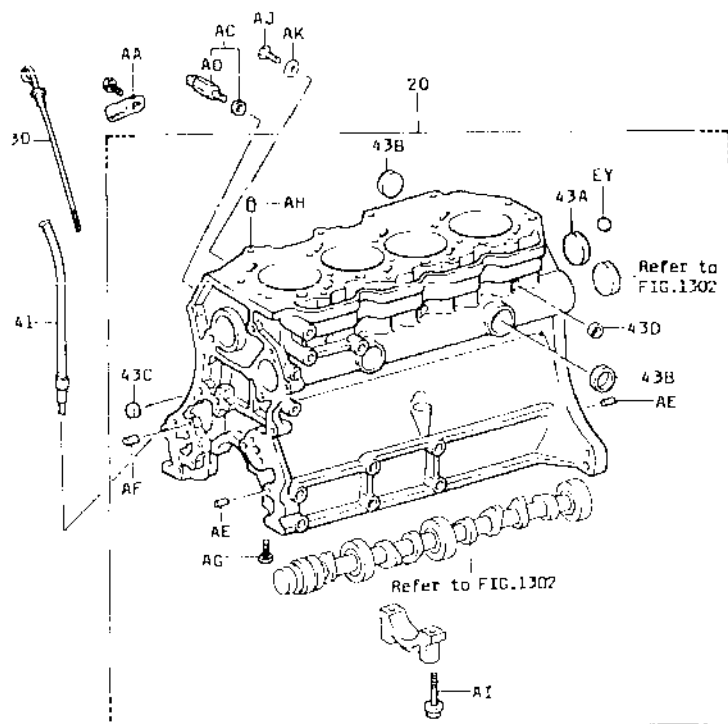

1105-1140

1105-120

G708-001

FIG. 1105
CYLINDER BLOCK

1105

10Z

92/08

PART NAME CODE	PART NAME	QTY
1105-20	BLOCK SUB-ASSY, CYLINDER	1
1105-21	PAN SUB-ASSY, OIL	1
1105-21A	PLUG (FOR OIL PAN DRAIN)	1
1105-21B	GASKET (FOR OIL PAN DRAIN PLUG)	1
1105-30	GAGE SUB-ASSY, OIL LEVEL	1
1105-41	GUIDE, OIL LEVEL GAGE	1
1105-43A	PLUG, TIGHT, NO.1	1
1105-43B	PLUG, TIGHT, NO.2	6
1105-43C	PLUG, TIGHT, NO.3	3
1105-43D	PLUG, TIGHT, NO.4	3
1105-AA	SUPPORT, OIL LEVEL GAGE GUIDE	1
1105-AC	COCK SUB-ASSY, DRAIN	1
1105-AD	PLUG, DRAIN COCK	1
1105-AE	PIN, STRAIGHT	6
1105-AF	PIN, STRAIGHT	2
1105-AG	PLUG, W/HEAD TAPER SCREW	2
1105-AH	PIN, RING	2
1105-AI	BOLT	10
1105-AJ	PLUG, STRAIGHT	1
1105-AK	GASKET	1
1105-BF	NUT	2
1105-BH	BOLT, STUD	2
1105-CS	BOLT, W/WASHER	14

G/08-002E

0003


FIG. 1106
TIMING GEAR COVER & END PLATE

1106

10Z

90/07

 10Z

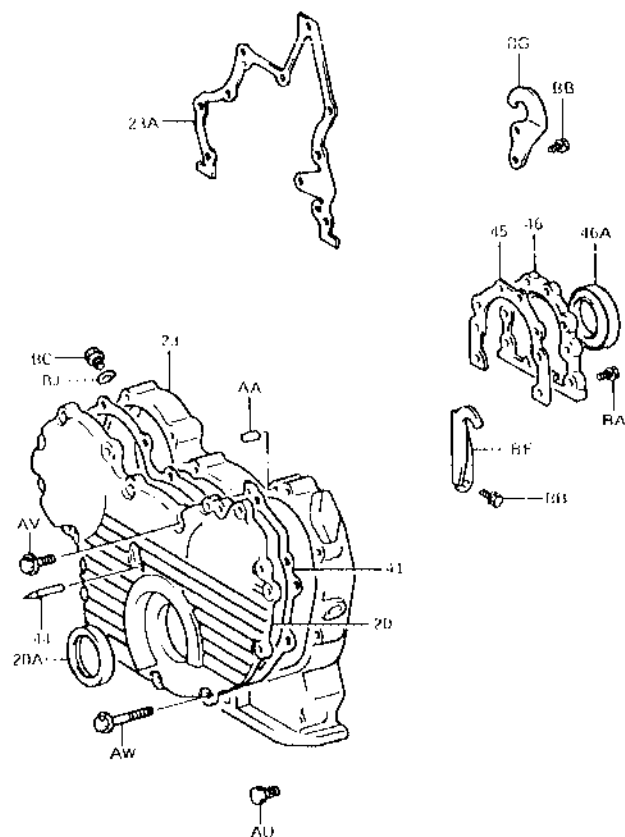

PART NAME	PART NAME	QTY
CODE		
1106-11	CASE ASSY, TIMING CHAIN, W/WATER PUMP	1
1106-20	COVER SUB-ASSY, TIMING GEAR (OR CHAIN)	1
1106-20A	SEAL, OIL (FOR TIMING GEAR COVER)	1
1106-23	CASE SUB-ASSY, TIMING GEAR	1
1106-25A	GASKET, TIMING GEAR CASE	1
1106-41	GASKET, TIMING GEAR (OR CHAIN) COVER	1
1106-44	POINTER, TIMING	1
1106-45	GASKET, REAR OIL SEAL RETAINER	1
1106-46	RETAINER, REAR OIL SEAL	1
1106-46A	SEAL, ENGINE REAR OIL	1
1106-AA	PIN, STRAIGHT	5
1106-AU	BOLT	5
1106-AV	BOLT	5
1106-AW	BOLT	9
1106-BA	BOLT	6
1106-BB	BOLT	4
1106-BC	PLUG	1
1106-BF	HANGER, ENGINE, NO.1	1
1106-BG	HANGER, ENGINE, NO.2	1
1106-BJ	GASKET	1

1106 089

G708-001E

1106 089

1106 089


FIG. 1107
MOUNTING

1107

1DZ

92/08

 1DZ

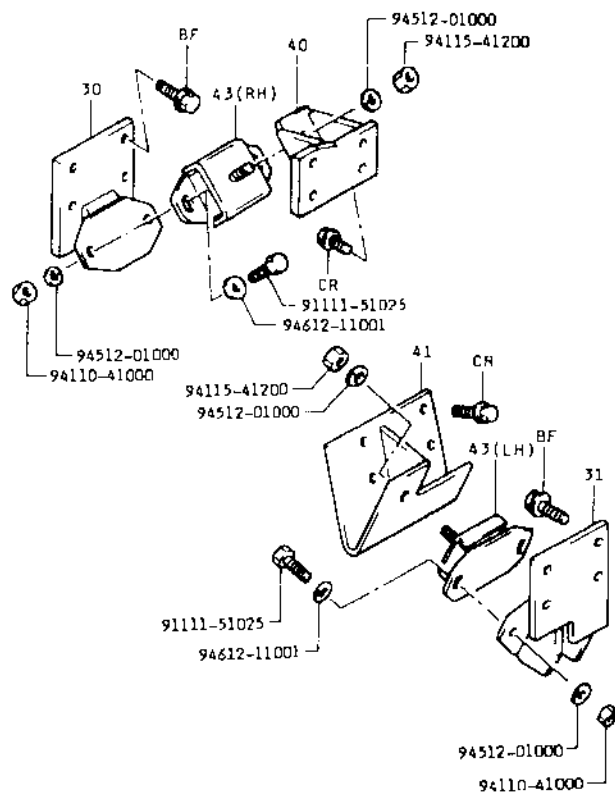

1107-145

PART NAME CODE	PART NAME	QTY
1107-30	SUPPORT SUB-ASSY, ENGINE BRACKET, RH	1
1107-31	SUPPORT SUB-ASSY, ENGINE BRACKET, LH	1
1107-40	BRACKET, ENGINE MOUNTING, FR, RH	1
1107-41	BRACKET, ENGINE MOUNTING, FR, LH	1
1107-43	INSULATOR, ENGINE MOUNTING, FR	1
1107-AH	WASHER, SPRING	2
1107-BF	BOLT, W/WASHER	8
1107-CR	BOLT, W/WASHER	8

G708-001E


FIG. 1201
VENTILATION HOSE

1201

10Z

89/11

 10Z

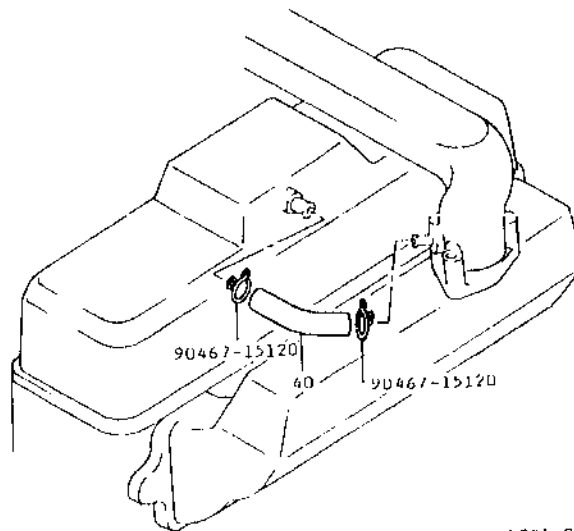

1201-050

PART NAME CODE	PART NAME	QTY
1201-40	HOSE, VENTILATION, NO.1	1

G708-001E


FIG. 1301
CRANKSHAFT & PISTON

1301

1DZ

92/08

 1DZ

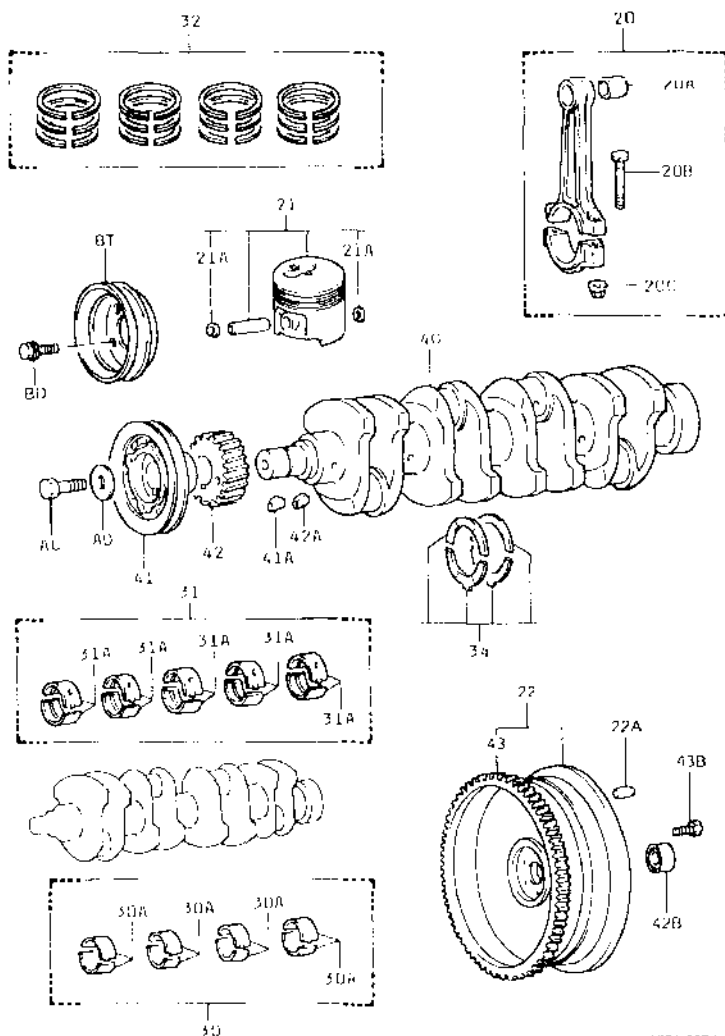

1301 093A

PART NAME	PART NAME	QTY
CODE		
1301-20	ROD SUB-ASSY, CONNECTING	4
1301-20A	BUSHING, CONNECTING ROD	4
1301-20B	BOLT, CONNECTING ROD	8
1301-20C	NUT, HEXAGON (FOR CONNECTING ROD)	8
1301-21	PISTON SUB-ASSY, W/PIN	4
1301-21A	RING, HOLE SNAP (FOR PISTON PIN)	8
1301-22	FLYWHEEL SUB-ASSY	1
1301-22A	PIN, STRAIGHT (FOR FLYWHEEL)	2
1301-30	BEARING SET, CONNECTING ROD	1
1301-30A	BEARING, CONNECTING ROD	4
1301-31	BEARING SET, CRANKSHAFT	1
1301-31A	BEARING, CRANKSHAFT	5
1301-32	RING SET, PISTON	1
1301-34	WASHER SET, CRANKSHAFT THRUST	1
1301-40	CRANKSHAFT	1
1301-41	PULLEY, CRANKSHAFT	1
1301-41A	KEY, CRANKSHAFT (FOR PULLEY SET)	1
1301-42	GEAR OR SPROCKET, CRANKSHAFT TIMING	1
1301-42A	KEY, CRANKSHAFT (FOR TIMING GEAR SET)	1
1301-42B	BEARING (FOR INPUT SHAFT)	1
1301-43	GEAR, FLYWHEEL RING	1
1301-43B	BOLT, FLYWHEEL SET	6
1301-AC	BOLT	1
1301-AD	WASHER, PLATE	1
1301-BD	BOLT	4
1301-BT	PULLEY, CRANKSHAFT NO.2	1

G708-001E


FIG. 1302
CAMSHAFT & VALVE

1302

10Z

92/08

 10Z

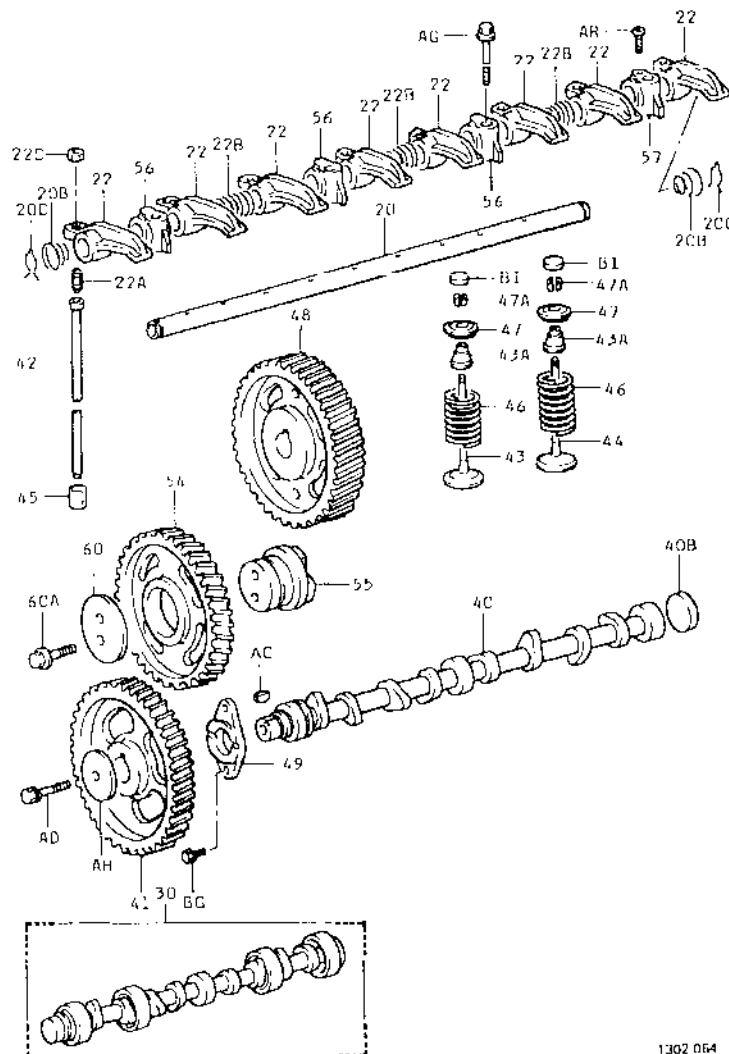

1302 064

PART NAME	PART NAME	QTY
CODE		
1302-20	SHAFT SUB-ASSY, VALVE ROCKER, NO.1	1
1302-22C	SPRING, CONICAL (FOR VALVE ROCKER SHAFT)	2
1302-20C	SPRING, RETAINER (FOR VALVE ROCKER SHAFT)	2
1302-22	ARM SUB-ASSY, VALVE ROCKER, NO.1	8
1302-22A	SCREW, VALVE ADJUSTING	8
1302-22B	SPRING, COMPRESSION (FOR ROCKER ARM)	3
1302-22C	NUT, ADJUSTING SCREW HEXAGON	8
1302-30	BEARING SET, CAMSHAFT	1
1302-40	CAMSHAFT	1
1302-40B	PLUG, EXPANSION (FOR CAMSHAFT)	1
1302-41	GEAR OR SPROCKET, CAMSHAFT TIMING	1
1302-42	ROD, VALVE PUSH	8
1302-43	VALVE, INTAKE	4
1302-43A	SEAL OR RING, O (FOR VALVE STEM OIL)	8
1302-44	VALVE, EXHAUST	4
1302-45	LIFTER, VALVE	8
1302-46	SPRING, VALVE COMPRESSION	8
1302-47	RETAINER, VALVE SPRING	8
1302-47A	LOCK, VALVE SPRING RETAINER	16
1302-48	GLAR, INJECTION PUMP DRIVE	1
1302-49	PLATE, CAMSHAFT THRUST	1
1302-54	GEAR, IDLE (FOR CAMSHAFT)	1
1302-55	SHAFT, IDLE GEAR (FOR CAMSHAFT)	1
1302-56	SUPPORT, VALVE ROCKER, NO.1	3
1302-57	SUPPORT, VALVE ROCKER, NO.2	1
1302-60	PLATE, IDLE GEAR THRUST (FOR CAMSHAFT)	1
1302-60A	BOLT (FOR IDLE GEAR THRUST PLATE)	2
1302-AC	KEY	1
1302-AD	BOLT, W/WASHER	1
1302-AG	BOLT	4
1302-AH	WASHER	1
1302-AR	SCREW	1
1302-BG	BOLT	2
1302-B1	CAP, VALVE STEM	8

G708-001E

FIG. 1501
OIL PUMP

 
1501

1DZ




90/07

1DZ

1DZ (IN-LINE PUMP)

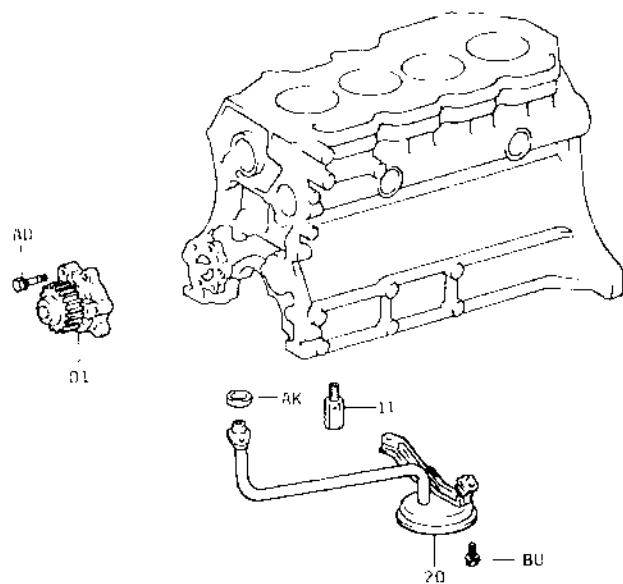

1501-041

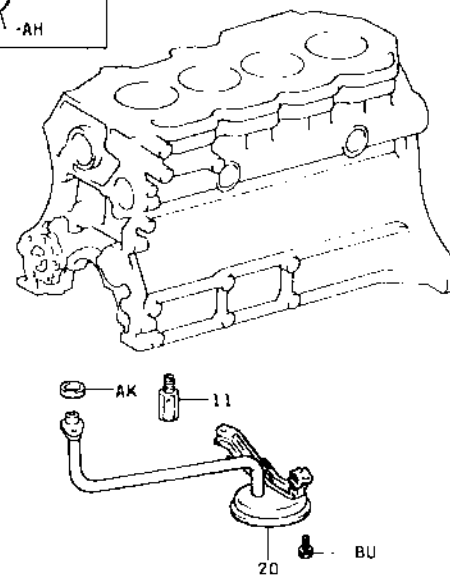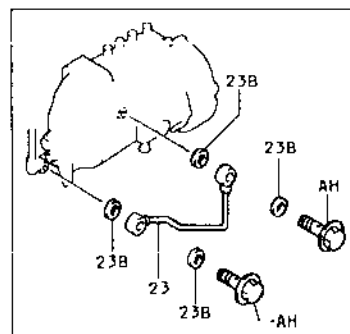   

1501-045

G708-001

FIG. 1501
OIL PUMP

1501

10Z

90/07

PART NAME	PART NAME	QTY
CODE		
1501-01	PUMP ASSY, OIL	1
1501-11	REGULATOR ASSY	1
1501-20	STRAINER SUB-ASSY, OIL	1
1501-AD	BOLT	3
1501-AK	GASKET	1
1501-BU	BOLT	3

Q708-002E


FIG. 1503
OIL COOLER

1503

1DZ

92/08

 1DZ

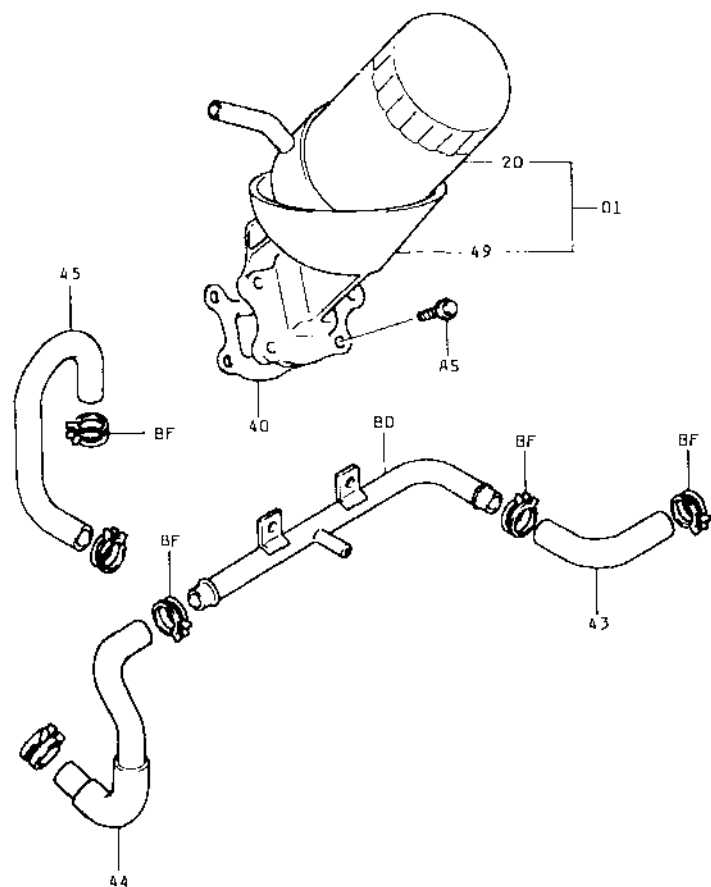

1503-011B

PART NAME		QTY
CODE	PART NAME	
1503-01	COOLER ASSY, OIL	1
1503-20	ELEMENT SUB-ASSY	1
1503-40	GASKET, OIL COOLER	1
1503-43	HOSE, OIL COOLER, NO.1	1
1503-44	HOSE, OIL COOLER, NO.2	1
1503-45	HOSE, OIL COOLER, NO.3	1
1503-49	BRACKET SUB-ASSY	1
1503-A5	BOLT	4
1503-BD	PIPE, OIL COOLER	1
1503-BF	CLIP	6

G70B-001E


FIG. 1601
WATER PUMP

1601

10Z

89/11

 10Z

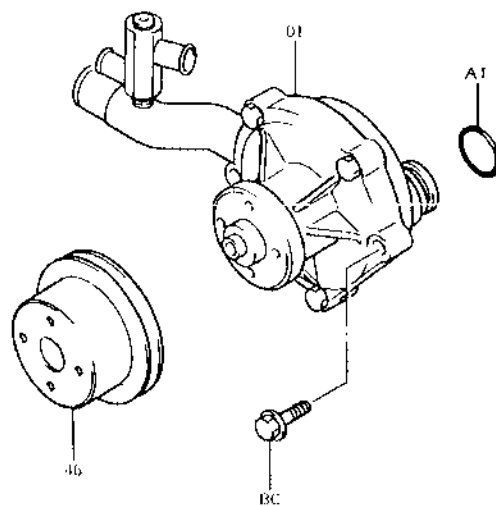

PART NAME	PART NAME	QTY
CODE		
1601-01	PUMP ASSY, WATER	1
1601-06	PULLEY, FAN	1
1601-AT	RING, O	1
1601-BC	BOLT	3

1601 065

G708-001E


FIG. 1603
RADIATOR & WATER OUTLET

1603

102

89/11

 102

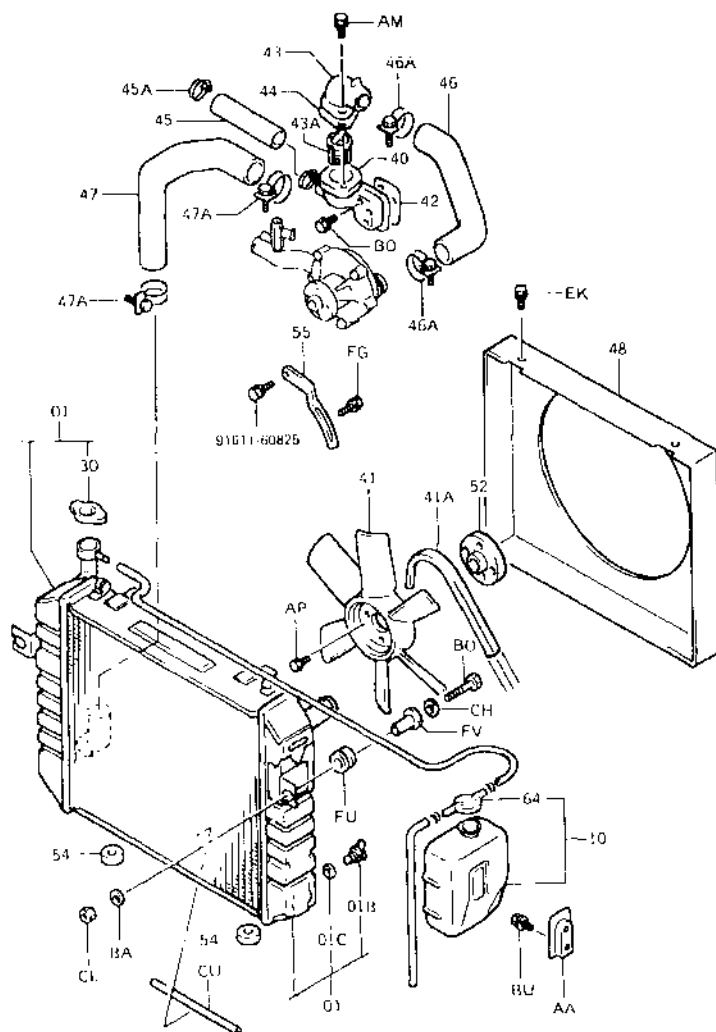

1603-182

PART NAME	PART NAME	QTY
CODE		
1603-01	RADIATOR ASSY	1
1603-01C	PLUG, DRAIN COCK	1
1603-01C	PACKING (FOR RADIATOR DRAIN COCK)	1
1603-10	TANK ASSY, RADIATOR RESERVE	1
1603-30	CAP SUB-ASSY, RADIATOR	1
1603-40	HOUSING, WATER OUTLET	1
1603-41	FAN	1
1603-41A	BELT, V	1
1603-42	GASKET, WATER OUTLET HOUSING	1
1603-43	OUTLET, WATER	1
1603-43A	THERMOSTAT	1
1603-44	GASKET, WATER OUTLET	1
1603-45	HOSE, WATER BYPASS	1
1603-45A	CLAMP, HOSE (FOR WATER BYPASS HOSE)	2
1603-46	HOSE, RADIATOR, INLET	1
1603-46A	CLAMP, HOSE (FOR RADIATOR INLET)	2
1603-47	HOSE, RADIATOR, OUTLET	1
1603-47A	CLAMP, HOSE (FOR RADIATOR OUTLET)	2
1603-48	SHROUD, FAN, NO.1	1
1603-52	SPACER, FAN PULLEY	1
1603-54	RUBBER, MOUNTING (FOR RADIATOR)	2
1603-55	BAR, FAN BELT ADJUSTING	1
1603-64	CAP & HOSE SET	1
1603-AA	BRACKET, RESERVE TANK	1
1603-AM	BOLT	2
1603-AP	BOLT, FAN	4
1603-BA	WASHER, PLATE	2
1603-BD	BOLT	2
1603-BU	BOLT	2
1603-CA	BOLT	2
1603-CH	WASHER, SPRING	2
1603-CL	NUT	2
1603-CH	INSULATOR, EDGE	1
1603-EK	BOLT	2
1603-FG	BOLT	1
1603-FU	INSULATOR	2
1603-FV	SPACER	2

G708-001E


FIG. 1701
MANIFOLD

1701

1DZ

92/08

 1DZ

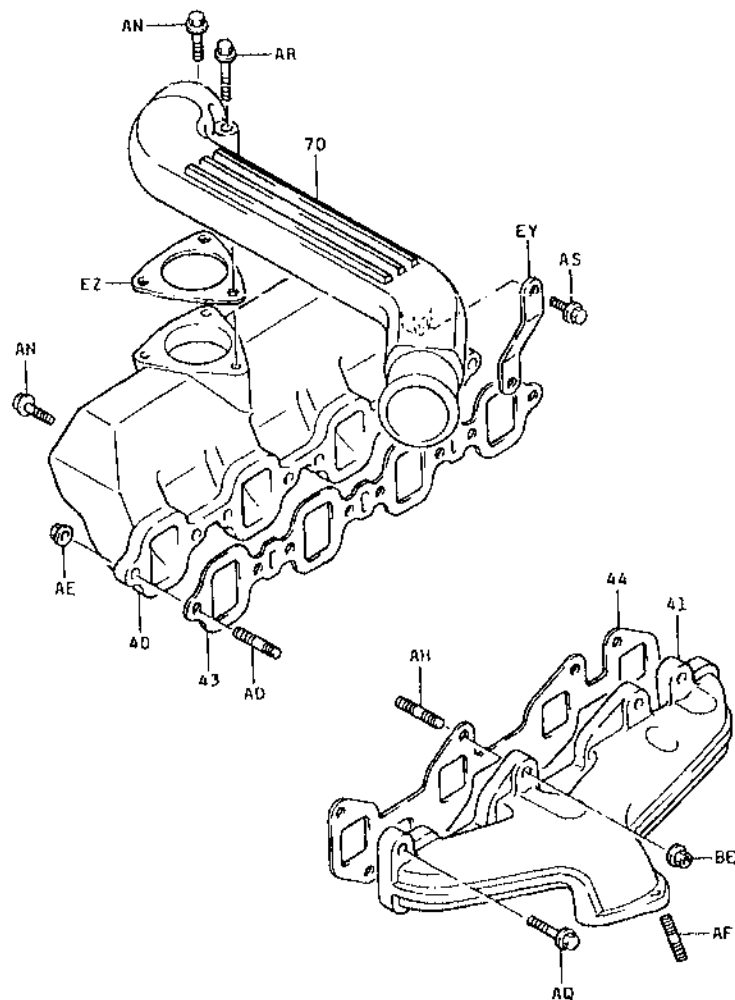

1701-082A

PART NAME	PART NAME	QTY
CODE		
1701-40	MANIFOLD, INTAKE	1
1701-41	MANIFOLD, EXHAUST	1
1701-43	GASKET, INTAKE TO EXHAUST MANIFOLD	1
1701-44	GASKET, EXHAUST MANIFOLD, NO.1	1
1701-70	PIPE, INTAKE	1
1701-AD	BOLT, STUD	2
1701-AE	NUT	2
1701-AF	BOLT, STUD	3
1701-AH	BOLT, STUD	2
1701-AN	BOLT	7
1701-AQ	BOLT	6
1701-AR	BOLT	2
1701-AS	BOLT	2
1701-BE	NUT	2
1701-LY	STAY, INTAKE PIPE	1
1701-EZ	GASKET	1

G708-001E


FIG. 1702
EXHAUST PIPE & MUFFLER

1702

1DZ

90/07

 1DZ

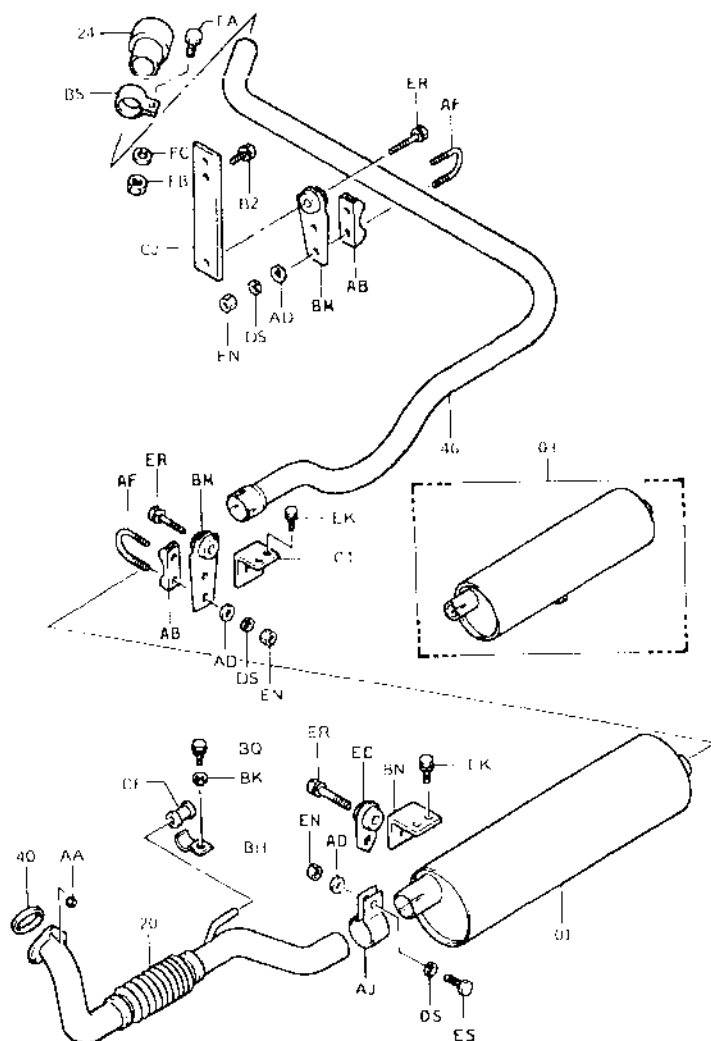

1702-2118

PART NAME	PART NAME	QTY
CODE		
1702-01	MUFFLER ASSY	1
1702-03	MUFFLER ASSY, CYCLONE	1
1702-20	PIPE SUB-ASSY, EXHAUST, NO.1	1
1702-24	ARRESTER SUB-ASSY, FRAME	1
1702-40	GASKET, EXHAUST PIPE	1
1702-46	PIPE, TAIL	1
1702-AA	NUT, HEXAGDN	5
1702-AB	BRACKET, CLAMP	2
1702-AD	WASHER, PLATE	5
1702-AF	BOLT, U	2
1702-AJ	CLAMP, PIPE	1
1702-BH	CLAMP SUB ASSY, MUFFLER	1
1702-BK	WASHER, PLATE	1
1702-BM	CUSHION, EXHAUST PIPE	2
1702-BN	BRACKET, MUFFLER	1
1702-BQ	BOLT, W/WASHER	1
1702-B5	CLAMP, FRAME ARRESTER	1
1702-B2	BOLT	2
1702-CF	INSULATOR	1
1702-CJ	BRACKET, TAIL PIPE	1
1702-CT	BRACKET	1
1702-DS	WASHER, SPRING	5
1702-LC	CUSHION	1
1702-EK	BOLT	4
1702-EN	NUT	5
1702-ER	BOLT	1
1702-ES	BOLT	1
1702-JA	BOLT	1
1702-FB	NUT	1
1702-FC	WASHER, SPRING	1

G708-001E



FIG. 1703
AIR CLEANER

1703

1DZ

89/11

  1DZ

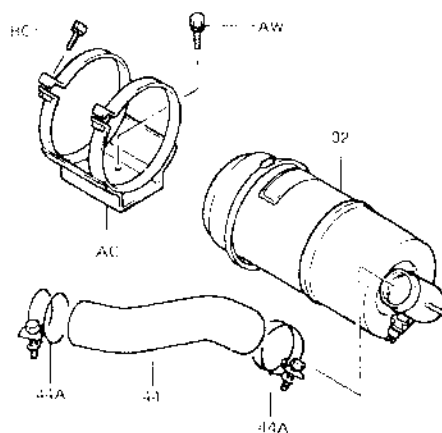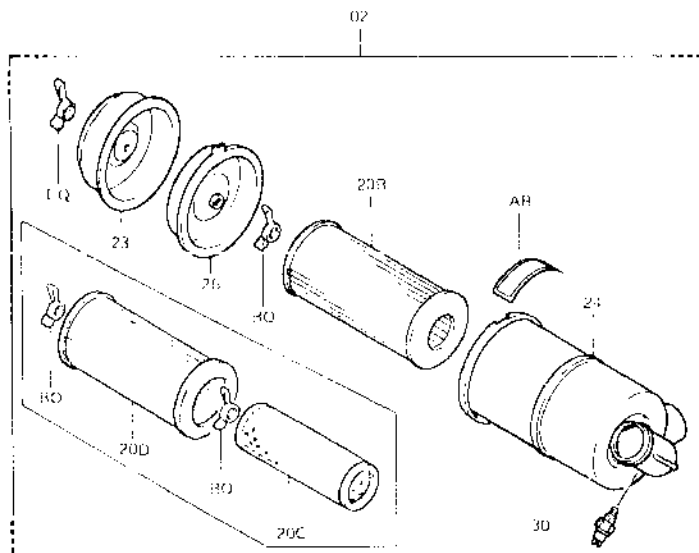

1703 295

PART NAME	PART NAME	QTY
CODE		
1703-02	CLEANER ASSY, CYCLONE AIR	1
1703-20B	ELEMENT SUB-ASSY, CYCLONE AIR CLEANER	1
1703-20C	ELEMENT SUB-ASSY, CYCLONE AIR CLEANER, INNER	1
1703-20D	ELEMENT SUB-ASSY, CYCLONE AIR CLEANER, OUTER	1
1703-23	CASE SUB-ASSY, AIR CLEANER	1
1703-24	CAP SUB-ASSY, AIR CLEANER	1
1703-26	CUP, DUST	1
1703-30	SWITCH ASSY, VACUUM	1
1703-3D	HOSE, AIR CLEANER, OUTLET NO.1	1
1703-44	CLAMP (FOR AIR CLEANER OUTLET NO.1 HOSE)	2
1703-AB	PLATE, CAUTION	1
1703-AC	BAND SUB-ASSY	1
1703-AW	BOLT	4
1703-BC	BOLT	2
1703-BD	NUT, WING	1
1703-EQ	NUT, WING	1

G708-001E


FIG. 1901
IGNITION COIL & SPARK PLUG

1901

10Z

90/07

 10Z

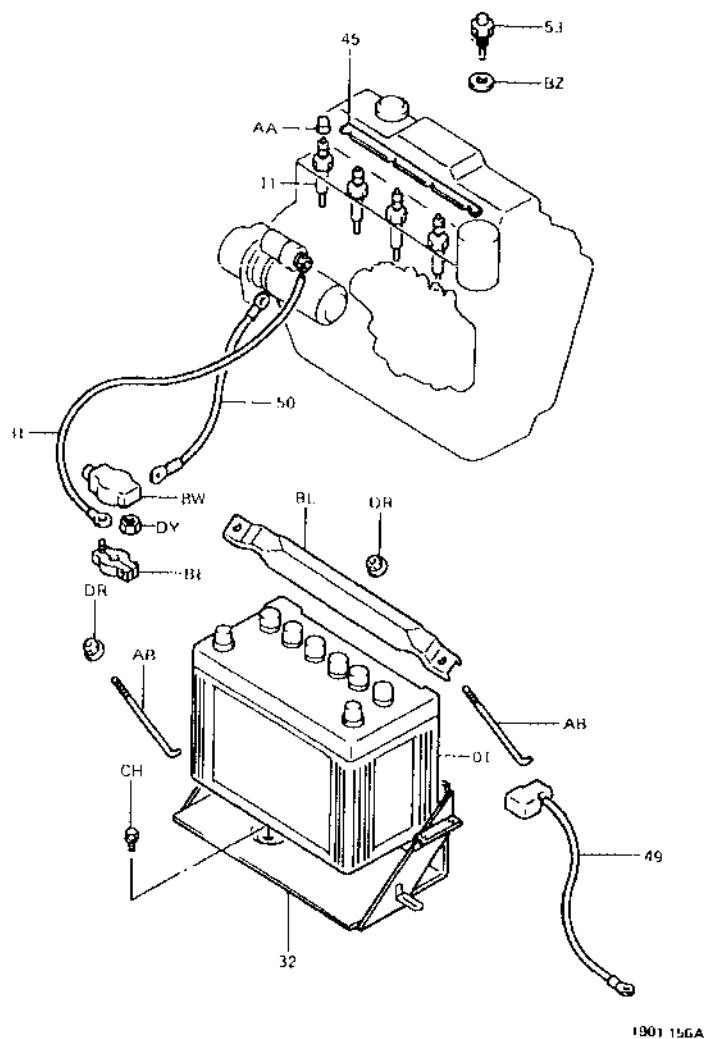


PART NAME	PART NAME	QTY
CODE		
1901-01	BATTERY ASSY	1
1901-11	PLUG ASSY, GLOW	4
1901-31	CABLE SUB-ASSY, BATTERY TO STARTER	1
1901-32	CASE SUB-ASSY, BATTERY	1
1901-45	CONNECTOR, GLOW PLUG, NO.1	1
1901-49	CABLE, BATTERY EARTH	1
1901-50	STRAP, BOND	1
1901-53	SENSOR, WATER TEMPERATURE	1
1901-AA	GROMMET, SCREW	4
1901-AB	BOLT	2
1901-BE	TERMINAL	1
1901-BL	STOPPER, BATTERY	1
1901-8W	COVER, CONNECTOR	1
1901-8Z	WASHER	1
1901-CH	BOLT	3
1901-DR	NUT	2
1901-DY	NUT	1

G708-001E

1903

90/07

 102 12/21

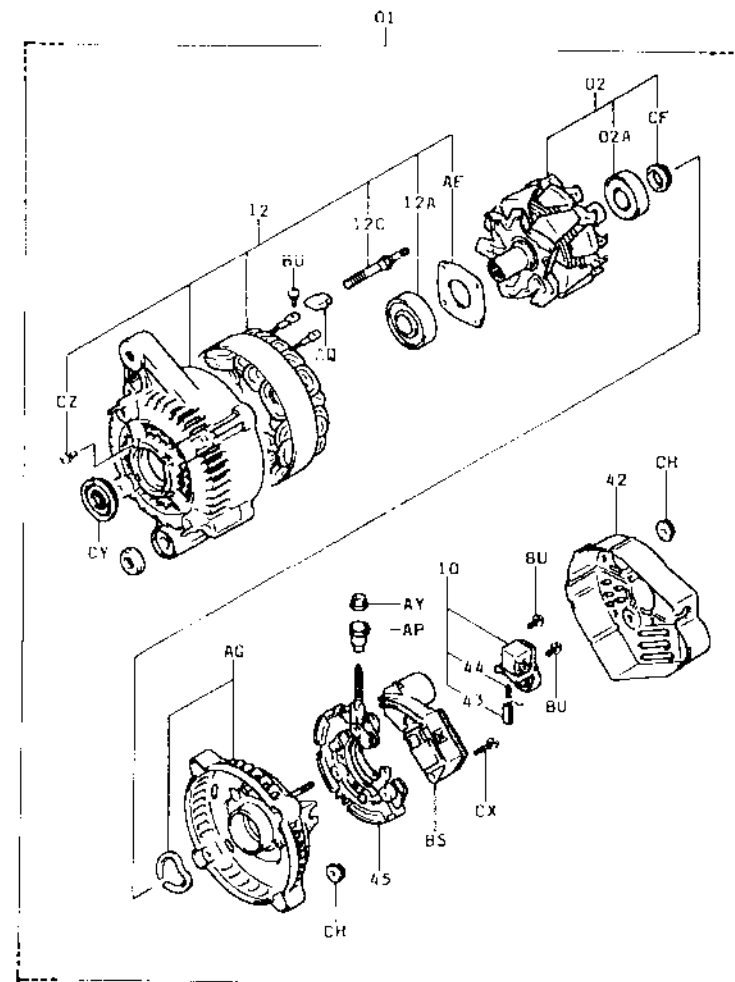

G708-001

FIG. 1903
ALTERNATOR

1903

10Z

90/07

PART NAME	PART NAME	QTY
CODE		
1903-01	ALTERNATOR ASSY	1
1903-02	ROTOR ASSY, ALTERNATOR	1
1903-02A	BEARING (FOR ALTERNATOR ROTOR)	1
1903-10	HOLDER ASSY, ALTERNATOR BRUSH	1
1903-12	FRAME ASSY, DRIVE END	1
1903-12A	BEARING (FOR ALTERNATOR DRIVE END FRAME)	1
1903-12C	BOLT, STUD (FOR ALTERNATOR DRIVE END FRAME)	4
1903-42	COVER, REAR END	1
1903-43	BRUSH, ALTERNATOR	2
1903-44	SPRING, BRUSH	2
1903-45	HOLDER, W/RECTIFIER	1
1903-AE	PLATE, BEARING RETAINER	1
1903-AG	FRAME, RECTIFIER END	1
1903-AJ	BOLT, HEXAGON	1
1903-AP	INSULATOR	1
1903-AQ	INSULATOR	4
1903-AR	NUT	1
1903-AW	BRACKET, ALTERNATOR	1
1903-AX	BOLT	3
1903-AY	NUT	1
1903-B5	REGULATOR ASSY	1
1903-BU	SCREW, W/WASHER	7
1903-CF	COVER, BEARING	1
1903-CH	NUT	2
1903-CM	UNION	1
1903-CN	GASKET	4
1903-CD	BOLT, UNION	2
1903-CP	HOSE, OIL	1
1903-CQ	CLIP	2
1903-CR	HOSE, OIL	1
1903-CS	UNION	1
1903-CT	BOLT, UNION	1
1903-CU	WASHER, PLATE	2
1903-CX	SCREW, W/WASHER	2
1903-CY	SEAL, OIL	1
1903-CZ	SCREW, W/WASHER	4

G708-002E

1904


92/08

| PART NAME

CODE

PARTY NAME

| QTY

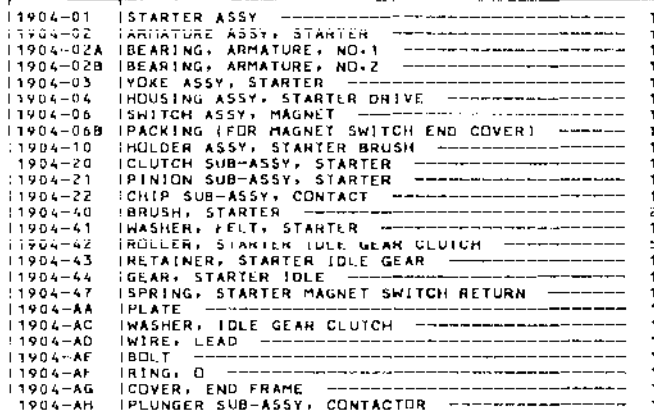 

G708-001E


FIG. 1905
VACUUM PUMP

1905

10Z

90/07

 10Z

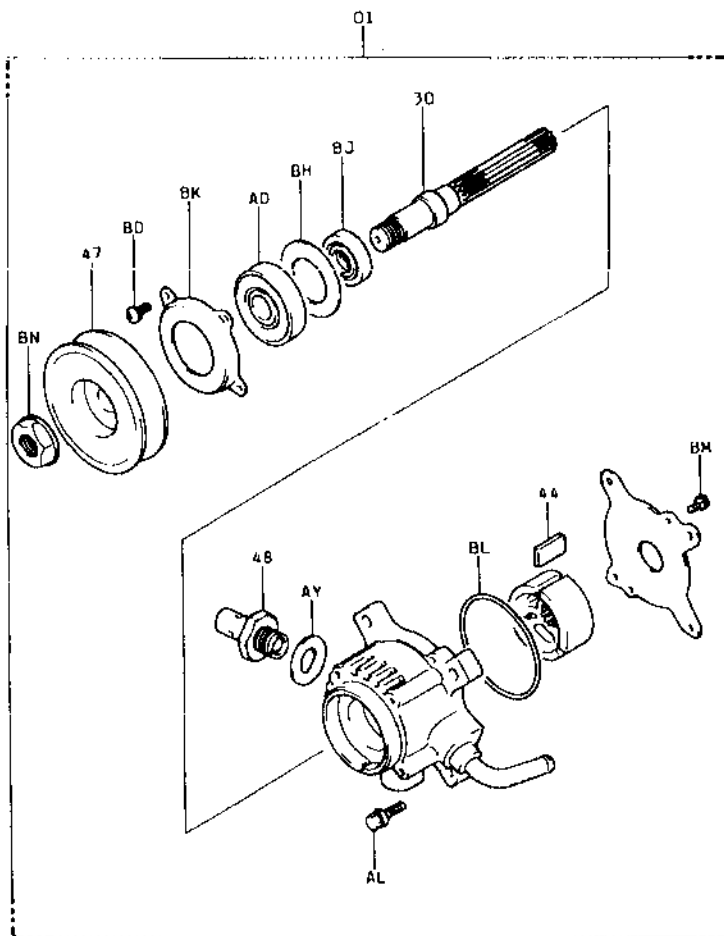

1905-015

PART NAME	PART NAME	QTY
CODE		
1905-01	PUMP ASSY. VACUUM	1
1905-30	SHAFT, VACUUM PUMP	1
1905-44	BLADE, VACUUM PUMP	3
1905-47	PULLEY	1
1905-48	VALVE SUB-ASSY. CHECK	1
1905-49	BEARING	1
1905-50	BOLT	4
1905-51	WASHER	1
1905-52	WASHER	1
1905-53	SEAL, OIL	1
1905-54	RING, STOP	1
1905-55	RING, O	1
1905-56	SCREW	2
1905-57	NUT	1
1905-58	SCREW	4

G/08-001E

FIG. 2201
INJECTION NOZZLE

 
2201

10Z


92/08

10Z

10Z (IN-LINE PUMP)

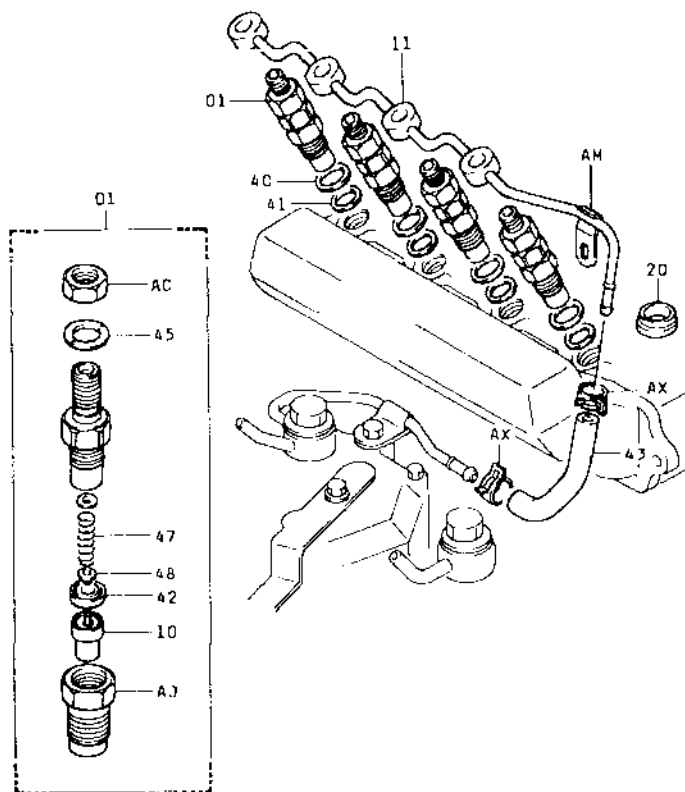

2201-052A

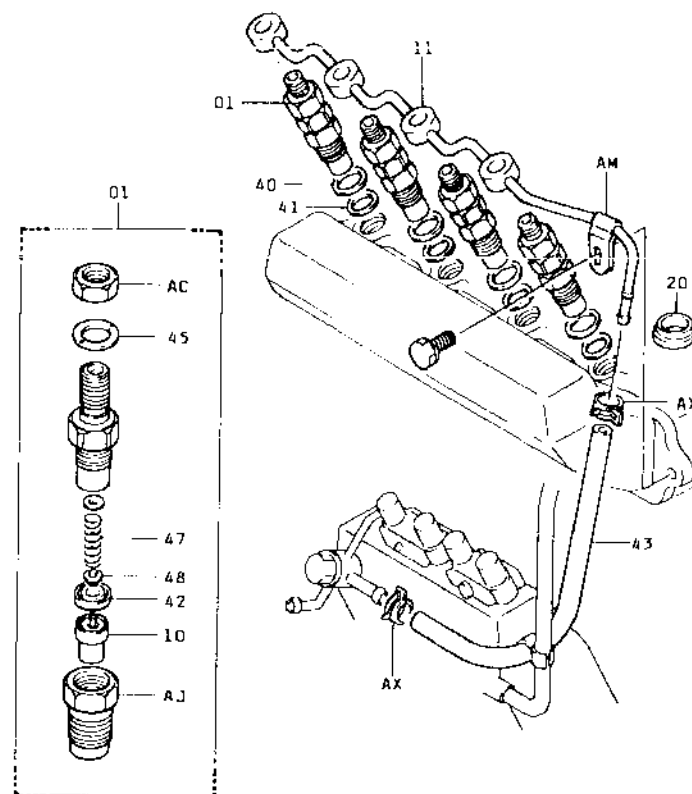 

2201-054

G708-001

FIG. 2201
INJECTION NOZZLE

2201

1DZ

92/08


PART NAME	PART NAME	QTY
CODE		
2201-01	HOLDER & NOZZLE SET	4
2201-10	NOZZLE ASSY	4
2201-11	PIPE ASSY, NOZZLE LEAKAGE, NO.1	1
2201-20	CHAMBER SUB-ASSY, COMBUSTION	4
2201-40	SLAT, INJECTION NOZZLE	4
2201-41	GASKET, INJECTION NOZZLE SEAT	4
2201-42	PIECE, DISTANCE (FOR NOZZLE)	4
2201-43	HOSE, FUEL	1
2201-45	WASHER (FOR NOZZLE HOLDER RING PACKING)	4
2201-47	SPRING, NOZZLE HOLDER PRESSURE	4
2201-48	PIN, NOZZLE HOLDER PRESSURE	4
2201-AC	NUT	4
2201-AJ	NUT, NOZZLE RETAINING	4
2201-AM	CLAMP	1
2201-AX	CLIP, HOSE	2

G708-002E

2202

92/08

 102 (IN-LINE PUMP)

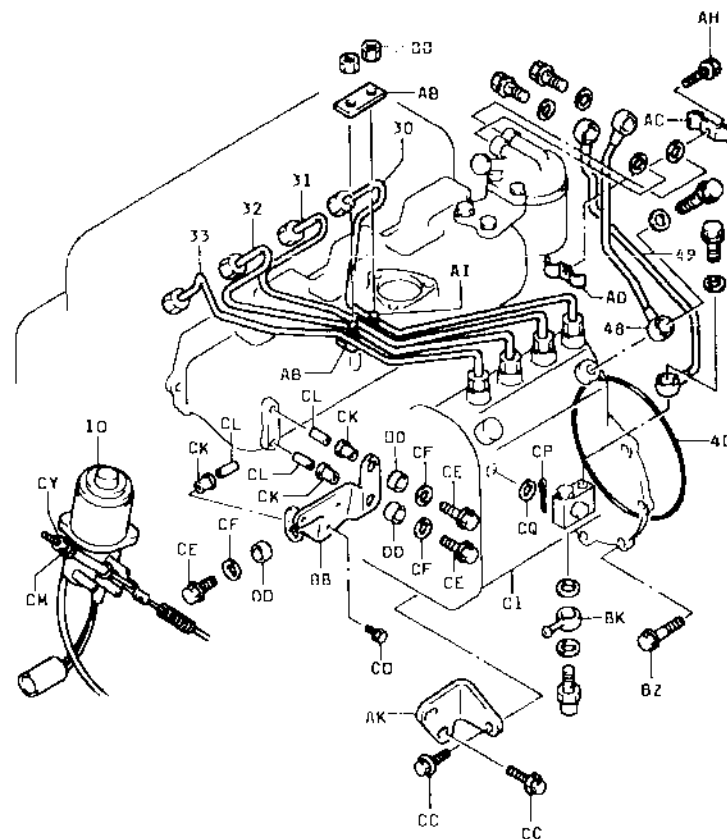

2202-052A

2202 0574 0014

FIG. 2202
INJECTION PUMP ASSY

2202

10Z

92/08


PART NAME	PART NAME	QTY
CODE		
2202-01	PUMP ASSY, INJECTION	1
2202-10	MOTOR ASSY, FUEL CONTROL	1
2202-30	PIPE SUB-ASSY, INJECTION, NO.1	1
2202-31	PIPE SUB-ASSY, INJECTION, NO.2	1
2202-32	PIPE SUB-ASSY, INJECTION, NO.3	1
2202-33	PIPE SUB-ASSY, INJECTION, NO.4	1
2202-40	GASKET, INJECTION PUMP	1
2202-48	PIPE SUB-ASSY, FUEL, NO.1	1
2202-49	PIPE SUB-ASSY, FUEL, NO.2	1
2202-A8	CLAMP, INJECTION PIPE	2
2202-AC	CLAMP, FUEL PIPE, NO.1	1
2202-AD	CLAMP, FUEL PIPE, NO.2	1
2202-AH	BOLT	1
2202-AI	BOLT, STUD	2
2202-AK	STAY, INJECTION PUMP	1
2202-B8	BRACKET, CONTROL MOTOR	1
2202-BK	UNION	1
2202-BD	NUT	1
2202-BZ	BOLT	1
2202-CC	BOLT	3
2202-CE	BOLT	3
2202-CF	WASHER	3
2202-CK	CUSHION	3
2202-CL	COLLAR	3
2202-CH	WASHER, PLATE	1
2202-CD	SCREW, W/WASHER	3
2202-CP	SPIN, COTYER	1
2202-CQ	WASHER, PLATE	1
2202-CY	NUT	2
2202-DD	CUSHION, NO.2	3

G708-002E

2203

92/08

 102 (IN-LINE PUMP)

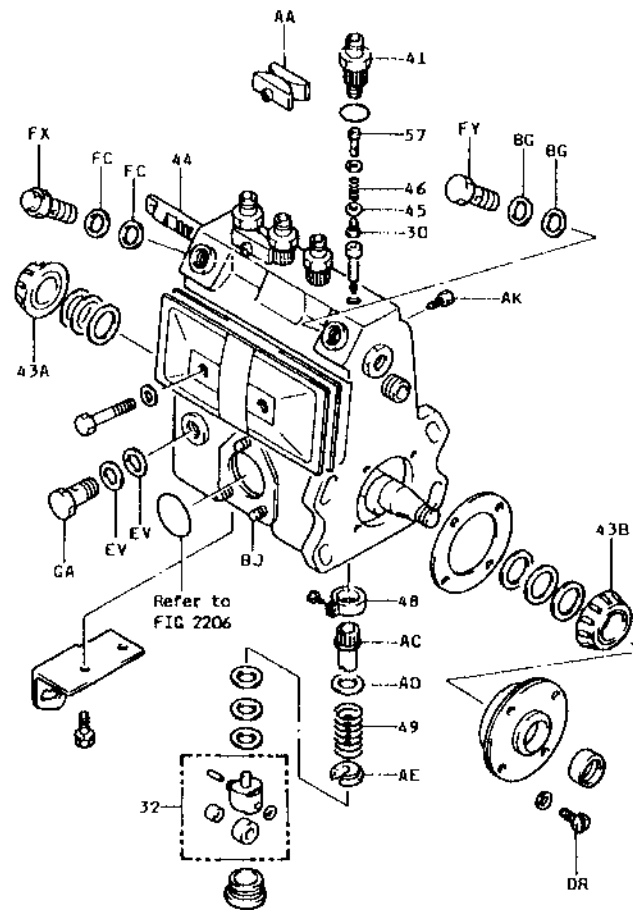

2203-035A

2201 DSEA

2203 03-64 0016

FIG. 2203
INJECTION PUMP BODY

2203

1DZ

92/08

PART NAME	PART NAME	QTY	PART NAME	PART NAME	QTY
CODE			CODE		
2203-21	HOUSING SUB-ASSY, INJECTION PUMP	1	2203-DD	SPRING, LEVER SUPPORT	2
2203-22	COVER SUB-ASSY, GOVERNOR	1	2203-DP	SCREW	1
2203-30	VALVE SUB-ASSY, DELIVERY	4	2203-DQ	RING, O	1
2203-32	TAPPET SUB-ASSY	4	2203-DR	BOLT	4
2203-41	HOLDER, DELIVERY VALVE	4	2203-D5	SPRING, GOVERNOR IDLE	1
2203-43A	BEARING, NO.1 (FOR INJECTION PUMP CAMSHAFT)	1	2203-DT	SEAT, GOVERNOR SPRING	1
2203-43B	BEARING, NO.2 (FOR INJECTION PUMP CAMSHAFT)	1	2203-DU	SCREW SUB-ASSY, OVER FLOW	1
2203-44	RACK, CONTROL	4	2203-DV	SPRING, SPEED CONTROL	1
2203-45	GASKET, DELIVERY VALVE	4	2203-DW	RING, O	1
2203-46	SPRING, DELIVERY VALVE	4	2203-DY	SPRING, RETURN	1
2203-48	PISTON, PLUNGER CONTROL	4	2203-DZ	LEVER, ADJUSTING	1
2203-49	SPRING, PUMP PLUNGER	2-4	2203-EA	GASKET, GOVERNOR COVER	1
2203-57	STOPPER, DELIVERY VALVE	4	2203-EB	VALVE SUB-ASSY, REGULATOR	1
2203-AA	PLATE SET, VALVE HOLDER LOCK	2	2203-EC	NUT, LOCK	1
2203-AC	STOPPER, PLUNGER CONTROL	4	2203-ED	BOLT	2
2203-AD	SEAT, SPRING UPPER	2-4	2203-EE	WASHER, GOVERNOR THRUST	1
2203-AE	SEAT, SPRING LOWER	1-4	2203-EF	WASHER, TIMER ADJUSTING	99
2203-AJ	WASHER, AIR BLEEDER NIPPLE	5	2203-EG	WIRE SUB-ASSY, FUEL CUT	1
2203-AK	SCREW, RACK GUIDE	1	2203-EH	COLLAR, SMOKE SET ADJUSTING	1
2203-AD	KEY	1	2203-EI	SLEEVE, GOVERNOR	1
2203-BG	WASHER	2	2203-EJ	SPRING, TIMER, OUTER	1
2203-BH	RING, O	1	2203-EL	SHIM, PLUNGER SPRING	99
2203-BJ	BOLT, STUD	3	2203-EM	SHIM, PLUNGER ADJUSTING	99
2203-BZ	HEAD SUB-ASSY, DISTRIBUTIVE PUMP	1	2203-EN	WASHER, GOVERNOR GEAR ADJUSTING	99
2203-CA	SHAFT, DRIVE	1	2203-ES	BOLT	4
2203-CB	RING SUB-ASSY, ROLLER	1	2203-ET	CLIP	1
2203-CC	PUMP SUB-ASSY, FUEL FEED	1	2203-EV	WASHER	2
2203-CD	GOVERNOR SUB-ASSY, TORQUE CONTROL	1	2203-EW	WASHER	1
2203-CE	SHAFT SUB-ASSY, SPEED CONTROL	1	2203-FB	NUT	1
2203-CF	SOLENOID ASSY, FUEL CUT	1	2203-FC	WASHER	2
2203-CG	HOLDER SUB-ASSY, FLYWEIGHT	1	2203-FG	GASKET	3
2203-CH	FLYWEIGHT, DISTRIBUTIVE PUMP	4	2203-FH	RING, E	1
2203-CI	WASHER, FLYWEIGHT	1	2203-FJ	BRACKET, IDLE UP	1
2203-CJ	WASHER, FLYWEIGHT	1	2203-FK	COVER	1
2203-CK	NUT, GOVERNOR ROCK	1	2203-FX	VALVE ASSY	1
2203-CL	SHAFT, GOVERNOR MAIN	1	2203-FY	SCREW, HOLLOW	1
2203-CM	RING, GOVERNOR SLEEVE STOP	1	2203-GA	SCREW, HOLLOW	1
2203-CN	PLATE SUB-ASSY, FACE CAM	1	2203-GE	RING, O	1
2203-CO	PLATE, PLUNGER, LOWER	1	2203-GG	NIPPLE SUB-ASSY	1
2203-CP	PLATE, PLUNGER, UPPER	1	2203-GH	NIPPLE SUB-ASSY	1
2203-CQ	SPRING, COUPLING	1	2203-GJ	BOLT	2
2203-CR	COUPLING	1	2203-GK	FILTER SUB-ASSY	1
2203-CS	GEAR, GOVERNOR DRIVE	1	2203-GL	NUT, CAP	1
2203-CT	JOINT, RUBBER	2			
2203-CU	WASHER, DRIVE SHAFT	1			
2203-CV	COVER, FEED PUMP	1			
2203-CW	SEAL, OIL	1			
2203-CX	KEY	1			
2203-CY	PISTON, TIMER	1			
2203-CZ	SUB-PISTON, TIMER	1			
2203-DA	PIN, TIMER SLIDE	1			
2203-DB	STOPPER, TIMER SLIDE	1			
2203-DC	GRIP, TIMER	1			
2203-DD	COVER, TIMER	1			
2203-DE	COVER, TIMER	1			
2203-DF	CLIP	1			
2203-DG	RING, O	2			
2203-DH	PLUG	1			
2203-DI	BOLT	1			
2203-DJ	PLUG, GOVERNOR SLEEVE	1			
2203-DK	RING, O	1			
2203-DL	GUIDE SUB-ASSY, PLUNGER SPRING	2			
2203-DM	SEAT, DELIVERY VALVE SPRING	4			
2203-DN	RING, O	1			

G708-002E


FIG. 2205
MECHANICAL GOVERNOR

2205

1DZ

90/08

 1DZ (IN-LINE PUMP)

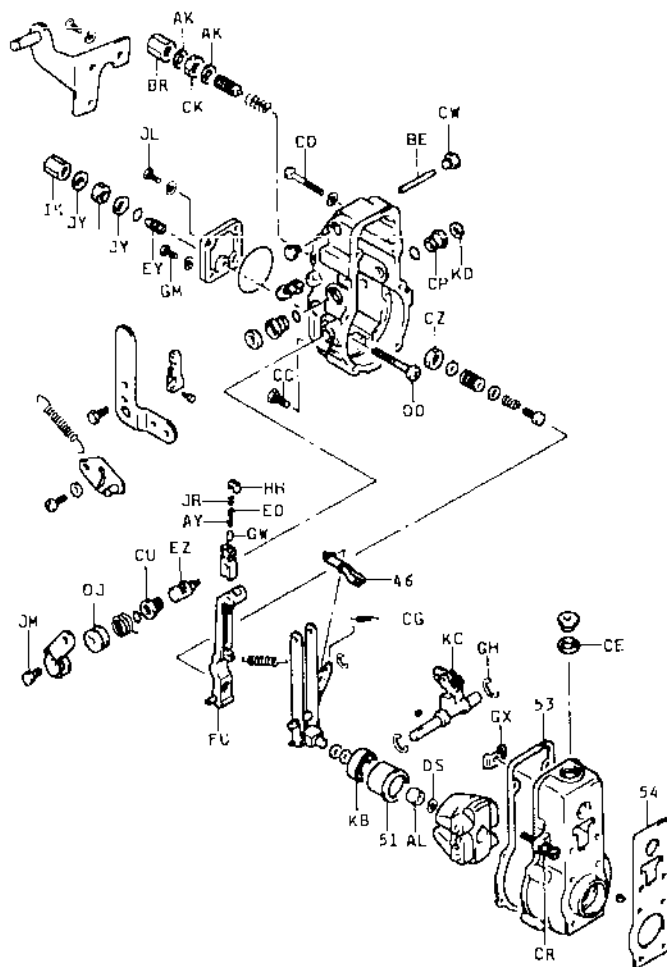

2205-021

PART NAME CODE	PART NAME	QTY
2205-46	SHACKLE	1
2205-51	SCREW, GOVERNOR	1
2205-53	GASKET (FOR GOVERNOR HOUSING INNER)	1
2205-54	GASKET (FOR GOVERNOR HOUSING OUTER)	1
2205-AK	PACKING	2
2205-AL	NUT	1
2205-AY	SPRING	1
2205-BE	SHAFT, LEVER	1
2205-BR	NUT, CAP	1
2205-CC	BOLT	4
2205-CD	BOLT	2
2205-CE	WASHER, PLATE	1
2205-CG	SPRING, START	1
2205-CK	NUT, W/HOLE	1
2205-CP	BUSHING, LEVER	2
2205-CN	NUT, W/ HOLE	2
2205-CU	BUSHING, BEARING	1
2205-CW	PLUG, SCREW	2
2205-CZ	NUT, LOCK	1
2205-DJ	COVER, SPRING	1
2205-DD	SCREW, ADJUSTING	1
2205-DS	WASHER, SPRING	1
2205-ED	SPRING	1
2205-EY	BUSHING	1
2205-EZ	SHAFT	1
2205-FU	LEVER	1
2205-GH	WASHER	2
2205-GH	BOLT	1
2205-GW	CUP, SPRING	1
2205-GX	PLATE	1
2205-HH	PLATE, CAP	1
2205-IK	NUT, CAP	1
2205-JL	BOLT	1
2205-JM	BOLT	1
2205-JR	SPRING	1
2205-JY	WASHER	2
2205-KB	BEARING	1
2205-KC	LEVER	1
2205-KD	CAP, LEVER	1

G708-001E

SDZ (IN-LINE PUMP)

102

92/08



G708-001E

FIG. 2302
FUEL FILTER

 
2302

1DZ


90/07

1DZ

1DZ (IN-LINE PUMP)

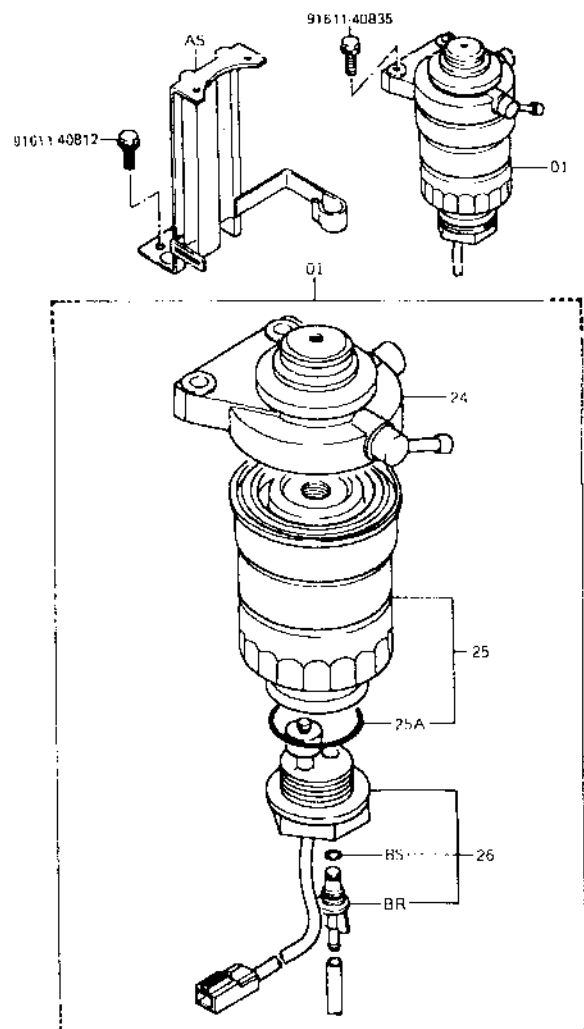

2302 051

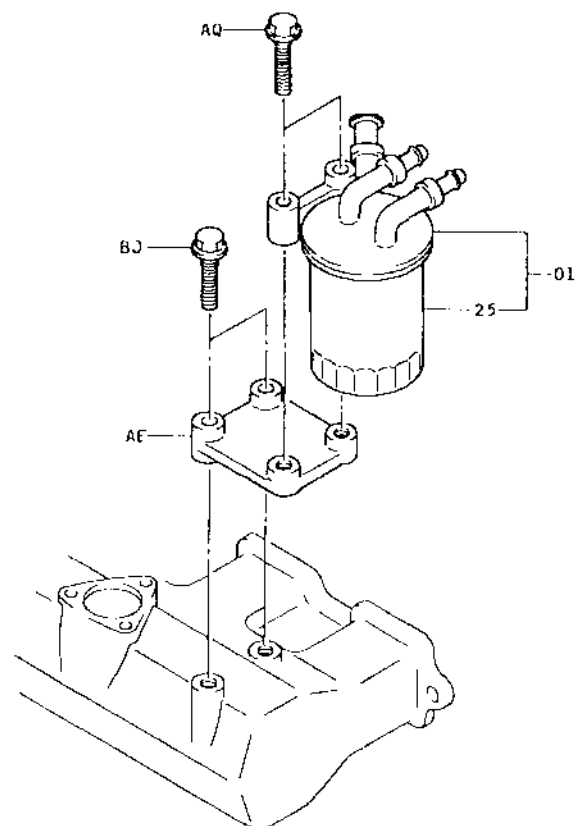 

2302-066A

G70B-051

FIG. 2302
FUEL FILTER

2302

10Z

90/07


PART NAME CODE	PART NAME	QTY
2302-01	FILTER ASSY, FUEL (ELEMENT SERVICE TYPE)	1
2302-24	CAP SUB-ASSY, FUEL	1
2302-25	FILTER SUB-ASSY, FUEL	1
2302-25A	RING, O (FOR FUEL FILTER)	1
2302-26	SWITCH SUB-ASSY	1
2302-AE	SUPPORT, FUEL FILTER	1
2302-AQ	BOLT	2
2302-A5	BRACKET SUB-ASSY, FUEL FILTER	1
2302-BJ	BOLT	2
2302-BR	BOLT, DRAIN	1
2302-B5	RING, O	1

G708-002C

2303

90/07

 10Z (UL-D)

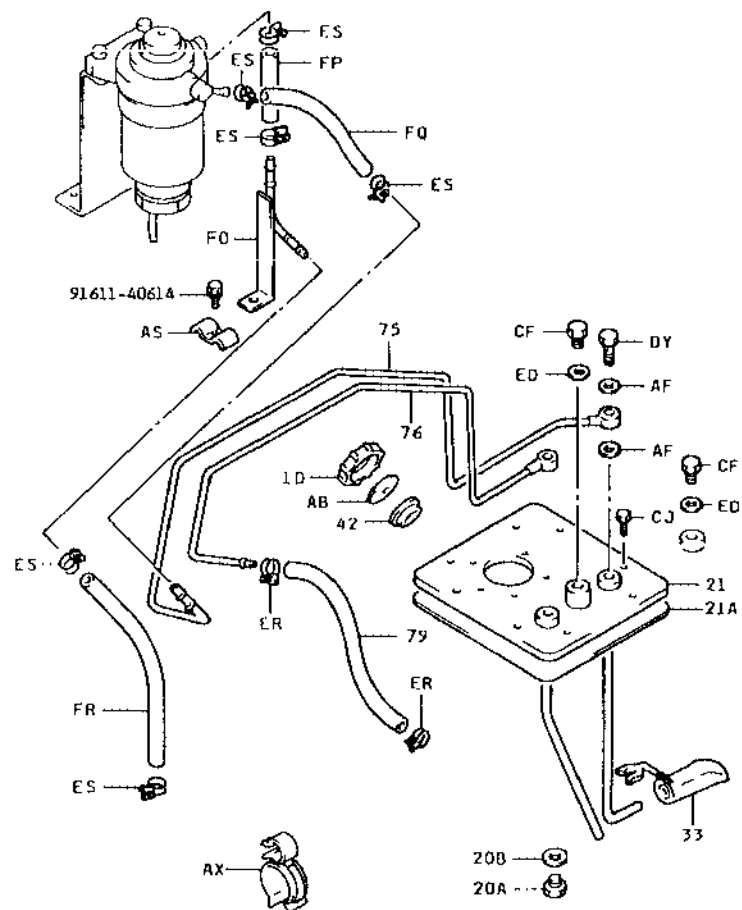

2303-157A

2503 157A 4071

FIG. 2303
FUEL TANK & FUEL PIPE

2303

1DZ

90/07

PART NAME	PART NAME	QTY
CODE		
2303-10	CAP ASSY, FUEL TANK	1
2303-20A	PLUG, DRAIN (FOR FUEL TANK)	1
2303-20B	GASKET, DRAIN PLUG (FOR FUEL TANK)	1
2303-21	COVER SUB-ASSY, FUEL TANK	1
2303-21A	PACKING, FUEL TANK COVER	1
2303-33	FILTER SUB-ASSY, SUCTION	1
2303-41	SEPARATOR, FUEL	1
2303-42	VALVE, BREATHER	1
2303-45	HOSE, FUEL, NO.1	1
2303-49	PIPE, NO.1 (TANK TO SEPARATOR)	1
2303-50	PIPE, NO.2 (TANK TO SEPARATOR)	1
2303-71	HOSE, FUEL (TANK TO FILTER)	1
2303-75	PIPE SUB-ASSY, TANK TO FILTER	1
2303-76	PIPE SUB-ASSY, RETURN	1
2303-77	HOSE, FUEL (FILTER TO INJECTION PUMP)	1
2303-79	HOSE, FUEL (RETURN)	1
2303-82	HOSE, FUEL	1
2303-AA	BOLT	2
2303-AB	PLATE, SEPARATE	1
2303-AP	GASKET	4- 8
2303-AL	CLAMP	1
2303-AM	CLAMP	1
2303-AP	BRACKET SUB-ASSY	1
2303-AQ	PACKING, FUEL CAP	1
2303-A5	CLAMP, HOSE	2
2303-AU	PLUG ASSY, BREATHER	1
2303-BW	BOLT	1
2303-CF	PLUG	2
2303-CJ	BOLT	8
2303-CK	BRACKET, BREATHER	1
2303-DY	BOLT, UNION	2- 4
2303-ED	GASKET	2
2303-EN	BOLT	2
2303-ER	CLIP	1
2303-ES	CLIP	2-10
2303-ET	BOLT	1
2303-FO	PIPE SUB-ASSY, FUEL	1
2303-FP	HOSE, FUEL	1
2303-FQ	HOSE, FUEL	1
2303-FR	HOSE, FUEL	1

G708-002E

FIG. 2601
ACCELERATOR LINK

 
 
2601

1DZ

90/07

1DZ (1/2)

1DZ (IN-LINE PUMP) (2/2)

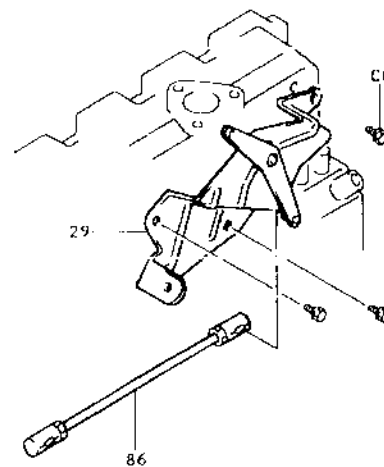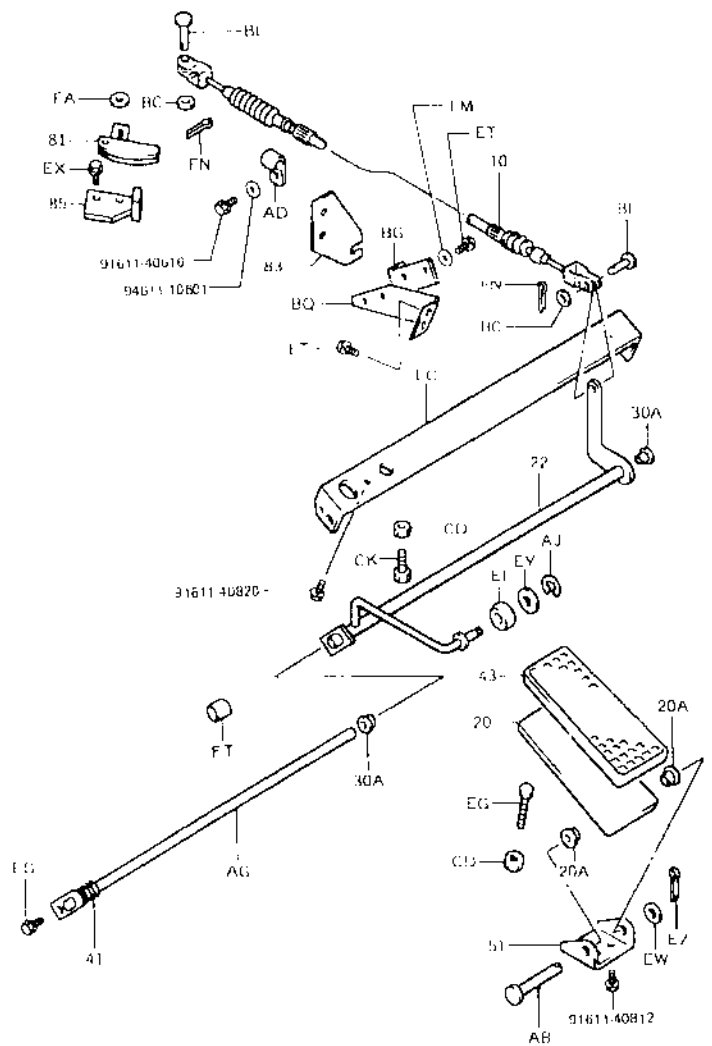

2601-140

2601-137A

G708-001

FIG. 2601
ACCELERATOR LINK

2601

1DZ

90/07

PART NAME	PART NAME	QTY
CODE		
2601-10	WIRE ASSY, ACCELERATOR FLEXIBLE	1
2601-20	PEDAL SUB-ASSY, ACCELERATOR	1
2601-20A	BUSHING (FOR ACCELERATOR PEDAL)	2
2601-22	LINK SUB-ASSY, ACCELERATOR	1
2601-29	LINK ASSY, ACCELERATOR	1
2601-30A	BUSHING (FOR ACCELERATOR LINK ARM)	2
2601-41	SPRING, TORSION, NO.1	1
2601-43	PAD, PEDAL	1
2601-51	BRACKET, PEDAL	1
2601-81	PULLEY SUB-ASSY	1
2601-83	BRACKET	1
2601-85	BRACKET, LEVER	1
2601-86	ROD SUB-ASSY, ACCELERATOR LINK	1
2601-AB	PIN, W/HOLE	1
2601-AD	CLAMP	1
2601-AG	SHAFT, ACCELERATOR LINK	1
2601-AJ	RING, F	1
2601-B0	WASHER, PLATE	2
2601-BQ	BRACKET	1
2601-BI	PIN, W/HOLE	2
2601-BQ	BRACKET, ACCELERATOR WIRE	1
2601-CD	NU1	2
2601-CG	BOLT	3
2601-CK	BOLT	1
2601-LC	BRACKET SUB-ASSY, ACCELERATOR LINK, NO.1	1
2601-EG	BOLT	1
2601-EI	ROLLER	1
2601-ET	BOLT, W/WASHER	4
2601-EW	WASHER, PLATE	2
2601-LX	BOLT, W/WASHER	2
2601-EY	WASHER, PLATE	1
2601-FZ	PIN, COTTER	1
2601-FA	WASHER, PLATE	1
2601-FM	WASHER, PLATE	2
2601-FN	PIN, COTTER	2

G708-002E

FIG. 3201
TORQUE CONVERTER HOUSING

 
3201

ATM

92/08

ATM 11/51

03K=(INCL. *)

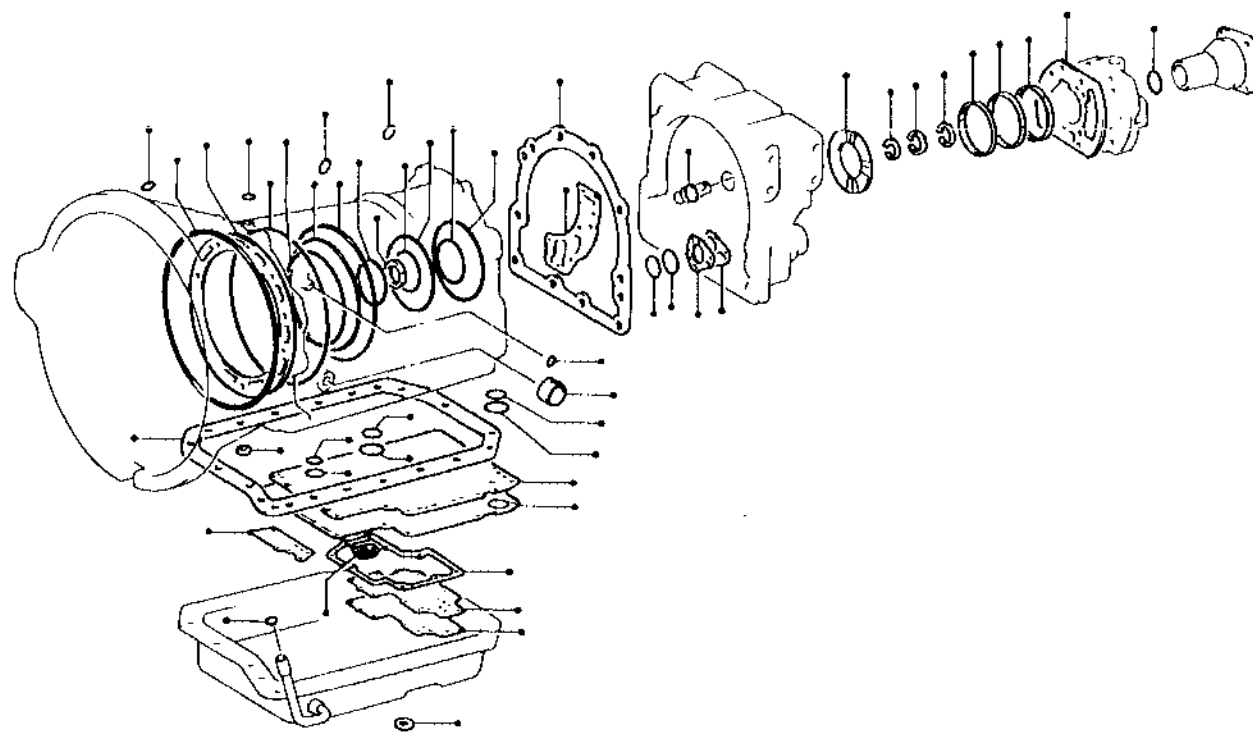

3201-112A

G708-001

FIG. 3201
TORQUE CONVERTER HOUSING

 
 
 
3201

ATM

92/08

ATM (2/5)

ATM (3/5)

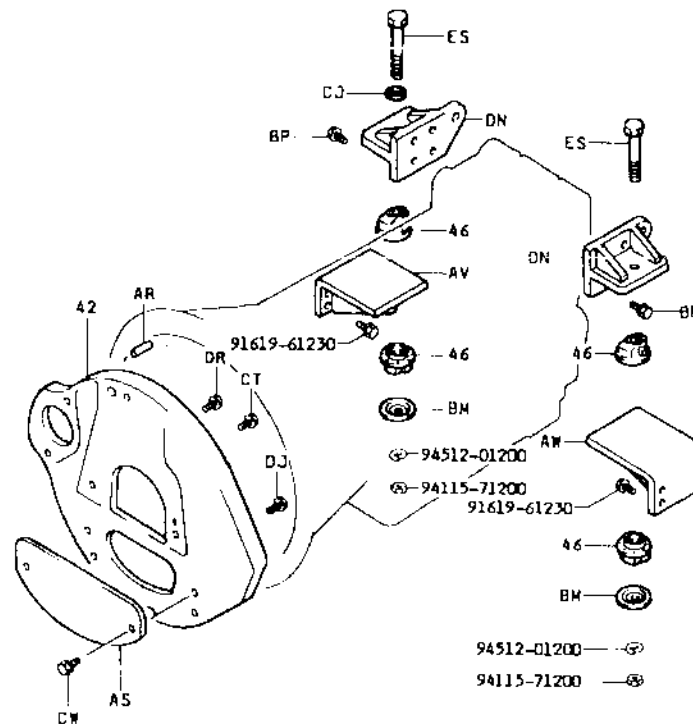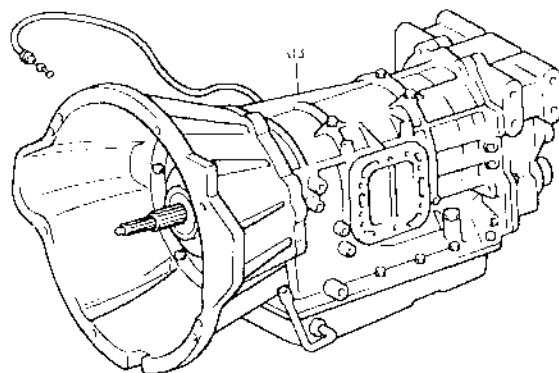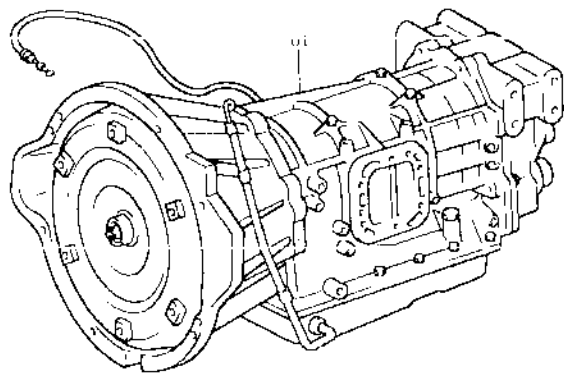

3201-1090

3201 106

G708-002

3201

92708

ATM 15/51



G 708-003

FIG. 3201
TORQUECONVERTER HOUSING

3201

ATM

92/08

PART NAME CODE	PART NAME	QTY
3201-01	TRANSMISSION ASSY, AUTOMATIC, L/DIFFERENTIAL	1
3201-03	TRANSMISSION ASSY (FOR TORQUECONVERTER)	1
3201-03K	TRANSMISSION O/H KIT (FOR TORQUECONVERTER)	1
3201-20	CASE SUB-ASSY, TORQUECONVERTER, NO.1	1
3201-22	CASE SUB-ASSY, TRANSMISSION	1
3201-30	GAGE SUB-ASSY, OIL LEVEL	1
3201-42	PLATE, TORQUECONVERTER END	1
3201-45	PAN, OIL	1
3201-45A	PACKING, OIL PAN	1
3201-45B	PLUG, DRAIN	1
3201-45C	GASKET (FOR DRAIN PLUG)	1
3201-46	INSULATOR, TORQUECONVERTER MOUNTING	4
3201-AB	RING, O	7
3201-AD	PLUG	1
3201-AE	PLUG, W/HEAD STRAIGHT SCREW	1
3201-AF	GASKET	1
3201-AG	RING, O	1
3201-AK	PLUG, BREATHER	1
3201-AQ	MAGNET	2
3201-AP	RING, O	1
3201-AQ	RING, O	1
3201-AR	PIN, STRAIGHT	2
3201-AS	PLATE, COVER	1
3201-AV	SUPPORT SUB-ASSY, BRACKET, RH	1
3201-AW	SUPPORT SUB-ASSY, BRACKET, LH	1
3201-AZ	RING, O	1
3201-BM	PLATE	2
3201-BP	BOLT	8
3201-CE	ELBOW	1
3201-CH	PLUG	7
3201-CT	BOLT	1
3201-CW	BOLT	2
3201-DH	COVER	1
3201-DJ	BOLT	2- 4
3201-DN	BRACKET, TORQUECONVERTER MOUNTING	1
3201-DO	SEAL, OIL	1
3201-DR	BOLT	2- 4
3201-ES	BOLT	2
3201-JB	UNION	1
3201-KC	TUBE SUB-ASSY, TRANSMISSION OIL FILLER	1
3201-KD	HOUSING SUB-ASSY, EXTENSION	1
3201-KE	GASKET, EXTENSION HOUSING	1

G708-004E

0032


FIG. 3202
TORQUE CONVERTER

3202

ATM

90/07

 ATM

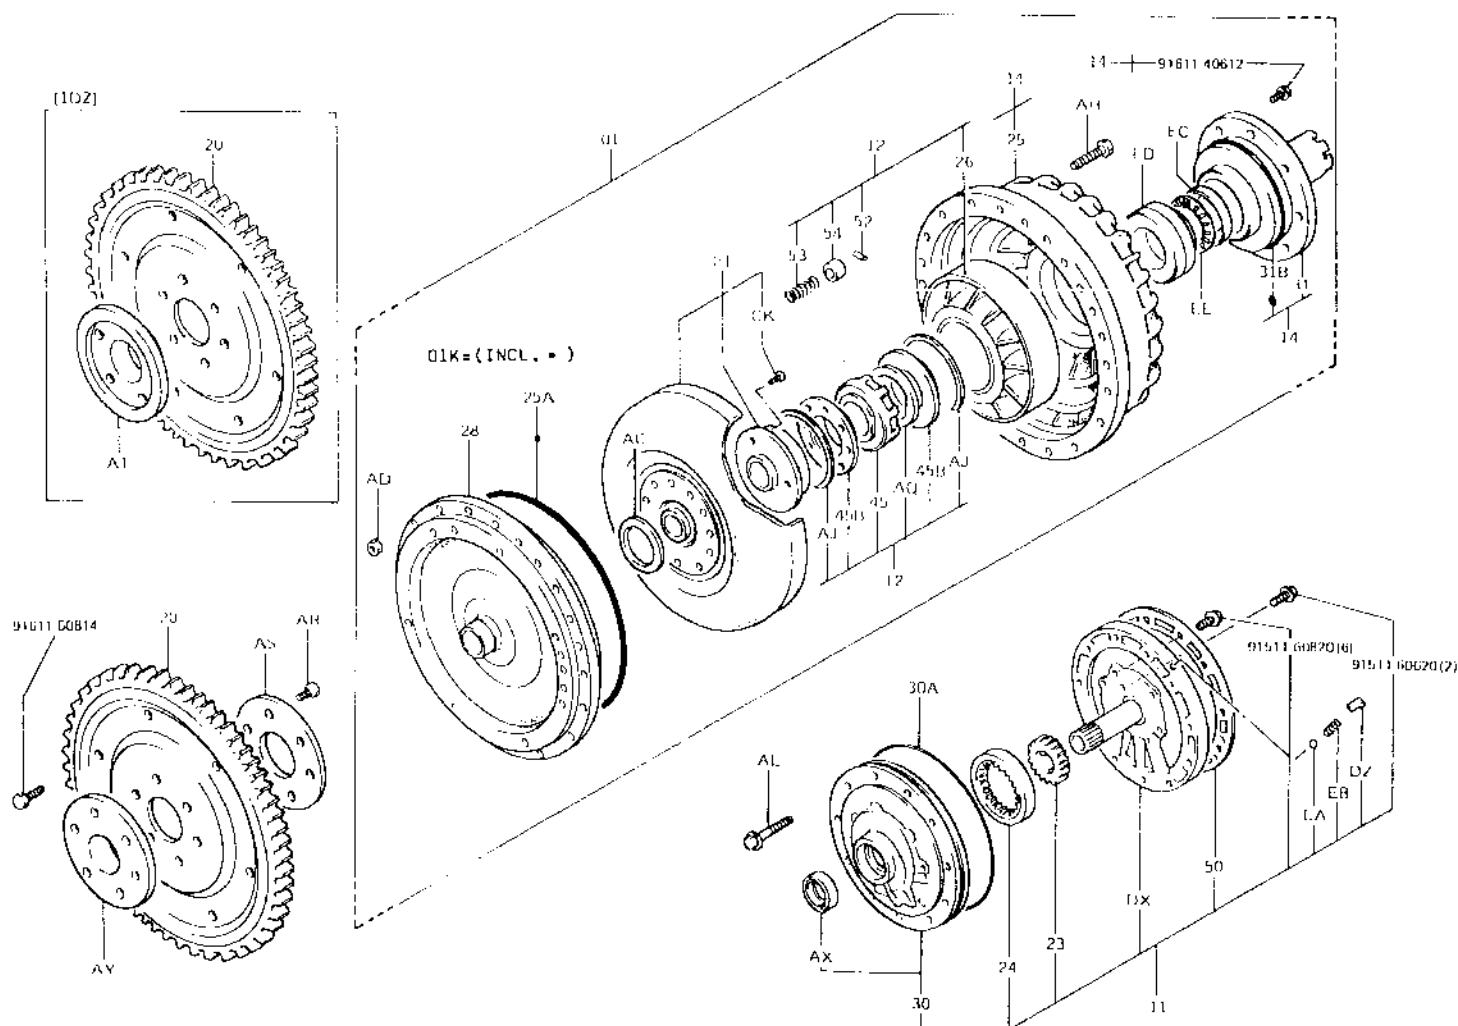

3202-056A
G708-001

FIG. 3202
TORQUE CONVERTER

3202

ATM

90/07



PART NAME	PART NAME	QTY
CODE		
3202-01	TORQUE CONVERTER ASSY	1
3202-01X	TORQUE CONVERTER O/H KIT	1
3202-11	PUMP ASSY, OIL	1
3202-12	STATOR ASSY	1
3202-14	IMPELLER ASSY, PUMP	1
3202-20	GEAR SUB-ASSY, DRIVE PLATE & RING	1
3202-21	RUNNER SUB-ASSY, TURBINE	1
3202-23	GEAR SUB-ASSY, OIL PUMP DRIVE	1
3202-24	GEAR SUB-ASSY, OIL PUMP DRIVEN	1
3202-25	IMPELLER SUB-ASSY, PUMP	1
3202-25A	RING, O (FOR PUMP IMPELLER)	1
3202-26	STATOR SUB-ASSY	1
3202-28	COVER SUB-ASSY, DRIVE (DISC SUB-ASSY)	1
3202-30	CASE SUB-ASSY, OIL PUMP	1
3202-30A	RING, O (FOR OIL PUMP CASE)	1
3202-31	EXTENSION SUB-ASSY, PUMP IMPELLER (BOSS)	1
3202-31B	RING, O (FOR PUMP IMPELLER EXTENSION)	1
3202-45	HUB (FACE, INNER)	1
3202-45B	WASHER, THRUST, NO.1 (FOR HUB)	2
3202-50	PACKING, OIL PUMP CASE COVER	1
3202-52	ROLLER (FOR STATOR)	8
3202-53	SPRING (FOR STATOR)	8
3202-54	CAP, SPRING (FOR STATOR)	8
3202-AC	WASHER, TURBINE, FRONT	99
3202-AD	NUT	20
3202-AH	BOLT	20
3202-AJ	RING, HOLE	2
3202-AL	BOLT	11
3202-AQ	PLATE, THRUST	2
3202-AR	BOLT	6
3202-AS	SPACER, DRIVE PLATE	1
3202-AT	SUPPORT, CENTERING	1
3202-AX	SEAL, OIL	1
3202-AV	SPACER	1
3202-CK	RIVET	12
3202-DX	COVER SUB-ASSY, FRONT OIL PUMP	1
3202-DZ	SEAT, CHECK VALVE SPRING	1
3202-EA	BALL, CHECK	1
3202-EB	SPRING, COMPRESSION	1
3202-ED	RACE, THRUST BEARING	1

G708-007E

3203

90/07

  ATM [2/4]

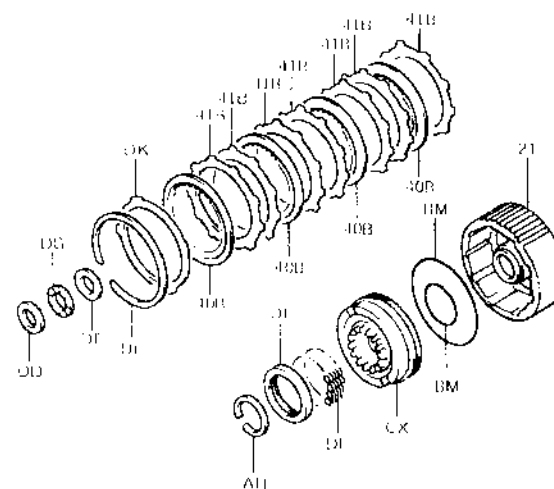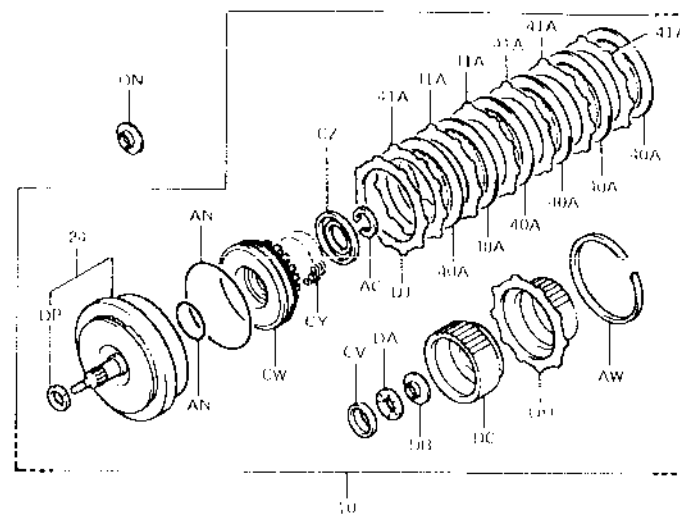

3703 UZLA

3203 074

2001 07/28 0044

FIG. 3203
TORQUE CONVERTER CLUTCH

 
 
3203

ATM

90/07

ATM 13/41

ATM 14/41

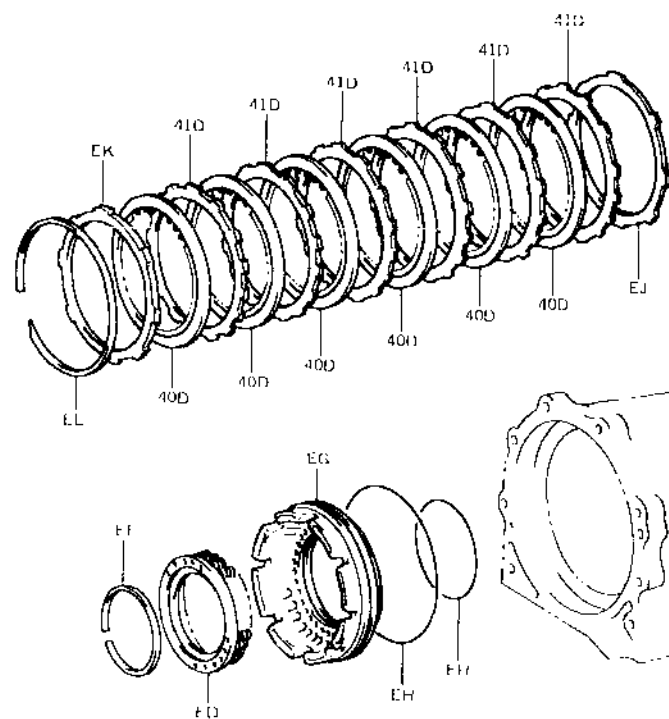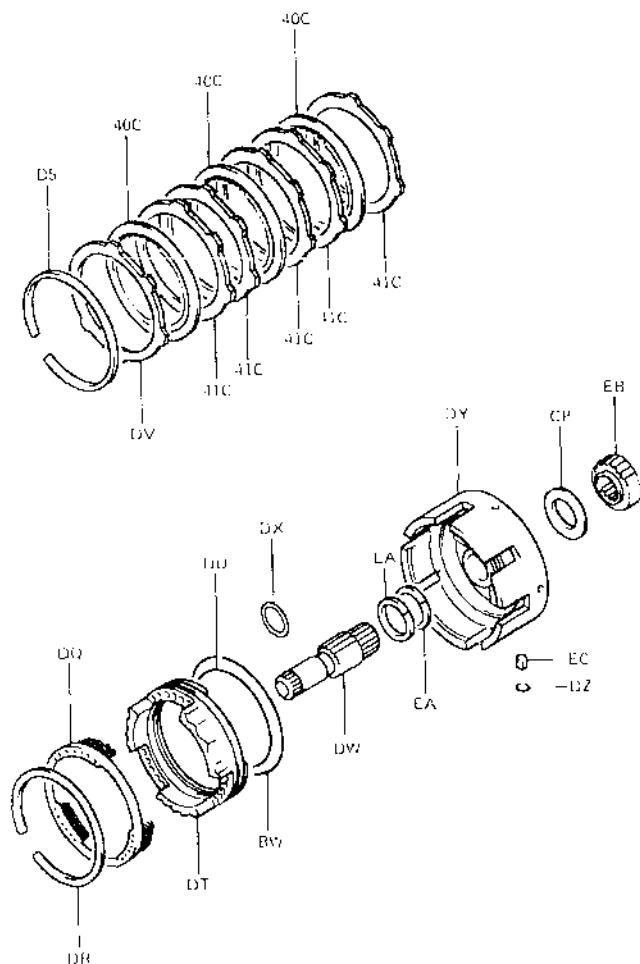

3203 077

3203 076

G70B-002

FIG. 3203
TORQUE CONVERTER CLUTCH

3203

ATM

90/07

PART NAME	PART NAME	QTY
CODE		
3203-10	DRUM ASSY, CLUTCH, NO.1	1
3203-21	DRUM SUB-ASSY, CLUTCH, NO.2	1
3203-24	SHAFT SUB-ASSY, CLUTCH, NO.1	1
3203-40A	DISC, CLUTCH (FOR FRONT CLUTCH)	6
3203-40B	DISC, REAR CLUTCH	4
3203-40C	DISC, CLUTCH (FOR BRAKE)	5
3203-40D	DISC, CLUTCH (FOR 1ST & REVERSE BRAKE)	6
3203-41A	PLATE, FRONT CLUTCH	1- 5
3203-41B	PLATE, REAR CLUTCH	7
3203-41C	PLATE, BRAKE	5
3203-41D	PLATE, BRAKE (FOR 1ST & REVERSE BRAKE)	6
3203-AC	RING, SHAFT SNAP	1
3203-AH	RING, SHAFT SNAP	1
3203-AN	RING, O	1
3203-AD	RING, HOLE SNAP	1
3203-AW	RING, HOLE SNAP	1
3203-AX	BOLT	6
3203-BM	RING, O	1
3203-BW	RING, O	1
3203-CL	BEARING, THRUST	1
3203-CP	WASHER	99
3203-CT	CASE SUB-ASSY, OVERDRIVE	1
3203-CU	RACE, THRUST BEARING	1
3203-CV	RACE, THRUST BEARING	2
3203-CW	PISTON SUB-ASSY, FRONT CLUTCH	1
3203-CX	PISTON SUB-ASSY, REAR CLUTCH	1
3203-CY	SPRING, COMPRESSION	22
3203-CZ	SEAT, FRONT CLUTCH PISTON RETURN SPRING	1
3203-DA	BEARING, THRUST	2
3203-DB	RACE, THRUST BEARING	2
3203-DC	HUB, FRONT CLUTCH	1
3203-DD	RACE, THRUST BEARING	1
3203-DE	SPRING, COMPRESSION	22
3203-DF	RACE, THRUST BEARING	1
3203-DG	BEARING, THRUST NEEDLE ROLLER	1
3203-DH	HUB, REAR CLUTCH	1
3203-DJ	SEAT, REAR CLUTCH PISTON RETURN SPRING	1
3203-DK	PLATE, CLUTCH CUSHION	1
3203-DL	FLANGE, REAR CLUTCH	99
3203-DM	RING, HOLE SNAP	1
3203-DN	RACE, THRUST BEARING	99
3203-DP	RING, INPUT SHAFT OIL SEAL	1
3203-DQ	SPRING SUB-ASSY, 2ND BRAKE PISTON RETURN	1
3203-DR	RING, HOLE SNAP	1
3203-DS	RING, HOLE SNAP	1
3203-DT	PISTON, BRAKE, NO.1	1
3203-DV	RING, O	1
3203-DW	FLANGE, BRAKE, NO.1	99
3203-DX	GEAR SUB-ASSY, FRONT PLANETARY SUN	1
3203-DY	RING, SHAFT SNAP	1
3203-DZ	SUPPORT SUB-ASSY, CENTER	1
3203-EA	RING, O	5
3203-EB	RING, OIL SEAL	2
3203-EC	GEAR, REAR PLANETARY SUN	1
3203-ED	RETAINER, CENTER SUPPORT RING	5
3203-EE	SPRING SUB-ASSY, 1ST & REVERSE BRAKE RETURN	1
3203-EF	RING, SHAFT SNAP	1
3203-EG	PISTON, 1ST & REVERSE BRAKE	1
3203-EH	RING, O	1
3203-EJ	PLATE, BRAKE CUSHION	1
3203-EK	FLANGE, BRAKE (FOR 1ST & REVERSE BRAKE)	99
3203-EL	RING, HOLE SNAP	1
3203-EM	RING, CLUTCH DRUM OIL SEAL	2
3203-EN	RETAINER, CENTER SUPPORT O RING	2

PART NAME	PART NAME	QTY
CODE		
3203-EO	RING, O	3
3203-EP	SHAFT SUB-ASSY, TRANSMISSION INPUT	1
3203-EQ	SCHELV, INPUT SHAFT	1
3203-ER	FLANGE, TRANSMISSION INPUT	1
3203-ES	RING, OIL SEAL	1
3203-ET	RACE, THRUST BEARING	99
3203-EV	BEARING, THRUST NEEDLE ROLLER	1

G/08-003E

FIG. 3204
TORQUE CONVERTER GEAR

 
 
3204

ATM


89/11

ATM (1/2)

ATM (2/2)

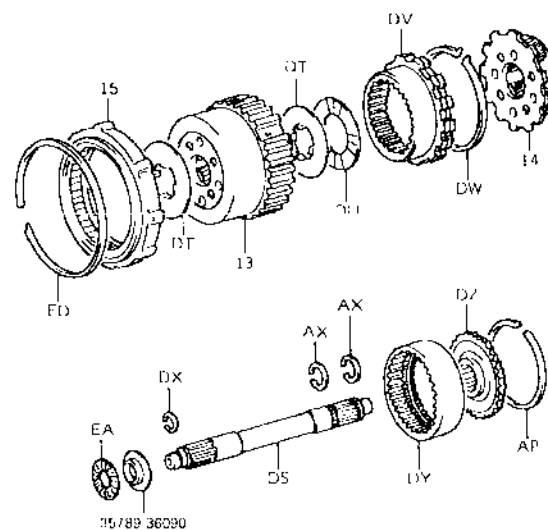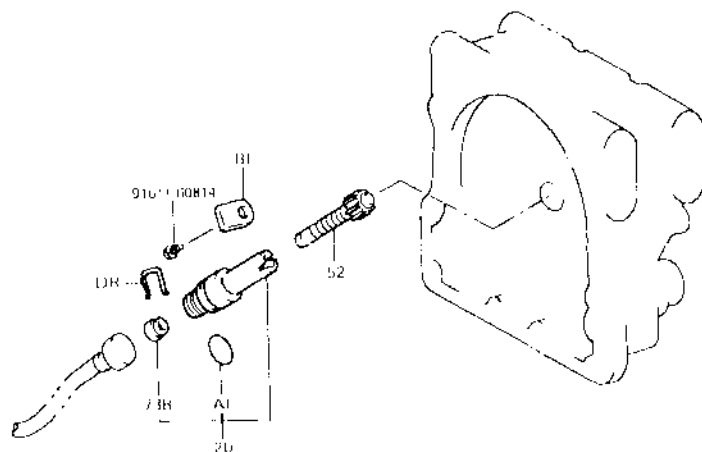

3204 042

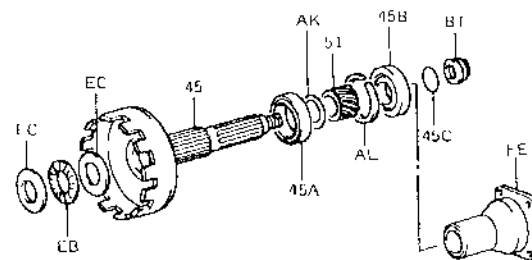 

3204-043 A

G708-001

FIG. 3204
TORQUE CONVERTER GEAR

3204

ATM

89/11

PART NAME CODE	PART NAME	QTY
3204-13	GEAR ASSY, FRONT PLANETARY	1
3204-14	GEAR ASSY, REAR PLANETARY	1
3204-15	CLUTCH ASSY, 1 WAY	1
3204-20	SLEEVE SUB-ASSY, SPEEDOMETER	1
3204-45	SHAFT, OUTPUT, NO.1	1
3204-45A	BEARING, NO.1 (FOR OUTPUT SHAFT)	1
3204-45B	BEARING, NO.2 (FOR OUTPUT SHAFT)	1
3204-45C	RING, O (FOR OUTPUT SHAFT)	1
3204-51	GEAR, SPEEDOMETER DRIVE	1
3204-73B	SEAL, OIL (FOR SPEEDOMETER SHAFT)	1
3204-A1	RING, O	1
3204-AX	SPACER	1
3204-AL	RING, SNAP	1
3204-AP	RING, SNAP	1
3204-AX	RING, SNAP	2
3204-B1	PLATE	1
3204-BT	NUT	1
3204-DR	CLIP	1
3204-DS	SHAFT, INTERMEDIATE	1
3204-DT	WASHER, PLANETARY CARRIER THRUST, NO.1	2
3204-DU	WASHER, PLANETARY CARRIER THRUST, NO.2	1
3204-DV	GEAR, FRONT PLANETARY RING	1
3204-DW	RING, HOLE SNAP	1
3204-DX	RING, INTERMEDIATE SHAFT OIL SEAL	1
3204-DY	GEAR, REAR PLANETARY RING	1
3204-DZ	FLANGE, REAR PLANETARY RING GEAR	1
3204-EA	BEARING, THRUST NEEDLE ROLLER	1
3204-EB	BEARING, THRUST	1
3204-EC	RACE, THRUST BEARING	2
3204-ED	RING, HOLE SNAP	1
3204-EE	FLANGE, OUTPUT SHAFT	1

G708-002E

FIG. 3206
CONTROL VALVE

 
3206

ATM

92/08

ATM 11/71

ATM 12/71




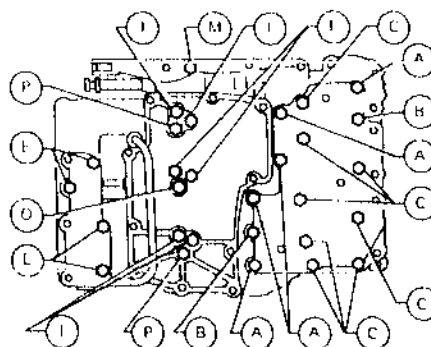


VALVE BODY SET BOLT

NO.	PARTS NO.	QTY.
A	90105 05007	18
B	90105 05015	40
C	90105 05016	56
D	90105 05017	47
E	90105 05023	12
F	90105 05025	29.5
G	90105 06058	64
H	90105 06060	57
I	90105 05002	35
J	90105 05029	25
K	90105 05027	29.5
L	90105 05028	39
M	90105 05030	33
N	90105 06069	22
O	90105 06072	32
P	90105 06075	36
Q	90105 06061	45
R	90105 06070	41
S	90105 06073	45
T	90105 06071	52
V	90105 06064	36

WAVE WASHER

PARTS NO.	QTY.
94541 00500	37

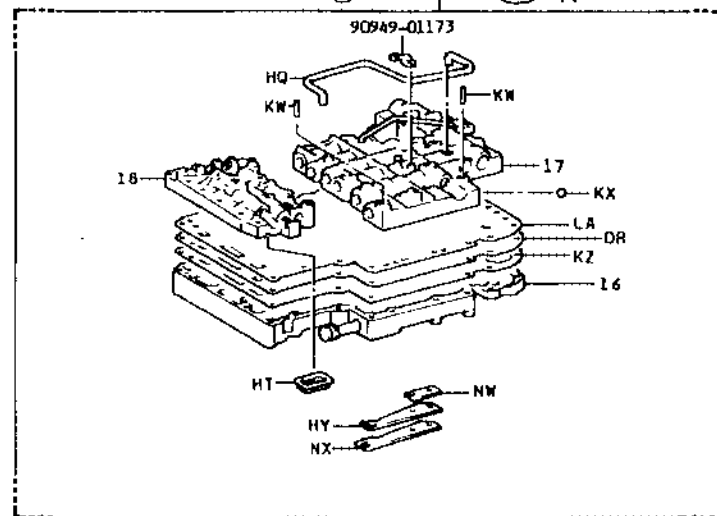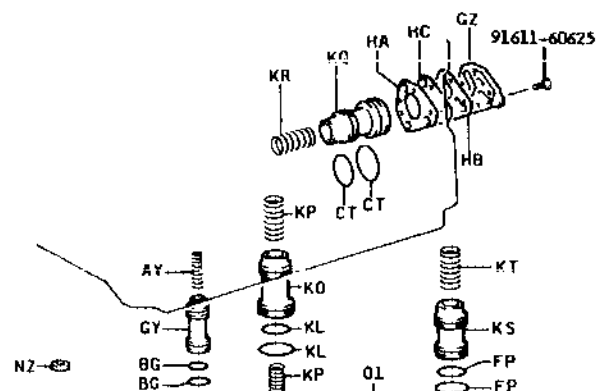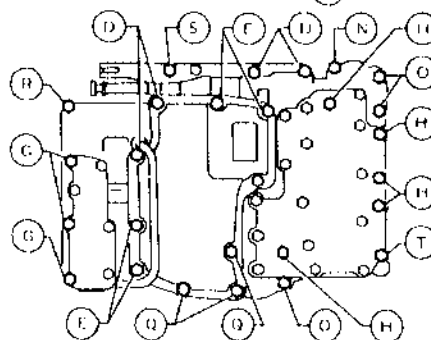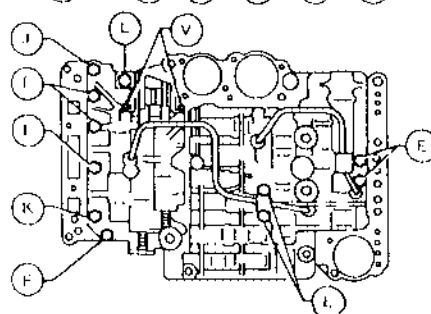    

3206-064B

3206-065B

G708-001

 
3206 064B

3206 065B

3206

92/08

AYM [4/7]

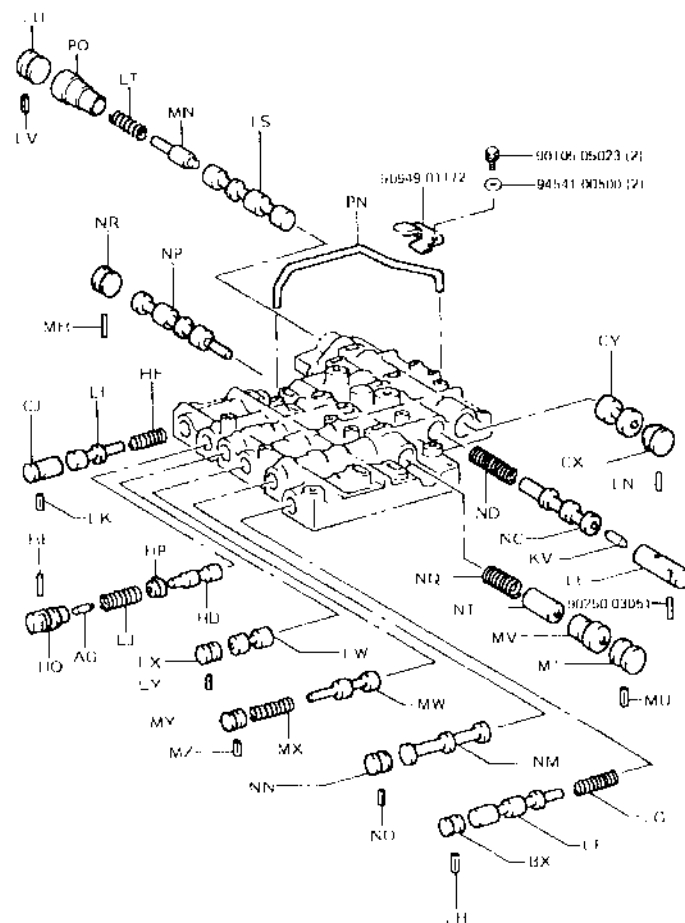

3206 067

G708-002

AYM (5/7)

ATM 16/71

92/08




1706 0584

3206 05-4 0076

FIG. 3206
CONTROL VALVE

 ATM (7/7)

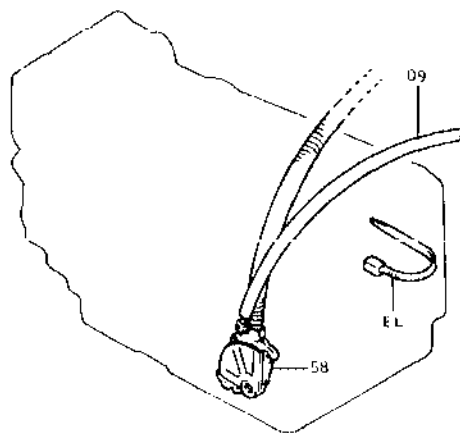

3206 070

3206

ATM

92/08

PART NAME	PART NAME	QTY
CODE		
3206-01	COVER & VALVE ASSY, TRANSMISSION	1
3206-09	CABLE ASSY, THROTTLE	1
3206-16	BODY ASSY, LOWER VALVE	1
3206-17	BODY ASSY, REAR UPPER VALVE	1
3206-18	BODY ASSY, FRONT UPPER VALVE	1
3206-58	SWITCH ASSY, NEUTRAL START	1
3206-AD	SEAL, OIL	2
3206-AG	PLUG	1
3206-AY	SPRING	1
3206-BG	RING, O	1
3206-BX	PLUG	1
3206-CJ	PLUG	1
3206-CT	RING, O	1
3206-CX	PLUG	1
3206-CY	PLUG	1
3206-DR	PLATE, CONTROL VALVE BODY	1
3206-DY	PLUG	1
3206-EC	SPACER	1
3206-EL	CLAMP	1
3206-EX	PLUG	1
3206-FP	RING, O	1
3206-GY	PISTON, OVERDRIVE BRAKE ACCUMULATOR	1
3206-GZ	COVER, FRONT CLUTCH ACCUMULATOR	1
3206-HA	GASKET, FRONT CLUTCH ACCUMULATOR, NO.2	1
3206-HB	GASKET, FRONT CLUTCH ACCUMULATOR, NO.1	1
3206-HC	PLATE, FRONT CLUTCH ACCUMULATOR	1
3206-HD	VALVE, LOCK UP SIGNAL	1
3206-HE	PIN, STRAIGHT	1
3206-HF	SPRING, COMPRESSION	1
3206-HG	VALVE, LOCK UP RELAY	1
3206-HH	SPRING, COMPRESSION	1
3206-HI	VALVE, LOCK UP RELAY CONTROL	1
3206-HJ	PIN, STRAIGHT	1
3206-HK	SLEEVE, LOCK UP RELAY VALVE, NO.1	1
3206-HL	SLEEVE, LOCK UP RELAY VALVE, NO.2	1
3206-HM	PLATE, LOCK UP RELAY VALVE BODY	1
3206-HN	GASKET, LOCK UP RELAY VALVE BODY	1
3206-HO	SLEEVE, LOCK UP SIGNAL VALVE	1
3206-HP	SEAT, LOCK UP SIGNAL VALVE SPRING	1
3206-HQ	TUBE, LOCK UP SIGNAL VALVE APPLY	1
3206-HR	STRAINER SUB-ASSY, OIL	1
3206-HS	GASKET, OIL STRAINER	1
3206-HT	STRAINER, THROTTLE OIL	1
3206-HU	PLUG SUB-ASSY, SECONDARY DOWN SHIFT	1
3206-HV	SPRING, COMPRESSION	1
3206-HW	PLUG SUB-ASSY, PRIMARY DOWN SHIFT	1
3206-HX	SPRING, COMPRESSION	1
3206-HY	SPRING SUB-ASSY, MANUAL DETENT	1
3206-HZ	VALVE, PRIMARY REGULATOR	1
3206-KA	SPRING, COMPRESSION	1
3206-KB	WASHER	1
3206-KC	RING, E	4
3206-KD	PLUNGER, PRIMARY REGULATOR VALVE	1
3206-KE	SLEEVE, PRIMARY REGULATOR VALVE	1
3206-KF	VALVE, MANUAL	1
3206-KI	BALL	2
3206-KL	RING	1
3206-KM	STOPPER, VALVE VIBRATING	1
3206-KN	STOPPER, VALVE VIBRATING	1
3206-KO	PISTON, B-2 ACCUMULATOR	1
3206-KP	SPRING, COMPRESSION	1
3206-KQ	PISTON, C-1 ACCUMULATOR	1
3206-KR	SPRING, COMPRESSION	1
3206-KS	PISTON, C-2 ACCUMULATOR	1

G708-004

FIG. 3206
CONTROL VALVE

3206

ATM

92/08

PART NAME CODE	PART NAME	QTY
3206-KT	SPRING, COMPRESSION	1
3206-KU	SEAT, PRIMARY REGULATOR VALVE SLEEVE	1
3206-KV	PLUG, 2-3 SHIFT TIMING VALVE	1
3206-KW	TUBE, LINE PRESSURE	2
3206-KX	BALL	7
3206-KZ	GASKET, VALVE BODY, NO.1	1
3206-LA	GASKET, VALVE BODY, NO.2	1
3206-LB	GASKET, VALVE BODY PLATE, NO.3	1
3206-LC	GASKET, VALVE BODY PLATE, NO.4	1
3206-LD	PLATE, VALVE BODY COVER	1
3206-LE	SLEEVE, 2-3 SHIFT TIMING VALVE PLUG	1
3206-LF	VALVE, INTERMEDIATE MODULATOR	1
3206-LG	SPRING, COMPRESSION	1
3206-LH	KEY, STRAIGHT	1
3206-LI	VALVE, LOWLR MODULATOR	1
3206-LJ	SPRING, COMPRESSION	1
3206-LK	KEY, STRAIGHT	1
3206-LL	PIN, STRAIGHT	2
3206-LM	SLEEVE, THROTTLE VALVE, NO.1	1
3206-LN	PIN, STRAIGHT	1
3206-LO	VALVE, LOW COAST SHIFT	1
3206-LP	KEY, STRAIGHT	1
3206-LQ	PLUG	1
3206-LR	PIN, STRAIGHT	1
3206-LS	VALVE, 2-3 SHIFT	1
3206-LT	SPRING, COMPRESSION	1
3206-LU	PLUG	1
3206-LV	KEY, STRAIGHT	1
3206-LW	VALVE, CUT BACK	1
3206-LX	PLUG	1
3206-LY	KEY, STRAIGHT	1
3206-LZ	SLEEVE, THROTTLE VALVE, NO.2	1
3206-MA	SPRING	1
3206-MB	VALVE, THROTTLE	1
3206-MC	SPRING, COMPRESSION	1
3206-MD	SPRING	8
3206-ME	VALVE, 1-2 RELAY	1
3206-MF	PLUG	1
3206-MG	SPRING, COMPRESSION	1
3206-MH	PIN, STRAIGHT	1
3206-MI	VALVE, 1-2 SHIFT	1
3206-MJ	SPRING, COMPRESSION	1
3206-MK	VALVE, 2ND LOCK	1
3206-ML	KEY, STRAIGHT	1
3206-MM	PLUG	1
3206-MN	VALVE, INTERMEDIATE COAST SHIFT	1
3206-MO	VALVE, SECONDARY REGULATOR	1
3206-MP	SPRING, COMPRESSION	1
3206-MQ	KEY, STRAIGHT	1
3206-MR	PLUG	1
3206-MS	COVER, VALVE BODY, NO.2	1
3206-MT	PLUG, STRAIGHT	1
3206-MU	PIN, LOCATING	1
3206-MV	VALVE, 3RD COAST	1
3206-MW	VALVE, OVERDRIVE CLUTCH EXHAUST	1
3206-MX	SPRING, COMPRESSION	1
3206-MY	PLUG	1
3206-MZ	KEY, STRAIGHT	1
3206-NA	VALVE, SECONDARY THROTTLE	1
3206-NB	SPRING, COMPRESSION	1
3206-NC	VALVE, 2-3 SHIFT TIMING	1
3206-ND	SPRING, COMPRESSION	1
3206-NE	VALVE, 3-2 KICK DOWN ORIFICE CONTROL	1
3206-NF	SPRING	1

PART NAME CODE	PART NAME	QTY
3206-NG	KEY, STRAIGHT	1
3206-NH	PLUG	1
3206-NI	VALVE, ACCUMULATOR CONTROL, NO.1	1
3206-NJ	SPRING, COMPRESSION	1
3206-NK	KEY, STRAIGHT	1
3206-NL	PLUG	1
3206-NM	VALVE, MANUAL DOWN TIMING	1
3206-NN	PLUG	1
3206-NO	KEY, STRAIGHT	1
3206-NP	VALVE, 3-4 SHIFT	1
3206-NQ	SPRING, COMPRESSION	1
3206-NR	PLUG	1
3206-NT	VALVE, 3-4 COAST SHIFT	1
3206-NU	CAM ASSY, THROTTLE VALVE	1
3206-NV	SHIM	8
3206-NW	SPACER, MANUAL DETENT SPRING	1
3206-NX	COVER, MANUAL DETENT SPRING	1
3206-NY	TUBE, TRANSMISSION LUBE APPLY	1
3206-NZ	GASKET, CENTER SUPPORT APPLY	4
3206-PB	LEVER SUB-ASSY, MANUAL VALVE	1
3206-PC	PIN, SPRING	1
3206-PK	SHAFT, MANUAL VALVE LEVER	1
3206-PL	LEVER, TRANSMISSION CONTROL SHAFT	1
3206-PM	TUBE, LOCK UP SIGNAL VALVE APPLY	1
3206-PO	SLEEVE, INTERMEDIATE COAST SHIFT	1

G708-005E


FIG. 3212
GOVERNOR

3212

ATM

92/08

 ATM

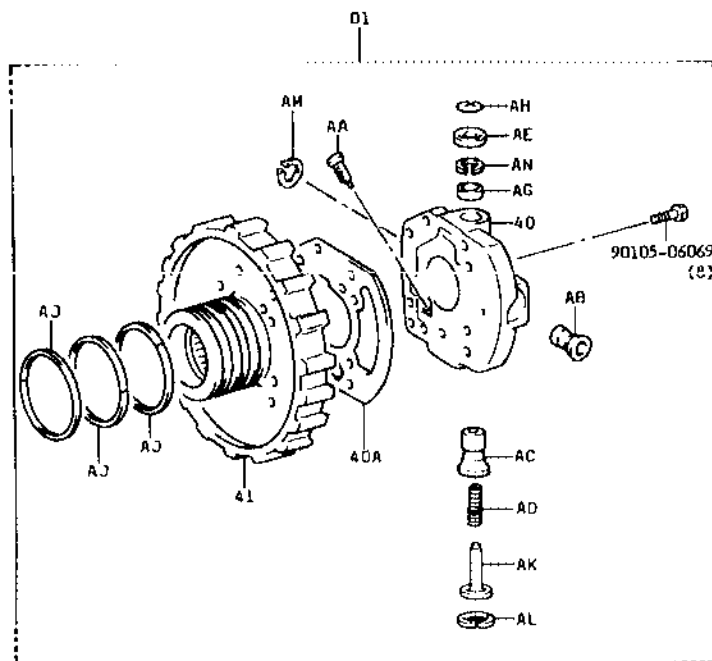

3212-001B

PART NAME	PART NAME	QTY
CODE		
3212-01	BODY ASSY, GOVERNOR	1
3212-40	BODY, GOVERNOR	1
3212-40A	GASKET, GOVERNOR BODY	1
3212-41	SUPPORT, GOVERNOR BODY	1
3212-AA	STRAINER, GOVERNOR OIL	1
3212-AB	VALVE, GOVERNOR, NO.1	1
3212-AC	VALVE, GOVERNOR, NO.2	1
3212-AD	SPRING, COMPRESSION	1
3212-AE	SPACER	1
3212-AG	WEIGHT, GOVERNOR	1
3212-AH	RING, E	1
3212-AJ	RING	3
3212-AK	SHAFT, GOVERNOR VALVE, NO.2	1
3212-AL	RING, SNAP	1
3212-AM	RING, SNAP	1
3212-AN	RING, E	1

G708-001E



FIG. 3213
TORQUE CONVERTER PIPING

3213

ATM

90/07

  ATM

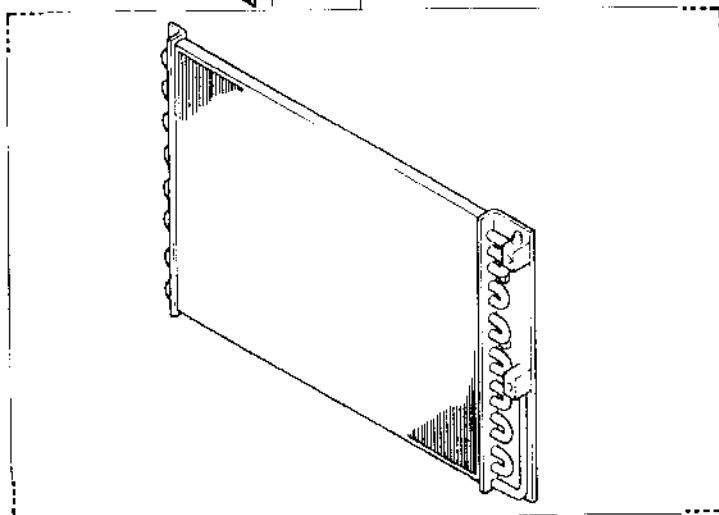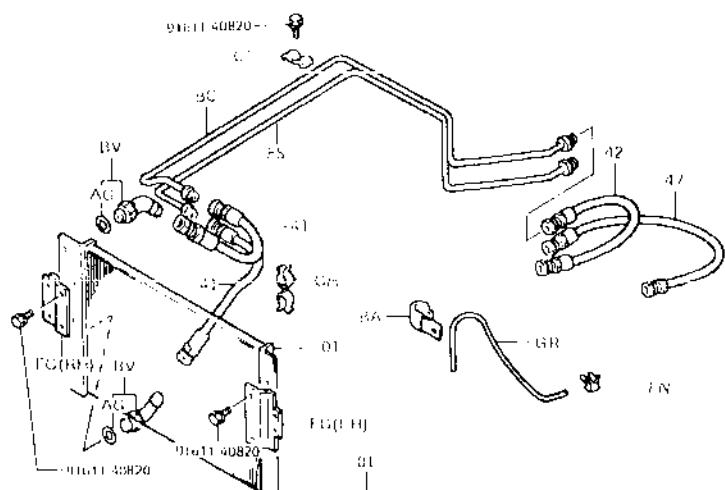

3213 07BA

PART NAME

PART NAME

QTY

CODE

3213-01	COOLER ASSY, OIL	1
3213-41	HOSE, LOW PRESSURE, NO.1 (FOR OIL COOLER)	2
3213-42	HOSE, LOW PRESSURE, NO.2 (FOR OIL COOLER)	1
3213-43	HOSE, LOW PRESSURE, NO.3 (FOR OIL COOLER)	1
3213-AG	RING, O	2
3213-BA	CLAMP, HOSE	1
3213-BC	PIPE SUB-ASSY, OIL COOLER	1
3213-BV	FITTING	2
3213-CT	CLAMP	3
3213-FG	BRACKET, COOLER	1
3213-FN	CLAMP	1
3213-FS	PIPE SUB-ASSY, OIL COOLER	1
3213-GH	CLAMP	1
3213-GR	HOSE	1

G708-001E


FIG. 3215
SHIFT LEVER

3215

ATM

89/11

 ATM

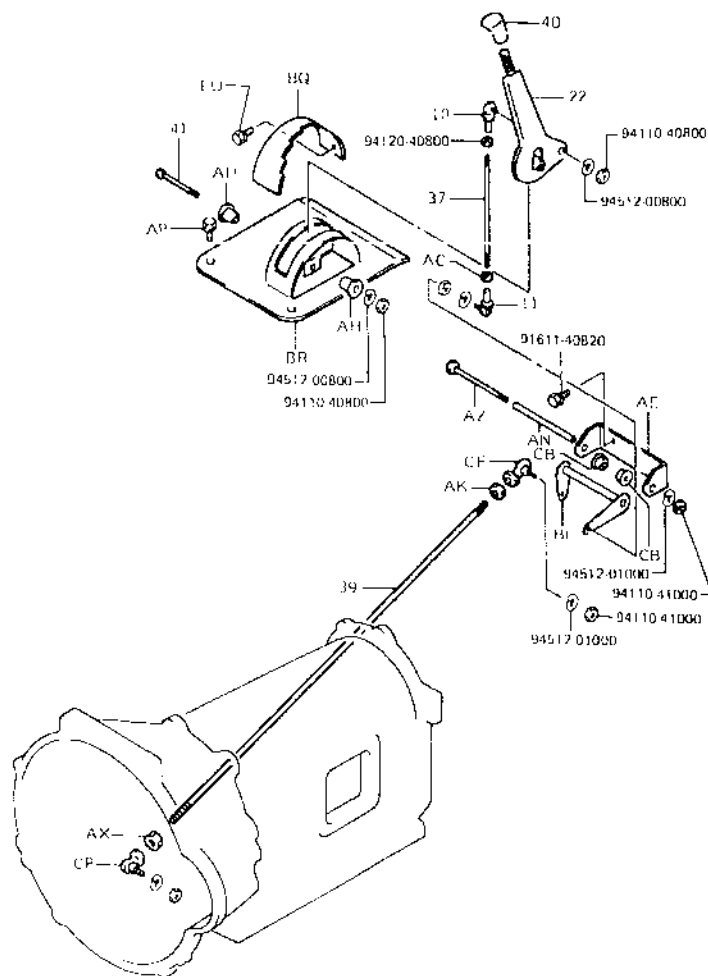

3215 021

PART NAME

COOL

PART NAME

QTY

3215-10	END ASSY, CONNECTING ROD, NO.1	1
3215-11	END ASSY, CONNECTING ROD, NO.2	1
3215-22	LEVER SUB-ASSY, SHIFT	1
3215-37	ROD SUB-ASSY, SHIFT	1
3215-39	ROD SUB-ASSY, SHIFT	1
3215-40	KNOB	1
3215-41	SHAFT, NO.1	1
3215-AC	NUT	1
3215-AE	BRACKET SUB-ASSY	1
3215-AH	BUSHING	2
3215-AK	NUT	1
3215-AN	SPACER	1
3215-AP	BOLT	4
3215-AX	NUT	1
3215-AZ	BOLT	1
3215-B1	LINK SUB-ASSY, SHIFT LEVER, NO.1	1
3215-BQ	PLATE, SHIFT POSITION	1
3215-BR	COVER SUB-ASSY, SHIFT LEVER	1
3215-CB	BUSHING	2
3215-CF	END SUB-ASSY	1
3215-CP	END SUB-ASSY	1
3215-EU	SCREW	4

G708-001E


FIG. 3701
PROPELLER SHAFT & UNIVERSAL JOINT

3701

ATM

89/11

 ATM

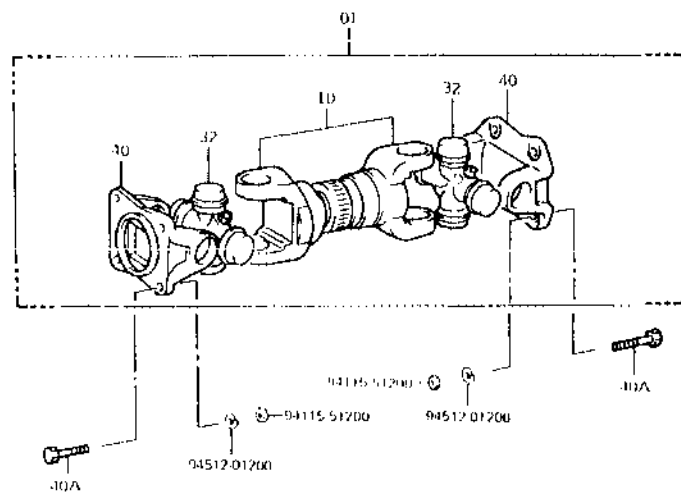

3701 046

PART NAME	PART NAME	QTY
CODE		
3701-01	SHAFT ASSY, PROPELLER	1
3701-10	YOKE ASSY, ELIP & STAB	1
3701-32	SPIDER SET, UNIVERSAL	2
3701-40	YOKE, UNIVERSAL JOINT FLANGE	2
3701-40A	BOLT (FOR UNIVERSAL JOINT FLANGE YOKE)	8

G708-001E


FIG. 4101
DIFFERENTIAL

4101

ATM

89/11

 ATM-15,18

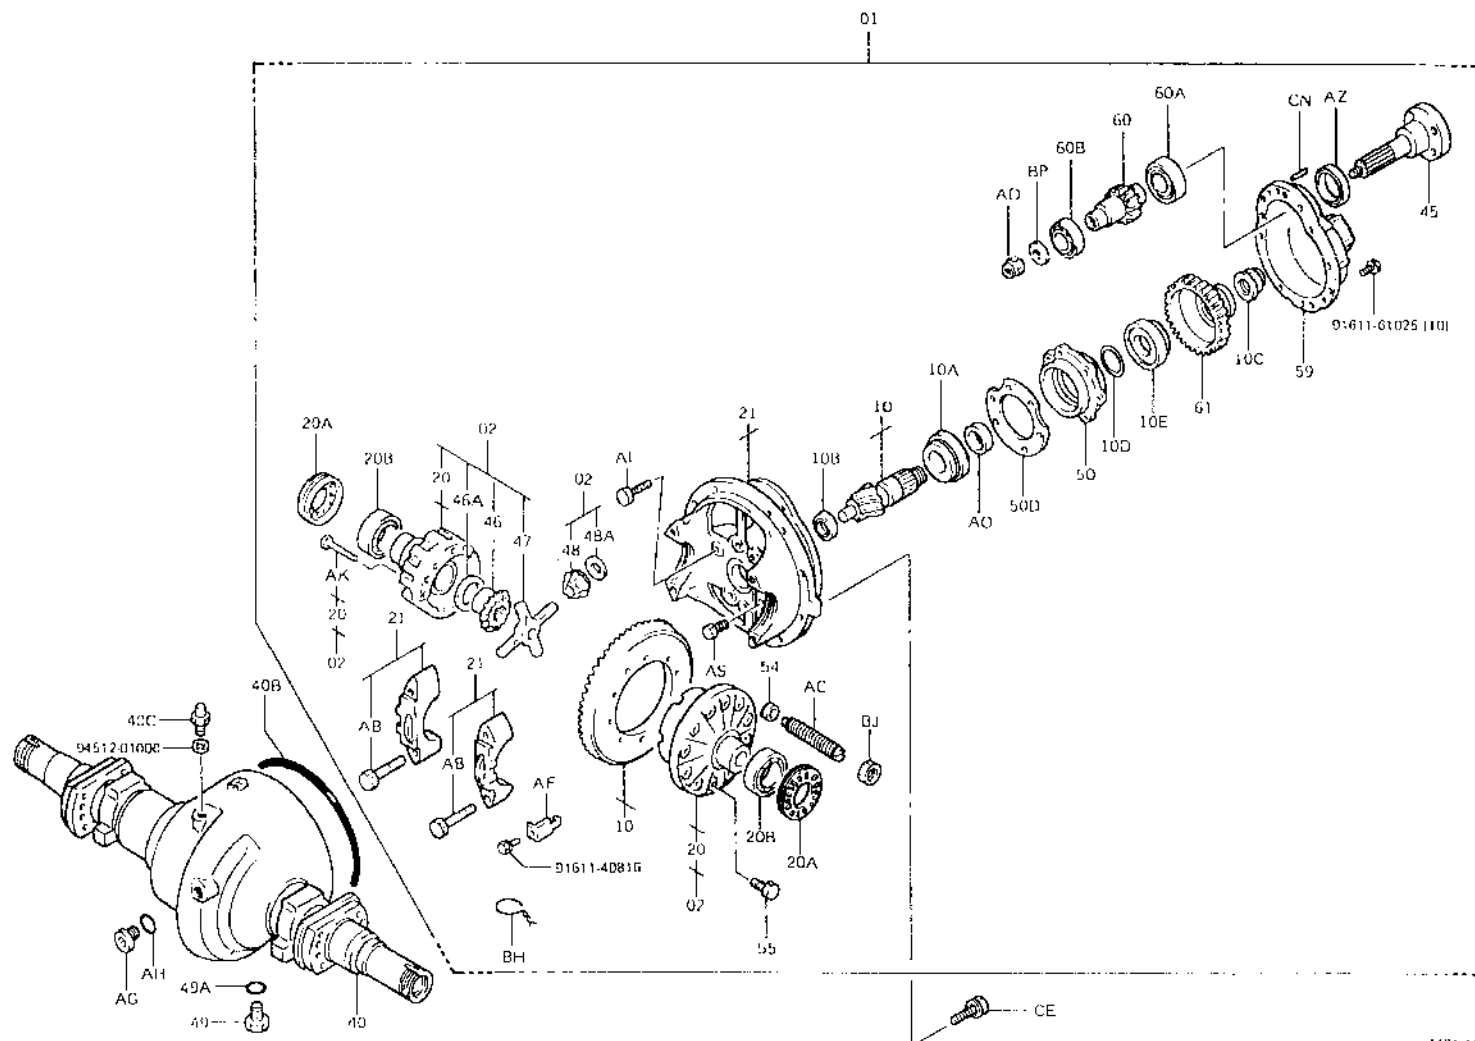

4101-100A

G708-001

4101 100A 06/75


FIG. 4101
DIFFERENTIAL

4101

ATM

89/11

 ATM..20,23,25

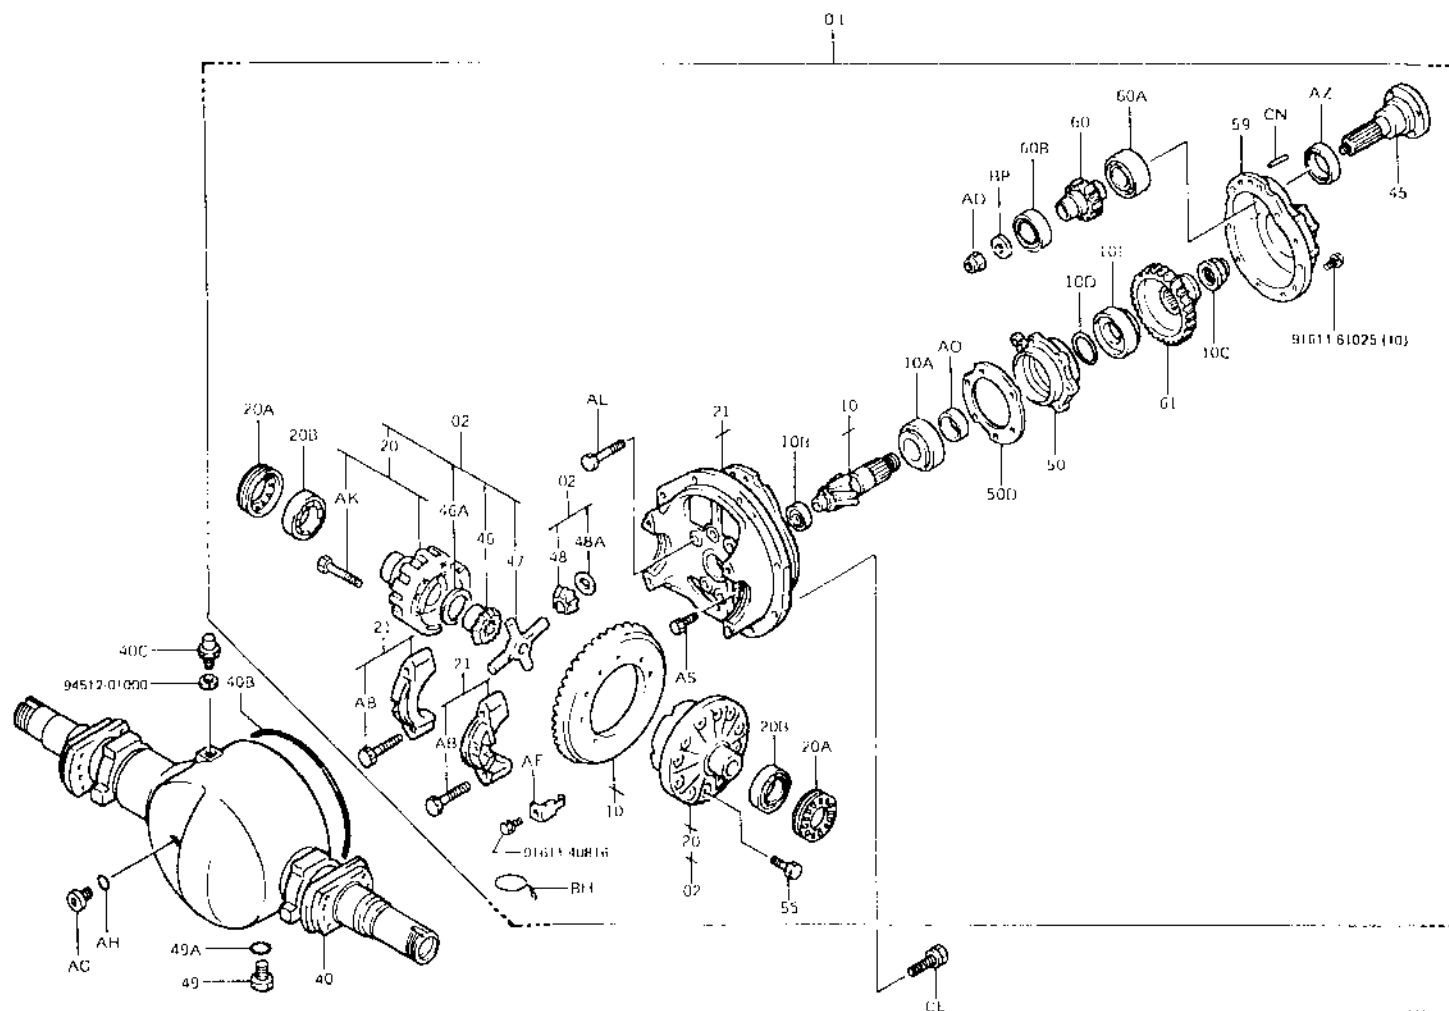

4101 131

6708-002

4101 101 00/0

FIG. 4101
DIFFERENTIAL

4101

ATM

89/11

PART NAME CODE	PART NAME	QTY
4101-01	CARRIER ASSY, DIFFERENTIAL	1
4101-02	CASE ASSY, DIFFERENTIAL	1
4101-10	RING GEAR & PINION SET, DIFFERENTIAL	1
4101-10A	BEARING, DRIVE PINION	1
4101-10B	BEARING, DRIVE PINION PILOT	1
4101-10C	NUT, LOCK	1
4101-10D	SHIM, BEARING PRELOAD ADJUST	99
4101-10E	BEARING, DRIVE PINION	1
4101-20	CASE SUB-ASSY, DIFFERENTIAL	1
4101-70A	NUT, ADJUSTING	2
4101-70B	BEARING, DIFFERENTIAL CASE	2
4101-21	CARRIER SUB-ASSY, DIFFERENTIAL	1
4101-40	HOUSING, DIFFERENTIAL	1
4101-40B	RING, D (FOR DIFFERENTIAL HOUSING)	1
4101-40C	PLUG, BREATHER (FOR DIFFERENTIAL HOUSING)	1
4101-45	SHAFT, REDUCTION	1
4101-46	GEAR, SIDE	2
4101-46A	WASHER, SIDE GEAR THRUST	2
4101-47	SPIDER	1
4101-48	PINION	4
4101-48A	WASHER, PINION THRUST	4
4101-49	PLUG, DRAIN	1
4101-49A	GASKET, DRAIN PLUG	1
4101-50	RETAINER, DRIVE PINION BEARING	1
4101-50D	SHIM, DIFFERENTIAL DRIVE PINION BEARING	99
4101-54	CAP, RING GEAR THRUST SCREW	1
4101-55	BOLT, RING GEAR SET	12
4101-59	COVER, DIFFERENTIAL CARRIER	1
4101-60	GEAR, REDUCTION	1
4101-60A	BEARING, NO.1 (FOR REDUCTION GEAR)	1
4101-60B	BEARING, NO.2 (FOR REDUCTION GEAR)	1
4101-61	GEAR, OUTPUT	1
4101-AB	BOLT	4
4101-AC	SCREW, RING GEAR THRUST	1
4101-AD	NUT	1
4101-AF	LOCK, ADJUSTING	2
4101-AG	PLUG, W/HEAD STRAIGHT SCREW	1
4101-AH	GASKET	1
4101-AK	BOLT	12-16
4101-AL	BOLT	4
4101-AD	SPACER, BEARING	1
4101-A5	BOLT	2
4101-AZ	SEAL, OIL	1
4101-BH	WIRE	2
4101-BJ	NUT	1
4101-BP	WASHER	1
4101-CE	BOLT	8
4101-CN	PIN, STRAIGHT	2

G708-003E

FIG. 4205
REAR AXLE SHAFT

 
 
4205

ATM

89/11

ATM. 15, 18

ATM. 20, 23, 25

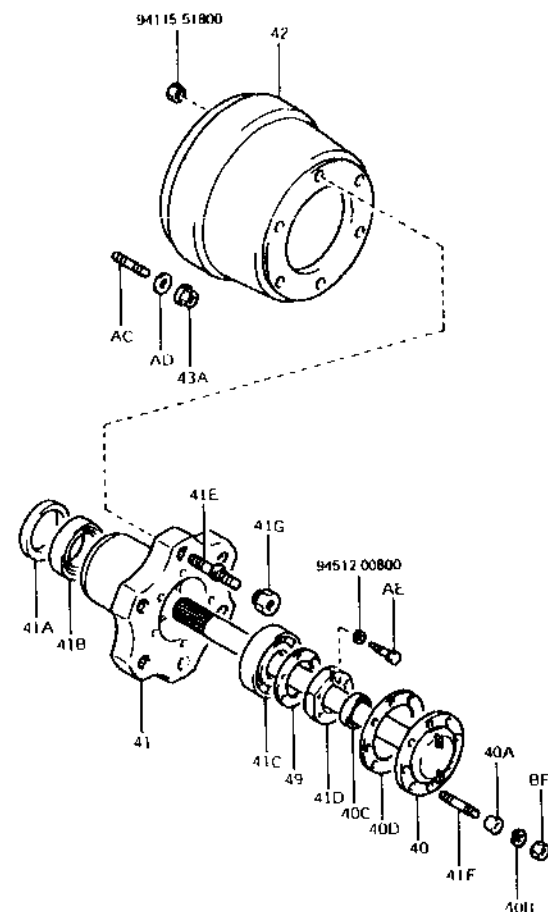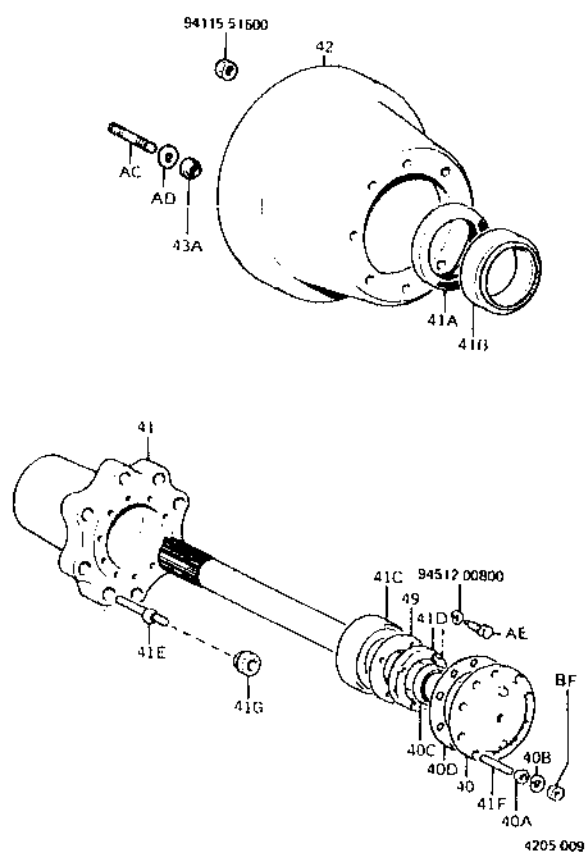

4205 010

Q708-001

FIG. 4205
REAR AXLE SHAFT

4205

ATM

89/11

PART NAME CODE	PART NAME	QTY
4205-40	SHAFT, REAR AXLE	1
4205-40A	WASHER, CORN	16-20
4205-40B	WASHER, SPRING	20
4205-40C	SEAL, OIL (FOR REAR AXLE SHAFT)	2
4205-40D	GASKET, REAR AXLE SHAFT	2
4205-41	HUB, REAR AXLE	2
4205-41A	SEAL, OIL (FOR REAR AXLE HUB)	2
4205-41B	BEARING, NO.1 (FOR REAR AXLE HUB)	2
4205-41C	BEARING, NO.2 (FOR REAR AXLE HUB)	2
4205-41D	NUT, BEARING ADJUSTING	2
4205-41E	BOLT, HUB	12-16
4205-41F	BOLT, STUD (FOR REAR AXLE SHAFT)	16-20
4205-41G	NUT, HUB	12-16
4205-42	DRUM, BRAKE	2
4205-43A	NUT, BRAKE SET SELF	15
4205-49	PLATE, LOCK NUT	2
4205-AC	BOLT, STUD BRAKE SET	8-16
4205-AD	WASHER, CD SPRING	16
4205-AE	BOLT	2
4205-BF	NUT	16-20

G708-002E


FIG. 4306
FRONT AXLE & TIE-ROD

4306

ATM

92/08

 ATM

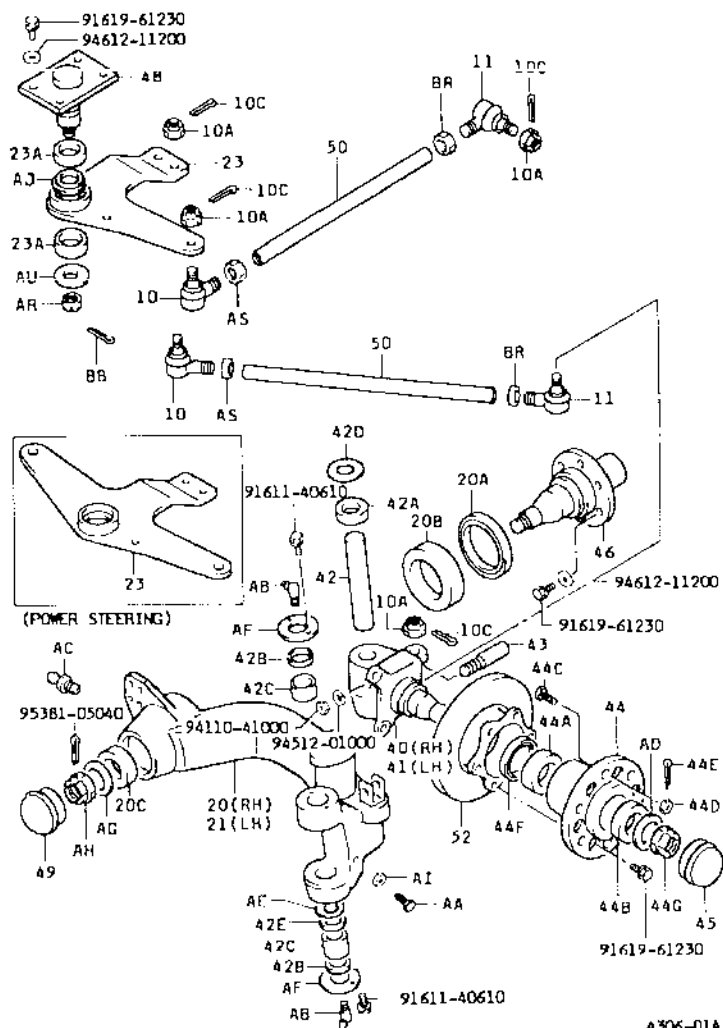

PART NAME	PART NAME	QTY
CODE		
4306-10	END ASSY, TIE-ROD, NO.1	2
4306-10A	NUT, CASTLE (FOR TIE-ROD END)	4
4306-10C	PIN, COTTER (FOR TIE-ROD END)	4
4306-11	END ASSY, TIE-ROD, NO.2	2
4306-20	ARM SUB-ASSY, TRAILING, RH	1
4306-20A	SEAL, OIL (FOR TRAILING ARM)	2
4306-20B	BEARING, NO.1 (FOR TRAILING ARM)	2
4306-20C	BEARING, NO.2 (FOR TRAILING ARM)	2
4306-21	ARM SUB-ASSY, TRAILING, LH	1
4306-23	BELLCRANK SUB-ASSY, STEERING	1
4306-23A	BEARING (FOR STEERING BELLCRANK)	2
4306-40	KNUCKLE, STEERING, RH	1
4306-41	KNUCKLE, STEERING, LH	1
4306-42	PIN, STEERING KNUCKLE KING	2
4306-42A	BEARING, STEERING KNUCKLE THRUST	2
4306-42B	SEAL, OIL, NO.1	4
4306-42C	BEARING, NEEDLE	4
4306-42D	SHIM, STEERING KNUCKLE	99
4306-42E	SEAL, OIL, NO.2	2
4306-43	PIN, KING PIN LOCK	2
4306-44	HUB, FRONT AXLE	2
4306-44A	BEARING, INNER	2
4306-44B	BEARING, OUTER	2
4306-44C	BOLT, HUB	12
4306-44D	NUT, HUB	12
4306-44E	PIN, FRONT AXLE CUTTER	2
4306-44F	SEAL, OIL (FOR FRONT AXLE HUB)	2
4306-44G	NUT, CASTLE (FOR FRONT AXLE HUB)	2
4306-45	CAP, FRONT AXLE HUB	2
4306-46	SHAFT, TRAILING ARM	2
4306-48	PIN, BELLCRANK	1
4306-49	CAP (FOR TRAILING ARM)	2
4306-50	ROD, TIE	2
4306-52	DISC, BRAKE	2
4306-AA	BOLT	2
4306-AB	FITTING, GREASE	4
4306-AC	FITTING, GREASE	2
4306-AD	WASHER, CRAW	2
4306-AE	SHIM	1
4306-AF	PLATE, STOPPER	4
4306-AG	WASHER, CLAW	2
4306-AH	NUT, CASTLE	2
4306-AI	NUT	2
4306-AJ	SPACER	1
4306-AR	NUT	1
4306-AS	NUT	2
4306-AU	PLATE, STOPPER	1
4306-BB	FITTING, GREASE	1
4306-BR	NUT	2

G708-001E



FIG. 4401
FRONT WHEEL & TIRE(SINGLE)

4401

ATM

92/08

  ATM

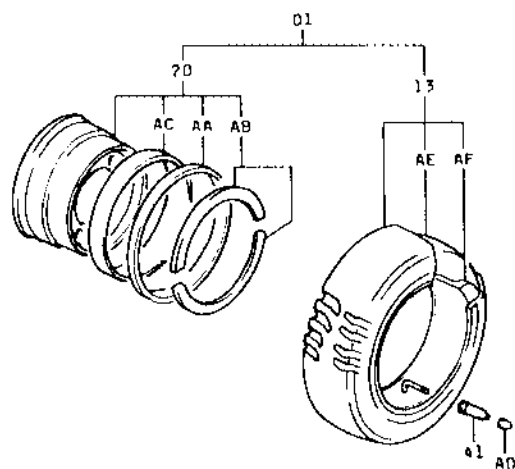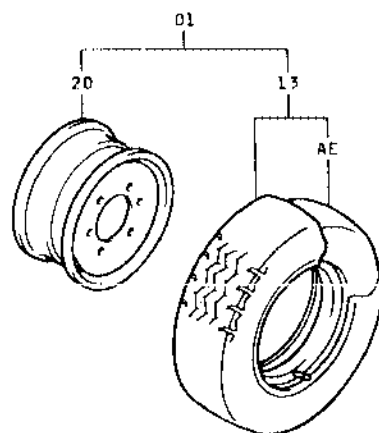

4401-0628

PART NAME	PART NAME	QTY
CODE		
4401-01	WHEEL ASSY	2
4401-13	TIRE ASSY	2
4401-20	WHEEL SUB-ASSY, DISC	2
4401-41	EXTENSION, WHEEL TUBE VALVE	2
4401-AA	FLANGE, SIDE	2
4401-AB	RING, LOCK	4
4401-AC	BAND, BEND SHEET	2
4401-AD	CAP, VALVE	2
4401-AE	TUBE SUB-ASSY	2
4401-AF	FLAP	2

G708-001E





FIG. 4403
REAR WHEEL & TIRE

4403

ATM

89/11

    ATM

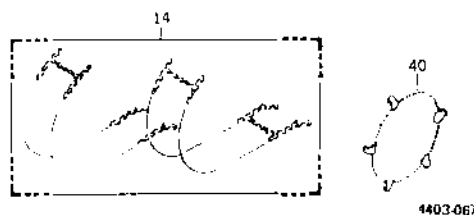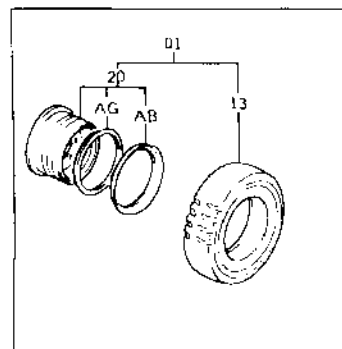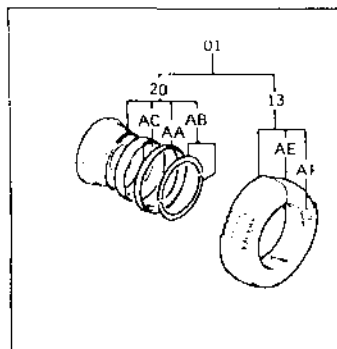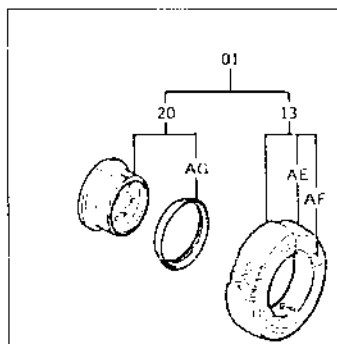

PART NAME	PART NAME	QTY
CODE		
4403-01	WHEEL ASSY	2
4403-13	TIRE ASSY	2
4403-14	CHAIN ASSY, TIRE	2
4403-20	WHEEL SUB-ASSY, DISC	2
4403-40	BAND, CHAIN	2
4403-AA	FLANGE, SIDE	2
4403-AB	RING, LOCK	2
4403-AC	BAND, BEND SHEET	2
4403-AE	TUBE SUB-ASSY	2
4403-AF	FLAP	2
4403-AG	RING, SIDE	2

G708-001E


FIG. 4501
STEERING WHEEL

4501

ATM

89/11

 ATM

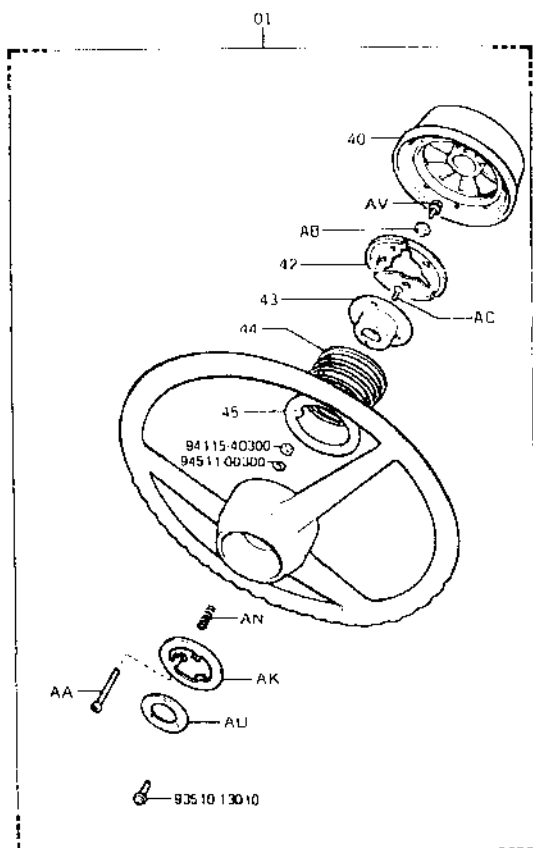

PART NAME	PART NAME	QTY
CODE		
4501-01	WHEEL ASSY, STEERING	1
4501-40	BUTTON, HORN	1
4501-42	PLATE, HORN CONTACT	1
4501-43	SEAT, HORN CONTACT	1
4501-44	SPRING, HORN	1
4501-45	PLATE, LEAD	1
4501-AA	SCREW	1
4501-AB	WASHER	3
4501-AC	SCREW	2
4501-AK	RING, HORN CONTACT NO.1	1
4501-AN	SPRING, LEAD	1
4501-AU	RING, HORN CONTACT NO.2	1
4501-AV	SCREW	3

4501-037

G708-001E

FIG. 4502
STEERING POST

 
4502

ATM


92.708

ATM. = 15, 18, 23 (1/2, STD)

ATH. 15, 18, 23 (TILT STEERING) (1/2)

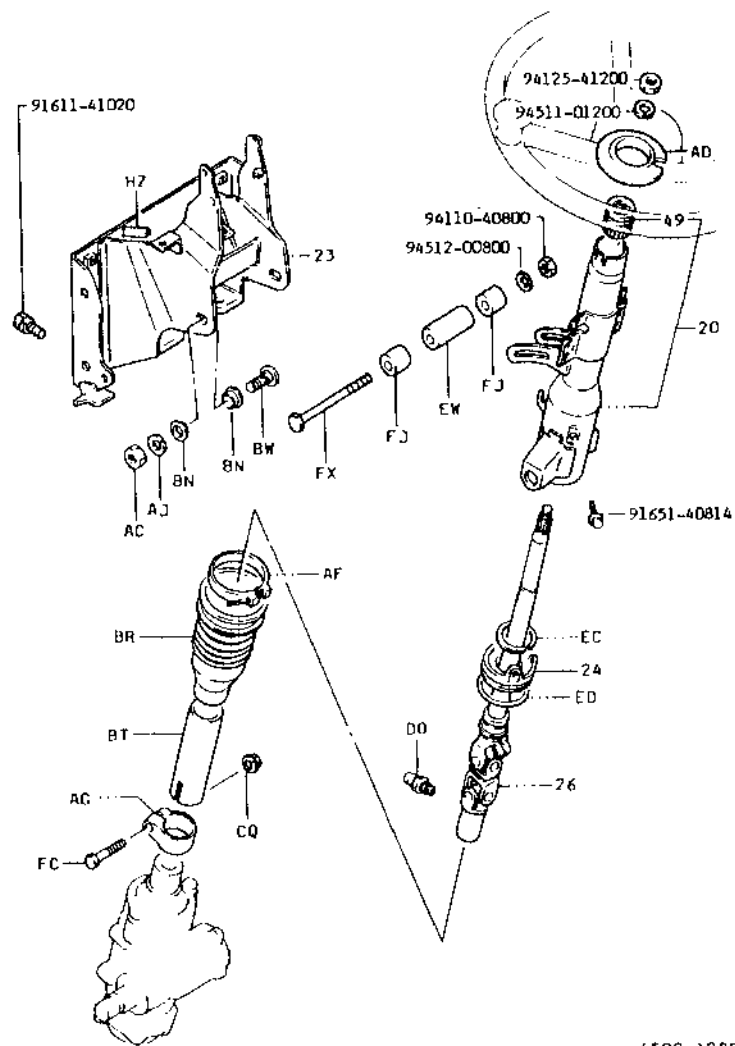

4502-128C

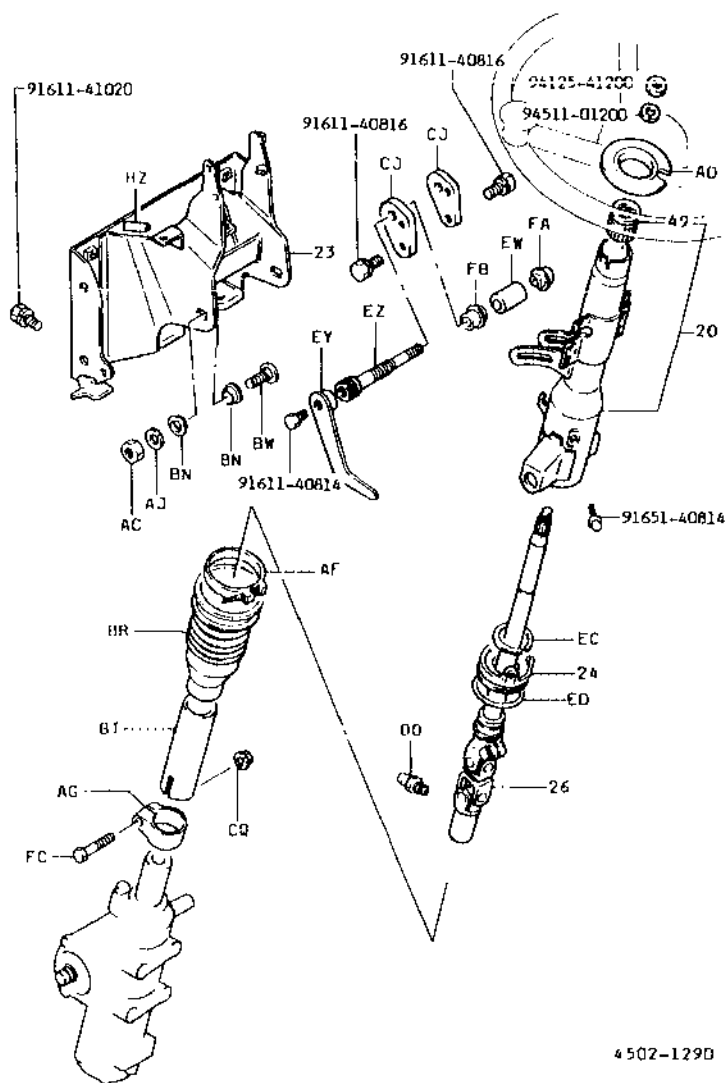 

4502-1290

G708-001

FIG. 4502
STEERING POST


4502

ATM


92/08

ATM..20.25 1 1/2, STD

 ATM..20.25 1 1/2, L/TILT STEERING

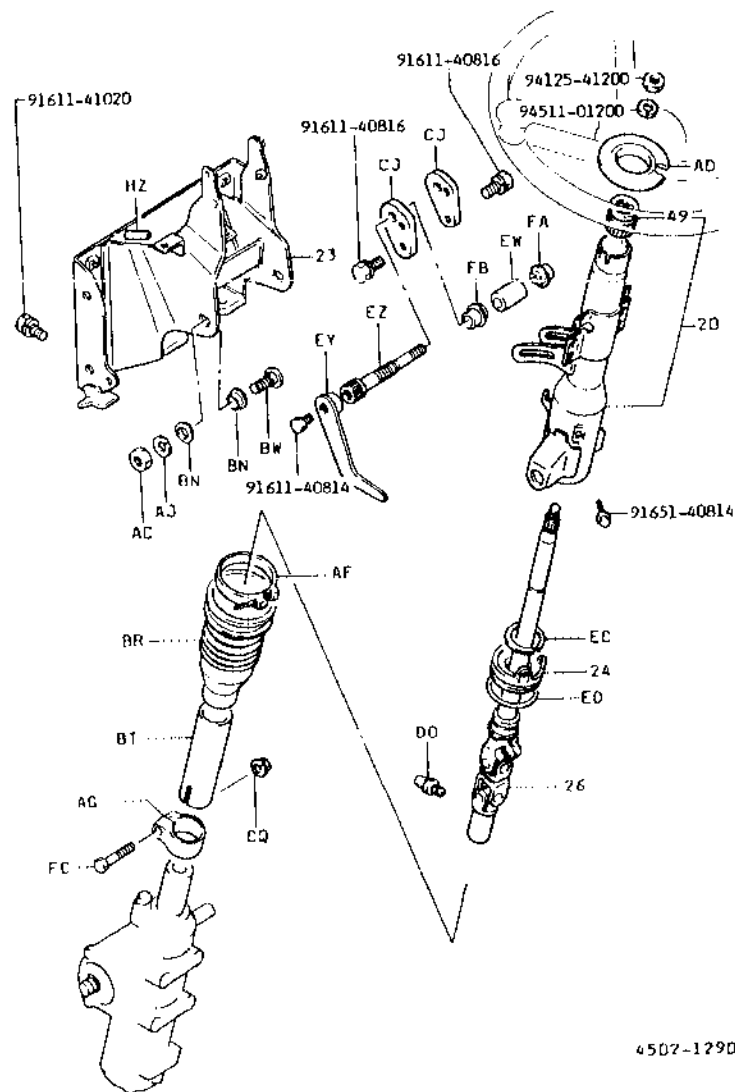

4502-129D

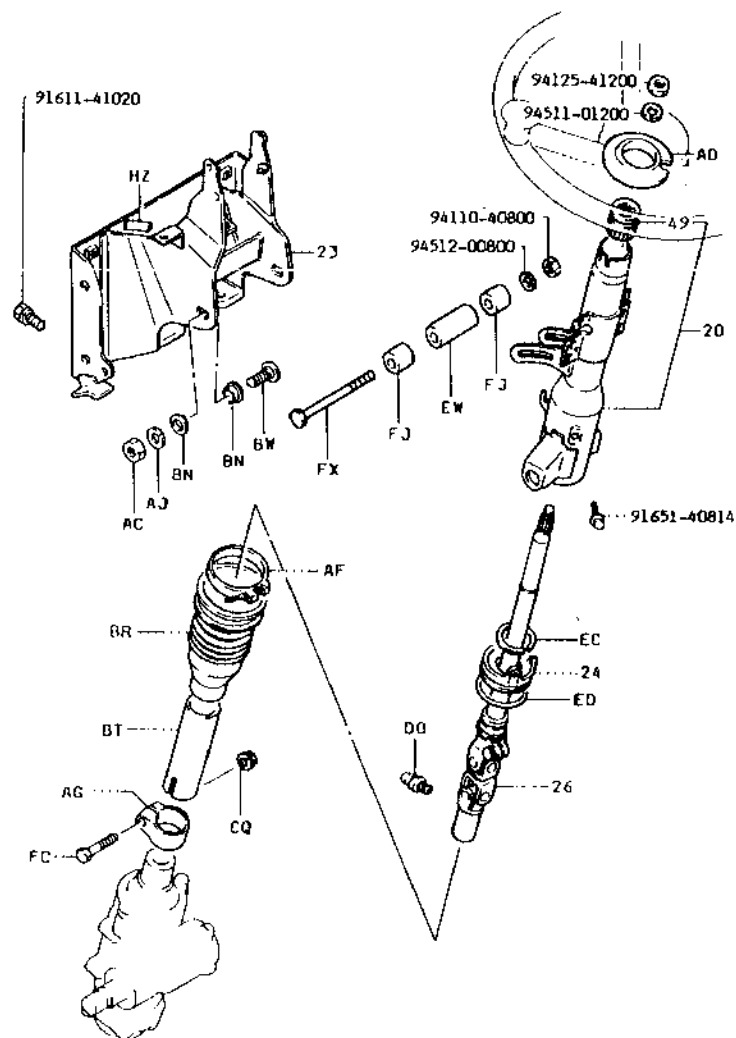 

4502-128C

G708-002

FIG. 4502
STEERING POST

 
 
4502

ATM

92/08

ATM (M/S) [2/2]

ATM (P/S) 12/21

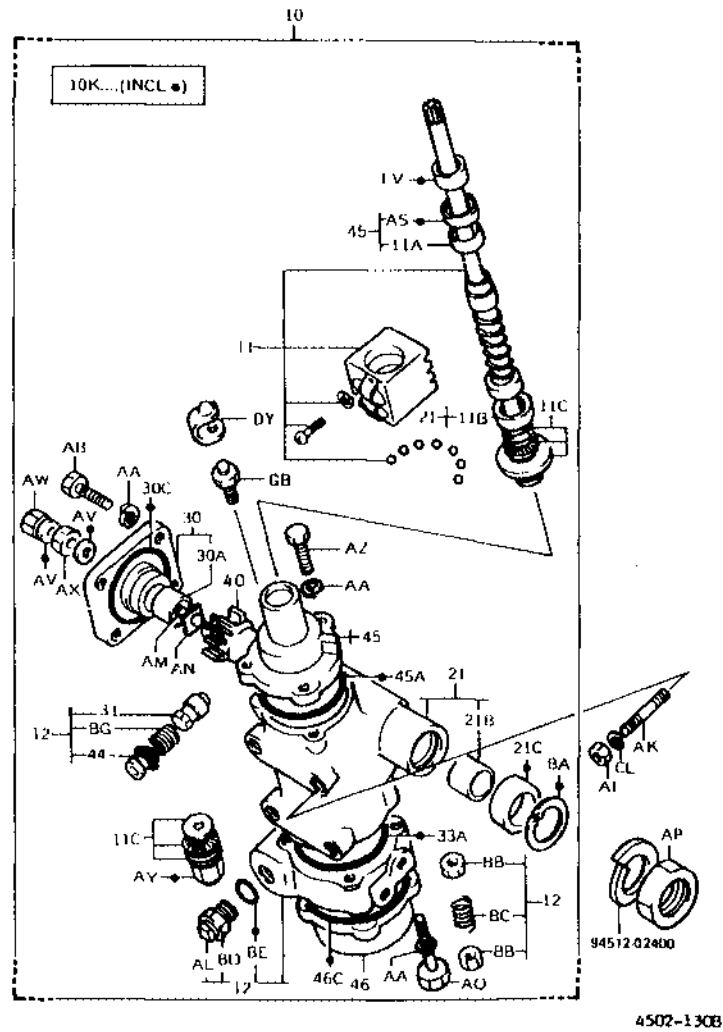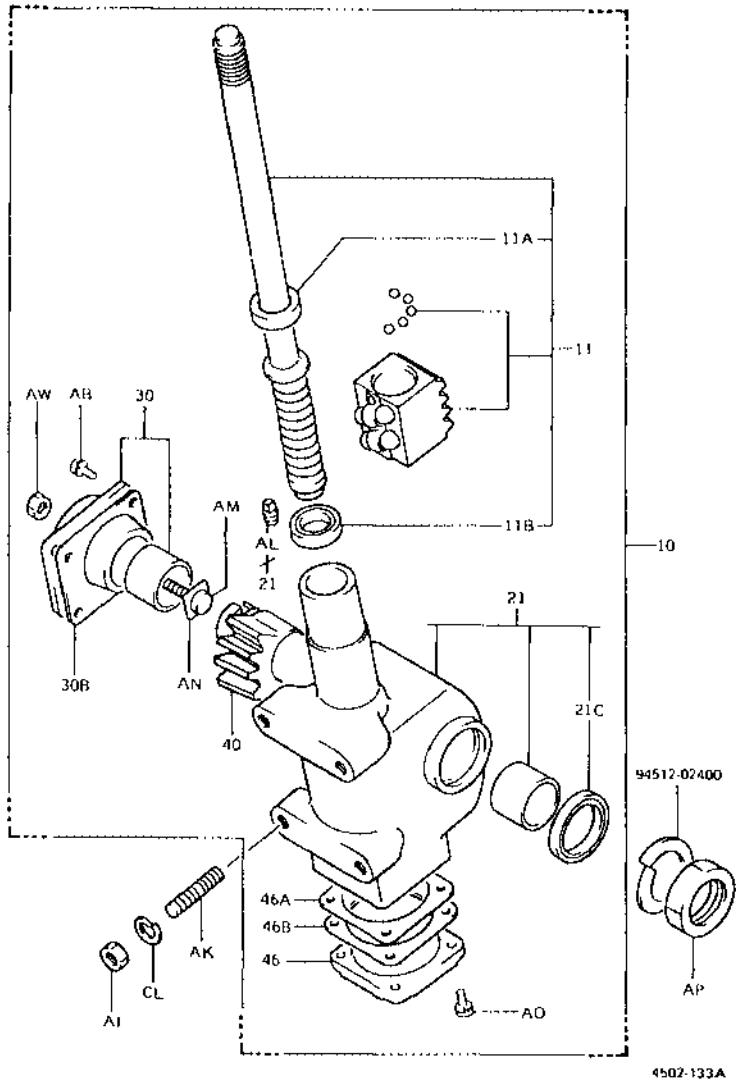

G708-003

FIG. 4502
STEERING POST

4502

ATM

92/08

PART NAME	PART NAME	QTY
CODE		
4502-10	GEAR ASSY, STEERING	1
4502-10K	GEAR O/H KIT, STEERING	1
4502-11	BALL SCREW SET	1
4502-11A	BEARING, NO.1 (FOR BALL SCREW SET)	1
4502-11B	BEARING, NO.2 (FOR BALL SCREW SET)	1
4502-11C	BEARING, THRUST (FOR BALL SCREW SET)	2
4502-12	BODY ASSY, VALVE	1
4502-20	JACKET SUB-ASSY, MAST	1
4502-21	BOX SUB-ASSY, STEERING GEAR	1
4502-21B	BEARING, NO.1 (FOR SECTOR SHAFT)	1
4502-21C	SEAL, OIL (FOR SECTOR SHAFT)	1
4502-23	BRACKET SUB-ASSY, TILT STEERING	1
4502-24	STOPPER SUB-ASSY, STEERING SHAFT	1
4502-26	SHAFT SUB-ASSY, TILT STEERING	1
4502-30	COVER SUB-ASSY, SIDE	1
4502-30A	BUSHING, SECTOR SHAFT, NO.2	1
4502-30B	PACKING, SIDE COVER	1
4502-30C	RING, O (FOR SIDE COVER)	1
4502-31	VALVE SET, RELIEF	1
4502-33A	RING, O (FOR VALVE BODY SET)	1
4502-40	SHAFT, SECTOR	1
4502-44	PISTON, BALANCE	1
4502-45	COVER, TOP	1
4502-45A	RING, O (FOR TOP COVER)	1
4502-46	COVER, END	1
4502-46A	PACKING, END COVER	1
4502-46B	SHIM (FOR END COVER)	1
4502-46C	RING, O (FOR END COVER)	1
4502-49	GROMMET, STEERING COLUMN (INSULATOR)	1
4502-AA	WASHER, SPRING	1
4502-AB	BOLT	4
4502-AC	NUT	2
4502-AD	GROMMET	1
4502-AF	CLAMP	1
4502-AG	CLAMP, STEERING COLUMN, LOWER	1
4502-AI	NUT	4
4502-AJ	WASHER, SPRING	2
4502-AK	BOLT, STUD	4
4502-AL	PLUG, OIL	1
4502-AM	BOLT, ADJUSTING	1
4502-AN	PLATE, ADJUSTING	1
4502-AD	BOLT	4
4502-AP	NUT	1
4502-AS	SEAL, OIL	1
4502-AV	PACKING	2
4502-AW	NUT	1
4502-AX	NUT	1
4502-AY	NUT, LOCK	1
4502-AZ	BOLT	3
4502-BA	RING, SNAP	1
4502-BB	SEAT	8
4502-BC	SPRING	4
4502-BD	STOPPER, BALANCE PISTON	1
4502-BE	RING, O	1
4502-BG	SPRING, BALANCE PISTON	1
4502-BN	BUSHING	4
4502-BR	BOOT, MAST JACKET	1
4502-BT	JACKET	1
4502-BW	BOLT	2
4502-CJ	STOPPER	2
4502-CL	WASHER, SPRING	4
4502-CQ	NUT	1
4502-DU	FITTING, GREASE	1
4502-DY	CAP	1


PART NAME	PART NAME	QTY
CODE		
4502-EC	RING	1
4502-ED	RING	1
4502-EW	COLLAR, TILT LOCK	1
4502-EY	LEVER SUB-ASSY, TILT LOCK	1
4502-EZ	BOLT, TILT LOCK	1
4502-FA	NUT, ADJUSTING, RH	1
4502-FB	NUT, ADJUSTING, LH	1
4502-FC	BOLT	1
4502-FJ	COLLAR, TILT LOCK	2
4502-FY	BOOT	1
4502-FX	BOLT	1
4502-GB	SCREW, BLEEDER	1
4502-HZ	TRIM, EDGE	1

G708-004E

4507

92/08

 ATM (P/S) (1/2)

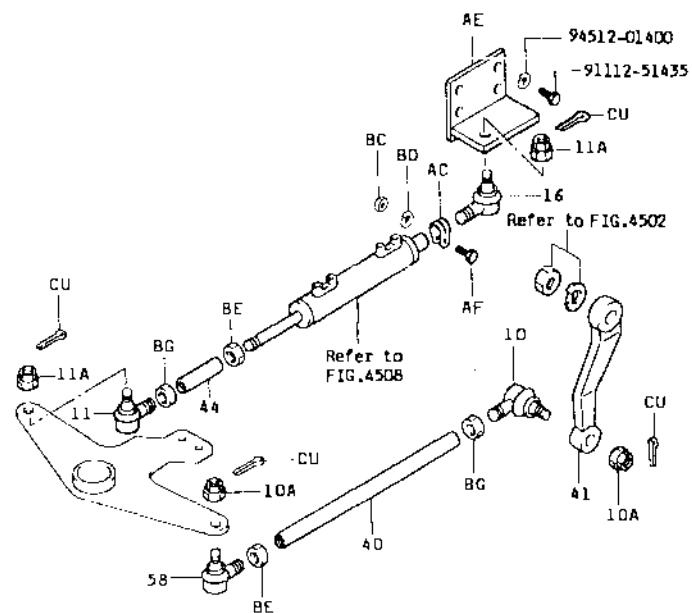

4507-115


450? 114

4507 115 DE46

4507

92/08

PART NAME	PART NAME	QTY
4507-05	RESERVOIR ASSY, POWER STEERING OIL	1
4507-10	END ASSY, DRAG LINK	1
4507-10A	NUT, CASTLE (FOR DRAG LINK END)	2
4507-11	END ASSY, POWER CYLINDER	1
4507-11A	NUT, CASTLE (FOR POWER CYLINDER END)	2
4507-16	END ASSY, POWER CYLINDER	1
4507-25	BRACKET SUB-ASSY, RESERVOIR	1
4507-26	JOINT SUB-ASSY, POWER STEERING PUMP OUTLET	1
4507-30	PIPE SUB-ASSY, NO.1 (STEERING TO CYLINDER)	1
4507-31	PIPE SUB-ASSY, NO.2 (STEERING TO CYLINDER)	1
4507-32	PIPE SUB-ASSY (PUMP TO STEERING)	1
4507-33	PIPE SUB-ASSY (STEERING TO RESERVOIR)	1
4507-40	ROD, DRAG LINK, NO.1	1
4507-41	ARM, PITMAN	1
4507-42	HOSE, POWER CYLINDER, NO.1	1
4507-43	HOSE, POWER CYLINDER, NO.2	1
4507-44	END, POWER CYLINDER	1
4507-45	HOSE, POWER STEERING PUMP SUCTION	1
4507-46	HOSE, HIGH PRESSURE (PUMP TO STEERING)	1
4507-47	HOSE, LOW PRESSURE (STEERING TO RESERVOIR)	1
4507-58	END, DRAG LINK ROD, FRONT	1
4507-AC	CLAMP, END	1
4507-AE	BRACKET SUB-ASSY, POWER CYLINDER	1
4507-AF	BOLT	1
4507-AQ	CLAMP	2
4507-BB	CLAMP	5
4507-BC	NUT	1
4507-BD	WASHER, SPRING	1
4507-BE	NUT	1
4507-BG	NUT	1
4507-BJ	CLAMP	1
4507-B5	PIPE SUB-ASSY, POWER CYLINDER	1
4507-BV	PIPE SUB-ASSY, POWER CYLINDER	1
4507-BZ	CLAMP	1
4507-CO	CLAMP, HOSE	2
4507-CU	PIN, COTTER	2
4507-DK	PIPE SUB-ASSY, POWER STEERING	1
4507-DL	PIPE SUB-ASSY, POWER STEERING	1
4507-EJ	BOLT, UNION	1
4507-EK	GASKET	2
4507-GK	CAP SUB-ASSY, OIL TANK	1

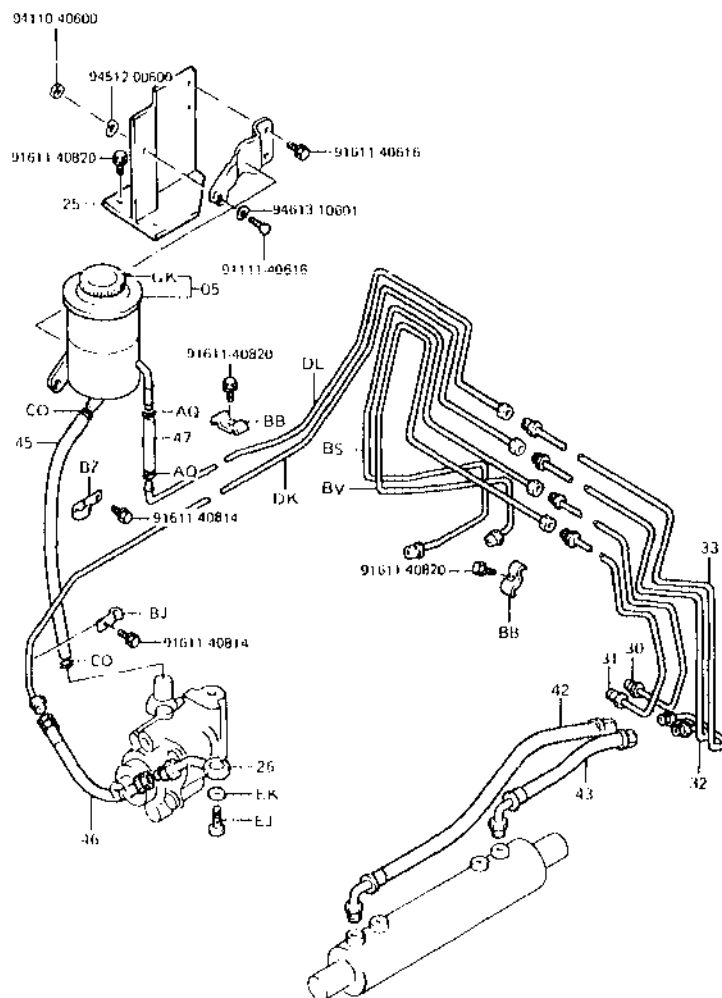 

G708-002E


FIG. 4508
STEERING POWER CYLINDER

4508

ATM

89/11

 ATM (P/S)

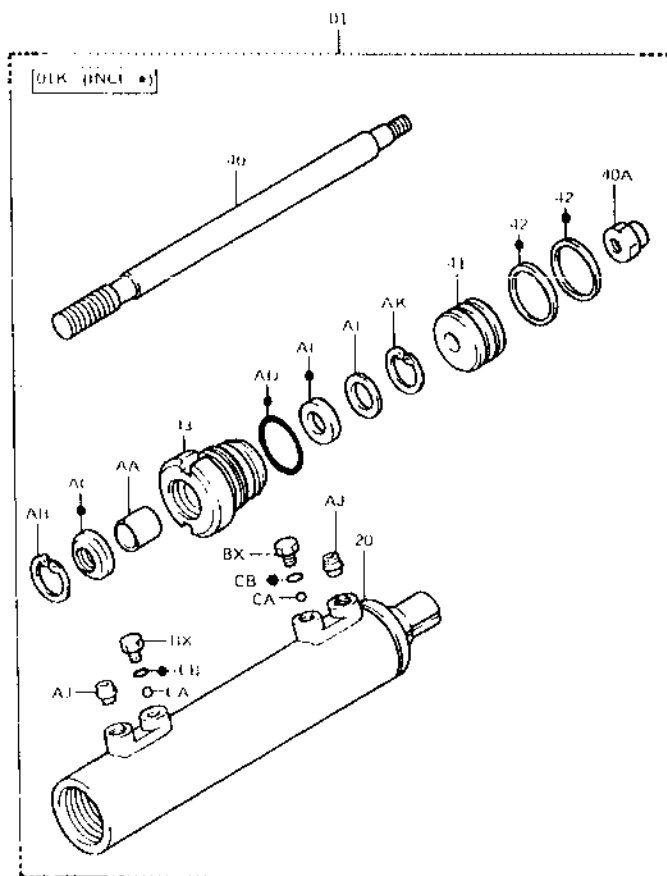

4508 053

PART NAME	PART NAME	QTY
CODE		
4508-01	CYLINDER ASSY, POWER	1
4508-01K	PACKING KIT, POWER CYLINDER	1
4508-20	CYLINDER SUB-ASSY, POWER	1
4508-40	ROD, PISTON	1
4508-40A	NUT, SELF LOCK (FOR PISTON)	1
4508-41	PISTON	1
4508-42	RING, PISTON	2
4508-43	GUIDE, ROD	1
4508-AA	BUSHING	1
4508-AB	RING, SNAP	1
4508-AC	SEAL, DUST	1
4508-AD	RING, O	1
4508-A1	COLLAR, REAR COVER	1
4508-AJ	SEAT	2
4508-AX	RING, SNAP	1
4508-AL	PACKING, U	1
4508-BX	PLUG	2
4508-CX	BALL	2
4508-CB	RING, O	2

G708-001E

FIG. 4511
STEERING VANE PUMP

 
 
 
4511

ATM


92/08

1DZ..ATM (P/S)

4Y..ATM (P/S)

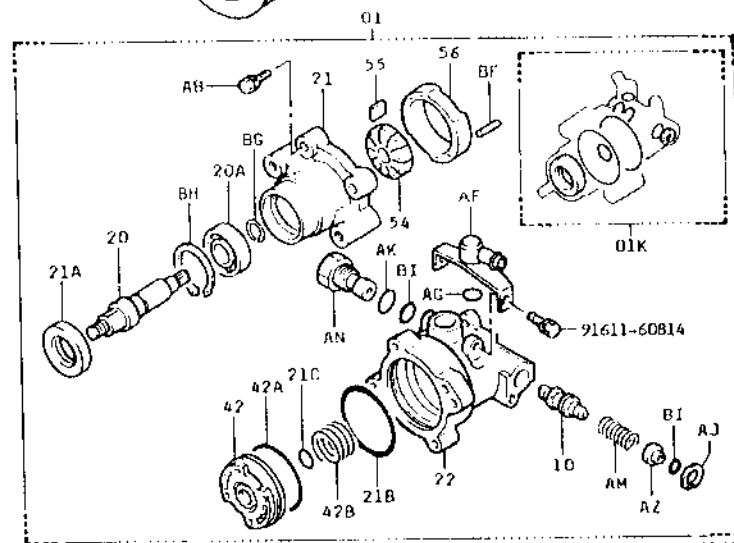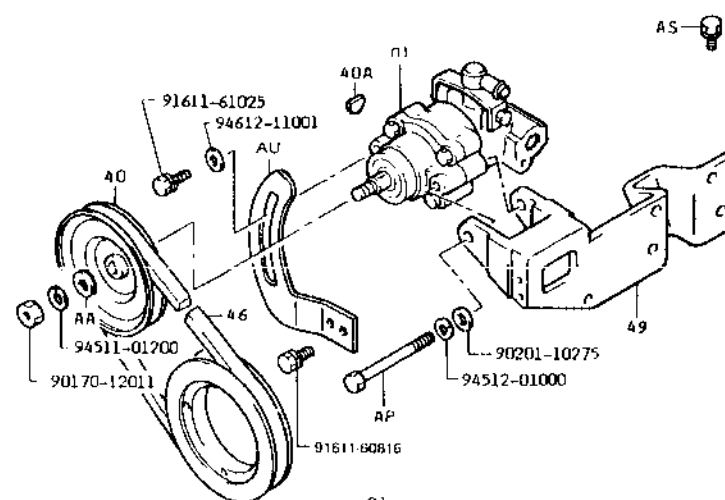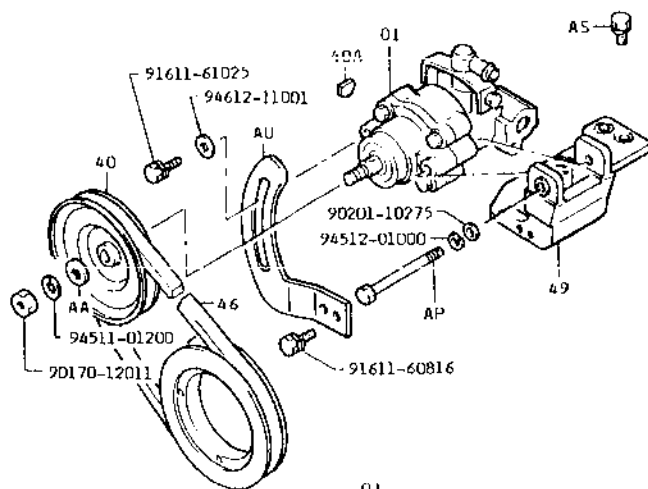

4511-013A

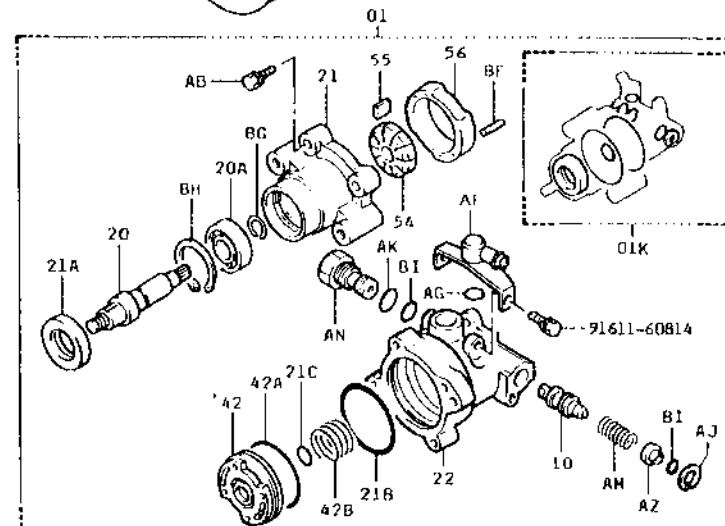 

4511-012B

G708-001

FIG. 4511
STEERING VANE PUMP

4511

ATM

92/08

PART NAME	PART NAME	QTY
CODE		
4511-01	PUMP ASSY, VANE	1
4511-01K	PUMP O/H KIT, VANE	1
4511-10	VALVE ASSY	1
4511-20	SHAFT SUB-ASSY, W/ROTOR	1
4511-20A	BEARING	1
4511-21	HOUSING SUB-ASSY, PUMP, FRONT	1
4511-21A	SEAL, OIL (FOR PUMP HOUSING)	1
4511-21B	RING, O (FOR PUMP HOUSING)	1
4511-21C	RING, O	1
4511-22	HOUSING SUB-ASSY, PUMP, REAR	1
4511-40	PULLEY, VANE PUMP	1
4511-40A	KEY, VANE PUMP PULLEY	1
4511-42	PLATE, SIDE, REAR	1
4511-42A	RING, O	1
4511-42B	SPRING, COMPRESSION	1
4511-46	BELT, V	1
4511-49	BRACKET, PUMP	1
4511-54	ROTOR, VANE PUMP	1
4511-55	PLATE, VANE PUMP	10
4511-56	RING, CAM	1
4511-AA	WASHER, PLATE	1
4511-AB	BOLT, SET	4
4511-AF	UNION	1
4511-AG	RING, O	1
4511-AJ	RING, SNAP	1
4511-AK	RING, O	1
4511-AM	SPRING, COMPRESSION	1
4511-AN	UNION	1
4511-AP	BOLT, HEXAGON	1
4511-AS	BOLT	3- 5
4511-AU	STRUT, ADJUSTING	1
4511-AZ	SEAT, FLOW CONTROL SPRING	1
4511-BF	PIN, STRAIGHT	2
4511-BG	RING, SHAFT SNAP	1
4511-BH	RING, HOLE SNAP	1
4511-BI	RING, O	2

G708-002E

UWA


FIG. 4601
PARKING BRAKE

4601

ATM

90/07

 ATH

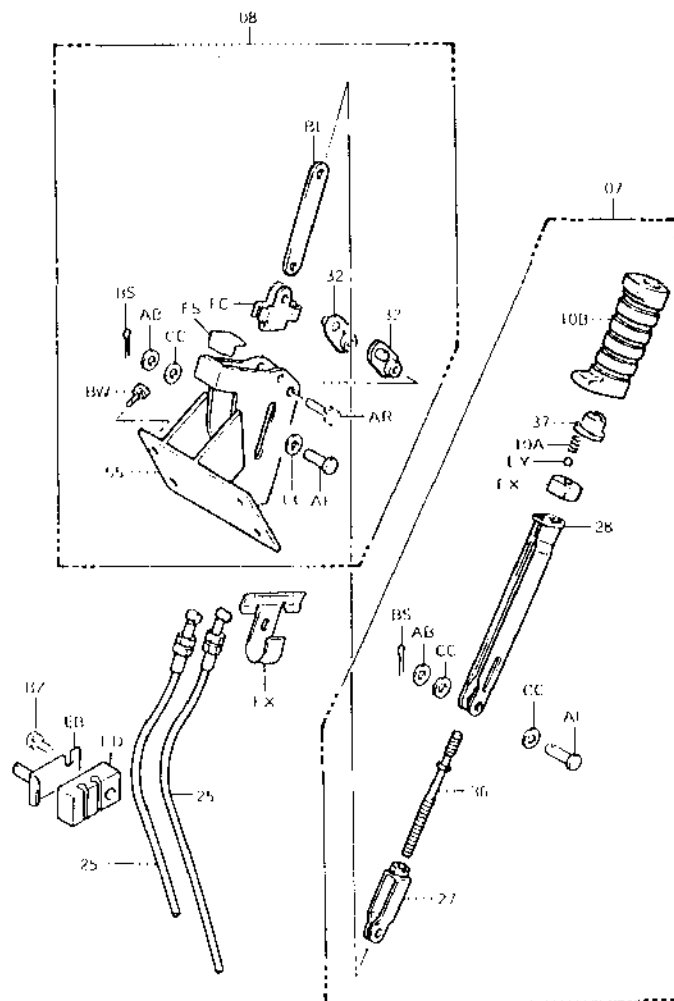

PART NAME	PART NAME	QTY
CODE		
4601-07	LEVER SET, PARKING BRAKE	1
4601-08	BRACKET SET, PARKING BRAKE	1
4601-10A	SPRING, COMPRESSION	1
4601-10B	KNOB SUB-ASSY, PARKING BRAKE	1
4601-25	CABLE SUB-ASSY, PARKING BRAKE, NO.2	2
4601-27	CLAVIS SUB-ASSY	1
4601-28	LEVER SUB-ASSY, PARKING BRAKE	1
4601-32	LINK SUB-ASSY, PARKING BRAKE, NO.1	2
4601-36	ROD SUB-ASSY, HAND BRAKE	1
4601-37	KNOB SUB-ASSY, PARKING BRAKE RELEASE ROD	1
4601-55	BRACKET SUB-ASSY, HANDBRAKE	1
4601-AB	WASHER, PLATE	2
4601-AF	PIN, W/HOLE	1
4601-AL	PIN, W/HOLE	1
4601-AR	BOLT	1
4601-BL	PLATE, PARKING BRAKE	1
4601-B5	PIN, COYTER	2
4601-BW	BOLT	4
4601-BZ	BOLT	2
4601-CC	WASHER	4
4601-EB	CLAMP, BRAKE CABLE	2
4601-EX	KNOB	1
4601-EY	BALL	1
4601-FC	HOOK	1
4601-FD	RUBBER, PARKING BRAKE	2
4601-F5	STOPPER	1
4601-FX	STOPPER	1

G708-001E

4701


90/07

PART NAME

1
1 QTY

CODE

4701-20	PEDAL SUB-ASSY, BRAKE	1
4701-20A	BUSHING (FOR BRAKE PEDAL)	2
4701-23	LINK SUB-ASSY, BRAKE, NO.2	1
4701-23A	BUSHING (FOR BRAKE LINK)	2
4701-43	SPRING, TORSION (FOR PEDAL RETURN)	1
4701-53	ROD, BRAKE LINK CONNECTING	1
4701-AA	ISPCACER	1
4701-AB	BOLT	1
4701-AC	BRACKET, LINK	1
4701-AD	PI PIN, W/HOLE	2
4701-AE	ISPCACER	1
4701-AF	INUT	1
4701-AK	PI PIN, W/HOLE	1
4701-AZ	BUSHING	3
4701-BR	ROD	1
4701-BR	CLEVIS SUB-ASSY, NO.1	1
4701-BL	CLEVIS SUB-ASSY, NO.2	1
4701-EL	BOLT	1

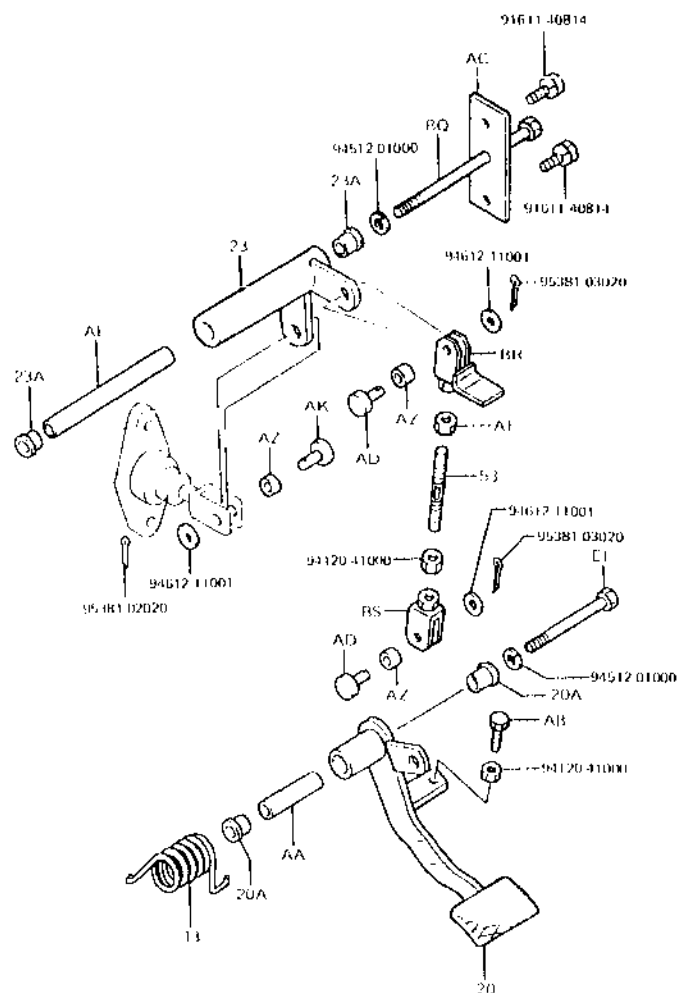 

GPOB-001E

FIG. 4702
BRAKE MASTER CYLINDER

 
 
 
4702

ATM


90/07

ATM (2-BRAKE)

ATM (4-BRAKE)

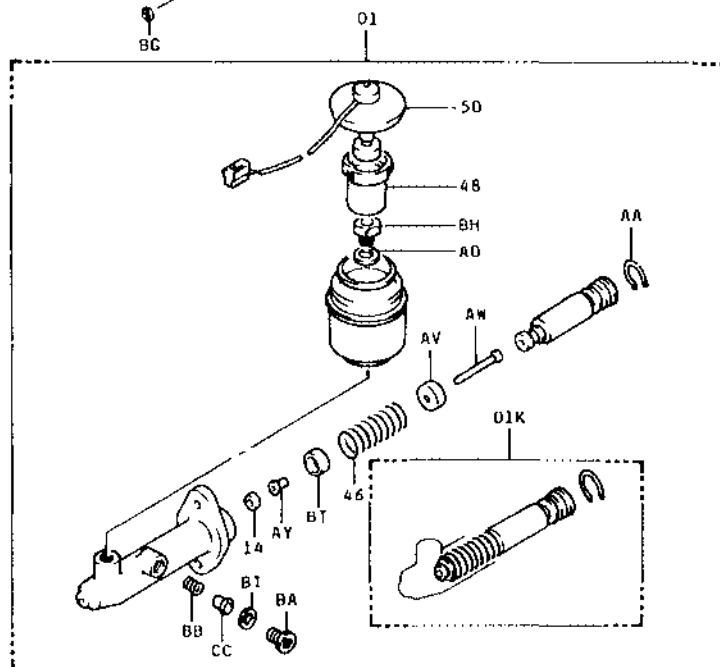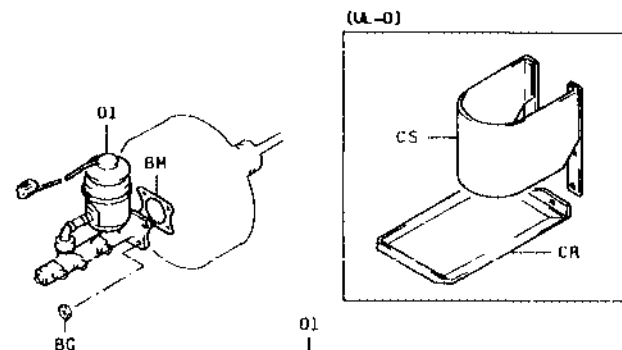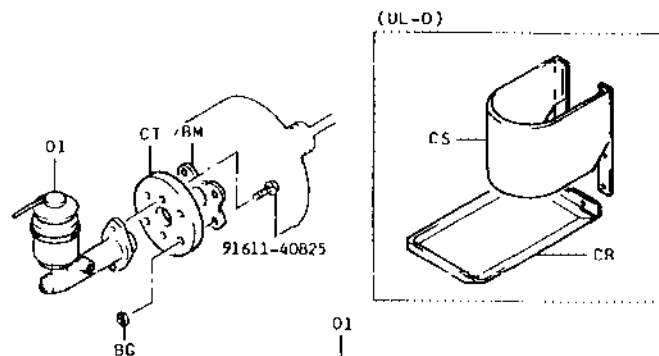

4702-060

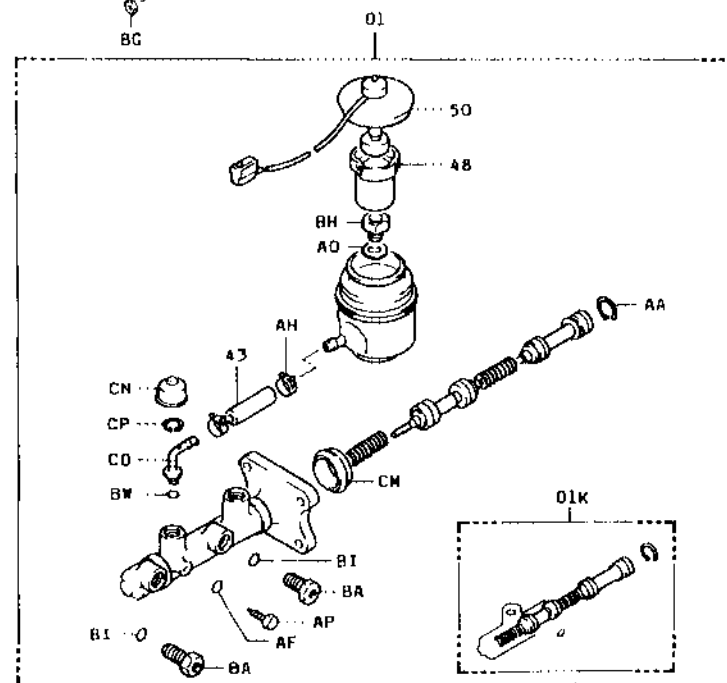 

4702-058A

G708-001

FIG. 4702
BRAKE MASTER CYLINDER

4702

ATM

90/07


PART NAME	PART NAME	QTY
CODE		
4702-01	CYLINDER ASSY, MASTER	1
4702-01K	CYLINDER O/H KIT, MASTER	1
4702-14	VALVE ASSY	1
4702-43	HOSE, RESERVOIR	1
4702-46	SPRING, COMPRESSION (FOR PISTON RETURN)	1
4702-48	STRAINER	1
4702-50	SWITCH ASSY, LEVEL WARNING W/CAP	1
4702-AA	RING, HOLE SNAP	1
4702-AF	GASKET	1
4702-AH	CLIP	2
4702-AD	WASHER	1
4702-AP	BOLT	1
4702-AV	RETAINER	1
4702-AW	ROD, CONNECTING	1
4702-AY	SPRING, CONICAL	1
4702-BA	PLUG	1
4702-BB	SPRING, COMPRESSION	1
4702-BG	NUT	4
4702-BH	BOLT, RESERVOIR SET	1
4702-BI	GASKET	1
4702-BM	GASKET	1
4702-BT	CASE, INLET VALVE	1
4702-BW	RING, O	1
4702-CC	VALVE, OUTLET CHECK	1
4702-CM	BODY, MASTER CYLINDER	1
4702-CN	BODY, MASTER CYLINDER	1
4702-CD	ELBOW	1
4702-CP	RING, HOLE SNAP	1
4702-CR	COVER SUB-ASSY, MASTER CYLINDER	1
4702-CS	COVER SUB-ASSY, MASTER CYLINDER	1
4702-CT	SPACER	1

G708-002E

4707

89/11

PART NAME	PART NAME	QTY
CODE		
4707-01	BOOSTER ASSY, BRAKE	1
4707-01R	BOOSTER O/R KIT, BRAKE	1
4707-32	BRACKET SUB-ASSY, BRAKE BOOSTER	1
4707-41	VALVE, BOOSTER VACUUM	1
4707-60	PISTON, BOOSTER	1
4707-A1	SEAL	1
4707-AK	RING	1
4707-BY	CLEVIS	1
4707-CE	GROMMET	1
4707-ER	KEY	1
4707-ES	ROD SUB-ASSY, BOOSTER PISTON	1

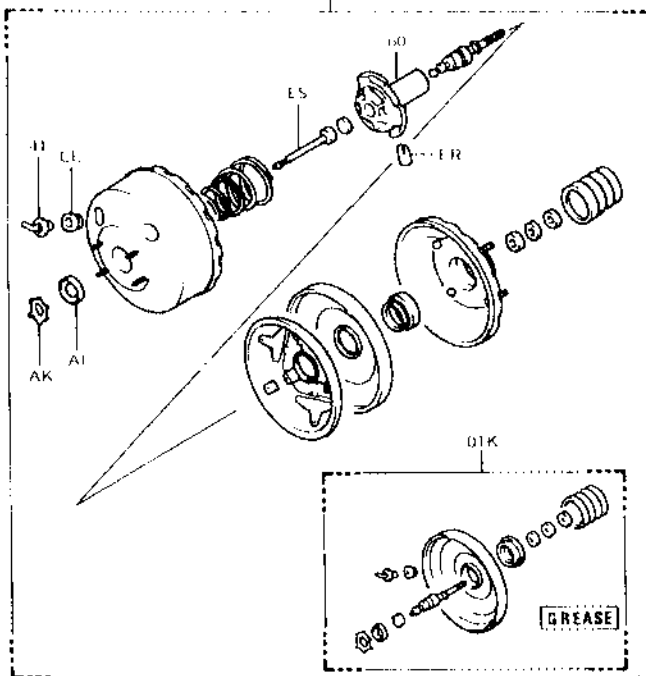 

G708-001E


FIG. 4714
BRAKE PIPE

4714

ATM

92/08

 1DZ..ATM (2-BRAKE)

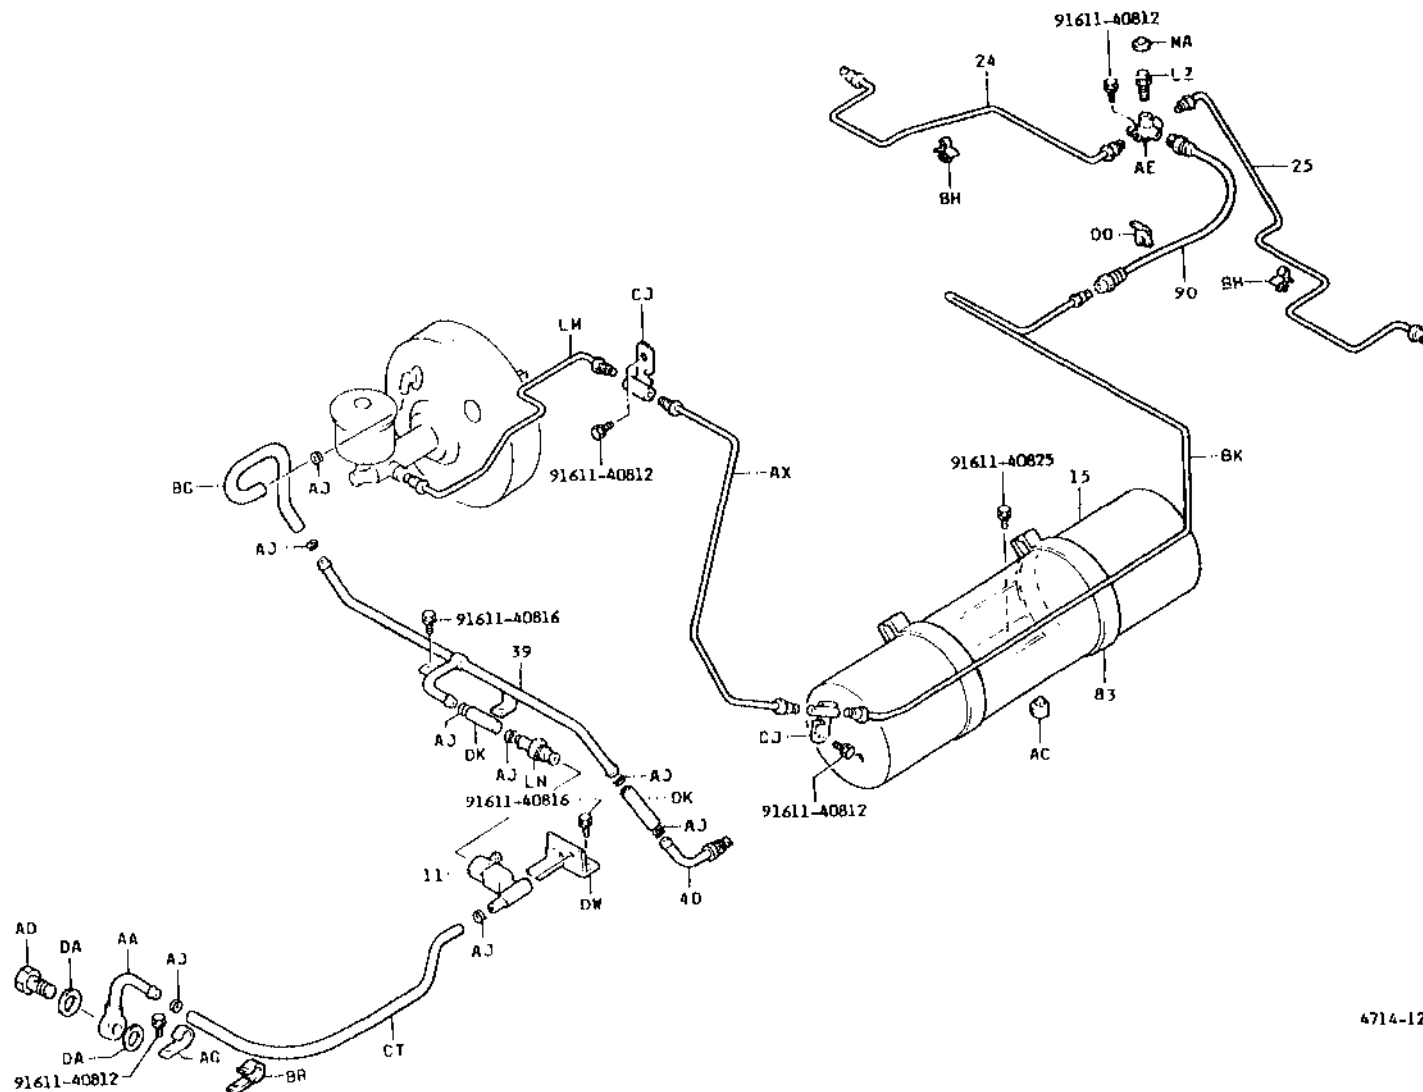

4714-124B

G708-001

4714

92/08

[illegible]

G708-002


FIG. 4714
BRAKE PIPE

4714

ATM

92/08

 4Y..ATM (2-BRAKE)

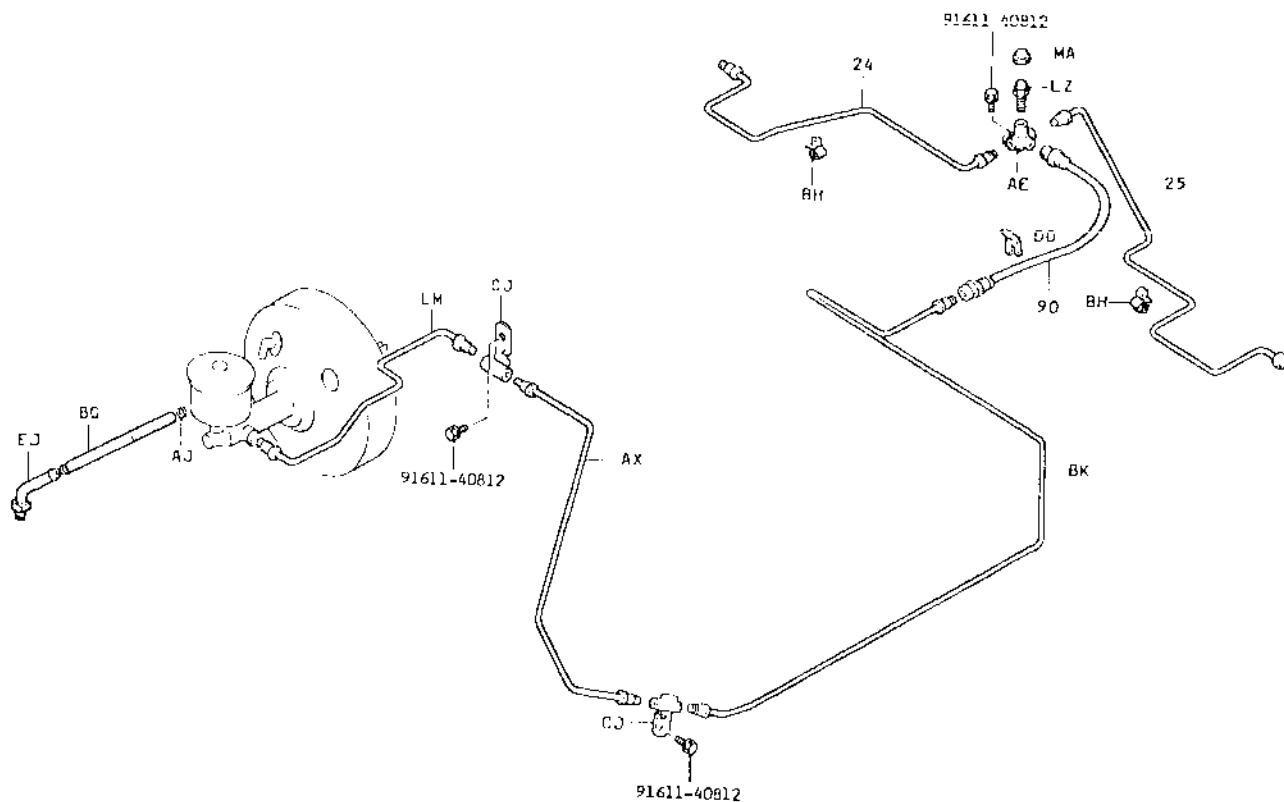

4714-125A

G708-003


FIG. 4714
BRAKE PIPE

4714

ATM

92/08

 4Y..ATM (4-BRAKE)

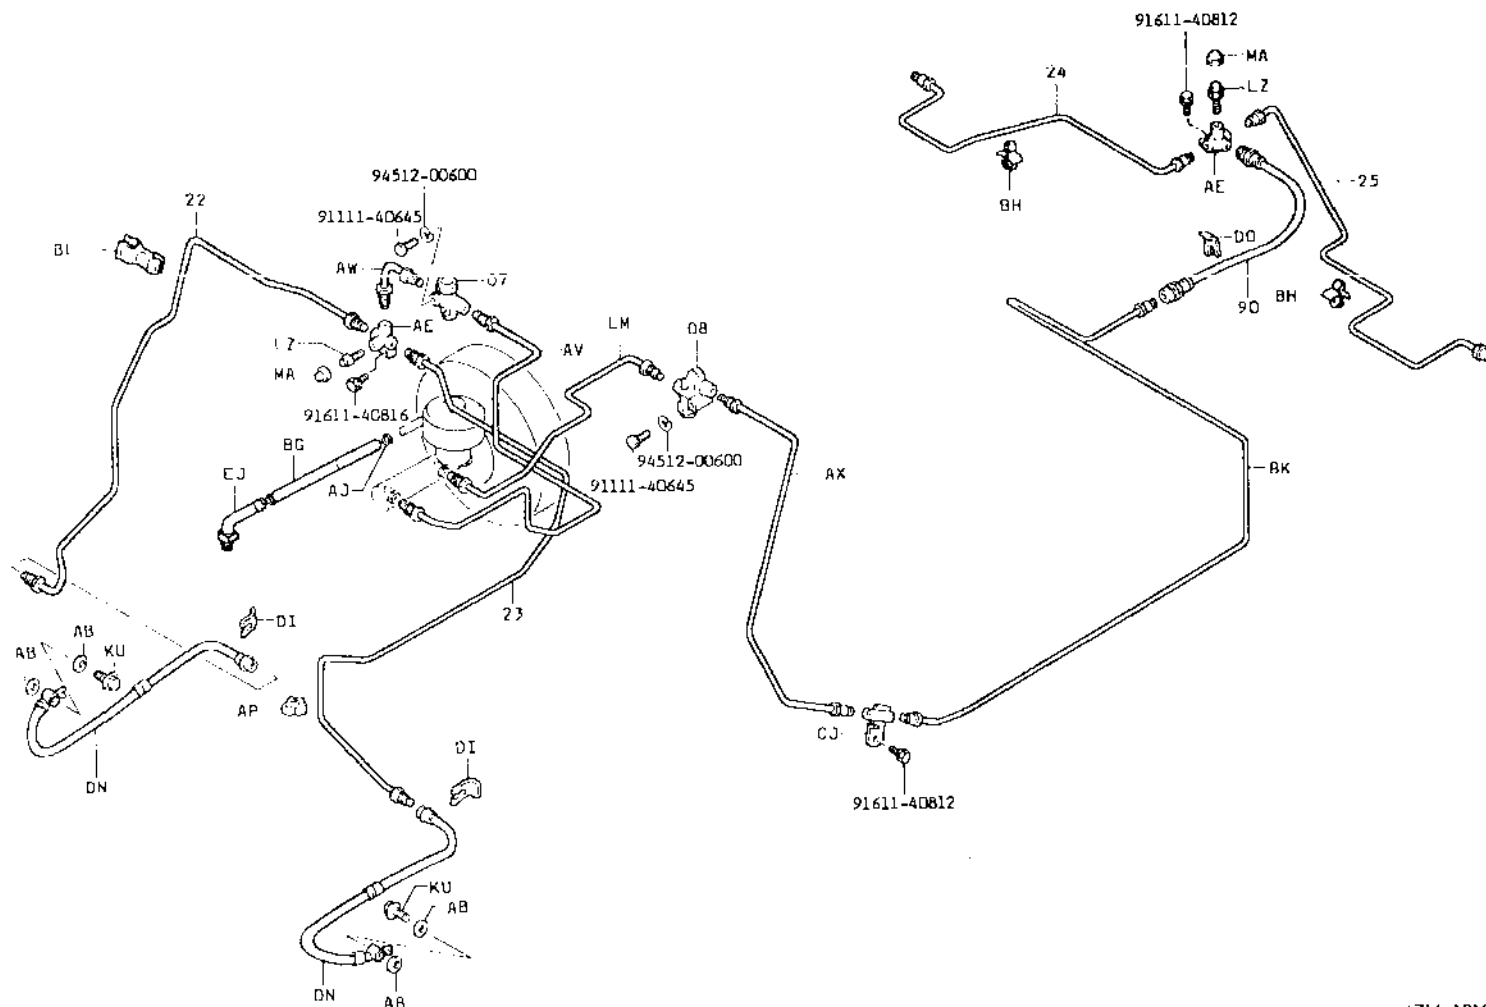

4714-121C

G708-004

FIG. 4714
BRAKE PIPE

4714

ATM

92/08


PART NAME	PART NAME	QTY
CODE		
4714-07	VALVE ASSY, PROPORTIONING, NO.1	1
4714-08	VALVE ASSY, PROPORTIONING, NO.2	1
4714-11	VALVE ASSY, VACUUM CHECK	1
4714-15	RESERVOIR SUB-ASSY, VACUUM	1
4714-22	PIPE SUB-ASSY, BRAKE, RH NO.1	1
4714-23	PIPE SUB-ASSY, BRAKE, LH NO.1	1
4714-24	PIPE SUB-ASSY, BRAKE, RH NO.2	1
4714-25	PIPE SUB-ASSY, BRAKE, LH NO.2	1
4714-39	PIPE SUB-ASSY, VACUUM, NO.1	1
4714-40	PIPE SUB-ASSY, VACUUM, NO.2	1
4714-83	BRACKET SUB-ASSY, RESERVOIR	1
4714-90	HOSE SUB-ASSY, BRAKE FLEXIBLE	1
4714-AA	UNION	1
4714-AB	GASKET	4
4714-AC	PLUG	1
4714-AD	BOLT, UNION	1
4714-AE	3-WAY SUB-ASSY	2
4714-AG	CLAMP	1
4714-AJ	CLAMP	2
4714-AP	CLAMP	6
4714-AV	PIPE SUB-ASSY, FRONT BRAKE	1
4714-AW	PIPE SUB-ASSY, FRONT BRAKE	1
4714-AX	PIPE SUB-ASSY, REAR BRAKE	1
4714-BG	HOSE	1
4714-BH	CLAMP	2
4714-BK	PIPE SUB-ASSY, REAR BRAKE	1
4714-BL	CLAMP	1
4714-BR	CLAMP	1
4714-CJ	2-WAY	1
4714-CY	HOSE	1
4714-DA	WASHER, PLATE	2
4714-DI	CLIP	2
4714-DK	HOSE	2
4714-DN	HOSE, FLEXIBLE	2
4714-DO	CLIP	1
4714-DW	BRACKET, CHECK VALVE	1
4714-EJ	ELBOW	1
4714-KU	BOLT, UNION	2
4714-LM	PIPE SUB-ASSY	1
4714-LN	PIPE SUB-ASSY	1
4714-LZ	SCREW, BLEEDER	2
4714-MA	CAP, BLEEDER SCREW	2

G708-005E

4715

89/11

 ATM..15,18 (REAR)

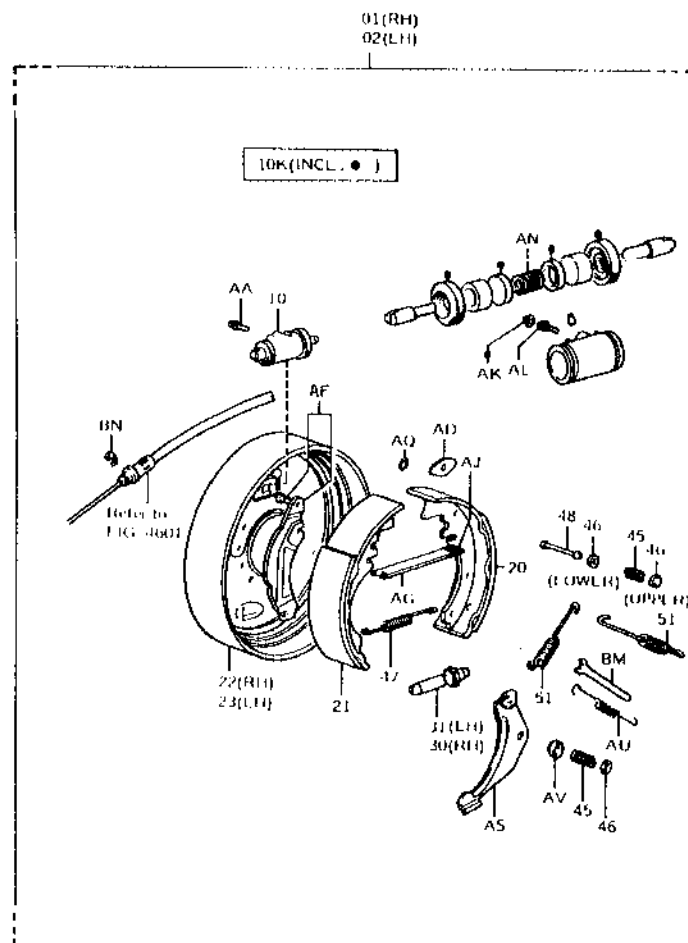

G708-001

FIG. 4715
DRUM BRAKE

4715

ATM

89/11

PART NAME CODE	PART NAME	QTY
4715-01	BRAKE ASSY, RH	1
4715-02	BRAKE ASSY, LH	1
4715-10	CYLINDER ASSY, WHEEL	1- 2
4715-10X	CYLINDER O/H KIT, WHEEL	2
4715-20	SHOE SUB-ASSY (FOR FRONT OR UPPER)	1- 2
4715-21	SHOE SUB-ASSY (FOR REAR OR LOWER)	2
4715-22	PLATE SUB-ASSY, BACKING, RH	1
4715-23	PLATE SUB-ASSY, BACKING, LH	1
4715-30	SCREW SUB-ASSY, ADJUSTING, RH	1
4715-31	SCREW SUB-ASSY, ADJUSTING, LH	1
4715-32	PISTON SUB-ASSY, WHEEL CYLINDER	4
4715-33	CABLE & FITTING SUB-ASSY	2
4715-42	LEVER, AUTOMATIC ADJUSTMENT, RH	1
4715-43	LEVER, AUTOMATIC ADJUSTMENT, LH	1
4715-45	SPRING, SHOE HOLD DOWN	8
4715-46	CUP, SHOE HOLD DOWN	6-16
4715-47	SPRING, ADJUSTER	2
4715-48	PIN, SHOE HOLD DOWN	8
4715-49	ROD, PUSH	4
4715-51	SPRING, ANCHOR TO SHOE	2- 4
4715-52	COVER, ADJUSTING HOLE	2
4715-53	RING, PARKING LEVER RETAINING	2
4715-AA	BOLT & WASHER SET	4
4715-AC	WASHER	2
4715-AD	PLATE, SHOE GUIDE	2
4715-AE	WASHER, SPRING	2
4715-AF	LEVER SUB-ASSY, PARKING	1
4715-AG	STRUT, LEVER	1- 2
4715-AH	RING, SNAP	2
4715-AJ	SPRING, STRUT TO SHOE	2
4715-AK	CAP, BLEEDER SCREW	2
4715-AL	SCREW, BLEEDER	2
4715-AN	SPRING, WHEEL CYLINDER	2
4715-AQ	RING, U	2
4715-AS	LEVER, PAWL	1
4715-AU	SPRING, ACTUATOR	2
4715-AV	SLEEVE	2
4715-AX	SPRING, LEVER RETURN, RH	1
4715-AY	SPRING, LEVER RETURN, LH	1
4715-BD	SHEAVE, PARKING BRAKE CABLE	2
4715-BM	STOPPER, POLE LEVER	2
4715-BN	RING, E	2
4715-CD	PIN	2
4715-CT	NUT	7

G708-002E


FIG. 4716
DISC BRAKE

4716

ATM

90/07

 ATM (PRINT)

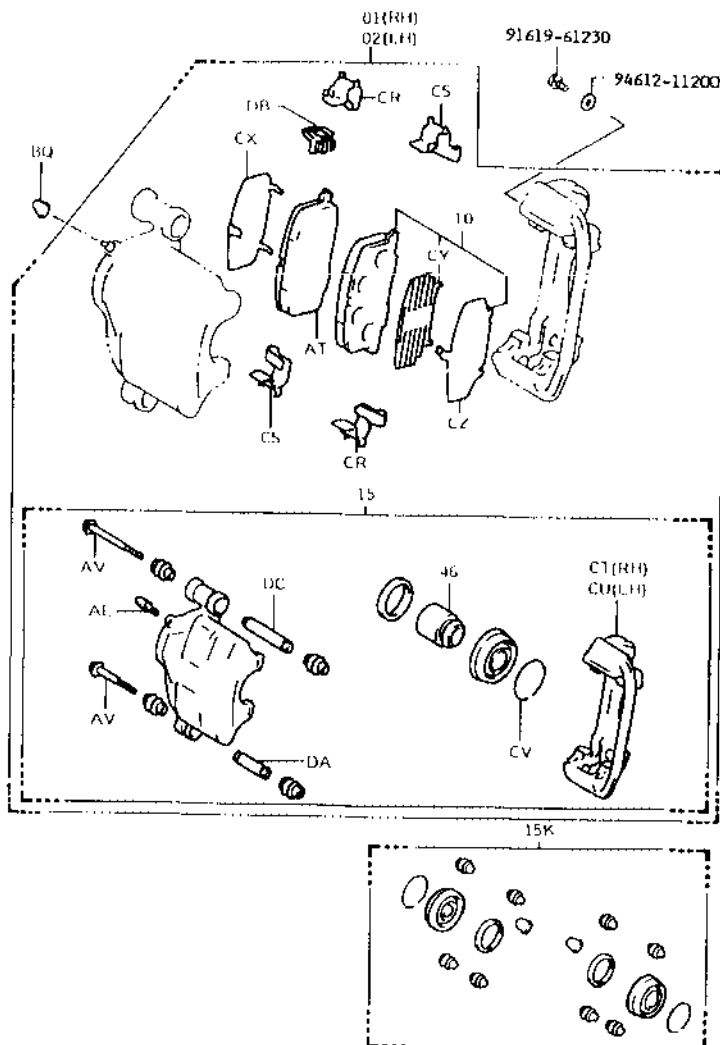

PART NAME	PART NAME	QTY
CODE		
4716-01	IBRAKE ASSY, DISC, RH	1
4716-02	IBRAKE ASSY, DISC, LH	1
4716-10	PAD ASSY, NO.1	2
4716-15	CYLINDER ASSY, DISC BRAKE	1
4716-15K	CYLINDER KIT, DISC BRAKE	1
4716-46	PISTON	2
4716-AE	PLUG	2
4716-AT	PAD, DISC	2
4716-AV	BOLT	2
4716-BQ	CAP, BLEEDER	2
4716-CR	PLATE, PAD SUPPORT, NO.1	4
4716-CS	PLATE, PAD SUPPORT, NO.2	4
4716-CT	MOUNTING, DISC BRAKE CYLINDER, RH	1
4716-CU	MOUNTING, DISC BRAKE CYLINDER, LH	1
4716-CV	RING, SET	2
4716-CX	SHIM, ANTI SQUEAL, NO.1	2
4716-CY	SHIM, ANTI SQUEAL, NO.3	2
4716-CZ	SHIM, ANTI SQUEAL, NO.2	2
4716-DA	BUSHING, CYLINDER SLIDE, NO.1	2
4716-DB	PLATE, PAD WEAR INDICATOR, NO.1	2
4716-DC	BUSHING, CYLINDER SLIDE, NO.2	2

4716 01/06

G/08-001E

4716 01/06

01/07

FIG. 4801
SUSPENSION SPRING

 
 
4801

ATM

92/08

ATM (FRONT)

ATM (REAR)

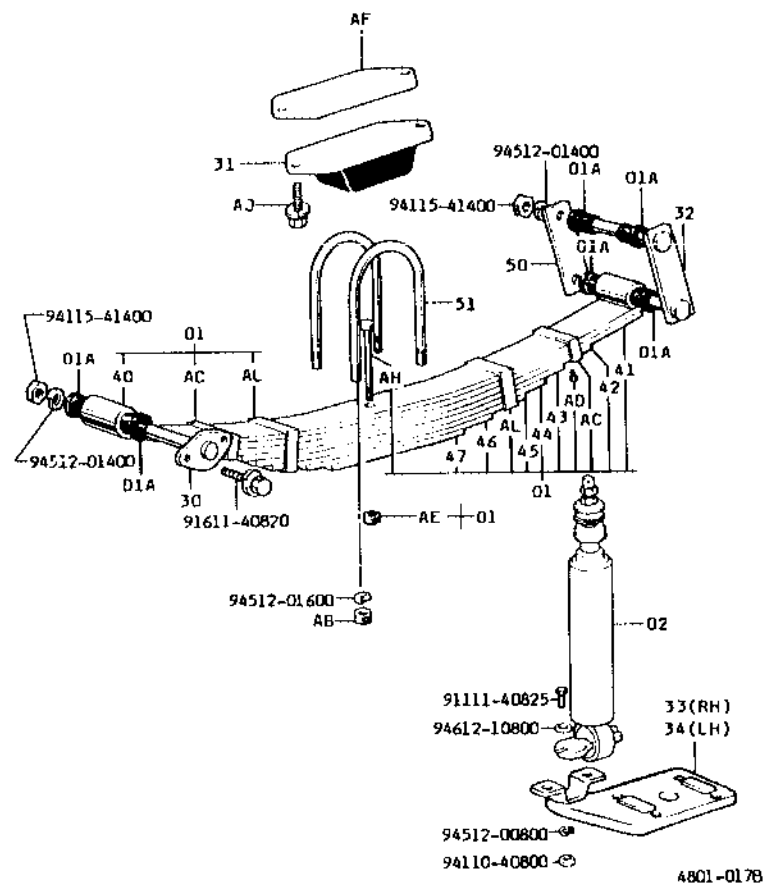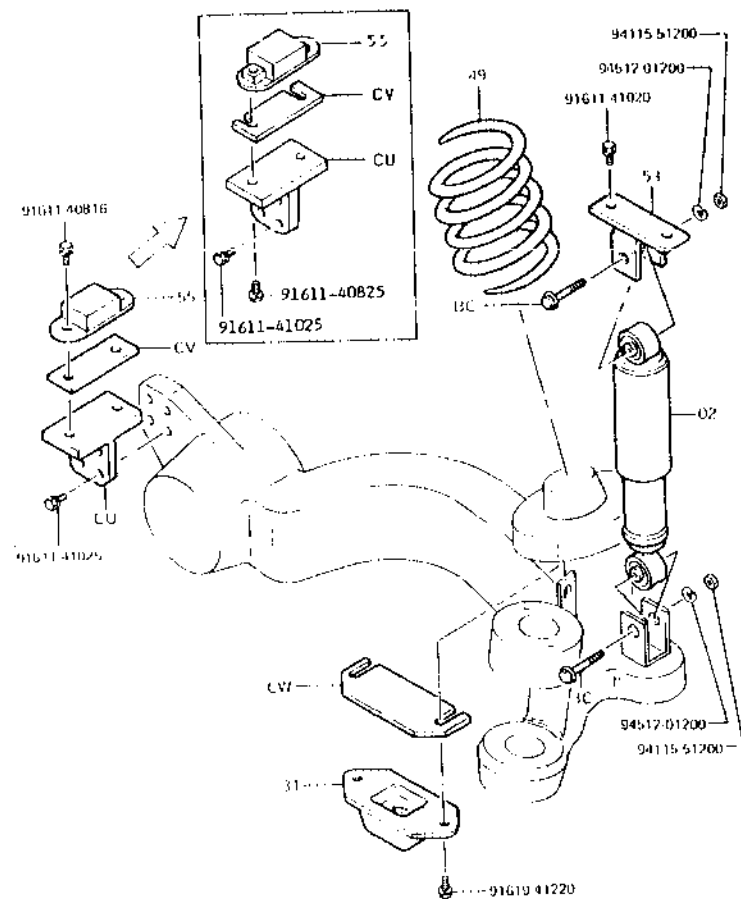

4801-0168

4801-0178

G708-001

9001 01 Jan

4091 0170 000-5

FIG. 4801
SUSPENSION SPRING

4801


ATM

92/08

PART NAME	PART NAME	QTY
CODE		
4801-01	SPRING ASSY, REAR	2
4801-01A	BUSHING, REAR SPRING	12
4801-02	ABSORBER ASSY, SHOCK	2
4801-30	PIN SUB-ASSY, SPRING BRACKET	2
4801-31	RUBBER SUB-ASSY, SPRING BUMPER	2
4801-32	SHACKLE SUB-ASSY, SPRING	2
4801-33	PLATE SUB-ASSY, REAR SPRING LOWER, RH	1
4801-34	PLATE SUB-ASSY, REAR SPRING LOWER, LH	1
4801-40	SPRING, LEAF, NO.1	2
4801-41	SPRING, LEAF, NO.2	2
4801-42	SPRING, LEAF, NO.3	2
4801-43	SPRING, LEAF, NO.4	2
4801-44	SPRING, LEAF, NO.5	2
4801-45	SPRING, LEAF, NO.6	2
4801-46	SPRING, LEAF, NO.7	2
4801-47	SPRING, LEAF, NO.8	2
4801-49	SPRING, COIL	2
4801-50	PLATE, SPRING SHACKLE INNER	2
4801-51	BOLT, REAR SPRING U	4
4801-53	BRACKET, SHOCK ABSORBER SET	2
4801-55	CUSHION SUB-ASSY, TRAILING ARM	2
4801-AB	NUT	8
4801-AC	CLIP	4
4801-AD	RIVET	8
4801-AE	NUT	2
4801-AF	SPACER	2
4801-AH	BOLT	2
4801-AJ	BOLT	4
4801-AL	CLIP	4
4801-BC	BOLT	4
4801-CU	BRACKET, TRAILING ARM STOPPER	2
4801-CV	SHIM, TRAILING ARM STOPPER	99
4801-CW	SHIM, TRAILING ARM STOPPER	99

G708-002E

 ATM

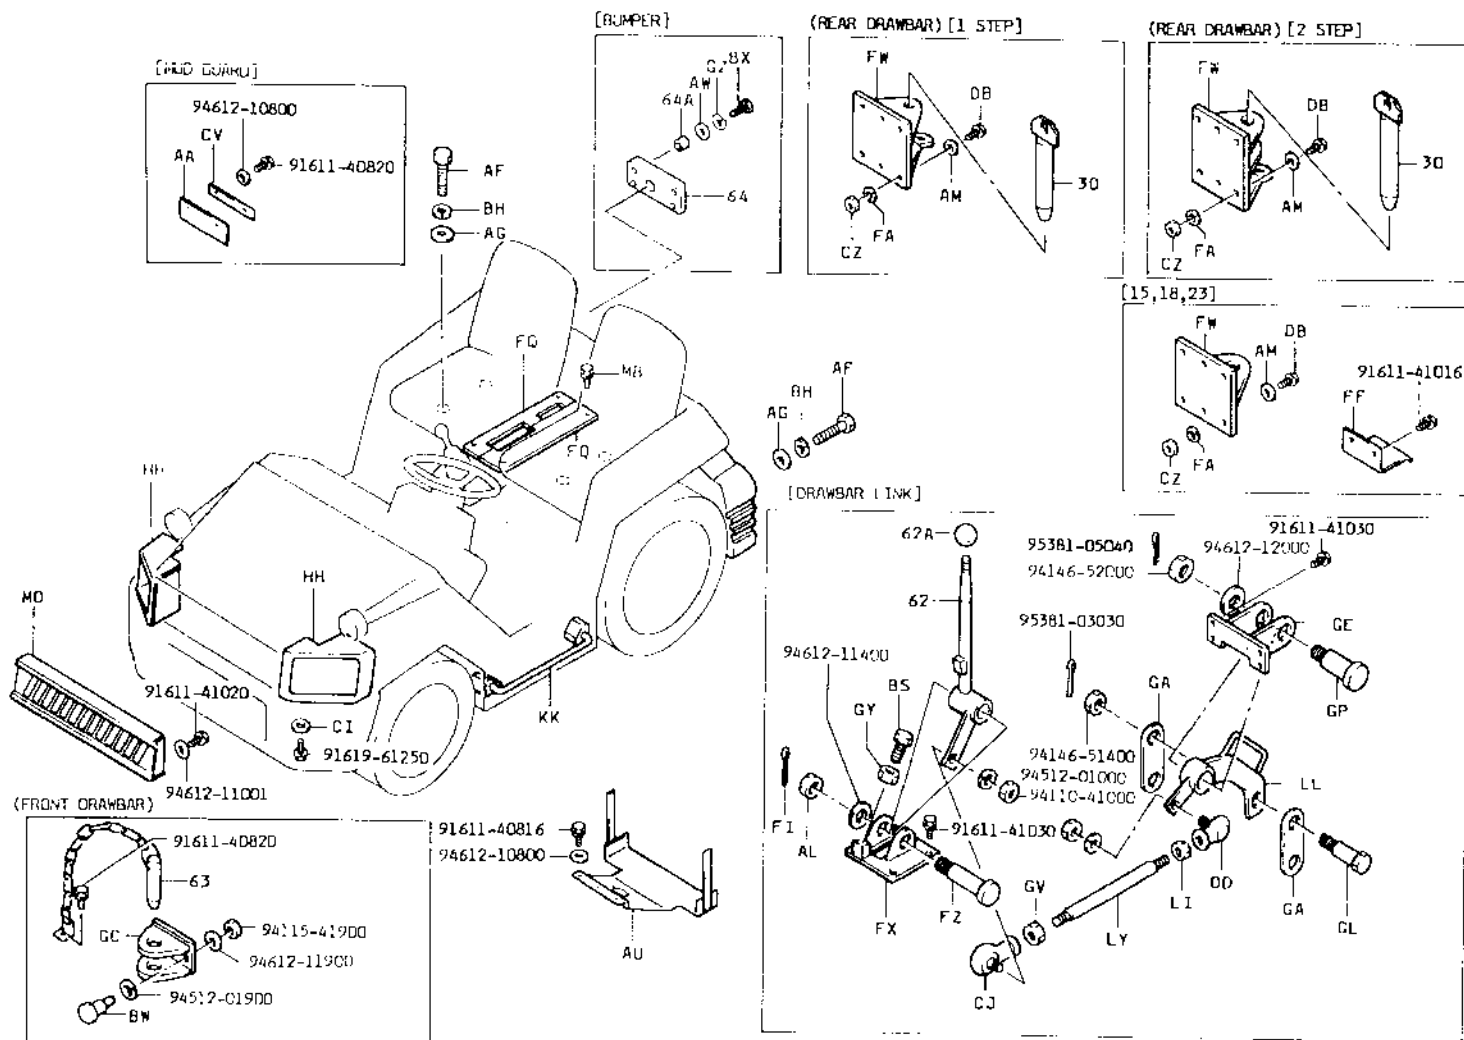

5101-138E

G708-001

FIG. 5101
FRAME & WEIGHT

5101

ATM

90/07

PART NAME CODE	PART NAME	QTY
5101-30	DRAWBAR SUB-ASSY	1
5101-A2	LEVER SUB-ASSY, DRAWBAR	1
5101-67A	KNOB (FOR DRAWBAR LEVER)	1
5101-63	DRAWBAR SUB-ASSY	1
5101-64	BUMPER, RUBBER	2
5101-64A	SPACER (FOR BUMPER SET)	8
5101-AA	GUARD, MUD	2
5101-AF	BOLT, HEXAGON	4- 61
5101-AG	WASHER, PLATE	4- 61
5101-AL	NUT, CASTLE	1
5101-AM	WASHER, PLATE	6
5101-AU	COVER SUB-ASSY, UNDER	1
5101-AW	WASHER, PLATE	8
5101-BB	BOLT	4
5101-BH	WASHER, SPRING	4- 61
5101-B5	BOLT	1
5101-BW	BOLT	4
5101-RX	BOLT	8
5101-CI	SPACER	6
5101-CJ	END ASSY	1
5101-CV	PLATE	2
5101-CZ	NUT	6
5101-DB	BOLT	3- 61
5101-DD	END ASSY	1
5101-EC	CAP	99
5101-FA	WASHER, SPRING	6
5101-FF	COVER	1
5101-FI	PIN, CUTTER	1
5101-FQ	COVER	1
5101-FW	BRACKET SUB-ASSY, DRAWBAR	1
5101-FX	BRACKET SUB-ASSY, DRAWBAR LEVER	1
5101-FZ	PIN	1
5101-GA	LINK, DRAWBAR	2
5101-GC	BRACKET SUB-ASSY, DRAWBAR	1
5101-GE	BRACKET	1
5101-GI	PIN	2
5101-GP	PIN	1
5101-GV	NUT	1
5101-GY	NUT	1
5101-GZ	WASHER, SPRING	8
5101-HH	PROTECTOR	1
5101-KK	CHOCK SUB-ASSY	1
5101-LJ	NUT	1
5101-LI	LINK, DRAW-BAR	1
5101-LY	ROD	1
5101-MB	BOLT	5
5101-MD	GRILLE SUB-ASSY	1

G708-002E


FIG. 5201
HOOD & HINGE

5201

ATM

90/07

 ATM

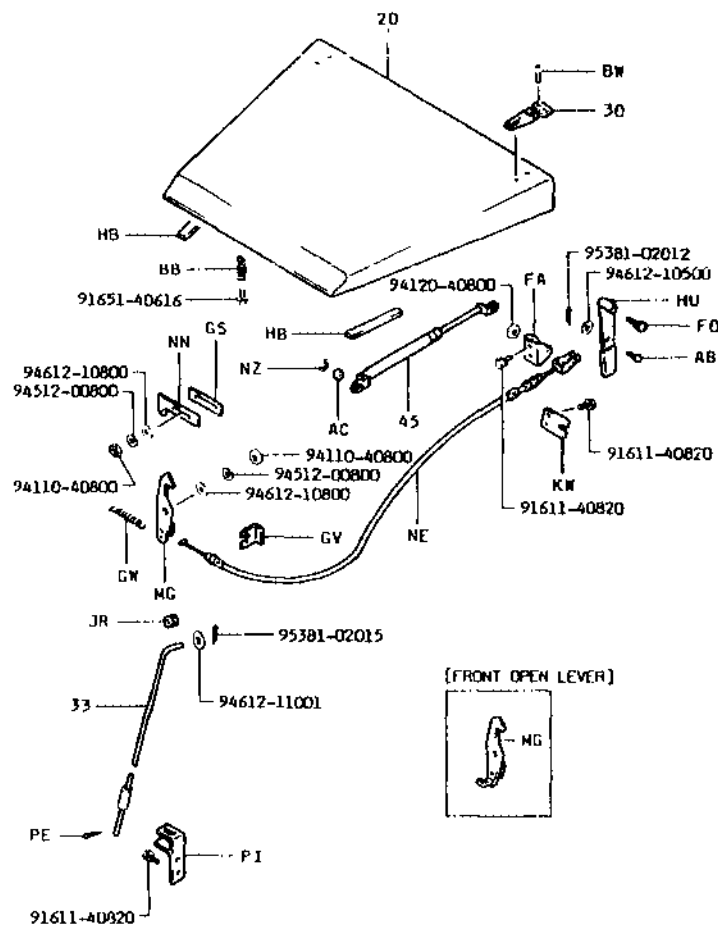

5201-1208

PART NAME	PART NAME	QTY
CODE		
5201-20	HOOD SUB-ASSY, ENGINE (OR BATTERY)	1
5201-30	HINGE SUB-ASSY, ENGINE (OR BATTERY) HOOD	2
5201-33	STAY SUB-ASSY, ENGINE (OR BATTERY) HOOD	1
5201-45	DAMPER, ENGINE HOOD	2
5201-46	PIN, W/HOLE	1
5201-47	WASHER, PLATE	4
5201-48	FASTENER SUB-ASSY, HOOD	2
5201-49	SPRING	1
5201-50	SCREW	8
5201-51	BRACKET SUB-ASSY	1
5201-52	PIN	1
5201-53	SHIM	99
5201-54	CLIP	1
5201-55	SPRING	1
5201-56	SPONGE	2
5201-57	LEVER SUB-ASSY	1
5201-58	GROMMET	1
5201-59	BRACKET	1
5201-60	PLATE SUB-ASSY, HOOD	1
5201-61	WIRE	1
5201-62	PLATE SUB-ASSY	1
5201-63	RING, E	4
5201-64	BRACKET	1

G708-001E

5301

90/07

Refer to
FIG. 5701.

 



FIG. 5301
INSTRUMENT PANEL & FLOOR

5301

ATM

90/07

 ATM (STEEL CABIN) (2/2)

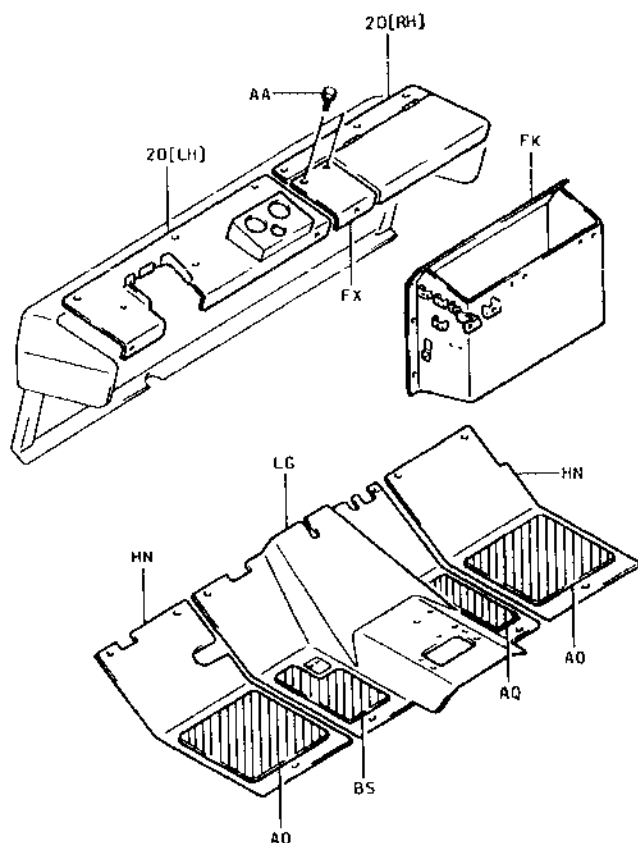

5301-164

PART NAME	PART NAME	QTY
CODE		
5301-20	PANEL SUB-ASSY, INSTRUMENT	1
5301-23	PROTECTOR SUB-ASSY, FR	1
5301-28	BOOT	1
5301-34	CLAMP SUB-ASSY, PAPER	1
5301-AA	SCREW	10
5301-AH	COVER	1
5301-AQ	SAFETY WALK	2
5301-AQ	SAFETY WALK	1
5301-AU	SEAL	1
5301-AY	RUBBER, CUSHION	1
5301-BP	WASHER, PLATE	10
5301-BS	SAFETY WALK	1
5301-BV	BOLT	10
5301-CI	GROMMET	1
5301-CU	RUBBER	1
5301-CY	RUBBER	1
5301-DN	COVER	1
5301-EF	COVER	1
5301-F8	SPACER	4
5301-FE	BOLT	1
5301-FK	POCKET SUB-ASSY	1
5301-FO	RUBBER	4
5301-FX	COVER	1
5301-HN	FLOOR	1
5301-JK	RUBBER	1
5301-JN	RUBBER	1
5301-JD	RUBBER	2
5301-JR	RUBBER	1
5301-LG	FLOOR SUB-ASSY, NO.1	1
5301-LH	FLOOR SUB-ASSY, NO.2	1
5301-MZ	BOX SUB-ASSY, INSTRUMENT PANEL	1
5301-NA	PACKING	1
5301-NI	SCREW	2
5301-NK	SCREW	4
5301-QK	FLOOR	1
5301-QN	MAGNET	2

G708-002E

FIG-5308
DRIVER SEAT

 
 
 
5308

ATM



92/08

ATM 11/11

ATM (W/HEADREST) 11/11

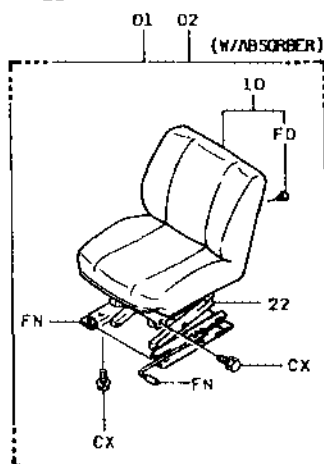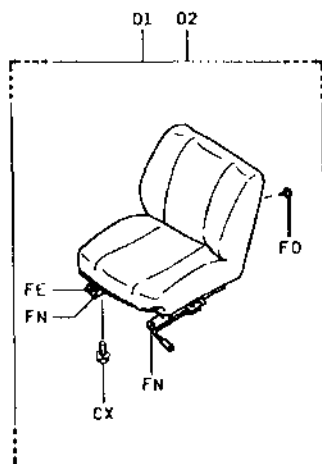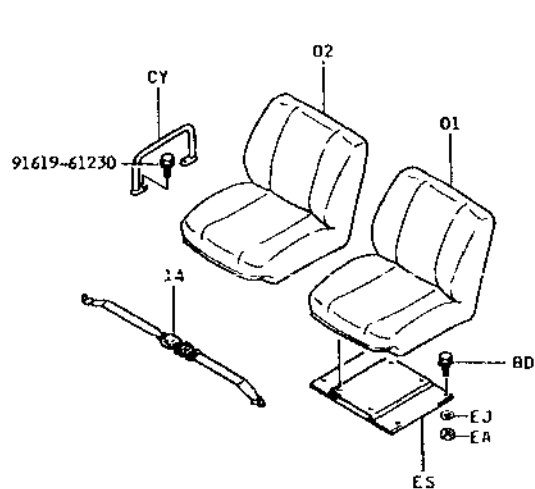

5308-124

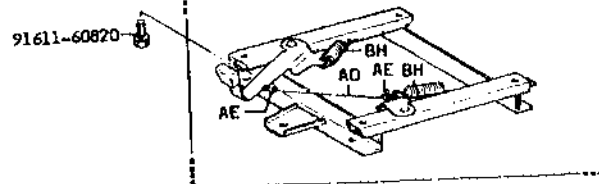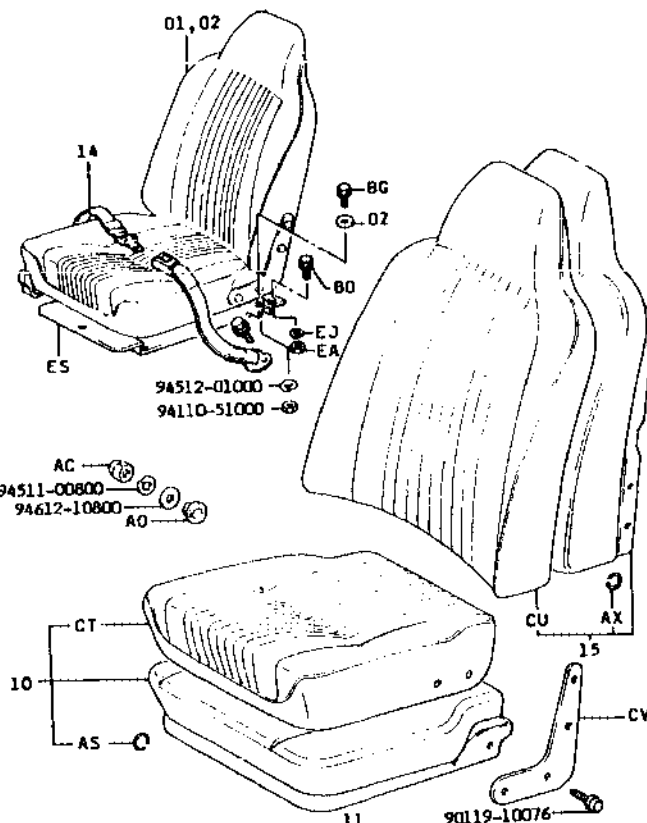  

5308-125A

G708-001

FIG. 5308
DRIVER SEAT

 
 
 
5308

ATM


92/08

ATM (DRS) (1/1)

ATM (DEAD-MAN) (2/2)

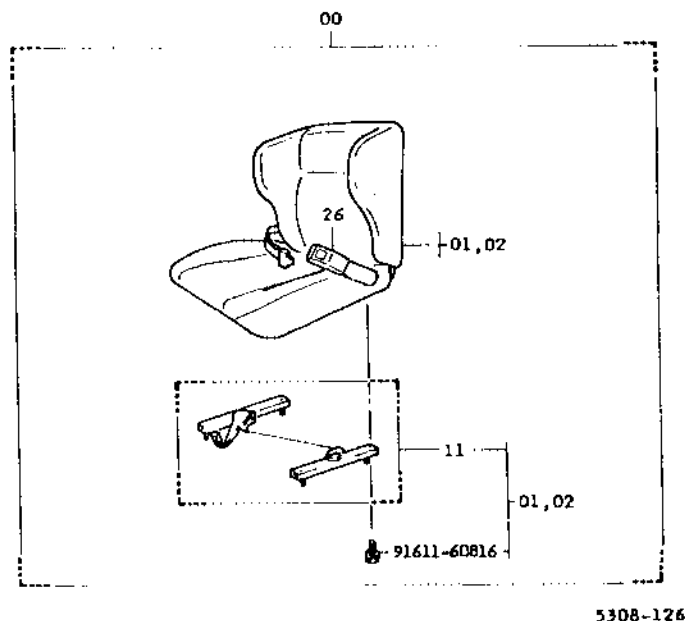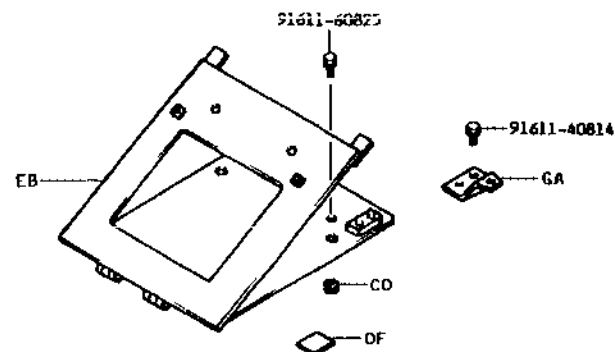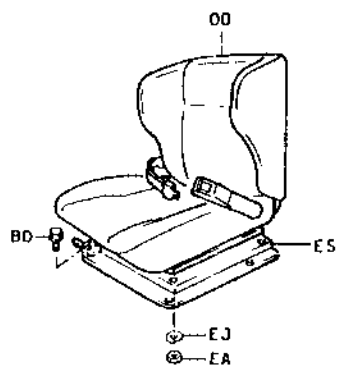

5308-126

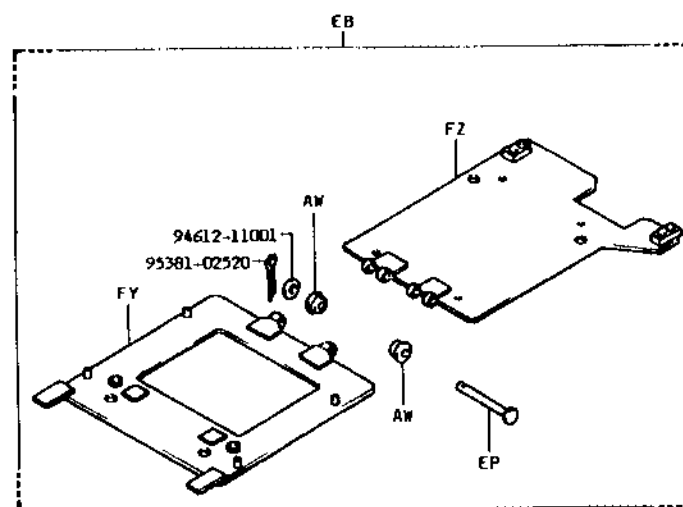 

5308-127A

G708-002

FIG-5308
DRIVER SEAT

5308

ATM

92/08

PART NAME	PART NAME	QTY
CODE		
5308-00	SEAT ASSY, W/BELT	1
5308-01	SEAT ASSY	1
5308-02	SEAT ASSY, ASSIST	1
5308-10	CUSHION ASSY	1
5308-11	TRACK ASSY	1
5308-14	HARNESSE ASSY, FRONT SEAT	1
5308-15	SEAT ASSY, BACK	1
5308-22	SUSPENSION SUB-ASSY	1
5308-26	BELT ASSY, SEAT	1
5308-AC	INUT, CAP	1
5308-AD	WIRE	2
5308-AE	WASHER	2
5308-AO	BUSHING	1
5308-AS	IRING, E	99
5308-AW	BUSHING	2
5308-AX	IRING, E	99
5308-BD	BOLT, W/WASHER	4
5308-BG	BOLT	4
5308-BH	SPRING, TORSION	2
5308-CD	SPRING	2
5308-CT	COVER SUB-ASSY, FRONT CUSHION	1
5308-CU	COVER SUB-ASSY, FRONT SEAT BACK	1
5308-CV	ARM SUB-ASSY, FRONT SEAT	1
5308-CX	BOLT	8
5308-CY	HANDRAIL SUB-ASSY	1
5308-DF	RUBBER	2
5308-DZ	WASHER, PLATE	3
5308-EA	INUT	4
5308-EB	STAND SUB-ASSY, SEAT	1
5308-EJ	WASHER, SPRING	4
5308-EP	PIN, HINGE	2
5308-ES	BRACKET SUB-ASSY, SEAT	1
5308-FE	BRACKET	1
5308-FN	RAIL, SLIDE	1
5308-FD	CLIP	2
5308-FY	STAND SUB-ASSY	1
5308-FZ	STAND SUB-ASSY	1
5308-GA	BRACKET	1

G708-003E

FIG. 5401
HEAD GUARD & ACCESSORY

 
5401

ATM

92/08


ATM

ATM (FRONT GLASS, SUN SHADE)

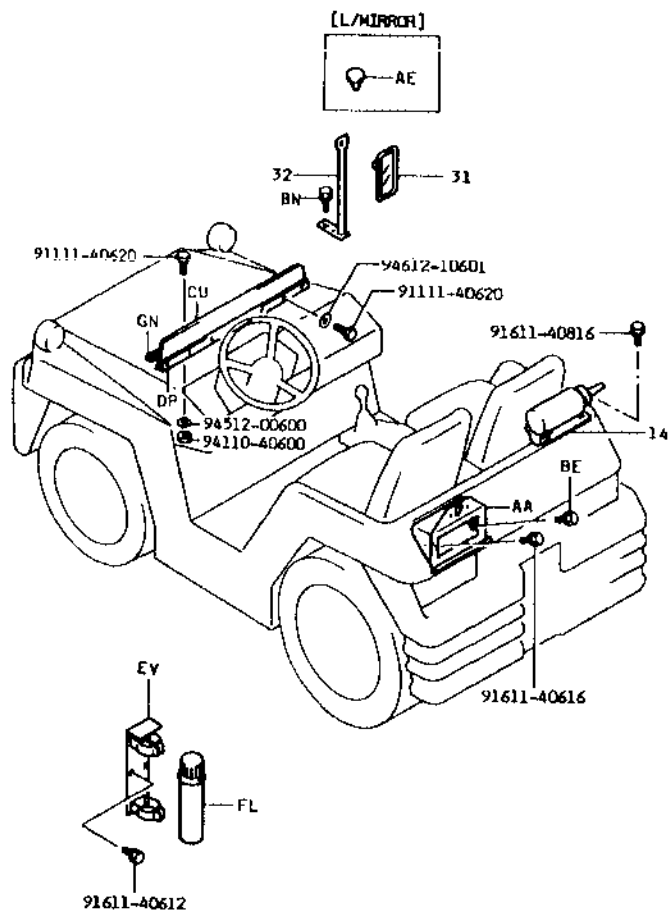


5401-138A

 (SUN SHADE)

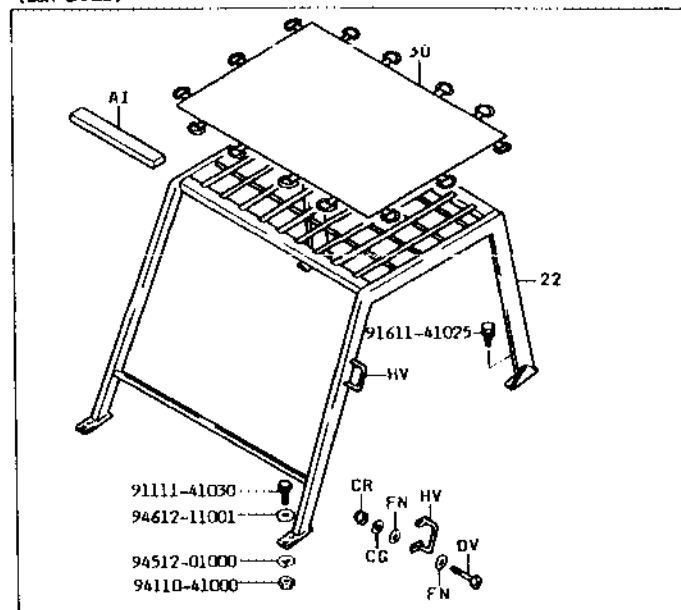

(FRONT GLASS)

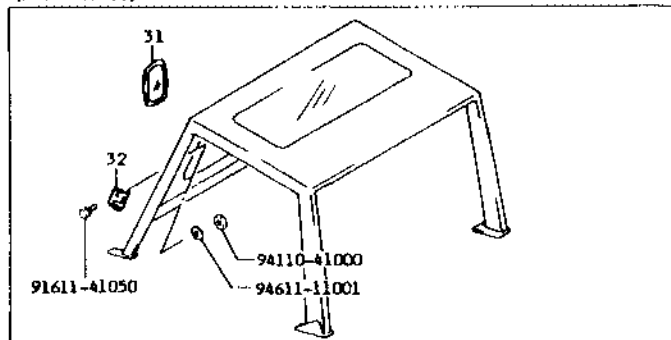 

5401-144A

G708-001

FIG-5401
HEAD GUARD & ACCESSORY

5401

ATM

92/08

PART NAME	PART NAME	QTY
CODE		
5401-14	FIRE-EXTINGUISHER ASSY	1
5401-22	SUNSHADE SUB-ASSY	1
5401-30	SHEET SUB-ASSY, HEAD GUARD	1
5401-31	MIRROR SUB-ASSY, BACK	2
5401-32	BRACKET SUB-ASSY, BACK MIRROR	1
5401-AA	PLATE SUB-ASSY, LICENCE	1
5401-AE	PLUG, HOLE	4
5401-A1	CUSHION, SHEET	2
5401-BE	BOLT	1
5401-BN	BOLT	4
5401-CG	WASHER, SPRING	2
5401-CR	NUT	2
5401-CU	PROTECTOR	1
5401-DP	BRACKET SUB-ASSY	1
5401-DV	SCREW	2
5401-EV	CASE SUB-ASSY	1
5401-FL	FUSEE	1
5401-FN	WASHER, PLATE	2
5401-GN	BRACKET SUB-ASSY	1
5401-HV	GRIP	1

G708-002E

FIG. 5405
INDICATOR PLATE

 
 
5405

ATH


92/08

ATH


①

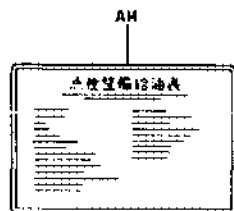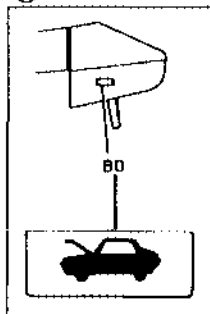


ATH
[FOR JAPAN]

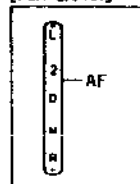 


ATH..15,18

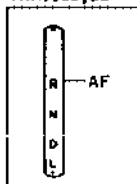 


ATH..20,23,25

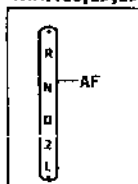 


AF [MTM]

 

AZ

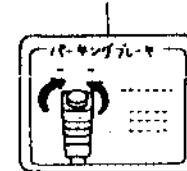 


EF

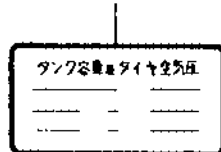 


AK



 [SKN]


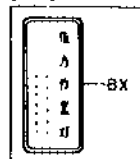


AU

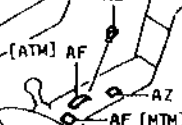 


①

  
①

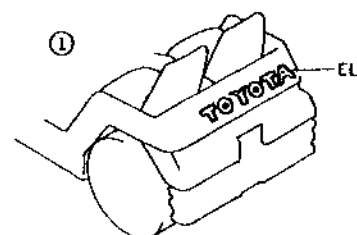

②

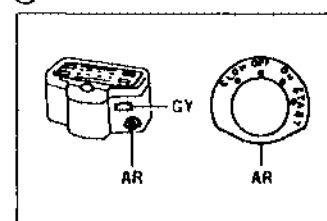 


(FLASHING BEACON)

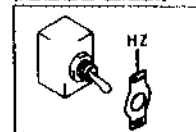 


IA



 SKN [FOR JAPAN]



AQ

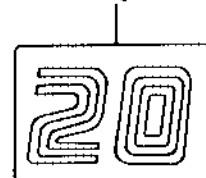 

5405-322E

G708-001

1/16 322 001

FIG. 5405
INDICATOR PLATE

5405

ATM

92/08

PART NAME CODE	PART NAME	QTY
5405-AB	MARK, TOYOTA	1
5405-AF	PLATE, SHIFT LEVER INDICATOR	1
5405-AK	PLATE, INDICATOR	1
5405-AM	PLATE, SERVICE INDICATOR	1
5405-AP	STRIPE	1
5405-AQ	PLATE, CAPACITY INDICATOR	2
5405-AR	PLATE, CAUTION	1
5405-AU	RIVET	2
5405-AZ	PLATE, CAUTION	1
5405-BD	INDICATOR	1
5405-EF	INDICATOR, TANK CAPACITY	1
5405-EL	MARK, TOYOTA	1
5405-GY	INDICATOR, LAMP	1
5405-HL	STRIPE	1
5405-HZ	LABEL	1
5405-IA	INDICATOR	1
5405-IA	INDICATOR	1

G706-002E


FIG. 5501
STEEL CABIN

5501

ATM

90/07

 ATM (STEEL CABIN)

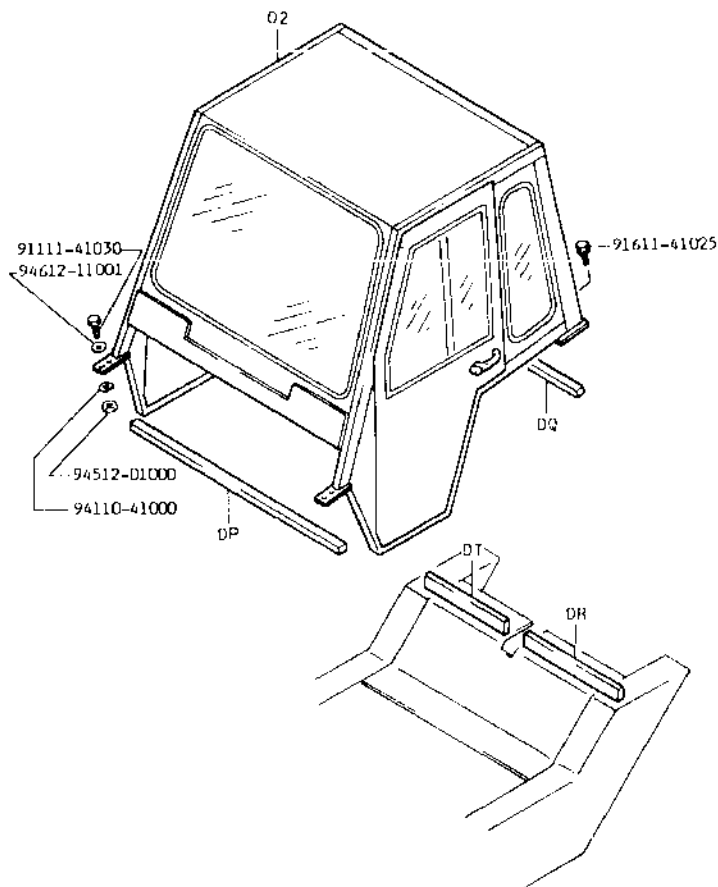

5501-047

PART NAME

CODE

PART NAME

QTY

5501-02	CABIN ASSY, STEEL	1
5501-DP	RUBBER	1
5501-DQ	RUBBER	1
5501-DR	RUBBER	1
5501-DT	RUBBER	1

G708-001E


FIG. 5502
CANVAS CABIN & FRONT GLASS

5502

ATM



90/07

 ATM (CANVAS CABIN, FRONT GLASS, TROPICAL CABIN)

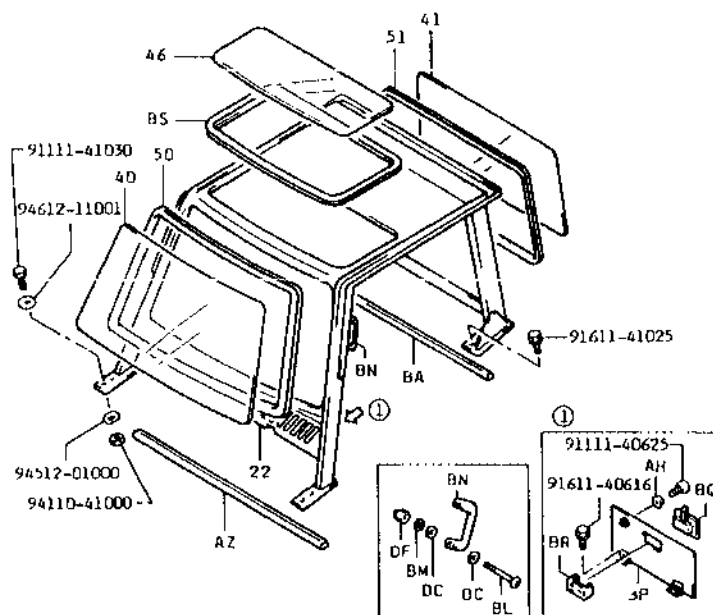

(CANVAS CABIN) 11

  (TROPICAL CABIN) 11

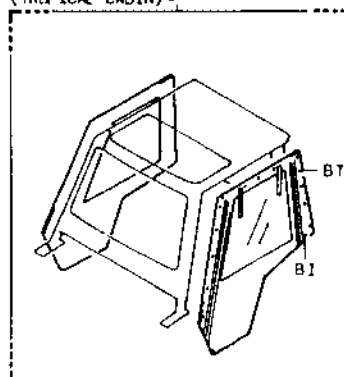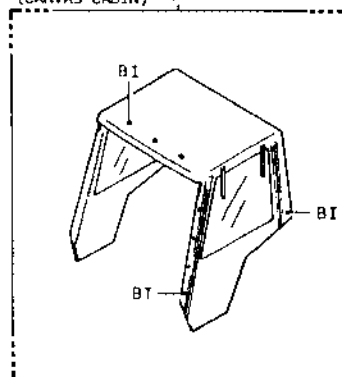

5502-033C

PART NAME	PART NAME	QTY
CODE		
5502-11	SHEET ASSY, CABIN	1
5502-22	CABIN SUB-ASSY	1
5502-40	GLASS, WINDSHIELD	1
5502-41	GLASS, WINDSHIELD REAR	1
5502-46	GLASS, ROOF	1
5502-50	WEATHERSTRIP	1
5502-51	WEATHERSTRIP, REAR GLASS	1
5502-AH	CUSHION	1
5502-AZ	RUBBER	1
5502-BA	RUBBER	1
5502-BI	HOOK, W/NUT	2
5502-BL	SCREW	2
5502-BM	WASHER, SPRING	2
5502-BN	GRIP SUB-ASSY	1
5502-BP	PLATE SUB-ASSY	1
5502-BQ	LOCK ASSY	1
5502-BR	BRACKET	1
5502-BS	WEATHERSTRIP	1
5502-BT	HOOK, W/SCREW	10
5502-DC	WASHER, PLATE	2
5502-DF	NUT	2

G708-001E


FIG. 5504
DOOR LOCK

5504

ATM

90/07

 ATM (STEEL CABIN)

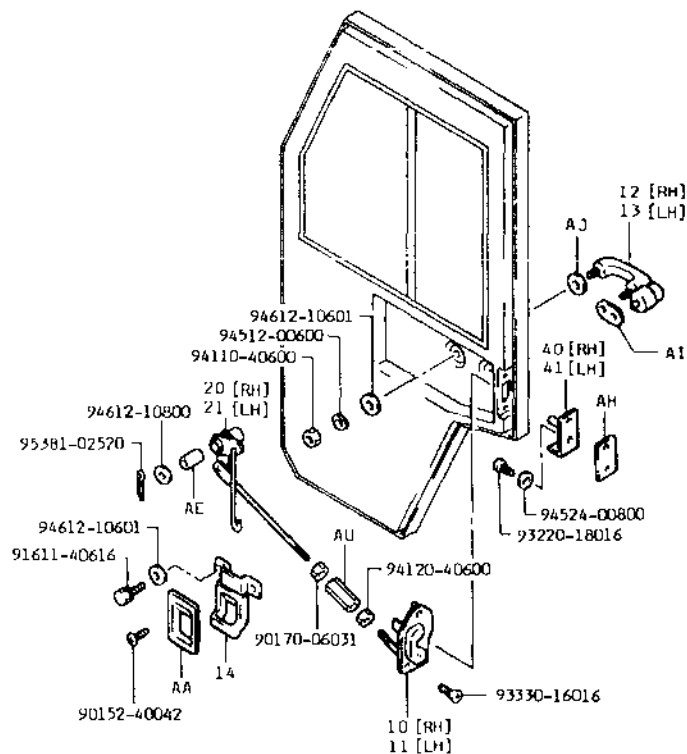

5504-074

PART NAME	PART NAME	QTY
CODE		
5504-10	LOCK ASSY, DOOR, RH	1
5504-11	LOCK ASSY, DOOR, LH	1
5504-12	HANDLE ASSY, FRONT DOOR OUTSIDE, RH	1
5504-13	HANDLE ASSY, FRONT DOOR OUTSIDE, LH	1
5504-14	HANDLE ASSY, DOOR INSIDE	2
5504-20	LINK SUB-ASSY, DOOR W/RDD, RH	1
5504-21	LINK SUB-ASSY, DOOR W/RDD, LH	1
5504-40	STRIKER, DOOR LOCK, RH	1
5504-41	STRIKER, DOOR LOCK, LH	1
5504-AA	CASE, DOOR INSIDE HANDLE	2
5504-AE	BUSHING	4
5504-AH	SHIM, DOOR LOCK STRIKER	99
5504-A1	PAD, FRONT	2
5504-AJ	PAD, REAR	2
5504-AU	TURNBUCKLE	2

G708-001E


FIG-5601
WIRING & CLAMP

5601

ATM

90/07

 ATM

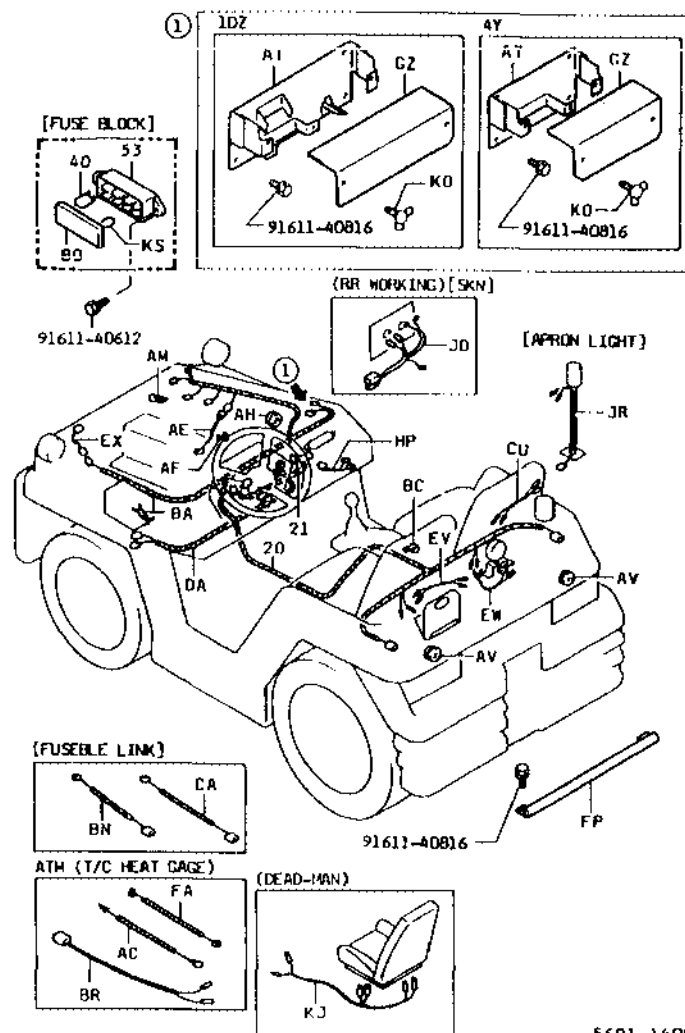

5601-140B

PART NAME	PART NAME	QTY
CODE		
5601-20	HARNESS SUB-ASSY, MAIN	1
5601-21	HARNESS SUB-ASSY, PANEL	1
5601-40	FUSE	99
5601-53	BLOCK, FUSE	1
5601-AC	CORD, TORCON HEAT GAGE	1
5601-AE	HARNESS, WIRE	1
5601-AH	GROMMET	1
5601-AT	PLATE SUB-ASSY	1
5601-AV	GROMMET	2
5601-BN	FUSIBLE LINK	1
5601-BO	COVER, FUSE BLOCK	1
5601-BR	HARNESS, OIL PRESSURE	1
5601-CA	FUSIBLE LINK	1
5601-CU	HARNESS SUB-ASSY, ROTARY LAMP	1
5601-DA	CORD, AMMETER	1
5601-EV	HARNESS SUB-ASSY, LICENCE LAMP	1
5601-EW	HARNESS	1
5601-FX	HARNESS	2
5601-FA	HARNESS, WIRE	1
5601-FP	PIPE	1
5601-GZ	COVER	1
5601-HP	HARNESS	1
5601-JR	HARNESS	1
5601-KJ	HARNESS	1
5601-KO	BOLT, WING	2
5601-K5	PULLER, FUSE	1

G708-001E


FIG. 5611
LAMP

5611

ATM

90/07

 ATM

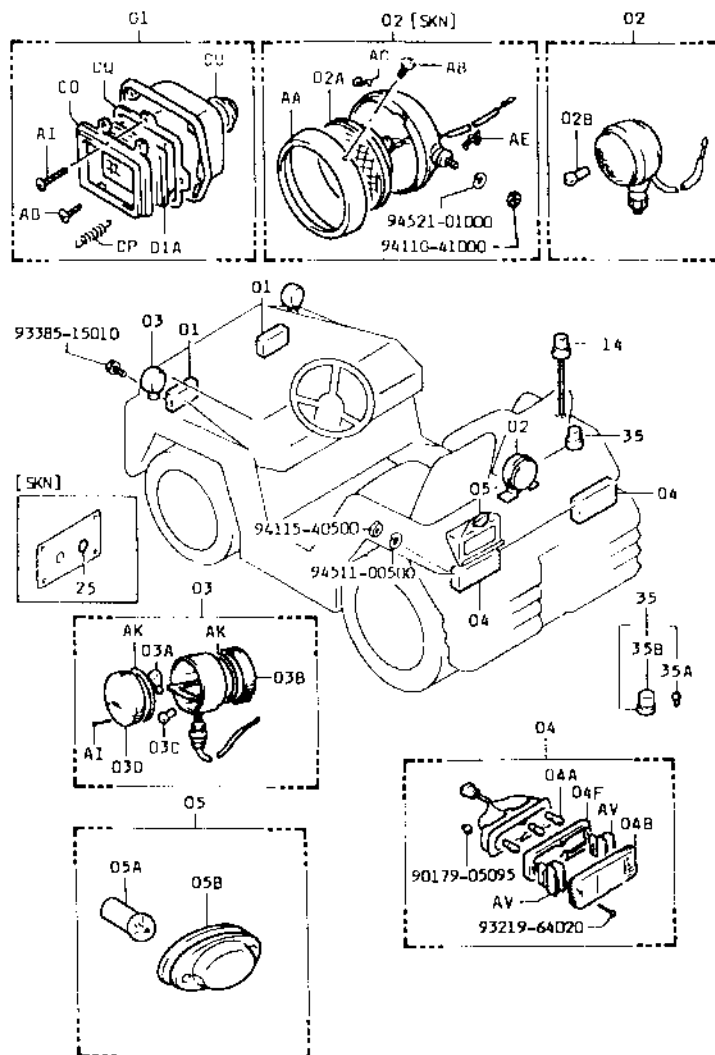

PART NAME	PART NAME	QTY
CODE		
5611-01	LAMP ASSY, HEAD	1
5611-01A	UNIT, SEALBEAM (FOR HEAD LAMP)	2
5611-02	LAMP ASSY, WORKING	1
5611-02B	BULB (FOR WORKING LAMP)	1
5611-03	LAMP ASSY, FLASHER	2
5611-03A	BULB (FOR FLASHER LAMP)	2
5611-03B	LENS (FOR FLASHER LAMP)	2
5611-03C	BULB (FOR FLASHER LAMP)	2
5611-03D	LENS (FOR FLASHER LAMP)	2
5611-04	LAMP ASSY, REAR COMBINATION	1
5611-04A	BULB (FOR REAR COMBINATION LAMP)	1
5611-04B	LENS (FOR REAR COMBINATION LAMP)	1
5611-04F	GASKET (FOR REAR COMBINATION LAMP)	1
5611-05	LAMP ASSY, LICENCE	1
5611-05A	BULB (FOR LICENCE LAMP)	1
5611-05B	LENS (FOR LICENCE LAMP)	1
5611-14	LAMP ASSY, APRON	1
5611-35	LAMP ASSY, ROTARY	1
5611-35A	BULB (FOR ROTARY LAMP)	1
5611-35B	LENS (FOR ROTARY LAMP)	1
5611-AB	SCREW	8
5611-A1	SCREW	4
5611-AK	PACKING	4
5611-AV	SHADE	4
5611-CO	RING, RETAINING	2
5611-CP	SPRING, EXTENSION	2
5611-CQ	RING, MOUNTING	1
5611-CU	COVER	2

5611-113A

G708-001E


FIG. 5612
LAMP BRACKET

5612

ATM

89/11

 ATM

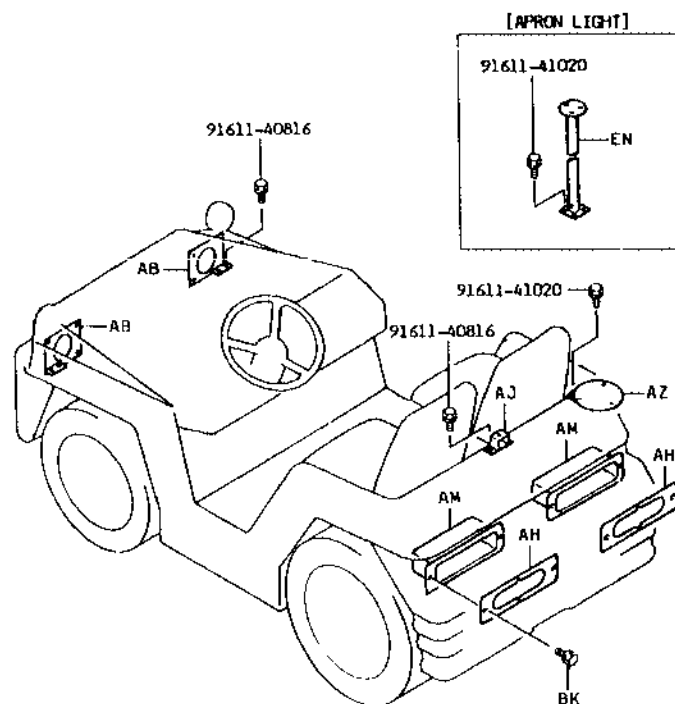

5612-134

PART NAME CODE	PART NAME	QTY
5612-AB	BRACKET SUB-ASSY. HEAD LAMP	1
5612-AJ	BRACKET, REAR LAMP	2
5612-AJ	BRACKET, WORKING LAMP	1
5612-AM	BRACKET, REAR COMBINATION LAMP	2
5612-AZ	BRACKET SUB-ASSY. ROTARY LAMP	1
5612-BK	BOLT	4
5612-EN	BRACKET SUB-ASSY	1

G708-001E




FIG. 5701
METER & SWITCH

5701


ATM

90/07

   
ATM 11/21

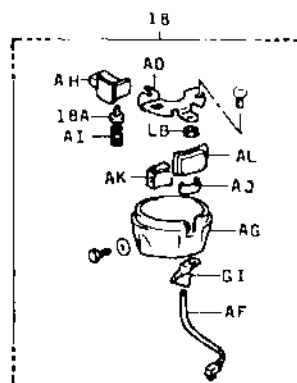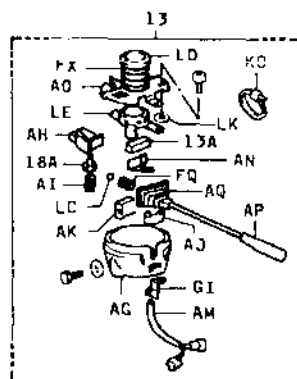


[STOP LAMP SWITCH]

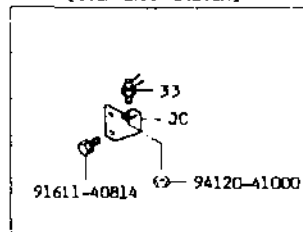 



[PLUG]

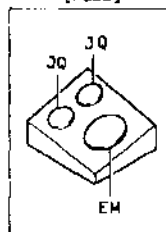 


[PARKING BRAKE SWITCH]

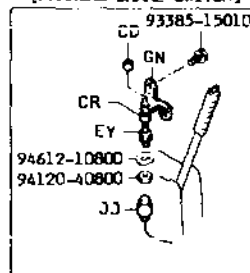 

(DEAD-MAN)

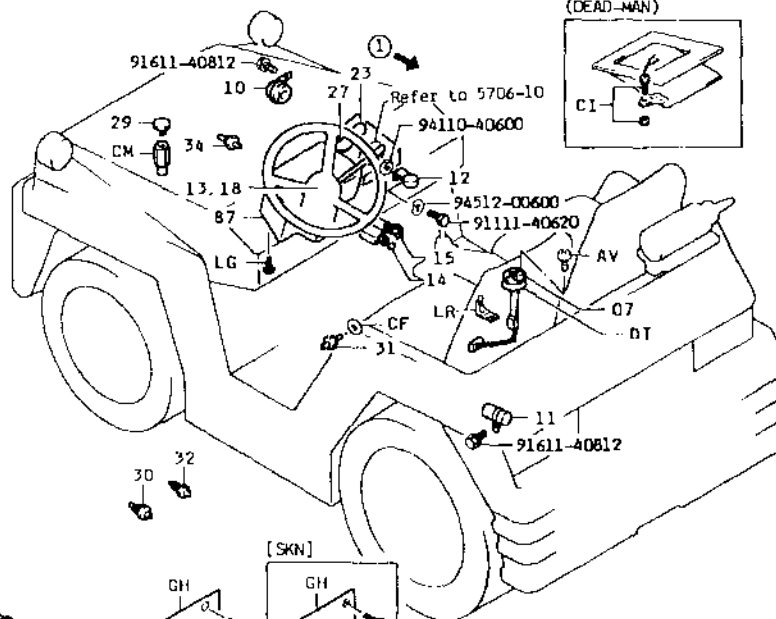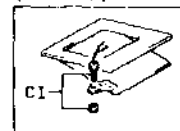  


[SKN]

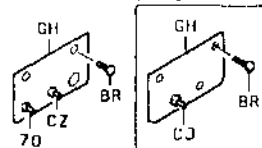 


①

 
10Z

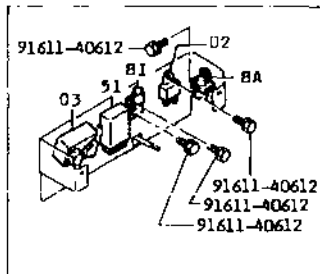

4Y

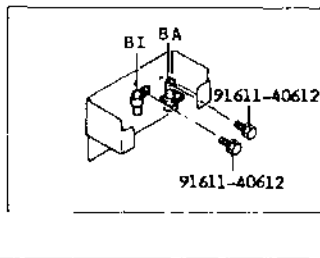 

(DEAD-MAN, IN-LINE PUMP)

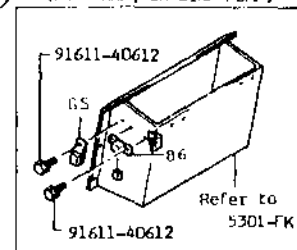 

5701-0880

G708-001

5701 (AMM) 10/97


FIG. 5701
METER & SWITCH

5701

ATM

90/07

 ATM 12/21

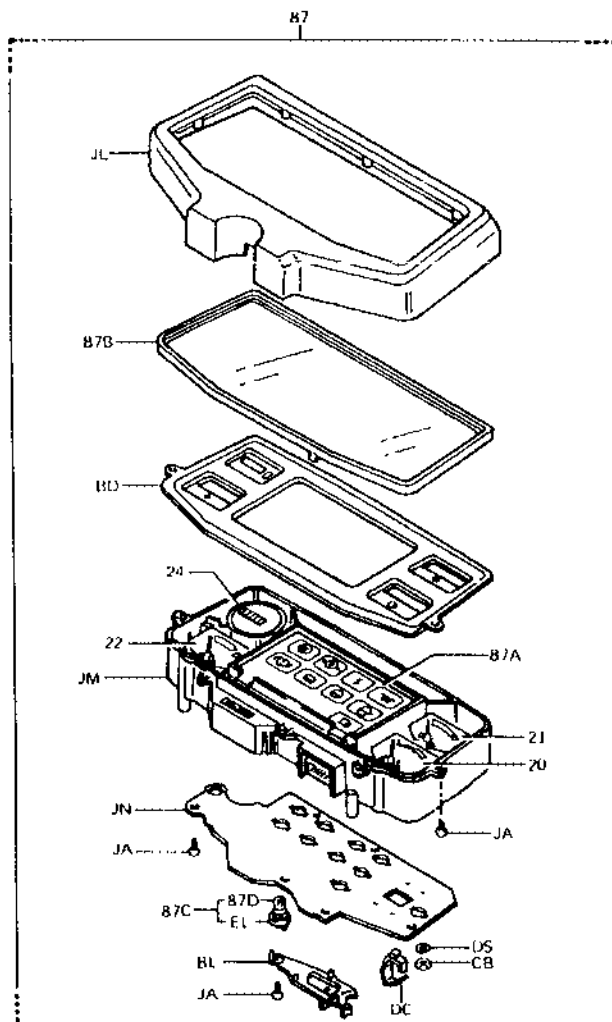

5701-061

PART NAME	PART NAME	QTY
CODE		
5701-02	RELAY ASSY, STARTER	1
5701-03	RELAY ASSY, GLOW PLUG	1
5701-07	UNIT ASSY, FUEL	1
5701-10	HORN ASSY	1
5701-11	BUZZER ASSY, BACK	1
5701-12	BUZZER ASSY, VACUUM INDICATOR	1
5701-13	SWITCH ASSY, TURN SIGNAL	1
5701-13A	SWITCH ASSY, MICRO (FOR TURN SIGNAL SWITCH)	2
5701-14	SWITCH ASSY, LIGHT CONTROL	1
5701-15	SWITCH ASSY, IGNITION STARTER	1
5701-18	SWITCH ASSY, HORN	1
5701-18A	CONTACT, HORN	2
5701-20	GAGE ASSY, FUEL	1
5701-21	GAGE ASSY, WATER TEMPERATURE (ENGINE)	1
5701-22	GAGE ASSY, TEMPERATURE (TURCON)	1
5701-23	GAGE ASSY, OIL PRESSURE (ENGINE)	1
5701-23A	BULB (FOR OIL PRESSURE GAGE)	1
5701-24	METER ASSY, HOUR	1
5701-27	AMMETER ASSY	1
5701-27A	BULB (FOR AMMETER)	1
5701-29	GAGE ASSY, OIL PRESSURE SENDER (ENGINE)	1
5701-30	GAGE ASSY, WATER TEMPERATURE SENDER (ENGINE)	1
5701-31	GAGE ASSY, TEMPERATURE SENDER (TURCON)	1
5701-32	SWITCH ASSY, OIL PRESSURE (ENGINE)	1
5701-33	SWITCH ASSY, STOP LAMP	1
5701-34	SWITCH ASSY, VACUUM WARNING	1
5701-51	TIMER, PREHEATING	1
5701-70	SWITCH ASSY, ROTARY LAMP	1
5701-86	TIMER ASSY, DELAY	1
5701-87	METER ASSY, COMBINATION	1
5701-87A	LENS (FOR COMBINATION METER)	1
5701-87B	GLASS, W/PACKING	1
5701-87C	BULB, W/SOCKET (FOR COMBINATION METER)	99
5701-87D	BULB (FOR COMBINATION METER)	99
5701-AF	HARNESS ASSY	1
5701-AG	BODY, SWITCH	1
5701-AH	HOLDER, HORN POINT	1
5701-AI	SPRING, HORN CONTACT	2
5701-AJ	COVER	1
5701-AK	BLOCK, LOCKING	1
5701-AL	COVER, RUBBER	1
5701-AM	HARNESS ASSY	1
5701-AN	ACTUATOR	2
5701-AO	PLATE, SWITCH	1
5701-AP	LEVER, SIGNAL	1
5701-AQ	BELLOWS	1
5701-AV	SCREW	5
5701-BA	RELAY ASSY	1
5701-BD	PLATE	1
5701-BI	FLASHER ASSY, TURN SIGNAL	1
5701-BL	INSULATOR, LOWER	1
5701-BR	BOLT	1
5701-CB	INUT	99
5701-CD	CAP, SWITCH	1
5701-CF	GASKET	2
5701-CI	SWITCH ASSY, STOP	2
5701-CM	UNION	1
5701-CR	SPACER	1
5701-C2	SWITCH ASSY	1
5701-DC	CLAMP	1
5701-DS	WASHER	99
5701-DT	PACKING	1
5701-EL	SOCKET	10
5701-EM	PLUG	1

G708-002

FIG. 5701
METER & SWITCH

5701

ATM

90/07

PART NAME	PART NAME	QTY
CODE		
5701-EY	SWITCH ASSY	1
5701-FQ	SPRING	1
5701-FX	SPRING	1
5701-GH	BRACKET SUB-ASSY	1
5701-GI	CLAMP	1
5701-GM	SWITCH ASSY	1
5701-GN	BRACKET	1
5701-GS	RELAY ASSY	1
5701-JA	SCREW	14
5701-JC	BRACKET	1
5701-JJ	BOOT	1
5701-JL	HOOD	1
5701-JM	CASE	1
5701-JN	PLATE SUB-ASSY	1
5701-JQ	PLUG, HOLE	1
5701-KD	CLAMP	1
5701-LB	SPACER	1
5701-LC	BALL	1
5701-LD	CAM, CANCEL	1
5701-LE	GUIDE, CANCEL CAM	1
5701-LG	SCREW	4

G708-003E


FIG. 5706
SPEEDOMETER & SPEED ALARM

5706

ATM

89/11

 ATM

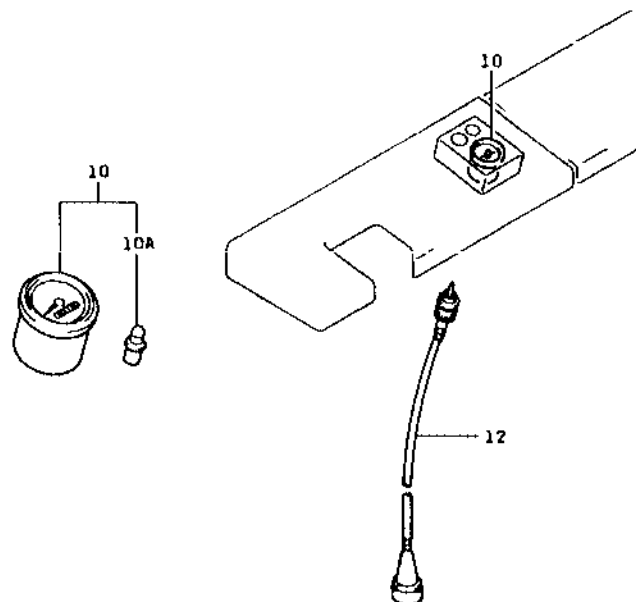

5706-021

PART NAME CODE	PART NAME	QTY
5706-10	SPEEDOMETER ASSY	1
5706-10A	BULB (FOR SPEEDOMETER)	1
5706-12	WIRE ASSY, METER FLEXIBLE	1
5706-12	WIRE ASSY, METER FLEXIBLE	1

G708-001E

FIG. 5801
WIPER MOTOR & BLADE

5801

 
ATM

90/07


ATM (CANVAS CABIN, FRONT GLASS, TROPICAL CABIN)

ATM (STEEL CABIN)



[RELAY]

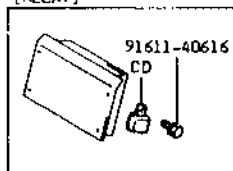


[L/RR WIPER, PLUG]

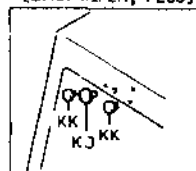 


[RELAY]

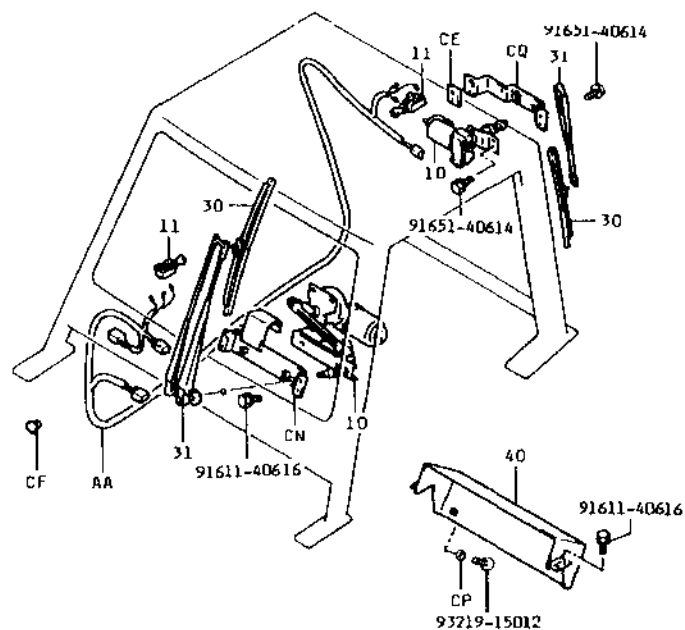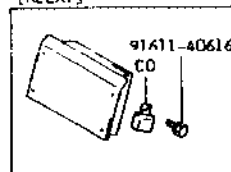  


5801-054A

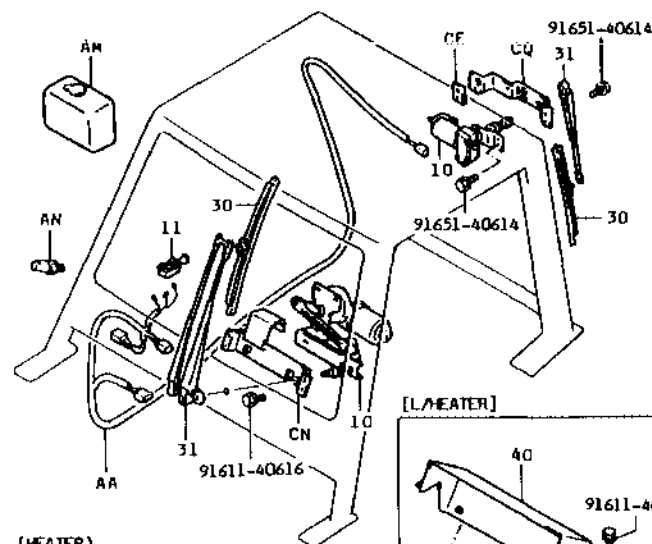 

(HEATER)

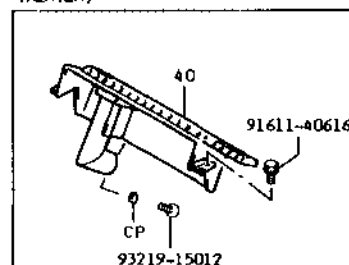 

[L/HEATER]

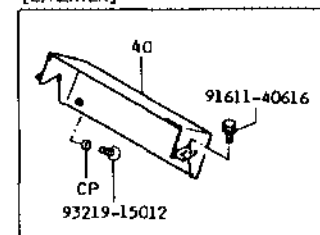 

5801-056

G708-001

FIG. 5801
WIPER MOTOR & BLADE

5801

ATM

90/07

PART NAME	PART NAME	QTY
CODE		
5801-10	MOTOR ASSY, WIPER	1
5801-11	SWITCH ASSY, WIPER	1
5801-30	BLADE SUB-ASSY, WIPER	1
5801-31	ARM SUB-ASSY, WIPER	1
5801-40	COVER SUB-ASSY, WIPER MOTOR	1
5801-AA	HARNES, WIPER	1
5801-AM	TANK ASSY, WASHER	1
5801-AN	NOZZLE ASSY, WASHER	1
5801-CD	RELAY ASSY	1
5801-CE	PLATE, SWITCH	1
5801-CF	PLUG	1
5801-CN	BRACKET SUB-ASSY, WIPER	1
5801-CP	CUSHION	1
5801-CQ	BRACKET SUB-ASSY, REAR WIPER	1
5801-KJ	PLUG, HOLE	1
5801-KK	PLUG, HOLE	3

G708-002E

MTA

FIG. 5802
HEATER

 
 
 
 
5802

ATM




90/07

ATM (STEEL CABIN.-HEATER)

ATM (STEEL CABIN.-HEATER)

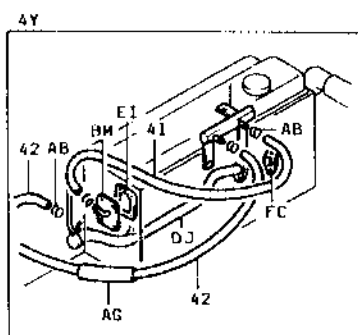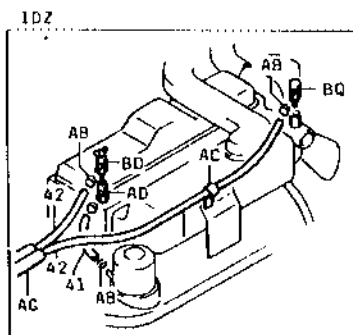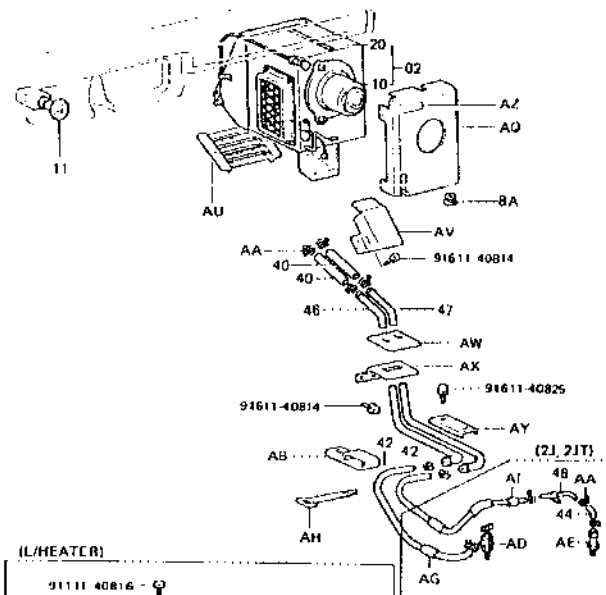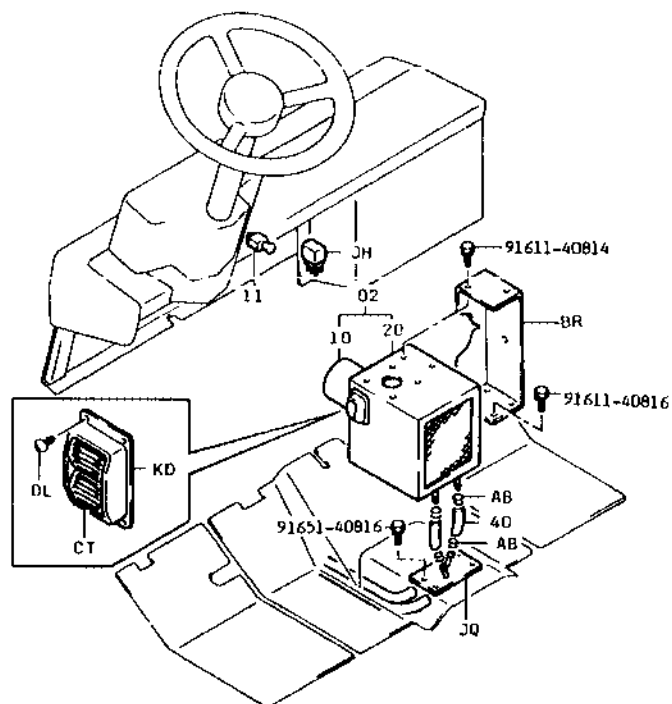

5802-062

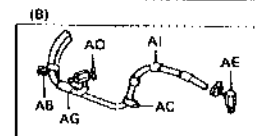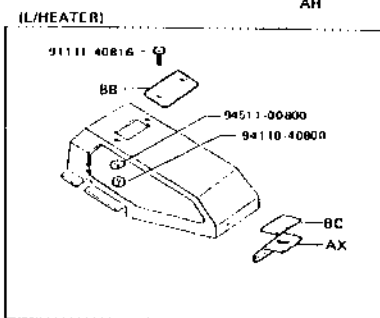   

5802-008

G708-001

FIG. 5802
HEATER

5802

ATM

90/07

PART NAME	PART NAME	QTY
CODE		
5802-02	HEATER ASSY	1
5802-10	MOTOR ASSY	1
5802-11	SWITCH ASSY, HEATER	1
5802-20	UNIT SUB-ASSY, RADIATOR	1
5802-40	HOSE, NO. 1	2
5802-41	HOSE, NO. 2	1
5802-42	HOSE, NO. 3	2
5802-AB	CLAMP	10
5802-AC	CLAMP	1
5802-AD	JOINT	1
5802-AG	BUSHING	6
5802-BD	VALVE ASSY, WATER	1
5802-BM	PLATE	1
5802-BQ	PIPE, WATER JOINT	1
5802-BR	BRACKET	1
5802-CT	DUCT SUB-ASSY, AIR	2
5802-DJ	PIPE SUB-ASSY, WATER	1
5802-DL	SCREW	4
5802-EI	GASKET	1
5802-FC	GASKET	1
5802-JH	RELAY ASSY	1
5802-JQ	PIPE SUB-ASSY, HEATER	1
5802-KD	COVER SUB-ASSY, AIR DUCT	1
5802-KD	COVER SUB-ASSY, AIR DUCT	1

G708-002E

MEMO