

TOYOTA INDUSTRIAL VEHICLE

PARTS CATALOG

02-2TG20, 25

No.G708-2

TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.

TOYOTA

TOWING TRACTOR

PARTS CATALOG

MODEL	-----	<u>2TG</u>	-----
FRAME NO.		<u>2TG25</u>	-----
ENGINE NO.		<u>4Y</u>	-----

DESCRIPTION

	Cyclone Air Cleaner Single Element		

TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.

QUICK REFERENCE INDEX

INTRODUCTION

ENGINE

FUEL SYSTEM

CHASSIS

BODY

ELECTRICAL SYSTEM

G708-1 4Y MTM
G708-2 4Y ATM

GENERAL INFORMATION

This parts catalog has been prepared for the customers of Toyota Industrial Vehicles and this shows only the part name codes instead of parts numbers.

When ordering parts from your local Toyota dealer, please specify the complete model number of the truck, the engine number or frame number. Also it is essential that you specify the part name codes described in the pages of illustrations and text.

The complete model number and frame number are shown in the front page of this catalog. All the columns in this quick reference index are supposed to be filled out by both the factory and your local dealer.

For the industrial vehicle with optional equipment, which is described in the lower part of the DESCRIPTION, it is imperative for you to specify optional equipment when ordering parts.

Your Toyota dealer has always been furnished with enough information to decode the correct part numbers based on your information of model number, engine number or frame number as well as part name code.

INFORMATIONS D'ORDRE GENERAL

Ce catalogue de pièces a été préparé pour les propriétaires de Véhicules Industriels Toyota. On n'y trouvera que les codes de désignation de pièces au lieu des numéros de pièces.

Pour la commande de pièces auprès de votre concessionnaire Toyota, prière de spécifier le numéro de modèle complet de l'engin, le numéro du moteur ou le numéro du châssis. Il est aussi nécessaire de spécifier les codes de désignation de pièces comme ils sont décrits dans les pages d'illustrations et dans le texte.

Le numéro de modèle complet et le numéro de châssis sont indiqués en première page de ce catalogue. Toutes les colonnes de l'index de référence rapide devraient être remplies par l'usine et par votre concessionnaire.

Pour le véhicule industriel avec équipement optionnel, décrit en bas de page sous la rubrique "DESCRIPTION", il convient de bien spécifier qu'il s'agit de cet équipement lors de commande de pièces.

Votre concessionnaire Toyota est toujours suffisamment informé pour décoder les numéros de pièces sur la base de votre information du numéro de modèle, du numéro de moteur ou de châssis, et des codes de désignation de pièces.

INFORMACION GENERAL

Este catálogo de piezas ha sido preparado para los clientes de vehículos industriales de TOYOTA, e incluye tan sólo los códigos de nombre de pieza en lugar de los números de pieza.

Cuando solicite piezas a su distribuidor local de TOYOTA especifique por favor el número de modelo completo del vehículo, el número de motor o el número de bastidor. Asimismo, es esencial que Vd. especifique los códigos de nombre de pieza descritos en las páginas de ilustraciones y de texto.

El número completo de modelo y el número de bastidor se indican en la portada de este catálogo. Se supone que todas las columnas de este índice de referencia se han rellenado, tanto por parte de la fábrica como por parte de su distribuidor local.

En lo que concierne a los vehículos industriales con equipos opcionales, que se describen en la parte baja de la DESCRIPCION, es absolutamente necesario que especifique equipos opcionales cuando solicite piezas de repuesto.

Su distribuidor local de TOYOTA posee la información necesaria para descifrar los números correctos de cada pieza a base de su información de número de modelo, número de motor o número de bastidor, así como el código de nombre de la pieza.

ALLGEMEINE INFORMATION

Dieser Teilekatalog wurde für die Benutzer von Toyota Industriefahrzeugen zusammengestellt und zeigt anstelle von Teilenummern nur die Teilennamen-Kodes.

Geben Sie bei Teilebestellungen von Ihrem Toyota-Händler am Platz bitte die vollständige Modellnummer des Fahrzeugs, die Motornummer oder Fahrgestellnummer an. Es ist auch erforderlich, daß Sie die in den Illustrationen und im Text beschriebenen Teilennamen-Kodes angeben.


Die vollständige Modellnummer und Fahrgestellnummer finden Sie auf der Vorderseite dieses Katalogs. Alle Spalten in dieser Bezugstabelle sollen sowohl vom Werk als von Ihrem Händler am Platz ausgefüllt werden.

Für Industriefahrzeuge mit Sonderausrüstung, welche im unteren Teil der BESCHREIBUNG erläutert ist, müssen Sie bei der Bestellung von Teilen unbedingt diesbezügliche Angaben machen.

Ihr Toyota-Händler verfügt stets über genügend Information, um die richtigen Teilenummern zu entschlüsseln, basiert auf Ihren Angaben zu Modellnummer, Motornummer oder Fahrgestellnummer und den Teilennamen-Kodes.

ILLUSTRATION AND PART NAME CODE TEXT PAGE COMPOSITION

 Essentially, one (1) page will present both the illustration and part name code. However, when the space for text page is not enough the next page will be used in succession.

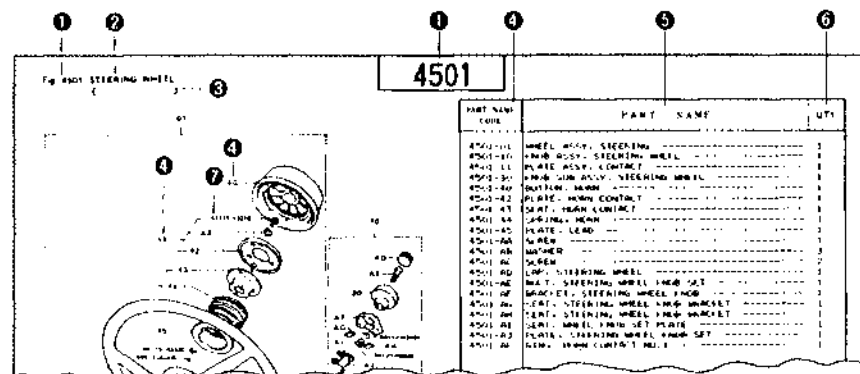

- 1 Figure number
This parts catalog has been prepared according to the figure numbers.
- 2 Figure title
A representative part name which is the major assembly part name is shown as the figure title of the illustration.
- 3 Sub title
The optional name or special specification of each illustration are indicated.
- 4 Part name code
This is a combination of figure number and codes of illustrations pertaining to each part. This is a key for your Toyota dealer to find the correct part numbers.
- 5 Part name
As a rule, the part name is indicated for each of the part name codes.
- 6 QTY (Quantity)
The quantity column indicates the utilized pieces of part name code unit. When the utilized quantity changes according to each of the vehicles, maximum is indicated.
When the utilized quantity of the parts differs or is more than 100 pieces, quantity 99 is indicated.
- 7 Standard parts numbers
The standard parts such as the bolts, nuts, washer, etc. are described with parts numbers. When ordering these parts, specify parts numbers.

COMPOSICION DE LAS PAGINAS DE ILUSTRACIONES Y DE TEXTO DE CODIGOS DE NOMBRE DE PIEZAS


Basicamente, una (1) página incluirá tanto la ilustración como el código de nombre de la pieza.

No obstante, si el espacio no fuese suficiente, se utilizará la página siguiente.

- 1 Número de figura
Este catálogo de piezas se ha preparado de acuerdo con los números de las figuras.
- 2 Título de las figuras
Como título de las figuras de la página de ilustraciones, se incluye un nombre que sea representativo del nombre del mayor conjunto.
- 3 Subtítulo
Se indican el nombre opcional o las especificaciones especiales de cada ilustración.
- 4 Código de nombre de pieza
Se trata de una combinación de número de figura y de código de las ilustraciones correspondientes a cada pieza. Esta es la clave para que su distribuidor local de TOYOTA pueda encontrar el número de pieza correcto.
- 5 Nombre de la pieza
Como norma, se indica el nombre de cada uno de los códigos de nombre de pieza.
- 6 QTY (Cantidad)
La columna de cantidad indica el número de piezas utilizadas de cada unidad de código de nombre de pieza.
Cuando la cantidad utilizada es intercambiable entre cada uno de los vehículos, se indica el máximo.
Cuando la cantidad de piezas utilizadas pueda diferir o ser superior a 100, se indica como cantidad 99.
- 7 Números de piezas normalizadas
Las piezas corrientes, tales como pernos, tuercas, arandelas etc., se describen con número de pieza. Cuando solicite tales piezas, indique su número de pieza.

ILLUSTRATION ET COMPOSITION DU DE TEXTE DE CODE DE DESIGNATION DE PIECE

 Une (1) page contiendra essentiellement une illustration et ses codes de désignation de pièce. Toutefois, lorsque l'espace réservé au texte est insuffisant, la continuation se trouvera sur la page suivante.

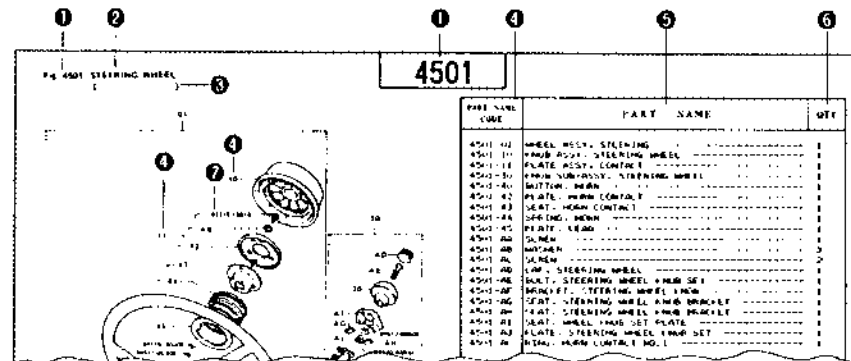

- 1 Numéro de figure
Ce catalogue de pièces a été préparé en fonction des numéros de figures.
- 2 Titre de figure
Une désignation de pièce représentative, celle d'une pièce d'un ensemble important, est indiquée comme titre de figure de l'illustration.
- 3 Sous-titre
La désignation optionnelle ou les spécifications spéciales de chaque illustration sont indiquées.
- 4 Code de désignation de pièce
Obtenu en combinant le numéro de figure et les codes des illustrations inhérents à chaque pièce. Ce code permettra à votre concessionnaire Toyota de trouver les numéros de pièces corrects.
- 5 Désignation de pièce
La désignation de la pièce est indiquée pour chacun des codes de désignation de pièce.
- 6 Q'ty (quantité)
La colonne quantité indique les pièces utilisées de l'unité de code de désignation de pièce. La quantité maximum est indiquée quand la quantité utilisée diffère pour chacun des véhicules. Quand la quantité de pièces utilisées diffère ou lorsqu'elle dépasse 100 pièces, la quantité 99 est indiquée.
- 7 Numéros de pièces standard
Les pièces standard, comme les boulons, les écrous, les rondelles, etc., sont décrits dans les numéros de pièces. Pour commander ces pièces, prière de spécifier les numéros de pièces.

ABBILDUNG UND TEXTSEITENAUFBAU FÜR TEILENAMEN-KODE

Grundsätzlich finden Sie auf einer (1) Seite sowohl die Abbildung als auch den Teilnamen-Kode.
Wenn für den Text jedoch nicht genügend Platz vorhanden ist, wird er auf der nächsten Seite fortgesetzt.

- 1 Abbildungsnummer
Dieser Teilekatalog wurde nach Abbildungsnummern zusammengestellt.
- 2 Abbildungstitel
Ein stellvertretender Teilname, welcher zugleich die Bezeichnung für die Hauptbaugruppe ist, wird als Abbildungstitel der Illustration angegeben.
- 3 Untertitel
Ein zusätzlicher Name oder eine besondere Kennzeichnung werden für jede Illustration angegeben.
- 4 Teilnamen-Kode
Dies ist eine Kombination von ziffern und Abbildungskodes, die jedes Teil betreffen. Es ist ein Schlüssel für Ihren Toyota Händler, um die richtigen Teilenummern zu finden.
- 5 Teilname
Grundsätzlich wird der Teilname für alle Teilnamen-Kodes angegeben.
- 6 QTY (Menge)
Die Mengenspalte gibt die benutzte Stückzahl von Teilnamen-Kode-Einheiten an.
Wenn die benutzte Stückzahl je nach Fahrzeug Verschieden ist, wird die Höchstmenge angegeben.
Wenn die benutzte Menge 100 Stück überschreiten kann, wird als Menge 99 angegeben.
- 7 Standardteile-Nummern
Die Standardteile, wie Schrauben, Muttern, Unterlegscheiben usw., sind in den Teilenummern beschrieben. Geben Sie bei Bestellung dieser Teile die Teilenummern an.

DATA PLATE & SERIAL NUMBERS

For retrieving correct part numbers, it's indispensable to know the truck model, as well as frame number (or engine number). Customers can obtain said information in the data plate on the truck or in this user parts catalog.

PLAQUE DE DONNEES TECHNIQUES & NUMEROS DE SERIE

Pour relever correctement le numéro des pièces, il est indispensable de connaître le modèle de l'engin, ainsi que le numéro du châssis (ou du moteur). Les propriétaires peuvent trouver ladite information sur la plaque de données techniques de l'engin ou dans le présent ouvrage.

PLACA DE DATOS Y NUMEROS DE SERIE

Para obtener los números de pieza correctos, es indispensable conocer el modelo del vehículo, así como el número del bastidor (o del motor). Los clientes pueden obtener dicha información por la placa de datos del vehículo o este catálogo de piezas para el usuario.


DATENPLATTE & SERIENNUMMERN

Um die richtige Teilenummer zu ermitteln, müssen unbedingt das Fahrzeugmodell sowie die Fahrgestellnummer (oder die Motornummer) bekannt sein. Kunden können diese Angaben von der Datenplatte am Fahrzeug oder in diesem Teilekatalog für Benutzer entnehmen.

Data plate
Placa de datos
Plaque de données techniques
Datenplatte

TOYOTA	
TOWING TRACTOR	
MODEL	
SERIAL NO.	
(FRAME NO.)	
MAXIMUM	
TOWING PULL	
WEIGHT	
 TOYODA AUTOMATIC LOOM WORKS, LTD. KARIYA, JAPAN	
K8 57852-60300-71	

 Data plate
Placa de datos
Plaque de données techniques
Datenplatte

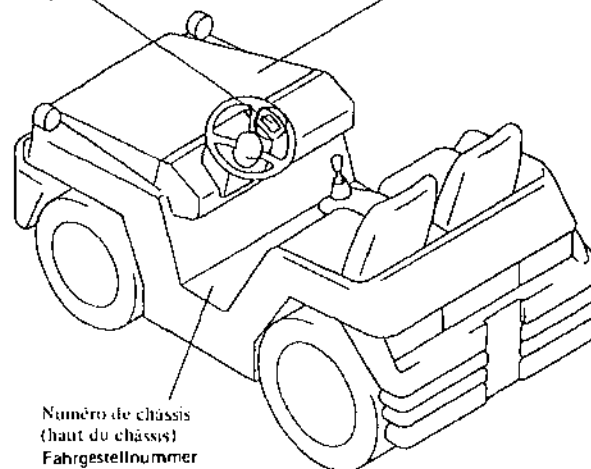

















Engine Number
(Top of the cylinder head)
Número de motor
(Parte superior de la culata)

                Numéro de moteur
(sur la culasse)
Motornummer
(Oben am Zylinderkopf)

Frame Number
(Top of the frame)
Número de bastidor
(Parte superior del bastidor)

 
 
 
 
 
 
 
 
 
 
 
 
Numéro de châssis
(haut du châssis)
Fahrgestellnummer
(Oben am Fahrgestell)

FIG. INDEX

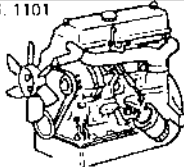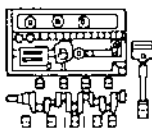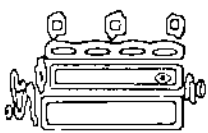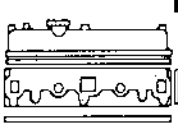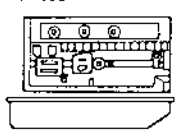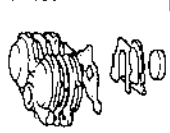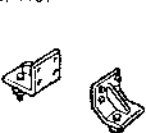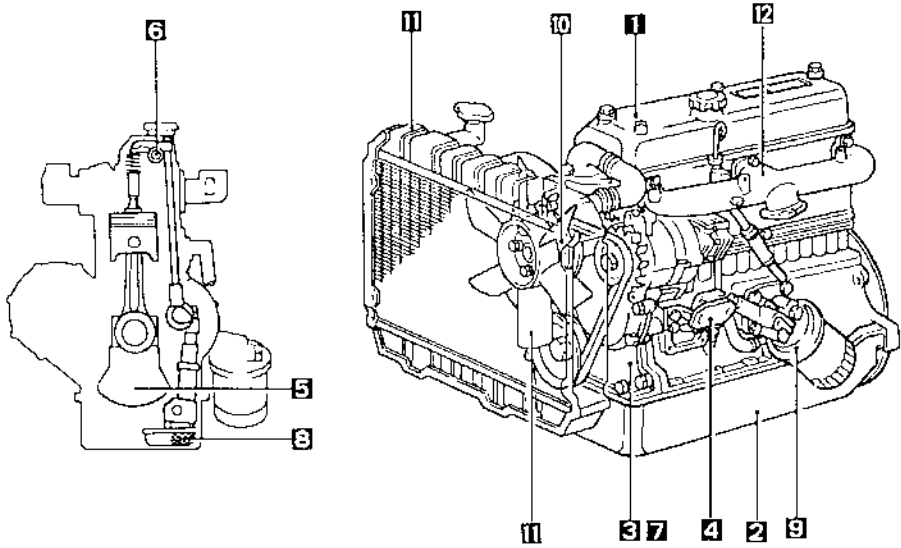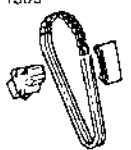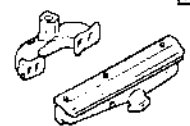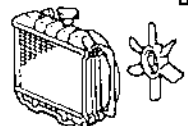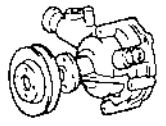FIG. 1101  Engine Assembly	FIG. 1101  Short Block Assembly	FIG. 1101  Overhaul Gasket Kit	FIG. 1104  Cylinder Head	FIG. 1105  Cylinder Block	FIG. 1106  Gear Cover & End Plate	FIG. 1107  Mounting
ENGINE GROUP (1/2)						FIG. 1201  Ventilation Hose
						FIG. 1301  Crankshaft & Piston
						FIG. 1302  Crankshaft & Valve
						FIG. 1303  Timing Chain
FIG. 1703  Air Cleaner	FIG. 1701  Manifold	FIG. 1603  Radiator & Fan	FIG. 1601  Water Pump	FIG. 1503  Oil Cooler	FIG. 1502  Oil Filter	FIG. 1501  Oil Pump

ILLUSTRATED INDEX
INDEX ILLUSTRÉ
ILLUSTRIRTES INHALTSVERZEICHNIS
INDICE ILLUSTRATO

 
 
 
 
 
 
 
 
 
 
 
 
 
 
FIG. INDEX

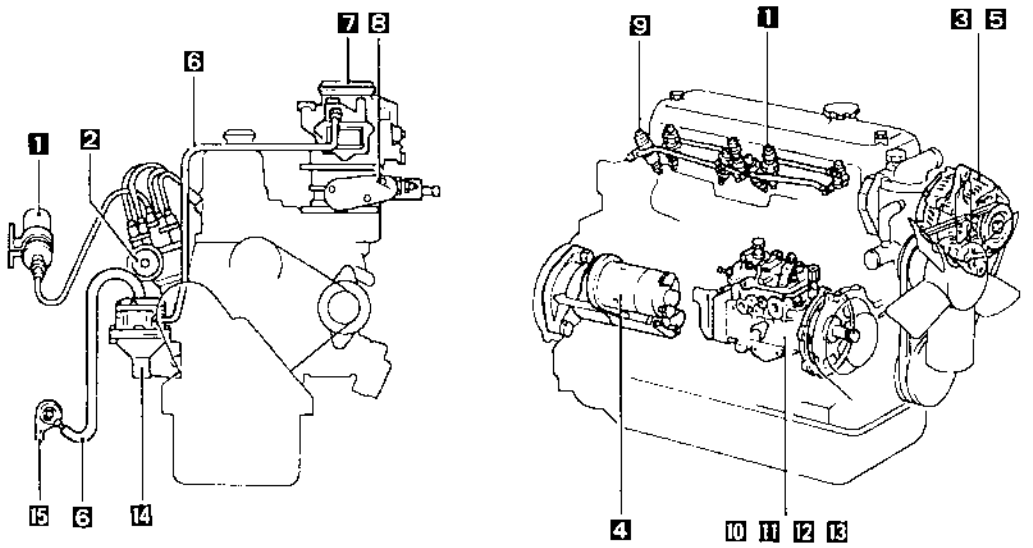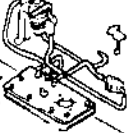FIG. 1901  Ignition Coil & Cord	1 FIG. 1902  Distributor	2 FIG. 1903  Alternator	3 FIG. 1904  Starter	4 FIG. 1905  Vacuum Pump	5 FIG. 2101  Fuel Pipe	6 FIG. 2103  Carburetor
ENGINE, FUEL GROUP (2/2) 						
						7 FIG. 2105  Air Governor
						8 FIG. 2201  Injection Nozzle
						9 FIG. 2202  Injection Pump Assembly
						10 FIG. 2203  Injection Pump Body
						11 FIG. 2205  Mechanical Governor
FIG. 2601  Accelerator Link	FIG. 2303  Fuel Tank	FIG. 2302  Fuel Filter	15 FIG. 2301  Fuel Pump	16 FIG. 2206  Fuel Feed Pump		

0000 4R3A

 
 
 
 
 
 
 
 
ILLUSTRATED INDEX
INDEX ILLUSTRÉ
ILLUSTRIRTES INHALTSVERZEICHNIS
INDICE ILLUSTRADO

FIG. INDEX

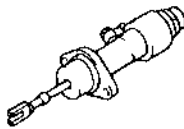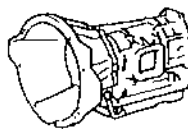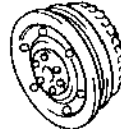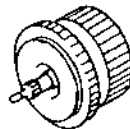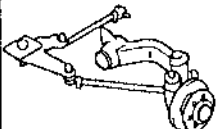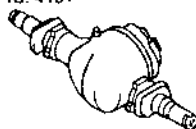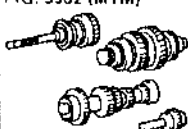FIG. 3101 (MTM)  Clutch	FIG. 3102 (MTM)  Clutch Pedal	FIG. 3103 (MTM)  Clutch Master Cylinder	FIG. 3104 (MTM)  Clutch Release Cylinder	FIG. 3201 (ATM)  Torqueconverter Housing	FIG. 3202 (ATM)  Torqueconverter	FIG. 3203 (ATM)  Torqueconverter Clutch
CHASSIS GROUP (1/2)						FIG. 3204 (ATM)  Torqueconverter Gear
						FIG. 3206 (ATM)  Control Valve
FIG. 4306  Front Axle & Tie Rod						FIG. 3212 (ATM)  Governor
FIG. 4205  Rear Axle Shaft						FIG. 3213 (ATM)  Torqueconverter Piping
FIG. 4101  Differential	FIG. 3701  Propeller Shaft & Universal Joint	FIG. 3303 (MTM)  Gear Shift Fork	FIG. 3303 (MTM)  Gear Shift Fork	FIG. 3302 (MTM)  Transmission Gear	FIG. 3301 (MTM)  Transmission Case	FIG. 3215 (ATM)  Shift Lever

ILLUSTRATED INDEX
INDEX ILLUSTRÉ
ILLUSTRIERTES INHALTSVERZEICHNIS
INDICE ILLUSTRADO

FIG. INDEX



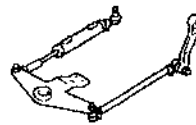
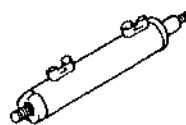
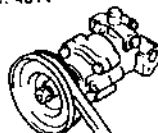
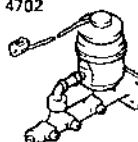
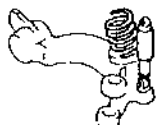


FIG. 4401  Front Wheel & Tire (Single)	FIG. 4403  Rear Wheel & Tire	FIG. 4501  Steering Wheel	FIG. 4502  Steering Post	FIG. 4507  Drag Link & Steering Piping	FIG. 4508  Steering Power Cylinder	FIG. 4511  Steering Vane Pump
CHASSIS GROUP (2/2)						FIG. 4601  Parking Brake
						FIG. 4701  Brake Pedal
						FIG. 4702  Brake Master Cylinder
						FIG. 4707  Brake Booster
		FIG. 4801  Suspension Spring	FIG. 4801  Suspension Spring	FIG. 4716  Disc Brake	FIG. 4715  Drum Brake	FIG. 4714  Brake Piping

0000485

G708-004

ILLUSTRATED INDEX
INDEX ILLUSTRÉ
ILLUSTRIRTES INHALTSVERZEICHNIS
INDICE ILLUSTRADO

FIG. INDEX

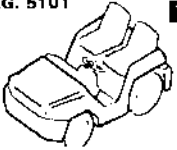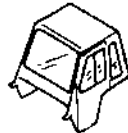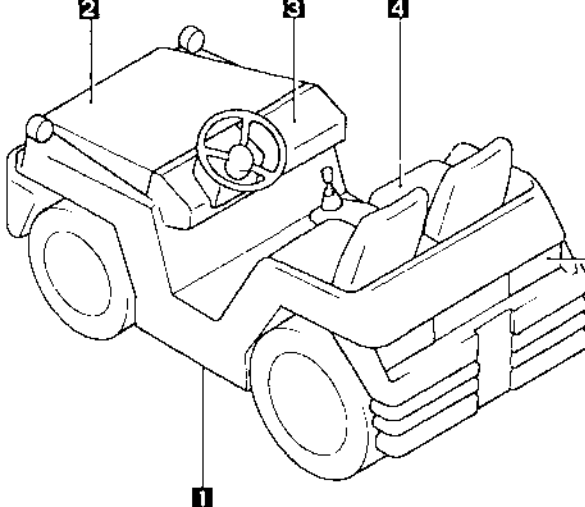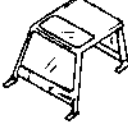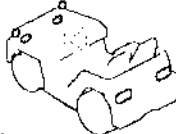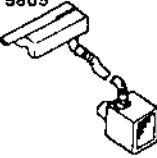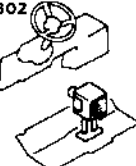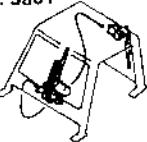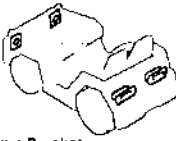         FIG. 5101  Frame & Weight	FIG. 5201  Hood & Hinge	FIG. 5301  Instrument Panel & Floor	FIG. 5308  Driver Seat	FIG. 5401  Head Guard & Accessory	FIG. 5405  Indicator Plate	FIG. 5501  Steel Cabin
BODY, ELECTRICAL GROUP 						FIG. 5502  Front Grille
						FIG. 5504  Door Lock
						FIG. 5601  Wiring & Clamp
						FIG. 5611  Lamp
FIG. 5805  Defroster	FIG. 5802  Heater	FIG. 5801  Wiper Motor & Blade	FIG. 5706  Speedometer & Speed Alarm	FIG. 5701  Meter & Switch	FIG. 5612  Lamp Bracket	

0000 481B

G708-005E

MEMO

FIG. 1101
ENGINE ASSY

 
1101

4Y

89/11

4Y


00

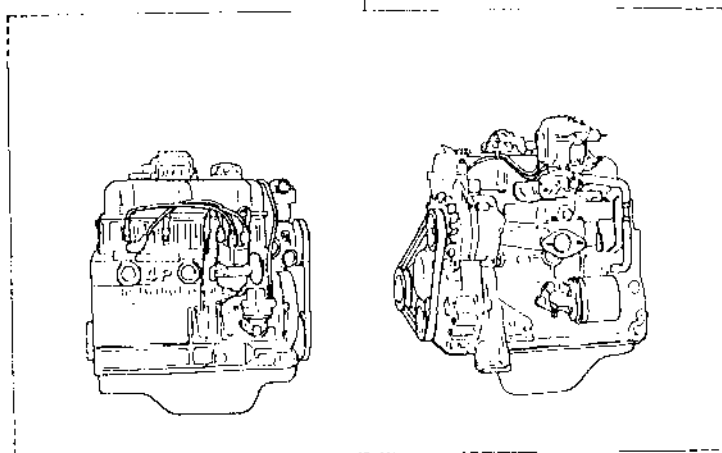

1101 002

4Y (SHORT BLOCK ASSY)

 
02

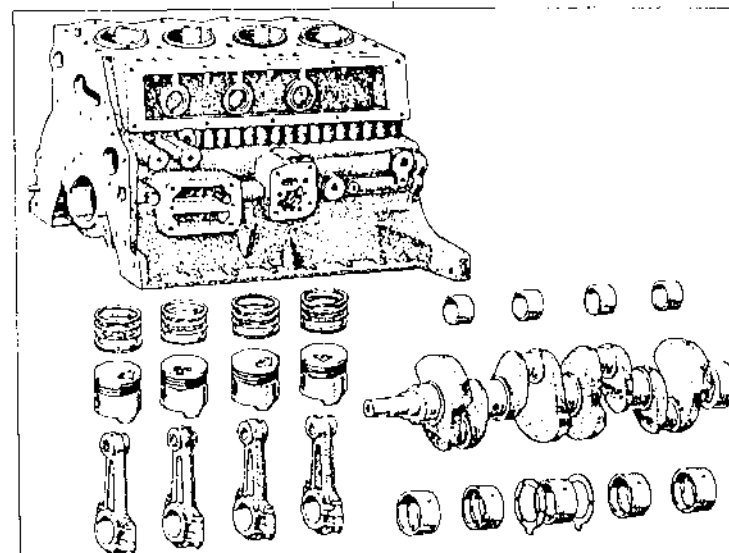

1101 006

4Y (PARTIAL ENGINE ASSY)

 01

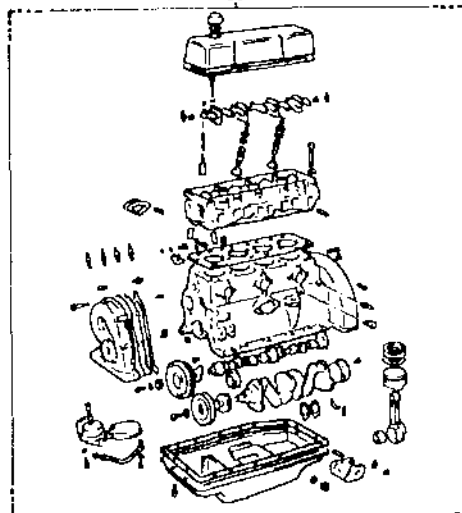

1101 004

G708-001

1101 002

1101 004 006



FIG. 1101
ENGINE ASSY

1101

4Y

89/11

  4Y

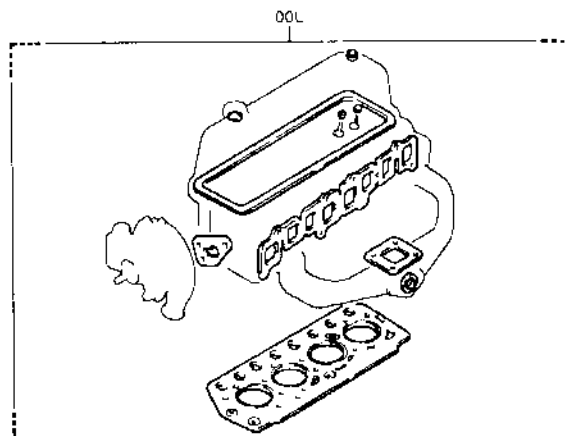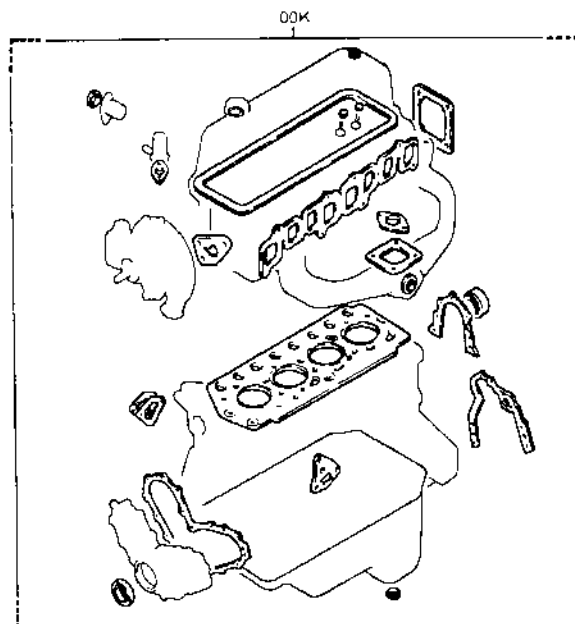

1101-067

PART NAME	PART NAME	QTY
CODE		
1101-00	ENGINE ASSY	1
1101-00K	GASKET KIT, ENGINE O/H	1
1101-00L	GASKET KIT, ENGINE VALVE GRIND	1
1101-01	ENGINE ASSY, PARTIAL	1
1101-02	BLOCK ASSY, SHORT	1

G708-002E


FIG. 1104
CYLINDER HEAD

1104

4Y

89/11

 4Y

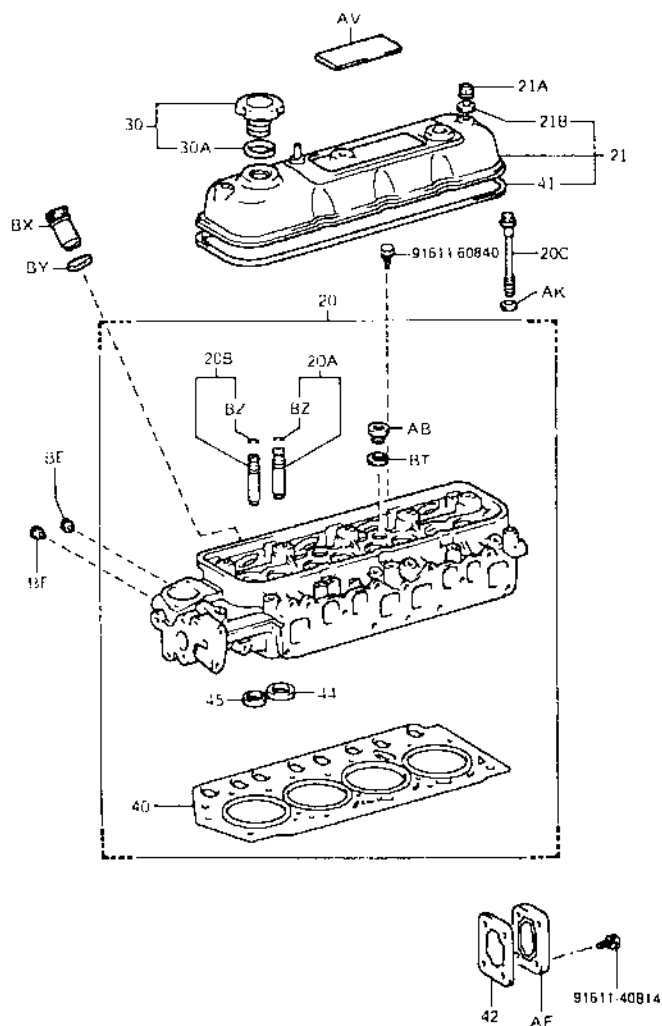

1104.051A

PART NAME	PART NAME	QTY
CODE		
1104-20	HEAD SUB-ASSY, CYLINDER	1
1104-20A	BUSHING, VALVE GUIDE INTAKE	4
1104-20B	BUSHING, VALVE GUIDE EXHAUST	4
1104-20C	BOLT (FOR CYLINDER HEAD SET)	10
1104-21	COVER SUB-ASSY, CYLINDER HEAD	1
1104-21A	NUT, CAP (FOR CYLINDER HEAD COVER)	3
1104-21B	WASHER, SEAL (FOR CYLINDER HEAD COVER)	3
1104-30	CAP SUB-ASSY, OIL FILLER	1
1104-30A	GASKET (FOR OIL FILLER CAP)	1
1104-40	GASKET, CYLINDER HEAD	1
1104-41	GASKET, CYLINDER HEAD COVER	1
1104-42	GASKET, CYLINDER HEAD REAR PLATE	1
1104-44	SEAT, VALVE INTAKE	4
1104-45	SEAT, VALVE EXHAUST	4
1104-AB	PLUG, W/HEAD TAPER SCREW	2
1104-AF	PLATE, HEAD REAR	1
1104-AK	WASHER, PLATE	10
1104-AV	PLATE, NAME	1
1104-BE	PLUG	1
1104-BF	PLUG	2
1104-BT	GASKET	2
1104-BX	TUBE, SPARK PLUG	4
1104-BY	GASKET	4
1104-BZ	RING, SHAFT SNAP	8

G708-001E



FIG. 1105
CYLINDER BLOCK

1105

4Y

90/07

  4Y

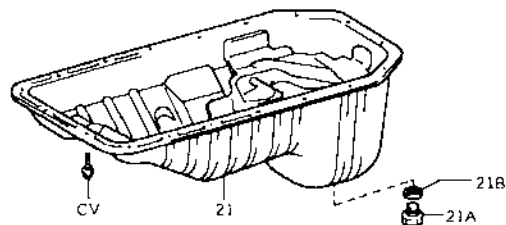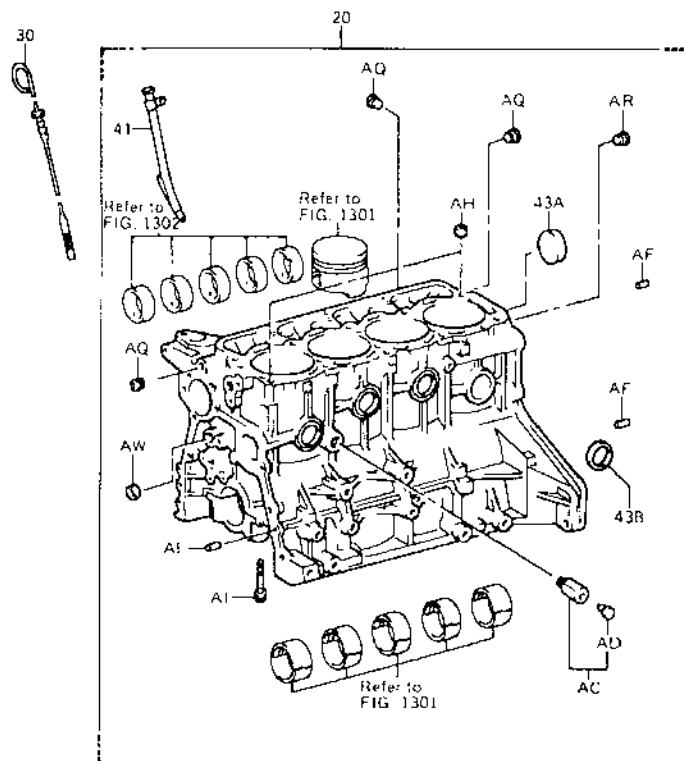

1105 DB6A

PART NAME	PART NAME	QTY
CODE		
1105-20	BLOCK SUB-ASSY, CYLINDER	1
1105-21	PAN SUB-ASSY, OIL	1
1105-21A	PLUG (FOR OIL PAN DRAIN)	1
1105-21B	GASKET (FOR OIL PAN DRAIN PLUG)	1
1105-3D	GAGE SUB-ASSY, OIL LEVEL	1
1105-41	GUIDE, OIL LEVEL GAGE	1
1105-43A	PLUG, TIGHT, NO.1	1
1105-43B	PLUG, TIGHT, NO.2	5
1105-AC	COCK SUB-ASSY, DRAIN	1
1105-AD	PLUG, DRAIN COCK	1
1105-AE	PIN, STRAIGHT	4
1105-AF	PIN, STRAIGHT	2
1105-AH	PIN, RING	2
1105-AI	BOLT	10
1105-AQ	PLUG	3
1105-AR	PLUG	1
1105-AW	PLUG	1
1105-CV	BOLT	18

G708-001E



FIG. 1106
TIMING GEAR COVER & END PLATE

1106

4Y

90/07

  4Y

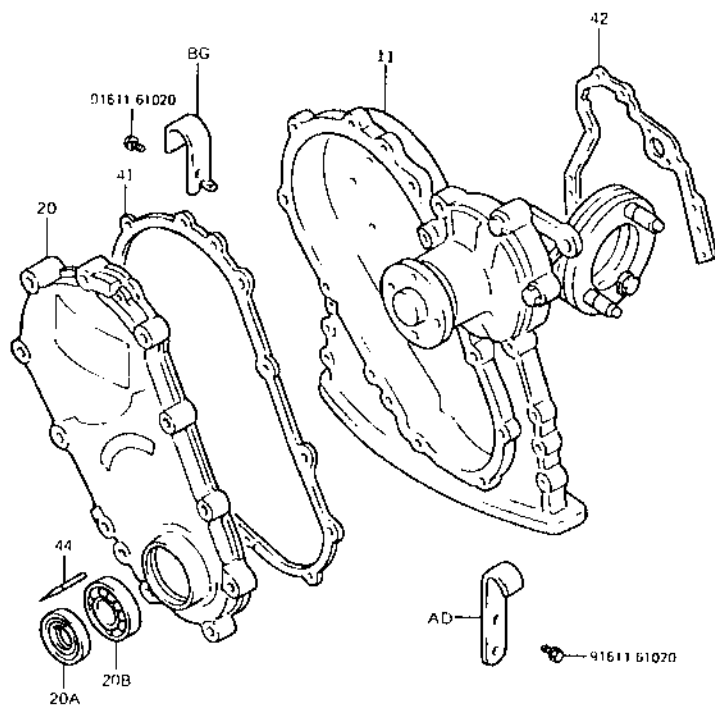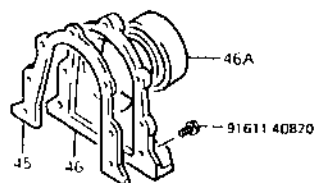

1106 090A

PART NAME	PART NAME	QTY
CODE		
1106-20	COVER SUB-ASSY, TIMING GEAR (OR CHAIN)	1
1106-20A	SEAL, OIL (FOR TIMING GEAR COVER)	1
1106-20B	BEARING (FOR TIMING GEAR COVER)	1
1106-41	GASKET, TIMING GEAR (OR CHAIN) COVER	1
1106-42	GASKET, FRONT END PLATE	1
1106-44	POINTER, TIMING	1
1106-45	GASKET, REAR OIL SEAL RETAINER	1
1106-46	RETAINER, REAR OIL SEAL	1
1106-46A	SEAL, ENGINE REAR OIL	1
1106-AD	HANGER, ENGINE	1
1106-8G	HANGER, ENGINE, NO.2	1

G708-001E



FIG. 1107
MOUNTING

1107

4Y

90/07

  4Y

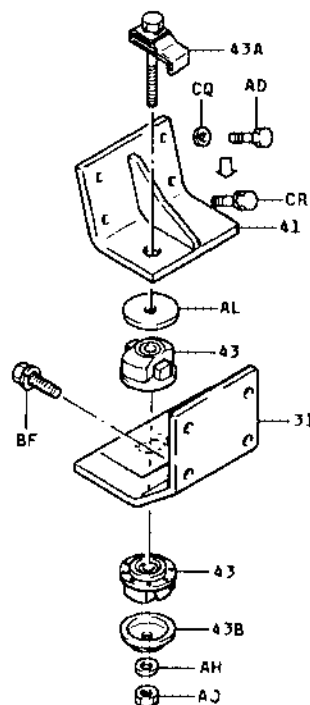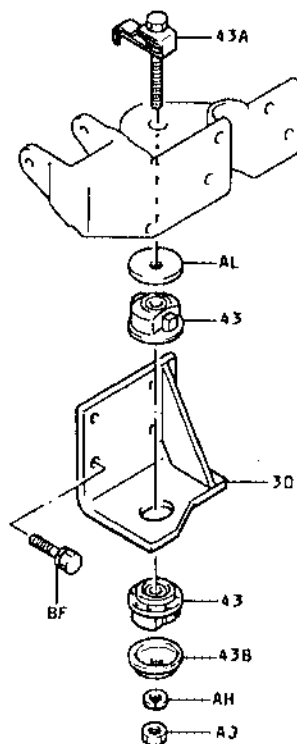

1107-130A

PART NAME	PART NAME	QTY
CODE		
1107-30	SUPPORT SUB-ASSY, ENGINE BRACKET, RH	1
1107-31	SUPPORT SUB-ASSY, ENGINE BRACKET, LH	1
1107-41	BRACKET, ENGINE MOUNTING, FR, LH	1
1107-43	INSULATOR, ENGINE MOUNTING, FR	4
1107-43A	BOLT (FOR INSULATOR)	2
1107-43B	PLATE (FOR INSULATOR)	2
1107-AD	BOLT	4
1107-AH	WASHER, SPRING	2
1107-AJ	NUT	2
1107-AL	WASHER, PLATE	2
1107-BF	BOLT, W/WASHER	8
1107-CQ	WASHER, SPRING	4

G708-001E


FIG. 1201
VENTILATION HOSE

1201

4Y

89/11

 4Y

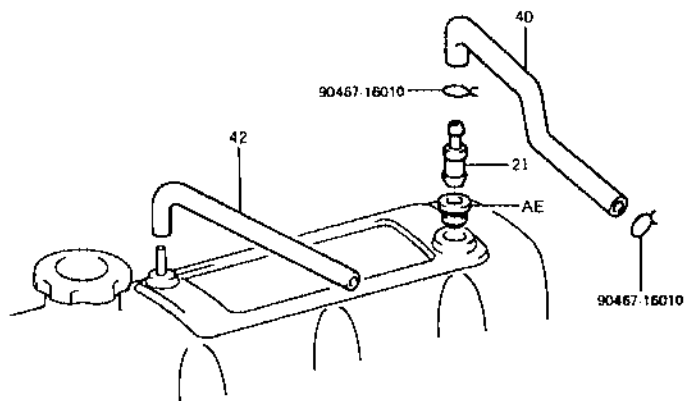

1201-042

PART NAME	PART NAME	QTY
CODE		
1201-21	VALVE SUB-ASSY, VENTILATION	1
1201-40	HOSE, VENTILATION, NO.1	1
1201-42	HOSE, VENTILATION, NO.3	1
1201-AE	GROMMET	1

G708-001E


FIG.1301
CRANKSHAFT & PISTON

1301

4Y

89/11

 4Y

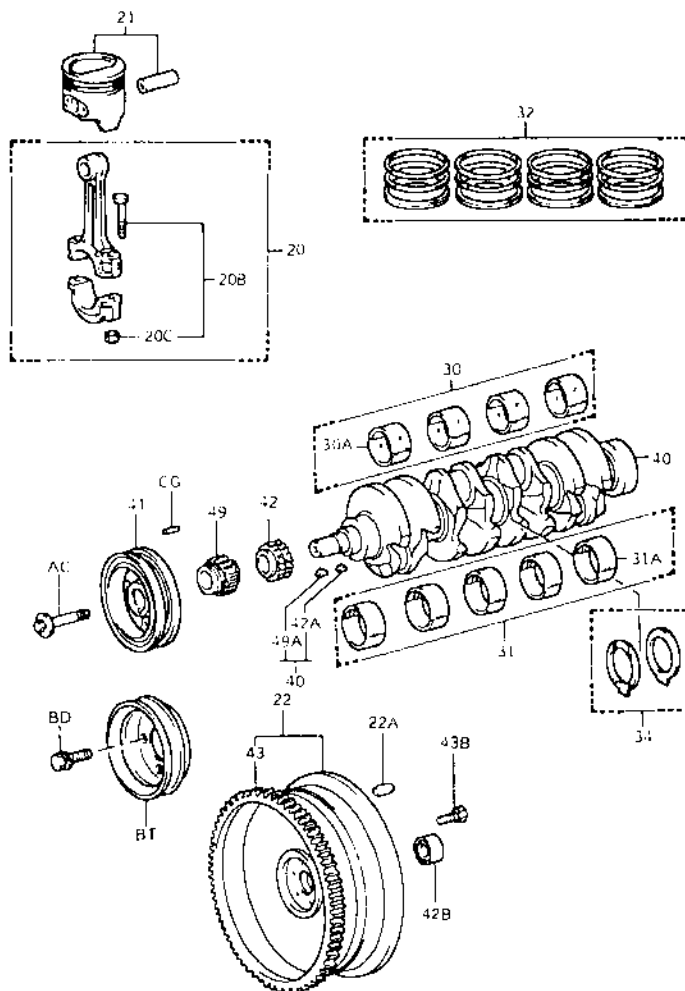

1301-094A


PART NAME	PART NAME	QTY
CODE		
1301-20	ROD SUB-ASSY, CONNECTING	4
1301-20B	BOLT, CONNECTING ROD	8
1301-20C	NUT, HEXAGON (FOR CONNECTING ROD)	8
1301-21	PISTON SUB-ASSY, W/PIN	4
1301-22	FLYWHEEL SUB-ASSY	1
1301-22A	PIN, STRAIGHT (FOR FLYWHEEL)	2
1301-30	BEARING SET, CONNECTING ROD	1
1301-30A	BEARING, CONNECTING ROD	4
1301-31	BEARING SET, CRANKSHAFT	1
1301-31A	BEARING, CRANKSHAFT	5
1301-32	RING SET, PISTON	1
1301-34	WASHER SET, CRANKSHAFT THRUST	1
1301-40	CRANKSHAFT	1
1301-41	PULLEY, CRANKSHAFT	1
1301-41A	KEY, CRANKSHAFT (FOR PULLEY SET)	1
1301-42	GEAR OR SPROCKET, CRANKSHAFT TIMING	1
1301-42A	KEY, CRANKSHAFT (FOR TIMING GEAR SET)	1
1301-42B	BEARING (FOR INPUT SHAFT)	1
1301-43	GEAR, FLYWHEEL RING	1
1301-43B	BOLT, FLYWHEEL SET	6
1301-49	SPROCKET, CRANKSHAFT TIMING	1
1301-49A	KEY, CRANKSHAFT (FOR SPROCKET SET)	1
1301-AC	BOLT	1
1301-BD	BOLT	4
1301-BT	PULLEY, CRANKSHAFT NO.2	1
1301-CG	PIN, STRAIGHT	1

G708-001E

1302

89/11

PART NAME	PART NAME	QTY
CODE		
1302-20	SHAFT SUB-ASSY, VALVE ROCKER, NO.1	1
1302-22	ARM SUB-ASSY, VALVE ROCKER, NO.1	4
1302-22B	SPRING, COMPRESSION (FOR ROCKER ARM)	4
1302-23	ARM SUB-ASSY, VALVE ROCKER, NO.2	4
1302-30	BEARING SET, CAMSHAFT	1
1302-40	CAMSHAFT	1
1302-40B	PLUG, EXPANSION (FOR CAMSHAFT)	1
1302-41	GEAR OR SPROCKET, CAMSHAFT TIMING	1
1302-42	ROD, VALVE PUSH	8
1302-43	IVALVE, INTAKE	4
1302-43A	SEAL OR RING, O (FOR VALVE STEM OIL)	8
1302-44	IVALVE, EXHAUST	4
1302-45	LIFTER, VALVE	8
1302-46	SPRING, VALVE COMPRESSION	8
1302-47	RETAINER, VALVE SPRING	8
1302-47A	LOCK, VALVE SPRING RETAINER	10
1302-49	PLATE, CAMSHAFT THRUST	1
1302-AC	KEY	1
1302-AH	WASHER	1
1302-AI	BOLT, STUD	2
1302-AM	BOLT, STUD	3
1302-AN	WASHER	8
1302-CN	NUT, W/WASHER	2

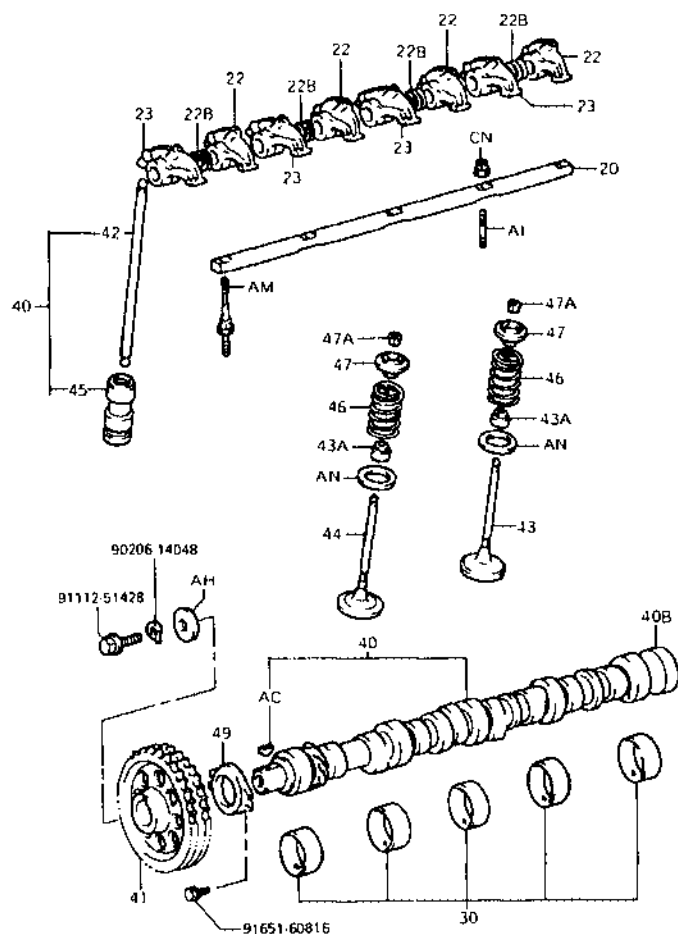 

G708-001E


FIG. 1303
TIMING CHAIN

1303

4Y

89/11

 4Y

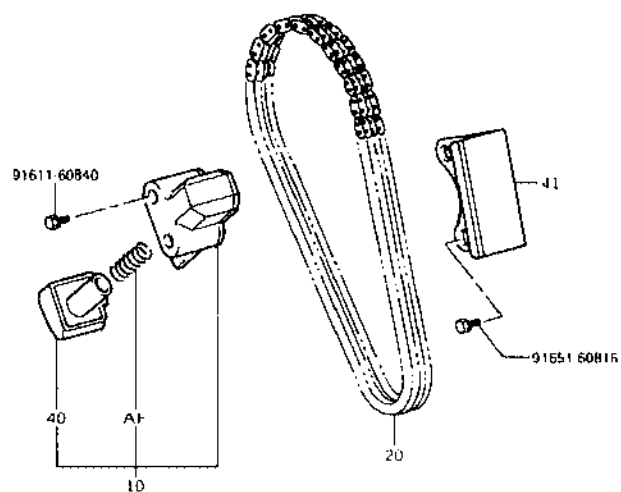

1303 004

PART NAME CODE	PART NAME	QTY
1303-10	TENSIONER ASSY, CHAIN	1
1303-20	CHAIN SUB-ASSY	1
1303-40	PLUNGER, CHAIN TENSIONER	1
1303-41	DUMPER, CHAIN VIBRATION, NO.1	1
1303-AF	SPRING, COMPRESSION	1

G708-001E


FIG. 1501
OIL PUMP

1501

4Y

90/07

 4Y

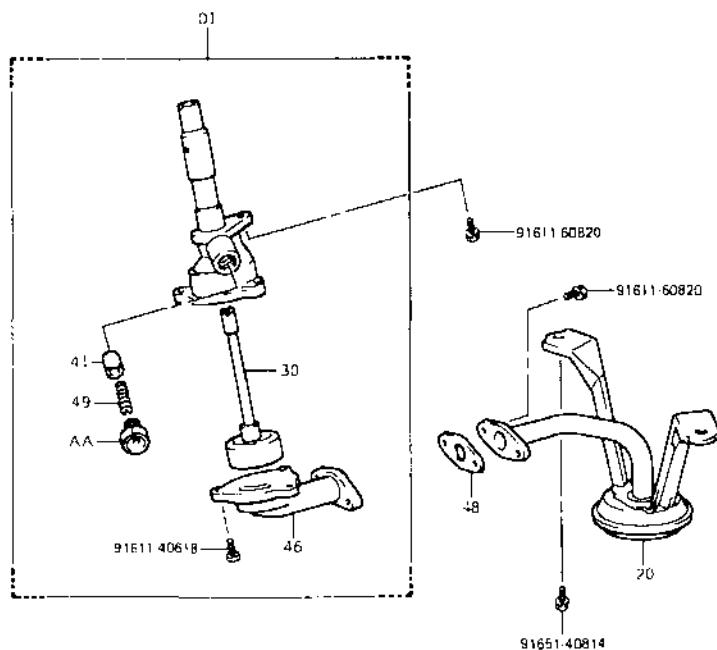

1501-031

PART NAME	PART NAME	QTY
CODE		
1501-01	PUMP ASSY, OIL	1
1501-20	STRAINER SUB-ASSY, OIL	1
1501-30	ROTOR SET, OIL PUMP	1
1501-41	NUT, OIL PUMP RELIEF	1
1501-46	COVER, OIL PUMP	1
1501-48	VALVE, OIL PUMP RELIEF	1
1501-49	WASHER, OIL PUMP RELIEF	1
1501-AA	PLUG, OIL PUMP RELIEF VALVE	1

G708-001E


FIG. 1502
OIL FILTER

1502

4Y

89/11

 4Y

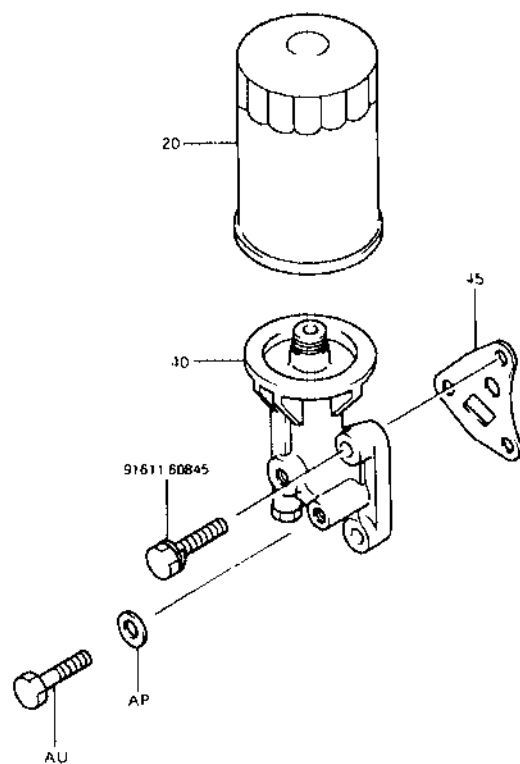

1502 065

PART NAME	PART NAME	QTY
CODE		
1502-20	ELEMENT SUB-ASSY, OIL FILTER	1
1502-40	BRACKET, OIL FILTER	1
1502-45	GASKET, OIL FILTER	1
1502-AP	GASKET	1
1502-AU	PLUG	1

G708-001E


FIG. 1601
WATER PUMP

1601

4Y

89/11

 4Y

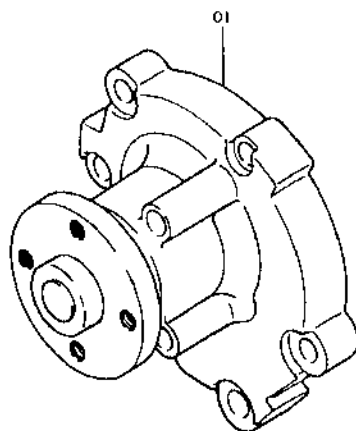

1601 055

PART NAME CODE	PART NAME	QTY
1601-01	PUMP ASSY, WATER	1
1601-46	PULLEY, FAN	1

G708-001E


FIG. 1603
RADIATOR & WATER OUTLET

1603

4Y

89/11

 4Y

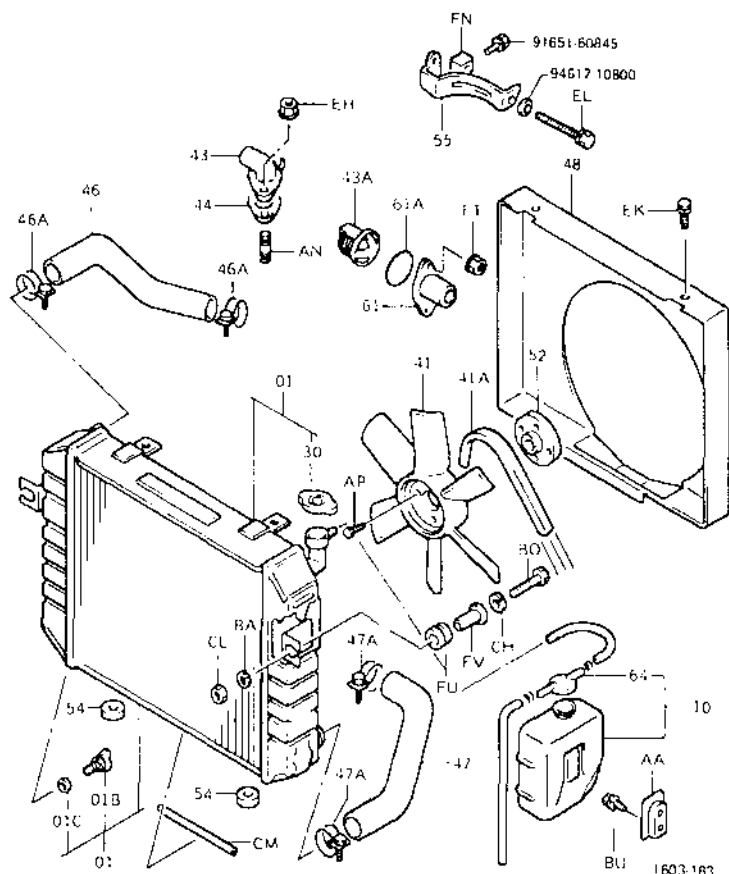

PART NAME	PART NAME	QTY
CODE		
1603-01	RADIATOR ASSY	1
1603-01B	PLUG, DRAIN COCK	1
1603-01C	PACKING (FOR RADIATOR DRAIN COCK)	1
1603-10	TANK ASSY, RADIATOR RESERVE	1
1603-30	CAP SUB-ASSY, RADIATOR	1
1603-41	FAN	1
1603-41A	BELT, V	1
1603-43	OUTLET, WATER	1
1603-43A	THERMOSTAT	1
1603-44	GASKET, WATER OUTLET	1
1603-46	HOSE, RADIATOR, INLET	1
1603-46A	CLAMP, HOSE (FOR RADIATOR INLET)	2
1603-47	HOSE, RADIATOR, OUTLET	1
1603-47A	CLAMP, HOSE (FOR RADIATOR OUTLET)	2
1603-48	SHROUD, FAN, NO.1	1
1603-52	SPACER, FAN PULLEY	1
1603-54	RUBBER, MOUNTING (FOR RADIATOR)	2
1603-55	BAR, FAN BELT ADJUSTING	1
1603-61	INLET, WATER	1
1603-61A	GASKET (FOR WATER INLET)	1
1603-64	CAP & HOSE SET	1
1603-AA	BRACKET, RESERVE TANK	1
1603-AN	BOLT, STUD	2
1603-AP	BOLT, FAN	4
1603-BA	WASHER, PLATE	2
1603-BQ	BOLT	2
1603-BU	BOLT	2
1603-CH	WASHER, SPRING	2
1603-CL	NUT	2
1603-CM	INSULATOR, EDGE	1
1603-EH	NUT	2
1603-EK	BOLT	2
1603-EL	BOLT	1
1603-FF	CLAMP	2
1603-FN	SLIDER	1
1603-FT	NUT	2
1603-FU	INSULATOR	2
1603-FV	SPACER	2

G708-001E


FIG. 1701
MANIFOLD

1701

4Y

89/11

 4Y

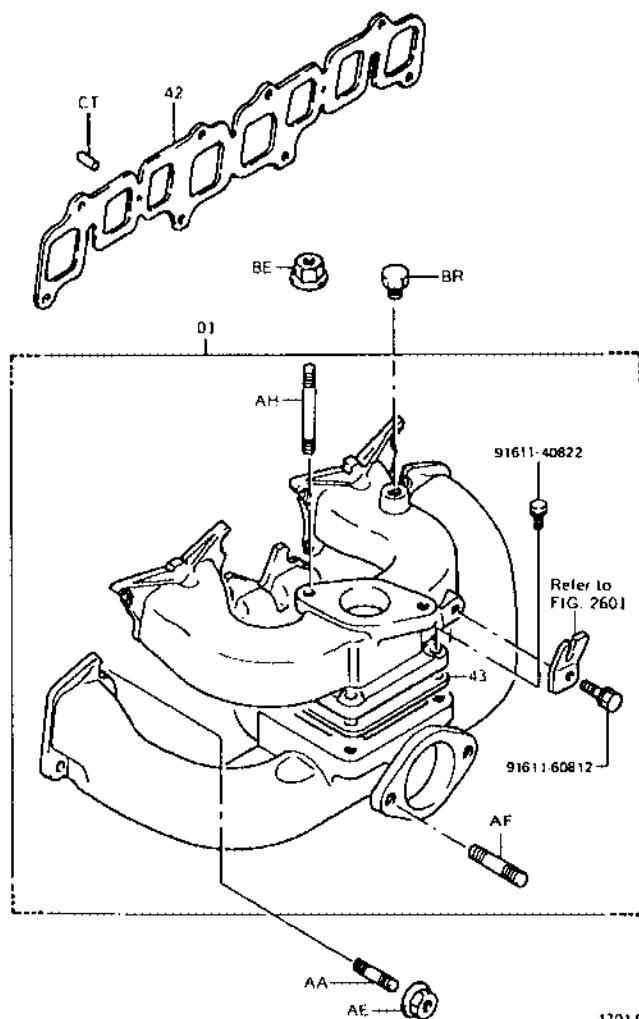

1701-060

PART NAME	PART NAME	QTY
CODE		
1701-01	MANIFOLD ASSY	1
1701-42	GASKET, MANIFOLD TO CYLINDER HEAD	1
1701-43	GASKET, INTAKE TO EXHAUST MANIFOLD	1
1701-AA	BOLT, STUD	8
1701-AE	NUT	8
1701-AF	BOLT, STUD	2
1701-AH	BOLT, STUD	2
1701-BE	NUT	2
1701-BR	PLUG	1
1701-CT	PIN, STRAIGHT	2

G708-001E


FIG. 1702
EXHAUST PIPE & MUFFLER

1702

4Y

90/07

 4Y

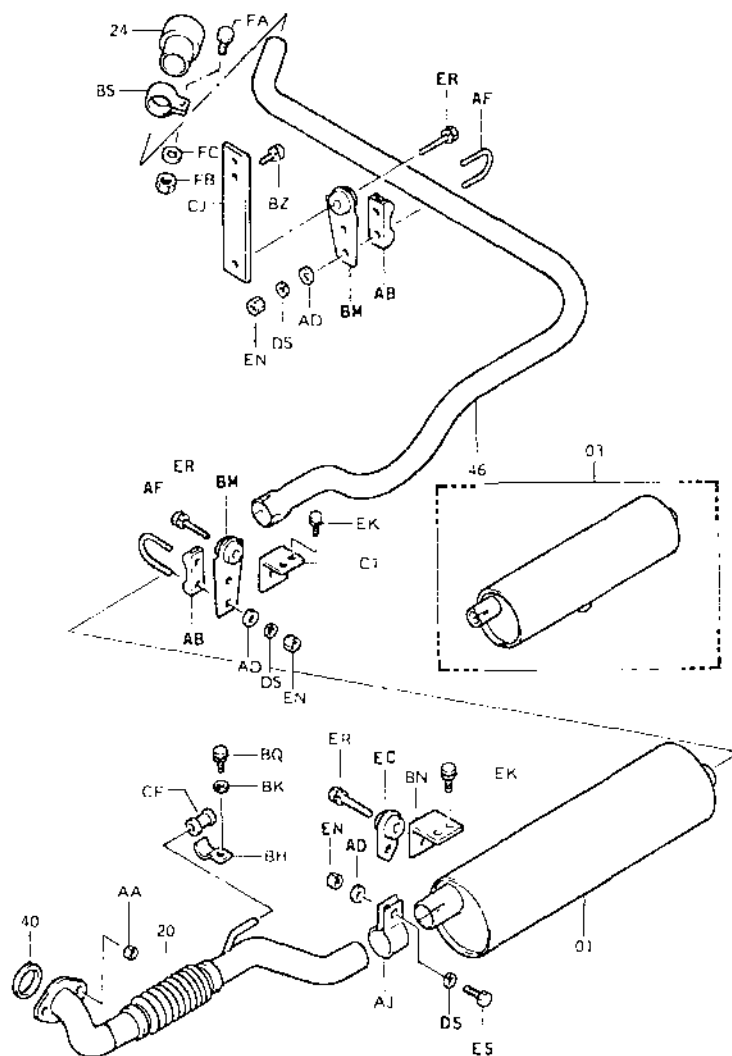

PART NAME	PART NAME	QTY
CODE		
1702-01	MUFFLER ASSY	1
1702-03	MUFFLER ASSY, CYCLONE	1
1702-20	PIPE SUB-ASSY, EXHAUST, NO.1	1
1702-24	ARRESTER SUB-ASSY, FRAME	1
1702-40	GASKET, EXHAUST PIPE	1
1702-46	PIPE, TAIL	1
1702-AA	NUT, HEXAGON	2
1702-AB	BRACKET, CLAMP	2
1702-AD	WASHER, PLATE	5
1702-AF	BOLT, U	2
1702-AJ	CLAMP, PIPE	1
1702-BH	CLAMP SUB-ASSY, MUFFLER	1
1702-BK	WASHER, PLATE	1
1702-BM	CUSHION, EXHAUST PIPE	2
1702-BN	BRACKET, MUFFLER	1
1702-BQ	BOLT, W/WASHER	1
1702-BS	CLAMP, FRAME ARRESTER	1
1702-BZ	BOLT	2
1702-CF	INSULATOR	1
1702-CJ	BRACKET, TAIL PIPE	1
1702-CT	BRACKET	1
1702-DS	WASHER, SPRING	5
1702-EC	CUSHION	1
1702-EK	BOLT	4
1702-EN	NUT	5
1702-ER	BOLT	3
1702-ES	BOLT	1
1702-FA	BOLT	1
1702-FB	NUT	1
1702-FC	WASHER, SPRING	1

1702-212B



G708-001E

1703

89/11

PART NAME	PART NAME	QTY
CODE		
1703-02	CLEANER ASSY, CYCLONE AIR	1
1703-20B	ELEMENT SUB-ASSY, CYCLONE AIR CLEANER	1
1703-20C	ELEMENT SUB-ASSY, CYCLONE AIR CLEANER, INNER	1
1703-20D	ELEMENT SUB-ASSY, CYCLONE AIR CLEANER, OUTER	1
1703-23	CASE SUB-ASSY, AIR CLEANER	1
1703-24	CAP SUB-ASSY, AIR CLEANER	1
1703-26	CUP, DUST	1
1703-30	SWITCH ASSY, VACUUM	1
1703-42	CONNECTOR, AIR CLEANER	1
1703-44	HOSE, AIR CLEANER, OUTLET NO.1	1
1703-44A	CLAMP (FOR AIR CLEANER OUTLET NO.1 HOSE)	1
1703-AB	PLATE, CAUTION	1
1703-AC	BAND SUB-ASSY	1
1703-AP	BOLT, STUD	2
1703-AW	BOLT	4
1703-BC	BOLT	2
1703-BD	NUT	2
1703-BQ	NUT, WING	1
1703-EB	SEAL	1
1703-EQ	NUT, WING	1

  G708-001E

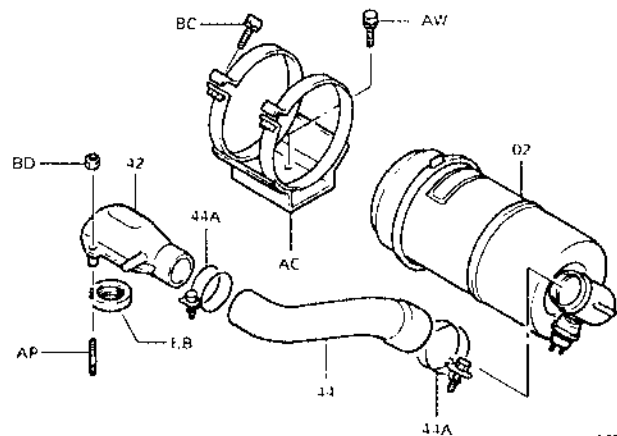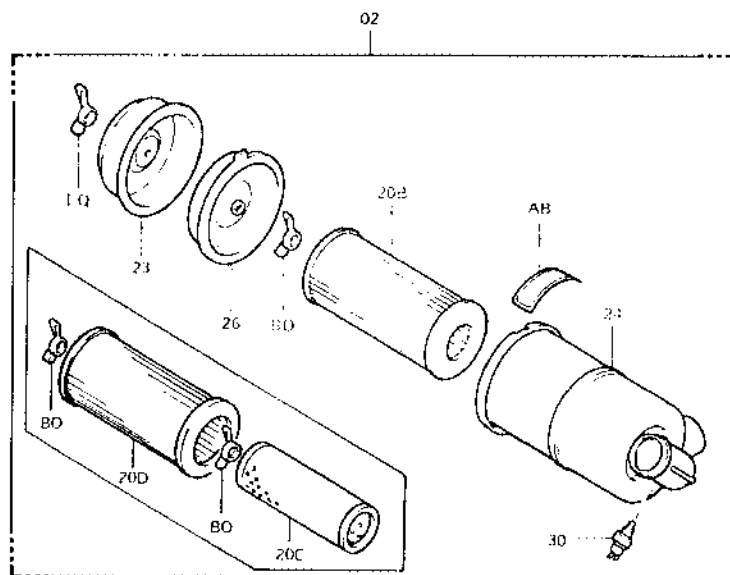

1703 29C


FIG. 1901
IGNITION COIL & SPARK PLUG

1901

4Y

90/07

 4Y

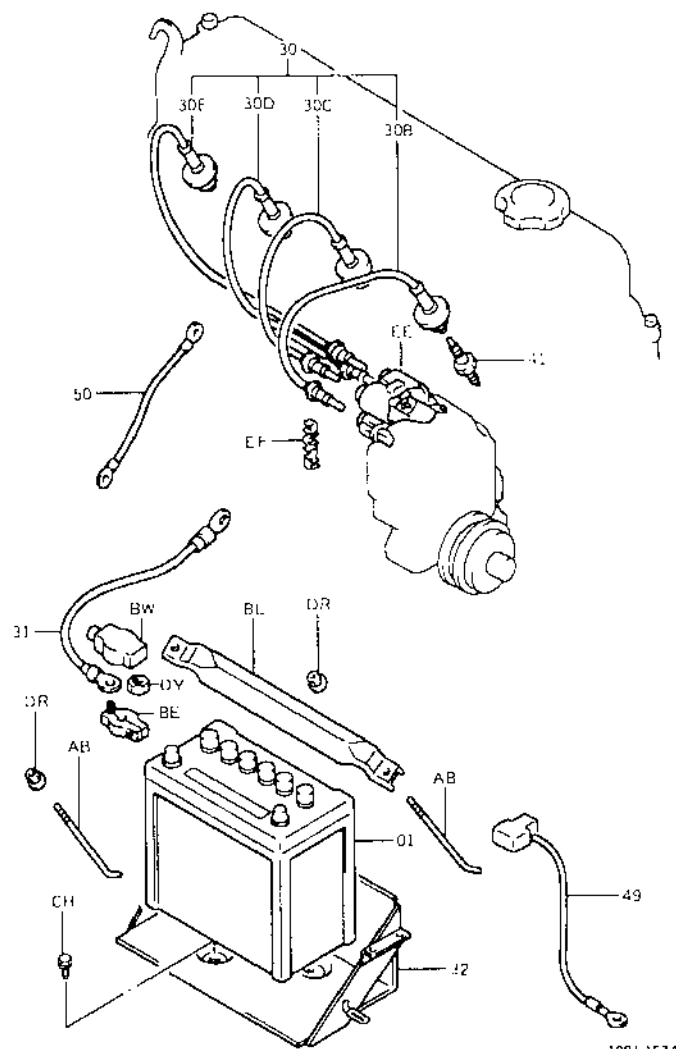

PART NAME	PART NAME	QTY
CODE		
1901-01	BATTERY ASSY	1
1901-30	CORD SET, COIL & PLUG, W/RESISTIVE	1
1901-30B	CORD, SPARK PLUG RESISTIVE, NO.1	1
1901-30C	CORD, SPARK PLUG RESISTIVE, NO.2	1
1901-30D	CORD, SPARK PLUG RESISTIVE, NO.3	1
1901-30E	CORD, SPARK PLUG RESISTIVE, NO.4	1
1901-31	CABLE SUB-ASSY, BATTERY TO STARTER	1
1901-32	CASE SUB-ASSY, BATTERY	1
1901-41	PLUG, SPARK	4
1901-49	CABLE, BATTERY EARTH	1
1901-50	STRAP, BOND	1
1901-AB	BOLT	2
1901-BE	TERMINAL	1
1901-BL	STOPPER, BATTERY	1
1901-BW	COVER, CONNECTOR	1
1901-CH	BOLT	3
1901-DR	NUT	2
1901-DY	NUT	1
1901-EE	HOLDER, CORD	1
1901-EF	CLAMP, CORD	1

G708-001E


FIG. 1902
DISTRIBUTOR

1902

4Y

89/11

 4Y

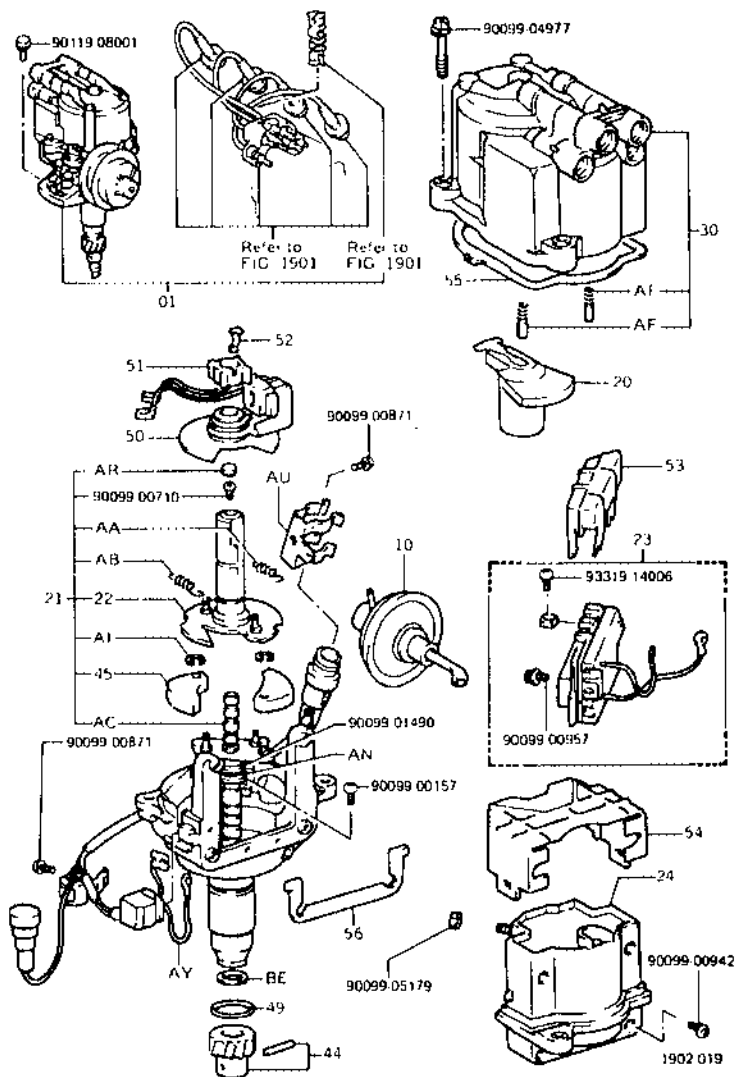

PART NAME	PART NAME	QTY
CODE		
1902-01	DISTRIBUTOR ASSY	1
1902-10	ADVANCER ASSY, VACUUM	1
1902-20	ROTOR SUB-ASSY, DISTRIBUTOR	1
1902-21	SHAFT AND GOVERNOR SUB-ASSY	1
1902-22	ROTOR SUB-ASSY, SIGNAL	1
1902-23	IGNITER ASSY	1
1902-24	COIL, IGNITION	1
1902-30	CAP SUB-ASSY, DISTRIBUTOR	1
1902-44	GEAR, SPIRAL	1
1902-45	WEIGHT, GOVERNOR	2
1902-49	RING, DISTRIBUTOR HOUSING 0	1
1902-50	GENERATOR, SIGNAL	1
1902-51	ROTOR, SIGNAL	1
1902-52	SPRING, ROTOR SET	1
1902-53	COVER, DUST PROOF, NO.1	1
1902-54	COVER, DUST PROOF, NO.2	1
1902-55	PACKING, DUST PROOF, NO.1	1
1902-56	PACKING, DUST PROOF, NO.2	1
1902-AA	SPRING, GOVERNOR, A	1
1902-AB	SPRING, GOVERNOR, B	1
1902-AC	SHAFT & PLATE, GOVERNOR	1
1902-AF	PIECE, CAP CENTER	2
1902-AI	RING, SNAP	2
1902-AN	WASHER	2
1902-AR	CAP	1
1902-AU	CLAMP, CORD	1
1902-AY	LEAD, BREAKER	1
1902-BE	WASHER	1

G708-001E


FIG. 1903
ALTERNATOR

1903

4Y

90/07

 4Y

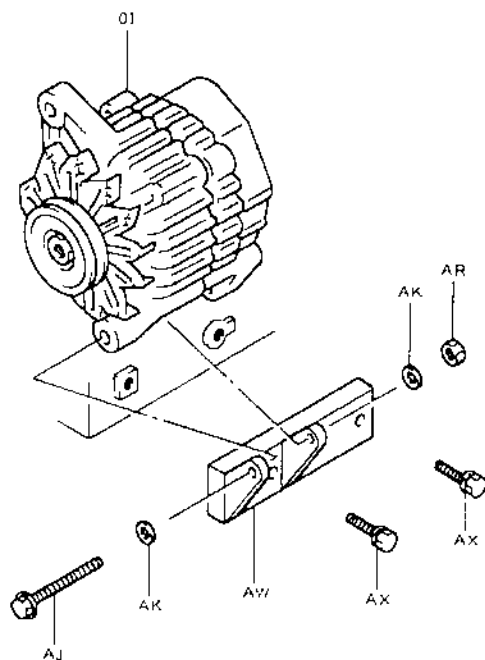

PART NAME	PART NAME	QTY
CODE		
1903-01	ALTERNATOR ASSY	1
1903-AJ	BOLT, HEXAGON	1
1903-AK	WASHER, PLATE	1
1903-AR	NUT	1
1903-AW	BRACKET, ALTERNATOR	1
1903-AX	BOLT	2

1903 077

G708-001E


FIG. 1904
STARTER

1904

4Y

89/11

 4Y

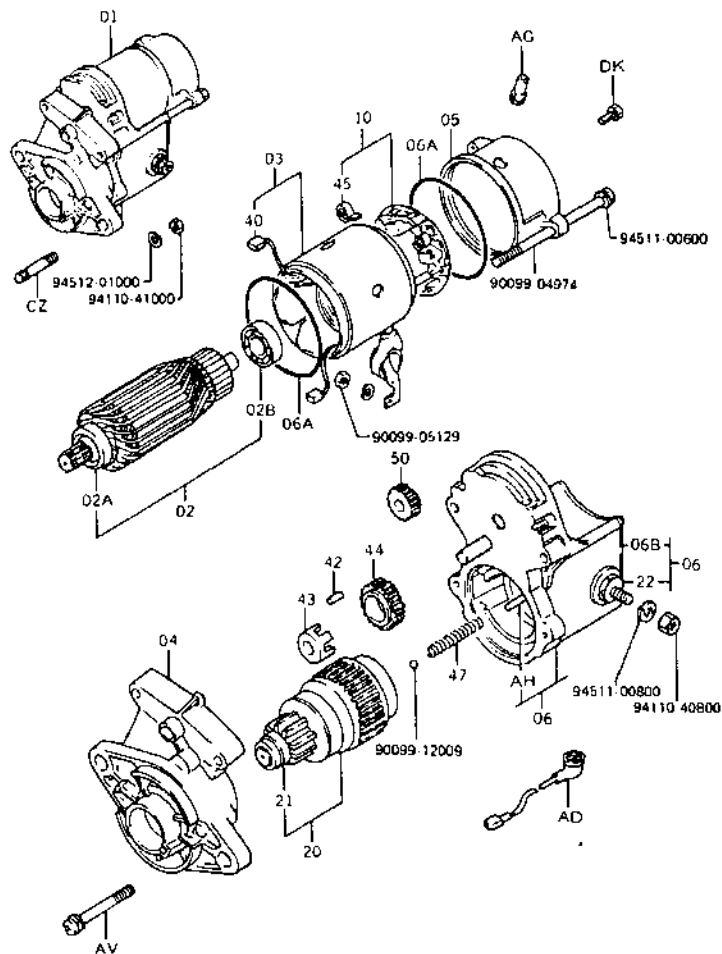

1904 057


PART NAME	PART NAME	QTY
CODE		
1904-01	STARTER ASSY	1
1904-02	ARMATURE ASSY, STARTER	1
1904-02A	BEARING, ARMATURE, NO.1	1
1904-02B	BEARING, ARMATURE, NO.2	1
1904-03	YOKE ASSY, STARTER	1
1904-04	HOUSING ASSY, STARTER DRIVE	1
1904-05	FRAME ASSY, COMMUTATOR END	1
1904-06	SWITCH ASSY, MAGNET	1
1904-06A	PACKING, RUBBER (FOR STARTER YOKE)	2
1904-06B	PACKING (FOR MAGNET SWITCH END COVER)	1
1904-10	HOLDER ASSY, STARTER BRUSH	1
1904-20	CLUTCH SUB-ASSY, STARTER	1
1904-21	PINION SUB-ASSY, STARTER	1
1904-22	CHIP SUB-ASSY, CONTACT	1
1904-40	BRUSH, STARTER	1
1904-42	ROLLER, STARTER IDLE GEAR CLUTCH	5
1904-43	RETAINER, STARTER IDLE GEAR	1
1904-44	GEAR, STARTER IDLE	1
1904-45	SPRING, STARTER BRUSH	4
1904-47	SPRING, STARTER MAGNET SWITCH RETURN	1
1904-50	GEAR, STARTER PINION	1
1904-AD	WIRE, LEAD	1
1904-AG	COVER, END FRAME	1
1904-AH	PLUNGER SUB-ASSY, CONTACTOR	1
1904-AV	SCREW, W/WASHER	2
1904-CZ	BOLT, STUD	2
1904-DK	SCREW	2

G708-001E

2101

89/11

PART NAME	PART NAME	QTY
CODE		
2101-20	PIPE SUB-ASSY, CARBURETOR FUEL	1
2101-41	HOSE, DISTRIBUTOR VACUUM	1
2101-AB	CLAMP	4
2101-AC	CLAMP, FUEL PIPE	1
2101-AG	BOLT, UNION	1
2101-AH	GASKET	2
2101-AQ	NUT, HEXAGON	1

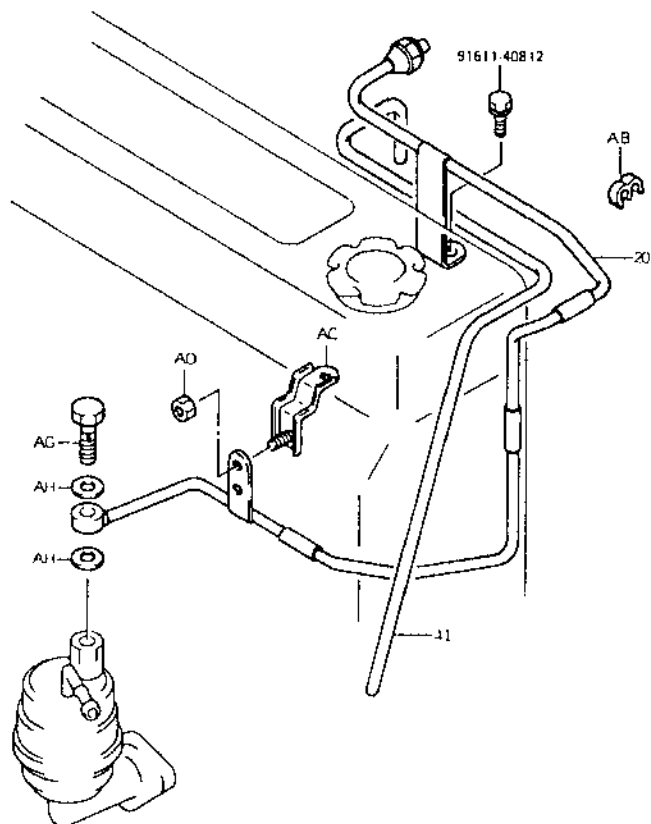 

G708-001E


FIG. 2103
CARBURETOR

2103

4Y


90/07

 4Y

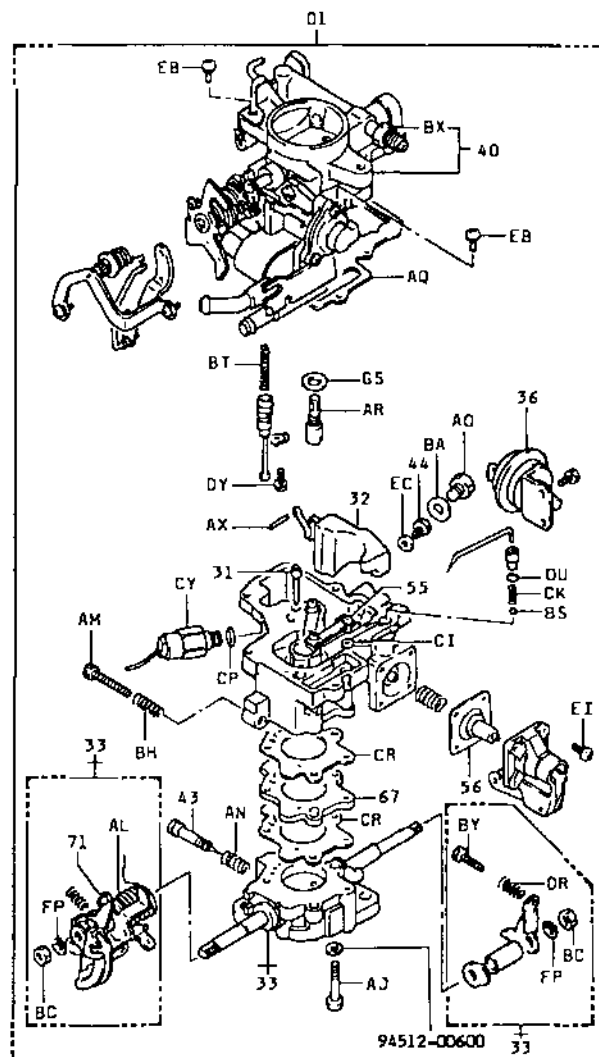


2103-045C

 4Y

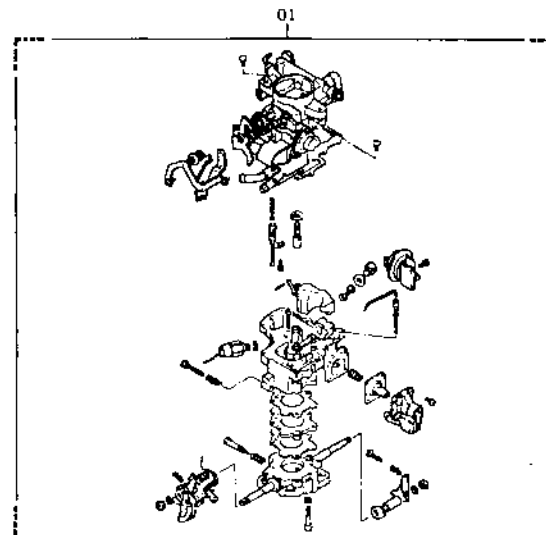

01L (INCL. ●)

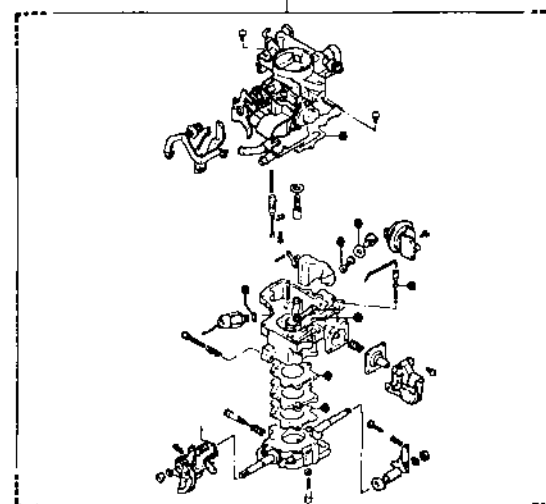 

2103-047

G708-001

FIG. 2103
CARBURETOR

2103

4Y

90/07

PART NAME CODE	PART NAME	QTY
2103-01	CARBURETOR ASSY	1
2103-01L	GASKET KIT, CARBURETOR	1
2103-31	JET SUB-ASSY, SLOW	1
2103-32	FLOAT SUB-ASSY	1
2103-33	FLANGE SUB-ASSY	1
2103-36	DIAPHRAGM SUB-ASSY	1
2103-40	HORN, AIR	1
2103-43	SCREW, IDLE ADJUSTING	1
2103-44	JET, 1ST MAIN	1
2103-55	VALVE, THERMOSTATIC	1
2103-56	DIAPHRAGM	1
2103-67	INSULATOR	1
2103-71	LEVER SUB-ASSY, 1ST IDLE	1
2103-AJ	SCREW, SET	2
2103-AM	SCREW, THROTTLE ADJUSTING	1
2103-AN	SPRING, IDLE ADJUSTING SCREW	1
2103-AD	PLUG, MAIN PASSAGE	1
2103-AQ	GASKET, AIR HORN	1
2103-AR	VALVE SUB-ASSY, NEEDLE	1
2103-AX	PIN, FLOAT LEVER	1
2103-BA	GASKET, PASSAGE PLUG	1
2103-BC	INUT, THROTTLE LEVER SET	2
2103-BH	SPRING, IDLE ADJUSTING	1
2103-B5	BALL, STEEL	1
2103-BT	SPRING	1
2103-BU	CLAMP	2
2103-BX	UNION	1
2103-BY	SCREW	1
2103-CJ	GASKET	1
2103-CK	SPRING, PUMP	1
2103-CP	GASKET	1
2103-CR	GASKET	2
2103-CY	VALVE SUB-ASSY, SOLENOID	1
2103-DR	SPRING	1
2103-DU	RING, O	1
2103-DY	SCREW	1
2103-EB	SCREW	4
2103-EC	GASKET, MAIN JET	1
2103-EI	SCREW	4
2103-FP	WASHER, LOCK	2
2103-GS	GASKET, NEEDLE VALVE SEAT	1

G708-002E

FIG-2105
AIR GOVERNOR

 
 
2105

4Y

90/07

4Y

(CONVERTIBLE)

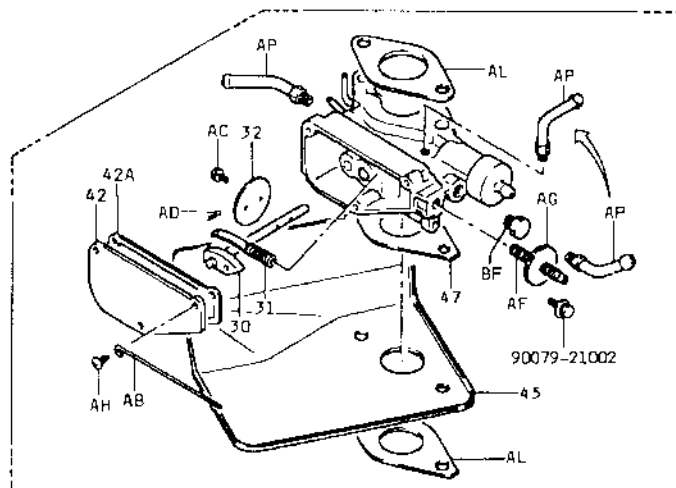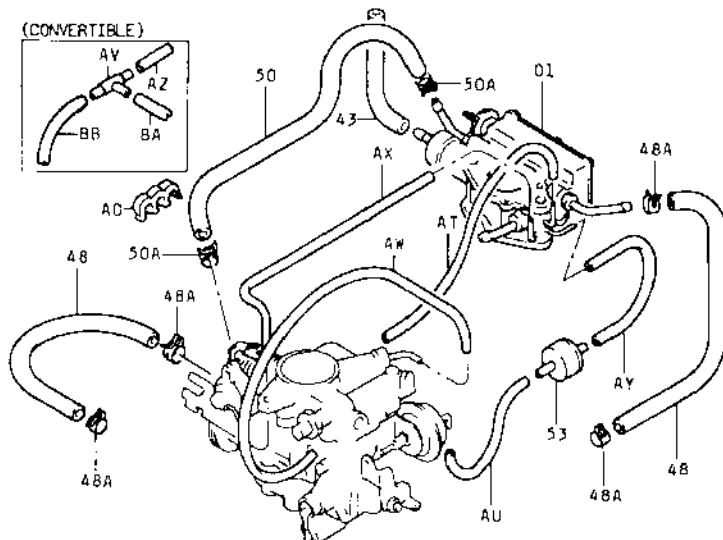

2105-0230

PART NAME	PART NAME	QTY
CODE		
2105-01	GOVERNOR ASSY, AIR	1
2105-30	SHAFT SUB-ASSY, THROTTLE VALVE	1
2105-31	SPRING SUB-ASSY	1
2105-32	VALVE SUB-ASSY, AIR GOVERNOR THROTTLE	1
2105-42	COVER	1
2105-42A	GASKET, COVER	1
2105-43	HOSE, AIR CLEANER TO AIR GOVERNOR	1
2105-45	PLATE, FUEL INSULATOR	1
2105-47	INSULATOR, HEAT, NO.2	1
2105-48	HOSE, WATER	2
2105-48A	CLAMP, HOSE	4
2105-50	HOSE, WATER	1
2105-50A	CLAMP, HOSE	2
2105-53	VALVE, VACUUM TRANSMITTING	1
2105-AB	WIRE	1
2105-AC	SCREW	2
2105-AD	RING, SNAP	1
2105-AF	SCREW, ADJUSTING	1
2105-AG	BUSHING	1
2105-AH	SCREW	3
2105-AL	GASKET, CARBURETOR	2
2105-AD	CLAMP, HOSE	1
2105-AP	UNION	2
2105-AT	HOSE, VACUUM	1
2105-AU	HOSE, VACUUM	1
2105-AV	3-WAY	1
2105-AW	HOSE, VACUUM	1
2105-AX	HOSE, VACUUM	1
2105-AY	HOSE, VACUUM	1
2105-AZ	HOSE	1
2105-BA	HOSE	1
2105-BB	HOSE	1
2105-BF	PLUG	1

G708-001E


FIG. 2301
FUEL PUMP

2301

4Y

89/11

 4Y

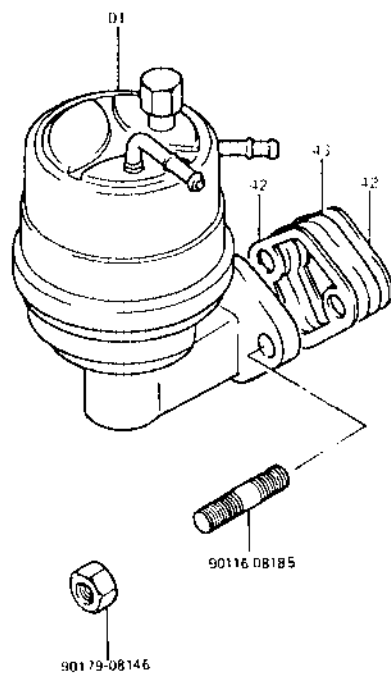

PART NAME	PART NAME	QTY
CODE		
2301-01	PUMP ASSY, FUEL	1
2301-42	GASKET, FUEL PUMP	2
2301-43	INSULATOR, FUEL PUMP	1

2301 017A

G708-001E


FIG. 2302
FUEL FILTER

2302

4Y

90/07

 4Y

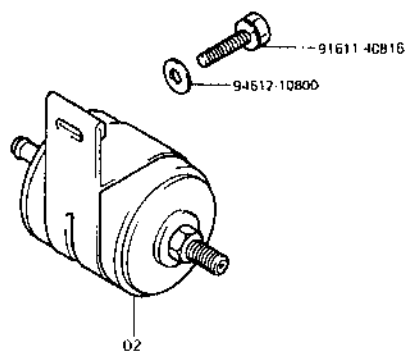

2302 060


PART NAME	PART NAME	QTY
CODE		
2302-02	FILTER ASSY, FUEL (ELEMENT NO SERVICE TYPE)	1
2302-AQ	BOLT	1

G708-001E

2303

90/07

PART NAME I	PART NAME	QTY
2303-10	CAP ASSY, FUEL TANK	1
2303-12	CANISTER ASSY, CHARCOAL	1
2303-20A	PLUG, DRAIN (FOR FUEL TANK)	1
2303-20B	GASKET, DRAIN PLUG (FOR FUEL TANK)	1
2303-21	COVER SUB-ASSY, FUEL TANK	1
2303-21A	PACKING, FUEL TANK COVER	1
2303-61	SEPARATOR, FUEL	1
2303-62	VALVE, BREATHER	1
2303-49	PIPE, NO.1 (TANK TO SEPARATOR)	1
2303-50	PIPE, NO.2 (TANK TO SEPARATOR)	1
2303-56	HOSE	1
2303-75	PIPE SUB-ASSY, TANK TO FILTER	1
2303-76	PIPE SUB-ASSY, RETURN	1
2303-77	HOSE, FUEL (FILTER TO INJECTION PUMP)	1
2303-82	HOSE, FUEL	1
2303-AA	BOLT	2
2303-AB	PLATE, SEPARATE	1
2303-AF	GASKET	6
2303-AL	CLAMP	1
2303-AM	CLAMP	1
2303-AP	BRACKET SUB-ASSY	1
2303-AQ	PACKING, FUEL CAP	1
2303-AS	CLAMP, HOSE	2
2303-BJ	BOLT, W/WASHER	2
2303-BL	CLAMP	4
2303-BW	BOLT	1
2303-CJ	BOLT	8
2303-DY	BOLT, UNION	3
2303-EE	CLAMP	1
2303-EG	HOSE, FUEL	1
2303-EH	HOSE, FUEL	1
2303-EN	BOLT	2
2303-ER	CLIP	4
2303-ES	CLIP	6
2303-FG	3-WAY	1

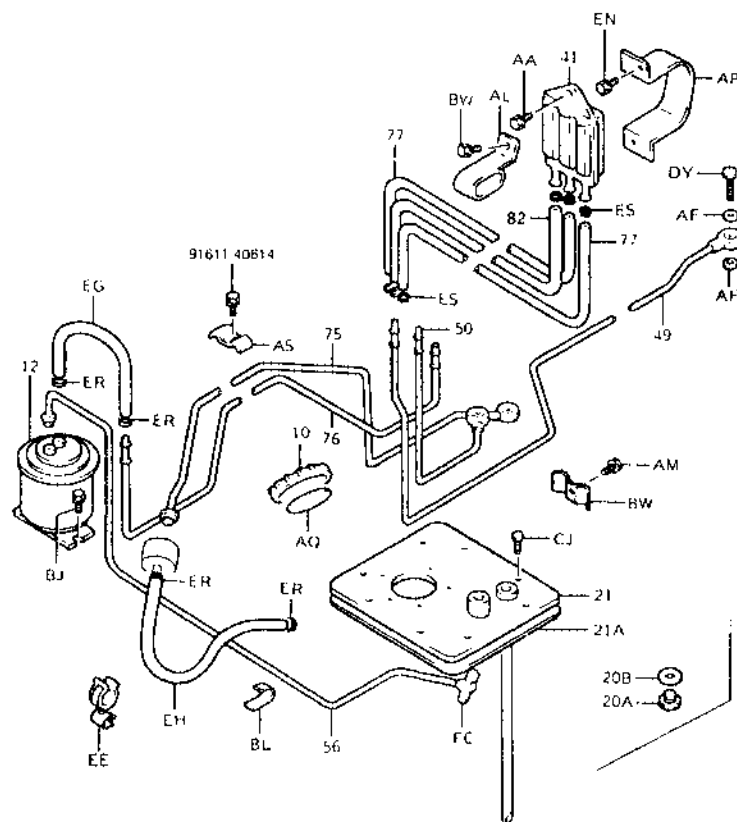 

G708-001E


FIG. 2601
ACCELERATOR LINK

2601

4Y

90/07

 4Y

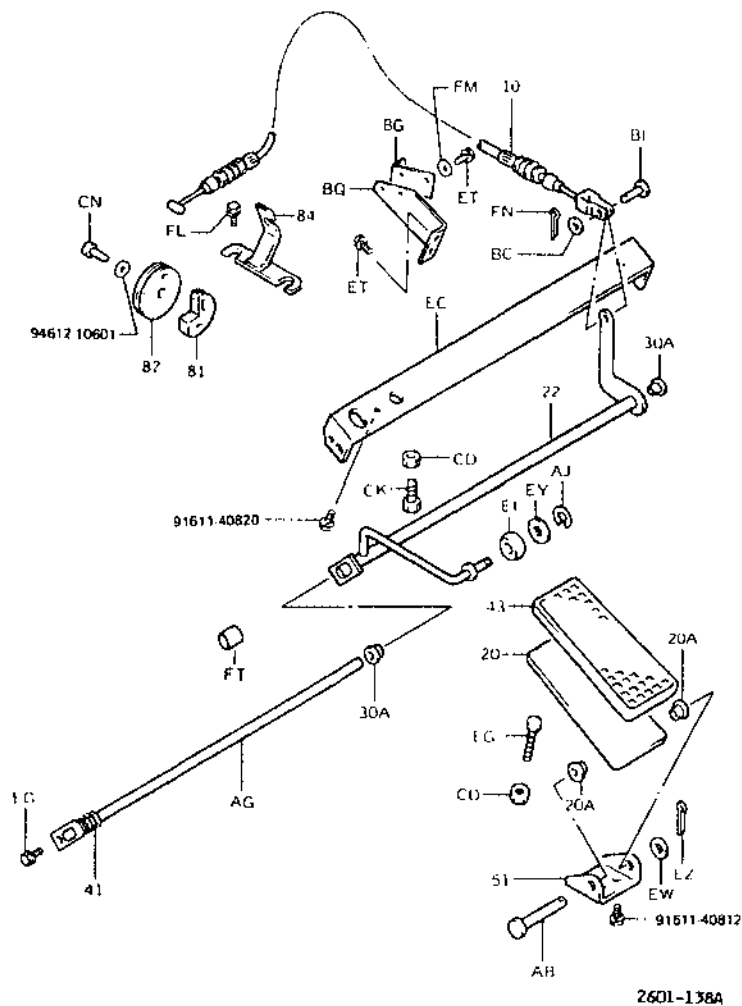

PART NAME	PART NAME	QTY
CODE		
2601-10	WIRE ASSY, ACCELERATOR FLEXIBLE	1
2601-20	PEDAL SUB-ASSY, ACCELERATOR	1
2601-20A	BUSHING (FOR ACCELERATOR PEDAL)	2
2601-22	LINK SUB-ASSY, ACCELERATOR	1
2601-30A	BUSHING (FOR ACCELERATOR LINK ARM)	2
2601-41	SPRING, TORSION, NO.1	1
2601-43	PAD, PEDAL	1
2601-51	BRACKET, PEDAL	1
2601-81	PULLEY SUB-ASSY	1
2601-82	PULLEY, ACCELERATOR	1
2601-84	BRACKET SUB-ASSY, WIRE	1
2601-AB	PIN, W/HOLE	1
2601-AG	SHAFT, ACCELERATOR LINK	1
2601-AJ	RING, E	1
2601-BC	WASHER, PLATE	1
2601-BG	BRACKET	1
2601-BI	PIN, W/HOLE	1
2601-BQ	BRACKET, ACCELERATOR WIRE	1
2601-CD	NUT	2
2601-CK	BOLT	1
2601-CN	PIN, SPRING	1
2601-EC	BRACKET SUB-ASSY, ACCELERATOR LINK, NO.1	1
2601-EG	BOLT	1
2601-EI	ROLLER	1
2601-ET	BOLT, W/WASHER	4
2601-EW	WASHER, PLATE	2
2601-EY	WASHER, PLATE	1
2601-EZ	PIN, COTTER	1
2601-FL	BOLT	2
2601-FM	WASHER, PLATE	2
2601-FN	PIN, COTTER	1

G708-001E

FIG. 3201
TORQUE CONVERTER HOUSING

 
3201

ATM

90/07

ATM 11/51

03K=(INCL. ●)

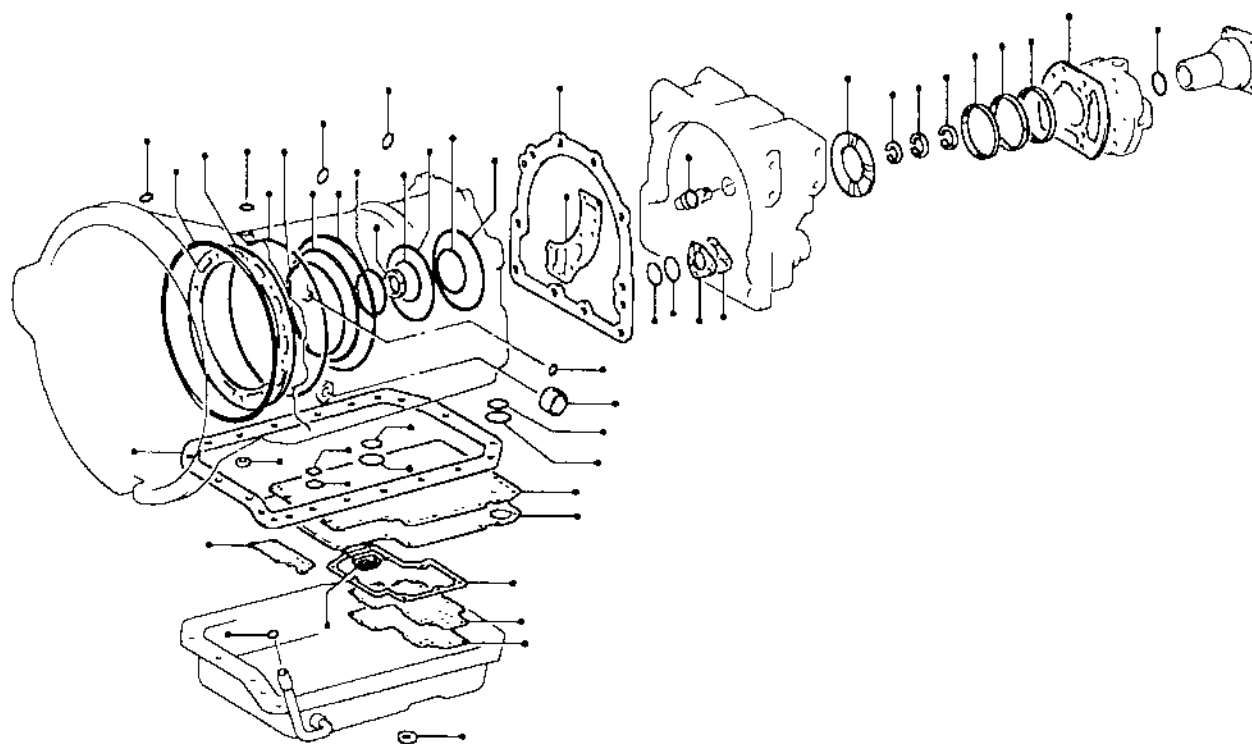

3201-112A

G708-001

FIG. 3201
TORQUE CONVERTER HOUSING

 
 
 
3201

ATM

90/07

ATM 12/51

ATM 13/51

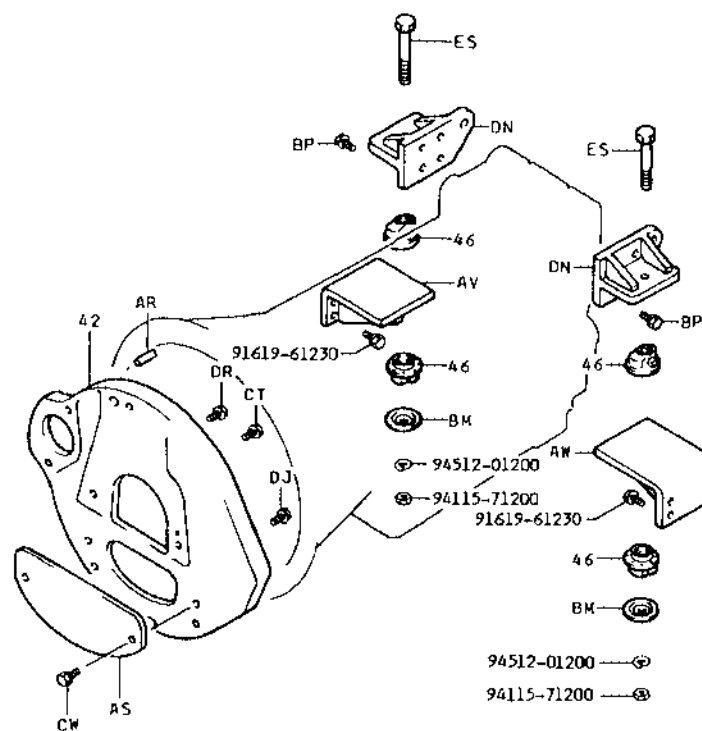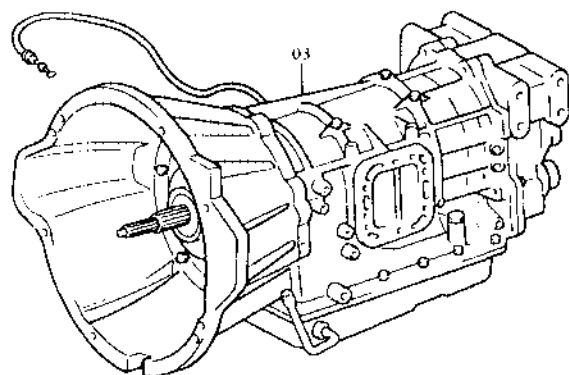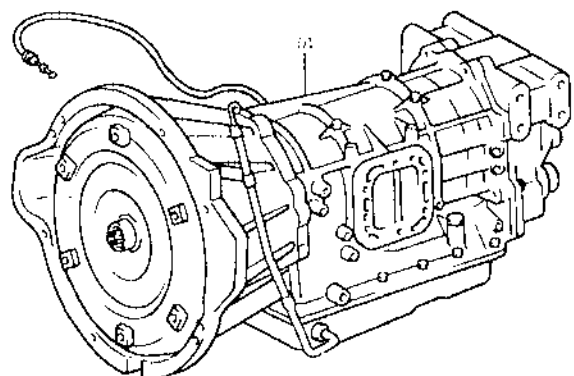

3201-109C

3201 106

G708-002

3201

90/07

ATM [5/5]



G708-003

FIG. 3201
TORQUECONVERTER HOUSING

3201

ATM

90/07

PART NAME	PART NAME	QTY
CODE		
3201-01	TRANSMISSION ASSY, AUTOMATIC, L/DIFFERENTIAL	1
3201-03	TRANSMISSION ASSY (FOR TORQUECONVERTER)	1
3201-03K	TRANSMISSION O/H KIT (FOR TORQUECONVERTER)	1
3201-20	CASE SUB-ASSY, TORQUECONVERTER, NO-1	1
3201-22	CASE SUB-ASSY, TRANSMISSION	1
3201-30	GAGE SUB-ASSY, OIL LEVEL	1
3201-42	PLATE, TORQUECONVERTER END	1
3201-45	PAN, OIL	1
3201-45A	PACKING, OIL PAN	1
3201-45B	PLUG, DRAIN	1
3201-45C	GASKET (FOR DRAIN PLUG)	1
3201-46	INSULATOR, TORQUECONVERTER MOUNTING	4
3201-AB	RING, O	7
3201-AD	PLUG	1
3201-AE	PLUG, W/HEAD STRAIGHT SCREW	1
3201-AF	GASKET	1
3201-AG	RING, O	1
3201-AK	PLUG, BREATHER	1
3201-AD	MAGNET	2
3201-AP	RING, O	1
3201-AQ	RING, O	1
3201-AR	PIN, STRAIGHT	2
3201-AS	PLATE, COVER	1
3201-AV	SUPPORT SUB-ASSY, BRACKET, RH	1
3201-AW	SUPPORT SUB-ASSY, BRACKET, LH	1
3201-AZ	RING, O	1
3201-BM	PLATE	2
3201-BP	BOLT	8
3201-CE	ELBOW	1
3201-CH	PLUG	7
3201-CT	BOLT	1
3201-CW	BOLT	2
3201-DH	COVER	1
3201-DJ	BOLT	2- 4
3201-DN	BRACKET, TORQUECONVERTER MOUNTING	2
3201-DD	SEAL, OIL	1
3201-DR	BOLT	2- 4
3201-E5	BOLT	2
3201-JB	UNION	1
3201-KC	TUBE SUB-ASSY, TRANSMISSION OIL FILLER	1
3201-KD	HOUSING SUB-ASSY, EXTENSION	1
3201-KE	GASKET, EXTENSION HOUSING	1

G708-004E


FIG. 3202
TORQUE CONVERTER

3202

ATM

90/07

 ATM

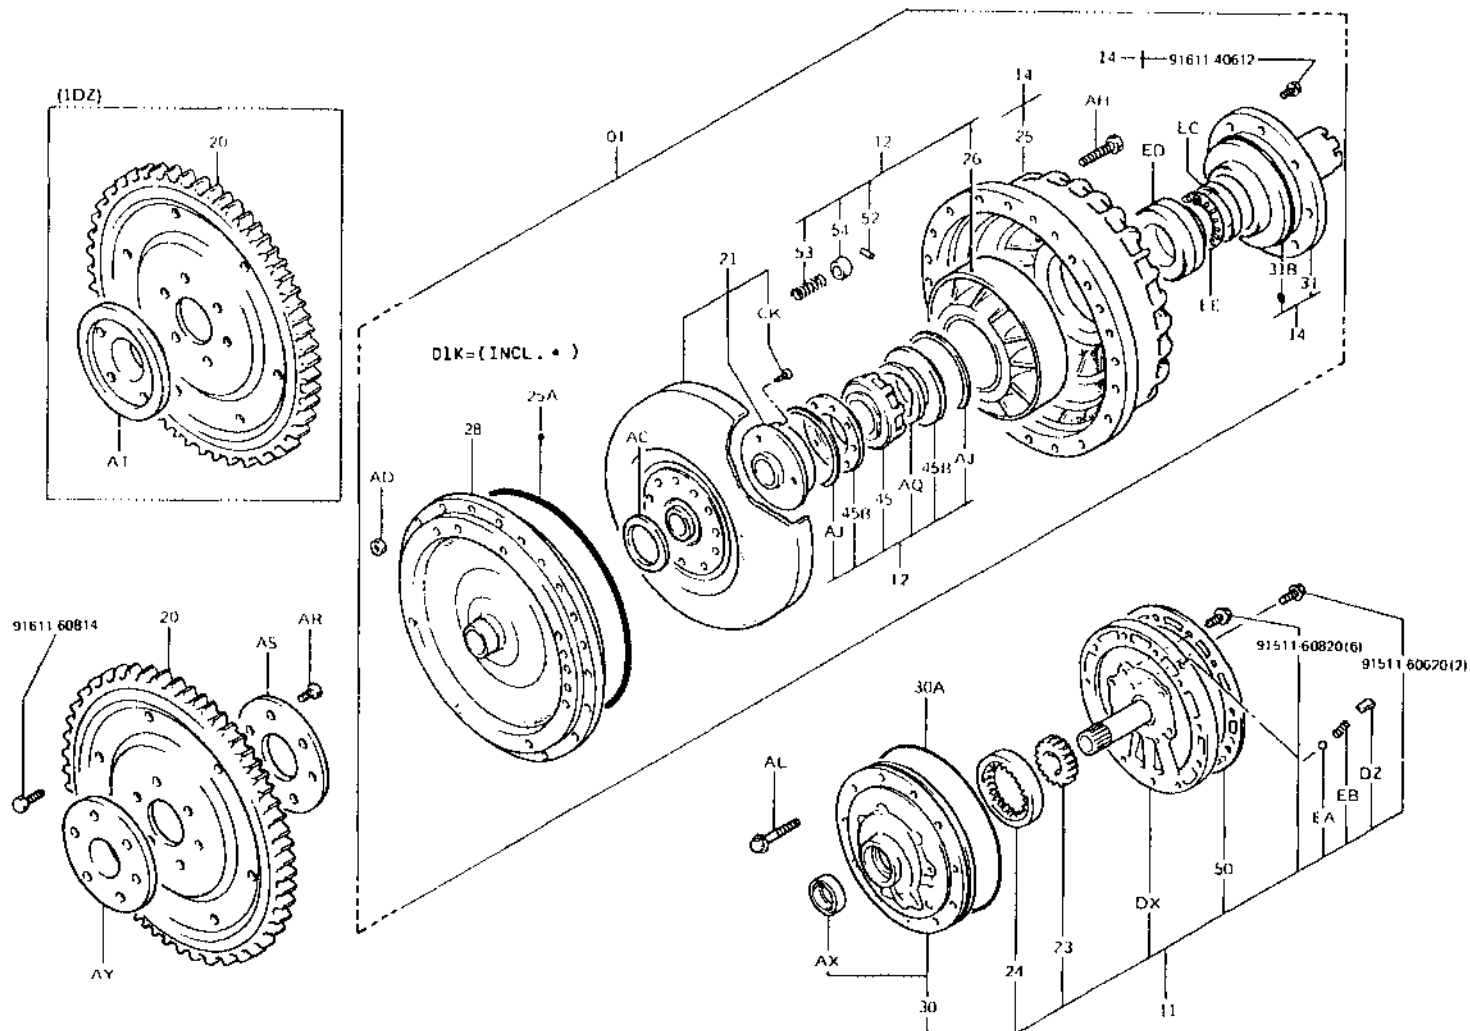

3202-056A
G708-001

FIG. 3202
TORQUECONVERTER

3202

ATM

90/07

PART NAME	PART NAME	QTY
CODE		
3202-01	TORQUECONVERTER ASSY	1
3202-01K	TORQUECONVERTER O/H KIT	1
3202-11	PUMP ASSY, OIL	1
3202-12	STATOR ASSY	1
3202-14	IMPELLER ASSY, PUMP	1
3202-20	GEAR SUB-ASSY, DRIVE PLATE & RING	1
3202-21	RUNNER SUB-ASSY, TURBINE	1
3202-23	GEAR SUB-ASSY, OIL PUMP DRIVE	1
3202-24	GEAR SUB-ASSY, OIL PUMP DRIVEN	1
3202-25	IMPELLER SUB-ASSY, PUMP	1
3202-25A	RING, O (FOR PUMP IMPELLER)	1
3202-26	STATOR SUB-ASSY	1
3202-28	COVER SUB-ASSY, DRIVE (DISC SUB-ASSY)	1
3202-50	CASE SUB-ASSY, OIL PUMP	1
3202-50A	RING, O (FOR OIL PUMP CASE)	1
3202-51	EXTENSION SUB-ASSY, PUMP IMPELLER (BOSS)	1
3202-51B	RING, O (FOR PUMP IMPELLER EXTENSION)	1
3202-45	HUB (FACE, INNER)	1
3202-45B	WASHER, THRUST, NO.1 (FOR HUB)	2
3202-50	PACKING, OIL PUMP CASE COVER	1
3202-52	ROLLER (FOR STATOR)	8
3202-53	SPRING (FOR STATOR)	8
3202-54	CAP, SPRING (FOR STATOR)	8
3202-AC	WASHER, TURBINE, FRONT	99
3202-AD	NUT	20
3202-AH	BOLT	20
3202-AJ	RING, HOLE	2
3202-AL	BOLT	11
3202-AQ	PLATE, THRUST	2
3202-AR	BOLT	6
3202-AS	SPACER, DRIVE PLATE	1
3202-AT	SUPPORT, CENTERING	1
3202-AX	SEAL, OIL	1
3202-AY	SPACER	1
3202-CK	RIVET	12
3202-DX	COVER SUB-ASSY, FRONT OIL PUMP	1
3202-DZ	SEAT, CHECK VALVE SPRING	1
3202-EA	BALL, CHECK	1
3202-EB	SPRING, COMPRESSION	1
3202-ED	RACE, THRUST BEARING	1

G708-002E

FIG. 3203
TORQUE CONVERTER CLUTCH

 
3203

ATM



90/87

ATM (1/4)

ATM (2/4)

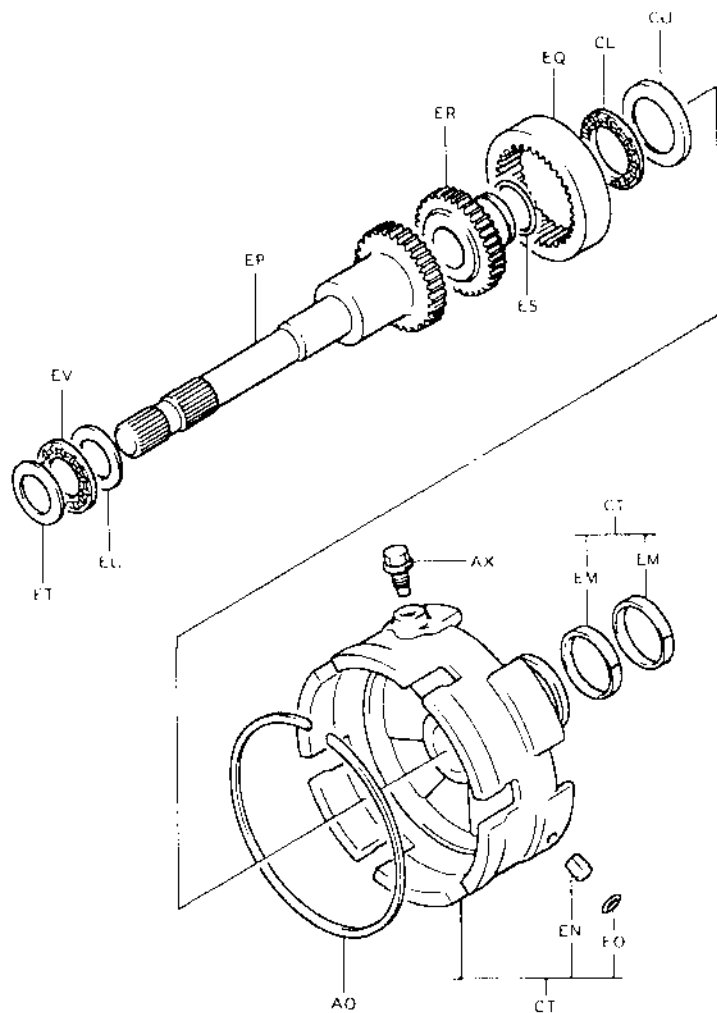

3203 074

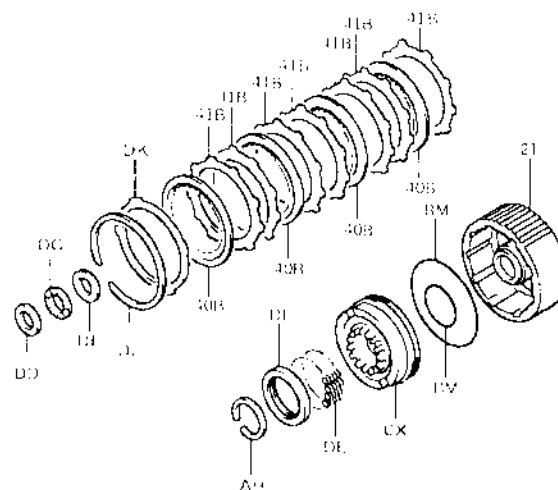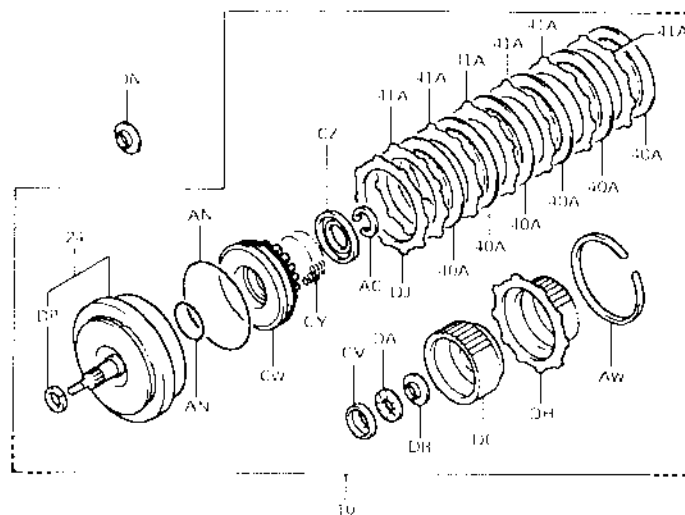  

3203 075A

G708-001

FIG. 3203
TORQUE CONVERTER CLUTCH

 
 
3203

ATM

90/07

ATM 15/41

ATM 14/41

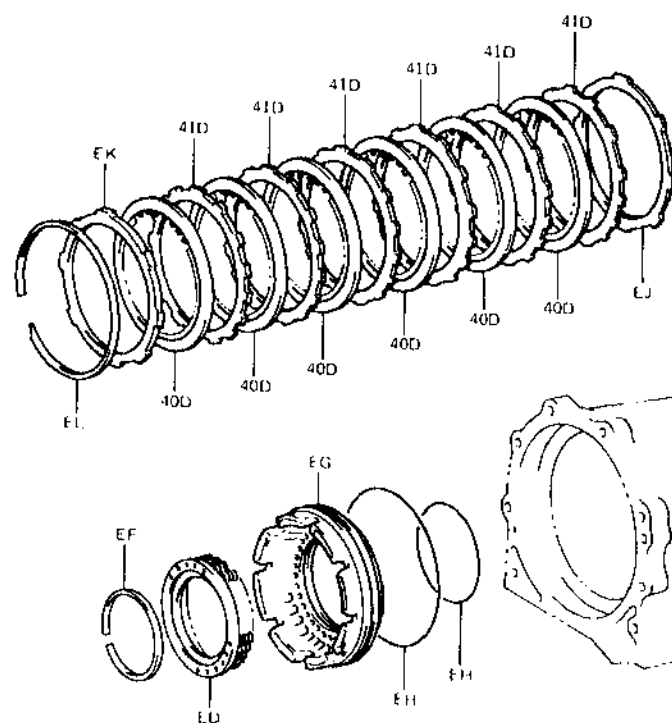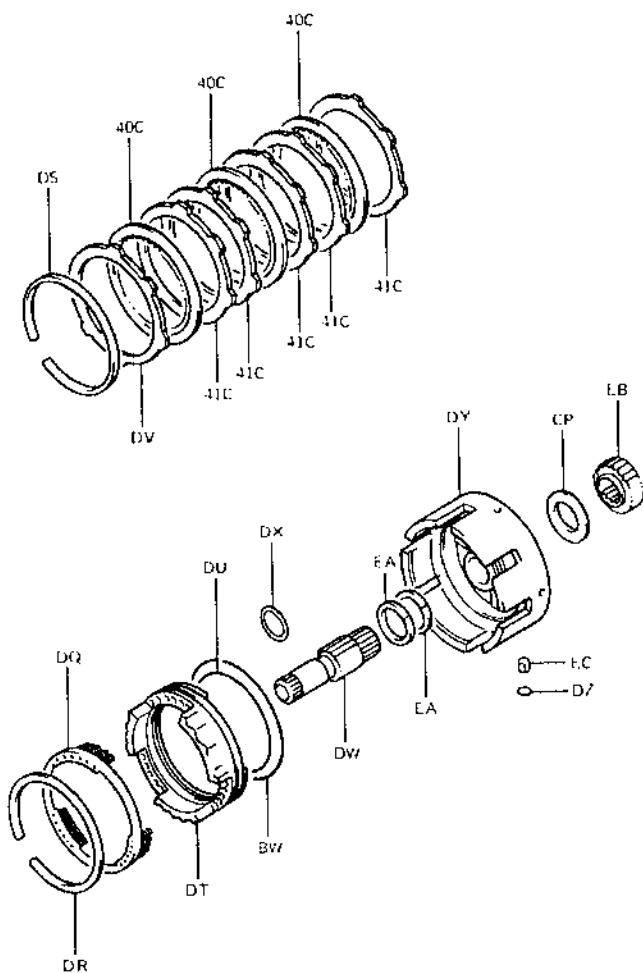

3203 017

3203 016

G708-002

FIG. 3203
TORQUE CONVERTER CLUTCH

3203

ATM

90/07

PART NAME	PART NAME	QTY
CODE		
3203-10	DRUM ASSY, CLUTCH, NO.1	1
3203-21	DRUM SUB-ASSY, CLUTCH, NO.2	1
3203-24	SHAFT SUB-ASSY, CLUTCH, NO.1	1
3203-40A	DISC, CLUTCH (FOR FRONT CLUTCH)	4
3203-40B	DISC, REAR CLUTCH	4
3203-40C	DISC, CLUTCH (FOR BRAKE)	3
3203-40D	DISC, CLUTCH (FOR 1ST & REVERSE BRAKE)	6
3203-41A	PLATE, FRONT CLUTCH	1-5
3203-41B	PLATE, REAR CLUTCH	7
3203-41C	PLATE, BRAKE	5
3203-41D	PLATE, BRAKE (FOR 1ST & REVERSE BRAKE)	6
3203-AC	RING, SHAFT SNAP	1
3203-AK	RING, SHAFT SNAP	1
3203-AN	RING, O	1
3203-AO	RING, HOLE SNAP	1
3203-AW	RING, HOLE SNAP	1
3203-AX	BOLT	6
3203-BM	RING, O	1
3203-BW	RING, O	1
3203-CL	BEARING, THRUST	1
3203-CP	WASHER	99
3203-CY	CASE SUB-ASSY, OVERDRIVE	1
3203-CU	RACE, THRUST BEARING	1
3203-CV	RACE, THRUST BEARING	2
3203-CW	PISTON SUB-ASSY, FRONT CLUTCH	1
3203-CX	PISTON SUB-ASSY, REAR CLUTCH	1
3203-CY	SPRING, COMPRESSION	22
3203-CZ	SEAT, FRONT CLUTCH PISTON RETURN SPRING	1
3203-DA	BEARING, THRUST	2
3203-DB	RACE, THRUST BEARING	2
3203-DC	HUB, FRONT CLUTCH	1
3203-DD	RACE, THRUST BEARING	1
3203-DE	SPRING, COMPRESSION	22
3203-DF	RACE, THRUST BEARING	1
3203-DG	BEARING, THRUST NEEDLE ROLLER	1
3203-DH	HUB, REAR CLUTCH	1
3203-DI	SEAT, REAR CLUTCH PISTON RETURN SPRING	1
3203-DJ	PLATE, CLUTCH CUSHION	1
3203-DK	FLANGE, REAR CLUTCH	99
3203-DL	RING, HOLE SNAP	1
3203-DN	RACE, THRUST BEARING	99
3203-DP	RING, INPUT SHAFT OIL SEAL	1
3203-DO	SPRING SUB-ASSY, 2ND BRAKE PISTON RETURN	1
3203-DR	RING, HOLE SNAP	1
3203-DS	RING, HOLE SNAP	1
3203-DT	PISTON, BRAKE, NO.1	1
3203-DU	RING, O	1
3203-DV	FLANGE, BRAKE, NO.1	99
3203-DW	GEAR SUB-ASSY, FRONT PLANETARY SUN	1
3203-DX	RING, SHAFT SNAP	1
3203-DY	SUPPORT SUB-ASSY, CENTER	1
3203-DZ	RING, O	3
3203-EA	RING, OIL SEAL	2
3203-EB	GEAR, REAR PLANETARY SUN	1
3203-EC	RETAINER, CENTER SUPPORT RING	3
3203-ED	SPRING SUB-ASSY, 1ST & REVERSE BRAKE RETURN	1
3203-EF	RING, SHAFT SNAP	1
3203-EG	PISTON, 1ST & REVERSE BRAKE	1
3203-EH	RING, O	1
3203-EJ	PLATE, BRAKE CUSHION	1
3203-EK	FLANGE, BRAKE (FOR 1ST & REVERSE BRAKE)	99
3203-EL	RING, HOLE SNAP	1
3203-EM	RING, CLUTCH DRUM OIL SEAL	2
3203-EN	RETAINER, CENTER SUPPORT O RING	2

PART NAME	PART NAME	QTY
CODE		
3203-EQ	RING, O	3
3203-EP	SHAFT SUB-ASSY, TRANSMISSION INPUT	1
3203-EQ	SLEEVE, INPUT SHAFT	1
3203-ER	FLANGE, TRANSMISSION INPUT	1
3203-ES	RING, OIL SEAL	1
3203-ET	RACE, THRUST BEARING	99
3203-EV	BEARING, THRUST NEEDLE ROLLER	1

G708-003E

FIG. 3204
TORQUE CONVERTER GEAR

 
 
 
3204

ATM

89/11

ATM 11/21

ATM 12/21

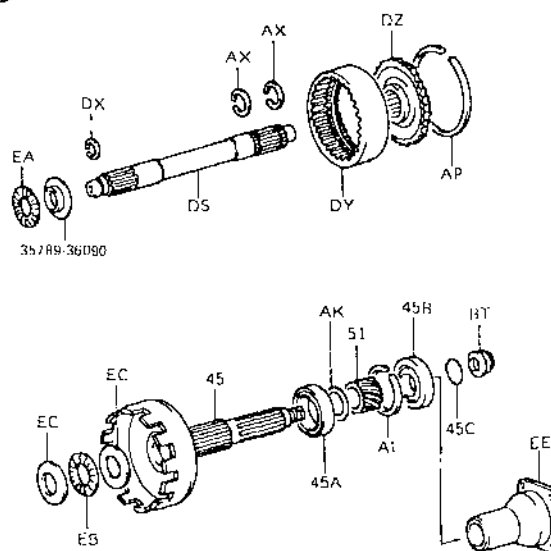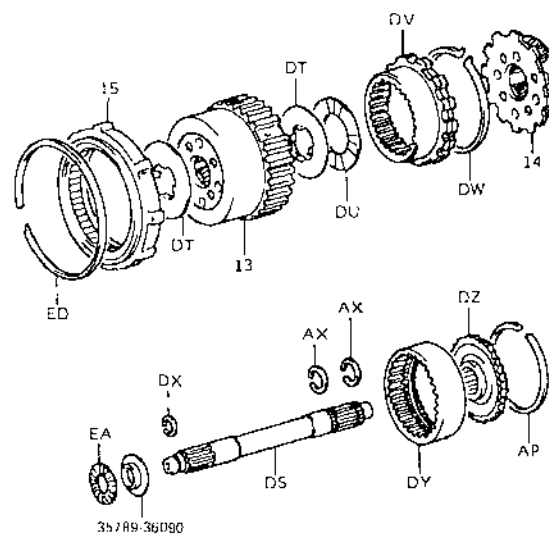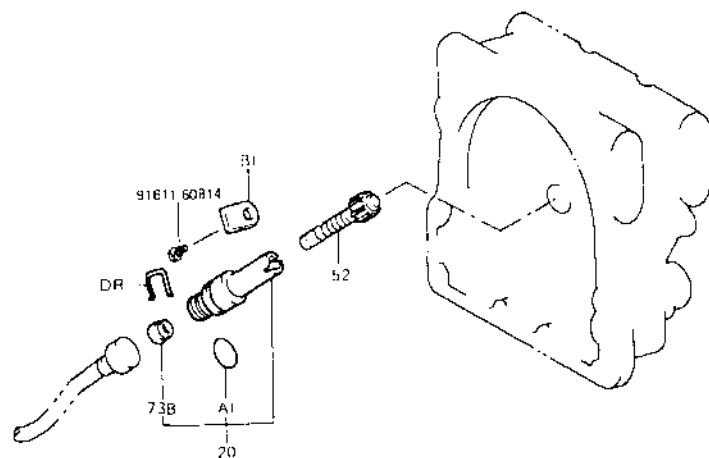

3204 042

3204-043A

G708-001

FIG. 3204
TORQUE CONVERTER GEAR

3204

ATM

89/11

PART NAME CODE	PART NAME	QTY
3204-13	GEAR ASSY, FRONT PLANETARY	1
3204-14	GEAR ASSY, REAR PLANETARY	1
3204-15	CLUTCH ASSY, 1 WAY	1
3204-20	SLEEVE SUB-ASSY, SPEEDOMETER	1
3204-45	SHAFT, OUTPUT, NO.1	1
3204-45A	BEARING, NO.1 (FOR OUTPUT SHAFT)	1
3204-45B	BEARING, NO.2 (FOR OUTPUT SHAFT)	1
3204-45C	RING, O (FOR OUTPUT SHAFT)	1
3204-51	GEAR, SPEEDOMETER DRIVE	1
3204-73B	SEAL, OIL (FOR SPEEDOMETER SHAFT)	1
3204-A1	RING, O	1
3204-AK	SPACER	1
3204-AL	RING, SNAP	1
3204-AP	RING, SNAP	1
3204-AX	RING, SNAP	2
3204-B1	PLATE	1
3204-BT	NUT	1
3204-DR	CLIP	1
3204-DS	SHAFT, INTERMEDIATE	1
3204-DT	WASHER, PLANETARY CARRIER THRUST, NO.1	2
3204-DU	WASHER, PLANETARY CARRIER THRUST, NO.2	1
3204-DV	GEAR, FRONT PLANETARY RING	1
3204-DW	RING, HOLE SNAP	1
3204-DX	RING, INTERMEDIATE SHAFT OIL SEAL	1
3204-DY	GEAR, REAR PLANETARY RING	1
3204-DZ	FLANGE, REAR PLANETARY RING GEAR	1
3204-EA	BEARING, THRUST NEEDLE ROLLER	1
3204-EB	BEARING, THRUST	1
3204-EC	RACE, THRUST BEARING	2
3204-ED	RING, HOLE SNAP	1
3204-EE	FLANGE, OUTPUT SHAFT	1

G708-002E

FIG. 3206
CONTROL VALVE

 
3206

ATM

90/07

ATM (1/71)

ATM (2/71)

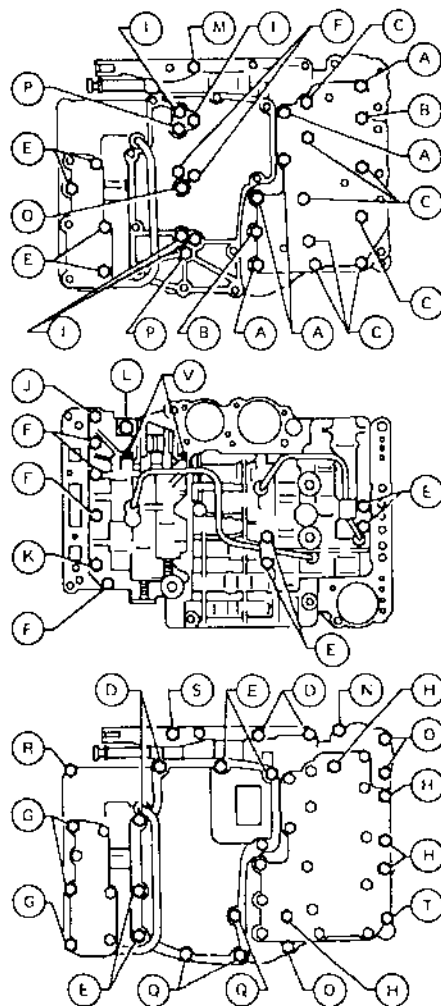



VALVE BODY SET BOLT

NO	PARTS NO.	L	QTY
A	90105-05007	18	5
H	90105-05015	60	2
C	90105-05016	56	8
D	90105-05017	47	9
E	90105-05023	12	12
F	90105-05025	29.5	7
G	90105-06058	64	3
H	90105-06060	57	5
I	90105-05002	35	4
J	90105-05029	25	1
K	90105-05027	29.5	1
L	90105-05028	39	1
M	90105-05030	43	1
N	90105-06069	22	1
O	90105-06072	32	4
P	90105-06025	36	2
Q	90105-06061	45	1
R	90105-06070	41	1
S	90105-06073	45	1
T	90105-06071	57	1
V	90105-06064	16	2

WAVE WASHER

PARTS NO.	QTY
94541-00500	37

  3206-064B

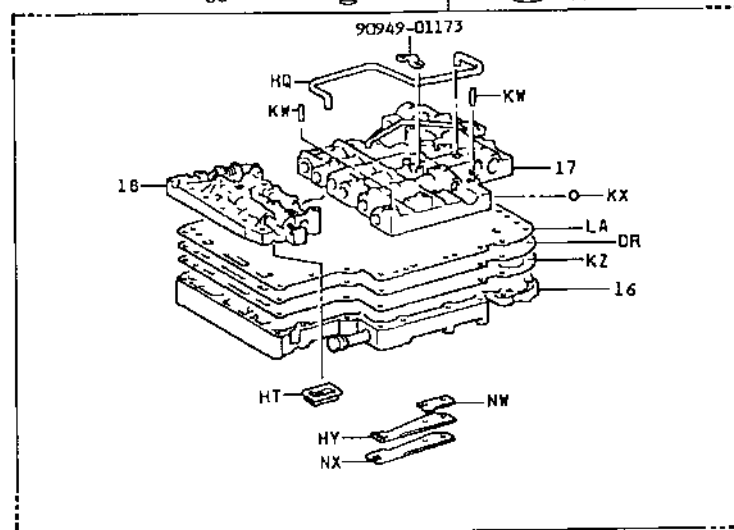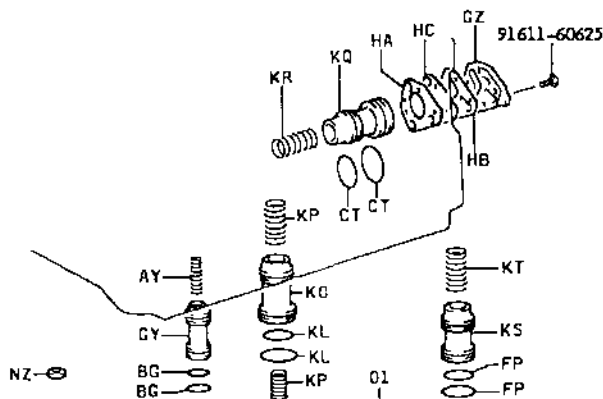

3206-065B

G708-001

FIG. 3206
CONTROL VALVE

 
3206

ATM


90/07

ATM 15/71

ATM 10/21

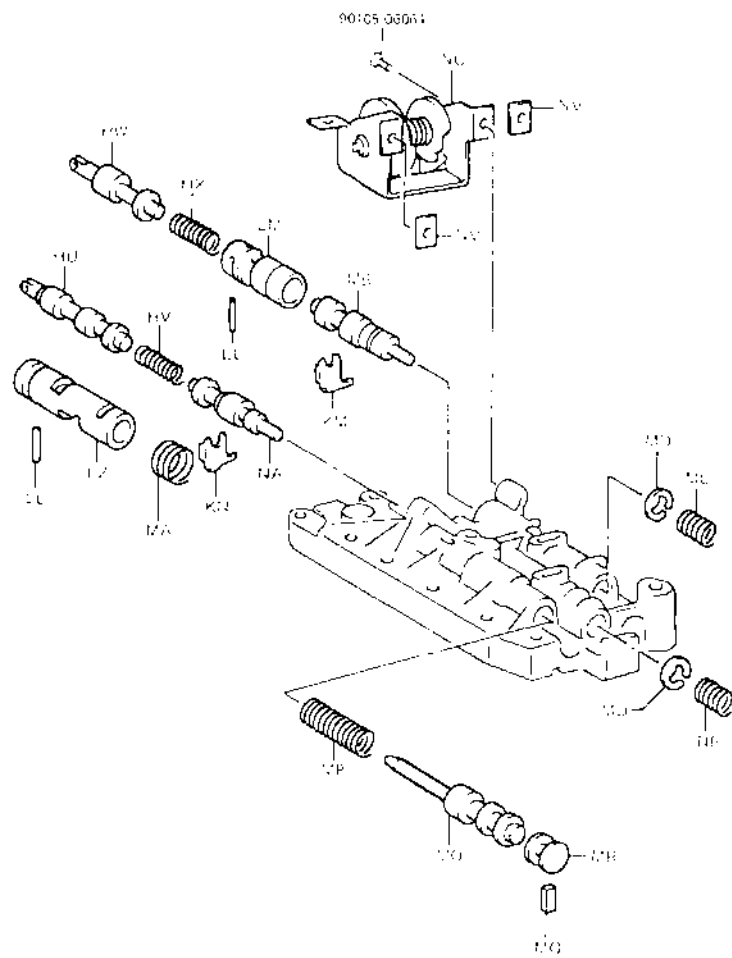

320E D5RA

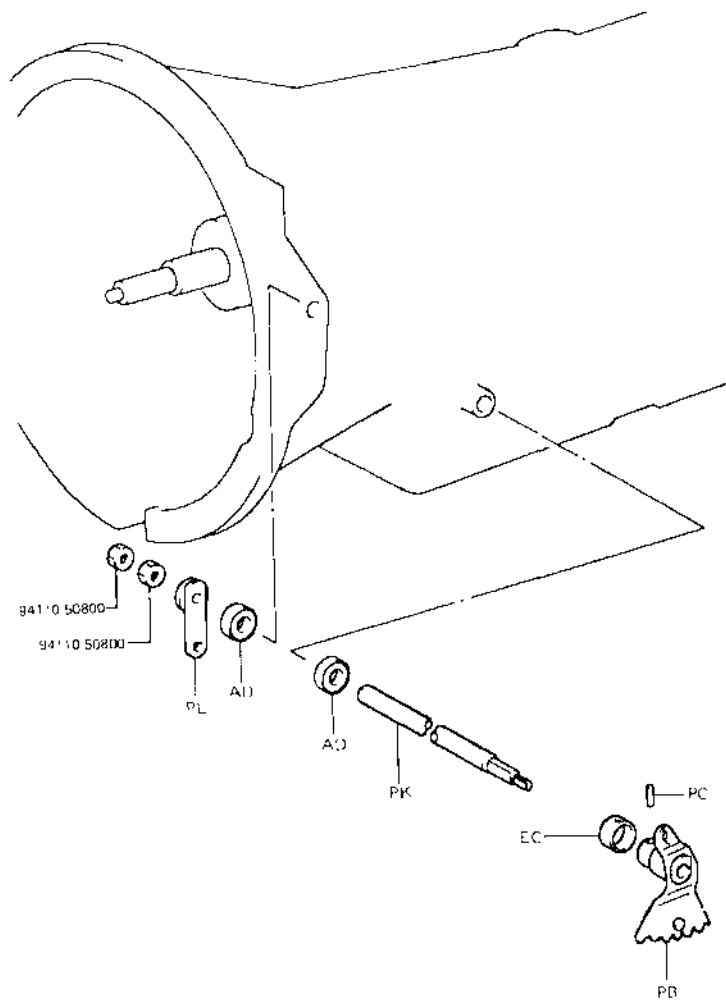 


3706-069

G708-003

FIG. 3206
CONTROL VALVE

 ATM (7/7)

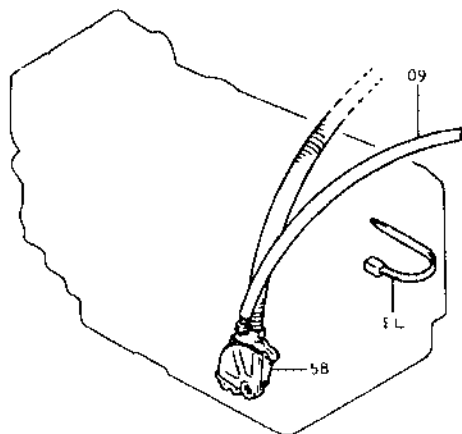

3206

ATM

90/07

PART NAME	PART NAME	QTY
CODE		
3206-01	COVER & VALVE ASSY, TRANSMISSION	1
3206-09	CABLE ASSY, THROTTLE	1
3206-16	BODY ASSY, LOWER VALVE	1
3206-17	BODY ASSY, REAR UPPER VALVE	1
3206-18	BODY ASSY, FRONT UPPER VALVE	1
3206-58	SWITCH ASSY, NEUTRAL START	1
3206-AG	PLUG	1
3206-AY	SPRING	1
3206-BG	RING, O	1
3206-BX	PLUG	1
3206-CJ	PLUG	1
3206-CT	RING, O	1
3206-CX	PLUG	1
3206-CY	PLUG	1
3206-DR	PLATE, CONTROL VALVE BODY	1
3206-DY	PLUG	1
3206-EC	SPACER	1
3206-EL	CLAMP	1
3206-EX	PLUG	1
3206-FP	RING, O	1
3206-GY	PISTON, OVERDRIVE BRAKE ACCUMULATOR	1
3206-GZ	COVER, FRONT CLUTCH ACCUMULATOR	1
3206-HA	GASKET, FRONT CLUTCH ACCUMULATOR, NO.2	1
3206-HB	GASKET, FRONT CLUTCH ACCUMULATOR, NO.1	1
3206-HC	PLATE, FRONT CLUTCH ACCUMULATOR	1
3206-HD	VALVE, LOCK UP SIGNAL	1
3206-HE	PIN, STRAIGHT	1
3206-HF	SPRING, COMPRESSION	1
3206-HG	VALVE, LOCK UP RELAY	1
3206-HH	SPRING, COMPRESSION	1
3206-HI	VALVE, LOCK UP RELAY CONTROL	1
3206-HJ	PIN, STRAIGHT	1
3206-HK	SLEEVE, LOCK UP RELAY VALVE, NO.1	1
3206-HL	SLEEVE, LOCK UP RELAY VALVE, NO.2	1
3206-HM	PLATE, LOCK UP RELAY VALVE BODY	1
3206-HN	GASKET, LOCK UP RELAY VALVE BODY	1
3206-HO	SLEEVE, LOCK UP SIGNAL VALVE	1
3206-HP	SEAT, LOCK UP SIGNAL VALVE SPRING	1
3206-HQ	TUBE, LOCK UP SIGNAL VALVE APPLY	1
3206-HR	STRAINER SUB-ASSY, OIL	1
3206-HS	GASKET, OIL STRAINER	1
3206-HT	STRAINER, THROTTLE OIL	1
3206-HU	PLUG SUB-ASSY, SECONDARY DOWN SHIFT	1
3206-HV	SPRING, COMPRESSION	1
3206-HW	PLUG SUB-ASSY, PRIMARY DOWN SHIFT	1
3206-HX	SPRING, COMPRESSION	1
3206-HY	SPRING SUB-ASSY, MANUAL DETENT	1
3206-HZ	VALVE, PRIMARY REGULATOR	1
3206-KA	SPRING, COMPRESSION	1
3206-KB	WASHER	1
3206-KC	RING, E	4
3206-KD	PLUNGER, PRIMARY REGULATOR VALVE	1
3206-KE	SLEEVE, PRIMARY REGULATOR VALVE	1
3206-KF	VALVE, MANUAL	1
3206-KI	BALL	2
3206-KL	RING	1
3206-KM	STOPPER, VALVE VIBRATING	1
3206-KN	STOPPER, VALVE VIBRATING	1
3206-KO	PISTON, B-2 ACCUMULATOR	1
3206-KP	SPRING, COMPRESSION	1
3206-KQ	PISTON, C-1 ACCUMULATOR	1
3206-KR	SPRING, COMPRESSION	1
3206-KS	PISTON, C-2 ACCUMULATOR	1
3206-KT	SPRING, COMPRESSION	1

3206 070

G708-004

FIG. 3206
CONTROL VALVE

3206

ATM

90/07

PART NAME	PART NAME	QTY
CODE		
3206-KU	SEAT, PRIMARY REGULATOR VALVE SLEEVE	1
3206-KV	PLUG, 2-3 SHIFT TIMING VALVE	1
3206-KW	TUBE, LINE PRESSURE	2
3206-KX	BALL	7
3206-KZ	GASKET, VALVE BODY, NO.1	1
3206-LA	GASKET, VALVE BODY, NO.2	1
3206-LB	GASKET, VALVE BODY PLATE, NO.3	1
3206-LC	GASKET, VALVE BODY PLATE, NO.4	1
3206-LD	PLATE, VALVE BODY COVER	1
3206-LE	SLEEVE, 2-3 SHIFT TIMING VALVE PLUG	1
3206-LF	VALVE, INTERMEDIATE MODULATOR	1
3206-LG	SPRING, COMPRESSION	1
3206-LH	KEY, STRAIGHT	1
3206-LI	VALVE, LOWER MODULATOR	1
3206-LJ	SPRING, COMPRESSION	1
3206-LK	KEY, STRAIGHT	1
3206-LL	PIN, STRAIGHT	2
3206-LM	SLEEVE, THROTTLE VALVE, NO.1	1
3206-LN	PIN, STRAIGHT	1
3206-LO	VALVE, LOW COAST SHIFT	1
3206-LP	KEY, STRAIGHT	1
3206-LQ	PLUG	1
3206-LR	PIN, STRAIGHT	1
3206-LS	VALVE, 2-3 SHIFT	1
3206-LT	SPRING, COMPRESSION	1
3206-LU	PLUG	1
3206-LV	KEY, STRAIGHT	1
3206-LW	VALVE, CUT BACK	1
3206-LX	PLUG	1
3206-LY	KEY, STRAIGHT	1
3206-LZ	SLEEVE, THROTTLE VALVE, NO.2	1
3206-MA	SPRING	1
3206-MB	VALVE, THROTTLE	1
3206-MC	SPRING, COMPRESSION	1
3206-MD	RING	99
3206-ME	VALVE, 1-2 RELAY	1
3206-MF	PLUG	1
3206-MG	SPRING, COMPRESSION	1
3206-MH	PIN, STRAIGHT	1
3206-MI	VALVE, 1-2 SHIFT	1
3206-MJ	SPRING, COMPRESSION	1
3206-MK	VALVE, 2ND LOCK	1
3206-ML	KEY, STRAIGHT	1
3206-MM	PLUG	1
3206-MN	VALVE, INTERMEDIATE COAST SHIFT	1
3206-MO	VALVE, SECONDARY REGULATOR	1
3206-MP	SPRING, COMPRESSION	1
3206-MQ	KEY, STRAIGHT	1
3206-MR	PLUG	1
3206-MS	COVER, VALVE BODY, NO.2	1
3206-MT	PLUG, STRAIGHT	1
3206-MU	PIN, LOCATING	1
3206-MV	VALVE, 3RD COAST	1
3206-MW	VALVE, OVERDRIVE CLUTCH EXHAUST	1
3206-MX	SPRING, COMPRESSION	1
3206-MY	PLUG	1
3206-MZ	KEY, STRAIGHT	1
3206-NA	VALVE, SECONDARY THROTTLE	1
3206-NB	SPRING, COMPRESSION	1
3206-NC	VALVE, 2-3 SHIFT TIMING	1
3206-ND	SPRING, COMPRESSION	1
3206-NE	VALVE, 1-2 KICK DOWN DRIFICE CONTROL	1
3206-NF	SPRING	1
3206-NG	KEY, STRAIGHT	1

PART NAME	PART NAME	QTY
CODE		
3206-NH	PLUG	1
3206-NI	VALVE, ACCUMULATOR CONTROL, NO.1	1
3206-NJ	SPRING, COMPRESSION	1
3206-NK	KEY, STRAIGHT	1
3206-NL	PLUG	1
3206-NM	VALVE, MANUAL DOWN TIMING	1
3206-NN	PLUG	1
3206-NO	KEY, STRAIGHT	1
3206-NP	VALVE, 3-4 SHIFT	1
3206-NQ	SPRING, COMPRESSION	1
3206-NR	PLUG	1
3206-NT	VALVE, 3-4 COAST SHIFT	1
3206-NU	CAM ASSY, THROTTLE VALVE	1
3206-NW	SPACER, MANUAL DETENT SPRING	1
3206-NX	COVER, MANUAL DETENT SPRING	1
3206-NY	TUBE, TRANSMISSION LUBE APPLY	1
3206-NZ	GASKET, CENTER SUPPORT APPLY	4
3206-PB	LEVER SUB-ASSY, MANUAL VALVE	1
3206-PC	PIN, SPRING	1
3206-PK	SHAFT, MANUAL VALVE LEVER	1
3206-PL	LEVER, TRANSMISSION CONTROL SHAFT	1
3206-PN	TUBE, LOCK UP SIGNAL VALVE APPLY	1
3206-PO	SLEEVE, INTERMEDIATE COAST SHIFT	1

G708-005E


FIG-3212
GOVERNOR

3212

ATM

90/07

 ATM

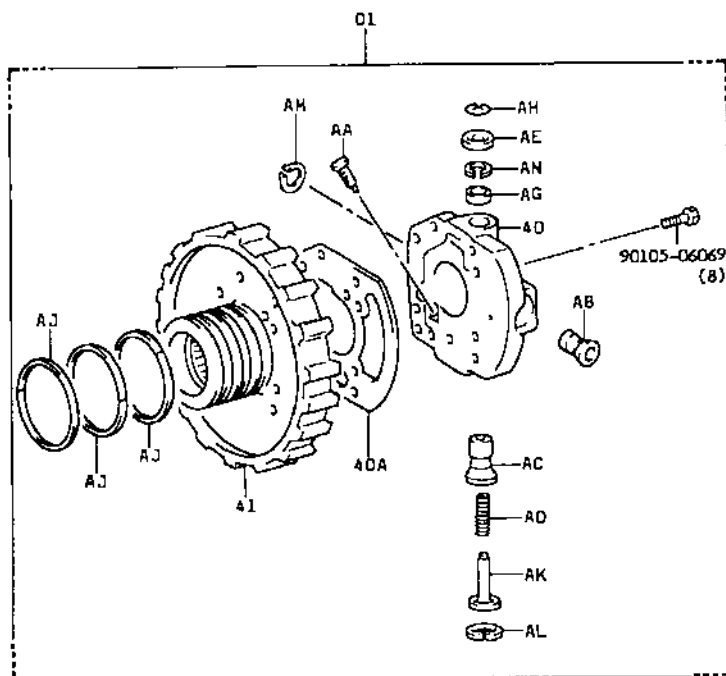

PART NAME	PART NAME	QTY
CODE		
3212-01	BODY ASSY, GOVERNOR	1
3212-40	BODY, GOVERNOR	1
3212-40A	GASKET, GOVERNOR BODY	1
3212-41	SUPPORT, GOVERNOR BODY	1
3212-AA	STRAINER, GOVERNOR OIL	1
3212-AB	VALVE, GOVERNOR, NO.1	1
3212-AC	VALVE, GOVERNOR, NO.2	1
3212-AD	SPRING, COMPRESSION	1
3212-AE	SPACER	1
3212-AG	WEIGHT, GOVERNOR	1
3212-AH	RING, E	1
3212-AJ	RING	3
3212-AK	SHAFT, GOVERNOR VALVE, NO.2	1
3212-AL	RING, SNAP	1
3212-AM	RING, SNAP	1
3212-AN	RING, E	1

3212-001B

G708-001E



FIG. 3213
TORQUE CONVERTER PIPING

3213

ATM

90/07

  ATM

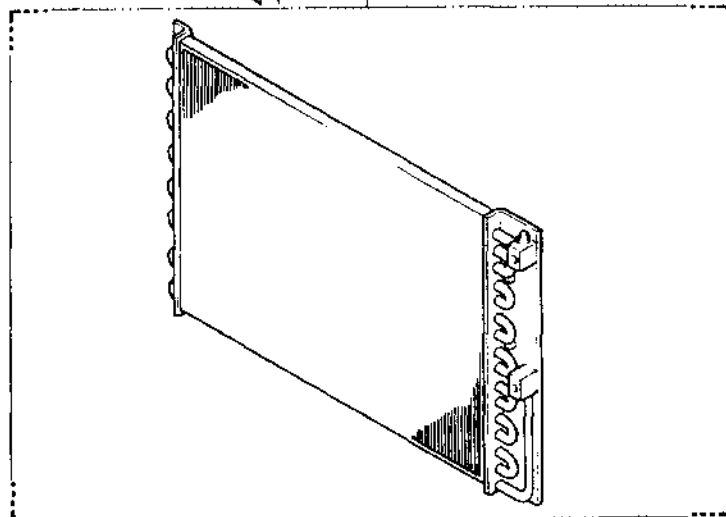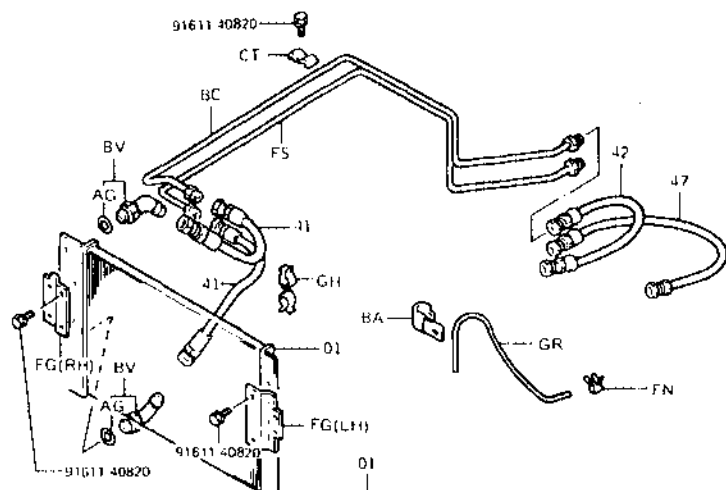

3213 D/8A


PART NAME	PART NAME	QTY
CODE		
3213-01	COOLER ASSY, OIL	1
3213-41	HOSE, LOW PRESSURE, NO.1 (FOR OIL COOLER)	2
3213-42	HOSE, LOW PRESSURE, NO.2 (FOR OIL COOLER)	1
3213-47	HOSE, LOW PRESSURE, NO.3 (FOR OIL COOLER)	1
3213-AG	RING, O	2
3213-BA	CLAMP, HOSE	1
3213-BC	PIPE SUB-ASSY, OIL COOLER	1
3213-BV	FITTING	2
3213-CT	CLAMP	3
3213-FG	BRACKET, COOLER	1
3213-FN	CLAMP	1
3213-FS	PIPE SUB-ASSY, OIL COOLER	1
3213-GH	CLAMP	1
3213-GR	HOSE	1

G708-001E

3215

89/11

PART NAME	PART NAME	QTY
CODE		
3215-10	END ASSY, CONNECTING ROD, NO.1	1
3215-11	END ASSY, CONNECTING ROD, NO.2	1
3215-22	LEVER SUB-ASSY, SHIFT	1
3215-37	ROD SUB-ASSY, SHIFT	1
3215-39	ROD SUB-ASSY, SHIFT	1
3215-40	KNOB	1
3215-41	SHAFT, NO.1	1
3215-AC	NUT	1
3215-AE	BRACKET SUB-ASSY	1
3215-AH	BUSHING	2
3215-AK	NUT	1
3215-AN	SPACER	1
3215-AP	BOLT	4
3215-AX	NUT	1
3215-AZ	BOLT	1
3215-BI	LINK SUB-ASSY, SHIFT LEVER, NO.1	1
3215-BQ	PLATE, SHIFT POSITION	1
3215-BR	COVER SUB-ASSY, SHIFT LEVER	1
3215-CB	BUSHING	2
3215-CF	END SUB-ASSY	1
3215-CP	END SUB-ASSY	1
3215-EU	SCREW	4

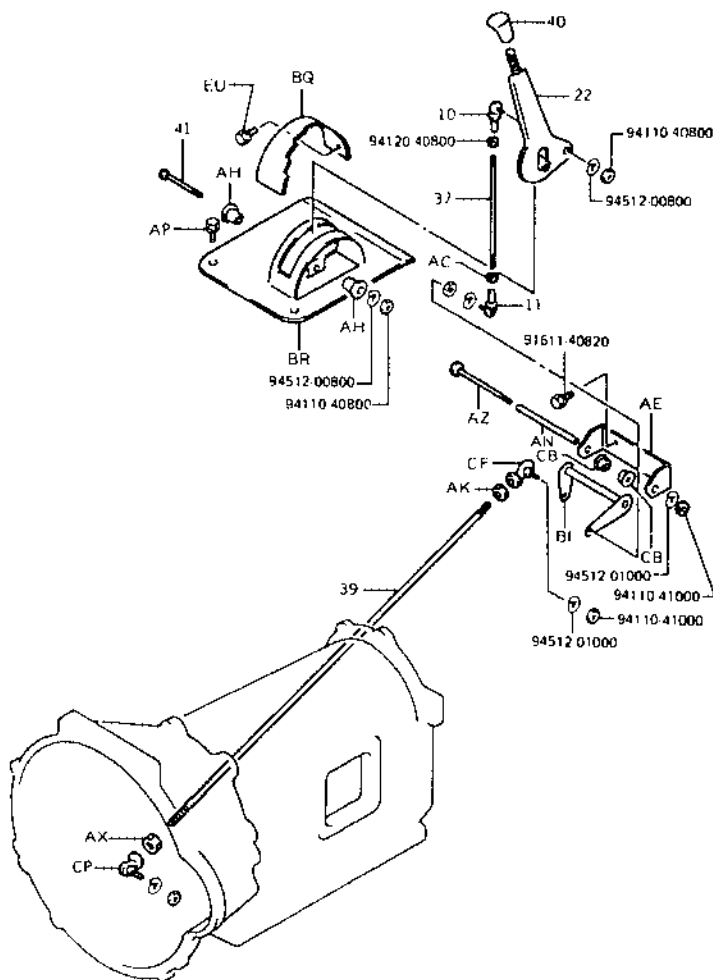 

G708-001E


FIG. 3701
PROPELLER SHAFT & UNIVERSAL JOINT

3701

ATM

89/11

 ATM

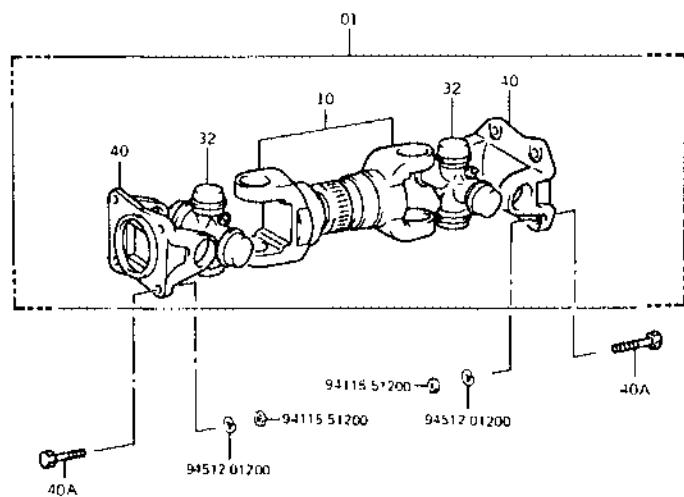

3701 046

PART NAME CODE	PART NAME	QTY
3701-01	SHAFT ASSY, PROPELLER	1
3701-10	YOE ASSY, SLIP & STAB	1
3701-32	SPIDER SET, UNIVERSAL	2
3701-40	YOE, UNIVERSAL JOINT FLANGE	2
3701-40A	BOLT (FOR UNIVERSAL JOINT FLANGE YOE)	8

G708-001E

4101

89/11

ATM. - 15.18



G708-001


FIG. 4101
DIFFERENTIAL

4101

ATM

89/11

 ATM, 20, 23, 25

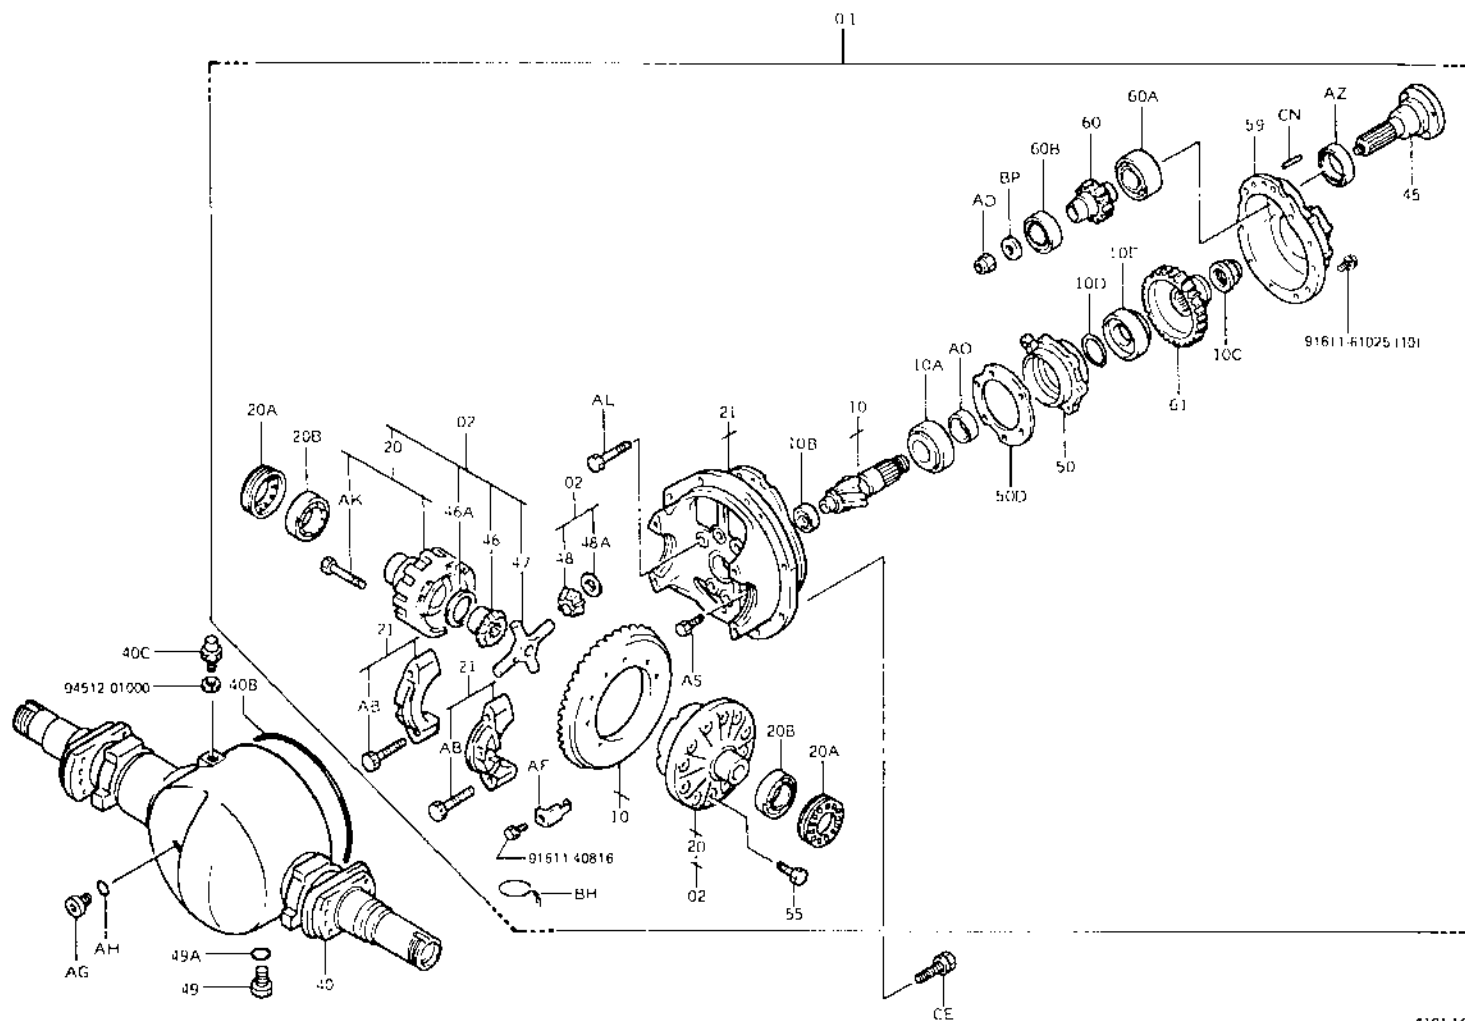

4101 101

G708-002

FIG. 4101
DIFFERENTIAL

4101

ATM

89/11

PART NAME	PART NAME	QTY
CODE		
4101-01	CARRIER ASSY, DIFFERENTIAL	1
4101-02	CASE ASSY, DIFFERENTIAL	1
4101-10	RING GEAR & PINION SET, DIFFERENTIAL	1
4101-10A	BEARING, DRIVE PINION	1
4101-10B	BEARING, DRIVE PINION PILOT	1
4101-10C	NUT, LOCK	1
4101-10D	SHIM, BEARING PRELOAD ADJUST	99
4101-10E	BEARING, DRIVE PINION	1
4101-20	CASE SUB-ASSY, DIFFERENTIAL	1
4101-20A	NUT, ADJUSTING	2
4101-20B	BEARING, DIFFERENTIAL CASE	2
4101-21	CARRIER SUB-ASSY, DIFFERENTIAL	1
4101-40	HOUSING, DIFFERENTIAL	1
4101-40B	RING, O (FOR DIFFERENTIAL HOUSING)	1
4101-40C	PLUG, BREATHER (FOR DIFFERENTIAL HOUSING)	1
4101-45	SHAFT, REDUCTION	1
4101-46	GEAR, SIDE	2
4101-46A	WASHER, SIDE GEAR THRUST	2
4101-47	SPIDER	1
4101-48	PINION	4
4101-48A	WASHER, PINION THRUST	4
4101-49	PLUG, DRAIN	1
4101-49A	GASKET, DRAIN PLUG	1
4101-50	RETAINER, DRIVE PINION BEARING	1
4101-50D	SHIM, DIFFERENTIAL DRIVE PINION BEARING	99
4101-54	ICAP, RING GEAR THRUST SCREW	1
4101-55	IBOLT, RING GEAR SET	12
4101-59	ICOVER, DIFFERENTIAL CARRIER	1
4101-60	GEAR, REDUCTION	1
4101-60A	BEARING, NO.1 (FOR REDUCTION GEAR)	1
4101-60B	BEARING, NO.2 (FOR REDUCTION GEAR)	1
4101-61	GEAR, OUTPUT	1
4101-AB	IBOLT	4
4101-AC	ISCREW, RING GEAR THRUST	1
4101-AD	INUT	1
4101-AF	LOCK, ADJUSTING	2
4101-AG	PLUG, W/HEAD STRAIGHT SCREW	1
4101-AH	IGASKET	1
4101-AK	IBOLT	12-16
4101-AL	IBOLT	4
4101-AD	SPACER, BEARING	1
4101-A5	IBOLT	2
4101-AZ	ISEAL, OIL	1
4101-BH	IWIRE	2
4101-BJ	INUT	1
4101-BP	WASHER	1
4101-CE	IBOLT	8
4101-CN	PIN, STRAIGHT	2

G708-003E

FIG. 4205
REAR AXLE SHAFT

 
4205

ATM

89/11

ATM-15,18

ATM-20,23,25

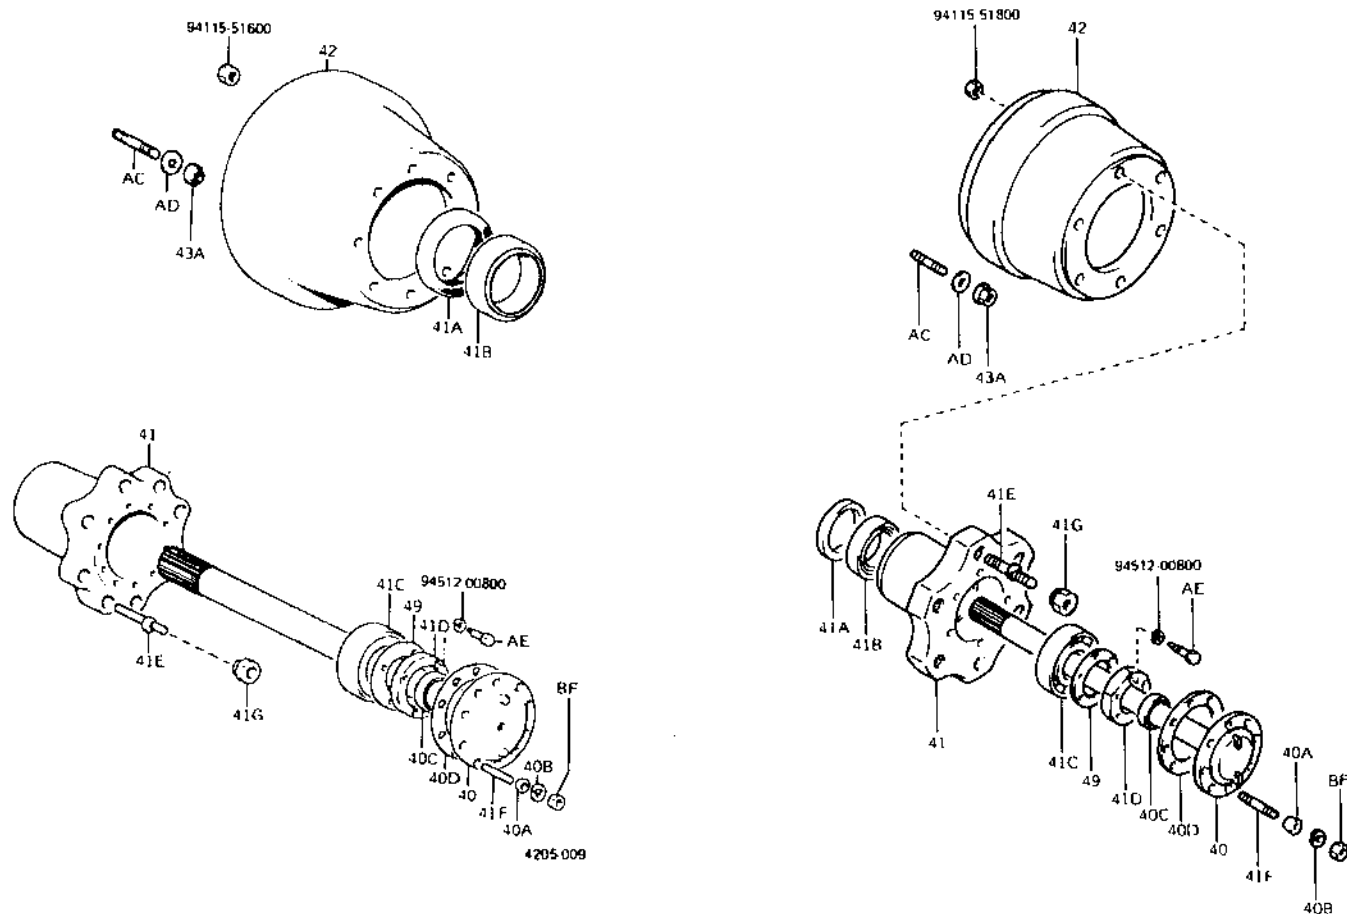

4205-010

G708-001

FIG. 4205
REAR AXLE SHAFT

4205

ATM

89/11

PART NAME CODE	PART NAME	QTY
4205-40	SHAFT, REAR AXLE	1
4205-40A	WASHER, CORN	16-20
4205-40B	WASHER, SPRING	20
4205-40C	SEAL, OIL (FOR REAR AXLE SHAFT)	2
4205-40D	GASKET, REAR AXLE SHAFT	2
4205-41	HUB, REAR AXLE	2
4205-41A	SEAL, OIL (FOR REAR AXLE HUB)	2
4205-41B	BEARING, NO.1 (FOR REAR AXLE HUB)	2
4205-41C	BEARING, NO.2 (FOR REAR AXLE HUB)	2
4205-41D	NUT, BEARING ADJUSTING	2
4205-41E	BOLT, HUB	12-16
4205-41F	BOLT, STUD (FOR REAR AXLE SHAFT)	16-20
4205-41G	NUT, HUB	12-16
4205-42	DRUM, BRAKE	2
4205-43A	NUT, BRAKE SET SELF	16
4205-49	PLATE, LOCK NUT	2
4205-AC	BOLT, STUD BRAKE SET	8-16
4205-AD	WASHER, CO SPRING	16
4205-AE	BOLT	2
4205-BF	NUT	16-20

G708-002E


FIG. 4306
FRONT AXLE & TIE-ROD

4306

ATM

90/07

 ATM

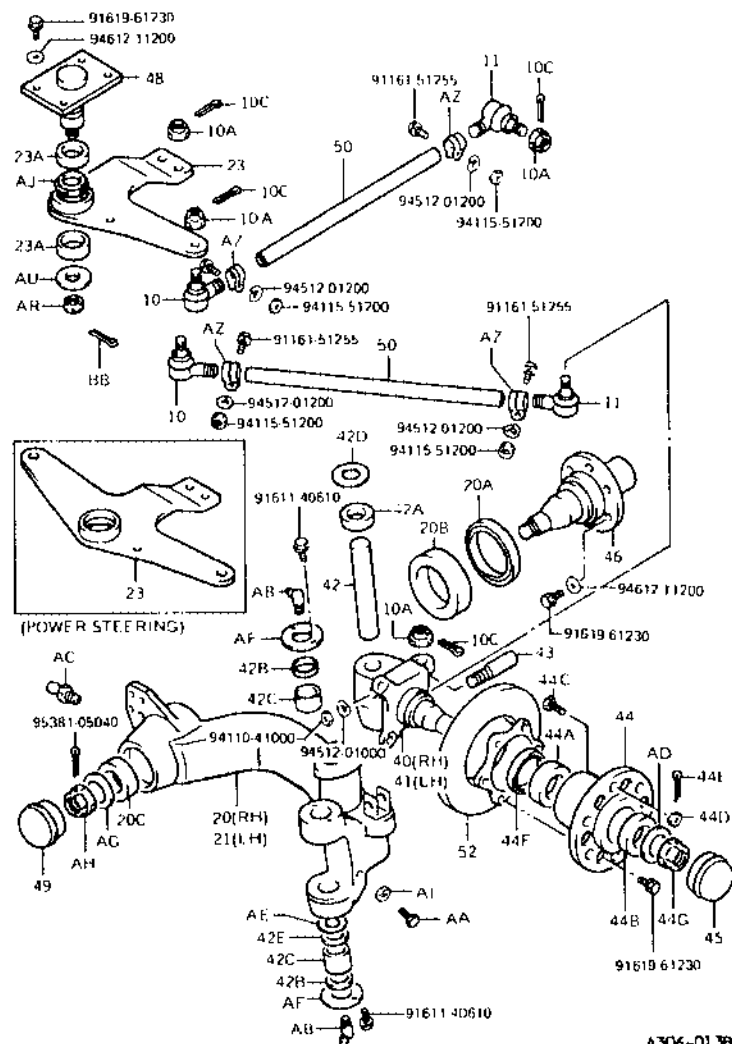

PART NAME	PART NAME	QTY
CODE		
4306-10	END ASSY, TIE-ROD, NO.1	2
4306-10A	NUT, CASTLE (FOR TIE-ROD END)	4
4306-10C	PIN, COTTER (FOR TIE-ROD END)	4
4306-11	END ASSY, TIE-ROD, NO.2	2
4306-20	ARM SUB-ASSY, TRAILING, RH	1
4306-20A	SEAL, OIL (FOR TRAILING ARM)	2
4306-20B	BEARING, NO.1 (FOR TRAILING ARM)	2
4306-20C	BEARING, NO.2 (FOR TRAILING ARM)	2
4306-21	ARM SUB-ASSY, TRAILING, LH	1
4306-23	BELLCRANK SUB-ASSY, STEERING	1
4306-23A	BEARING (FOR STEERING BELLCRANK)	2
4306-40	KNUCKLE, STEERING, RH	1
4306-41	KNUCKLE, STEERING, LH	1
4306-42	PIN, STEERING KNUCKLE KING	2
4306-42A	BEARING, STEERING KNUCKLE THRUST	2
4306-42B	SEAL, OIL, NO.1	4
4306-42C	BEARING, NEEDLE	4
4306-42D	SHIM, STEERING KNUCKLE	99
4306-42E	SEAL, OIL, NO.2	2
4306-43	PIN, KING PIN LOCK	2
4306-44	HUB, FRONT AXLE	2
4306-44A	BEARING, INNER	2
4306-44B	BEARING, OUTER	2
4306-44C	BOLT, HUB	12
4306-44D	NUT, HUB	12
4306-44E	PIN, FRONT AXLE COTTER	2
4306-44F	SEAL, OIL (FOR FRONT AXLE HUB)	2
4306-44G	NUT, CASTLE (FOR FRONT AXLE HUB)	2
4306-45	SHAFT, TRAILING ARM	2
4306-46	CAP, FRONT AXLE HUB	2
4306-48	SHAFT, TRAILING ARM	1
4306-49	PIN, BELLCRANK	2
4306-50	CAP (FOR TRAILING ARM)	2
4306-52	ROD, TIE	2
4306-AA	DISC, BRAKE	2
4306-AB	BOLT	2
4306-AC	FITTING, GREASE	4
4306-AD	FITTING, GREASE	2
4306-AE	WASHER, CRAW	2
4306-AF	SHIM	1
4306-AG	PLATE, STOPPER	4
4306-AH	WASHER, CLAW	2
4306-AI	NUT, CASTLE	2
4306-AJ	NUT	1
4306-AR	SPACER	1
4306-AU	NUT	1
4306-AZ	PLATE, STOPPER	1
4306-BB	CLAMP, TIE ROD END	4
	FITTING, GREASE	1

G708-001E



FIG-4401
FRONT WHEEL & TIRE(SINGLE)

4401

ATM

89/11

  ATM

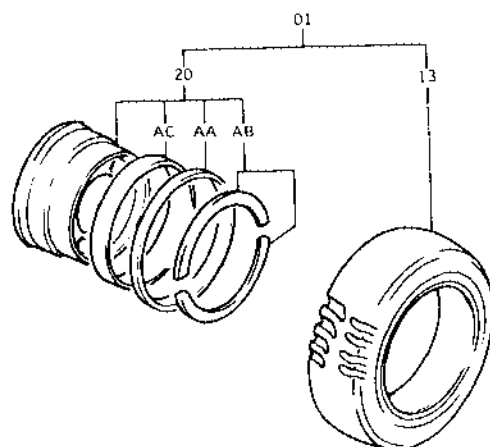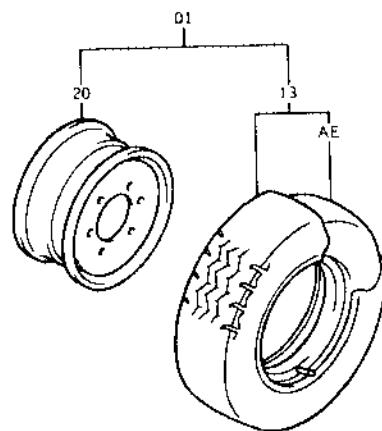

4401 062

PART NAME CODE	PART NAME	QTY
4401-01	WHEEL ASSY	2
4401-13	TIRE ASSY	2
4401-20	WHEEL SUB-ASSY, DISC	2
4401-AA	FLANGE, SIDE	2
4401-AB	RING, LOCK	4
4401-AC	BAND, BEND SHEET	2
4401-AE	TUBE SUB-ASSY	2

G708-001E





FIG. 4403
REAR WHEEL & TIRE

4403

ATM

89/11

    ATM

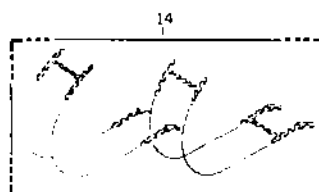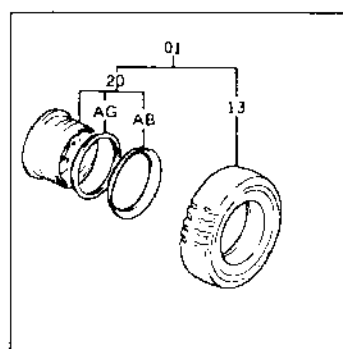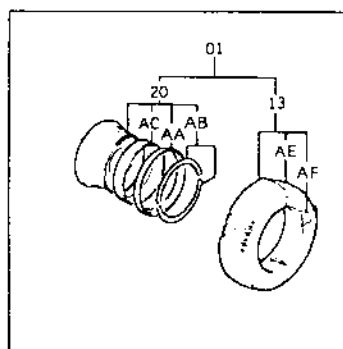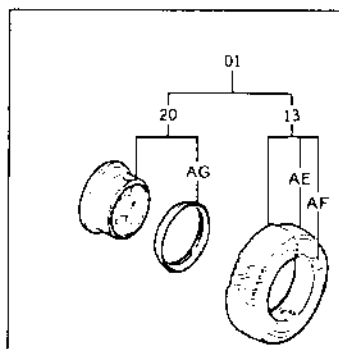

4403-067

PART NAME	PART NAME	QTY
CODE		
4403-01	WHEEL ASSY	2
4403-13	TIRE ASSY	2
4403-14	CHAIN ASSY, TIRE	2
4403-20	WHEEL SUB-ASSY, DISC	2
4403-40	BAND, CHAIN	2
4403-AA	FLANGE, SIDE	2
4403-AB	RING, LOCK	2-4
4403-AC	BAND, BEND SHEET	2
4403-AE	TUBE SUB-ASSY	2
4403-AF	FLAP	2
4403-AG	RING, SIDE	2

G708-001E


FIG. 4501
STEERING WHEEL

4501

ATM

89/11

 ATM

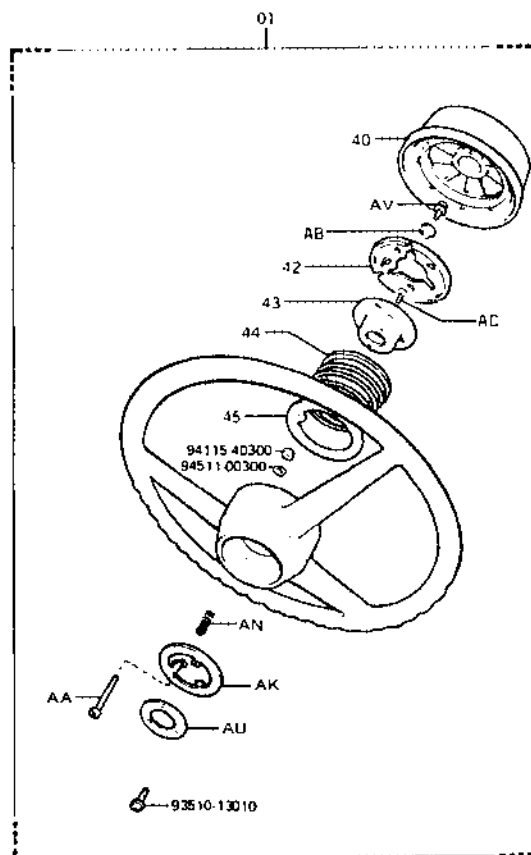

PART NAME	PART NAME	QTY
CODE		
4501-01	WHEEL ASSY, STEERING	1
4501-40	BUTTON, HORN	1
4501-42	PLATE, HORN CONTACT	1
4501-43	SEAT, HORN CONTACT	1
4501-44	SPRING, HORN	1
4501-45	PLATE, LEAD	1
4501-AA	SCREW	1
4501-AB	WASHER	3
4501-AC	SCREW	2
4501-AK	RING, HORN CONTACT NO.1	1
4501-AN	SPRING, LEAD	1
4501-AU	RING, HORN CONTACT NO.2	1
4501-AV	SCREW	3

4501 037

G708-001E

FIG. 4502
STEERING POST

 
4502

ATM


90/07

ATM..15,18,23 (1/2, STD)

ATM..15,18,23 (TILT STEERING) (1/2)

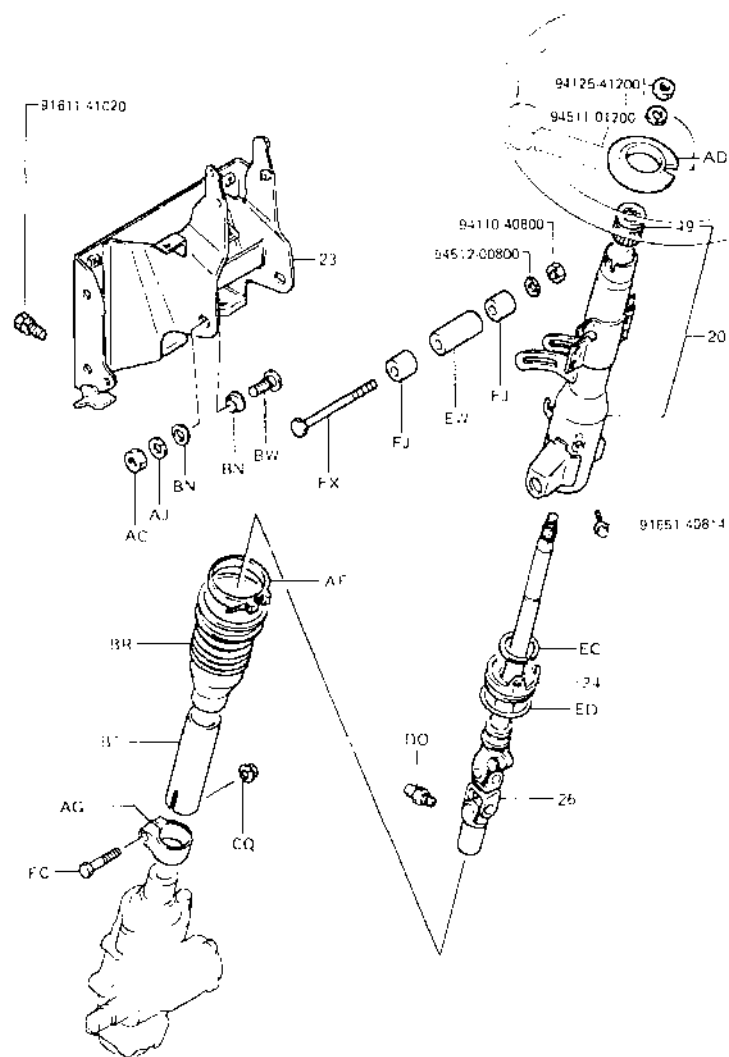

4502-128B

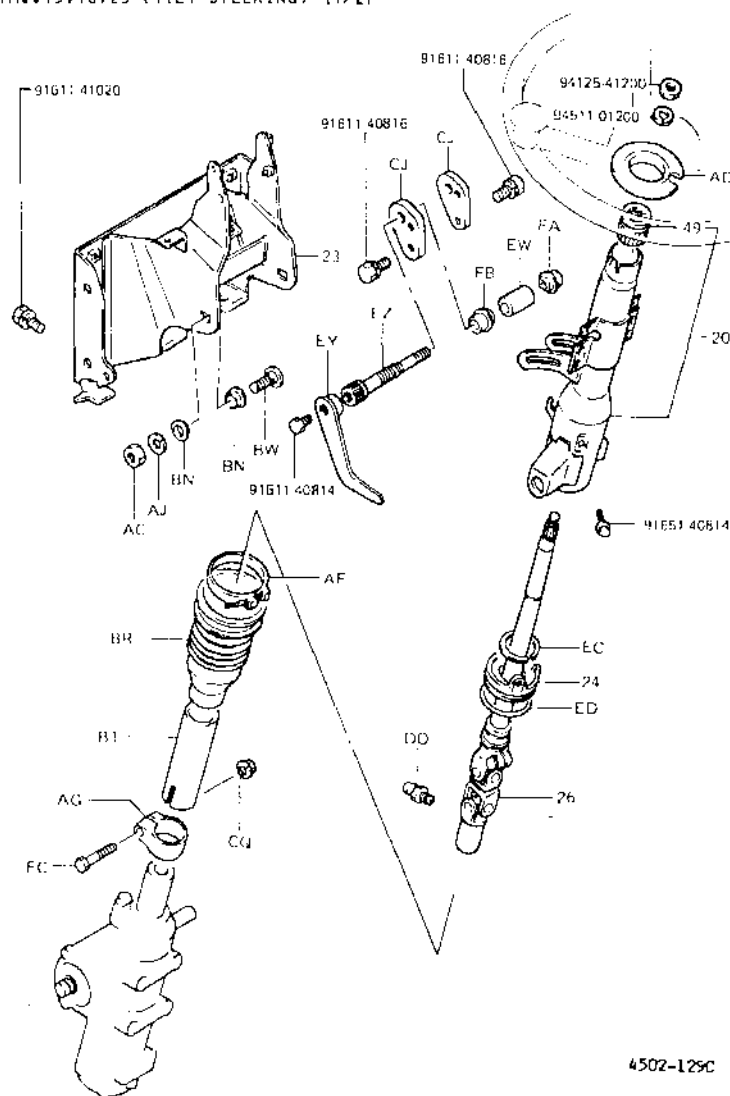 


4502-129C

G708-001

4502

90/07

 ATM, 20, 25 (1/2, L/TILT STEERING)

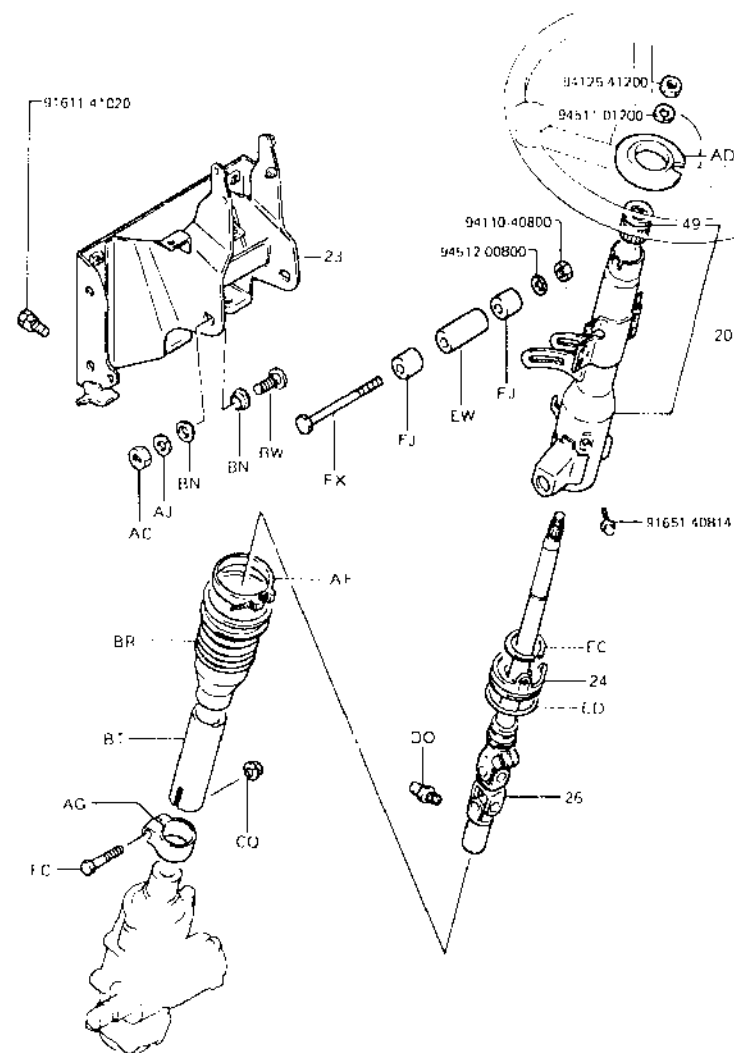

4502-1288

G708-002

FIG. 4502
STEERING POST

 
4502

ATM


90/07

ATM (M/S) 12/21

ATM (P/S) 12/21

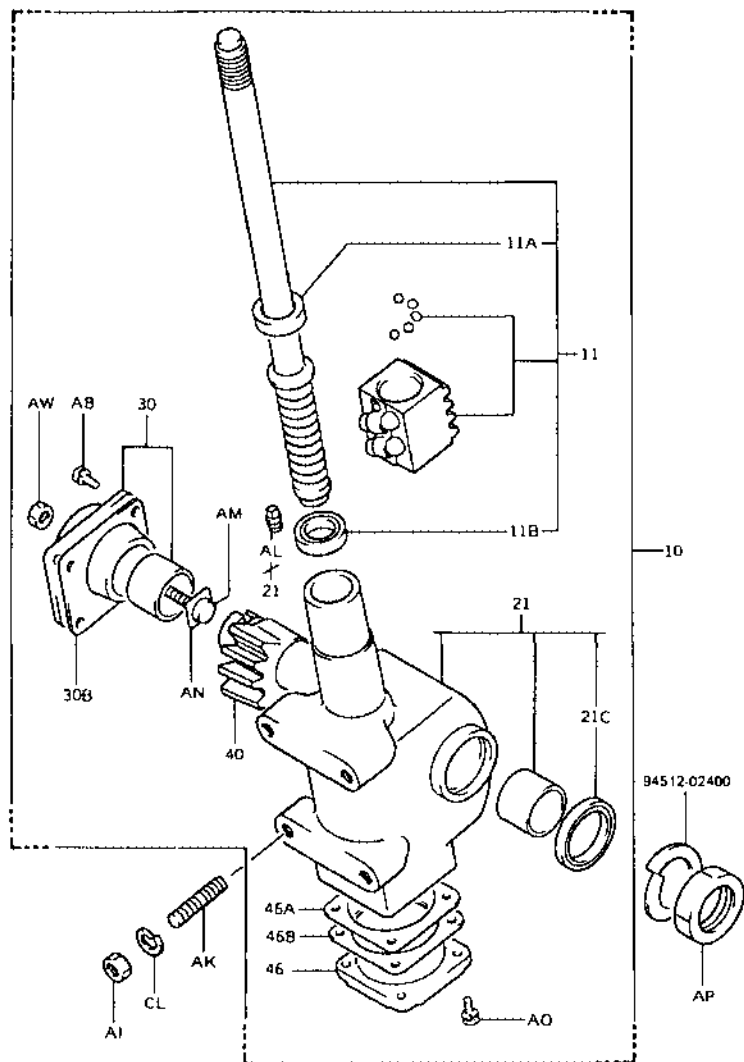

4502-133A

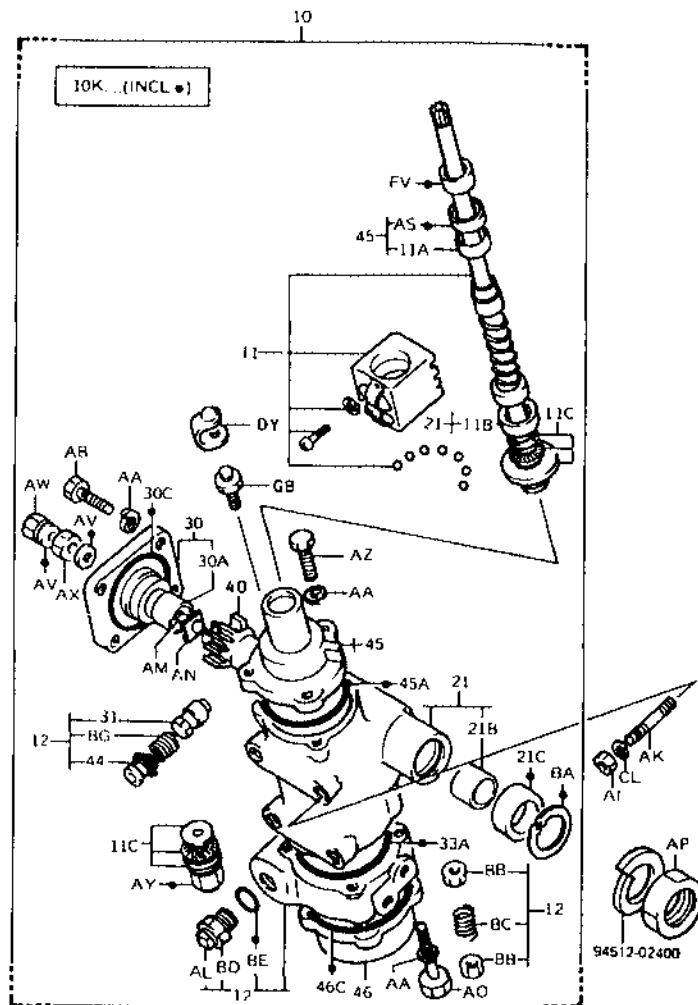 

4502-130B

G708-003

4502-133A

4502-130B 0057

FIG. 4502
STEERING POST

4502

ATM

90/07

PART NAME	PART NAME	QTY
CODE		
4502-10	IGEAR ASSY, STEERING	1
4502-10K	IGEAR O/H KIT, STEERING	1
4502-11	IBALL SCREW SET	1
4502-11A	IBEARING, NO.1 (FOR BALL SCREW SET)	1
4502-11B	IBEARING, NO.2 (FOR BALL SCREW SET)	1
4502-11C	IBEARING, THRUST (FOR BALL SCREW SET)	2
4502-12	IBODY ASSY, VALVE	1
4502-20	IJACKET SUB-ASSY, MAST	1
4502-21	IBOX SUB-ASSY, STEERING GEAR	1
4502-21B	IBEARING, NO.1 (FOR SECTOR SHAFT)	1
4502-21C	ISEAL, OIL (FOR SECTOR SHAFT)	1
4502-23	IBRACKET SUB-ASSY, TILT STEERING	1
4502-24	ISTOPPER SUB-ASSY, STEERING SHAFT	1
4502-26	ISHAFT SUB-ASSY, TILT STEERING	1
4502-30	ICOVER SUB-ASSY, SIDE	1
4502-30A	IBUSHING, SECTOR SHAFT, NO.2	1
4502-30B	IPACKING, SIDE COVER	1
4502-30C	IRING, O (FOR SIDE COVER)	1
4502-31	IVALVE SET, RELIEF	1
4502-33A	IRING, O (FOR VALVE BODY SET)	1
4502-40	ISHAFT, SECTOR	1
4502-44	IPISTON, BALANCE	1
4502-45	ICOVER, TOP	1
4502-45A	IRING, O (FOR TOP COVER)	1
4502-46	ICOVER, END	1
4502-46A	IPACKING, END COVER	1
4502-46B	ISHIM (FOR END COVER)	1
4502-46C	IRING, O (FOR END COVER)	1
4502-49	IGROMMET, STEERING COLUMN (INSULATOR)	1
4502-AA	IWASHER, SPRING	1
4502-AB	IBOLT	4
4502-AC	INUT	2
4502-AD	IGROMMET	1
4502-AF	ICLAMP	1
4502-AG	ICLAMP, STEERING COLUMN, LOWER	1
4502-AI	INUT	4
4502-AJ	IWASHER, SPRING	2
4502-AK	IBOLT, STUD	4
4502-AL	IPUG, OIL	1
4502-AM	IBOLT, ADJUSTING	1
4502-AN	IPLATE, ADJUSTING	1
4502-AD	IBOLT	4
4502-AP	INUT	1
4502-A5	ISEAL, OIL	1
4502-AV	IPACKING	2
4502-AW	INUT	1
4502-AX	INUT	1
4502-AY	INUT, LOCK	1
4502-AZ	IBOLT	3
4502-BA	IRING, SNAP	1
4502-BB	ISEAT	8
4502-BC	ISPRING	4
4502-BD	ISTOPPER, BALANCE PISTON	1
4502-BE	IRING, O	1
4502-BG	ISPRING, BALANCE PISTON	1
4502-BN	IBUSHING	4
4502-BR	IBOOT, MAST JACKET	1
4502-BT	IJACKET	1
4502-BW	IBOLT	2
4502-CJ	ISTOPPER	2
4502-CL	IWASHER, SPRING	4
4502-CO	INUT	1
4502-DD	IFITTING, GREASE	1
4502-EC	IRING	1

PART NAME	PART NAME	QTY
CODE		
4502-ED	IRING	1
4502-EW	ICOLLAR, TILT LOCK	1
4502-EY	ILEVER SUB-ASSY, TILT LOCK	1
4502-EZ	IBOLT, TILT LOCK	1
4502-FA	INUT, ADJUSTING, RH	1
4502-FB	INUT, ADJUSTING, LH	1
4502-FC	IBOLT	1
4502-FJ	ICOLLAR, TILT LOCK	2
4502-FV	IBOOT	1
4502-FX	IBOLT	1

G708-004E

FIG. 4507
DRAG LINK & STEERING PIPING

 
 
4507

ATM

90/07

ATM (M/S)

ATM (P/S) (1/2)

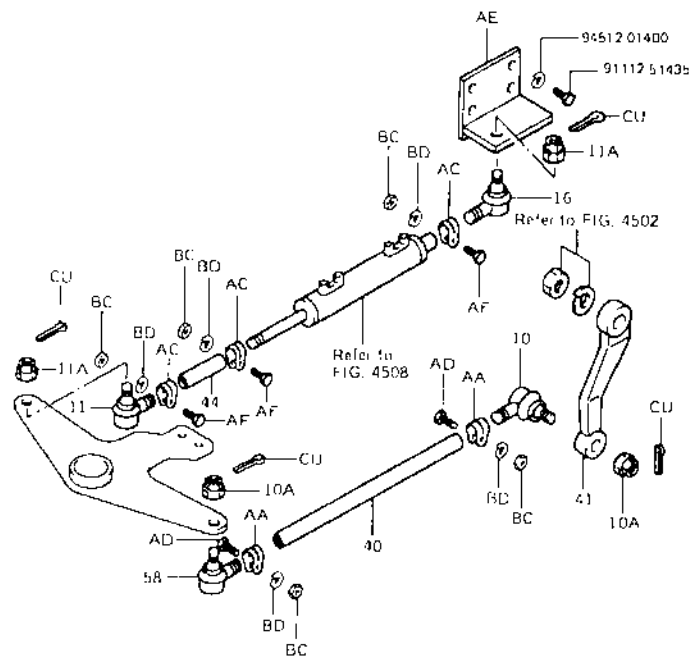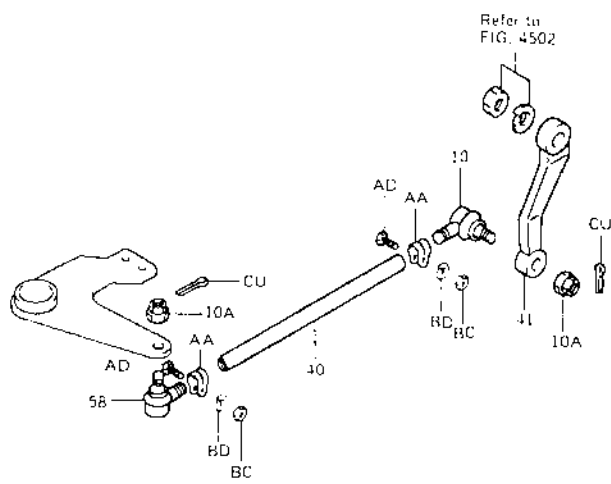

4507 109


4507-110

G708-001

4507

90/07

PART NAME	PART NAME	QTY
CODE		
4507-05	RESERVOIR ASSY, POWER STEERING OIL	1
4507-10	END ASSY, DRAG LINK	1
4507-10A	NUT, CASTLE (FOR DRAG LINK END)	2
4507-11	END ASSY, POWER CYLINDER	1
4507-11A	NUT, CASTLE (FOR POWER CYLINDER END)	2
4507-16	END ASSY, POWER CYLINDER	1
4507-25	BACKET SUB-ASSY, RESERVOIR	1
4507-26	JOINT SUB-ASSY, POWER STEERING PUMP OUTLET	1
4507-30	PIPE SUB-ASSY, NO.1 (STEERING TO CYLINDER)	1
4507-31	PIPE SUB-ASSY, NO.2 (STEERING TO CYLINDER)	1
4507-32	PIPE SUB-ASSY (PUMP TO STEERING)	1
4507-33	PIPE SUB-ASSY (STEERING TO RESERVOIR)	1
4507-40	ROD, DRAG LINK, NO.1	1
4507-41	ARM, PITMAN	1
4507-42	HOSE, POWER CYLINDER, NO.1	1
4507-43	HOSE, POWER CYLINDER, NO.2	1
4507-44	END, POWER CYLINDER	1
4507-45	HOSE, POWER STEERING PUMP SUCTION	1
4507-46	HOSE, HIGH PRESSURE (PUMP TO STEERING)	1
4507-47	HOSE, LOW PRESSURE (STEERING TO RESERVOIR)	1
4507-58	END, DRAG LINK ROD, FRONT	1
4507-AA	CLAMP, END	2
4507-AC	CLAMP, END	1
4507-AD	BOLT	2
4507-AE	BACKET SUB-ASSY, POWER CYLINDER	1
4507-AF	BOLT	3
4507-AQ	CLAMP	1
4507-BB	CLAMP	5
4507-BC	NUT	2
4507-BD	WASHER, SPRING	2
4507-BJ	CLAMP	1
4507-B5	PIPE SUB-ASSY, POWER CYLINDER	1
4507-BV	PIPE SUB-ASSY, POWER CYLINDER	1
4507-BZ	CLAMP	1
4507-C0	CLAMP, HOSE	2
4507-CU	PIN, COTTER	2
4507-OK	PIPE SUB-ASSY, POWER STEERING	1
4507-DL	PIPE SUB-ASSY, POWER STEERING	1
4507-EJ	BOLT, UNION	1
4507-EK	GASKET	2
4507-GK	CAP SUB-ASSY, OIL TANK	1

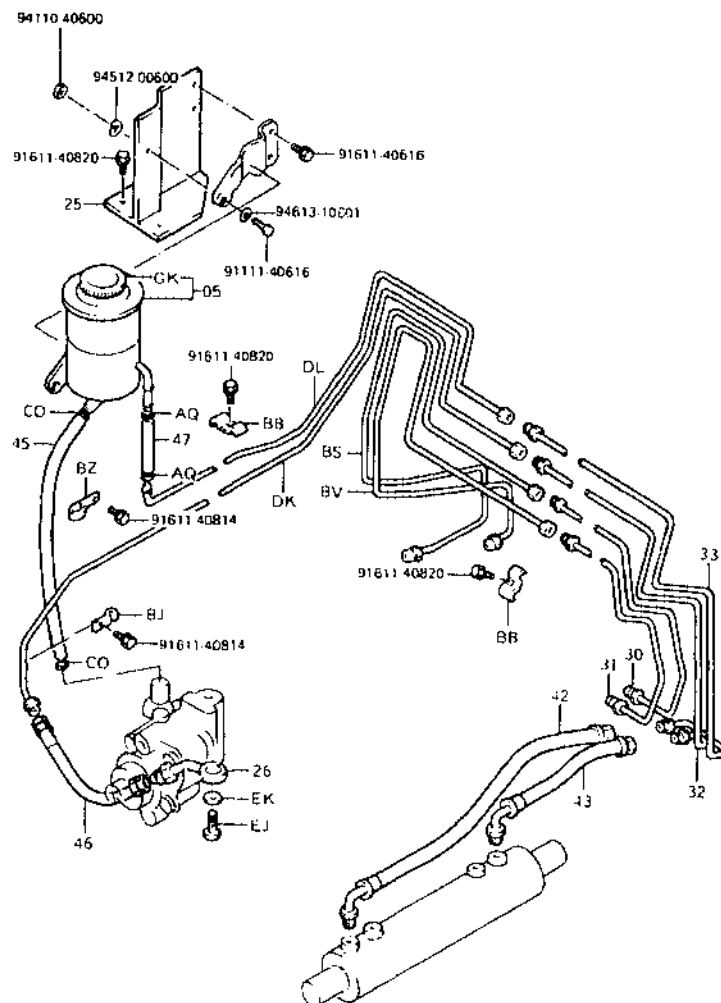 

G708-002E


FIG. 4508
STEERING POWER CYLINDER

4508

ATM

89/11

 ATM (P/S)

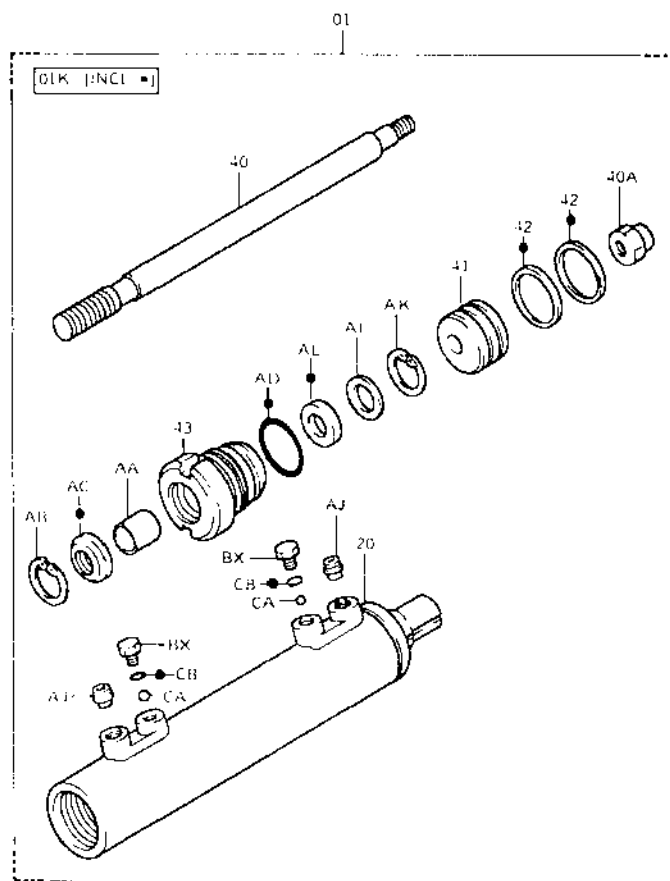

4508 053

PART NAME CODE	PART NAME	QTY
4508-01	CYLINDER ASSY, POWER	1
4508-01K	PACKING KIT, POWER CYLINDER	1
4508-20	CYLINDER SUB-ASSY, POWER	1
4508-40	ROD, PISTON	1
4508-40A	NUT, SELF LOCK (FOR PISTON)	1
4508-41	PISTON	1
4508-42	RING, PISTON	2
4508-43	GUIDE, ROD	1
4508-44	BUSHING	1
4508-45	RING, SNAP	1
4508-46	SEAL, DUST	1
4508-47	RING, O	1
4508-48	COLLAR, REAR COVER	1
4508-49	SEAT	2
4508-50	RING, SNAP	1
4508-51	PACKING, U	1
4508-52	PLUG	2
4508-53	BALL	2
4508-54	RING, O	2

G708-001E

FIG. 4511
STEERING VANE PUMP

 
 
 
4511

ATM


90/07

1DZ...ATM (P/S)

4Y...ATM (P/S)

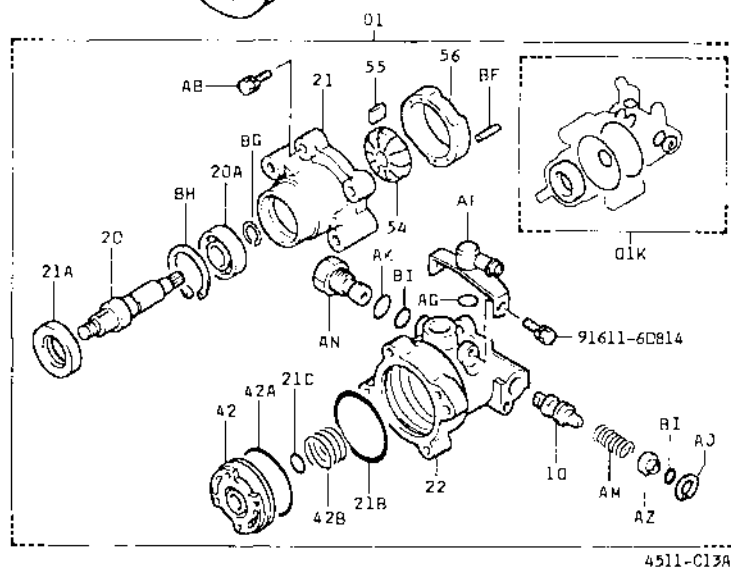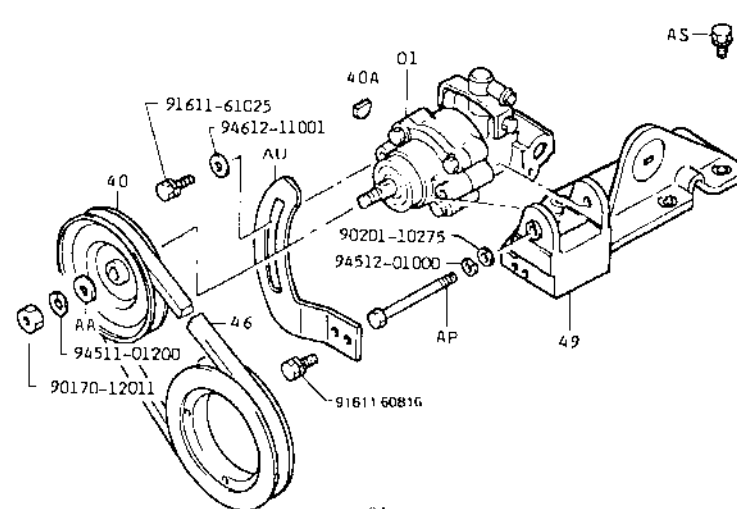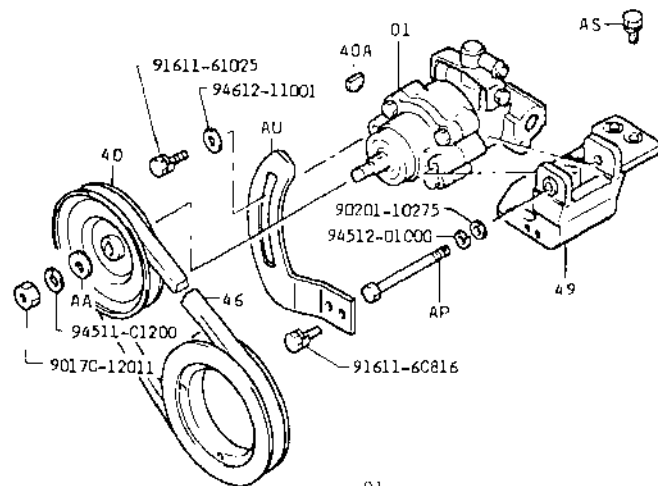

4511-C13A

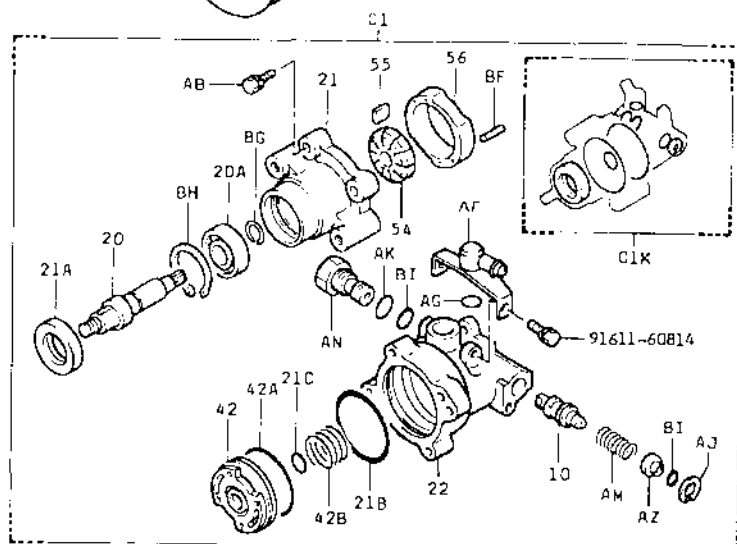 

4511-C12A

G708-001

FIG. 4511
STEERING VANE PUMP

4511

ATM

90/07

PART NAME CODE	PART NAME	QTY
4511-01	PUMP ASSY, VANE	1
4511-01K	PUMP O/H KIT, VANE	1
4511-10	VALVE ASSY	1
4511-20	SHAFT SUB-ASSY, W/ROTOR	1
4511-20A	BEARING	1
4511-21	HOUSING SUB-ASSY, PUMP, FRONT	1
4511-21A	SEAL, OIL (FOR PUMP HOUSING)	1
4511-21B	RING, O (FOR PUMP HOUSING)	1
4511-21C	RING, O	1
4511-22	HOUSING SUB-ASSY, PUMP, REAR	1
4511-40	PULLEY, VANE PUMP	1
4511-40A	KEY, VANE PUMP PULLEY	1
4511-42	PLATE, SIDE, REAR	1
4511-42A	RING, O	1
4511-42B	SPRING, COMPRESSION	1
4511-46	BELT, V	1
4511-49	BRACKET, PUMP	1
4511-54	ROTOR, VANE PUMP	1
4511-55	PLATE, VANE PUMP	10
4511-56	RING, CAM	1
4511-AA	WASHER, PLATE	1
4511-AB	BOLT, SET	4
4511-AF	UNION	1
4511-AG	RING, O	1
4511-AJ	RING, SNAP	1
4511-AK	RING, O	1
4511-AM	SPRING, COMPRESSION	1
4511-AN	UNION	1
4511-AP	BOLT, HEXAGON	1
4511-AS	BOLT	3- 5
4511-AU	STRUT, ADJUSTING	1
4511-AZ	SEAT, FLOW CONTRL SPRING	1
4511-BF	PIN, STRAIGHT	2
4511-BG	RING, SHAFT SNAP	1
4511-BH	RING, HOLE SNAP	1
4511-BJ	RING, O	2

G708-002E

4601

90/07

This diagram shows an exploded view of a mechanical assembly. The components are labeled as follows:

- Top Section:**
 - 08:** A long, thin rod or pin.
 - 32:** Two small circular components, possibly washers or spacers.
 - 37:** A small cylindrical component.
 - 10B:** A large, multi-ribbed cylindrical component.
 - 37:** A small cylindrical component.
 - 10A:** A small cylindrical component.
 - EY:** A small cylindrical component.
 - EX:** A small cylindrical component.
 - 78:** A long, thin rod or pin.
 - 79:** A small cylindrical component.
 - 36:** A long, thin rod or pin.
 - 27:** A small cylindrical component.
- Bottom Section:**
 - 25:** Two long, thin rods or pins.
 - 26:** A small cylindrical component.
 - 27:** A small cylindrical component.
 - 28:** A small cylindrical component.
 - 29:** A small cylindrical component.
 - 30:** A small cylindrical component.
 - 31:** A small cylindrical component.
 - 32:** A small cylindrical component.
 - 33:** A small cylindrical component.
 - 34:** A small cylindrical component.
 - 35:** A small cylindrical component.
 - 36:** A small cylindrical component.
 - 37:** A small cylindrical component.
 - 38:** A small cylindrical component.
 - 39:** A small cylindrical component.
 - 40:** A small cylindrical component.
 - 41:** A small cylindrical component.
 - 42:** A small cylindrical component.
 - 43:** A small cylindrical component.
 - 44:** A small cylindrical component.
 - 45:** A small cylindrical component.
 - 46:** A small cylindrical component.
 - 47:** A small cylindrical component.
 - 48:** A small cylindrical component.
 - 49:** A small cylindrical component.
 - 50:** A small cylindrical component.
 - 51:** A small cylindrical component.
 - 52:** A small cylindrical component.
 - 53:** A small cylindrical component.
 - 54:** A small cylindrical component.
 - 55:** A small cylindrical component.
 - 56:** A small cylindrical component.
 - 57:** A small cylindrical component.
 - 58:** A small cylindrical component.
 - 59:** A small cylindrical component.
 - 60:** A small cylindrical component.
 - 61:** A small cylindrical component.
 - 62:** A small cylindrical component.
 - 63:** A small cylindrical component.
 - 64:** A small cylindrical component.
 - 65:** A small cylindrical component.
 - 66:** A small cylindrical component.
 - 67:** A small cylindrical component.
 - 68:** A small cylindrical component.
 - 69:** A small cylindrical component.
 - 70:** A small cylindrical component.
 - 71:** A small cylindrical component.
 - 72:** A small cylindrical component.
 - 73:** A small cylindrical component.
 - 74:** A small cylindrical component.
 - 75:** A small cylindrical component.
 - 76:** A small cylindrical component.
 - 77:** A small cylindrical component.
 - 78:** A small cylindrical component.
 - 79:** A small cylindrical component.
 - 80:** A small cylindrical component.
 - 81:** A small cylindrical component.
 - 82:** A small cylindrical component.
 - 83:** A small cylindrical component.
 - 84:** A small cylindrical component.
 - 85:** A small cylindrical component.
 - 86:** A small cylindrical component.
 - 87:** A small cylindrical component.
 - 88:** A small cylindrical component.
 - 89:** A small cylindrical component.
 - 90:** A small cylindrical component.
 - 91:** A small cylindrical component.
 - 92:** A small cylindrical component.
 - 93:** A small cylindrical component.
 - 94:** A small cylindrical component.
 - 95:** A small cylindrical component.
 - 96:** A small cylindrical component.
 - 97:** A small cylindrical component.
 - 98:** A small cylindrical component.
 - 99:** A small cylindrical component.
 - 100:** A small cylindrical component.

PART NAME	PART NAME	QTY
CODE		
4601-07	LEVER SET, PARKING BRAKE	1
4601-08	BRACKET SET, PARKING BRAKE	1
4601-10A	SPRING, COMPRESSION	1
4601-10B	KNOB SUB-ASSY, PARKING BRAKE	1
4601-25	CABLE SUB-ASSY, PARKING BRAKE, NO.2	2
4601-27	CLEVIS SUB-ASSY	1
4601-28	LEVER SUB-ASSY, PARKING BRAKE	1
4601-32	LINK SUB-ASSY, PARKING BRAKE, NO.1	2
4601-36	ROD SUB-ASSY, HAND BRAKE	1
4601-37	KNOB SUB-ASSY, PARKING BRAKE RELEASE ROD	1
4601-55	BRACKET SUB-ASSY, HANDBRAKE	1
4601-AB	WASHER, PLATE	2
4601-AF	IPIN, W/HOLE	1
4601-AL	IPIN, W/HOLE	1
4601-AR	IBOLT	1
4601-BL	PLATE, PARKING BRAKE	1
4601-B5	IPIN, COTTER	2
4601-BW	IBOLT	4
4601-BZ	IBOLT	2
4601-CC	WASHER	4
4601-EB	CLAMP, BRAKE CABLE	2
4601-EX	KNOB	1
4601-EY	IBALL	1
4601-FC	HOOK	1
4601-FD	RUBBER, PARKING BRAKE	2
4601-F5	ISTOPPER	1
4601-FX	ISTOPPER	1

4401 094A

0062


FIG. 4701
BRAKE PEDAL

4701

ATM

90/07

 ATM

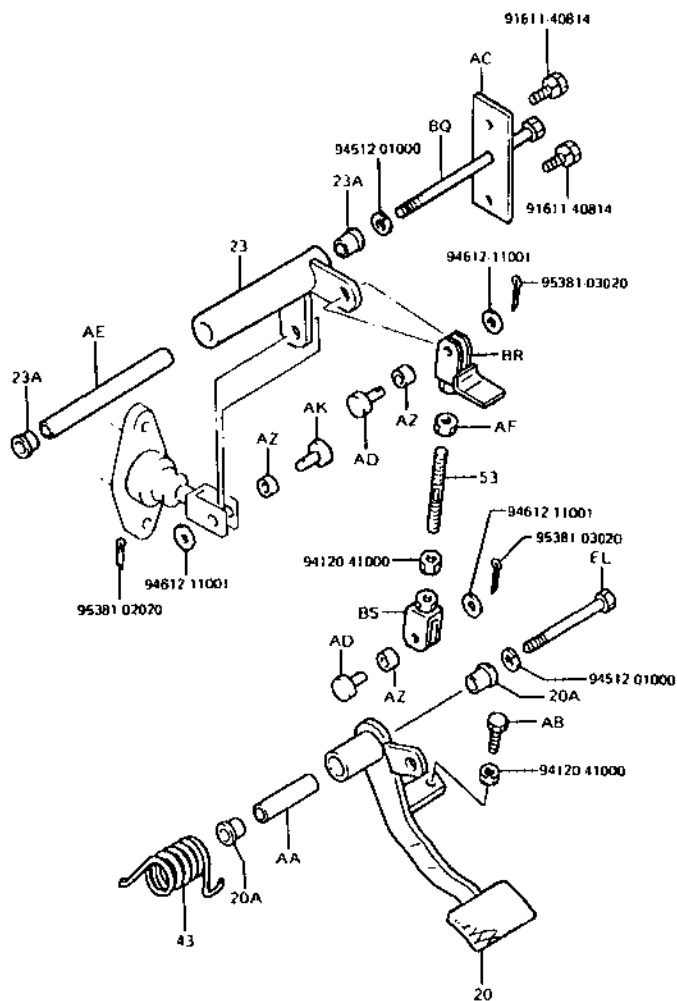

4701-130A

PART NAME CODE	PART NAME	QTY
4701-20	PEDAL SUB-ASSY, BRAKE	1
4701-20A	BUSHING (FOR BRAKE PEDAL)	2
4701-23	LINK SUB-ASSY, BRAKE, NO.2	1
4701-23A	BUSHING (FOR BRAKE LINK)	2
4701-43	SPRING, TORSION (FOR PEDAL RETURN)	1
4701-53	ROD, BRAKE LINK CONNECTING	1
4701-AA	SPACER	1
4701-AB	BOLT	1
4701-AC	BRACKET, LINK	1
4701-AD	PIN, W/HOLE	2
4701-AE	SPACER	1
4701-AF	NUT	1
4701-AK	PIN, W/HOLE	1
4701-AZ	BUSHING	3
4701-BQ	BOLT	1
4701-BR	CLEVIS SUB-ASSY, NO.1	1
4701-BS	CLEVIS SUB-ASSY, NO.2	1
4701-EL	BOLT	1

G708-001E

FIG. 4702
BRAKE MASTER CYLINDER

 
 
 
4702

ATM




90/07

ATM (2-BRAKE)

ATM (4-BRAKE)

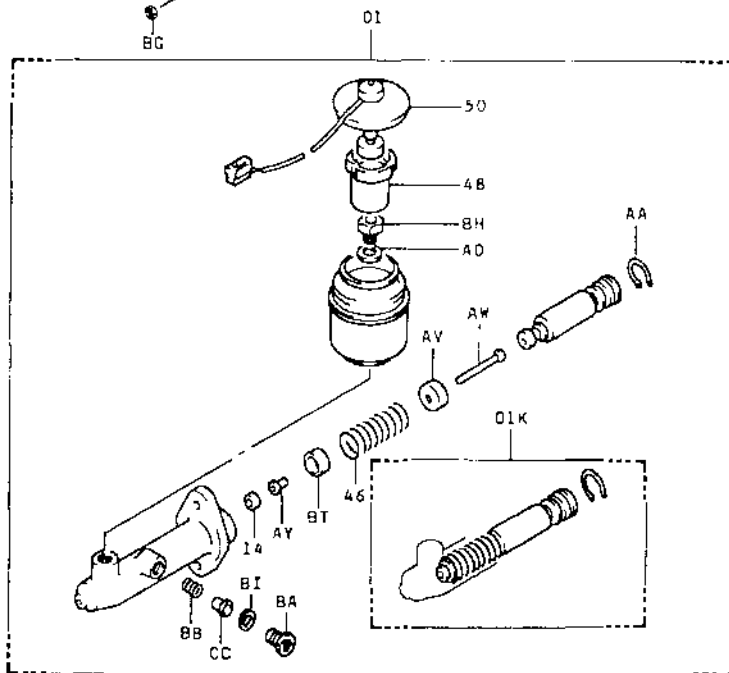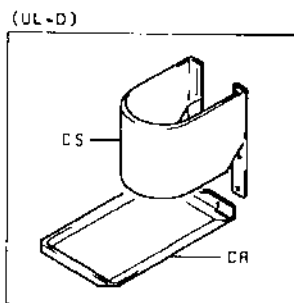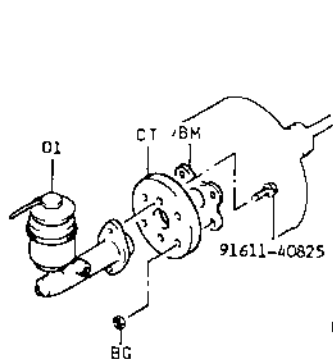

4702-060

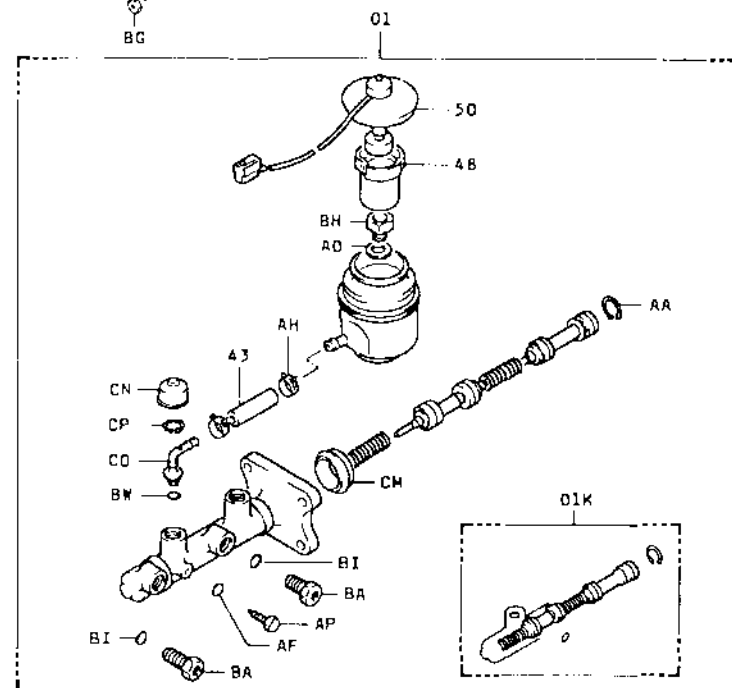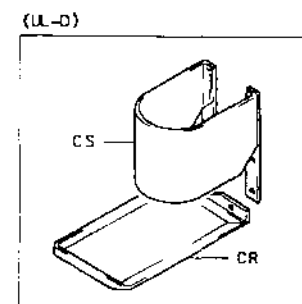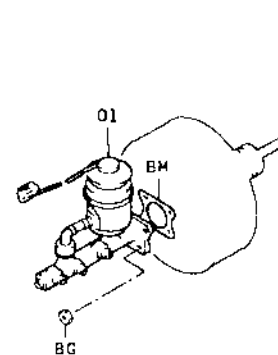   

4702-058A

G708-001

FIG. 4702
BRAKE MASTER CYLINDER

4702

ATM

90/07

PART NAME CODE	PART NAME	QTY
4702-D1	CYLINDER ASSY, MASTER	1
4702-D1K	CYLINDER O/H KIT, MASTER	1
4702-14	VALVE ASSY	1
4702-43	HOSE, RESERVOIR	1
4702-46	SPRING, COMPRESSION (FOR PISTON RETURN)	1
4702-48	STRAINER	1
4702-50	SWITCH ASSY, LEVEL WARNING W/CAP	1
4702-AA	RING, HOLE SNAP	1
4702-AF	GASKET	1
4702-AH	CLIP	2
4702-AD	WASHER	1
4702-AP	BOLT	1
4702-AV	RETAINER	1
4702-AW	ROD, CONNECTING	1
4702-AY	SPRING, CONICAL	1
4702-BA	PLUG	1
4702-BB	SPRING, COMPRESSION	1
4702-BG	NUT	4
4702-BH	BOLT, RESERVOIR SET	1
4702-BI	GASKET	1
4702-BM	GASKET	1
4702-BT	CASE, INLET VALVE	1
4702-BW	RING, O	1
4702-CC	VALVE, OUTLET CHECK	1
4702-CM	BOOT, MASTER CYLINDER	1
4702-CN	BOOT, MASTER CYLINDER	1
4702-CD	ELBOW	1
4702-CP	RING, HOLE SNAP	1
4702-CR	COVER SUB-ASSY, MASTER CYLINDER	1
4702-CS	COVER SUB-ASSY, MASTER CYLINDER	1
4702-CT	SPACER	1

G708-002E



FIG. 4707
BRAKE BOOSTER

4707

ATM

89/11

  ATM

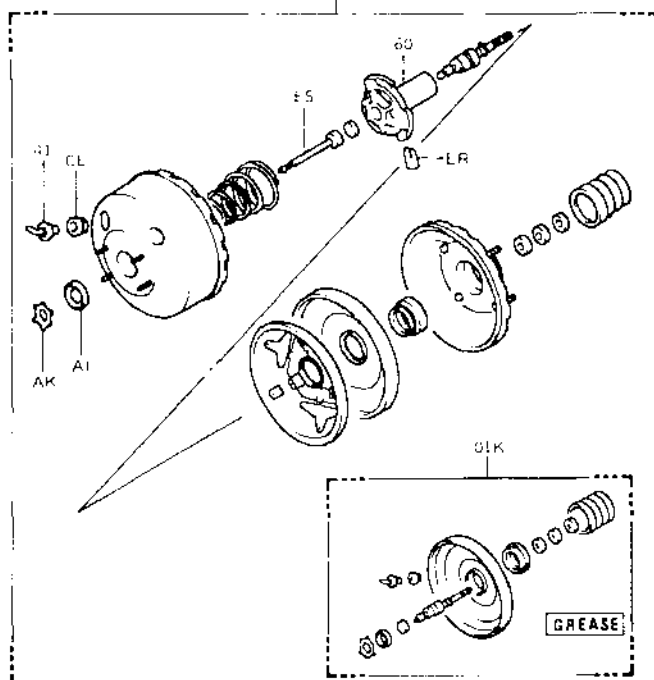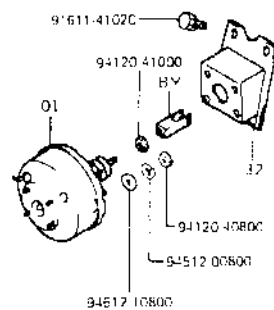

4707 019

PART NAME	PART NAME	QTY
CODE		
4707-01	BOOSTER ASSY, BRAKE	1
4707-01K	BOOSTER O/H KIT, BRAKE	1
4707-32	BRACKET SUB-ASSY, BRAKE BOOSTER	1
4707-41	VALVE, BOOSTER VACUUM	1
4707-60	PISTON, BOOSTER	1
4707-A1	SEAL	1
4707-AK	RING	1
4707-BY	CLEVIS	1
4707-CE	GROMMET	1
4707-ER	KEY	1
4707-E5	ROD SUB-ASSY, BOOSTER PISTON	1

G708-001E


FIG. 4714
BRAKE PIPE

4714

ATM

90/07

 1DZ..ATM (2-BRAKE)

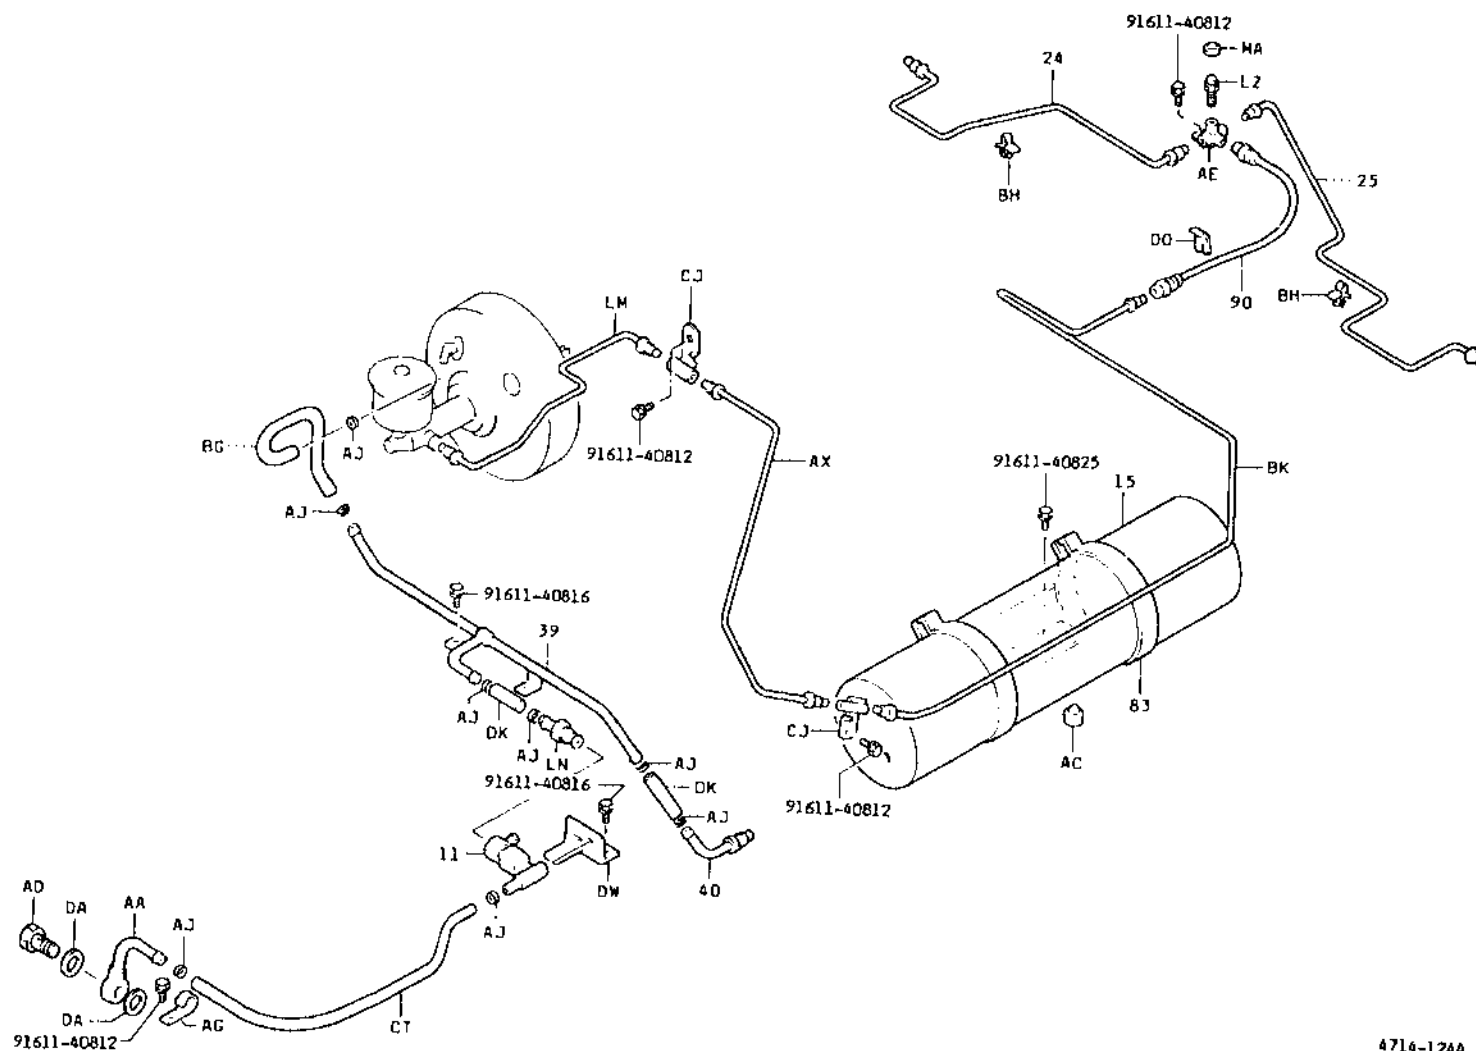

4714-124A

G708-001


FIG. 4714
BRAKE PIPE

4714

ATM

90/07

 10Z-ATM (4-BRAKE)

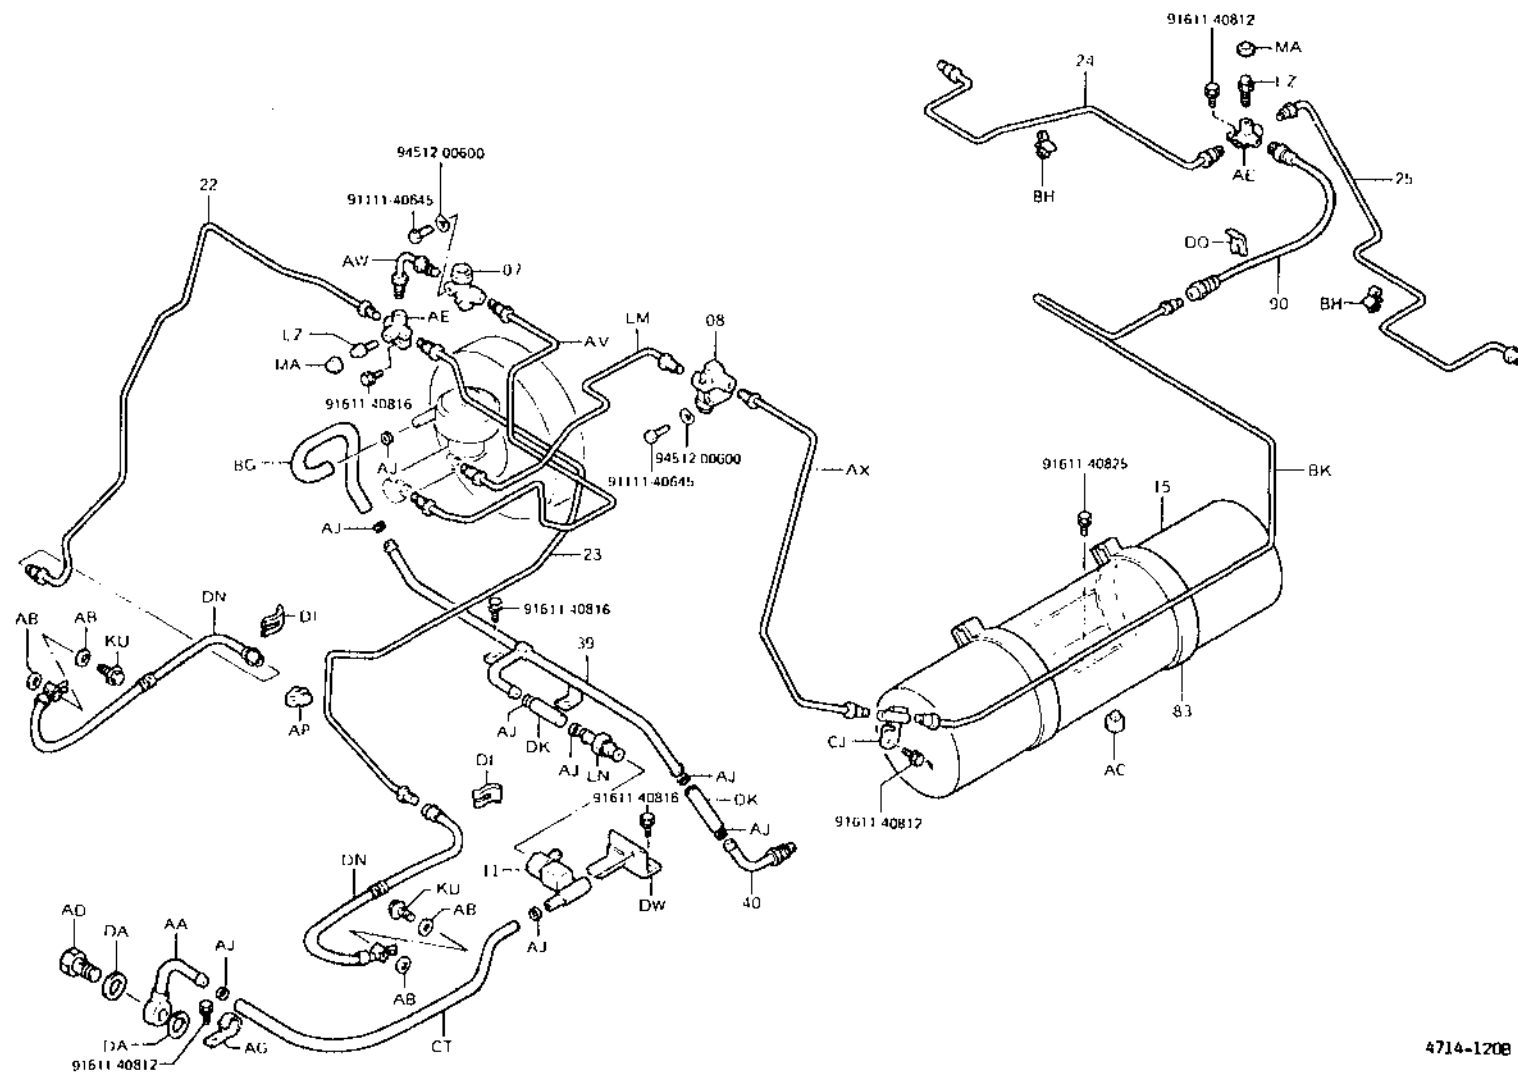

4714-1208

G708-002

4714 1208 0008


FIG. 4714
BRAKE PIPE

4714

ATM

90/07

 4Y...ATM (2-BRAKE)

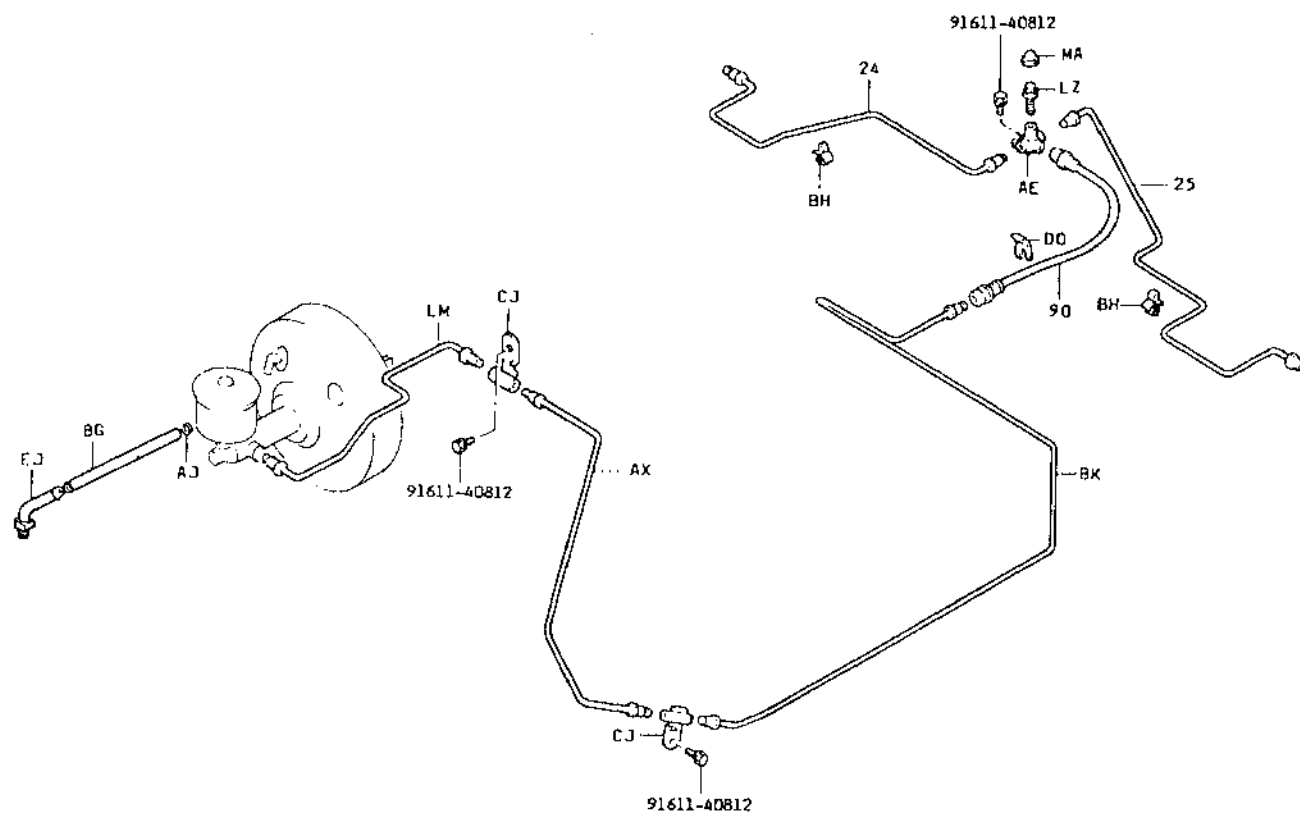

4714-125A

G708-003

4714

90/07

Diagram of the fuel system for a 1.6L engine. The diagram shows the fuel pump, filter, and various fuel lines and components labeled with letters and numbers. The fuel pump is labeled 94512 00600. The fuel filter is labeled 91611 40812. The fuel lines are labeled 22, 23, 24, and 25. The fuel pump is connected to the fuel filter via a line labeled 22. The fuel filter is connected to the fuel pump via a line labeled 23. The fuel pump is connected to the fuel filter via a line labeled 24. The fuel filter is connected to the fuel pump via a line labeled 25. The fuel pump is connected to the fuel filter via a line labeled 22. The fuel filter is connected to the fuel pump via a line labeled 23. The fuel pump is connected to the fuel filter via a line labeled 24. The fuel filter is connected to the fuel pump via a line labeled 25.

G708-004

FIG. 4714
BRAKE PIPE

4714

ATM

90/07

PART NAME	PART NAME	QTY
CODE		
4714-07	IVALVE ASSY. PROPORTIONING, NO.1	1
4714-08	IVALVE ASSY. PROPORTIONING, NO.2	1
4714-11	IVALVE ASSY. VACUUM CHECK	1
4714-15	RESERVOIR SUB-ASSY, VACUUM	1
4714-22	PIPE SUB-ASSY, BRAKE, RH NO.1	1
4714-23	PIPE SUB-ASSY, BRAKE, LH NO.1	1
4714-24	PIPE SUB-ASSY, BRAKE, RH NO.2	1
4714-25	PIPE SUB-ASSY, BRAKE, LH NO.2	1
4714-39	PIPE SUB-ASSY, VACUUM, NO.1	1
4714-40	PIPE SUB-ASSY, VACUUM, NO.2	1
4714-85	BRACKET SUB-ASSY, RESERVOIR	1
4714-90	HOSE SUB-ASSY, BRAKE FLEXIBLE	1
4714-AA	UNION	1
4714-AB	GASKET	4
4714-AC	PLUG	1
4714-AD	BOLT, UNION	1
4714-AE	3-WAY SUB-ASSY	2
4714-AG	CLAMP	2
4714-AJ	CLAMP	2
4714-AP	CLAMP	6
4714-AV	PIPE SUB-ASSY, FRONT BRAKE	1
4714-AW	PIPE SUB-ASSY, FRONT BRAKE	1
4714-AX	PIPE SUB-ASSY, REAR BRAKE	1
4714-BG	HOSE	1
4714-BK	PIPE SUB-ASSY, REAR BRAKE	1
4714-CJ	2-WAY	1
4714-CT	HOSE	1
4714-DA	WASHER, PLATE	2
4714-DI	CLIP	2
4714-DK	HOSE	2
4714-DN	HOSE, FLEXIBLE	2
4714-DD	CLIP	1
4714-DW	BRACKET, CHECK VALVE	1
4714-EJ	ELBOW	1
4714-KU	BOLT, UNION	2
4714-LM	PIPE SUB-ASSY	1
4714-LN	PIPE SUB-ASSY	1
4714-LZ	SCREW, BLEEDER	2
4714-MA	CAP, BLEEDER SCREW	2

G708-005E

FIG. 4715
DRUM BRAKE

 
4715

ATM


89/11

ATM-20, 23, 25 [REAR]

ATM-15, 18 [REAR]

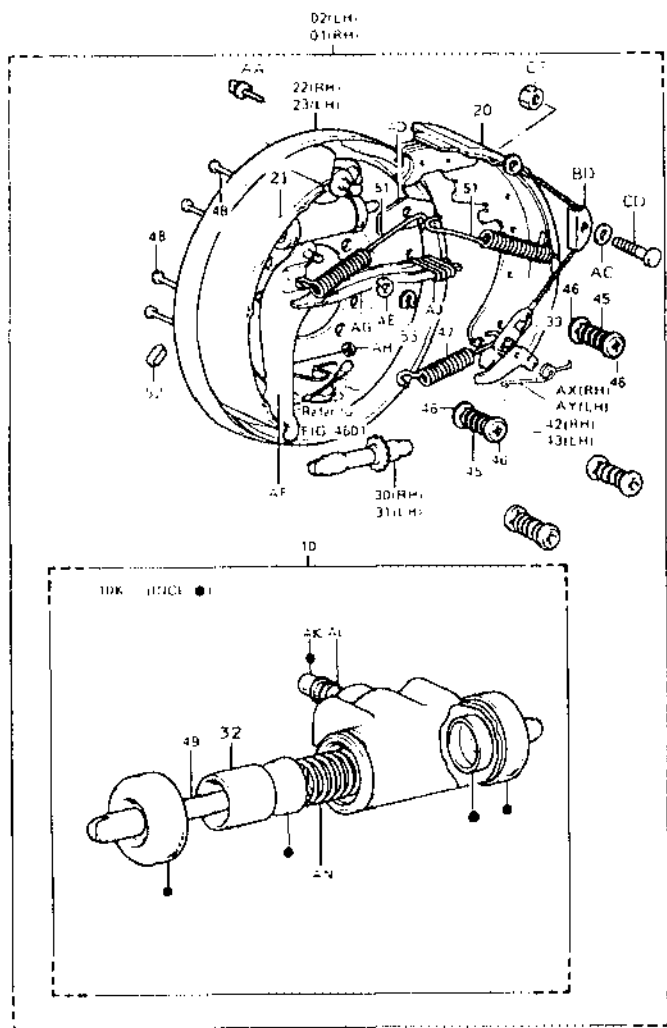

4715 078

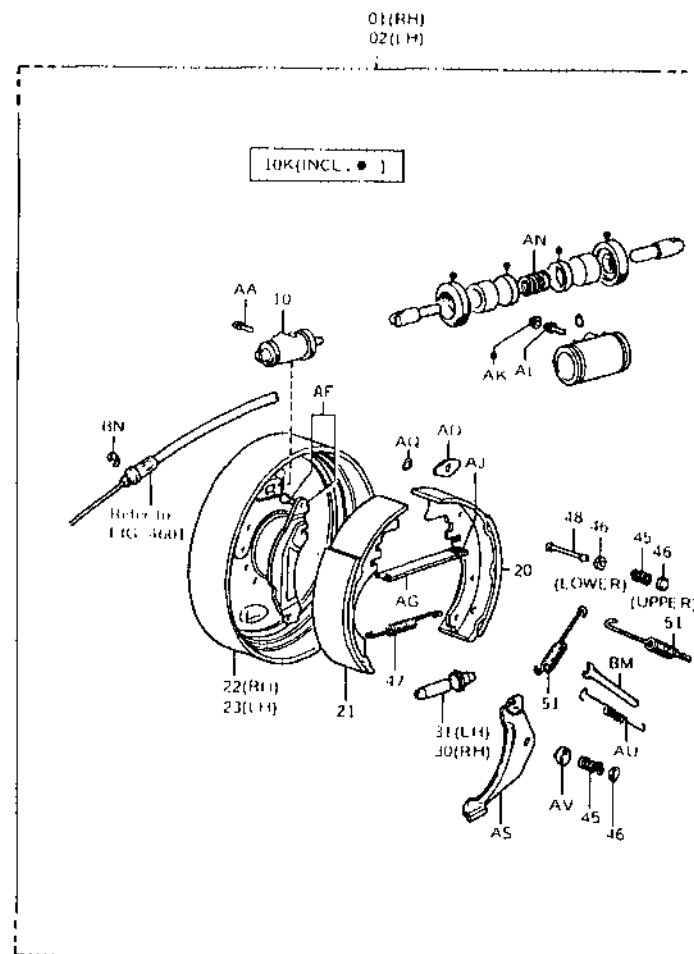 

4715-079

G708-001

FIG. 4715
DRUM BRAKE

4715

ATM

89/11

PART NAME	PART NAME	QTY
CODE		
4715-01	1BRAKE ASSY, RH	1
4715-02	1BRAKE ASSY, LH	1
4715-10	1CYLINDER ASSY, WHEEL	1- 2
4715-10X	1CYLINDER D/H KIT, WHEEL	2
4715-20	1SHOE SUB-ASSY (FOR FRONT OR UPPER)	1- 2
4715-21	1SHOE SUB-ASSY (FOR REAR OR LOWER)	2
4715-22	1PLATE SUB-ASSY, BACKING, RH	1
4715-23	1PLATE SUB-ASSY, BACKING, LH	1
4715-30	1SCREW SUB-ASSY, ADJUSTING, RH	1
4715-31	1SCREW SUB-ASSY, ADJUSTING, LH	1
4715-32	1PISTON SUB-ASSY, WHEEL CYLINDER	4
4715-33	1CABLE & FITTING SUB-ASSY	2
4715-42	1LEVER, AUTOMATIC ADJUSTMENT, RH	1
4715-43	1LEVER, AUTOMATIC ADJUSTMENT, LH	1
4715-45	1SPRING, SHOE HOLD DOWN	8
4715-46	1CUP, SHOE HOLD DOWN	6-16
4715-47	1SPRING, ADJUSTER	2
4715-48	1PIN, SHOE HOLD DOWN	8
4715-49	1ROD, PUSH	4
4715-51	1SPRING, ANCHOR TO SHOE	2- 4
4715-52	1COVER, ADJUSTING HOLE	2
4715-53	1RING, PARKING LEVER RETAINING	2
4715-AA	1BOLT & WASHER SET	4
4715-AC	1WASHER	2
4715-AD	1PLATE, SHOE GUIDE	2
4715-AE	1WASHER, SPRING	2
4715-AF	1LEVER SUB-ASSY, PARKING	1
4715-AG	1STRUT, LEVER	1- 2
4715-AH	1RING, SNAP	2
4715-AJ	1SPRING, STRUT TO SHOE	2
4715-AK	1CAP, BLEEDER SCREW	2
4715-AL	1SCREW, BLEEDER	2
4715-AN	1SPRING, WHEEL CYLINDER	2
4715-AQ	1RING, U	2
4715-AS	1LEVER, PAWL	1
4715-AU	1SPRING, ACTUATOR	2
4715-AV	1SLEEVE	2
4715-AX	1SPRING, LEVER RETURN, RH	1
4715-AY	1SPRING, LEVER RETURN, LH	1
4715-BD	1SHEAVE, PARKING BRAKE CABLE	2
4715-BM	1STOPPER, POLE LEVER	2
4715-BN	1RING, E	2
4715-CD	1PIN	2
4715-CT	1NUT	2

G708-002E


FIG. 4716
DISC BRAKE

4716

ATM

90/07

 ATM (FRONT)

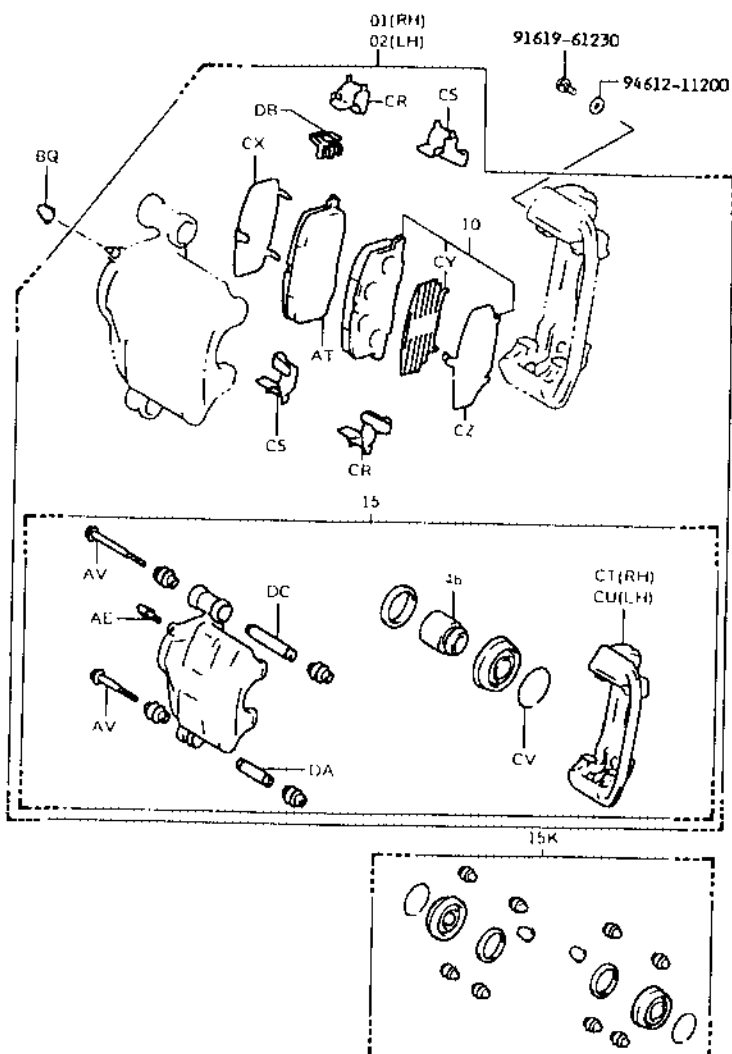

4716 013A


PART NAME	PART NAME	QTY
CODE		
4716-01	BRAKE ASSY, DISC, RH	1
4716-02	BRAKE ASSY, DISC, LH	1
4716-10	PAD ASSY, NO.1	2
4716-15	CYLINDER ASSY, DISC BRAKE	1
4716-15K	CYLINDER KIT, DISC BRAKE	1
4716-46	PISTON	2
4716-AE	PLUG	2
4716-AT	PAD, DISC	2
4716-AV	BOLT	2
4716-BQ	CAP, BLEEDER	2
4716-CR	PLATE, PAD SUPPORT, NO.1	4
4716-CS	PLATE, PAD SUPPORT, NO.2	4
4716-CT	MOUNTING, DISC BRAKE CYLINDER, RH	1
4716-CU	MOUNTING, DISC BRAKE CYLINDER, LH	1
4716-CV	RING, SET	2
4716-CX	SHIM, ANTI SQUEAL, NO.1	2
4716-CY	SHIM, ANTI SQUEAL, NO.3	2
4716-CZ	SHIM, ANTI SQUEAL, NO.2	2
4716-DA	BUSHING, CYLINDER SLIDE, NO.1	2
4716-DB	PLATE, PAD WEAR INDICATOR, NO.1	2
4716-DC	BUSHING, CYLINDER SLIDE, NO.2	2

G708-001E

4801

90/07

 ATM REAR)

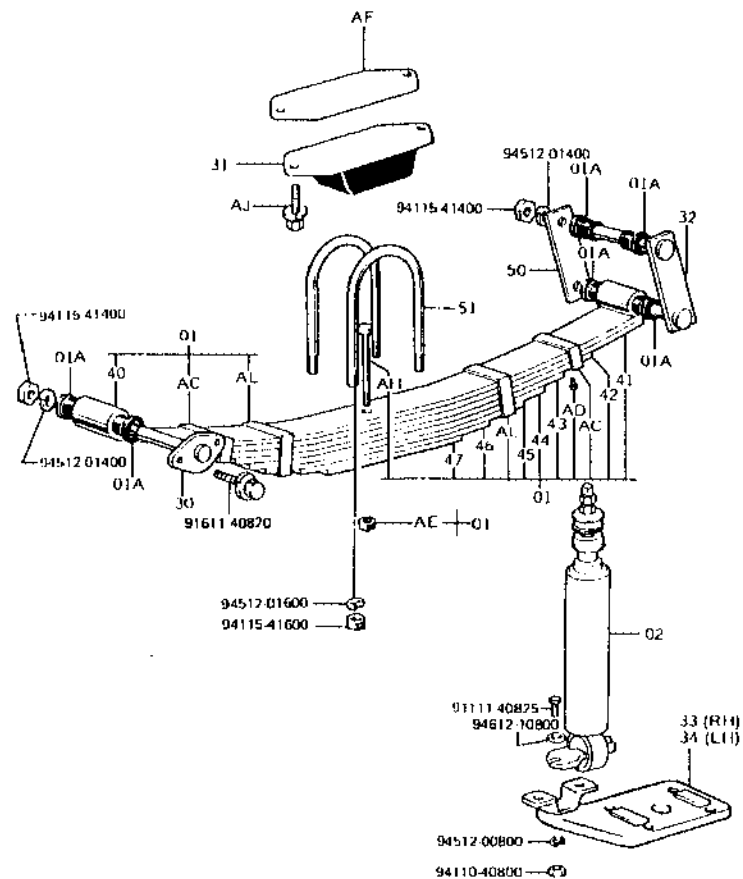

4801-017A

G708-001

FIG. 4801
SUSPENSION SPRING

4801


ATM

90/07

PART NAME	PART NAME	QTY
CODE		
4801-01	SPRING ASSY. REAR	2
4801-01A	BUSHING. REAR SPRING	12
4801-02	ABSORBER ASSY. SHOCK	2
4801-30	PIN SUB-ASSY. SPRING BRACKET	2
4801-31	RUBBER SUB-ASSY. SPRING BUMPER	2
4801-32	SHACKLE SUB-ASSY. SPRING	2
4801-33	PLATE SUB-ASSY. REAR SPRING LOWER. RH	1
4801-34	PLATE SUB-ASSY. REAR SPRING LOWER. LH	1
4801-40	SPRING. LEAF. NO.1	2
4801-41	SPRING. LEAF. NO.2	2
4801-42	SPRING. LEAF. NO.3	2
4801-43	SPRING. LEAF. NO.4	2
4801-44	SPRING. LEAF. NO.5	2
4801-45	SPRING. LEAF. NO.6	2
4801-46	SPRING. LEAF. NO.7	2
4801-47	SPRING. LEAF. NO.8	2
4801-49	SPRING. COIL	2
4801-50	PLATE. SPRING SHACKLE INNER	2
4801-51	BOLT. REAR SPRING U	4
4801-53	BRACKET. SHOCK ABSORBER SET	2
4801-55	CUSHION SUB-ASSY. TRAILING ARM	2
4801-AC	CLIP	4
4801-AD	RIVET	8
4801-AE	NUT	2
4801-AF	SPACER	2
4801-AH	BOLT	2
4801-AJ	BOLT	4
4801-AL	CLIP	4
4801-BC	BOLT	4
4801-CU	BRACKET. TRAILING ARM STOPPER	2
4801-CV	SHIM. TRAILING ARM STOPPER	99
4801-CW	SHIM. TRAILING ARM STOPPER	99

G708-002E

 ATM

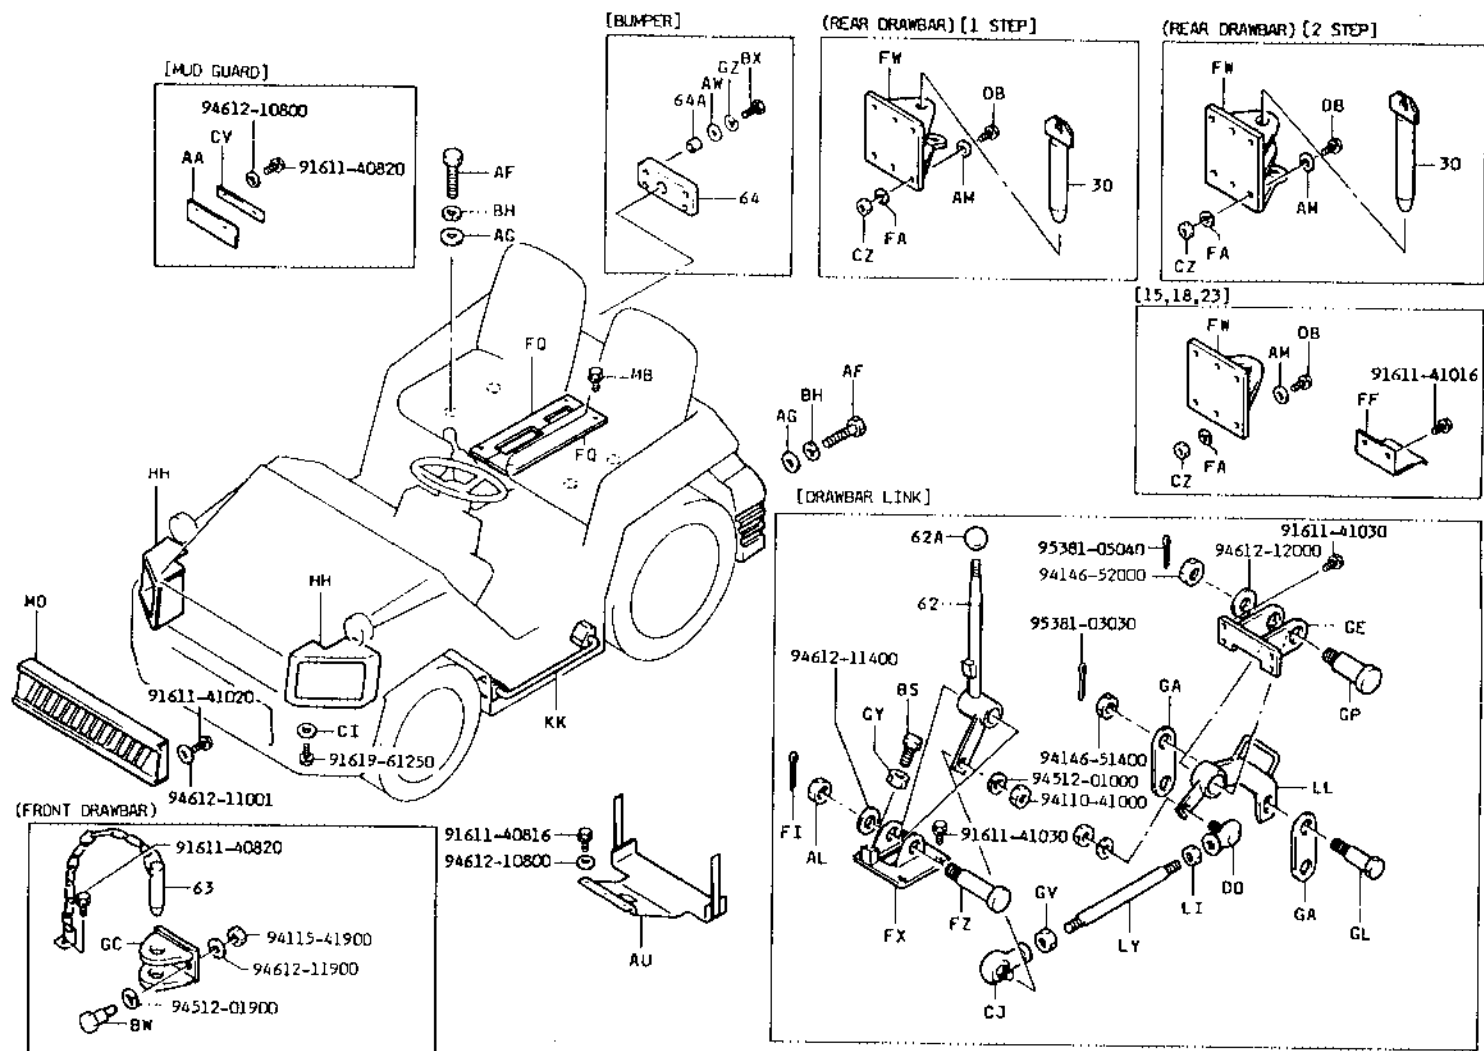

5101-138E

G708-001

FIG. 5101
FRAME & WEIGHT

5101

ATM

90/07

PART NAME	PART NAME	QTY
CODE		
5101-30	DRAWBAR SUB-ASSY	1
5101-62	LEVER SUB-ASSY, DRAWBAR	1
5101-67A	KNOB (FOR DRAWBAR LEVER)	1
5101-63	DRAWBAR SUB-ASSY	1
5101-64	BUMPER, RUBBER	2
5101-64A	SPACER (FOR BUMPER SET)	8
5101-AA	GUARD, MUD	2
5101-AF	BOLT, HEXAGON	4- 6
5101-AG	WASHER, PLATE	4- 6
5101-AL	NUT, CASTLE	1
5101-AM	WASHER, PLATE	6
5101-AU	COVER SUB-ASSY, UNDER	1
5101-AW	WASHER, PLATE	8
5101-BB	BOLT	4
5101-BH	WASHER, SPRING	4- 6
5101-B5	BOLT	1
5101-BW	BOLT	4
5101-BX	BOLT	8
5101-CI	SPACER	6
5101-CJ	END ASSY	1
5101-CV	PLATE	2
5101-CZ	NUT	6
5101-DB	BOLT	3- 6
5101-DD	END ASSY	1
5101-EC	CAP	99
5101-FA	WASHER, SPRING	6
5101-FF	COVER	1
5101-FI	PIN, COTTER	1
5101-FQ	COVER	1
5101-FW	BRACKET SUB-ASSY, DRAWBAR	1
5101-FX	BRACKET SUB-ASSY, DRAWBAR LEVER	1
5101-FZ	PIN	1
5101-GA	LINK, DRAWBAR	2
5101-GC	BRACKET SUB-ASSY, DRAWBAR	1
5101-GE	BRACKET	1
5101-GL	PIN	2
5101-GP	PIN	1
5101-GV	NUT	1
5101-GY	NUT	1
5101-GZ	WASHER, SPRING	8
5101-HH	PROTECTOR	1
5101-KK	CHOCK SUB-ASSY	1
5101-LI	NUT	1
5101-LL	LINK, DRAW-BAR	1
5101-LY	ROD	1
5101-MB	BOLT	5
5101-MD	GRILLE SUB-ASSY	1

G708-002E


FIG. 5201
HOOD & HINGE

5201

ATM

90/07

 ATM

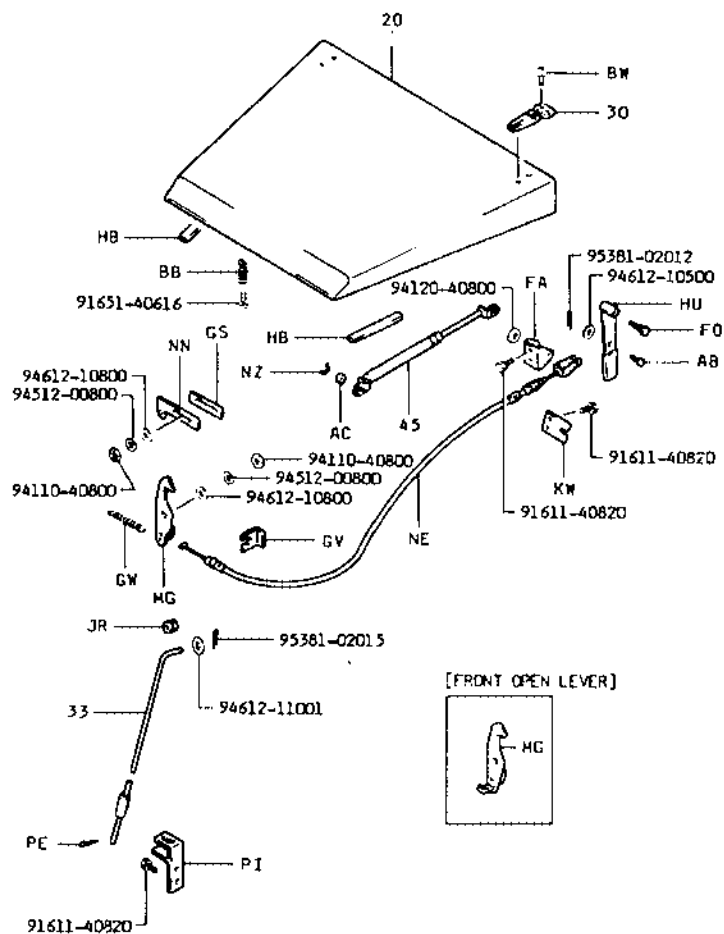

5201-120B

PART NAME	PART NAME	QTY
CODE		
5201-20	HOOD SUB-ASSY, ENGINE (OR BATTERY)	1
5201-30	HINGE SUB-ASSY, ENGINE (OR BATTERY) HOOD	2
5201-33	STAY SUB-ASSY, ENGINE (OR BATTERY) HOOD	1
5201-45	DAMPER, ENGINE HOOD	2
5201-AB	PIN, W/HOLE	1
5201-AC	WASHER, PLATE	4
5201-AP	FASTENER SUB-ASSY, HOOD	2
5201-BB	SPRING	1
5201-BW	SCREW	8
5201-FA	BRACKET SUB-ASSY	1
5201-F0	PIN	1
5201-GS	SHIM	99
5201-GV	CLIP	1
5201-GW	SPRING	1
5201-HB	SPONGE	2
5201-HU	LEVER SUB-ASSY	1
5201-JR	GROMMET	1
5201-KW	BRACKET	1
5201-MG	PLATE SUB-ASSY, HOOD	1
5201-NE	WIRE	1
5201-NN	PLATE SUB-ASSY	1
5201-NZ	RING, E	4
5201-PI	BRACKET	1

G708-001E


FIG. 5301
INSTRUMENT PANEL & FLOOR

5301

ATM

90/07

 ATM

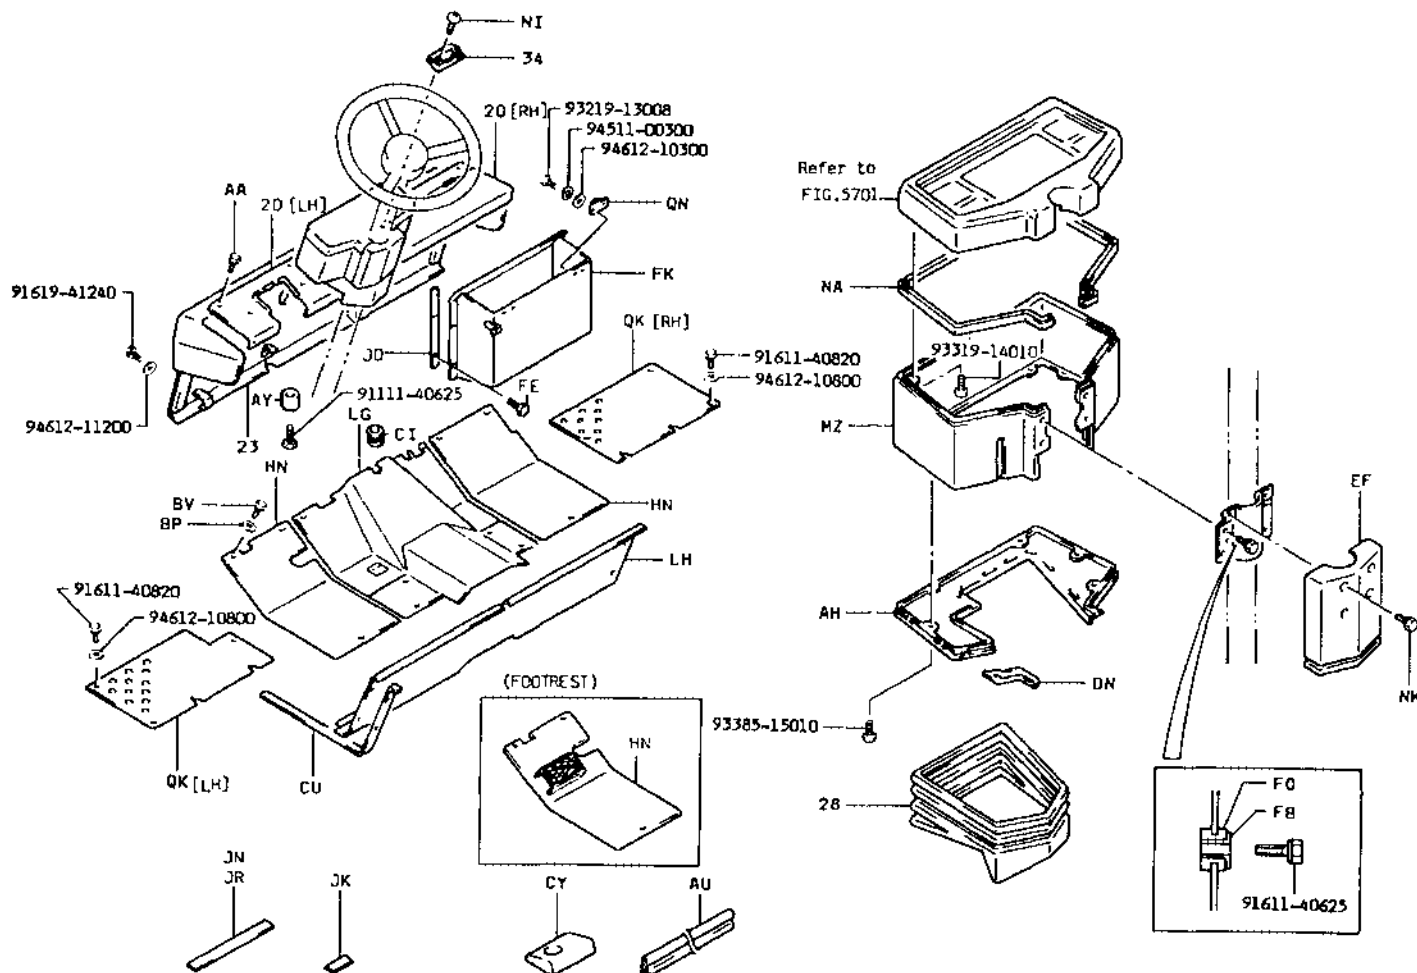

5301-153A

G708-001


FIG-5301
INSTRUMENT PANEL & FLOOR

5301

ATM

90/07

 ATM (STEEL CABIN) (2/2)

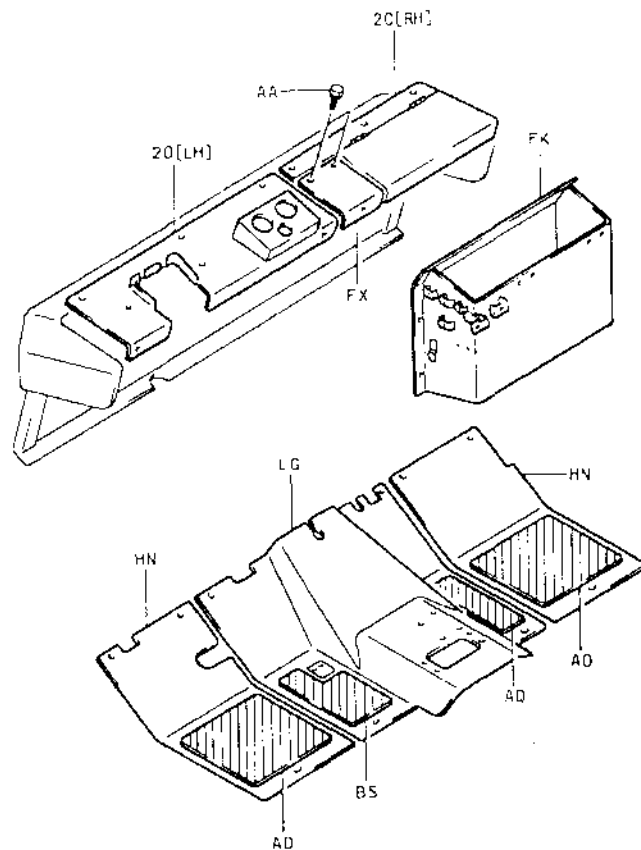

PART NAME	PART NAME	QTY
CODE		
5301-20	PANEL SUB-ASSY, INSTRUMENT	1
5301-25	PROTECTOR SUB-ASSY, FR	1
5301-28	BOOT	1
5301-34	CLAMP SUB-ASSY, PAPER	1
5301-AA	SCREW	10
5301-AH	COVER	1
5301-AD	SAFETY WALK	2
5301-AD	SAFETY WALK	1
5301-AU	SEAL	1
5301-AY	RUBBER, CUSHION	1
5301-BP	WASHER, PLATE	10
5301-BS	SAFETY WALK	1
5301-BV	BOLT	10
5301-CI	GROMMET	1
5301-CU	RUBBER	1
5301-CY	RUBBER	1
5301-DN	COVER	1
5301-EF	COVER	1
5301-FB	SPACER	4
5301-FE	BOLT	4
5301-FK	POCKET SUB-ASSY	1
5301-FO	RUBBER	4
5301-FX	COVER	1
5301-HN	FLOOR	1
5301-JK	RUBBER	1
5301-JN	RUBBER	1
5301-JC	RUBBER	2
5301-JR	RUBBER	1
5301-LG	FLOOR SUB-ASSY, NO.1	1
5301-LH	FLOOR SUB-ASSY, NO.2	1
5301-MZ	BOX SUB-ASSY, INSTRUMENT PANEL	1
5301-NA	PACKING	1
5301-NI	SCREW	2
5301-NK	SCREW	4
5301-OK	FLOOR	1
5301-QN	MAGNET	2

5301-164

G708-002E

FIG. 5308
DRIVER SEAT

 
5308

ATM



90/07

ATM 11/11

ATM (W/HEADREST) 11/11

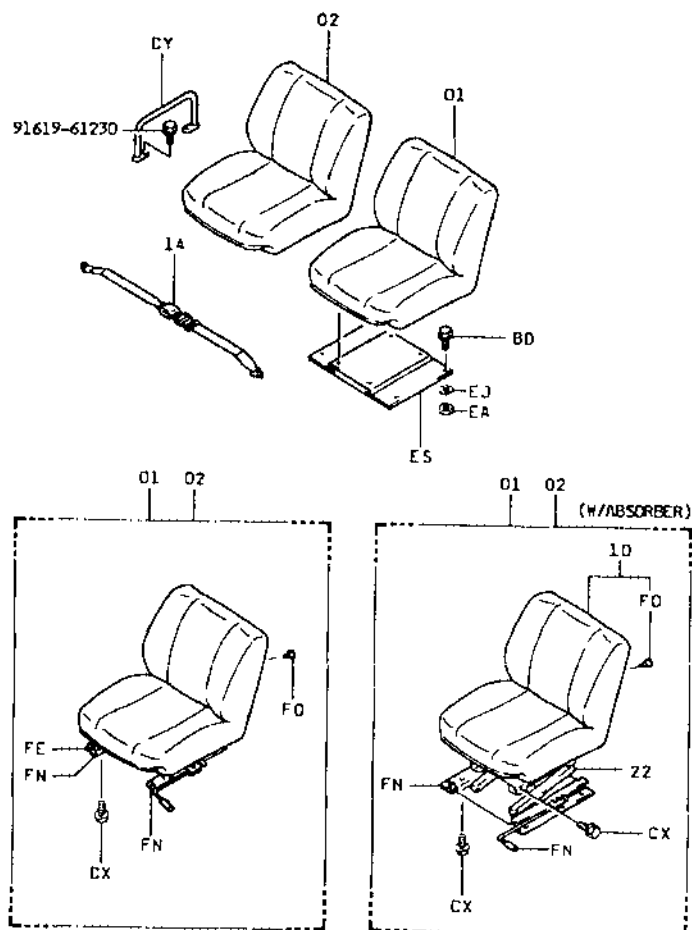

5308-124

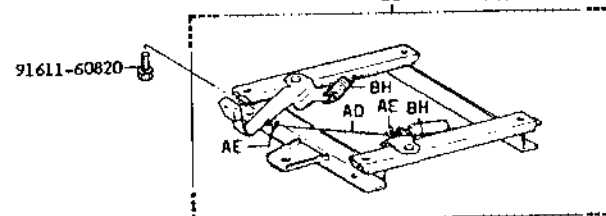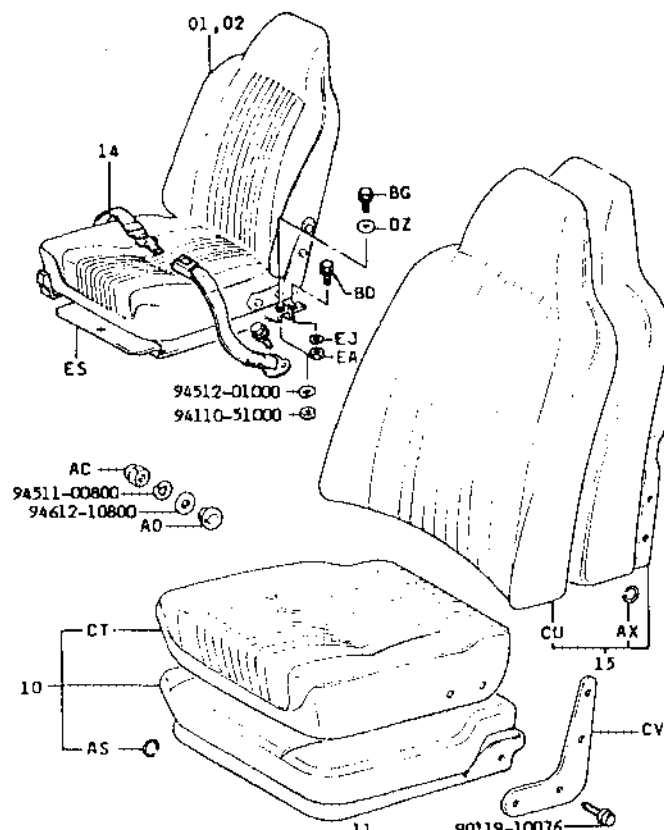  

5308-125A

G708-001

FIG. 5308
DRIVER SEAT

 
 
 
5308

ATM


90/07

ATH (ORS) (1/1)

ATH (DEAD-MAN) (2/2)

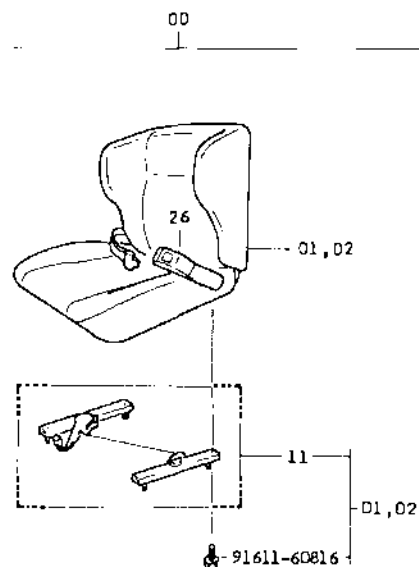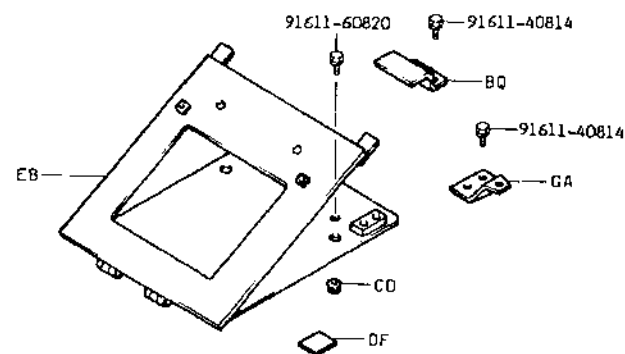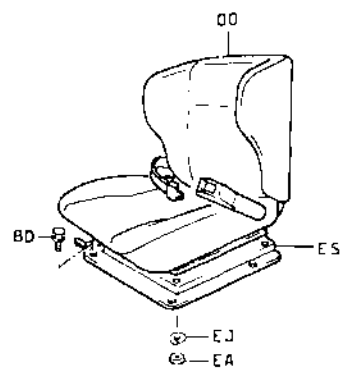

5308-126

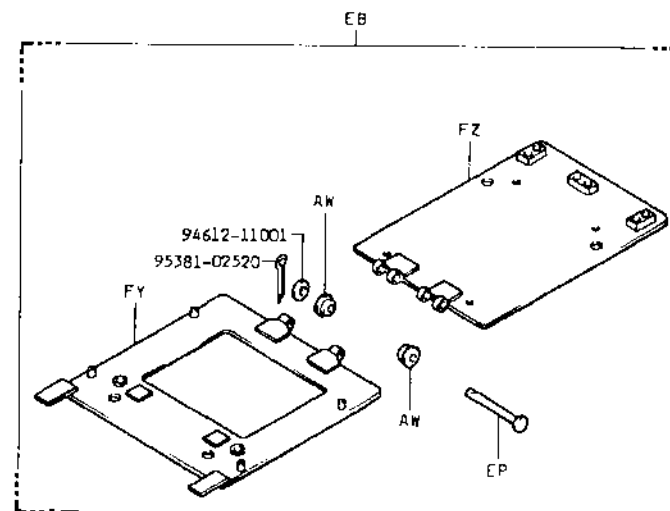 

5308-127

G708-002

FIG. 5308
DRIVER SEAT

5308

ATM

90/07

PART NAME	PART NAME	QTY
CODE		
5308-D0	SEAT ASSY, W/BELT	1
5308-D1	SEAT ASSY	1
5308-D2	SEAT ASSY, ASSIST	1
5308-10	CUSHION ASSY	1
5308-11	TRACK ASSY	1
5308-14	HARNES ASSY, FRONT SEAT	1
5308-15	SEAT ASSY, BACK	1
5308-22	SUSPENSION SUB-ASSY	1
5308-26	BELT ASSY, SEAT	1
5308-AC	NUT, CAP	1
5308-AD	WIRE	2
5308-AE	WASHER	2
5308-AD	BUSHING	1
5308-AS	RING, E	99
5308-AW	BUSHING	4
5308-AX	RING, E	99
5308-BD	BOLT, W/WASHER	4
5308-BG	BOLT	4
5308-BH	SPRING, TORSION	2
5308-CD	SPRING	2
5308-CT	COVER SUB-ASSY, FRONT CUSHION	1
5308-CU	COVER SUB-ASSY, FRONT SEAT BACK	1
5308-CV	ARM SUB-ASSY, FRONT SEAT	1
5308-CX	BOLT	8
5308-CY	HANDRAIL SUB-ASSY	1
5308-DF	RUBBER	2
5308-DZ	WASHER, PLATE	3
5308-EA	NUT	4
5308-EB	STAND SUB-ASSY, SEAT	1
5308-EJ	WASHER, SPRING	4
5308-EP	PIN, HINGE	2
5308-ES	BRACKET SUB-ASSY, SEAT	1
5308-FL	BRACKET	1
5308-FN	RAIL, SLIDE	1
5308-FD	CLIP	2
5308-FY	STAND SUB-ASSY	1
5308-FZ	STAND SUB-ASSY	1
5308-GA	BRACKET	1

G708-003E

FIG. 5401
HEAD GUARD & ACCESSORY

 
5401

ATM

90/07


ATM

ATM (FRONT GLASS, SUN SHADE)

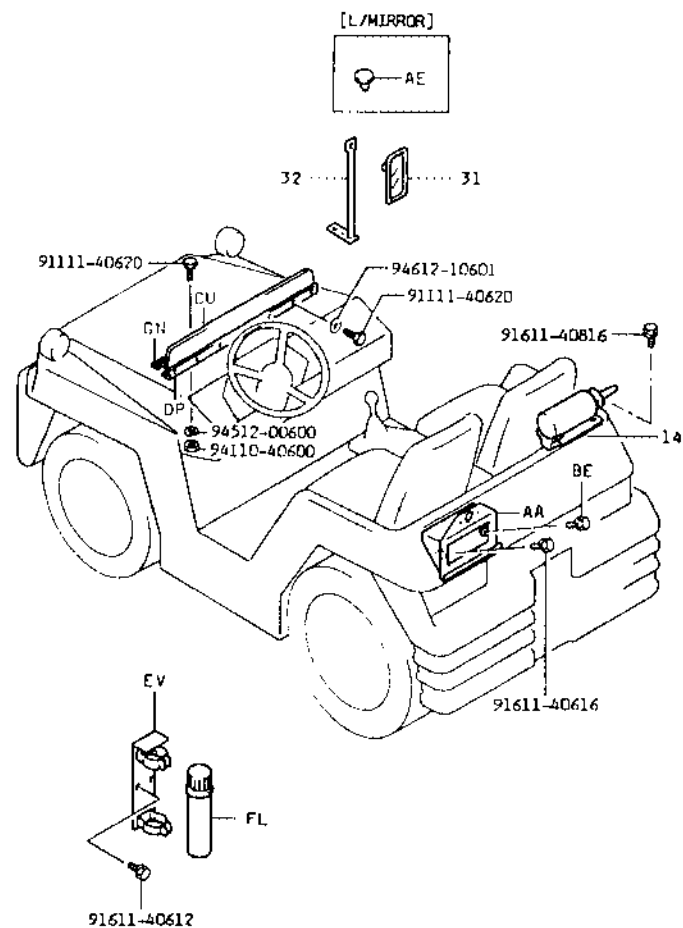


5401-138

 (SUN SHADE)

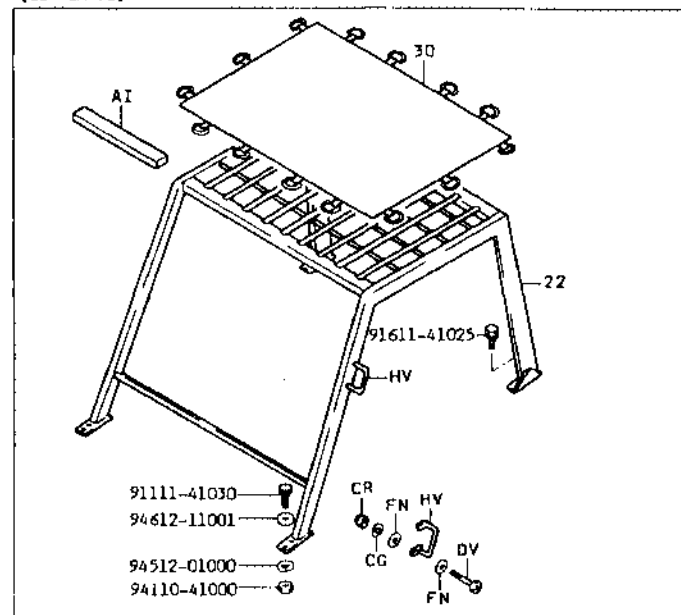

(FRONT GLASS)

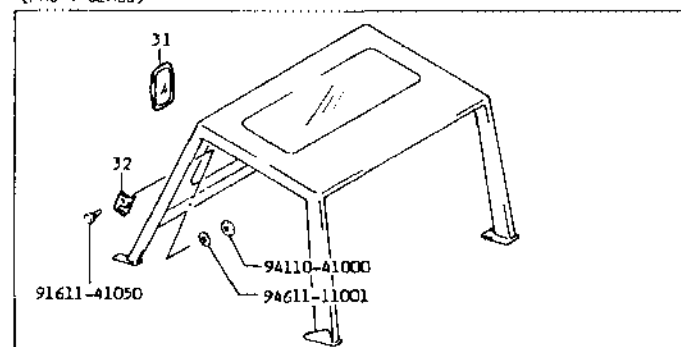 

5401-144A

G708-001

FIG. 5401
HEAD GUARD & ACCESSORY

5401

ATM

90/07

PART NAME	PART NAME	QTY
CODE		
5401-14	FIRE-EXTINGUISHER ASSY	1
5401-22	SUNSHADE SUB-ASSY	1
5401-30	SHEET SUB-ASSY, HEAD GUARD	1
5401-31	MIRROR SUB-ASSY, BACK	2
5401-32	BRACKET SUB-ASSY, BACK MIRROR	1
5401-AA	PLATE SUB-ASSY, LICENCE PLATE	1
5401-AE	PLUG, HOLE	4
5401-AI	CUSHION, SHEET	2
5401-BE	BOLT	1
5401-CG	WASHER, SPRING	2
5401-CR	NUT	2
5401-CU	PROTECTOR	1
5401-DP	BRACKET SUB-ASSY	1
5401-DV	SCREW	2
5401-EV	CASE SUB-ASSY	1
5401-FL	FUSEE	1
5401-FN	WASHER, PLATE	2
5401-GN	BRACKET SUB-ASSY	1
5401-HV	GRIP	1

G708-002E


FIG. 5405
INDICATOR PLATE

5405

ATM

90/07

 ATM

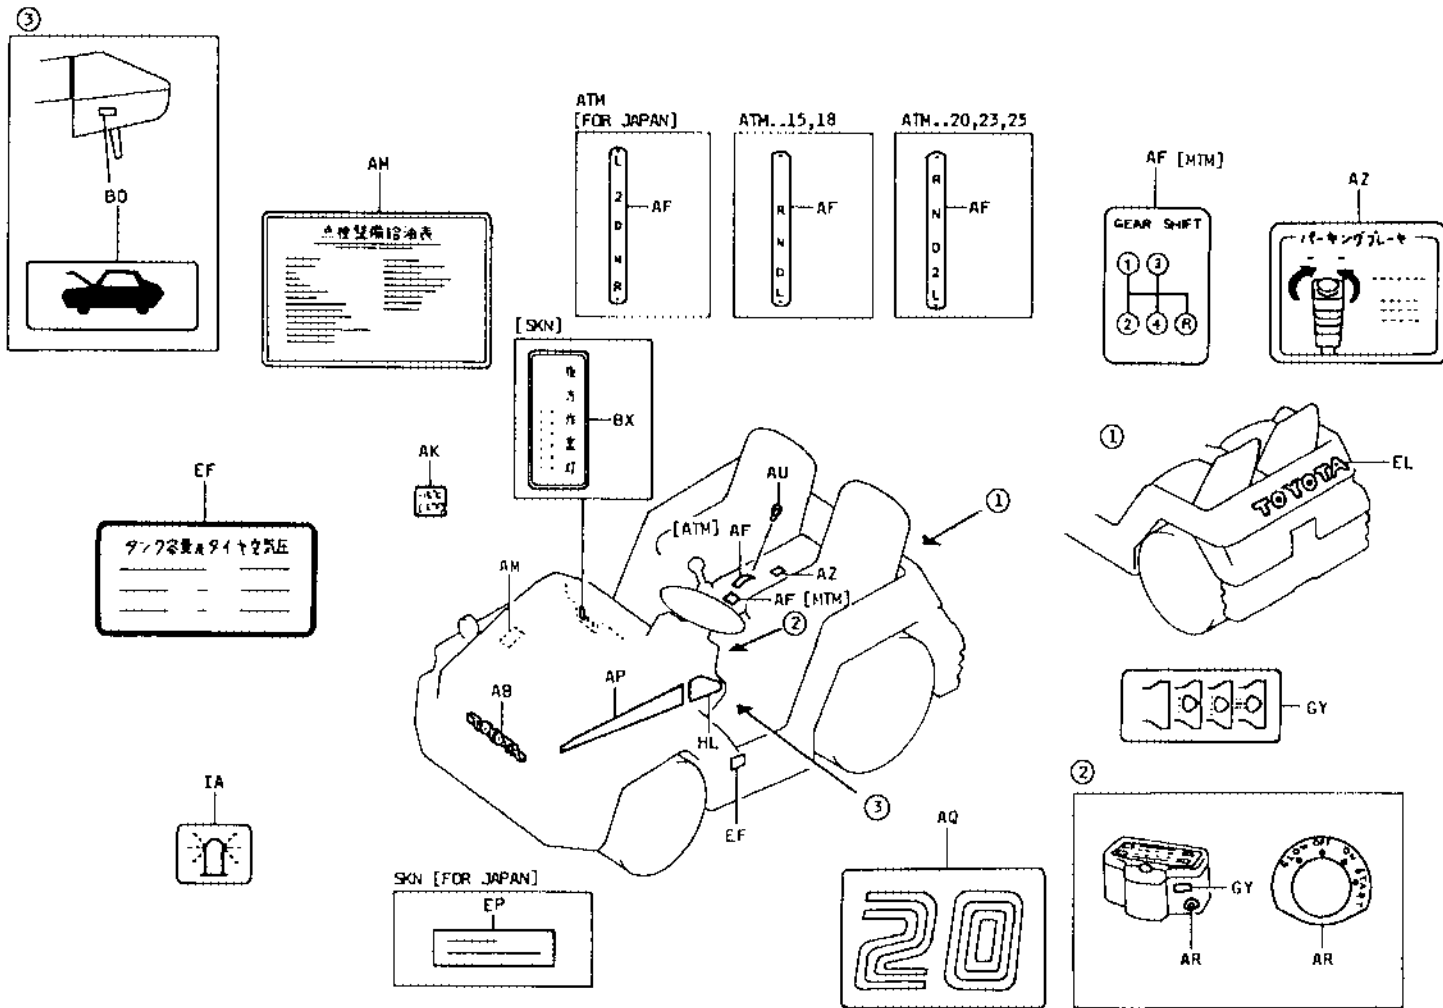

5405-3220

G708-001

FIG. 5405
INDICATOR PLATE

5405

ATM

90/07

PART NAME CODE	PART NAME	QTY
5405-AB	MARK, TOYOTA	1
5405-AF	PLATE, SHIFT LEVER INDICATOR	1
5405-AM	PLATE, SERVICE INDICATOR	1
5405-AP	STRIPES	1
5405-AQ	PLATE, CAPACITY INDICATOR	2
5405-AR	PLATE, CAUTION	1
5405-AU	RIVET	2
5405-AZ	PLATE, CAUTION	1
5405-BD	INDICATOR	1
5405-EF	INDICATOR, TANK CAPACITY	1
5405-EL	MARK, TOYOTA	1
5405-GY	INDICATOR, LAMP	1
5405-HL	STRIPES	1
5405-IA	INDICATOR	1

G708-002E


FIG. 5501
STEEL CABIN

5501

ATM

90/07

 ATM (STEEL CABIN)

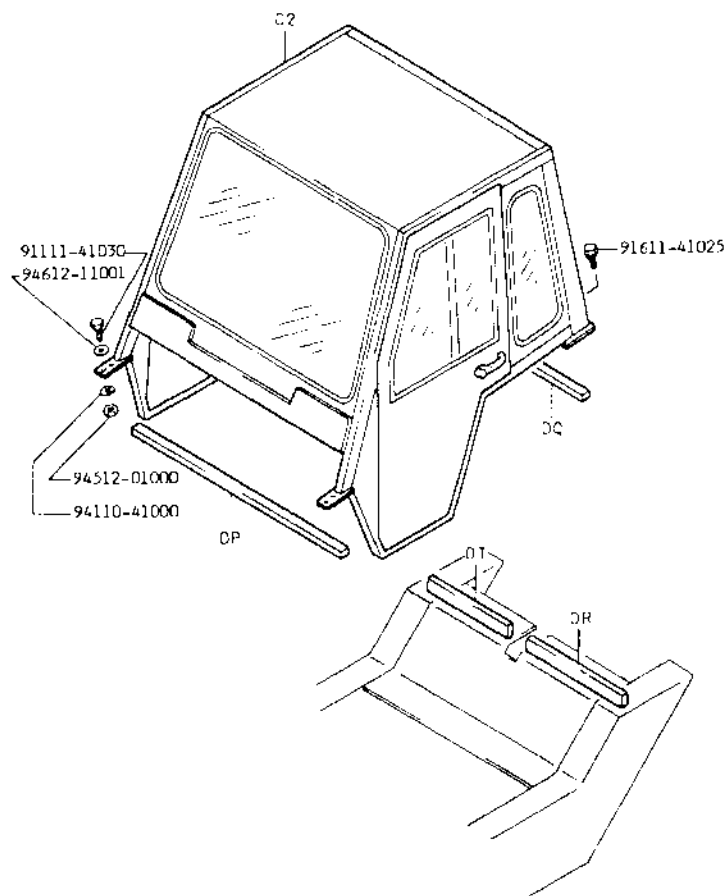

PART NAME

CODE

PART NAME

QTY

5501-D2	CABIN ASSY, STEEL	1
5501-DP	RUBBER	1
5501-DQ	RUBBER	1
5501-DR	RUBBER	1
5501-DT	RUBBER	1

5501-047

G708-001E


FIG. 5502
CANVAS CABIN & FRONT GLASS

5502


ATM

90/07

 
ATM (CANVAS CABIN, FRONT GLASS, TROPICAL CABIN)

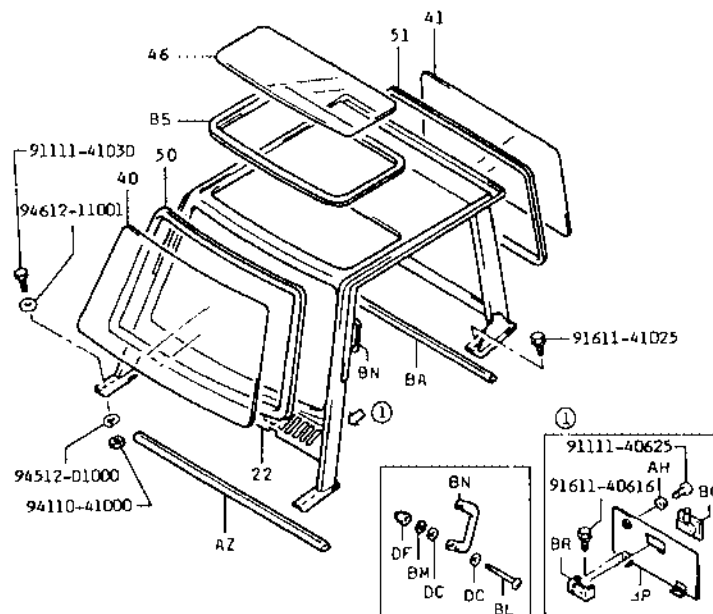

(CANVAS CABIN) 11

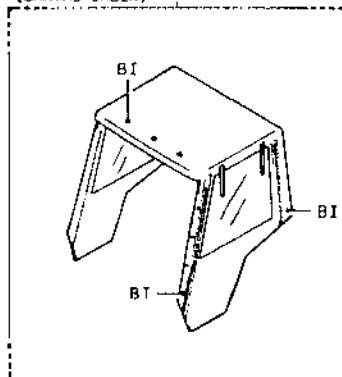 

(TROPICAL CABIN) 11

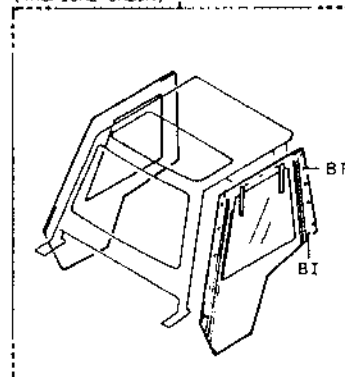 

5502-033C

PART NAME	PART NAME	QTY
CODE		
5502-11	SHEET ASSY, CABIN	1
5502-22	CABIN SUB-ASSY	1
5502-40	GLASS, WINDSHIELD	1
5502-41	GLASS, WINDSHIELD REAR	1
5502-46	GLASS, ROOF	1
5502-50	WEATHERSTRIP	1
5502-51	WEATHERSTRIP, REAR GLASS	1
5502-AH	CUSHION	1
5502-AZ	RUBBER	1
5502-BA	RUBBER	1
5502-BI	HOOKE, W/NUT	2
5502-BL	SCREW	2
5502-BM	WASHER, SPRING	2
5502-BN	GRIP SUB-ASSY	1
5502-BP	PLATE SUB-ASSY	1
5502-BQ	LOCK ASSY	1
5502-BR	BRACKET	1
5502-BS	WEATHERSTRIP	1
5502-BT	HOOKE, W/SCREW	10
5502-DC	WASHER, PLATE	2
5502-DF	INUT	2

G708-001E


FIG. 5504
DDDR LOCK

5504

ATM

90/07

 ATM (STEEL CABIN)

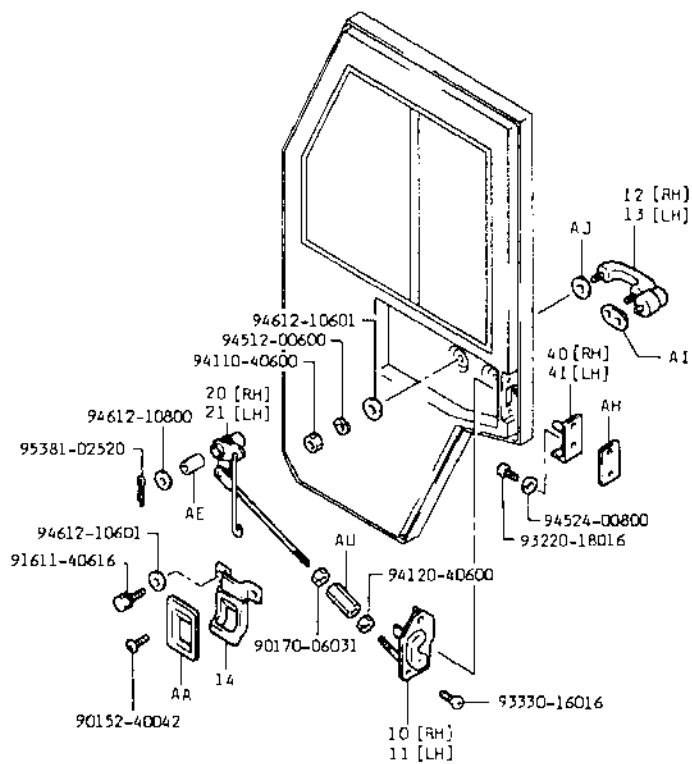

5504-024

PART NAME	PART NAME	QTY
CODE		
5504-10	LOCK ASSY, DOOR, RH -----	1
5504-11	LOCK ASSY, DOOR, LH -----	1
5504-12	HANDLE ASSY, FRONT DOOR OUTSIDE, RH -----	1
5504-13	HANDLE ASSY, FRONT DOOR OUTSIDE, LH -----	1
5504-14	HANDLE ASSY, DOOR INSIDE -----	2
5504-20	LINK SUB-ASSY, DOOR W/ROD, RH -----	1
5504-21	LINK SUB-ASSY, DOOR W/ROD, LH -----	1
5504-40	STRIKER, DOOR LOCK, RH -----	1
5504-41	STRIKER, DOOR LOCK, LH -----	1
5504-AA	CASE, DOOR INSIDE HANDLE -----	2
5504-AE	BUSHING -----	4
5504-AH	SHIM, DOOR LOCK STRIKER -----	99
5504-AJ	PAD, FRONT -----	2
5504-AJ	PAD, REAR -----	2
5504-AU	TURNBUCKLE -----	2

G708-001E


FIG. 5611
LAMP

5611

ATM

90/07

 ATM

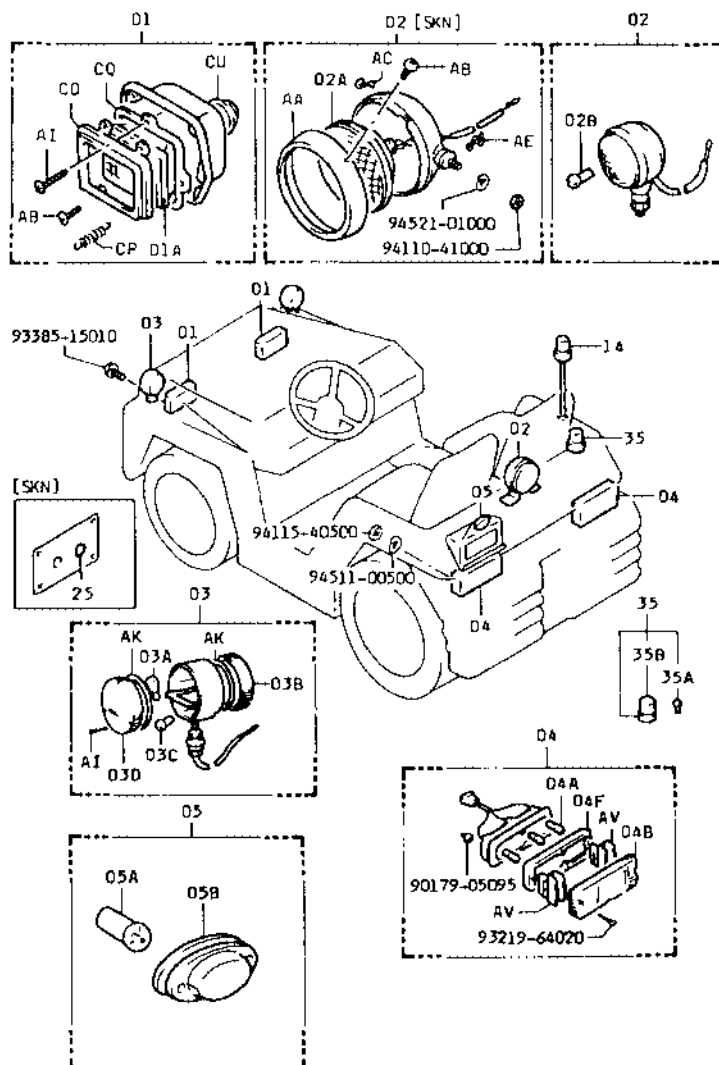

5611-113A

PART NAME	PART NAME	QTY
CODE		
5611-01	LAMP ASSY, HEAD	1
5611-01A	UNIT, SEALBEAM (FOR HEAD LAMP)	2
5611-02	LAMP ASSY, WORKING	1
5611-02B	BULB (FOR WORKING LAMP)	1
5611-03	LAMP ASSY, FLASHER	2
5611-03A	BULB (FOR FLASHER LAMP)	2
5611-03B	LENS (FOR FLASHER LAMP)	2
5611-03C	BULB (FOR FLASHER LAMP)	2
5611-03D	LENS (FOR FLASHER LAMP)	2
5611-04	LAMP ASSY, REAR COMBINATION	1
5611-04A	BULB (FOR REAR COMBINATION LAMP)	1
5611-04B	LENS (FOR REAR COMBINATION LAMP)	1
5611-04F	GASKET (FOR REAR COMBINATION LAMP)	1
5611-05	LAMP ASSY, LICENCE	1
5611-05A	BULB (FOR LICENCE LAMP)	1
5611-05B	LENS (FOR LICENCE LAMP)	1
5611-14	LAMP ASSY, APRON	1
5611-35	LAMP ASSY, ROTARY	1
5611-35A	BULB (FOR ROTARY LAMP)	1
5611-35B	LENS (FOR ROTARY LAMP)	1
5611-AB	SCREW	8
5611-AT	SCREW	4
5611-AK	PACKING	4
5611-AV	SHADE	4
5611-C0	RING, RETAINING	2
5611-CP	SPRING, EXTENSION	2
5611-CQ	RING, MOUNTING	1
5611-CU	COVER	2

G708-001E


FIG. 5612
LAMP BRACKET

5612

ATM

89/11

 ATM

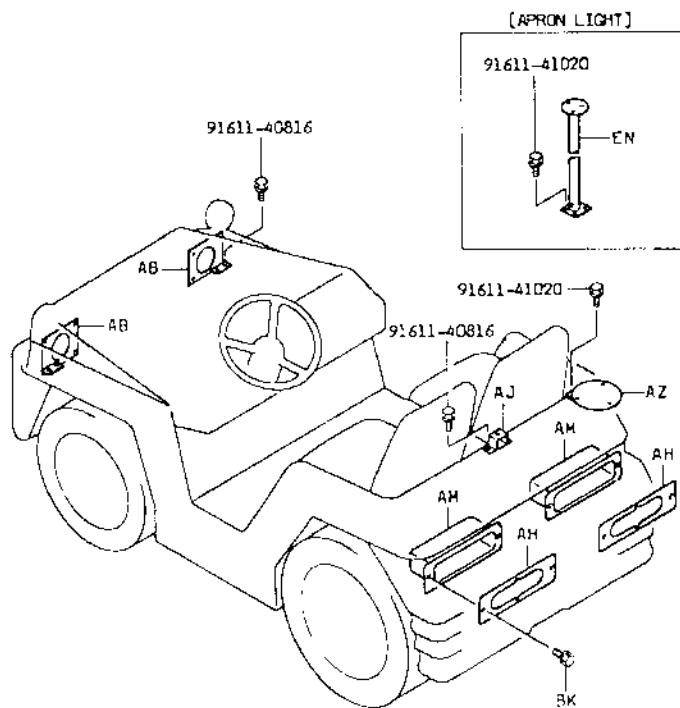

[APRON LIGHT]

91611-41020

EN

91611-40816

AB

AB

91611-41020

91611-40816

AJ

AZ

AM

AH

AH

AH

BK

PART NAME	PART NAME	QTY
CODE		
5612-AB	BRACKET SUB-ASSY, HEAD LAMP	1
5612-AH	BRACKET, REAR LAMP	2
5612-AJ	BRACKET, WORKING LAMP	1
5612-AM	BRACKET, REAR COMBINATION LAMP	2
5612-AZ	BRACKET SUB-ASSY, ROTARY LAMP	1
5612-BK	BOLT	4
5612-EN	BRACKET SUB-ASSY	1

5612-134

G708-001E









FIG. 5701
METER & SWITCH

5701

ATM

90/07

        ATM 11/21

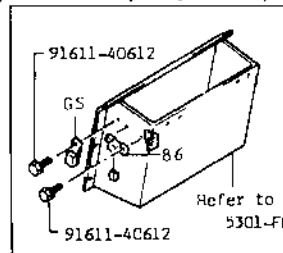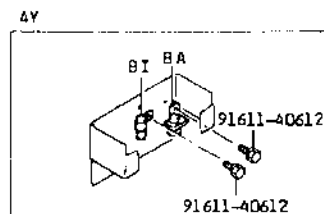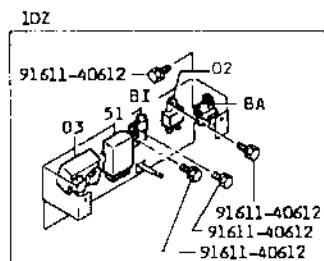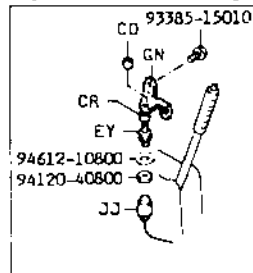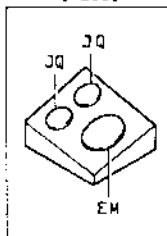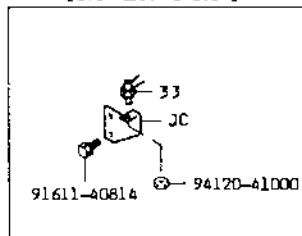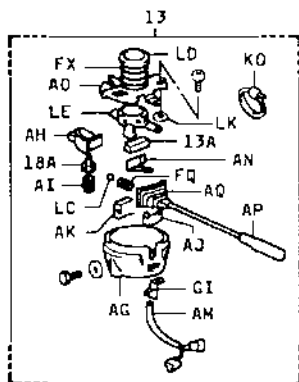

5701-0880

G708-001

b7c b6 b7c b7d


FIG. 5701
METER & SWITCH

5701

ATM

90/07

 ATM 12/21

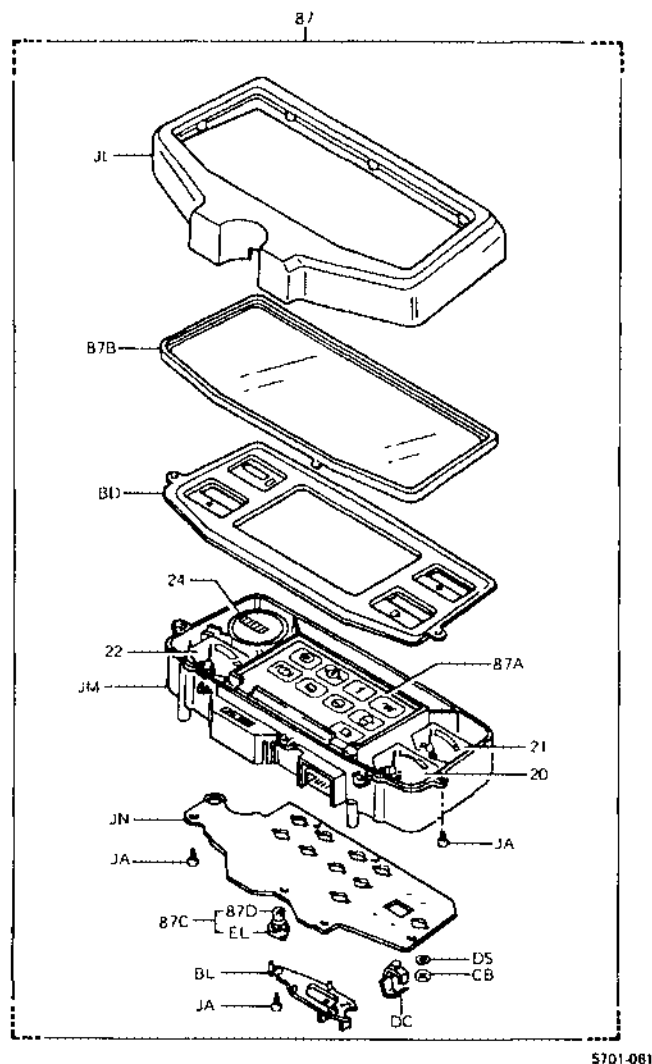

5701-081

PART NAME	PART NAME	QTY
CODE		
5701-02	RELAY ASSY, STARTER	1
5701-03	RELAY ASSY, GLOW PLUG	1
5701-07	UNIT ASSY, FUEL	1
5701-10	HORN ASSY	1
5701-11	BUZZER ASSY, BACK	1
5701-12	BUZZER ASSY, VACUUM INDICATOR	1
5701-13	SWITCH ASSY, TURN SIGNAL	1
5701-13A	SWITCH ASSY, MICRO (FOR TURN SIGNAL SWITCH)	2
5701-14	SWITCH ASSY, LIGHT CONTROL	1
5701-15	SWITCH ASSY, IGNITION STARTER	1
5701-18	SWITCH ASSY, HORN	1
5701-18A	CONTACT, HORN	2
5701-20	GAGE ASSY, FUEL	1
5701-21	GAGE ASSY, WATER TEMPERATURE (ENGINE)	1
5701-22	GAGE ASSY, TEMPERATURE (TORCON)	1
5701-23	GAGE ASSY, OIL PRESSURE (ENGINE)	1
5701-23A	BULB (FOR OIL PRESSURE GAGE)	1
5701-24	METER ASSY, HOUR	1
5701-27	AMMETER ASSY	1
5701-27A	BULB (FOR AMMETER)	1
5701-29	GAGE ASSY, OIL PRESSURE SENDER (ENGINE)	1
5701-30	GAGE ASSY, WATER TEMPERATURE SENDER (ENGINE)	1
5701-31	GAGE ASSY, TEMPERATURE SENDER (TORCON)	1
5701-32	SWITCH ASSY, OIL PRESSURE (ENGINE)	1
5701-33	SWITCH ASSY, STOP LAMP	1
5701-34	SWITCH ASSY, VACUUM WARNING	1
5701-51	TIMER, PREHEATING	1
5701-70	SWITCH ASSY, ROTARY LAMP	1
5701-86	TIMER ASSY, DELAY	1
5701-87	METER ASSY, COMBINATION	1
5701-87A	LENS (FOR COMBINATION METER)	1
5701-87B	GLASS, W/PACKING	1
5701-87C	BULB, W/ SOCKET (FOR COMBINATION METER)	99
5701-87D	BULB (FOR COMBINATION METER)	99
5701-AF	HARNESS ASSY	1
5701-AG	BODY, SWITCH	1
5701-AH	HOLDER, HORN POINT	1
5701-AI	SPRING, HORN CONTACT	2
5701-AJ	COVER	1
5701-AK	BLOCK, LOCKING	1
5701-AL	COVER, RUBBER	1
5701-AM	HARNESS ASSY	1
5701-AN	ACTUATOR	2
5701-AO	PLATE, SWITCH	1
5701-AP	LEVER, SIGNAL	1
5701-AQ	BELLOWS	1
5701-AV	SCREW	5
5701-BA	RELAY ASSY	1
5701-BD	PLATE	1
5701-BI	FLASHER ASSY, TURN SIGNAL	1
5701-BL	INSULATOR, LOWER	1
5701-BR	BOLT	1
5701-CB	INUT	99
5701-CD	CAP, SWITCH	1
5701-CF	GASKET	2
5701-CI	SWITCH ASSY, STOP	2
5701-CM	UNION	1
5701-CR	SPACER	1
5701-CZ	SWITCH ASSY	1
5701-DC	CLAMP	1
5701-DS	WASHER	99
5701-DT	PACKING	1
5701-EL	SOCKET	10
5701-EM	PLUG	1

G708-002

FIG. 5701
METER & SWITCH

5701

ATM

90/07

PART NAME CODE	PART NAME	QTY
5701-EY	SWITCH ASSY	1
5701-FQ	SPRING	1
5701-FX	SPRING	1
5701-GH	BRACKET SUB-ASSY	1
5701-GI	CLAMP	1
5701-GM	SWITCH ASSY	1
5701-GN	BRACKET	1
5701-GS	RELAY ASSY	1
5701-JA	SCREW	14
5701-JC	BRACKET	1
5701-JJ	BOOT	1
5701-JL	HOOD	1
5701-JM	CASE	1
5701-JN	PLATE SUB-ASSY	1
5701-JQ	PLUG, HOLE	1
5701-KD	CLAMP	1
5701-LB	SPACER	1
5701-LC	BALL	1
5701-LD	CAM, CANCEL	1
5701-LE	GUIDE, CANCEL CAM	1
5701-LG	SCREW	4

G708-003E


FIG. 5706
SPEEDOMETER & SPEED ALARM

5706

ATM

89/11

 ATM

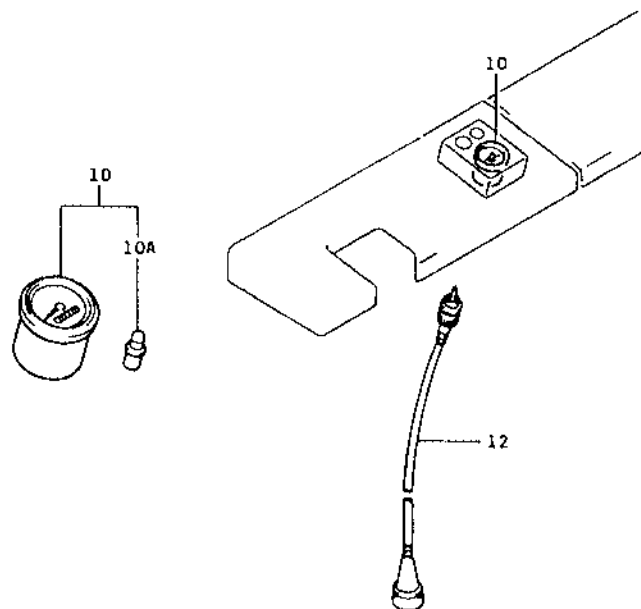

PART NAME CODE	PART NAME	QTY
5706-10	SPEEDOMETER ASSY	1
5706-10A	BULB (FOR SPEEDOMETER)	1
5706-12	WIRE ASSY. METER FLEXIBLE	1
5706-12	WIRE ASSY. METER FLEXIBLE	1

5706-021

G708-001E

FIG. 5801
WIPER MOTOR & BLADE

5801

 
ATM

90/07


ATM (CANVAS CABIN, FRONT GLASS, TROPICAL CABIN)

ATM (STEEL CABIN)



[RELAY]

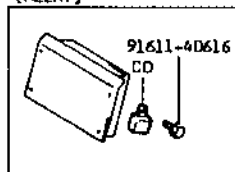


[L/RR WIPER, PLUG]

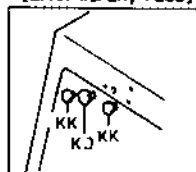 


[RELAY]

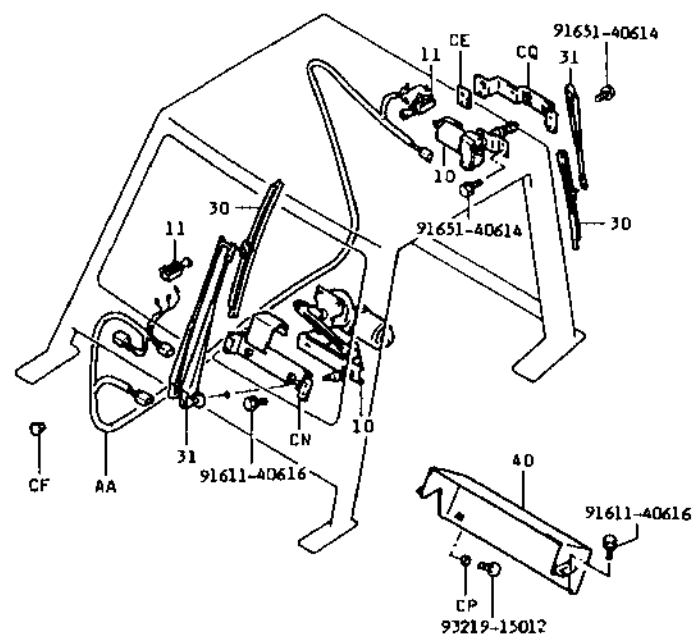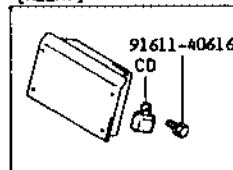  


5801-D54A

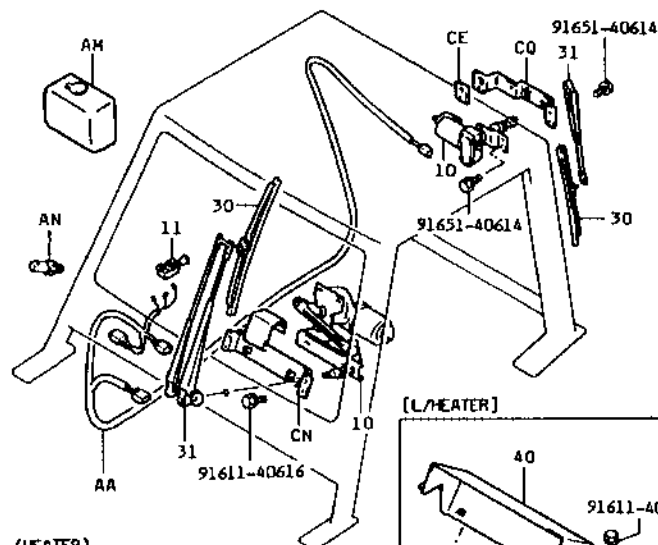 

(HEATER)

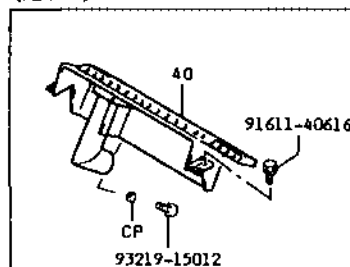 

[L/HEATER]

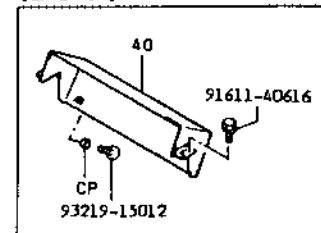 

5801-056

G708-001

FIG. 5801
WIPER MOTOR & BLADE

5801

ATM

90/07

PART NAME	PART NAME	QTY
CODE		
5801-10	MOTOR ASSY, WIPER	1
5801-11	SWITCH ASSY, WIPER	1
5801-30	BLADE SUB-ASSY, WIPER	1
5801-31	ARM SUB-ASSY, WIPER	1
5801-40	COVER SUB-ASSY, WIPER MOTOR	1
5801-AA	HARNESS, WIPER	1
5801-AM	TANK ASSY, WASHER	1
5801-AN	NOZZLE ASSY, WASHER	1
5801-CD	RELAY ASSY	1
5801-CE	PLATE, SWITCH	1
5801-CF	PLUG	1
5801-CN	BRACKET SUB-ASSY, WIPER	1
5801-CP	CUSHION	1
5801-CQ	BRACKET SUB-ASSY, REAR WIPER	1
5801-KJ	PLUG, HOLE	1
5801-KK	PLUG, HOLE	3

G708-002E

FIG. 5802
HEATER

 
 
5802

ATM




90/07

ATM (STEEL CABIN+HEATER)

ATM (STEEL CABIN+HEATER)

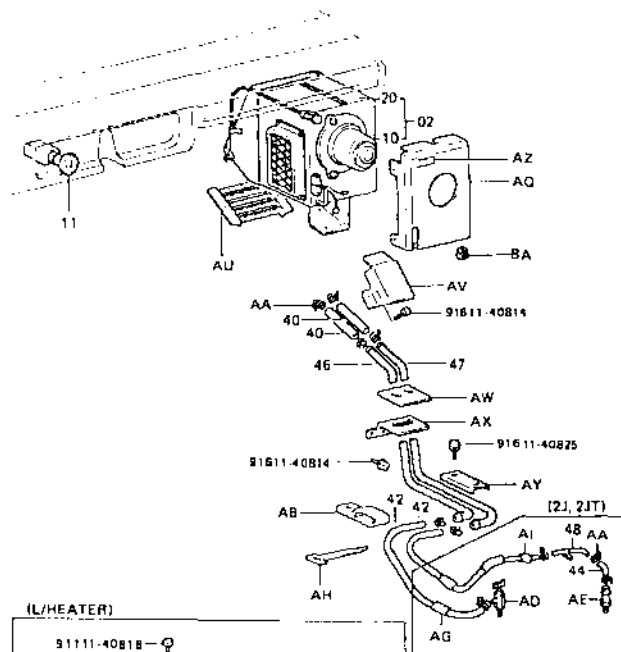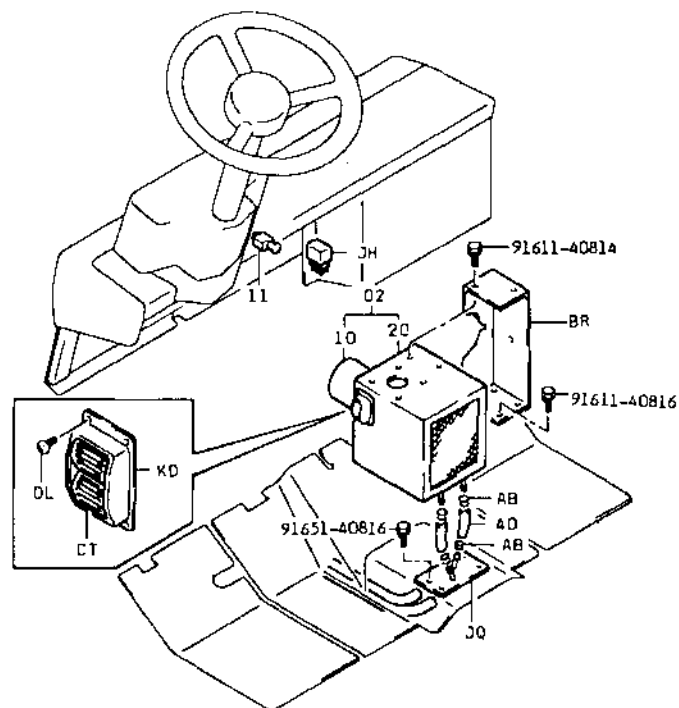

(L/HEATER)

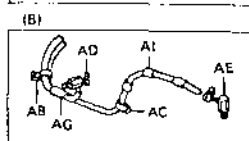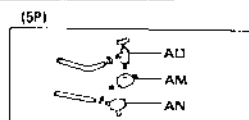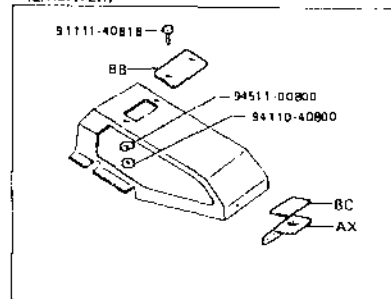   

5802 008

G708-001

FIG. 5802
HEATER

5802

ATM

90/07

PART NAME	PART NAME	QTY
CODE		
5802-02	HEATER ASSY	1
5802-10	MOTOR ASSY	1
5802-11	SWITCH ASSY, HEATER	1
5802-20	UNIT SUB-ASSY, RADIATOR	1
5802-40	HOSE, NO. 1	2
5802-41	HOSE, NO. 2	1
5802-42	HOSE, NO. 3	2
5802-AB	CLAMP	10
5802-AC	CLAMP	1
5802-AD	JOINT	1
5802-AG	BUSHING	6
5802-BD	VALVE ASSY, WATER	1
5802-BM	PLATE	1
5802-BQ	PIPE, WATER JOINT	1
5802-BR	BRACKET	1
5802-CT	DUCT SUB-ASSY, AIR	2
5802-DJ	PIPE SUB-ASSY, WATER	1
5802-DL	SCREW	4
5802-EI	GASKET	1
5802-FC	GASKET	1
5802-JH	RELAY ASSY	1
5802-JQ	PIPE SUB-ASSY, HEATER	1
5802-KD	COVER SUB-ASSY, AIR DUCT	1
5802-KD	COVER SUB-ASSY, AIR DUCT	1

G708-002E

..... MEMO

.....