

TOYOTA INDUSTRIAL VEHICLE

PARTS CATALOG

02-3TD35

No. 0707-4

TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.

TOYOTA

TOWING TRACTOR

PARTS CATALOG

MODEL	3TD35
FRAME NO.	3TD35
ENGINE NO.	2H

DESCRIPTION

Upswept Exhaust	
Cyclon Air Cleaner Dual Element	
Rear Spring Suspension	

TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.

QUICK REFERENCE INDEX

INTRODUCTION

ENGINE

FUEL SYSTEM

CHASSIS

BODY

ELECTRICAL SYSTEM

GENERAL INFORMATION

This parts catalog has been prepared for the customers of Toyota Industrial Vehicles and this shows only the part name codes instead of parts numbers.

When ordering parts from your local Toyota dealer, please specify the complete model number of the truck, the engine number or frame number. Also it is essential that you specify the part name codes described in the pages of illustrations and text.

The complete model number and frame number are shown in the front page of this catalog. All the columns in this quick-reference index are supposed to be filled out by both the factory and your local dealer.

For the industrial vehicle with optional equipment, which is described in the lower part of the DESCRIPTION, it is imperative for you to specify optional equipment when ordering parts.

Your Toyota dealer has always been furnished with enough information to decode the correct part numbers based on your information of model number, engine number or frame number as well as part name code.

INFORMATIONS D'ORDRE GENERAL

Ce catalogue de pièces a été préparé pour les propriétaires de Véhicules Industriels Toyota. On n'y trouvera que les codes de désignation de pièces au lieu des numéros de pièces.

Pour la commande de pièces auprès de votre concessionnaire Toyota, prière de spécifier le numéro de modèle complet de l'engin, le numéro du moteur ou le numéro du châssis. Il est aussi nécessaire de spécifier les codes de désignation de pièces comme ils sont décrits dans les pages d'illustrations et dans le texte.

Le numéro de modèle complet et le numéro de châssis sont indiqués en première page de ce catalogue. Toutes les colonnes de l'index de référence rapide devraient être remplies par l'usine et par votre concessionnaire.

Pour le véhicule industriel avec équipement optionnel, décrit en bas de page sous la rubrique "DESCRIPTION", il convient de bien spécifier qu'il s'agit de cet équipement lors de commande de pièces.

Votre concessionnaire Toyota est toujours suffisamment informé pour décoder les numéros de pièces sur la base de votre information du numéro de modèle, du numéro de moteur ou de châssis, et des codes de désignation de pièces.

INFORMACION GENERAL

Este catálogo de piezas ha sido preparado para los clientes de vehículos industriales de TOYOTA, e incluye tan sólo los códigos de nombre de pieza en lugar de los números de pieza.

Cuando solicite piezas a su distribuidor local de TOYOTA especifique por favor el número de modelo completo del vehículo, el número de motor o el número de bastidor. Asimismo, es esencial que Vd. especifique los códigos de nombre de pieza descritos en las páginas de ilustraciones y de texto.

El número completo de modelo y el número de bastidor se indican en la portada de este catálogo. Se supone que todas las columnas de este índice de referencia se han rellenado, tanto por parte de la fábrica como por parte de su distribuidor local.

En lo que concierne a los vehículos industriales con equipos opcionales, que se describen en la parte baja de la DESCRIPCION, es absolutamente necesario que especifique equipos opcionales cuando solicite piezas de repuesto.

Su distribuidor local de TOYOTA posee la información necesaria para descifrar los números correctos de cada pieza a base de su información de número de modelo, número de motor o número de bastidor, así como el código de nombre de la pieza.

ALLGEMEINE INFORMATION

Dieser Teilekatalog wurde für die Benutzer von Toyota Industriefahrzeugen zusammengestellt und zeigt anstelle von Teilenummern nur die Teilennamen-Kodes.

Geben Sie bei Teilebestellungen von Ihrem Toyota-Händler am Platz bitte die vollständige Modellnummer des Fahrzeugs, die Motornummer oder Fahrgestellnummer an. Es ist auch erforderlich, daß Sie die in den Illustrationen und im Text beschriebenen Teilennamen-Kodes angeben.


Die vollständige Modellnummer und Fahrgestellnummer finden Sie auf der Vorderseite dieses Katalogs. Alle Spalten in dieser Bezugstabelle sollen sowohl vom Werk als von Ihrem Händler am Platz ausgefüllt werden.

Für Industriefahrzeuge mit Sonderausrüstung, welche im unteren Teil der BESCHREIBUNG erläutert ist, müssen Sie bei der Bestellung von Teilen unbedingt diesbezügliche Angaben machen.

Ihr Toyota-Händler verfügt stets über genügend Information, um die richtigen Teilenummern zu entschlüsseln, basiert auf Ihren Angaben zu Modellnummer, Motornummer oder Fahrgestellnummer und den Teilennamen-Kodes.

ILLUSTRATION AND PART NAME CODE TEXT PAGE COMPOSITION

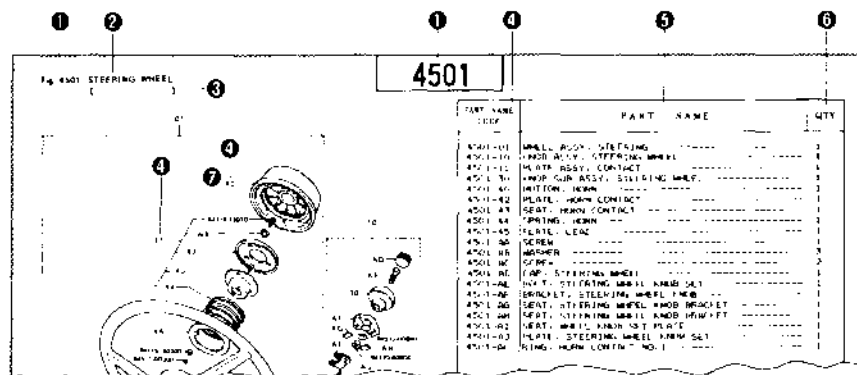 Essentially, one (1) page will present both the illustration and part name code. However, when the space for text page is not enough the next page will be used in succession.



- 1 Figure number
This parts catalog has been prepared according to the figure numbers.
- 2 Figure title
A representative part name which is the major assembly part name is shown as the figure title of the illustration.
- 3 Sub title
The optional name or special specification of each illustration are indicated.
- 4 Part name code
This is a combination of figure number and codes of illustrations pertaining to each part. This is a key for your Toyota dealer to find the correct part numbers.
- 5 Part name
As a rule, the part name is indicated for each of the part name codes.
- 6 QTY (Quantity)
The quantity column indicates the utilized pieces of part name code unit. When the utilized quantity changes according to each of the vehicles, maximum is indicated.
When the utilized quantity of the parts differs or is more than 100 pieces, quantity 99 is indicated.
- 7 Standard parts numbers
The standard parts such as the bolts, nuts, washer, etc. are described with parts numbers. When ordering these parts, specify parts numbers.


COMPOSICION DE LAS PAGINAS DE ILUSTRACIONES Y DE TEXTO DE CODIGOS DE NOMBRE DE PIEZAS

Básicamente, una (1) página incluirá tanto la ilustración como el código de nombre de la pieza.
No obstante, si el espacio no fuese suficiente, se utilizará la página siguiente.

- 1 Número de figura
Este catálogo de piezas se ha preparado de acuerdo con los números de las figuras.
- 2 Título de las figuras
Como título de las figuras de la página de ilustraciones, se incluye un nombre que sea representativo del nombre del mayor conjunto.
- 3 Subtítulo
Se indican el nombre opcional o las especificaciones especiales de cada ilustración.
- 4 Código de nombre de pieza
Se trata de una combinación de número de figura y de código de las ilustraciones correspondientes a cada pieza. Esta es la clave para que su distribuidor local de TOYOTA pueda encontrar el número de pieza correcto.
- 5 Nombre de la pieza
Como norma, se indica el nombre de cada uno de los códigos de nombre de pieza.
- 6 QTY (Cantidad)
La columna de cantidad indica el número de piezas utilizadas de cada unidad de código de nombre de pieza.
Cuando la cantidad utilizada es intercambiable entre cada uno de los vehículos, se indica el máximo.
Cuando la cantidad de piezas utilizadas pueda diferir o ser superior a 100, se indica como cantidad 99.
- 7 Números de piezas normalizadas
Las piezas corrientes, tales como pernos, tuercas, arandelas etc., se describen con número de pieza. Cuando solicite tales piezas, indique su número de pieza.

ILLUSTRATION ET COMPOSITION DU DE TEXTE DE CODE DE DESIGNATION DE PIECE

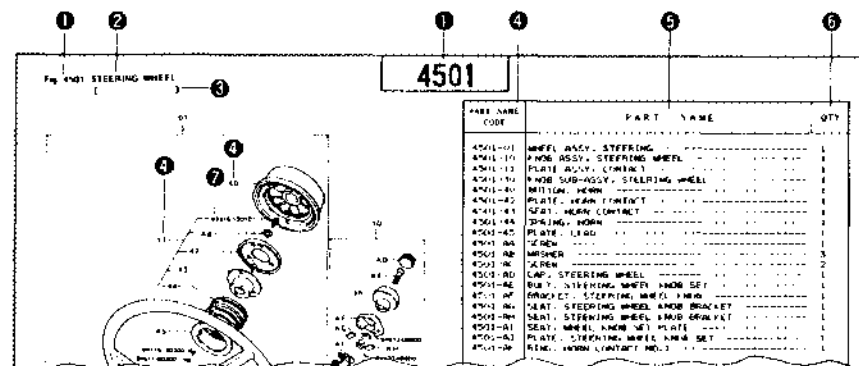 Une (1) page contiendra essentiellement une illustration et ses codes de désignation de pièce. Toutefois, lorsque l'espace réservé au texte est insuffisant, la continuation se trouvera sur la page suivante.



- 1 Numéro de figure
Ce catalogue de pièces a été préparé en fonction des numéros de figures.
- 2 Titre de figure
Une désignation de pièce représentative, celle d'une pièce d'un ensemble important, est indiquée comme titre de figure de l'illustration.
- 3 Sous-titre
La désignation optionnelle ou les spécifications spéciales de chaque illustration sont indiquées.
- 4 Code de désignation de pièce
Obtenu en combinant le numéro de figure et les codes des illustrations inhérents à chaque pièce. Ce code permettra à votre concessionnaire Toyota de trouver les numéros de pièces corrects.
- 5 Désignation de pièce
La désignation de la pièce est indiquée pour chacun des codes de désignation de pièce.
- 6 QTY (quantité)
La colonne quantité indique les pièces utilisées de l'unité de code de désignation de pièce. La quantité maximum est indiquée quand la quantité utilisée diffère pour chacun des véhicules. Quand la quantité de pièces utilisées diffère ou lorsqu'elle dépasse 100 pièces, la quantité 99 est indiquée.
- 7 Numéros de pièces standard
Les pièces standard, comme les boulons, les écrous, les rondelles, etc., sont décrits dans les numéros de pièces. Pour commander ces pièces, prière de spécifier les numéros de pièces.

ABBILDUNG UND TEXTSEITENAUFBAU FÜR TEILENAMEN-KODE

Grundsätzlich finden Sie auf einer (1) Seite sowohl die Abbildung als auch den Teilennamen-Kode.
Wenn für den Text jedoch nicht genügend Platz vorhanden ist, wird er auf der nächsten Seite fortgesetzt.

- 1 Abbildungsnummer
Dieser Teilekatalog wurde nach Abbildungsnummern zusammengestellt.
- 2 Abbildungstitel
Ein stellvertretender Teilename, welcher zugleich die Bezeichnung für die Hauptbaugruppe ist, wird als Abbildungstitel der Illustration angegeben.
- 3 Untertitel
Ein zusätzlicher Name oder eine besondere Kennzeichnung werden für jede Illustration angegeben.
- 4 Teilennamen-Kode
Dies ist eine Kombination von ziffern und Abbildungskodes, die jedes Teil betreffen. Es ist ein Schlüssel für Ihren Toyota-Handler, um die richtigen Teilenummern zu finden.
- 5 Teilename
Grundsätzlich wird der Teilename für alle Teilennamen-Kodes angegeben.
- 6 QTY (Menge)
Die Mengenspalte gibt die benutzte Stückzahl von Teilennamen-Kode-Einheiten an.
Wenn die benutzte Stückzahl je nach Fahrzeug Verschieden ist, wird die Höchstmenge angegeben.
Wenn die benutzte Menge 100 Stück überschreiten kann, wird als Menge 99 angegeben.
- 7 Standardteile Nummern
Die Standardteile, wie Schrauben, Muttern, Unterlegscheiben usw., sind in den Teilenummern beschrieben. Geben Sie bei Bestellung dieser Teile die Teilenummern an.

DATA PLATE & SERIAL NUMBERS

For retrieving correct part numbers, it's indispensable to know the truck model, as well as frame number (or engine number). Customers can obtain said information in the data plate on the truck or in this user parts catalog.

PLAQUE DE DONNEES TECHNIQUES & NUMEROS DE SERIE

Pour relever correctement le numéro des pièces, il est indispensable de connaître le modèle de l'engin, ainsi que le numéro du châssis (ou du moteur). Les propriétaires peuvent trouver ladite information sur la plaque de données techniques de l'engin ou dans le présent ouvrage.

PLACA DE DATOS Y NUMEROS DE SERIE

Para obtener los números de pieza correctos, es indispensable conocer el modelo del vehículo, así como el número del bastidor (o del motor). Los clientes pueden obtener dicha información por la placa de datos del vehículo o este catálogo de piezas para el usuario.


DATENPLATTE & SERIENNUMMERN

Um die richtige Teilenummer zu ermitteln, müssen unbedingt das Fahrzeugmodell sowie die Fahrgestellnummer (oder die Motornummer) bekannt sein. Kunden können diese Angaben von der Datenplatte am Fahrzeug oder in diesem Teilekatalog für Benutzer entnehmen.

Data plate
Placa de datos
Plaque de données techniques
Datenplatte

 TOYOTA TOWING TRACTOR	
MODEL	
SERIAL NO. (FRAME NO.)	
MAXIMUM TOWING PULL	
WEIGHT	
TOYODA AUTOMATIC LOOM WORKS, LTD. KARIYA, JAPAN	

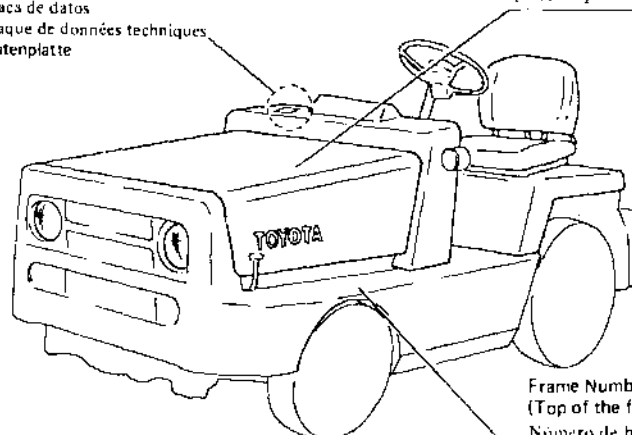 Data plate
Placa de datos
Plaque de données techniques
Datenplatte



Engine Number
(Top of the cylinder head)
Número de motor
(Parte superior de la culata)

Numéro de moteur
(sur la culasse)
Motornummer
(Oben am Zylinderkopf)

Frame Number
(Top of the frame)
Número de bastidor
(Parte superior del bastidor)

Numéro de châssis
(haut du châssis)
Fahrgestellnummer
(Oben am Fahrgestell)

FIG. INDEX

絵目次


 
 
 
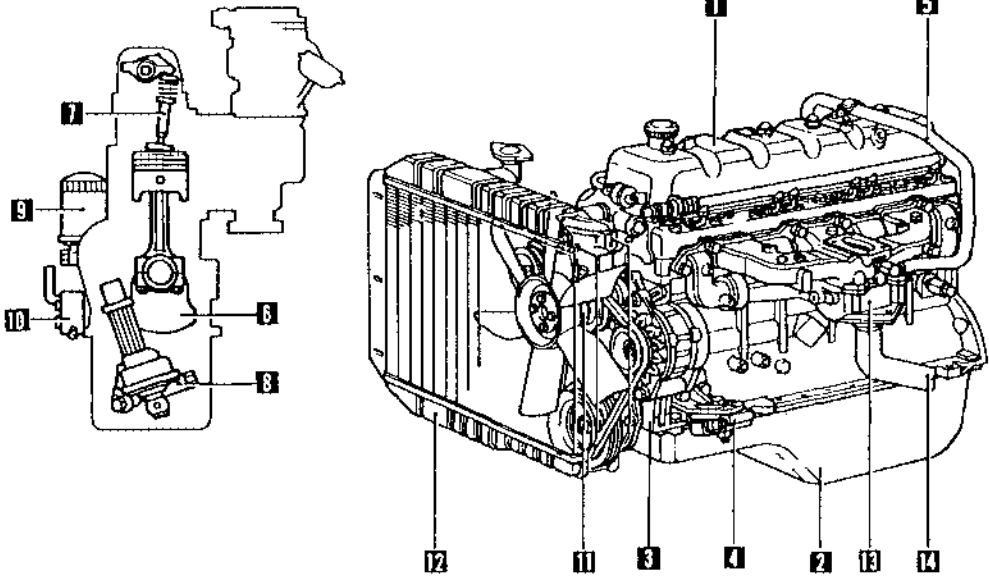 
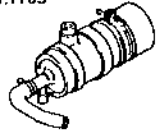 
 
 
 
 
 
 
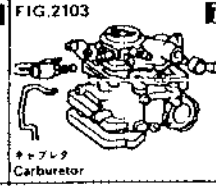 
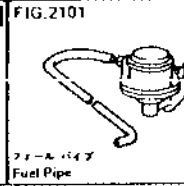 
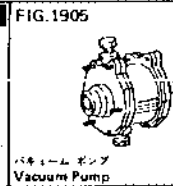 
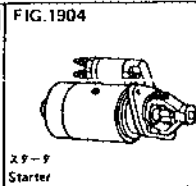 
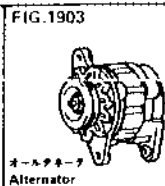 
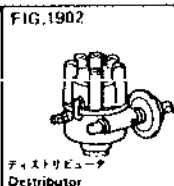 
FIG.1101  エンジン アッセンブリ Engine Assembly	FIG.1101  ショートブロック アッセンブリ Short Block Assembly	FIG.1101  オーバーホール ガasket キット Overhaul Gasket Kit	FIG.1104  シリンダーヘッド Cylinder Head	1 FIG.1105  シリンダーブロック Cylinder Block	2 FIG.1106  ギヤカバーとエンドプレート Gear Cover & End Plate	3 FIG.1107  マウンティング Mounting
エンジン グループ ENGINE GROUP (1/2) 						
(Note) Illustrations in this chart apply to all LAND CRUISER line.						
FIG.1703  エアクリーナー Air Cleaner	FIG.1702  エキゾーストパイプとマフラー Exhaust Pipe & Muffler	7 FIG.1701  マニホールド Manifold	13 FIG.1603  ラジエーターとウォーターアウトレット Radiator & Water Outlet	17 FIG.1601  ウォーターポンプ Water Pump	11 FIG.1503  オイルカラー Oil Collar	10 FIG.1502  オイルフィルター Oil Filter
FIG.1201  ベンチレーションホース Ventilation Hose FIG.1301  クランクシャフトとピストン Crankshaft & Piston FIG.1302  カムシャフトとバルブ Camshaft & Valve FIG.1501  オイルポンプ Oil Pump						

FIG. INDEX

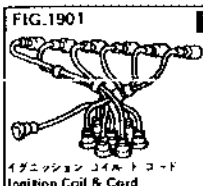 繪目次



ENGINE, FUEL GROUP (2/2)

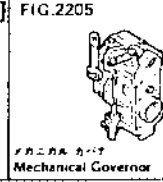 
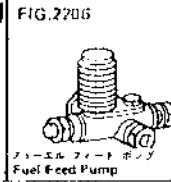 
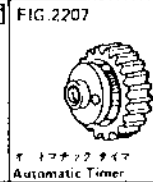 
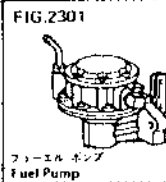 
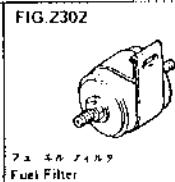 
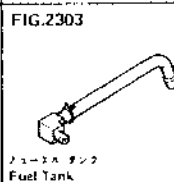 
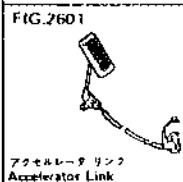 
 
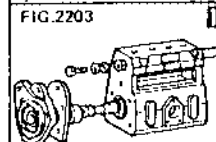 
 
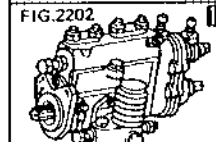 
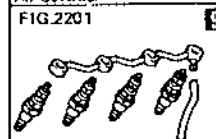 
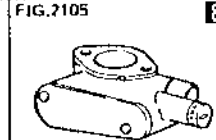 
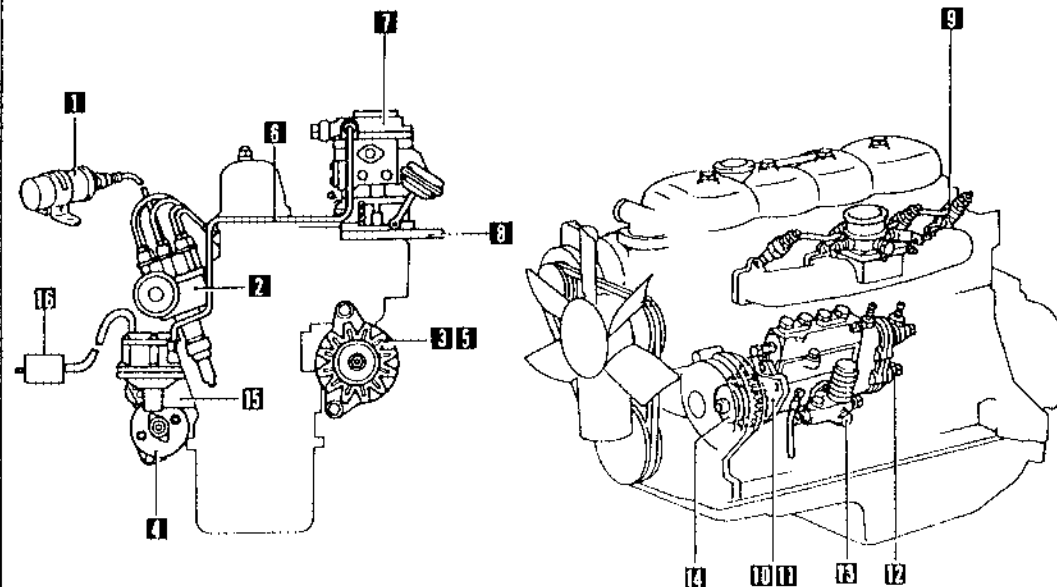 


FIG. INDEX

絵目次

 
 
 
 
 
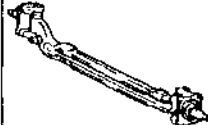 
 
 
 
 
 
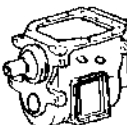 
 
 
FIG. 3101 (MTM)  クラッチ Clutch	FIG. 3102 (MTM)  クラッチ ペダル Clutch Pedal	FIG. 3103 (MTM)  クラッチ マスター シリンダ Clutch Master Cylinder	FIG. 3104 (MTM)  クラッチ リリース シリンダ Clutch Release Cylinder	FIG. 3201 (ATM)  トルクコンバータ ハウジング Torqueconverter Housing	FIG. 3202 (ATM)  トルクコンバータ Torqueconverter	FIG. 3203 (ATM)  トルクコンバータ クラッチ Torqueconverter Clutch
FIG. 4205  リア アクスル シャフト Rear Axle Shaft	FIG. 4306  フロント アクスル Front Axle	FIG. 4306  タイロッド Tie-Rod	シャシ グループ CHASSIS GROUP (1/2)			FIG. 3204 (ATM)  トルクコンバータ ギヤ Torqueconverter Gear
FIG. 4101  ディファレンシャル Differential						FIG. 3206 (ATM)  コントロール バルブ Control Valve
FIG. 3701  プロペラ シャフト & ユニバーサル ジョイント Propeller Shaft & Universal Joint						FIG. 3207  レギュレータ バルブ Regulator Valve
FIG. 3402  サブトランスミッション ギヤ Sub-Transmission Gear						FIG. 3208  オイル ポンプ Oil Pump
FIG. 3401  サブトランスミッション ケース Sub-Transmission Case	FIG. 3303 (MTM)  ギヤ シフト フォーク Gear Shift Fork	FIG. 3302 (MTM)  トランスミッション ギヤ Transmission Gear	FIG. 3301 (MTM)  トランスミッション ケース Transmission Case	FIG. 3215 (ATM)  シフト レバー Shift Lever	FIG. 3213 (ATM)  トルクコンバータ パイピング Torqueconverter Piping	FIG. 3210  アキュムレータ Accumulator

FIG. INDEX

絵目次

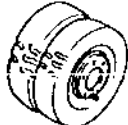 
 
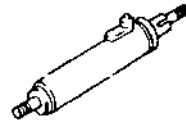 
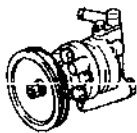 
 
 
FIG. 4401  フロントホイールとタイヤ (シングル) Front Wheel & Tire (Single)	FIG. 4403  リヤホイールとタイヤ Rear Wheel & Tire	FIG. 4501  ステアリングホイール Steering Wheel	FIG. 4502  ステアリングポスト Steering Post	FIG. 4507  ドラッグリンクとステアリングパイピング Drag Link & Steering Piping	FIG. 4508  ステアリングパワーシリンダ Steering Power Cylinder	FIG. 4511  ステアリングベーンポンプ Steering Vane Pump
シャシグループ CHASSIS GROUP (2/2)						FIG. 4513  オイルリザーバ Oil Reservoir
						FIG. 4601  パーキングブレーキ Parking Brake
						FIG. 4701  ブレーキペダル Brake Pedal
						FIG. 4702  ブレーキマスターシリンダ Brake Master Cylinder
			FIG. 4801  サスペンションスプリング Suspension Spring	FIG. 4715  ドラムブレーキ Drum Brake	FIG. 4714  ブレーキパイピング Brake Piping	FIG. 4707  ブレーキブースタ Brake Booster

FIG. INDEX

絵目次


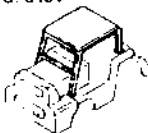 
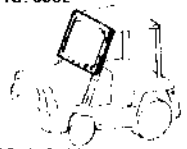 
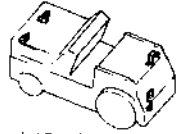 
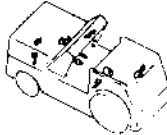 
FIG. 5101  フレームとウェイト Frame & Weight	1 FIG. 5201  フードとヒンジ Hood & Hinge	2 FIG. 5301  インストルメント パネルとフロア Instrument Panel & Floor	3 FIG. 5308  ドライバーシート Driver Seat	4 FIG. 5401  ヘッドガードとアクセサリー Head Guard & Accessory	FIG. 5405  インジケータ プレート Indicator Plate	FIG. 5502  スチール キャビン Steel Cabin
ボディ、エレクトリカル グループ BODY, ELECTRICAL GROUP						
						FIG. 5601  ワイヤリングとクランプ Wiring & Clamp
						FIG. 5611  ランプ Lamp
						FIG. 5612  ランプ ブラケット Lamp Bracket
						FIG. 5701  メーターとスイッチ Meter & Switch
					FIG. 5801  ワイパーモーターとブレード Wiper Motor & Blade	FIG. 5706  スピードメーターとスピードアラーム Speedometer & Speed Alarm

FIG. 0901
STANDARD TOOL

0901

2H

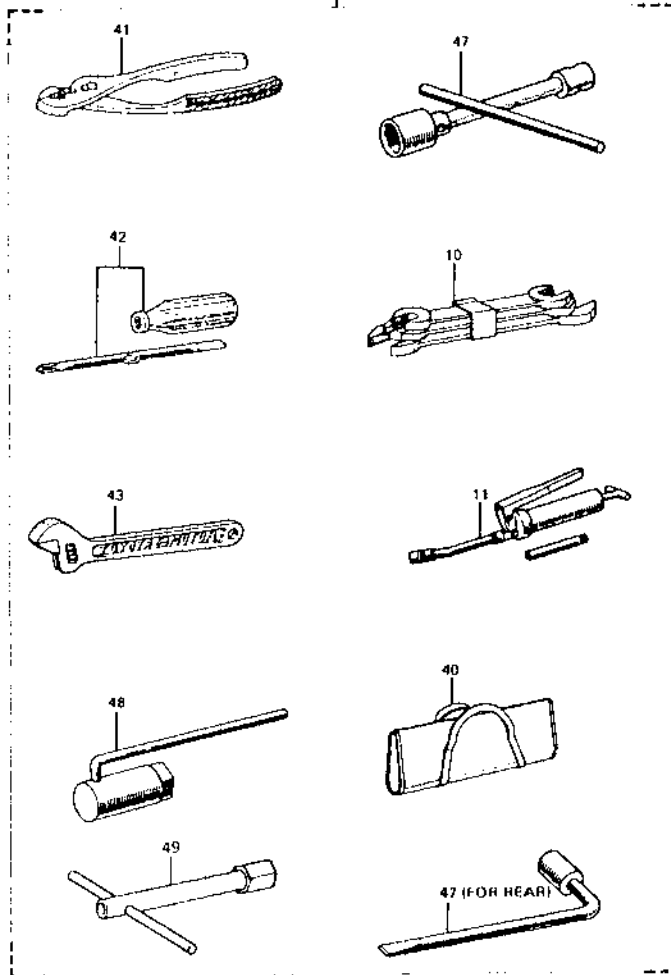 01
1



0901 026

PART NAME CODE	PART NAME	QTY
0901-01	TOOL SET, STANDARD	1
0901-10	SPANNER SET	1
0901-11	PUMP ASSY, GREASE	1
0901-40	BAG, TOOL	1
0901-41	PRYERS	1
0901-42	DRIVER, SCREW	1
0901-43	WRENCH, MONKEY	1
0901-47	WRENCH, HUB NUT BOX	1
0901-49	WRENCH, GLOW PLUG	1

(2H) (1)


G707

FIG. 1101
ENGINE ASSY

1101

2H

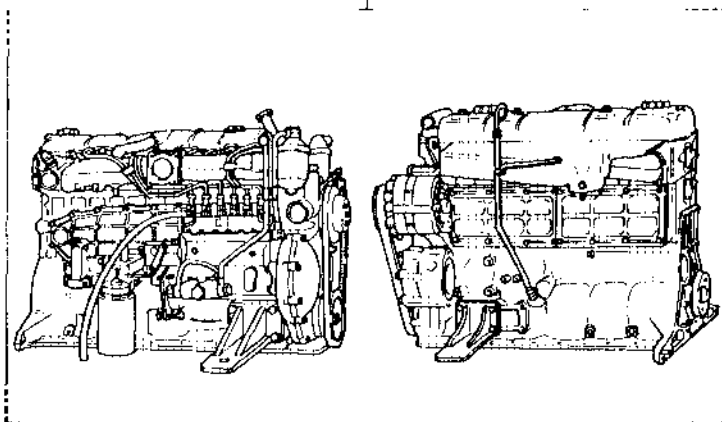 
00



1101-016


2H

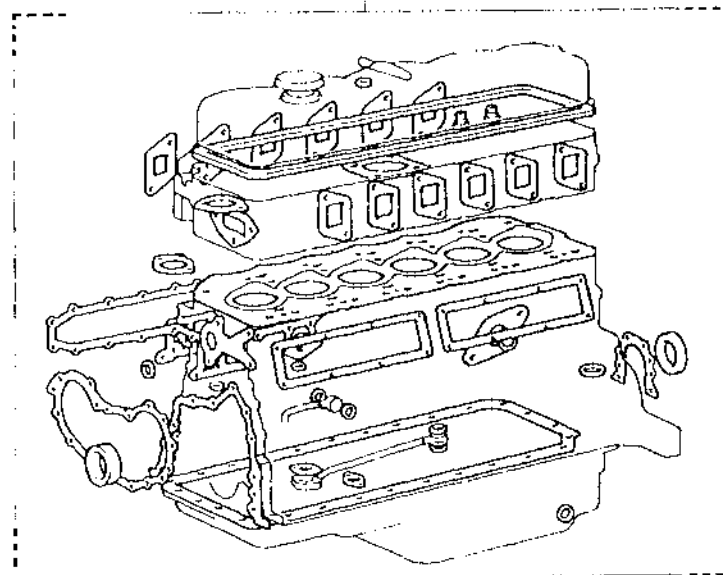 00K




2H

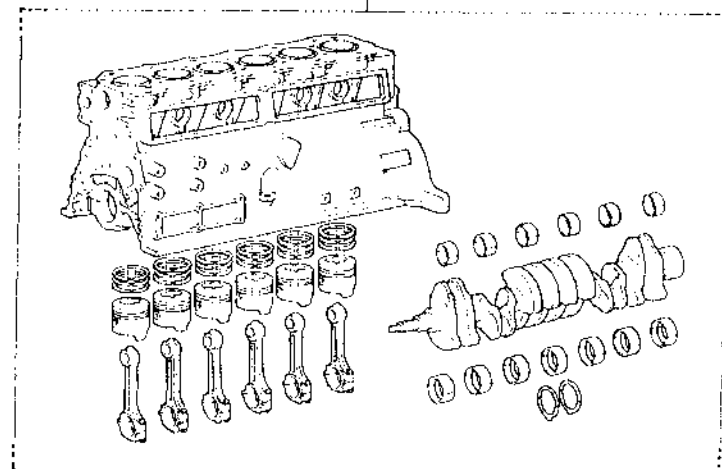 02



1101-017

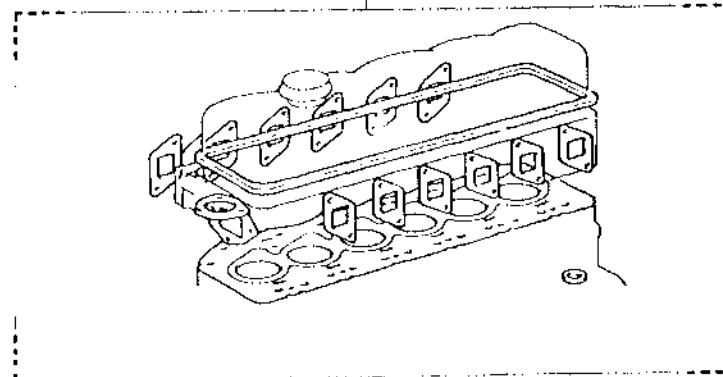 00L



1101-015

1101




PART NAME CODE	PART NAME	QTY
1101-00	ENGINE ASSY -----	1
1101-00K	GASKET KIT, ENGINE O/P -----	1
1101-00L	GASKET KIT, ENGINE VALVE GRIND -----	1
1101-00Z	BLOCK ASSY, SHORT ---	1

(26) 1 2 0707

FIG. 1104
CYLINDER HEAD

1104

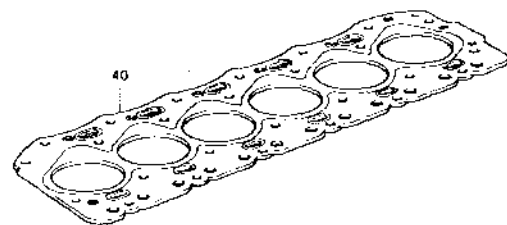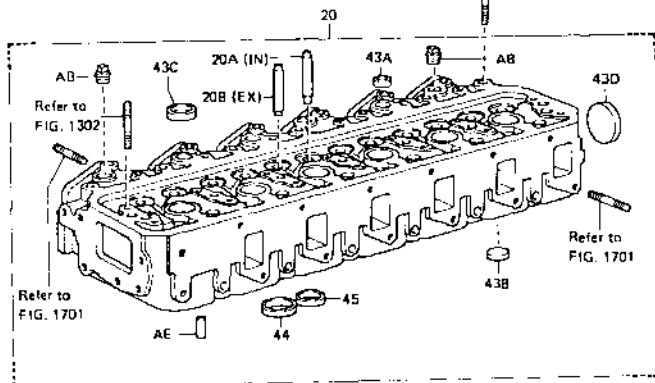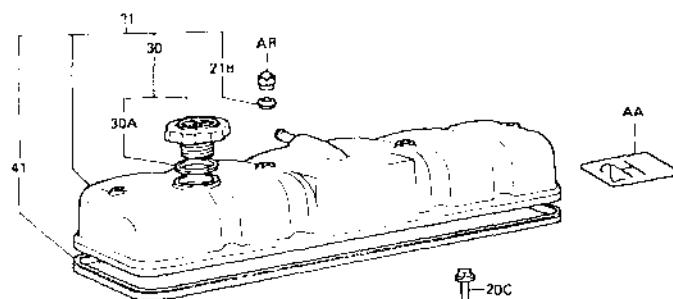   2H



1104-1118A



PART NAME CODE	PART NAME	QTY
1104-20	HEAD SUB-ASSY, CYLINDER	1
1104-20A	BUSH, VALVE GUIDE INTAKE	6
1104-20B	BUSH, VALVE GUIDE EXHAUST	6
1104-20C	BOLT (FOR CYLINDER HEAD SET)	26
1104-21	COVER SUB-ASSY, CYLINDER HEAD	1
1104-21B	WASHER, SEAL (FOR CYLINDER HEAD COVER)	4
1104-30	CAP SUB-ASSY, OIL FILLER	1
1104-30A	GASKET (FOR OIL FILLER CAP)	1
1104-40	GASKET, CYLINDER HEAD	1
1104-41	GASKET, CYLINDER HEAD COVER	1
1104-43A	PLUG, TIGHT, NO.1	3
1104-43B	PLUG, TIGHT, NO.2	6
1104-43C	PLUG, TIGHT, NO.3	12
1104-43D	PLUG, TIGHT, NO.4	1
1104-44	SEAT, VALVE INTAKE	6
1104-45	SEAT, VALVE EXHAUST	6
1104-AA	PLATE, CAUTION	1
1104-AB	PLUG, W/HEAD TAPER SCREW	3
1104-AE	TUBE	6
1104-AR	NUT	4

(2H) () () G707

FIG. 1105
CYLINDER BLOCK

1105

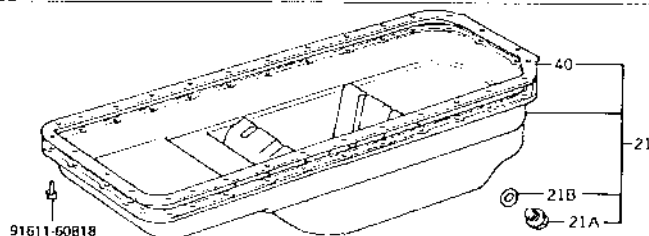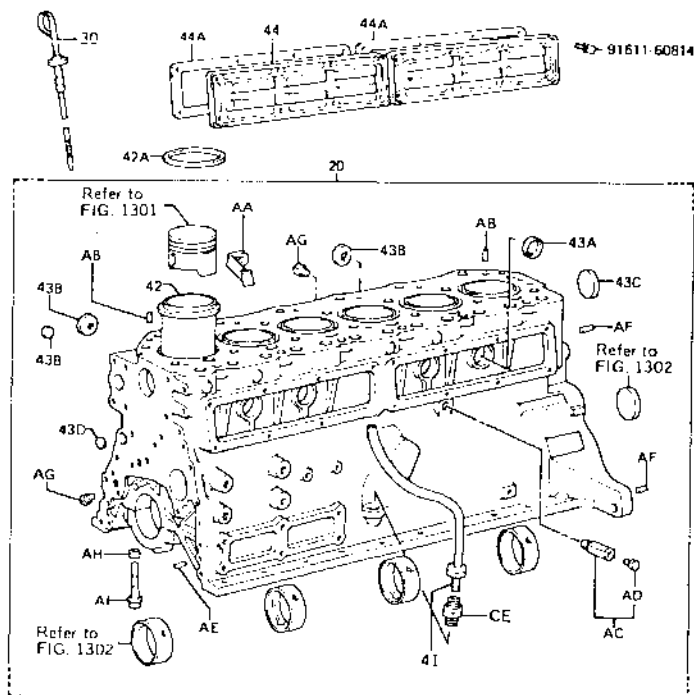  2H



1105 093


PART NAME CODE	PART NAME	QTY
1105-20	BLOCK SUB-ASSY, CYLINDER	1
1105-21	PAN SUB-ASSY, OIL	1
1105-21A	PLUG (FOR OIL PAN DRAIN)	1
1105-21B	GASKET (FOR OIL PAN DRAIN PLUG)	1
1105-30	GAGE SUB-ASSY, OIL LEVEL	1
1105-40	GASKET, OIL PAN	1
1105-41	GUIDE, OIL LEVEL GAGE	1
1105-42	LINER, CYLINDER	6
1105-42A	SPCM, CYLINDER LINER	99
1105-43A	PLUG, TIGHT, NO.1	2
1105-43B	PLUG, TIGHT, NO.2	1- 2
1105-43C	PLUG, TIGHT, NO.3	2
1105-43D	PLUG, TIGHT, NO.4	2
1105-44	COVER, VALVE PUSH ROD	2
1105-44A	GASKET, VALVE PUSH ROD COVER	2
1105-AA	SUPPORT, OIL LEVEL GAGE GUIDE	1
1105-AB	PIN, STRAIGHT	1
1105-AC	COCK SUB-ASSY, DRAIN	1
1105-AJ	PLUG, DRAIN COCK	1
1105-AE	PIN, STRAIGHT	1- 4
1105-AF	PIN, STRAIGHT	3
1105-AG	PLUG, W/HEAD TAPER SCREW	2
1105-AH	PIN, RING	14
1105-AI	BOLT	14
1105-CF	BOLT	16

(2H) (4) G707

FIG. 1106
TIMING GEAR COVER & END PLATE

1106

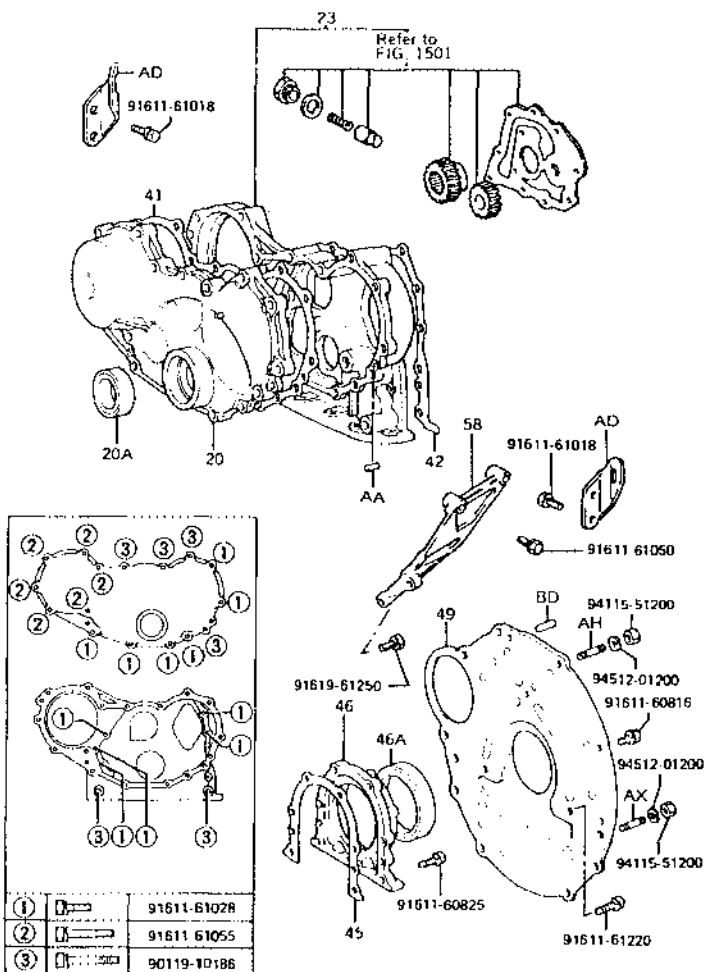 2H



1106 048

PART NAME CODE	PART NAME	QTY
1106-20	COVER SUB-ASSY, TIMING GEAR (OR CHAIN)	1
1106-20A	SEAL, OIL (FOR TIMING GEAR COVER)	1
1106-23	CASE SUB-ASSY, TIMING GEAR	1
1106-41	GASKET, TIMING GEAR (OR CHAIN) COVER	1
1106-42	GASKET, FRONT END PLATE	1
1106-44	GASKET, REAR OIL SEAL RETAINER	1
1106-46	RETAINER, REAR OIL SEAL	1
1106-46A	SEAL, ENGINE REAR OIL	1
1106-49	PLATE, REAR END	1
1106-58	PLATE, STIFFENER	1
1106-AA	PIN, STRAIGHT	1
1106-AU	HANGER, ENGINE	2
1106-AH	BOLT, STUD	2
1106-AX	BOLT, STUD	2
1106-BU	PIN, STRAIGHT	2

(2H) () () 6/37

1107

Exploded view diagram of the front suspension assembly. The diagram shows the following components and their assembly sequence:

- 94115-51200**: Upper control arm ball joint.
- 94531-01200**: Upper control arm bush.
- 94612-11200**: Upper control arm nut.
- 40**: Upper control arm bracket.
- 41**: Lower control arm bracket.
- 43**: Lower control arm bracket.
- 31**: Steering knuckle.
- 91619-61230**: Lower control arm ball joint.
- 94512-01200**: Lower control arm bush.
- 94115-51200**: Lower control arm ball joint.

1107 051


PART NAME CODE	PART NAME	QTY
1107-30	SUPPORT SUB-ASSY, ENGINE BRACKET, RH -----	1
1107-31	SUPPORT SUB-ASSY, ENGINE BRACKET, LH -----	1
1107-40	BRACKET, ENGINE MOUNTING, FR, RH -----	1
1107-41	BRACKET, ENGINE MOUNTING, FR, LH -----	1
1107-43	INSULATOR, ENGINE MOUNTING, FR -----	2
1107-45	BRACKET, ALTERNATOR, NO.1 -----	1

$$\sqrt{2}H \quad \quad \quad) \quad (\quad \quad \quad) \quad \quad \quad 3721$$

FIG. 1201
VENTILATION HOSE

1201

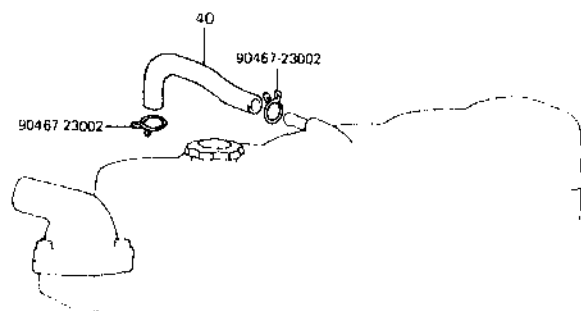 2H



1201 077

PART NAME CODE	PART NAME	QTY
1201-40	HOSE, VENTILATION, NO.1 -----	1

(2H) (7)

G707

1301


PART NAME CODE	PART NAME	QTY
1301-20	ROD SUB-ASSY. CONNECTING -----	6
1301-20A	BUSH, CONNECTING ROD -----	6
1301-20B	BOLT, CONNECTING ROD -----	12
1301-20C	NUT, HEXAGON (FOR CONNECTING ROD) -----	12
1301-21	PISTON SUB-ASSY, W/PIN -----	6
1301-21A	RING, HOLE SNAP (FOR PISTON PIN) -----	12
1301-22	FLYWHEEL SUB-ASSY -----	1
1301-30	BEARING SET, CONNECTING ROD -----	1
1301-31	BEARING SET, CRANKSHAFT -----	1
1301-32	RING SET, PISTON -----	1
1301-34	WASHER SET, CRANKSHAFT THRUST -----	1
1301-40	CRANKSHAFT -----	1
1301-41	PULLY, CRANKSHAFT -----	1
1301-41A	KEY, CRANKSHAFT (FOR PULLEY SET) -----	1
1301-42	GEAR OR SPROCKET, CRANKSHAFT TIMING -----	1
1301-42A	KEY, CRANKSHAFT (FOR TIMING GEAR SET) -----	1
1301-42B	BEARING (FOR INPUT SHAFT) -----	1
1301-43	GEAR, FLYWHEEL RING -----	1
1301-43B	BOLT, FLYWHEEL SET -----	6
1301-44	SPLINE, OIL PUMP DRIVE -----	1
1301-AT	NUT -----	1
1301-AV	PIN, STRAIGHT (FOR FLYWHEEL) -----	2
1301-BT	PULLEY, CRANKSHAFT NO.2 -----	1

(2H) (8) G707

FIG. 1302
CAMSHAFT & VALVE

1302

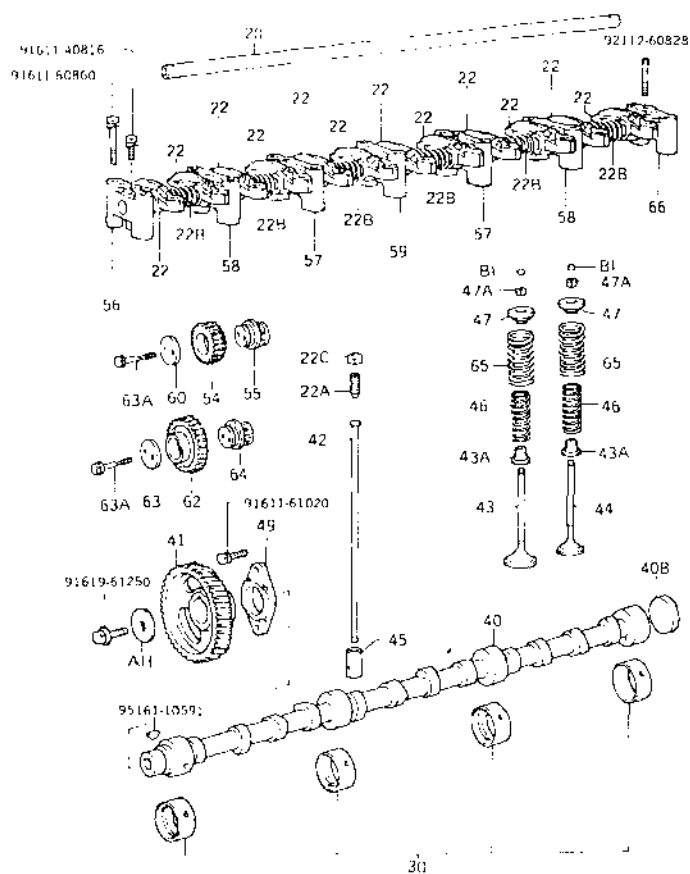 2H



1302-016A


PART NAME CODE	PART NAME	QTY
1302-21	SPRNG SUB-ASSY, VALVE ROCKER, NO.1	1
1302-22	ARM SUB-ASSY, VALVE ROCKER, NO.1	12
1302-22A	SCREW, VALVE ADJUSTING	12
1302-22B	SPRING, COMPRESSION (FOR ROCKER ARM)	6
1302-22C	NUT, ADJUSTING SCREW HEXAGON	12
1302-30	BEARING SET, CAMSHAFT	1
1302-40	CAMSHAFT	1
1302-40B	PLUG, EXPANSION (FOR CAMSHAFT)	1
1302-41	GEAR ON SPROCKET, CAMSHAFT TIMING	1
1302-42	ROD, VALVE PUSH	12
1302-43	VALVE, INTAKE	6
1302-43A	SEAL OR RING, L (FOR VALVE STEM OIL)	12
1302-44	VALVE, EXHAUST	6
1302-45	LIFTER, VALVE	12
1302-46	SPRING, VALVE COMPRESSION	12
1302-47	RETAINER, VALVE SPRING	12
1302-47A	LOCK, VALVE SPRING RETAINER	24
1302-49	PLATE, CAMSHAFT THRUST	1
1302-54	GEAR, IDLE (FOR CAMSHAFT)	1
1302-55	SHAFT, IDLE GEAR (FOR CAMSHAFT)	1
1302-56	SUPPORT, VALVE ROCKER, NO.1	1
1302-57	SUPPORT, VALVE ROCKER, NO.2	2
1302-58	SUPPORT, VALVE ROCKER, NO.3	2
1302-59	SUPPORT, VALVE ROCKER, NO.4	2
1302-60	PLATE, IDLE GEAR THRUST (FOR CAMSHAFT)	1
1302-62	GEAR, IDLE	1
1302-63	PLATE, IDLE GEAR THRUST	1
1302-63A	BOLT, HEXAGON	4
1302-64	SHAFT, IDLE GEAR	1
1302-65	SPRING, COMPRESSION (FOR UPPER VALVE)	12
1302-66	SUPPORT, VALVE ROCKER, NO.5	1
1302-67	WASHER	1
1302-81	CAP, VALVE STEM	12

(24) (1) (4) 5/67

FIG. 1501
OIL PUMP

1501

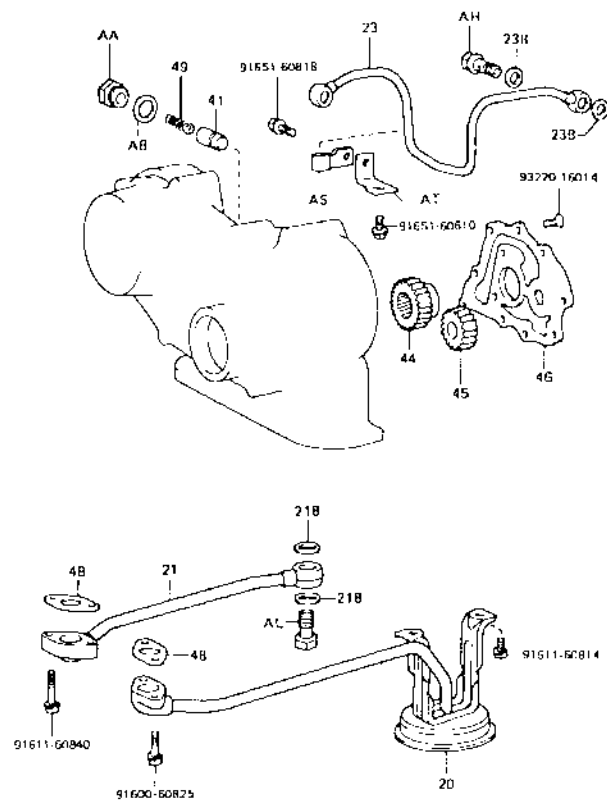 2H




PART NAME CODE	PART NAME	QTY
1501-20	STRAINER SUB-ASSY, OIL	1
1501-21	PIPE SUB-ASSY, OIL PUMP OUTLET	1
1501-21H	GASKET (FOR OIL PUMP OUTLET PIPE)	2
1501-23	PIPE SUB-ASSY, INJECTION PUMP INLET	1
1501-23H	GASKET (FOR INJECTION PUMP INLET PIPE)	2
1501-41	VALVE, OIL PUMP RELIEF	1
1501-44	GEAR, OIL PUMP DRIVE	1
1501-45	GEAR, OIL PUMP DRIVEN	1
1501-46	COVER, OIL PUMP	1
1501-48	GASKET, OIL STRAINER	2
1501-49	SPRING, OIL PUMP RELIEF VALVE	1
1501-50	PLUG, OIL PUMP RELIEF VALVE	1
1501-51	GASKET, OIL PUMP RELIEF VALVE	1
1501-52	UNION	1
1501-53	BOLT, UNION	2
1501-54	CLAMP	1
1501-55	BRACKET	1

(2H) (10) 5707

FIG. 1502
OIL FILTER

1502

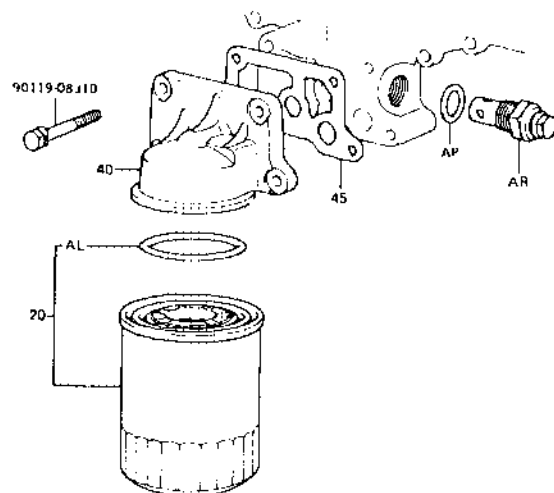 2H



1502 025


PART NAME CODE	PART NAME	QTY
1502-20	ELEMENT SUB-ASSY, OIL FILTER	1
1502-40	BRACKET, OIL FILTER	1
1502-45	GASKET, OIL FILTER	1
1502-AL	GASKET	1
1502-AP	GASKET	1
1502-AR	VALVE SUB-ASSY, OIL PRESSURE	1

(216) (11) G707

FIG. 1503
OIL COOLER

1503

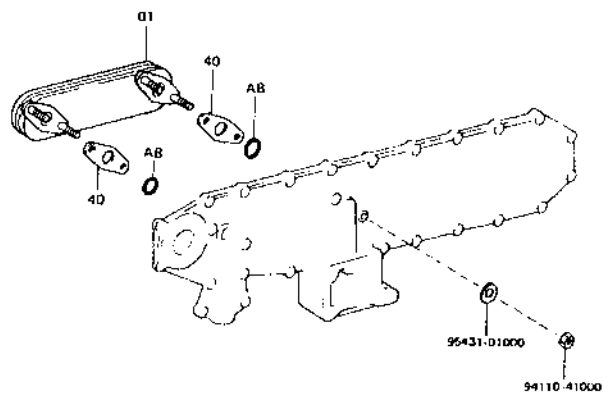 2H



1503 002

PART NAME CODE	PART NAME	QTY
1503-01	COOLER ASSY, OIL	1
1503-40	GASKET, OIL COOLER	2
1503-AB	RING, O	2




(2H) (12)

G707

FIG. 1601
WATER PUMP

1601

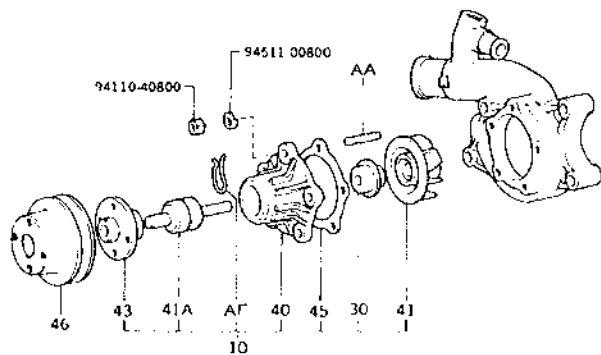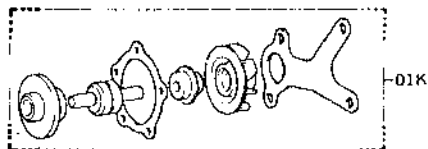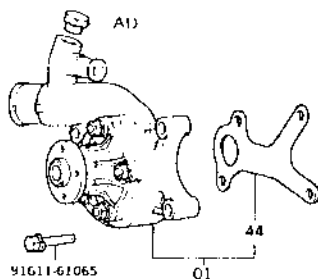   2H



1601-018

PART NAME CODE	PART NAME	QTY
1601-01	PUMP ASSY, WATER	1
1601-01K	PUMP KIT, WATER	1
1601-10	COVER ASSY, WATER PUMP	1
1601-30	SEAL SET, WATER PUMP	1
1601-40	COVER, WATER PUMP	1
1601-41	ROTOR, WATER PUMP	1
1601-41A	BEARING, WATER PUMP, NO.1	1
1601-43	SEAT, WATER PUMP PULLEY	1
1601-44	GASKET, WATER PUMP	1
1601-45	GASKET, WATER PUMP COVER	1
1601-46	PULLEY, FAN	1
1601-AA	BOLT, STUD	5
1601-A0	PLUG, W/HEAD TAPER SCREW	1
1601-AF	PIN, SNAP	1

(2H) (15) 0707

1603

PART NAME CODE	PART NAME	QTY
1603-01	RADIATOR ASSY	1
1603-01H	PLUG, DRAIN COCK	1
1603-01L	PACKING (FOR RADIATOR DRAIN COCK)	1
1603-10	TANK ASSY, RADIATOR RESERVE	1
1603-20	CAP SUB-ASSY, RADIATOR	1
1603-40	HOUSING, WATER OUTLET	1
1603-41	FAN	1
1603-41A	BELT, V	1
1603-42	GASKET, WATER OUTLET HOUSING	1
1603-43	OUTLET, WATER	1
1603-43A	THERMOSTAT	1
1603-44	GASKET, WATER OUTLET	1
1603-45	HOSE, WATER BY-PASS	1
1603-45A	CLAMP, HOSE (FOR WATER BY-PASS HOSE)	2
1603-46	HOSE, RADIATOR, INLET	1
1603-46A	CLAMP, HOSE (FOR RADIATOR INLET)	2
1603-47	HOSE, RADIATOR, OUTLET	1
1603-47A	CLAMP, HOSE (FOR RADIATOR OUTLET)	4
1603-48	SHROUD, FAN, NO.1	1
1603-52	SPACER, FAN PULLEY	1
1603-55	BAR, FAN BELT ADJUSTING	1
1603-AA	BRACKET, RESERVE TANK	1
1603-AQ	PIPE, RADIATOR, HOSE	1
1603-BE	CUSHION	4
1603-BM	BRACKET SUB-ASSY, RADIATOR, RM	1
1603-BN	BRACKET SUB-ASSY, RADIATOR, LH	1
1603-CQ	HOSE, RADIATOR TO RESERVE TANK	1


(24) (14)

6707

FIG. 1701
MANIFOLD

1701

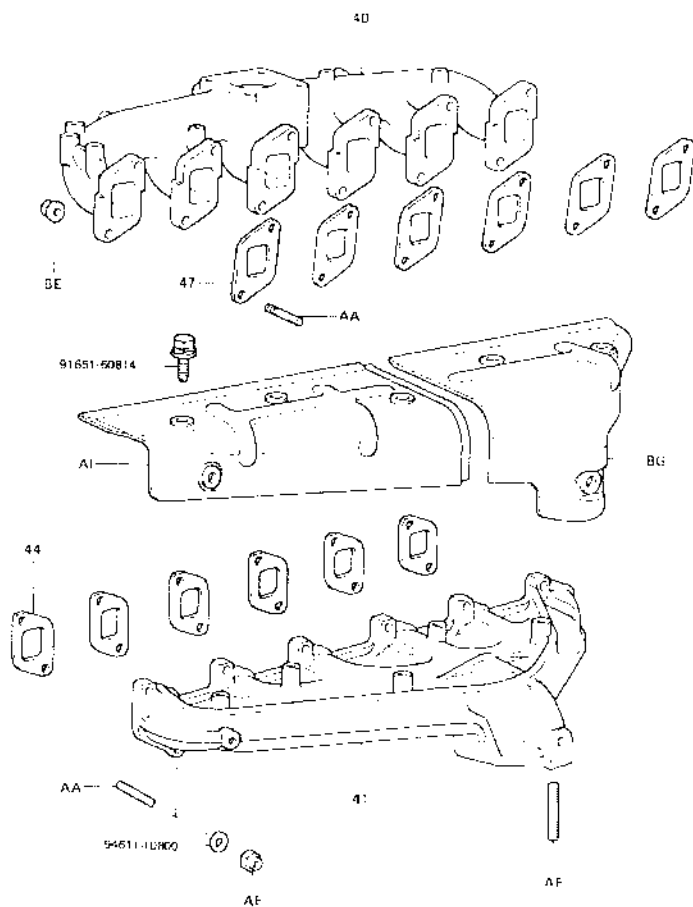 2H



1701 D12

PART NAME CODE	PART NAME	QTY
1701-40	MANIFOLD, INTAKE	1
1701-41	MANIFOLD, EXHAUST	1
1701-44	GASKET, EXHAUST MANIFOLD, NO.1	2
1701-47	GASKET, INTAKE MANIFOLD, NO.1	6
1701-AA	BOLT, STUD	12
1701-AE	NUT	12
1701-AF	BOLT, STUD	3
1701-A1	INSULATOR, HEAT	1
1701-BE	NUT	12
1701-BG	INSULATOR, HEAT, NO.2	1

(2H) (15) 5707

1702

2H



1702

[illegible]

1302.107

1702

PART NAME CODE	PART NAME	QTY
1702-01	MUFFLER ASSY -----	1
1702-20	PIPE SUB-ASSY, EXHAUST, SILENTER -----	1
1702-21	PIPE SUB-ASSY, TAIL -----	1
1702-22	PIPE SUB-ASSY, NO.1 -----	1
1702-23	PIPE SUB-ASSY, NO.2 -----	1
1702-24	PIPE SUB-ASSY, NO.3 -----	1
1702-40	GASKET, EXHAUST PIPE -----	1
1702-60	NUT, HEXAGON -----	6
1702-61	BRACKET, CLAMP -----	1
1702-62	BOLT, U -----	1
1702-63	BOLT, U -----	2
1702-64	CLAMP, PIPE -----	4
1702-65	CUSHION, EXHAUST PIPE -----	1
1702-66	BRACKET, CLAMP NO.2 -----	2
1702-67	BRACKET, NO.1 -----	1
1702-68	BRACKET, NO.2 -----	1
1702-69	CUSHION, TAIL PIPE -----	1
1702-70	BRACKET, TAIL PIPE -----	1
1702-71	BRACKET -----	1
1702-72	STAY, MUFFLER -----	2


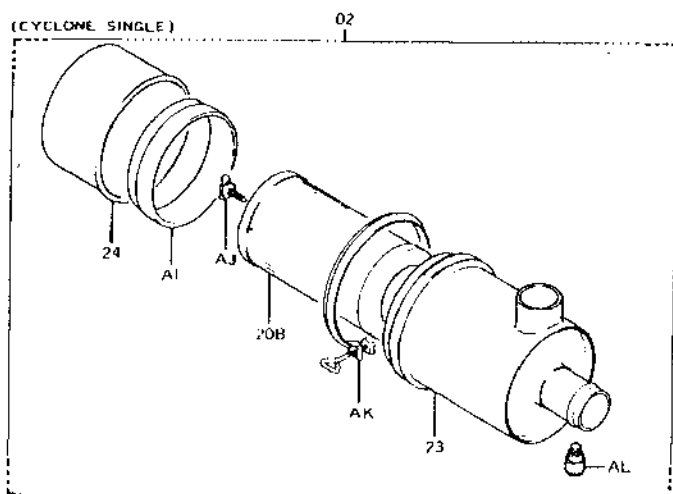 
{ 24 } (10) 0717

FIG. 1703
AIR CLEANER



1703

2H

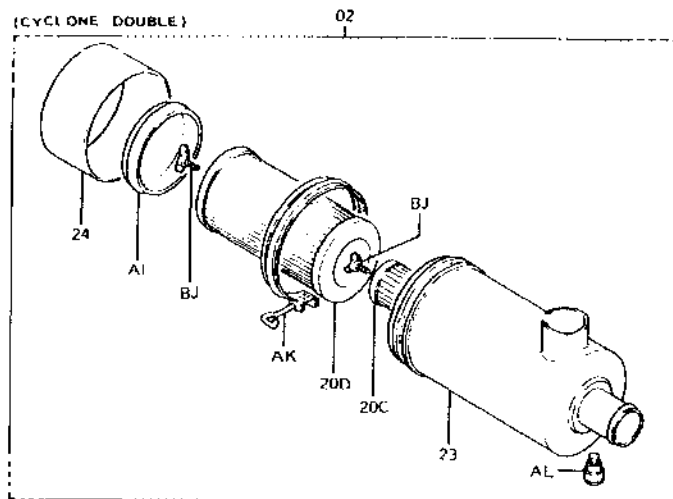 2H



1703 165

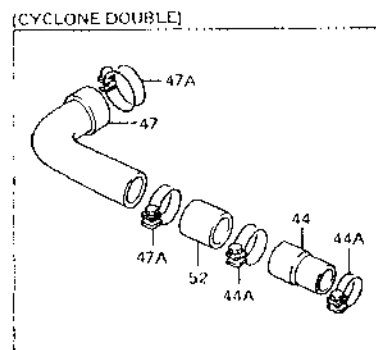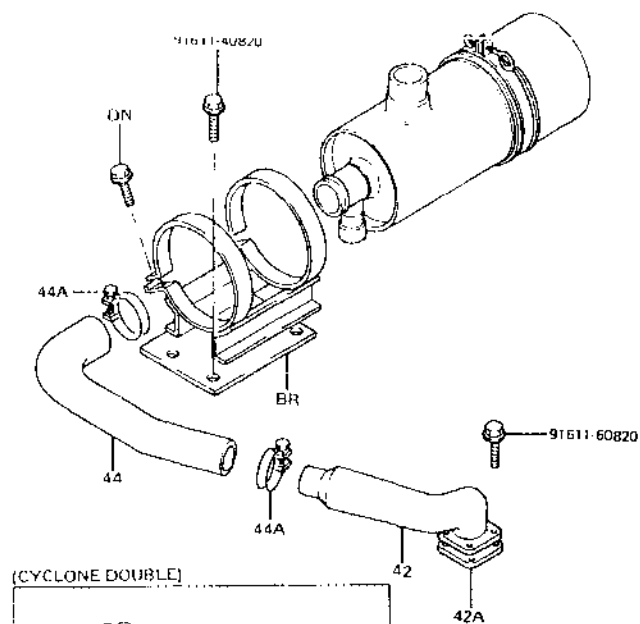  

1703 150

1703


PART NAME CODE	PART NAME	QTY
1703-02	CLEANER ASSY, CYCLONE AIR -----	1
1703-20B	ELEMENT SUB-ASSY, CYCLONE AIR CLEANER -----	1
1703-20C	ELEMENT SUB-ASSY, CYCLONE AIR CLEANER, INNER -----	1
1703-20D	ELEMENT SUB-ASSY, CYCLONE AIR CLEANER, OUTER -----	1
1703-23	CASE SUB-ASSY, AIR CLEANER -----	1
1703-24	CAP SUB-ASSY, AIR CLEANER -----	1
1703-42	CONNECTOR, AIR CLEANER -----	1
1703-42A	GASKET, AIR CLEANER CONNECTOR -----	1
1703-44	HOSE, AIR CLEANER, OUTLET NO.1 -----	1
1703-44A	CLAMP (FOR AIR CLEANER OUTLET NO.1 HOSE) -----	1
1703-47	HOSE, AIR CLEANER, OUTLET NO.2 -----	1
1703-47A	CLAMP (FOR AIR CLEANER OUTLET NO.2 HOSE) -----	1
1703-52	JOINT SUB-ASSY -----	1
1703-AI	BAFFLE, SCARF -----	1
1703-AJ	BOLT & GASKET ASSY -----	1
1703-AK	CLAMP ASSY -----	1
1703-AL	INDICATOR -----	1
1703-BG	NUT & GASKET ASSY -----	2
1703-BR	BRACKET SUB-ASSY, CLEANER -----	1
1703-DN	BOLT, w/WASHER -----	2

(24) (17) 6707

FIG. 1901
IGNITION COIL & SPARK PLUG

1901

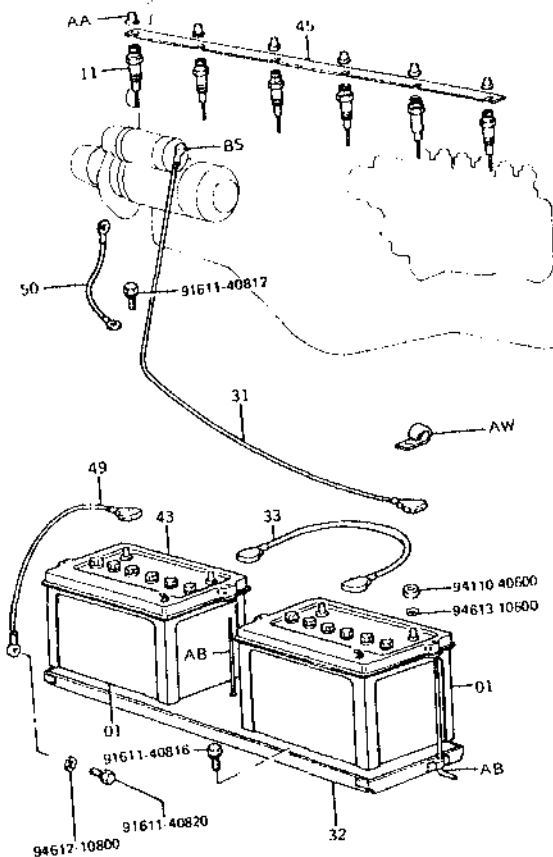 ZH



1901 004


PART NAME CODE	PART NAME	QTY
1901-01	BATTERY ASSY	2
1901-11	PLUG ASSY, GLOW	6
1901-31	CABLE SUB-ASSY, BATTERY TO STARTER	1
1901-32	CABLE SUB-ASSY, BATTERY	1
1901-33	CABLE SUB-ASSY, BATTERY TO BATTERY	1
1901-43	CAP, BATTERY, NO.1	2
1901-45	CONNECTOR, GLOW PLUG, NO.1	1
1901-49	CABLE, BATTERY EARTH	1
1901-50	STRAP, BOND	1
1901-AA	GROMMET, SCREW	6
1901-AB	BOLT	3
1901-AW	CLAMP	2
1901-B5	CAP, TERMINAL	1

(ZH) (191) G707

FIG. 1903
ALTERNATOR

1903

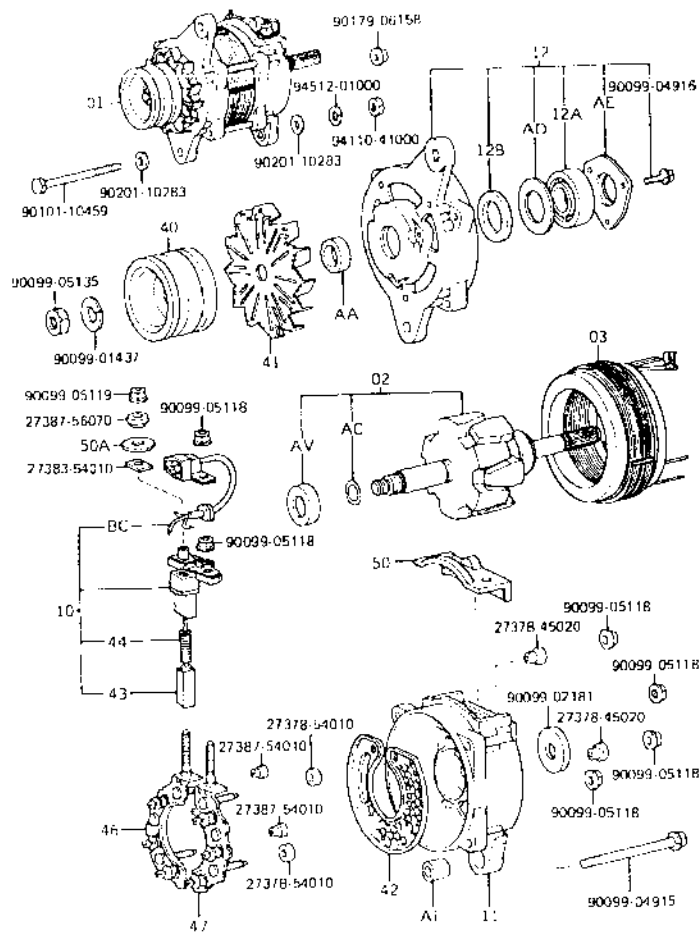 2H



1903 041

PART NAME CODE	PART NAME	QTY
1903-01	ALTERNATOR ASSY	1
1903-02	ROTOR ASSY, ALTERNATOR	1
1903-03	STATOR ASSY, ALTERNATOR	1
1903-10	HOLDER ASSY, ALTERNATOR BRUSH	1
1903-11	FRAME ASSY, RECTIFIER END	1
1903-12	FRAME ASSY, DRIVE END	1
1903-12A	BEARING (FOR ALTERNATOR DRIVE END FRAME)	1
1903-12B	FEEL (FOR ALTERNATOR DRIVE END FRAME)	1
1903-40	PULLEY, ALTERNATOR	1
1903-41	ERN, ALTERNATOR	1
1903-42	COVER, REAR END	1
1903-43	BRUSH, ALTERNATOR	2
1903-44	SPRING, BRUSH	2
1903-46	HOLDER, W/RECTIFIER POSITIVE	1
1903-47	HOLDER, W/RECTIFIER NEGATIVE	1
1903-50	COVER, BRUSH	1
1903-50A	WASHER, RUBBER	1
1903-5A	COLLAR, STEEL	1
1903-5C	RING, SNAP	1
1903-5D	COVER, FELT	1
1903-5E	PLATE, BEARING RETAINER	1
1903-5F	BUSHING	1
1903-5V	COLLAR	1
1903-5C	WIRE SUB-ASSY, LEAD	1

(2m) (19) 5707

FIG. 1904
STARTER

1904

ZH


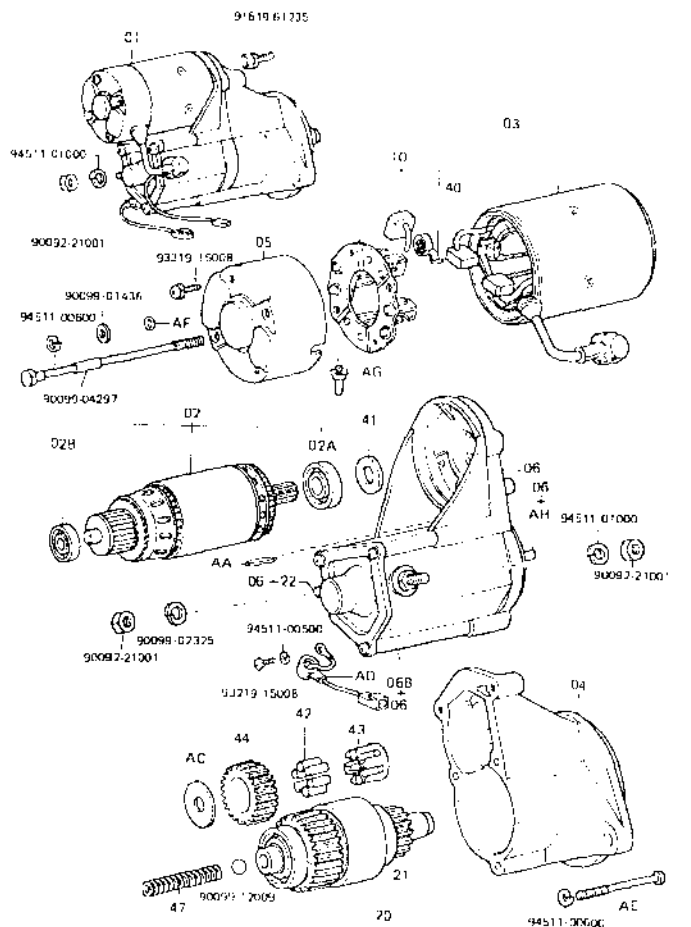 


FIG. 1905
VACUUM PUMP

1905

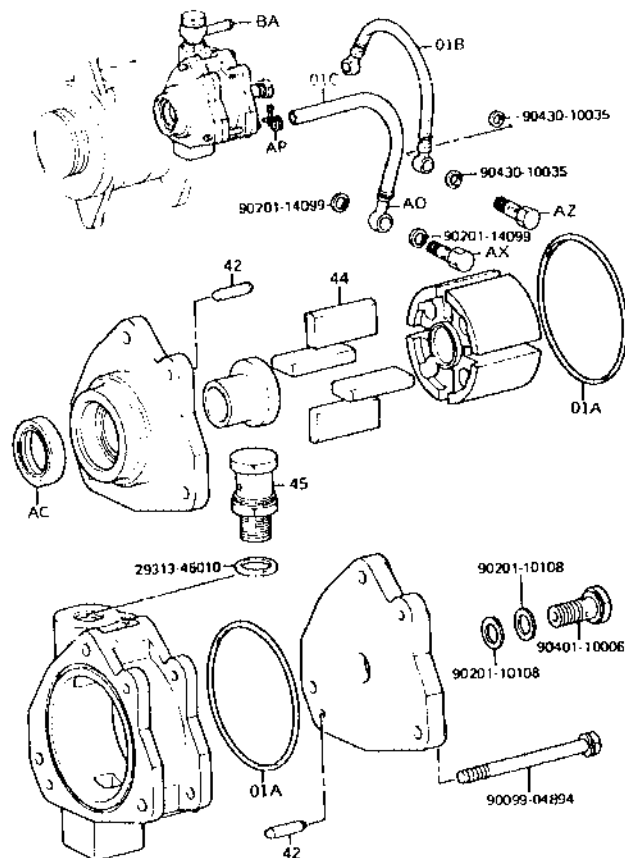 2H



1905 009


PART NAME CODE	PART NAME	QTY
1905-01	PUMP ASSY, VACUUM	1
1905-01A	PACKING, VACUUM PUMP	2
1905-01B	HOSE, VACUUM PUMP, INLET	1
1905-01C	HOSE, VACUUM PUMP, OUTLET	1
1905-42	PIN, VACUUM PUMP, DOWEL, NO.1	4
1905-44	BLADE, VACUUM PUMP	4
1905-45	SCREW, VACUUM PUMP FOLLOW	1
1905-AC	SEAL, OIL VACUUM PUMP	1
1905-A0	UNION	1
1905-AP	CLAMP, HOSE	1
1905-AX	BOLT, UNION	1
1905-A7	BOLT, UNION	1

(2H) (21) G707

FIG. 2201
INJECTION NOZZLE

2201

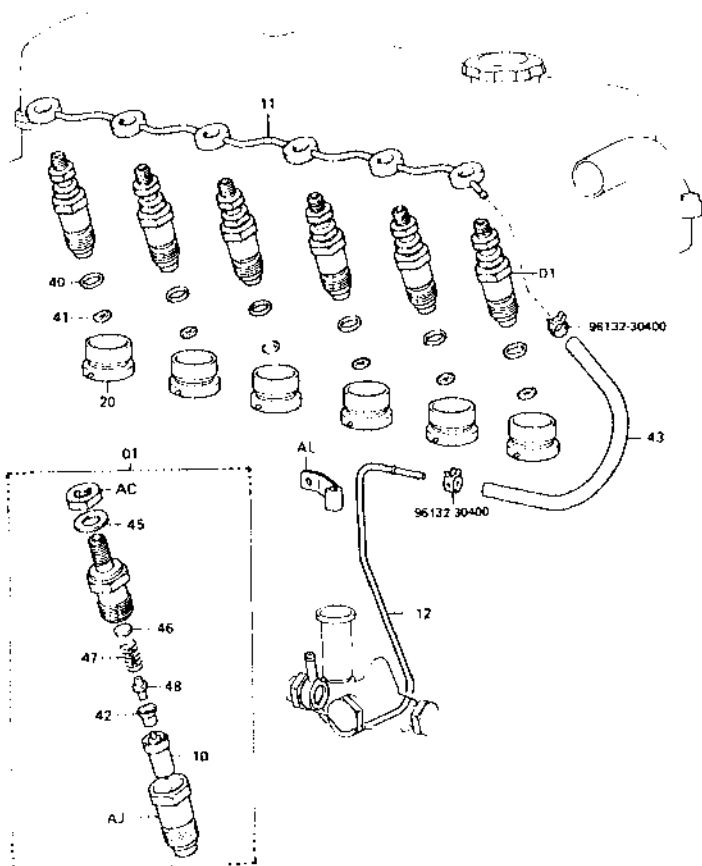 7H



2201 014

PART NAME CODE	PART NAME	QTY
2201-01	HOLDER & NOZZLE SET	6
2201-10	NOZZLE ASSY	6
2201-11	PIPE ASSY, NOZZLE LEAKAGE, NO.1	1
2201-12	PIPE ASSY, NOZZLE LEAKAGE, NO.2	1
2201-20	CHAMBER SUB-ASSY, COMBUSTION	6
2201-40	SEAT, INJECTION NOZZLE	6
2201-41	GASKET, INJECTION NOZZLE SEAT	6
2201-42	PIECE, DISTANCE (FOR NOZZLE)	6
2201-43	HOSE, FUEL	1
2201-44	WASHER (FOR NOZZLE HOLDER RING PACKING)	6
2201-45	WASHER (FOR NOZZLE HOLDER PRESSURE SPRING)	6
2201-47	SPRING, NOZZLE HOLDER PRESSURE	6
2201-48	PIN, NOZZLE HOLDER PRESSURE	6
2201-AC	NUT	6
2201-AJ	NUT, NOZZLE RETAINING	1
2201-AL	CLAMP	1

(20) 3 (22) G/07


2202

PART NAME CODE	PART NAME	QTY
2202-01	PUMP ASSY, INJECTION	1
2202-02	PIPE SUB-ASSY, INJECTION, NO.1	1
2202-03	PIPE SUB-ASSY, INJECTION, NO.2	1
2202-04	PIPE SUB-ASSY, INJECTION, NO.3	1
2202-05	PIPE SUB-ASSY, INJECTION, NO.4	1
2202-06	PIPE SUB-ASSY, INJECTION, NO.5	1
2202-07	PIPE SUB-ASSY, INJECTION, NO.6	1
2202-08	BASKET, INJECTION PUMP	1
2202-09	HOSE OR PIPE, FUEL (PUMP TO FUEL FILTER)	1
2202-10	RETAINER, INJECTION PUMP	1
2202-11	WASHER, O	1
2202-12	CLAMP, INJECTION PIPE	10
2202-13	CLAMP, INJECTION PIPE	1
2202-14	CLAMP, FUEL PIPE, NO.1	1
2202-15	CLAMP, FUEL PIPE, NO.2	1
2202-16	BOLT, STUD	5
2202-17	CLAMP	2
2202-18	STAY, INJECTION PUMP	1

FIG. 2203
INJECTION PUMP BODY

2203

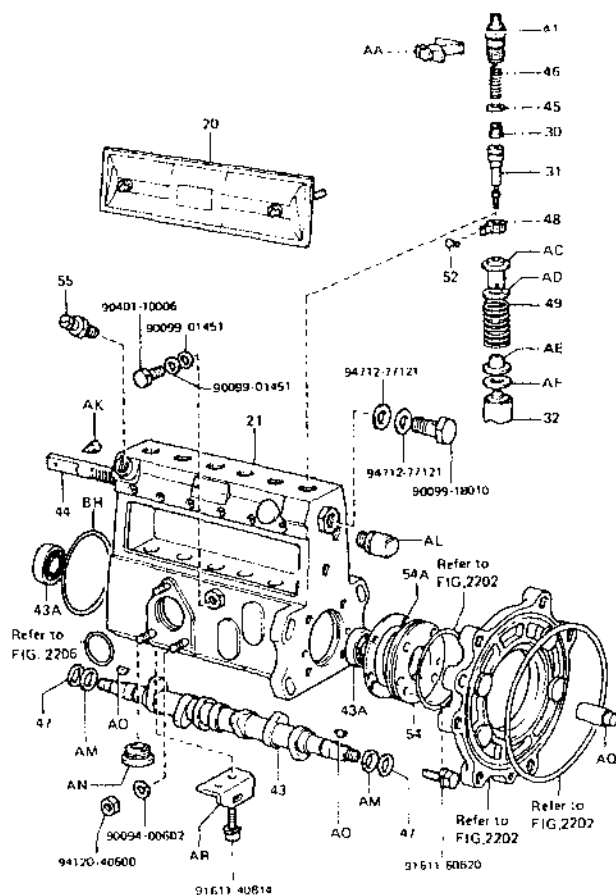 2H



2203 Q11

PART NAME CODE	PART NAME	QTY
2203-20	COVER SUB-ASSY, INJECTION PUMP	1
2203-21	HOUSING SUB-ASSY, INJECTION PUMP	1
2203-30	VALVE SUB-ASSY, DELIVERY	6
2203-31	ELEMENT SUB-ASSY, INJECTION PUMP	6
2203-32	TAPPET SUB-ASSY	6
2203-41	HOLDER, DELIVERY VALVE	6
2203-43	CAMSHAFT, INJECTION PUMP	1
2203-43A	BEARING, NO.1 (FOR INJECTION PUMP CAMSHAFT)	2
2203-44	RACK, CONTROL	1
2203-45	GASKET, DELIVERY VALVE	6
2203-46	SPRING, DELIVERY VALVE	6
2203-47	PLATE, CAMSHAFT SHIM	99
2203-48	PINION, P. UNGER CONTROL	6
2203-49	SPRING, PUMP PLUNGER	6
2203-52	SCREW, PLUNGER CONTROL PINION CLAMP	6
2203-54	COVER, INJECTION PUMP CAMSHAFT BEARING	1
2203-54A	GASKET, BEARING COVER	1
2203-55	AIR BLEEDER SUB-ASSY	1
2203-AA	PLATE SET, VALVE HOLDER LOCK	3
2203-AC	SLEEVE, PLUNGER CONTROL	6
2203-AD	SLAT, SPRING UPPER	6
2203-AE	SEAT, SPRING LOWER	6
2203-AF	PLATE, TAPPET ADJUSTING SHIM	99
2203-AK	SCREW, RACK GUIDE	1
2203-AL	COVER, CONTROL RACK	1
2203-AM	RING, CAMSHAFT ADJUST	2
2203-AN	PLUG, FELT PLATE	6
2203-AO	KEY	1
2203-AQ	NUT, TIMER ROUND	1
2203-AR	STAY, INJECTION PUMP BODY	1
2203-BH	RING, O	1

(2H) (24) G707

2205

01



2205

PART NAME CODE	PART NAME	QTY
2205-01	GOVERNOR ASSY, MECHANICAL	1
2205-20	HOUSING SUB-ASSY, GOVERNOR	1
2205-21	COVER SUB-ASSY, GOVERNOR	1
2205-22	FLYWRIGHT SUB-ASSY	1
2205-30	LEVER SUB-ASSY, SUPPORT	1
2205-34	SPRING SUB-ASSY, RETURN	1
2205-35	ARM SUB-ASSY	1
2205-40	LEVER, ADJUSTING	1
2205-44	STOPPER	1
2205-45	ARM, SPRING	1
2205-46	SHACKLE	1
2205-47	SPRING, SPEED CONTROL	1
2205-50	SHAFT, GOVERNOR	1
2205-51A	BEARING	1
2205-53	GASKET (FOR GOVERNOR HOUSING INNER)	1
2205-AK	PACKING	2
2205-AU	STOPPER	1
2205-AY	SPRING	1
2205-BA	RING, O	2
2205-BF	RING, O	1
2205-BH	SPRING, RETURN	1
2205-BI	STOPPER	1
2205-BR	NUT, CAP	1
2205-BW	SPRING	1
2205-BX	SCREW, STOPPER	1
2205-CC	BOLT	1
2205-CE	WASHER, PLATE	99
2205-CG	SPRING, START	1
2205-CK	NUT, W/HOLE	1
2205-CL	SCREW, ADAPTOR	1
2205-CM	ADAPTOR	1
2205-CN	SEAL, OIL	2
2205-CR	NUT, W/ HOLE	2
2205-CU	BUSHING, BEARING	1
2205-CV	RING, E	2
2205-CX	SEAT, SPRING	1
2205-CZ	NUT, LOCK	1
2205-DA	SPRING, IDLING	1
2205-DE	RING, E	1
2205-DI	RING, E	1
2205-DK	BUSHING, BEARING	1
2205-DQ	NUT, LOCK	2
2205-DR	NUT, ROUND	1
2205-DS	WASHER, SPRING	1
2205-DW	LEVER SUB-ASSY, FLOATING	1
2205-DX	GUIDE SUB-ASSY, OIL	1
2205-DY	WASHER, LOCK	1
2205-DZ	BOLT, CONNECTING	1
2205-EA	SHAFT, MECHANICAL GOVERNOR	1
2205-EB	WASHER, SPRING	1
2205-EC	COLLAR	1
2205-ED	WASHER, SPRING	1
2205-EE	KEY, WOODRUFF	1

(2H) () (25)

G707

PART NAME CODE	PART NAME	QTY
2205-EF	BOLT, W/WASHER	1
2205-EG	ARM SUB-ASSY	1
2205-EH	STOPPER	1
2205-EI	COLLAR	1
2205-EJ	PLUG, SCREW	1
2205-EK	WASHER	1
2205-EL	SCREW, STOP	1
2205-EM	WASHER, SPRING	1
2205-EN	WASHER, SET BOLT	2
2205-EO	SPRING	1
2205-EP	SLEEVE SUB-ASSY, FLYWEIGHT	1
2205-EQ	RING, SHAFT SNAP	1
2205-ER	SHAFT SUB-ASSY	1
2205-ES	GEAR SUB-ASSY	1
2205-ET	WASHER, PLATE	1
2205-EU	PIN, CONNECTING	1
2205-EV	WASHER, LOCK	1
2205-EW	ARM, SPRING	1
2205-EX	PIN, SHACKLE	1
2205-EY	BUSHING	1
2205-EZ	SHAFT	1


(2H) () (26)

G707

FIG. 2206
FUEL FEED PUMP

2206

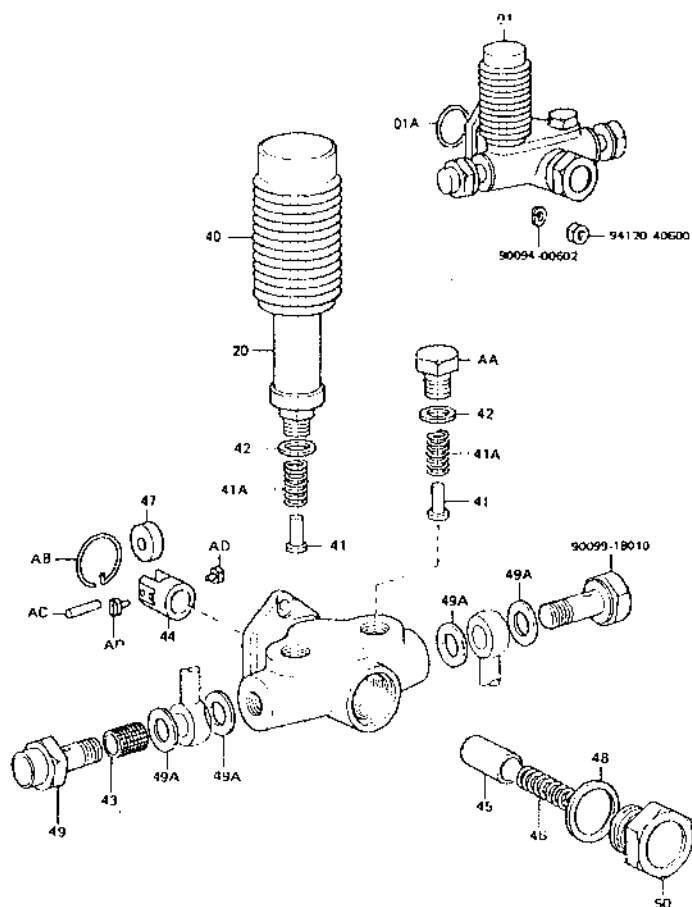 2H




PART NAME CODE	PART NAME	QTY
2206-01	PUMP ASSY, FUEL FEED	1
2206-01A	RING, O (FOR FUEL FEED PUMP)	1
2206-20	PUMP SUB-ASSY, PRIMING	1
2206-40	COVER, PRIMING PUMP	1
2206-41	VALVE, FEED PUMP CHECK	2
2206-41A	SPRING, FEED PUMP CHECK VALVE	2
2206-42	GASKET, CHECK VALVE CHAMBER PLUG	2
2206-43	FILTER, FUEL PUMP	1
2206-44	TAPPET, FEED PUMP	1
2206-45	PISTON, FEED PUMP	1
2206-46	SPRING, FEED PUMP PISTON	1
2206-47	ROLLER, FEED PUMP TAPPET	1
2206-48	GASKET, FEED PUMP PISTON PLUG	1
2206-49	SCREW, FUEL PIPE HOLLOW	1
2206-49A	WASHER, SEAL (FOR FUEL PIPE HOLLOW SCREW)	4
2206-50	PLUG, FEED PUMP PISTON CHAMBER	1
2206-AA	PLUG, FEED PUMP CHECK VALVE	1
2206-AB	RING, FEED PUMP TAPPET	1
2206-AC	PIN, FEED PUMP TAPPET ROLLER	1
2206-AD	BLOCK, FEED PUMP TAPPET SLIDING	2

(2H) (77) G707

FIG. 2207
AUTOMATIC TIMER

2207

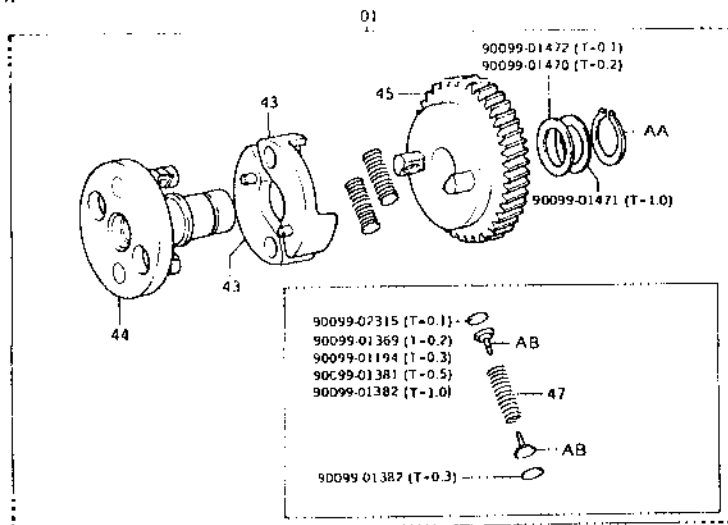 2H



2207-004

PART NAME CODE	PART NAME	QTY
2207-01	TIMER ASSY, AUTOMATIC	1
2207-43	WEIGHT, TIMER	2
2207-44	HUB, TIMER	1
2207-45	GEAR, DRIVE	1
2207-47	SPRING, TIMER SUB	2
2207-AA	RING, CLAMP	1
2207-AB	SEAL, SPRING	4

(2H) (28) 0707

FIG. 2302
FUEL FILTER

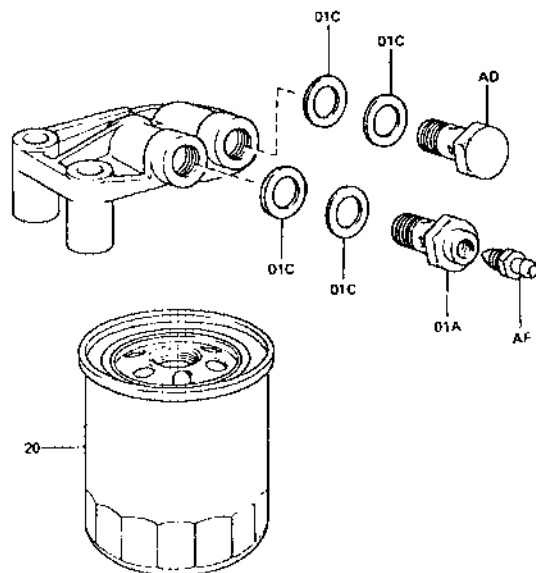 
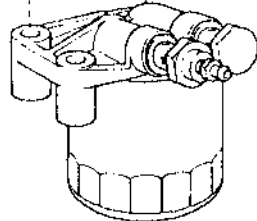 
2302

2H

91611-61050



D1



2302-016

PART NAME CODE	PART NAME	QTY
2302-01	FILTER ASSY, FUEL (ELEMENT SERVICE TYPE) ---	1
2302-01A	UNION, NIPPLE (FOR FUEL FILTER INLET) -----	1
2302-01C	GASKET, NIPPLE UNION (FOR FUEL FILTER) -----	4
2302-20	ELEMENT SUB-ASSY, FUEL FILTER -----	1
2302-40	GASKET, FILTER BOWL -----	1
2302-AD	UNION -----	1
2302-AF	PLUG, BLEEDER -----	1
2302-AP	CAP, BLEEDER -----	1

(2H)


(29)

C707

FIG. 2303
FUEL TANK & FUEL PIPE

2303

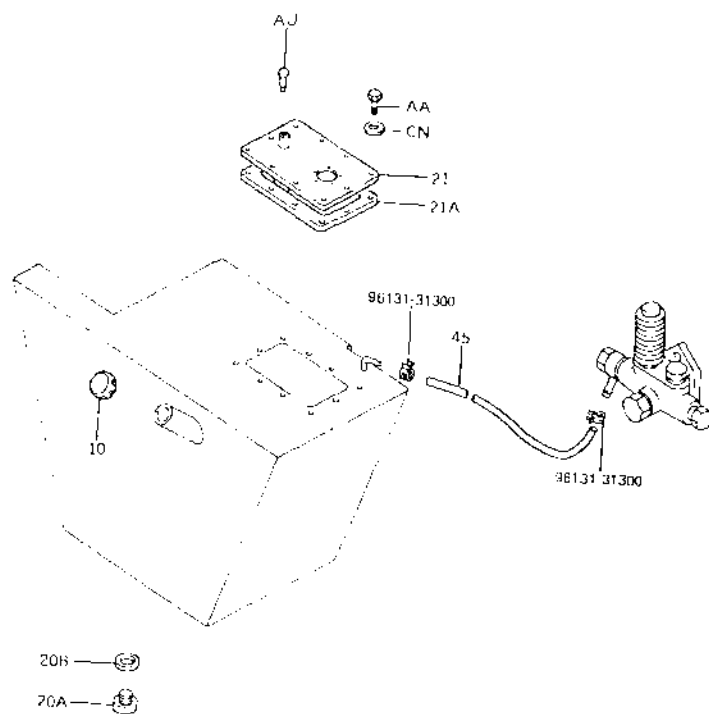 2H




PART NAME CODE	PART NAME	QTY
2303-10	CAP ASSY, FUEL TANK	1
2303-20A	PLUG, DRAIN (FOR FUEL TANK)	1
2303-20B	GASKET, DRAIN PLUG (FOR FUEL TANK)	1
2303-21	COVER SUB-ASSY, FUEL TANK	1
2303-21A	PACKING, FUEL TANK COVER	1
2303-45	HOSE, FUEL, NO. 1	1
2303-4A	BOLT	10
2303-40	PLUG ASSY, BREATHER	1
2303-41	WASHER, SEAL	10

(2H) (1) (10) 5707

FIG. 2601
ACCELERATOR LINK

2601

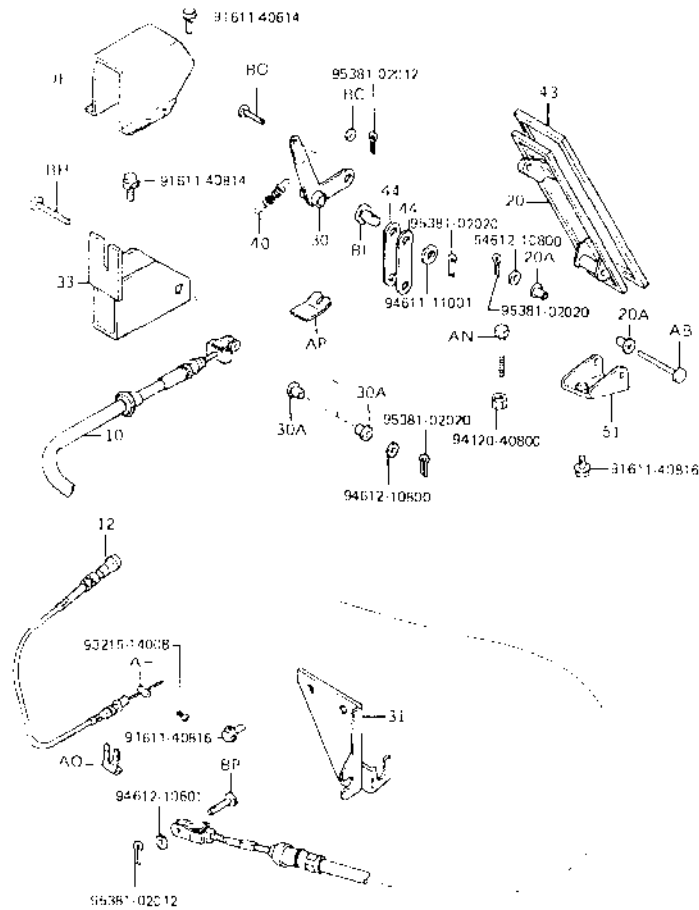 ZH



PART NAME CODE	PART NAME	QTY
2601-10	WIRE ASSY, ACCELERATOR FLEXIBLE	1
2601-11	BUTTON ASSY, ENGINE STOP	1
2601-12	PEDAL SUB-ASSY, ACCELERATOR	1
2601-20A	BUSH (FOR ACCELERATOR PEDAL)	2
2601-23	ARM SUB-ASSY, ACCELERATOR LINK, NO.1	1
2601-30A	BUSH (FOR ACCELERATOR LINK ARM)	2
2601-31	BRACKET SUB-ASSY, ACCELERATOR WIRE, NO.1	1
2601-33	BRACKET SUB-ASSY, ACCELERATOR ARM, NO.1	1
2601-40	SPRING, TENSION	1
2601-43	PED, PEDAL	1
2601-44	LINK, ACCELERATOR, NO.1	2
2601-51	BRACKET, PEDAL	1
2601-A6	PIN, W/HOLE	1
2601-A7	STOPPER	1
2601-A8	BOLT	1
2601-A9	CLIP	1
2601-AP	CLIP	2
2601-BC	WASHER, PLATE	1
2601-BH	PIN, W/HOLE	1
2601-B1	PIN, W/HOLE	2
2601-B2	PIN, W/HOLE	1
2601-BP	PIN, W/HOLE	1
2601-CH	COVER, ACCELERATOR LINK	1


(ZH) () () ()

FIG-3201
TORQUE CONVERTER HOUSING

3201

2D--ATH (1/21)

01K	(INCL)	• 1
03K	(INCL)	(K)

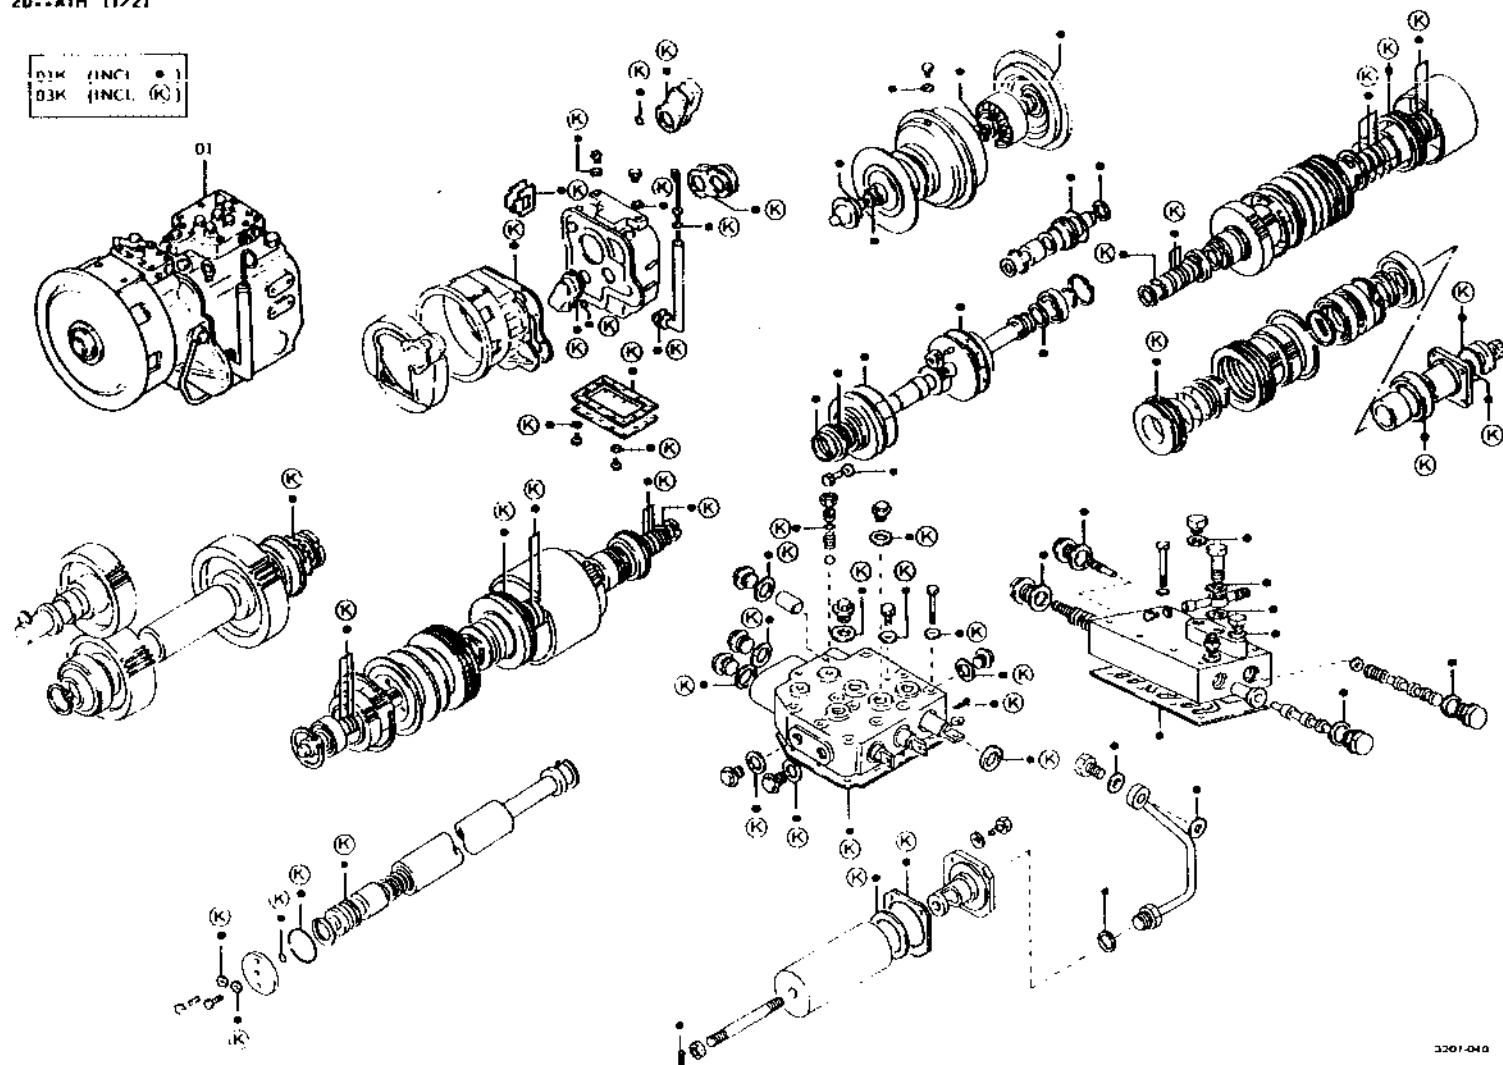 


3201-040

FIG. 3201
TORQUE CONVERTER HOUSING

2D..ATM [2/2]

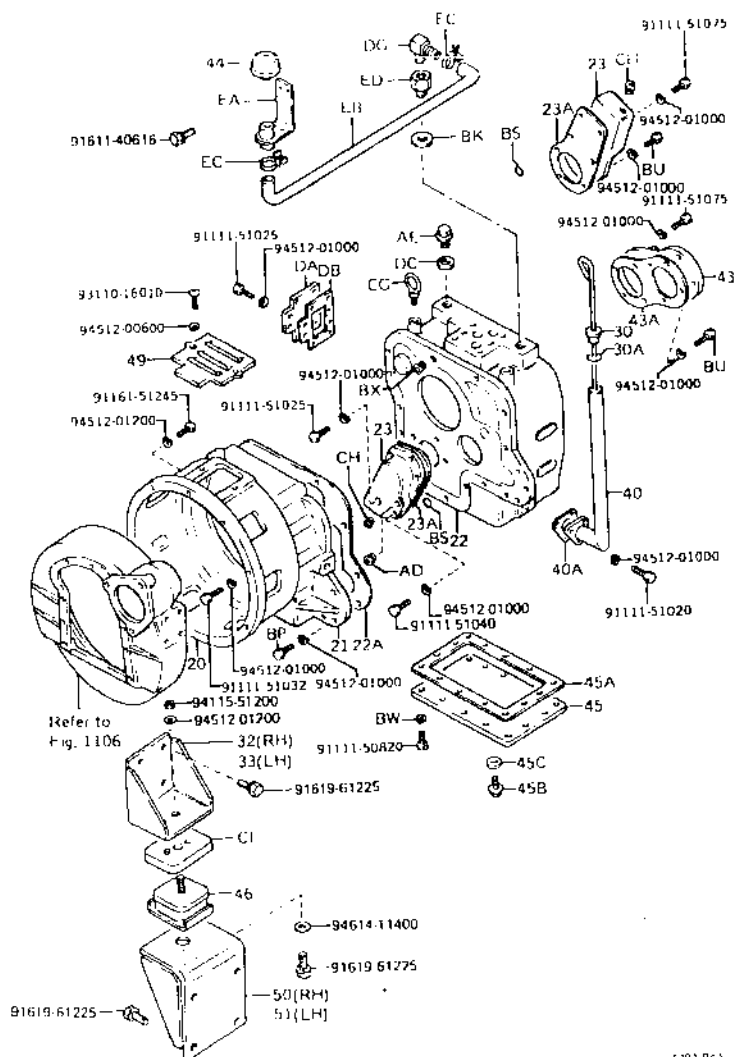 3201




PART NAME CODE	PART NAME	QTY
3201-01	TRANSMISSION ASSY, AUTOMATIC, L/2 DIFFERENTIAL	1
3201-01K	TRANSMISSION O/R KIT, AUTOMATIC	1
3201-03K	TRANSMISSION O/R KIT (FOR TORQUE CONVERTER)	1
3201-20	CASE SUB-ASSY, TORQUE CONVERTER, NO.1	1
3201-21	CASE SUB-ASSY, TORQUE CONVERTER, NO.2	1
3201-22	CASE SUB-ASSY, TRANSMISSION	1
3201-22A	PACKING, TRANSMISSION CASE	1
3201-23	CASE SUB-ASSY, SERVO, NO.1	1
3201-23A	PACKING, SERVO CASE	1
3201-24	CASE SUB-ASSY, SERVO, NO.2	1
3201-24A	PACKING	1
3201-30	GAGE SUB-ASSY, OIL LEVEL	1
3201-30A	RING, O	1
3201-32	BRACKET SUB-ASSY, RH	1
3201-33	BRACKET SUB-ASSY, LH	1
3201-40	GUIDE, OIL LEVEL GAGE	1
3201-40A	PACKING	1
3201-43	COVER, FR	1
3201-43A	PACKING, COVER	1
3201-44	BREATHER, AIR	1
3201-45	PAN, OIL	1
3201-45A	PACKING, OIL PAN	1
3201-45B	PLUG, DRAIN	1
3201-45C	GASKET (FOR DRAIN PLUG)	1
3201-46	INSULATOR, TORQUE CONVERTER MOUNTING	2
3201-49	COVER, TORQUE CONVERTER CASE	1
3201-50	BRACKET, FRAME SIDE, RH	1
3201-51	BRACKET, FRAME SIDE, LH	1
3201-AD	PLUG	1
3201-AE	PLUG, W/HEAD STRAIGHT SCREW	1
3201-AI	PIN, STRAIGHT	1
3201-AJ	BOLT, STUD	1
3201-AM	BO. T, STUD	5
3201-AQ	RING, O	1
3201-BK	PACKING	1
3201-BP	BOLT	12-1
3201-BK	RING, O	3
3201-BS	RING, O	4
3201-BU	BOLT	14
3201-BV	BOLT	8
3201-BW	WASHER, SEAL	16-2
3201-BX	ORIFICE	1
3201-CL	ELBOW	1
3201-CG	BO. T, EYE	1
3201-CH	PLUG	6
3201-CI	STAKE, L/2	2
3201-CL	RETAINER, BEARING	1
3201-CM	PACKING, RETAINER	1
3201-DA	COVER, SIDE	1
3201-DB	PACKING, SIDE COVER	1
3201-DC	PACKING	2
3201-DE	RETAINER, SEAL	1
3201-DF	PACKING, RETAINER	1

DATE	DESCRIPTION	AMOUNT
1967	...	...
1968	...	...
1969	...	...
1970	...	...
1971	...	...
1972	...	...
1973	...	...
1974	...	...
1975	...	...
1976	...	...
1977	...	...
1978	...	...
1979	...	...
1980	...	...
1981	...	...
1982	...	...
1983	...	...
1984	...	...
1985	...	...
1986	...	...
1987	...	...
1988	...	...
1989	...	...
1990	...	...
1991	...	...
1992	...	...
1993	...	...
1994	...	...
1995	...	...
1996	...	...
1997	...	...
1998	...	...
1999	...	...
2000	...	...
2001	...	...
2002	...	...
2003	...	...
2004	...	...
2005	...	...
2006	...	...
2007	...	...
2008	...	...
2009	...	...
2010	...	...
2011	...	...
2012	...	...
2013	...	...
2014	...	...
2015	...	...
2016	...	...
2017	...	...
2018	...	...
2019	...	...
2020	...	...
2021	...	...
2022	...	...
2023	...	...
2024	...	...
2025	...	...
2026	...	...
2027	...	...
2028	...	...
2029	...	...
2030	...	...
2031	...	...
2032	...	...
2033	...	...
2034	...	...
2035	...	...
2036	...	...
2037	...	...
2038	...	...
2039	...	...
2040	...	...
2041	...	...
2042	...	...
2043	...	...
2044	...	...
2045	...	...
2046	...	...
2047	...	...
2048	...	...
2049	...	...
2050	...	...
2051	...	...
2052	...	...
2053	...	...
2054	...	...
2055	...	...
2056	...	...
2057	...	...
2058	...	...
2059	...	...
2060	...	...
2061	...	...
2062	...	...
2063	...	...
2064	...	...
2065	...	...
2066	...	...
2067	...	...
2068	...	...
2069	...	...
2070	...	...
2071	...	...
2072	...	...
2073	...	...
2074	...	...
2075	...	...
2076	...	...
2077	...	...
2078	...	...
2079	...	...
2080	...	...
2081	...	...
2082	...	...
2083	...	...
2084	...	...
2085	...	...
2086	...	...
2087	...	...
2088	...	...
2089	...	...
2090	...	...
2091	...	...
2092	...	...
2093	...	...
2094	...	...
2095	...	...
2096	...	...
2097	...	...
2098	...	...
2099	...	...
2100	...	...

FIG. 3201
TORQUE CONVERTER HOUSING

3201

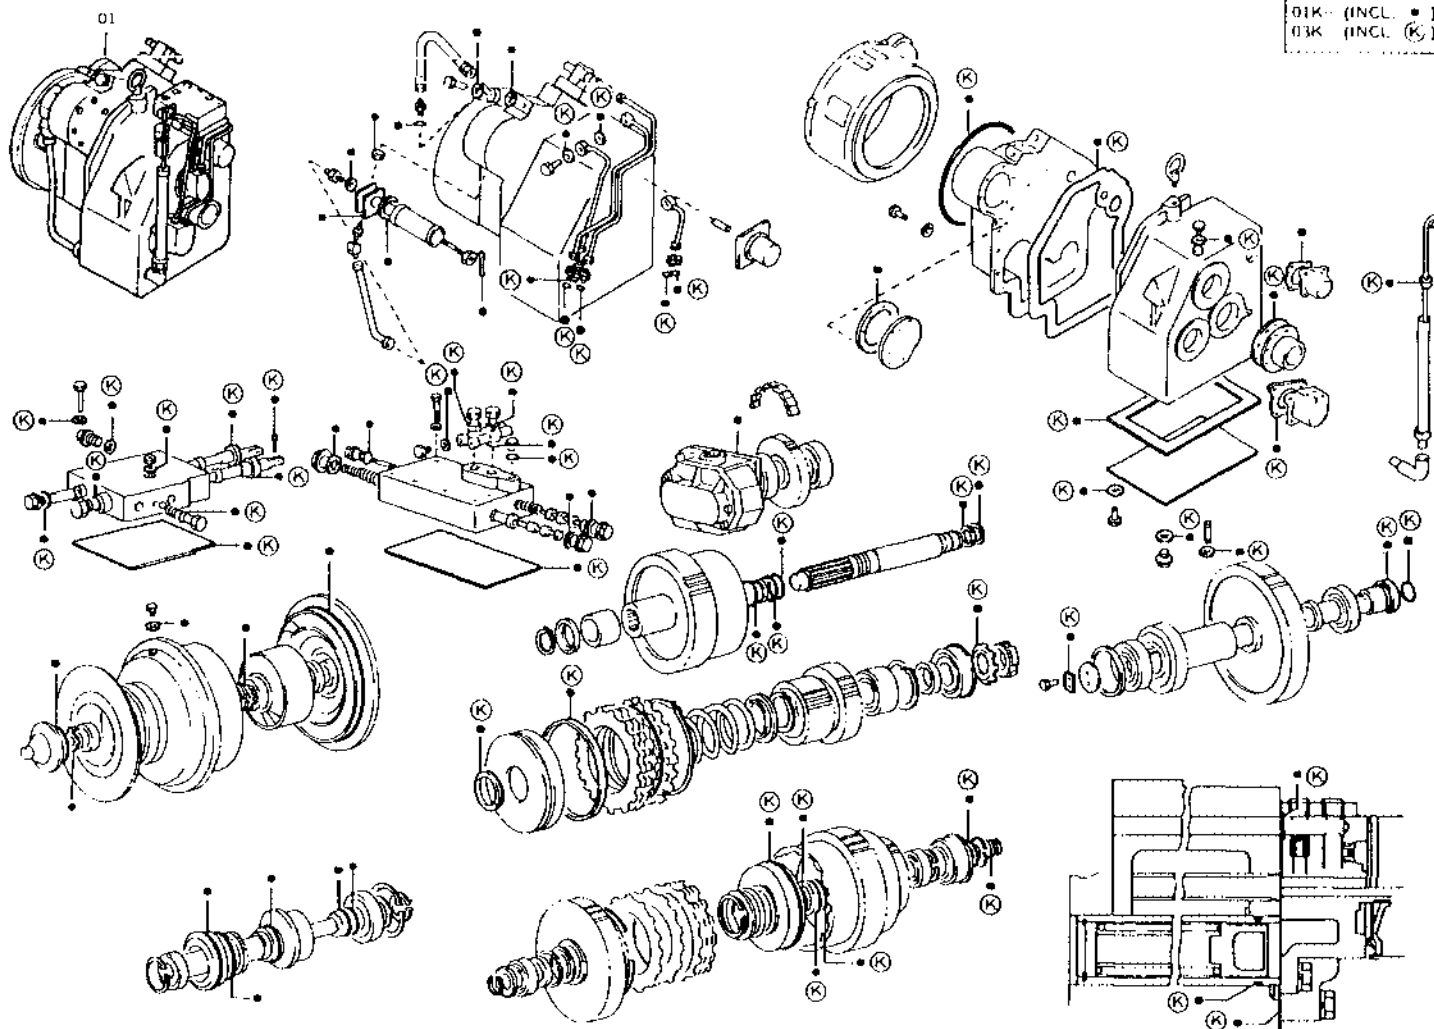 2F.2H..ATM (1/2)



3201 042

3201

PART NAME CODE	PART NAME	QTY
3201-DG	ELBOW -----	1
3201-EA	BRACKET SUB-ASSY, AIR BREATHER -----	1
3201-EB	HOSE (FOR AIR BREATHER) -----	1
3201-EC	CLAMP -----	2
3201-ED	FITTING -----	1


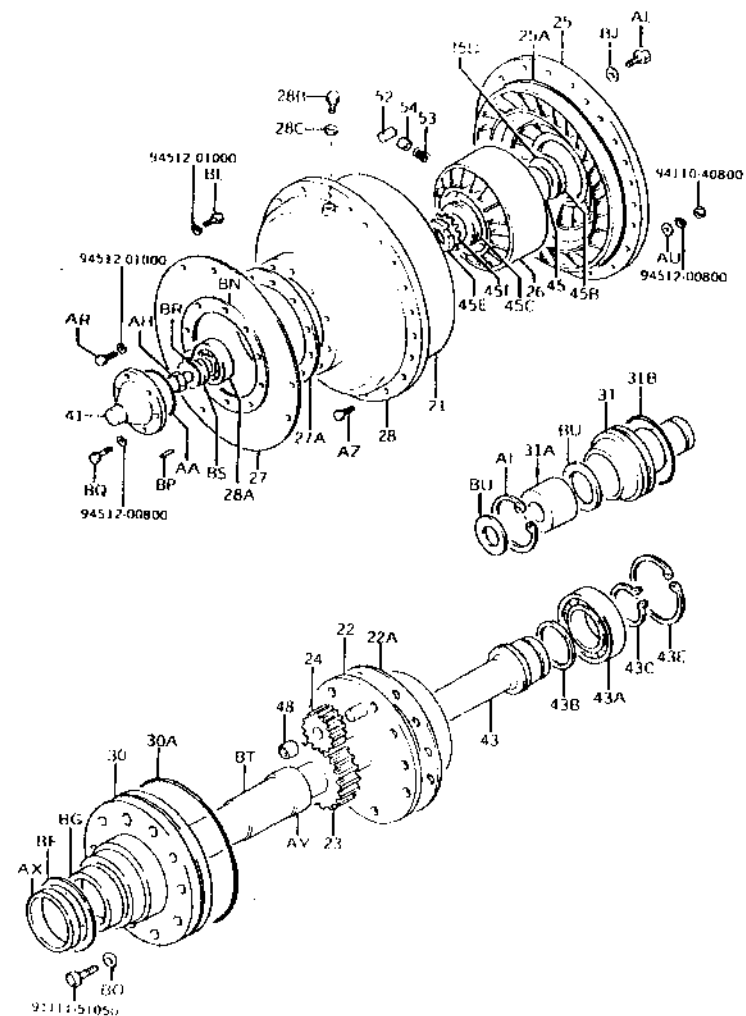 
(AIM) () C/07

FIG. 3202
TORQUE CONVERTER

3202

2D-ATH 11/21

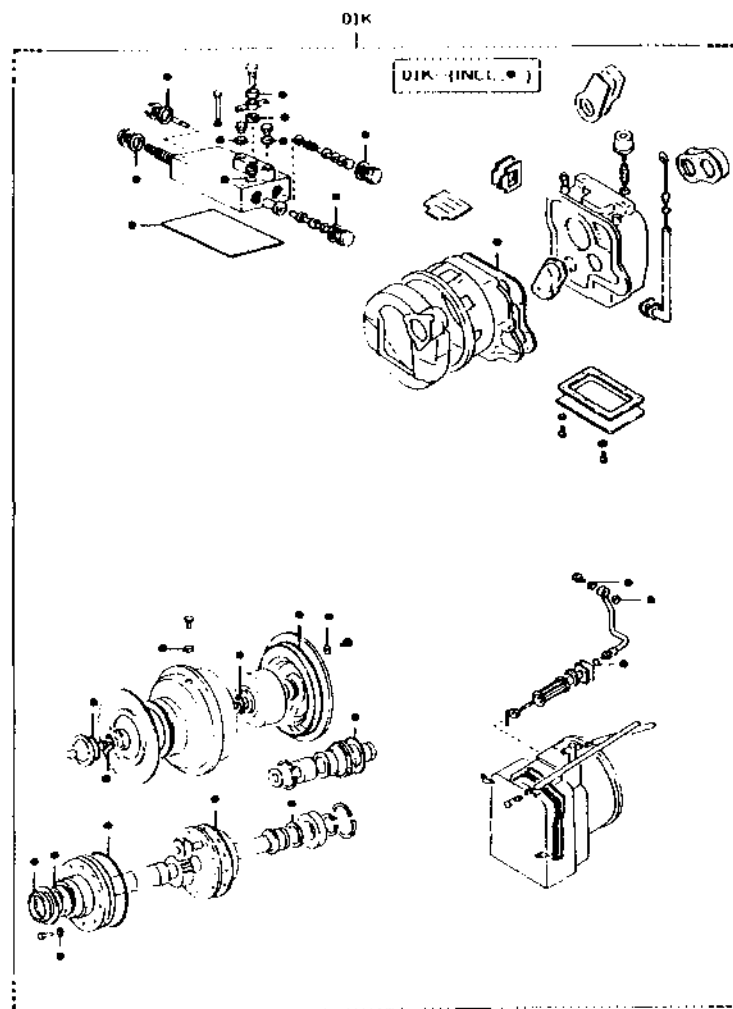 2D-ATH 12/21



ZF,ZH,-ATM (1/2)

2F, 2H, & ATM 12/71



3202

PART NAME CODE	PART NAME	QTY
3202-01X	TORQUE CONVERTER B/H KIT	1
3202-71	RUNNER SUB-ASSY, TURBINE	1
3202-72	SHAFT SUB-ASSY, STATOR	1
3202-22A	PACKING (FOR STATOR SHAFT)	1
3202-22B	RING, PISTON	1
3202-23	GEAR SUB-ASSY, OIL PUMP DRIVE	1
3202-24	GEAR SUB-ASSY, OIL PUMP DRIVEN	1
3202-25	IMPELLER SUB-ASSY, PUMP	1
3202-25A	RING, O (FOR PUMP IMPELLER)	1
3202-26	STATOR SUB-ASSY	1
3202-27	PLATE SUB-ASSY, FLEXIBLE	1
3202-27A	SHIM (FOR FLEXIBLE PLATE)	99
3202-28	COVER SUB-ASSY, DRIVE (DISC SUB-ASSY)	1
3202-28A	BEARING (FOR DRIVE COVER)	1
3202-28B	PLUG, DRAIN (FOR DRIVE COVER)	2
3202-28C	GASKET, DRAIN PLUG (FOR DRIVE COVER)	2
3202-30	CASE SUB-ASSY, OIL PUMP	1
3202-30A	RING, O (FOR OIL PUMP CASE)	1
3202-31	EXTENSION SUB-ASSY, PUMP IMPELLER (BOSS)	1
3202-31A	BEARING, PUMP IMPELLER EXTENSION	1
3202-31B	RING, O (FOR PUMP IMPELLER EXTENSION)	1
3202-41	PIECE, CENTER (BOSS, PILOT)	1
3202-43	SHAFT, TURBINE (SHAFT, INPUT)	1
3202-43A	BEARING, TURBINE SHAFT	1
3202-43B	RING, SEAL (FOR TURBINE SHAFT)	1-2
3202-43C	RING, SHAFT SNAP (FOR TURBINE SHAFT BEARING)	1
3202-43D	SPACER (FOR TURBINE SHAFT BEARING)	1
3202-43E	RING, HOLE SNAP (FOR TURBINE SHAFT BEARING)	1
3202-45	HUB (FACE, INNER)	1
3202-45B	WASHER, THRUST, NO.1 (FOR HUB)	2
3202-45C	WASHER, THRUST, NO.2 (FOR HUB)	1
3202-45D	WASHER, THRUST, NO.3 (FOR HUB)	1
3202-45E	NUT (FOR HUB)	1
3202-45F	WASHER, LOCK (FOR HUB)	1
3202-45G	COLLAR (FOR HUB)	1
3202-45H	RING, SNAP	1
3202-48	BEARING, NEEDLE (FOR OIL PUMP)	1
3202-52	ROLLER (FOR STATOR)	8-10
3202-53	SPRING (FOR STATOR)	10-16
3202-54	CAP, SPRING (FOR STATOR)	10-16
3202-AA	RING, O	1
3202-AD	NUT	24
3202-AH	BOLT	1
3202-A1	RING, HOLE SNAP	1
3202-AL	BOLT	6-8
3202-AK	BOLT	12
3202-AU	WASHER, PLATE	24
3202-AX	SEAL, OIL	1
3202-AY	SPACER	1
3202-AZ	BOLT	2
3202-HF	RING, SNAP	2
3202-BG	SEAL, OIL	1
3202-BJ	WASHER, PLATE	8-10

(ATM) () () 6707

PART NAME CODE	PART NAME	QTY
3202-BL	BOLT	9
3202-BIN	PLATE	1-2
3202-BO	WASHER, SEAL	10
3202-BP	PIN	1
3202-BQ	BOLT	6
3202-BR	WASHER, LOCK	1
3202-BS	RETAINER, BEARING	1
3202-BT	COLLAR	1
3202-BU	COLLAR	2


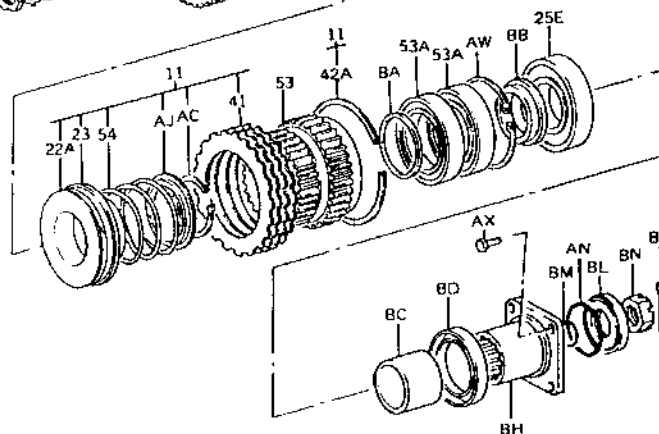 
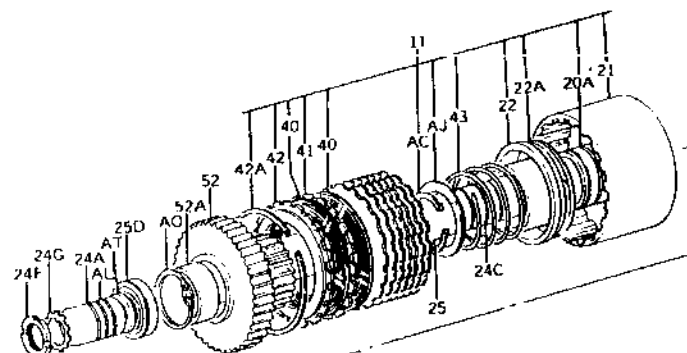 
(ATM) () () 6707

FIG. 3203

70..ATM [NO.1] [INPUT SIDE] [1/2]

3203

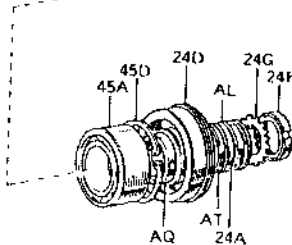 20. • ATM (NO. 2) (2/2)



1201-020


0101020

FIG. 3203
TORQUE CONVERTER CLUTCH



3203

2F.2H..ATH (NO.1) (INPUT SIDE) (1/2)

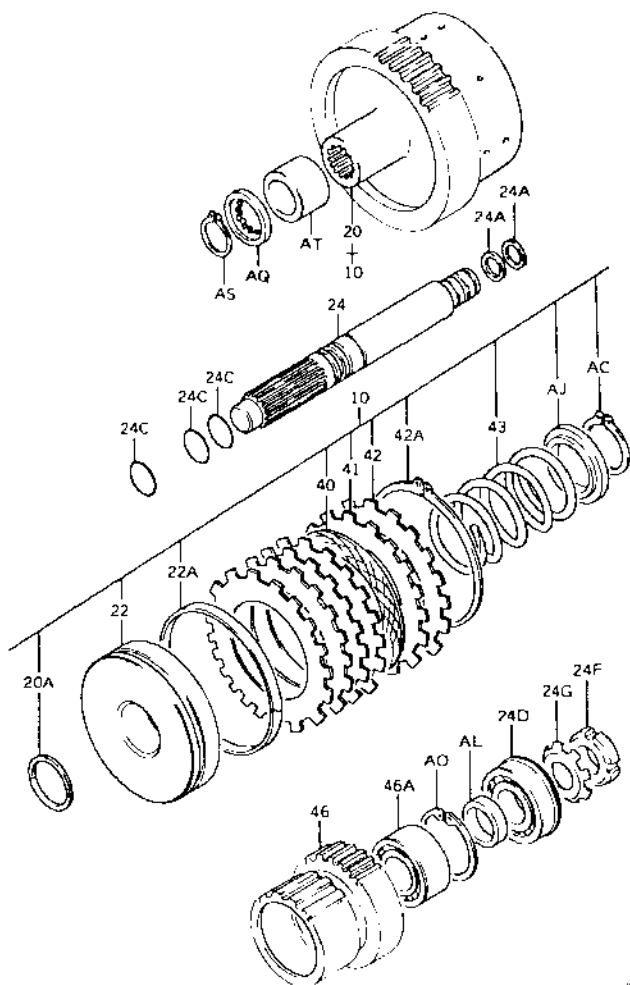 2F.2H..ATH (NO.2) (2/2)



3203 022

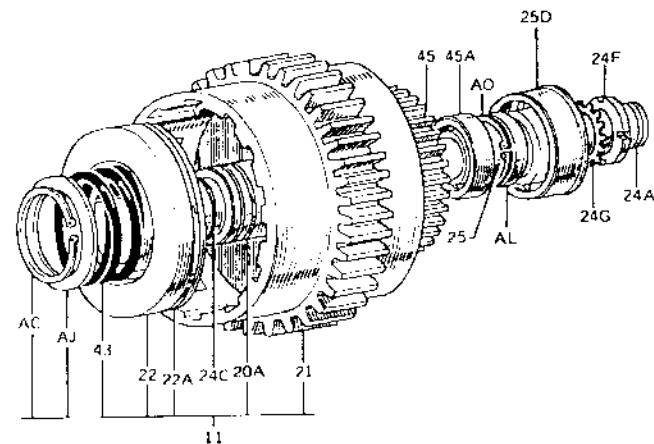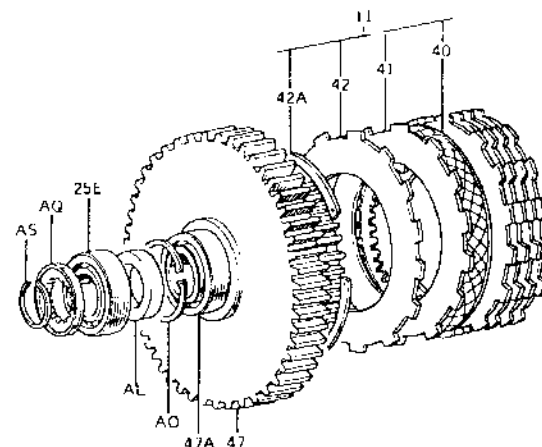  

3203 021

3203



PART NAME CODE	PART NAME	QTY
3203-10	DRUM ASSY, CLUTCH, NO.1	1
3203-11	DRUM ASSY, CLUTCH, NO.2	1
3203-20	DRUM SUB-ASSY, CLUTCH, NO.1	1
3203-20A	RING, SEAL (FOR CLUTCH DRUM)	1- 2
3203-21	DRUM SUB-ASSY, CLUTCH, NO.2	1
3203-22	PISTON SUB-ASSY, CLUTCH, NO.1	1- 2
3203-22A	RING, PISTON (FOR CLUTCH PISTON)	1- 2
3203-23	PISTON SUB-ASSY, CLUTCH, NO.2	1
3203-24	SHAFT SUB-ASSY, CLUTCH, NO.1	1
3203-24A	RING, SEAL (FOR CLUTCH SHAFT)	2- 4
3203-24C	RING, O (FOR CLUTCH SHAFT)	3
3203-24D	BEARING, NO.1 (FOR NO.1 CLUTCH SHAFT)	1
3203-24F	NUT, RING (FOR CLUTCH SHAFT)	1
3203-24G	WASHER, LOCK (FOR CLUTCH SHAFT)	1
3203-25	SHAFT SUB-ASSY, CLUTCH, NO.2	1
3203-25G	BEARING, NO.1 (FOR NO.2 CLUTCH SHAFT)	1
3203-25E	BEARING, NO.2 (FOR NO.2 CLUTCH SHAFT)	1
3203-40	CLUTCH	4-12
3203-41	PLATE, CLUTCH	3-12
3203-42	PLATE, CLUTCH PRESSURE	1- 2
3203-42A	RING, HOLE SNAP (FOR CLUTCH PRESSURE PLATE)	1- 2
3203-43	SPRING, CLUTCH RETURN	1- 2
3203-45	GEAR, CLUTCH (FORWARD)	1
3203-45A	BEARING (FOR FORWARD CLUTCH GEAR)	1
3203-45D	RING, SNAP	1
3203-46	GEAR, CLUTCH (REVERSE)	1
3203-46A	BEARING (FOR REVERSE CLUTCH GEAR)	1
3203-47	GEAR, CLUTCH (FORWARD 2ND)	1
3203-47A	BEARING (FOR FORWARD 2ND CLUTCH GEAR)	1
3203-52	GEAR, CLUTCH (1ST)	1
3203-52A	BEARING (FOR 1ST CLUTCH GEAR)	1
3203-53	GEAR, CLUTCH (2ND)	1
3203-53A	BEARING (FOR 2ND CLUTCH GEAR)	2
3203-54	SPRING, CLUTCH RETURN, NO.2	1
3203-AC	RING, SHAFT SNAP	1- 2
3203-AD	RETAINER, SPRING	1- 2
3203-AI	COLLAR, MAIN SHAFT	1- 2
3203-AN	RING, O	1
3203-AD	RING, HOLE SNAP	1- 2
3203-AQ	SPACER	1
3203-AS	RING, SNAP	1
3203-AT	SPACER	1
3203-AW	RING, HOLE SNAP	1
3203-AX	BOLT	4
3203-BA	COLLAR	1
3203-BB	COLLAR	1
3203-BC	COLLAR	1
3203-BD	SEAL, OIL	1
3203-BH	COUPLING	1
3203-BI	SPACER, SEAL	1
3203-BM	RING, O	1
3203-BN	NUT, CASTLE	1
3203-BD	PIN	1

(ATM) () ()

3203

3204

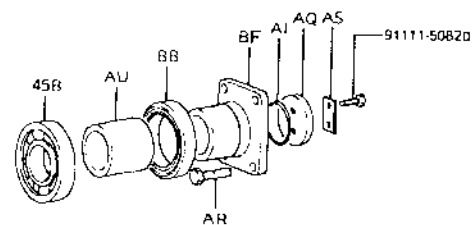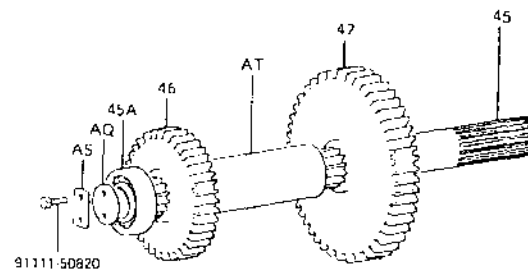  2F, 2H. . ATM



3204-016

1204 010

3204

PART NAME CODE	PART NAME	QTY
3204-40	SHAFT, COUNTER -----	1
3204-40A	BEARING, NO.1 (FOR COUNTER SHAFT) -----	2
3204-40B	BEARING, NO.2 (FOR COUNTER SHAFT) -----	1
3204-41	GEAR, COUNTER, NO.1 -----	1
3204-42	GEAR, COUNTER, NO.2 -----	1
3204-43	SHAFT, IDLE -----	1
3204-43A	PLATE (FOR IDLE SHAFT) -----	1
3204-44	GEAR, IDLE, NO.1 -----	1
3204-44A	BEARING (FOR IDLE GEAR) -----	2
3204-45	SHAFT, OUTPUT, NO.1 -----	1
3204-45A	BEARING, NO.1 (FOR OUTPUT SHAFT) -----	1
3204-45B	BEARING, NO.2 (FOR OUTPUT SHAFT) -----	1
3204-46	GEAR, OUTPUT, NO.1 -----	1
3204-47	GEAR, OUTPUT, NO.2 -----	1
3204-48	SPACER, IDLER GEAR -----	1
3204-A1	RING, J -----	1
3204-AK	SPACER -----	1
3204-AL	RING, SNAP -----	1
3204-AQ	PLATE, LOCK -----	2
3204-A4	BOLT -----	4
3204-A5	WASHER, LOCK -----	1- 2
3204-AT	COLLAR -----	1
3204-AU	COLLAR -----	1
3204-AY	NUT, RING -----	1
3204-BB	SEAL, OIL -----	1
3204-BF	RETAINER -----	1


(41M) (8) G707

FIG. 3206
CONTROL VALVE



3206

2D...ATM

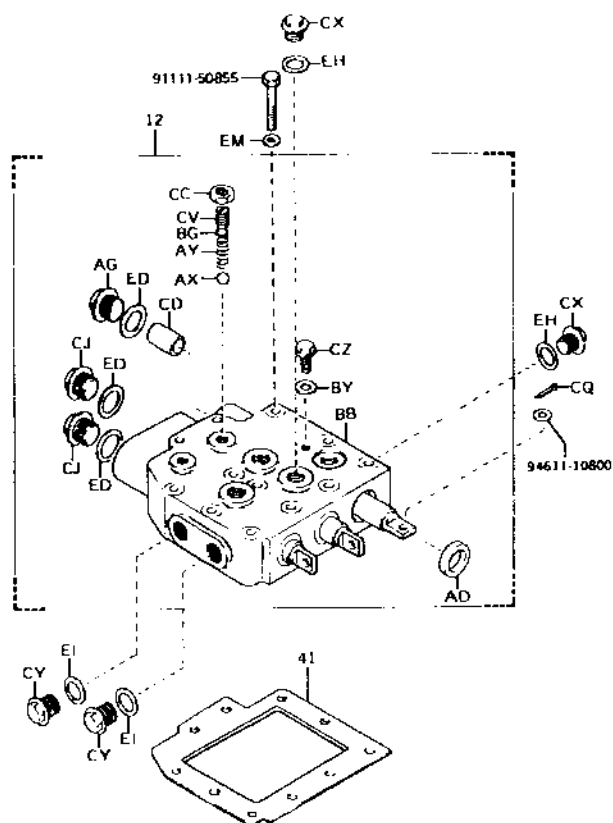 2F...2H...ATM



3206 028

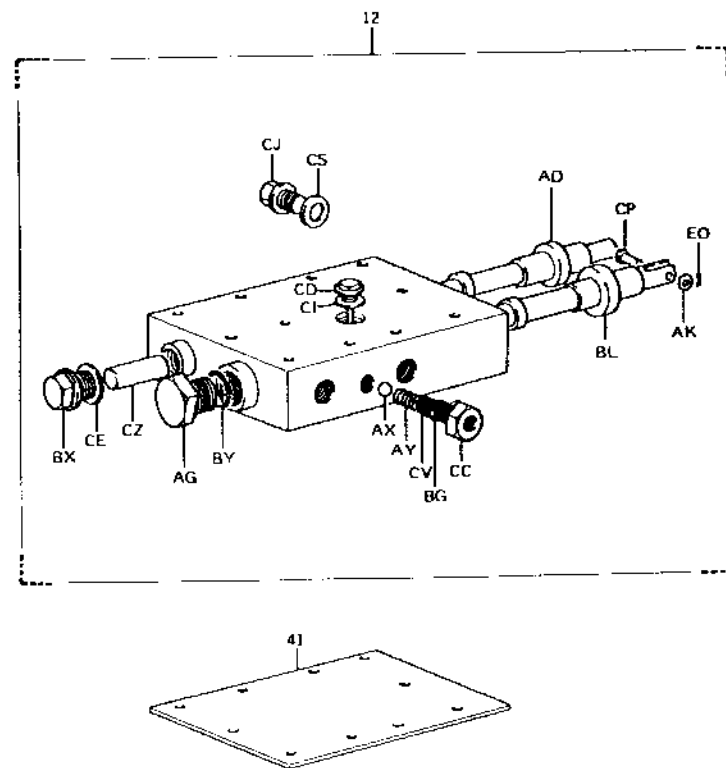  

3206 029

3206

PART NAME CODE	PART NAME	QTY
3206-12	VALVE ASSY, CONTROL	1
3206-41	PACKING, CONTROL VALVE BODY	1
3206-AD	SEAL, OIL	1- 3
3206-AG	PLUG	1
3206-AK	WASHER, PLATE	1
3206-AX	BALL, STEEL	1- 2
3206-AY	SPRING	1- 2
3206-BB	BODY, CONTROL VALVE	1
3206-BG	RING, O	1- 2
3206-BL	SEAL, OIL	1
3206-BX	PLUG	1
3206-BY	PACKING	1
3206-CC	NUT	1- 2
3206-CD	STOPPER	1- 2
3206-CE	PACKING	1
3206-C1	PACKING	2
3206-CJ	PLUG	1- 2
3206-CP	PIN, W/HOLE	1
3206-CQ	PIN, COTTER	1
3206-CS	PACKING	1
3206-CV	BOLT, ADJUST	1- 2
3206-CX	PLUG	1- 5
3206-CY	PLUG	2
3206-CZ	STOPPER	1
3206-LA	WASHER, SEAL	12
3206-ED	WASHER, SEAL	3
3206-EH	WASHER, SEAL	1- 5
3206-L1	WASHER, SEAL	2
3206-EM	WASHER, SEAL	12
3206-LD	PIN, COTTER	1

(41M) (/)


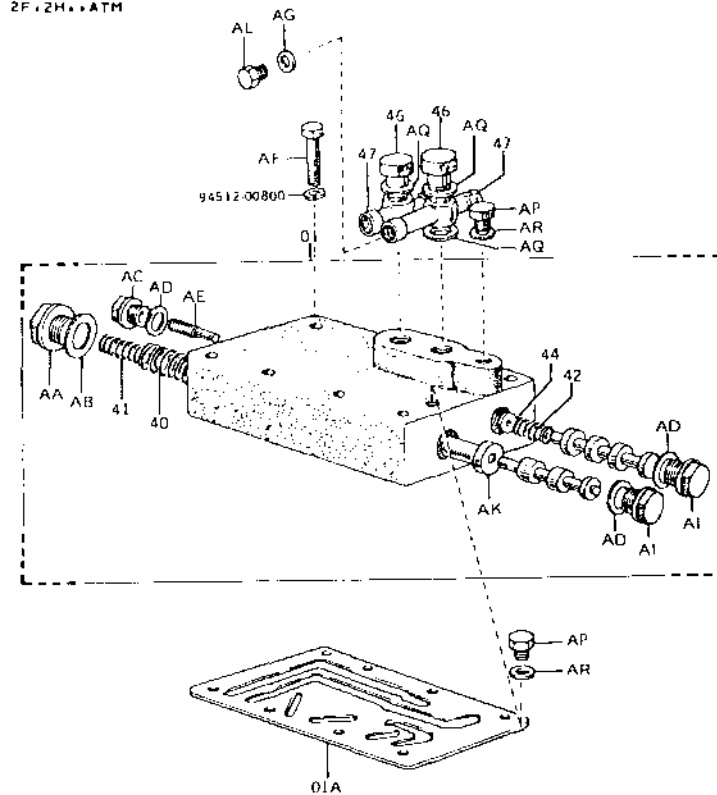 
G707

FIG. 3207
REGULATOR VALVE

3207

20. + ATM

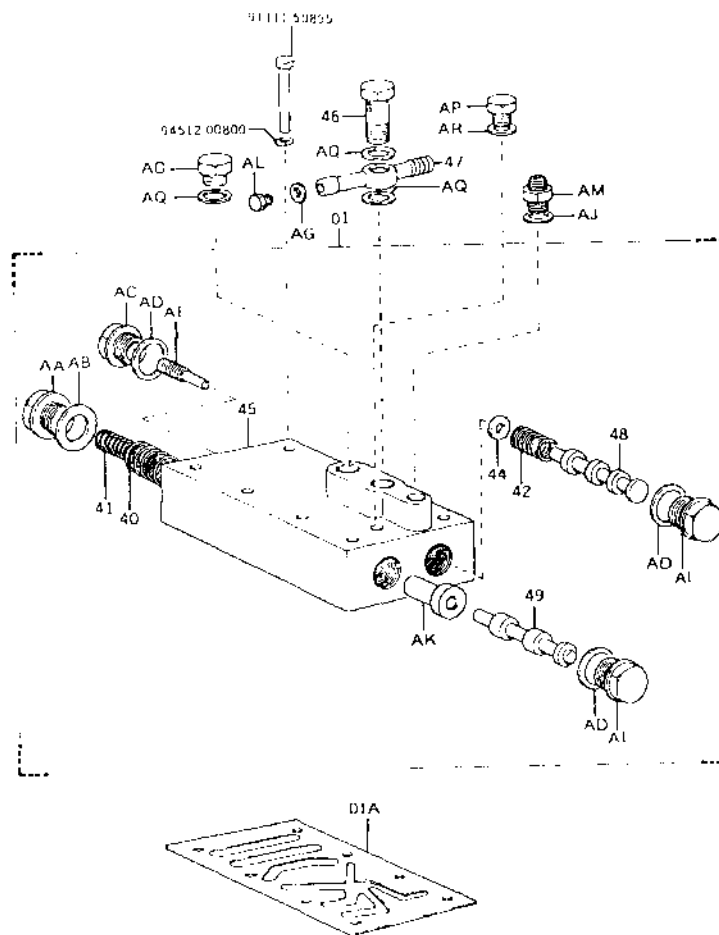 2F. 2H. + ATM



3207 004

3207 010

3207

PART NAME CODE	PART NAME	QTY
3207-01	VALVE ASSY, REGULATOR	1
3207-01A	PACKING	1
3207-40	SPRING, COIL, A	1
3207-41	SPRING, COIL, B	1
3207-42	SPRING, COIL, C	1
3207-44	RETAINER, SPRING	1
3207-45	BODY, REGULATOR VALVE	1
3207-46	BOLT, UNION	1- 2
3207-47	CONNECTOR	1
3207-48	VALVE, REGULATOR	1
3207-49	VALVE, REGULATOR	1
3207-AA	PLUG	1
3207-AB	PACKING	1
3207-AC	PLUG	1
3207-AD	PACKING	1- 3
3207-AE	SCREW, ADJUST	1
3207-AF	BOLT	8
3207-AG	PACKING	1
3207-AI	PLUG	1- 2
3207-AJ	PACKING	1
3207-AK	RETAINER, SPRING	1
3207-AL	PLUG	1
3207-AM	NIPPLE	1
3207-AQ	PLUG	1
3207-AP	PLUG	1
3207-AQ	WASHER, SEAL	3- 4
3207-AR	WASHER, SEAL	1- 2


(ATM) (8) G707

3208

This diagram shows an exploded view of a mechanical assembly. The main component is a housing or bracket with mounting points labeled O1, A0, and AE. A curved, segmented component labeled 11 is shown above the housing. A gear-like component labeled 12 is shown to the right of the housing, with an additional AE label pointing to its outer rim.

94512-00900

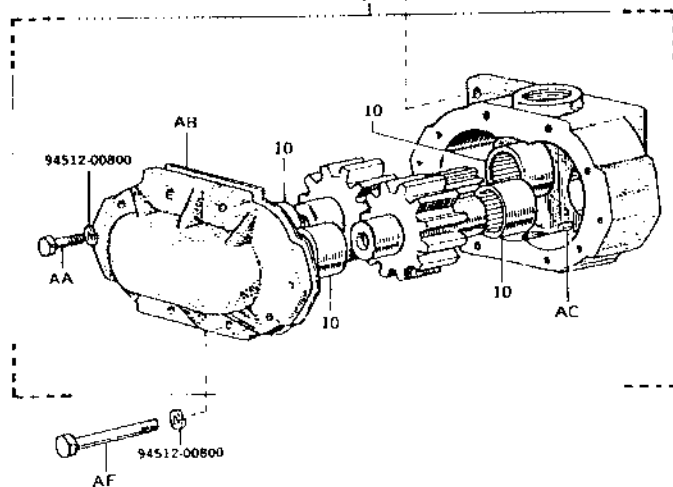 AA 91



3205 OUT

PART NAME CODE	PART NAME	QTY
3208-01	PUMP ASSY, OIL -----	1
3208-10	BEARING, NEEDLE -----	4
3208-11	CHAIN -----	1
3208-12	GEAR SUB-ASSY, DRIVEN -----	1
3208-AA	BOLT -----	8
3208-AB	PACKING -----	1
3208-AC	PIN, KNOCK -----	2
3208-AD	PACKING -----	1
3208-AE	BEARING -----	2
3208-AF	BOLT -----	2

(AIM) (9) G707




FIG. 3210
ACCUMULATOR

3210

ZD...ATH

ZF...ZH...ATH

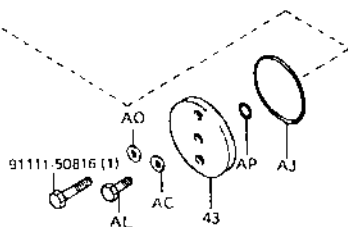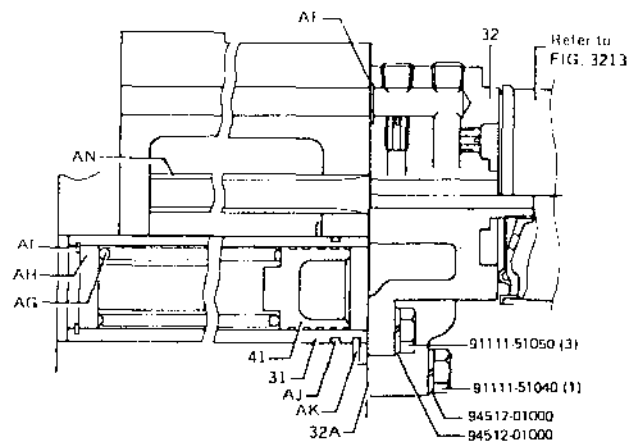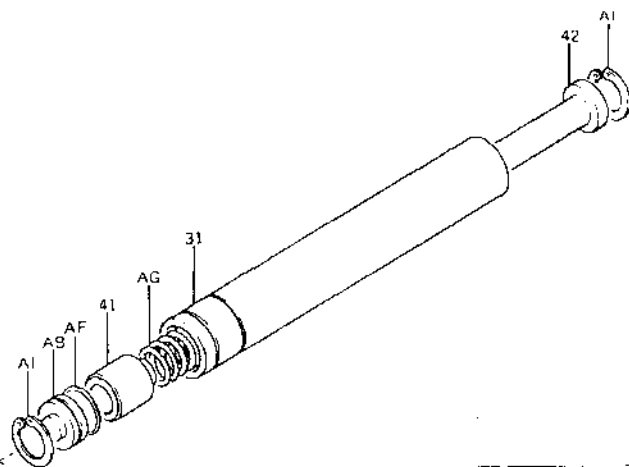   01



3210 008

3210 007

3210

PART NAME CODE	PART NAME	QTY
3210-J1	ACCUMULATOR ASSY -----	1
3210-J1	CYLINDER, ACCUMULATOR -----	1
3210-J2	FLANGE SUB-ASSY, ACCUMULATOR -----	1
3210-J2A	PACKING -----	1
3210-K1	PISTON -----	1
3210-K2	GUIDE, SPRING -----	1
3210-K3	COVER -----	1
3210-K8	PLUG -----	1
3210-K9	WASHER, SEAL -----	2
3210-AF	RING, O -----	2
3210-AG	SPRING -----	1
3210-AH	STOPPER -----	1
3210-A1	RING, SNAP -----	2
3210-A3	RING, O -----	1
3210-AK	KEY -----	1
3210-AL	BOLT -----	2
3210-AN	PIPE -----	1
3210-AD	WASHER, SEAL -----	1
3210-AP	RING, O -----	2


(A) M 1 (10) 3707

FIG. 3213
TORQUE CONVERTER PIPING


3213

2D...ATH

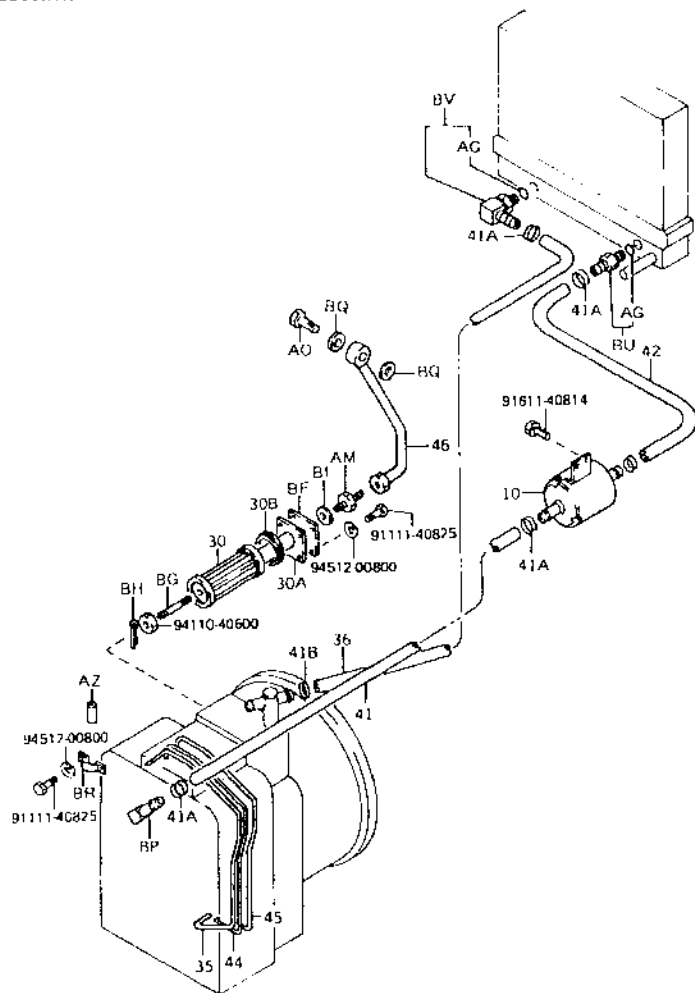 2F, 2H...ATH



3213 029

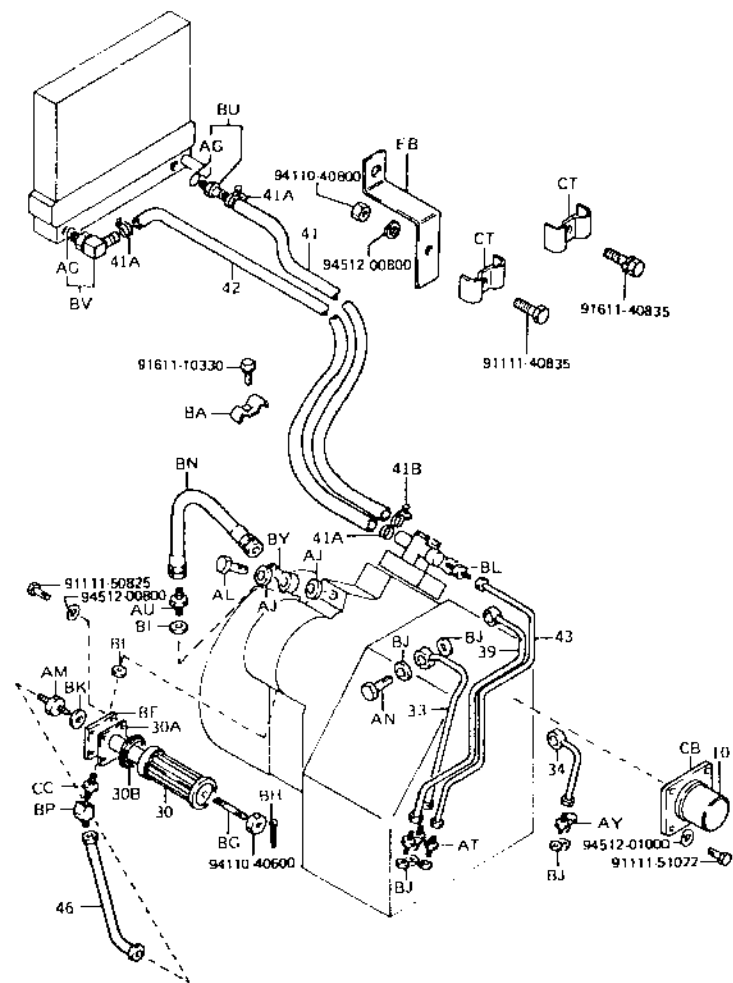 

3213 030

3213

PART NAME CODE	PART NAME	QTY
3213-10	FILTER ASSY, OIL -----	1
3213-30	STRAINER SUB-ASSY, OIL (SCREEN) -----	1
3213-30A	PACKING, OIL STRAINER BODY -----	1
3213-30B	PACKING, FELT -----	1
3213-33	PIPE SUB-ASSY, VALVE TO SERVO, NO.1 -----	1
3213-34	PIPE SUB-ASSY, VALVE TO SERVO, NO.2 -----	1
3213-35	PIPE SUB-ASSY, CASE TO CASE -----	1
3213-36	HOSE SUB-ASSY, OIL COOLER, NO.1 -----	1
3213-39	PIPE SUB-ASSY, VALVE TO SERVO, NO.4 -----	1
3213-41	HOSE, LOW PRESSURE, NO.1 (FOR OIL COOLER) --	1
3213-41A	CLAMP, NO.1 (FOR OIL COOLER HOSE) -----	5
3213-41B	CLAMP, NO.2 (FOR OIL COOLER HOSE) -----	1
3213-42	HOSE, LOW PRESSURE, NO.2 (FOR OIL COOLER) --	1
3213-43	PIPE SUB-ASSY, REGULATOR TO SERVO, NO.1 -----	1
3213-44	PIPE SUB-ASSY, CASE TO CASE, NO.1 -----	1
3213-45	PIPE SUB-ASSY, CASE TO CASE, NO.2 -----	1
3213-46	PIPE SUB-ASSY -----	1
3213-AG	RING, O -----	2
3213-AJ	PACKING -----	2
3213-AL	BOLT, UNION -----	1
3213-AM	NIPPLE -----	1
3213-AN	BOLT, UNION -----	5
3213-AO	BOLT -----	1
3213-AT	NIPPLE -----	4
3213-AU	NIPPLE -----	1
3213-AV	PLUG -----	1
3213-AZ	PROTECTOR, HOSE -----	1
3213-BA	CLAMP, HOSE -----	1
3213-BF	BODY, OIL SCREEN -----	1
3213-BG	BOLT, STUD -----	1
3213-BH	PIN, COTTER -----	1
3213-BI	PACKING -----	1
3213-BJ	PACKING -----	13
3213-BK	PACKING -----	1
3213-BL	CONNECTOR -----	1
3213-BN	HOSE (PUMP TO CASE) -----	1
3213-BP	ELBOW -----	1
3213-BQ	WASHER, SEAL -----	5
3213-BR	CLAMP, PIPE -----	1
3213-BU	FITTING -----	1
3213-BV	FITTING -----	1
3213-BY	NIPPLE -----	1
3213-CB	CAP, OIL CLEANER -----	1
3213-CC	NIPPLE -----	1
3213-CT	CLAMP -----	2
3213-EB	BRACKET, HOSE CLAMP -----	1


(ATM) (11) G707

FIG. 3215
SHIFT LEVER


3215

2D..ATH

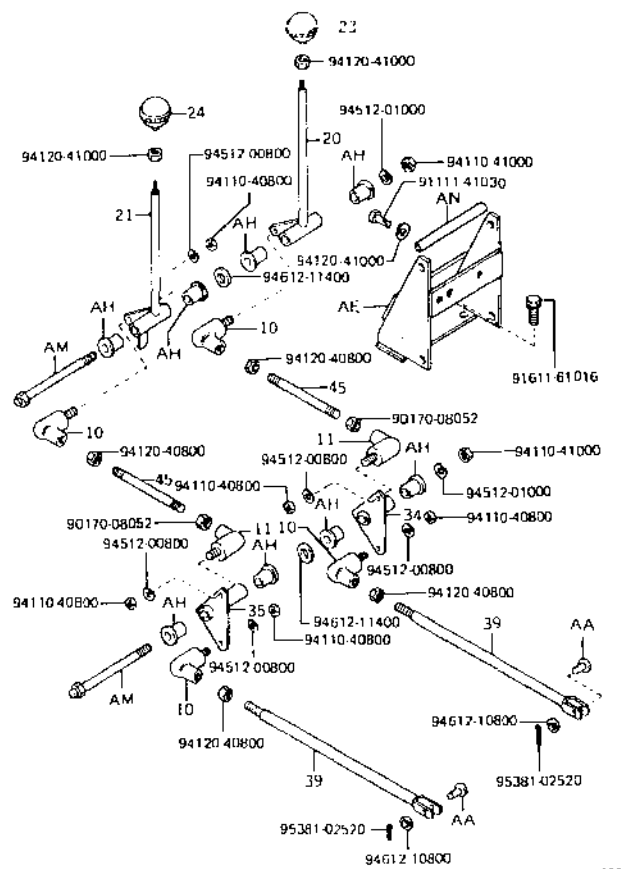 2F..ZH..ATH



3215 005

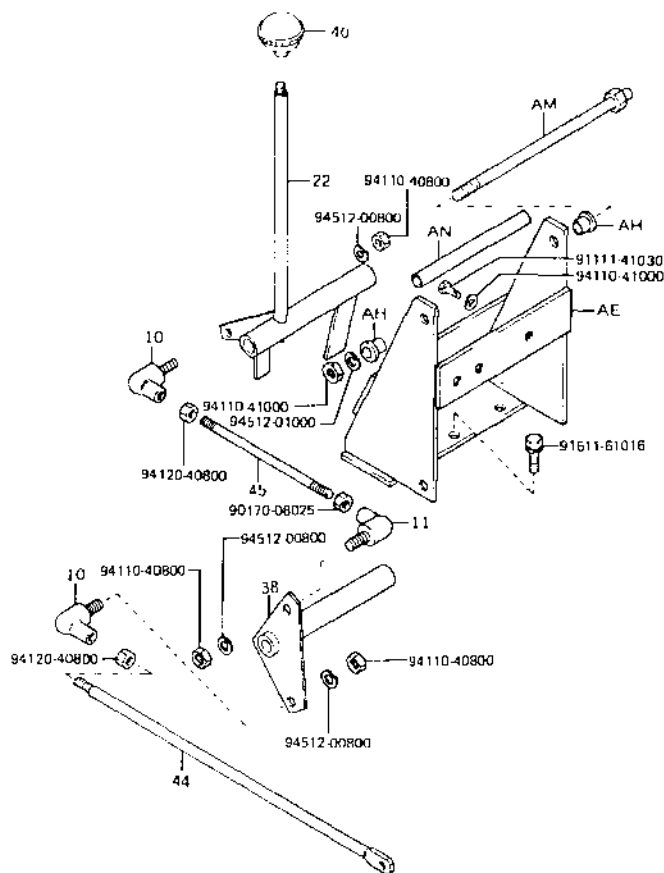 

3215 006

3215


PART NAME CODE	PART NAME	QTY
3215-10	END ASSY, CONNECTING ROD, NO.1	2
3215-11	END ASSY, CONNECTING ROD, NO.2	1- 2
3215-20	LEVER SUB-ASSY, HIGH & LOW SHIFT	1
3215-21	LEVER SUB-ASSY, REAR DRIVE SHIFT	1
3215-22	LEVER, SUB-ASSY SHIFT	1
3215-23	KNOB SUB-ASSY, HIGH & LOW	1
3215-24	KNOB SUB-ASSY, FORWARD & REVERSE	1
3215-34	LINK SUB-ASSY, HIGH & LOW SHIFT	1
3215-35	LINK SUB-ASSY, REAR DRIVE SHIFT	1
3215-38	LINK SUB-ASSY, SHIFT CONTROL	1
3215-39	ROD SUB-ASSY, SHIFT	1
3215-40	KNOB SUB-ASSY	1
3215-44	ROD, SELECT LEVER	1
3215-45	ROD, SHIFT CONTROL	1- 2
3215-AA	PIN	2
3215-AE	BRACKET SUB-ASSY	1
3215-AH	BUSHING	4- 8
3215-AM	BOLT SUB-ASSY, CHANGE LEVER	2
3215-AN	SPACER	2

(RTM) (12) 6707

FIG. 3701
PROPELLER SHAFT & UNIVERSAL JOINT

3701

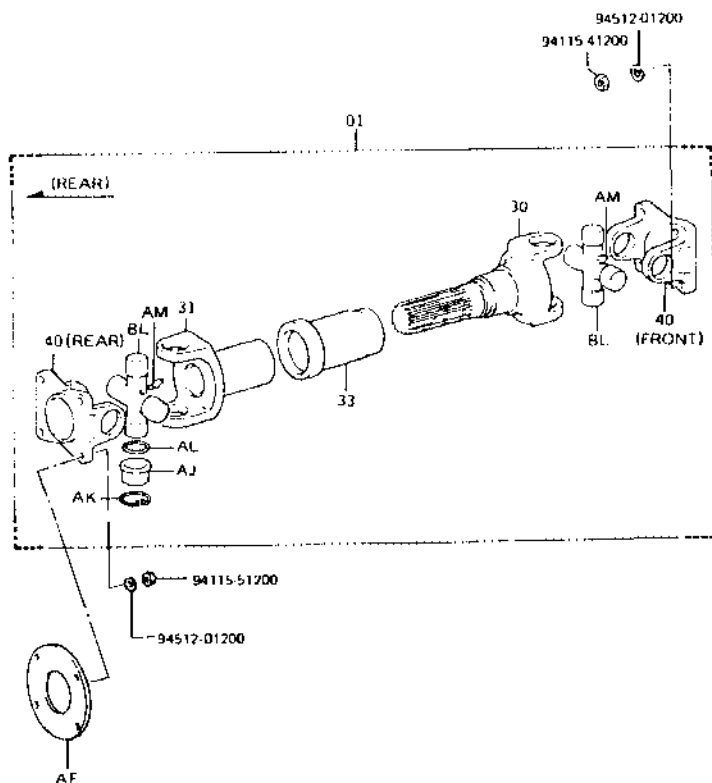 ATH



3701 Q16

PART NAME CODE	PART NAME	QTY
3701-01	SHAFT ASSY, PROPELLER	1
3701-30	YOKER SUB-ASSY, UNIVERSAL JOINT, DRIVE	1
3701-31	YOKER SUB-ASSY, UNIVERSAL JOINT, DRIVEN	1
3701-33	COVER SUB-ASSY, OIL	1
3701-40	YOKER, UNIVERSAL JOINT FLANGE	2
3701-AF	SPACER	1
3701-AJ	BEARING	8
3701-AK	RING, HOLE SNAP	8
3701-AL	SEAT, OIL RETAINER	8
3701-AM	FITTING, GREASE	3
3701-BL	SPIDER, UNIVERSAL	2

(ATH) (13) 6707

4101

01


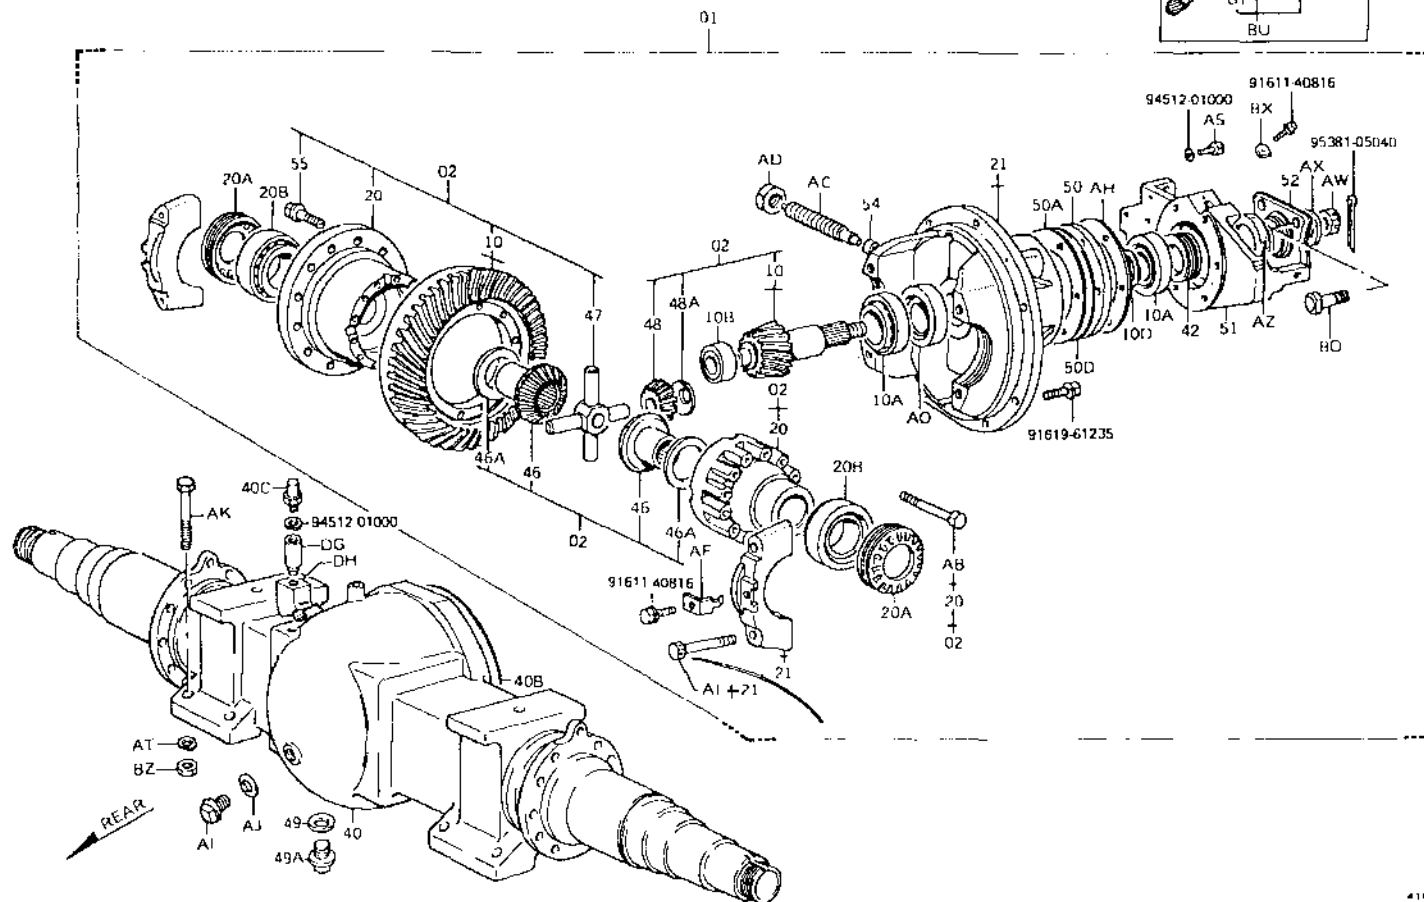 


FIG. 4101
DIFFERENTIAL

2F, 2H...ATM

4101

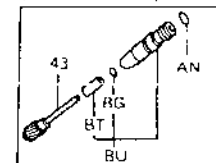 (SPEEDOMETER)



4109 QAL

4101

PART NAME CODE	PART NAME	QTY
4101-01	CARRIER ASSY, DIFFERENTIAL	1
4101-02	CASE ASSY, DIFFERENTIAL	1
4101-10	RING GEAR & PINION SET, DIFFERENTIAL	1
4101-10A	BEARING, DRIVE PINION	2
4101-10B	BEARING, DRIVE PINION PILOT	1
4101-10D	SHIM, BEARING PRELOAD ADJUST	1
4101-20	CASE SUB-ASSY, DIFFERENTIAL	1
4101-20A	NUT, ADJUSTING	2
4101-20B	BEARING, DIFFERENTIAL CASE	2
4101-21	CARRIER SUB-ASSY, DIFFERENTIAL	1
4101-40	HOUSING, DIFFERENTIAL	1
4101-40B	RING, O (FOR DIFFERENTIAL HOUSING)	1
4101-40C	PLUG, BREATHER (FOR DIFFERENTIAL HOUSING)	1
4101-42	GEAR, SPEEDOMETER DRIVE	1
4101-43	GEAR, SPEEDOMETER DRIVEN	1
4101-46	GEAR, SIDE	2
4101-46A	WASHER, SIDE GEAR THRUST	2
4101-47	SPIDER	1
4101-48	PINION	4
4101-48A	WASHER, PINION THRUST	4
4101-49	PLUG, DRAIN	1
4101-49A	GASKET, DRAIN PLUG	1
4101-50	RETAINER, DRIVE PINION BEARING	1
4101-50A	GASKET, DRIVE PINION BEARING RETAINER	1
4101-50D	SHIM, DIFFERENTIAL DRIVE PINION BEARING	2
4101-51	ARM, BRAKE DRUM SUPPORT	1
4101-52	RETAINER, JOINT YOK	1
4101-54	CAP, RING GEAR THRUST SCREW	1
4101-55	BOLT, RING GEAR SET	12
4101-AB	BOLT	8-16
4101-AC	SCREW, RING GEAR THRUST	1
4101-AD	NUT	1
4101-AF	LOCK, ADJUSTING	2
4101-AH	GASKET	1
4101-AI	PLUG	1
4101-AJ	GASKET	1
4101-AK	BOLT	8
4101-AL	BOLT	4
4101-AN	RING, O	1
4101-AO	SPACER, BEARING	1
4101-AS	BOLT	2-4
4101-AT	WASHER, SPRING	8
4101-AW	NUT, CASTLE	1
4101-AX	WASHER, PLATE	1
4101-AZ	SEAL, OIL	1
4101-BD	BOLT	4
4101-BG	RING, O	1
4101-BJ	NUT	12
4101-BD	NUT	2
4101-BP	WASHER	1
4101-BQ	PLATE	1
4101-BI	BUSH, SPEED METER DRIVEN GEAR	1-2
4101-BU	HOUSING, SPEED METER GEAR	1

(ATM) (1-)

G707


PART NAME CODE	PART NAME	QTY
4101-BV	STOPPER, SPEED METER GEAR	1
4101-BX	PLATE, SPEEDOMETER CAP LOCK	1
4101-BZ	NUT	8
4101-CU	RING	1
4101-CW	RETAINER	2
4101-DG	PIPE	1
4101-DH	CONNECTOR	1

(ATM) (1-)

G707

4205

Exploded view diagram of a mechanical assembly. The diagram shows a central shaft with various components mounted on it. The components are labeled with alphanumeric codes: 40, 50, 41D (OUTER), 41D (INNER), 49, 40C, AG, 47, AF, 52A, 54, AV, AW, 94115-51200, 94512 C1200, 94711-91000, 91111-41025, 45, 511, AU, 47, AF, 57, 54A, 94711-91000, 91111-41025, 45, 511, AU, 47, AF, 57, 54A, 94711-91000, 91111-41025. The diagram is a technical drawing showing the assembly's structure and the relative positions of its parts.

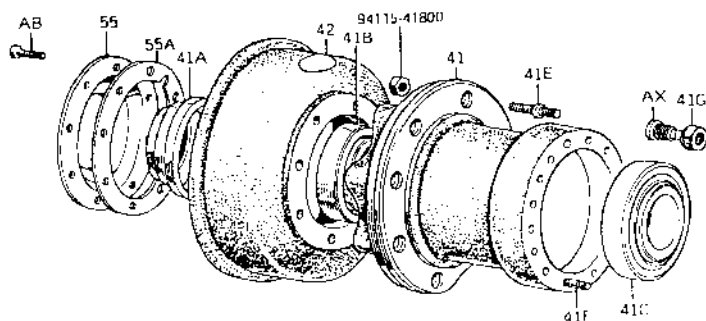 

4204 NG6


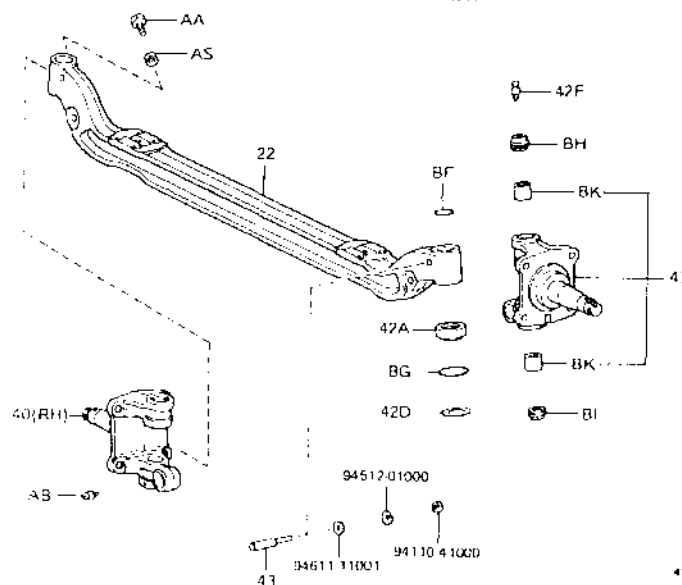 
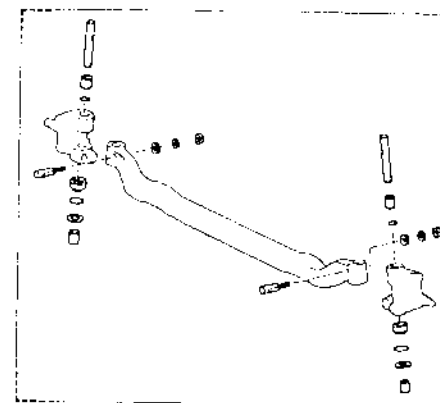 
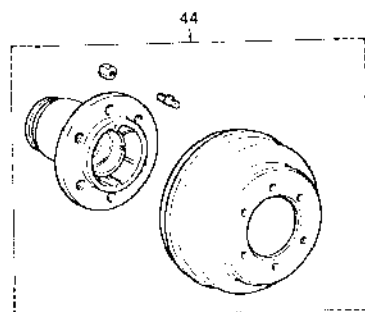 
PART NAME CODE	PART NAME	QTY
4205-40	SHAFT, REAR AXLE -----	1
4205-400	SEAL, OIL (FOR REAR AXLE SHAFT) -----	2
4205-41	HUB, REAR AXLE -----	2
4205-41A	SEAL, OIL (FOR REAR AXLE HUB) -----	2
4205-41B	BEARING, NO.1 (FOR REAR AXLE HUB) -----	2
4205-41C	BEARING, NO.2 (FOR REAR AXLE HUB) -----	2
4205-41D	NUT, BEARING ADJUSTING -----	2
4205-41E	BOLT, HUB -----	16
4205-41F	BOLT, STUD (FOR REAR AXLE SHAFT) -----	30
4205-41G	NUT, HUB -----	16
4205-42	DRUM, BRAKE -----	2
4205-43	GEAR, PLANET -----	6
4205-44	PLATE, LOCK NUT -----	2
4205-45	HUB, INTERNAL GEAR -----	2
4205-46	SHAFT, PLANET GEAR -----	6
4205-47	CARRIER, PLANET GEAR -----	2
4205-48	RING, D -----	2
4205-49	COVER, REAR AXLE CARRIER -----	2
4205-50	GASKET, REAR AXLE CARRIER COVER -----	2
4205-51	DEFLECTOR, OIL -----	2
4205-52	PACKING, OIL DEFLECTOR -----	2
4205-53	BOLT, BRACKET SET -----	2
4205-54	RING, SNAP -----	6
4205-55	SCREW, BEARING LOCK NUT -----	2
4205-56	SPACER, NEEDLE ROLLER -----	6
4205-57	ROLLER, NEEDLE -----	40
4205-58	WASHER, THRUST -----	12
4205-59	PLUG -----	2
4205-60	GASKET -----	2
4205-61	BOLT, DOUBLE WHEEL STOP -----	16

FIG. 4306
FRONT AXLE & TIE-ROD

4306

ATM [DRUM] [1/3]

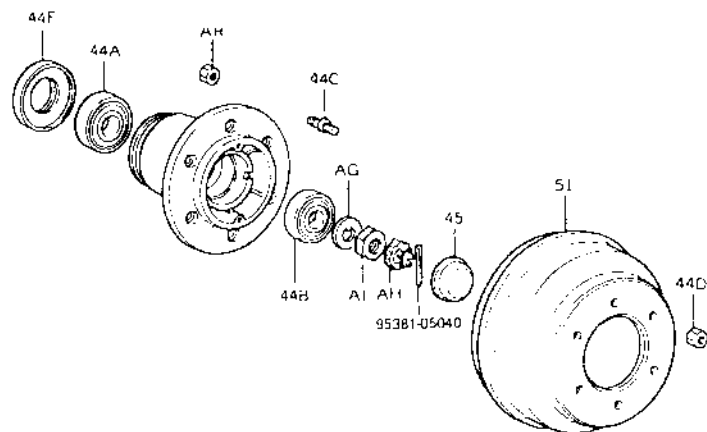 ATM [ARM] [2/3]



4306 006

4706 001

4306

Exploded view diagram of a vehicle chassis component assembly, showing various parts and their assembly sequence.

Top Left Assembly:

- 10: Bolt
- 95381-03025: Washer
- 10A: Nut
- BD: Bush
- BC: Nut
- AC: Bolt

Top Right Assembly:

- 94115-41200: Bolt
- 94512-01200: Bolt
- AZ: Bush
- 47: Tube
- B1161 51250: Bolt
- A7: Bush
- 11: Bolt
- 95381-03025: Washer
- 11B: Nut
- BD: Bush
- BC: Nut
- AC: Bolt

Bottom Left Assembly:

- 95381-04235: Bolt
- AL: Bolt
- 20: Bolt
- HJ: Bolt

Bottom Right Assembly:

- 95381-04035: Bolt
- 21: Bolt
- AL: Bolt
- HJ: Bolt
- 12: Bolt


PART NAME CODE	PART NAME	QTY
4306-10	END ASSY, TIE ROD, NO.1	1
4306-10H	NUT (RH THREADS)	1
4306-11	END ASSY, TIE-ROD, NO.2	1
4306-11B	NUT (LH THREADS)	1
4306-12	ROD ASSY, DRAGLINK	1
4306-20	ARM SUB-ASSY, TRAILING, RH	1
4306-21	ARM SUB-ASSY, TRAILING, LH	1
4306-22	BEAM SUB-ASSY, FRONT AXLE	1
4306-40	KNUCKLE, STEERING, RH	1
4306-41	KNUCKLE, STEERING, LH	1
4306-42R	BEARING, STEERING KNUCKLE THRUST	2
4306-42D	SHIM, STEERING KNUCKLE	99
4306-42F	PLUG	2
4306-42K	SEAL KIT, KING PIN	1
4306-43	PIN, KING PIN LOCK	2
4306-44	HUB, FRONT AXLE	1
4306-44A	BEARING, INNER	2
4306-44B	BEARING, OUTER	2
4306-44C	BO. T. HUB	3
4306-44D	NUT, HUB	3
4306-44F	SEAL, OIL (FOR FRONT AXLE HUB)	2
4306-45	CAP, FRONT AXLE HUB	2
4306-47	TIE-ROD	1
4306-51	DRUM, BRAKE	2
4306-AA	BOLT	2
4306-AB	FITTING, GREASE	2
4306-AC	FITTING, GREASE	2
4306-AG	WASHER, CLAW	2
4306-AM	NUT, CASTLE	2
4306-A1	NUT	2
4306-AI	NUT, CASTLE	2
4306-AR	NUT	10
4306-AS	NUT	2
4306-A7	CLAMP, TIE ROD END	2
4306-BC	RING, SET	2
4306-BD	SEAL, DUST	2
4306-BF	RING, O	2
4306-BG	RING, O	2
4306-BH	PLUG	2
4306-BI	PLUG	2
4306-BJ	KEY, WOODRUFF	2
4306-BK	BEARING	2

18-00000

FIG. 4401
FRONT WHEEL & TIRE(SINGLE)

4401

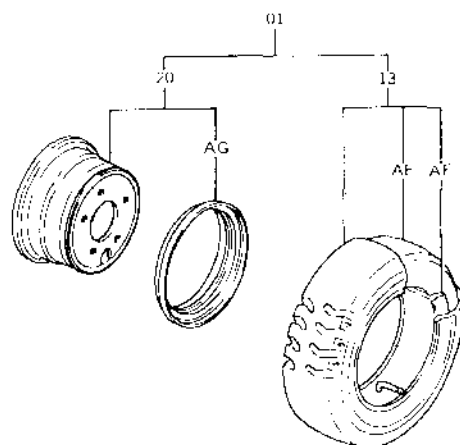 ATM



4401 010



PART NAME CODE	PART NAME	QTY
4401-01	WHEEL ASSY, DISC	2
4401-13	TIRE ASSY	2
4401-20	WHEEL SUB-ASSY, DISC	2
4401-RE	TUBE SUB-ASSY	2
4401-RF	FLAP	2
4401-AG	RING, SIDE	2

(ATM) (18) 0707

FIG. 4403
REAR WHEEL & TIRE

4403

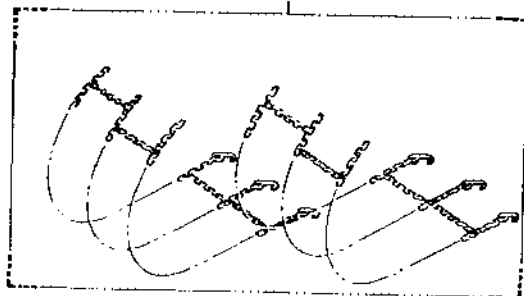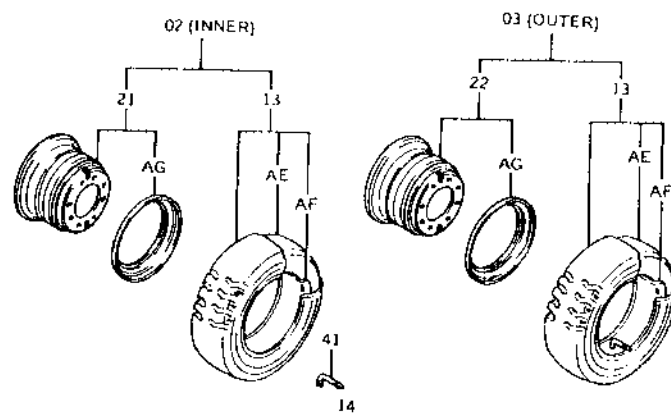  ATM



4403 035


PART NAME CODE	PART NAME	QTY
4403-02	WHEEL ASSY, INNER	2
4403-03	WHEEL SUB-ASSY, OUTER	2
4403-13	TIRE ASSY	4
4403-14	CHAIN ASSY, TIRE	1
4403-21	WHEEL SUB-ASSY, DISC, INNER	2
4403-22	WHEEL SUB-ASSY, DISC, OUTER	2
4403-41	EXTENSION, WHEEL TUBE VALVE	2
4403-AE	TUBE SUB-ASSY	4
4403-AF	FLAP	4
4403-AG	RING, SIDE	4

(A16M) (19) G707

FIG. 4501
STEERING WHEEL

4501

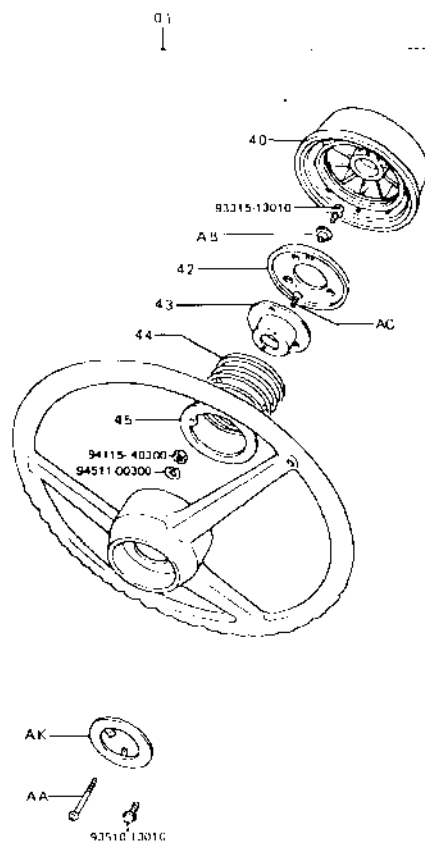 ATM



4501 026

PART NAME CODE	PART NAME	QTY
4501-01	WHEEL ASSEMBLY SPRING	1
4501-40	BUTTON, HORN	1
4501-42	PLATE, HORN CONTACT	1
4501-43	SEAL, HORN CONTACT	1
4501-44	SPRING, HORN	1
4501-45	PLATE, SEAL	1
4501-AA	SCREW	1
4501-AB	WASHER	3
4501-AC	SCREW	2
4501-AK	RING, HORN CONTACT NO. 1	1

(ATM) (C-10)


G707

FIG. 4502
STEERING POST


4502

ATM [ASSY] [1/2]

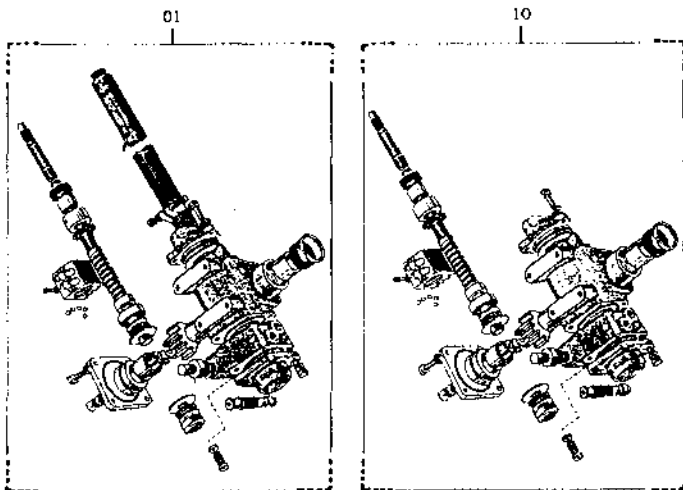 
ATM 12/21



10K., (INCL. ●)

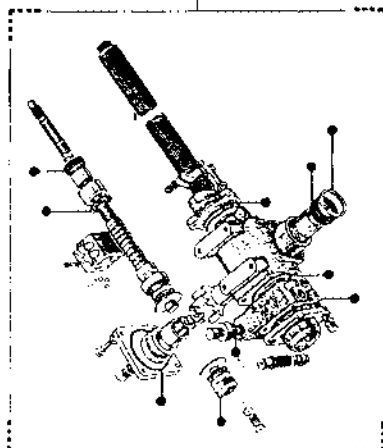 

4:07 PM

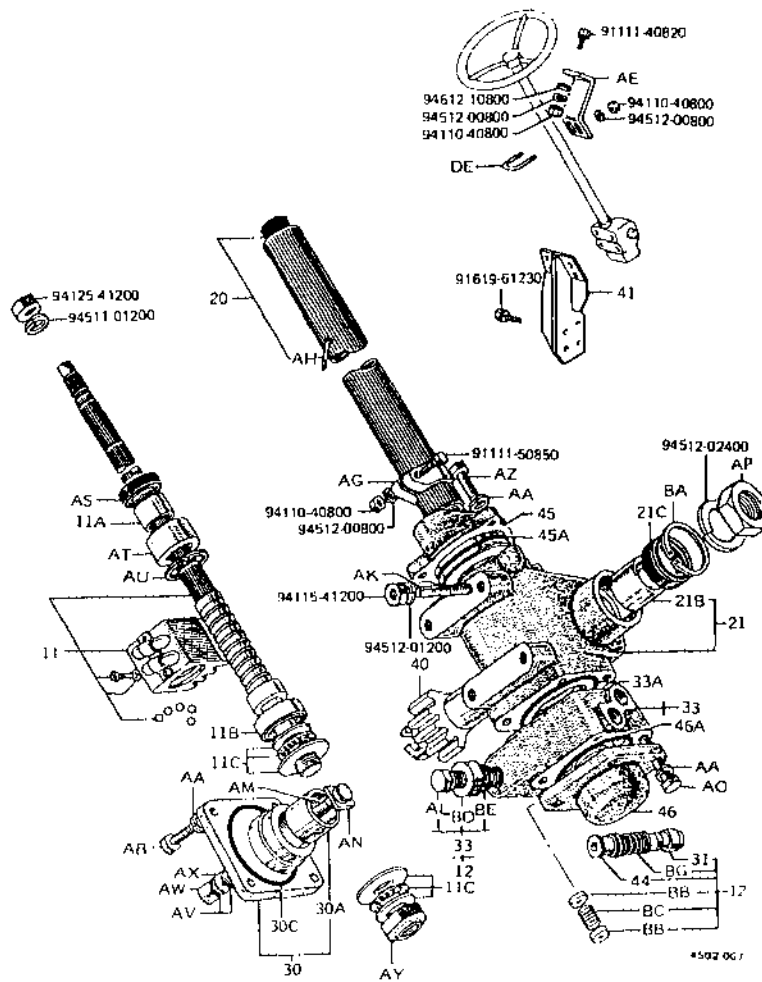 

• 507 OG

4502


PART NAME CODE	PART NAME	QTY
4502-01	POST ASSY, STEERING	1
4502-10	GEAR ASSY, STEERING	1
4502-10K	GEAR O/H KIT, STEERING	1
4502-11	BALL SCREW SET	1
4502-11A	BEARING, NO.1 (FOR BALL SCREW SET)	1
4502-11B	BEARING, NO.2 (FOR BALL SCREW SET)	1
4502-11C	BEARING, THRUST (FOR BALL SCREW SET)	2
4502-12	BODY ASSY, VALVE	1
4502-20	JACKET SUB-ASSY, MAST	1
4502-21	BOX SUB-ASSY, STEERING GLAR	1
4502-21B	BEARING, NO.1 (FOR SECTOR SHAFT)	1
4502-21C	SEAL, OIL (FOR SECTOR SHAFT)	1
4502-30	COVER SUB-ASSY, SIDE	1
4502-30A	BUSH, SECTOR SHAFT, NO.2	1
4502-30C	RING, O (FOR SIDE COVER)	1
4502-31	VALVE SET, RELIEF	1
4502-33	BODY SET, VALVE	1
4502-33A	RING, O (FOR VALVE BODY SET)	1
4502-40	SHAFT, SECTOR	1
4502-41	BRACKET, STEERING	1
4502-44	PISTON, BALANCE	1
4502-45	COVER, TOP	1
4502-45A	RING, O (FOR TOP COVER)	1
4502-46	COVER, END	1
4502-46A	PACKING, END COVER	1
4502-AA	WASHER, SPRING	10
4502-AB	BOLT	4
4502-AC	STAY SUB-ASSY, STEERING	1
4502-AC	CLAMP, STEERING COLUMN, LOWER	1
4502-AH	GROMMET	1
4502-AK	BOLT, STUD	4
4502-AL	PLUG, OIL	1
4502-AM	BOLT, ADJUSTING	1
4502-AN	PLATE, ADJUSTING	1
4502-AD	BOLT	4
4502-AP	NUT	1
4502-AS	SEAL, OIL	1
4502-AT	COLLAR	1
4502-AU	RING, SNAP	1
4502-AV	PACKING	2
4502-AW	NUT	1
4502-AX	NUT	1
4502-AY	NUT, LOCK	1
4502-AZ	BOLT	3
4502-BA	RING, SNAP	1
4502-BH	SLAT	8
4502-BC	SPRING	4
4502-BD	STOPPER, BALANCE PISTON	1
4502-BE	RING, O	1
4502-BC	SPRING, BALANCE PISTON	1
4502-DE	BOLT, U	1

(A1M) (21) G707

FIG. 4507
DRAG LINK & STEERING PIPING

4507

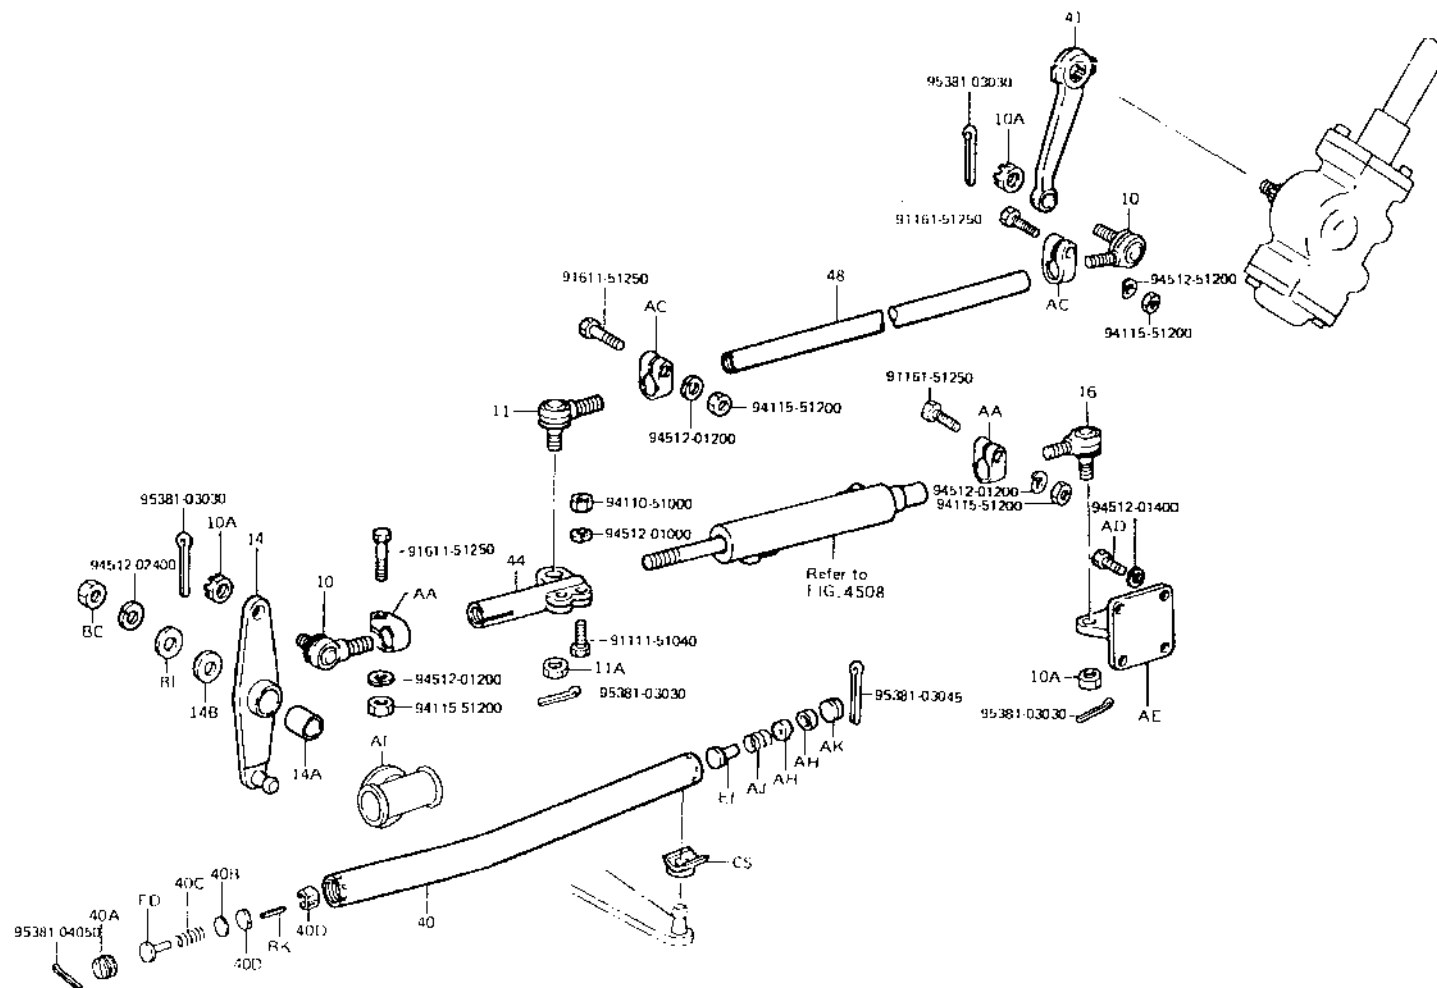 ATM (1/2)




4507 Q45

FIG. 4507
DRAG LINK & STEERING PIPING

4507

2F-2H--ATH (2/21)

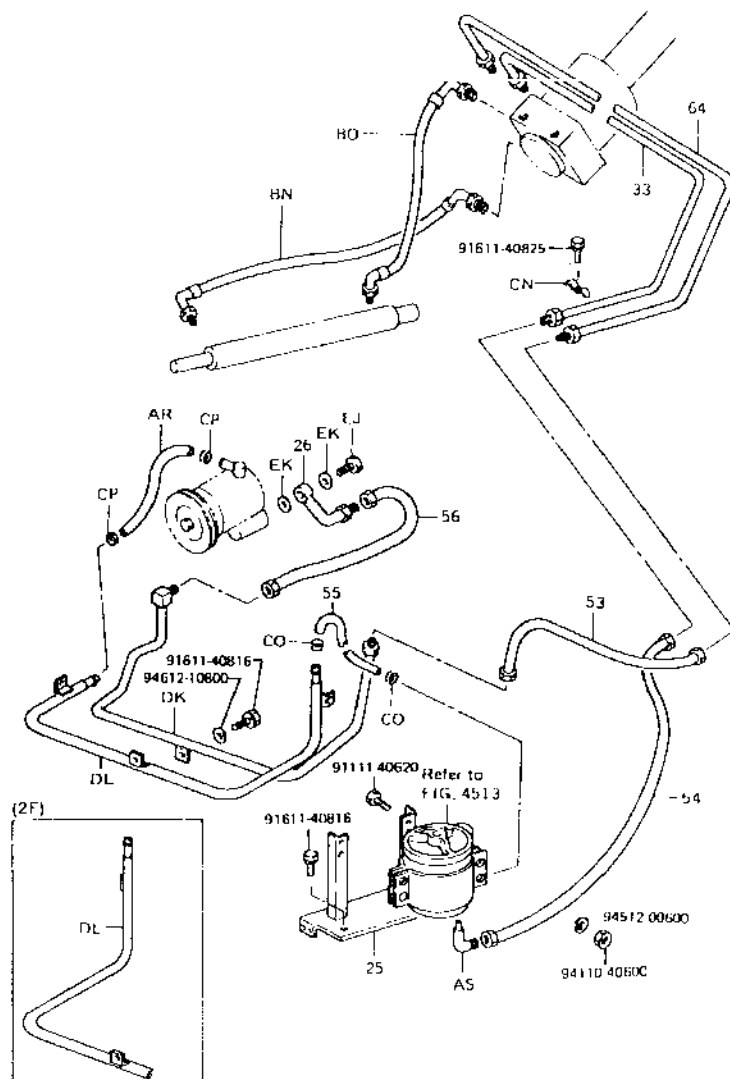 
2D--ATH (2/21)



4507 (2/21)

4507

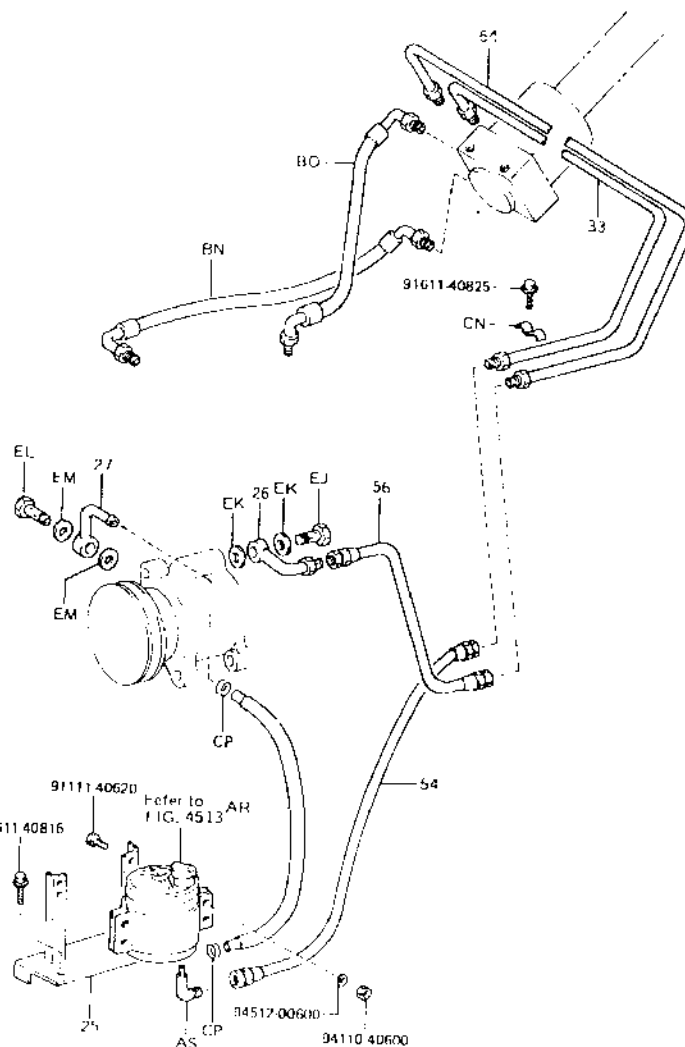 4507



4507 (2/21)

4507

4507

4507

PART NAME CODE	PART NAME	QTY
4507-10	END ASSY, DRAG LINK -----	2
4507-10A	NUT, CASTLE (FOR DRAG LINK END) -----	3
4507-11	END ASSY, POWER CYLINDER -----	1
4507-11A	NUT, CASTLE (FOR POWER CYLINDER END) -----	1
4507-14	ARM ASSY, DRAG LINK -----	1
4507-14A	BUSH -----	2
4507-14B	SPACER -----	1
4507-16	END ASSY, POWER CYLINDER -----	1
4507-25	BRACKET SUB-ASSY, RESERVOIR -----	1
4507-26	JOINT SUB-ASSY, POWER STEERING PUMP OUTLET -----	1
4507-27	JOINT SUB-ASSY, POWER STEERING PUMP INLET -----	1
4507-33	PIPE SUB-ASSY (STEERING TO RESERVOIR) -----	1
4507-40	ROD, DRAG LINK, NO.1 -----	1
4507-40A	PLUG (FOR DRAG LINK ROD) -----	1
4507-40B	SPACER, DRAG LINK BALL SEAT -----	1
4507-40C	SPRING, DRAG LINK -----	1
4507-40D	SEAT (FOR DRAG LINK ROD) -----	2
4507-41	ARM, PITMAN -----	1
4507-44	END, POWER CYLINDER -----	1
4507-48	ROD, DRAG LINK, NO.2 -----	1
4507-53	HOSE, HIGH PRESSURE -----	1
4507-54	HOSE, HIGH PRESSURE -----	1
4507-55	HOSE, LOW PRESSURE -----	1
4507-56	HOSE, HIGH PRESSURE -----	1
4507-64	PIPE SUB-ASSY, POWER STEERING GFAR INLET -----	1
4507-AA	CLAMP, END -----	2
4507-AC	CLAMP, END -----	2
4507-AD	BOLT -----	4
4507-AE	BRACKET SUB-ASSY, POWER CYLINDER -----	1
4507-AH	SEAT, BALL STUD -----	2
4507-A1	SEAT, BALL STUD -----	1
4507-AJ	SPRING -----	1
4507-AK	PLUG -----	1
4507-AR	HOSE -----	1
4507-AS	FITTING -----	1
4507-BU	NUT -----	1
4507-B1	WASHER -----	1
4507-BK	PLATE -----	1
4507-BN	HOSE, HIGH PRESSURE -----	1
4507-B0	HOSE, HIGH PRESSURE -----	1
4507-CN	CLAMP -----	1
4507-CO	CLAMP, HOSE -----	2
4507-CP	CLAMP, HOSE -----	2
4507-CS	SEAL, DRAG LINK DUST -----	1
4507-DK	PIPE SUB-ASSY, POWER STEERING -----	1
4507-DL	PIPE SUB-ASSY, POWER STEERING -----	1
4507-ED	SEAT, JOINT -----	1
4507-E1	SPACER, DRAG LINK BALL SEAT -----	1
4507-E3	BOLT, UNION -----	1
4507-EK	GASKET -----	1
4507-EL	BOLT, UNION -----	1
4507-EM	GASKET -----	1


(ATH) (22)

G7D7

FIG. 4508
STEERING POWER CYLINDER

4508

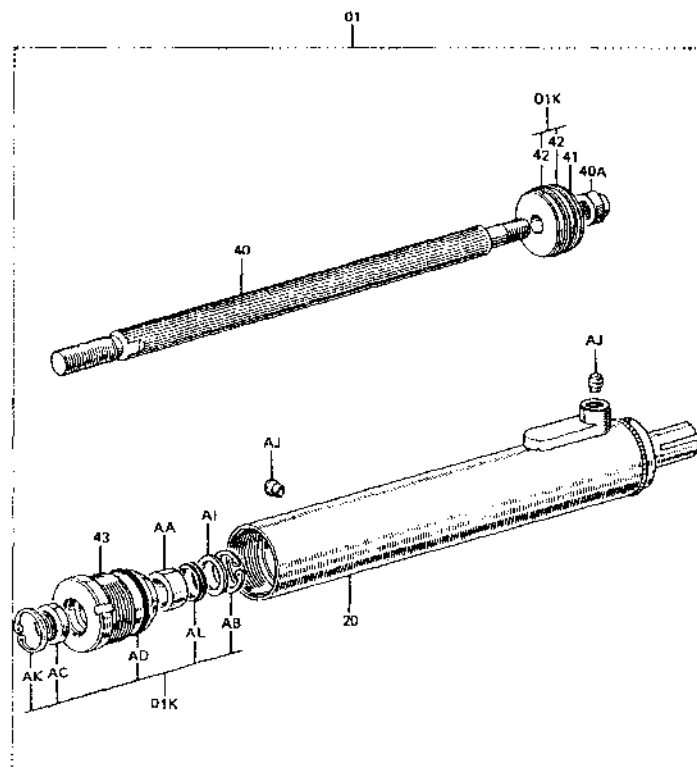 ATM




PART NAME CODE	PART NAME	QTY
4508-01	CYLINDER ASSY, POWER	1
4508-01K	PACKING KIT, POWER CYLINDER	1
4508-20	CYLINDER SUB-ASSY, POWER	1
4508-40	ROD, PISTON	1
4508-40A	NUT, SELF LOCK (FOR PISTON)	1
4508-41	PISTON	1
4508-42	RING, PISTON	2
4508-43	GUIDE, ROD	1
4508-AA	BUSHING	4
4508-AB	RING, SNAP	1
4508-AC	SEAL, DUST	1
4508-AD	RING, O	1
4508-AI	COLLAR, REAR COVER	1
4508-AJ	SEAL	2
4508-AK	RING, SNAP	1
4508-AL	PACKING, U	1

(ATM) () ()

G/17

4511

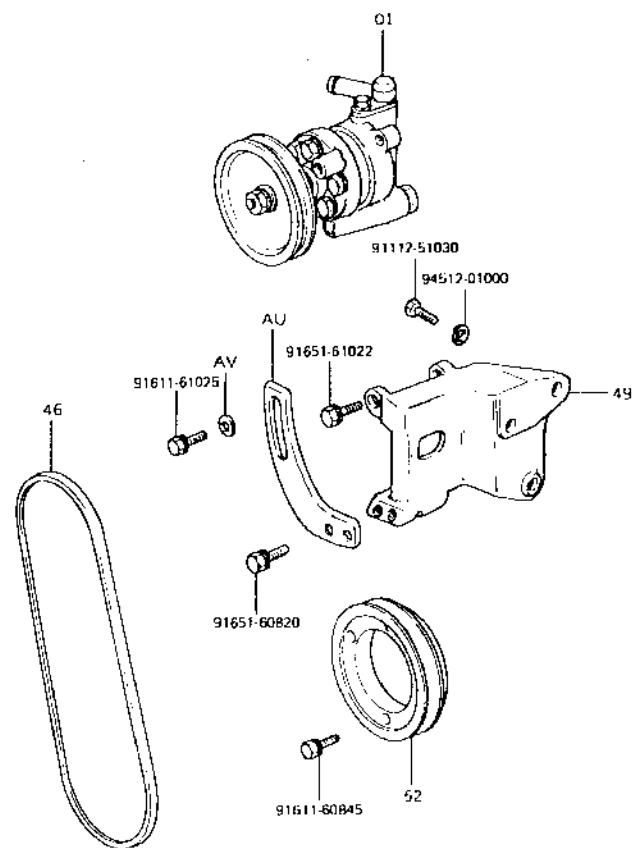 2F • ATM




4511 004

FIG-4511
STEERING VANE PUMP

4511

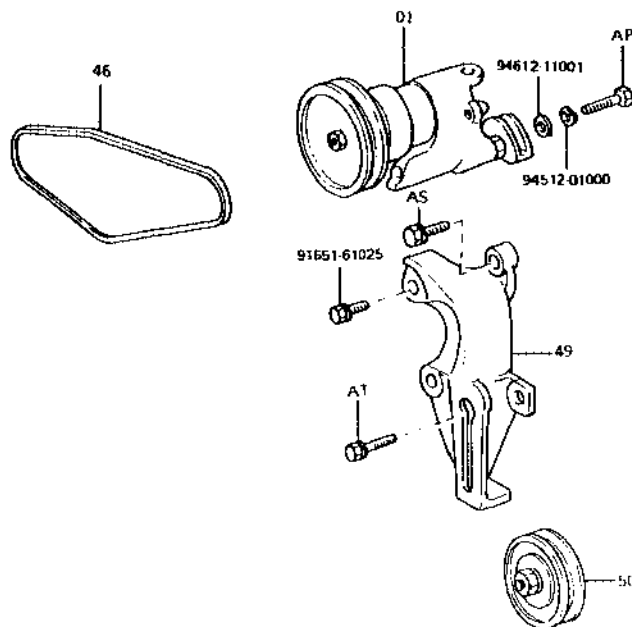 2H--ATH




PART NAME CODE	PART NAME	QTY
4511-01	PUMP ASSY, VANE	1
4511-46	BELT, V	1
4511-49	BRACKET, PUMP	1
4511-50	PULLEY, POWER STEERING IDLE	1
4511-50A	SHAFT, POWER STEERING IDLE PULLEY	1
4511-50B	BEARING	2
4511-50C	SPACER	1
4511-52	PULLEY, CRANK POWER STEERING	1
4511-53	BELT, V	1
4511-AJ	RING, SNAP	1
4511-AP	BOLT, HEXAGON	1
4511-AS	BOLT	1
4511-AT	BOLT	1
4511-AU	STRUT, ADJUSTING	1
4511-AV	PLATE, WASHER	1
4511-AW	BRACKET, POWER STEERING PULLEY	1
4511-AX	PLATE, CAUTION	1
4511-AY	COLLAR	1

(ATH) () ()

0707

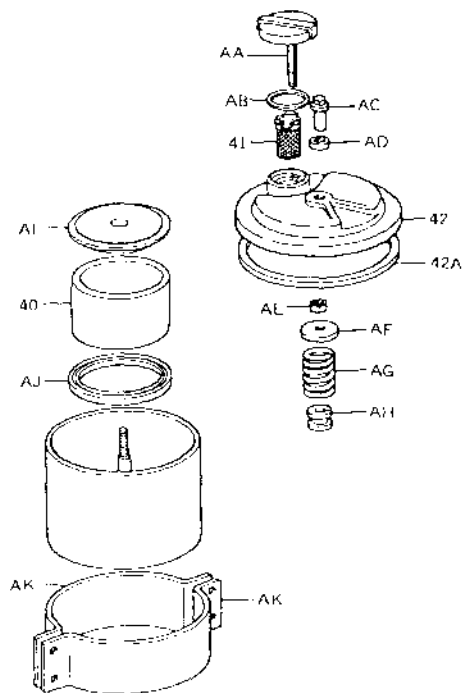 4513



421 J 201


PART NAME CODE	PART NAME	QTY
4513-01	RESERVOIR ASSY, OIL	1
4513-02	FILTER	1
4513-41	STRAINER, OIL	1
4513-42	COVER SUB-ASSY	1
4513-42A	SEAL, DUST	1
4513-AB	CAP SUB-ASSY, RESERVOIR	1
4513-AB	RING, O	1
4513-AC	NUT	1
4513-AD	WASHER, SEAL	1
4513-AE	NO.1	1
4513-AE	SUPPORT, SPRING UPPER	1
4513-AG	SPRING, COMPRESSION	1
4513-AH	SEAL, FILTER COVER	1
4513-AI	COVER SUB-ASSY	1
4513-AJ	SEAL, OIL	1
4513-AK	BRACKET	2

141M	(1.25)	07.27
------	--------	-------

FIG. 4601
PARKING BRAKE

4601

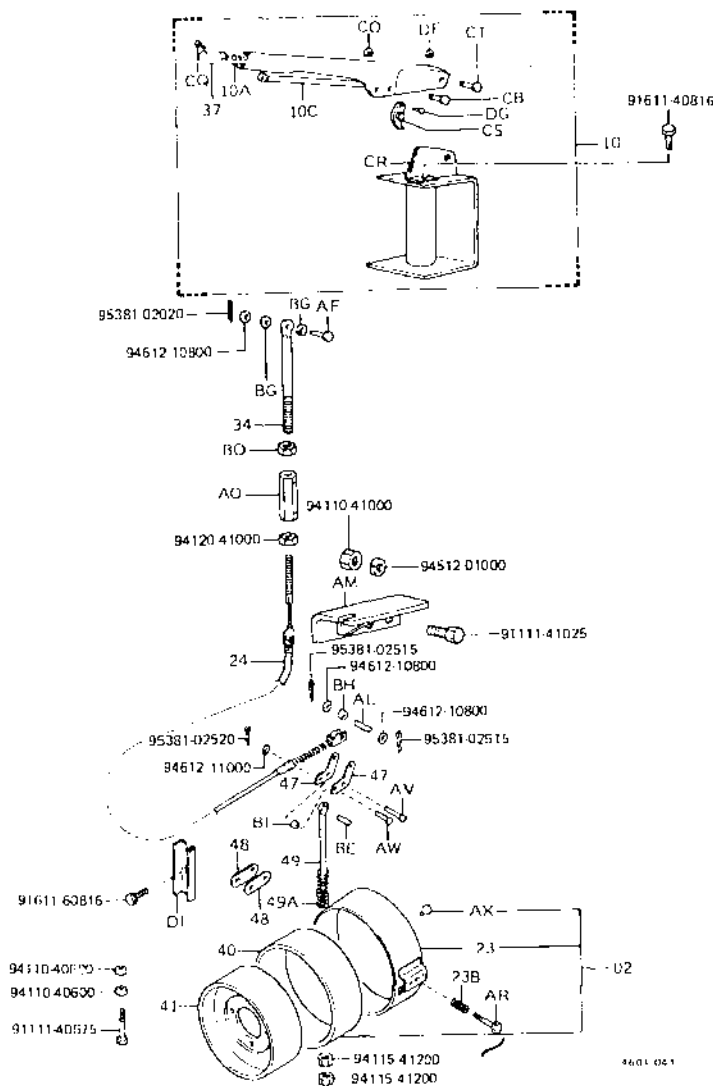 ATM




PART NAME CODE	PART NAME	QTY
4601-02	HANDLE ASSY, PARKING BRAKE	1
4601-10	SPRING, COMPRESSION	1
4601-100	ROD, HANDBRAKE LEVER	1
4601-23	BAND SUB-ASSY, PARKING BRAKE	1
4601-24	CABLE SUB-ASSY, PARKING BRAKE, NO.1	1
4601-41	DRUM, PARKING BRAKE	1
4601-47	CAM, PARKING BRAKE	2
4601-48	LINK, PARKING BRAKE CAM SUPPORT	2
4601-49	ROD, PARKING BRAKE CAM BAND END PULL	1
4601-49A	SPRING, COMPRESSION (FOR PULL ROD)	1
4601-AE	PIN, W/HOLE	1
4601-AL	PIN, W/HOLE	1
4601-AM	BRACKET, PARKING BRAKE	1
4601-AR	NUT, ADJUSTING	1
4601-AR	BOLT	1
4601-AV	PIN, W/HOLE	1
4601-AW	PIN, W/HOLE	1
4601-AX	RIVET	24
4601-BD	NUT, LOCK	1
4601-BE	PIN	1
4601-BG	SPACER, RUBBER	2
4601-BH	SPACER	1
4601-BI	SPACER	1
4601-C5	PIN	1
4601-C6	WASHER	1
4601-C7	RIVET	1
4601-C8	SECTOR, HANDBRAKE LEVER	1
4601-C9	KNOB SUB-ASSY	1
4601-CT	PIN	1
4601-DF	WASHER	1
4601-DG	RIVET	1
4601-DI	BRACKET, PARKING BRAKE WIRE	1

(ATM) (C6) G707

FIG. 4701
BRAKE PEDAL

4701

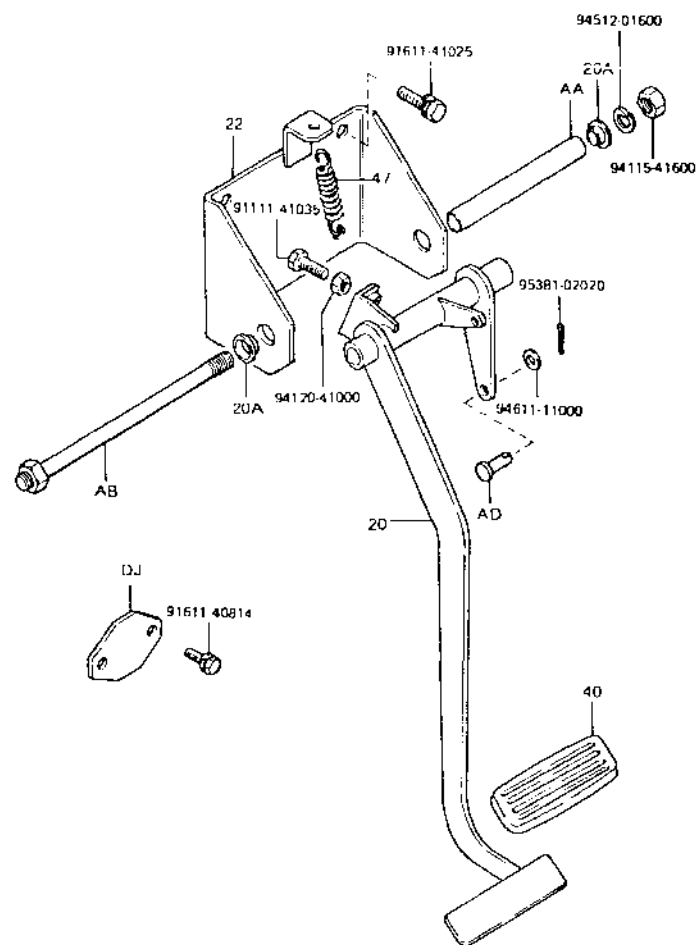 ATM



4701 057


PART NAME CODE	PART NAME	QTY
4701-20	PEDAL SUB-ASSY, BRAKE	1
4701-20A	BUSH (FOR BRAKE PEDAL)	2
4701-22	BRACKET SUB-ASSY, BRAKE PEDAL	1
4701-40	PAD, PEDAL	1
4701-47	SPRING, TENSION (FOR PEDAL RETURN)	1
4701-AA	SPACER	1
4701-AB	BOLT	1
4701-AD	PIN, W/HOLE	1
4701-DJ	COVER, HOLE	1

(ATM) (27) C707

FIG. 4702
BRAKE MASTER CYLINDER

4702

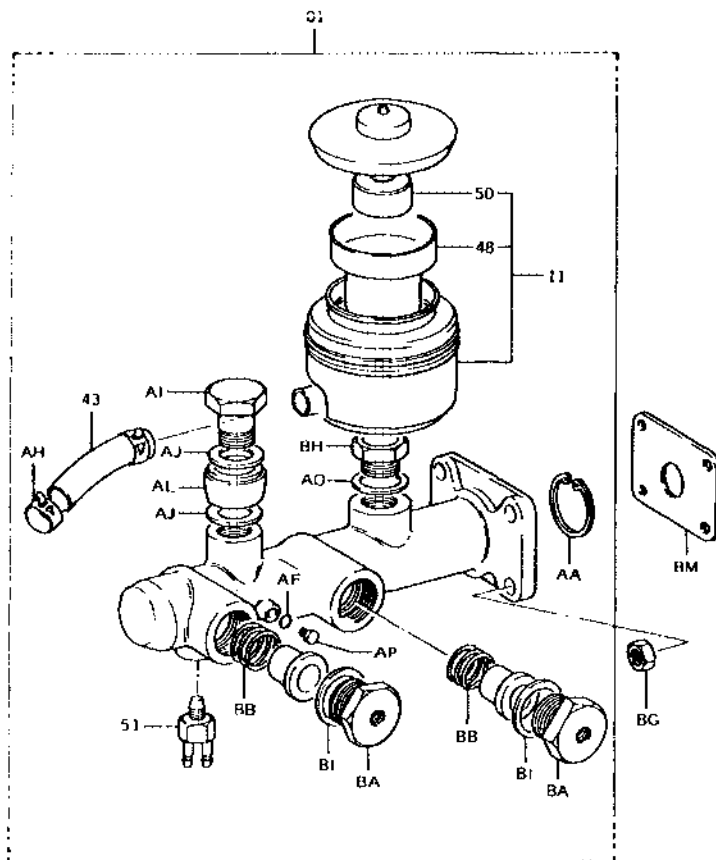 ATM



4702 D21


PART NAME CODE	PART NAME	QTY
4702-01	CYLINDER ASSY, MASTER	1
4702-11	RESERVOIR SET, MASTER CYLINDER	1
4702-43	HOSE, RESERVOIR	1
4702-48	STRAINER	1
4702-50	SWITCH ASSY, LEVEL WARNING W/CAP	1
4702-51	SWITCH ASSY, BRAKE WARNING	2
4702-AA	RING, HOLE SNAP	1
4702-AF	GASKET	1
4702-AH	CLIP	2
4702-AI	BOLT, UNION	1
4702-AJ	GASKET	2
4702-AL	UNION	1
4702-AO	WASHER	1
4702-AP	BOLT	1
4702-BA	PLUG	2
4702-BB	SPRING, COMPRESSION	2
4702-BG	NUT	4
4702-BH	BOLT, RESERVOIR SET	1
4702-BI	GASKET	2
4702-BM	GASKET	1

(ATM) (28) 6707

FIG. 4707
BRAKE BOOSTER

4707

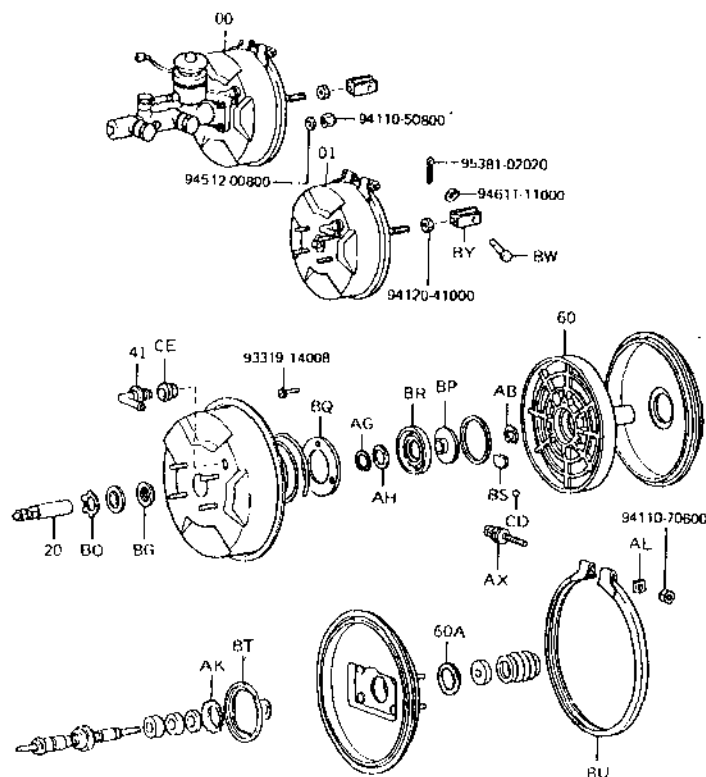 ATM





4707 000

PART NAME CODE	PART NAME	QTY
4707-00	CYLINDER ASSY, BRAKE MASTER, W/BOOSTER	1
4707-01	BOOSTER ASSY, BRAKE	1
4707-70	ROD SUB-ASSY, BOOSTER PUSH	1
4707-41	VALVE, BOOSTER VACUUM	1
4707-60	PISTON, BOOSTER	1
4707-60A	BEARING, BOOSTER PISTON	1
4707-AB	RING, SNAP	1
4707-AC	RING, SNAP	1
4707-AH	WASHER	1
4707-AK	RING	1
4707-AL	NUT	1
4707-AX	SCREW	1
4707-BQ	RETAINER, BOOSTER SEAL	1
4707-BU	RING, CIRCULAR INTERNAL	1
4707-BP	PLATE, REACTION	1
4707-BQ	RETAINER, REACTION NO.2	1
4707-BR	RETAINER, REACTION NO.1	1
4707-BS	LEVER, REACTION	3
4707-BT	RETAINER, DIAPHRAGM	1
4707-BU	BAND	1
4707-BW	PIN, W/HOLE	1
4707-BY	CLEVIS	1
4707-CD	ROLLER	5
4707-CE	GROMMET	1

(ATM) (1/2) 6707

4714

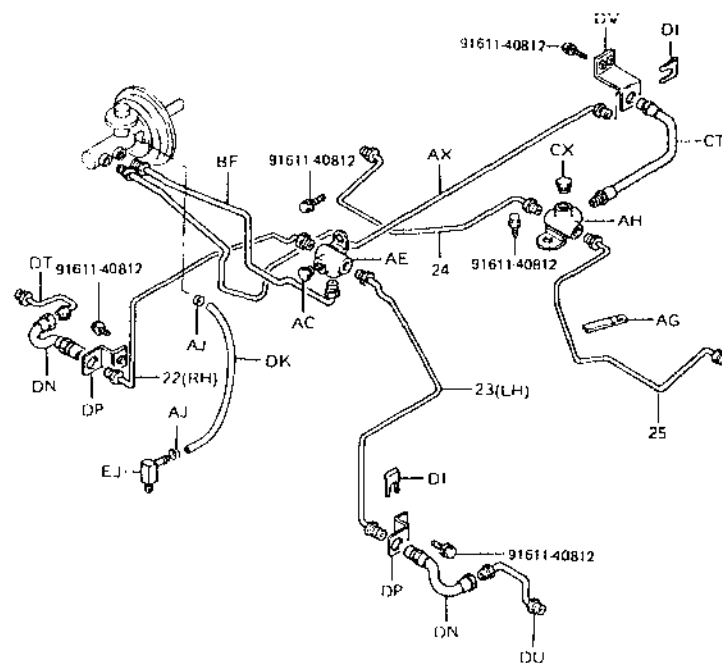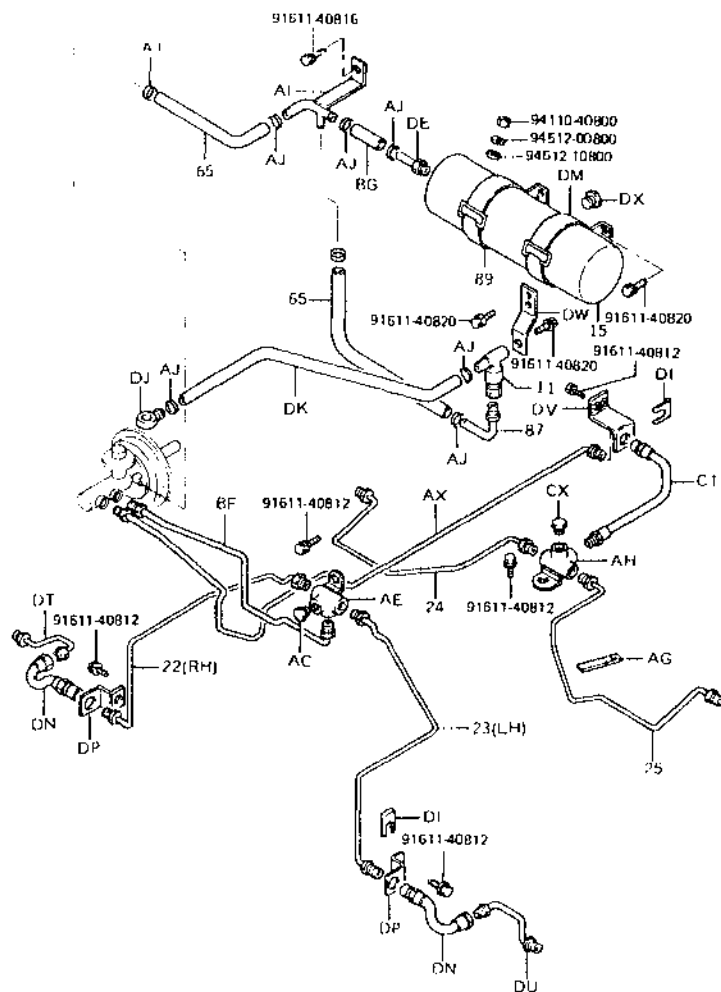  2F. • ATM



4714-003

474 (24)

4714

PART NAME CODE	PART NAME	QTY
4714-11	VALVE ASSY, VACUUM CHECK -----	1
4714-12	RESERVOIR SUB-ASSY, VACUUM -----	1
4714-22	PIPE SUB-ASSY, BRAKE, RH NO.1 -----	1
4714-23	PIPE SUB-ASSY, BRAKE, LH NO.1 -----	1
4714-24	PIPE SUB-ASSY, BRAKE, RH NO.2 -----	1
4714-25	PIPE SUB-ASSY, BRAKE, LH NO.2 -----	1
4714-65	HOSE (RESERVOIR TO BOOSTER) -----	2
4714-87	TUBE SUB-ASSY, CONNECTOR -----	1
4714-89	BAND SUB-ASSY, CLAMP -----	2
4714-AC	PLUG -----	1
4714-AE	3-WAY SUB-ASSY -----	1
4714-AG	CLAMP -----	2
4714-AH	3-WAY SUB-ASSY, NO.1 -----	1
4714-AL	3-WAY SUB-ASSY, NO.2 -----	1
4714-AJ	CLAMP -----	2- 8
4714-AX	PIPE SUB-ASSY, REAR BRAKE -----	1
4714-BF	PIPE SUB-ASSY, FRONT BRAKE, NO.2 -----	1
4714-BG	HOSE -----	1
4714-CI	HOSE -----	1
4714-CX	PLUG -----	1
4714-DE	TUBE, CHECK VALVE TO CONNECTOR -----	1
4714-DI	CLIP -----	3
4714-DC	TUBE, VACUUM PUMP TO CONNECTOR -----	1
4714-DK	HOSE -----	1
4714-DM	BAND, VACUUM TANK CLAMP -----	2
4714-DN	HOSE, FLEXIBLE -----	2
4714-DP	BRACKET, FLEXIBLE HOSE -----	2
4714-DT	TUBE, RH -----	1
4714-DL	TUBE, LH -----	1
4714-DV	BRACKET -----	1
4714-DW	BRACKET, CHECK VALVE -----	1
4714-DX	PLUG -----	1
4714-EJ	ELBOW -----	1


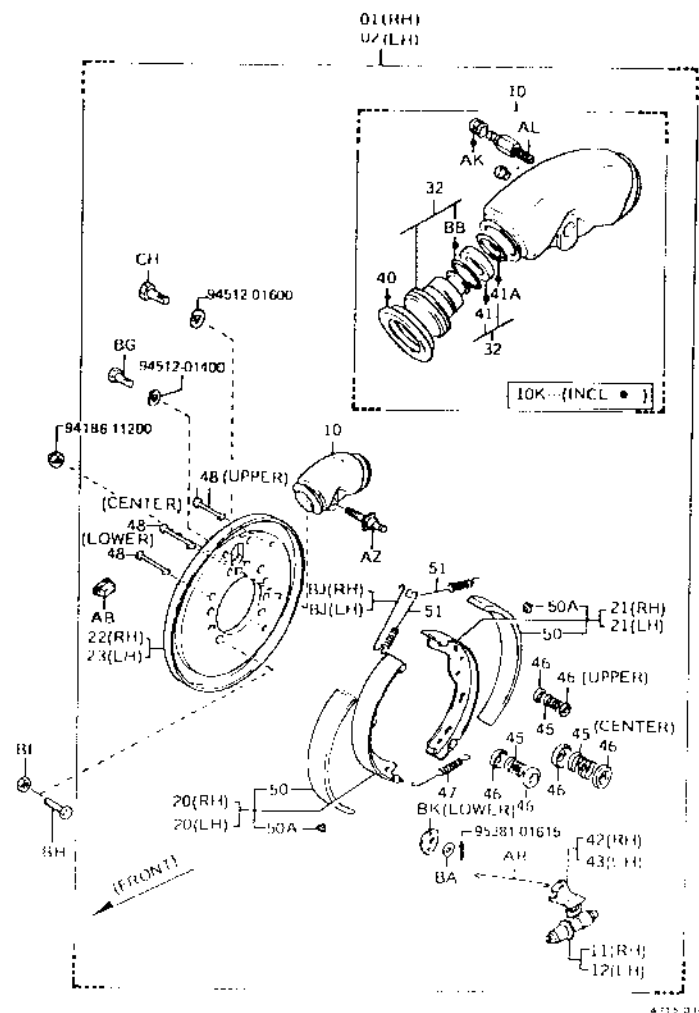 
(AFM) (SU) G707

FIG. 4715
DRUM BRAKE

4715

ATM (FRONT) 11/21

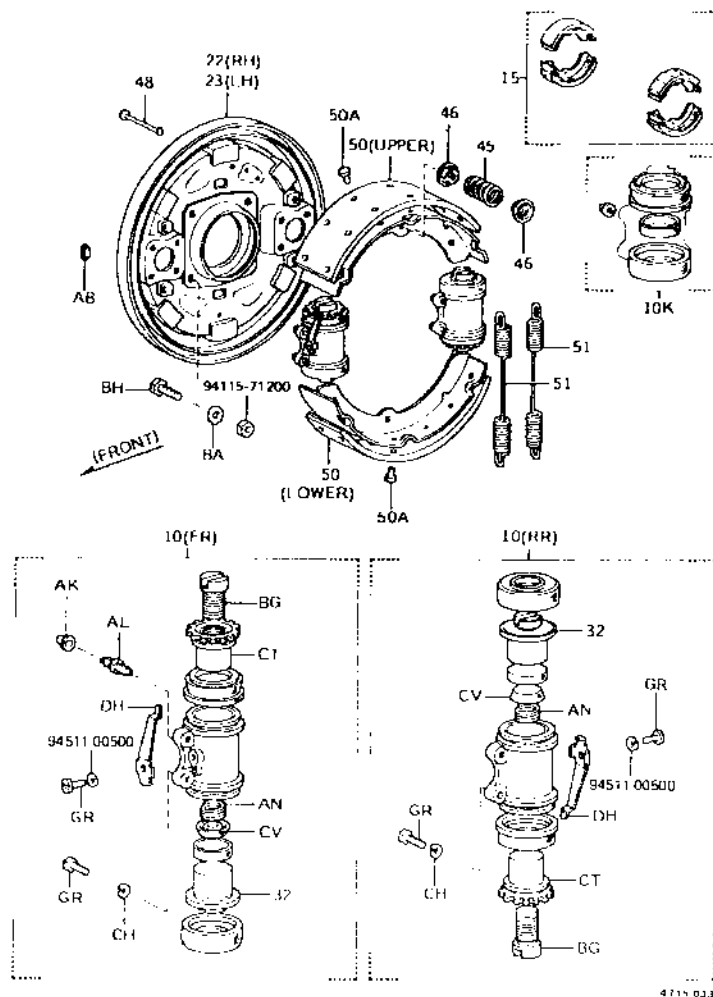 ATM (REAR) 12/21




4715

PART NAME CODE	PART NAME	QTY
4715-01	BRAKE ASSY, RH	1
4715-02	BRAKE ASSY, LH	1
4715-10	CYLINDER ASSY, WHEEL	1
4715-10K	CYLINDER O/H KIT, WHEEL	2
4715-11	SCREW ASSY, ADJUSTING, RH	1
4715-12	SCREW ASSY, ADJUSTING, LH	1
4715-15	SHOE SET, BRAKE	1
4715-20	SHOE SUB-ASSY (FOR FRONT OR UPPER)	1
4715-21	SHOE SUB-ASSY (FOR REAR OR LOWER)	1
4715-22	PLATE SUB-ASSY, BACKING, RH	1
4715-23	PLATE SUB-ASSY, BACKING, LH	1
4715-32	PISTON SUB-ASSY, WHEEL CYLINDER	4
4715-40	BOOT, WHEEL CYLINDER	4
4715-41	CUP, WHEEL CYLINDER PISTON	4
4715-41A	RING, BACK UP (FOR CYLINDER PISTON CUP)	4
4715-42	LEVER, AUTOMATIC ADJUSTMENT, RH	1
4715-43	LEVER, AUTOMATIC ADJUSTMENT, LH	1
4715-45	SPRING, SHOE HOLD DOWN	4
4715-46	CUP, SHOE HOLD DOWN	8
4715-47	SPRING, ADJUSTER	2
4715-48	PIN, SHOE HOLD DOWN	4
4715-50	LINING, BRAKE	2
4715-50A	RIVET, BRAKE LINING	48
4715-51	SPRING, ANCHOR TO SHOE	2
4715-AB	COVER, HOLE	2
4715-AK	CAP, BLEEDER SCREW	2
4715-AL	SCREW, BLEEDER	2
4715-AN	SPRING, WHEEL CYLINDER	4
4715-AR	LINK	2
4715-AZ	BOLT, SHOE RETURN SPRING	2
4715-BA	WASHER	2
4715-BB	RING, O	4
4715-BG	BOLT	2
4715-BH	BOLT, BRAKE SET	8
4715-BJ	LINK, AUTOMATIC ADJUSTER, UPPER	1
4715-BK	LEVER, AUTOMATIC ADJUSTER	2
4715-CH	BOLT	2
4715-CI	NUT	2
4715-CV	SEAL, SPRING	4
4715-DH	SPRING	4
4715-GR	SCREW	4

4801

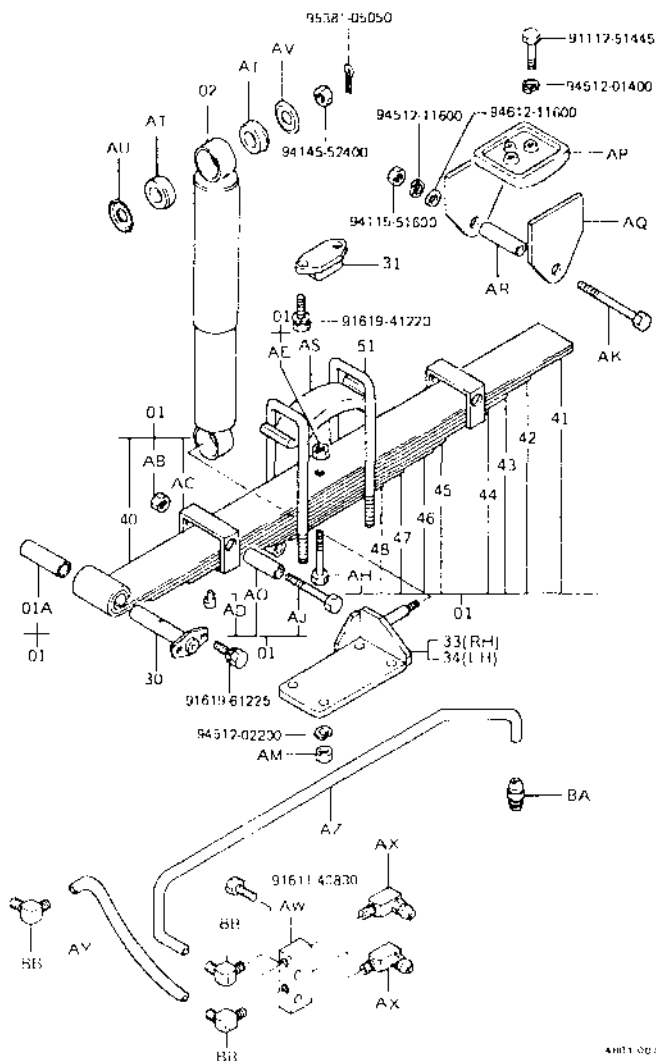 ATM [REAR] (2/7)



4 RC' 036

4m? 1 2g 2

4801


PART NAME CODE	PART NAME	QTY
4801-01	SPRING ASSY, REAR	2
4801-01A	BUSH, REAR SPRING	2
4801-02	ABSORBER ASSY, SHOCK	2
4801-03	SPRING ASSY, FRONT	2
4801-03A	BUSH, FRONT SPRING	17
4801-04	PIN SUB-ASSY, SPRING BRACKET	2
4801-05	RUBBER SUB-ASSY, SPRING BUMPER	2
4801-07	SHACKLE SUB-ASSY, SPRING	2
4801-13	PLATE SUB-ASSY, REAR SPRING LOWER, RH	1
4801-14	PLATE SUB-ASSY, REAR SPRING LOWER, LH	1
4801-40	SPRING, LEAF, NO.1	2
4801-41	SPRING, LEAF, NO.2	2
4801-42	SPRING, LEAF, NO.3	2
4801-43	SPRING, LEAF, NO.4	2
4801-44	SPRING, LEAF, NO.5	2
4801-45	SPRING, LEAF, NO.6	2
4801-46	SPRING, LEAF, NO.7	2
4801-47	SPRING, LEAF, NO.8	2
4801-48	SPRING, LEAF, NO.9	2
4801-50	PLATE, SPRING SHACKLE INNER	2
4801-51	BOLT, REAR SPRING U	4
4801-AA	BOLT, CENTER	2
4801-AB	NUT	4
4801-AC	CLIP	4
4801-AD	RIVET	4
4801-AE	NUT	2
4801-AF	BOLT	2
4801-AG	BOLT	4
4801-AH	BOLT	2
4801-AI	CLIP	4
4801-AM	NUT	8
4801-AN	SEAT, FRONT SPRING LIP	2
4801-AP	PIPE, CLIP	4
4801-AQ	SEAT, CONTACT	2
4801-AR	PLATE, CONTACT	4
4801-AS	COLLAR	2
4801-AT	CLIP, SPRING SPR	2
4801-AU	RUBBER	8
4801-AV	WASHER, EYE	4
4801-AW	WASHER, EYE	4
4801-AX	BLOCK, GREASE	2
4801-AY	FITTING, GREASE	4
4801-AZ	RUBBER, BUSHING	2
4801-AZ	TUBE, GREASE	2

(414) (52) 6707

FIG. 5101
FRAME & WEIGHT

5101

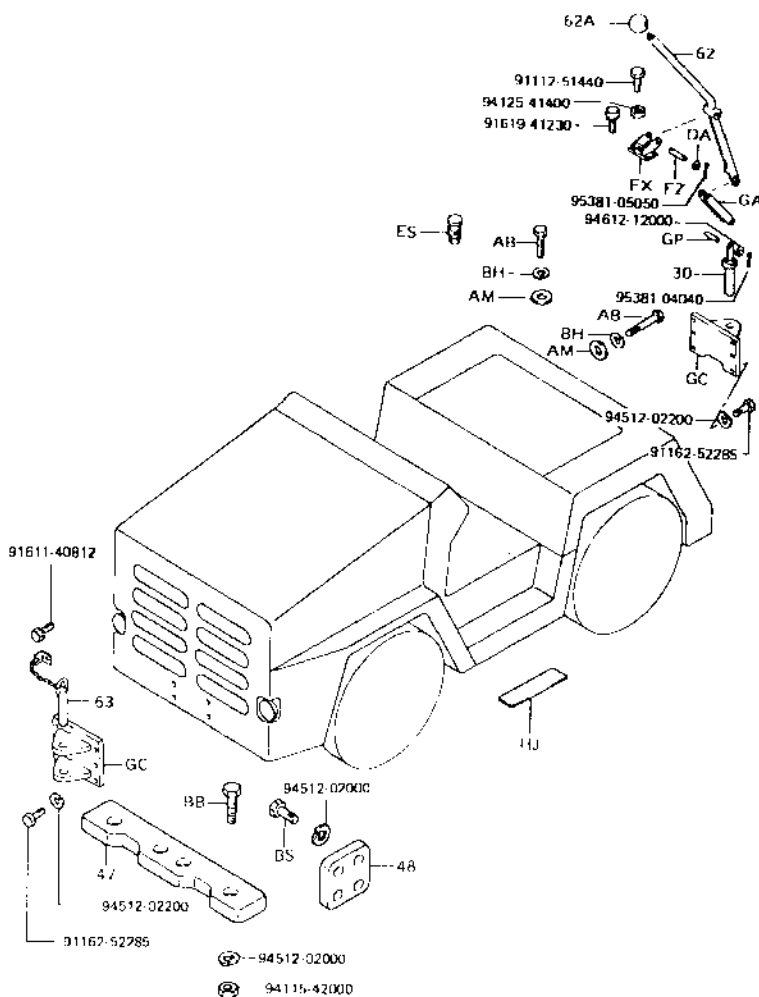 ATM



PART NAME CODE	PART NAME	QTY
5101-30	DRAW-BAR SUB-ASSY	1
5101-47	WEIGHT SUB-ASSY, NO.1	1
5101-48	WEIGHT SUB-ASSY, NO.2	2
5101-62	FLYER SUB-ASSY, DRAW-BAR	1
5101-62A	KNUG (FOR DRAW-BAR FLYER)	1
5101-63	DRAW-BAR SUB-ASSY	1
5101-AB	BOLT	4
5101-AM	WASHER, PLATE	4
5101-BH	BOLT	4
5101-BH	WASHER, SPRING	4
5101-B5	BOLT	8
5101-BW	BOLT	12
5101-DA	WASHER	2
5101-ES	PLUG	2
5101-F1	SHIM	99
5101-FX	BRACKET SUB-ASSY, DRAW-BAR LEVER	1
5101-FZ	PIN	1
5101-GA	LINK, DRAW-BAR	2
5101-GC	BRACKET SUB-ASSY, DRAW-BAR	1
5101-GP	PIN	2
5101-HJ	SAFETY WALK	2

(ATM) (55) 0707

5201

[illegible]

PART NAME CODE	PART NAME	QTY
5201-20	HOOD SUB-ASSY, ENGINE (OR BATTERY) -----	1
5201-30	HINGE SUB-ASSY, ENGINE (OR BATTERY) HOOD ---	2
5201-33	STAY SUB-ASSY, ENGINE (OR BATTERY) HOOD ----	2
5201-40	RUBBER, CUSHION (FOR HOOD) -----	4
5201-AK	GROMMET, NO.1 -----	1
5201-AP	FASTENER SUB-ASSY, HOOD -----	4
5201-CW	SUPPORT, HOOD STAY -----	2
5201-DW	BRACKET, ENGINE HOOD -----	1
5201-FP	BUSH -----	8
5201-HZ	SUPPORTER SUB-ASSY, ENGINE HOOD -----	1
5201-1A	HINGE SUB-ASSY, HOOD -----	4
5201-1B	PIN, HINGE -----	4


(0.4) (34) 6.17

FIG. 5301
INSTRUMENT PANEL & FLOOR




5301

ATM

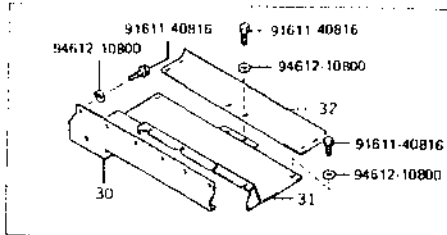 
2H, 2F ATM



2D, ATM

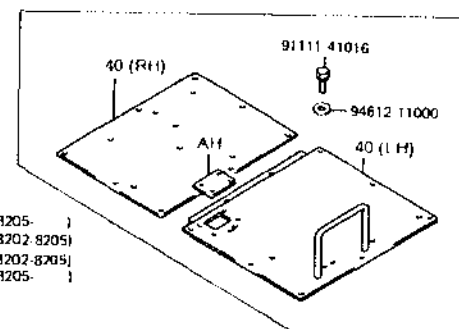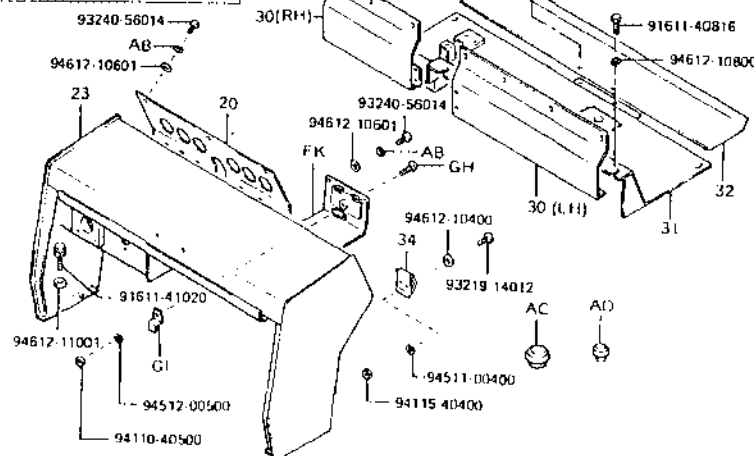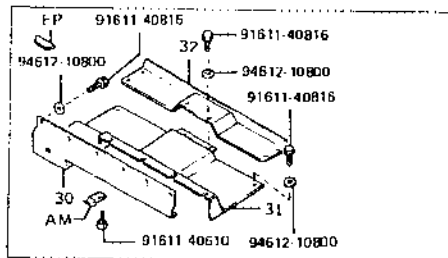   

(SUN SHADE, CANVAS CABIN, FRONT GLASS)

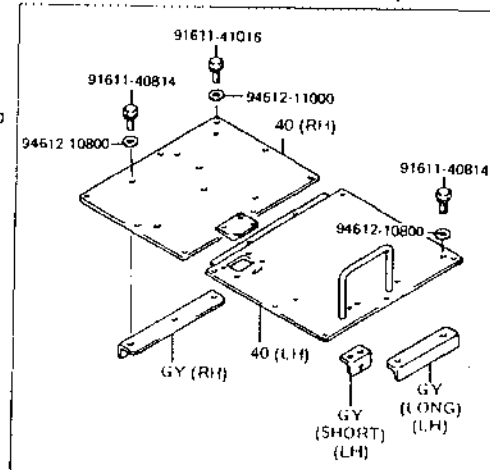 

5301 070

5301

PART NAME CODE	PART NAME	QTY
5301-21	PANEL SUB-ASSY, INSTRUMENT	1
5301-23	PROTECTOR SUB-ASSY, FR	1
5301-30	TOL-BDARD SUB-ASSY, NO.1	1
5301-31	TOL-BDARD SUB-ASSY, NO.2	1
5301-32	TOL-BDARD SUB-ASSY, NO.3	1
5301-34	CLAMP SUB-ASSY, PAPER	1
5301-40	STAND, SEAT	1
5301-AB	WASHER, WAVL	9
5301-AC	PLUG	1
5301-AD	PLUG	2
5301-AH	COVER	1
5301-AM	SPRING	1
5301-LP	PLATE, RUBBER	1
5301-FK	POCKET SUB-ASSY	1
5301-GH	KNOB, SIDE DOOR	1
5301-GI	CATCH, SIDE DOOR	1
5301-GY	BRACKET, CABIN	1

(ATM) (55) G707

FIG. 5308
DRIVER SEAT

5308

ATM

ATM


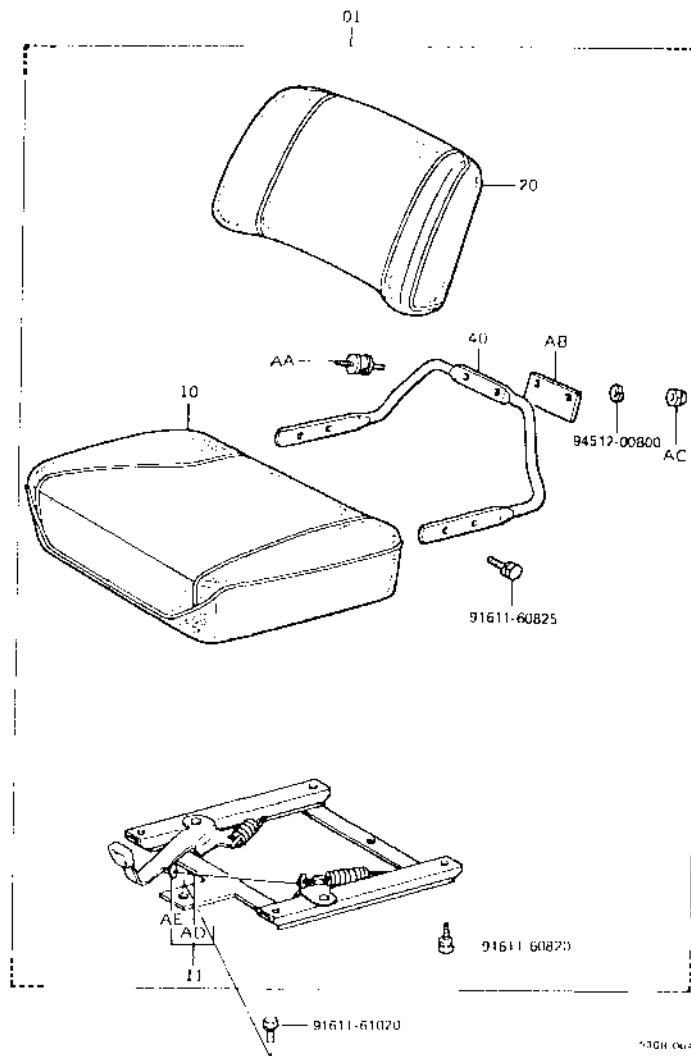 
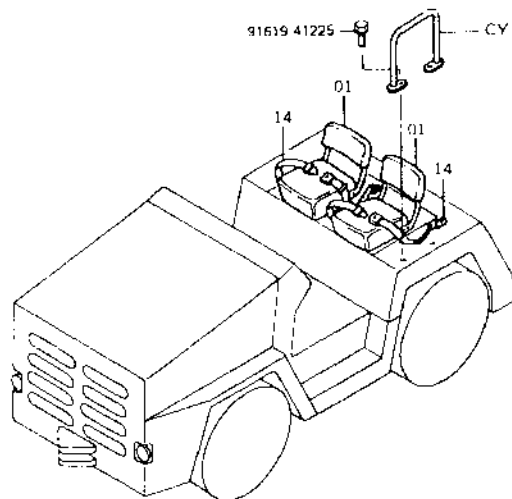 
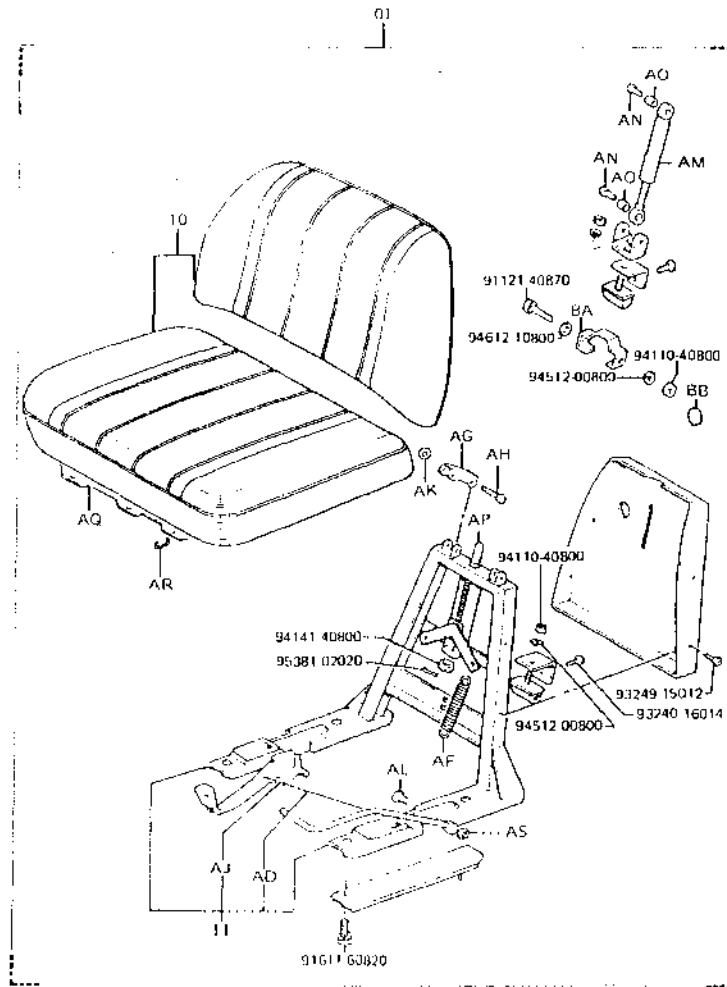 


FIG. 5308
DRIVER SEAT

ATM (SUSPENSION)

5308

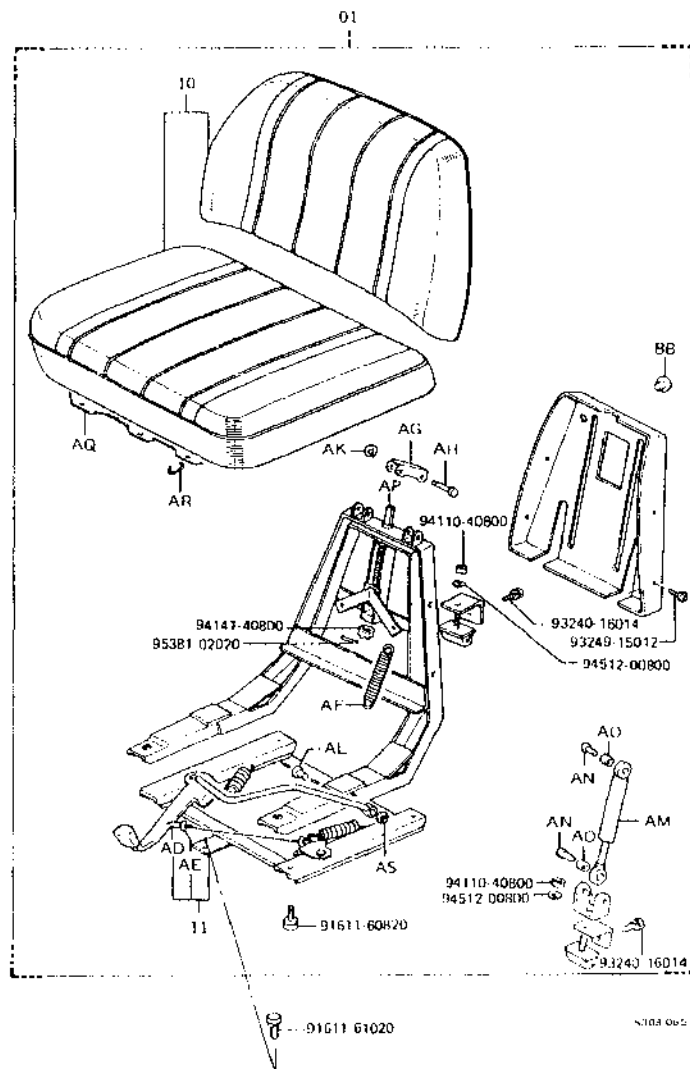 ATM (HI-DELUXE)



5308


PART NAME CODE	PART NAME	QTY
5308-01	SEAT ASSY -----	2
5308-10	CUSHION ASSY -----	2
5308-11	TRACK ASSY -----	2
5308-14	HARNES ASSY, FRONT SEAT -----	2
5308-20	SEAT SUB-ASSY, BACK -----	2
5308-40	FRAME, BACK SEAT -----	2
5308-AA	RUBBER, VIBRATION ISOLATOR -----	4
5308-AB	BRACKET, NUMBER PLATE -----	2
5308-AD	WIRE -----	2
5308-AE	WASHER -----	4
5308-AF	SPRING, TENSION, BACK SEAT -----	4
5308-AG	LINK -----	4
5308-AH	PIN -----	8
5308-AK	E-RING -----	8
5308-AL	PIN, NO.2 -----	4
5308-AM	SHOCK ABSORBER -----	2
5308-AN	PIN, NO.3 -----	4
5308-RO	BUSHING -----	4
5308-AP	ADJUSTER, ROD -----	2
5308-AQ	RUBBER, SEAT CUSHION -----	2
5308-AR	HOOK, SEAT CUSHION -----	20
5308-AS	RING, L -----	4
5308-AV	PIN -----	4
5308-BA	SPACER -----	2
5308-BB	CUSHION -----	4

(RPM) (50) 6747

FIG. 5401
HEAD GUARD & ACCESSORY

5401

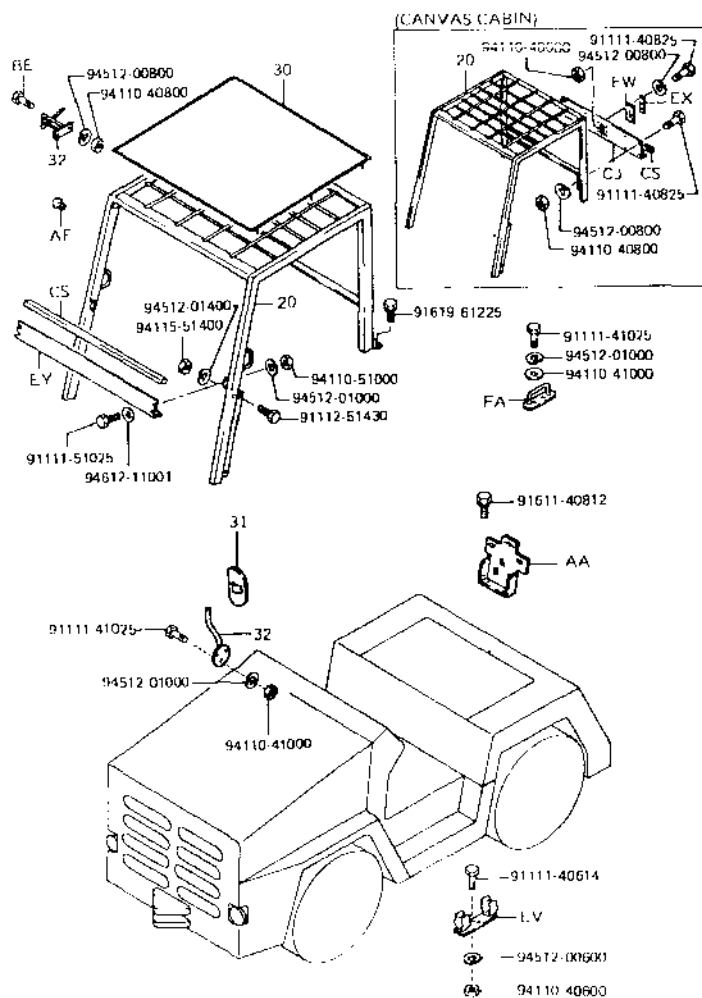 ATH



5401 ORB


PART NAME CODE	PART NAME	QTY
5401-20	GLARE SUB-ASSY, REAR	1
5401-30	SHIELD SUB-ASSY, HEAD GUARD	1
5401-31	MIRROR SUB-ASSY, BACK	2
5401-32	BRACKET SUB-ASSY, BACK MIRROR	1
5401-AA	BRACKET SUB-ASSY, LICENCE PLATE	1
5401-AF	GROMMET	1
5401-BE	BOLT	4
5401-CJ	PLATE, REAR	1
5401-CS	RUBBER	1
5401-EV	CASE SUB-ASSY	1
5401-FW	LIP	1
5401-FX	PLATE, LIP	2
5401-FY	PLATE, FRONT	1
5401-EZ	RUBBER	1
5401-FA	HANDRAIL SUB-ASSY	2

(ATH) (37) 5707

FIG. 5405
INDICATOR PLATE

5405

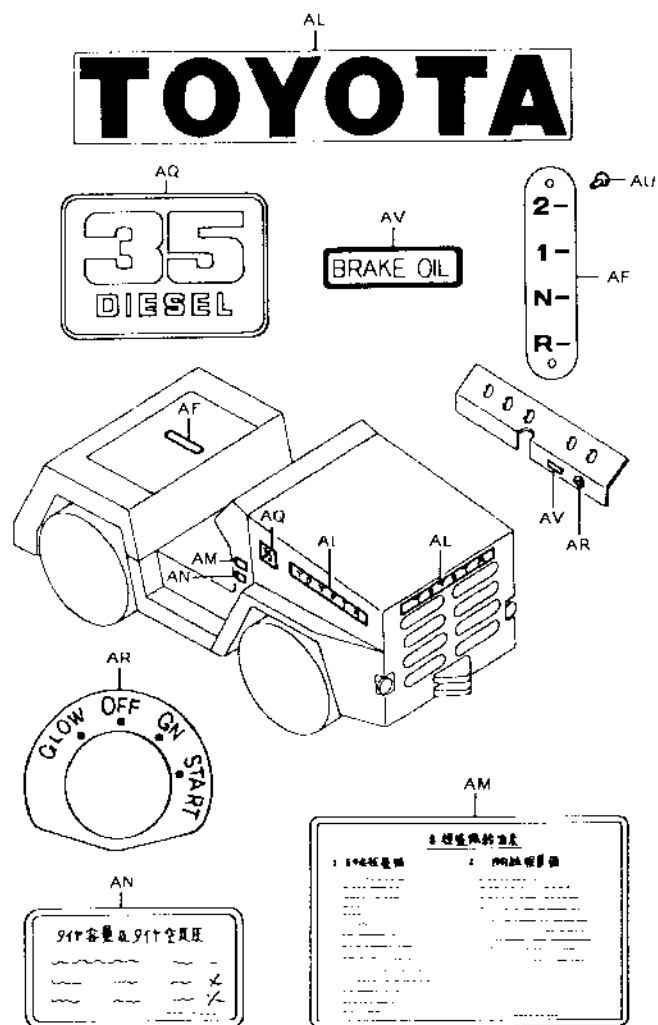 ATM



5405 118

PART NAME CODE	PART NAME	QTY
5405-AF	PLATE, SHIFT LEVER INDICATOR	1
5405-AU	FUEL MARK	1
5405-AM	PLATE, SERVICE INDICATOR	1
5405-AN	PLATE, INDICATOR	1
5405-AQ	PLATE, CAPACITY INDICATOR	2
5405-AR	PLATE, CAUTION	1
5405-AJ	RIVET	2
5405-AV	PLATE, ACCUMULATOR INDICATOR	1


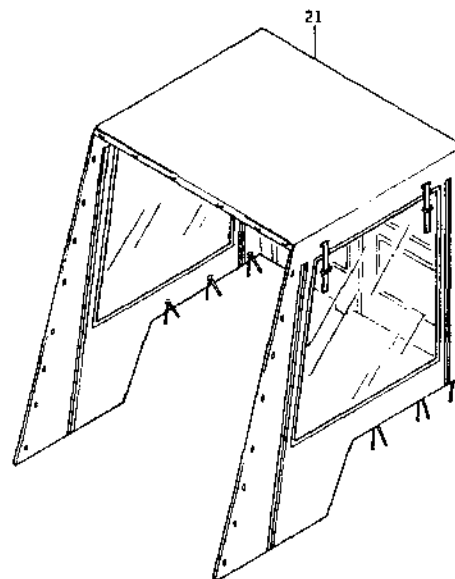 
(ATM) (:8) 3707

FIG. 5502
CANVAS CABIN & FRONT GLASS

5502

ATM (SUN SHADE--FRONT GLASS)

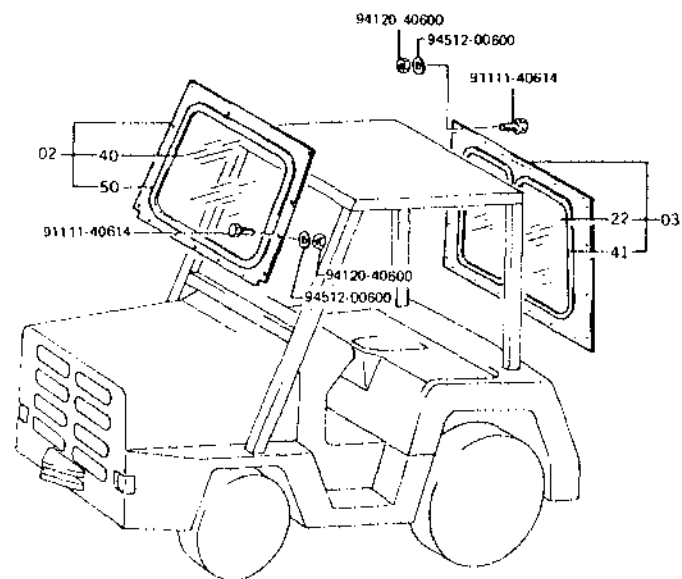 ATM (SUN SHADE--CANVAS CABIN)



5502-016

5502-017

5502


PART NAME CODE	PART NAME	QTY
5502-02	PANEL ASSY, FRONT GLASS -----	1
5502-03	PANEL ASSY, REAR GLASS -----	1
5502-21	CAB SUB-ASSY, CANVAS -----	1
5502-40	GLASS, WINDSHIELD -----	1
5502-41	GLASS, WINDSHIELD REAR -----	1
5502-50	WEATHER STRIP -----	1
5502-51	WEATHER STRIP, REAR GLASS -----	1
5502-AB	SEAL, RUBBER -----	1
5502-AC	GROMMET -----	2
5502-AD	COVER -----	1
5502-AT	BRACKET SUB-ASSY, CANVAS CAB -----	4

(ATM) () () 0707

FIG. 5601
WIRING & CLAMP

5601

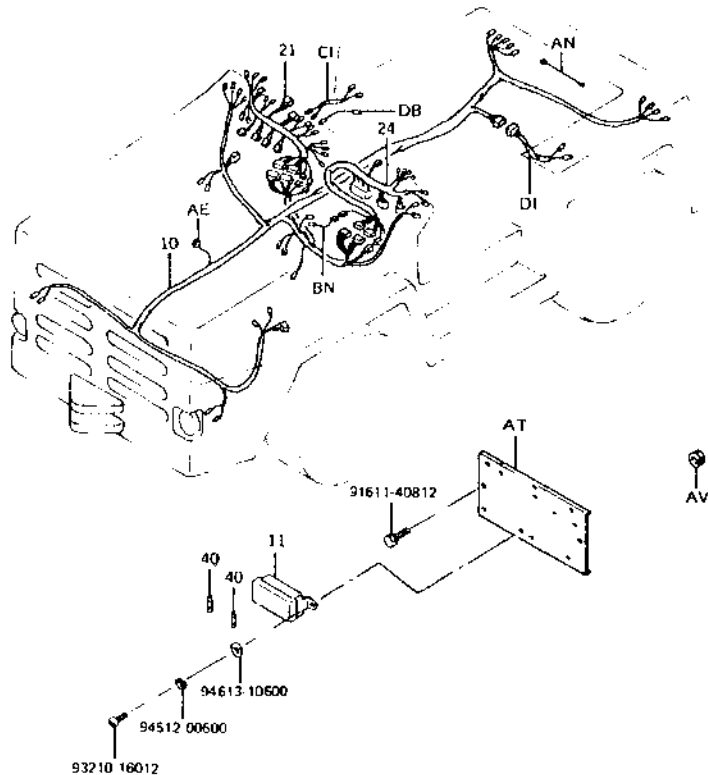 ATM













PART NAME CODE	PART NAME	QTY
5601-10	HARNESS ASSY, WIRING	1
5601-11	BLOCK ASSY, FUSE	1
5601-21	HARNESS SUB-ASSY, PANEL	1
5601-24	HARNESS SUB-ASSY, ELECTRICAL PARTS	1
5601-40	FUSE	1
5601-AE	HARNESS ASSY, WIRE	1
5601-AN	CORD, WORKING LAMP	1
5601-AT	PLATE SUB-ASSY	1
5601-AV	GROMMET	2
5601-BN	FUSIBLE, LINK	1
5601-C1	HARNESS SUB-ASSY, AMMETER	1
5601-DB	HARNESS, DIODE	1

(ATM) (40) G707

FIG. 5611
LAMP

5611

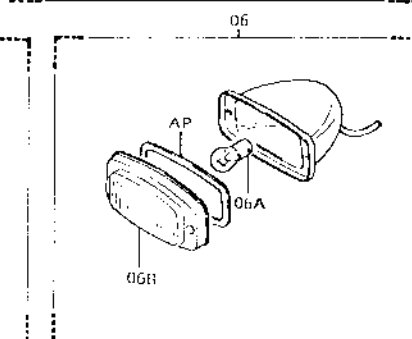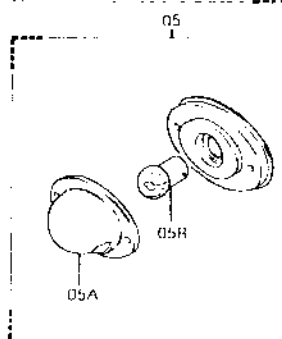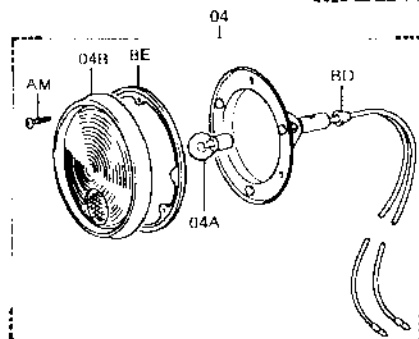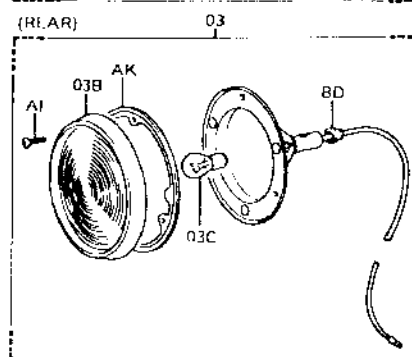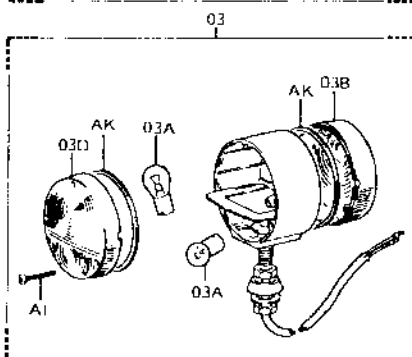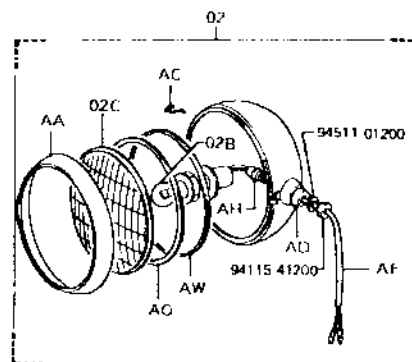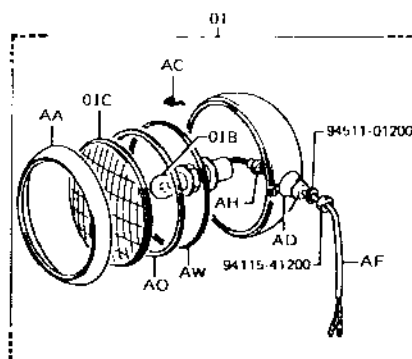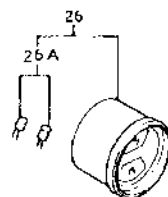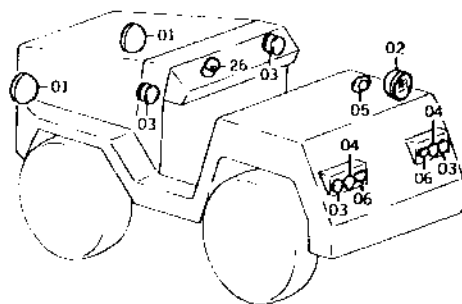          ATH



5611 054

5611

PART NAME CODE	PART NAME	QTY
5611-01	LAMP ASSY, HEAD	2
5611-01A	BULB (FOR HEAD LAMP)	2
5611-01C	LENS (FOR HEAD LAMP)	2
5611-02	LAMP ASSY, WORKING	1
5611-02B	BULB (FOR WORKING LAMP)	1
5611-02C	LENS (FOR WORKING LAMP)	1
5611-03	LAMP ASSY, FLASHER	2
5611-03A	BULB (FOR FLASHER LAMP)	2
5611-03B	LENS (FOR FLASHER LAMP)	2
5611-03C	BULB (FOR FLASHER LAMP)	2
5611-03D	LENS (FOR FLASHER LAMP)	2
5611-04	LAMP ASSY, REAR COMBINATION	2
5611-04A	BULB (FOR REAR COMBINATION LAMP)	2
5611-04B	LENS (FOR REAR COMBINATION LAMP)	2
5611-05	LAMP ASSY, LICENSE	1
5611-05A	BULB (FOR LICENSE LAMP)	1
5611-05B	LENS (FOR LICENSE LAMP)	1
5611-06	LAMP ASSY, BACK-UP	2
5611-06A	BULB (FOR BACK-UP LAMP)	2
5611-06B	LENS (FOR BACK-UP LAMP)	2
5611-21	LAMP ASSY, BRAKE PILOT	1
5611-26	LAMP ASSY, COMBINATION PILOT	1
5611-26A	BULB (FOR COMBINATION PILOT LAMP)	2
5611-35	CONTROLLER ASSY, GLOW PLUG	1
5611-AA	RING	1
5611-AL	SPRING, SLT	6
5611-AD	SPACER	1
5611-AF	COIL, HEAD LAMP	1
5611-AH	STOPPER, SCREW	1
5611-AI	SCREW	6
5611-AK	PACKING	1
5611-AM	SCREW	6
5611-AN	PACKING	1
5611-AP	BRACKET	2
5611-AW	REFLECTOR	1
5611-BL	GROMMET	2
5611-BL	PACKING	1


(ITEM 1 OF 1)

1/10/7

FIG. 5612
LAMP BRACKET

5612

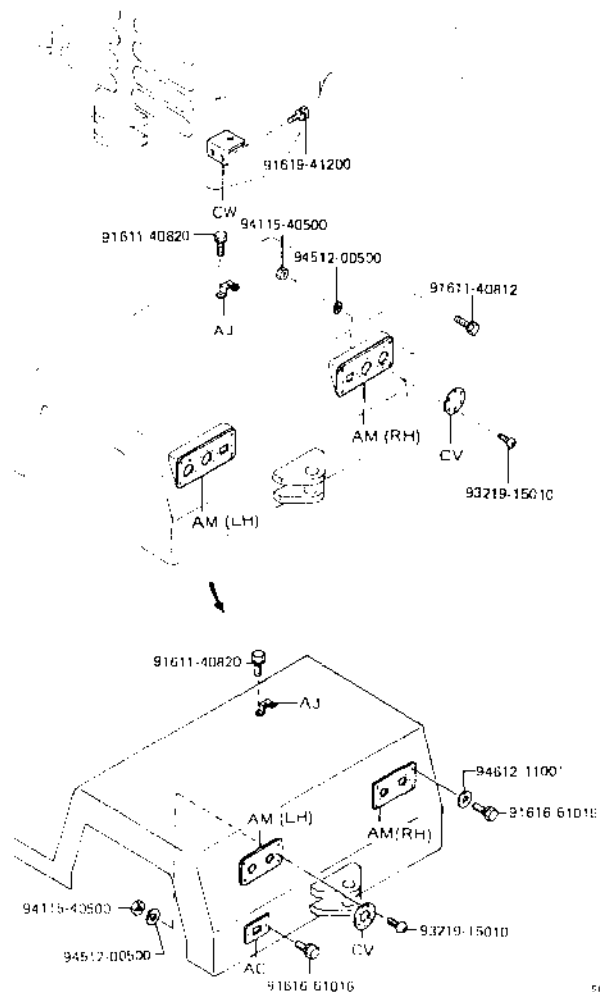 ATM



PART NAME CODE	PART NAME	QTY
5612-RC	BRACKET, BACK UP LAMP	2
5612-RC	BRACKET, WORKING LAMP	1
5612-AM	BRACKET, REAR COMBINATION LAMP	1
5612-CV	PLATE, COVER	2
5612-CW	BRACKET, HEAD LAMP	2


(ATM) (C) (42)

(10)

FIG. 5701
METER & SWITCH

5701

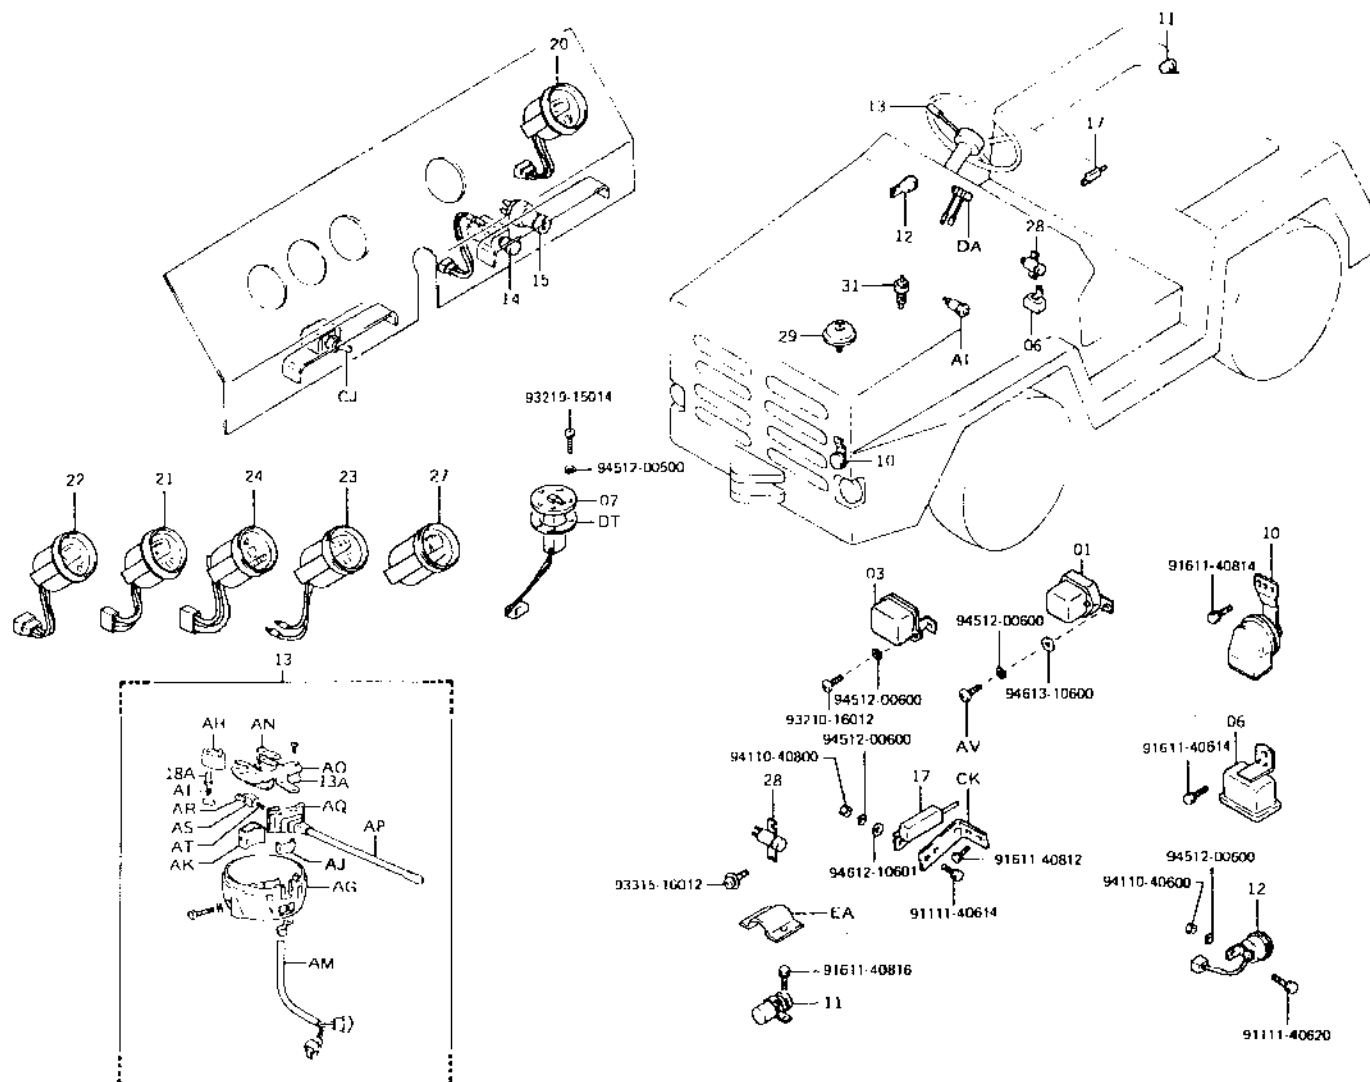 ATH



5701 036

5701


PART NAME CODE	PART NAME	QTY
5701-01	REGULATOR ASSY, GENERATOR -----	1
5701-03	RELAY ASSY, GLOW PLUG -----	1
5701-06	RELAY ASSY, HORN -----	1
5701-07	UNIT ASSY, FUEL -----	1
5701-10	HORN ASSY -----	1
5701-11	BUZZER ASSY, BACK -----	1
5701-12	BUZZER ASSY, VACUUM INDICATOR -----	1
5701-13	SWITCH ASSY, TURN SIGNAL -----	1
5701-13A	SWITCH ASSY, MICRO (FOR TURN SIGNAL SWITCH) -----	2
5701-14	SWITCH ASSY, LIGHT CONTROL -----	1
5701-15	SWITCH ASSY, IGNITION STARTER -----	1
5701-17	SWITCH ASSY, NEUTRAL SAFETY -----	1
5701-18A	CONTACT, HORN -----	1
5701-20	GAGE ASSY, FUEL -----	1
5701-21	GAGE ASSY, WATER TEMPERATURE (ENGINE) -----	1
5701-22	GAGE ASSY, TEMPERATURE (TURBO) -----	1
5701-23	GAGE ASSY, OIL PRESSURE (ENGINE) -----	1
5701-24	METER ASSY, HOUR -----	1
5701-27	AMMETER ASSY -----	1
5701-28	UNIT ASSY, FLASHER -----	1
5701-29	GAGE ASSY, OIL PRESSURE SENDER (ENGINE) -----	1
5701-31	GAGE ASSY, TEMPERATURE SENDER (TURBO) -----	1
5701-34	SWITCH ASSY, VACUUM WARNING -----	1
5701-A3	BODY, SWITCH -----	1
5701-AH	HOLDER, HORN POINT -----	1
5701-AI	SPRING, HORN CONTACT -----	1
5701-AJ	COVER -----	1
5701-AK	LOCKING BLOCK -----	1
5701-AM	HARNLESS ASSY -----	1
5701-AN	ACTUATOR -----	2
5701-AC	PLATE, SWITCH -----	1
5701-AP	LEVER, SIGNAL -----	1
5701-AQ	BELLOWS -----	1
5701-AR	HOLDER, ROLLER -----	1
5701-AS	ROLLER -----	1
5701-AT	SPRING -----	1
5701-AW	BRACKET SUB-ASSY, STOP SWITCH -----	1
5701-CJ	SWITCH ASSY, WORKING LAMP -----	1
5701-CK	BRACKET, NEUTRAL SWITCH -----	1
5701-DA	DROPPER ASSY -----	2
5701-DT	PACKING -----	1
5701-EA	COVER, BACK BUZZER -----	1

(ATM) (43) G707

FIG. 5706
SPEEDOMETER & SPEED ALARM

5706

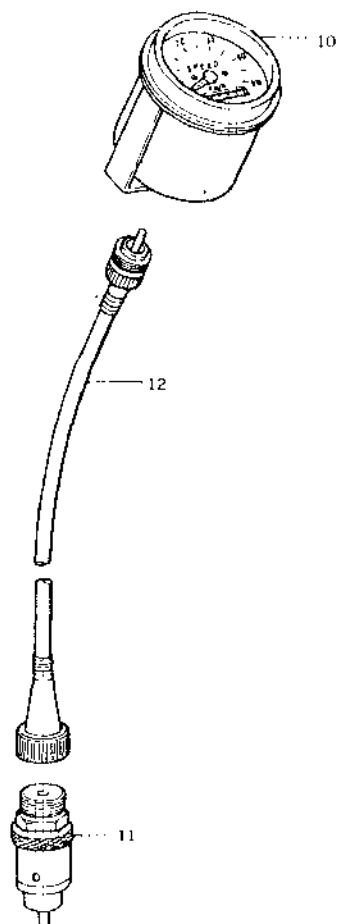 ATM



5706 008



PART NAME CODE	PART NAME	QTY
5706-10	SPEEDOMETER ASSY	1
5706-11	METER ASSY, BACK	1
5706-12	WIRE ASSY, METER FLEXIBLE	1

(ATM) (44) 6707

FIG. 5801
WIPER MOTOR & BLADE

5801

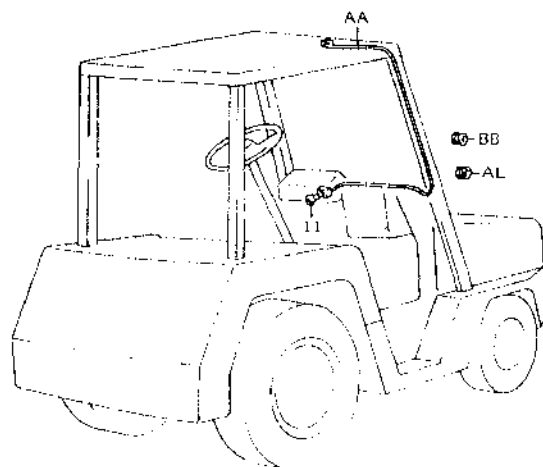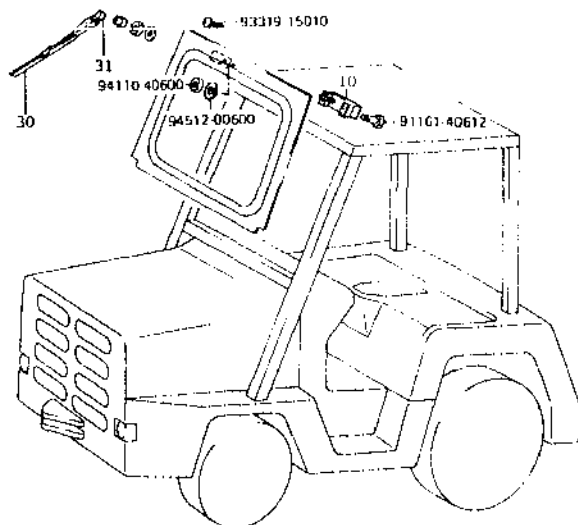  ATM (SUN SHADE--CANVAS CABIN, FRONT GLASS)



SMITH 020

PART NAME CODE	PART NAME	QTY
5801-10	MOTOR ASSY, WIPER	1
5801-11	SWITCH ASSY, WIPER	1
5801-30	BLADE SUB-ASSY, WIPER	1
5801-31	ARM SUB-ASSY, WIPER	1
5801-AA	HARNES, WIPER	1
5801-AL	GROMMET	1
5801-BB	GROMMET	1

(ATM) (45)

G707