

TOYOTA INDUSTRIAL VEHICLE

PARTS CATALOG

5FBC13,15
30-5FBC13,15
No.G235-1

TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.

TOYOTA

FORKLIFT TRUCK

PARTS CATALOG

MODEL	5 F B C
FRAME NO.	5 F B C 1 5
LIFTING HEIGHT	mm

DESCRIPTION

Cold Storage Model Type 45S	
36V Electrical System	
48V Electrical System	

TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.

QUICK REFERENCE INDEX

INTRODUCTION

ELECTRICAL SYSTEM

CHASSIS

BODY

ELECTRICAL SYSTEM

MAST

HYDRAULIC SYSTEM

G235-1 9204

GENERAL INFORMATION

This parts catalog has been prepared for the customers of Toyota Industrial Vehicles and this shows only the part name codes instead of parts numbers.

When ordering parts from your local Toyota dealer, please specify the complete model number of the truck, the engine number or frame number. Also it is essential that you specify the part name codes described in the pages of illustrations and text.

The complete model number and frame number are shown in the front page of this catalog. All the columns in this quick reference index are supposed to be filled out by both the factory and your local dealer.

For the industrial vehicle with optional equipment, which is described in the lower part of the DESCRIPTION, it is imperative for you to specify optional equipment when ordering parts.

Your Toyota dealer has always been furnished with enough information to decode the correct part numbers based on your information of model number, engine number or frame number as well as part name code.

INFORMATIONS D'ORDRE GENERAL

Ce catalogue de pièces a été préparé pour les propriétaires de Véhicules Industriels Toyota. On n'y trouvera que les codes de désignation de pièces au lieu des numéros de pièces.

Pour la commande de pièces auprès de votre concessionnaire Toyota, prière de spécifier le numéro de modèle complet de l'engin, le numéro du moteur ou le numéro du châssis. Il est aussi nécessaire de spécifier les codes de désignation de pièces comme ils sont décrits dans les pages d'illustrations et dans le texte.

Le numéro de modèle complet et le numéro de châssis sont indiqués en première page de ce catalogue. Toutes les colonnes de l'index de référence rapide devraient être remplies par l'usine et par votre concessionnaire.

Pour le véhicule industriel avec équipement optionnel, décrit en bas de page sous la rubrique "DESCRIPTION", il convient de bien spécifier qu'il s'agit de cet équipement lors de commande de pièces.

Votre concessionnaire Toyota est toujours suffisamment informé pour décoder les numéros de pièces sur la base de votre information du numéro de modèle, du numéro de moteur ou de châssis, et des codes de désignation de pièces.

INFORMACION GENERAL

Este catálogo de piezas ha sido preparado para los clientes de vehículos industriales de TOYOTA, e incluye tan sólo los códigos de nombre de pieza en lugar de los números de pieza.

Cuando solicite piezas a su distribuidor local de TOYOTA especifique por favor el número de modelo completo del vehículo, el número de motor o el número de bastidor. Asimismo, es esencial que Vd. especifique los códigos de nombre de pieza descritos en las páginas de ilustraciones y de texto.

El número completo de modelo y el número de bastidor se indican en la portada de este catálogo. Se supone que todas las columnas de este índice de referencia se han rellenado, tanto por parte de la fábrica como por parte de su distribuidor local.

En lo que concierne a los vehículos industriales con equipos opcionales, que se describen en la parte baja de la DESCRIPTION, es absolutamente necesario que especifique equipos opcionales cuando solicite piezas de repuesto.

Su distribuidor local de TOYOTA posee la información necesaria para descifrar los números correctos de cada pieza a base de su información de número de modelo, número de motor o número de bastidor, así como el código de nombre de la pieza.

ALLGEMEINE INFORMATION

Dieser Teilekatalog wurde für die Benutzer von Toyota Industriefahrzeugen zusammengestellt und zeigt anstelle von Teilenummern nur die Teilennamen-Kodes.

Geben Sie bei Teilebestellungen von Ihrem Toyota-Händler am Platz bitte die vollständige Modellnummer des Fahrzeugs, die Motornummer oder Fahrgestellnummer an. Es ist auch erforderlich, daß Sie die in den Illustrationen und im Text beschriebenen Teilennamen-Kodes angeben.


Die vollständige Modellnummer und Fahrgestellnummer finden Sie auf der Vorderseite dieses Katalogs. Alle Spalten in dieser Bezugstabelle sollen sowohl vom Werk als von Ihrem Händler am Platz ausgefüllt werden.

Für Industriefahrzeuge mit Sonderausrüstung, welche im unteren Teil der BESCHREIBUNG erläutert ist, müssen Sie bei der Bestellung von Teilen unbedingt diesbezügliche Angaben machen.

Ihr Toyota-Händler verfügt stets über genügend Information, um die richtigen Teilenummern zu entschlüsseln, basiert auf Ihren Angaben zu Modellnummer, Motornummer oder Fahrgestellnummer und den Teilennamen-Kodes.

ILLUSTRATION AND PART NAME CODE TEXT PAGE COMPOSITION

 Essentially, one (1) page will present both the illustration and part name code. However, when the space for text page is not enough the next page will be used in succession.

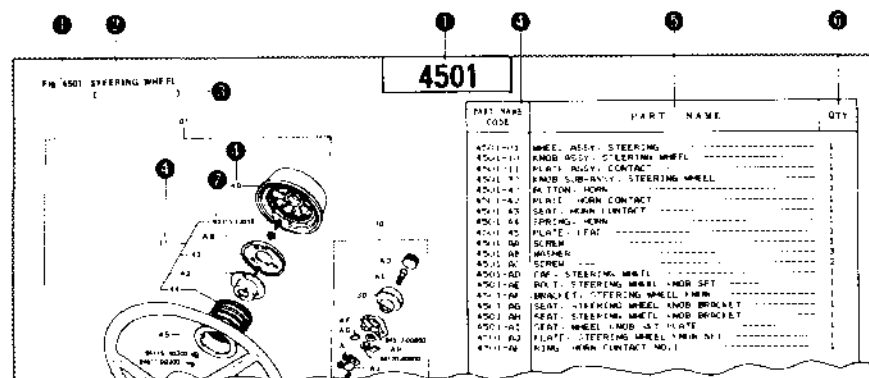

- 1 Figure number
This parts catalog has been prepared according to the figure numbers.
- 2 Figure title
A representative part name which is the major assembly part name is shown as the figure title of the illustration.
- 3 Sub title
The optional name or special specification of each illustration are indicated.
- 4 Part name code
This is a combination of figure number and codes of illustrations pertaining to each part. This is a key for your Toyota dealer to find the correct part numbers.
- 5 Part name
As a rule, the part name is indicated for each of the part name codes.
- 6 QTY (Quantity)
The quantity column indicates the utilized pieces of part name code unit. When the utilized quantity changes according to each of the vehicles, maximum is indicated.
When the utilized quantity of the parts differs or is more than 100 pieces, quantity 99 is indicated.
- 7 Standard parts numbers
The standard parts such as the bolts, nuts, washer, etc. are described with parts numbers. When ordering these parts, specify parts numbers.

COMPOSICION DE LAS PAGINAS DE ILUSTRACIONES Y DE TEXTO DE CODIGOS DE NOMBRE DE PIEZAS


Básicamente, una (1) página incluirá tanto la ilustración como el código de nombre de la pieza.

No obstante, si el espacio no fuese suficiente, se utilizará la página siguiente.

- 1 Número de figura
Este catálogo de piezas se ha preparado de acuerdo con los números de las figuras.
- 2 Título de las figuras
Como título de las figuras de la página de ilustraciones, se incluye un nombre que sea representativo del nombre del mayor conjunto.
- 3 Subtítulo
Se indican el nombre opcional o las especificaciones especiales de cada ilustración.
- 4 Código de nombre de pieza
Se trata de una combinación de número de figura y de código de las ilustraciones correspondientes a cada pieza. Esta es la clave para que su distribuidor local de TOYOTA pueda encontrar el número de pieza correcto.
- 5 Nombre de la pieza
Como norma, se indica el nombre de cada uno de los códigos de nombre de pieza.
- 6 QTY (Cantidad)
La columna de cantidad indica el número de piezas utilizadas de cada unidad de código de nombre de pieza.
Cuando la cantidad utilizada es intercambiable entre cada uno de los vehículos, se indica el máximo.
Cuando la cantidad de piezas utilizadas pueda diferir o ser superior a 100, se indica como cantidad 99.
- 7 Números de piezas normalizadas
Las piezas corrientes, tales como pernos, tuercas, arandelas etc., se describen con número de pieza. Cuando solicite tales piezas, indique su número de pieza.

ILLUSTRATION ET COMPOSITION DU DE TEXTE DE CODE DE DESIGNATION DE PIECE

 Une (1) page contiendra essentiellement une illustration et ses codes de désignation de pièce. Toutefois, lorsque l'espace réservé au texte est insuffisant, la continuation se trouvera sur la page suivante.

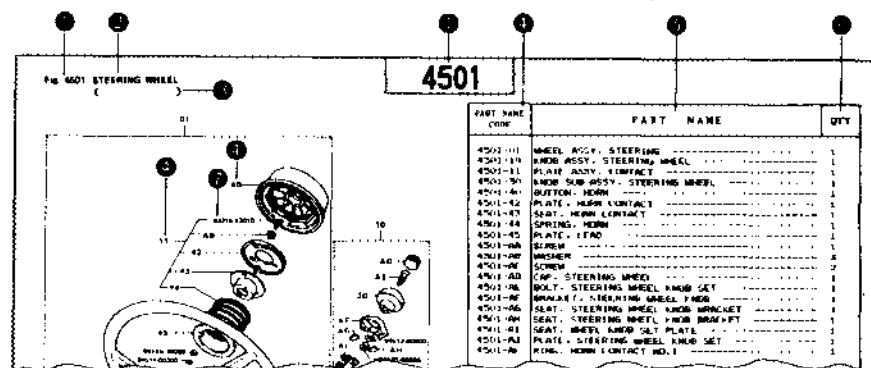

- 1 Numéro de figure
Ce catalogue de pièces a été préparé en fonction des numéros de figures.
- 2 Titre de figure
Une désignation de pièce représentative, celle d'une pièce d'un ensemble important, est indiquée comme titre de figure de l'illustration.
- 3 Sous-titre
La désignation optionnelle ou les spécifications spéciales de chaque illustration sont indiquées.
- 4 Code de désignation de pièce
Obtenu en combinant le numéro de figure et les codes des illustrations inhérents à chaque pièce. Ce code permettra à votre concessionnaire Toyota de trouver les numéros de pièces corrects.
- 5 Désignation de pièce
La désignation de la pièce est indiquée pour chacun des codes de désignation de pièce.
- 6 Q'ty (quantité)
La colonne quantité indique les pièces utilisées de l'unité de code de désignation de pièce. La quantité maximum est indiquée quand la quantité utilisée diffère pour chacun des véhicules. Quand la quantité de pièces utilisées diffère ou lorsqu'elle dépasse 100 pièces, la quantité 99 est indiquée.
- 7 Numéros de pièces standard
Les pièces standard comme les boulons, les écrous, les rondelles, etc. sont décrits dans les numéros de pièces. Pour commander ces pièces, prière de spécifier les numéros de pièces.

ABBILDUNG UND TEXTSEITENAUFBAU FÜR TEILENAMEN-KODE

Grundsätzlich finden Sie auf einer (1) Seite sowohl die Abbildung als auch den Teilnamen-Kode.
Wenn für den Text jedoch nicht genügend Platz vorhanden ist, wird er auf der nächsten Seite fortgesetzt.

- 1 Abbildungsnummer
Dieser Teilkatalog wurde nach Abbildungsnummern zusammengestellt.
- 2 Abbildungstitel
Ein stellvertretender Teilname, welcher zugleich die Bezeichnung für die Hauptbaugruppe ist, wird als Abbildungstitel der Illustration angegeben.
- 3 Untertitel
Ein zusätzlicher Name oder eine besondere Kennzeichnung werden für jede Illustration angegeben.
- 4 Teilnamen-Kode
Dies ist eine Kombination von ziffern und Abbildungskodes, die jedes Teil betreffen. Es ist ein Schlüssel für Ihren Toyota-Händler, um die richtigen Teilenummern zu finden.
- 5 Teilname
Grundsätzlich wird der Teilname für alle Teilnamen-Kodes angegeben.
- 6 QTY (Menge)
Die Mengenspalte gibt die benutzte Stückzahl von Teilnamen-Kode-Einheiten an.
Wenn die benutzte Stückzahl je nach Fahrzeug Verschieden ist, wird die Höchstmenge angegeben.
Wenn die benutzte Menge 100 Stück überschreiten kann, wird als Menge 99 angegeben.
- 7 Standardteile-Nummern
Die Standardteile, wie Schrauben, Muttern, Unterlegscheiben usw., sind in den Teilenummern beschrieben. Geben Sie bei Bestellung dieser Teile die Teilenummern an.

DATA PLATE & SERIAL NUMBERS

For retrieving correct part numbers, it's indispensable to know the truck model, as well as frame number (or engine number).
Customers can obtain said information in the data plate on the truck or in this user parts catalog.

PLAQUE DE DONNEES TECHNIQUES & NUMEROS DE SERIE


Pour relever correctement le numéro des pièces, il est indispensable de connaître le modèle de l'engin, ainsi que le numéro du châssis (ou du moteur).
Les propriétaires peuvent trouver ladite information sur la plaque de données techniques de l'engin ou dans le présent ouvrage.

Data plate
Placa de datos
Plaque de données techniques
Datenplatte

TOYOTA	
FORK LIFT TRUCK	
MODEL	
CODE NO. OF SPECIAL MODEL, MODEL OF ATTACHMENT	
FRAME NO.	
LIFTING HEIGHT	
CAPACITY	
TRUCK WEIGHT WITHOUT BATTERY	
BATTERY MAX.	
WEIGHT MIN.	
PROD YEAR	
 TOYOTA AUTOMATIC LOOM WORKS, LTD. KARIYA, JAPAN 57882-22501-71	

Frame Number
(Top of the frame)
Número de bastidor
(Parte superior del bastidor)

 Numéro de châssis
(haut du châssis)
Fahrgestellnummer
(Oben am Fahrgestell)

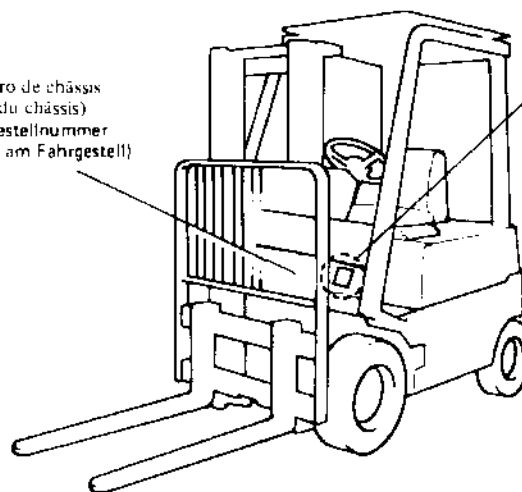

Data plate
Placa de datos
Plaque de données techniques
Datenplatte

PLACA DE DATOS Y NUMEROS DE SERIE

 
 
 
Para obtener los números de pieza correctos, es indispensable conocer el modelo del vehículo, así como el número del bastidor (o del motor).
Los clientes pueden obtener dicha información por la placa de datos del vehículo o este catálogo de piezas para el usuario.

DATENPLATTE & SERIENNUMMERN

Um die richtige Teilenummer zu ermitteln, müssen unbedingt das Fahrzeugmodell sowie die Fahrgestellnummer (oder die Motornummer) bekannt sein.
Kunden können diese Angaben von der Datenplatte am Fahrzeug oder in diesem Teilekatalog für Benutzer entnehmen.

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
ILLUSTRATED INDEX
INDEX ILLUSTRÉ
ILLUSTRIRTES INHALTSVERZEICHNIS
INDICE ILLUSTRADO

FIG. INDEX

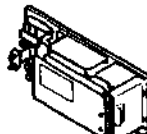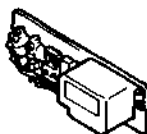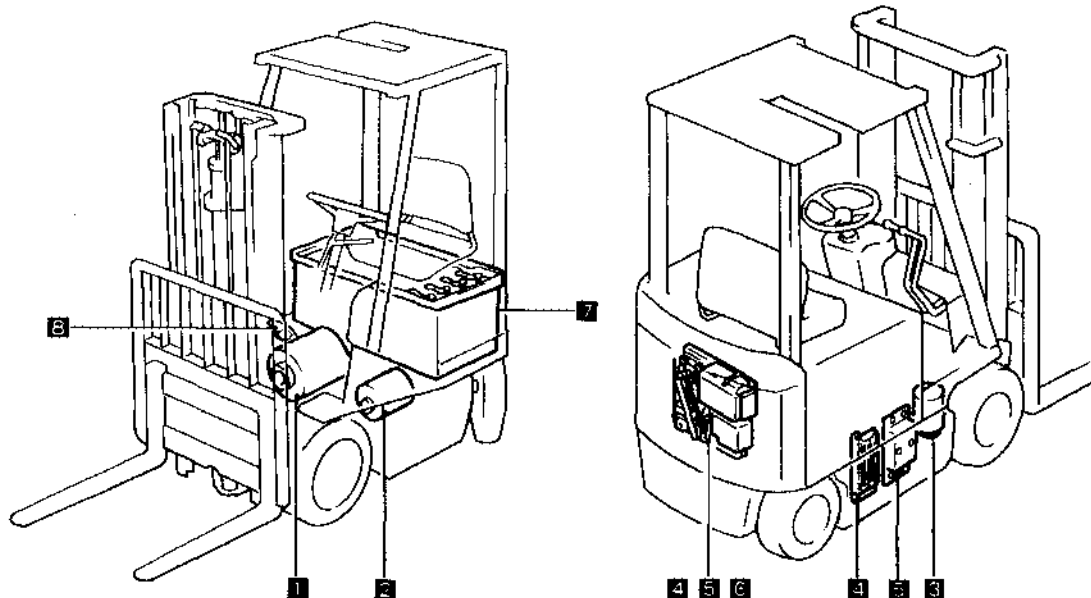FIG. 1401  Drive Motor	FIG. 1402  Pump Drive Motor	FIG. 1403  P/S Pump Drive Motor	FIG. 2401  Control Panel	FIG. 2402  Contactor Panel	FIG. 2403  Contactor Assy	FIG. 2501  Battery
ELECTRICAL GROUP 						

r 0000-525

 
 
 
FIG. INDEX

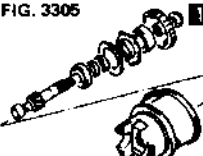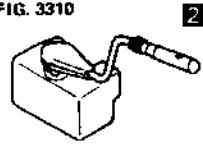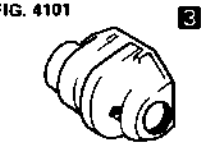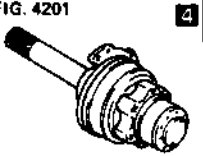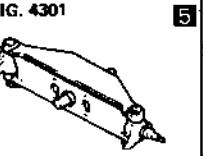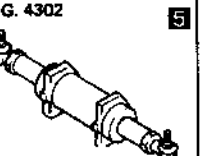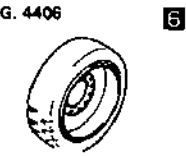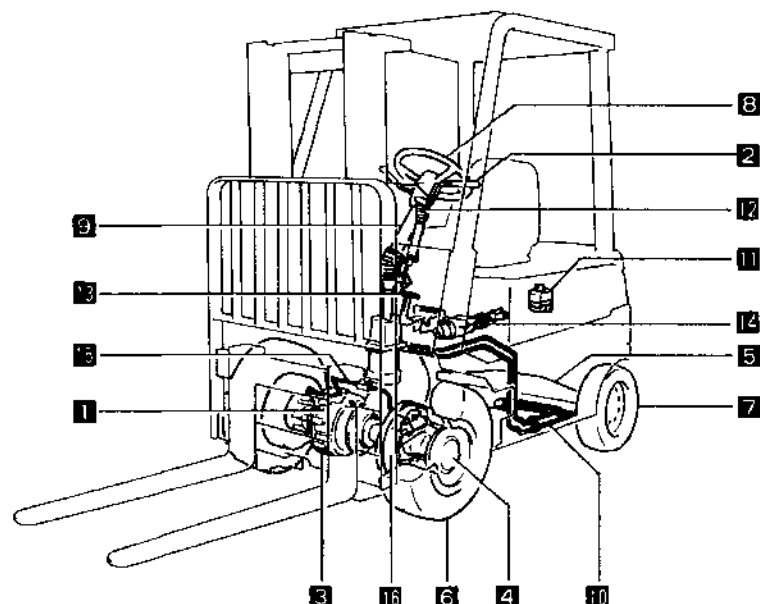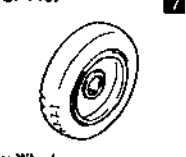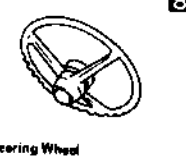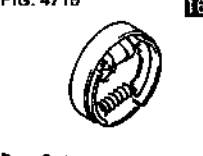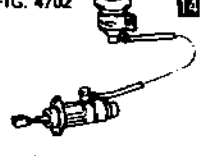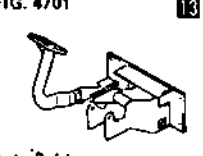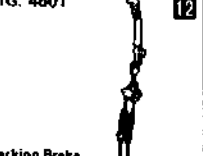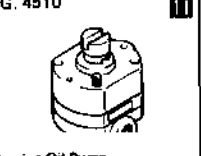
 FIG. 3305 Gear Case & Gear	 FIG. 3310 Change Lever	 FIG. 4101 Differential	 FIG. 4201 Front Axle Shaft	 FIG. 4301 Rear Axle & Tie-Rod	 FIG. 4302 Rear Axle Cylinder	 FIG. 4406 Front Wheel	
CHASSIS GROUP 							 FIG. 4407 Rear Wheel
							 FIG. 4501 Steering Wheel
							 FIG. 4502 Steering Post
							 FIG. 4503 Hydrostatic Steering Valve
 FIG. 4716 Drum Brake	 FIG. 4714 Brake Pipe	 FIG. 4702 Brake Master Cylinder	 FIG. 4701 Brake Pedal	 FIG. 4801 Parking Brake	 FIG. 4510 Steering Oil Pump	 FIG. 4507 Draglink & Steering Piping	

0000-926

ILLUSTRATED INDEX
INDEX ILLUSTRÉ
ILLUSTRIRTES INHALTSVERZEICHNIS
INDICE ILLUSTRADO

FIG. INDEX







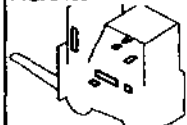
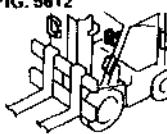
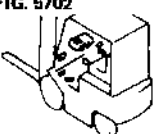
FIG. 5101  Frame Weight	1 FIG. 5201  Hood & Hinge	2 FIG. 5301  Instrument Panel & Floor	3 FIG. 5308  Driver Seat	4 FIG. 5401  Head Guard & Accessory	5 FIG. 5405  Indicator Plate	6 FIG. 5602  Wiring & Clamp
						7 FIG. 5611  Lamp
						8 FIG. 5612  Lamp Bracket
						FIG. 5702  Meter & Switch

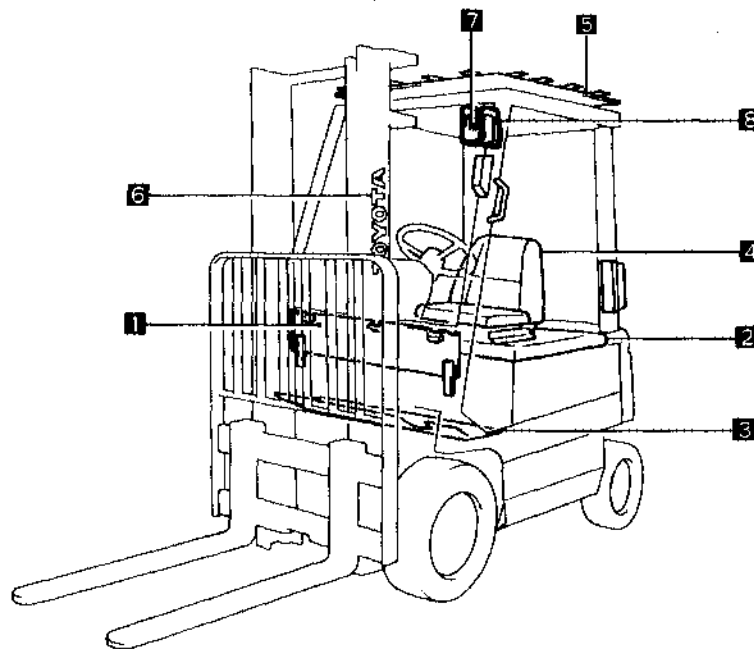 

r 0000-523

ILLUSTRATED INDEX
INDEX ILLUSTRÉ
ILLUSTRIRTES INHALTSVERZEICHNIS
INDICE ILLUSTRADO

FIG. INDEX

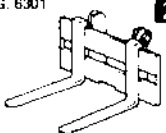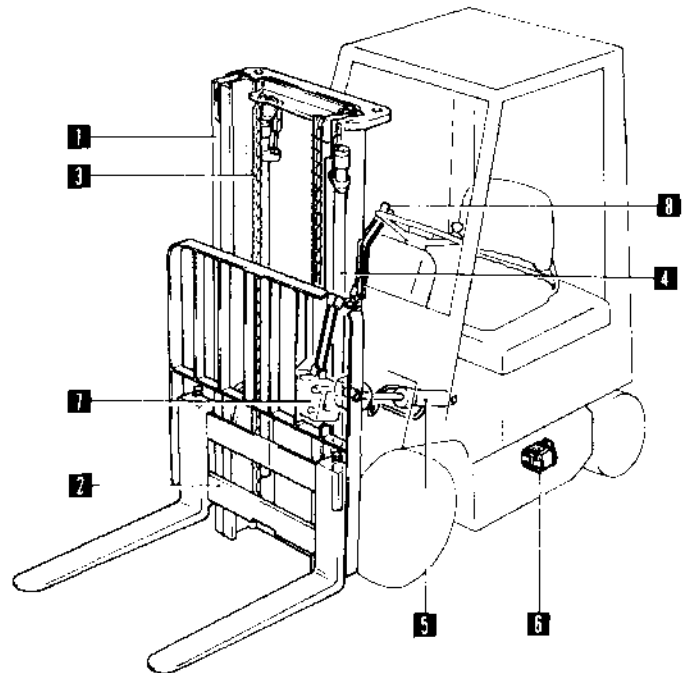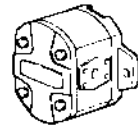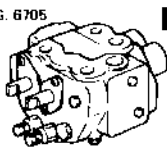         FIG. 6101  Mast	FIG. 6301  Lift Bracket & Fork	FIG. 6302  Chain & Chain Wheel	FIG. 6501 (V)  Lift Cylinder	FIG. 6502 (FV, FSV)  Front Lift Cylinder	FIG. 6503 (FV, FSV)  Rear Lift Cylinder	FIG. 6511  Tilt Cylinder
MAST, HYDRAULIC COMPONENT GROUP 						FIG. 6701  Oil Pump
						FIG. 6705  Oil Control Valve
						FIG. 6709  Oil Control Valve Link
						FIG. 6801  Body Piping
						FIG. 6802  Mast Piping


v. 0000-524

FIG. 0901
STANDARD TOOL

0901

MAIN

 91/09

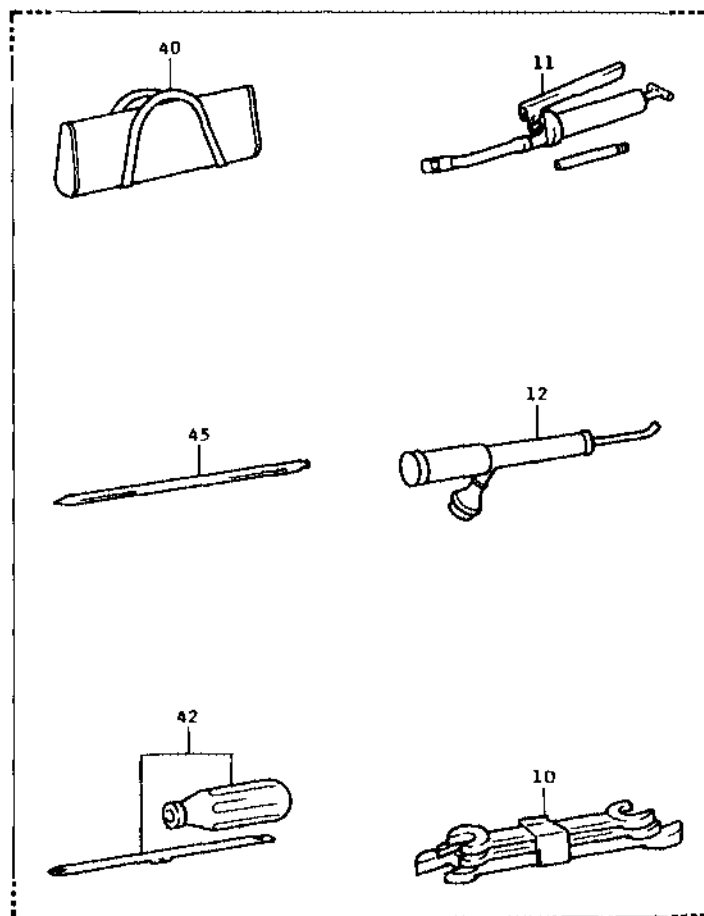

0901-060

PART NAME CODE	PART NAME	QTY
0901-10	SPANNER SET	1
0901-11	PUMP ASSY, GREASE	1
0901-12	METER ASSY, HYDRAULIC SAILING	1
0901-40	BAG, TOOL	1
0901-42	DRIVER, SCREW	1
0901-45	ROD, THERMOMETER	1

G235-001E

FIG. 1401
DRIVE MOTOR

 
 
 
1401

MAIN


91/09

DPR

STM

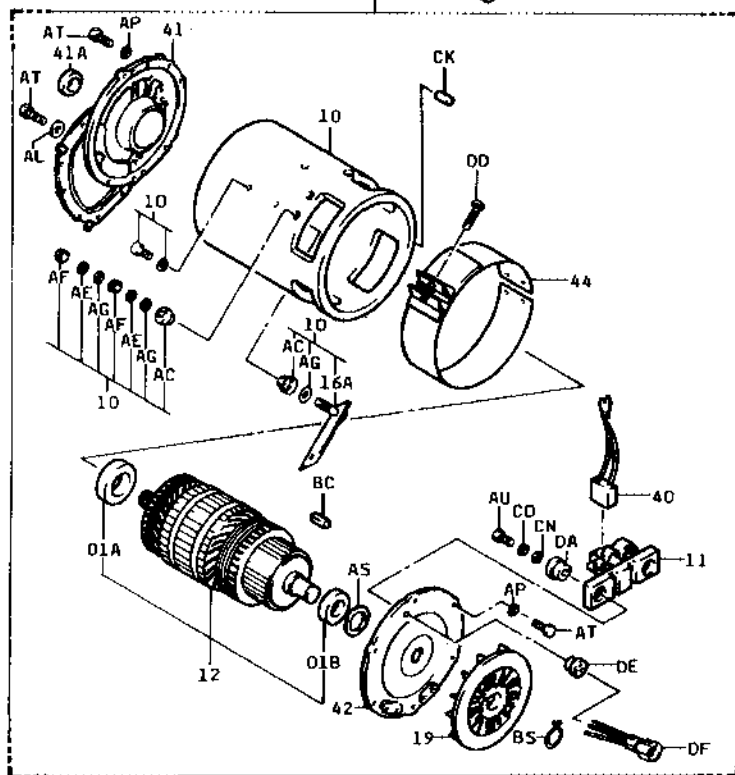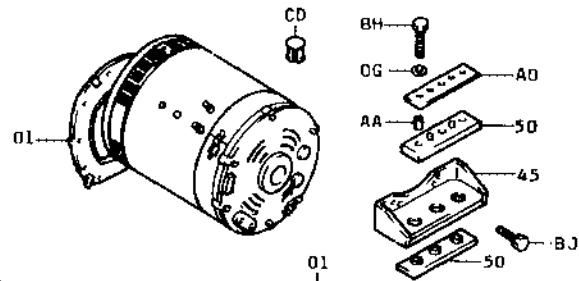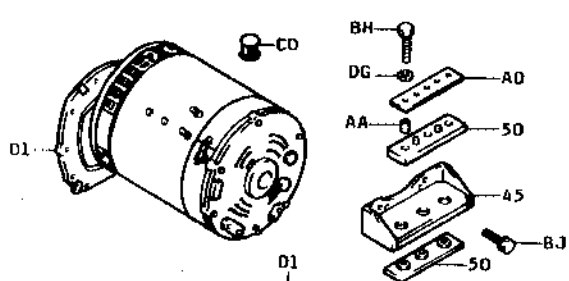

1401-087

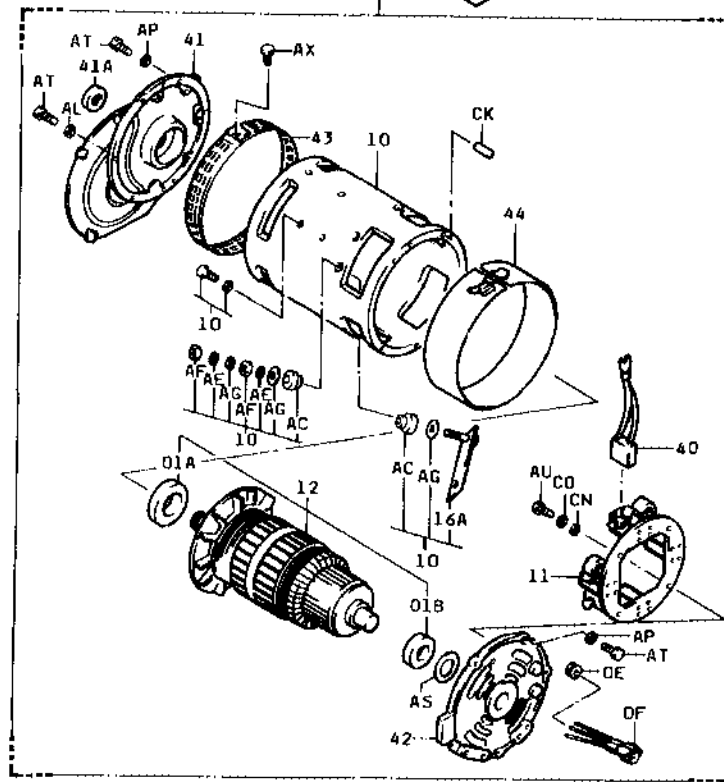 

1401-086

G235-001

FIG. 1401
DRIVE MOTOR

1401

MAIN

91/09

PART NAME CODE	PART NAME	QTY
1401-01	MOTOR ASSY. DRIVE	1
1401-01A	BEARING, DRIVE MOTOR, NO.1	1
1401-01B	BEARING, DRIVE MOTOR, NO.2	1
1401-10	YDKE ASSY	1
1401-11	HOLDER ASSY. BRUSH	1-3
1401-12	ARMATURE ASSY. DRIVE	1
1401-16A	BOLT, STUD (TERMINAL)	2
1401-19	FAN	1
1401-40	BRUSH, DRIVE MOTOR	4
1401-41	BRACKET, NO.1	1
1401-41A	SEAL, OIL (FOR BRACKET)	1
1401-42	BRACKET, NO.2	1
1401-43	COVER, MOTOR	1
1401-44	COVER, BRUSH	1
1401-45	BRACKET, DRIVE MOTOR MOUNTING, NO.1	1
1401-50	RUBBER, CUSHION (FOR MOTOR MOUNTING)	2
1401-AA	COLLAR	3
1401-AC	INSULATOR	8
1401-AE	WASHER, SPRING	8
1401-AF	NUT	8
1401-AG	WASHER, PLATE	12
1401-AL	WASHER, PLATE	2
1401-AD	PLATE, CUSHION RUBBER	1
1401-AP	WASHER, SPRING	9-10
1401-AS	WASHER, WAVE	1
1401-AT	BOLT	11-12
1401-AU	BOLT	4-8
1401-AX	BOLT	1
1401-BC	KEY	1
1401-BH	BOLT	3
1401-BJ	BOLT	4
1401-B5	RING, SHAFT SNAP	1
1401-CD	PLUG	1
1401-CK	PIN	4
1401-CN	WASHER, PLATE	4-8
1401-CD	WASHER, SPRING	4-8
1401-DA	INSULATOR	8
1401-DD	BOLT	1
1401-DE	BUSHING	1
1401-DF	WIRE, LEAD	1
1401-DG	WASHER, SPRING	3

G235-002E

FIG-1402
PUMP DRIVE MOTOR

 
1402

MAIN


91/09

DPR

STM

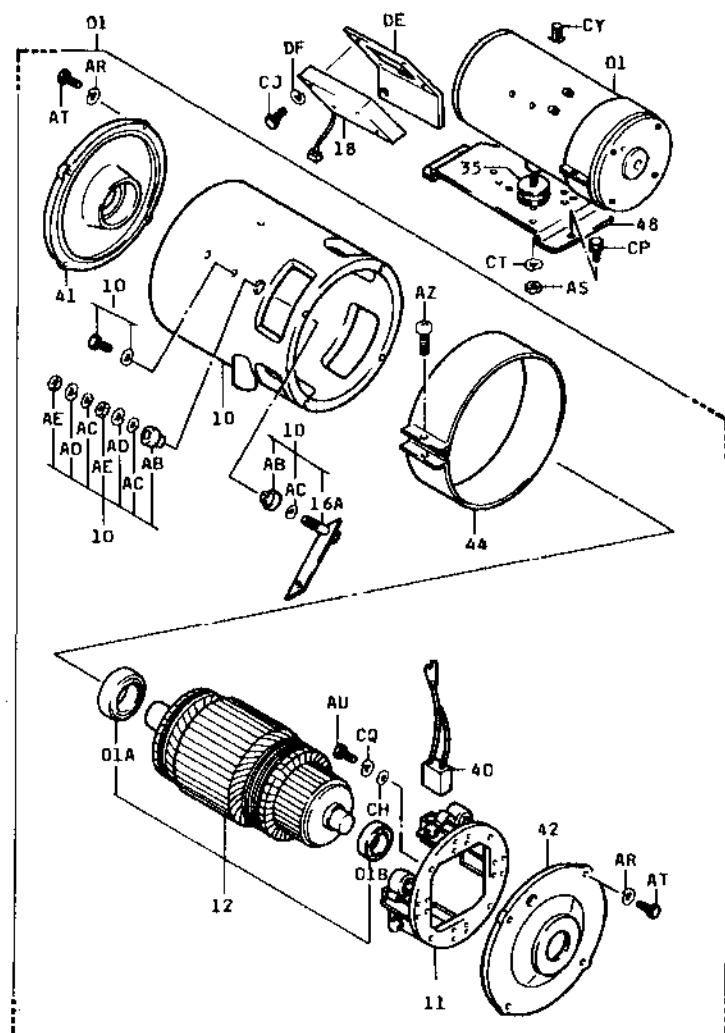

1402-088A

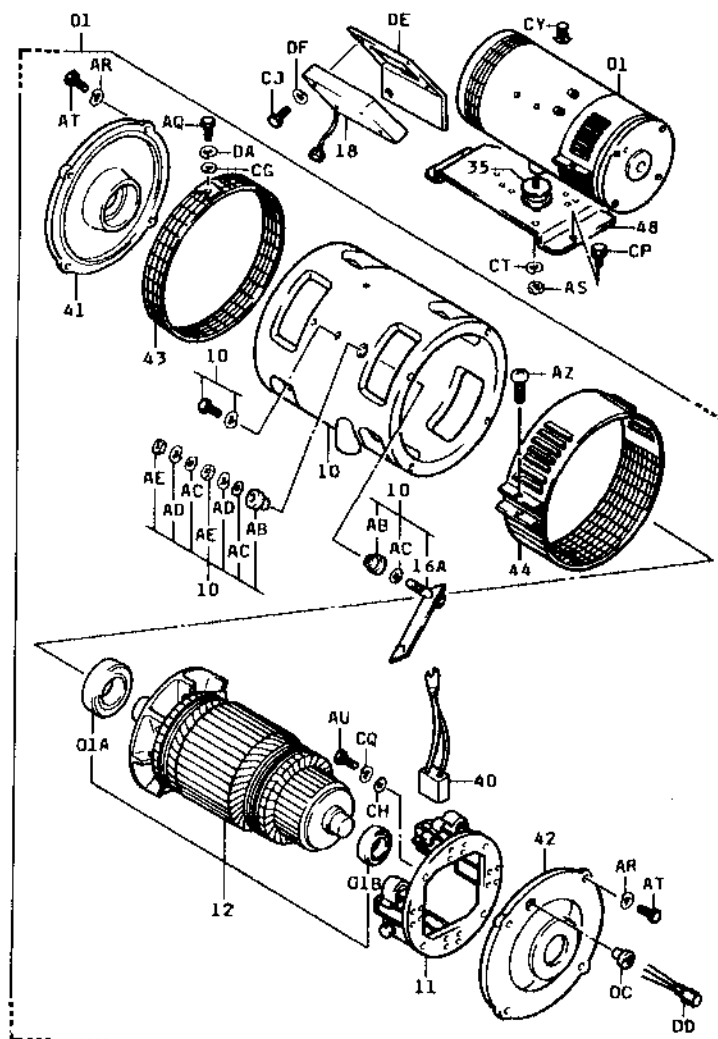 

1402-087A

FIG. 1402
PUMP DRIVE MOTOR

1402

MAIN

91/09

PART NAME CODE	PART NAME	QTY
1402-01	MOTOR ASSY, PUMP	1
1402-01A	BEARING, PUMP MOTOR, NO.1	1
1402-01B	BEARING, PUMP MOTOR, NO.2	1
1402-10	YOKE ASSY, PUMP MOTOR	1
1402-11	HOLDER ASSY, PUMP MOTOR	1
1402-12	ARMATURE ASSY, PUMP MOTOR	1
1402-16A	BOLT, STUD (TERMINAL)	1
1402-18	MOTOR ASSY, FAN	1
1402-35	INSULATOR SUB-ASSY, MOTOR MOUNTING	3
1402-40	BRUSH, PUMP MOTOR	4
1402-41	BRACKET, NO.1	1
1402-42	BRACKET, NO.2	1
1402-43	COVER, MOTOR	1
1402-44	COVER, BRUSH	1
1402-48	PLATE, PUMP MOTOR SET	1
1402-AB	INSULATOR	4
1402-AC	WASHER, PLATE	6
1402-AD	WASHER, SPRING	4
1402-AE	NUT	4
1402-AQ	BOLT	1
1402-AR	WASHER, SPRING	8
1402-AS	NUT	3
1402-AT	BOLT	8
1402-AU	BOLT	4
1402-AZ	BOLT	1
1402-CH	WASHER, PLATE	4
1402-CJ	SCREW	4
1402-CP	BOLT	3
1402-CQ	WASHER, SPRING	4
1402-CT	WASHER, SPRING	3
1402-CY	PLUG	1
1402-DC	BUSHING	1
1402-DD	WIRE, LEAD	1
1402-DE	BRACKET, FAN	1
1402-DF	WASHER, SPRING	4


G235-002E

FIG. 1403
POWER STEERING PUMP DRIVE MOTOR

1403

MAIN

 91/09

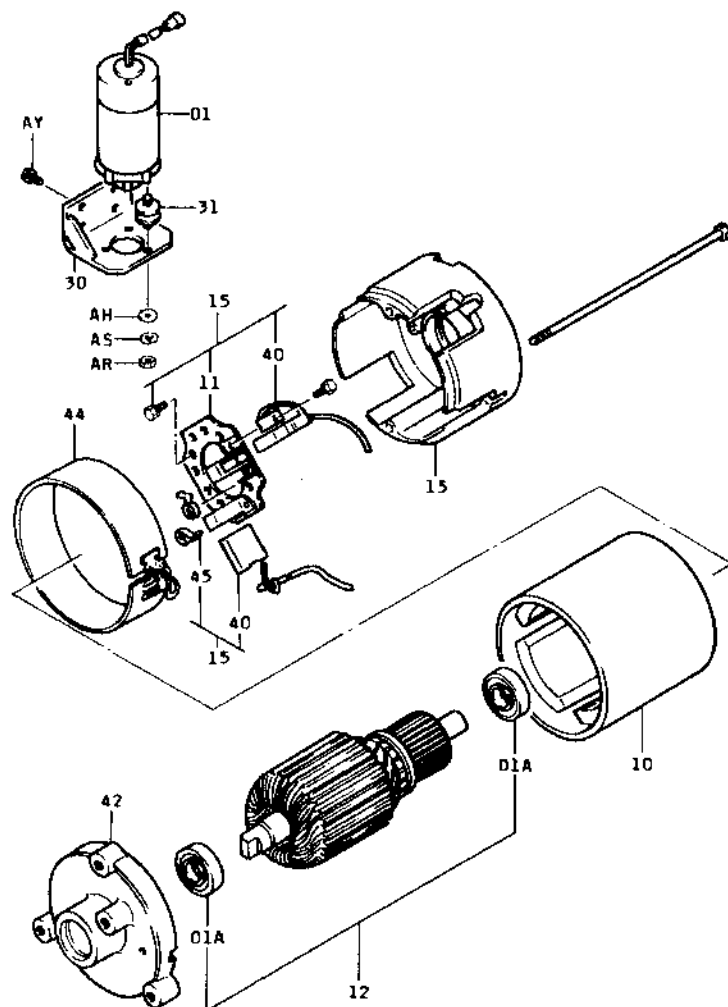

PART NAME CODE	PART NAME	QTY
1403-01	MOTOR ASSY, POWER STEERING	1
1403-01A	BEARING, POWER STEERING MOTOR	2
1403-10	YOKE ASSY, POWER STEERING MOTOR	1
1403-11	HOLDER ASSY, BRUSH	1
1403-12	ARMATURE ASSY, POWER STEERING	1
1403-15	FRAME ASSY, COMMUTATOR	1
1403-30	BRACKET SUB-ASSY, MOTOR MOUNTING	1
1403-31	INSULATOR SUB-ASSY, BODY MOUNTING	3
1403-40	BRUSH, POWER STEERING MOTOR	2
1403-42	BRACKET, NO. 2	1
1403-44	COVER, BRUSH	1
1403-45	SPRING, POWER STEERING MOTOR BRUSH	2
1403-AH	WASHER, PLATE	3
1403-AR	NUT	3
1403-AS	WASHER, SPRING	3
1403-AY	BOLT	3

1403-028

G235-001E


FIG. 2401
CONTROL PANEL

2401

MAIN

92/04

 11/21

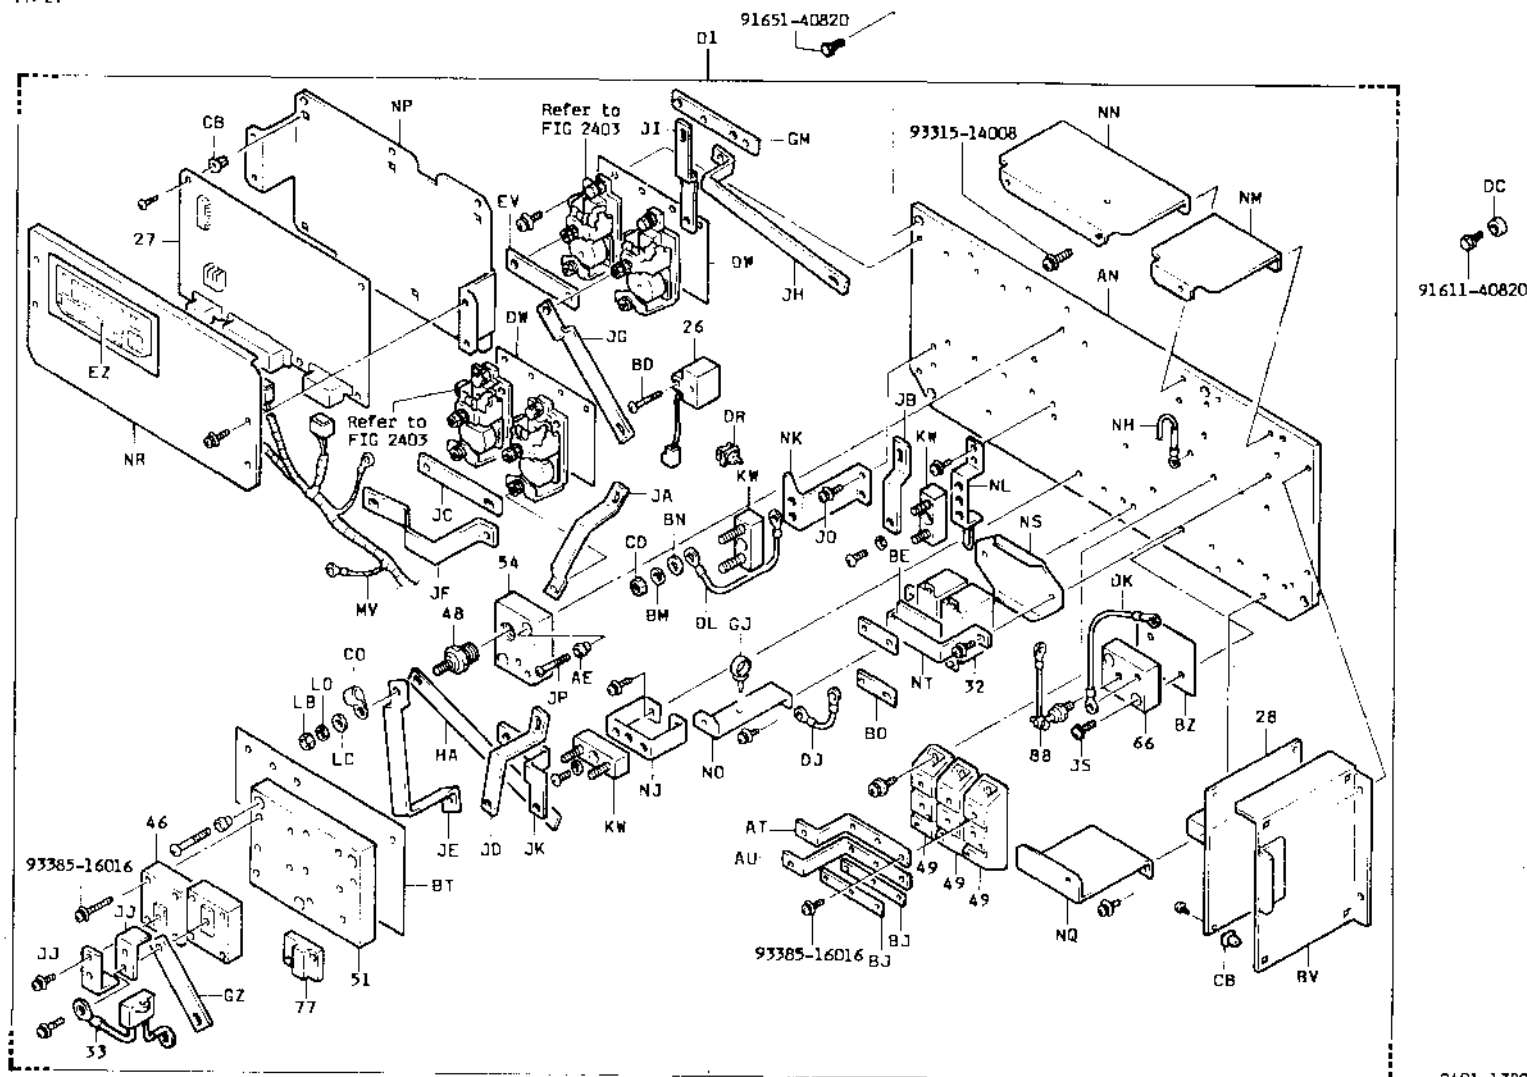

2401-138C

G235-001

2401 138C 0007

FIG. 2401
CONTROL PANEL

 
2401

MAIN


92/04

12/21

{ ENPS }

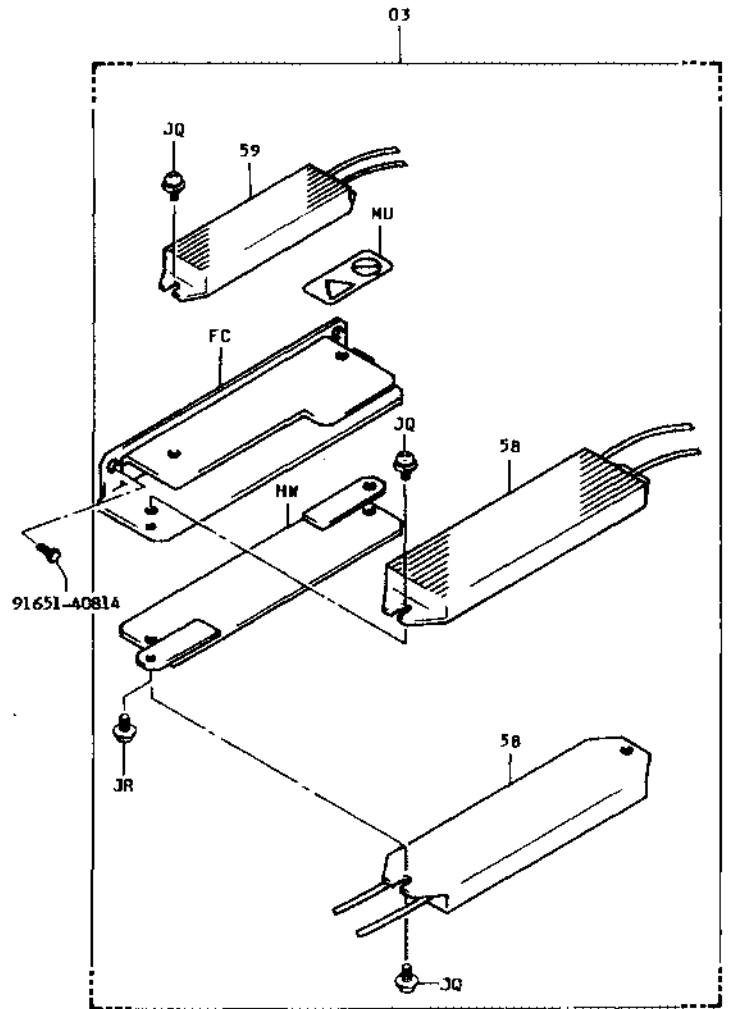

2401-140A

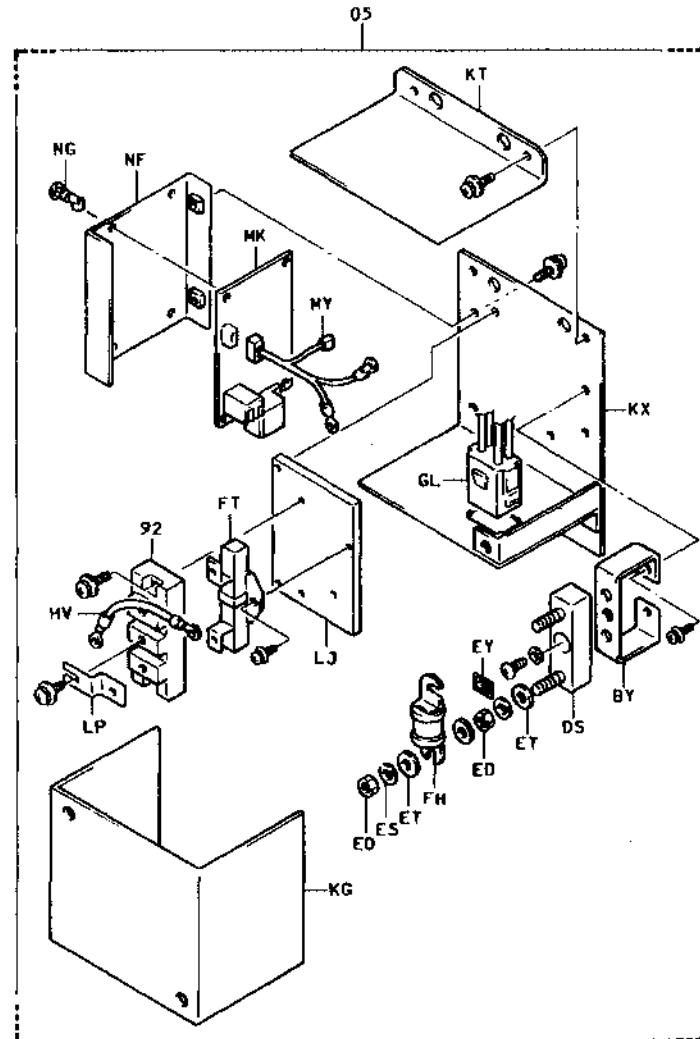 

2401-139A

G235-002

FIG. 2401
CONTROL PANEL

2401

MAIN

92/04

PART NAME	PART NAME	QTY
CODE		
2401-01	PANEL ASSY, DRIVE CONTROL	1
2401-03	PANEL ASSY, RESISTOR	1
2401-05	PANEL ASSY, SPS CONTROL	1
2401-26	SENSOR ASSY, CURRENT	1
2401-27	BOARD ASSY	1
2401-28	BOARD ASSY	1
2401-32	CAPACITOR	2
2401-46	DIODE	2
2401-48	DIODE	1
2401-49	TRANSISTOR	3
2401-51	HEATSINK, NO.1	1
2401-54	HEATSINK, NO.2	1
2401-58	RESISTOR, NO.1	1+ 2
2401-59	RESISTOR, NO.2	1
2401-66	HEATSINK	1
2401-77	TRANSISTOR	1
2401-88	DIODE SUB-ASSY	1
2401-92	TRANSISTOR	1
2401-AE	INSULATOR	7
2401-AN	BASE	1
2401-AT	BAR	1
2401-AU	BAR	1
2401-BD	SCREW	1
2401-BJ	BAR	2
2401-BM	WASHER, SPRING	9
2401-BN	WASHER, PLATE	9
2401-BQ	BAR	2
2401-BT	SHEET	1
2401-BV	BRACKET SUB-ASSY	1
2401-BW	MAT	2
2401-BY	BRACKET SUB-ASSY, TERMINAL	1
2401-BZ	SHEET	1
2401-CB	GROMMET	10
2401-CD	NUT	9
2401-CD	CLAMP	1
2401-DC	SPACER, NO.1	2
2401-DJ	WIRING, NO.1	1
2401-DK	WIRING, NO.2	1
2401-DL	WIRING, NO.3	1
2401-DR	CLAMP	1
2401-DS	TERMINAL BLOCK, FUSE	1
2401-DW	SHEET	2
2401-ED	NUT	4
2401-ES	WASHER, SPRING	4
2401-ET	WASHER, PLATE	6
2401-EV	BAR	1
2401-EY	PLATE, FUSE	1
2401-EZ	PLATE, TERMINAL NUMBER	1
2401-FC	BRACKET, RESISTOR	1
2401-FH	FUSE	1
2401-FT	RESISTOR	1
2401-GJ	CLIP	1
2401-GL	WIRING SUB-ASSY	1
2401-GM	BAR	1
2401-GZ	BAR	1
2401-HA	BAR	1
2401-HV	WIRING	1
2401-HW	BRACKET SUB-ASSY	1
2401-JA	BAR	1
2401-JB	BAR	1
2401-JC	BAR	1
2401-JD	BAR	1
2401-JE	BAR	1
2401-JF	BAR	1

PART NAME	PART NAME	QTY
CODE		
2401-JG	BAR	1
2401-JH	BAR	1
2401-JI	BAR	1
2401-JJ	BAR	2
2401-JK	BAR	1
2401-JQ	SCREW	22
2401-JP	SCREW	2
2401-JQ	SCREW	4- 6
2401-JR	SCREW	2
2401-JS	SCREW	5
2401-KG	COVER	1
2401-KT	PLATE	1
2401-KW	BLOCK, TERMINAL FUSE	3
2401-KX	BASE SUB-ASSY	1
2401-LB	NUT	1
2401-LC	WASHER, PLATE	1
2401-LD	WASHER, SPRING	1
2401-LJ	HEATSINK	1
2401-LP	BAR	1
2401-MK	BOARD SUB-ASSY	1
2401-MU	PLATE, CAUTION	1
2401-MV	HARNESS SUB-ASSY	1
2401-MY	HARNESS, SPS BOARD	1
2401-NF	BRACKET SUB-ASSY, BOARD	1
2401-NG	SPACER	4
2401-NH	SENSOR SUB-ASSY, THERMAL	1
2401-NJ	BRACKET SUB-ASSY, TERMINAL, NO.1	1
2401-NK	BRACKET SUB-ASSY, TERMINAL, NO.2	1
2401-NL	BRACKET SUB-ASSY, TERMINAL, NO.3	1
2401-NM	BRACKET, CPU, NO.1	1
2401-NN	BRACKET, CPU, NO.2	1
2401-NO	BRACKET, CPU, NO.3	1
2401-NP	BASE SUB-ASSY, CPU BOARD	1
2401-NQ	BRACKET SUB-ASSY, CPU	1
2401-NR	COVER, CPU	1
2401-NS	BRACKET, CAPACITOR	1
2401-NT	BAND, CAPACITOR	1

G235-003E

FIG. 2402
CONTACTOR PANEL

 
2402

MAIN


92/04

(1/2)

(2/2)

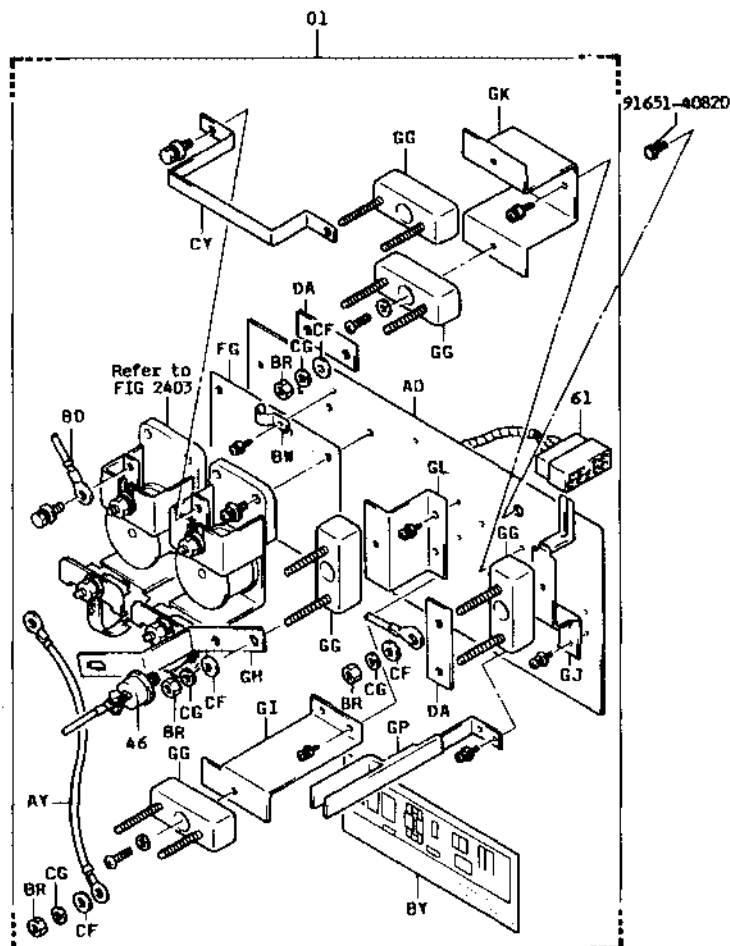

2402-083A

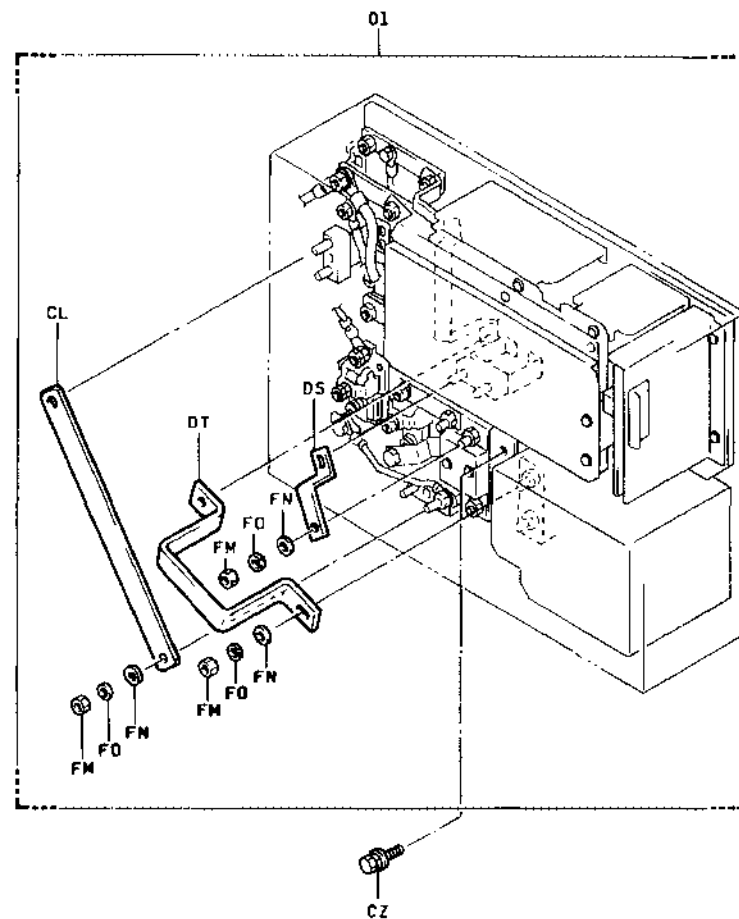 

2402-087A

G235-001


FIG-2402
CONTACTOR PANEL

2402

MAIN

92/04

 (PUMP CHOPPER)

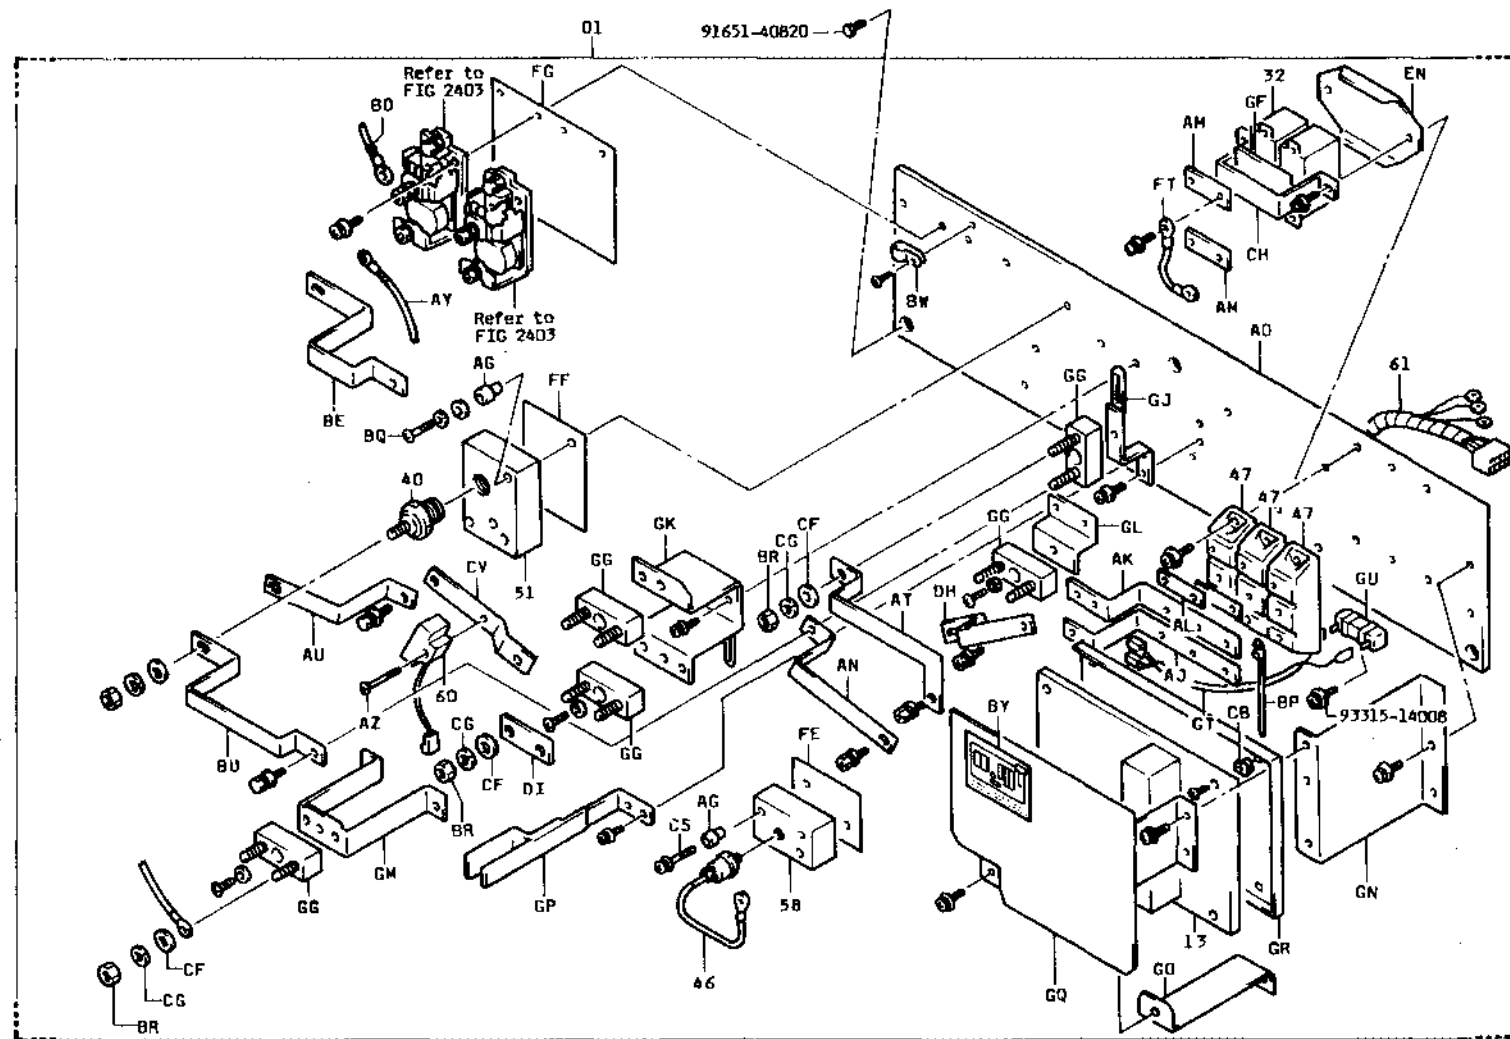

2402-084C

G235-002

2402 084C 0011

FIG-2402
CONTACTOR PANEL

 
2402

MAIN


92/04

DPR (P/S)

STM (P/S)

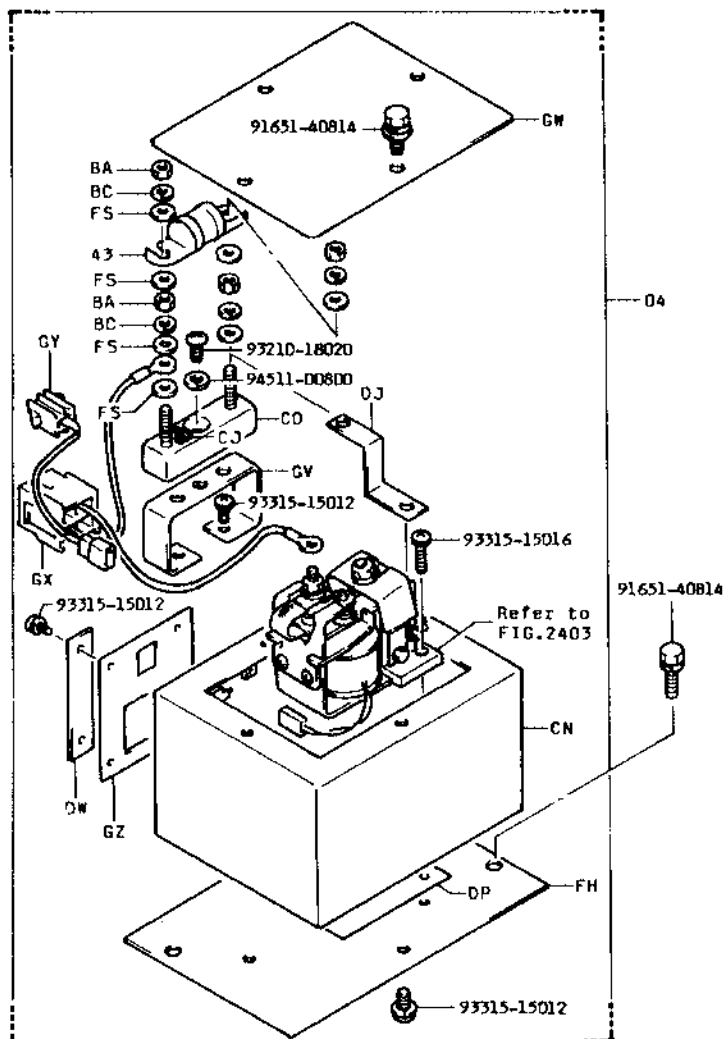

2402-086A

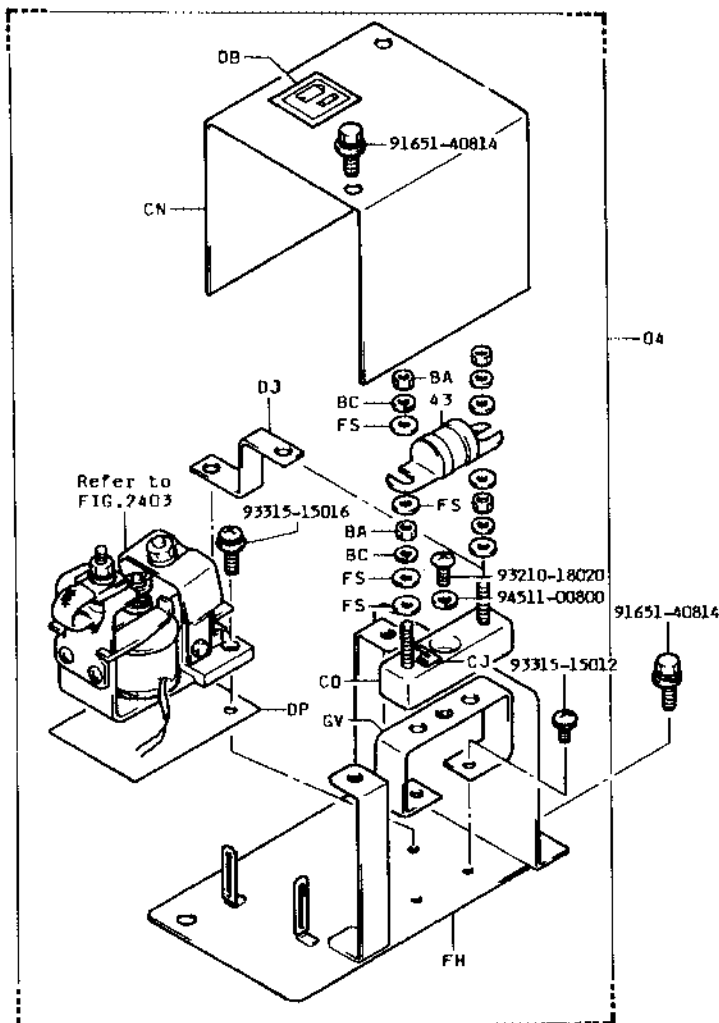 

2402-085A

G235-003

FIG. 2402
CONTACTOR PANEL

2402

MAIN

92/04

PART NAME	PART NAME	QTY
CODE		
2402-01	PANEL ASSY, CONTACTOR	1
2402-04	PANEL ASSY, P/S CONTACTOR	1
2402-13	BOARD ASSY	1
2402-32	CAPACITOR	2
2402-40	DIODE	1
2402-43	FUSE (F3)	1
2402-46	DIODE ASSY	1
2402-47	TRANSISTOR	2
2402-51	HEATSINK	1
2402-58	HEATSINK	1
2402-60	SENSOR ASSY, CURRENT	1
2402-61	HARNESS SUB-ASSY	1
2402-AG	INSULATOR	4
2402-AJ	BAR	1
2402-AK	BAR	1
2402-AL	BAR	2
2402-AM	BAR	2
2402-AN	BAR	1
2402-AD	BASE	1
2402-AT	BAR	1
2402-AU	BAR	1
2402-AY	WIRING	1
2402-AZ	SCREW	1
2402-BA	NUT	4
2402-BC	WASHER, SPRING	4
2402-BE	BAR	1
2402-BD	WIRING	1
2402-BQ	SCREW	2
2402-BR	NUT	16-18
2402-BU	BAR	1
2402-BW	CLAMP	2
2402-BX	GROMMET	4
2402-BY	PLATE, TERMINAL NUMBER	1
2402-CF	WASHER, PLATE	16-18
2402-CG	WASHER, SPRING	16-18
2402-CH	BAND	1
2402-CJ	PLATE, FUSE	1
2402-CL	RESISTOR	1
2402-CN	COVER	1
2402-CD	TERMINAL	1
2402-C5	SCREW	2
2402-CV	BAR	1
2402-CY	BAR	1
2402-DA	BAR	2
2402-DB	PLATE, TERMINAL	1
2402-DH	BAR	1
2402-DI	BAR	2
2402-DJ	BAR	1
2402-DP	SHEET	1
2402-DR	BAR	1
2402-DS	BAR	1
2402-DT	BAR	1
2402-DW	PLATE	2
2402-EN	BRACKET	1
2402-FE	SHEET	1
2402-FF	SHEET	1
2402-FG	SHEET	1
2402-FH	BASE	1
2402-FM	NUT	4
2402-FN	WASHER, PLATE	8
2402-FO	WASHER, SPRING	4
2402-F5	WASHER, PLATE	7
2402-FT	WIRING	2
2402-GF	MAT	2

PART NAME	PART NAME	QTY
CODE		
2402-GG	BLOCK, TERMINAL FUSE	5
2402-GH	BAR SUB-ASSY	1
2402-GI	BRACKET SUB-ASSY, TERMINAL	1
2402-GJ	BRACKET SUB-ASSY, TERMINAL	1
2402-GK	BRACKET SUB-ASSY, TERMINAL	1
2402-GL	BRACKET SUB-ASSY, TERMINAL	1
2402-GM	BRACKET SUB-ASSY, TERMINAL	1
2402-GN	BRACKET, RH	1
2402-GO	BRACKET, LH	1
2402-GP	CLAMP	1
2402-GQ	COVER SUB-ASSY	1
2402-GR	BASE SUB-ASSY	1
2402-GV	BRACKET SUB-ASSY, TERMINAL	1
2402-GW	COVER	1
2402-GX	WIRING	1
2402-GY	HARNESS	1
2402-GZ	GASKET	1

G235-004E

FIG. 2403
CONTACTOR ASSY

 
 
2403

MAIN

91/10

[MF, MR]

[MG, MS, MP, MW]

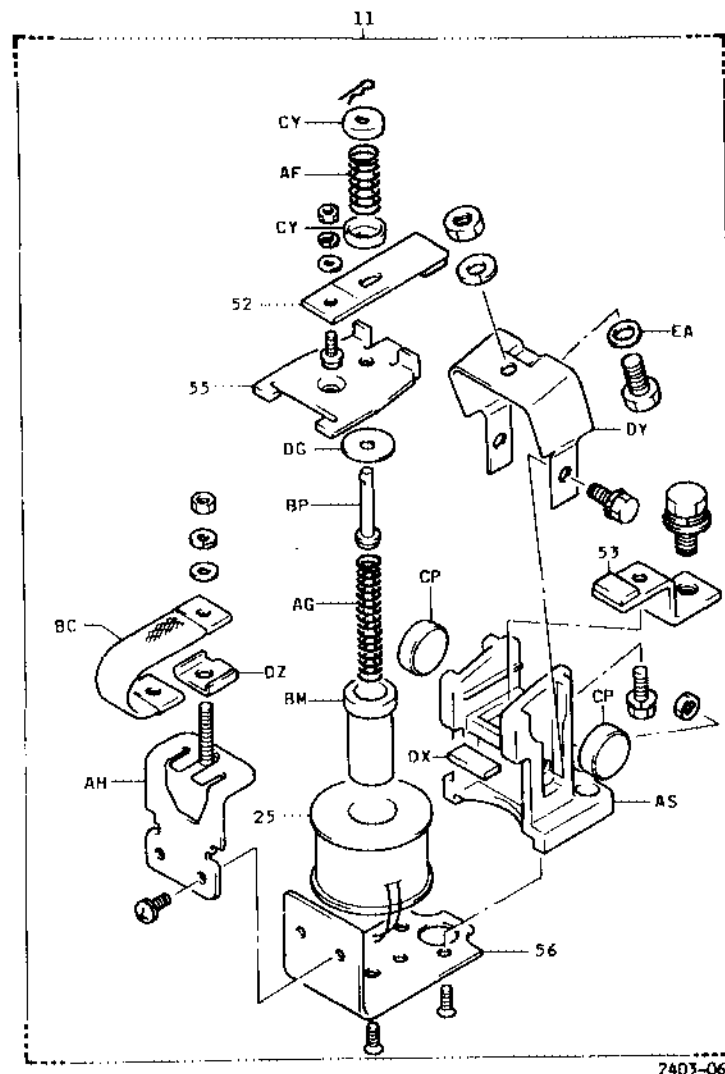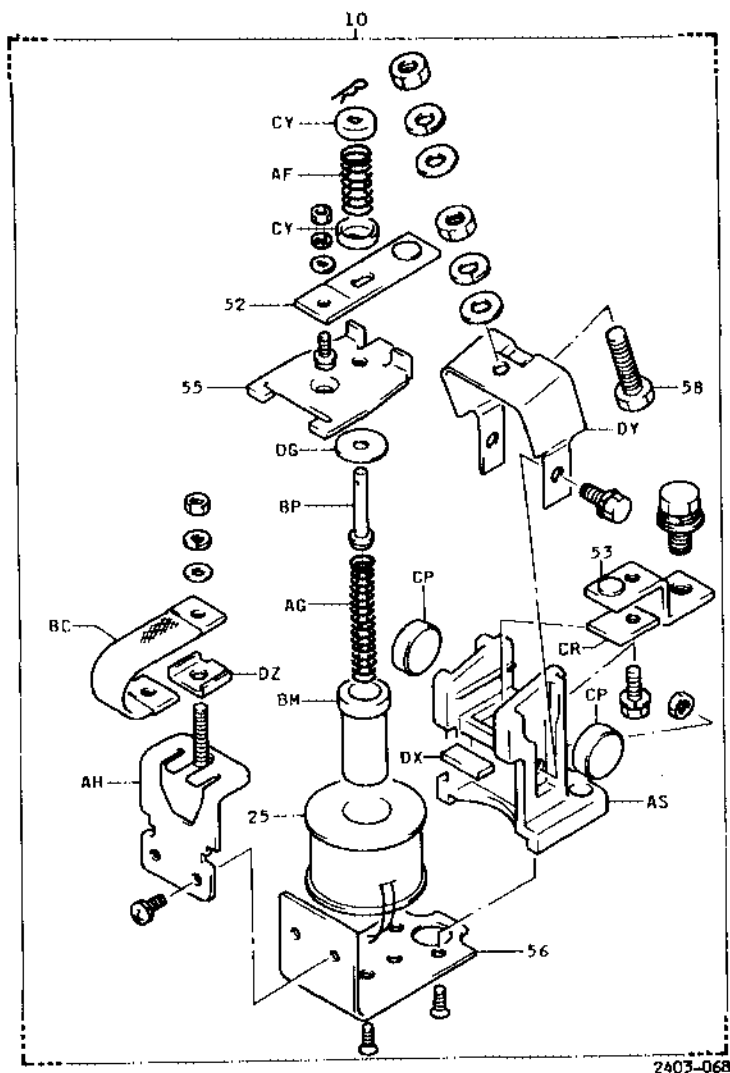

G235-001


FIG. 2403
CONTACTOR ASSY

2403

MAIN

91/10

 (P/5)

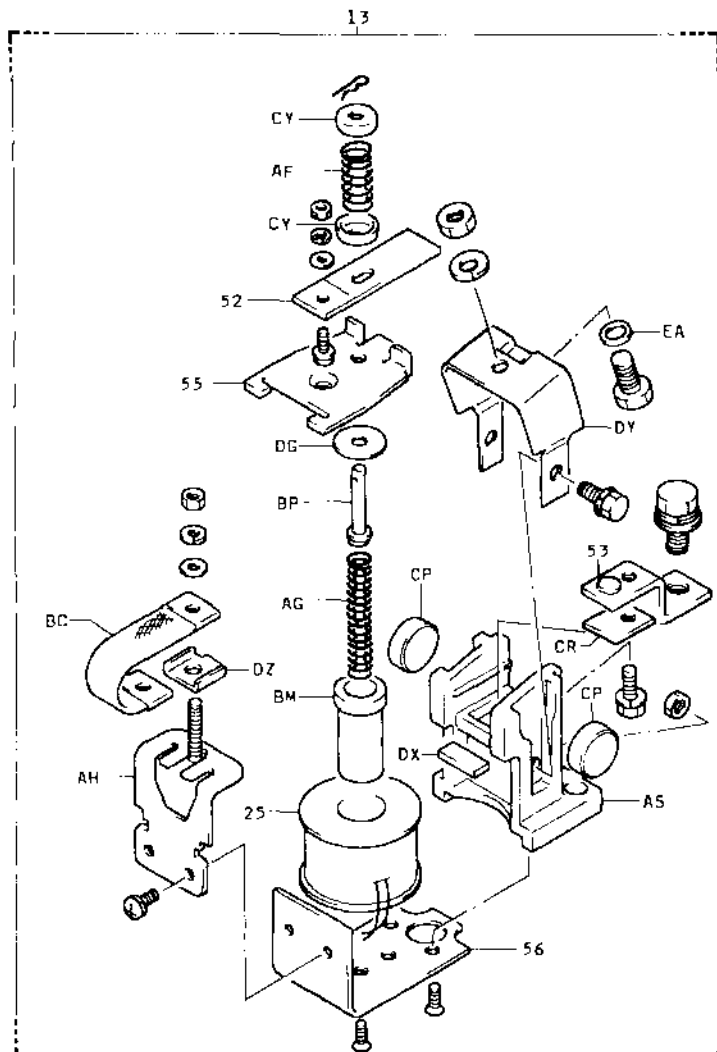

2403-070

PART NAME	PART NAME	QTY
CODE		
2403-10	CONTACTOR ASSY, DRIVE	2
2403-11	CONTACTOR ASSY, SHORT	4
2403-13	CONTACTOR ASSY, POWER STEERING	1
2403-25	COIL SUB-ASSY	1-4
2403-52	CONTACT, MOVING	1-4
2403-53	CONTACT, STATIONARY	1-4
2403-55	ARMATURE	1-4
2403-56	FRAME	1-4
2403-58	CONTACT, B	2
2403-AF	SPRING, NO.1	1-4
2403-AG	SPRING, NO.2	1-4
2403-AH	TERMINAL	1-4
2403-AS	BASE	1-4
2403-BC	WIRING	1-4
2403-BM	CORE	1-4
2403-BP	PIN	1-4
2403-CP	MAGNET	1-4
2403-CR	SPACER	1-2
2403-CY	HOLDER	2-8
2403-DG	SHEET	1-4
2403-DX	PACKING	1-4
2403-DY	YOKE	1-4
2403-DZ	WASHER, LOCK	1-4
2403-EA	SPACER	2-4
2403-EA	SPACER	2

G235-002E

FIG. 2501
BATTERY

 
2501

MAIN


91/09

(G.S. = 36V)

(G.S. = 48V)

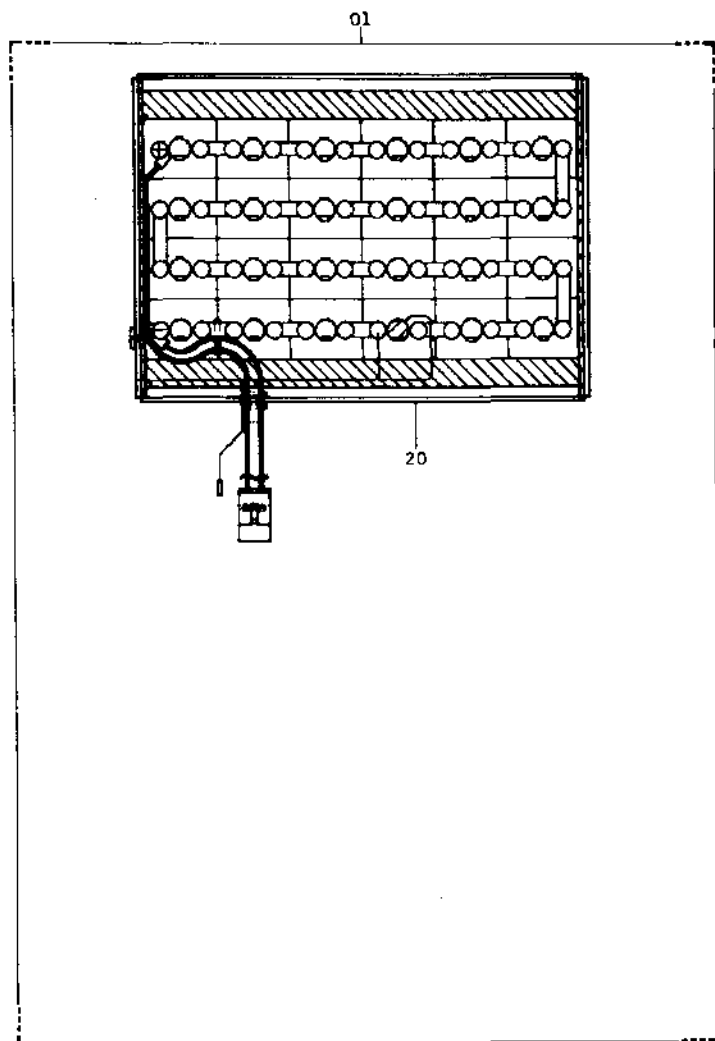

2501-171

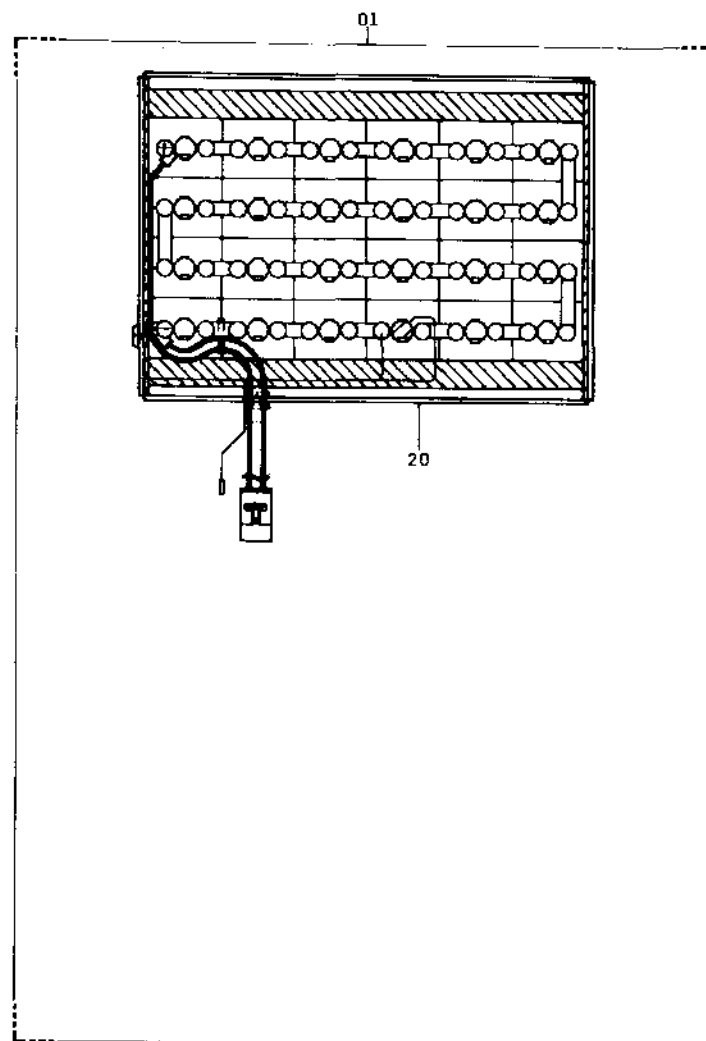 

2501-171

G235-001


FIG. 2501
BATTERY

2501

MAIN

91/09

 (YUASA)

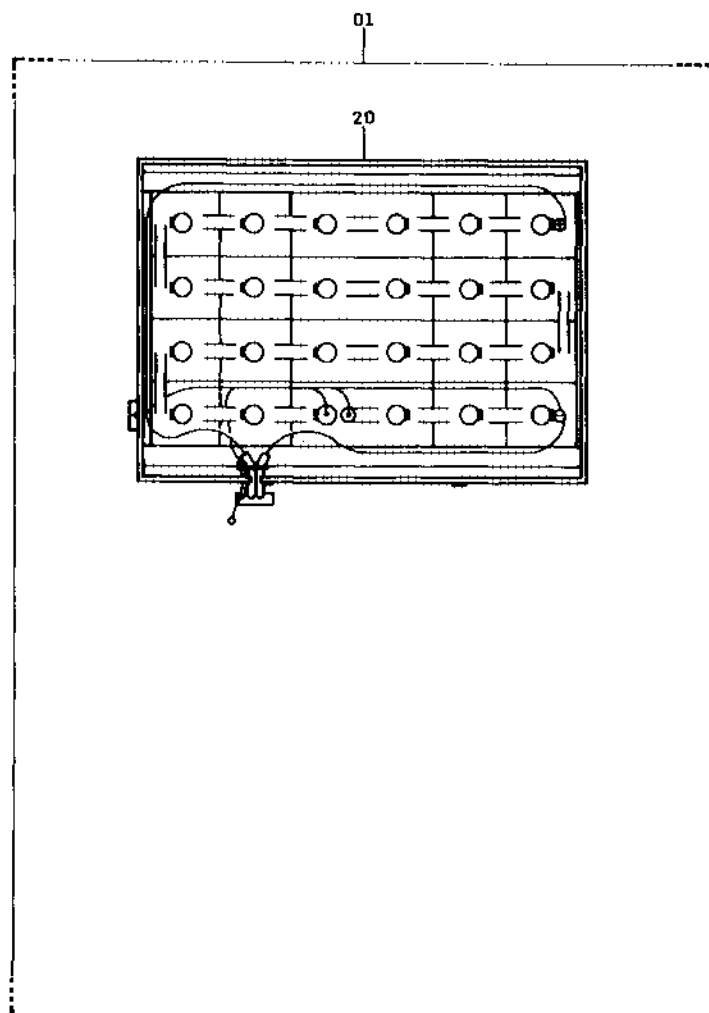

2501-172

PART NAME CODE	PART NAME	QTY
2501-01	BATTERY ASSY, W/CASE	1
2501-20	CASE SUB-ASSY, BATTERY	1

G235-002E

FIG. 2512
BATTERY SEPARATE CHARGER

 
 
2512

MAIN



91/09

(OFF-TRUCK TYPE • G.S.)

(OFF-TRUCK TYPE • YUASA)

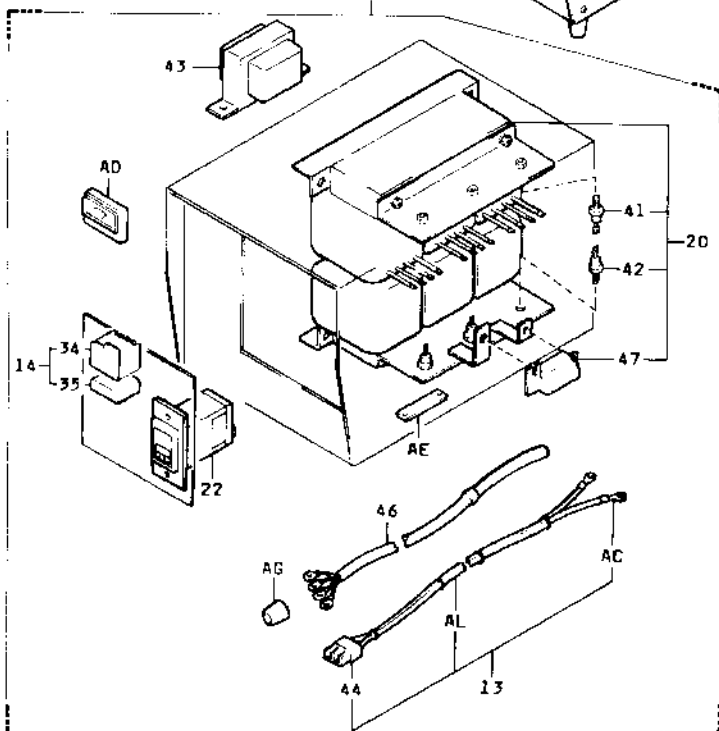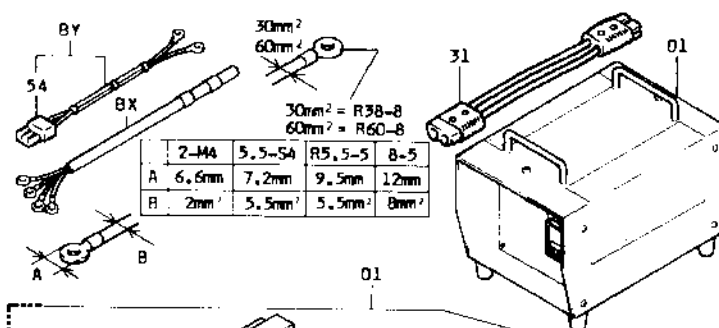

2512-104

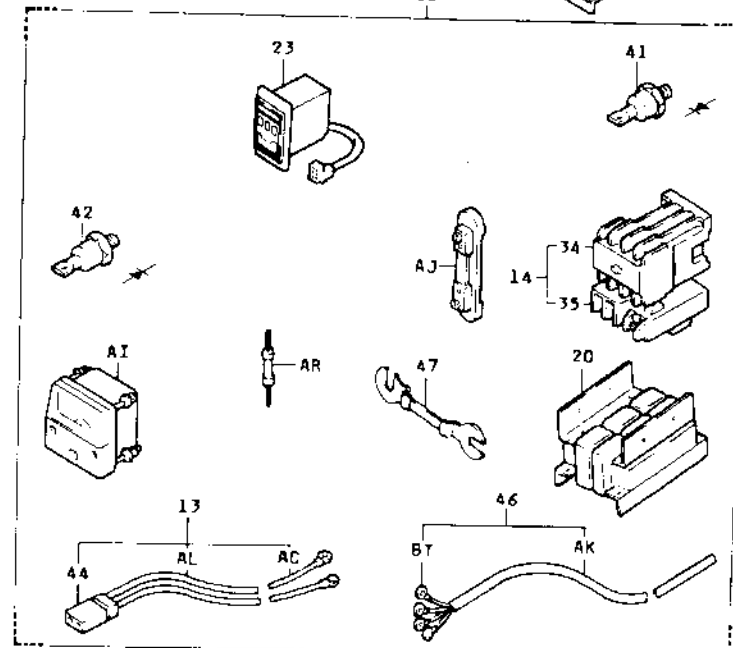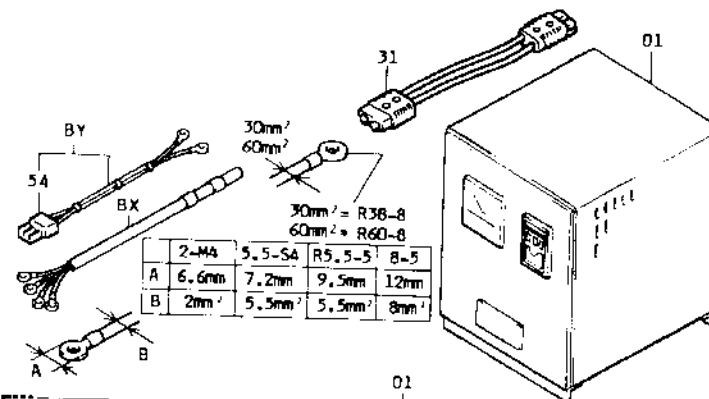  

2512-105

G235-001

FIG. 2512
BATTERY SEPARATE CHARGER

2512

MAIN

91/09

PART NAME CODE	PART NAME	QTY
2512-01	CHARGER ASSY, BATTERY SEPARATE	1
2512-13	CABLE ASSY, CHARGER (DC)	1
2512-14	SWITCH ASSY, MAGNET	1
2512-20	TRANSFORMER SUB-ASSY	1
2512-22	TIMER ASSY	1
2512-23	BMT ASSY	1
2512-31	ADAPTOR SUB-ASSY, CHARGER PLUG	1
2512-34	SWITCH SUB-ASSY, MAGNET	1
2512-35	RELAY SUB-ASSY, THERMAL	1
2512-41	ELEMENT, SILICON, FORWARD	3
2512-42	ELEMENT, SILICON, REVERSE	3
2512-43	SUB-TRANSFORMER, CHARGER	1
2512-44	PLUG	1
2512-46	CABLE (AC)	1
2512-47	FUSE	1
2512-AC	TERMINAL	2
2512-AD	METER ASSY, AMPERE	1
2512-AE	SHUNT	1
2512-AG	RUBBER	4
2512-AI	AMMETER	1
2512-AJ	SHUNT	1
2512-AK	CABLE	1
2512-AL	CABLE	2
2512-AR	RESISTOR	1
2512-BT	TERMINAL	1- 3


G235-002E

FIG-2611
ACCELERATOR

2611

MAIN

 91/09

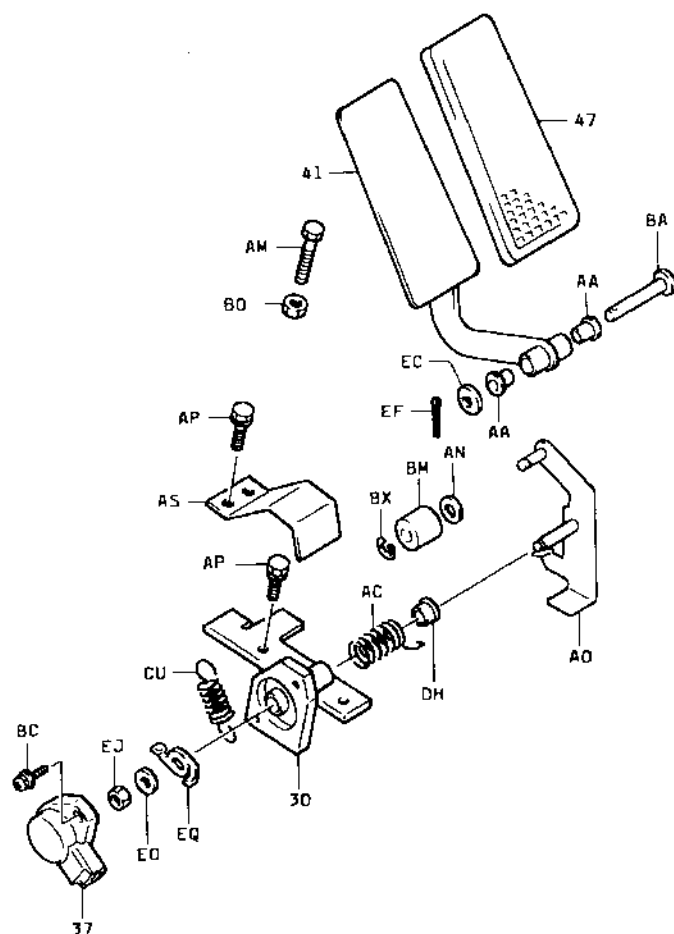

2611-069

PART NAME	PART NAME	QTY
CODE		
2611-30	BRACKET SUB-ASSY, ACCELERATOR BOX	1
2611-37	SENSOR ASSY	1
2611-41	PEDAL, ACCELERATOR	1
2611-47	PAD, PEDAL	1
2611-AA	BUSHING	2
2611-AC	SPRING, ACCELERATOR	1
2611-AM	BOLT	1
2611-AN	WASHER, SPRING	1
2611-AO	ARM SUB-ASSY	1
2611-AP	BOLT	4
2611-AS	COVER	1
2611-BA	PIN	1
2611-BC	SCREW	2
2611-BM	ROLLER, ACCELERATOR LINK	1
2611-BO	NUT	1
2611-BX	RING, SNAP	1
2611-CU	SPRING, COIL REAR	1
2611-DH	BUSHING, ACCELERATOR ARM	2
2611-EC	WASHER, PLATE	1
2611-ED	WASHER	1
2611-EF	PIN, COTTER	1
2611-EJ	NUT	1
2611-EQ	LEVER	1


G235-001E

FIG. 3305
GEAR CASE & GEAR

3305

MAIN

 91/09

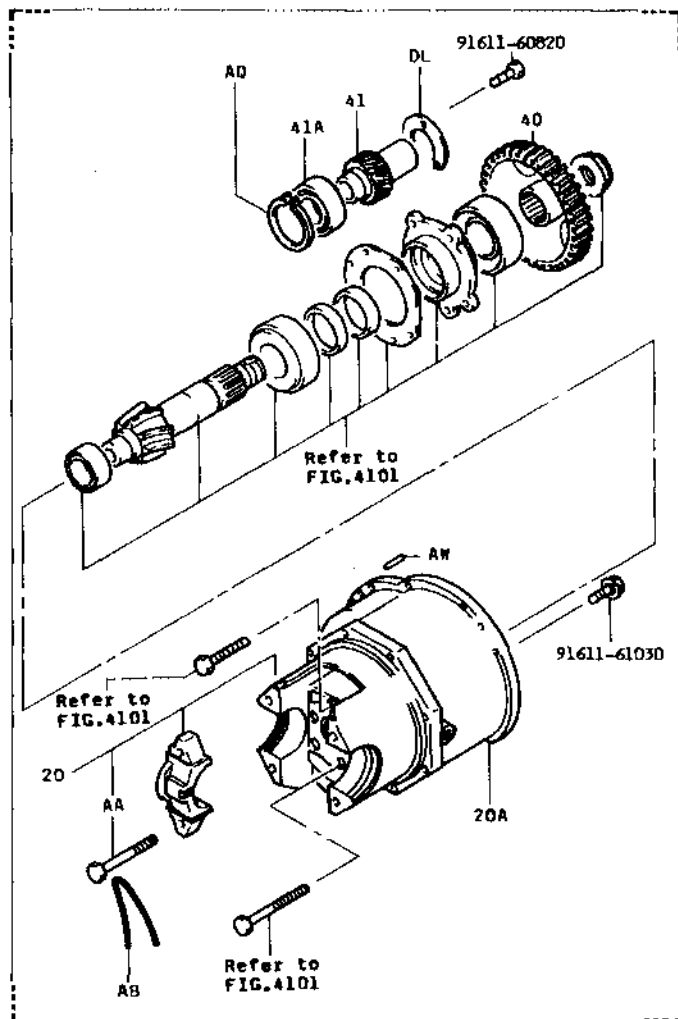

3305-009

PART NAME	PART NAME	QTY
CODE		
3305-20	CASE SUB-ASSY. GEAR	1
3305-20A	GASKET, GEAR CASE	1
3305-40	GEAR, OUTPUT	1
3305-41	GEAR, DRIVE	1
3305-41A	BEARING (FOR DRIVE GEAR)	1
3305-AA	BOLT	4
3305-AB	WIRE	2
3305-AQ	RING, SHAFT SNAP	1
3305-AW	PIN, STRAIGHT	2
3305-DL	PLATE, COVER	1


G235-001E

FIG. 3310
CHANGE LEVER

3310

MAIN

 91/09

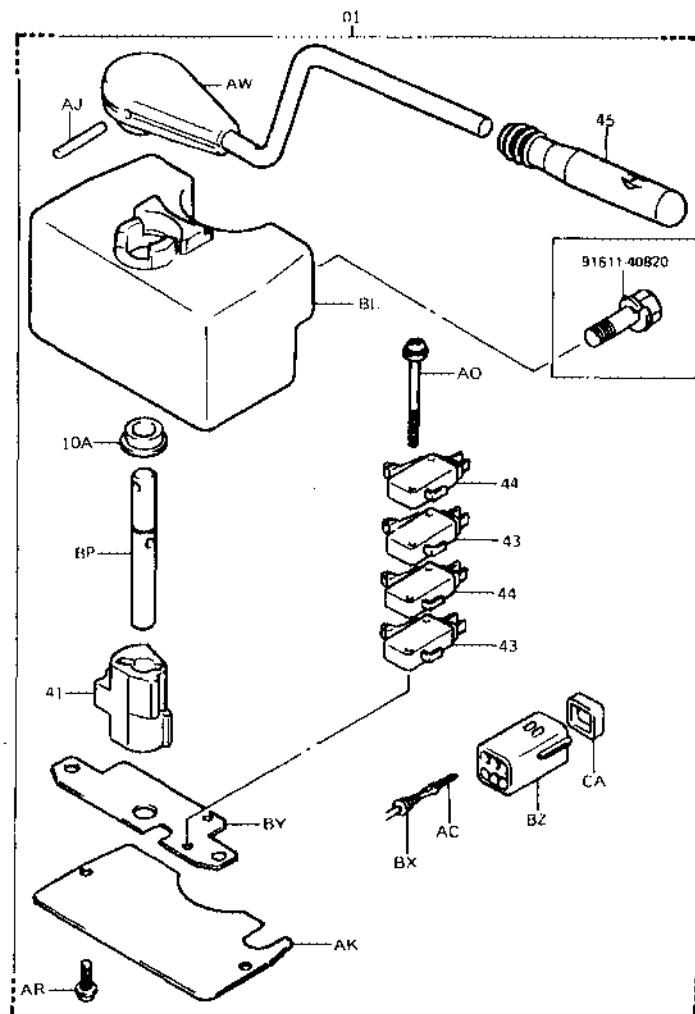


3310 024

PART NAME CODE	PART NAME	QTY
3310-01	SWITCH ASSY, DIRECTION	1
3310-10A	BUSHING, NO.1 (FOR DIRECTION SWITCH SHAFT)	1
3310-41	CAM	1
3310-43	SWITCH, MICRO, NO.1	2
3310-44	SWITCH, MICRO, NO.2	2
3310-45	KNOB	1
3310-AC	TAB	6
3310-AJ	PIN, SPRING	1
3310-AK	PLATE	1
3310-AO	SCREW	2
3310-AR	SCREW	4
3310-AW	LEVER SUB-ASSY	1
3310-BL	CASE, DIRECTION SWITCH	1
3310-BP	SHAFT	1
3310-BX	CAP	6
3310-BY	BASE	1
3310-BZ	CONNECTOR	1
3310-CA	CONNECTOR	1

G235-001E

4101

 91/09



4102 109 0622

FIG. 4101
DIFFERENTIAL

4101

MAIN

91/09

PART NAME CODE	PART NAME	QTY
4101-02	CASE ASSY, DIFFERENTIAL	1
4101-10	RING GEAR & PINION SET, DIFFERENTIAL	1
4101-10A	BEARING, DRIVE PINION	2
4101-10B	BEARING, DRIVE PINION PILOT	1
4101-10C	NUT, LOCK	1
4101-10D	SHIM, BEARING PRELOAD ADJUST	99
4101-20	CASE SUB-ASSY, DIFFERENTIAL	1
4101-20A	NUT, ADJUSTING	2
4101-20B	BEARING, DIFFERENTIAL CASE	2
4101-40	HOUSING, DIFFERENTIAL	1
4101-40B	RING, D (FOR DIFFERENTIAL HOUSING)	1
4101-40C	PLUG, BREATHER (FOR DIFFERENTIAL HOUSING)	1
4101-46	GEAR, SIDE	2
4101-46A	WASHER, SIDE GEAR THRUST	2
4101-47	SPIDER	1
4101-48	PINION	2
4101-48A	WASHER, PINION THRUST	2
4101-49	PLUG, DRAIN	1
4101-49A	GASKET, DRAIN PLUG	1
4101-50	RETAINER, DRIVE PINION BEARING	1
4101-50D	SHIM, DIFFERENTIAL DRIVE PINION BEARING	99
4101-54	CAP, RING GEAR THRUST SCREW	1
4101-55	BOLT, RING GEAR SET	12
4101-AA	PLATE, BOLT LOCK	3
4101-AB	BOLT	12
4101-AC	SCREW, RING GEAR THRUST	1
4101-AD	NUT	1
4101-AF	LOCK, ADJUSTING	2
4101-AG	PLUG, W/HEAD STRAIGHT SCREW	1
4101-AH	GASKET	1
4101-AI	PLUG	1
4101-AJ	GASKET	1
4101-AK	BOLT	2
4101-AL	BOLT	4
4101-AD	SPACER, BEARING	1


G235-002E

FIG. 4201
FRONT AXLE SHAFT

4201

MAIN

 91/09

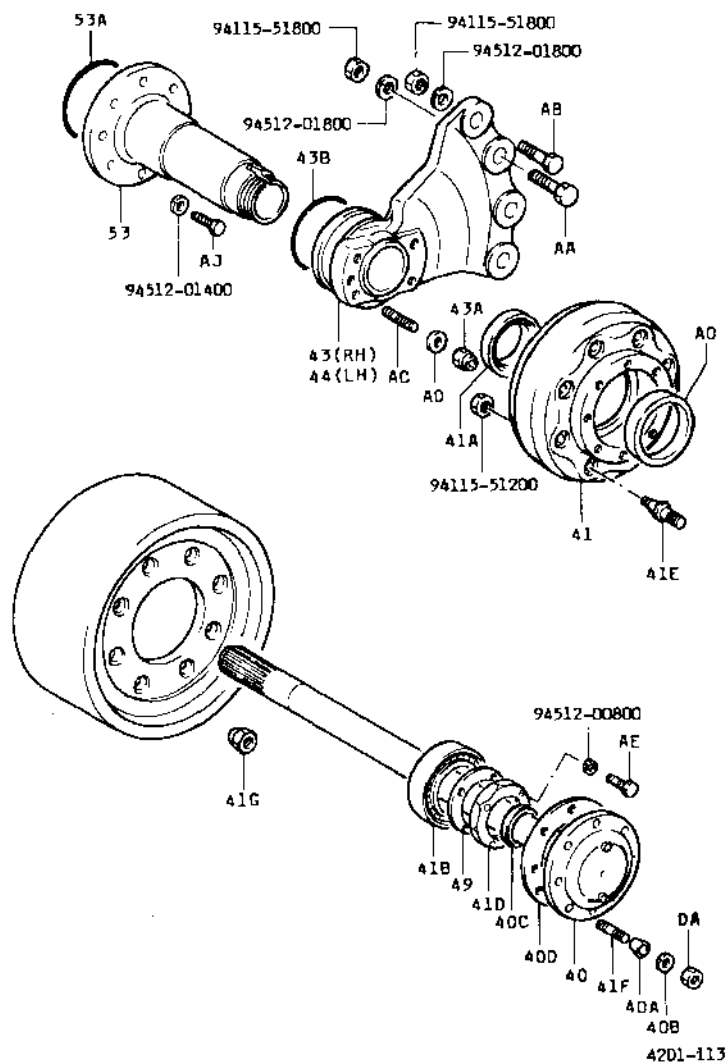

PART NAME CODE	PART NAME	QTY
4201-40	SHAFT, FRONT AXLE	2
4201-40A	WASHER, CORN	16
4201-40B	WASHER, SPRING (FOR FRONT AXLE SHAFT)	16
4201-40C	SEAL, OIL (FOR FRONT AXLE SHAFT)	2
4201-40D	GASKET, FRONT AXLE SHAFT	2
4201-41	HUB, FRONT AXLE	2
4201-41A	SEAL, OIL (FOR FRONT AXLE HUB)	2
4201-41B	BEARING, NO.1 (FOR FRONT AXLE HUB)	2
4201-41D	NUT, BEARING LOCK	2
4201-41E	BOLT, HUB	16
4201-41F	BOLT, STUD (FOR FRONT AXLE SHAFT)	16
4201-41G	NUT, HUB	16
4201-43	BRACKET, FRONT AXLE, RH	1
4201-43A	NUT, BRAKE SET SELF	10
4201-43B	RING, O (FOR FRONT AXLE BRACKET)	2
4201-44	BRACKET, FRONT AXLE, LH	1
4201-49	PLATE, LOCK NUT	2
4201-53	HOUSING, FRONT AXLE	2
4201-53A	RING, O (FOR FRONT AXLE HOUSING)	2
4201-AA	BOLT	4
4201-AB	BOLT, BRACKET SET	4
4201-AC	BOLT, STUD BRAKE SET	10
4201-AD	WASHER, CD SPRING	10
4201-AE	BOLT	2
4201-AJ	BOLT	16
4201-AD	SPACER	2
4201-DA	NUT	16


G235-001E

FIG. 4301
REAR AXLE & TIE-ROD

4301

MAIN

 91/09

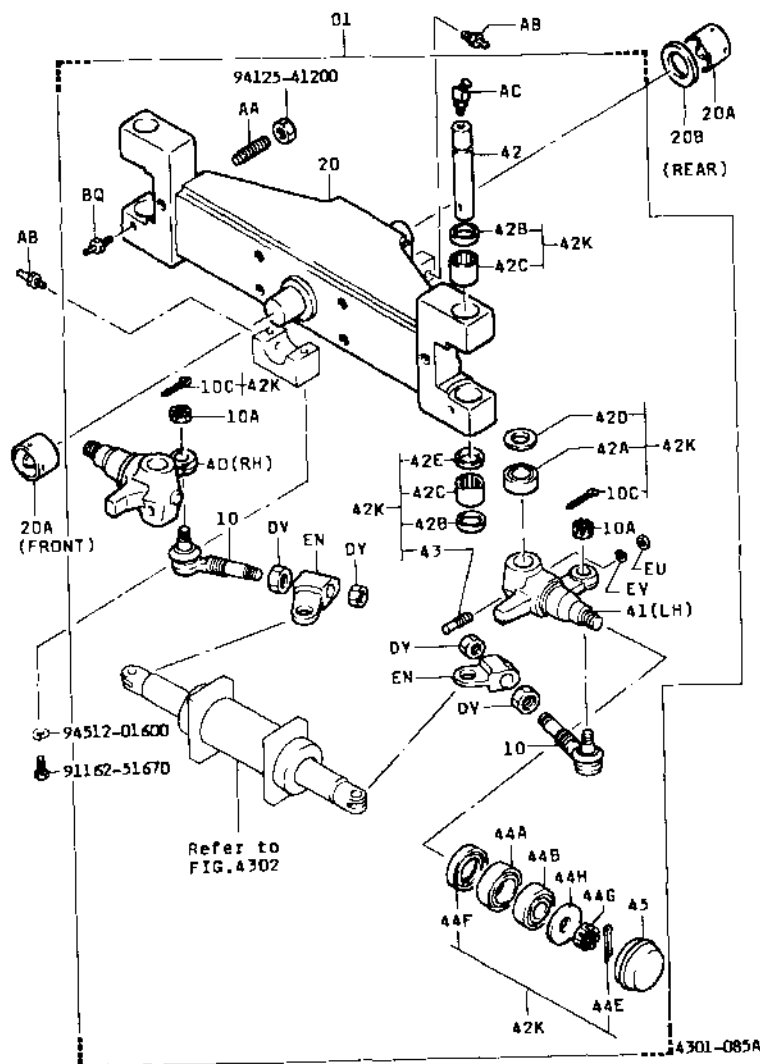

PART NAME	PART NAME	QTY
CODE		
4301-01	AXLE ASSY, RR	1
4301-10	END ASSY, TIE-ROD, NO.1	2
4301-10A	NUT, CASTLE (FOR TIE-ROD END)	2
4301-10C	PIN, COTTER (FOR TIE-ROD END)	2
4301-20	BEAM SUB-ASSY, REAR AXLE	1
4301-20A	BUSHING, REAR AXLE BEAM	2
4301-20B	SHIM, REAR AXLE BEAM	99
4301-40	KNUCKLE, STEERING, RH	1
4301-41	KNUCKLE, STEERING, LH	1
4301-42	PIN, STEERING KNUCKLE KING	2
4301-42A	BEARING, STEERING KNUCKLE THRUST	2
4301-42B	SEAL, OIL, NO.1	4
4301-42C	BEARING, NEEDLE	4
4301-42D	SHIM, STEERING KNUCKLE	99
4301-42E	SEAL, OIL, NO.2	2
4301-42K	SEAL KIT, KING PIN	2
4301-43	PIN, KING PIN LOCK	2
4301-44A	BEARING, INNER	2
4301-44B	BEARING, OUTER	2
4301-44E	PIN, REAR AXLE COTTER	2
4301-44F	SEAL, OIL (FOR REAR AXLE HUB)	2
4301-44G	NUT, CASTLE (FOR REAR AXLE HUB)	2
4301-44H	WASHER, CLAW (FOR REAR AXLE HUB)	2
4301-45	ICAP, REAR AXLE HUB	2
4301-AA	BOLT	2
4301-AB	FITTING, GREASE	2
4301-AC	FITTING, GREASE	2
4301-BQ	FITTING, GREASE	2
4301-DV	NUT	2
4301-DY	NUT	2
4301-EN	JOINT, TIE-ROD	2
4301-EU	NUT	2
4301-EV	WASHER, SPRING	2

G235-001E

4302

91/09




G235-001E

FIG. 4406
FRONT WHEEL & TIRE

4406

MAIN

 91/09

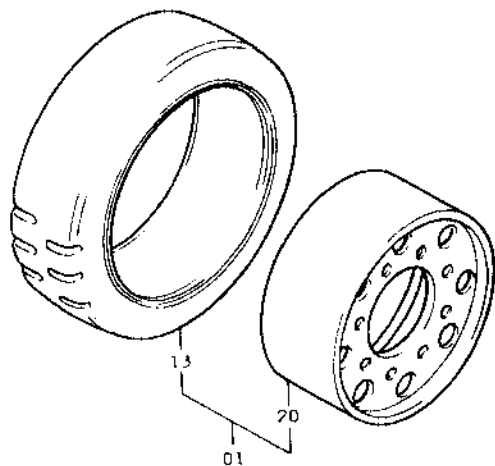

4406-007

PART NAME CODE	PART NAME	QTY
4406-01	WHEEL ASSY	2
4406-13	TIRE ASSY	2
4406-20	WHEEL SUB-ASSY. DISC	2


G235-001E

FIG. 4407
REAR WHEEL & TIRE

4407

MAIN

 91/09

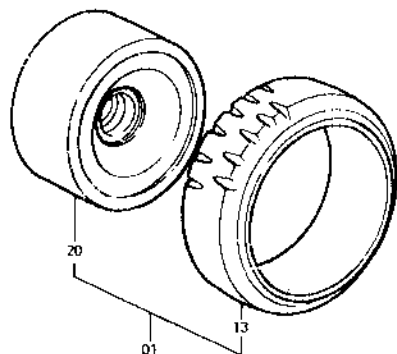

PART NAME	PART NAME	QTY
CODE		
4407-01	WHEEL ASSY	2
4407-13	TIRE ASSY	2
4407-20	WHEEL SUB-ASSY. DISC	2

4407 DD1

G235-001E



FIG. 4501
STEERING WHEEL

4501

MAIN

91/09

  (U.S.A.)

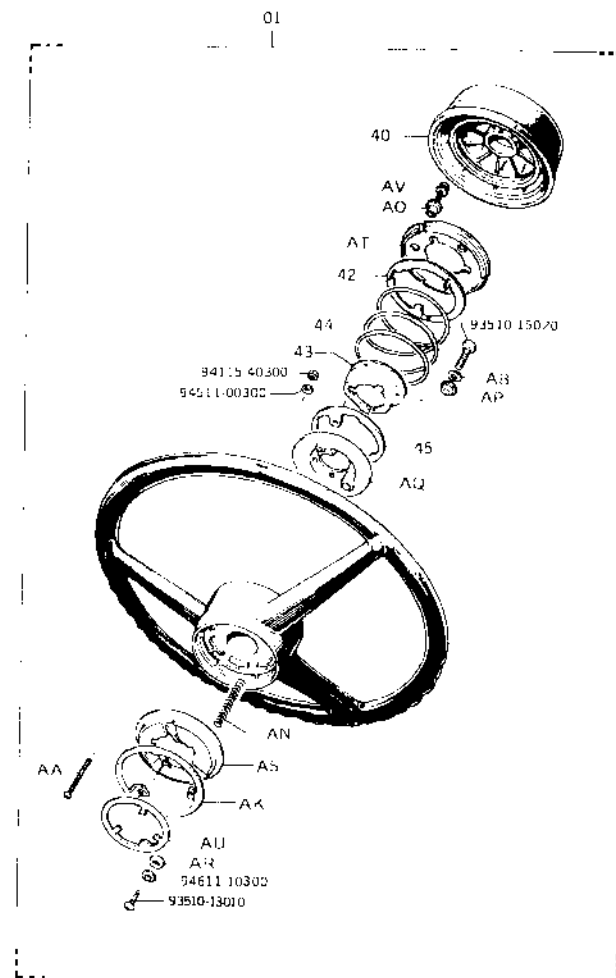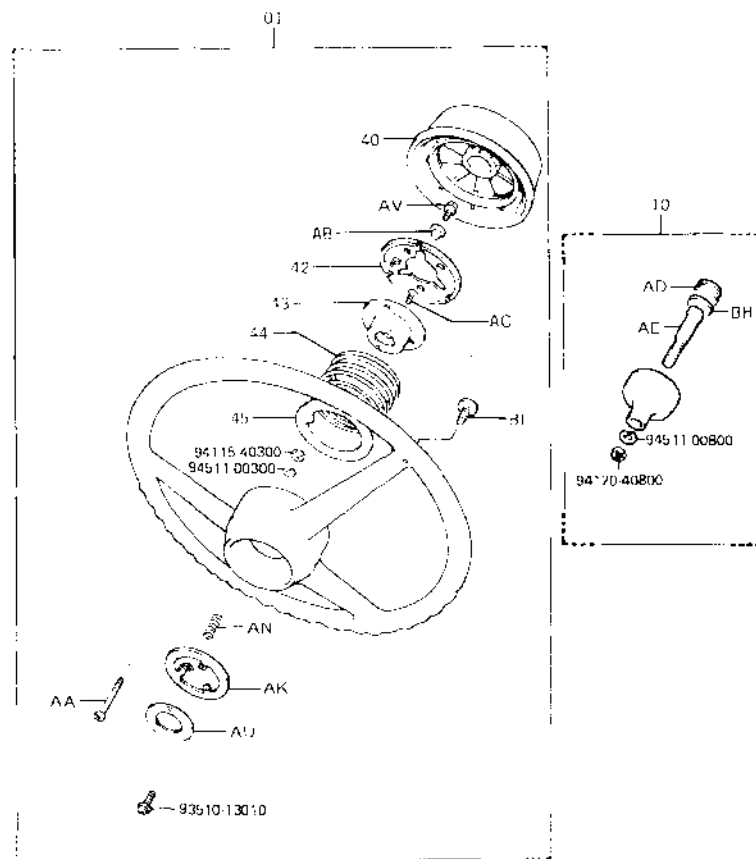

4501-033R

4501 016

G235-001

FIG. 4501
STEERING WHEEL

4501

MAIN

91/09

PART NAME CODE	PART NAME	QTY
4501-01	WHEEL ASSY, STEERING	1
4501-10	KNOB ASSY, STEERING WHEEL	1
4501-40	BUTTON, HORN	1
4501-42	PLATE, HORN CONTACT	1
4501-43	SEAT, HORN CONTACT	1
4501-44	SPRING, HORN	1
4501-45	PLATE, LEAD	1
4501-AA	SCREW	1
4501-AB	WASHER	3
4501-AC	SCREW	3
4501-AD	CAP, STEERING WHEEL	1
4501-AE	BOLT, STEERING WHEEL KNOB SET	1
4501-AK	RING, HORN CONTACT NO.1	1
4501-AN	SPRING, LEAD	1
4501-AD	SPACER, NO.3	3
4501-AP	SPACER, NO.5	3
4501-AQ	SPACER, NO.5	1
4501-AR	SPACER, NO.4	2
4501-AS	SPACER, NO.1	1
4501-AT	PLATE, HORN BUTTON SET	1
4501-AU	RING, HORN CONTACT NO.2	1
4501-AV	SCREW	3
4501-BF	CAP	1
4501-BH	PACKING	1

G235-002E

4502

91/09



G235-001


FIG. 4502 STEERING POST

4502

MAIN

91/09

 (EHPS)

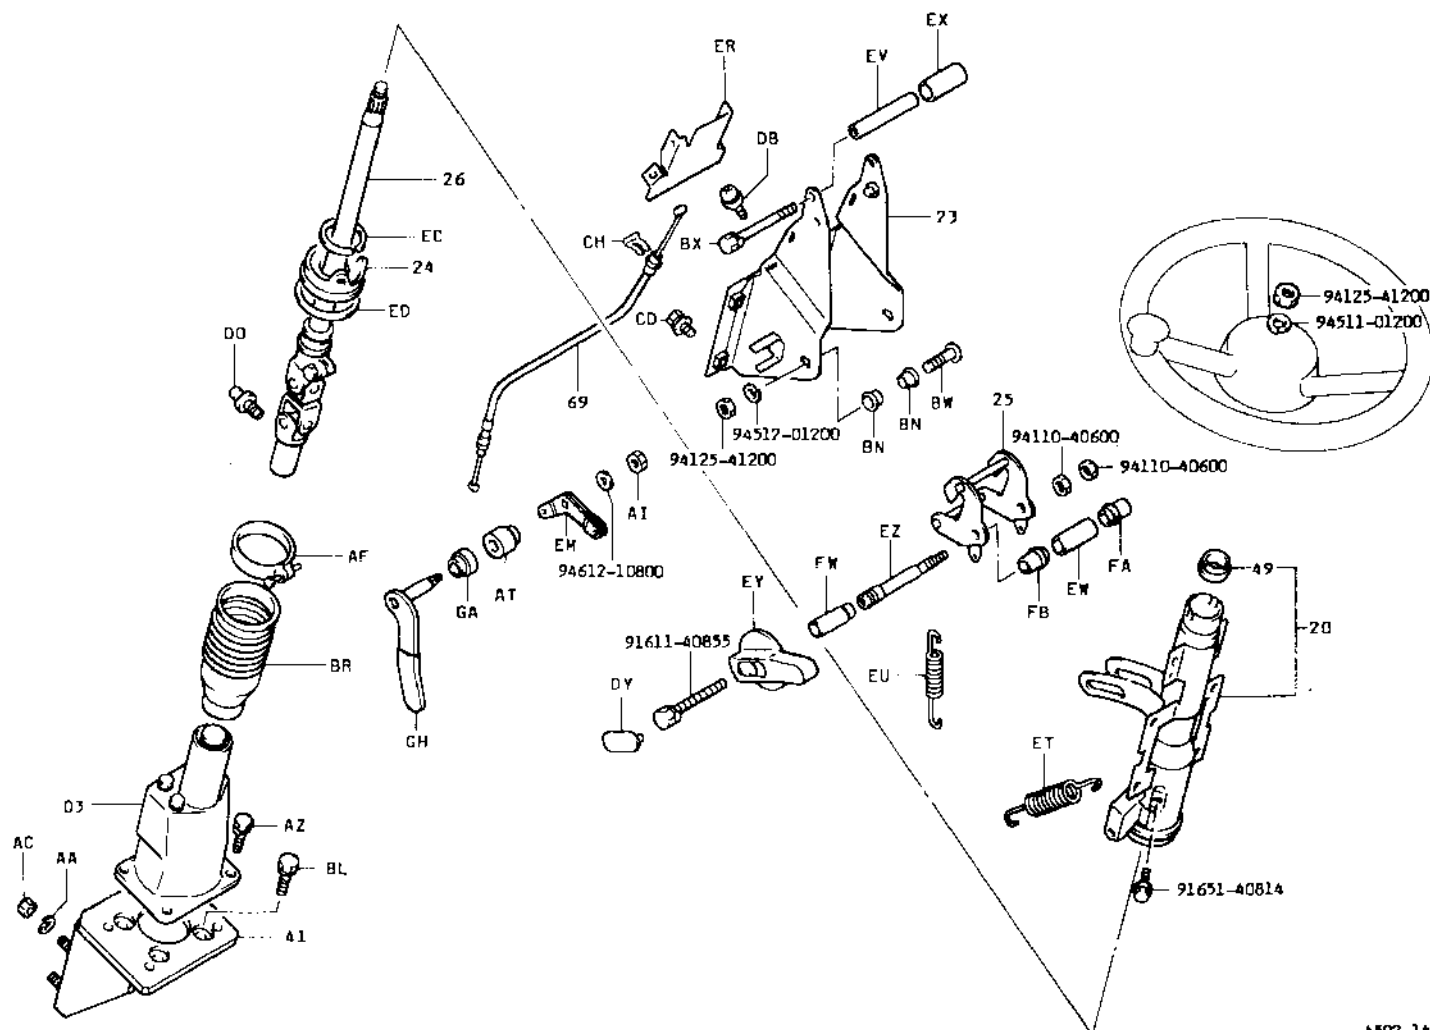

4502-144

G235-002

FIG. 4502
STEERING POST

4502

MAIN

91/09

PART NAME CODE	PART NAME	QTY
4502-03	SENSOR ASSY, TORQUE	1
4502-15	POST ASSY, STEERING	1
4502-20	JACKET SUB-ASSY, MAST	1
4502-23	BRACKET SUB-ASSY, TILT STEERING	1
4502-24	STOPPER SUB-ASSY, STEERING SHAFT	1
4502-25	STOPPER SUB-ASSY, STEERING	1
4502-26	SHAFT SUB-ASSY, TILT STEERING	1
4502-41	BRACKET, STEERING	1
4502-43	SHAFT, STEERING MAIN	1
4502-43A	BEARING (FOR STEERING MAIN SHAFT)	1
4502-49	GROMMET, STEERING COLUMN (INSULATOR)	1
4502-69	WIRE, TILT STEERING	1
4502-AA	WASHER, SPRING	4
4502-AC	NUT	4
4502-AF	CLAMP	1
4502-AJ	NUT	1
4502-AT	COLLAR	1
4502-AU	RING, SNAP	1
4502-AZ	BOLT	4
4502-BA	RING, SNAP	1
4502-BE	RING, O	1
4502-BL	BOLT, W/WASHER	4
4502-BN	BUSHING	4
4502-BQ	BUSHING	1
4502-BR	BOOT, MAST JACKET	1
4502-BT	JACKET	1
4502-BW	BOLT	2
4502-BX	BOLT	1
4502-CD	BOLT	4
4502-CH	CLIP	1
4502-DB	SCREW	4
4502-DO	FITTING, GREASE	1
4502-DY	CAP	1
4502-EC	RING	1
4502-ED	RING	1
4502-EH	HOOK	1
4502-ER	COVER SUB-ASSY, STEERING BRACKET	1
4502-ET	SPRING, TENSION	1
4502-EU	SPRING, TENSION	1
4502-EV	PIPE	1
4502-EW	COLLAR, TILT LOCK	1
4502-EX	HOSE	1
4502-EY	LEVER SUB-ASSY, TILT LOCK	1
4502-EZ	BOLT, TILT LOCK	1
4502-FA	NUT, ADJUSTING, RH	1
4502-FB	NUT, ADJUSTING, LH	1
4502-FW	PIPE	1
4502-GA	COLLAR	1
4502-GH	LEVER SUB-ASSY, TILT LOCK	1


G235-003E

FIG. 4503
HYDROSTATIC STEERING VALVE

4503

MAIN

 91/09

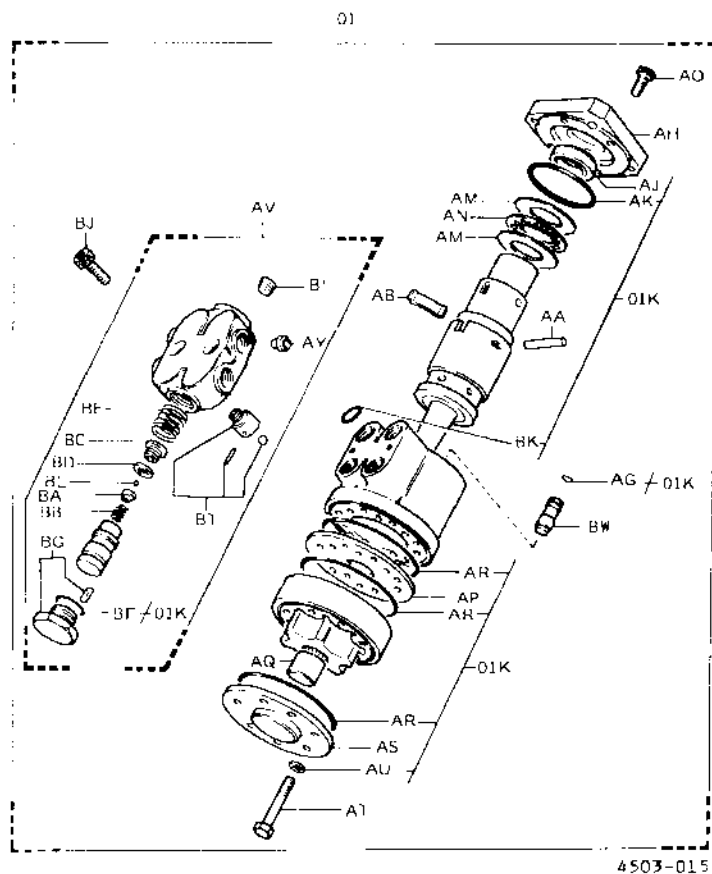

4503-015

PART NAME	PART NAME	QTY
CODE		
4503-01	VALVE ASSY, HYDROSTATIC STEERING	1
4503-01K	VALVE O/H KIT, HYDROSTATIC STEERING	1
4503-AA	PIN, STRAIGHT	1
4503-AB	SPRING, CENTERING	6
4503-AG	RING, O	1
4503-AH	PLATE, MOUNTING	1
4503-AJ	PACKING, Y	1
4503-AK	RING, O	1
4503-AM	RACE, SIDE	2
4503-AN	BEARING, NEEDLE	1
4503-AD	BOLT, SOCKET	4
4503-AP	PLATE, SIDE	1
4503-AQ	SPACER	1
4503-AR	RING, O	3
4503-AS	CAP, END	1
4503-AT	BOLT	7
4503-AU	GASKET	7
4503-AV	VALVE ASSY, RELIEF	1
4503-AY	NIPPLE	4
4503-BA	RETAINER	1
4503-BB	SPRING	1
4503-BC	VALVE	1
4503-BD	SHIM	99
4503-BE	SPRING	1
4503-BF	RING, O	1
4503-BG	PLUG	1
4503-BI	PLUG	1
4503-BJ	BOLT, SOCKET	2
4503-BK	RING, O	4
4503-BL	BALL, STEEL	1
4503-BT	VALVE ASSY, CHECK	1
4503-BW	VALVE ASSY, CHECK	1

G235-001E

4507

91/09

 


FIG. 4507
DRAG LINK & STEERING PIPING

4507

MAIN

91/09

PART NAME CODE	PART NAME	QTY
4507-30	PIPE SUB-ASSY, NO.1 (STEERING TO CYLINDER) --	1
4507-32	PIPE SUB-ASSY (PUMP TO STEERING) -----	1
4507-38	PIPE SUB-ASSY (VALVE TO STEERING) -----	1
4507-43	HOSE, POWER CYLINDER, NO.2 -----	2
4507-45	HOSE, POWER STEERING PUMP SUCTION -----	1
4507-46	HOSE, HIGH PRESSURE (PUMP TO STEERING) -----	1
4507-55	HOSE, LOW PRESSURE -----	1
4507-61	PIPE SUB-ASSY, SUCTION -----	1
4507-AB	CLAMP, PIPE -----	2
4507-AS	FITTING -----	1
4507-AT	FITTING -----	1
4507-AU	RING, O -----	2
4507-AV	PIPE -----	1
4507-BB	CLAMP -----	4
4507-BP	RUBBER, CUSHION -----	1
4507-DZ	PIPE -----	1
4507-JD	RUBBER, CUSHION -----	1
4507-KN	GUARD SUB-ASSY, HOSE -----	1


G235-002E

FIG. 4510
STEERING OIL PUMP

4510

MAIN

 91/09

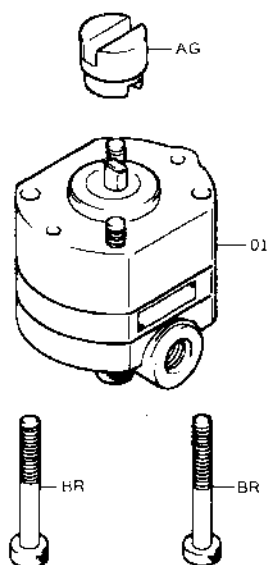

4510-018

PART NAME CODE	PART NAME	QTY
4510-01	PUMP ASSY, POWER STEERING	1
4510-AG	JOINT, DLOHAM	1
4510-BR	SCREW	2

G235-001E

4601

91/09



G235-001E


FIG. 4602
DEAD-MAN BRAKE

4602

MAIN

92/04

 (DEAD-MAN) (1/2)

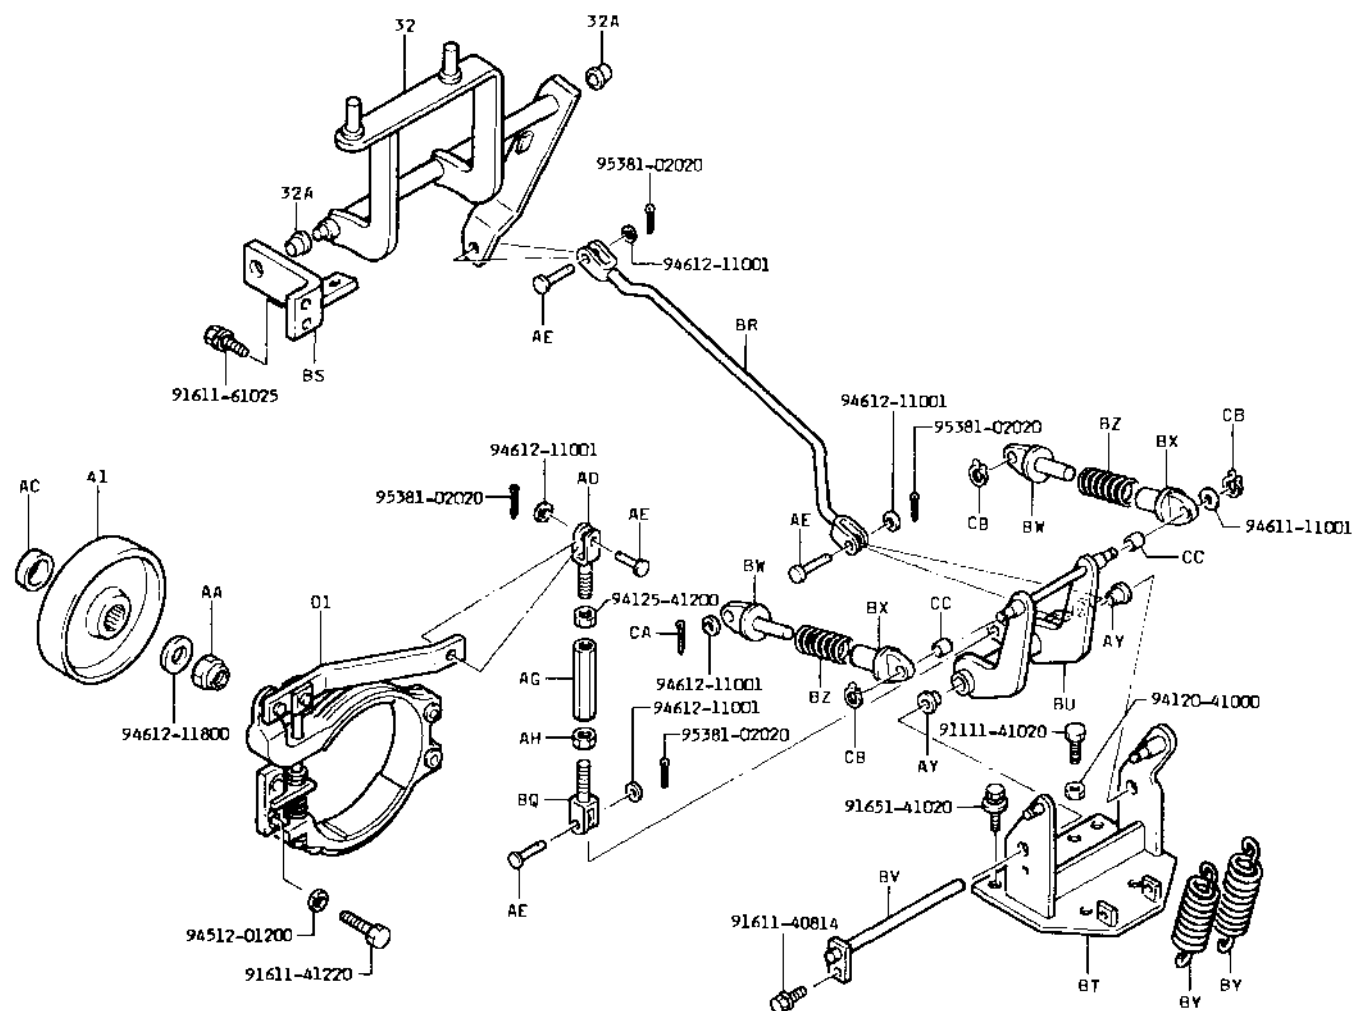

4602-007A

G235-001


FIG. 4602
DEAD-MAN BRAKE

4602

MAIN

92/04

 (DEAD-MAN) [2/2]

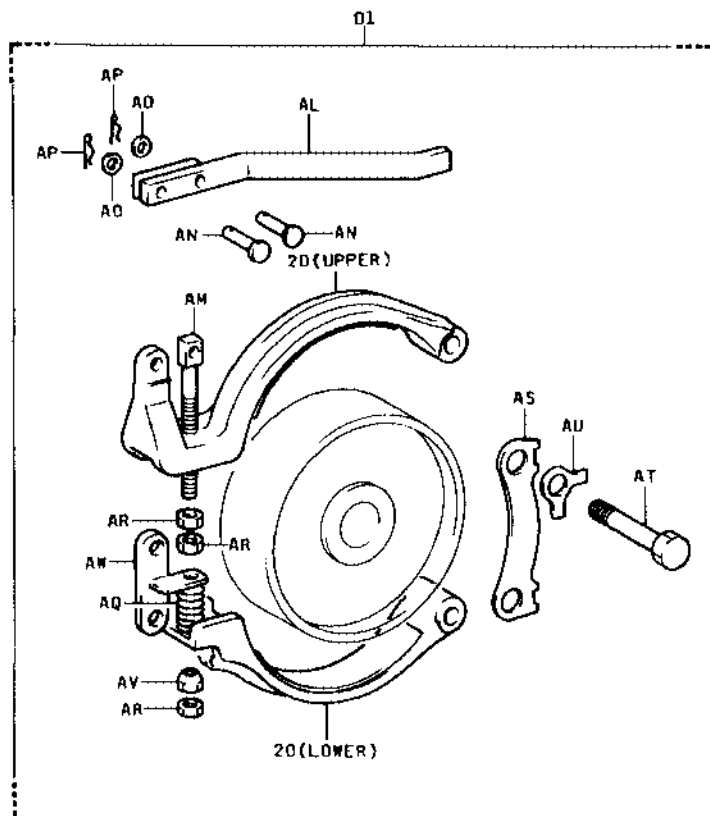

4602-008

PART NAME	PART NAME	QTY
CODE		
4602-01	BRAKE ASSY, DEAD-MAN	1
4602-20	SHOE SUB-ASSY, BRAKE	1
4602-32	LINK SUB-ASSY, DEAD-MAN BRAKE	1
4602-32A	BUSHING (FOR BRAKE LINK)	2
4602-41	DRUM, DEAD-MAN BRAKE	1
4602-AA	NUT, SELF LOCK	1
4602-AC	COLLAR	1
4602-AD	ROD SUB-ASSY, DEAD-MAN BRAKE	1
4602-AE	PIN, W/HOLE	4
4602-AG	TURNBUCKLE	1
4602-AH	NUT	1
4602-AL	LEVER ASSY, BRAKE	1
4602-AM	STRUT	1
4602-AN	PIN, BRAKE LEVER	2
4602-AD	WASHER, PLATE	2
4602-AP	PIN, SNAP	2
4602-AQ	SPRING, SHOE RETURN	1
4602-AR	NUT	3
4602-AS	PLATE, GUIDE	1
4602-AT	STUD	2
4602-AU	WASHER, LOCK	2
4602-AV	NUT, STRUT	1
4602-AW	BRACKET	1
4602-AY	BUSHING	2
4602-BQ	ROD SUB-ASSY, DEAD-MAN BRAKE	1
4602-BR	ROD SUB-ASSY, DEAD-MAN BRAKE	1
4602-BS	BRACKET SUB-ASSY, LINK	1
4602-BT	BRACKET SUB-ASSY, DEAD-MAN BRAKE	1
4602-BU	LINK SUB-ASSY, DEAD-MAN BRAKE	1
4602-BV	PIN SUB-ASSY, BRAKE LINK	1
4602-BW	BRACKET SUB-ASSY, SPRING	2
4602-BX	BRACKET SUB-ASSY, SPRING	2
4602-BY	SPRING, TENSION	2
4602-BZ	SPRING, COMPRESSION	2
4602-CA	PIN, COTTER	1
4602-CB	RING, SHAFT SNAP	3
4602-CC	BUSHING	4

G235-002E



FIG. 4701
BRAKE PEDAL

4701

MAIN

91/09

  (2-PEDAL)

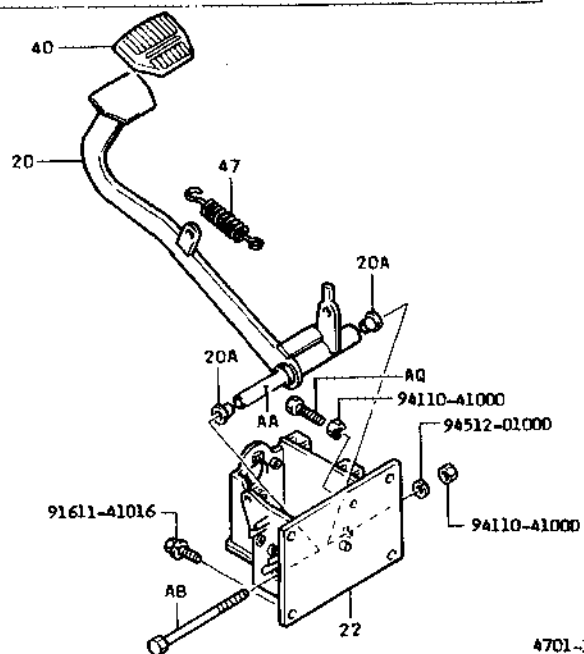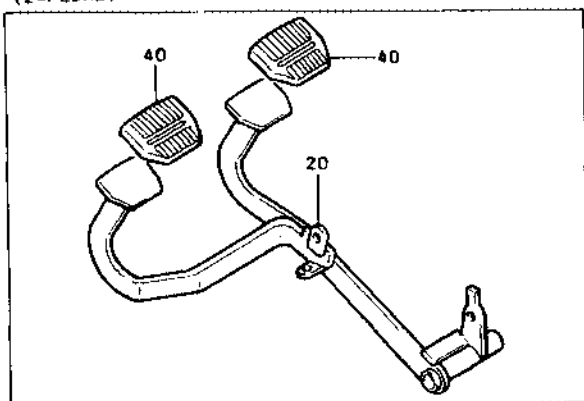

PART NAME	PART NAME	QTY
CODE		
4701-20	PEDAL SUB-ASSY. BRAKE	1
4701-20A	BUSHING (FOR BRAKE PEDAL)	2
4701-22	BRACKET SUB-ASSY. BRAKE PEDAL	1
4701-40	PAD, PEDAL	1- 2
4701-47	SPRING, TENSION (FOR PEDAL RETURN)	1- 2
4701-AA	SPACER	1
4701-AB	BOLT	1
4701-AQ	BOLT	1


 
G235-001E

FIG. 4702
BRAKE MASTER CYLINDER

4702

MAIN

 91/09

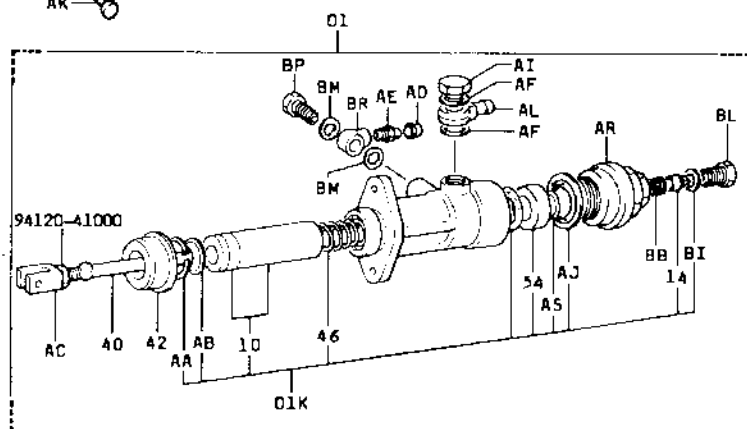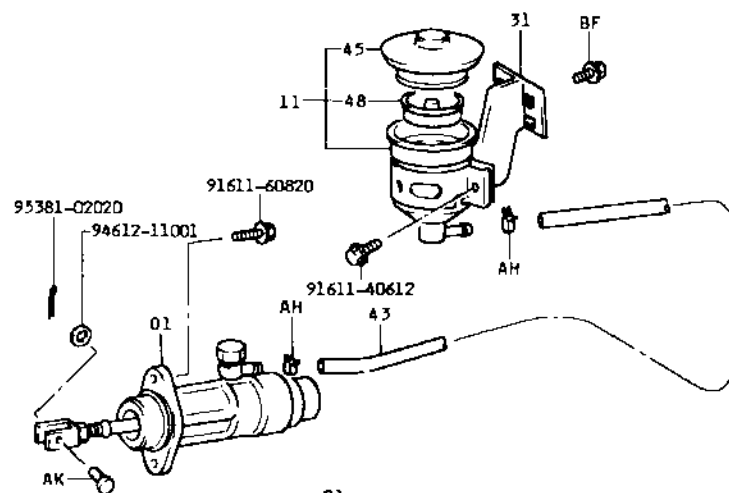

4702-065

PART NAME	PART NAME	QTY
CODE		
4702-01	CYLINDER ASSY, MASTER	1
4702-01K	CYLINDER O/H KIT, MASTER	1
4702-10	PISTON SUB-ASSY, MASTER CYLINDER	1
4702-11	RESERVOIR SET, MASTER CYLINDER	1
4702-14	VALVE ASSY	1
4702-31	BRACKET SUB-ASSY, RESERVOIR	1
4702-40	ROD, PUSH	1
4702-42	BOOT	1
4702-43	HOSE, RESERVOIR	1
4702-45	CAP, RESERVOIR	1
4702-46	SPRING, COMPRESSION (FOR PISTON RETURN)	1
4702-48	STRAINER	1
4702-54	CUP, CYLINDER	1
4702-AA	RING, HOLE SNAP	1
4702-AB	PLATE, PISTON STOP	1
4702-AC	CLEVIS, PUSH ROD	1
4702-AD	CAP, BLEEDER PLUG	1
4702-AE	PLUG, BLEEDER	1
4702-AF	GASKET	2
4702-AH	CLIP	2
4702-AI	BOLT, UNION	1
4702-AJ	GASKET	1
4702-AK	PIN	1
4702-AL	UNION	1
4702-AR	CAP	1
4702-AS	SEAT	1
4702-BB	SPRING, COMPRESSION	1
4702-BF	BOLT	2
4702-BI	GASKET	1
4702-BL	PLUG	1
4702-BM	GASKET	2
4702-BP	BOLT, UNION	1
4702-BR	UNION	1


G235-001E

FIG. 4714
BRAKE PIPE

4714

MAIN

 91/09

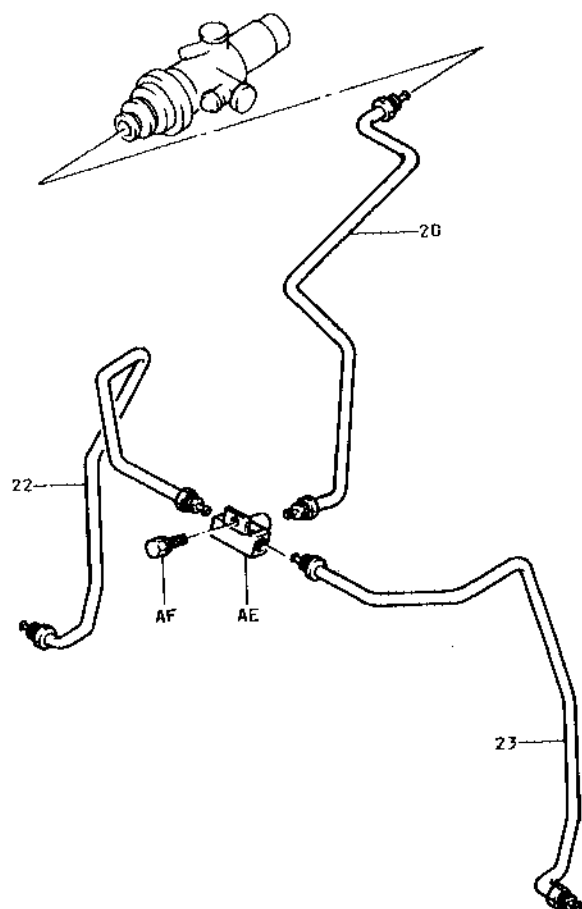

4714-138

PART NAME	PART NAME	QTY
CODE		
4714-20	PIPE SUB-ASSY, BRAKE, MAIN NO.1	1
4714-22	PIPE SUB-ASSY, BRAKE, RH NO.1	1
4714-23	PIPE SUB-ASSY, BRAKE, LH NO.1	1
4714-AE	3-WAY SUB-ASSY	1
4714-AF	BOLT	1
4714-AG	CLAMP	2


G235-001E

FIG. 4715
DRUM BRAKE

4715

MAIN

 91/09

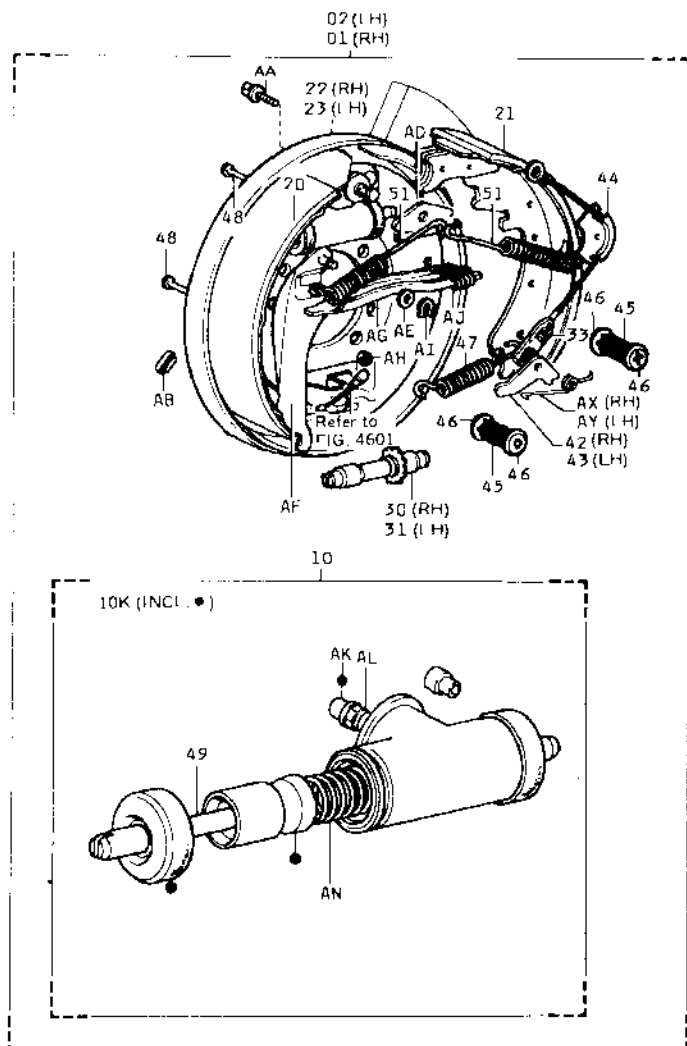

4715-010B

PART NAME	PART NAME	QTY
CODE		
4715-01	BRAKE ASSY, RH	1
4715-02	BRAKE ASSY, LH	1
4715-10	CYLINDER ASSY, WHEEL	2
4715-10K	CYLINDER O/H KIT, WHEEL	2
4715-20	SHOE SUB-ASSY (FOR FRONT OR UPPER)	2
4715-21	SHOE SUB-ASSY (FOR REAR OR LOWER)	1
4715-22	PLATE SUB-ASSY, BACKING, RH	1
4715-23	PLATE SUB-ASSY, BACKING, LH	1
4715-30	SCREW SUB-ASSY, ADJUSTING, RH	1
4715-31	SCREW SUB-ASSY, ADJUSTING, LH	1
4715-33	CABLE & FITTING SUB-ASSY	2
4715-42	LEVER, AUTOMATIC ADJUSTMENT, RH	1
4715-43	LEVER, AUTOMATIC ADJUSTMENT, LH	1
4715-44	GUIDE, CABLE	2
4715-45	SPRING, SHOE HOLD DOWN	4
4715-46	CUP, SHOE HOLD DOWN	8
4715-47	SPRING, ADJUSTER	2
4715-48	PIN, SHOE HOLD DOWN	4
4715-49	ROD, PUSH	4
4715-51	SPRING, ANCHOR TO SHOE	2
4715-AA	BOLT & WASHER SET	4
4715-AB	COVER, HOLE	2
4715-AD	PLATE, SHOE GUIDE	2
4715-AE	WASHER, SPRING	2
4715-AF	LEVER SUB-ASSY, PARKING	1
4715-AG	STRUT, LEVER	2
4715-AH	RING, SNAP	2
4715-AI	RETAINER	2
4715-AJ	SPRING, STRUT TO SHOE	2
4715-AK	CAP, BLEEDER SCREW	2
4715-AL	SCREW, BLEEDER	2
4715-AN	SPRING, WHEEL CYLINDER	2
4715-AX	SPRING, LEVER RETURN, RH	1
4715-AY	SPRING, LEVER RETURN, LH	1


 
G235-001E

FIG. 5101
FRAME & WEIGHT

5101

MAIN

 91/09

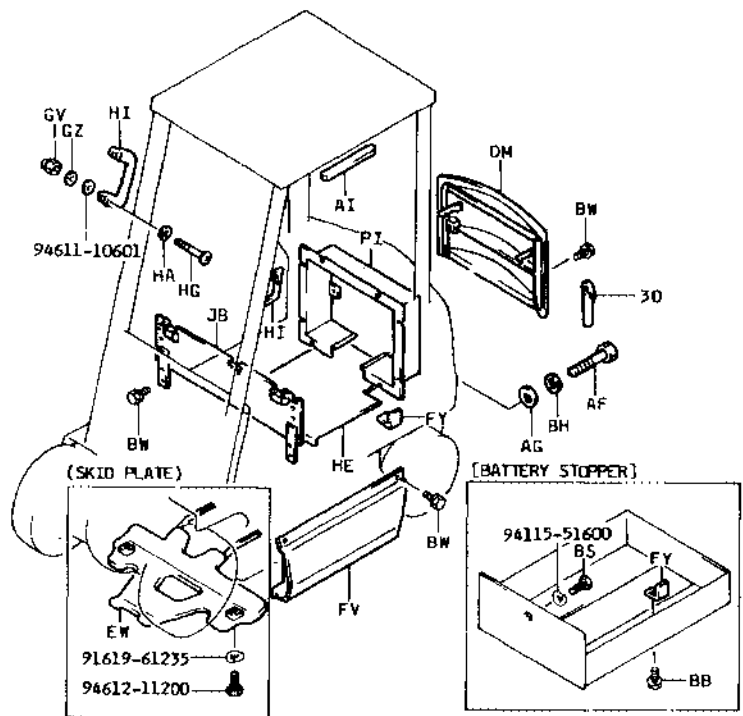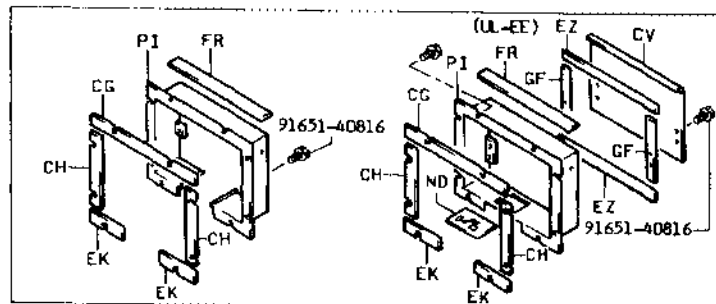


PART NAME CODE	PART NAME	QTY
5101-30	DRAWBAR SUB-ASSY	1
5101-AF	BOLT, HEXAGON	2
5101-AG	WASHER, PLATE	2
5101-AI	SPONGE	1
5101-BB	BOLT	2
5101-BH	WASHER, SPRING	2
5101-BS	BOLT	1
5101-BW	BOLT	10
5101-CG	RUBBER	1
5101-CH	RUBBER	2
5101-CV	PLATE	1
5101-DM	COVER SUB-ASSY, REAR	1
5101-EK	RUBBER	2
5101-EW	PLATE SUB-ASSY, SKID	1
5101-EZ	RUBBER	2
5101-FR	SPONGE	1
5101-FV	COVER SUB-ASSY, SIDE FRAME	2
5101-FY	STOPPER	2
5101-GF	RUBBER	2
5101-GV	NUT	2
5101-GZ	WASHER, SPRING	2
5101-HA	WASHER, PLATE	2
5101-HE	COVER SUB-ASSY, LOWER	1
5101-HG	SCREW	2
5101-HI	GRIP	1
5101-JB	PLATE SUB-ASSY	1
5101-ND	RUBBER	1
5101-P1	CASE	1

G235-001E

5201

 91/09

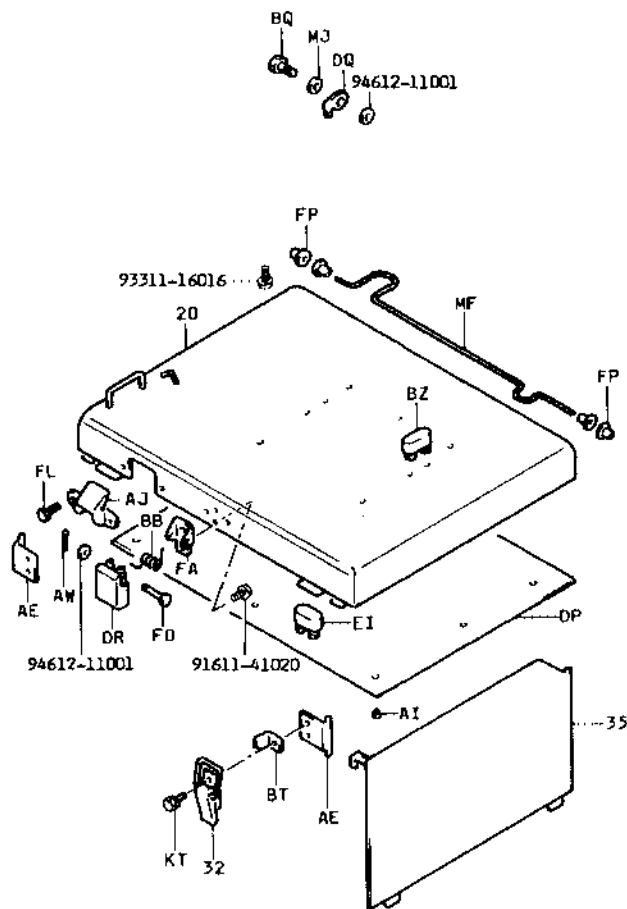

PART NAME	PART NAME	QTY
CODE		
5201-20	HOOD SUB-ASSY, ENGINE (OR BATTERY)	1
5201-32	CATCH SUB-ASSY (FOR HOOD)	2
5201-35	HOOD SUB-ASSY, SIDE	1
5201-AE	HOOK, HOOD LOCK	2
5201-AI	CLIP	9
5201-AJ	COVER	1
5201-AW	PIN, SNAP	1
5201-BB	SPRING	1
5201-BQ	BOLT	1
5201-BT	HOOK	1
5201-BZ	CUSHION	4
5201-DP	SHEET	1
5201-DQ	HOOK	1
5201-DR	HOOK SUB-ASSY	1
5201-E1	CUSHION	2
5201-FA	BRACKET SUB-ASSY	1
5201-FL	BOLT, W/WASHER	2
5201-FO	PIN	1
5201-FP	BUSHING	4
5201-KT	BOLT	4
5201-MF	BAR	1
5201-MJ	COLLAR	1

0046


FIG. 5301
INSTRUMENT PANEL & FLOOR

5301

MAIN

91/09

 (EC SPEC)

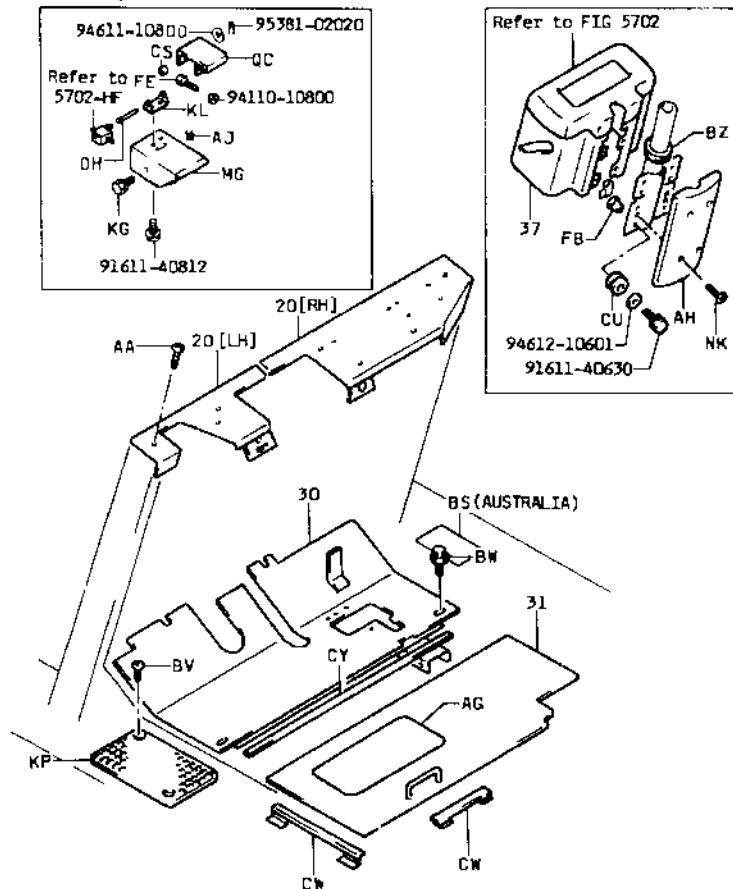

5301-1708

PART NAME	PART NAME	QTY
CODE		
5301-20	PANEL SUB-ASSY, INSTRUMENT	1
5301-30	TOE-BOARD SUB-ASSY, NO.1	1
5301-31	TOE-BOARD SUB-ASSY, NO.2	1
5301-37	COVER ASSY, METER CASE	1
5301-AA	SCREW	4
5301-AG	SAFETY WALK	1
5301-AH	COVER	1
5301-AJ	SPRING	1
5301-B5	SAFETY WALK	1
5301-BV	BOLT	2
5301-BW	BOLT	4
5301-BZ	GROMMET	1
5301-CS	BUSHING	2
5301-CU	RUBBER	4
5301-CW	RUBBER	3
5301-CY	RUBBER	1
5301-DH	PIN	1
5301-FB	SPACER	4
5301-FE	BOLT	1
5301-KG	BOLT	3
5301-KL	BRACKET	1
5301-KP	MAT SUB-ASSY, STEP	1
5301-MG	COVER SUB-ASSY	1
5301-NK	SCREW	4
5301-QC	PEDAL SUB-ASSY	1

G235-001E

FIG. 5308
DRIVER SEAT

 
5308

MAIN



91/09

13.15

13.15 (DRS, U.S.A.)

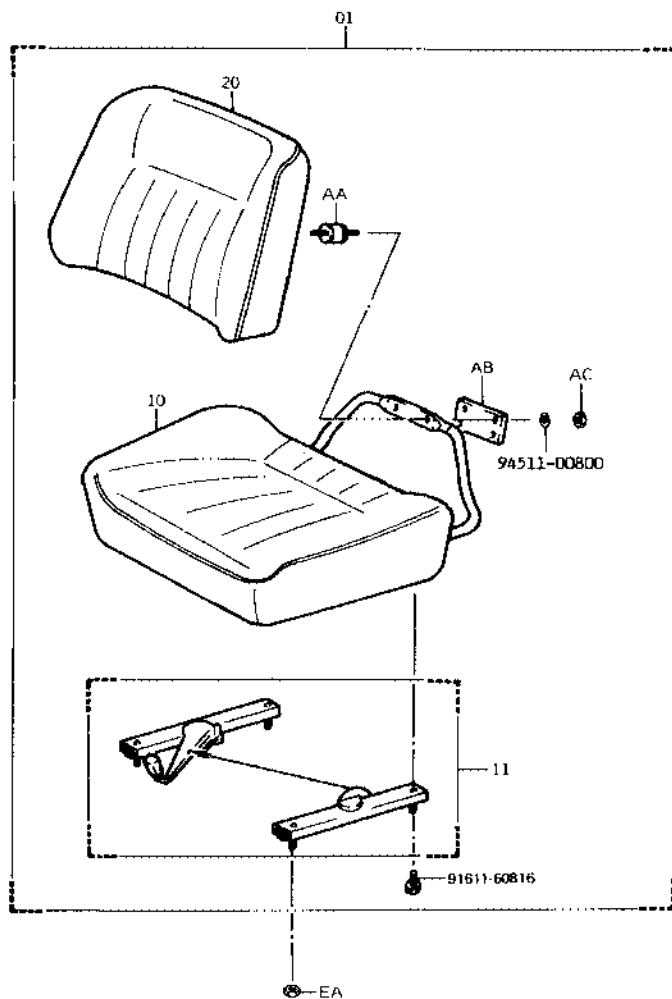

5308-098A

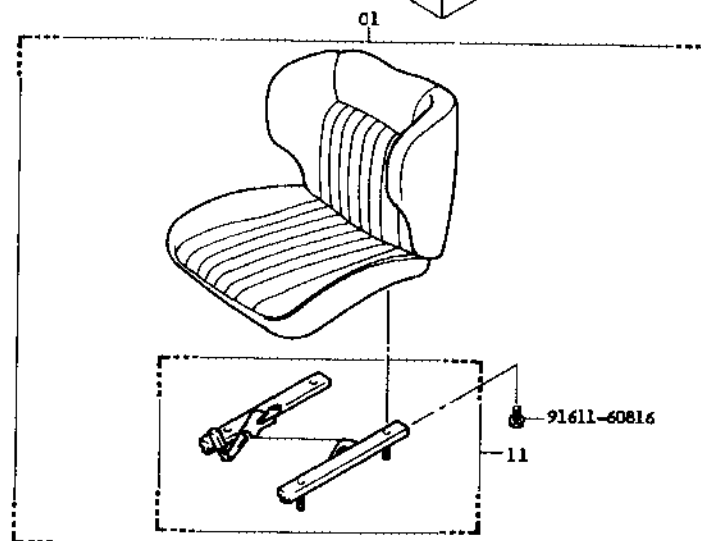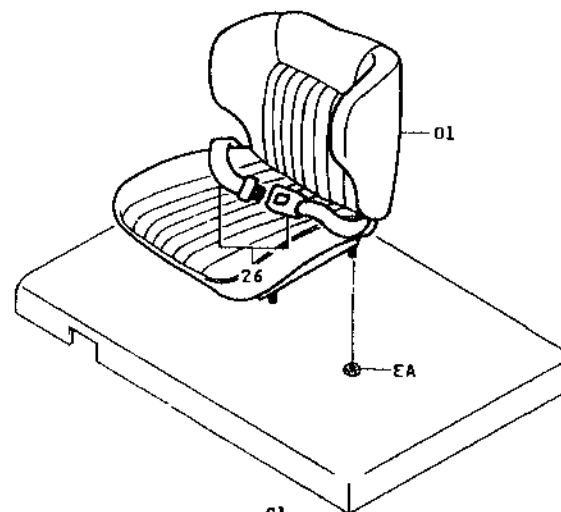  

5308-142

G235-001



FIG. 5308
DRIVER SEAT

5308

MAIN

91/09

  13.15 (DRS., DEAD-MAN)

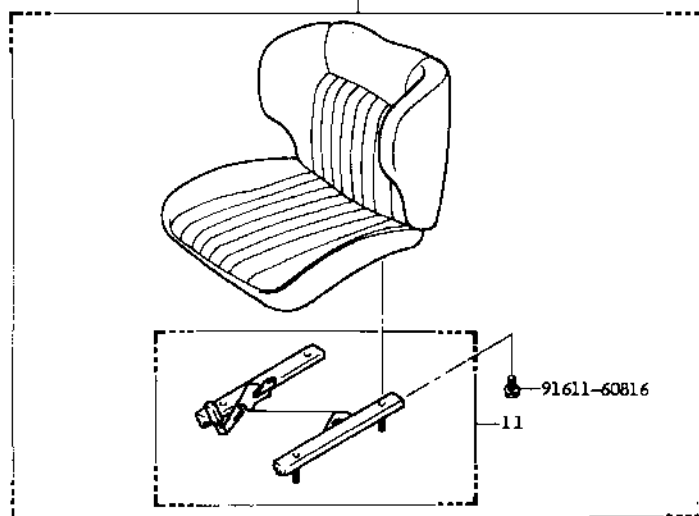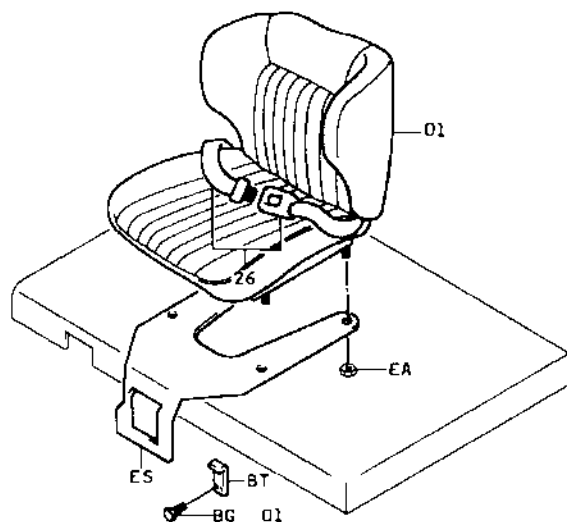

5308-141

PART NAME	PART NAME	QTY
CODE		
5308-01	SEAT ASSY	1
5308-10	CUSHION ASSY	1
5308-11	TRACK ASSY	1
5308-20	SEAT SUB-ASSY, BACK	1
5308-26	BELT ASSY, SEAT	1
5308-AA	RUBBER, VIBRATION ISOLATOR	2
5308-AB	BRACKET, NUMBER PLATE	1
5308-AC	NUT, CAP	2
5308-BG	BOLT	2
5308-BT	STOPPER	1
5308-EA	NUT	4
5308-ES	BRACKET SUB-ASSY, SEAT	1


G235-002E

FIG. 5401
HEAD GUARD & ACCESSORY

5401

MAIN

 91/09

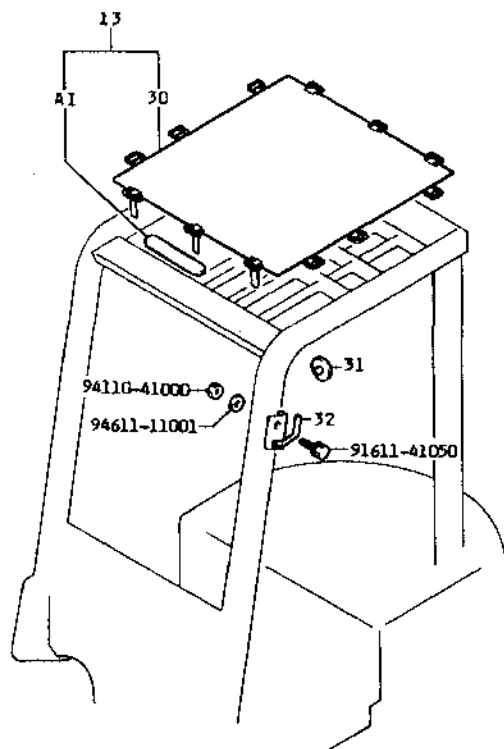

5401-151

PART NAME	PART NAME	QTY
CODE		
5401-13	SHEET ASSY	1
5401-30	SHEET SUB-ASSY, HEAD GUARD	1
5401-31	MIRROR SUB-ASSY, BACK	2
5401-32	BRACKET SUB-ASSY, BACK MIRROR	1
5401-A1	CUSHION, SHEET	2


G235-001E

FIG. 5405
INDICATOR PLATE

5405

MAIN

 92/04

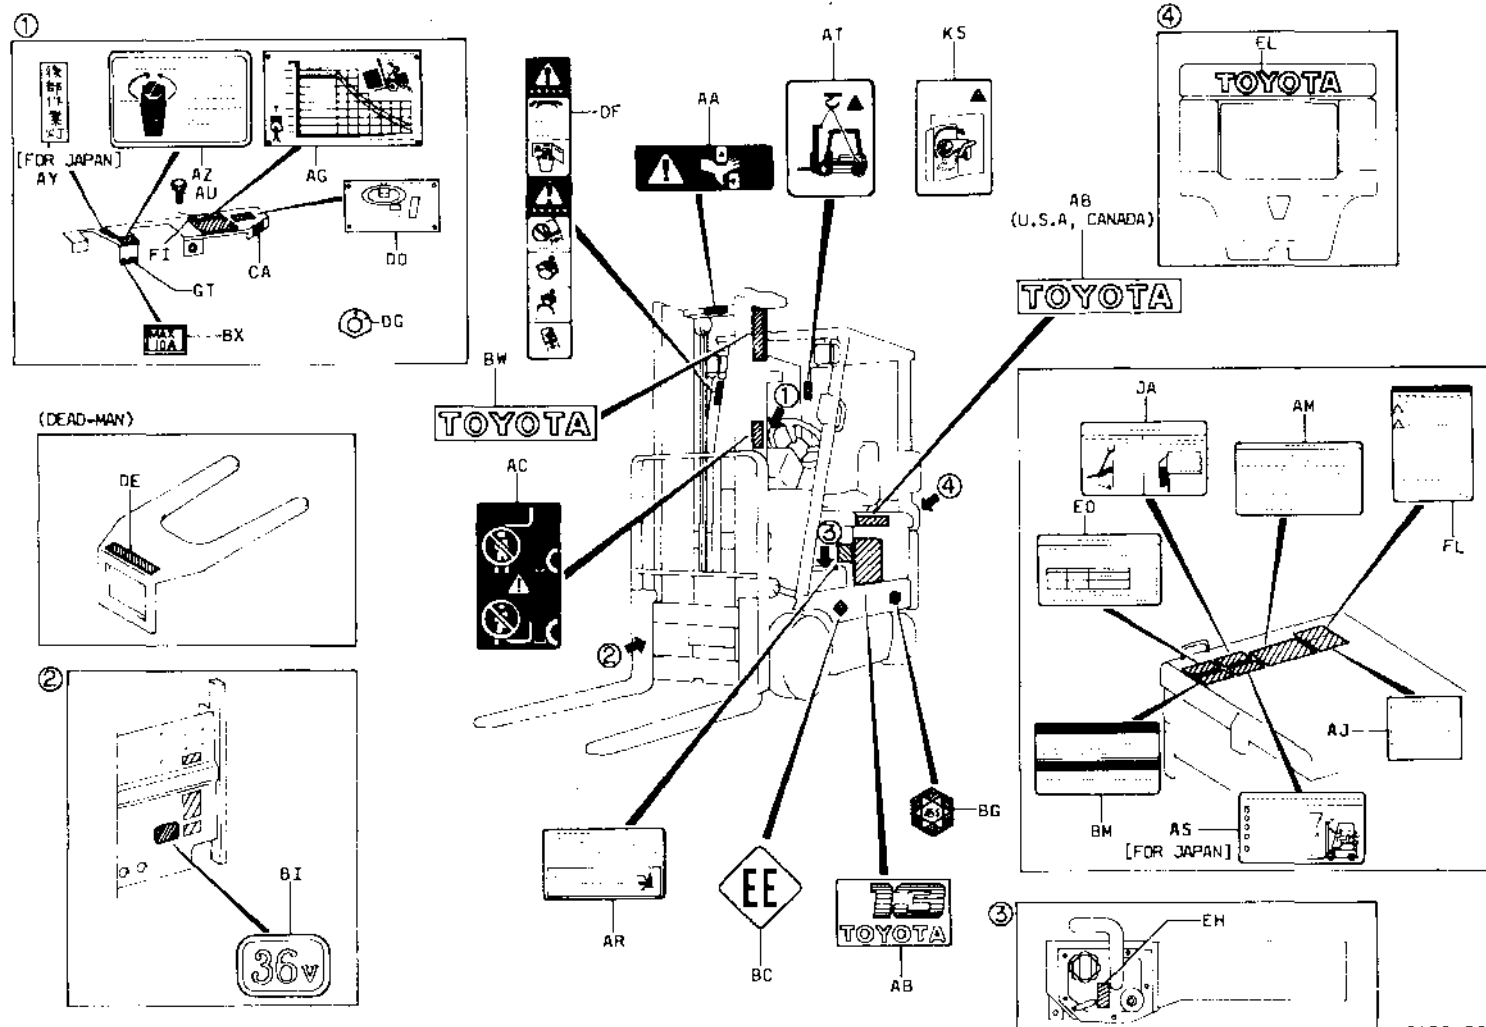

5405-352B

G235-001

FIG. 5405
INDICATOR PLATE

5405

MAIN

92/04

PART NAME CODE	PART NAME	QTY
5405-AA	PLATE, CAUTION	2- 3
5405-AB	MARK, TOYOTA	2
5405-AC	PLATE, CAUTION	2
5405-AG	PLATE, LOAD INDICATOR	1
5405-AM	PLATE, SERVICE INDICATOR	1
5405-AR	PLATE, CAUTION	1
5405-AS	PLATE, INDICATOR	1
5405-AT	PLATE, CAUTION	1
5405-AU	RIVET	4
5405-AZ	PLATE, CAUTION	1
5405-BC	MARK, UL	2
5405-BG	PLATE, TEMPERATURE	2
5405-BI	PLATE, VOLTAGE	1
5405-BM	PLATE, SAFETY DRIVE CHART	1
5405-BW	MARK, SYMBOL	2
5405-BX	PLATE, INDICATOR	1
5405-CA	PLATE, CAUTION	1
5405-DE	PLATE, INDICATOR	1
5405-DF	PLATE, INDICATOR	1
5405-DG	PLATE, CAUTION	1
5405-DQ	PLATE, INDICATOR	1
5405-EH	PLATE, OIL INDICATOR	1
5405-EL	MARK, TOYOTA	1- 2
5405-EO	PLATE, BATTERY CAPACITY	1
5405-FI	PLATE, CAUTION	1
5405-FL	PLATE, BATTERY CAUTION	1
5405-GT	PLATE, FUSE INDICATOR	1
5405-JA	INDICATOR	1
5405-KS	PLATE, HOOD STAY CAUTION	1
5405-KS	PLATE, HOOD STAY CAUTION	1

G235-002E


FIG. 5602
WIRING & CLAMP

5602

MAIN

91/09

 [1/2]

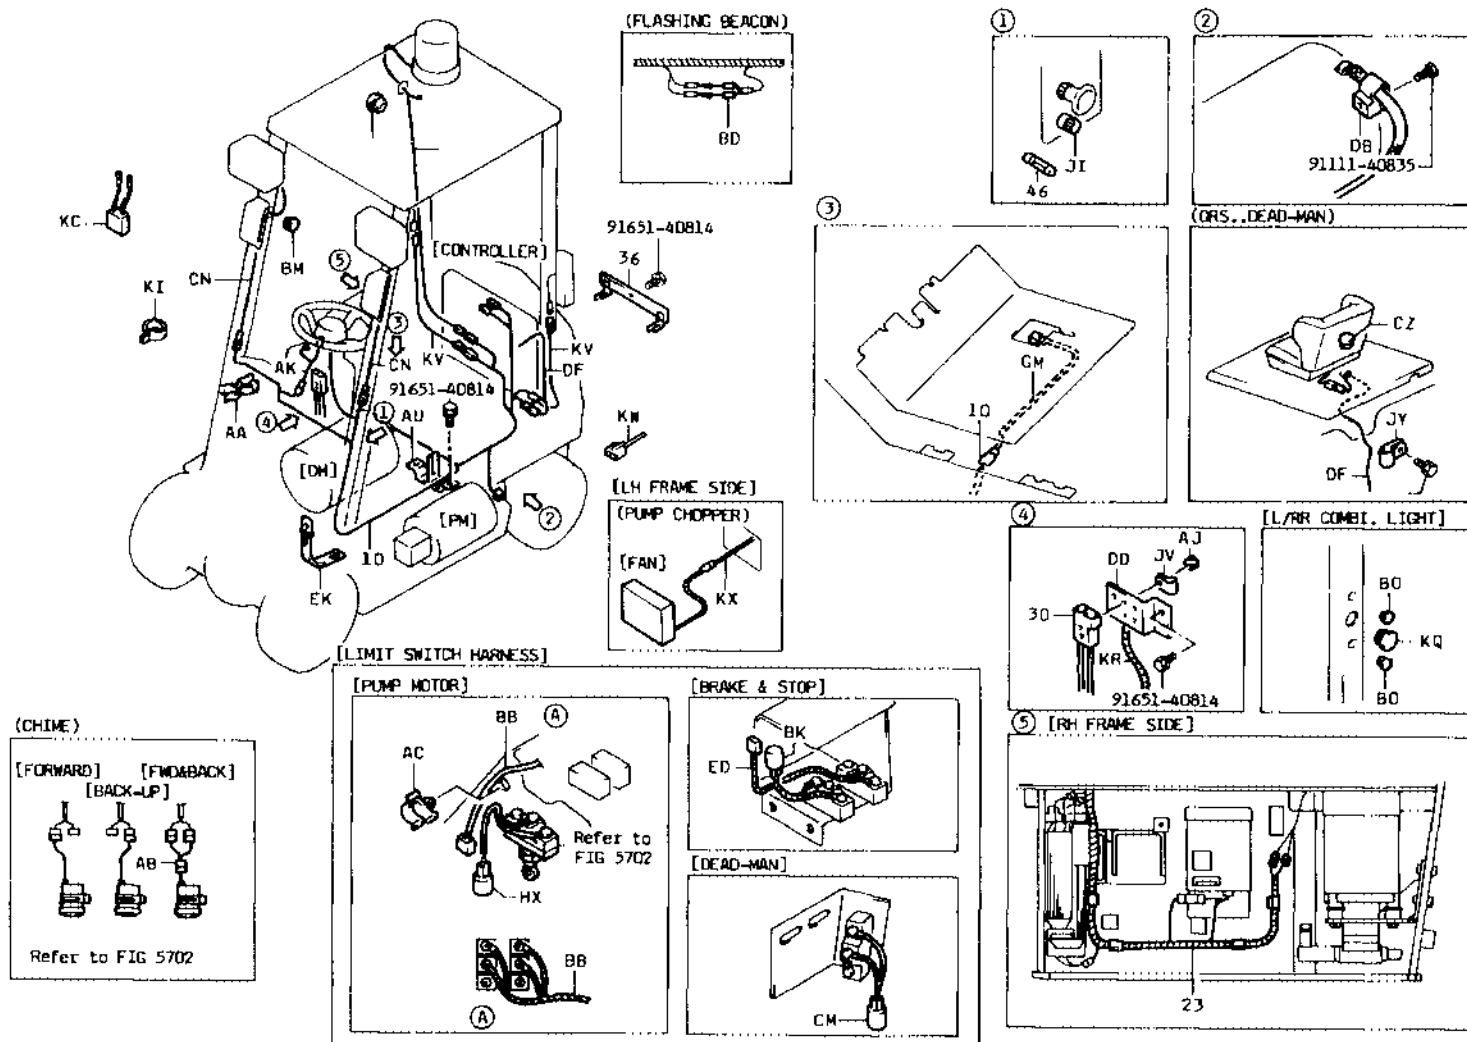


5602-149A


G235-001

(2/2)


P/N CODE	MARK
77	P4 - A
78	P5 - B
79	P6 - C
80	P7 - F
BP	P12 - A
CD	P13 - F
CD	N1 - F
27	PF - P1
28	N1 - N1
29	P1 - PF

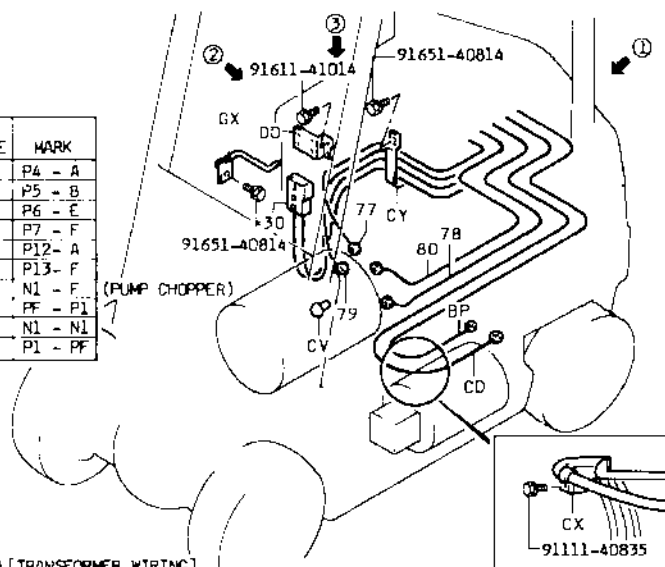 


① [STD]

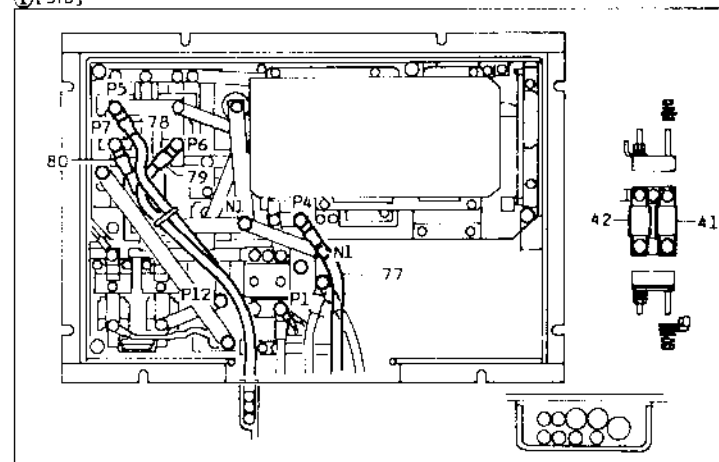 

③ [TRANSFORMER WIRING]

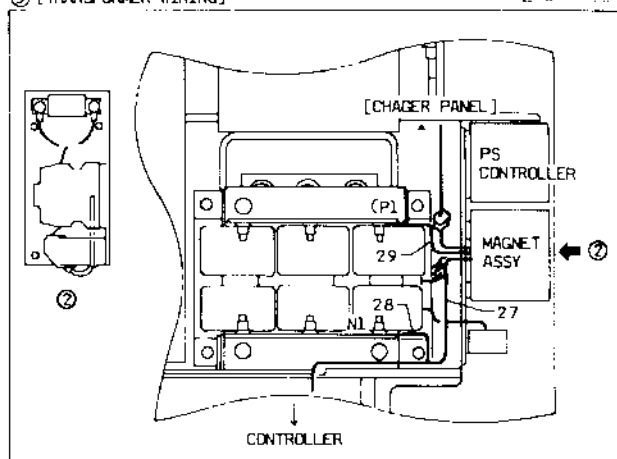 

① [PUMP CHOPPER]

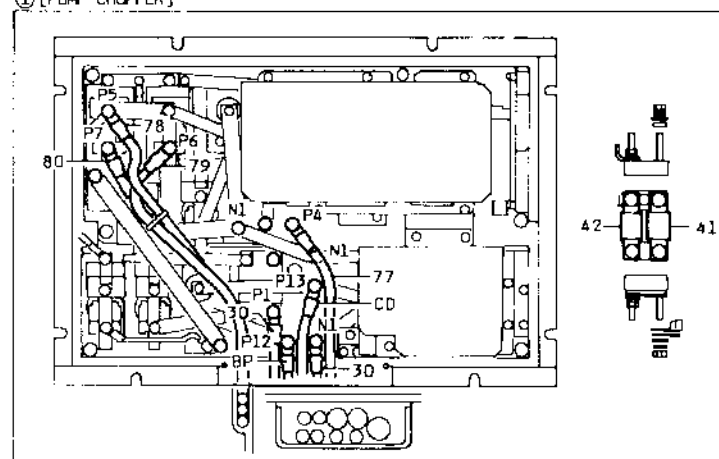 

5602-150

G235-002

FIG. 5602
WIRING & CLAMP

5602

MAIN

91/09

PART NAME	PART NAME	QTY
CODE		
5602-10	HARNESS ASSY, WIRING	1
5602-23	WIRING SUB-ASSY, POWER STEERING	1
5602-30	CONNECTOR SUB-ASSY	1
5602-36	CLAMP SUB-ASSY, CABLE	1
5602-41	FUSE (F1)	1
5602-42	FUSE (F2)	1
5602-46	FUSE	2
5602-77	WIRING SUB-ASSY, DRIVE MOTOR	1
5602-78	WIRING SUB-ASSY, DRIVE MOTOR	1
5602-79	WIRING SUB-ASSY, DRIVE MOTOR	1
5602-80	WIRING SUB-ASSY, DRIVE MOTOR	1
5602-AB	HARNESS, CHIME	1
5602-AC	CLAMP	1
5602-AJ	NUT	2
5602-AK	HARNESS SUB-ASSY	1
5602-AU	CLAMP	2
5602-BB	HARNESS, LIMIT SWITCH	1
5602-BD	HARNESS, DIODE, ROTARY LAMP	1
5602-BK	HARNESS, BRAKE SWITCH	1
5602-BM	GROMMET	2
5602-BO	PLUG	4
5602-BP	WIRING SUB-ASSY, PUMP MOTOR	1
5602-CD	WIRING SUB-ASSY, PUMP MOTOR	1
5602-CM	HARNESS	1
5602-CV	CAP	6
5602-CX	CLAMP	1
5602-CY	CLAMP	1
5602-CZ	GROMMET	1
5602-DA	GROMMET	1
5602-DB	CLAMP	2
5602-DD	BRACKET, CONNECTOR	1
5602-DF	HARNESS, DEAD-MAN SWITCH	1
5602-EK	WIRE, EARTH	1
5602-GM	HARNESS	1
5602-GX	GUIDE SUB-ASSY, CABLE	1
5602-HX	HARNESS, PUMP CHOPPER	1
5602-JI	HOLDER, FUSE	1
5602-JY	CLAMP	1
5602-KC	ABSORBER	1
5602-KI	CLAMP	2
5602-KQ	PLUG	2
5602-KU	HARNESS	1
5602-KV	HARNESS	2
5602-KW	HARNESS	1
5602-KX	HARNESS	1


G235-003E

FIG. 5611
LAMP


5611

MAIN

 91/09

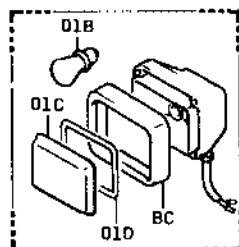


01

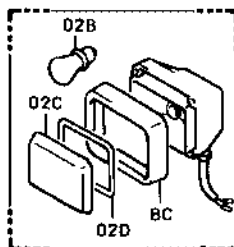 


01

 02


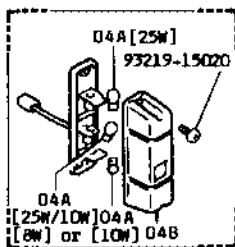


04

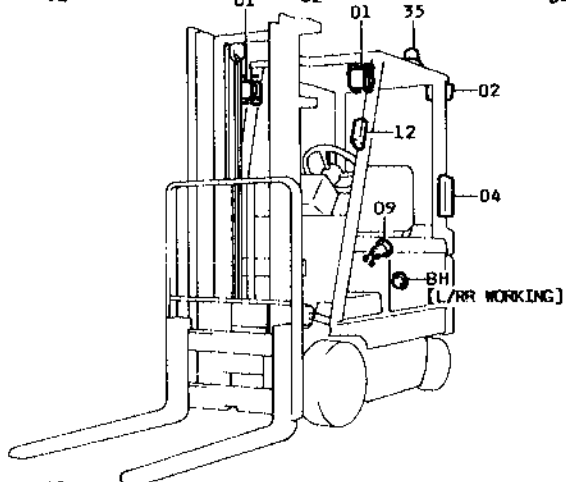 

35

  12

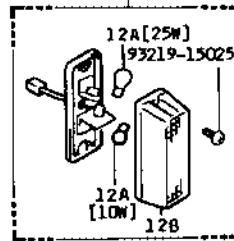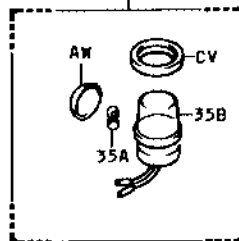

5611-128

PART NAME	PART NAME	QTY
CODE		
5611-01	LAMP ASSY, HEAD	2
5611-01B	BULB (FOR HEAD LAMP)	2
5611-01C	LENS (FOR HEAD LAMP)	2
5611-01D	GASKET (FOR HEAD LAMP)	2
5611-04	LAMP ASSY, REAR COMBINATION	2
5611-04A	BULB (FOR REAR COMBINATION LAMP)	2
5611-04B	LENS (FOR REAR COMBINATION LAMP)	2
5611-12	LAMP ASSY, FRONT COMBINATION	2
5611-12A	BULB (FOR FRONT COMBINATION)	2
5611-12B	LENS (FOR FRONT COMBINATION)	2
5611-35	LAMP ASSY, ROTARY	1
5611-35A	BULB (FOR ROTARY LAMP)	1
5611-35B	LENS (FOR ROTARY LAMP)	1
5611-AW	REFLECTOR	1
5611-BC	BRIM	1- 2
5611-CV	FLANGE	1


G235-001E

FIG. 5612
LAMP BRACKET

5612

MAIN

 91/09

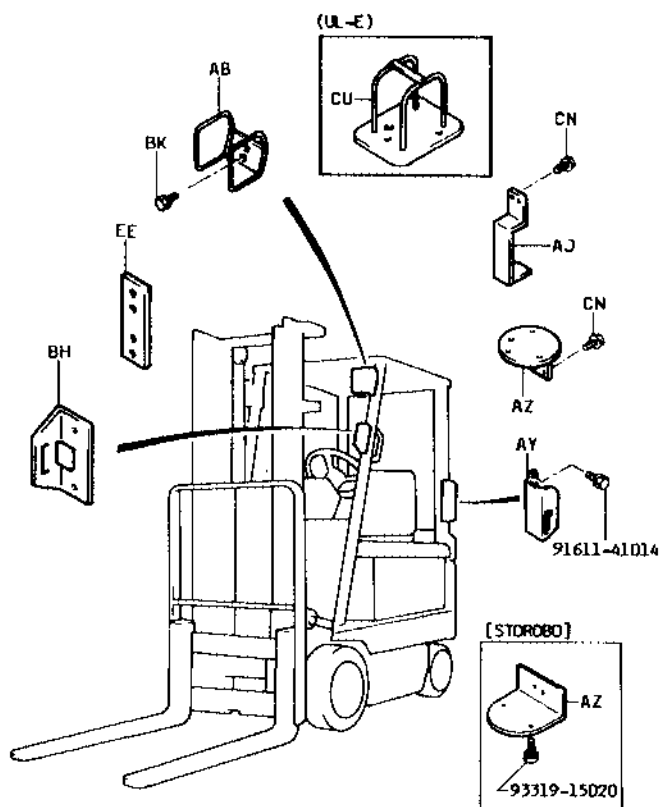

5612-145A


















PART NAME CODE	PART NAME	QTY
5612-AB	BRACKET SUB-ASSY. HEAD LAMP	1
5612-AY	GUARD SUB-ASSY. LAMP	1
5612-AZ	BRACKET SUB-ASSY. ROTARY LAMP	1
5612-BH	COVER	2
5612-BK	BOLT	8
5612-CN	BOLT	2
5612-CU	BRACKET	1
5612-EE	PLATE	2

G235-001E

5702

91/09

                 [SPEED CONTROL SWITCH]

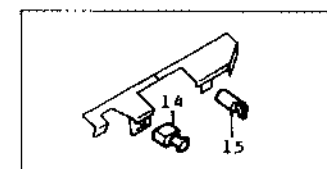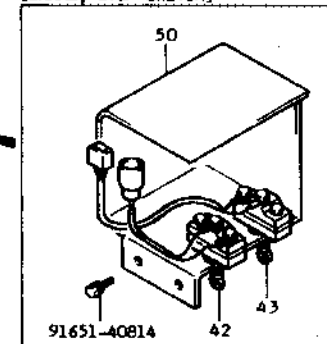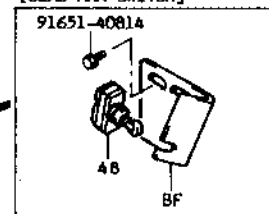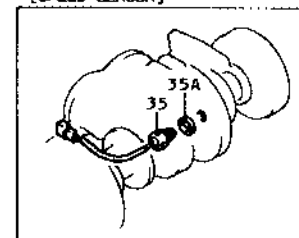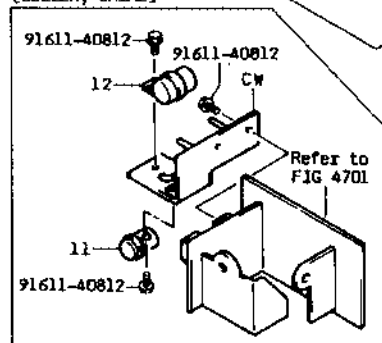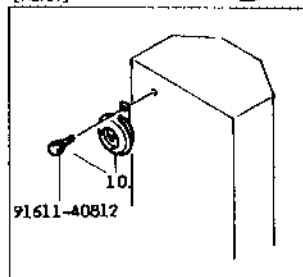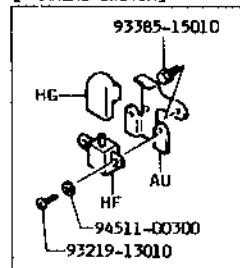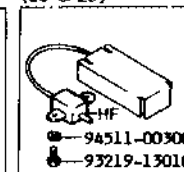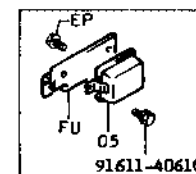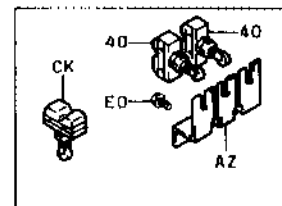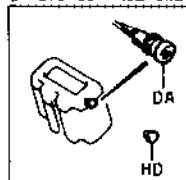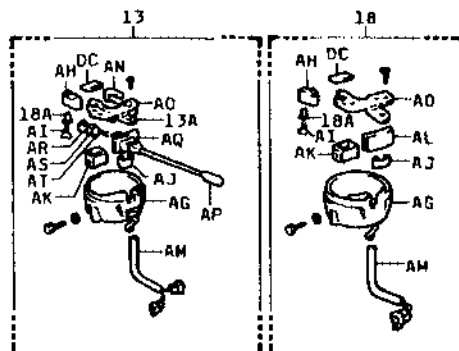

G235-001


FIG. 5702
METER & SWITCH

5702

MAIN

91/09

 (2/2)

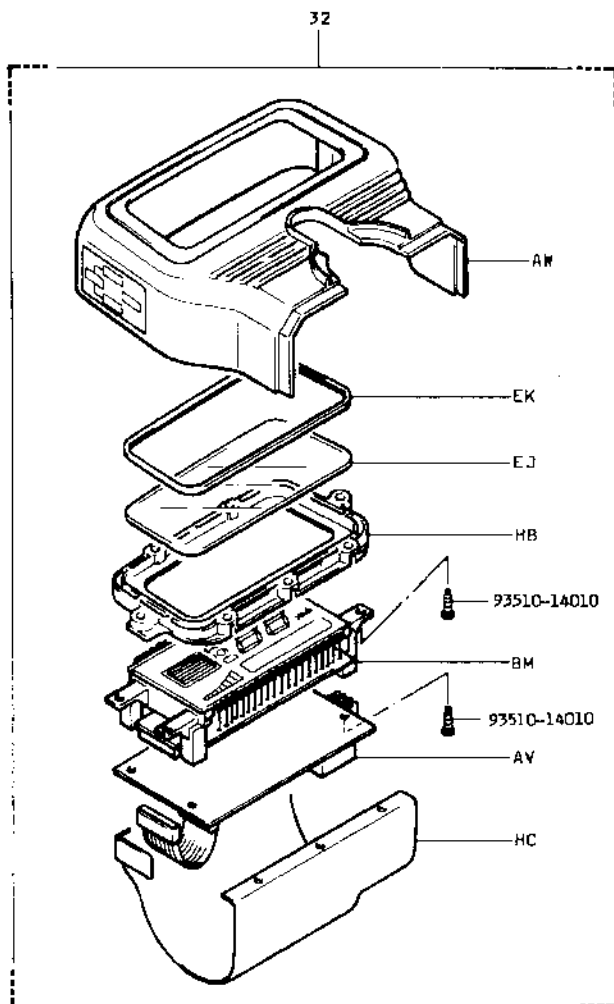

5702-068


PART NAME	PART NAME	QTY
CODE		
5702-05	RELAY ASSY, FLASHER	1
5702-10	HORN ASSY	1
5702-11	BUZZER ASSY, BACK	1
5702-12	CHIME ASSY, BACK	1
5702-13	SWITCH ASSY, TURN SIGNAL	1
5702-13A	SWITCH SUB-ASSY, MICRO	2
5702-14	SWITCH ASSY, LIGHT CONTROL	1
5702-15	SWITCH ASSY, STARTER	1
5702-18	SWITCH ASSY, HORN	1
5702-18A	CONTACT, HORN	1
5702-32	METER ASSY, COMBINATION	1
5702-35	SENSOR ASSY, PICK UP	1
5702-35A	GASKET	99
5702-40	SWITCH ASSY, LIMIT (FOR PUMP MOTOR)	2-4
5702-42	SWITCH ASSY, LIMIT (FOR BRAKE)	1
5702-43	SWITCH ASSY, LIMIT (FOR STOP LAMP)	1
5702-48	SWITCH ASSY, LIMIT (FOR DEAD-MAN)	1
5702-50	BRACKET, BRAKE SWITCH	1
5702-AG	BODY, SWITCH	1
5702-AH	HOLDER, HORN POINT	1
5702-A1	SPRING, HORN CONTACT	1
5702-AJ	COVER	1
5702-AK	BLOCK, LOCKING	1
5702-AL	COVER, RUBBER	1
5702-AM	HARNESS ASSY	1
5702-AN	ACTUATOR	2
5702-AD	PLATE, SWITCH	1
5702-AP	LEVER, SIGNAL	1
5702-AQ	BELLOWS	1
5702-AR	ROLLER	1
5702-A5	HOLDER, ROLLER	1
5702-AT	SPRING	1
5702-AU	BRACKET, PARKING BRAKE	1
5702-AV	BOARD ASSY, METER COMBINATION	1
5702-AW	CASE, METER	1
5702-AZ	BRACKET, LIMIT SWITCH	1
5702-BF	BRACKET, DEAD MAN SWITCH	1
5702-BM	PANEL ASSY	1
5702-CK	SWITCH ASSY, LIMIT	1
5702-CW	BRACKET SUB-ASSY, BACK BUZZER	1
5702-DA	SWITCH ASSY	1
5702-DC	VARISTOR	1
5702-EJ	GLASS, WINDOW	1
5702-EK	RUBBER, SEAL	1
5702-ED	BOLT, W/WASHER	2
5702-EP	BOLT	2
5702-FU	BRACKET	1
5702-HB	PLATE, WINDOW	1
5702-HC	SHEET, COVER	1
5702-HD	CAP	1
5702-HF	SWITCH ASSY	1-2
5702-HG	BOOT	1

G235-002E


6101

91/09


PART NAME	PART NAME	QTY
CODE		
6101-20	MAST SUB-ASSY, OUTER	1
6101-20B	BUSHING, MAST SUPPORT	1
6101-21	MAST SUB-ASSY, INNER	1
6101-22	MAST SUB-ASSY, MIDDLE	1
6101-30	STRIP, SUB-ASSY, OUTER MAST	2
6101-30A	SHIM, OUTER MAST STRIP	99
6101-31	STRIP, SUB-ASSY, MIDDLE MAST	2
6101-31A	SHIM, MIDDLE MAST STRIP	99
6101-40	ROLLER, LIFT (FOR OUTER MAST)	2
6101-41	ROLLER, LIFT (FOR INNER MAST)	2
6101-42	ROLLER, LIFT (FOR MIDDLE MAST UPPER)	2
6101-43	ROLLER, LIFT (FOR MIDDLE MAST LOWER)	2
6101-AD	FITTING, GREASE	2
6101-AH	BOLT	8
6101-AM	BOLT	4
6101-BH	CAP, MAST SUPPORT	2
6101-JC	GUIDE, HOSE	1

 


FSV

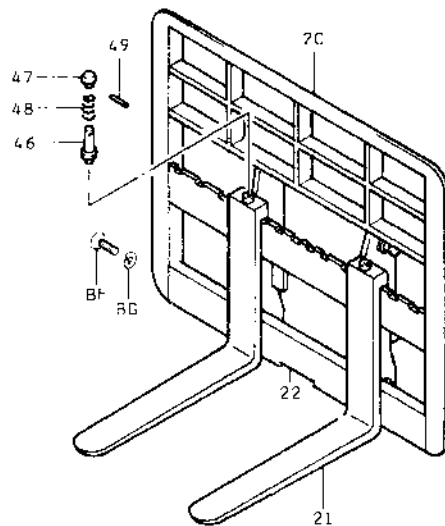 


[L/BACK REST]

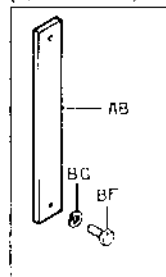 

FSV

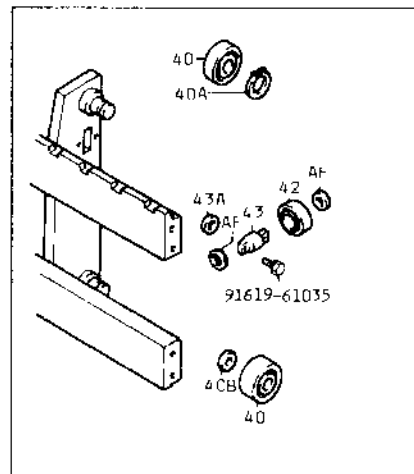 

FV

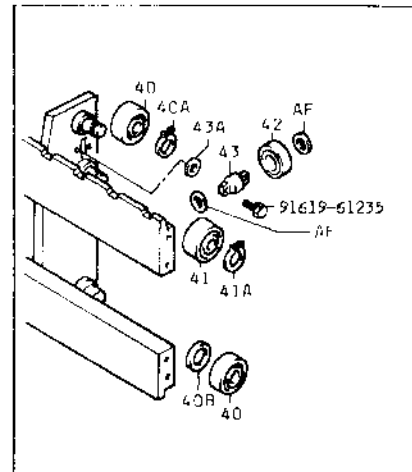 

V

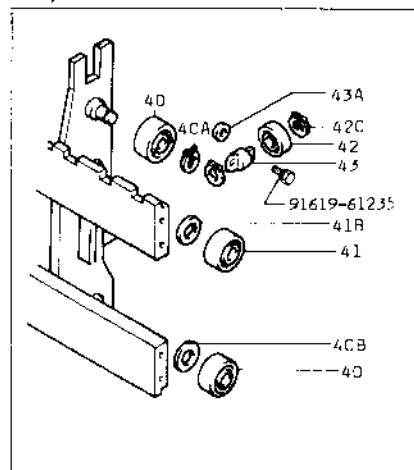 


FIG. 6301
LIFT BRACKET & FORK

6301

FSV

91/09

PART NAME CODE	PART NAME	QTY
6301-20	BACKREST SUB-ASSY	1
6301-21	FORK SUB-ASSY	2
6301-22	BRACKET SUB-ASSY, LIFT	1
6301-40	ROLLER, LIFT (UPPER, LOWER)	4
6301-40A	RING, SHAFT SNAP (UPPER, LOWER)	2
6301-40B	SHIM, LIFT ROLLER	99
6301-42	ROLLER, SIDE	2
6301-43	SHAFT, SIDE ROLLER	2
6301-43A	SHIM (FOR SIDE ROLLER SHAFT)	99
6301-44	PIN, FORK STOPPER	2
6301-47	KNOB, FORK STOPPER PIN	2
6301-48	SPRING, FORK STOPPER PIN	2
6301-49	PIN, SPRING (FOR FORK STOPPER PIN)	2
6301-AB	PLATE, SIDE	2
6301-AF	PLATE	4
6301-BF	BOLT	4- 8
6301-BG	WASHER	4- 8

G235-002E

6302

91/09

PART NAME	PART NAME	QTY
CODE		
6302-21	CHAIN SUB-ASSY (FRONT)	2
6302-21A	NUT, CHAIN ADJUST (FRONT)	2
6302-21K	BOLT KIT, CHAIN ANCHOR, NO-1 (FRONT)	2
6302-21M	BOLT KIT, CHAIN EYE (FRONT)	2
6302-22	CHAIN SUB-ASSY (REAR)	2
6302-22K	BOLT KIT, CHAIN ANCHOR, NO-1 (REAR)	2
6302-22L	BOLT KIT, CHAIN ANCHOR, NO-2 (REAR)	2
6302-41	WHEEL, CHAIN (FRONT)	2
6302-41A	RING, SHAFT SNAP (FOR FRONT CHAIN WHEEL)	2
6302-42	WHEEL, CHAIN (REAR)	2
6302-42A	RING, SHAFT SNAP (FOR CHAIN WHEEL)	2
6302-45	SUPPORT, CHAIN WHEEL	1
6302-AD	NUT, HEXAGON	12
6302-AE	WASHER, CHAIN SPECIAL	2
6302-AN	NUT, HEXAGON	2
6302-BV	STOPPER, CHAIN	1

G235-001E


FIG. 6502
FRONT LIFT CYLINDER

6502

FSV

91/09

 FSV

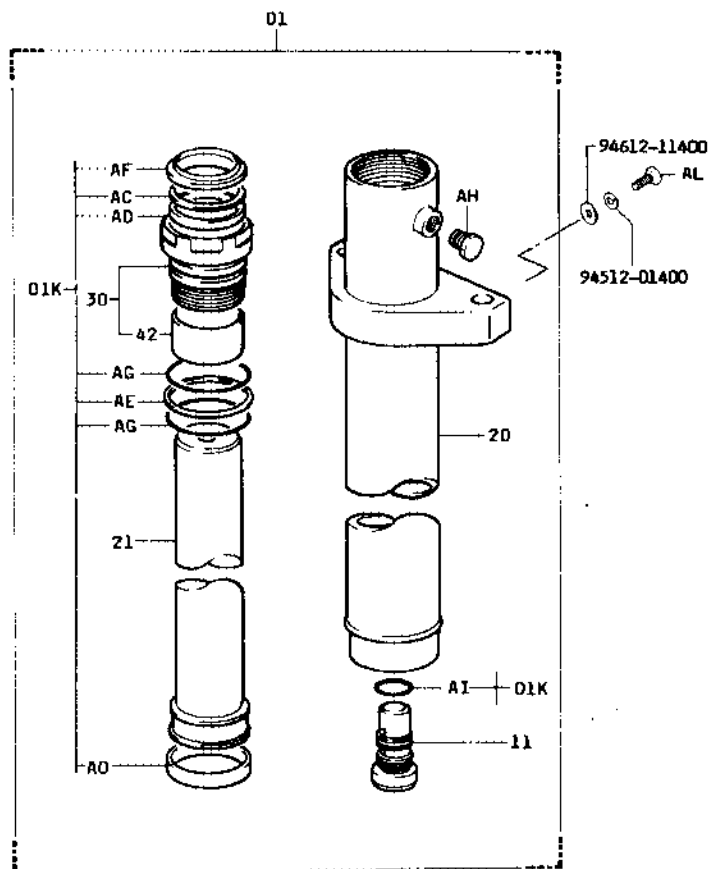

6502-060

PART NAME	PART NAME	QTY
CODE		
6502-01	CYLINDER ASSY, LIFT	1
6502-01K	CYLINDER O/H KIT, LIFT	1
6502-11	VALVE ASSY, SAFETY DOWN	1
6502-20	CYLINDER SUB-ASSY, LIFT	1
6502-21	ROD SUB-ASSY, LIFT CYLINDER	1
6502-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD	1
6502-42	SLEEVE, LIFT CYLINDER ROD GUIDE	1
6502-AC	RING, BACK UP	1
6502-AD	PACKING, U	1
6502-AE	RING, BACK UP	1
6502-AF	SEAL, DUST	1
6502-AG	RING, O	2
6502-AH	PLUG	1
6502-A1	RING, O	1
6502-AL	BOLT	2
6502-AQ	RING, WEAR	1

G235-001E




FIG. 6503
REAR LIFT CYLINDER

6503

FSV

91/09

   FSV

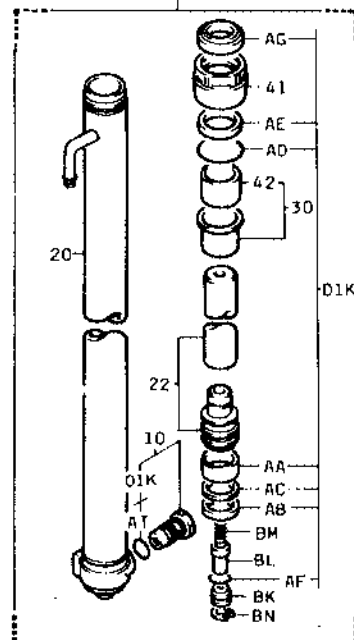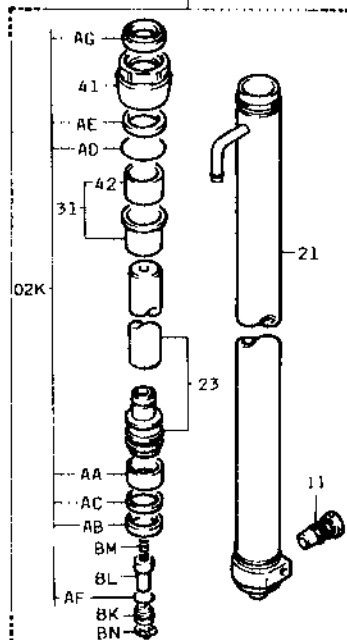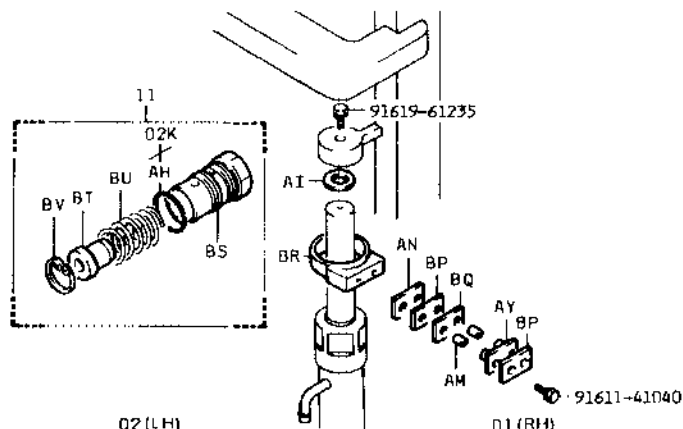

6503-054

PART NAME	PART NAME	QTY
CODE		
6503-01	CYLINDER ASSY, LIFT, RH	1
6503-01K	CYLINDER O/H KIT, LIFT, RH	1
6503-02	CYLINDER ASSY, LIFT, LH	1
6503-02K	CYLINDER O/H KIT, LIFT, LH	1
6503-10	VALVE ASSY, FLOW REGULATOR	1
6503-11	VALVE ASSY, SAFETY DOWN	1
6503-20	CYLINDER SUB-ASSY, LIFT, RH	1
6503-21	CYLINDER SUB-ASSY, LIFT, LH	1
6503-22	ROD SUB-ASSY, LIFT CYLINDER, RH	1
6503-23	ROD SUB-ASSY, LIFT CYLINDER, LH	1
6503-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD, RH	1
6503-31	GUIDE SUB-ASSY, LIFT CYLINDER ROD, LH	1
6503-41	COVER, LIFT CYLINDER	2
6503-42	SLEEVE, LIFT CYLINDER ROD GUIDE	2
6503-AA	RING, WEAR	2
6503-AB	PACKING, U	2
6503-AC	RING, BACK UP	2
6503-AD	RING, O	2
6503-AE	PACKING, U	2
6503-AF	RING, O	2
6503-AG	SEAL, DUST	2
6503-AH	RING, O	1
6503-AI	SHIM	99
6503-AM	SPACER	4
6503-AN	SHIM	99
6503-AT	RING, O	1
6503-AY	RUBBER	2
6503-BK	COLLAR	2
6503-BL	PLUNGER, PISTON	2
6503-BM	SPRING	2
6503-BN	RING, SNAP	2
6503-BP	PLATE	4
6503-BQ	RUBBER	2
6503-BR	SUPPORT SUB-ASSY	1
6503-BS	BODY	1
6503-BT	PISTON	1
6503-BU	SPRING	1
6503-BV	RING, SNAP	1


G235-001E

6511

91/09

PART NAME	CODE
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	
18	
19	
20	
21	
22	
23	
24	
25	
26	
27	
28	
29	
30	
31	
32	
33	
34	
35	
36	
37	
38	
39	
40	
41	
42	
43	
44	
45	
46	
47	
48	
49	
50	
51	
52	
53	
54	
55	
56	
57	
58	
59	
60	
61	
62	
63	
64	
65	
66	
67	
68	
69	
70	
71	
72	
73	
74	
75	
76	
77	
78	
79	
80	
81	
82	
83	
84	
85	
86	
87	
88	
89	
90	
91	
92	
93	
94	
95	
96	
97	
98	
99	
100	

| QTY

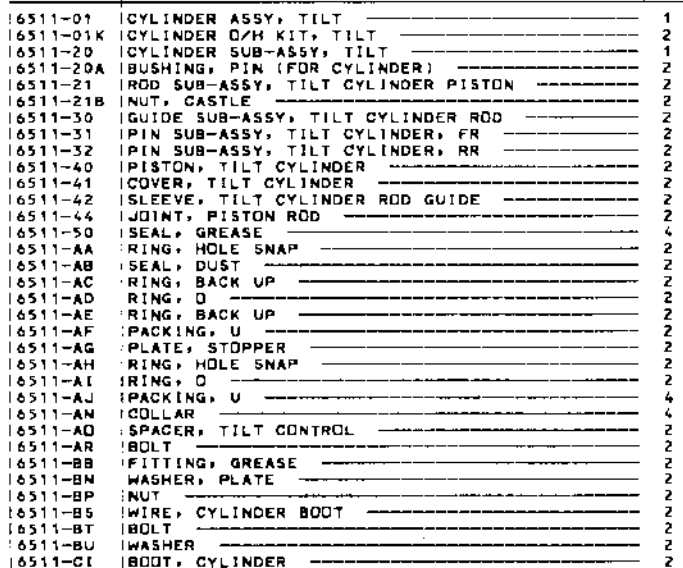 

0055


FIG. 6701
OIL PUMP

6701

FSV

91/09

 FSV

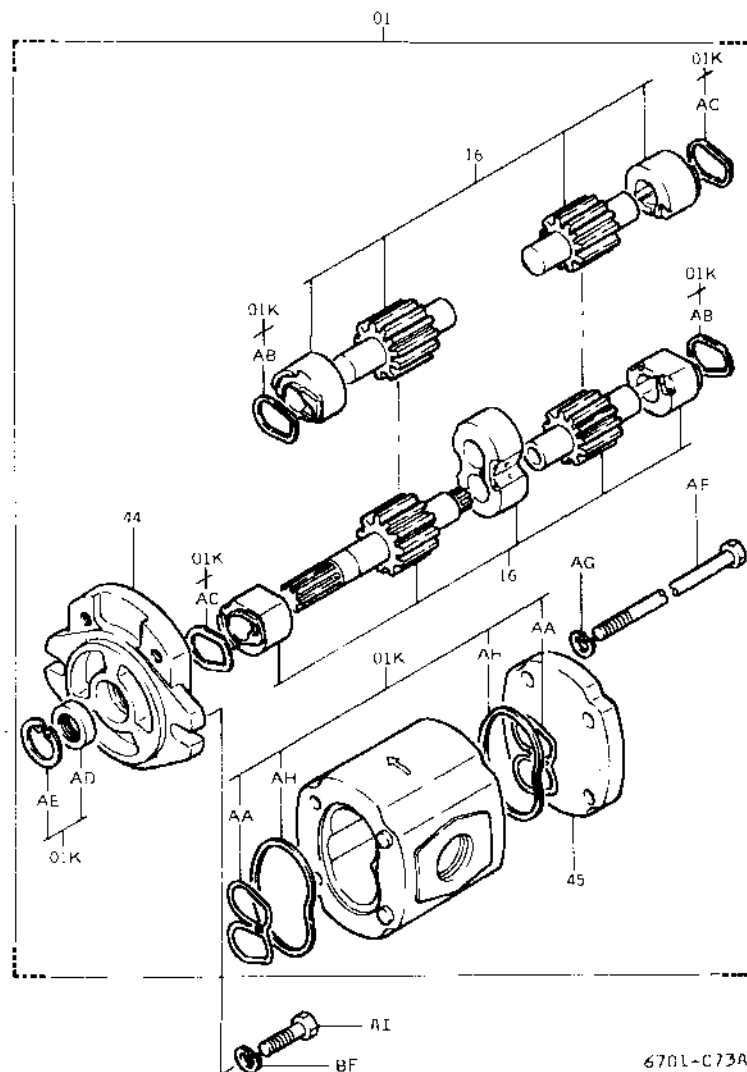

PART NAME CODE	PART NAME	QTY
6701-D1	PUMP ASSY, OIL	1
6701-D1K	PUMP O/H KIT, OIL	1
6701-16	GEAR & BUSHING SET	1
6701-44	FLANGE, MOUNTING	1
6701-45	COVER	1
6701-AA	SEAL, BUSHING	2
6701-AB	RING, BACKING, RH	2
6701-AC	RING, BACKING, LH	2
6701-AD	SEAL, OIL	1
6701-AE	RING, SNAP	1
6701-AF	BOLT	4
6701-AG	WASHER, SPRING	4
6701-AH	SEAL, BODY	2
6701-AI	BOLT	2
6701-BF	WASHER	2

G235-001E


FIG. 6705
OIL CONTROL VALVE

6705

FSV

91/09

 FSV (2-WAY) (1/2)

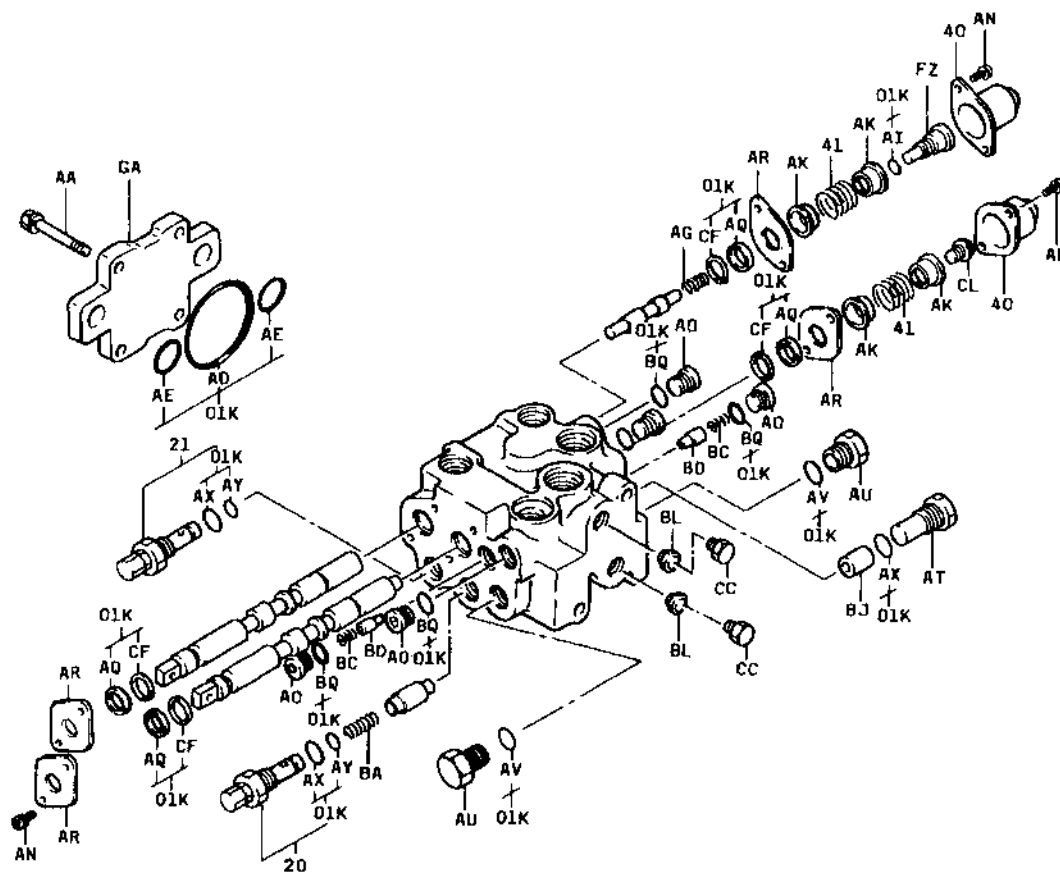

6705-465A

G235-001


FIG. 6705
DIE CONTROL VALVE

6705

FSV

91/09

 
FSV (3-WAY) (1/2)

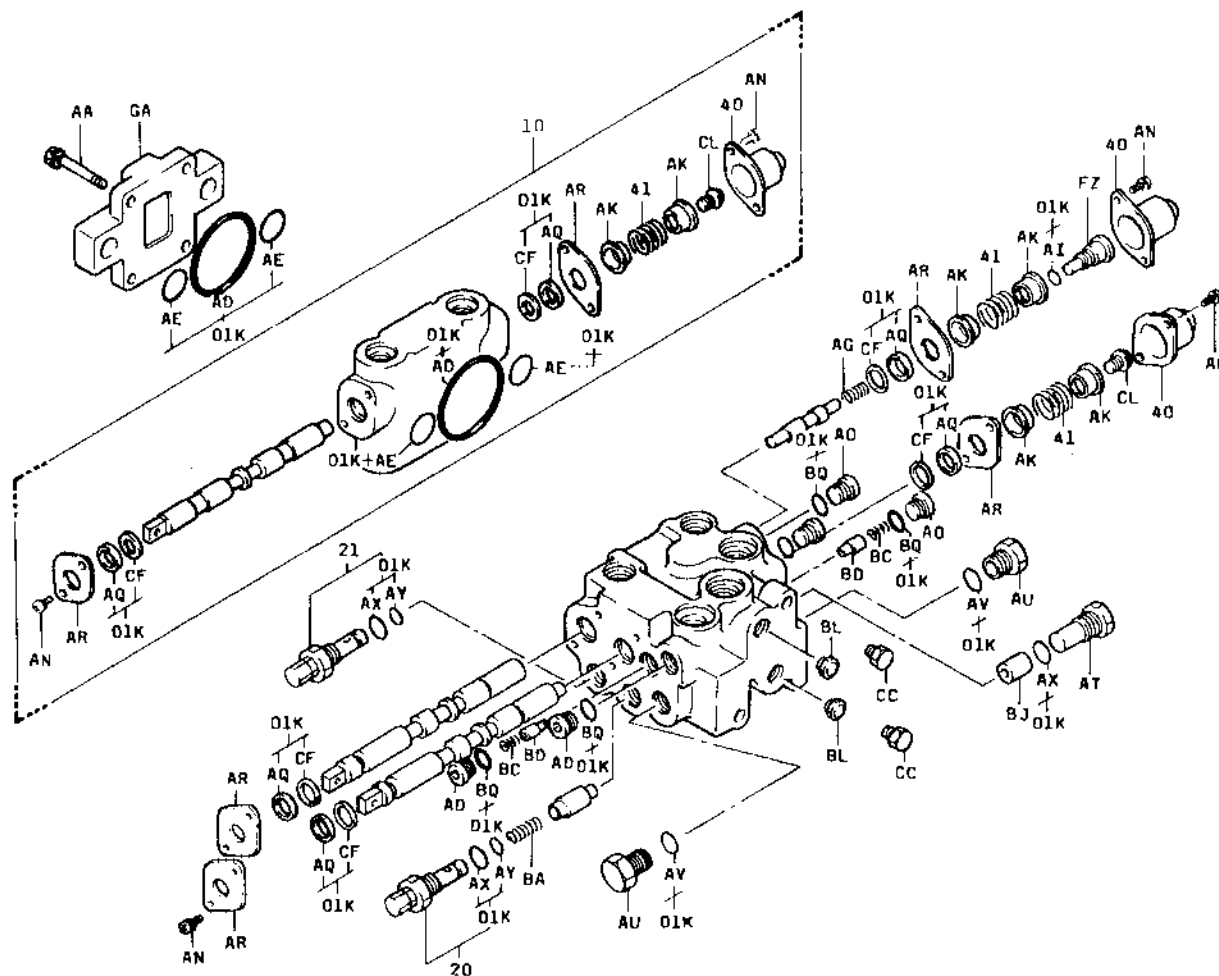

6705-515

G235-002

 FSV (4-WAY) [1/2]

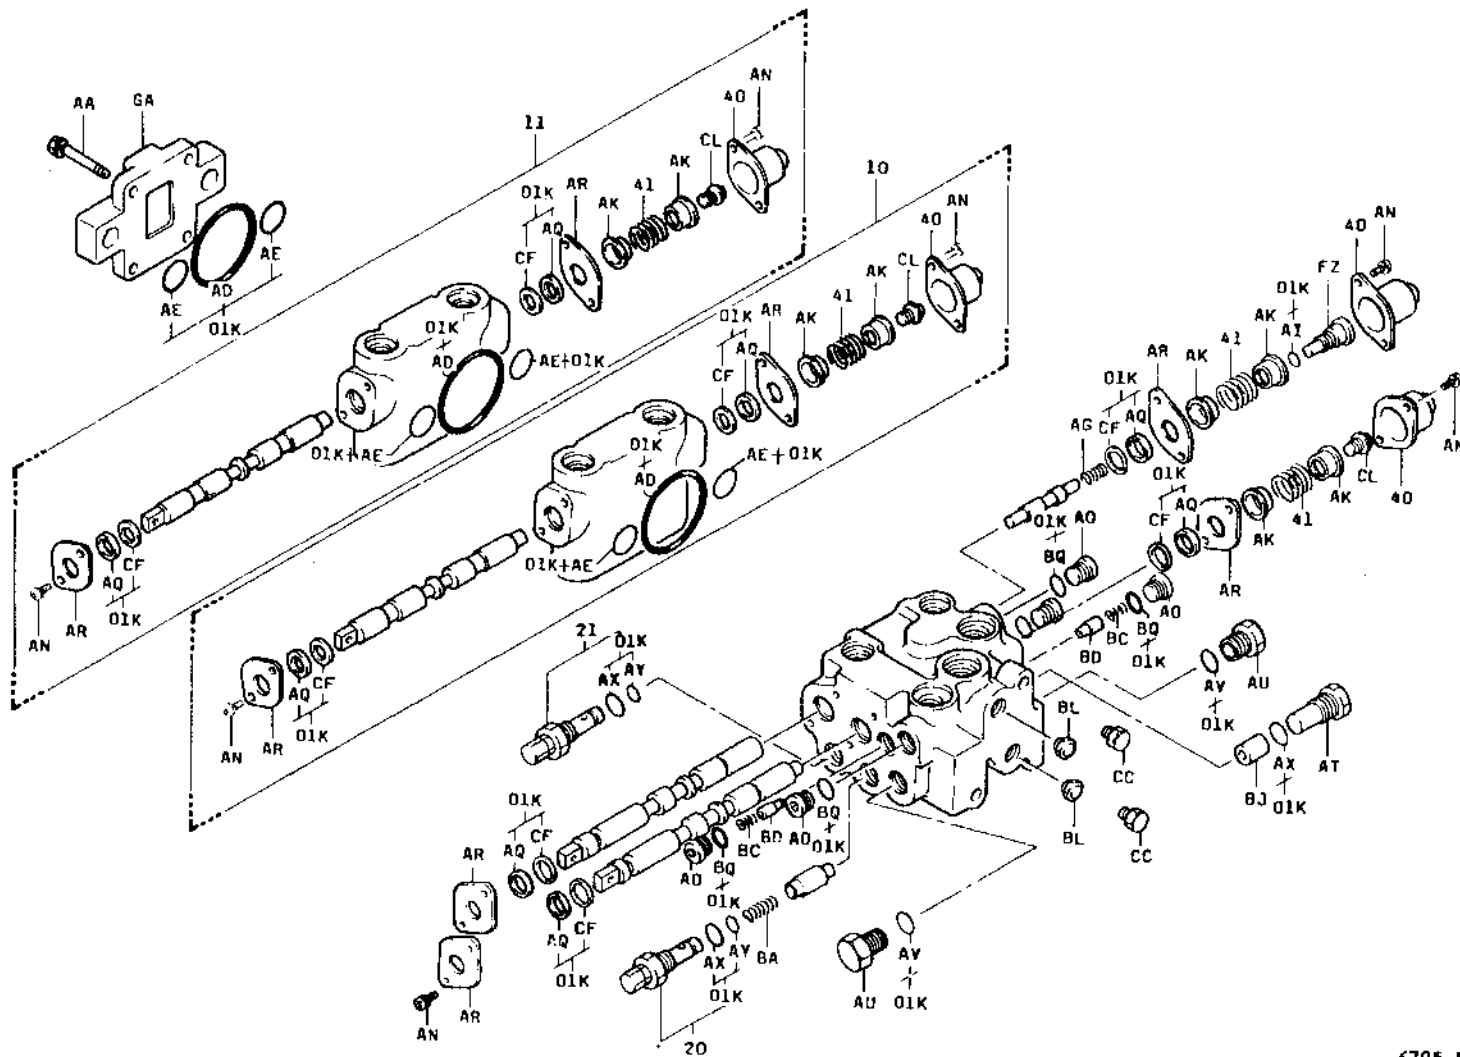

6705-516

G235-003

FIG. 6705
OIL CONTROL VALVE

 
6705

FSV


91/09

FSV (2-WAY) (2/2)

FSV (3-WAY) (2/2)

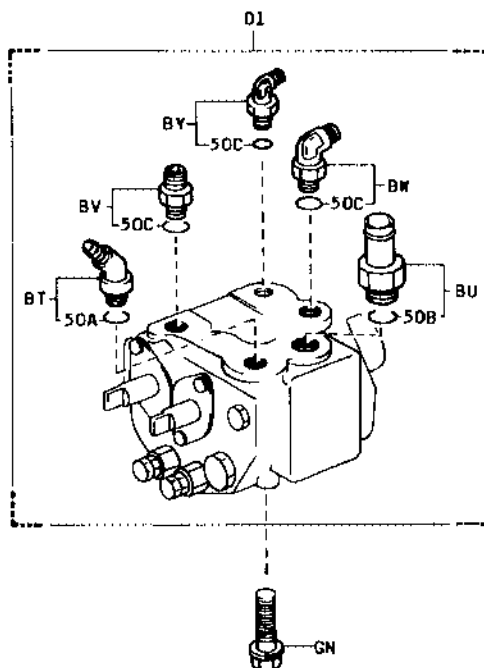

6705-512

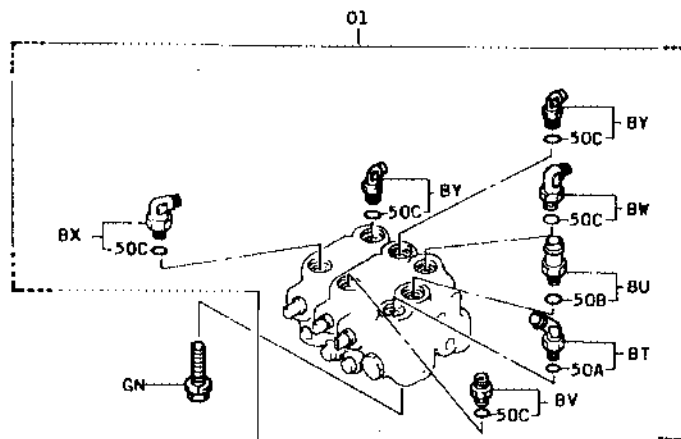 

6705-513

G235-004


FIG. 6705 OIL CONTROL VALVE

6705

FSV

91/09

 FSV (4-WAY) (2/2)

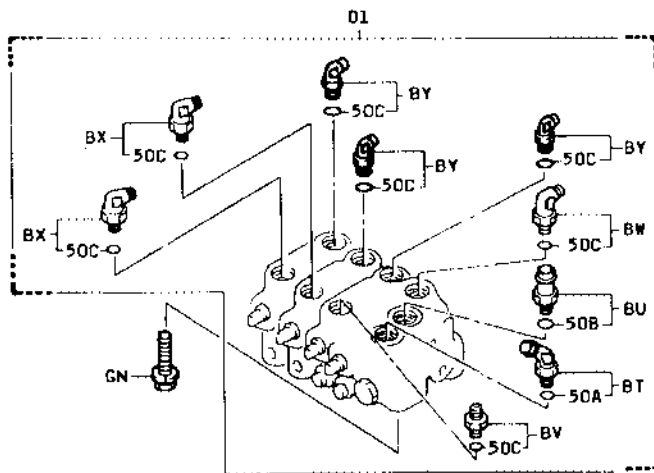

6705-514

PART NAME	PART NAME	QTY
CODE		
6705-01	VALVE ASSY, OIL CONTROL	1
6705-01K	VALVE O/H KIT, OIL CONTROL	1
6705-10	VALVE ASSY, PLUNGER SECTION, NO.1	1
6705-11	VALVE ASSY, PLUNGER SECTION, NO.2	1
6705-20	VALVE SET, PILOT RELIEF, NO.1	1
6705-21	VALVE SET, PILOT RELIEF, NO.2	1
6705-40	COVER, SPRING	2
6705-41	SPRING, COMPRESSION (FOR SPOOL RETURN)	2
6705-50A	RING, O, NO.1 (FOR VALVE FITTING)	1
6705-50B	RING, O, NO.2 (FOR VALVE FITTING)	1
6705-50C	RING, O, NO.3 (FOR VALVE FITTING)	3
6705-AA	BOLT	4
6705-AD	RING, O	1
6705-AE	RING, O	2
6705-AG	SPRING	1
6705-AI	RING, O	1
6705-AK	HOLDER, SPRING	4
6705-AN	SCREW	8
6705-AD	PLUG	5
6705-AQ	RING, BACK UP	4
6705-AR	HOLDER, SEAL	4
6705-AT	STOPPER	1
6705-AU	STOPPER	2
6705-AV	RING, O	2
6705-AX	RING, O	3
6705-AY	RING, O	2
6705-BA	SPRING, COMPRESSION	1
6705-BC	SPRING, COMPRESSION	2
6705-BD	PLUNGER, CHECK	2
6705-BJ	SEAT, VALVE	1
6705-BL	SEAT, INSERT	2
6705-BQ	RING, O	5
6705-BT	FITTING	1
6705-BU	FITTING	1
6705-BV	FITTING	1
6705-BW	FITTING	1
6705-BX	FITTING	1
6705-BY	FITTING	1
6705-CC	PLUG	2
6705-CF	SEAL	4
6705-CL	BOLT	1
6705-FZ	END, SPOOL	1
6705-GA	HOUSING, OUTLET	1
6705-GN	BOLT, W/WASHER	4

G235-005E

FIG. 6709

 
6709

FSV


91/09

FSV (2-WAY)

FSV (3-WAY)

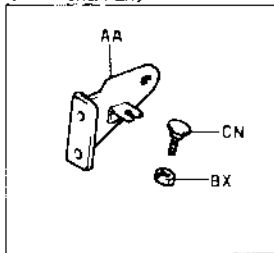

6709-204

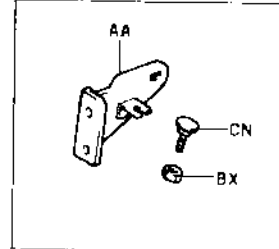 

6709-205
G235-001


FIG. 6709
BIL CONTROL VALVE LINK

6709

FSV

91/09

 FSV (4-WAY)

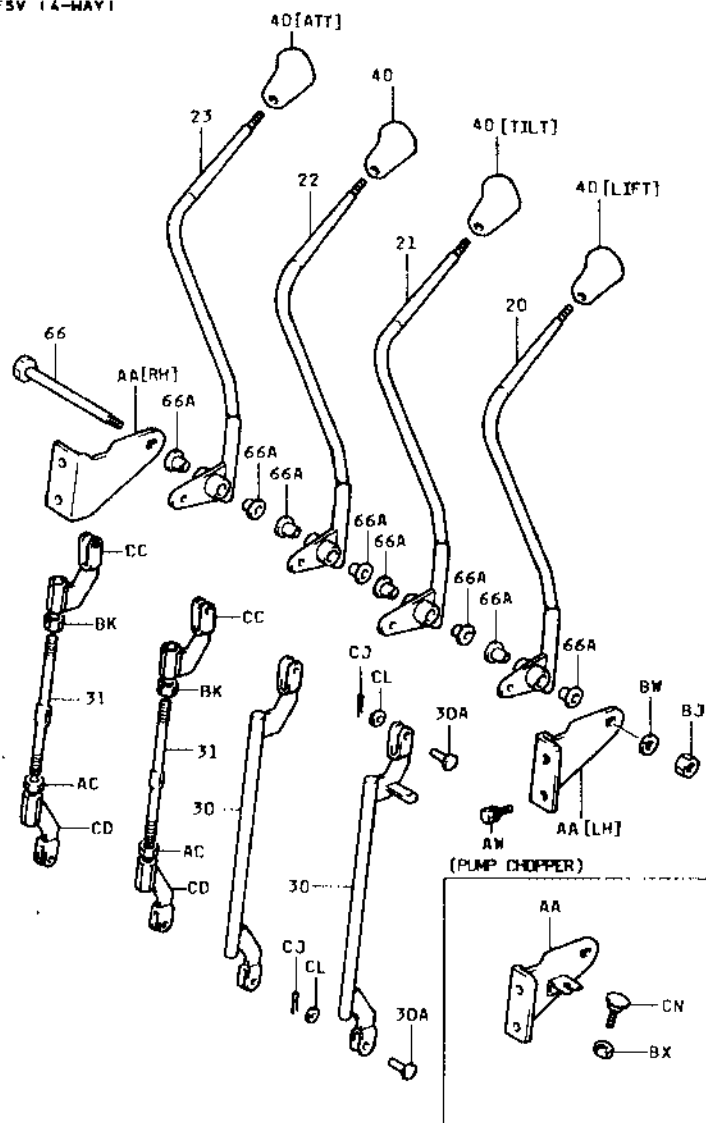

PART NAME	PART NAME	QTY
CODE		
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2	1
6709-22	LEVER SUB-ASSY, CONTROL VALVE, NO.3	1
6709-23	LEVER SUB-ASSY, CONTROL VALVE, NO.4	1
6709-30	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.1	1-2
6709-30A	PIN (FOR CONTROL VALVE LEVER ROD)	4
6709-31	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.2	1
6709-40	KNOB, OIL CONTROL VALVE LEVER	1
6709-66	BOLT (FOR VALVE LEVER)	1
6709-66A	BUSHING	4
6709-AA	BRACKET SUB-ASSY	1
6709-AC	NUT	1
6709-AW	BOLT	4
6709-BJ	NUT	1
6709-BK	NUT	1
6709-BW	WASHER, SPRING	1
6709-BX	NUT	1
6709-CC	CLEVIS, NO.1	1
6709-CD	CLEVIS, NO.2	1
6709-CJ	PIN	2
6709-CL	WASHER, PLATE	4
6709-CN	BOLT	1
6709-LS	PIPE	1

6709-206

G235-002E


FIG. 6801
BODY PIPING

6801

FSV

91/09

 FSV [1/2]

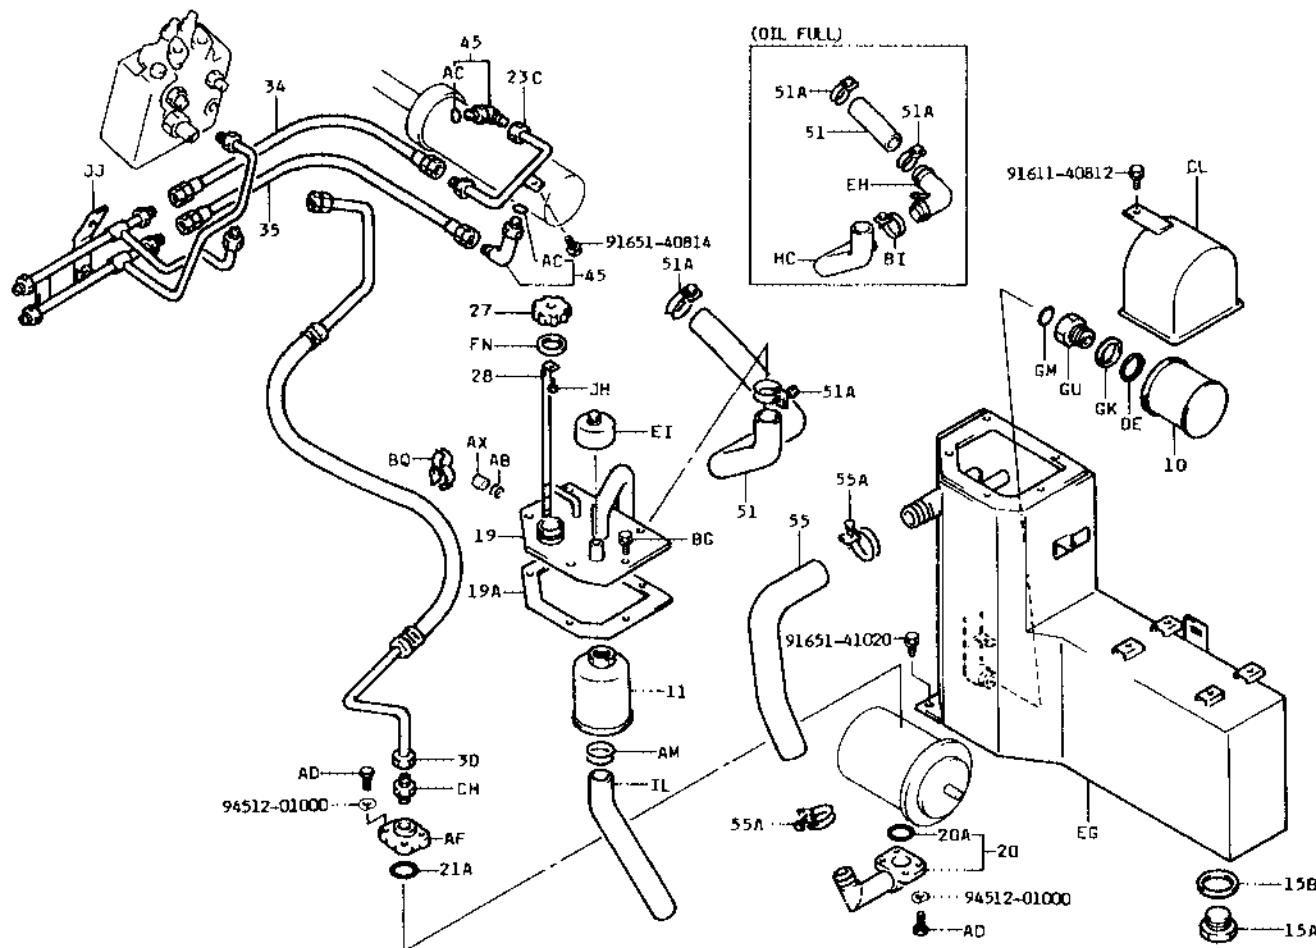

6801-252

G235-001


FIG. 6801
BODY PIPING

6801

FSV

91/09

 FSV 12/21

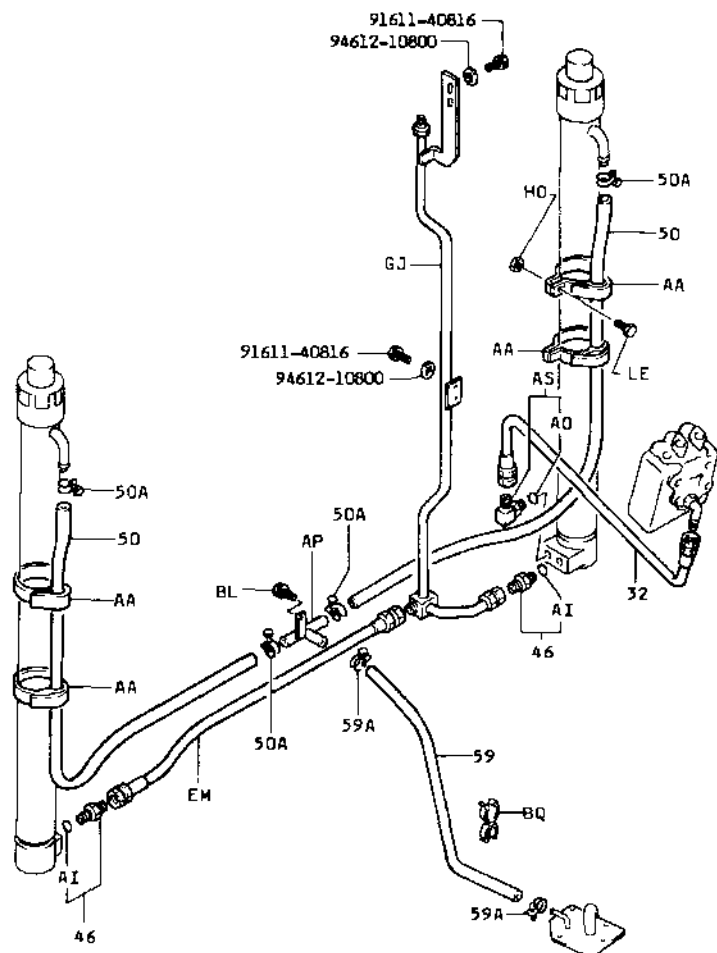

6801-254

PART NAME	PART NAME	QTY
CODE		
6801-10	FILTER ASSY, SUCTION	1
6801-11	FILTER ASSY, RETURN	1
6801-15A	PLUG (FOR OIL TANK DRAIN)	1
6801-15B	GASKET (FOR OIL TANK DRAIN PLUG)	1
6801-19	COVER ASSY, OIL TANK	1
6801-19A	PACKING SUB-ASSY	1
6801-20	PIPE SUB-ASSY (PUMP INLET)	1
6801-20A	RING, O (FOR OIL PUMP INLET)	1
6801-21A	RING, O (FOR OIL PUMP OUTLET)	1
6801-23	PIPE SUB-ASSY (TILT CYLINDER FRONT)	2
6801-27	CAP SUB-ASSY, OIL TANK	1
6801-28	GAGE SUB-ASSY, OIL LEVEL	1
6801-30	HOSE, HIGH PRESSURE, NO.1 (PUMP TO VALVE)	1
6801-32	HOSE, HIGH PRESSURE, NO.1 (VALVE TO LIFT)	1
6801-34	HOSE, HIGH PRESSURE, NO.1 (TILT FRONT)	2
6801-35	HOSE, HIGH PRESSURE, NO.1 (TILT REAR)	2
6801-45	FITTING (FOR TILT CYLINDER)	2
6801-46	FITTING (FOR LIFT CYLINDER)	1
6801-50	HOSE, LOW PRESSURE, NO.1 (LIFT TO TANK)	2
6801-50A	CLAMP (FOR LIFT TO TANK NO.1 HOSE)	4
6801-51	HOSE, LOW PRESSURE, NO.1 (VALVE TO TANK)	1
6801-51A	CLAMP (FOR VALVE TO TANK NO.1 HOSE)	2
6801-55	HOSE, LOW PRESSURE (TANK TO PUMP)	1
6801-55A	CLAMP (FOR TANK TO PUMP HOSE)	2
6801-59	HOSE, LOW PRESSURE, NO.2 (LIFT TO TANK)	1
6801-59A	CLAMP (FOR LIFT TO TANK NO.2 HOSE)	2
6801-AA	BAND, LIFT CYLINDER OVERFLOW HOSE	4
6801-AC	RING, O	4
6801-AD	BOLT	8
6801-AF	FLANGE, SPLIT	1
6801-AI	RING, O	1
6801-AM	CLAMP, HOSE	1
6801-AD	RING, O	1
6801-AP	PIPE	1
6801-A5	FITTING	1
6801-AX	CAP, OIL TANK OVERFLOW PIPE	1
6801-BG	BOLT	3
6801-BI	CLAMP, HOSE	4
6801-BL	BOLT	2
6801-BQ	CLAMP	1
6801-CH	FITTING	1
6801-CL	COVER, OIL FILTER	1
6801-DE	SPACER	1
6801-EG	TANK SUB-ASSY, OIL	1
6801-EH	PIPE SUB-ASSY	1
6801-EI	BREATHER ASSY, AIR	1
6801-EM	HOSE, HIGH PRESSURE	1
6801-FN	PACKING, OIL TANK CAP	1
6801-GJ	PIPE SUB-ASSY	1
6801-GK	PACKING	1
6801-GM	RING, O	1
6801-GU	BOSS	1
6801-HC	HOSE, LOW PRESSURE	1
6801-HO	NUT	4
6801-IL	HOSE	1
6801-JH	SCREW	1
6801-JJ	PIPE SUB-ASSY (TILT CYLINDER)	1
6801-LE	BOLT	4

G235-002E


FIG. 6802
MAST PIPING

6802

FSV

91/09

 FSV

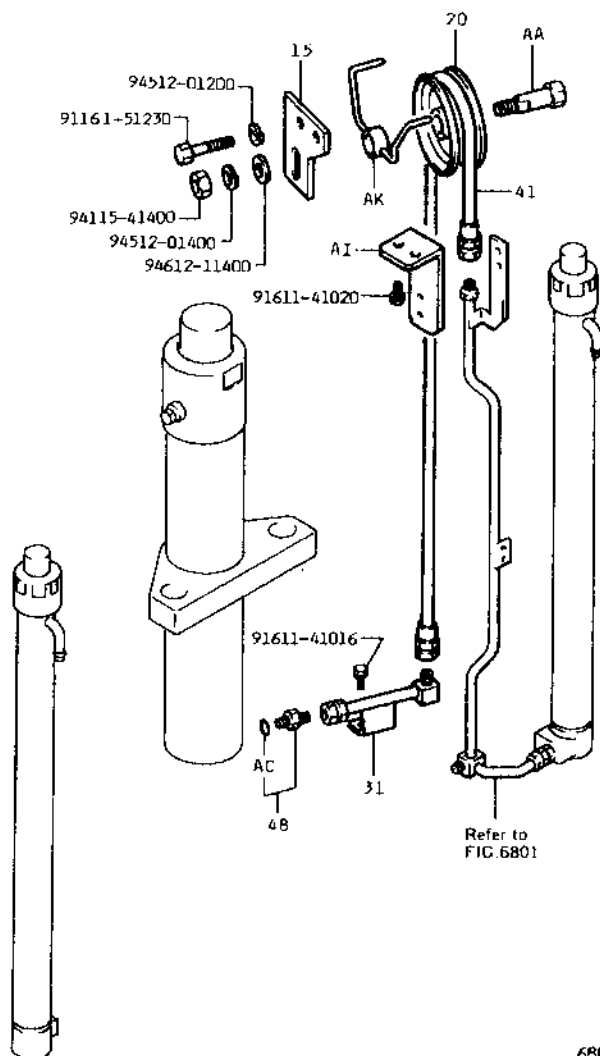

6802-264

PART NAME	PART NAME	QTY
CODE		
6802-15	BRACKET ASSY, HOSE PULLEY	1
6802-20	PULLEY SUB-ASSY, HOSE GUIDE, NO.1	1
6802-31	PIPE SUB-ASSY, NO.2 (FRONT LIFT)	1
6802-41	HOSE, HIGH PRESSURE, NO.1 (FRONT LIFT)	1
6802-48	FITTING (FOR FRONT LIFT CYLINDER)	1
6802-AA	PIN, HOSE GUIDE PULLEY	1
6802-AC	RING, O	1
6802-AI	BRACKET, PIPE	1
6802-AK	GUIDE SUB-ASSY, HOSE	1

G235-001E


FIG. 6101
MAST

6101

FV

91/09

 FY

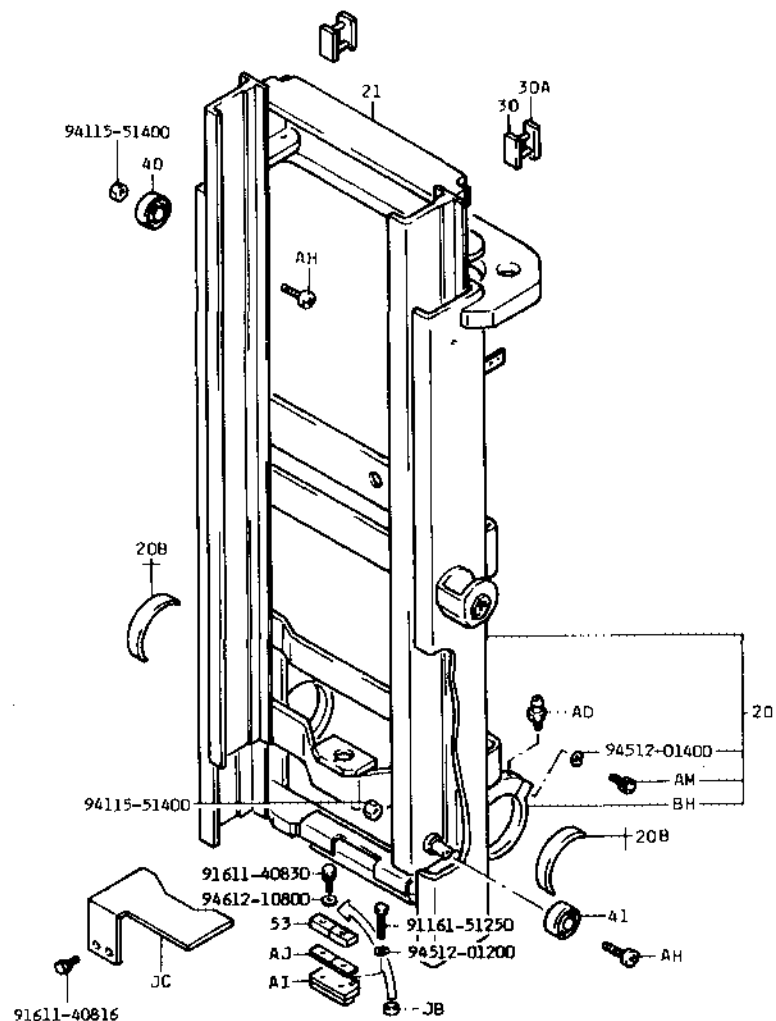


6101-302A


PART NAME	PART NAME	QTY
CODE		
6101-20	MAST SUB-ASSY, OUTER	1
6101-20B	BUSHING, MAST SUPPORT	1
6101-21	MAST SUB-ASSY, INNER	1
6101-30	STRIP SUB-ASSY, OUTER MAST	2
6101-30A	SHIM, OUTER MAST STRIP	99
6101-40	ROLLER, LIFT (FOR OUTER MAST)	2
6101-41	ROLLER, LIFT (FOR INNER MAST)	2
6101-53	CUSHION, MAST (FOR INNER MAST)	2
6101-AD	FITTING, GREASE	2
6101-AH	BOLT	4
6101-AI	STOPPER	1
6101-AJ	SHIM, STOPPER	99
6101-AM	BOLT	4
6101-BH	CAP, MAST SUPPORT	2
6101-JB	COLLAR	2
6101-JC	GUIDE, HOSE	1

G235-001E

 
FV

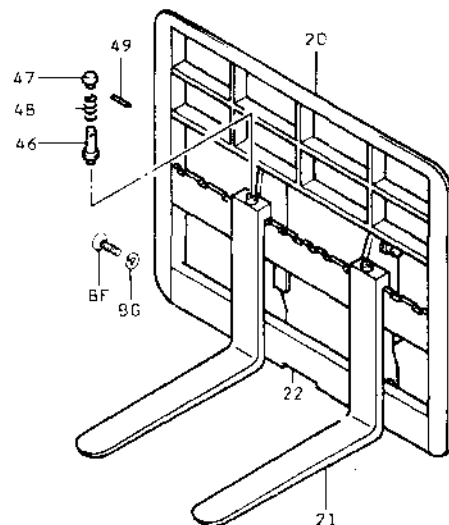


(L/BACK REST)

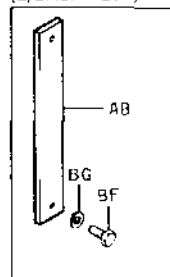 

FSV

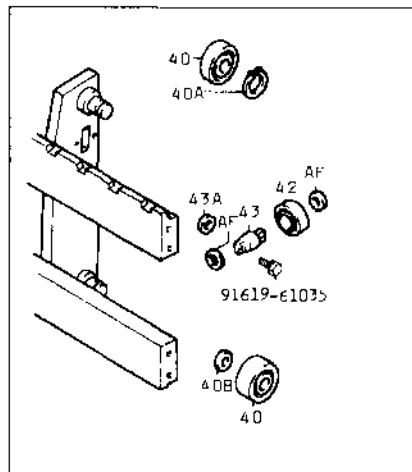 

V

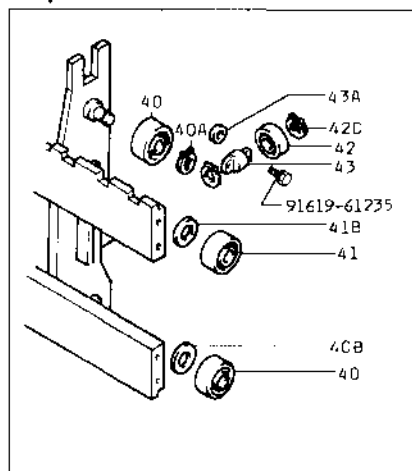 

FV

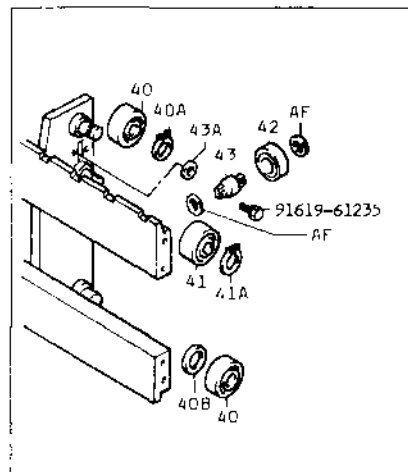 


FIG. 6301
LIFT BRACKET & FORK

6301

FV

91/09

PART NAME	PART NAME	QTY
CODE		
6301-20	BACKREST SUB-ASSY	1
6301-21	FORK SUB-ASSY	2
6301-22	BRACKET SUB-ASSY, LIFT	1
6301-40	ROLLER, LIFT (UPPER, LOWER)	4
6301-40A	RING, SHAFT SNAP (UPPER, LOWER)	2
6301-40B	SHIM, LIFT ROLLER	99
6301-41	ROLLER, LIFT (CENTER)	2
6301-41A	RING, SHAFT SNAP (CENTER)	2
6301-42	ROLLER, SIDE	2
6301-43	SHAFT, SIDE ROLLER	2
6301-43A	SHIM (FOR SIDE ROLLER SHAFT)	99
6301-46	PIN, FORK STOPPER	2
6301-47	KNOB, FORK STOPPER PIN	2
6301-48	SPRING, FORK STOPPER PIN	2
6301-49	PIN, SPRING (FOR FORK STOPPER PIN)	2
6301-AB	PLATE, SIDE	2
6301-AF	PLATE	4
6301-BF	BOLT	4- 8
6301-BG	WASHER	4- 8

G235-002E


FIG. 6302
CHAIN & CHAIN WHEEL

6302

FV

91/09

 FV

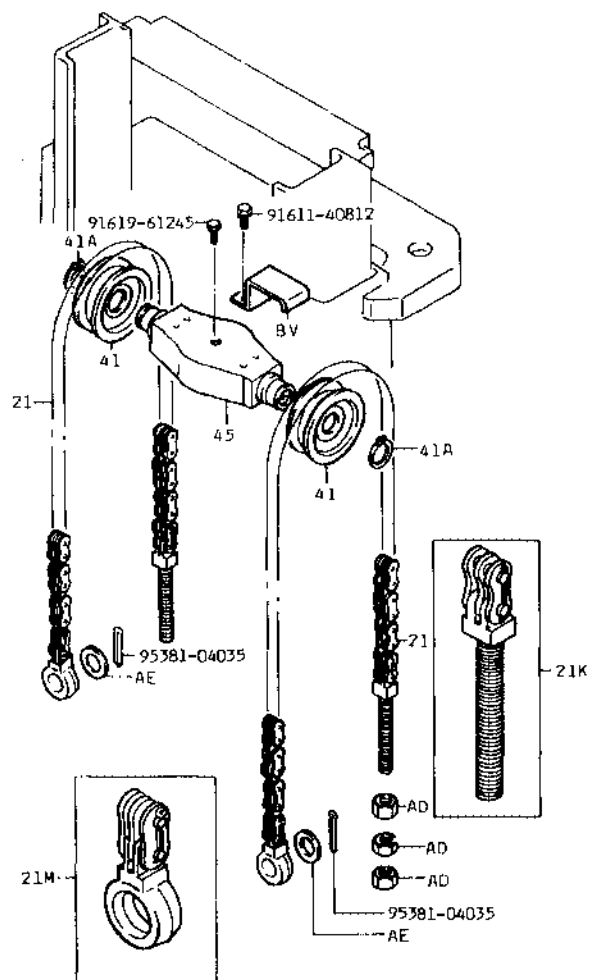

6302-211A

PART NAME CODE	PART NAME	QTY
6302-21	CHAIN SUB-ASSY (FRONT)	2
6302-21K	BOLT KIT, CHAIN ANCHOR, NO.1 (FRONT)	2
6302-21M	BOLT KIT, CHAIN EYE (FRONT)	2
6302-41	WHEEL, CHAIN (FRONT)	2
6302-41A	RING, SHAFT SNAP (FOR FRONT CHAIN WHEEL)	2
6302-45	SUPPORT, CHAIN WHEEL	1
6302-AD	NUT, HEXAGON	6
6302-AE	WASHER, CHAIN SPECIAL	2
6302-BV	STOPPER, CHAIN	2

G235-001E


FIG. 6502
FRONT LIFT CYLINDER

6502

FV

91/09

 FV

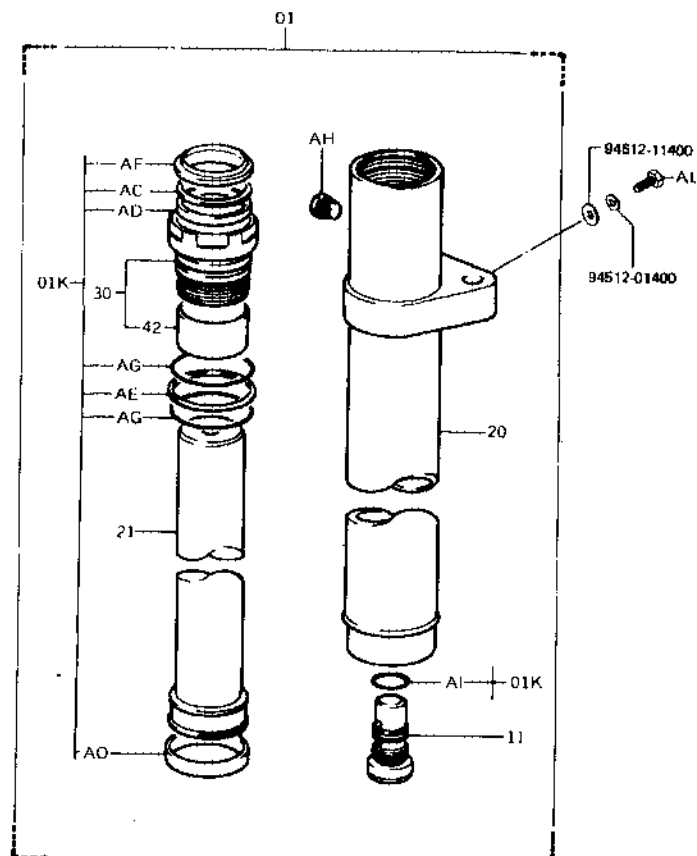

PART NAME	PART NAME	QTY
CODE		
6502-01	CYLINDER ASSY, LIFT	1
6502-01K	CYLINDER O/H KIT, LIFT	1
6502-11	VALVE ASSY, SAFETY DOWN	1
6502-20	CYLINDER SUB-ASSY, LIFT	1
6502-21	ROD SUB-ASSY, LIFT CYLINDER	1
6502-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD	1
6502-42	SLEEVE, LIFT CYLINDER ROD GUIDE	1
6502-AC	RING, BACK UP	1
6502-AD	PACKING, U	1
6502-AE	RING, BACK UP	1
6502-AF	SEAL, DUST	1
6502-AG	RING, O	2
6502-AH	PLUG	1
6502-AI	RING, O	1
6502-AL	BOLT	2
6502-AO	RING, WEAR	1

6502-039A

G235-001E


FIG. 6503
REAR LIFT CYLINDER

6503

FV

91/09

 FV

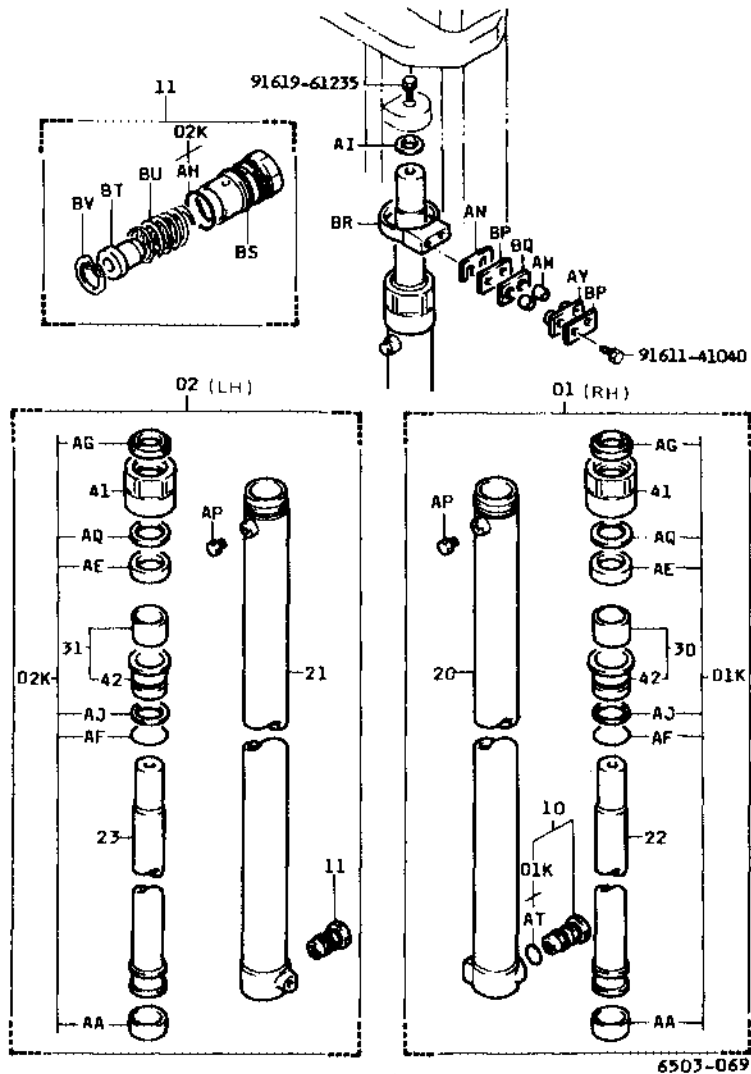

PART NAME	PART NAME	QTY
CODE		
6503-01	CYLINDER ASSY, LIFT, RH	1
6503-01K	CYLINDER O/H KIT, LIFT, RH	1
6503-02	CYLINDER ASSY, LIFT, LH	1
6503-02K	CYLINDER O/H KIT, LIFT, LH	1
6503-10	VALVE ASSY, FLOW REGULATOR	1
6503-11	VALVE ASSY, SAFETY DOWN	1
6503-20	CYLINDER SUB-ASSY, LIFT, RH	1
6503-21	CYLINDER SUB-ASSY, LIFT, LH	1
6503-22	ROD SUB-ASSY, LIFT CYLINDER, RH	1
6503-23	ROD SUB-ASSY, LIFT CYLINDER, LH	1
6503-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD, RH	1
6503-31	GUIDE SUB-ASSY, LIFT CYLINDER ROD, LH	1
6503-41	COVER, LIFT CYLINDER	2
6503-42	SLEEVE, LIFT CYLINDER ROD GUIDE	2
6503-AA	RING, WEAR	2
6503-AE	PACKING, U	2
6503-AF	RING, O	2
6503-AG	SEAL, OUST	2
6503-AH	RING, O	1
6503-AI	SHIM	99
6503-AJ	RING, BACK UP	2
6503-AM	SPACER	4
6503-AN	SHIM	99
6503-AP	PLUG	2
6503-AQ	RING, BACK UP	2
6503-AT	RING, O	1
6503-AY	RUBBER	2
6503-BP	PLATE	4
6503-BQ	RUBBER	2
6503-BR	SUPPORT SUB-ASSY	2
6503-BS	BODY	1
6503-BT	PISTON	1
6503-BU	SPRING	1
6503-BV	RING, SNAP	1

G235-001E


FIG. 6511
TILT CYLINDER

6511

FV

91/09

 FV

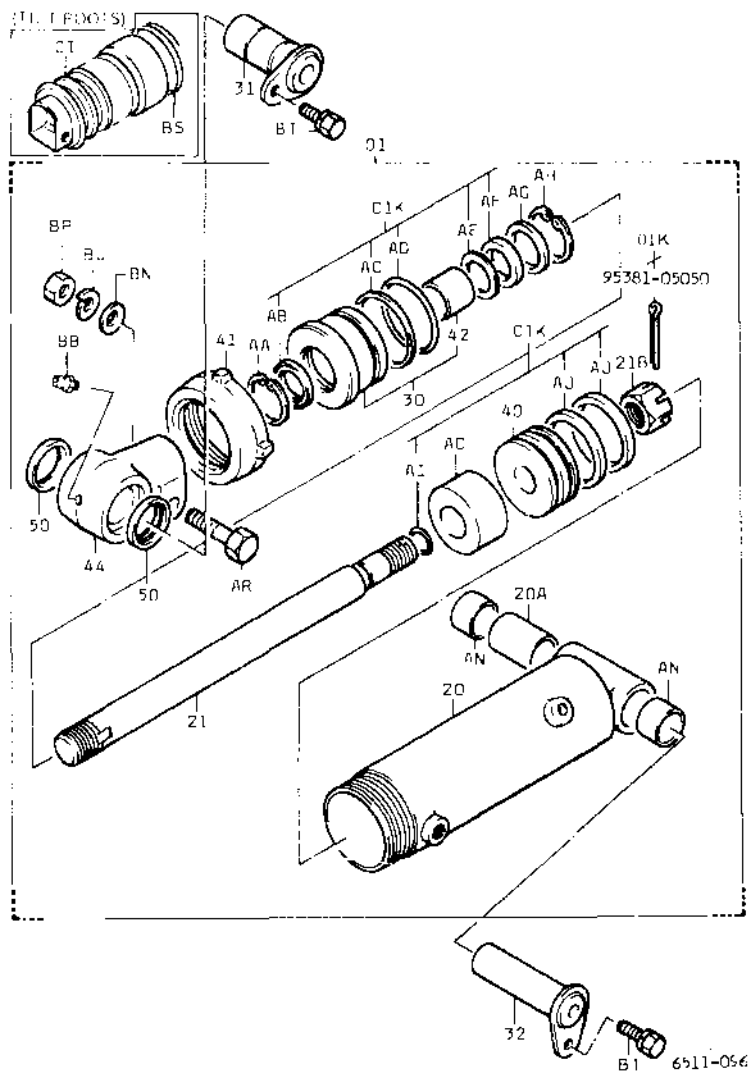

PART NAME	PART NAME	QTY
CODE		
6511-01	CYLINDER ASSY, TILT	1
6511-01K	CYLINDER O/H KIT, TILT	2
6511-20	CYLINDER SUB-ASSY, TILT	1
6511-20A	BUSHING, PIN (FOR CYLINDER)	2
6511-21	ROD SUB-ASSY, TILT CYLINDER PISTON	2
6511-21B	NUT, CASTLE	2
6511-30	GUIDE SUB-ASSY, TILT CYLINDER ROD	2
6511-31	PIN SUB-ASSY, TILT CYLINDER, FR	2
6511-32	PIN SUB-ASSY, TILT CYLINDER, RR	2
6511-40	PISTON, TILT CYLINDER	2
6511-41	COVER, TILT CYLINDER	2
6511-42	SLEEVE, TILT CYLINDER ROD GUIDE	2
6511-44	JOINT, PISTON ROD	2
6511-50	SEAL, GREASE	4
6511-50A	RING, HOLE SNAP	2
6511-50B	SEAL, DUST	2
6511-50C	RING, BACK UP	2
6511-50D	RING, O	2
6511-50E	RING, BACK UP	2
6511-50F	PACKING, U	2
6511-50G	PLATE, STOPPER	2
6511-50H	RING, HOLE SNAP	2
6511-50I	RING, O	2
6511-50J	PACKING, U	4
6511-50K	COLLAR	4
6511-50L	SPACER, TILT CONTROL	2
6511-50M	BOLT	2
6511-50N	FITTING, GREASE	2
6511-50O	WASHER, PLATE	2
6511-50P	NUT	2
6511-50Q	WIRE, CYLINDER BOOT	2
6511-50R	BOLT	2
6511-50S	WASHER	2
6511-50T	BOOT, CYLINDER	2

G235-001E


FIG. 6701
BIL PUMP

6701

FV

91/09

 FV

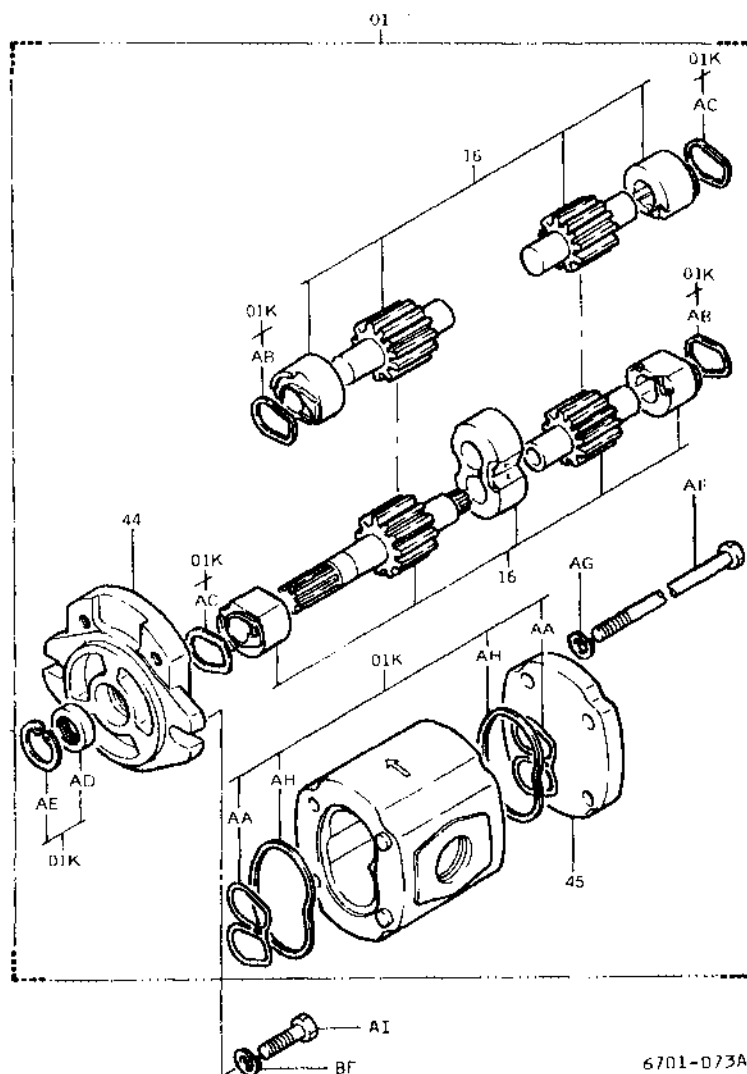

PART NAME	PART NAME	QTY
CODE		
6701-01	PUMP ASSY, OIL	1
6701-01K	PUMP O/H KIT, OIL	1
6701-16	GEAR & BUSHING SET	1
6701-44	FLANGE, MOUNTING	1
6701-45	COVER	1
6701-AA	SEAL, BUSHING	2
6701-AB	RING, BACKING, RH	2
6701-AC	RING, BACKING, LH	2
6701-AD	SEAL, OIL	1
6701-AE	RING, SNAP	1
6701-AF	BOLT	4
6701-AG	WASHER, SPRING	4
6701-AH	SEAL, BODY	2
6701-AI	BOLT	2
6701-BF	WASHER	2

G235-001E


FIG. 6705
OIL CONTROL VALVE

6705

FV

91/09

 FV (2-WAY) [1/2]

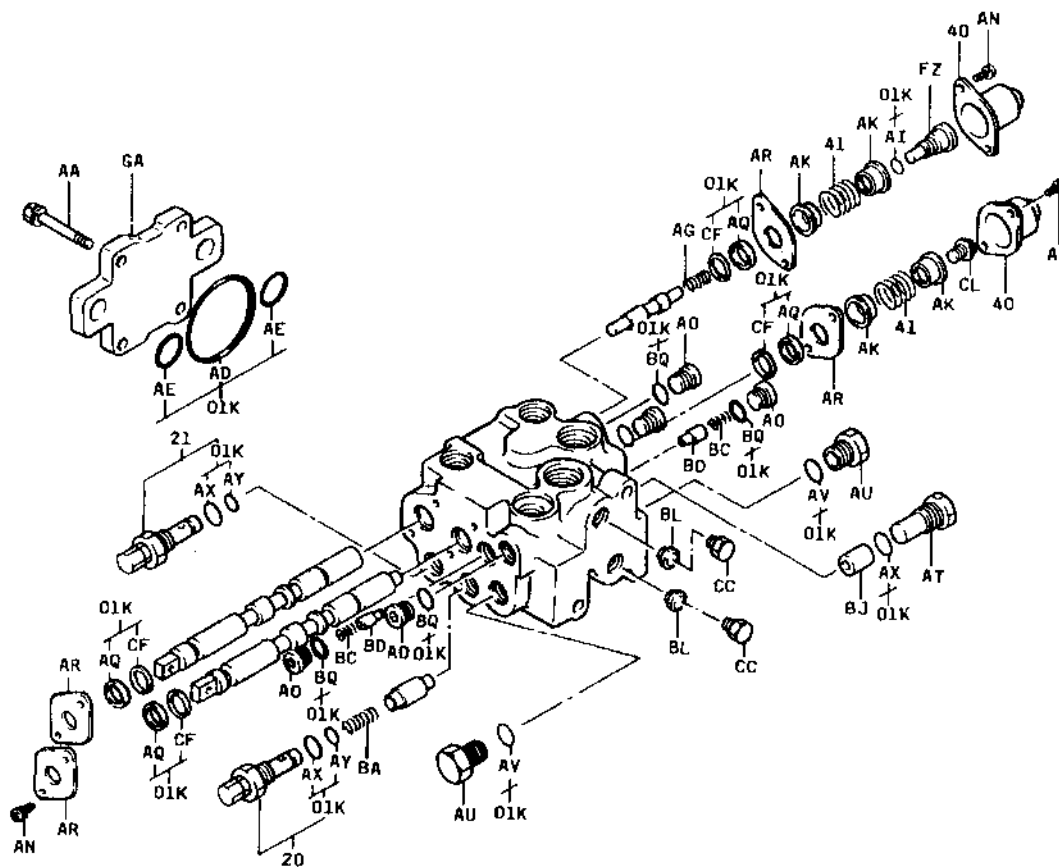

6705-465A

G235-001


FIG. 6705
CONT

6705

FV

91/09

 FV (3-WAY) 11/21

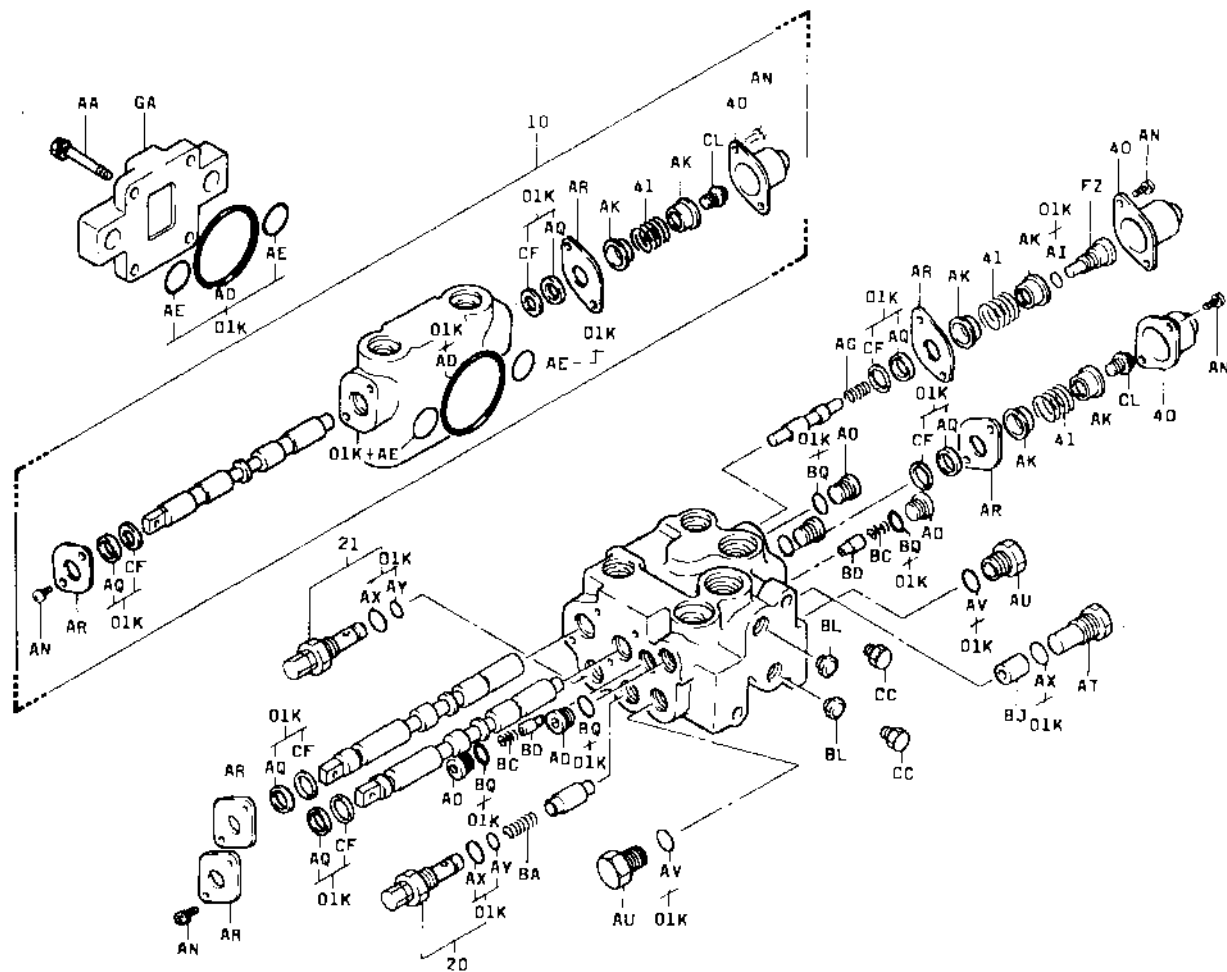

6705-515

G235-002

6725 515 0087


FIG-6705
DIL CONTROL VALVE

6705

FV

91/09

 FV (4-WAY) (1/2)

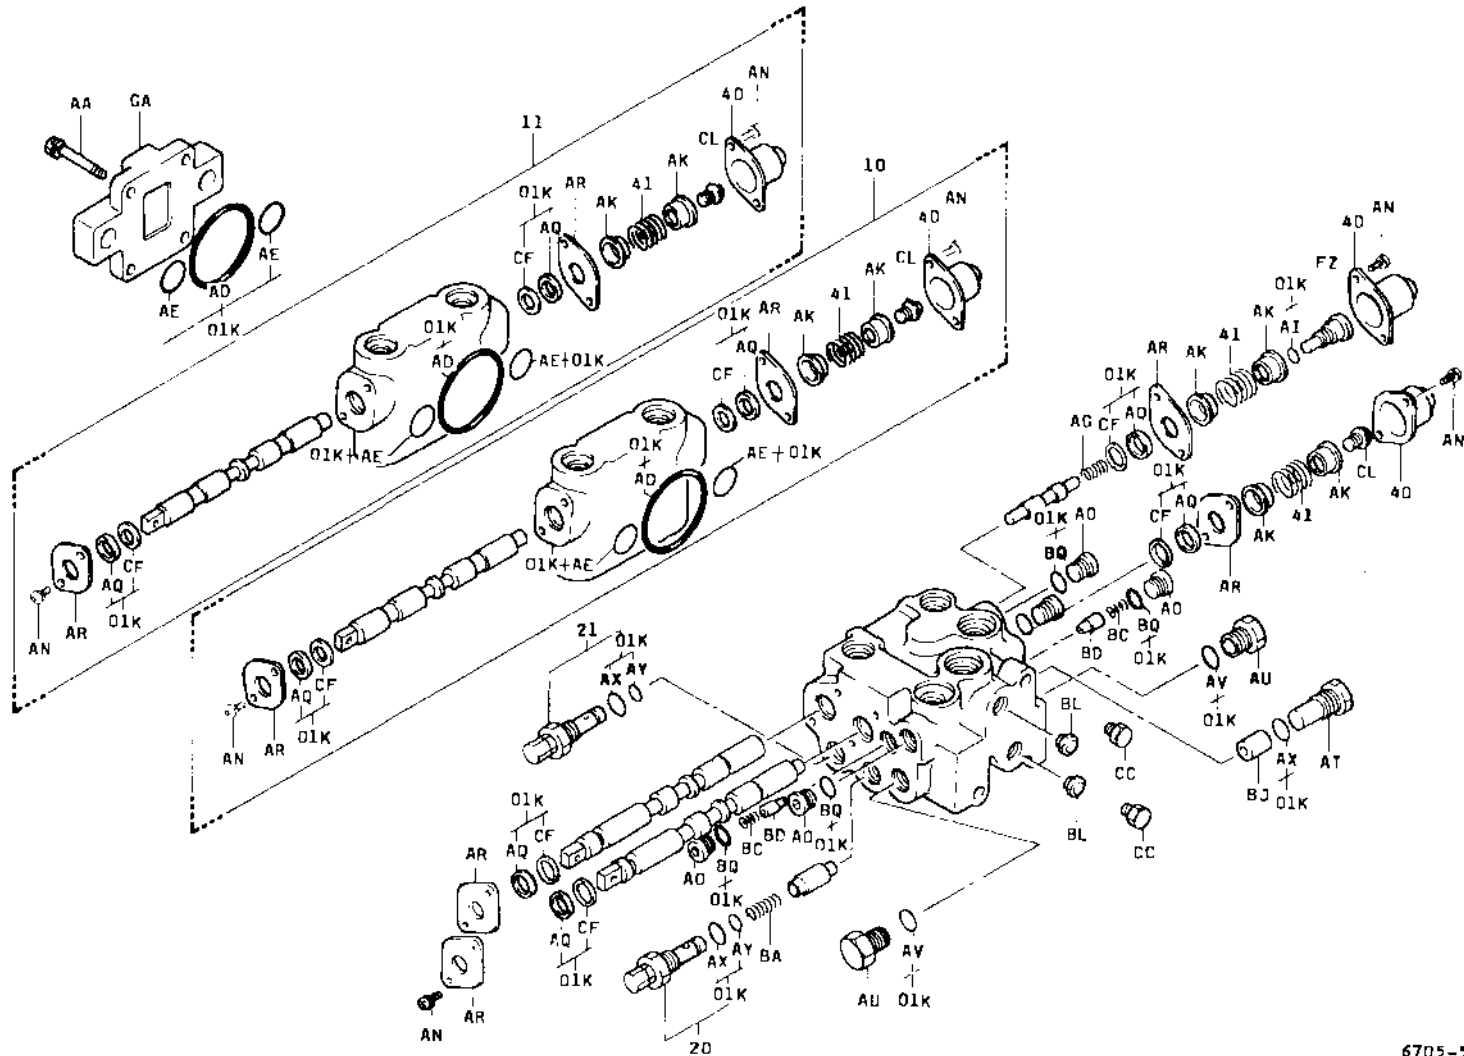

6705-516

G235-003

FIG. 6705
DIL CONTROL VALVE

 
 
6705

FV

91/09

FV (2-WAY) (2/2)

FV (3-WAY) (2/2)

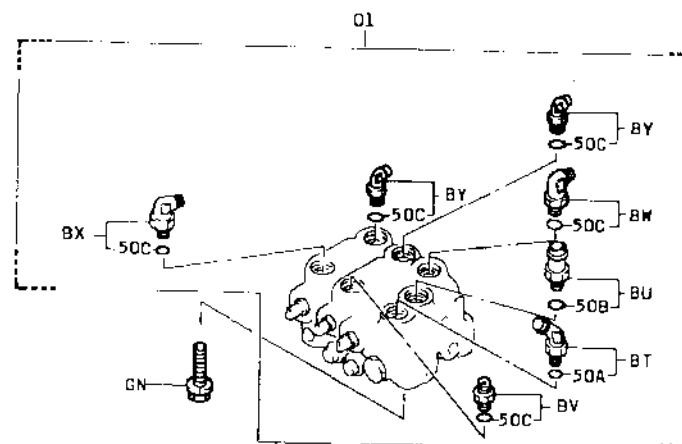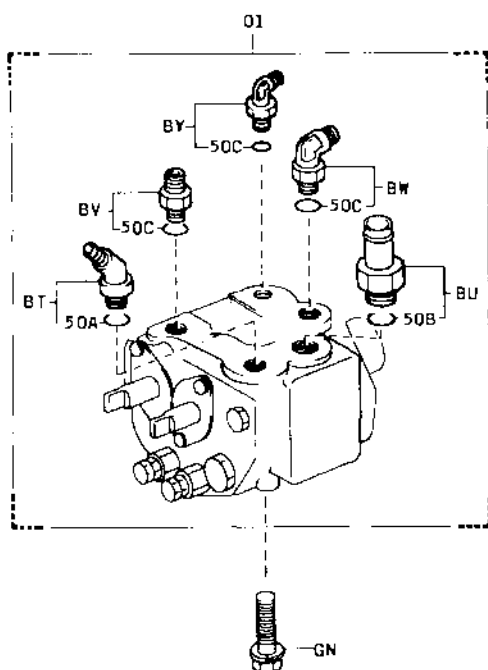

6705-513

6705-512

G235-004


FIG. 6705
DIL CONTROL VALVE

6705

FV

91/09

 FV (4-WAY) (2/2)

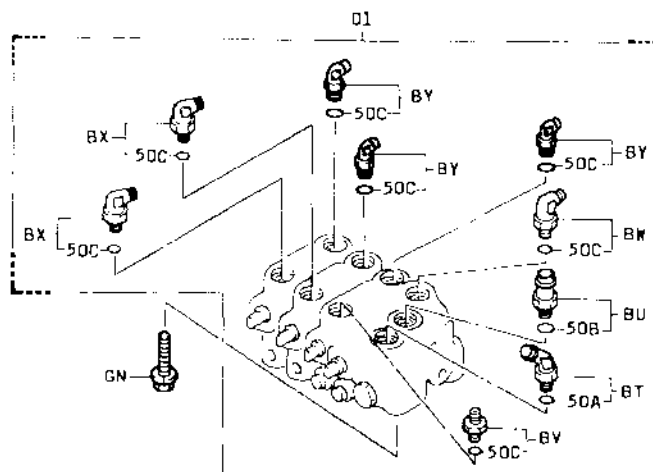

6705-514

PART CODE	PART NAME	QTY
6705-01	VALVE ASSY, OIL CONTROL	1
6705-01K	VALVE O/H KIT, OIL CONTROL	1
6705-10	VALVE ASSY, PLUNGER SECTION, NO.1	1
6705-11	VALVE ASSY, PLUNGER SECTION, NO.2	1
6705-20	VALVE SET, PILOT RELIEF, NO.1	1
6705-21	VALVE SET, PILOT RELIEF, NO.2	1
6705-40	COVER, SPRING	2
6705-41	SPRING, COMPRESSION (FOR SPOOL RETURN)	2
6705-50A	RING, O, NO.1 (FOR VALVE FITTING)	1
6705-50B	RING, O, NO.2 (FOR VALVE FITTING)	1
6705-50C	RING, O, NO.3 (FOR VALVE FITTING)	3
6705-AA	BOLT	4
6705-AD	RING, O	1
6705-AE	RING, O	2
6705-AG	SPRING	1
6705-AJ	RING, O	1
6705-AK	HOLDER, SPRING	4
6705-AN	SCREW	8
6705-AD	PLUG	5
6705-AQ	RING, BACK UP	4
6705-AR	HOLDER, SEAL	4
6705-AT	STOPPER	1
6705-AU	STOPPER	2
6705-AV	RING, O	2
6705-AX	RING, O	3
6705-AY	RING, O	2
6705-BA	SPRING, COMPRESSION	1
6705-BC	SPRING, COMPRESSION	2
6705-BD	PLUNGER, CHECK	2
6705-BJ	SEAT, VALVE	1
6705-BL	SEAT, INSERT	2
6705-BQ	RING, O	5
6705-BT	FITTING	1
6705-BU	FITTING	1
6705-BV	FITTING	1
6705-BW	FITTING	1
6705-BX	FITTING	1
6705-BY	FITTING	1
6705-CC	PLUG	2
6705-CF	SEAL	4
6705-CL	BOLT	1
6705-FZ	END, SPOOL	1
6705-GA	HOUSING, OUTLET	1
6705-GN	BOLT, W/WASHER	4

G235-005E

FIG. 6709
FIL CONT

 
6709

FV


91/09

FV (2-WAY)

FV (3-WAY)

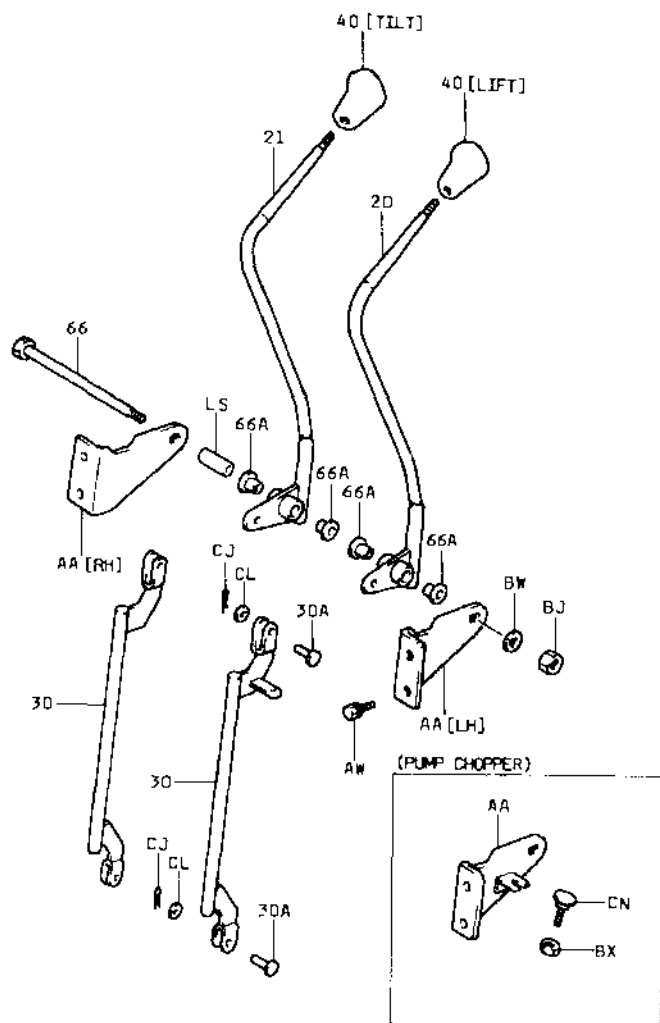

6709-204

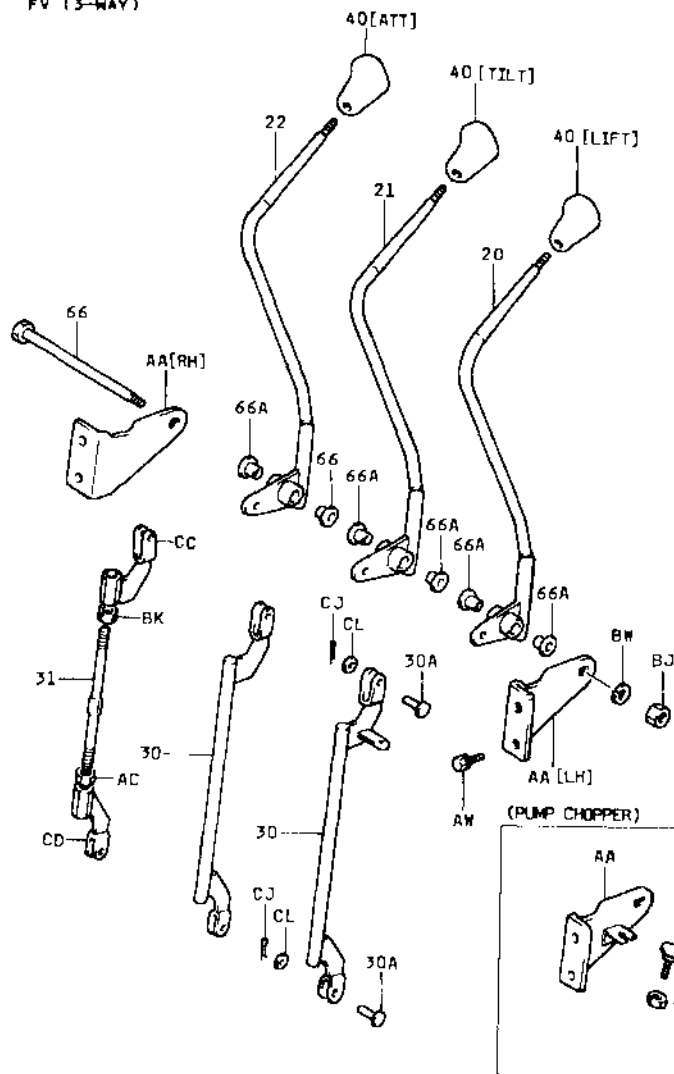 

6709-205

G235-001


FIG. 6709 CONTROL VALVE LINK

6709

FV

91/09

 FV (4-WAY)

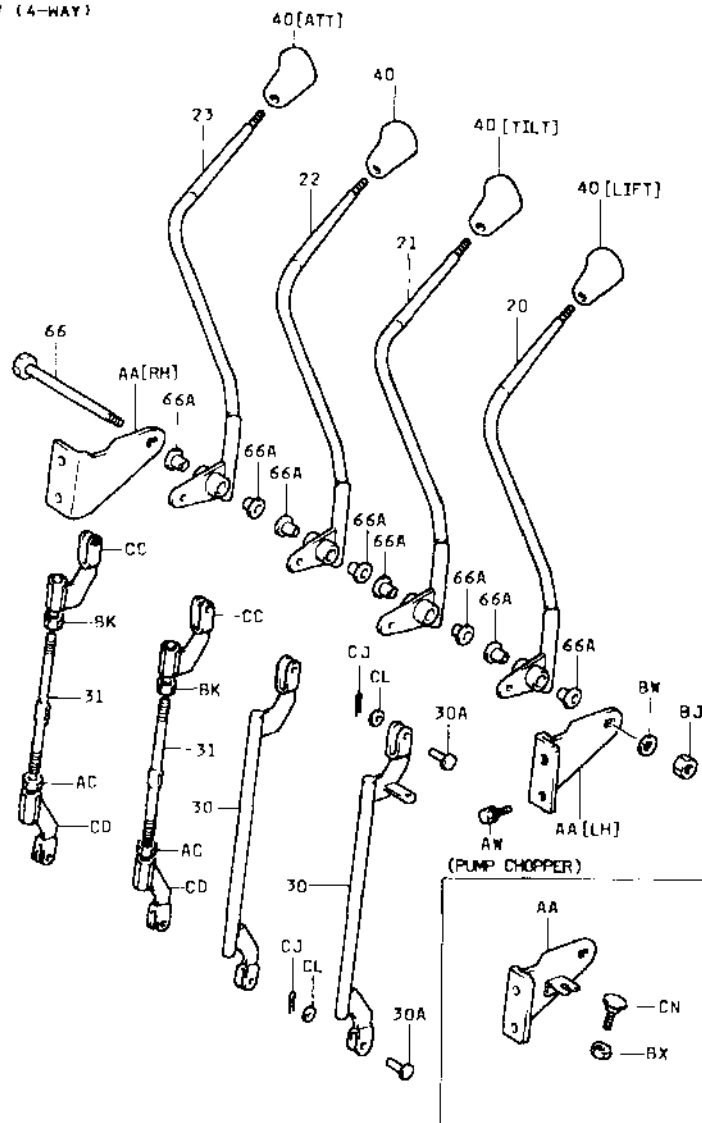

PART NAME	PART NAME	QTY
CODE		
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2	1
6709-22	LEVER SUB-ASSY, CONTROL VALVE, NO.3	1
6709-23	LEVER SUB-ASSY, CONTROL VALVE, NO.4	1
6709-30	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.1	1- 2
6709-30A	PIN (FOR CONTROL VALVE LEVER ROD)	4
6709-31	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.2	1
6709-40	KNOB, OIL CONTROL VALVE LEVER	1
6709-66	BOLT (FOR VALVE LEVER)	1
6709-66A	BUSHING	4
6709-AA	BRACKET SUB-ASSY	1
6709-AC	NUT	1
6709-AW	BOLT	4
6709-BJ	NUT	1
6709-BK	NUT	1
6709-BW	WASHER, SPRING	1
6709-BX	NUT	1
6709-CC	CLEVIS, NO.1	1
6709-CD	CLEVIS, NO.2	1
6709-CJ	PIN	2
6709-CL	WASHER, PLATE	4
6709-CN	BOLT	1
6709-LS	PIPE	1

6709-206

G235-002E


FIG. 6801
BODY PIPING

6801

FV

91/09

 FV 11/21

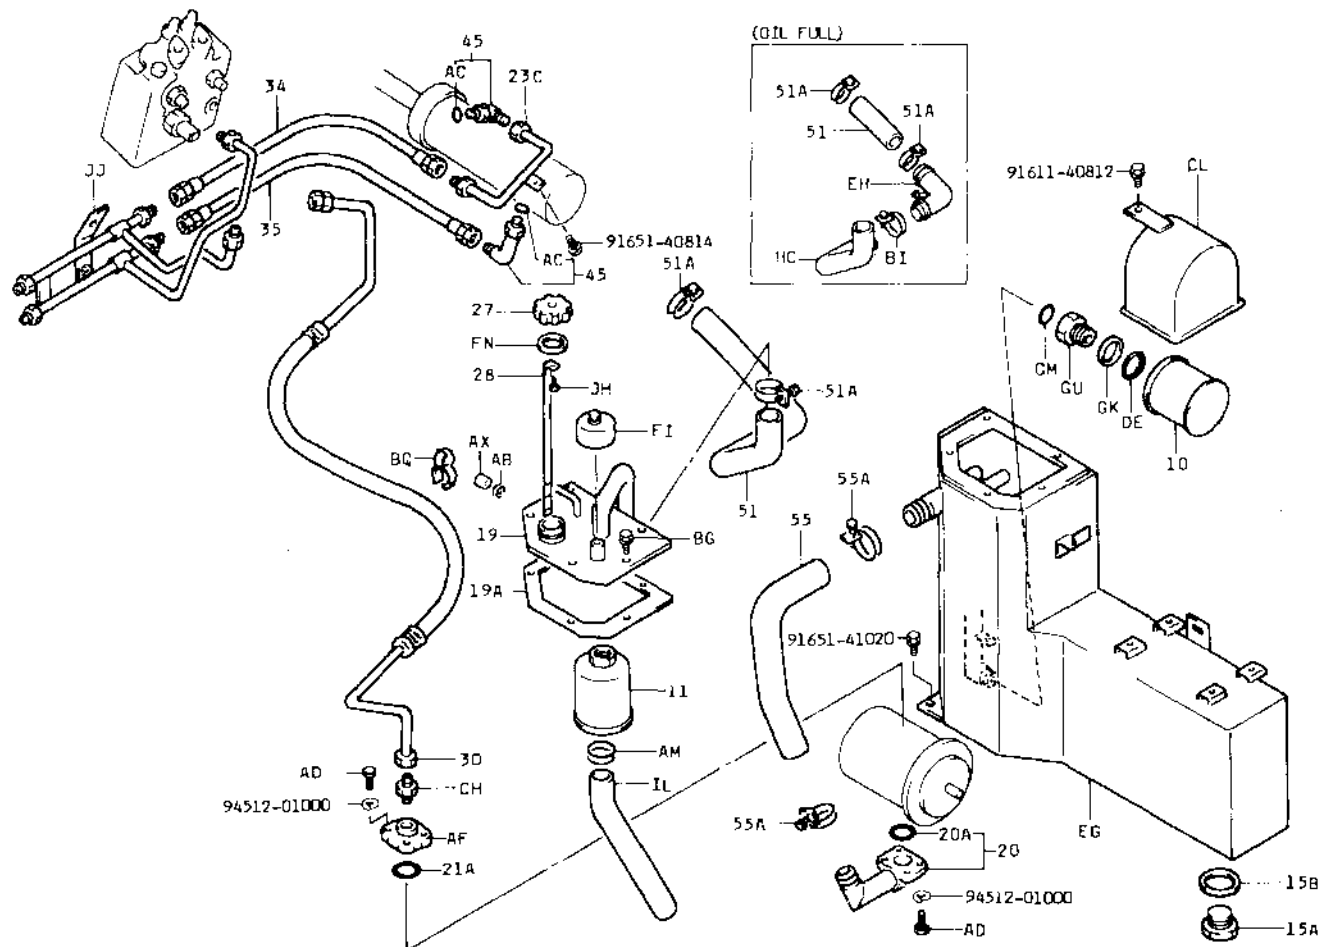

6801-252

G235-001


FIG. 6801
BODY PIPING

6801

FV

91/09

 FV [2/2]

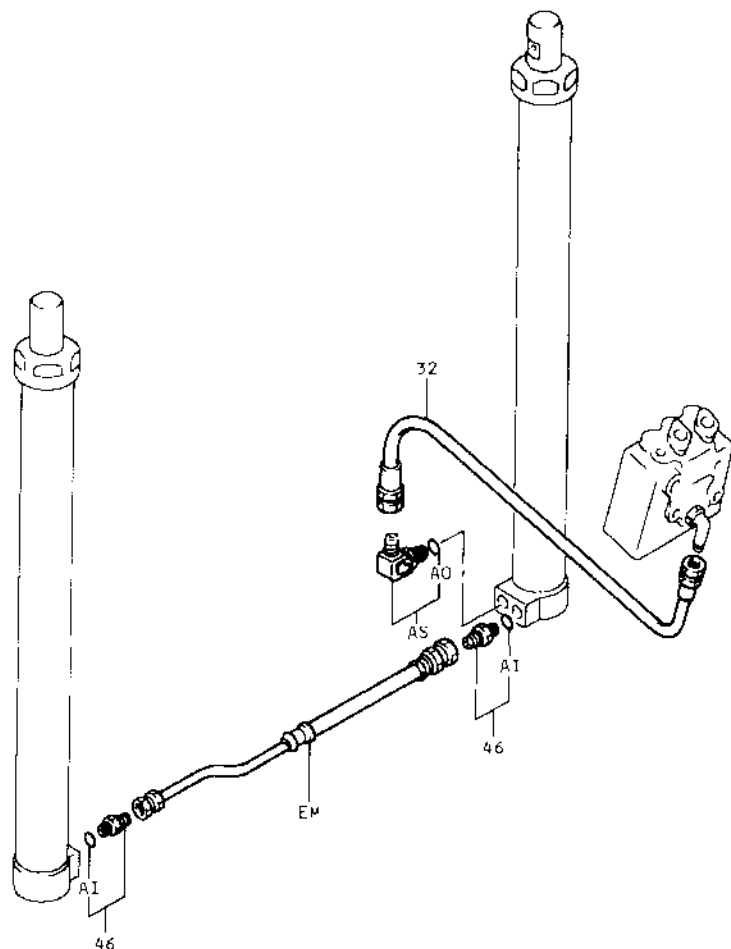

6801-200

PART NAME	PART NAME	QTY
CODE		
6801-10	FILTER ASSY, SUCTION	1
6801-11	FILTER ASSY, RETURN	1
6801-15A	PLUG (FOR OIL TANK DRAIN)	1
6801-15B	GASKET (FOR OIL TANK DRAIN PLUG)	1
6801-19	COVER ASSY, OIL TANK	1
6801-19A	PACKING SUB-ASSY	1
6801-20	PIPE SUB-ASSY (PUMP INLET)	1
6801-20A	RING, O (FOR OIL PUMP INLET)	1
6801-21A	RING, O (FOR OIL PUMP OUTLET)	1
6801-23	PIPE SUB-ASSY (TILT CYLINDER FRONT)	2
6801-27	CAP SUB-ASSY, OIL TANK	1
6801-28	GAGE SUB-ASSY, OIL LEVEL	1
6801-30	HOSE, HIGH PRESSURE, NO.1 (PUMP TO VALVE)	1
6801-32	HOSE, HIGH PRESSURE, NO.1 (VALVE TO LIFT)	1
6801-34	HOSE, HIGH PRESSURE, NO.1 (TILT FRONT)	2
6801-35	HOSE, HIGH PRESSURE, NO.1 (TILT REAR)	2
6801-45	FITTING (FOR TILT CYLINDER)	2
6801-46	FITTING (FOR LIFT CYLINDER)	2
6801-51	HOSE, LOW PRESSURE, NO.1 (VALVE TO TANK)	1
6801-51A	CLAMP (FOR VALVE TO TANK NO.1 HOSE)	2
6801-55	HOSE, LOW PRESSURE (TANK TO PUMP)	1
6801-55A	CLAMP (FOR TANK TO PUMP HOSE)	2
6801-AB	CLAMP	1
6801-AC	RING, O	4
6801-AD	BOLT	8
6801-AF	FLANGE, SPLIT	1
6801-AI	RING, O	2
6801-AM	CLAMP, HOSE	1
6801-AD	RING, O	1
6801-AS	FITTING	1
6801-AX	CAP, OIL TANK OVERFLOW PIPE	1
6801-BG	BOLT	5
6801-BL	BOLT	1
6801-CH	FITTING	1
6801-CL	COVER, OIL FILTER	1
6801-DE	SPACER	1
6801-EG	TANK SUB-ASSY, OIL	1
6801-EI	BREATHER ASSY, AIR	1
6801-EM	HOSE, HIGH PRESSURE	1
6801-FN	PACKING, OIL TANK CAP	1
6801-GK	PACKING	1
6801-GM	RING, O	1
6801-GU	BOSS	1
6801-IL	HOSE	1
6801-JH	SCREW	1
6801-JJ	PIPE SUB-ASSY (TILT CYLINDER)	1

G235-002E


FIG. 6802
MAST PIPING

6802

FV

91/09

 FV

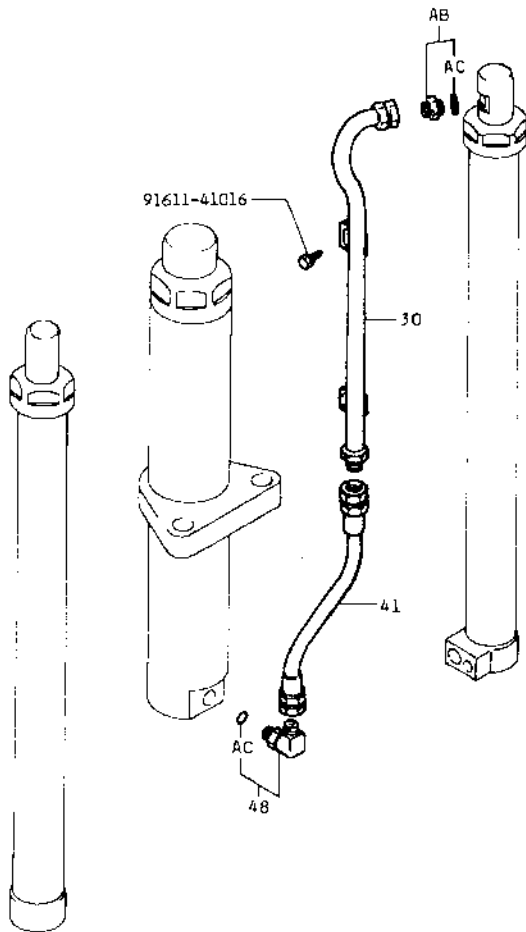

6802-265

PART NAME	PART NAME	QTY
CODE		
6802-30	PIPE SUB-ASSY. NO.1 (FRONT LEFT)	1
6802-41	HOSE, HIGH PRESSURE, NO.1 (FRONT LEFT)	1
6802-48	FITTING (FOR FRONT LEFT CYLINDER)	1
6802-AB	FITTING	1
6802-AC	RING, O	2

G235-001E


FIG. 6101
MAST

6101

V

91/09

 V

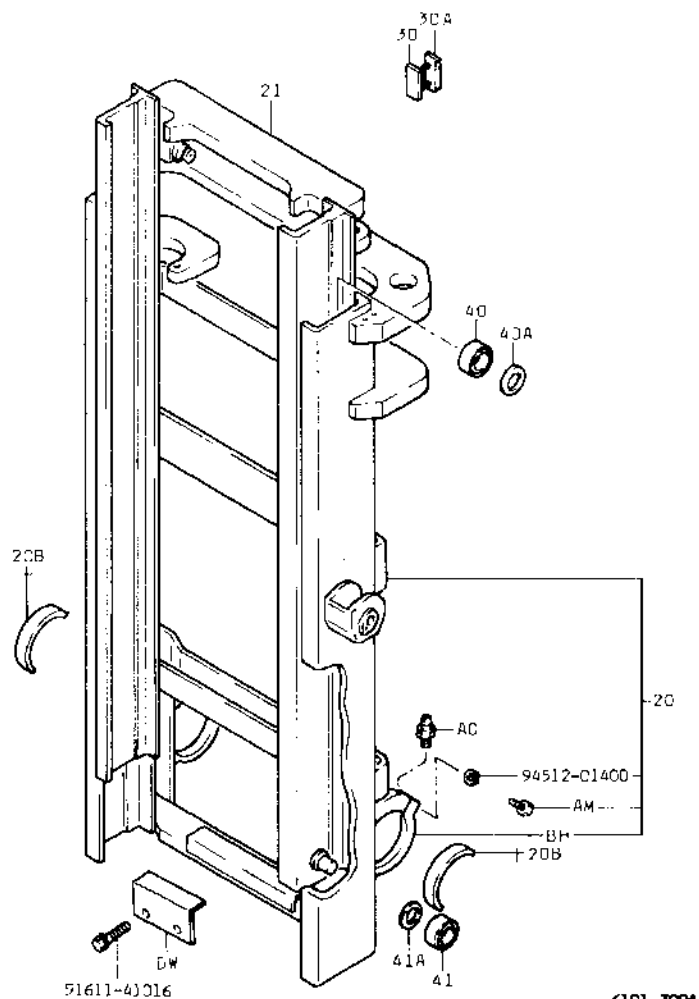

PART NAME	PART NAME	QTY
CODE		
6101-20	MAST SUB-ASSY, OUTER	1
6101-20B	BUSHING, MAST SUPPORT	1
6101-21	MAST SUB-ASSY, INNER	1
6101-30	STRIP SUB-ASSY, OUTER MAST	2
6101-30A	SHIM, OUTER MAST STRIP	99
6101-40	ROLLER, LIFT (FOR OUTER MAST)	2
6101-40A	SHIM, LIFT ROLLER (FOR OUTER MAST)	99
6101-41	ROLLER, LIFT (FOR INNER MAST)	2
6101-41A	SHIM, LIFT ROLLER (FOR INNER MAST)	99
6101-AD	FITTING, GREASE	2
6101-AM	BOLT	4
6101-BH	CAP, MAST SUPPORT	2
6101-DW	COVER, HOSE	1

G235-001E


FIG. 6301
LIFT BRACKET & FORK

6301


V

91/09

 
V

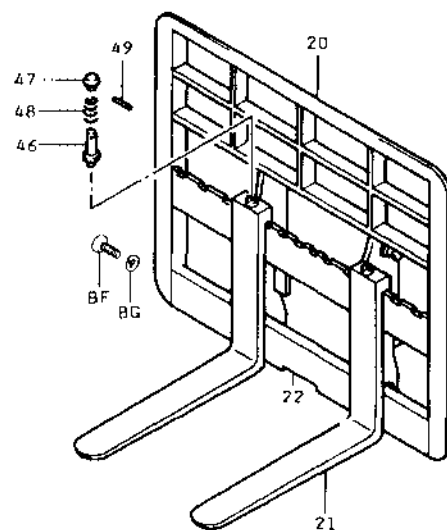


(L/BACK REST)

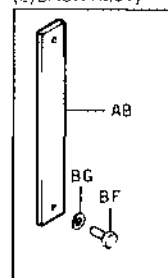 


FSV

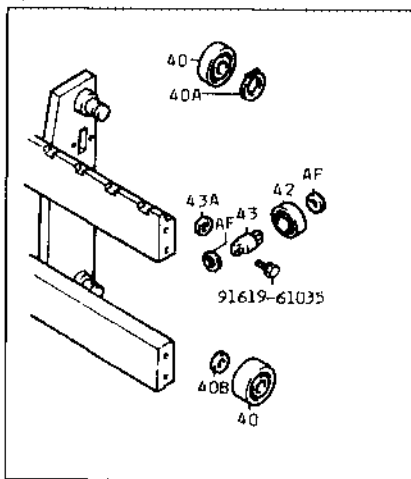 

FV

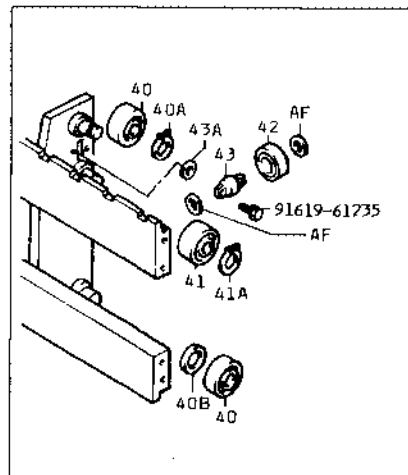 

V

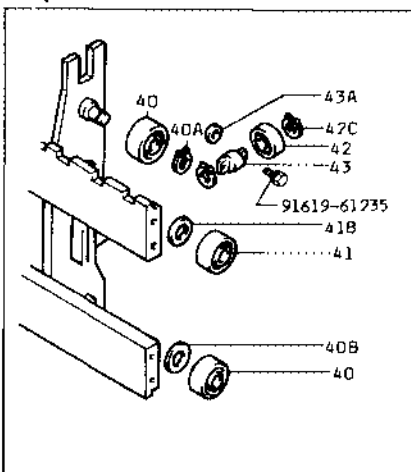 

6301-238

G235-001

FIG. 6301
LIFT BRACKET & FORK

6301

V

91/09

PART NAME CODE	PART NAME	QTY
6301-20	BACKREST SUB-ASSY	1
6301-21	FORK SUB-ASSY	2
6301-22	BRACKET SUB-ASSY, LIFT	1
6301-40	ROLLER, LIFT (UPPER, LOWER)	4
6301-40A	RING, SHAFT SNAP (UPPER, LOWER)	2
6301-40B	SHIM, LIFT ROLLER	99
6301-41	ROLLER, LIFT (CENTER)	2
6301-41B	SHIM (CENTER)	99
6301-42	ROLLER, SIDE	2
6301-42C	RING, SHAFT SNAP (FOR SIDE ROLLER)	4
6301-43	SHAFT, SIDE ROLLER	2
6301-43A	SHIM (FOR SIDE ROLLER SHAFT)	99
6301-46	PIN, FORK STOPPER	2
6301-47	KNOB, FORK STOPPER PIN	2
6301-48	SPRING, FORK STOPPER PIN	2
6301-49	PIN, SPRING (FOR FORK STOPPER PIN)	2
6301-BF	BOLT	8
6301-BG	WASHER	8

G235-002E

0098


FIG. 6302
CHAIN & CHAIN WHEEL

6302

V

91/09

 V

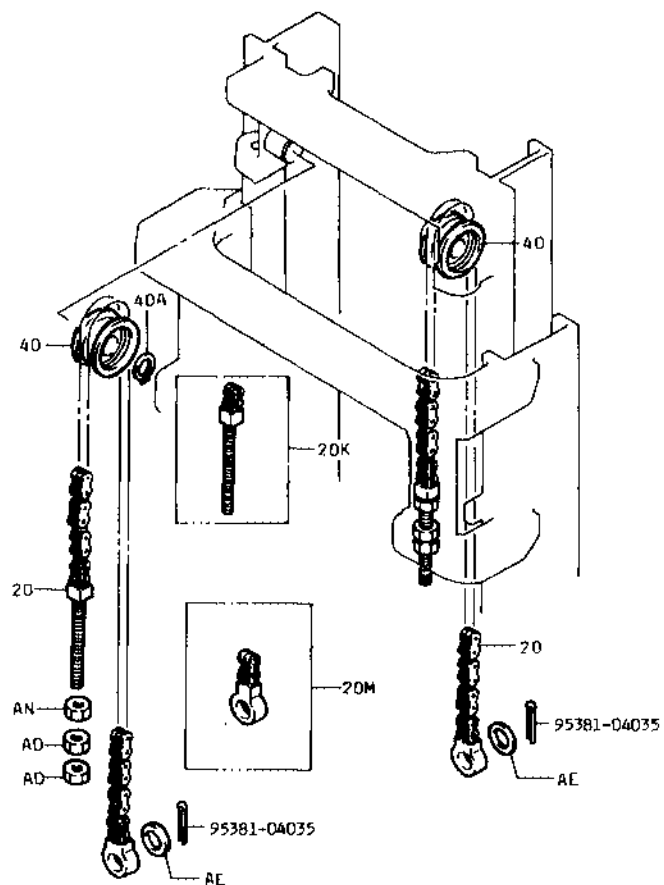

6302-209

PART NAME CODE	PART NAME	QTY
6302-20	CHAIN SUB-ASSY	2
6302-20K	BOLT KIT, CHAIN ANCHOR, NO.1	2
6302-20H	BOLT KIT, CHAIN EYE	2
6302-40	WHEEL, CHAIN	2
6302-40A	RING, SHAFT SNAP (FOR CHAIN WHEEL)	2
6302-AD	NUT, HEXAGON	4
6302-AE	WASHER, CHAIN SPECIAL	2
6302-AN	NUT, HEXAGON	2

G235-001E




FIG-6501
LIFT CYLINDER

6501

V

91/09

   V

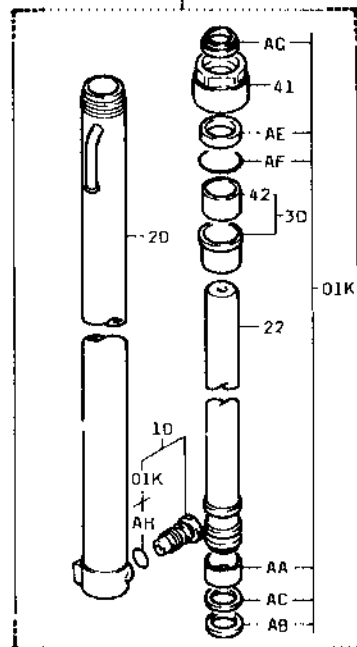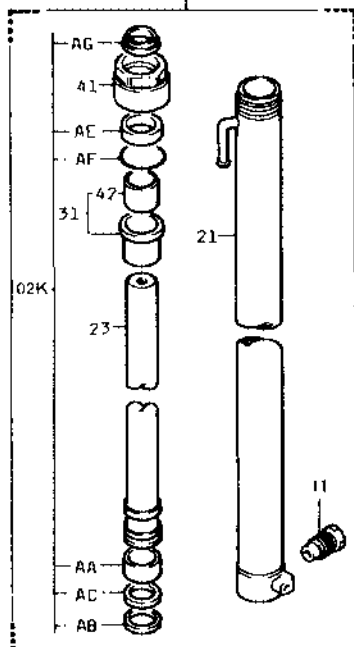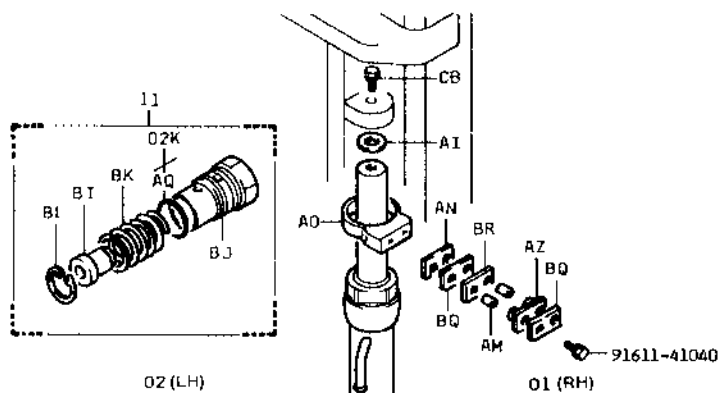

6501-054


PART NAME	PART NAME	QTY
CODE		
6501-01	CYLINDER ASSY, LIFT, RH	1
6501-01K	CYLINDER O/H KIT, LIFT, RH	1
6501-02	CYLINDER ASSY, LIFT, LH	1
6501-02K	CYLINDER O/H KIT, LIFT, LH	1
6501-10	VALVE ASSY, FLOW REGULATOR	1
6501-11	VALVE ASSY, SAFETY DOWN	1
6501-20	CYLINDER SUB-ASSY, LIFT, RH	1
6501-21	CYLINDER SUB-ASSY, LIFT, LH	1
6501-22	ROD SUB-ASSY, LIFT CYLINDER, RH	1
6501-23	ROD SUB-ASSY, LIFT CYLINDER, LH	1
6501-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD, RH	1
6501-31	GUIDE SUB-ASSY, LIFT CYLINDER ROD, LH	1
6501-41	COVER, LIFT CYLINDER	2
6501-42	SLEEVE, LIFT CYLINDER ROD GUIDE	2
6501-AA	RING, WEAR	2
6501-AB	PACKING, U	2
6501-AC	RING, BACK UP	2
6501-AE	PACKING, U	2
6501-AF	RING, O	2
6501-AG	SEAL, DUST	2
6501-AH	RING, O	1
6501-AI	SHIM	99
6501-AM	SPACER	4
6501-AN	SHIM	99
6501-AD	SUPPORT, LIFT CYLINDER	1
6501-AQ	RING, O	1
6501-AZ	RUBBER	2
6501-B1	PISTON	1
6501-BJ	BODY	1
6501-BK	SPRING	1
6501-BL	RING, SNAP	1
6501-BQ	PLATE	4
6501-BR	RUBBER	2
6501-CB	BOLT	2

G235-001E

6511

91/09

PART NAME	PART NAME	QTY
CODE		
6511-01	CYLINDER ASSY, TILT	1
6511-01K	CYLINDER O/H KIT, TILT	2
6511-20	CYLINDER SUB-ASSY, TILT	1
6511-20A	BUSHING, PIN (FOR CYLINDER)	2
6511-21	ROD SUB-ASSY, TILT CYLINDER PISTON	2
6511-21B	NUT, CASTLE	2
6511-30	GUIDE SUB-ASSY, TILT CYLINDER ROD	2
6511-31	PIN SUB-ASSY, TILT CYLINDER, FR	2
6511-32	PIN SUB-ASSY, TILT CYLINDER, RR	2
6511-40	PISTON, TILT CYLINDER	2
6511-41	COVER, TILT CYLINDER	2
6511-42	SLEEVE, TILT CYLINDER ROD GUIDE	2
6511-44	JOINT, PISTON ROD	2
6511-50	SEAL, GREASE	4
6511-AA	RING, HOLE SNAP	2
6511-AB	SEAL, DUST	2
6511-AC	RING, BACK UP	2
6511-AD	RING, O	2
6511-AE	RING, BACK UP	2
6511-AF	PACKING, U	2
6511-AG	PLATE, STOPPER	2
6511-AH	RING, HOLE SNAP	2
6511-AI	RING, O	2
6511-AJ	PACKING, U	4
6511-AN	COLLAR	4
6511-AD	SPACER, TILT CONTROL	2
6511-AR	BOLT	2
6511-BB	FITTING, GREASE	2
6511-BN	WASHER, PLATE	2
6511-BP	NUT	2
6511-BS	WIRE, CYLINDER BOOT	2
6511-BT	BOLT	2
6511-BU	WASHER	2
6511-CI	BOOT, CYLINDER	2

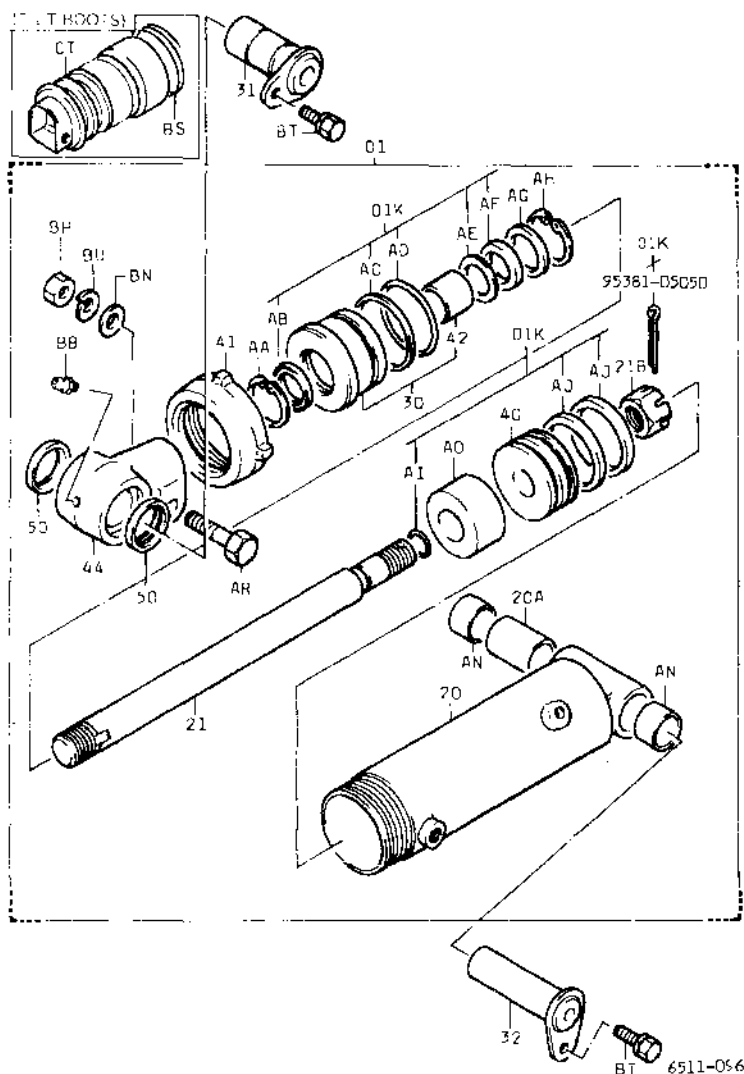 

G235-001E


FIG. 6701
OIL PUMP

6701

V

91/09

 V

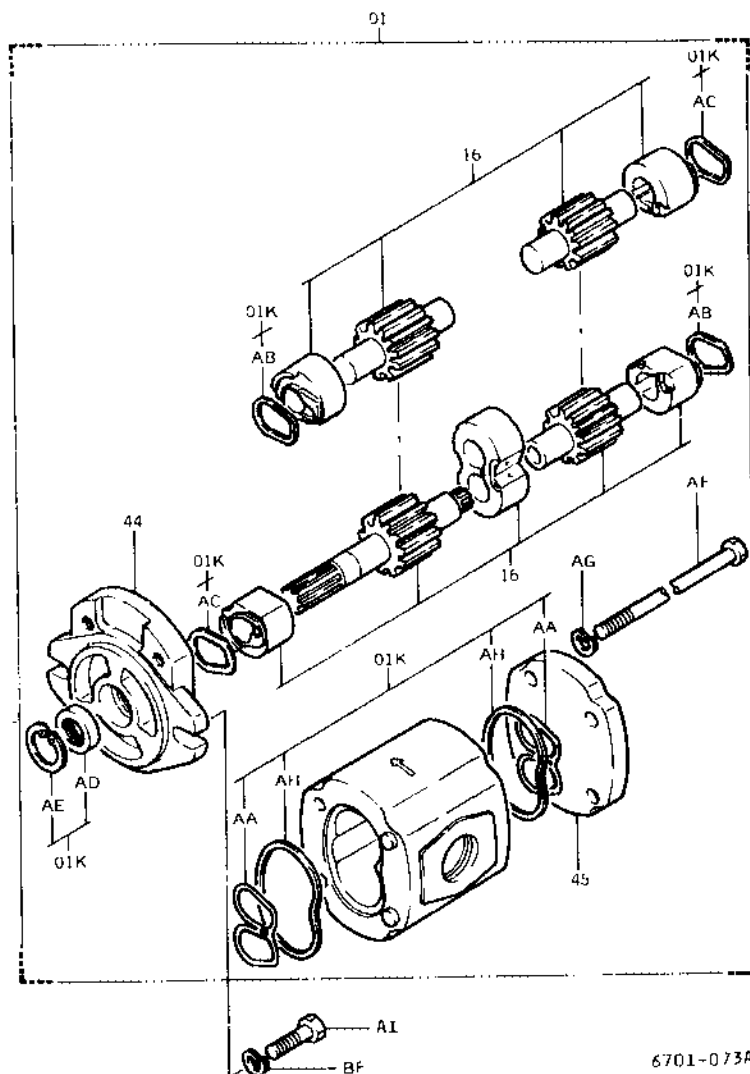

6701-073A

PART NAME	PART NAME	QTY
CODE		
6701-01	PUMP ASSY, OIL	1
6701-01K	PUMP O/H KIT, OIL	1
6701-16	GEAR & BUSHING SET	1
6701-44	FLANGE, MOUNTING	1
6701-45	COVER	1
6701-AA	SEAL, BUSHING	2
6701-AB	RING, BACKING, RH	2
6701-AC	RING, BACKING, LH	2
6701-AD	SEAL, OIL	1
6701-AE	RING, SNAP	1
6701-AF	BOLT	4
6701-AG	WASHER, SPRING	4
6701-AH	SEAL, BODY	2
6701-AI	BOLT	2
6701-BF	WASHER	2

G235-001E


FIG. 6705
OIL CONTROL VALVE

6705

V

91/09

 V (2-WAY) [1/2]

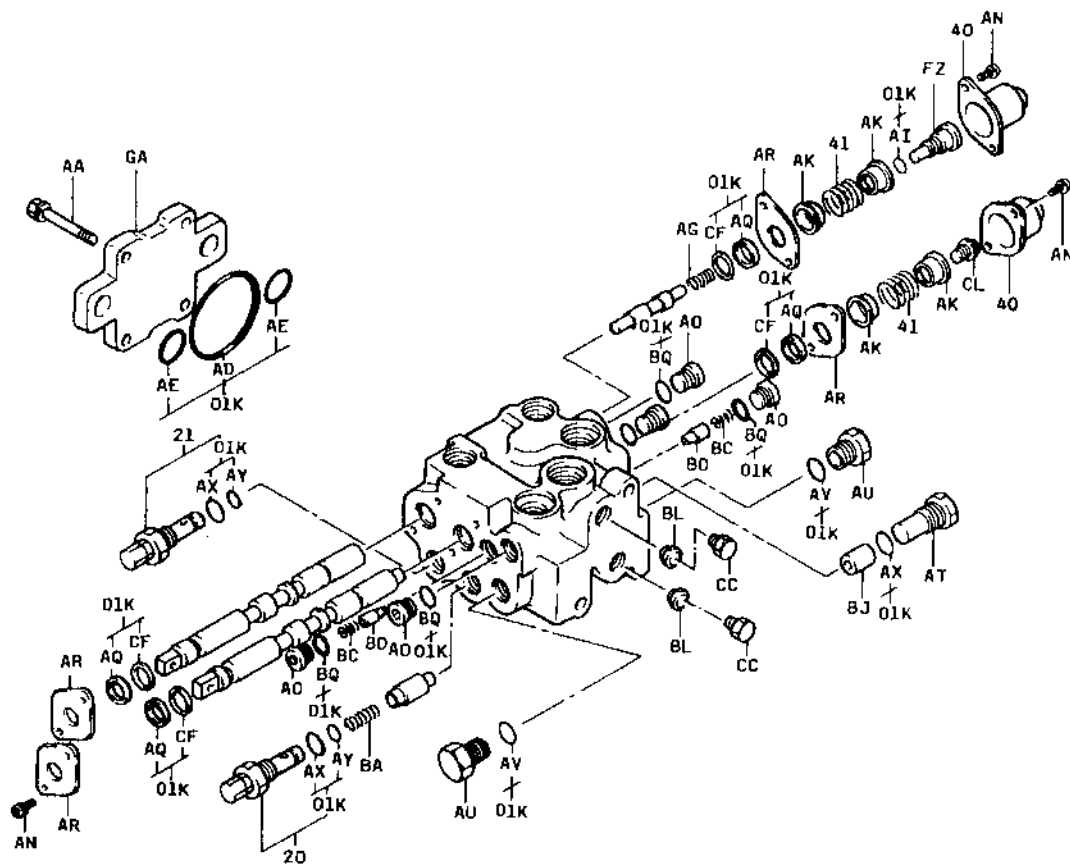


6705-465A

G235-001

V (3-WAY) 11/21

Y

 V (3-WAY) 11/21



6706 515 0104

 
6705
CONTROL VALVE

6705

V

91/09

V (4-WAY) 11/21

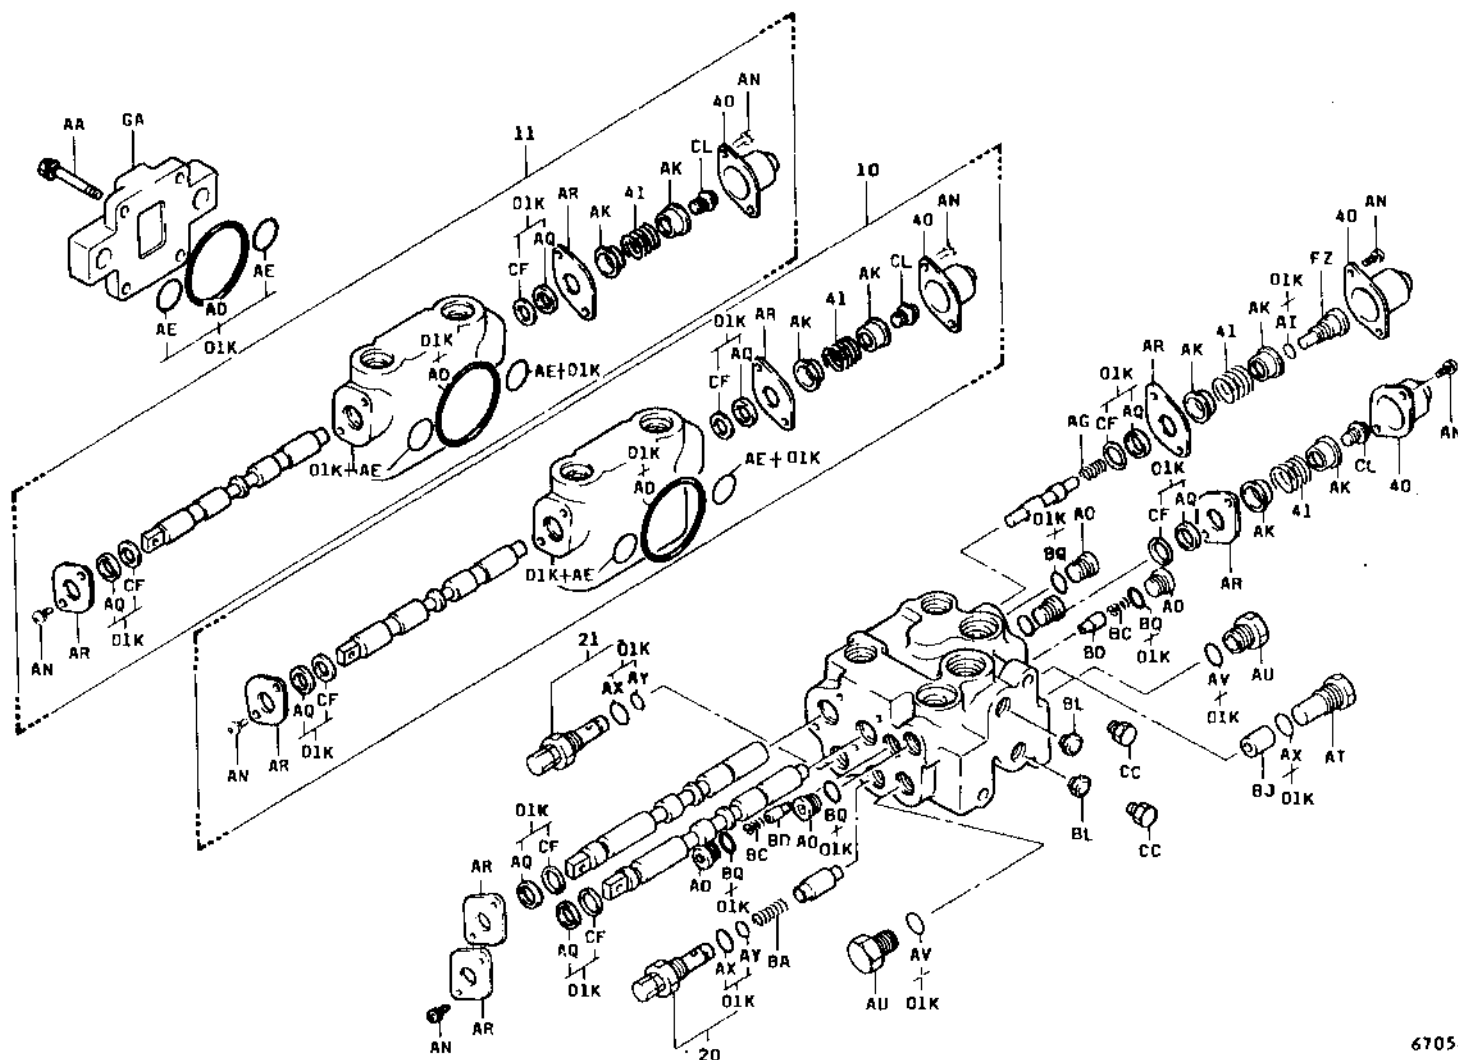



6705-516

G235-003

6705 516 0105

V (2-WAY) (2/2)

  V (3-WAY) (2/2)

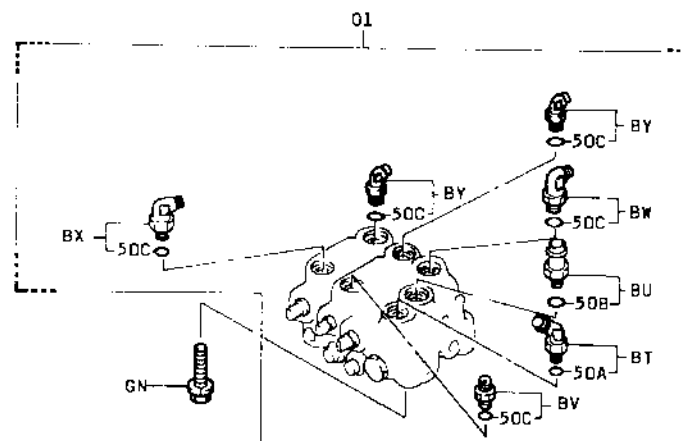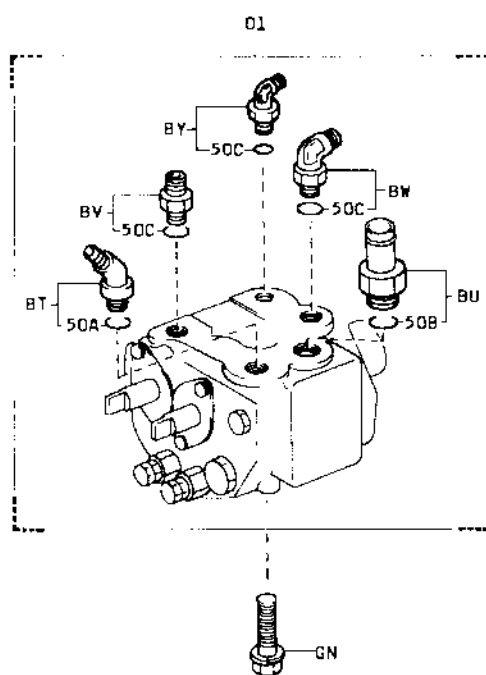

6705-513

6705-512

G235-004


FIG. 6705
OIL CONTROL VALVE

6705

V

91/09

 V (4-WAY) 12/21

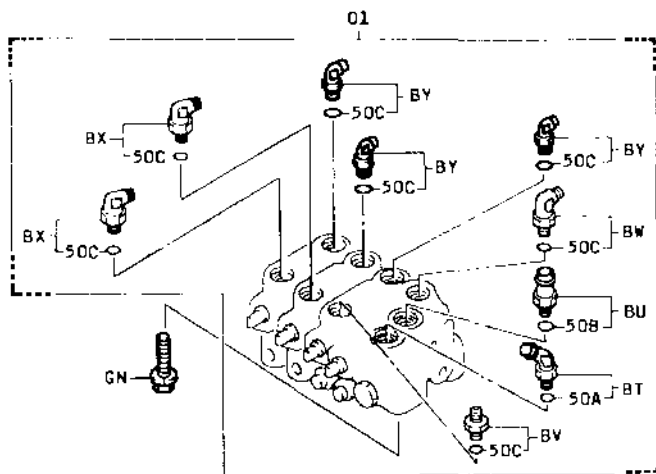


6705-514

PART NAME	PART NAME	QTY
CODE		
6705-01	VALVE ASSY, OIL CONTROL	1
6705-01K	VALVE O/H KIT, OIL CONTROL	1
6705-10	VALVE ASSY, PLUNGER SECTION, NO.1	1
6705-11	VALVE ASSY, PLUNGER SECTION, NO.2	1
6705-20	VALVE SET, PILOT RELIEF, NO.1	1
6705-21	VALVE SET, PILOT RELIEF, NO.2	1
6705-40	COVER, SPRING	2
6705-41	SPRING, COMPRESSION (FOR SPOOL RETURN)	2
6705-50A	RING, O, NO.1 (FOR VALVE FITTING)	1
6705-50B	RING, O, NO.2 (FOR VALVE FITTING)	1
6705-50C	RING, O, NO.3 (FOR VALVE FITTING)	3
6705-AA	BOLT	4
6705-AD	RING, O	1
6705-AE	RING, O	2
6705-AG	SPRING	1
6705-AI	RING, O	1
6705-AK	HOLDER, SPRING	4
6705-AN	SCREW	8
6705-AD	PLUG	5
6705-AQ	RING, BACK UP	4
6705-AR	HOLDER, SEAL	4
6705-AT	STOPPER	1
6705-AU	STOPPER	2
6705-AV	RING, O	2
6705-AX	RING, O	3
6705-AY	RING, O	2
6705-BA	SPRING, COMPRESSION	1
6705-BC	SPRING, COMPRESSION	2
6705-BD	PLUNGER, CHECK	2
6705-BJ	SEAT, VALVE	1
6705-BL	SEAT, INSERT	2
6705-BQ	RING, O	5
6705-BT	FITTING	1
6705-BU	FITTING	1
6705-BV	FITTING	1
6705-BW	FITTING	1
6705-BX	FITTING	1
6705-BY	FITTING	1
6705-CC	PLUG	2
6705-CF	SEAL	4
6705-CL	BOLT	1
6705-FZ	END, SPOOL	1
6705-GA	HOUSING, OUTLET	1
6705-GN	BOLT, W/WASHER	4


G235-005E

V (2-WAY)

 V (3-MAY)

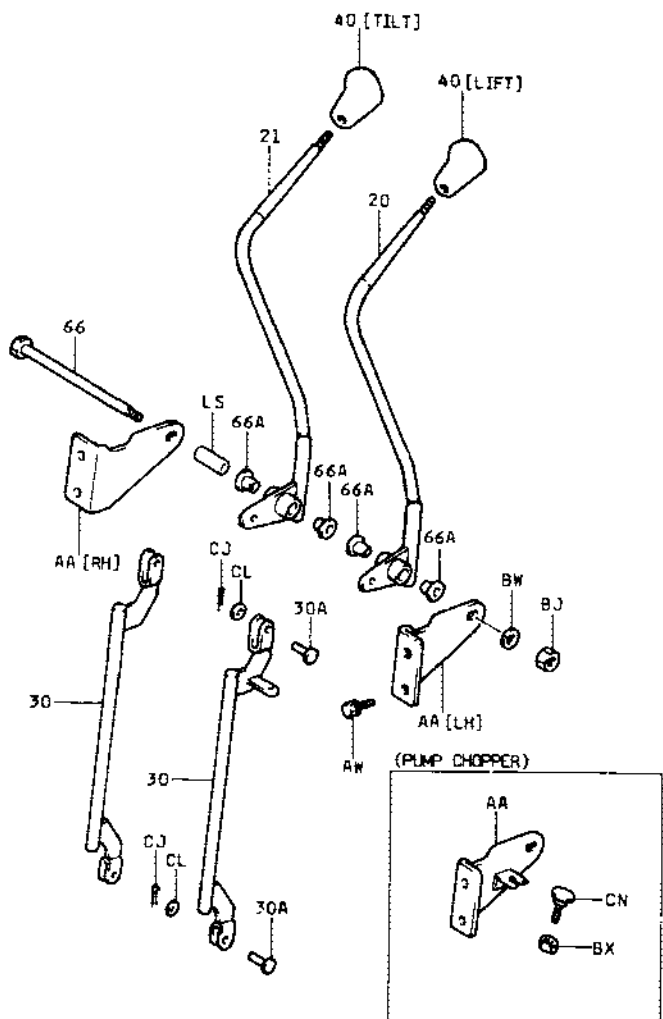

6709-204

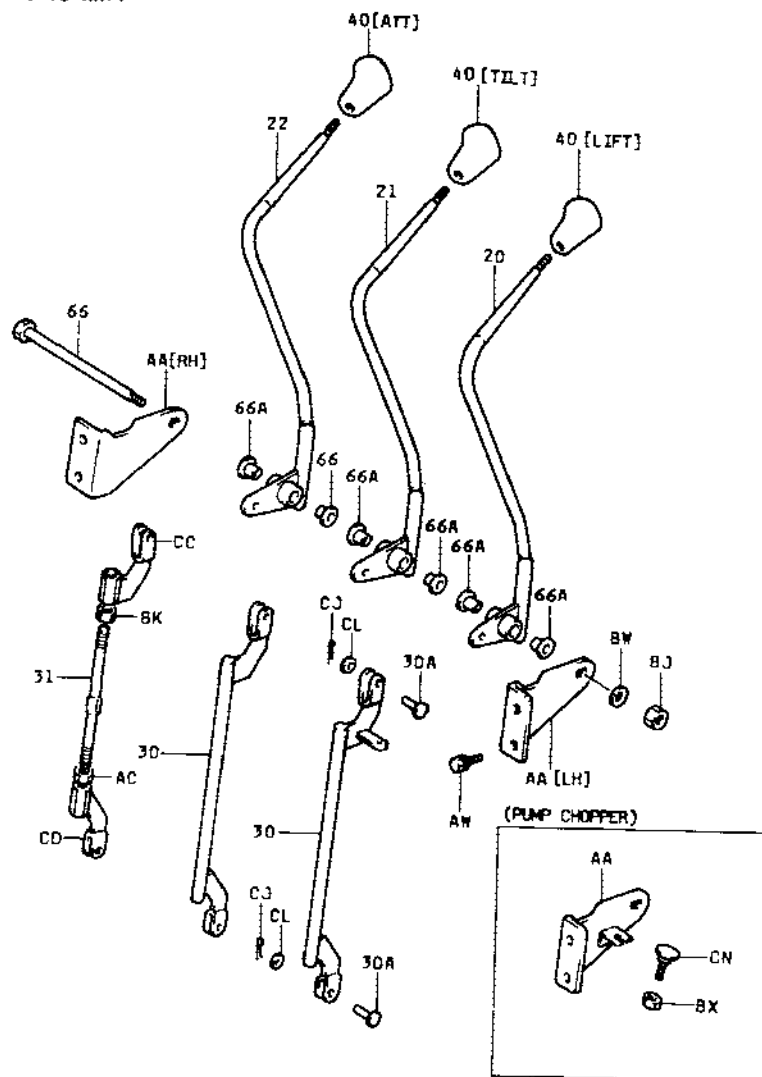 


6709-205
G235-001

6709

91/09

 V (4-WAY)

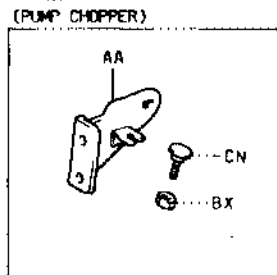

PART NAME	PART NAME	QTY
CODE		
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2	1
6709-22	LEVER SUB-ASSY, CONTROL VALVE, NO.3	1
6709-23	LEVER SUB-ASSY, CONTROL VALVE, NO.4	1
6709-30	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.1	1
6709-30A	PIN (FOR CONTROL VALVE LEVER ROD)	4
6709-31	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.2	1
6709-40	KNOB, OIL CONTROL VALVE LEVER	1
6709-66	BOLT (FOR VALVE LEVER)	1
6709-66A	BUSHING	4
6709-AA	BRACKET SUB-ASSY	1
6709-AC	NUT	1
6709-AW	BOLT	4
6709-BJ	NUT	1
6709-BK	NUT	1
6709-BW	WASHER, SPRING	1
6709-BX	NUT	1
6709-CC	CLEVIS, NO.1	1
6709-CD	CLEVIS, NO.2	1
6709-CJ	PIN	2
6709-CL	WASHER, PLATE	4
6709-CN	BOLT	1
6709-LS	PIPE	1

G235-002E

6801

91/09

[illegible]

G235-001


FIG. 6801
BODY PIPING

6801

V

91/09

 V (2/2)

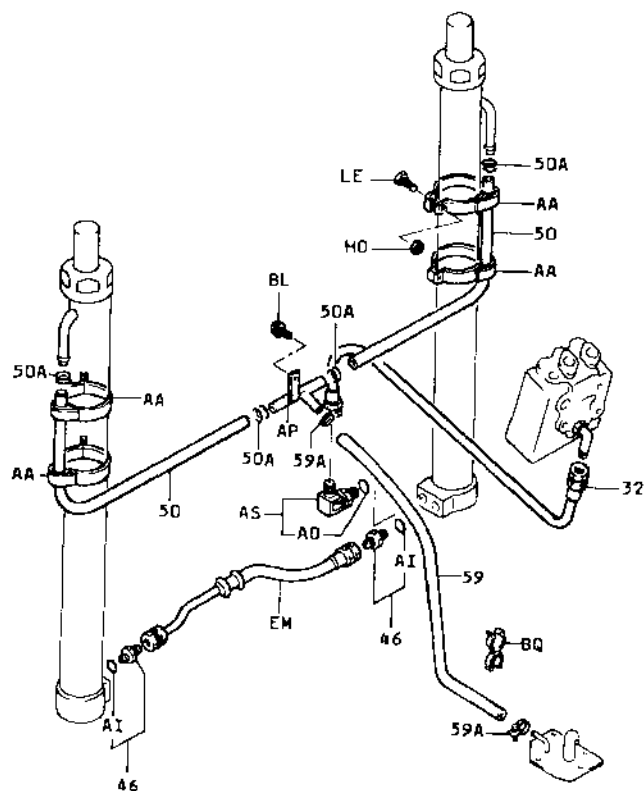

6801-253

PART NAME	PART NAME	QTY
CODE		
6801-10	FILTER ASSY, SUCTION	1
6801-11	FILTER ASSY, RETURN	1
6801-15A	PLUG (FOR OIL TANK DRAIN)	1
6801-15B	GASKET (FOR OIL TANK DRAIN PLUG)	1
6801-19	COVER ASSY, OIL TANK	1
6801-19A	PACKING SUB-ASSY	1
6801-20	PIPE SUB-ASSY (PUMP INLET)	1
6801-20A	RING, O (FOR OIL PUMP INLET)	1
6801-21A	RING, O (FOR OIL PUMP OUTLET)	1
6801-23	PIPE SUB-ASSY (TILT CYLINDER FRONT)	2
6801-27	CAP SUB-ASSY, OIL TANK	1
6801-28	GAUGE SUB-ASSY, OIL LEVEL	1
6801-30	HOSE, HIGH PRESSURE, NO.1 (PUMP TO VALVE)	1
6801-32	HOSE, HIGH PRESSURE, NO.1 (VALVE TO LIFT)	1
6801-34	HOSE, HIGH PRESSURE, NO.1 (TILT FRONT)	2
6801-35	HOSE, HIGH PRESSURE, NO.1 (TILT REAR)	2
6801-45	FITTING (FOR TILT CYLINDER)	2
6801-46	FITTING (FOR LIFT CYLINDER)	2
6801-50	HOSE, LOW PRESSURE, NO.1 (LIFT TO TANK)	2
6801-50A	CLAMP (FOR LIFT TO TANK NO.1 HOSE)	4
6801-51	HOSE, LOW PRESSURE, NO.1 (VALVE TO TANK)	1
6801-51A	CLAMP (FOR VALVE TO TANK NO.1 HOSE)	2
6801-55	HOSE, LOW PRESSURE (TANK TO PUMP)	1
6801-55A	CLAMP (FOR TANK TO PUMP HOSE)	2
6801-59	HOSE, LOW PRESSURE, NO.2 (LIFT TO TANK)	1
6801-59A	CLAMP (FOR LIFT TO TANK NO.2 HOSE)	2
6801-AA	BAND, LIFT CYLINDER OVERFLOW HOSE	4
6801-AC	RING, O	4
6801-AD	BOLT	8
6801-AF	FLANGE, SPLIT	1
6801-AI	RING, O	2
6801-AM	CLAMP, HOSE	1
6801-AD	RING, O	1
6801-AP	PIPE	1
6801-AS	FITTING	1
6801-AX	CAP, OIL TANK OVERFLOW PIPE	1
6801-BG	BOLT	5
6801-BI	CLAMP, HOSE	4
6801-BL	BOLT	2
6801-BQ	CLAMP	1
6801-CH	FITTING	1
6801-CL	COVER, OIL FILTER	1
6801-DE	SPACER	1
6801-EG	TANK SUB-ASSY, OIL	1
6801-EH	PIPE SUB-ASSY	1
6801-EI	BREATHER ASSY, AIR	1
6801-EM	HOSE, HIGH PRESSURE	1
6801-FN	PACKING, OIL TANK CAP	1
6801-GK	PACKING	1
6801-GM	RING, O	1
6801-GU	BOSS	1
6801-HC	HOSE, LOW PRESSURE	1
6801-HD	NUT	4
6801-IL	HOSE	1
6801-JH	SCREW	1
6801-JJ	PIPE SUB-ASSY (TILT CYLINDER)	1
6801-LE	BOLT	4

G235-002E

MEMO

MEMO