

TOYOTA INDUSTRIAL VEHICLE

PARTS CATALOG

FB35, 40

NO.G215-1

**TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.**

TOYOTA

FORKLIFT TRUCK

PARTS CATALOG

MODEL	_____	FB	_____
FRAME NO.	_____	FB	_____
LIFTING HEIGHT	____,	_____	mm

DESCRIPTION

	Fully Oil Charged Lift Cylinder		

TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.

QUICK REFERENCE INDEX

INTRODUCTION

ELECTRICAL SYSTEM

CHASSIS

BODY

ELECTRICAL SYSTEM

MAST

HYDRAULIC SYSTEM

GENERAL INFORMATION

This parts catalog has been prepared for the customers of Toyota Industrial Vehicles and this shows only the part name codes instead of parts numbers.

When ordering parts from your local Toyota dealer, please specify the complete model number of the truck, the engine number or frame number. Also it is essential that you specify the part name codes described in the pages of illustrations and text.

The complete model number and frame number are shown in the front page of this catalog. All the columns in this quick reference index are supposed to be filled out by both the factory and your local dealer.

For the industrial vehicle with optional equipment, which is described in the lower part of the DESCRIPTION, it is imperative for you to specify optional equipment when ordering parts.

Your Toyota dealer has always been furnished with enough information to decode the correct part numbers based on your information of model number, engine number or frame number as well as part name code.

INFORMATIONS D'ORDRE GENERAL

Ce catalogue de pièces a été préparé pour les propriétaires de Véhicules Industriels Toyota. On n'y trouvera que les codes de désignation de pièces au lieu des numéros de pièces.

Pour la commande de pièces auprès de votre concessionnaire Toyota, prière de spécifier le numéro de modèle complet de l'engin, le numéro du moteur ou le numéro du châssis. Il est aussi nécessaire de spécifier les codes de désignation de pièces comme ils sont décrits dans les pages d'illustrations et dans le texte.

Le numéro de modèle complet et le numéro de châssis sont indiqués en première page de ce catalogue. Toutes les colonnes de l'index de référence rapide devraient être remplies par l'usine et par votre concessionnaire.

Pour le véhicule industriel avec équipement optionnel, décrit en bas de page sous la rubrique "DESCRIPTION", il convient de bien spécifier qu'il s'agit de cet équipement lors de commande de pièces.

Votre concessionnaire Toyota est toujours suffisamment informé pour décoder les numéros de pièces sur la base de votre information du numéro de modèle, du numéro de moteur ou de châssis, et des codes de désignation de pièces.

INFORMACION GENERAL

Este catálogo de piezas ha sido preparado para los clientes de vehículos industriales de TOYOTA, e incluye tan sólo los códigos de nombre de pieza en lugar de los números de pieza.

Cuando solicite piezas a su distribuidor local de TOYOTA especifique por favor el número de modelo completo del vehículo, el número de motor o el número de bastidor. Asimismo, es esencial que Vd. especifique los códigos de nombre de pieza descritos en las páginas de ilustraciones y de texto.

El número completo de modelo y el número de bastidor se indican en la portada de este catálogo. Se supone que todas las columnas de este índice de referencia se han rellenado, tanto por parte de la fábrica como por parte de su distribuidor local.

En lo que concierne a los vehículos industriales con equipos opcionales, que se describen en la parte baja de la DESCRIPCION, es absolutamente necesario que especifique equipos opcionales cuando solicite piezas de repuesto.

Su distribuidor local de TOYOTA posee la información necesaria para descifrar los números correctos de cada pieza a base de su información de número de modelo, número de motor o número de bastidor, así como el código de nombre de la pieza.

ALLGEMEINE INFORMATION

Dieser Teilekatalog wurde für die Benutzer von Toyota Industriefahrzeugen zusammengestellt und zeigt anstelle von Teilenummern nur die Teilennamen-Kodes.

Geben Sie bei Teilebestellungen von Ihrem Toyota-Händler am Platz bitte die vollständige Modellnummer des Fahrzeugs, die Motornummer oder Fahrgestellnummer an. Es ist auch erforderlich, daß Sie die in den Illustrationen und im Text beschriebenen Teilennamen-Kodes angeben.

Die vollständige Modellnummer und Fahrgestellnummer finden Sie auf der Vorderseite dieses Katalogs. Alle Spalten in dieser Bezugstabelle sollen sowohl vom Werk als von Ihrem Händler am Platz ausgefüllt werden.

Für Industriefahrzeuge mit Sonderausrüstung, welche im unteren Teil der BESCHREIBUNG erläutert ist, müssen Sie bei der Bestellung von Teilen unbedingt diesbezügliche Angaben machen.

Ihr Toyota-Händler verfügt stets über genügend Information, um die richtigen Teilenummern zu entschlüsseln, basiert auf Ihren Angaben zu Modellnummer, Motornummer oder Fahrgestellnummer und den Teilennamen-Kodes.


ILLUSTRATION AND PART NAME CODE TEXT PAGE COMPOSITION

Essentially, one (1) page will present both the illustration and part name code. However, when the space for text page is not enough the next page will be used in succession.

COMPOSICION DE LAS PAGINAS DE ILUSTRACIONES Y DE TEXTO DE CODIGOS DE NOMBRE DE PIEZAS

Básicamente, una (1) página incluirá tanto la ilustración como el código de nombre de la pieza.

 No obstante, si el espacio no fuese suficiente, se utilizará la página siguiente.

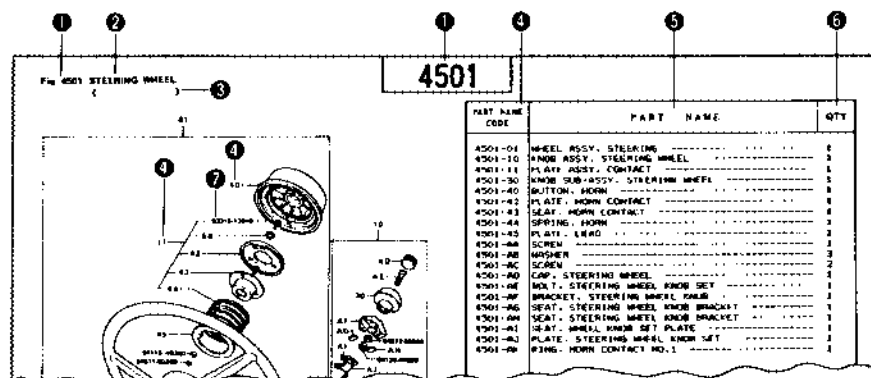


- 1 Figure number
This parts catalog has been prepared according to the figure numbers.
- 2 Figure title
A representative part name which is the major assembly part name is shown as the figure title of the illustration.
- 3 Sub title
The optional name or special specification of each illustration are indicated.
- 4 Part name code
This is a combination of figure number and codes of illustrations pertaining to each part. This is a key for your Toyota dealer to find the correct part numbers.
- 5 Part name
As a rule, the part name is indicated for each of the part name codes.
- 6 QTY (Quantity)
The quantity column indicates the utilized pieces of part name code unit. When the utilized quantity changes according to each of the vehicles, maximum is indicated.
When the utilized quantity of the parts differs or is more than 100 pieces, quantity 99 is indicated.
- 7 Standard parts numbers
The standard parts such as the bolts, nuts, washer, etc., are described with parts numbers. When ordering these parts, specify parts numbers.

- 1 Número de figura
Este catálogo de piezas se ha preparado de acuerdo con los números de las figuras.
- 2 Título de las figuras
Como título de las figuras de la página de ilustraciones, se incluye un nombre que sea representativo del nombre del mayor conjunto.
- 3 Subtítulo
Se indican el nombre opcional o las especificaciones especiales de cada ilustración.
- 4 Código de nombre de pieza
Se trata de una combinación de número de figura y de código de las ilustraciones correspondientes a cada pieza. Esta es la clave para que su distribuidor local de TOYOTA pueda encontrar el número de pieza correcto.
- 5 Nombre de la pieza
Como norma, se indica el nombre de cada uno de los códigos de nombre de pieza.
- 6 QTY (Cantidad)
La columna de cantidad indica el número de piezas utilizadas de cada unidad de código de nombre de pieza.
Cuando la cantidad utilizada es intercambiable entre cada uno de los vehículos, se indica el máximo.
Cuando la cantidad de piezas utilizadas pueda diferir o ser superior a 100, se indica como cantidad 99.
- 7 Números de piezas normalizadas
Las piezas corrientes, tales como pernos, tuercas, arandelas etc., se describen con número de pieza. Cuando solicite tales piezas, indique su número de pieza.

ILLUSTRATION ET COMPOSITION DU DE TEXTE DE CODE DE DESIGNATION DE PIECE

 Une (1) page contiendra essentiellement une illustration et ses codes de désignation de pièce. Toutefois, lorsque l'espace réservé au texte est insuffisant, la continuation se trouvera sur la page suivante.

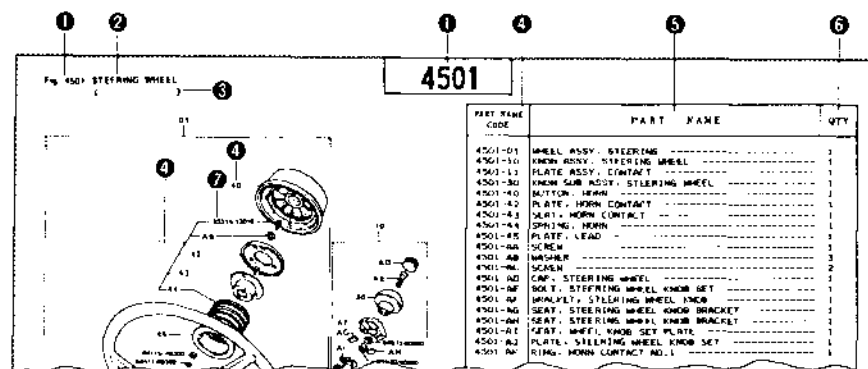

- 1 Numéro de figure
Ce catalogue de pièces a été préparé en fonction des numéros de figures.
- 2 Titre de figure
Une désignation de pièce représentative, celle d'une pièce d'un ensemble important, est indiquée comme titre de figure de l'illustration.
- 3 Sous-titre
La désignation optionnelle ou les spécifications spéciales de chaque illustration sont indiquées.
- 4 Code de désignation de pièce
Obtenu en combinant le numéro de figure et les codes des illustrations inhérents à chaque pièce. Ce code permettra à votre concessionnaire Toyota de trouver les numéros de pièces corrects.
- 5 Désignation de pièce
La désignation de la pièce est indiquée pour chacun des codes de désignation de pièce.
- 6 Q'ty (quantité)
La colonne quantité indique les pièces utilisées de l'unité de code de désignation de pièce. La quantité maximum est indiquée quand la quantité utilisée diffère pour chacun des véhicules. Quand la quantité de pièces utilisées diffère ou lorsqu'elle dépasse 100 pièces, la quantité 99 est indiquée.
- 7 Numéros de pièces standard
Les pièces standard comme les boulons, les écrous, les rondelles, etc. sont décrits dans les numéros de pièces. Pour commander ces pièces, prière de spécifier les numéros de pièces.

ABBILDUNG UND TEXTSEITENAUFBAU FÜR TEILENAMEN-KODE

Grundsätzlich finden Sie auf einer (1) Seite sowohl die Abbildung als auch den Teilennamen-Kode.
Wenn für den Text jedoch nicht genügend Platz vorhanden ist, wird er auf der nächsten Seite fortgesetzt.

- 1 Abbildungsnummer
Dieser Teilekatalog wurde nach Abbildungsnummern zusammengestellt.
- 2 Abbildungstitel
Ein stellvertretender Teilennamen, welcher zugleich die Bezeichnung für die Hauptbaugruppe ist, wird als Abbildungstitel der Illustration angegeben.
- 3 Untertitel
Ein zusätzlicher Name oder eine besondere Kennzeichnung werden für jede Illustration angegeben.
- 4 Teilennamen-Kode
Dies ist eine Kombination von ziffern und Abbildungskodes, die jedes Teil betreffen. Es ist ein Schlüssel für Ihren Toyota-Händler, um die richtigen Teilenummern zu finden.
- 5 Teilennamen
Grundsätzlich wird der Teilennamen für alle Teilennamen-Kodes angegeben.
- 6 QTY (Menge)
Die Mengenspalte gibt die benutzte Stückzahl von Teilennamen Kode-Einheiten an.
Wenn die benutzte Stückzahl je nach Fahrzeug Verschieden ist, wird die Höchstmenge angegeben.
Wenn die benutzte Menge 100 Stück überschreiten kann, wird als Menge 99 angegeben.
- 7 Standardteile-Nummern
Die Standardteile, wie Schrauben, Muttern, Unterlegscheiben usw., sind in den Teilenummern beschrieben. Geben Sie bei Bestellung dieser Teile die Teilenummern an.

DATA PLATE & SERIAL NUMBERS

For retrieving correct part numbers, it's indispensable to know the truck model, as well as frame number (or engine number). Customers can obtain said information in the data plate on the truck or in this user parts catalog.

PLAQUE DE DONNEES TECHNIQUES & NUMEROS DE SERIE

Pour relever correctement le numéro des pièces, il est indispensable de connaître le modèle de l'engin, ainsi que le numéro du châssis (ou du moteur). Les propriétaires peuvent trouver ladite information sur la plaque de données techniques de l'engin ou dans le présent ouvrage.

PLACA DE DATOS Y NUMEROS DE SERIE

Para obtener los números de pieza correctos, es indispensable conocer el modelo del vehículo, así como el número del bastidor (o del motor). Los clientes pueden obtener dicha información por la placa de datos del vehículo o este catálogo de piezas para el usuario.


DATENPLATTE & SERIENNUMMERN

Um die richtige Teilenummer zu ermitteln, müssen unbedingt das Fahrzeugmodell sowie die Fahrgestellnummer (oder die Motornummer) bekannt sein. Kunden können diese Angaben von der Datenplatte am Fahrzeug oder in diesem Teilekatalog für Benutzer entnehmen.

Data plate
Placa de datos
Plaque de données techniques
Datenplatte

 TOYOTA LIFT TRUCK	
MODEL	
CODE NO. OF SPECIAL MODEL, MODEL OF ATTACHMENT	
FRAME NO.	
LIFTING HEIGHT	
CAPACITY	
WEIGHT	
PROD. YEAR	
TOYODA AUTOMATIC LOOM WORKS, LTD. KARIYA, JAPAN	

 Data plate
Placa de datos
Plaque de données techniques
Datenplatte

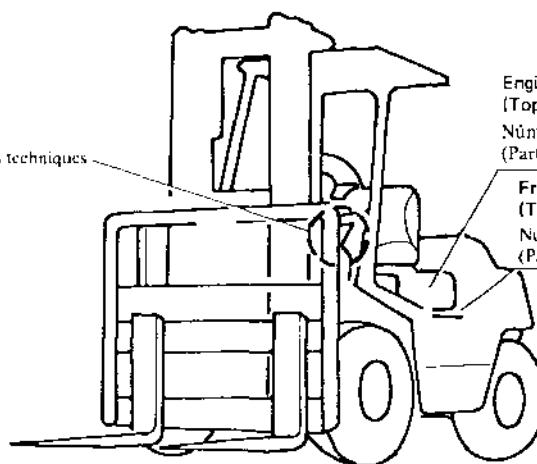


Engine Number (Top of the cylinder head)	Numéro de moteur (sur la culasse)
Número de motor (Parte superior de la culata)	Motornummer (Oben am Zylinderkopf)
Frame Number (Top of the frame)	Numéro de châssis (haut du châssis)
Número de bastidor (Parte superior del bastidor)	Fahrgestellnummer (Oben am Fahrgestell)

FIG. INDEX


絵目次

 FIG. 1401

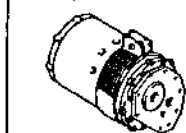


ドライブ モーター
Drive Motor

 FIG. 1402

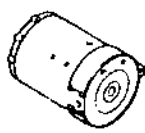


ポンプドライブ モーター
Pump Drive Motor

 FIG. 1403

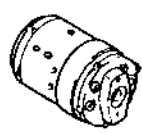


パワー ステアリング ポンプドライブ モーター
Power Steering Pump Drive Motor

 FIG. 2401

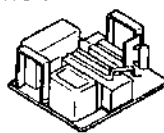

コントロール パネル
Control Panel

 FIG. 2402

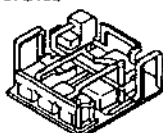


コンタクター パネル
Contactor Panel

FIG. 2403



コンタクター アッセンブリ
Contactor Assy

 FIG. 2501

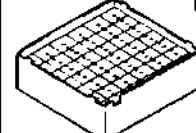

バッテリー
Battery

エレクトリカル グループ ELECTRICAL GROUP


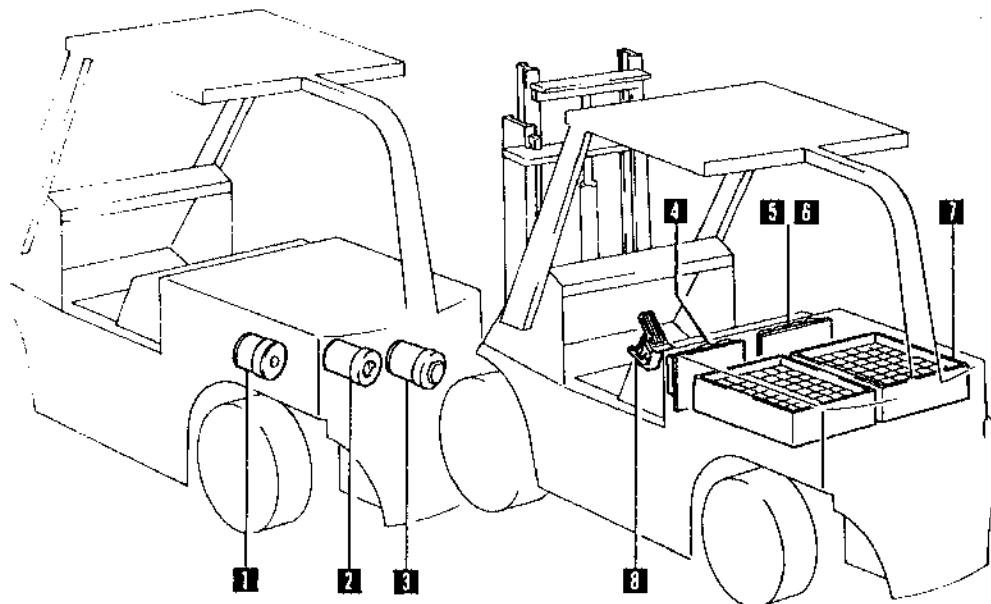 


FIG. 2512

 

バッテリー セパレート チャージャー
Battery Separate Charger

FIG. 2611



アクセルレーク
Accelerator

FIG. INDEX

絵目次

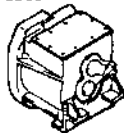 
 
 
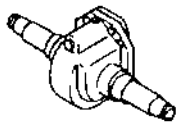 
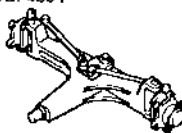 
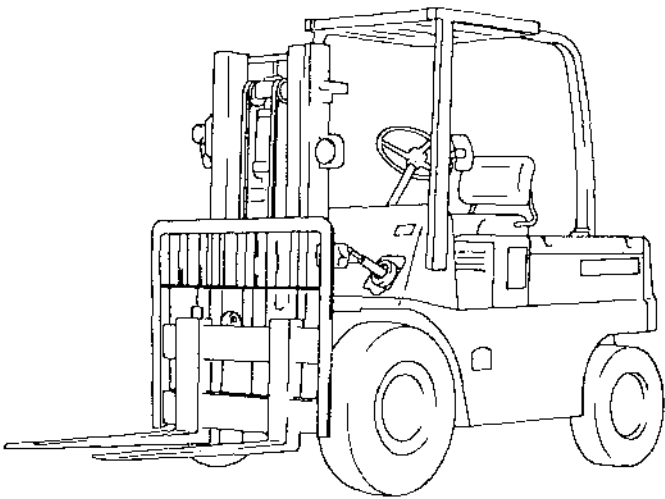 
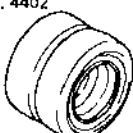 
 
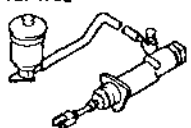 
 
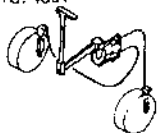 
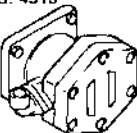 
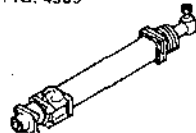 
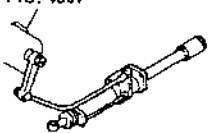 
FIG. 3305  ギヤケースとギヤ Gear Case & Gear	FIG. 3310  チェンジレバー Change Lever	FIG. 3701  プロペラシャフトとユニバーサルジョイント Propeller Shaft & Universal Joint	FIG. 4101  ディファレンシャル Differential	FIG. 4201  フロントアクスルシャフト Front Axle Shaft	FIG. 4301  リヤアクスルとタイロッド Rear Axle & Tie-Rod	FIG. 4401  フロントホイールとタイヤ (シングル) Front Wheel & Tire (Single)
シャシグループ CHASSIS GROUP 						FIG. 4402  フロントホイールとタイヤ (ダブル) Front Wheel & Tire (Double)
						FIG. 4403  リヤホイールとタイヤ Rear Wheel & Tire
						FIG. 4501  ステアリングホイール Steering Wheel
						FIG. 4502  ステアリングポスト Steering Post
FIG. 4715  ドラムブレーキ Drum Brake	FIG. 4702  ブレーキマスタシリンダ Brake Master Cylinder	FIG. 4701  ブレーキペダル Brake Pedal	FIG. 4601  パーキングブレーキ Parking Brake	FIG. 4510  ステアリングオイルポンプ Steering Oil Pump	FIG. 4509  ステアリングブースタ Steering Booster	FIG. 4507  ドラッグリンクとパイピング Draglink & Steering Piping

FIG. INDEX

絵目次

FIG. 5101 1 フレームトウエイト Frame & Weight	FIG. 5201 2 フードトヒンジ Hood & Hinge	FIG. 5301 3 インストルメントパネル Instrument Panel	FIG. 5308 4 ドライバシール Driver Seat	FIG. 5401 5 ヘッドガードトアクセサリー Head Guard & Accessory	FIG. 5405 6 インジケータプレート Indicator Plate	FIG. 5602 7 ワイヤリングトクランプ Wiring & Clamp
ボデー、エレクトリカルグループ BODY, ELECTRICAL GROUP						
FIG. 5611 8 ランプ Lamp						
FIG. 5612 9 ランプブラケット Lamp Bracket						
FIG. 5702 10 メータトスイッチ Meter & Switch						

FIG. INDEX

絵目次


 
 
 
 
 
 
 
 
FIG. 6101  マスト Mast	FIG. 6301  リフト ブラケット & フォーク Lift Bracket & Fork	FIG. 6302  チェーン & チェーン ホール Chain & Chain Wheel	FIG. 6501 (V)  リフト シリンダ Lift Cylinder	FIG. 6502 (FV, FSV)  フロント リフト シリンダ Front Lift Cylinder	FIG. 6503 (FV, FSV)  リヤ リフト シリンダ Rear Lift Cylinder	FIG. 6504 (M)  リフト シリンダ Lift Cylinder
マスト ハイドロリック コンポーネント グループ MAST, HYDRAULIC COMPONENT GROUP 						FIG. 6505 (FS2)  フロント リフト シリンダ Front Lift Cylinder
						FIG. 6506 (FS2)  リヤ リフト シリンダ Rear Lift Cylinder
						FIG. 6507 (F4)  トリプル リフト シリンダ Triple Lift Cylinder
						FIG. 6511  チルト シリンダ Tilt Cylinder
FIG. 6822  リリーフ バルブ Relief Valve	FIG. 6802  マスト パイピング Mast Piping	FIG. 6801  ボディ パイピング Body Piping	FIG. 6709  オイル コントロール バルブ リンク Oil Control Valve Link	FIG. 6705  オイル コントロール バルブ Oil Control Valve	FIG. 6701  オイル ポンプ Oil Pump	

FIG. 0901
STANDARD TOOL

 0901

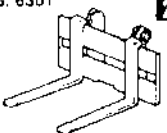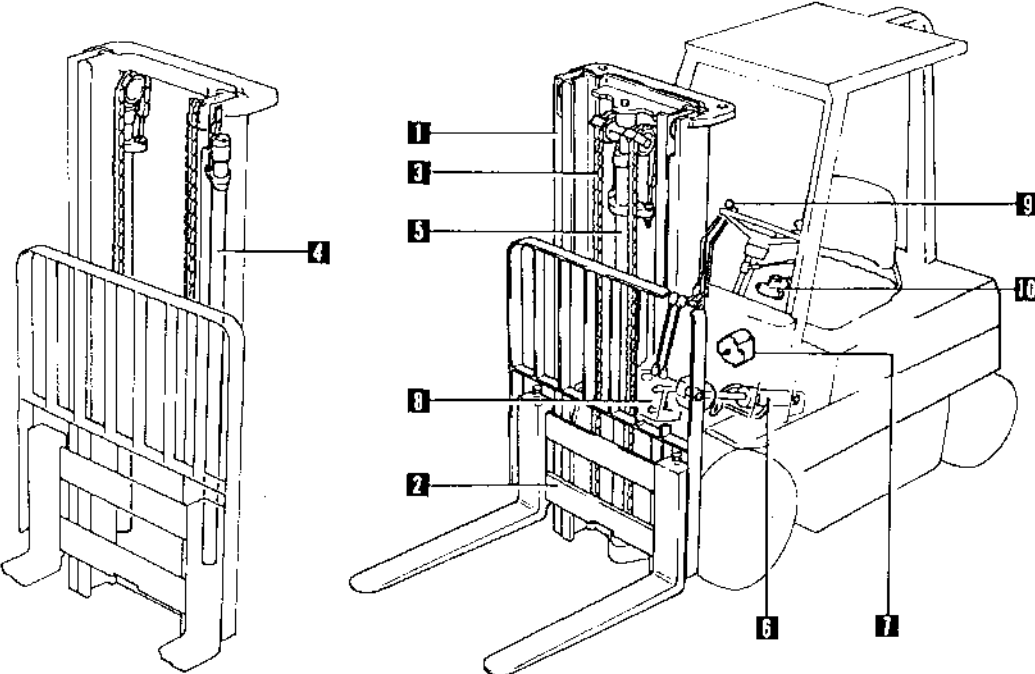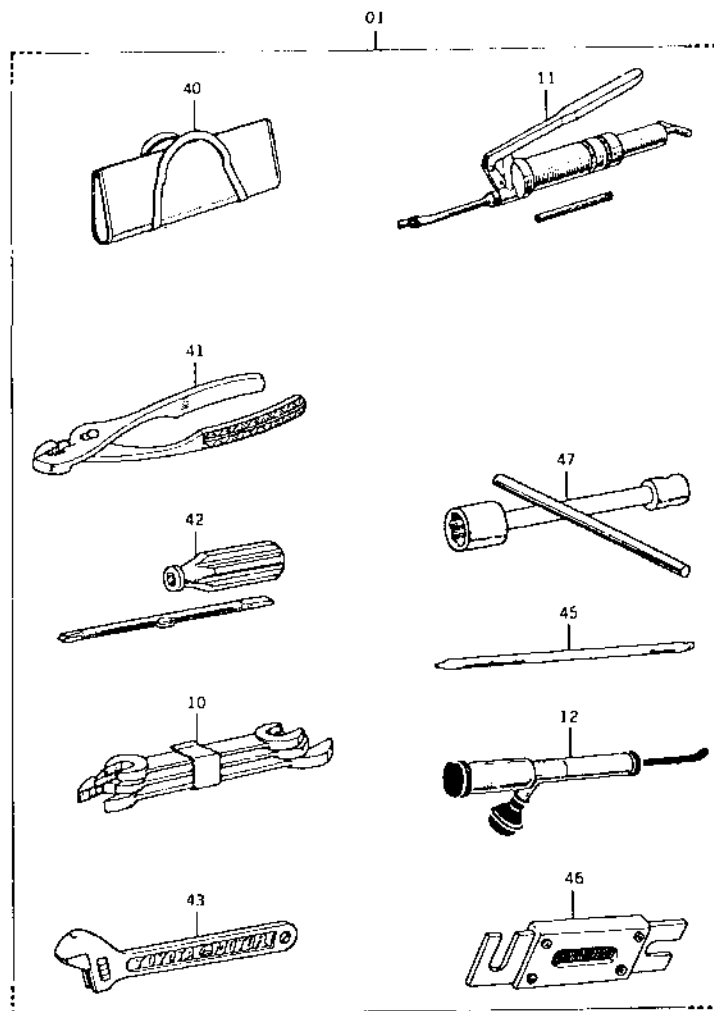

0901 016

PART NAME CODE	PART NAME	QTY
0901-01	TOOL SET, STANDARD -----	1
0901-10	SPANNER SET -----	1
0901-11	PUMP ASSY, GREASE -----	1
0901-12	METER ASSY, HYDRAULIC SAILING -----	1
0901-40	BAG, TOOL -----	1
0901-41	PIERS -----	1
0901-42	DRIVER, SCREW -----	1
0901-43	WRENCH, MONKEY -----	1
0901-45	ROD, THERMOMETER -----	1
0901-46	FUSE -----	1
0901-47	WRENCH, HUB NUT BOX -----	1


(MAIN) (1)

G215

FIG. 1401
DRIVE MOTOR

1401

 
(200, 350)

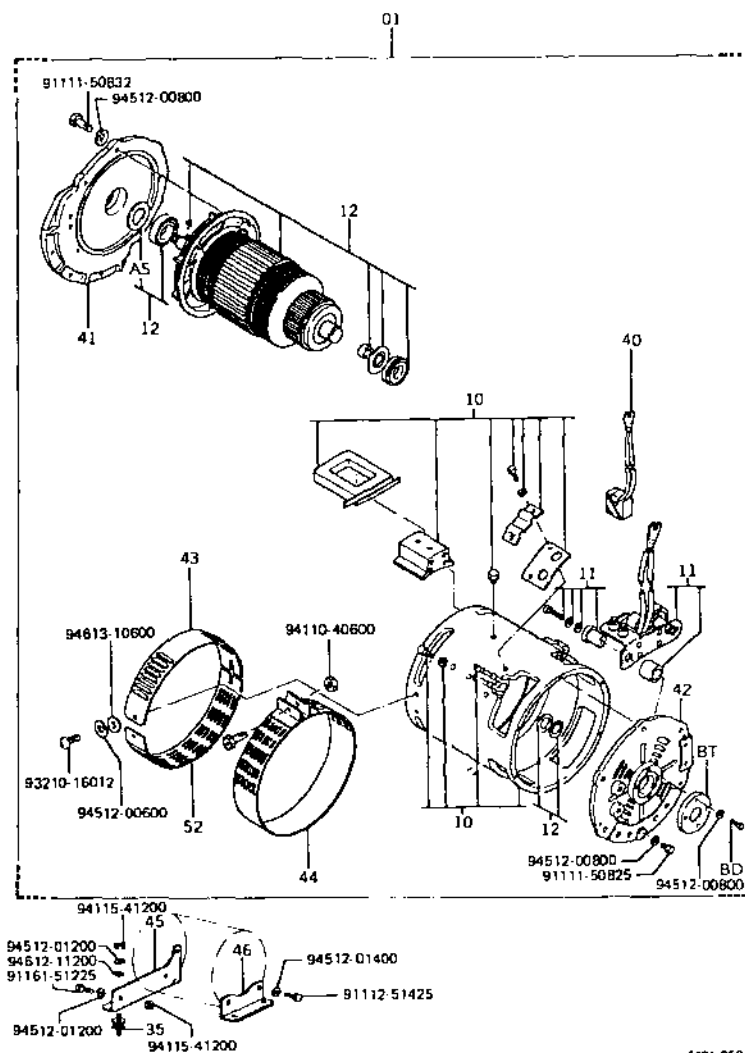

1401-052

1401

 052

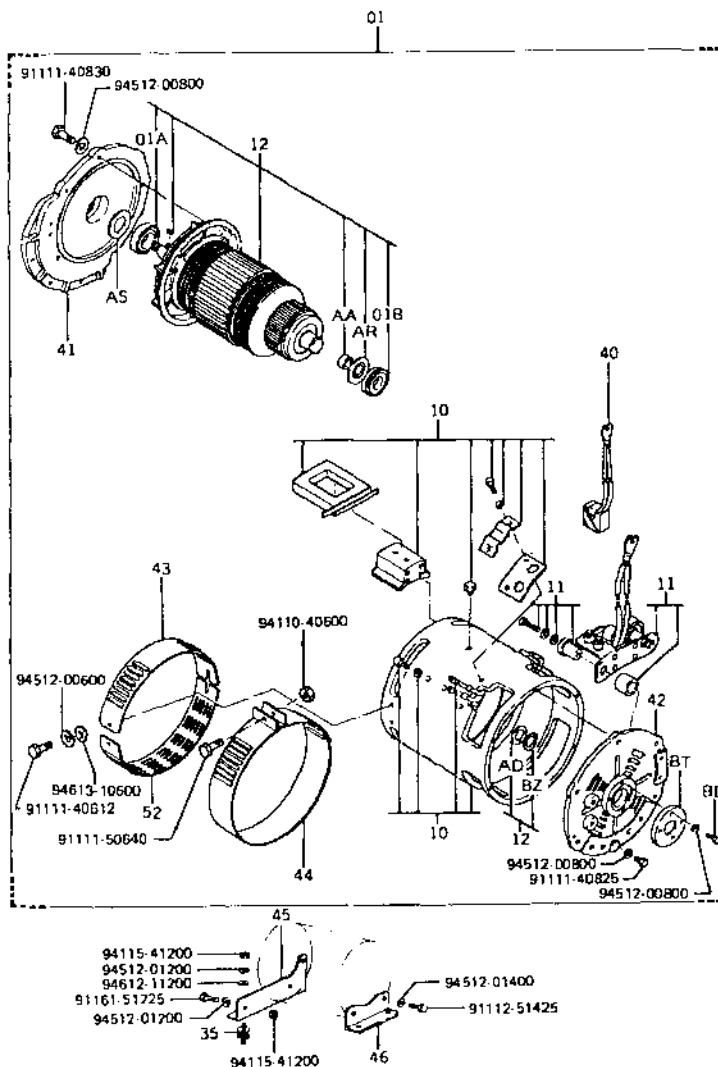

1401-053

053

6215-001-0002

1401


PART NAME CODE	PART NAME	QTY
1401-01	MOTOR ASSY, DRIVE -----	1
1401-01A	BEARING, DRIVE MOTOR, NO.1 -----	1
1401-01B	BEARING, DRIVE MOTOR, NO.2 -----	1
1401-10	YOEK ASSY -----	1
1401-11	HOLDER ASSY, BRUSH -----	4
1401-12	ARMATURE ASSY, DRIVE -----	1
1401-35	INSULATOR SUB-ASSY, MOTOR MOUNTING -----	4
1401-40	BRUSH, DRIVE MOTOR -----	4
1401-41	BRACKET, NO.1 -----	1
1401-42	BRACKET, NO.2 -----	1
1401-43	COVER, MOTOR -----	1
1401-44	COVER, BRUSH -----	1
1401-45	BRACKET, DRIVE MOTOR MOUNTING, NO.1 -----	1
1401-46	BRACKET, DRIVE MOTOR MOUNTING, NO.2 -----	1
1401-52	COVER, FAN NO.2 -----	1
1401-AA	COLLAR -----	1
1401-AD	WASHER, PLATE -----	1
1401-AR	FRINGER -----	1
1401-AS	WASHER, WAVE -----	2
1401-BD	BOLT, THROUGH -----	4
1401-BT	COVER, BEARING -----	1
1401-BZ	RETAINING, RING -----	1

(MAIN) (2) G215


FIG. 1402
PUMP DRIVE MOTOR

1402

 (20D, 35D)

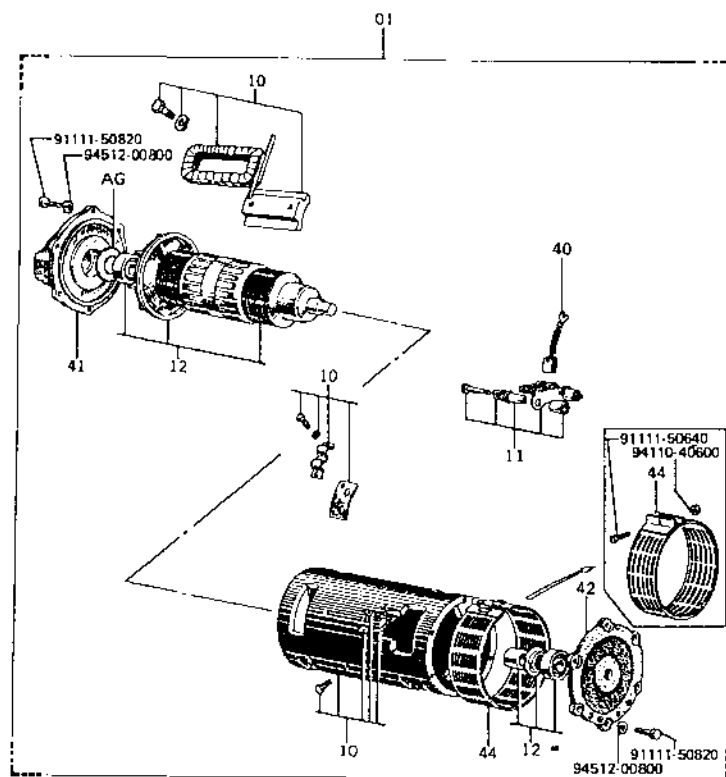

1402-053

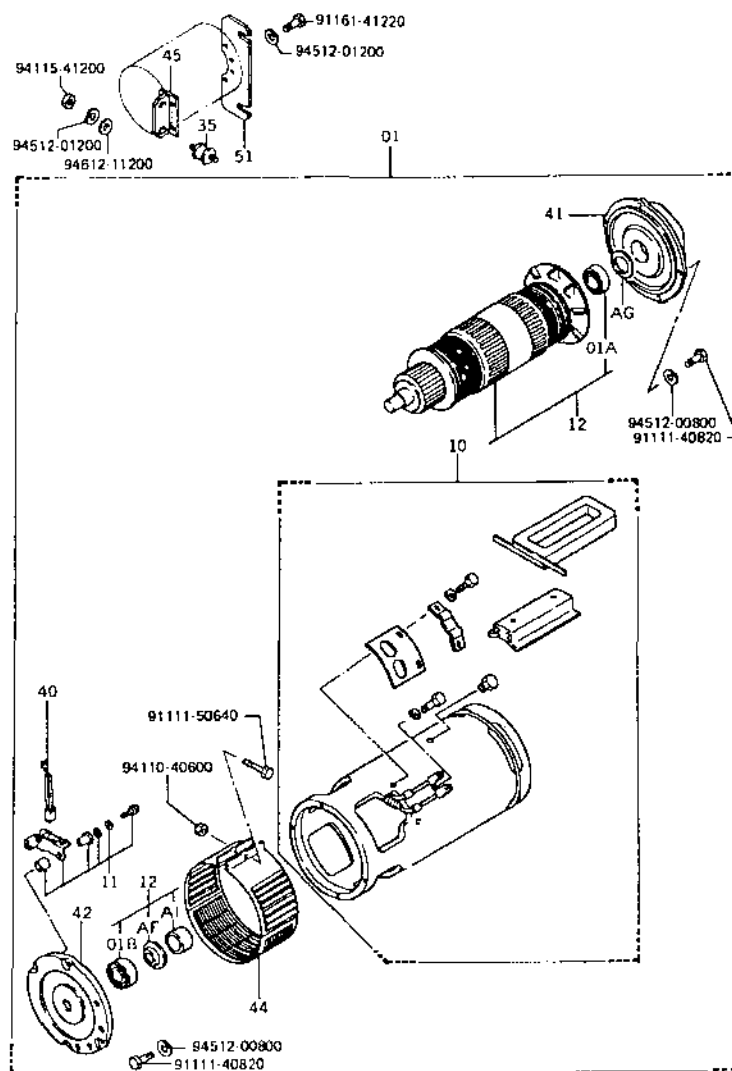 

1402-054

1402



PART NAME CODE	PART NAME	QTY
1402-01	MOTOR ASSY, PUMP -----	1
1402-01A	BEARING, PUMP MOTOR, NO.1 -----	1
1402-01B	BEARING, PUMP MOTOR, NO.2 -----	1
1402-10	YOKE ASSY, PUMP MOTOR -----	1
1402-11	HOLDER ASSY, PUMP MOTOR -----	4
1402-12	ARMATURE ASSY, PUMP MOTOR -----	1
1402-35	INSULATOR SUB-ASSY, MOTOR MOUNTING -----	4
1402-40	BRUSH, PUMP MOTOR -----	4
1402-41	BRACKET, NO.1 -----	1
1402-42	BRACKET, NO.2 -----	1
1402-44	COVER, BRUSH -----	1
1402-45	BRACKET, PUMP MOTOR MOUNTING -----	1
1402-51	BRACKET, PUMP MOTOR MOUNTING NO.2 -----	1
1402-AF	FRINGER -----	1
1402-AG	WASHER, WAVE -----	1
1402-A1	COLLAR -----	1

(MAIN) (3) 0215

FIG. 1403
POWER STEERING PUMP DRIVE MOTOR

1403

  (200, 350)

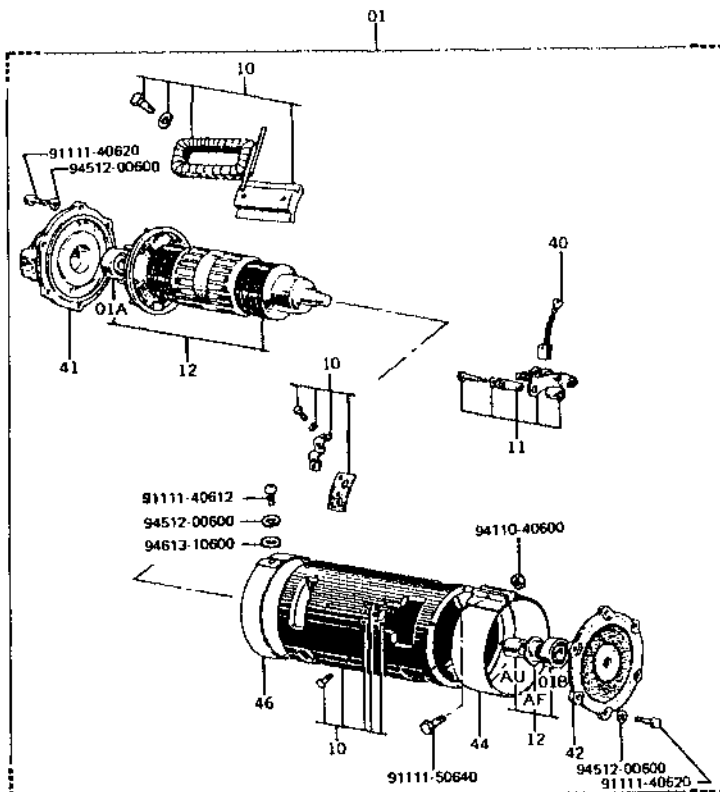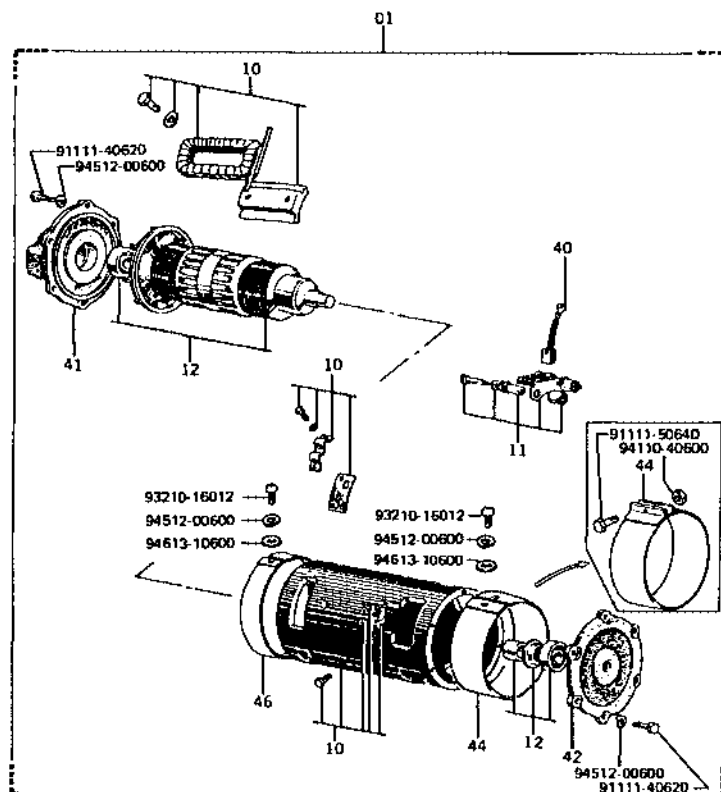

1403 012

1403 013


1403

PART NAME CODE	PART NAME	QTY
1403-G1	MOTOR ASSY, POWER STEERING -----	1
1403-G1A	BEARING, POWER STEERING MOTOR -----	1
1403-G1B	BEARING -----	1
1403-1G	Yoke ASSY, POWER STEERING MOTOR -----	1
1403-11	HOLDER ASSY, BRUSH -----	4
1403-12	ARMATURE ASSY, POWER STEERING -----	1
1403-30	BRACKET SUB-ASSY, MOTOR MOUNTING -----	2
1403-35	INSULATOR SUB-ASSY, MOTOR MOUNTING -----	4
1403-40	BRUSH, POWER STEERING MOTOR -----	4
1403-41	BRACKET, NO.1 -----	1
1403-42	BRACKET, NO.2 -----	1
1403-44	COVER, BRUSH -----	1
1403-AV	PIPE -----	2

(MAIN) (4) Q215

FIG. 2401
CONTROL PANEL

 2401

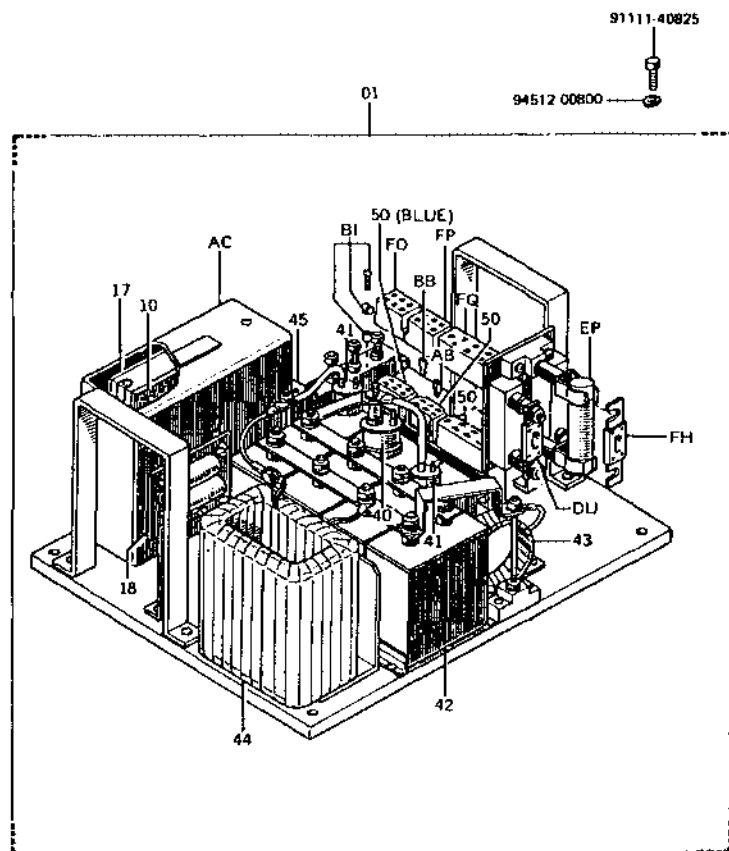

2401-043

PART NAME CODE	PART NAME	QTY
2401-01	PANEL ASSY, DRIVE CONTROL	1
2401-10	GENERATOR ASSY, SIGNAL	1
2401-17	CIRCUIT ASSY, GATE	1
2401-18	TIMER UNIT	1
2401-40	THYRISTOR, MAIN	1
2401-41	THYRISTOR, SUB	2
2401-42	CONDENSER	4
2401-43	REACTOR (L0)	1
2401-44	REACTOR (L1)	1
2401-45	SENSOR, CURRENT	1
2401-50	CONSENT	1
2401-AB	RECEPTACLE	2
2401-AC	COVER	1
2401-BB	TAB	8
2401-BI	TERMINAL	3
2401-DU	FUSE	1
2401-EP	FUSE	1
2401-FH	FUSE	1
2401-FO	PLUG, NO.1	1
2401-FP	PLUG, NO.2	1
2401-FQ	PLUG, NO.3	1

(MAIN) (5) 6215

2402





PART NAME CODE	PART NAME	QTY
2402-01	PANEL ASSY, CONTACTOR -----	1
2402-46	DIODE ASSY -----	2
2402-50	CONSENT -----	1
2402-AA	RECEPTACLE -----	18
2402-EH	TAB -----	18
2402-EI	PLUG, NO.1 -----	1
2402-EJ	PLUG, NO.2 -----	1
2402-EK	PLUG, NO.3 -----	1

(MAIN) (6)

~~G215~~

FIG. 2403
CONTACTOR ASSY

  2403

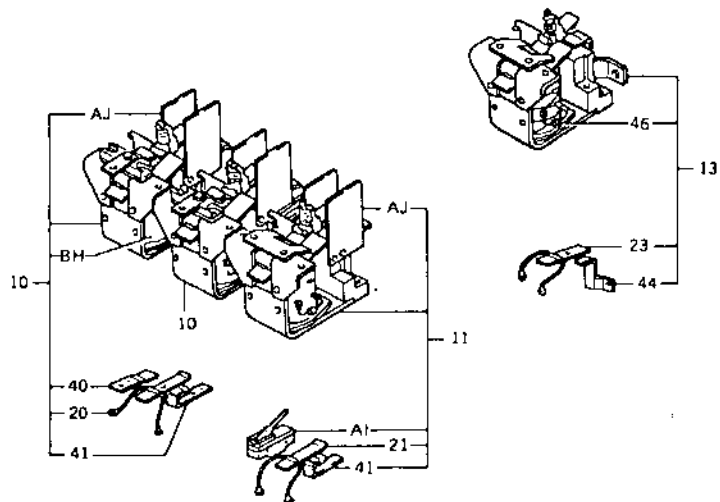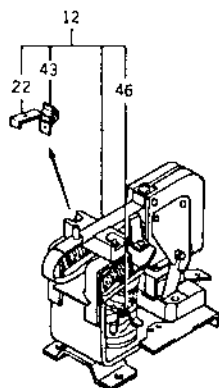

2403-084

PART NAME CODE	PART NAME	QTY
2403-10	CONTACTOR ASSY, DRIVE -----	2
2403-11	CONTACTOR ASSY, SHORT -----	1
2403-12	CONTACTOR ASSY, PUMP -----	1
2403-13	CONTACTOR ASSY, POWER STEERING -----	1
2403-20	CONTACT SUB-ASSY, DRIVE MOVING -----	2
2403-21	CONTACT SUB-ASSY, SHORT MOVING -----	1
2403-22	CONTACT SUB-ASSY, PUMP MOVING -----	1
2403-23	CONTACT SUB-ASSY, POWER STEERING MOVING -----	1
2403-40	CONTACT, DRIVE FIXED, NO.1 -----	2
2403-41	CONTACT, DRIVE FIXED, NO.2 -----	3
2403-43	CONTACT, PUMP FIXED -----	1
2403-44	CONTACT, POWER STEERING FIXED -----	1
2403-46	DIODE -----	1
2403-A1	SWITCH, MICRO -----	1
2403-A3	BARRIER, NO.1 -----	6
2403-BH	COIL -----	2

(MAIN) () ()


 
 
G215

FIG. 2501
BATTERY




2501

(G-S)

 (YUASA)

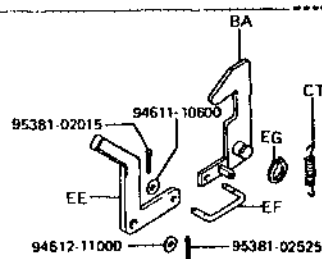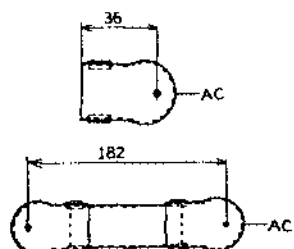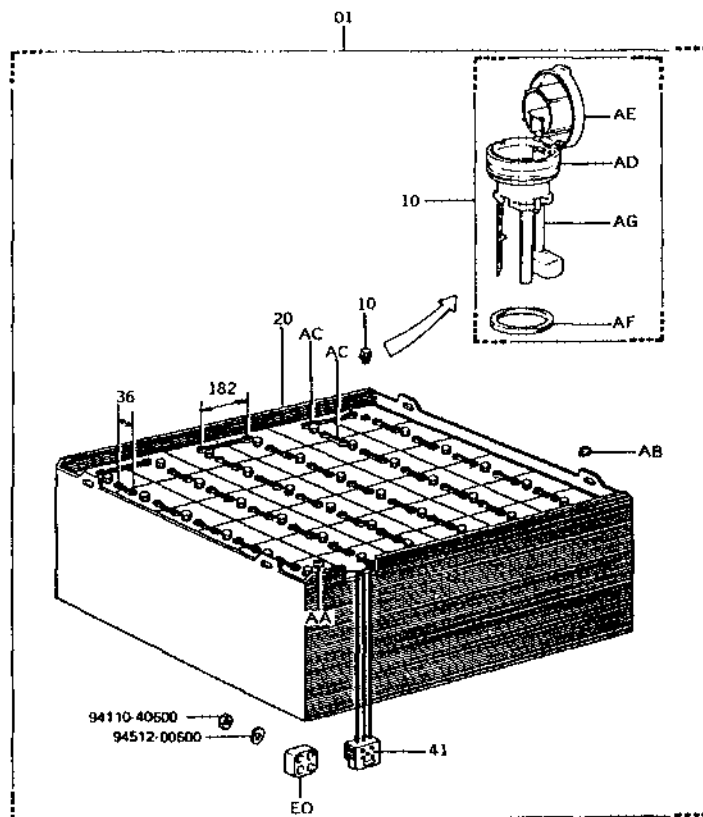

2501 095

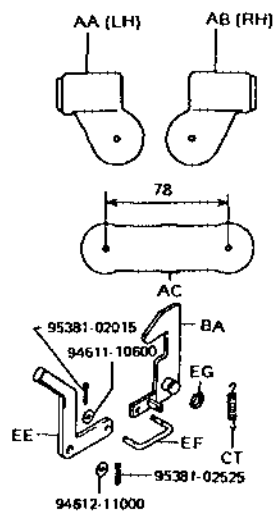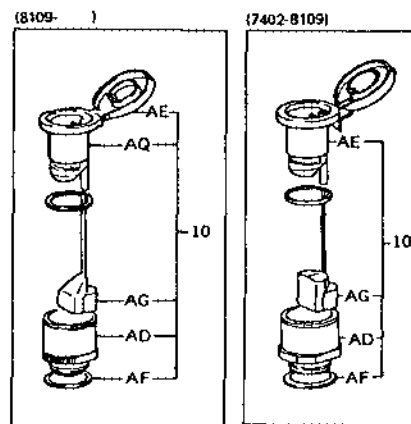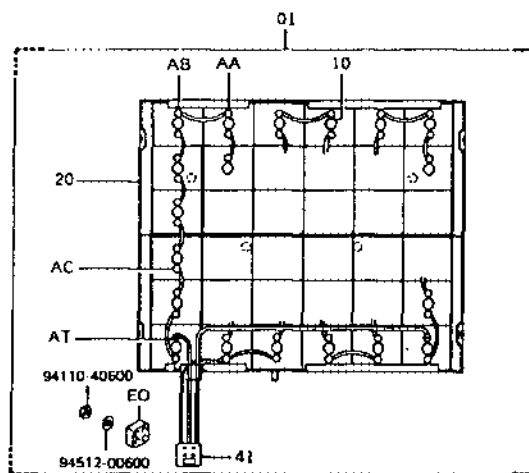   

2501 096

2501


PART NAME CODE	PART NAME	QTY
2501-01	BATTERY ASSY, W/CASE -----	1
2501-10	PLUG ASSY, VENT -----	36
2501-20	CASE SUB-ASSY, BATTERY -----	1
2501-41	PLUG, BATTERY -----	1
2501-AA	COVER, TERMINAL, LH -----	1
2501-AB	COVER, TERMINAL, RH -----	2
2501-AC	COVER, TERMINAL -----	30
2501-AD	PLUG, VENT -----	36
2501-AE	CAP -----	36
2501-AF	PACKING -----	36
2501-AG	FLOAT -----	36
2501-AQ	FLOAT, ROD SUPPORT -----	36
2501-AT	COVER, TERMINAL -----	2
2501-BA	STOPPER SUB-ASSY, BATTERY CASE -----	1
2501-CT	SPRING -----	1
2501-EE	LEVER, BATTERY STOPPER -----	1
2501-EF	LINK, BATTERY STOPPER -----	1
2501-EG	RING, SHAFT SNAP -----	1
2501-EO	PLATE, BATTERY PLUG -----	1

(MAIN) (8) C215

FIG. 2512
BATTERY SEPARATE CHARGER

2512

 (G.S.)

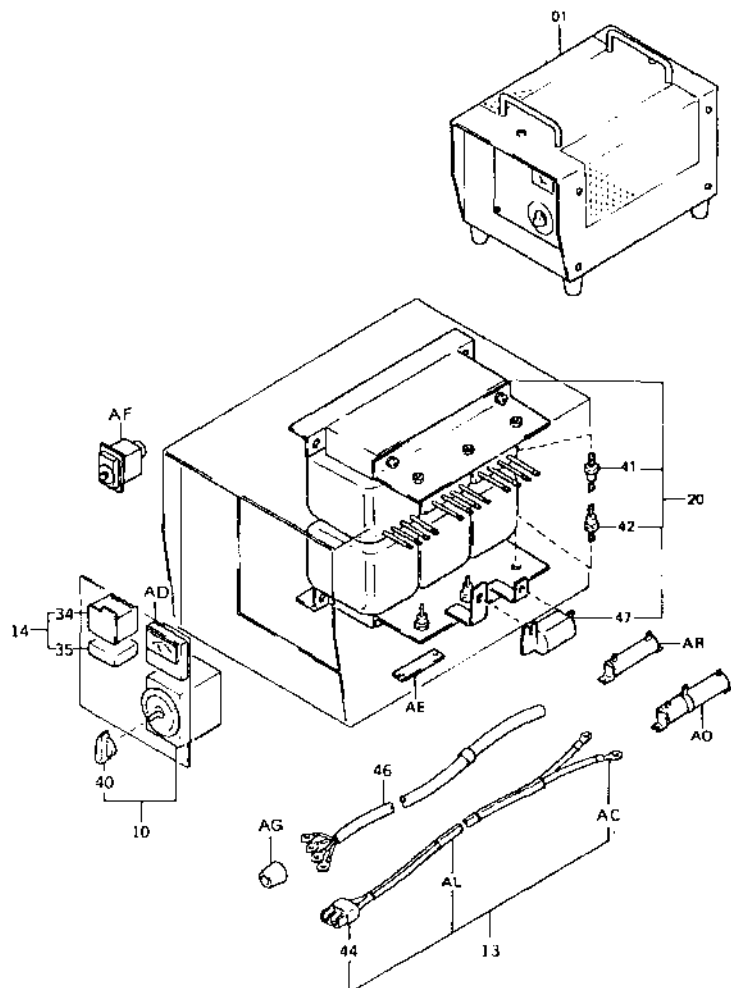

2512-014


PART NAME CODE	PART NAME	QTY
2512-01	CHARGER ASSY, BATTERY SEPARATE	1
2512-10	TIMER ASSY	1
2512-13	CABLE ASSY, CHARGER (DC)	1
2512-14	SWITCH ASSY, MAGNET	1
2512-20	TRANSFORMER SUB-ASSY	1
2512-34	SWITCH SUB-ASSY, MAGNET	1
2512-35	RELAY SUB-ASSY, THERMAL	1
2512-40	HANDLE	1
2512-41	ELEMENT, SILICON, FORWARD	3
2512-42	ELEMENT, SILICON, REVERSE	3
2512-44	PLUG	1
2512-46	CABLE (AC)	1
2512-47	FUSE	1
2512-AC	TERMINAL	2
2512-AD	METER ASSY, AMPERE	1
2512-AE	SHUNT	1
2512-AF	TIMER ASSY, TOTAL	1
2512-AG	RUBBER	4
2512-AL	CABLE	2
2512-AO	RESISTOR	1
2512-AR	RESISTOR	1

(MAIN) (9)


G215

FIG. 2611
ACCELERATOR

 2611

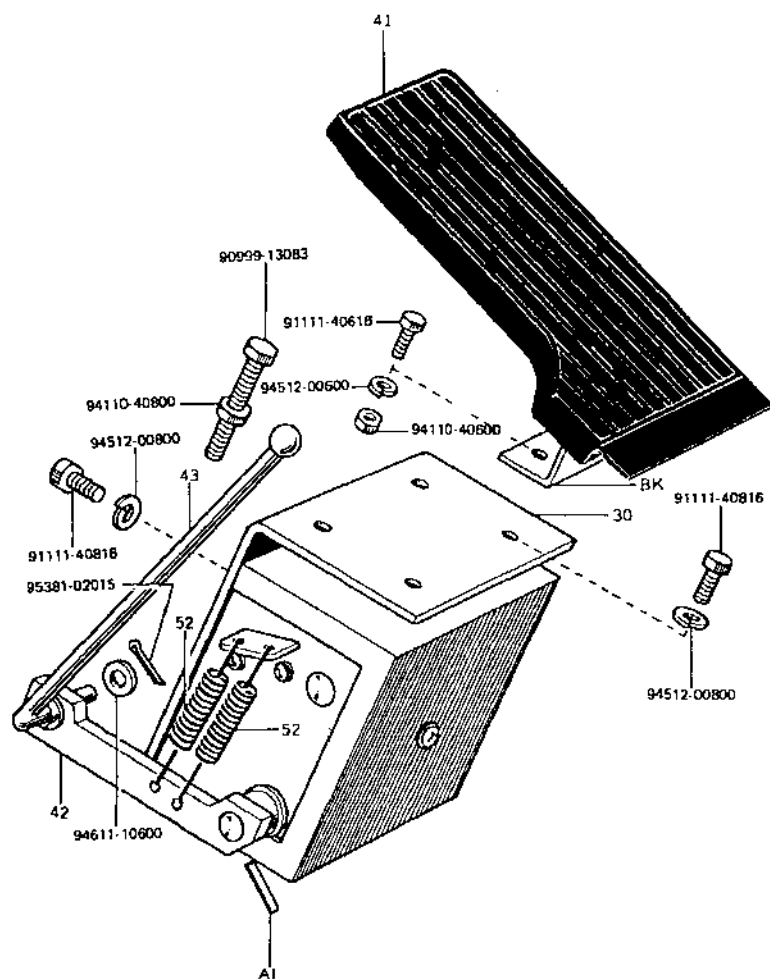

2611 033

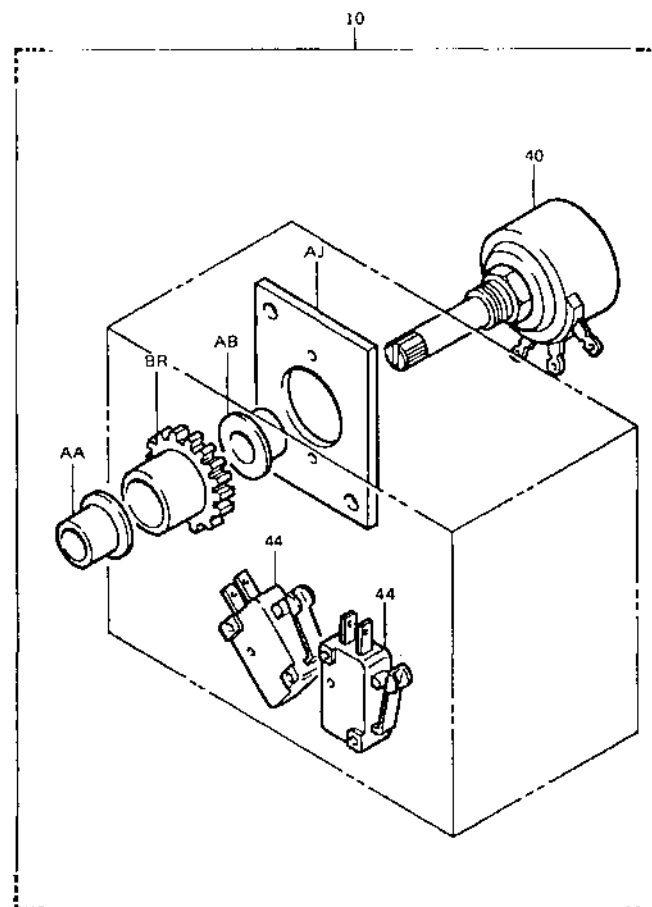 

2611 035


2611

PART NAME CODE	PART NAME	QTY
2611-10	SWITCH ASSY, ACCELERATOR (PEDAL TYPE) -----	1
2611-30	BRACKET SUB-ASSY, ACCELERATOR BOX -----	1
2611-40	VARI-OHM -----	1
2611-41	PEDAL, ACCELERATOR -----	1
2611-42	ARM, ACCELERATOR LINK -----	1
2611-43	ROD, ACCELERATOR PEDAL -----	1
2611-44	SWITCH, MICRO -----	2
2611-52	SPRING, TENSION, NO.1 -----	2
2611-AA	BUSHING -----	1
2611-AB	BUSHING -----	2
2611-A1	PIN, SPRING -----	1
2611-AJ	HOLDER, VARI-OHM -----	1
2611-BK	BRACKET, PEDAL -----	1
2611-BR	GEAR, ACCELERATOR -----	1

(MAIN) (10) C215

FIG. 3305
GEAR CASE & GEAR

 3305

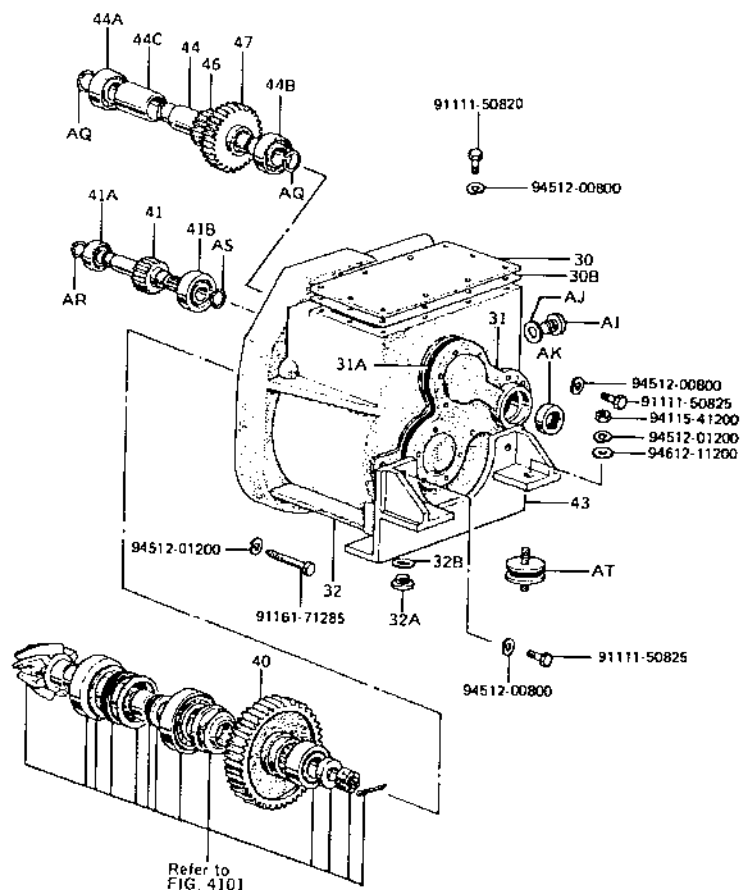

3305-006


PART NAME CODE	PART NAME	QTY
3305-30	COVER, GEAR CASE	1
3305-30B	GASKET, GEAR CASE COVER	1
3305-31	COVER, GEAR CASE, REAR	1
3305-31A	GASKET, GEAR CASE REAR COVER	1
3305-32	CASE, GEAR	1
3305-32A	PLUG, DRAIN	1
3305-32B	GASKET, DRAIN PLUG	1
3305-40	GEAR, OUTPUT	1
3305-41	GEAR, DRIVE	1
3305-41A	BEARING (FOR DRIVE GEAR)	1
3305-41B	BEARING (FOR DRIVE GEAR)	1
3305-43	BRACKET, GEAR CASE	1
3305-44	SHAFT, REDUCTION GEAR, NO.1	1
3305-44A	BEARING	1
3305-44B	BEARING	1
3305-44C	COLLAR, REDUCTION GEAR SHAFT	1
3305-46	GEAR, REDUCTION, NO.2	1
3305-47	GEAR, REDUCTION, NO.3	1
3305-A1	PLUG	1
3305-AJ	GASKET	1
3305-AK	SEAL, OIL	2
3305-AQ	RING, SHAFT SNAP	1
3305-AR	RING, SHAFT SNAP	1
3305-AS	RING, SHAFT SNAP	1
3305-AT	INSULATOR, ENGINE MOUNTING	2

(MAIN) (11)

G215

FIG. 3310
CHANGE LEVER

 3310

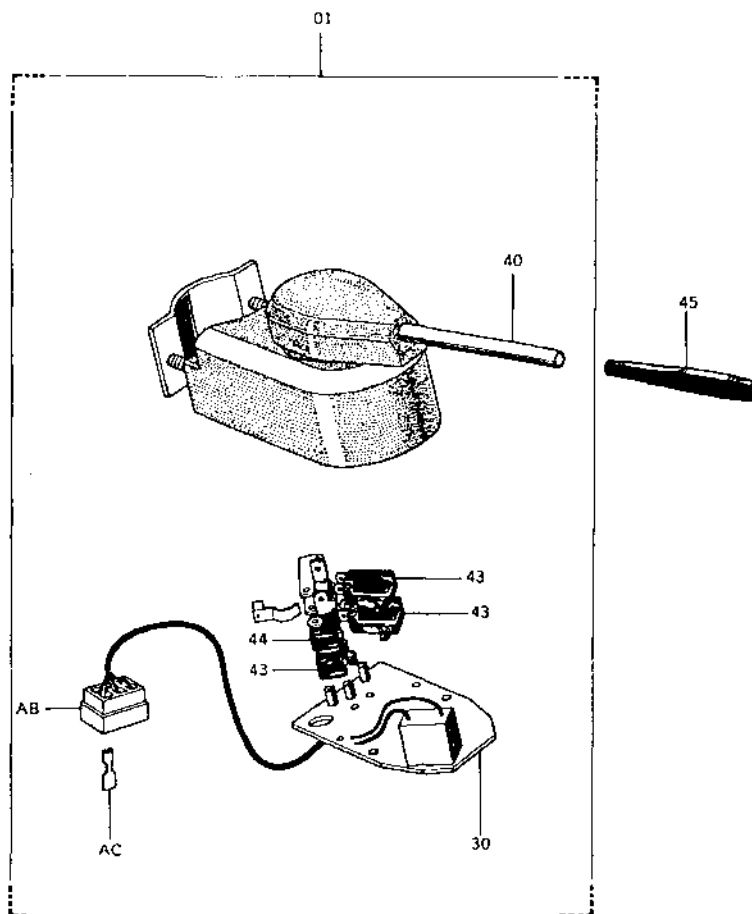


PART NAME CODE	PART NAME	QTY
3310-01	SWITCH ASSY, DIRECTION -----	1
3310-30	PLATE SUB-ASSY, SPARK KILLER -----	1
3310-40	LEVER -----	1
3310-43	SWITCH, MICRO, NO.1 -----	3
3310-44	SWITCH, MICRO, NO.2 -----	1
3310-45	KNOB -----	1
3310-A6	PLUG -----	1
3310-AC	TAB -----	6

3310 013

(MAIN) (12) G215

FIG. 3701
PROPELLER SHAFT & UNIVERSAL JOINT

 3701

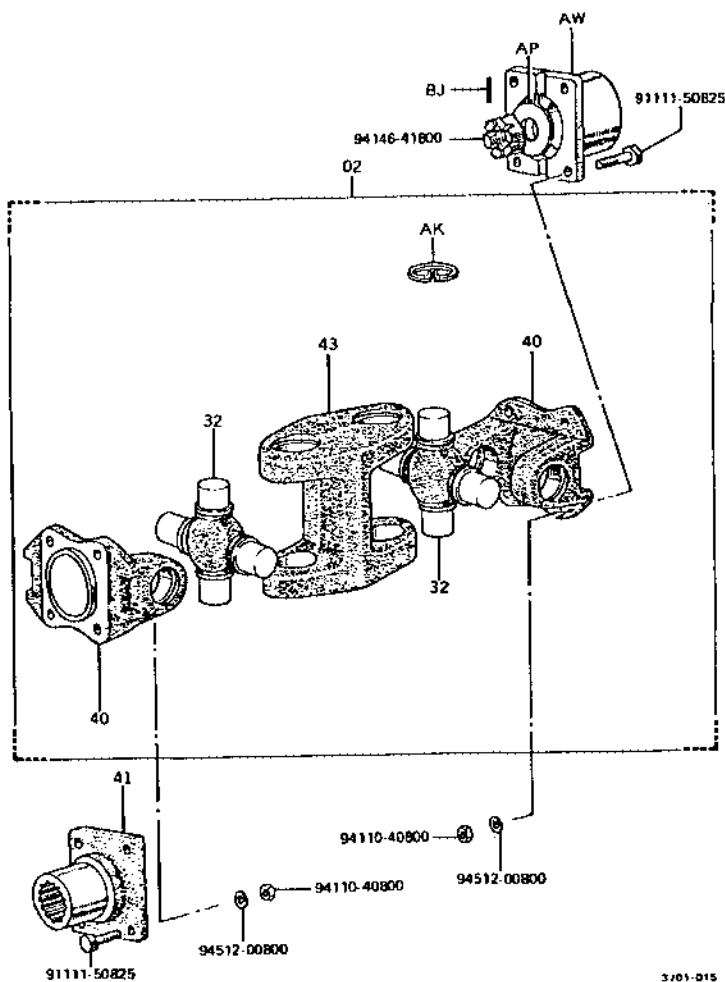

PART NAME CODE	PART NAME	QTY
3701-02	JOINT ASSY, UNIVERSAL	1
3701-32	SPIDER SET, UNIVERSAL	2
3701-40	YOKE, UNIVERSAL JOINT FLANGE	2
3701-41	FLANGE, UNIVERSAL JOINT	1
3701-43	YOKE, COUPLING	1
3701-AK	RING, HOLE SNAP	8
3701-AP	WASHER, PLATE	1
3701-AW	RETAINER	1
3701-BJ	PIN, SPRING	1

(MAIN) (13) G215

4101



4101


PART NAME CODE	PART NAME	QTY
4101-01	CARRIER ASSY, DIFFERENTIAL -----	1
4101-10	RING GEAR & PINION SET, DIFFERENTIAL -----	1
4101-10A	BEARING, DRIVE PINION -----	2
4101-10B	BEARING, DRIVE PINION PILOT -----	1
4101-10C	NUT, LOCK -----	1
4101-10D	SHIM, BEARING PRELOAD ADJUST -----	99
4101-10E	BEARING, DRIVE PINION -----	1
4101-20	CASE SUB-ASSY, DIFFERENTIAL -----	1
4101-20A	NUT, ADJUSTING -----	2
4101-20B	BEARING, DIFFERENTIAL CASE -----	2
4101-21	CARRIER SUB-ASSY, DIFFERENTIAL -----	1
4101-21A	RING, O (FOR DIFFERENTIAL CARRIER) -----	1
4101-40	HOUSING, DIFFERENTIAL -----	1
4101-40A	GASKET (FOR DIFFERENTIAL HOUSING) -----	1
4101-40C	PLUG, BREATHER (FOR DIFFERENTIAL HOUSING) --	1
4101-46	GEAR, SIDE -----	2
4101-46A	WASHER, SIDE GEAR THRUST -----	4
4101-47	SPIDER -----	1
4101-48	PINION -----	4
4101-48A	WASHER, PINION THRUST -----	4
4101-49	PLUG, DRAIN -----	1
4101-49A	GASKET, DRAIN PLUG -----	1
4101-50	RETAINER, DRIVE PINION BEARING -----	1
4101-50B	RING, O (FOR BEARING RETAINER) -----	1
4101-50D	SHIM, DIFFERENTIAL DRIVE PINION BEARING ----	99
4101-54	CAP, RING GEAR THRUST SCREW -----	1
4101-55	BOLT, RING GEAR SET -----	12
4101-A8	BOLT -----	12
4101-AC	SCREW, RING GEAR THRUST -----	1
4101-AD	NUT -----	1
4101-AF	LOCK, ADJUSTING -----	2
4101-AH	GASKET -----	2
4101-AI	PLUG -----	1
4101-AK	BOLT -----	4
4101-AL	BOLT -----	4
4101-AN	RING, O -----	1
4101-AU	SPACER, BEARING -----	2
4101-AS	BOLT -----	12
4101-AU	BOLT, STUD -----	4
4101-AV	SPACER -----	1
4101-AZ	SEAL, OIL -----	1
4101-B0	BOLT -----	1
4101-BP	WASHER -----	12
4101-CF	PLUG -----	2
4101-CJ	WASHER, PLATE -----	12
4101-CS	PIN, RING -----	4
4101-CX	CLAMP -----	1
4101-CY	PIN, DOWEL -----	1
4101-CZ	PIN -----	3
4101-DH	SPACER -----	1

(MAIN) (14)

G215

4201

 (JAPAN DOUBLE)

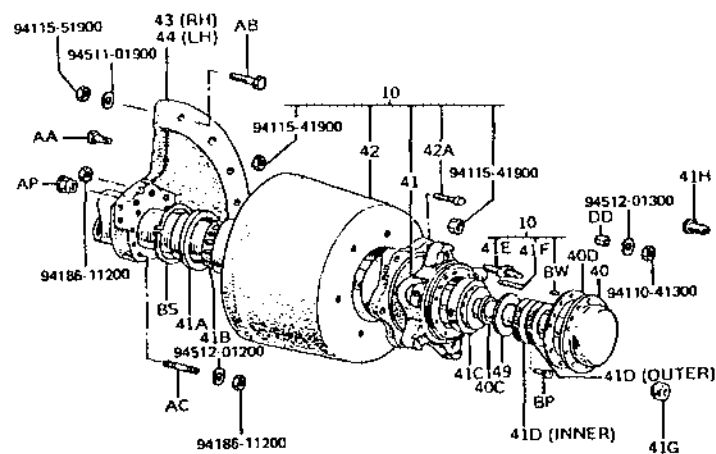

4201 051


4201

PART NAME CODE	PART NAME	QTY
4201-10	HUB ASSY, BRAKE DRUM & FRONT AXLE -----	2
4201-40	SHAFT, FRONT AXLE -----	2
4201-40C	SEAL, OIL (FOR FRONT AXLE SHAFT) -----	2
4201-40D	GASKET, FRONT AXLE SHAFT -----	2
4201-41	HUB, FRONT AXLE -----	2
4201-41A	SEAL, OIL (FOR FRONT AXLE HUB) -----	2
4201-41B	BEARING, NO.1 (FOR FRONT AXLE HUB) -----	2
4201-41C	BEARING, NO.2 (FOR FRONT AXLE HUB) -----	2
4201-41D	NUT, BEARING LOCK -----	2
4201-41E	BOLT, HUB -----	12
4201-41F	BOLT, STUD (FOR FRONT AXLE SHAFT) -----	16
4201-41G	NUT, HUB -----	12
4201-41H	BOLT, DOUBLE WHEEL STOP -----	12
4201-42	DRUM, BRAKE -----	2
4201-42A	BOLT, BRAKE DRUM SET -----	12
4201-43	BRACKET, FRONT AXLE, RH -----	1
4201-44	BRACKET, FRONT AXLE, LH -----	1
4201-49	PLATE, LOCK NUT -----	2
4201-AA	BOLT -----	6
4201-AB	BOLT, BRACKET SET -----	4
4201-AC	BOLT, STUD BRAKE SET -----	16
4201-AP	NUT -----	4
4201-BP	SCREW -----	2
4201-BW	PIN, STRAIGHT -----	4
4201-DD	DOWEL, SPLIT -----	16

(MAIN) (15) 6215

FIG. 4301
REAR AXLE & TIE-ROD

 4301

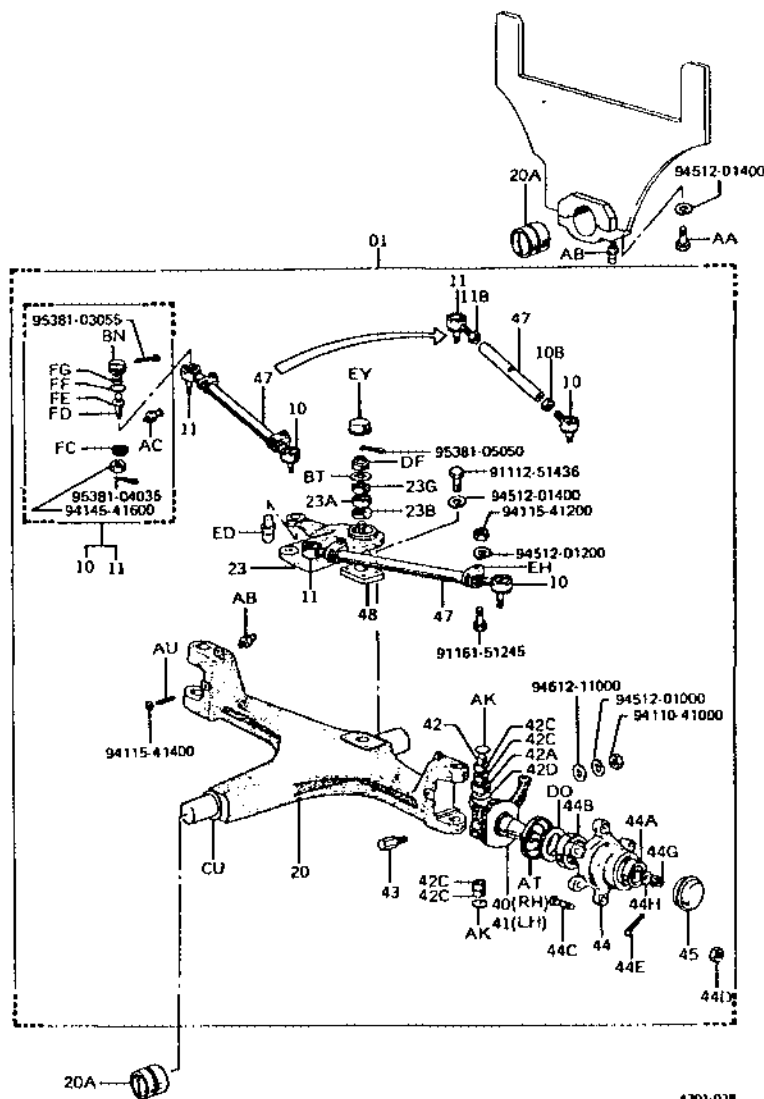

PART NAME CODE	PART NAME	QTY
4301-01	AXLE ASSY, RR	1
4301-10	END ASSY, TIE-ROD, NO.1	2
4301-10B	NUT (RH THREADS)	2
4301-11	END ASSY, TIE-ROD, NO.2	2
4301-11B	NUT (LH THREADS)	2
4301-20	BEAM SUB-ASSY, REAR AXLE	1
4301-20A	BUSH, REAR AXLE BEAM	2
4301-23	BELLCRANK SUB-ASSY, STEERING	1
4301-23A	BEARING (FOR STEERING BELLCRANK)	1
4301-23B	SEAL, OIL (FOR STEERING BELLCRANK)	1
4301-23G	BEARING	1
4301-40	KNUCKLE, STEERING, RH	1
4301-41	KNUCKLE, STEERING, LH	1
4301-42	PIN, STEERING KNUCKLE KING	2
4301-42A	BEARING, STEERING KNUCKLE THRUST	2
4301-42C	BEARING, NEEDLE	8
4301-42D	SHIM, STEERING KNUCKLE	99
4301-43	PIN, KING PIN LOCK	2
4301-44	HUB, REAR AXLE	2
4301-44A	BEARING, INNER	2
4301-44B	BEARING, OUTER	2
4301-44C	BOLT, HUB	12
4301-44D	NUT, HUB	12
4301-44E	PIN, REAR AXLE COILER	2
4301-44G	NUT, CASTLE (FOR REAR AXLE HUB)	2
4301-44H	WASHER, CLAW (FOR REAR AXLE HUB)	2
4301-45	CAP, REAR AXLE HUB	2
4301-47	TIE-ROD	2
4301-48	PIN, BELLCRANK	1
4301-AA	BOLT	4
4301-AB	FITTING, GREASE	4
4301-AC	FITTING, GREASE	4
4301-AK	PLUG	4
4301-AT	COVER	2
4301-AU	BOLT	2
4301-BN	PLUG	4
4301-BT	WASHER, PLATE	1
4301-CU	SPACER	99
4301-DF	NUT, CASTLE	1
4301-DO	RETAINER	2
4301-ED	KNOB, PITMAN	1
4301-EY	CAP	1
4301-FC	SEAL, TIE-ROD END	4
4301-FD	KNOB, TIE-ROD END	4
4301-FE	BALL, TIE-ROD END	4
4301-FF	SEAL, TIE-ROD END	4
4301-FG	SPRING, TIE-ROD END	4




(MAIN) (16)

G215

FIG. 4401
FRONT WHEEL & TIRE(SINGLE)

4401

   35

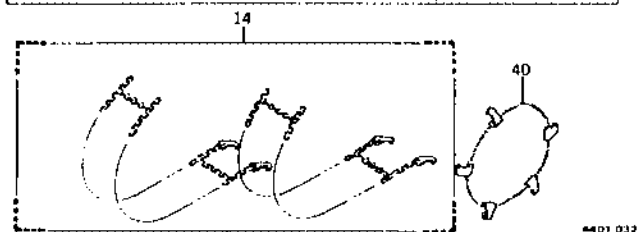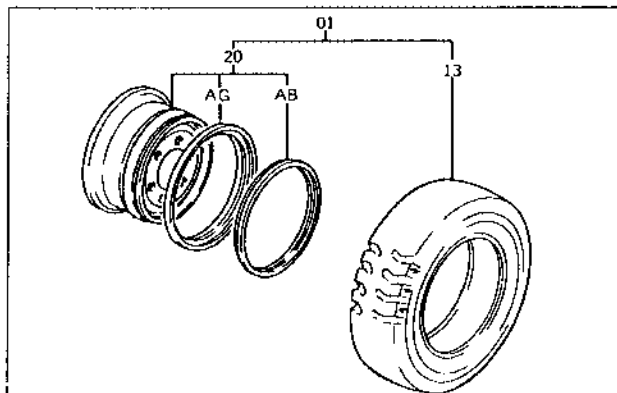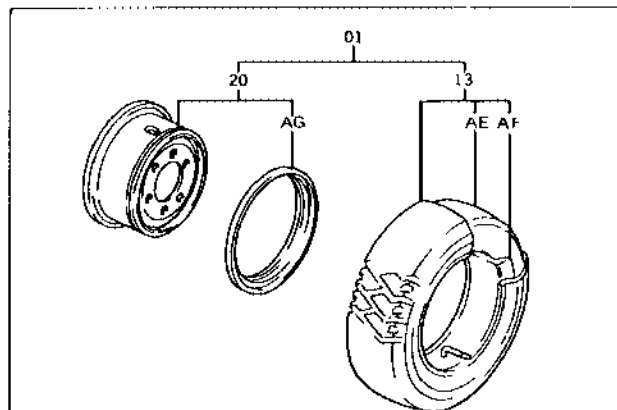

4401 032


PART NAME CODE	PART NAME	QTY
4401-01	WHEEL ASSY -----	2
4401-13	TIRE ASSY -----	2
4401-14	CHAIN ASSY, TIRE -----	1
4401-20	WHEEL SUB-ASSY, DISC -----	2
4401-40	BAND, CHAIN -----	1
4401-AB	RING, LOCK -----	2
4401-AE	TUBE SUB-ASSY -----	2
4401-AF	FLAP -----	2
4401-AG	RING, SIDE -----	2

 (MAIN) (17)


 
G215

FIG. 4402
FRONT WHEEL & TIRE (DOUBLE)

 4402

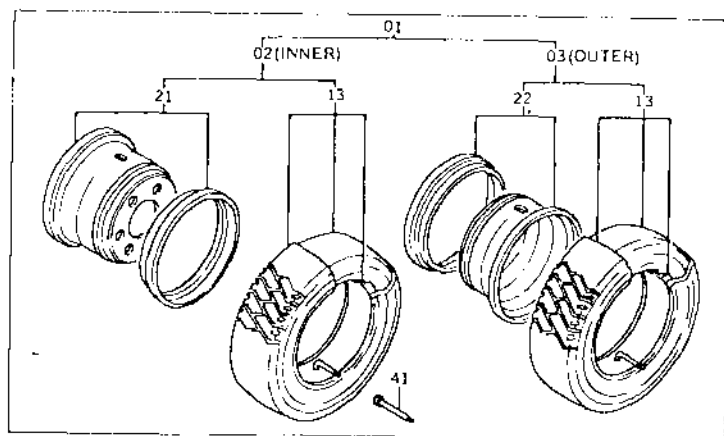

(UNIQUE, TRUKUSH)

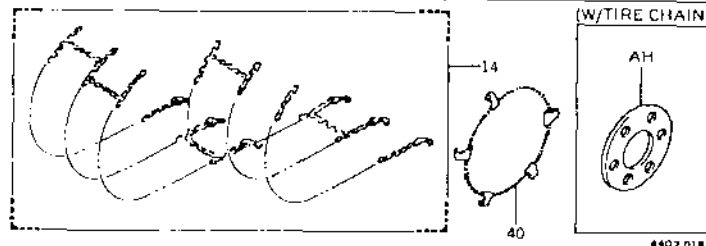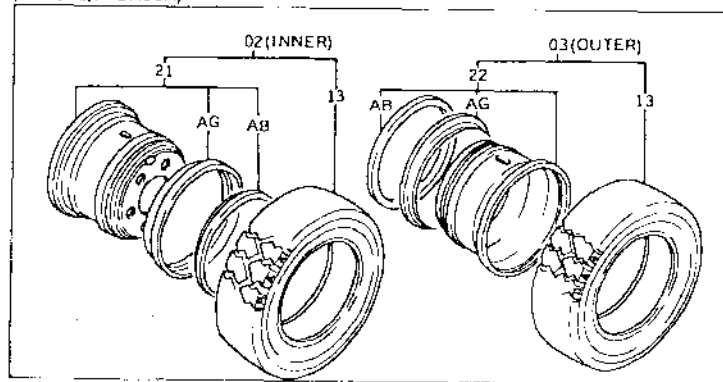


PART NAME CODE	PART NAME	QTY
4402-01	WHEEL ASSY -----	2
4402-02	WHEEL ASSY, INNER -----	2
4402-03	WHEEL ASSY, OUTER -----	2
4402-13	TIRE ASSY -----	4
4402-14	CHAIN ASSY, TIME -----	1
4402-21	WHEEL SUB-ASSY, DISC, INNER -----	2
4402-22	WHEEL SUB-ASSY, DISC, OUTER -----	2
4402-40	BAND, CHAIN -----	2
4402-41	EXTENSION, WHEEL TUBE VALVE -----	2
4402-AB	RING, LOCK -----	4
4402-AE	TUBE SUB-ASSY -----	4
4402-AF	FLAP -----	4
4402-AG	RING, SIDE -----	4
4402-AH	SPACER SUB-ASSY -----	2


(MAIN) (18) C215

FIG. 4403
REAR WHEEL & TIRE

 4403

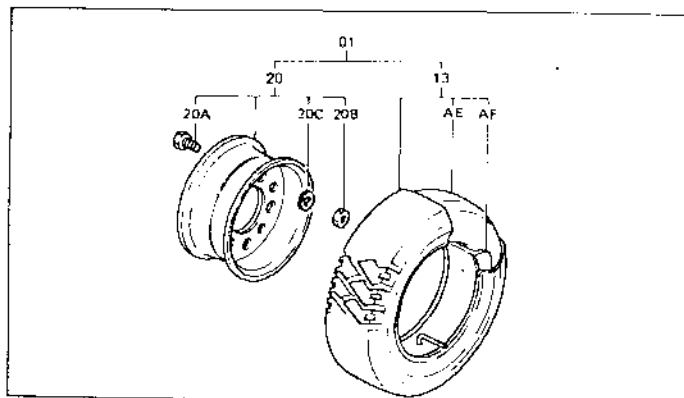

(UNIQUE, TRUKUSHI)

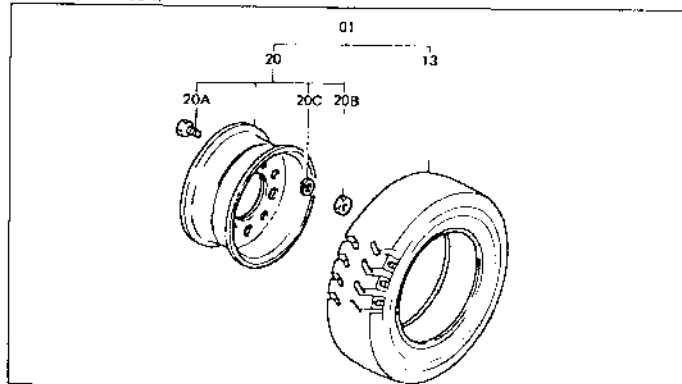 

4403 D0.1


PART NAME CODE	PART NAME	QTY
4403-01	WHEEL ASSY -----	2
4403-13	TIRE ASSY -----	2
4403-20	WHEEL SUB-ASSY, DISC -----	2
4403-20A	BOLT, DISC WHEEL SET -----	12
4403-20B	NUT, WHEEL SET -----	12
4403-20C	WASHER, WHEEL SET -----	12
4403-AE	TUBE SUB-ASSY -----	2
4403-AF	FLAP -----	2

(MAIN) (19)

G215

FIG. 4501
STEERING WHEEL

 4501

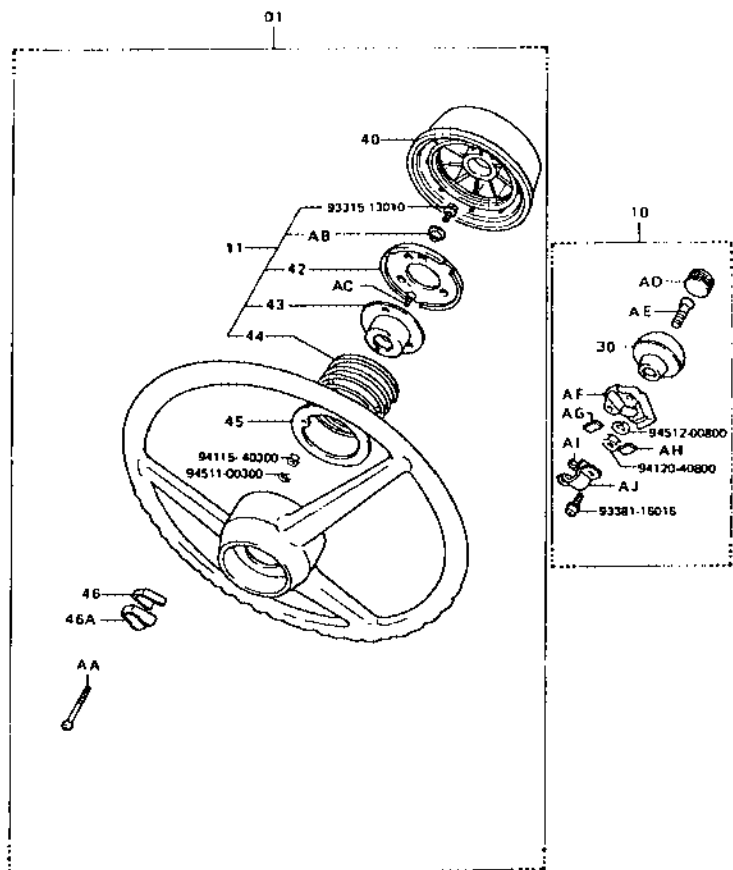

4501 008

PART NAME CODE	PART NAME	QTY
4501-01	WHEEL ASSY, STEERING	1
4501-10	KNOB ASSY, STEERING WHEEL	1
4501-11	PLATE ASSY, CONTACT	1
4501-30	KNOB SUB-ASSY, STEERING WHEEL	1
4501-40	BUTTON, HORN	1
4501-42	PLATE, HORN CONTACT	1
4501-43	SEAT, HORN CONTACT	1
4501-44	SPRING, HORN	1
4501-45	PLATE, LEAD	1
4501-46	SPRING, HORN CONTACT	1
4501-46A	BRUSH, HORN CONTACT	1
4501-AA	SCREW	1
4501-AB	WASHER	1
4501-AC	SCREW	2
4501-AD	CAP, STEERING WHEEL	1
4501-AE	BOLT, STEERING WHEEL KNOB SET	1
4501-AF	BRACKET, STEERING WHEEL KNOB	1
4501-AG	SEAT, STEERING WHEEL KNOB BRACKET	1
4501-AH	SEAT, STEERING WHEEL KNOB BRACKET	1
4501-AI	SEAT, WHEEL KNOB SET PLATE	1
4501-AJ	PLATE, STEERING WHEEL KNOB SET	1

(MAIN) (20) G215

4502

01
1

This diagram illustrates the exploded view of a steering assembly. The components are labeled as follows:

- AW**: Steering wheel hub.
- AJ**: Steering wheel nut.
- 20**: Steering shaft.
- 32**: Steering shaft splines.
- DE**: Steering shaft splines.
- BH**: Steering shaft splines.
- 91111-50820**: Steering shaft splines.
- 94512-10800**: Steering shaft splines.
- 94110-40800**: Steering shaft splines.
- 94512-00800**: Steering shaft splines.
- 94612-10800**: Steering shaft splines.
- 94512-00800**: Steering shaft splines.
- 94110-40800**: Steering shaft splines.
- 11**: Steering shaft splines.
- 30**: Steering shaft splines.
- AC**: Steering shaft splines.
- 30A**: Steering shaft splines.
- AB**: Steering shaft splines.
- 30B**: Steering shaft splines.
- AA**: Steering shaft splines.
- AM**: Steering shaft splines.
- AN**: Steering shaft splines.
- 40**: Steering shaft splines.
- 91619-61230**: Steering shaft splines.
- 46A**: Steering shaft splines.
- 46B**: Steering shaft splines.
- 46**: Steering shaft splines.
- AA**: Steering shaft splines.
- AO**: Steering shaft splines.
- 11A**: Steering shaft splines.
- 94110-40800**: Steering shaft splines.
- 94512-00800**: Steering shaft splines.
- AL**: Steering shaft splines.
- AG**: Steering shaft splines.
- AH**: Steering shaft splines.
- 20**: Steering shaft.
- 91111-50850**: Steering shaft splines.
- 21**: Steering shaft splines.
- 21A**: Steering shaft splines.
- 21C**: Steering shaft splines.
- 94511-02400**: Steering shaft splines.
- AP**: Steering shaft splines.
- DA**: Steering shaft splines.
- AI**: Steering shaft splines.
- AK**: Steering shaft splines.

4502-053 A


4502

PART NAME CODE	PART NAME	QTY
4502-01	PCST ASSY, STEERING -----	1
4502-10	GEAR ASSY, STEERING -----	1
4502-11	BALL SCREW SET -----	1
4502-11A	BEARING, NO.1 (FOR BALL SCREW SET) -----	2
4502-20	JACKET SUB-ASSY, MAST -----	1
4502-21	BOX SUB-ASSY, STEERING GEAR -----	1
4502-21A	BUSH, SECTOR SHAFT, NO.1 -----	1
4502-21C	SEAL, OIL (FOR SECTOR SHAFT) -----	1
4502-30	COVER SUB-ASSY, SIDE -----	1
4502-30A	BUSH, SECTOR SHAFT, NO.2 -----	1
4502-30B	PACKING, SIDE COVER -----	1
4502-32	INSULATOR SUB-ASSY, W/COLUMN BUSH -----	1
4502-40	SHAFT, SECTOR -----	1
4502-46	COVER, END -----	1
4502-46A	PACKING, END COVER -----	1
4502-46B	SHIM (FOR END COVER) -----	99
4502-AA	WASHER, SPRING -----	8
4502-AB	BOLT -----	4
4502-AC	NUT -----	1
4502-AG	CLAMP, STEERING COLUMN, LOWER -----	1
4502-AH	GROMMET -----	1
4502-AI	NUT -----	2
4502-AJ	WASHER, SPRING -----	1
4502-AK	BOLT, STUD -----	2
4502-AL	PLUG, OIL -----	1
4502-AM	BOLT, ADJUSTING -----	1
4502-AN	PLATE, ADJUSTING -----	99
4502-AU	BOLT -----	4
4502-AP	NUT -----	1
4502-AW	NUT -----	1
4502-BH	PLATE -----	1
4502-DA	WASHER -----	2
4502-DE	BOLT, U -----	1

(MAIN) (21) G215

FIG. 4507
DRAG LINK & STEERING PIPING

 4507

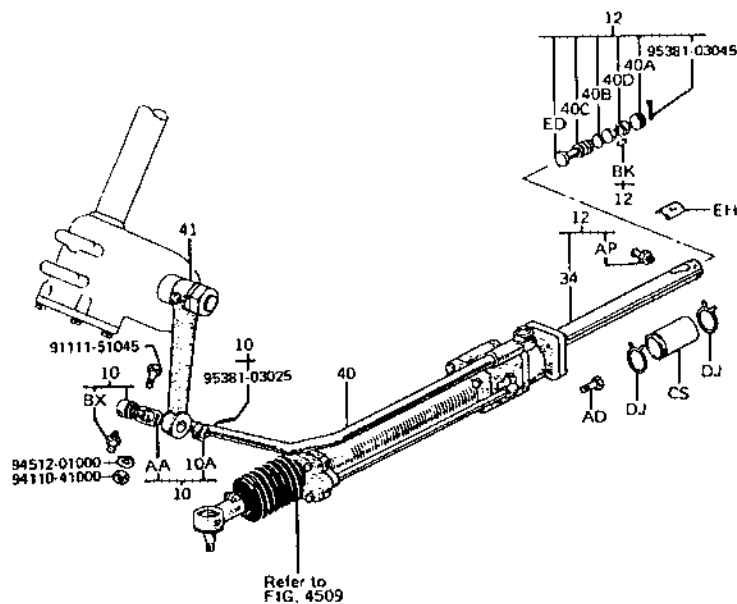

4507-044

PART NAME CODE	PART NAME	QTY
4507-10	END ASSY, DRAG LINK -----	1
4507-10A	NUT, CASTLE (FOR DRAG LINK END) -----	1
4507-12	ROD ASSY, STEERING BOOSTER -----	1
4507-34	ROD SUB-ASSY, STEERING BOOSTER -----	1
4507-40	ROD, DRAG LINK, NO.1 -----	1
4507-40A	PLUG (FOR DRAG LINK ROD) -----	1
4507-40B	SPACER, DRAG LINK BALL SEAT -----	1
4507-40C	SPRING, DRAG LINK -----	1
4507-40D	SEAT (FOR DRAG LINK ROD) -----	2
4507-41	ARM, PITMAN -----	1
4507-AA	CLAMP, END -----	1
4507-AU	BOLT -----	4
4507-AP	NIPPLE, GREASE -----	1
4507-BK	PLATE -----	1
4507-BX	FITTING, GREASE -----	1
4507-CS	SEAL, DRAG LINK DUST -----	1
4507-DJ	CLIP -----	2
4507-ED	SEAT, JOINT -----	1
4507-EH	PLATE, DRAG LINK DUST -----	1

(MAIN) (22)

G215

4509



G215

4509

PART NAME CODE	PART NAME	QTY
4509-CX	RING, D -----	1
4509-CY	PIPE, SIDE -----	1
4509-CZ	WASHER, SEAL -----	1


4510



G235

FIG. 4601
PARKING BRAKE

 4601

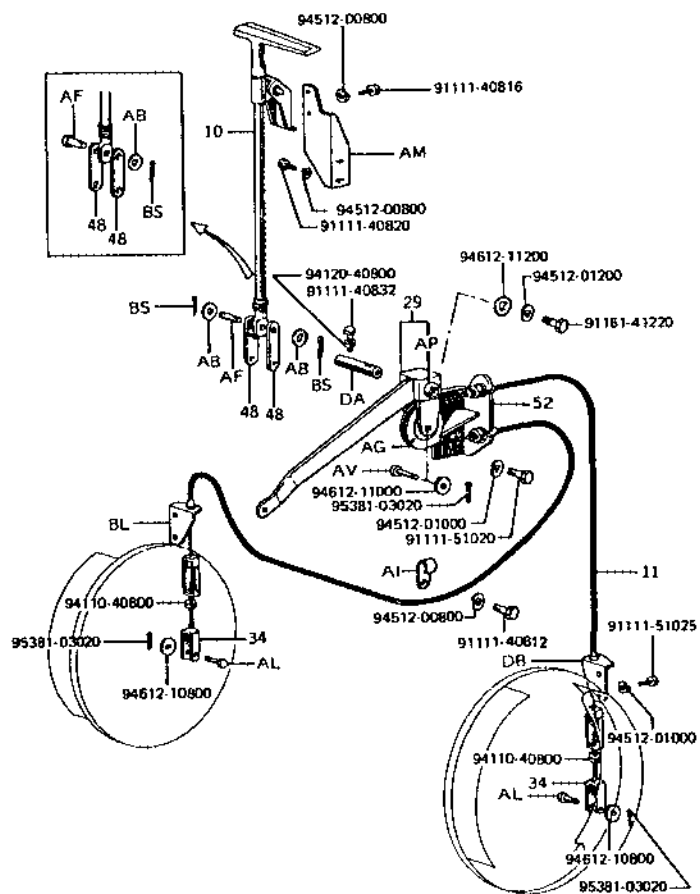


PART NAME CODE	PART NAME	QTY
4601-10	HANDLE ASSY, PARKING BRAKE	1
4601-11	WIRE ASSY, PARKING BRAKE	1
4601-29	LEVER SUB-ASSY, INTERMEDIATE	1
4601-34	ROD SUB-ASSY, PARKING BRAKE PULL, NO.1	2
4601-48	LINK, PARKING BRAKE CAM SUPPORT	2
4601-52	GUIDE SUB-ASSY, PARKING BRAKE CABLE	1
4601-AB	WASHER, PLATE	2
4601-AF	PIN, W/HOLE	2
4601-AG	PULLEY	1
4601-AI	CLAMP	1
4601-AL	PIN, W/HOLE	2
4601-AM	BRACKET, PARKING BRAKE	1
4601-AP	BUSHING	1
4601-AV	PIN, W/HOLE	1
4601-BL	PLATE, PARKING BRAKE	1
4601-BS	PIN, COTTER	2
4601-DA	SHAFT, PARKING BRAKE LEVER	1
4601-DB	PLATE, PARKING BRAKE, NO.2	1

(MAIN) (26) G215

FIG. 4701
BRAKE PEDAL

 4701

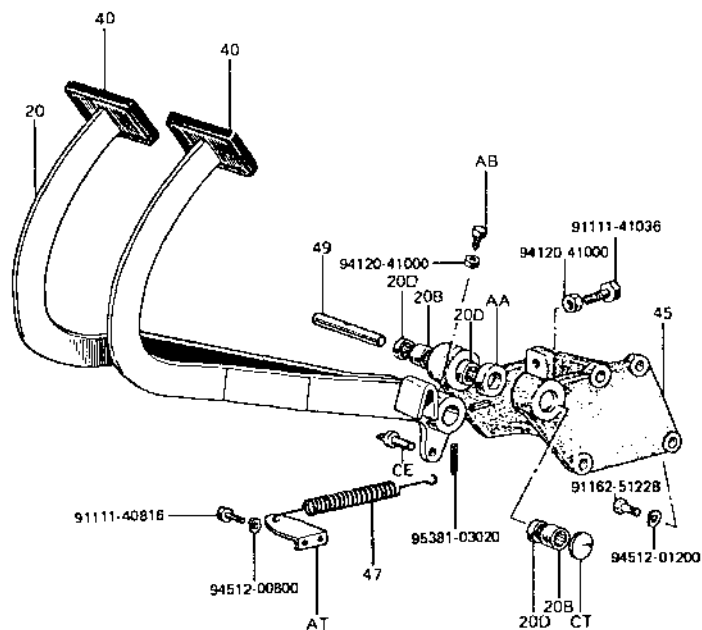

4701-055



PART NAME CODE	PART NAME	QTY
4701-20	PEDAL SUB-ASSY, BRAKE	1
4701-20B	BEARING (FOR BRAKE PEDAL)	2
4701-20D	SEAL, OIL	3
4701-40	PAD, PEDAL	2
4701-45	BRACKET, BRAKE PEDAL	1
4701-47	SPRING, TENSION (FOR PEDAL RETURN)	1
4701-49	SHAFT, BRAKE PEDAL	1
4701-AA	SPACER	1
4701-AB	BOLT	1
4701-AT	HANGER, BRAKE SPRING	1
4701-CE	PIN, CLEVIS	1
4701-CT	PLUG	1

(MAIN) (27)

G215

FIG. 4702
BRAKE MASTER CYLINDER

  4702

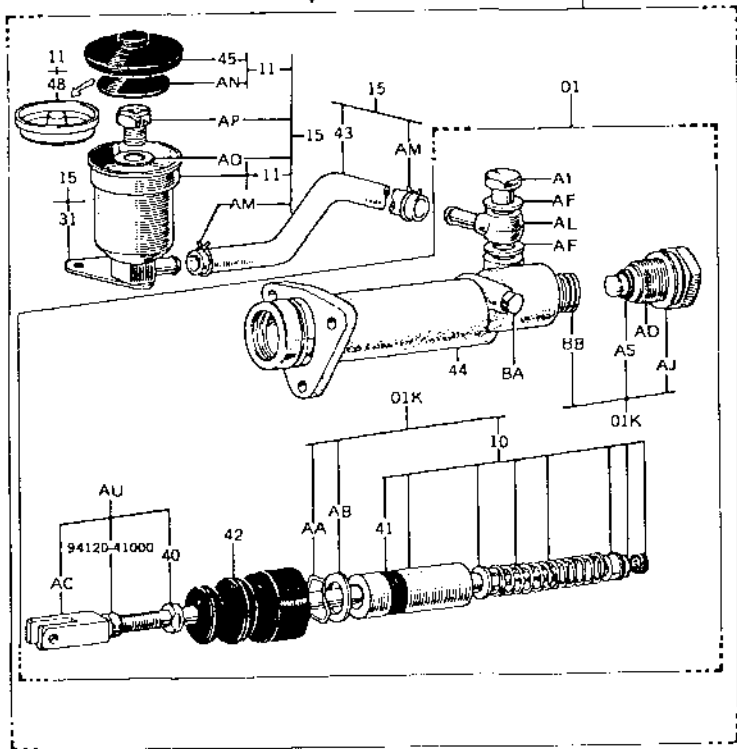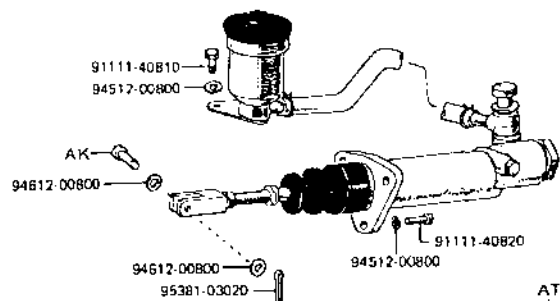


PART NAME CODE	PART NAME	QTY
4702-01	CYLINDER ASSY, MASTER	1
4702-01K	CYLINDER O/H KIT, MASTER	1
4702-10	PISTON SUB-ASSY, MASTER CYLINDER	1
4702-11	RESERVOIR SET, MASTER CYLINDER	1
4702-15	RESERVOIR SET, W/HOSE	1
4702-31	BRACKET SUB-ASSY, RESERVOIR	1
4702-40	ROD, PUSH	1
4702-41	CUP, CYLINDER	1
4702-42	BOOT	1
4702-43	HOSE, RESERVOIR	1
4702-44	BODY, MASTER CYLINDER	1
4702-45	CAP, RESERVOIR	1
4702-48	STRAINER	1
4702-AA	RING, HOLE SNAP	1
4702-AB	PLATE, PISTON STOP	1
4702-AC	CLEVIS, PUSH ROD	1
4702-AD	CAP, BREATHING PLUG	1
4702-AF	GASKET	2
4702-AI	BOLT, UNION	1
4702-AJ	GASKET	1
4702-AK	PIN	1
4702-AL	UNION	1
4702-AM	CLAMP	2
4702-AN	FLOAT	1
4702-AO	WASHER	1
4702-AP	BOLT	1
4702-AS	SEAT	1
4702-AT	CYLINDER ASSY, MASTER W/RESERVOIR	1
4702-AU	ROD SUB-ASSY, MASTER CYLINDER PUSH	1
4702-BA	PLUG	1
4702-BB	SPRING, COMPRESSION	1

(MAIN) (28) G215

FIG. 4714
BRAKE PIPE

 4714

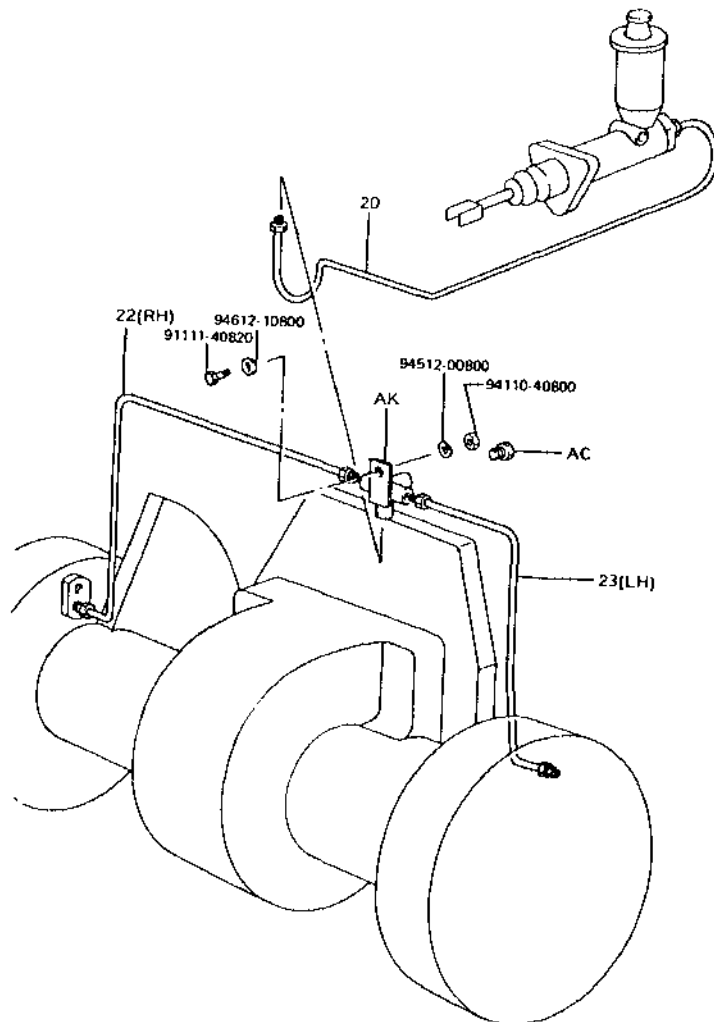

4714 (D41)


PART NAME CODE	PART NAME	QTY
4714-20	PIPE SUB-ASSY, BRAKE, MAIN NO.1	1
4714-22	PIPE SUB-ASSY, BRAKE, RH NO.1	1
4714-23	PIPE SUB-ASSY, BRAKE, LH NO.1	1
4714-AC	PLUG	1
4714-AK	4-WAY SUB-ASSY, BRAKE	1

(MAIN) (29)

G215

FIG. 4715
DRUM BRAKE

 4715

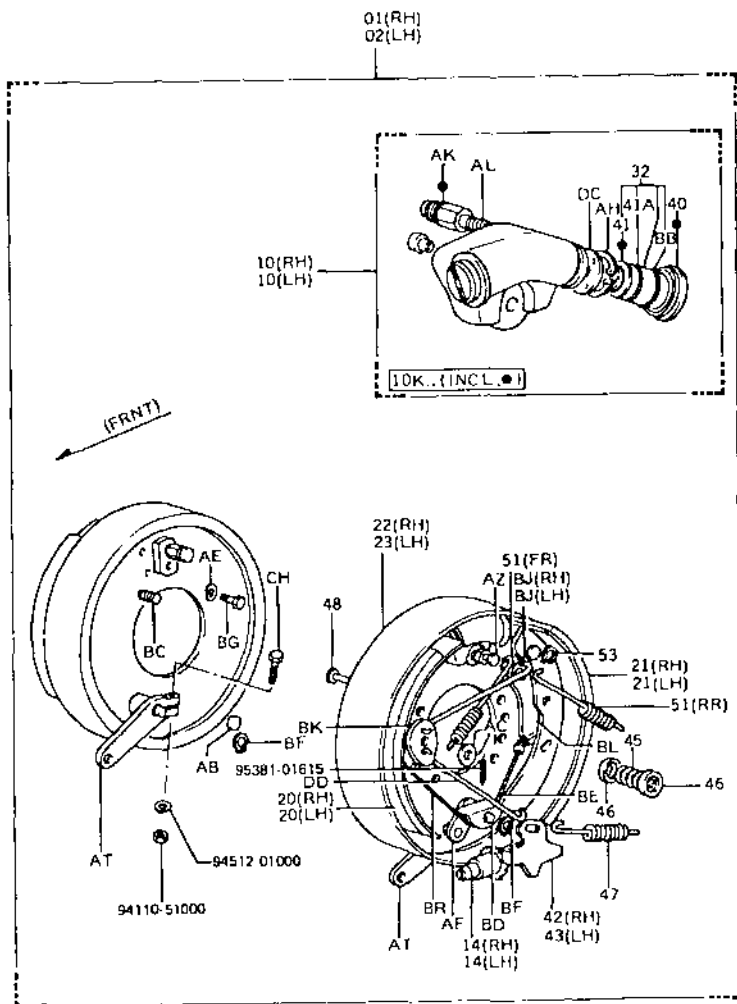

4715 032


PART NAME CODE	PART NAME	QTY
4715-01	BRAKE ASSY, RH	1
4715-02	BRAKE ASSY, LH	1
4715-10	CYLINDER ASSY, WHEEL	1
4715-10K	CYLINDER O/H KIT, WHEEL	2
4715-14	ADJUSTER ASSY	1
4715-20	SHOE SUB-ASSY (FOR FRONT OR UPPER)	1
4715-21	SHOE SUB-ASSY (FOR REAR OR LOWER)	1
4715-22	PLATE SUB-ASSY, BACKING, RH	1
4715-23	PLATE SUB-ASSY, BACKING, LH	1
4715-32	PISTON SUB-ASSY, WHEEL CYLINDER	4
4715-40	BOOT, WHEEL CYLINDER	4
4715-41	CUP, WHEEL CYLINDER PISTON	4
4715-42	LEVER, AUTOMATIC ADJUSTMENT, RH	1
4715-43	LEVER, AUTOMATIC ADJUSTMENT, LH	1
4715-45	SPRING, SHOE HOLD DOWN	4
4715-46	CUP, SHOE HOLD DOWN	8
4715-47	SPRING, ADJUSTER	2
4715-48	PIN, SHOE HOLD DOWN	4
4715-51	SPRING, ANCHOR TO SHOE	2
4715-53	RING, PARKING LEVER RETAINING	4
4715-AB	COVER, HOLE	2
4715-AC	WASHER	2
4715-AE	WASHER, SPRING	4
4715-AF	LEVER SUB-ASSY, PARKING	2
4715-AH	RING, SNAP	2
4715-AK	CAP, BLEEDER SCREW	4
4715-AL	SCREW, BLEEDER	2
4715-AT	LEVER, ACTUATOR	2
4715-AZ	BOLT, SHOE RETURN SPRING	2
4715-BB	RING, O	4
4715-BC	BOLT, PARKING LEVER	4
4715-BD	SHEAVE, PARKING BRAKE CABLE	2
4715-BE	RETAINER, PARKING BRAKE CABLE	2
4715-BF	RING, RETAINING	4
4715-BG	BOLT	4
4715-BJ	LINK, AUTOMATIC ADJUSTER, UPPER	1
4715-BK	LEVER, AUTOMATIC ADJUSTER	2
4715-BL	LEVER, PARKING	4
4715-BR	CABLE SUB-ASSY, PARKING BRAKE	2
4715-CH	BOLT	2
4715-UC	PLATE, BAFFLE	2
4715-DD	LINK AUTOMATIC ADJUSTER, LOWER	2

(MAIN) (30)

G215

FIG. 5101
FRAME & WEIGHT

 5101

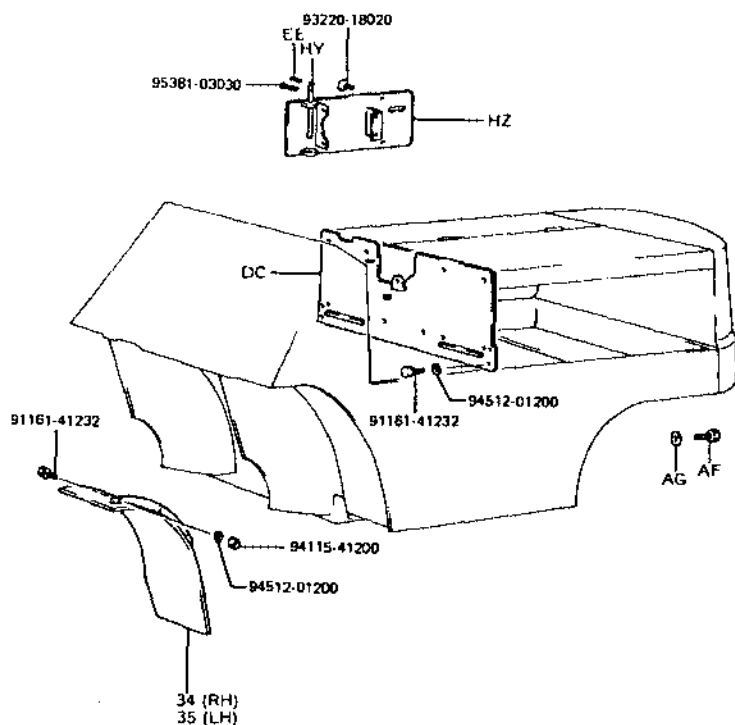


5101-056

PART NAME CODE	PART NAME	QTY
5101-34	GUARD SUB-ASSY, MUD, RH -----	1
5101-35	GUARD SUB-ASSY, MUD, LH -----	1
5101-AF	BOLT, HEXAGON -----	1- 3
5101-AG	WASHER, PLATE -----	3
5101-DC	PLATE, COVER -----	1
5101-EE	PIN, SPRING -----	1
5101-HY	SHAFT, SIDE DOOR -----	1
5101-HZ	DOOR SUB-ASSY, SIDE -----	1

(MAIN) (31) 6215

FIG. 5201
HOOD & HINGE

 5201

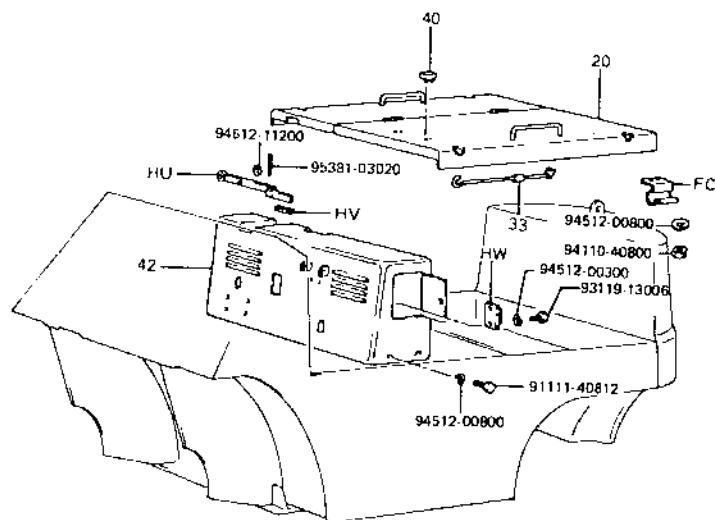


5201-055

PART NAME CODE	PART NAME	QTY
5201-20	HOOD SUB-ASSY, ENGINE (OR BATTERY) -----	1
5201-33	STAY SUB-ASSY, ENGINE (OR BATTERY) HOOD ----	1
5201-40	RUBBER, CUSHION (FOR HOOD) -----	2
5201-42	COVER SUB-ASSY, FRONT -----	1
5201-FC	BRACKET, STAY -----	2
5201-HU	LEVER SUB-ASSY, PLUG SEPARATOR -----	1
5201-HV	CLAMP, CORD -----	2
5201-HW	MAGNET -----	1

(MAIN) (32) G215

FIG. 5401
HEAD GUARD & ACCESSORY

 5401

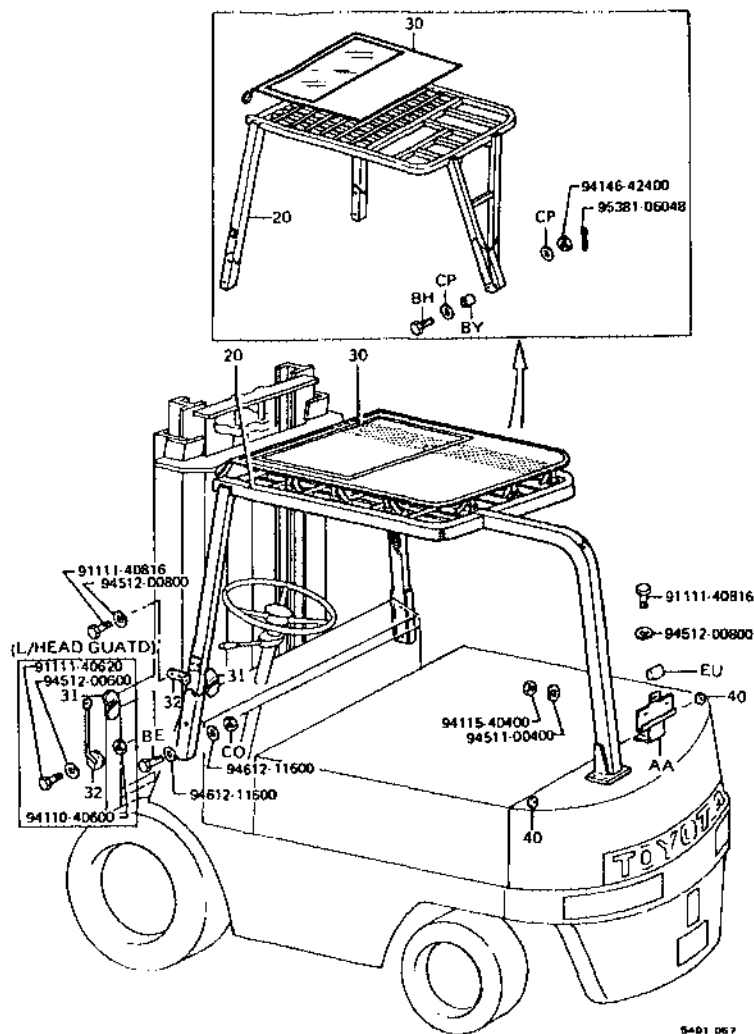


PART NAME CODE	PART NAME	QTY
5401-20	GUARD SUB-ASSY, HEAD	1
5401-30	SHEET SUB-ASSY, HEAD GUARD	1
5401-31	MIRROR SUB-ASSY, BACK	2
5401-32	BRACKET SUB-ASSY, BACK MIRROR	2
5401-40	REFLECTOR	2
5401-AA	BRACKET SUB-ASSY, LICENCE PLATE	1
5401-BE	BOLT	4
5401-BH	BOLT	1
5401-BY	SPACER	1
5401-CO	NUT	4
5401-CP	WASHER	2
5401-EU	COVER SUB-ASSY, LICENSE PLATE	1

(MAIN) (35) G215

FIG. 5405
INDICATOR PLATE

 5405

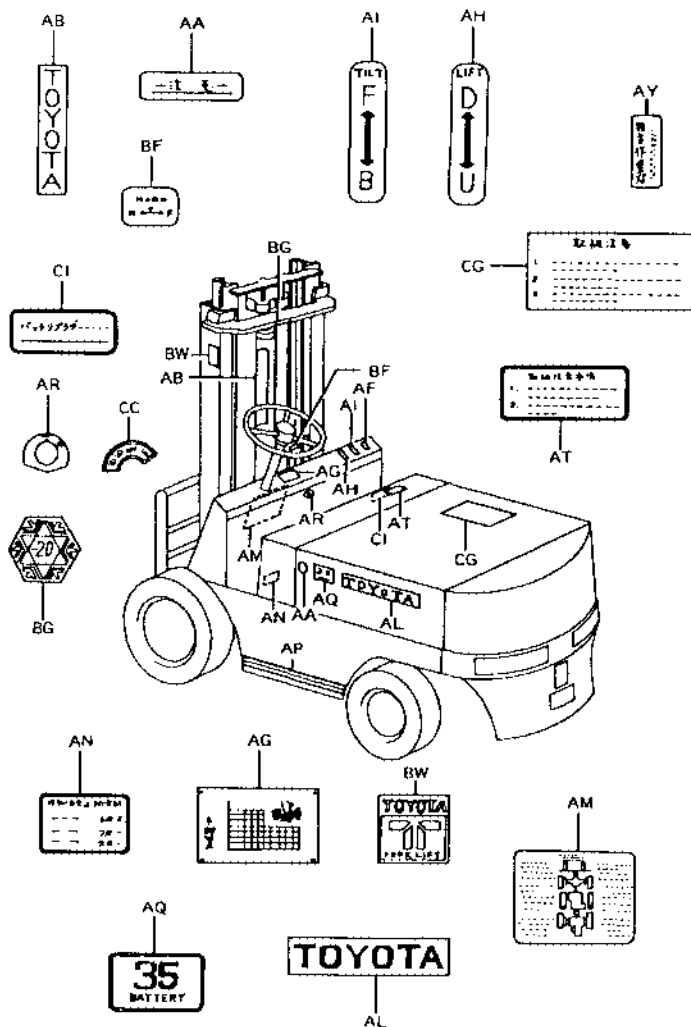


PART NAME CODE	PART NAME	QTY
5405-AA	PLATE, CAUTION	1
5405-AB	TOYOTA MARK	1
5405-AG	PLATE, LOAD INDICATOR	1
5405-AH	PLATE, LIFT INDICATOR	1
5405-AI	PLATE, TILT INDICATOR	1
5405-AL	TOYOTA MARK	2
5405-AM	PLATE, SERVICE INDICATOR	1
5405-AN	PLATE, INDICATOR	1
5405-AP	STRIPE	2
5405-AQ	PLATE, CAPACITY INDICATOR	2
5405-AR	PLATE, CAUTION	1
5405-AT	PLATE, CAUTION	1
5405-AY	PLATE, CAUTION	1
5405-BF	PLATE, DIRECTION LEVER INDICATOR	1
5405-BG	PLATE, TEMPERATURE	1
5405-BW	MARK, SYMBOL	2
5405-CC	PLATE, CAUTION	1
5405-CG	PLATE, CAUTION	1
5405-CI	PLATE, CAUTION	1

(MAIN) (36) G215

FIG. 5301
INSTRUMENT PANEL & FLOOR

 5301

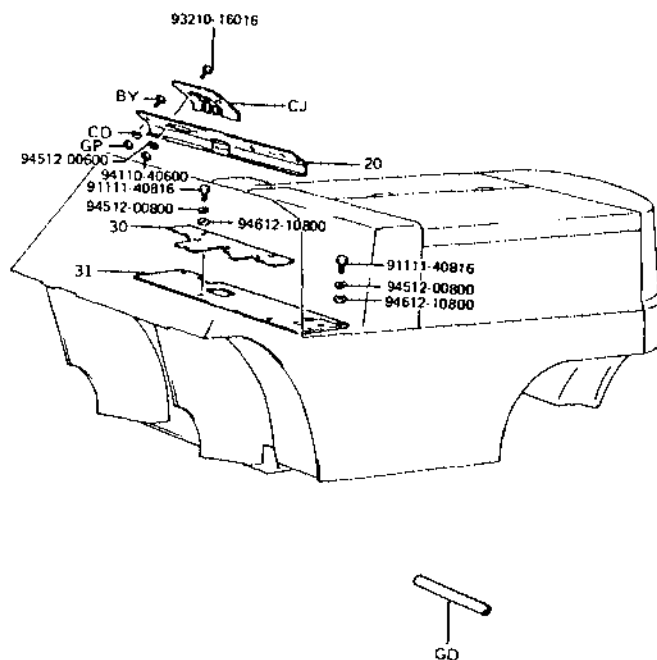

5301 069




PART NAME CODE	PART NAME	QTY
5301-20	PANEL SUB-ASSY, INSTRUMENT	1
5301-30	TOE-BOARD SUB-ASSY, NO.1	1
5301-31	TOE-BOARD SUB-ASSY, NO.2	1
5301-BY	STOPPER SUB-ASSY, SHIFT LEVER	7
5301-CD	WASHER, SPRING	7
5301-CJ	PANEL, CONTROL LEVER	1
5301-GD	INSULATOR	1
5301-GP	NUT	7

(MAIN) (33)

G215

FIG. 5308
DRIVER SEAT

   5308

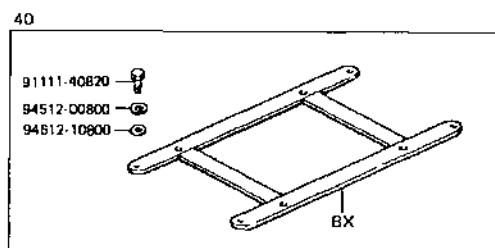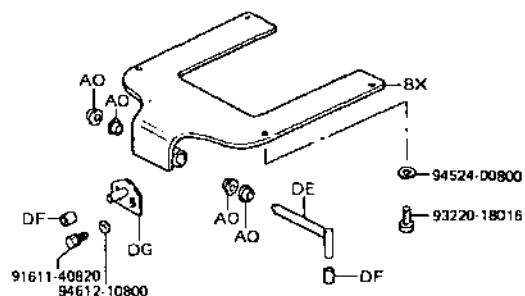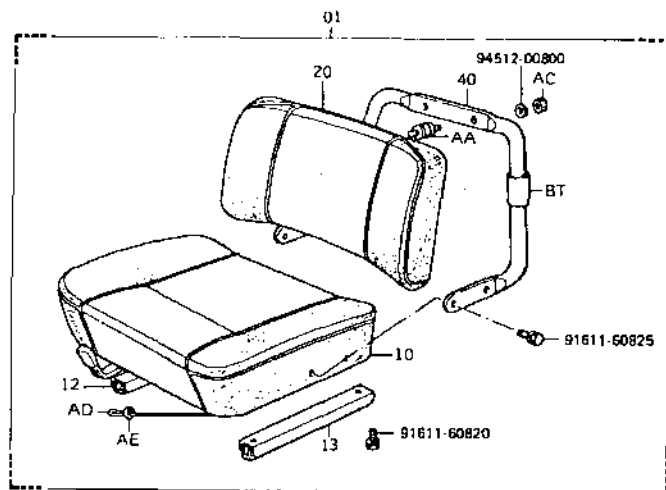


5308 D61

PART NAME CODE	PART NAME	QTY
5308-01	SEAT ASSY -----	1
5308-10	CUSHION ASSY -----	1
5308-11	TRACK ASSY -----	1
5308-12	TRACK ASSY, SEAT OUTER, RH -----	1
5308-13	TRACK ASSY, SEAT OUTER, LH -----	1
5308-20	SEAT SUB-ASSY, BACK -----	1
5308-40	FRAME, BACK SEAT -----	1
5308-AA	RUBBER, VIBRATION ISOLATOR -----	2
5308-AC	NUT, CAP -----	2
5308-AD	WIRE -----	1
5308-AE	WASHER -----	2
5308-AD	BUSHING -----	4
5308-BT	STOPPER -----	2
5308-BX	FRAME SUB-ASSY, SEAT -----	1
5308-DE	SHAFT SUB-ASSY, SEAT BRACKET -----	1
5308-DF	RUBBER -----	2
5308-DG	SUPPORT SUB-ASSY, SEAT BRACKET -----	1

(MAIN) (34) G215

FIG. 5602
WIRING & CLAMP

 5602

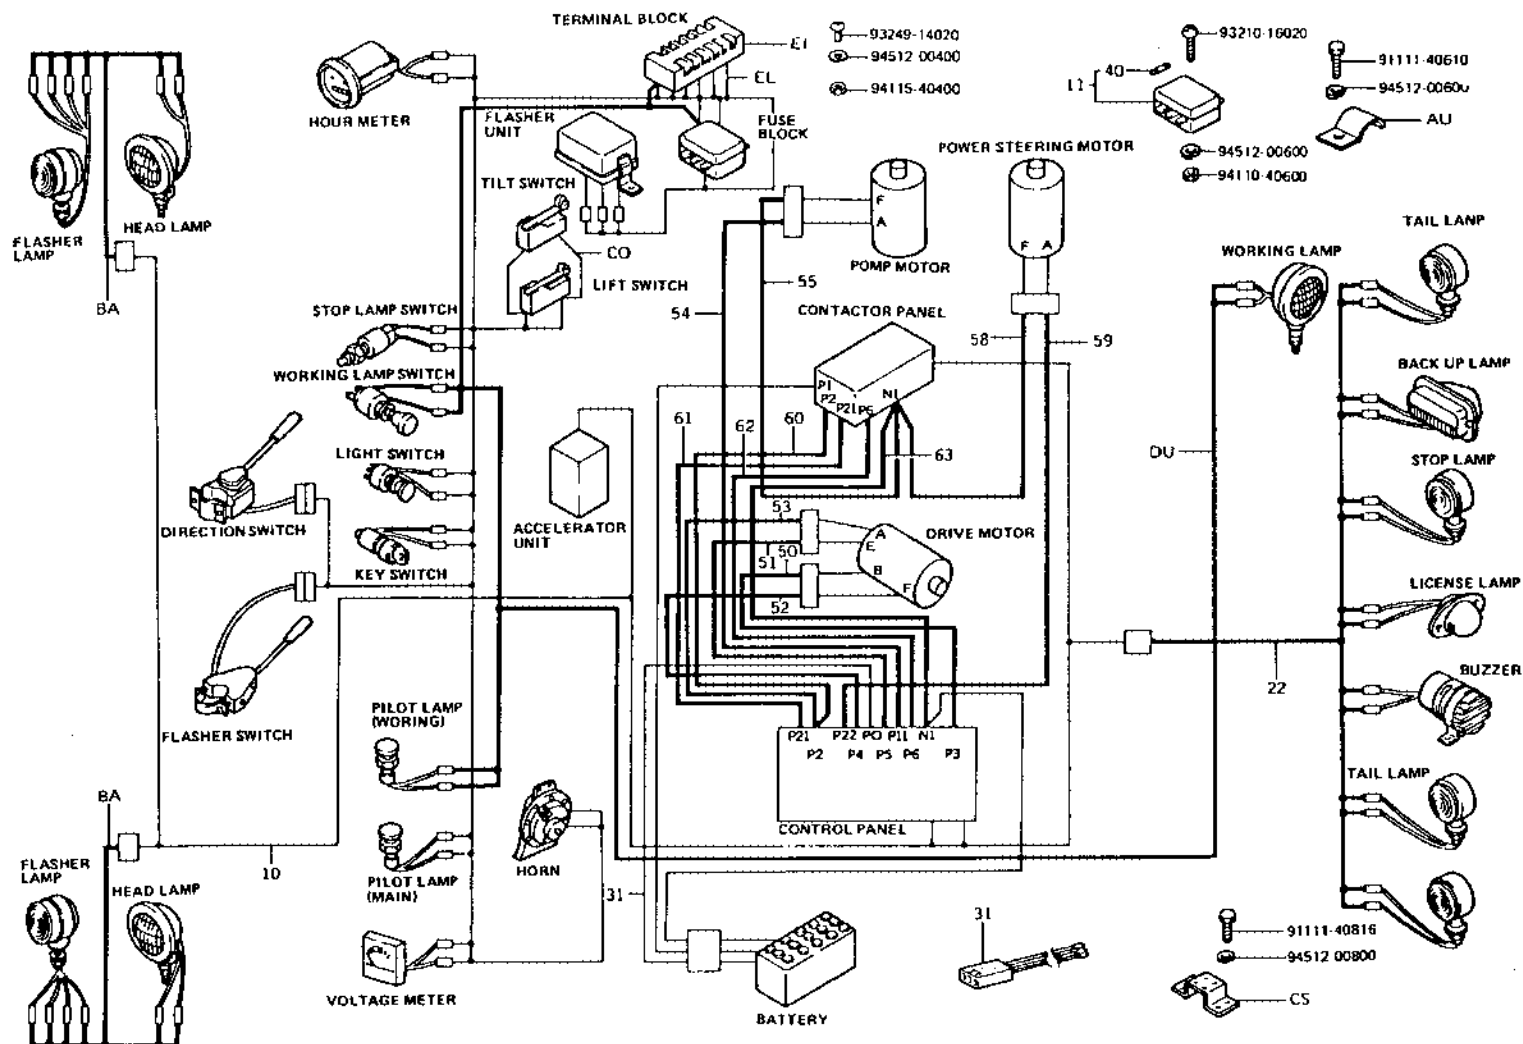


5602-060

5602

PART NAME CODE	PART NAME	QTY
5602-10	HARNESS ASSY, WIRING -----	1
5602-11	BLOCK ASSY, FUSE -----	1
5602-22	HARNESS SUB-ASSY, RR -----	1
5602-31	CONNECTOR SUB-ASSY, BATTERY -----	1
5602-40	FUSE -----	3
5602-50	WIRING, DRIVE MOTOR, NO.1 -----	1
5602-51	WIRING, DRIVE MOTOR, NO.2 -----	1
5602-52	WIRING, DRIVE MOTOR, NO.3 -----	1
5602-53	WIRING, DRIVE MOTOR, NO.4 -----	1
5602-54	WIRING, PUMP MOTOR, NO.1 -----	1
5602-55	WIRING, PUMP MOTOR, NO.2 -----	1
5602-58	WIRING, POWER STEERING, NO.1 -----	1
5602-59	WIRING, POWER STEERING, NO.2 -----	1
5602-60	WIRING, CONTROLLER, NO.1 -----	1
5602-61	WIRING, CONTROLLER, NO.2 -----	1
5602-62	WIRING, CONTROLLER, NO.3 -----	1
5602-63	WIRING, CONTROLLER, NO.3 -----	1
5602-AU	CLAMP -----	4
5602-BA	HARNESS ASSY -----	2
5602-C0	WIRING -----	2
5602-CS	BRACKET, BATTERY PLUG -----	1
5602-DU	HARNESS SUB-ASSY, WIRING (FOR WORKING LAMP) -----	1
5602-E1	BLOCK, TERMINAL -----	1
5602-EL	WIRING, TERMINAL BLOCK -----	1

(MAIN) (37) 6215

 561 1

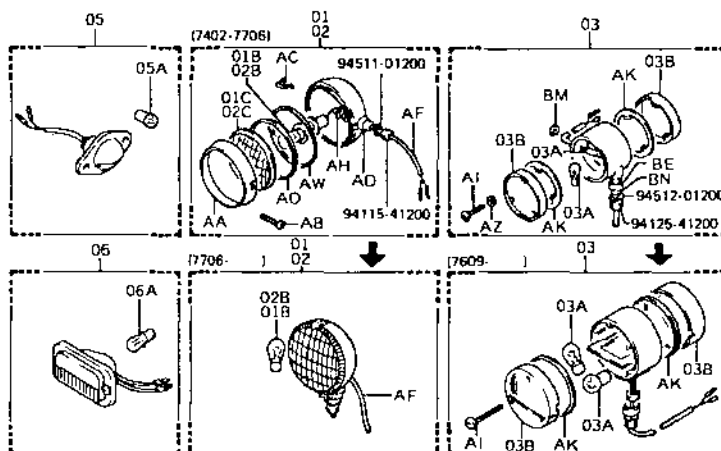

(MAIN) (38) G215

5612




(MAIN) (39)

~~SECRET~~

FIG-5702
METER & SWITCH

 5702

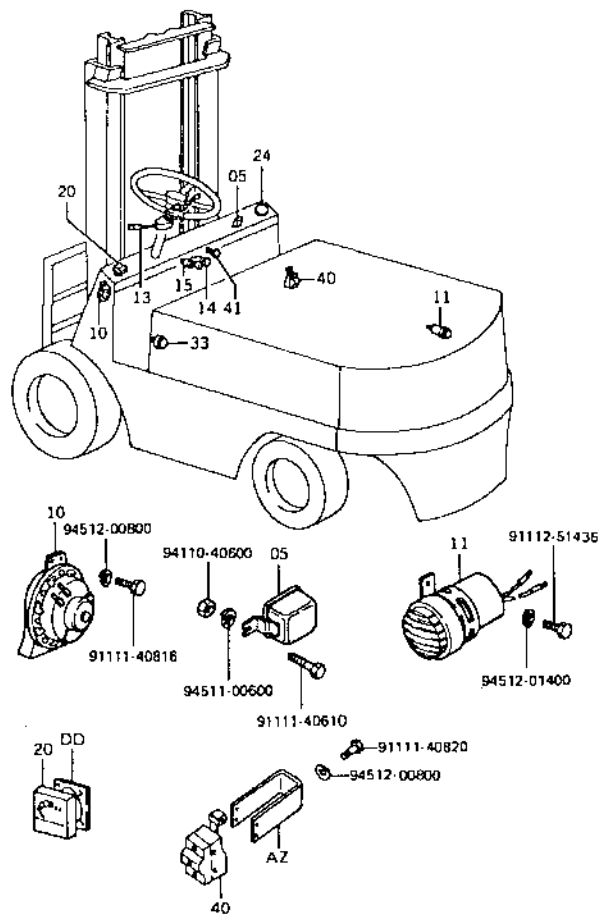

5702 023


PART NAME CODE	PART NAME	QTY
5702-05	RELAY ASSY, FLASHER -----	1
5702-10	HORN ASSY -----	1
5702-11	BUZZER ASSY, BACK -----	1
5702-13	SWITCH ASSY, TURN SIGNAL -----	1
5702-14	SWITCH ASSY, LIGHT CONTROL -----	1
5702-15	SWITCH ASSY, STARTER -----	1
5702-20	METER ASSY, VOLTAGE -----	1
5702-24	METER ASSY, HOUR -----	1
5702-33	SWITCH ASSY, STOP LAMP -----	1
5702-40	SWITCH ASSY, LIMIT (FOR PUMP MOTOR) -----	2
5702-41	SWITCH ASSY, WORKING -----	1
5702-AZ	BRACKET, LIMIT SWITCH -----	1
5702-DD	SHEET, RUBBER -----	1

(MAIN) (40) GZ15

FIG. 6101
MAST

6101

 FSV

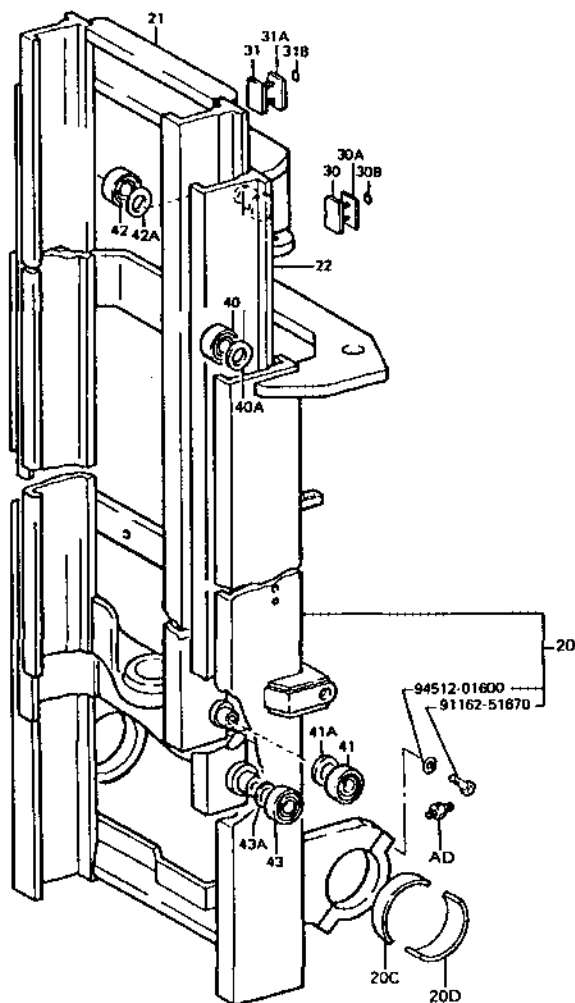

PART NAME CODE	PART NAME	QTY
6101-20	MAST SUB-ASSY, OUTER	1
6101-20C	METAL, MAST SUPPORT	2
6101-20D	STOPPER, MAST SUPPORT METAL	2
6101-21	MAST SUB-ASSY, INNER	1
6101-22	MAST SUB-ASSY, MIDDLE	1
6101-30	STRIP SUB-ASSY, OUTER MAST	2
6101-30A	SHIM, OUTER MAST STRIP	99
6101-30B	RING, O (FOR OUTER MAST STRIP)	4
6101-31	STRIP SUB-ASSY, MIDDLE MAST	2
6101-31A	SHIM, MIDDLE MAST STRIP	99
6101-31B	RING, O (FOR MIDDLE MAST STRIP)	4
6101-40	ROLLER, LIFT (FOR OUTER MAST)	2
6101-40A	SHIM, LIFT ROLLER (FOR OUTER MAST)	99
6101-41	ROLLER, LIFT (FOR INNER MAST)	2
6101-41A	SHIM, LIFT ROLLER (FOR INNER MAST)	99
6101-42	ROLLER, LIFT (FOR MIDDLE MAST UPPER)	2
6101-42A	SHIM, LIFT ROLLER (FOR MIDDLE MAST UPPER)	99
6101-43	ROLLER, LIFT (FOR MIDDLE MAST LOWER)	2
6101-43A	SHIM, LIFT ROLLER (FOR MIDDLE MAST LOWER)	99
6101-AD	FITTING, GREASE	2

 
 
(FSV) (1)

G215


6301 LIFT BRACKET & FORK

6301


FSV

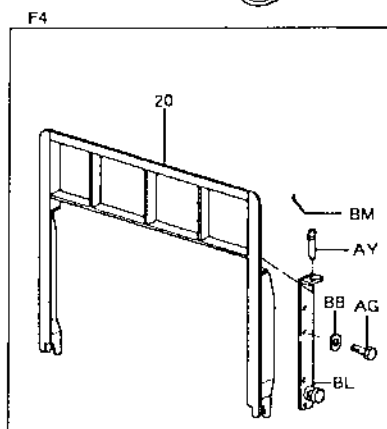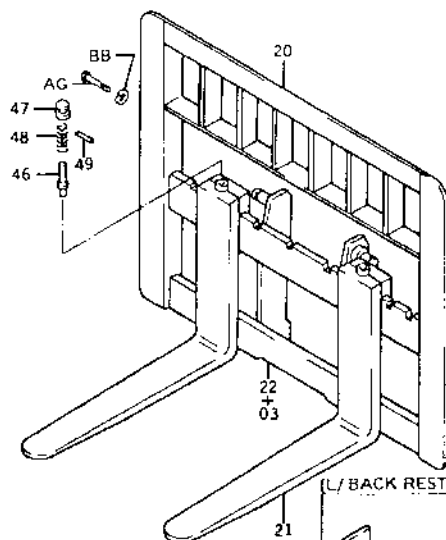


(L/BACK REST)

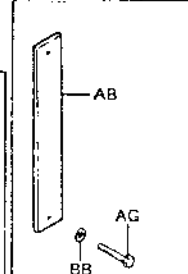 

 
35..F4,M (7402-8011)

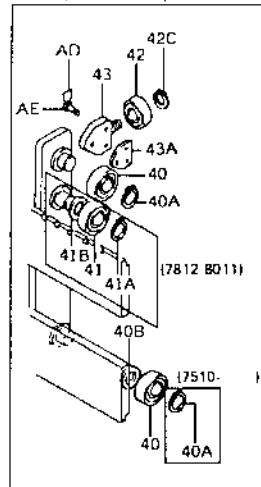

 
40..F4(7402 8011)

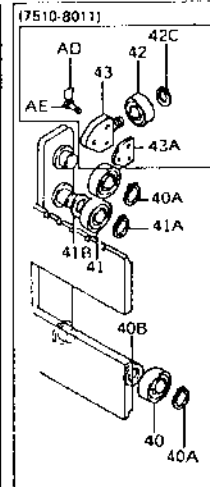


FS2 (7402-8011)

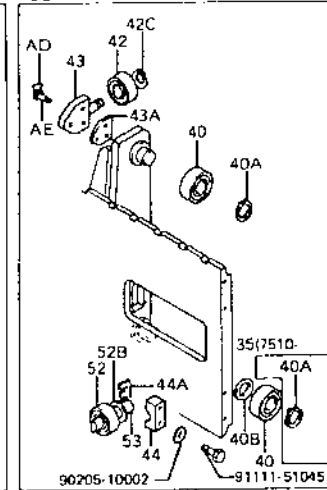 

 
40..M (7402-8011)

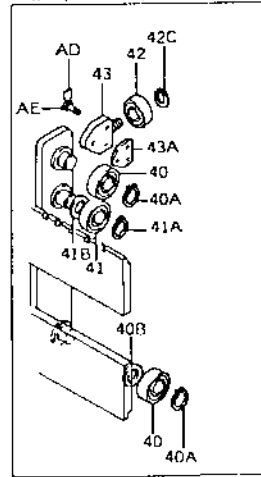

V (7908-) FSV, FV (8011-)

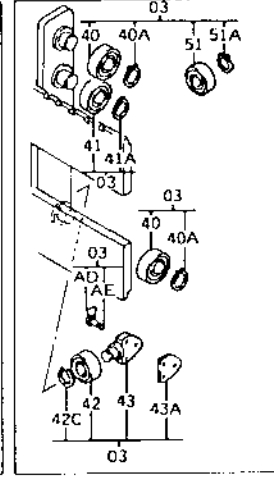 

M.. (8011-)

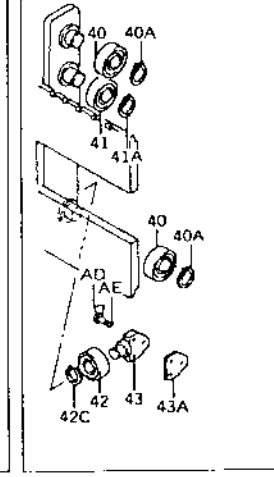 

6301 123

6301

PART NAME CODE	PART NAME	QTY
6301-03	BRACKET ASSY, LIFT -----	1
6301-20	BACKREST SUB-ASSY -----	1
6301-21	FORK SUB-ASSY -----	2
6301-22	BRACKET SUB-ASSY, LIFT -----	1
6301-40	ROLLER, LIFT (UPPER, LOWER) -----	4
6301-40A	RING, SHAFT SNAP (UPPER, LOWER) -----	4
6301-41	ROLLER, LIFT (CENTER) -----	2
6301-41A	RING, SHAFT SNAP (CENTER) -----	2
6301-42	ROLLER, SIDE -----	2- 4
6301-42C	RING, SHAFT SNAP (FOR SIDE ROLLER) -----	2
6301-43	SHAFT, SIDE ROLLER -----	2- 4
6301-43A	SHIM (FOR SIDE ROLLER SHAFT) -----	99
6301-46	PIN, FORK STOPPER -----	2
6301-47	KNOB, FORK STOPPER PIN -----	2
6301-48	SPRING, FORK STOPPER PIN -----	2
6301-49	PIN, SPRING (FOR FORK STOPPER PIN) -----	2
6301-51	ROLLER, SIDE (OUTER) -----	2
6301-51A	RING, SHAFT SNAP -----	2
6301-AD	WIRE, LOCK -----	2
6301-AE	BOLT -----	6
6301-AG	BOLT -----	8
6301-BB	WASHER -----	8

(FSV) (2) G215

6302


PART NAME CODE	PART NAME	QTY
6302-21	CHAIN SUB-ASSY (FRONT) -----	2
6302-21K	BOLT KIT, CHAIN ANCHOR, NO.1 (FRONT) -----	2
6302-21L	BOLT KIT, CHAIN ANCHOR, NO.2 (FRONT) -----	2
6302-22	CHAIN SUB-ASSY (REAR) -----	2
6302-22K	BOLT KIT, CHAIN ANCHOR, NO.1 (REAR) -----	2
6302-22L	BOLT KIT, CHAIN ANCHOR, NO.2 (REAR) -----	2
6302-41	WHEEL, CHAIN (FRONT) -----	2
6302-41A	RING, SHAFT SNAP (FOR FRONT CHAIN WHEEL) ---	2
6302-42	WHEEL, CHAIN (REAR) -----	2
6302-42A	RING, SHAFT SNAP (FOR CHAIN WHEEL) -----	2
6302-43	SUPPORT, CHAIN WHEEL -----	1
6302-AR	NUT, LOCK -----	4

(FSV) (3) G215

FIG-6502
FRONT LIFT CYLINDER

6502

 FSV

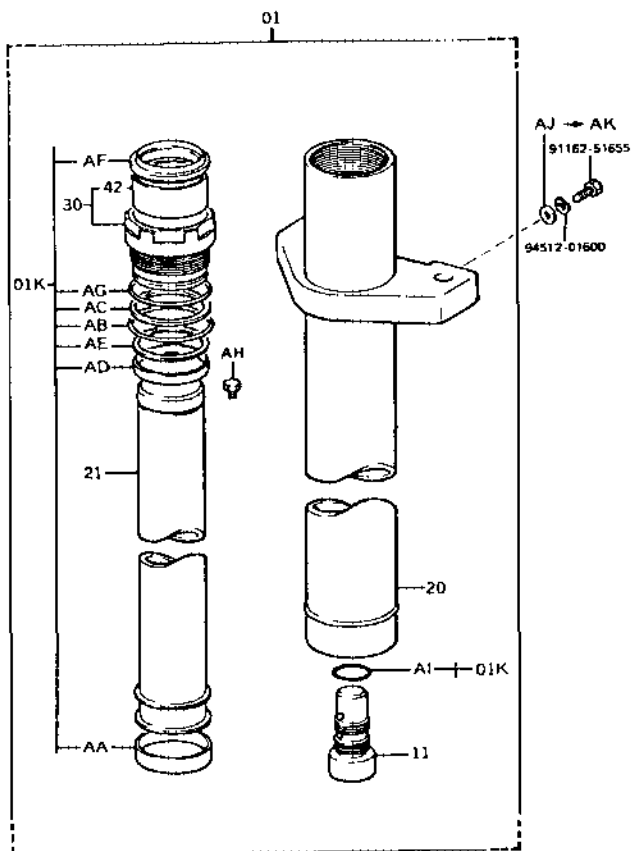

6502-022


PART NAME CODE	PART NAME	QTY
6502-01	CYLINDER ASSY, LIFT	1
6502-01K	CYLINDER O/H KIT, LIFT	1
6502-11	VALVE ASSY, SAFETY DOWN	1
6502-20	CYLINDER SUB-ASSY, LIFT	1
6502-21	ROD SUB-ASSY, LIFT CYLINDER	1
6502-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD	1
6502-42	SLEEVE, LIFT CYLINDER ROD GUIDE	1
6502-AA	BUSHING	1
6502-AB	RING, O	1
6502-AC	RING, BACK UP	1
6502-AD	PACKING, U	1
6502-AE	RING, BACK UP	1
6502-AF	SEAL, DUST	1
6502-AG	RING, O	1
6502-AH	PLUG	1
6502-AI	RING, O	1
6502-AK	WASHER, PLATE	2

(FSV) (4) 6215

FIG. 6503
REAR LIFT CYLINDER

6503

 FSV

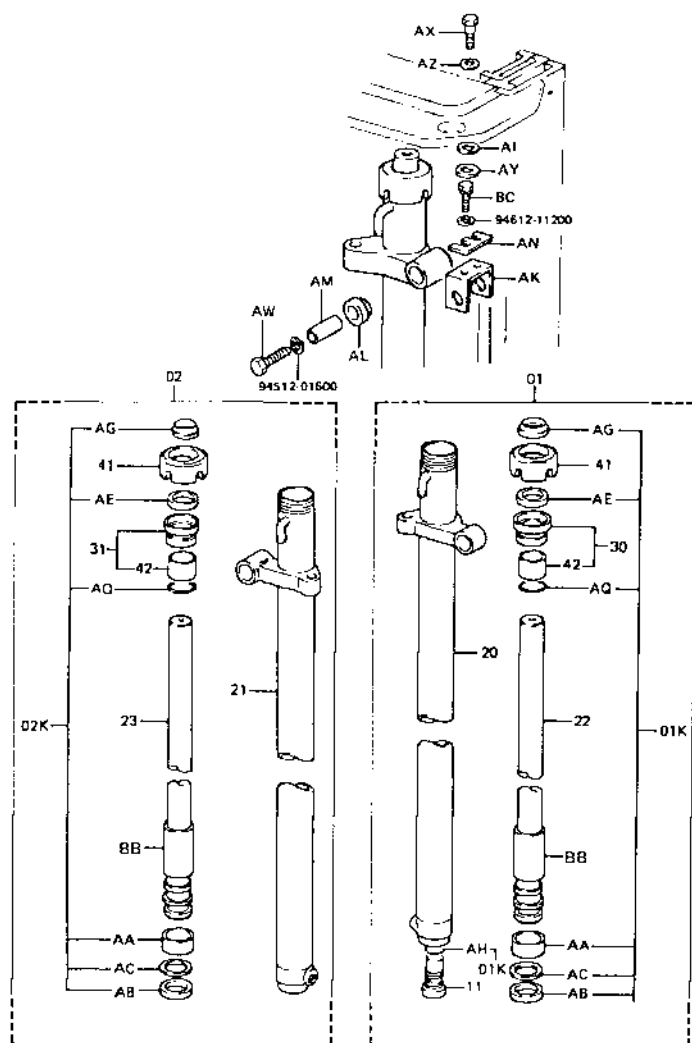

6501 031

PART NAME CODE	PART NAME	QTY
6503-01	CYLINDER ASSY, LIFT, RH	1
6503-01K	CYLINDER O/H KIT, LIFT, RH	1
6503-02	CYLINDER ASSY, LIFT, LH	1
6503-02K	CYLINDER O/H KIT, LIFT, LH	1
6503-11	VALVE ASSY, SAFETY DOWN	1
6503-20	CYLINDER SUB-ASSY, LIFT, RH	1
6503-21	CYLINDER SUB-ASSY, LIFT, LH	1
6503-22	ROD SUB-ASSY, LIFT CYLINDER, RH	1
6503-23	ROD SUB-ASSY, LIFT CYLINDER, LH	1
6503-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD, RH	1
6503-31	GUIDE SUB-ASSY, LIFT CYLINDER ROD, LH	1
6503-41	COVER, LIFT CYLINDER	2
6503-42	SLEEVE, LIFT CYLINDER ROD GUIDE	2
6503-AA	RING, WEAR	2
6503-AB	PACKING, U	2
6503-AC	RING, BACK UP	2
6503-AE	PACKING, U	2
6503-AG	SEAL, DUST	2
6503-AH	RING, O	1
6503-AI	SHIM	99
6503-AK	BRACKET SUB-ASSY, LIFT CYLINDER	2
6503-AL	BUSHING	4
6503-AM	SPACER	2
6503-AN	SHIM	99
6503-AT	RING, O	2
6503-AV	BOLT	2
6503-AW	BOLT	2
6503-AX	WASHER	2
6503-AY	RUBBER	2
6503-AZ	SPACER, LIFT CYLINDER	2

(FSV) (5)

6215

FIG. 6511
TILT CYLINDER

6511


FSV

FSV

テイルト角度表
TABLE OF TILT RANGE

生産期間 PROD DATE	型 式 MODELS	タイヤ TIRE	揚 高 LIFTING HEIGHT	備 考 DISCRPTION	テイルト角 TILT RANGE
7402-8011	F4	SINGLE	H2000-H3500		6D - 12D
7402-8011	F4	SINGLE	H3700-H4500		6D - 6D
7402-8011	F4	DOUBLE			6D - 12D
7402-8011	FS2		H3500-H4800		6D - 5D
7402-8011	FS2		H5000-H6500		3D - 3D
7402-	M	SINGLE	H2000-H3500		6D - 12D
7402-	M	SINGLE	H3700-H5000		6D - 6D
7402-	M	DOUBLE	H2000-H4500		6D - 12D
7402-	35..M	DOUBLE	H5000-H5500		6D - 6D
7402-	40..M	DOUBLE	H5000-H5500		6D - 12D
7908-	V	SINGLE	H2000-H3500		6D - 10D
7908-	V	SINGLE	H3700-H5000		6D - 6D
7908-	V	DOUBLE	H2000-H4500		6D - 10D
7908-	V	DOUBLE	H5000		5D - 6D
8011-	FSV		H3700-H4700		6D - 6D
8011-	FSV		H5000-H6000		3D - 3D
8011-	FV	SINGLE	H2000-H3500		6D - 10D
8011-	FV	SINGLE	H3700-H4000		6D - 6D
8011-	FV	DOUBLE	H2000-H4000		6D - 10D

 6511-055

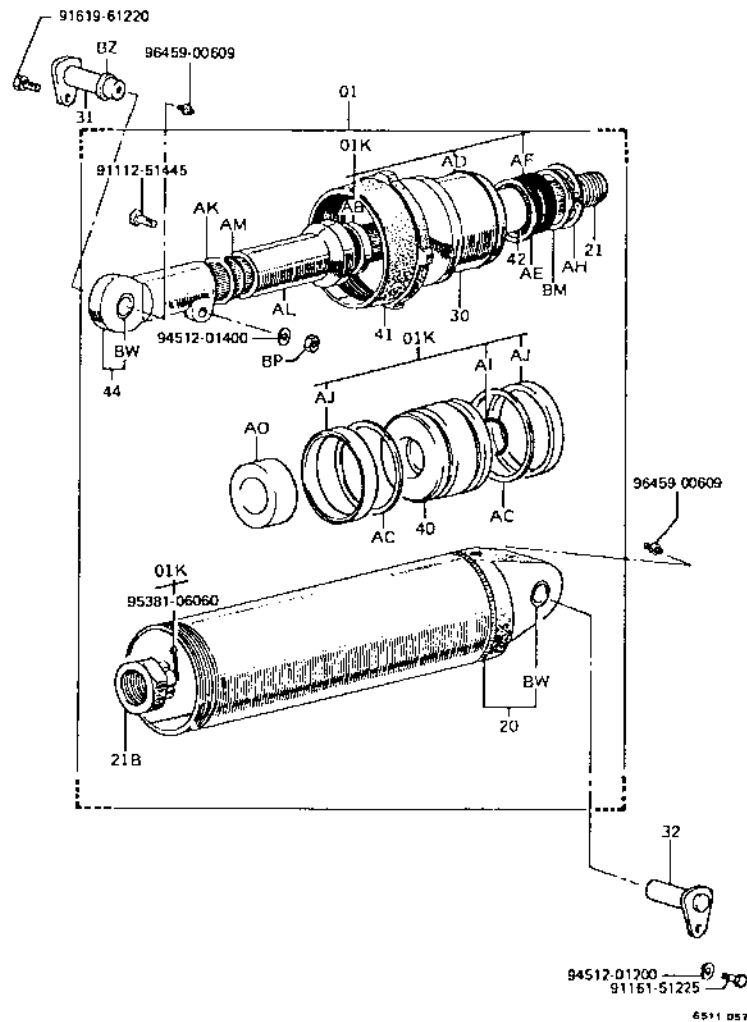

6511



PART NAME CODE	PART NAME	QTY
6511-01	CYLINDER ASSY, TILT -----	1
6511-01K	CYLINDER O/H KIT, TILT -----	2
6511-20	CYLINDER SUB-ASSY, TILT -----	1
6511-21	ROD SUB-ASSY, TILT CYLINDER PISTON -----	2
6511-21R	NUT, CASTLE -----	2
6511-30	GUIDE SUB-ASSY, TILT CYLINDER ROD -----	2
6511-31	PIN SUB-ASSY, TILT CYLINDER, FR -----	2
6511-40	PISTON, TILT CYLINDER -----	2
6511-41	COVER, TILT CYLINDER -----	2
6511-42	SLEEVE, TILT CYLINDER ROD GUIDE -----	2
6511-44	JOINT, PISTON ROD -----	2
6511-AB	SEAL, DUST -----	2
6511-AC	RING, BACK UP -----	4
6511-AD	RING, O -----	2
6511-AE	RING, BACK UP -----	2
6511-AF	PACKING, U -----	2
6511-AH	RING, HOLE SNAP -----	2
6511-AI	RING, O -----	2
6511-AJ	PACKING, U -----	4
6511-AK	SHIM, TILT CONTROL -----	99
6511-AL	SPACER, TILT CONTROL -----	2
6511-AM	RING, U -----	4
6511-AD	SPACER, TILT CONTROL -----	2
6511-BM	RING, PACKING STOP -----	2
6511-BP	NUT -----	2
6511-BW	BEARING -----	4
6511-BZ	SPACER -----	8

(FSV) (9) 6215

FIG. 6701
OIL PUMP

6701

  FSV

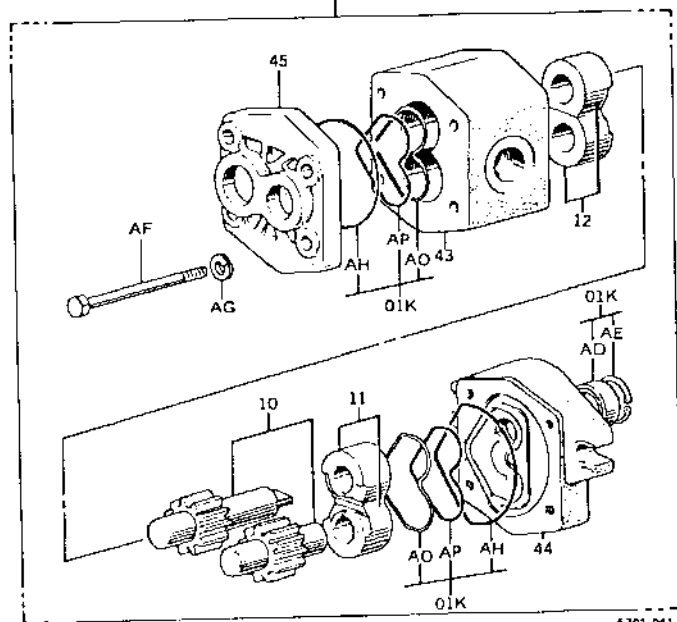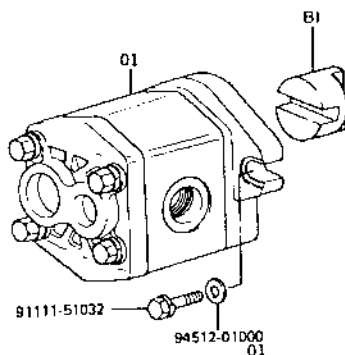

6701-041

PART NAME CODE	PART NAME	QTY
6701-01	PUMP ASSY, OIL	1
6701-01K	PUMP O/H KIT, OIL	1
6701-10	GEAR SET	1
6701-11	BUSH SET, NO.1	1
6701-12	BUSH SET, NO.2	1
6701-43	BODY	1
6701-44	FLANGE, MOUNTING	1
6701-45	COVER	1
6701-AD	SEAL, OIL	1
6701-AE	RING, SNAP	1
6701-AF	BOLT	4
6701-AG	WASHER, SPRING	4
6701-AH	SEAL, BODY	2
6701-AG	SPACER	2
6701-AP	GASKET	2
6701-B1	JOINT, OLDHAM	1

(FSV) (10)

G215

6705

This diagram shows an exploded view of a mechanical assembly. The central component is a large, complex housing or manifold. Various parts are shown in their relative positions, with dashed lines indicating their assembly paths. The components are labeled as follows:

- Top Section:** AO, AA, 01K, AD, CF, CF, BO, AX, FU, AG, CE, AX + 01K.
- Left Section:** CL, 01K + AP, 20, 01K + AP, 01K + AI, BL, BH, 01K + 50A, 50A, 01K, DY, GI, EG, 50A, 01K.
- Bottom Section:** AH, BK, AJ, 01K + AY, 41, 01K + AE, AK, 40, CL, 40, CL, EB, CL.

91619-41225

8705-190

PART NAME CODE	PART NAME	QTY
6705-01	VALVE ASSY, OIL CONTROL	1
6705-01K	VALVE O/H KIT, OIL CONTROL	1
6705-20	VALVE SET, PILOT RELIEF, NO.1	1
6705-40	COVER, SPRING	2
6705-41	SPRING, COMPRESSION (FOR SPOOL RETURN)	2
6705-50A	RING, O, NO.1 (FOR VALVE FITTING)	4
6705-AA	BOLT	1
6705-AD	RING, O	1
6705-AE	RING, O	3
6705-AG	SPRING	1
6705-AH	SPRING, COMPRESSION	1
6705-AI	RING, O	1
6705-AJ	STOPPER	1
6705-AK	HOLDER, SPRING	4
6705-AQ	PLUG	2
6705-AP	RING, O	2
6705-AX	RING, O	2
6705-AY	RING, O	1
6705-BH	PLUG	1
6705-BK	VALVE, CHECK	1
6705-BL	SEAT, INSERT	2
6705-BO	SPRING	1
6705-CE	CAP	1
6705-CF	SEAL	2
6705-CK	SLEEVE	1
6705-CL	BOLT	14
6705-DY	ELBOW	2
6705-EB	NIPPLE	1
6705-EG	ELBOW	1
6705-FU	CAP	1
6705-G1	ELBOW	1


(F5V) (II)

6215

FIG-6709
OIL CONTROL VALVE LINK

6709

 F5V

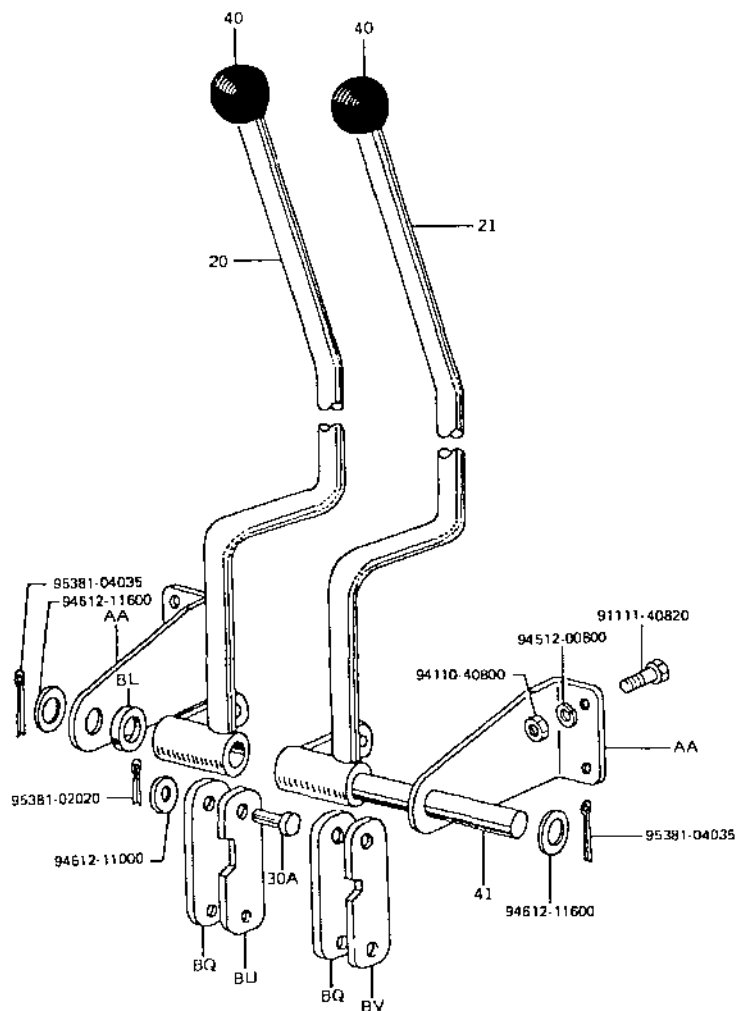

6709 673

PART NAME CODE	PART NAME	QTY
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2	1
6709-30A	PIN (FOR CONTROL VALVE LEVER ROD)	4
6709-40	KNOB, OIL CONTROL VALVE LEVER	2
6709-41	PIN, OIL CONTROL VALVE LEVER	1
6709-AA	BRACKET SUB-ASSY	1
6709-BL	COLLAR, SUPPORTING PIN	1
6709-BQ	LINK, OIL CONTROL VALVE LEVER	2
6709-BU	LINK, LIFT CONTROL LEVER	1
6709-BV	LINK, TILT CONTROL LEVER	1

(F5V) (12)

G215

6801

6801

PART NAME CODE	PART NAME	QTY
6801-10	FILTER ASSY, SUCTION	1
6801-11	FILTER ASSY, RETURN	1
6801-12	VALVE ASSY, FLOW REGULATOR	1
6801-15A	PLUG (FOR OIL TANK DRAIN)	1
6801-15B	GASKET (FOR OIL TANK DRAIN PLUG)	1
6801-20A	RING, O (FOR OIL PUMP INLET)	1
6801-23	PIPE SUB-ASSY (TILT CYLINDER FRONT)	1
6801-24	PIPE SUB-ASSY (TILT CYLINDER REAR)	1
6801-26A	PACKING, OIL TANK COVER	2
6801-27	CAP SUB-ASSY, OIL TANK	1
6801-28	CAGE SUB-ASSY, OIL LEVEL	1
6801-30	HOSE, HIGH PRESSURE, NO.1 (PUMP TO VALVE)	1
6801-32	HOSE, HIGH PRESSURE, NO.1 (VALVE TO LIFT)	1
6801-33	HOSE, HIGH PRESSURE, NO.2 (VALVE TO LIFT)	1
6801-34	HOSE, HIGH PRESSURE, NO.1 (TILT FRONT)	2
6801-35	HOSE, HIGH PRESSURE, NO.1 (TILT REAR)	2
6801-45	FITTING (FOR TILT CYLINDER)	2
6801-46	FITTING (FOR LIFT CYLINDER)	2
6801-48	HOSE, LOW PRESSURE (TANK TO P/S PUMP)	1
6801-48A	CLAMP	2
6801-50	HOSE, LOW PRESSURE, NO.1 (LIFT TO TANK)	2
6801-50A	CLAMP (FOR LIFT TO TANK NO.1 HOSE)	4
6801-51	HOSE, LOW PRESSURE, NO.1 (VALVE TO TANK)	1
6801-51A	CLAMP (FOR VALVE TO TANK NO.1 HOSE)	2
6801-54	HOSE, LOW PRESSURE NO.1 (RELIEF TO TANK)	1
6801-54A	CLAMP (FOR RELIEF TO TANK NO.1 HOSE)	2
6801-55	HOSE, LOW PRESSURE (TANK TO PUMP)	1
6801-55A	CLAMP (FOR TANK TO PUMP HOSE)	2
6801-59	HOSE, LOW PRESSURE, NO.2 (LIFT TO TANK)	1
6801-59A	CLAMP (FOR LIFT TO TANK NO.2 HOSE)	2
6801-60A	PACKING, OIL TANK RETAINER	1
6801-69	HOSE, HIGH PRESSURE (P/S PUMP TO CYLINDER)	1
6801-75	HOSE, HIGH PRESSURE (STEERING TO RELIEF)	1
6801-AA	BAND, LIFT CYLINDER OVERFLOW HOSE	6
6801-AB	CLAMP	1
6801-AC	RING, O	1
6801-AD	BOLT	6
6801-AI	RING, O	2
6801-AM	CLAMP, HOSE	3
6801-AP	PIPE	1
6801-AR	FITTING	1
6801-AT	FITTING	2
6801-AU	RING, O	2
6801-AV	RING, O	1
6801-AW	ELBOW SUB-ASSY, 3-WAY	1
6801-AX	CAP, OIL TANK OVERFLOW PIPE	1
6801-AZ	SPRING, COMPRESSION	1
6801-BA	PLUG	1
6801-BB	SPRING, COMPRESSION	1
6801-BC	BALL, STEEL	1
6801-BD	RING, O	1
6801-BM	NUT	2
6801-BU	RING, O	1

(FSV) (13) G215


PART NAME CODE	PART NAME	QTY
6801-BT	WASHER	6
6801-BW	BOLT	2
6801-BX	FITTING	1
6801-CC	CASE, OIL FILTER	1
6801-CH	FITTING	1
6801-CK	FILTER, OIL	1
6801-CL	COVER, OIL FILTER	1
6801-CM	STRAINER SUB-ASSY, OIL TANK	1
6801-CN	TUBE, SPIRAL	1
6801-CO	ELBOW	1
6801-CR	BRACKET, OIL FILTER	1
6801-CZ	PIPE SUB-ASSY (LIFT CYLINDER RETURN)	1
6801-OP	ELBOW	1
6801-EL	FITTING	1
6801-EI	FITTING	1
6801-EU	FITTING	1
6801-FA	RING, O	1
6801-FC	WASHER	2
6801-FF	WASHER	2
6801-FI	NIPPLE	1
6801-FJ	BRACKET, CLAMP	1
6801-FK	BRACKET, CLAMP	1

(FSV) (14) G215

FIG. 6802
MAST PIPING

6802

 FSV

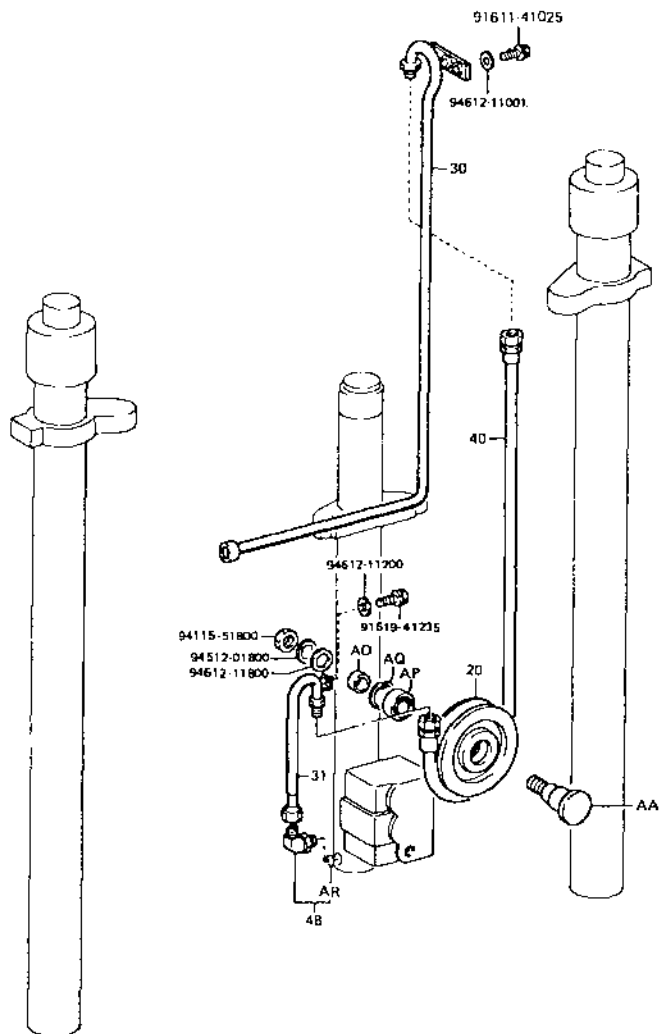

6802-131

PART NAME CODE	PART NAME	QTY
6802-20	PULLEY SUB-ASSY, HOSE GUIDE, NO.1	1
6802-30	PIPE SUB-ASSY, NO.1 (FRONT LIFT)	1
6802-51	PIPE SUB-ASSY, NO.2 (FRONT LIFT)	1
6802-40	HOSE, HIGH PRESSURE (FRONT LIFT PULLEY)	1
6802-48	FITTING (FOR FRONT LIFT CYLINDER)	1
6802-AA	PIN, HOSE GUIDE PULLEY	1
6802-A0	WASHER	1
6802-AP	BEARING	1
6802-AQ	RING, HOLE SNAP	1
6802-AR	RING, C	1


(FSV) (15)

G215

FIG. 6822
RELIEF VALVE

6822

 FSV

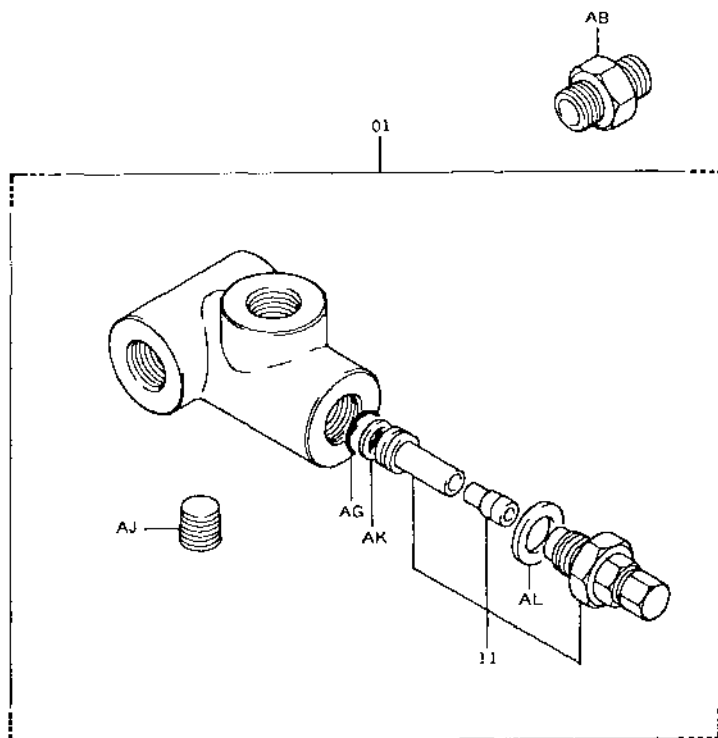

6822 D03

PART NAME CODE	PART NAME	QTY
6822-01	VALVE ASSY, RELIEF	1
6822-11	VALVE SET, RELIEF	1
6822-AB	FITTING	1
6822-AG	RING, O	1
6822-AJ	PLUG	1
6822-AK	RING, BACK UP	1
6822-AL	GASKET	1


(FSV) (16)

0215

FIG. 6101
MAST

6101

 FV

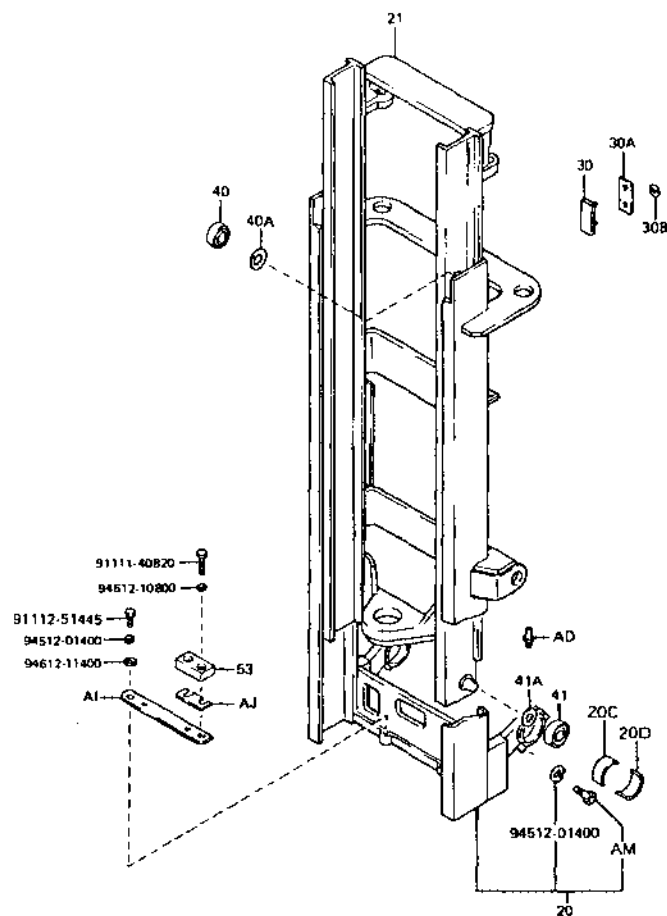

6101-175










PART NAME CODE	PART NAME	QTY
6101-20	MAST SUB-ASSY, OUTER	1
6101-20C	METAL, MAST SUPPORT	2
6101-20D	STOPPER, MAST SUPPORT METAL	2
6101-21	MAST SUB-ASSY, INNER	1
6101-30	STRIP SUB-ASSY, OUTER MAST	7
6101-30A	SHIM, OUTER MAST STRIP	99
6101-30B	RING, O (FOR OUTER MAST STRIP)	4
6101-31	STRIP SUB-ASSY, MIDDLE MAST	2
6101-40	ROLLER, LIFT (FOR OUTER MAST)	2
6101-40A	SHIM, LIFT ROLLER (FOR OUTER MAST)	99
6101-41	ROLLER, LIFT (FOR INNER MAST)	2
6101-41A	SHIM, LIFT ROLLER (FOR INNER MAST)	99
6101-53	CUSHION, MAST (FOR INNER MAST)	1
6101-A0	FITTING, GREASE	2
6101-A1	STOPPER	1
6101-AJ	SHIM, STOPPER	3
6101-AM	BOLT	4

(FV) (1) 6215

FIG. 6301
LEFT BRAIN

6301

         FV

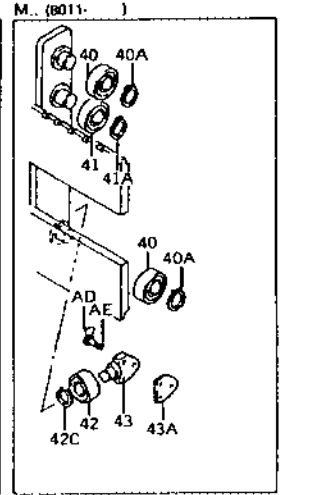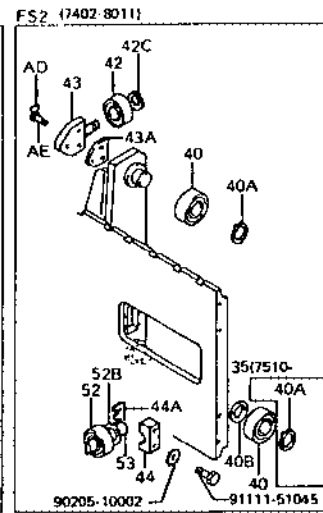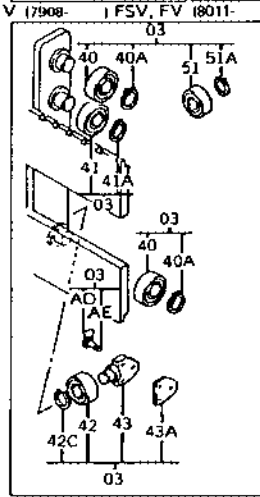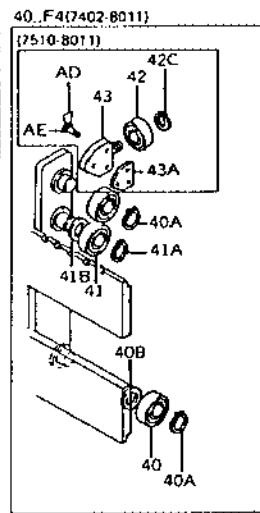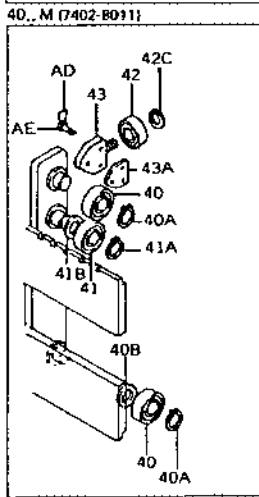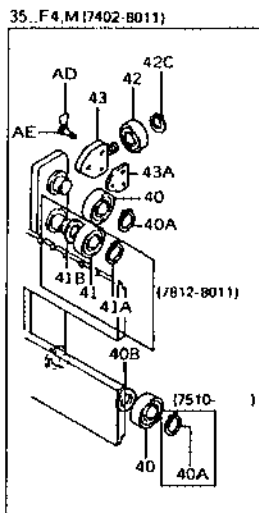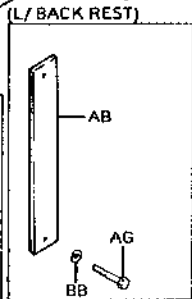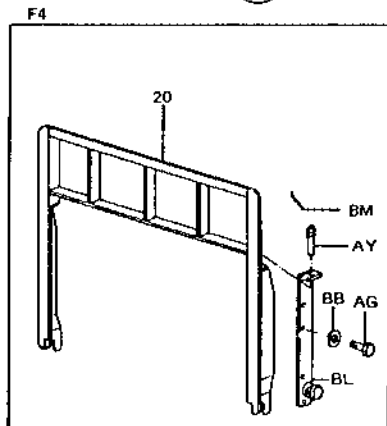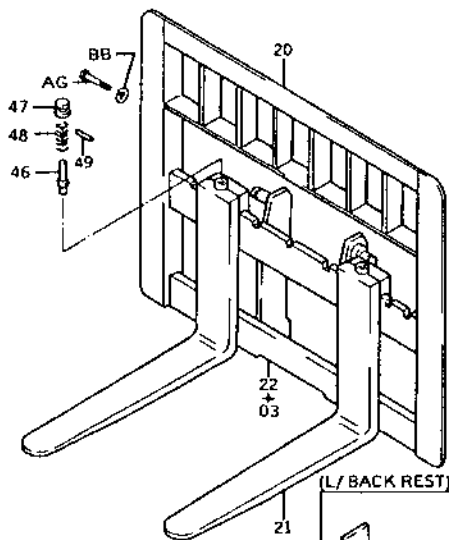

6301-152

6301


PART NAME CODE	PART NAME	QTY
6301-20	BACKREST SUB-ASSY -----	1
6301-21	FORK SUB-ASSY -----	2
6301-22	BRACKET SUB-ASSY, LIFT -----	1
6301-40	ROLLER, LIFT (UPPER, LOWER) -----	4
6301-40A	RING, SHAFT SNAP (UPPER, LOWER) -----	4
6301-41	ROLLER, LIFT (CENTER) -----	2
6301-41A	RING, SHAFT SNAP (CENTER) -----	2
6301-42	ROLLER, SIDE -----	2- 4
6301-42C	RING, SHAFT SNAP (FOR SIDE ROLLER) -----	2
6301-43	SHAFT, SIDE ROLLER -----	2- 4
6301-43A	SHIM (FOR SIDE ROLLER SHAFT) -----	99
6301-46	PIN, FORK STOPPER -----	2
6301-47	KNOB, FORK STOPPER PIN -----	2
6301-48	SPRING, FORK STOPPER PIN -----	2
6301-49	PIN, SPRING (FOR FORK STOPPER PIN) -----	2
6301-51	ROLLER, SIDE (OUTER) -----	2
6301-51A	RING, SHAFT SNAP -----	2
6301-AB	PLATE, SIDE -----	2
6301-AD	WIRE, LOCK -----	2
6301-AE	BOLT -----	6
6301-AG	BOLT -----	4- 8
6301-8B	WASHER -----	4- 8

(PV) (2) 6215

FIG. 6302
CHAIN & CHAIN WHEEL

6302

 FV

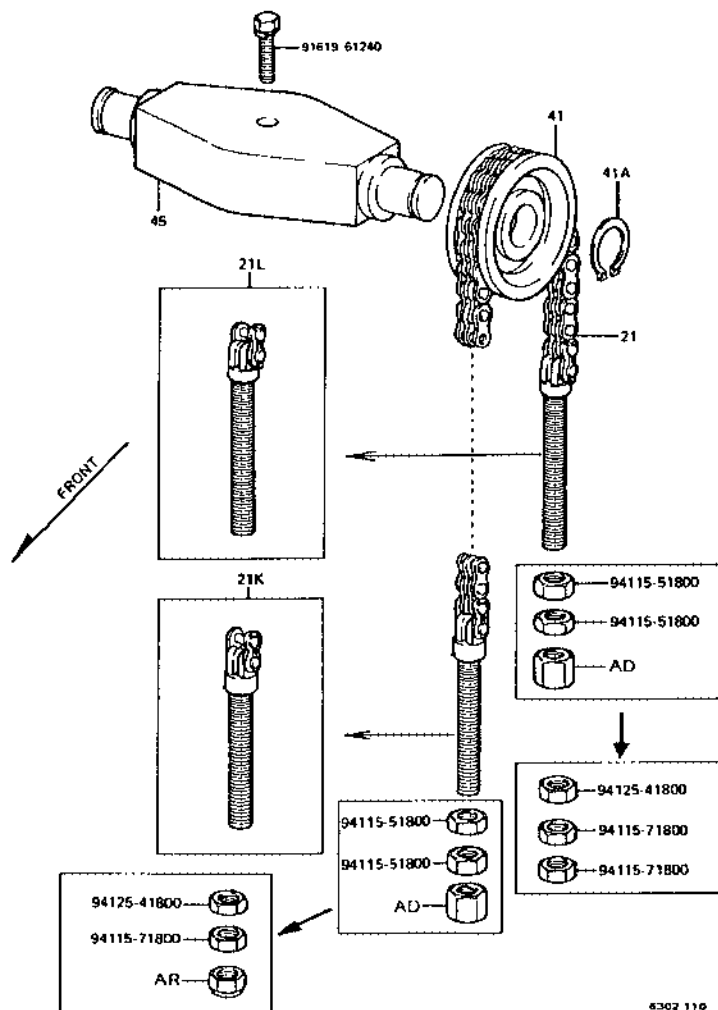


PART NAME CODE	PART NAME	QTY
6302-21	CHAIN SUB-ASSY (FRONT) -----	2
6302-21K	BOLT KIT, CHAIN ANCHOR, NO.1 (FRONT) -----	2
6302-21L	BOLT KIT, CHAIN ANCHOR, NO.2 (FRONT) -----	2
6302-41	WHEEL, CHAIN (FRONT) -----	2
6302-41A	RING, SHAFT SNAP (FOR FRONT CHAIN WHEEL) ---	2
6302-45	SUPPORT, CHAIN WHEEL -----	1
6302-AR	NUT, LOCK -----	2

(FV) (3) 6215

FIG. 6502
FRONT LIFT CYLINDER

6502

 FV

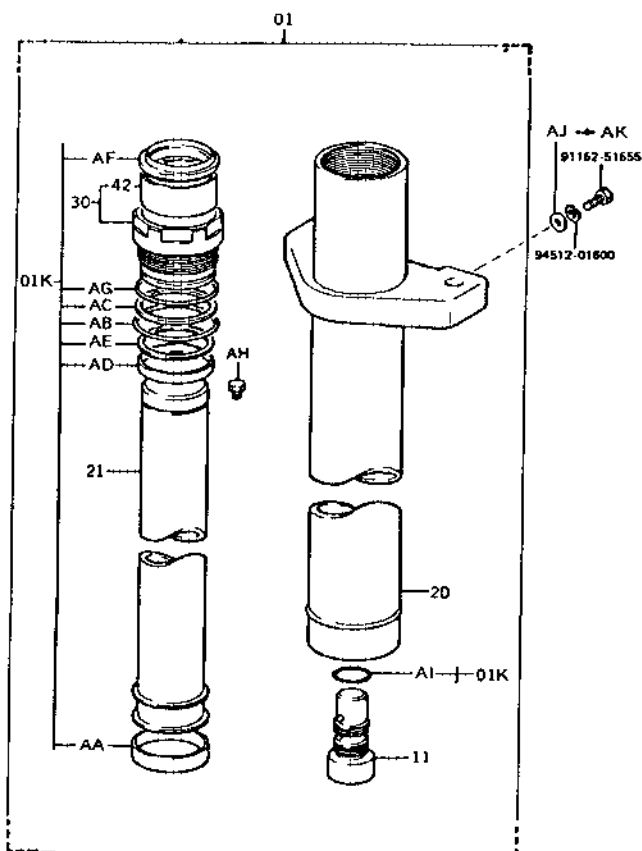

6502-022


PART NAME CODE	PART NAME	QTY
6502-01	CYLINDER ASSY, LIFT	1
6502-01K	CYLINDER O/H KIT, LIFT	1
6502-11	VALVE ASSY, SAFETY DOWN	1
6502-20	CYLINDER SUB-ASSY, LIFT	1
6502-21	ROD SUB-ASSY, LIFT CYLINDER	1
6502-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD	1
6502-42	SLEEVE, LIFT CYLINDER ROD GUIDE	1
6502-AA	BUSHING	1
6502-AB	RING, O	1
6502-AC	RING, BACK UP	1
6502-AD	PACKING, U	1
6502-AE	RING, BACK UP	1
6502-AF	SEAL, DUST	1
6502-AG	RING, O	1
6502-AH	PLUG	1
6502-AI	RING, O	1
6502-AK	WASHER, PLATE	2

(FV) (4) C215

FIG. 6503
REAR LIFT CYLINDER

6503

 FV

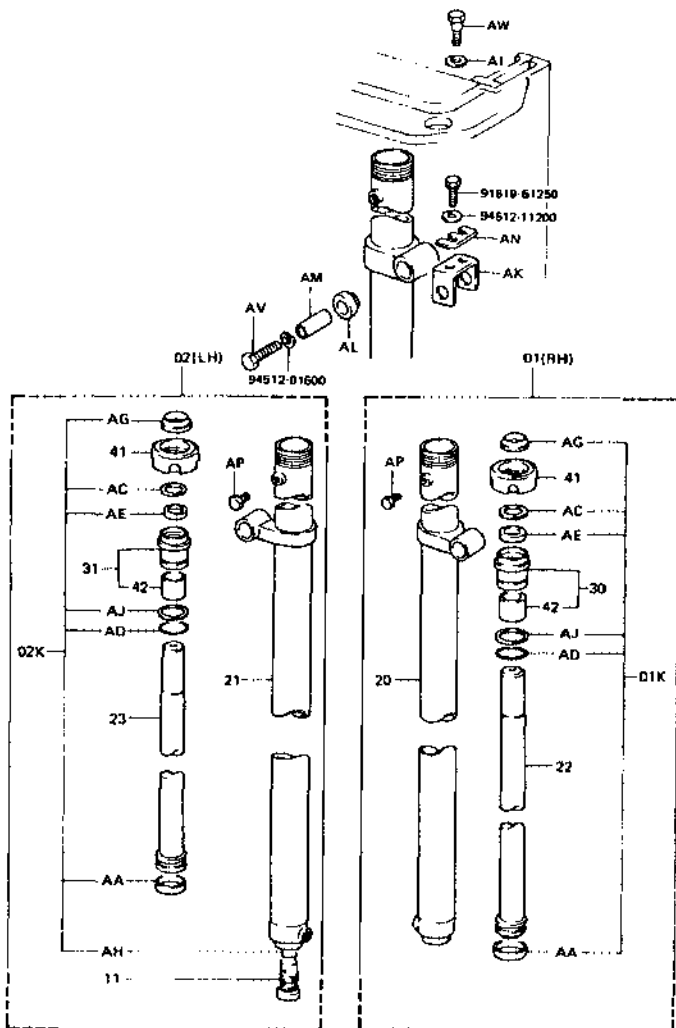

5503 00 / 4

PART NAME CODE	PART NAME	QTY
6503-01	CYLINDER ASSY, LIFT, RH -----	1
6503-01K	CYLINDER O/H KIT, LIFT, RH -----	1
6503-02	CYLINDER ASSY, LIFT, LH -----	1
6503-02K	CYLINDER O/H KIT, LIFT, LH -----	1
6503-11	VALVE ASSY, SAFETY DOWN -----	1
6503-20	CYLINDER SUB-ASSY, LIFT, RH -----	1
6503-21	CYLINDER SUB-ASSY, LIFT, LH -----	1
6503-22	ROD SUB-ASSY, LIFT CYLINDER, RH -----	1
6503-23	ROD SUB-ASSY, LIFT CYLINDER, LH -----	1
6503-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD, RH -----	1
6503-31	GUIDE SUB-ASSY, LIFT CYLINDER ROD, LH -----	1
6503-41	COVER, LIFT CYLINDER -----	2
6503-42	SLEEVE, LIFT CYLINDER ROD GUIDE -----	2
6503-AA	RING, WEAR -----	2
6503-AC	RING, BACK UP -----	2
6503-AD	RING, O -----	2
6503-AE	PACKING, U -----	2
6503-AG	SEAL, DUST -----	2
6503-AH	RING, O -----	1
6503-AI	SHIM -----	99
6503-AJ	RING, BACK UP -----	2
6503-AK	BRACKET SUB-ASSY, LIFT CYLINDER -----	2
6503-AL	BUSHING -----	4
6503-AM	SPACER -----	2
6503-AN	SHIM -----	99
6503-AP	PLUG -----	2
6503-AV	BOLT -----	2
6503-AW	BOLT -----	2

(FV) (5)

G215

FIG. 6511
TILT CYLINDER

6511


FV

FV

テイルト角度表
TABLE OF TILT RANGE

生産期間 PROD DATE	型式 MODELS	タイヤ TIRE	幅 高 LIFTING HEIGHT	備 考 DISCRIPTION	テイルト角 TILT RANGE
7402-8011	F4	SINGLE	H2000-H3500		6D - 12D
7402-8011	F4	SINGLE	H3700-H4500		6D - 6D
7402-8011	F4	DOUBLE			6D - 12D
7402-8011	FS2		H3500-H4800		6D - 6D
7402-8011	FS2		H5000-H6500		3D - 3D
7402-	M	SINGLE	H2000-H3500		6D - 12D
7402-	M	SINGLE	H3700-H5000		6D - 6D
7402-	M	DOUBLE	H2000-H4500		6D - 12D
7402-	35_M	DOUBLE	H5000-H5500		6D - 6D
7402-	40_M	DOUBLE	H5000-H5500		6D - 12D
7908-	V	SINGLE	H2000-H3500		6D - 10D
7908-	V	SINGLE	H3700-H5000		6D - 6D
7908-	V	DOUBLE	H2000-H4500		6D - 10D
7908-	V	DOUBLE	H5000		6D - 6D
8011-	FSV		H3700-H4700		6D - 6D
8011-	FSV		H5000-H6000		3D - 3D
8011-	FV	SINGLE	H2000-H3500		6D - 10D
8011-	FV	SINGLE	H3700-H4000		6D - 6D
8011-	FV	DOUBLE	H2000-H4000		6D - 10D

 6511-055

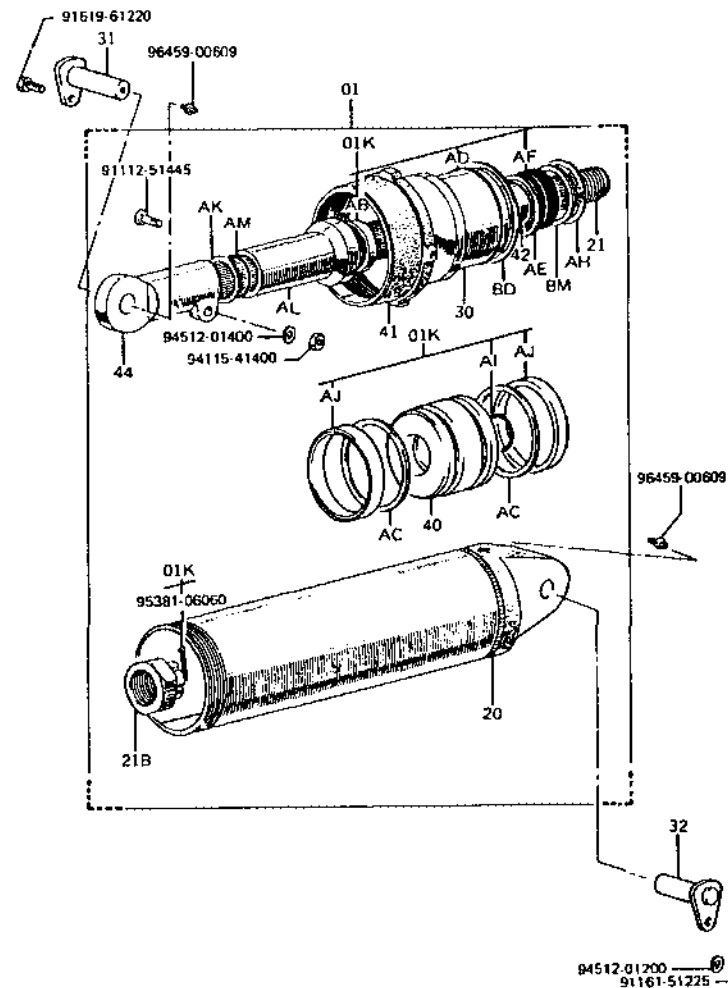

6511-082

6511



PART NAME CODE	PART NAME	QTY
6511-01	CYLINDER ASSY, TILT -----	1
6511-01K	CYLINDER O/H KIT, TILT -----	2
6511-20	CYLINDER SUB-ASSY, TILT -----	1
6511-21	ROD SUB-ASSY, TILT CYLINDER PISTON -----	2
6511-21B	NUT, CASTLE -----	2
6511-30	GUIDE SUB-ASSY, TILT CYLINDER ROD -----	2
6511-31	PIN SUB-ASSY, TILT CYLINDER, FR -----	2
6511-40	PISTON, TILT CYLINDER -----	2
6511-41	COVER, TILT CYLINDER -----	2
6511-42	SLEEVE, TILT CYLINDER ROD GUIDE -----	2
6511-44	JOINT, PISTON ROD -----	2
6511-AB	SEAL, DUST -----	2
6511-AC	RING, BACK UP -----	4
6511-AD	RING, D -----	2
6511-AE	RING, BACK UP -----	2
6511-AF	PACKING, U -----	2
6511-AH	RING, HOLE SNAP -----	2
6511-AI	RING, O -----	2
6511-AJ	PACKING, U -----	4
6511-AK	SHIM, TILT CONTROL -----	99
6511-AL	SPACER, TILT CONTROL -----	2
6511-AM	RING, U -----	4
6511-B0	RING, BACK UP -----	2
6511-BM	RING, PACKING STOP -----	2

(FV) (9) G213

FIG. 6701
OIL PUMP

6701

  FV

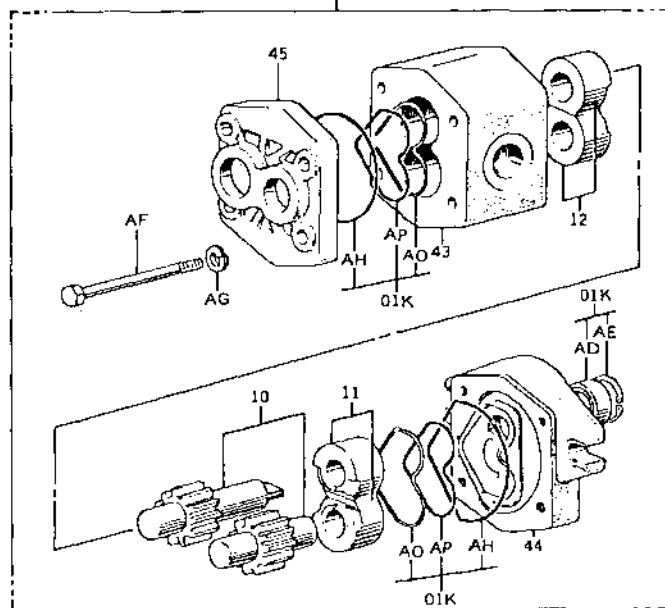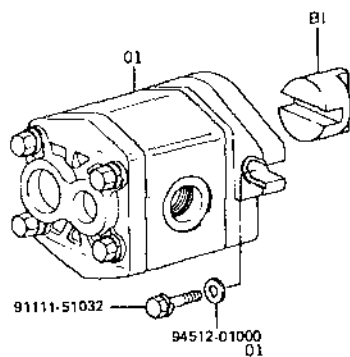


PART NAME CODE	PART NAME	QTY
6701-01	PUMP ASSY, OIL	1
6701-01K	PUMP O/H KIT, OIL	1
6701-10	GEAR SET	1
6701-11	BUSH SET, NO.1	1
6701-12	BUSH SET, NO.2	1
6701-43	BODY	1
6701-44	FLANGE, MOUNTING	1
6701-45	COVER	1
6701-AD	SEAL, OIL	1
6701-AE	RING, SNAP	1
6701-AF	BOLT	4
6701-AG	WASHER, SPRING	4
6701-AH	SEAL, BODY	2
6701-AD	SPACER	2
6701-AP	GASKET	2
6701-B1	JOINT, OLDHAM	1

(FV) (10) 6215

FIG. 6705
OIL CONTROL VALVE

6705

 FV

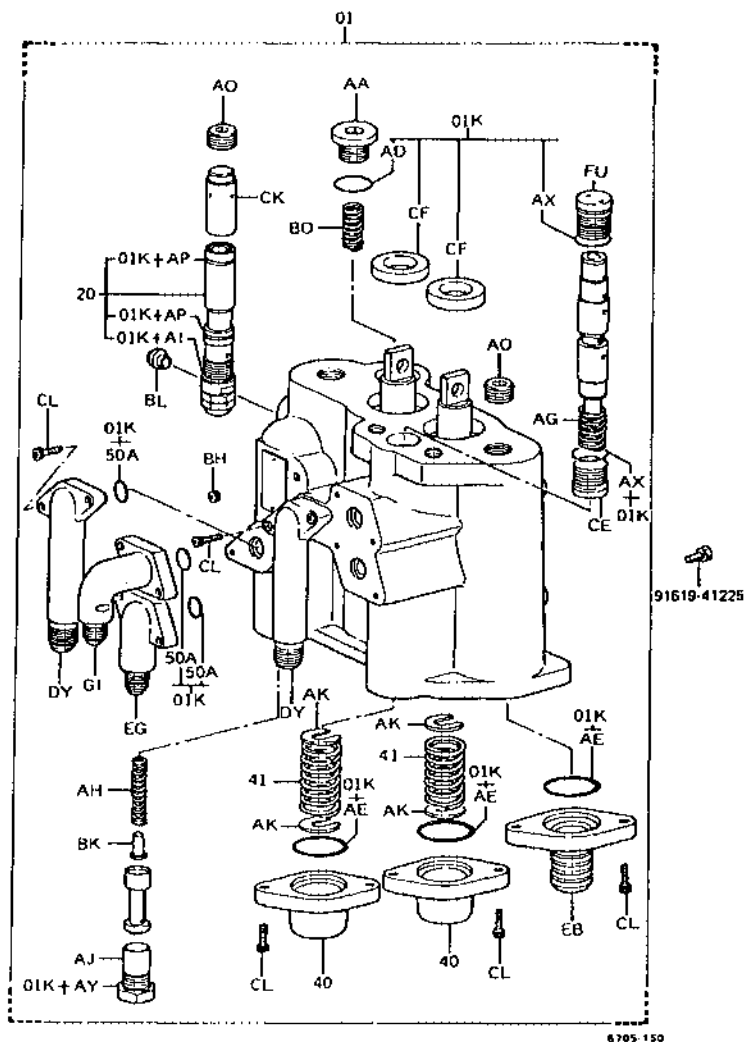

PART NAME CODE	PART NAME	QTY
6705-01	VALVE ASSY, OIL CONTROL	1
6705-01K	VALVE O/H KIT, OIL CONTROL	1
6705-20	VALVE SET, PILOT RELIEF, NO.1	1
6705-40	COVER, SPRING	2
6705-41	SPRING, COMPRESSION (FOR SPOOL RETURN)	2
6705-50A	RING, O, NO.1 (FOR VALVE FITTING)	4
6705-AA	BOLT	1
6705-AU	RING, O	1
6705-AE	RING, O	3
6705-AG	SPRING	1
6705-AH	SPRING, COMPRESSION	1
6705-AI	RING, O	1
6705-AJ	STOPPER	1
6705-AK	HOLDER, SPRING	4
6705-AO	PLUG	2
6705-AP	RING, O	2
6705-AX	RING, O	2
6705-AY	RING, O	1
6705-BH	PLUG	1
6705-BK	VALVE, CHECK	1
6705-BL	SEAT, INSERT	2
6705-BO	SPRING	1
6705-CE	CAP	1
6705-CF	SEAL	2
6705-CK	SLEEVE	1
6705-CL	BOLT	14
6705-DY	ELBOW	2
6705-EB	NIPPLE	1
6705-EG	ELBOW	1
6705-FU	CAP	1
6705-GI	ELBOW	1


(FV) (11)

6215

FIG. 6709
OIL CONTROL VALVE LINK

6709

 FV

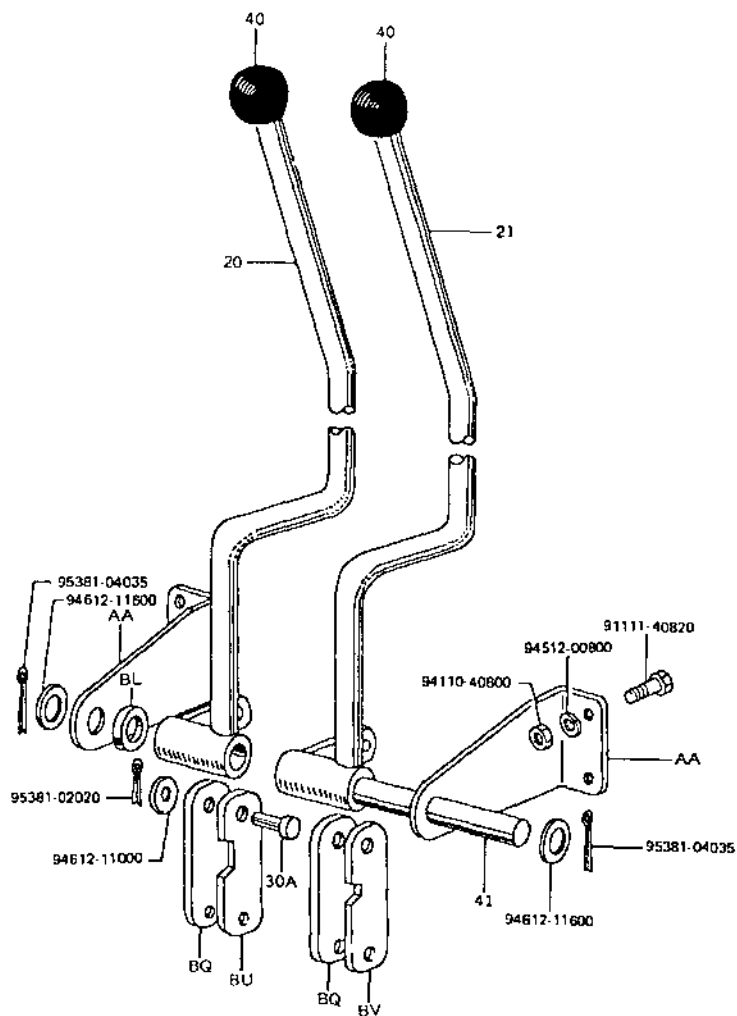

6709-073


PART NAME CODE	PART NAME	QTY
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2	1
6709-30A	PIN (FOR CONTROL VALVE LEVER ROD)	4
6709-40	KNOB, OIL CONTROL VALVE LEVER	2
6709-41	PIN, OIL CONTROL VALVE LEVER	1
6709-4A	BRACKET SUB-ASSY	1
6709-BL	COLLAR, SUPPORTING PIN	1
6709-BQ	LINK, OIL CONTROL VALVE LEVER	2
6709-BU	LINK, LIFT CONTROL LEVER	1
6709-BV	LINK, TILT CONTROL LEVER	1

(FV) (12) 6215

FIG. 6801
BODY PIPING

6801

 FV

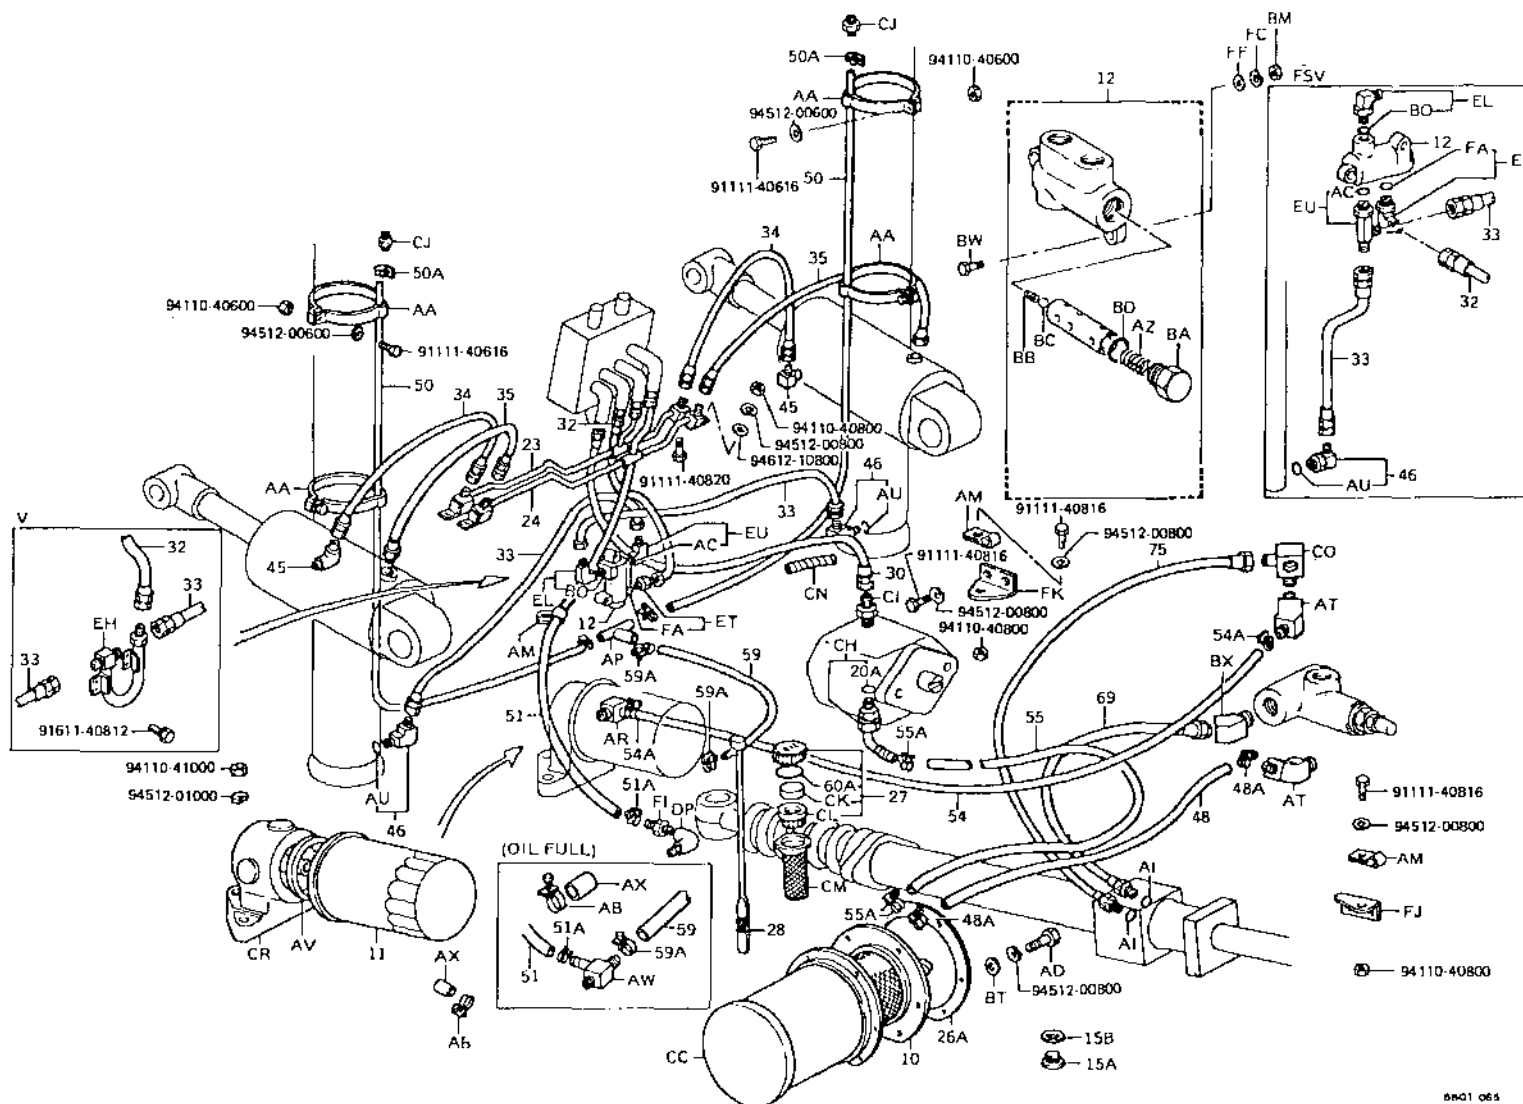

6801

PART NAME CODE	PART NAME	QTY
6801-10	FILTER ASSY, SUCTION	1
6801-11	FILTER ASSY, RETURN	1
6801-12	VALVE ASSY, FLOW REGULATOR	1
6801-15A	PLUG (FOR OIL TANK DRAIN)	1
6801-15B	GASKET (FOR OIL TANK DRAIN PLUG)	1
6801-20A	RING, O (FOR OIL PUMP INLET)	1
6801-23	PIPE SUB-ASSY (TILT CYLINDER FRONT)	1
6801-24	PIPE SUB-ASSY (TILT CYLINDER REAR)	1
6801-26A	PACKING, OIL TANK COVER	2
6801-27	CAP SUB-ASSY, OIL TANK	1
6801-28	CAGE SUB-ASSY, OIL LEVEL	1
6801-30	HOSE, HIGH PRESSURE, NO.1 (PUMP TO VALVE)	1
6801-32	HOSE, HIGH PRESSURE, NO.1 (VALVE TO LIFT)	1
6801-33	HOSE, HIGH PRESSURE, NO.2 (VALVE TO LIFT)	1
6801-34	HOSE, HIGH PRESSURE, NO.1 (TILT FRONT)	2
6801-35	HOSE, HIGH PRESSURE, NO.1 (TILT REAR)	2
6801-45	FITTING (FOR TILT CYLINDER)	2
6801-46	FITTING (FOR LIFT CYLINDER)	1
6801-48	HOSE, LOW PRESSURE (TANK TO P/S PUMP)	1
6801-48A	CLAMP	2
6801-51	HOSE, LOW PRESSURE, NO.1 (VALVE TO TANK)	1
6801-51A	CLAMP (FOR VALVE TO TANK NO.1 HOSE)	2
6801-54	HOSE, LOW PRESSURE NO.1 (RELIEF TO TANK)	1
6801-54A	CLAMP (FOR RELIEF TO TANK NO.1 HOSE)	2
6801-55	HOSE, LOW PRESSURE (TANK TO PUMP)	1
6801-55A	CLAMP (FOR TANK TO PUMP HOSE)	2
6801-60A	PACKING, OIL TANK RETAINER	1
6801-69	HOSE, HIGH PRESSURE (P/S PUMP TO CYLINDER)	1
6801-75	HOSE, HIGH PRESSURE (STEERING TO RELIEF)	1
6801-AB	CLAMP	1
6801-AC	RING, O	1
6801-AD	BOLT	6
6801-AI	RING, O	2
6801-AM	CLAMP, HOSE	3
6801-AR	FITTING	1
6801-AI	FITTING	2
6801-AU	RING, O	1
6801-AV	RING, O	1
6801-AW	ELBOW SUB-ASSY, 3-WAY	1
6801-AX	CAP, OIL TANK OVERFLOW PIPE	1
6801-AZ	SPRING, COMPRESSION	1
6801-BA	PLUG	1
6801-BB	SPRING, COMPRESSION	1
6801-BC	BALL, STEEL	1
6801-BD	RING, O	1
6801-BM	NUT	2
6801-BD	RING, O	1
6801-BT	WASHER	6
6801-BW	BOLT	2
6801-BX	FITTING	1
6801-CC	CASE, OIL FILTER	1
6801-CH	FITTING	1
6801-CK	FILTER, OIL	1

(FV) (13) G215


PART NAME CODE	PART NAME	QTY
6801-CL	COVER, OIL FILTER	1
6801-CM	STRAINER SUB-ASSY, OIL TANK	1
6801-CN	TUBE, SPIRAL	1
6801-CO	ELBOW	1
6801-CR	BRACKET, OIL FILTER	1
6801-CZ	PIPE SUB-ASSY (LIFT CYLINDER RETURN)	1
6801-UP	ELBOW	1
6801-EI	FITTING	1
6801-EU	FITTING	1
6801-FA	RING, O	1
6801-FC	WASHER	2
6801-FI	NIPPLE	1
6801-FJ	BRACKET, CLAMP	1
6801-FK	BRACKET, CLAMP	1

(FV) (14) G215

FIG. 6802
MAST PIPING

6802

 FV

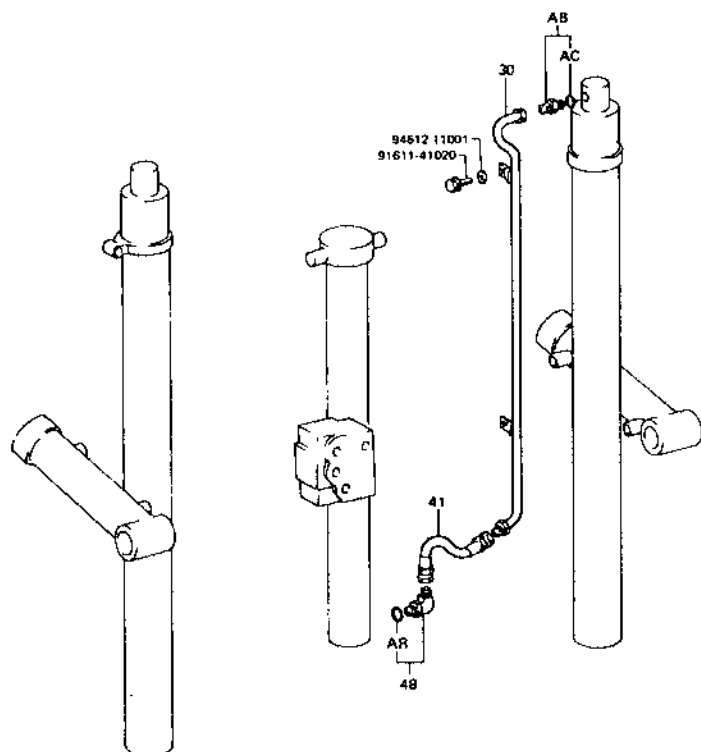

6802 009 B


PART NAME CODE	PART NAME	QTY
6802-30	PIPE SUB-ASSY, NO.1 (FRONT LIFT) -----	1
6802-41	HOSE, HIGH PRESSURE, NO.1 (FRONT LIFT) -----	1
6802-48	FITTING (FOR FRONT LIFT CYLINDER) -----	1
6802-AB	FITTING -----	1
6802-AC	RING, O -----	1
6802-AR	RING, O -----	1

(FV) (15) G215

FIG. 6822
RELIEF VALVE

6822

 FV

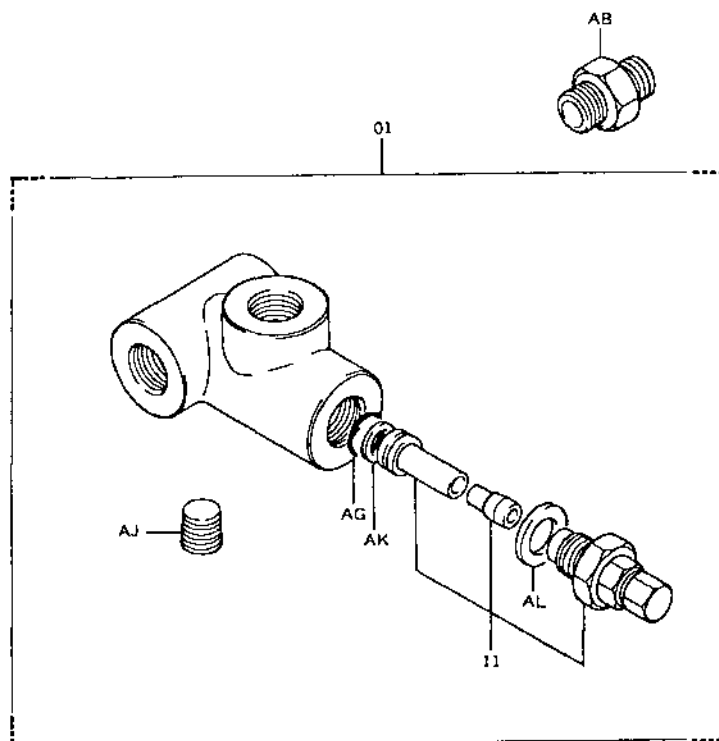

6822-003


PART NAME CODE	PART NAME	QTY
6822-01	VALVE ASSY, RELIEF	1
6822-11	VALVE SET, RELIEF	1
6822-AB	FITTING	1
6822-AG	RING, O	1
6822-AJ	PLUG	1
6822-AK	RING, BACK UP	1
6822-AL	GASKET	1

(FV) (16) 6215

FIG-6101
MAST

6101

 M

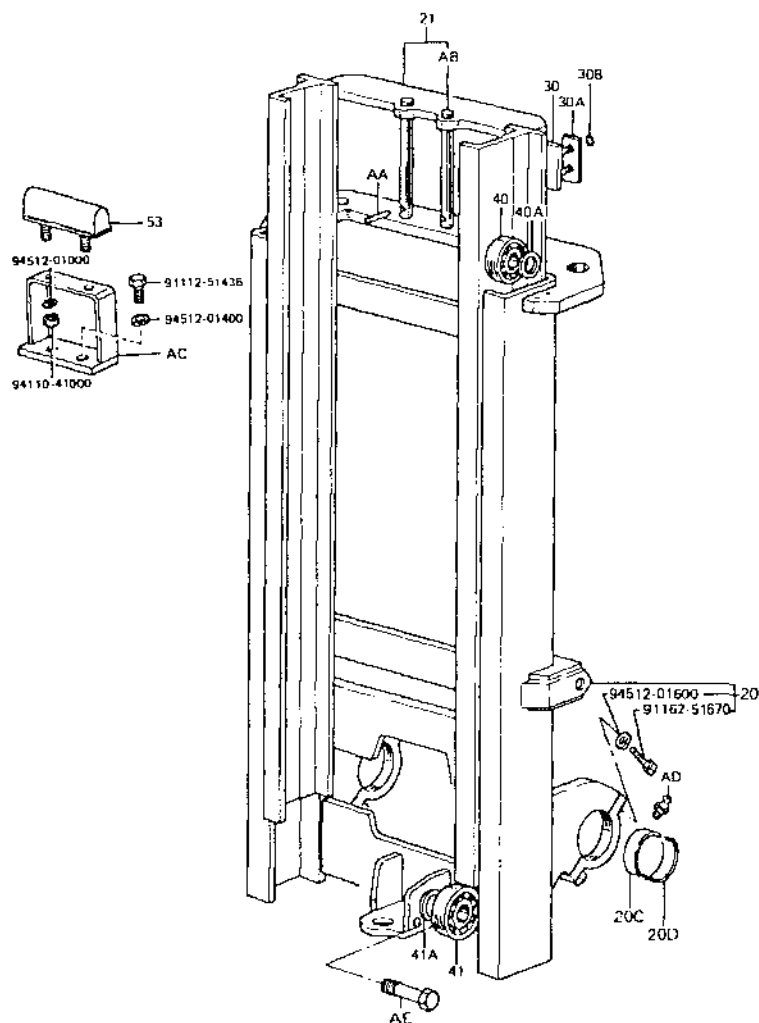

6101 176




PART NAME CODE	PART NAME	QTY
6101-20	MAST SUB-ASSY, OUTER	1
6101-20C	METAL, MAST SUPPORT	2
6101-20D	STOPPER, MAST SUPPORT METAL	2
6101-21	MAST SUB-ASSY, INNER	1
6101-30	STRIP SUB-ASSY, OUTER MAST	2
6101-30A	SHIM, OUTER MAST STRIP	99
6101-30B	RING, O (FOR OUTER MAST STRIP)	4
6101-31	STRIP SUB-ASSY, MIDDLE MAST	2
6101-40	ROLLER, LIFT (FOR OUTER MAST)	2
6101-40A	SHIM, LIFT ROLLER (FOR OUTER MAST)	99
6101-41	ROLLER, LIFT (FOR INNER MAST)	2
6101-41A	SHIM, LIFT ROLLER (FOR INNER MAST)	99
6101-53	CUSHION, MAST (FOR INNER MAST)	2
6101-AA	PIN, SPRING	2
6101-AB	GUIDE, CHAIN WHEEL SUPPORT	2
6101-AC	STOPPER, INNER MAST	2
6101-AD	FITTING, GREASE	2
6101-AE	BOLT, STOPPER	1

(M) (1) 6215


FIG. 6301
LIFT BRACKET & FORK

6301

   
M

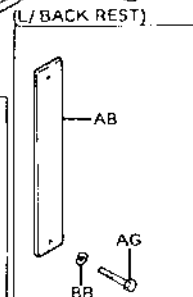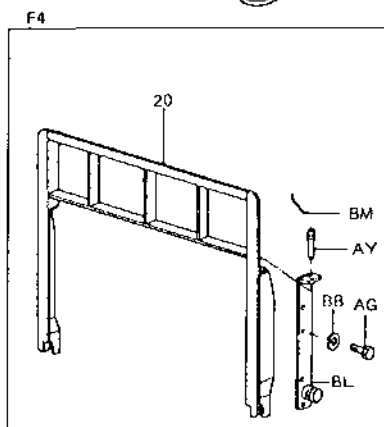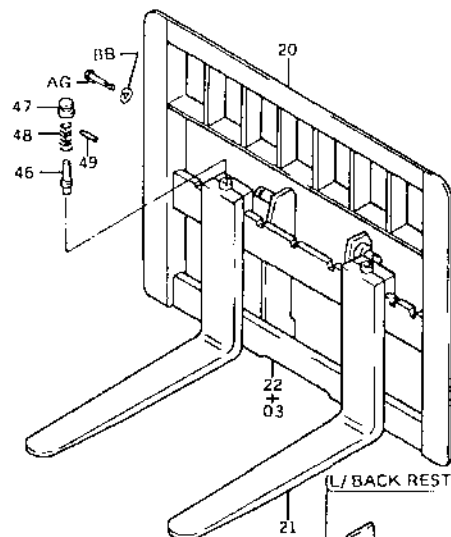

 
35..F4,M (7402-8011)

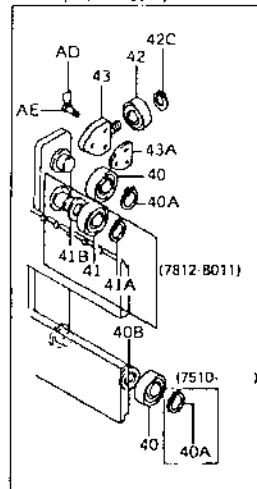

 
40..F4(7402-8011)

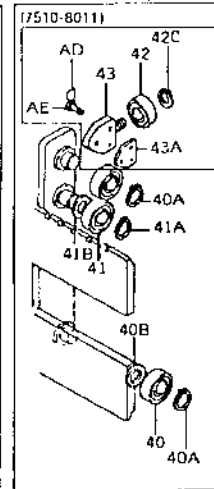


FS2 (7402-8011)

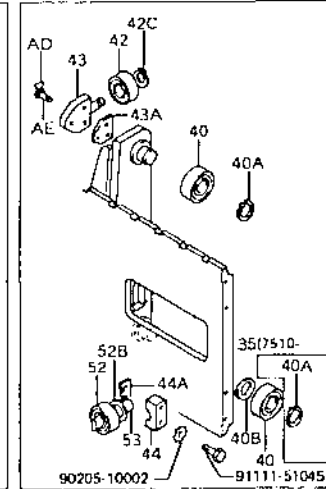 

 
40..M (7402-8011)

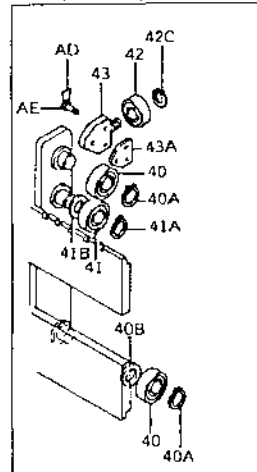

V (7908-) FSV, FV (8011-)

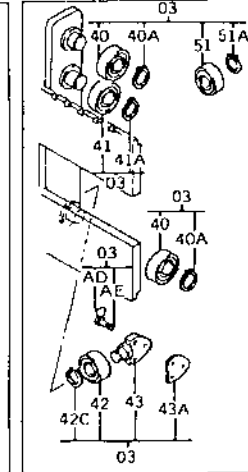 

M.. (8011-)

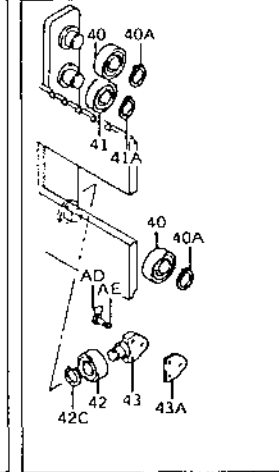 

6301 123

6301

PART NAME CODE	PART NAME	QTY
6301-20	BACKREST SUB-ASSY -----	1
6301-21	FORK SUB-ASSY -----	2
6301-22	BRACKET SUB-ASSY, LIFT -----	1
6301-40	ROLLER, LIFT (UPPER, LOWER) -----	4
6301-40A	RING, SHAFT SNAP (UPPER, LOWER) -----	4
6301-41	ROLLER, LIFT (CENTER) -----	2
6301-41A	RING, SHAFT SNAP (CENTER) -----	2
6301-42	ROLLER, SIDE -----	2- 4
6301-42C	RING, SHAFT SNAP (FOR SIDE ROLLER) -----	4
6301-43	SHAFT, SIDE ROLLER -----	2- 4
6301-43A	SHIM (FOR SIDE ROLLER SHAF()) -----	99
6301-46	PIN, FORK STOPPER -----	2
6301-47	KNOB, FORK STOPPER PIN -----	2
6301-48	SPRING, FORK STOPPER PIN -----	2
6301-49	PIN, SPRING (FOR FORK STOPPER PIN) -----	2
6301-A0	WIRE, LOCK -----	4
6301-AE	BOLT -----	12
6301-AG	BOLT -----	8
6301-BB	WASHER -----	8

(M) (2) G215


6302



(M) (3) G215

FIG. 6504
LIFT CYLINDER

 6504

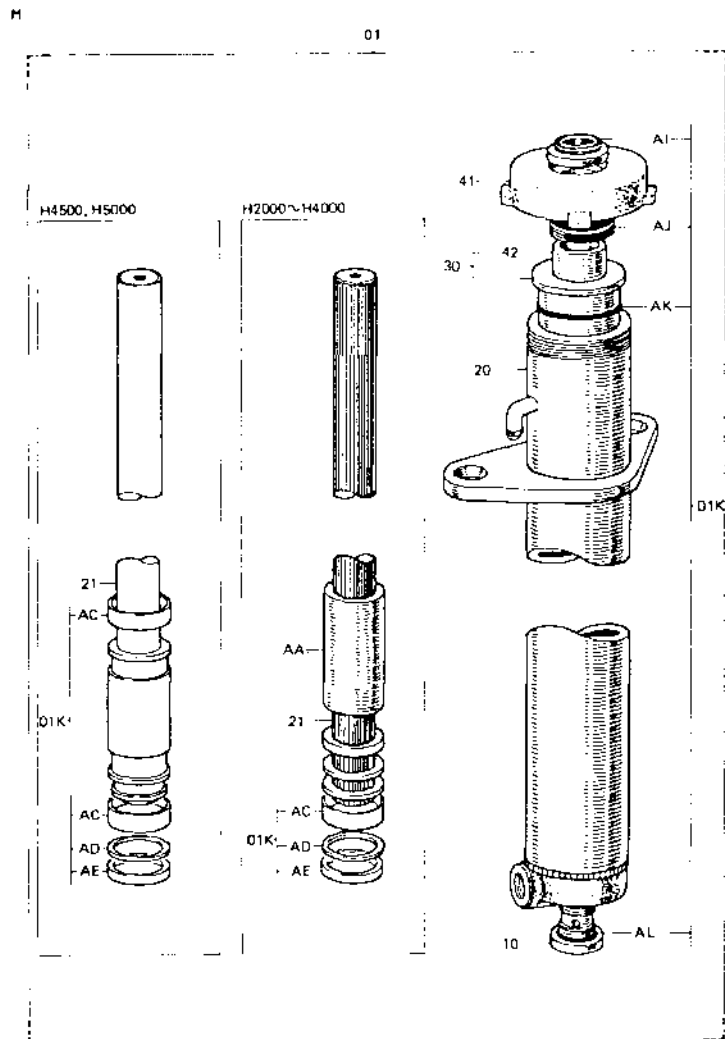

PART NAME CODE	PART NAME	QTY
6504-01	CYLINDER ASSY, LIFT	1
6504-01K	CYLINDER O/H KIT, LIFT	1
6504-10	VALVE ASSY, FLOW REGULATOR	1
6504-20	CYLINDER SUB-ASSY, LIFT	1
6504-21	ROD SUB-ASSY, LIFT CYLINDER PISTON	1
6504-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD	1
6504-40	COVER, LIFT CYLINDER	1
6504-41	SLEEVE, LIFT CYLINDER ROD GUIDE	1
6504-42	SPACER, LIFT CYLINDER	1
6504-43	RING, WEAR	1- 2
6504-44	RING, BACK UP	1
6504-45	PACKING, U	1
6504-46	SEAL, DUST	1
6504-47	PACKING, U	1
6504-48	RING, G	1
6504-49	RING, O	1

(M) (4) G215


FIG. 6511
TILT CYLINDER

6511

テイルト角度表
TABLE OF TILT RANGE

生産期間 PROD DATE	型 式 MODELS	タイヤ TYRE	揚 高 LIFTING HEIGHT	備 考 DISCRIPTION	テイルト角 TILT RANGE
7402-8011	F4	SINGLE	H2000-H3500		6D - 12D
7402-8011	F4	SINGLE	H3700-H4500		6D - 6D
7402-8011	F4	DOUBLE			6D - 12D
7402-8011	FS2		H3500-H4800		6D - 6D
7402-8011	FS2		H5000-H6500		3D - 3D
7402-	M	SINGLE	H2000-H3500		6D - 12D
7402-	M	SINGLE	H3700-H5000		6D - 6D
7402-	M	DOUBLE	H2000-H4500		6D - 12D
7402-	35_M	DOUBLE	H5000-H5500		6D - 6D
7402-	40_M	DOUBLE	H5000-H5500		6D - 12D
7908-	V	SINGLE	H2000-H3500		6D - 10D
7908-	V	SINGLE	H3700-H5000		6D - 6D
7908-	V	DOUBLE	H2000-H4500		6D - 10D
7908-	V	DOUBLE	H5000		6D - 6D
8011-	FSV		H3700-H4700		6D - 6D
8011-	FSV		H5000-H6200		3D - 3D
8011-	FV	SINGLE	H2000-H3500		6D - 10D
8011-	FV	SINGLE	H3700-H4000		6D - 6D
8011-	FV	DOUBLE	H2000-H4000		6D - 10D

 6511 055

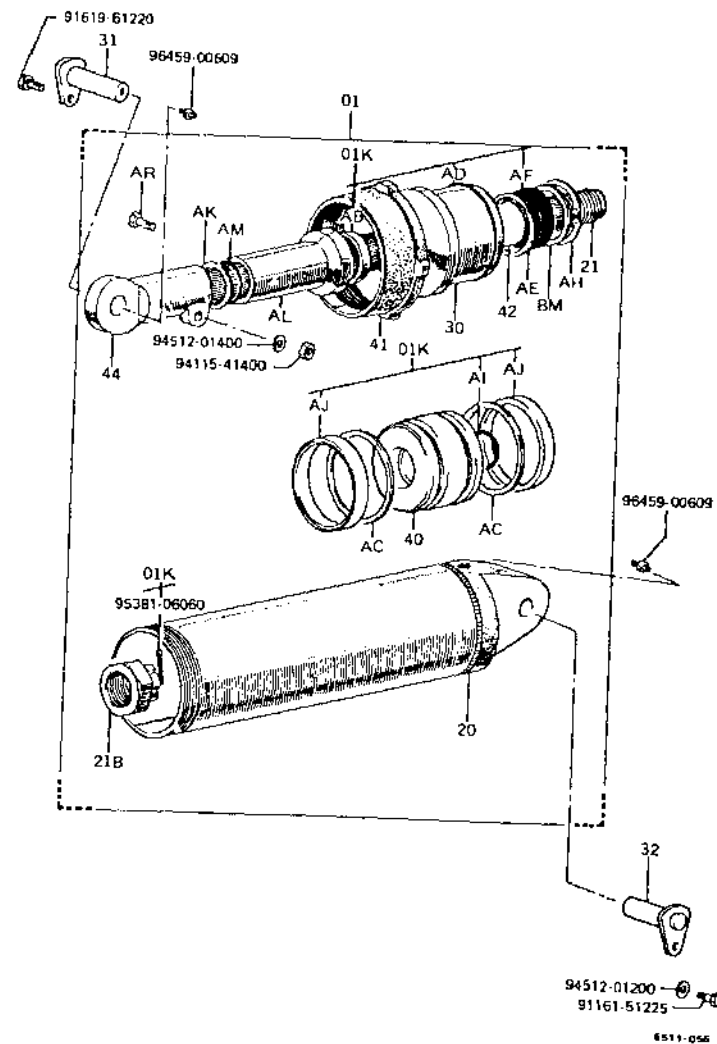

6511



PART NAME CODE	PART NAME	QTY
6511-01	CYLINDER ASSY, TILT -----	1
6511-01K	CYLINDER O/H KIT, TILT -----	2
6511-20	CYLINDER SUB-ASSY, TILT -----	1
6511-21	ROD SUB-ASSY, TILT CYLINDER PISTON -----	2
6511-21B	NUT, CASTLE -----	2
6511-30	GUIDE SUB-ASSY, TILT CYLINDER ROD -----	2
6511-31	PIN SUB-ASSY, TILT CYLINDER, FR -----	2
6511-32	PIN SUB-ASSY, TILT CYLINDER, RR -----	2
6511-40	PISTON, TILT CYLINDER -----	2
6511-41	COVER, TILT CYLINDER -----	2
6511-42	SLEEVE, TILT CYLINDER ROD GUIDE -----	2
6511-44	JOINT, PISTON ROD -----	2
6511-AB	SEAL, DUST -----	2
6511-AC	RING, BACK UP -----	4
6511-AD	RING, O -----	2
6511-AE	RING, BACK UP -----	2
6511-AF	PACKING, U -----	2
6511-AM	RING, HOLE SNAP -----	2
6511-AI	RING, O -----	2
6511-AJ	PACKING, U -----	4
6511-AK	SHIM, TILT CONTROL -----	99
6511-AL	SPACER, TILT CONTROL -----	2
6511-AM	RING, O -----	4
6511-AR	BOLT -----	2
6511-BM	RING, PACKING STOP -----	2

(M) (8) G215

FIG-6701
OIL PUMP

6701

  M

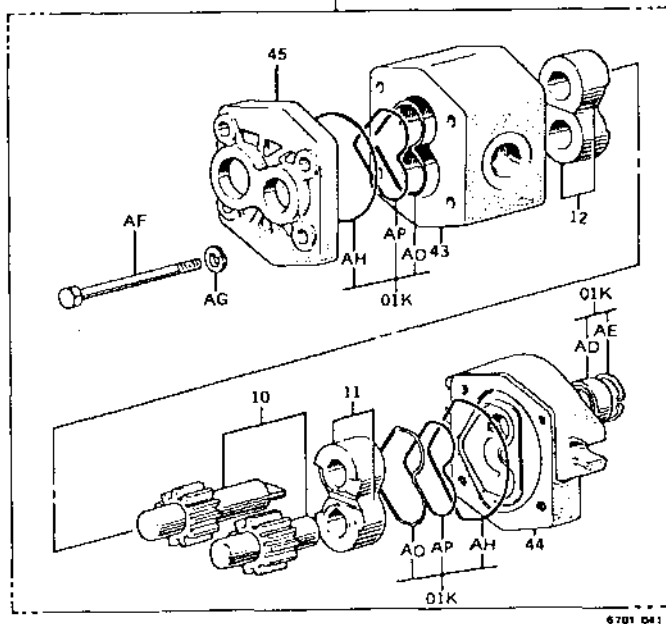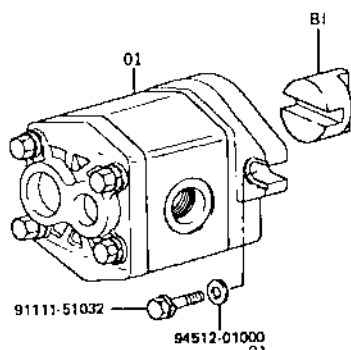


PART NAME CODE	PART NAME	QTY
6701-01	PUMP ASSY, OIL	1
6701-01K	PUMP O/H KIT, OIL	1
6701-10	GEAR SET	1
6701-11	BUSH SET, NO.1	1
6701-12	BUSH SET, NO.2	1
6701-43	BODY	1
6701-44	FLANGE, MOUNTING	1
6701-45	COVER	1
6701-AD	SEAL, OIL	1- 2
6701-AE	RING, SNAP	1
6701-AF	BOLT	4
6701-AG	WASHER, SPRING	4
6701-AH	SEAL, BODY	2
6701-AD	SPACER	2
6701-AP	GASKET	2
6701-BI	JOINT, OLDHAM	1

(M) (S) 6215

FIG. 6705
OIL CONTROL VALVE

 6705

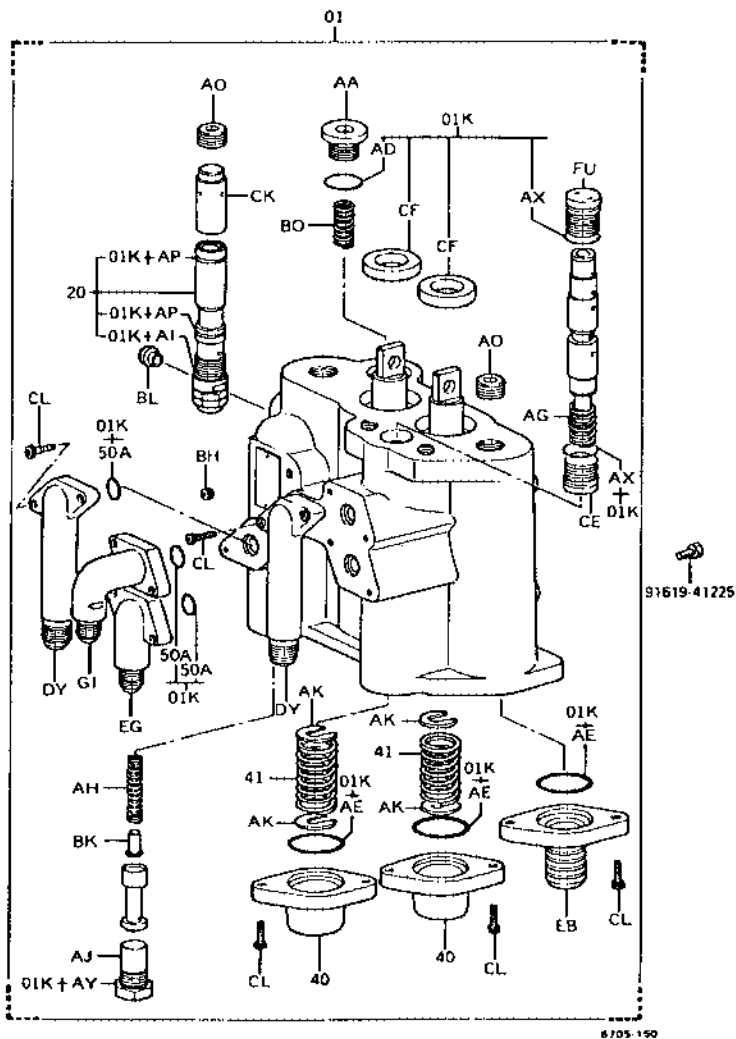


PART NAME CODE	PART NAME	QTY
6705-01	VALVE ASSY, OIL CONTROL -----	1
6705-01K	VALVE O/H KIT, OIL CONTROL -----	1
6705-20	VALVE SET, PILOT RELIEF, NO.1 -----	1
6705-40	COVER, SPRING -----	2
6705-41	SPRING, COMPRESSION (FOR SPOOL RETURN) -----	2
6705-50A	RING, O, NO.1 (FOR VALVE FITTING) -----	4
6705-AA	BOLT -----	1
6705-AD	RING, O -----	1
6705-AE	RING, O -----	3
6705-AG	SPRING -----	1
6705-AH	SPRING, COMPRESSION -----	1
6705-AI	RING, O -----	1
6705-AJ	STOPPER -----	1
6705-AK	HOLDER, SPRING -----	4
6705-AD	PLUG -----	2
6705-AP	RING, O -----	2
6705-AX	RING, O -----	2
6705-AY	RING, O -----	1
6705-BH	PLUG -----	1
6705-BK	VALVE, CHECK -----	1
6705-BL	SEAT, INSERT -----	2
6705-BO	SPRING -----	1
6705-CE	CAP -----	1
6705-CF	SEAL -----	2
6705-CK	SLEEVE -----	1
6705-CL	BOLT -----	14
6705-DY	ELBOW -----	2
6705-EB	NIPPLE -----	1
6705-EG	ELBOW -----	1
6705-FU	CAP -----	1
6705-GI	ELBOW -----	1

FIG. 6709
OIL CONTROL VALVE LINK

6709

 M

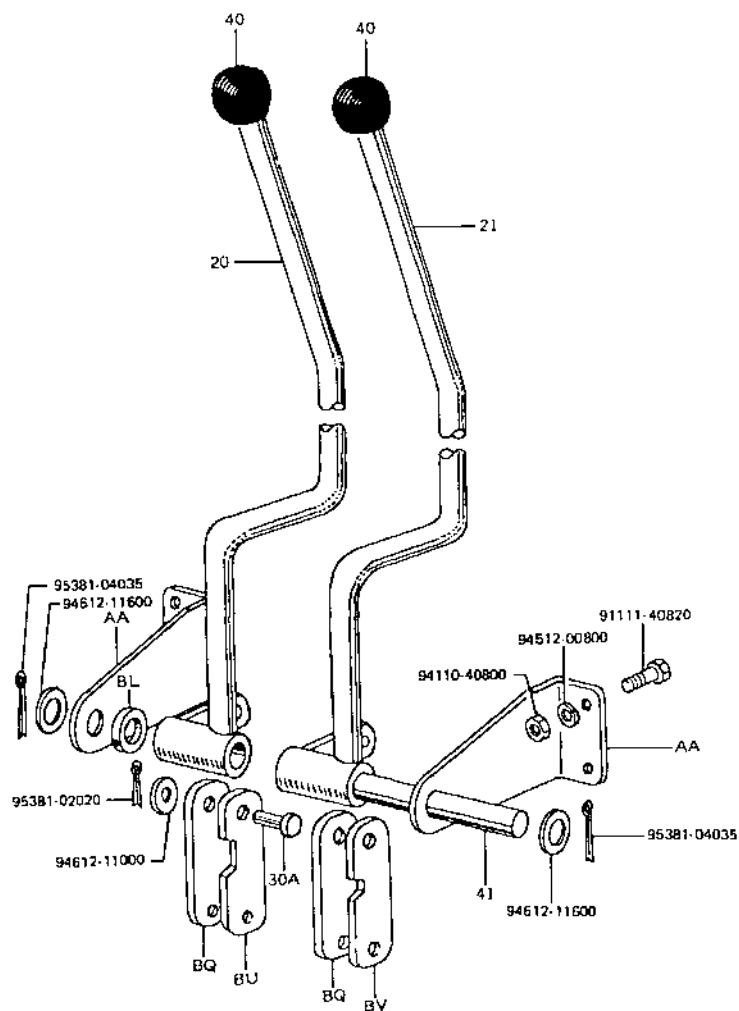

PART NAME CODE	PART NAME	QTY
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2	1
6709-30A	PIN (FOR CONTROL VALVE LEVER ROD)	4
6709-40	KNOB, OIL CONTROL VALVE LEVER	2
6709-41	PIN, OIL CONTROL VALVE LEVER	1
6709-AA	BRACKET SUB-ASSY	1
6709-BL	COLLAR, SUPPORTING PIN	1
6709-BQ	LINK, OIL CONTROL VALVE LEVER	2
6709-BU	LINK, LIFT CONTROL LEVER	1
6709-BV	LINK, TILT CONTROL LEVER	1

6709-073

(M) (11)

6215

6801

F52



6801


PART NAME CODE	PART NAME	QTY
6801-10	FILTER ASSY, SUCTION -----	1
6801-11	FILTER ASSY, RETURN -----	1
6801-15A	PLUG (FOR OIL TANK DRAIN) -----	1
6801-15B	GASKET (FOR OIL TANK DRAIN PLUG) -----	1
6801-20A	RING, O (FOR OIL PUMP INLET) -----	1
6801-23	PIPE SUB-ASSY (TILT CYLINDER FRONT) -----	1
6801-24	PIPE SUB-ASSY (TILT CYLINDER REAR) -----	1
6801-26A	PACKING, OIL TANK COVER -----	2
6801-27	CAP SUB-ASSY, OIL TANK -----	1
6801-28	GAGE SUB-ASSY, OIL LEVEL -----	1
6801-30	HOSE, HIGH PRESSURE, NO.1 (PUMP TO VALVE) --	1
6801-32	HOSE, HIGH PRESSURE, NO.1 (VALVE TO LIFT) --	1
6801-34	HOSE, HIGH PRESSURE, NO.1 (TILT FRONT) -----	2
6801-35	HOSE, HIGH PRESSURE, NO.1 (TILT REAR) -----	2
6801-45	FITTING (FOR TILT CYLINDER) -----	2
6801-46	FITTING (FOR LIFT CYLINDER) -----	1
6801-48	HOSE, LOW PRESSURE (TANK TO P/S PUMP) -----	1
6801-48A	CLAMP -----	2
6801-50	HOSE, LOW PRESSURE, NO.1 (LIFT TO TANK) -----	1
6801-50A	CLAMP (FOR LIFT TO TANK NO.1 HOSE) -----	2- 4
6801-51	HOSE, LOW PRESSURE, NO.1 (VALVE TO TANK) ---	1
6801-51A	CLAMP (FOR VALVE TO TANK NO.1 HOSE) -----	2
6801-54	HOSE, LOW PRESSURE NO.1 (RELIEF TO TANK) ---	1
6801-54A	CLAMP (FOR RELIEF TO TANK NO.1 HOSE) -----	2
6801-55	HOSE, LOW PRESSURE (TANK TO PUMP) -----	1
6801-55A	CLAMP (FOR TANK TO PUMP HOSE) -----	2
6801-60A	PACKING, OIL TANK RETAINER -----	1
6801-69	HOSE, HIGH PRESSURE (P/S PUMP TO CYLINDER) -	1
6801-75	HOSE, HIGH PRESSURE (STEERING TO RELIEF) ---	1
6801-AA	BAND, LIFT CYLINDER OVERFLOW HOSE -----	2- 3
6801-AB	CLAMP -----	1
6801-AD	BOLT -----	6
6801-AI	RING, O -----	2
6801-AM	CLAMP, HOSE -----	3
6801-AR	FITTING -----	1
6801-AT	FITTING -----	2
6801-AU	RING, O -----	1
6801-AV	RING, O -----	1
6801-AW	ELBOW SUB-ASSY, 3-WAY -----	1
6801-AX	CAP, OIL TANK OVERFLOW PIPE -----	1
6801-BK	GUARD, HOSE -----	1
6801-BT	WASHER -----	6
6801-BX	FITTING -----	1
6801-CC	CASE, OIL FILTER -----	1
6801-CH	FITTING -----	1
6801-CK	FILTER, OIL -----	1
6801-CL	COVER, OIL FILTER -----	1
6801-CM	STRAINER SUB-ASSY, OIL TANK -----	1
6801-CN	TUBE, SPIRAL -----	1
6801-CU	ELBOW -----	1
6801-CR	BRACKET, OIL FILTER -----	1
6801-CZ	PIPE SUB-ASSY (LIFT CYLINDER RETURN) -----	1
6801-DP	ELBOW -----	1

(M) (12) 6215

PART NAME CODE	PART NAME	QTY
6801-FI	NIPPLE -----	1
6801-FJ	BRACKET, CLAMP -----	1
6801-FK	BRACKET, CLAMP -----	1
6801-FW	STAY SUB-ASSY, HOSE -----	1

(M) (13) 6215

 6822

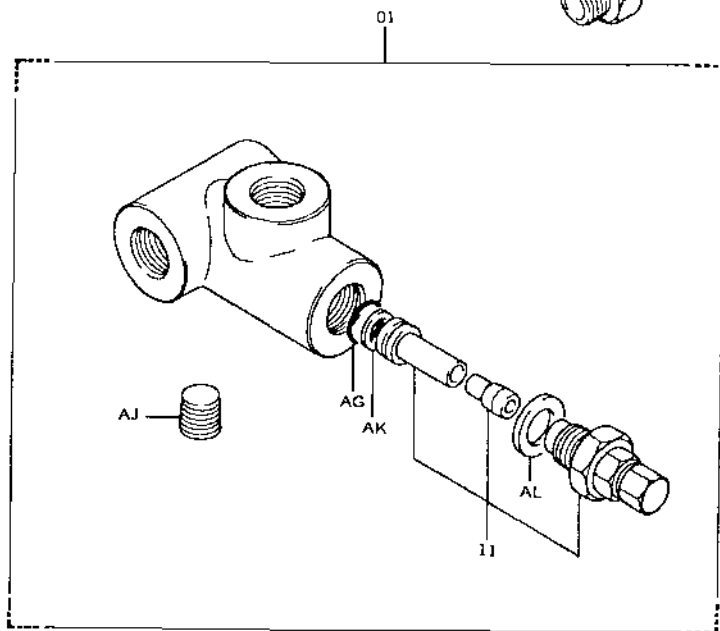


(M) (14) G215

PART NAME CODE	PART NAME	QTY
6822-G1	VALVE ASSY, RELIEF -----	1
6822-11	VALVE SET, RELIEF -----	1
6822-AD	FITTING -----	1
6822-AG	RING, O -----	1
6822-AJ	PLUG -----	1
6822-AK	RING, BACK UP -----	1
6822-AL	GASKET -----	1

FIG. 6101
MAST

 6101








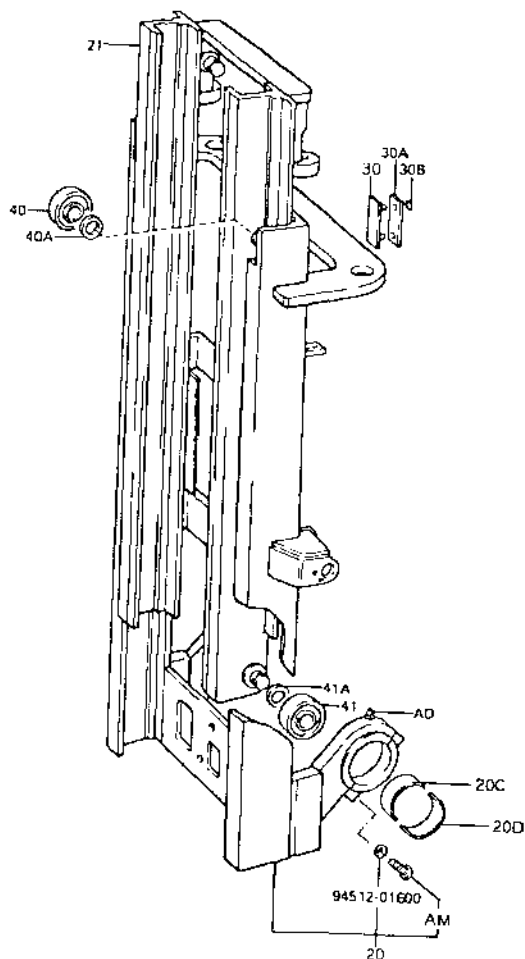


6101 173

PART NAME CODE	PART NAME	QTY
6101-20	MAST SUB-ASSY, OUTER	1
6101-20C	METAL, MAST SUPPORT	2
6101-20D	STOPPER, MAST SUPPORT METAL	2
6101-21	MAST SUB-ASSY, INNER	1
6101-30	STRIP SUB-ASSY, OUTER MAST	2
6101-30A	SHIM, OUTER MAST STRIP	99
6101-30B	RING, O (FOR OUTER MAST STRIP)	4
6101-31	STRIP SUB-ASSY, MIDDLE MAST	2
6101-40	ROLLER, LIFT (FOR OUTER MAST)	2
6101-40A	SHIM, LIFT ROLLER (FOR OUTER MAST)	99
6101-41	ROLLER, LIFT (FOR INNER MAST)	2
6101-41A	SHIM, LIFT ROLLER (FOR INNER MAST)	99
6101-AD	FITTING, GREASE	2
6101-AM	BOLT	4

(V) (1) 6215

        6301

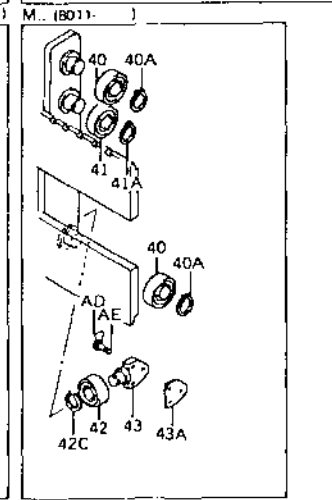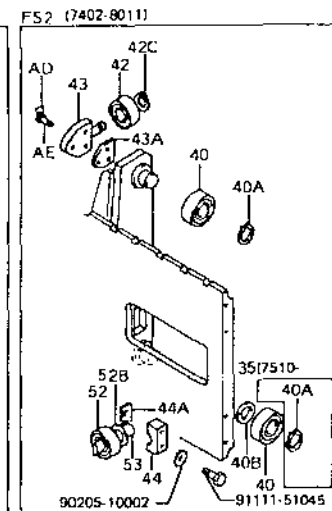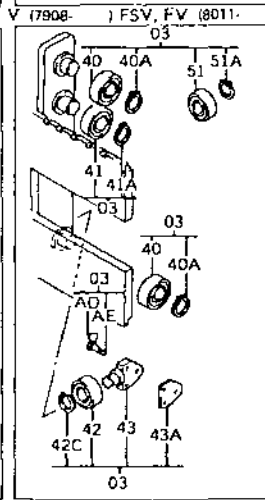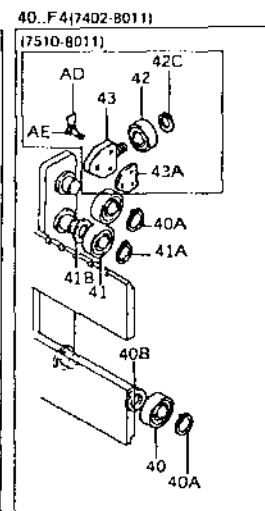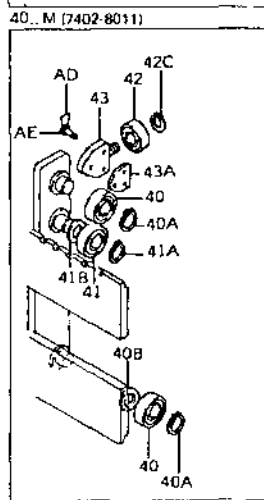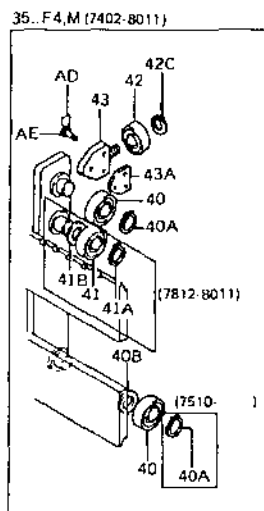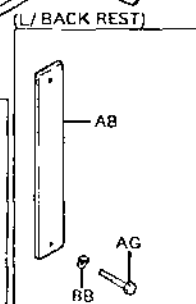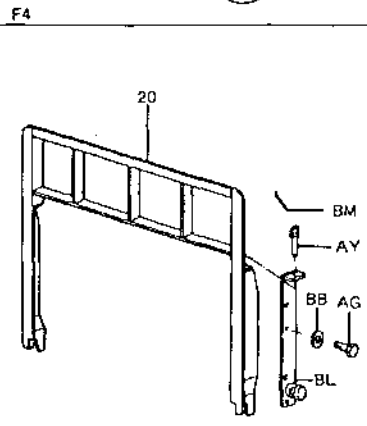


6301

PART NAME CODE	PART NAME	QTY
6301-03	BRACKET ASSY, LIFT -----	1
6301-20	BACKREST SUB-ASSY -----	1
6301-21	FURK SUB-ASSY -----	2
6301-22	BRACKET SUB-ASSY, LIFT -----	1
6301-40	ROLLER, LIFT (UPPER, LOWER) -----	4
6301-40A	RING, SHAFT SNAP (UPPER, LOWER) -----	4
6301-41	ROLLER, LIFT (CENTER) -----	2
6301-41A	RING, SHAFT SNAP (CENTER) -----	2
6301-42	ROLLER, SIDE -----	2- 4
6301-42C	RING, SHAFT SNAP (FOR SIDE ROLLER) -----	2
6301-43	SHAFT, SIDE ROLLER -----	2- 4
6301-43A	SHIM (FOR SIDE ROLLER SHAFT) -----	99
6301-46	PIN, FORK STOPPER -----	2
6301-47	KNOB, FORK STOPPER PIN -----	2
6301-48	SPRING, FORK STOPPER PIN -----	2
6301-49	PIN, SPRING (FOR FORK STOPPER PIN) -----	2
6301-51	ROLLER, SIDE (OUTER) -----	2
6301-51A	RING, SHAFT SNAP -----	2
6301-AD	WIRE, LOCK -----	2
6301-AE	BOLT -----	6
6301-AG	BOLT -----	8
6301-BB	WASHER -----	8

(V) (2) 6215

FIG. 6302
CHAIN & CHAIN WHEEL

 6302

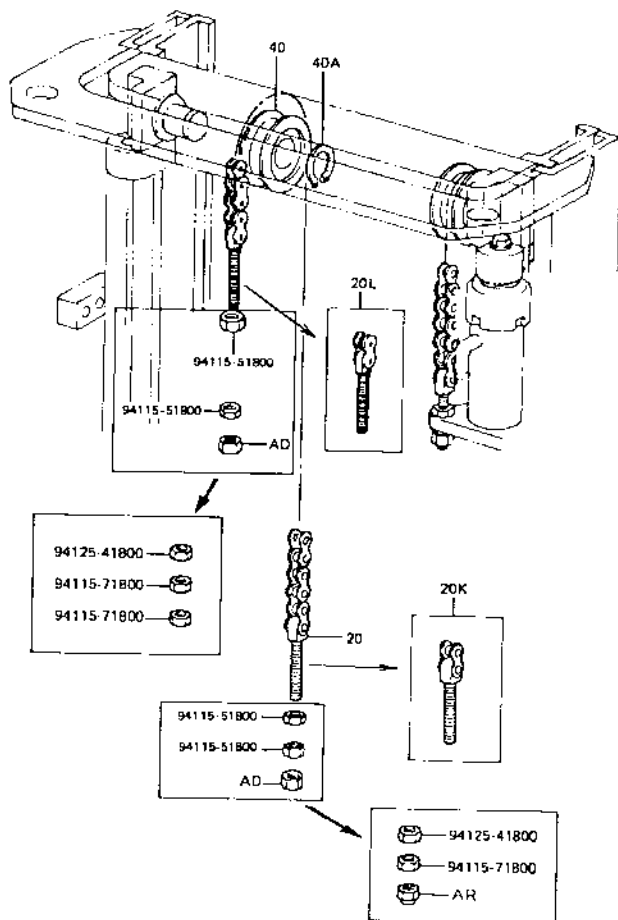

6302 108

PART NAME CODE	PART NAME	QTY
6302-20	CHAIN SUB-ASSY -----	2
6302-20K	BOLT KIT, CHAIN ANCHOR, NO.1 -----	2
6302-20L	BOLT KIT, CHAIN ANCHOR, NO.2 -----	2
6302-40	WHEEL, CHAIN -----	2
6302-40A	RING, SHAFT SNAP (FOR CHAIN WHEEL) -----	2
6302-AR	NUT, LOCK -----	2


(V) (3)

G215

FIG. 6501
LIFT CYLINDER

6501

 V

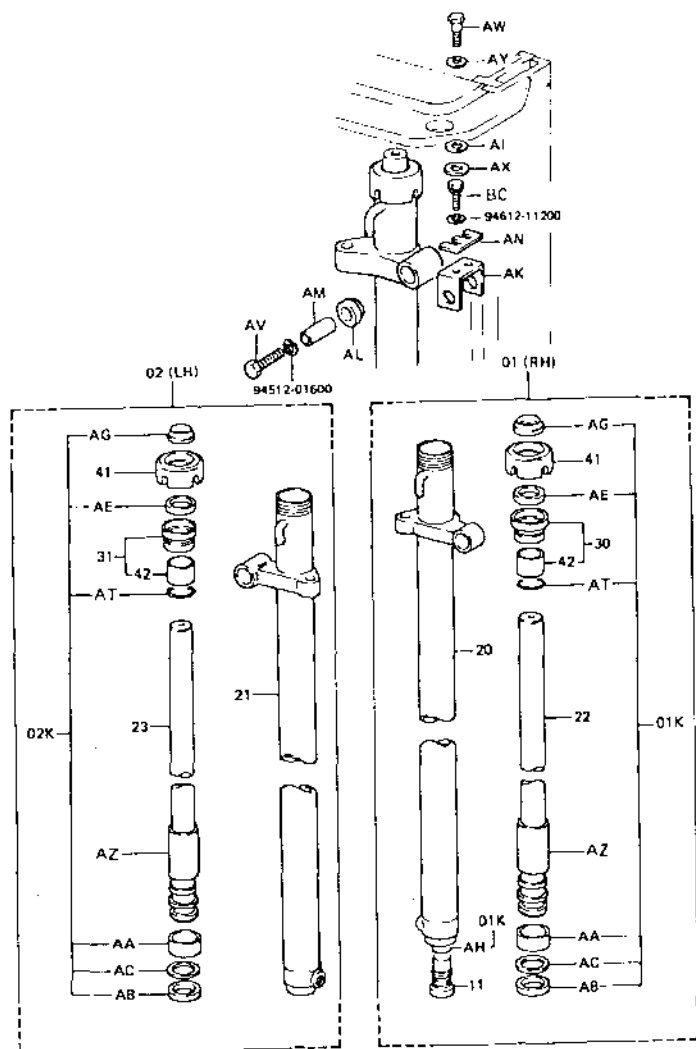

6501-031

PART NAME CODE	PART NAME	QTY
6501-01	CYLINDER ASSY, LIFT, RH	1
6501-01K	CYLINDER G/H KIT, LIFT, RH	1
6501-02	CYLINDER ASSY, LIFT, LH	1
6501-02K	CYLINDER G/H KIT, LIFT, LH	1
6501-11	VALVE ASSY, SAFETY DOWN	1
6501-20	CYLINDER SUB-ASSY, LIFT, RH	1
6501-21	CYLINDER SUB-ASSY, LIFT, LH	1
6501-22	ROD SUB-ASSY, LIFT CYLINDER, RH	1
6501-23	ROD SUB-ASSY, LIFT CYLINDER, LH	1
6501-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD, RH	1
6501-31	GUIDE SUB-ASSY, LIFT CYLINDER ROD, LH	1
6501-41	COVER, LIFT CYLINDER	2
6501-42	SLEEVE, LIFT CYLINDER ROD GUIDE	2
6501-AA	RING, WEAR	2
6501-AB	PACKING, U	2
6501-AC	RING, BACK UP	2
6501-AE	PACKING, U	2
6501-AG	SEAL, DUST	2
6501-AH	RING, O	1
6501-AI	SHIM	99
6501-AK	BRACKET SUB-ASSY, LIFT CYLINDER	2
6501-AL	BUSHING	4
6501-AM	SPACER	2
6501-AN	SHIM	99
6501-AQ	RING, O	2
6501-AW	BOLT	2
6501-AX	BOLT	2
6501-AY	WASHER	2
6501-AZ	RUBBER	2
6501-BB	SPACER, LIFT CYLINDER	2
6501-BC	BOLT, W/WASHER	4

(V) (A)

6215

6511

Y

TABLE OF TILT RANGE

■ 511-052

6511



PART NAME CODE	PART NAME	QTY
6511-01	CYLINDER ASSY, TILT -----	1
6511-01K	CYLINDER O/H KIT, TILT -----	2
6511-20	CYLINDER SUB-ASSY, TILT -----	1
6511-21	ROD SUB-ASSY, TILT CYLINDER PISTON -----	2
6511-21B	NUT, CASTLE -----	2
6511-30	GUIDE SUB-ASSY, TILT CYLINDER ROD -----	2
6511-31	PIN SUB-ASSY, TILT CYLINDER, FR -----	2
6511-40	PISTON, TILT CYLINDER -----	2
6511-41	COVER, TILT CYLINDER -----	2
6511-42	SLEEVE, TILT CYLINDER ROD GUIDE -----	2
6511-44	JOINT, PISTON ROD -----	2
6511-AB	SEAL, CLST -----	2
6511-AC	RING, BACK UP -----	4
6511-AD	RING, O -----	2
6511-AE	RING, BACK UP -----	2
6511-AF	PACKING, U -----	2
6511-AH	RING, HOLE SNAP -----	2
6511-AI	RING, O -----	2
6511-AJ	PACKING, U -----	4
6511-AK	SHIM, TILT CONTROL -----	99
6511-AL	SPACER, TILT CONTROL -----	2
6511-AM	RING, O -----	4
6511-BO	RING, BACK UP -----	2
6511-BM	RING, PACKING STOP -----	2

(V) (8)

C215

FIG-6701
OIL PUMP

  6701

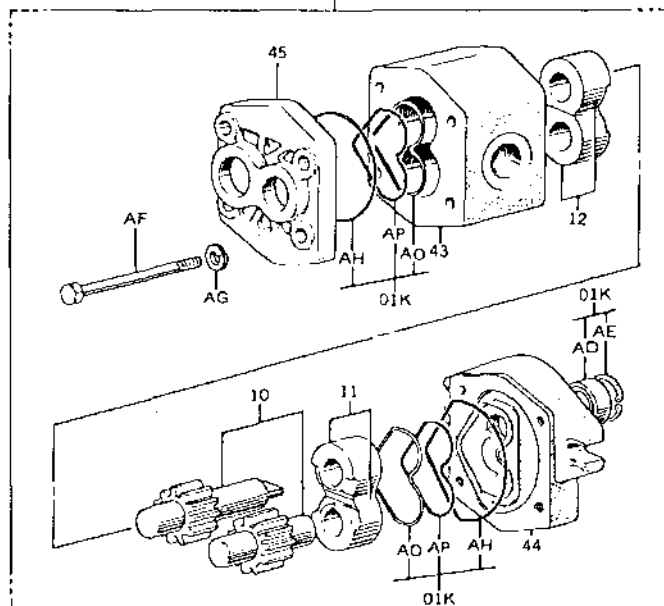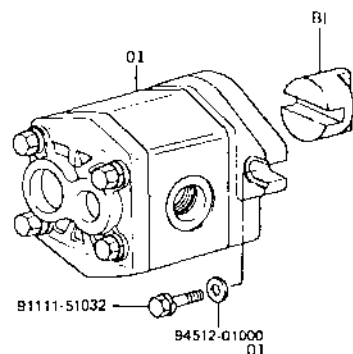

6701 041


PART NAME CODE	PART NAME	QTY
6701-01	PUMP ASSY, OIL	1
6701-01K	PUMP O/H KIT, OIL	1
6701-10	GEAR SET	1
6701-11	BUSH SET, NO.1	1
6701-12	BUSH SET, NO.2	1
6701-43	BODY	1
6701-44	FLANGE, MOUNTING	1
6701-45	COVER	1
6701-AD	SEAL, OIL	2
6701-AE	RING, SNAP	1
6701-AF	BOLT	4
6701-AG	WASHER, SPRING	4
6701-AH	SEAL, BODY	2
6701-AO	SPACER	2
6701-AP	GASKET	2
6701-B1	JOINT, OLDHAM	1

(V) (S) 0215

FIG. 6822
RELIEF VALVE

6822

 V

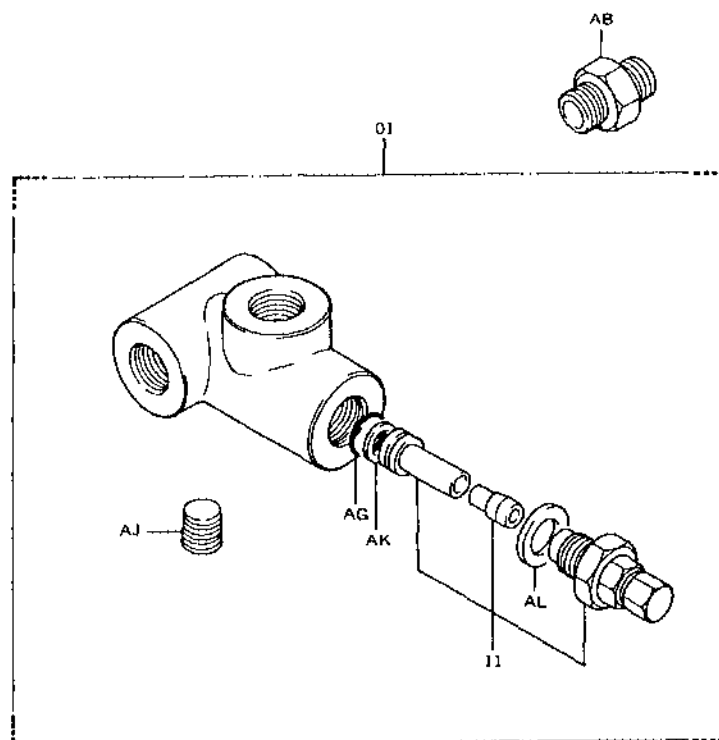

6822 003


PART NAME CODE	PART NAME	QTY
6822-01	VALVE ASSY, RELIEF	1
6822-11	VALVE SET, RELIEF	1
6822-AB	FITTING	1
6822-AG	RING, U	1
6822-AJ	PLUG	1
6822-AK	RING, BACK UP	1
6822-AL	GASKET	1

(V) (14)

6715



 6705




6105-150

(V) (10) G215

FIG. 6709
OIL CONTROL VALVE LINK

 6709

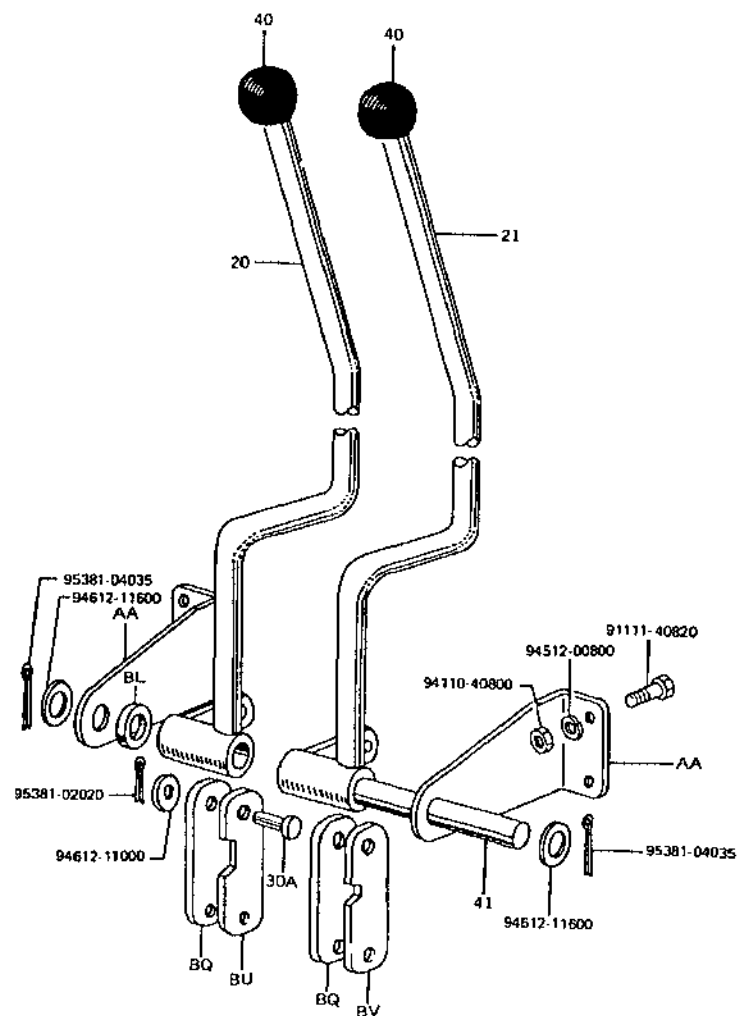

6709 073

PART NAME CODE	PART NAME	QTY
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2	1
6709-30A	PIN (FOR CONTROL VALVE LEVER ROD)	4
6709-40	KNOB, OIL CONTROL VALVE LEVER	2
6709-41	PIN, OIL CONTROL VALVE LEVER	1
6709-AA	BRACKET SUB-ASSY	1
6709-BL	COLLAR, SUPPORTING PIN	1
6709-BQ	LINK, OIL CONTROL VALVE LEVER	2
6709-BU	LINK, LIFT CONTROL LEVER	1
6709-BV	LINK, TILT CONTROL LEVER	1

(V) (11)

6215

6801



6801

PART NAME CODE	PART NAME	QTY
6801-10	FILTER ASSY, SUCTION	1
6801-11	FILTER ASSY, RETURN	1
6801-12	VALVE ASSY, FLOW REGULATOR	1
6801-13A	PLUG (FOR OIL TANK DRAIN)	1
6801-15B	GASKET (FOR OIL TANK DRAIN PLUG)	1
6801-20A	RING, O (FOR OIL PUMP INLET)	1
6801-23	PIPE SUB-ASSY (TILT CYLINDER FRONT)	1
6801-24	PIPE SUB-ASSY (TILT CYLINDER REAR)	1
6801-26A	PACKING, OIL TANK COVER	2
6801-27	CAP SUB-ASSY, OIL TANK	1
6801-28	GAGE SUB-ASSY, OIL LEVEL	1
6801-30	HOSE, HIGH PRESSURE, NO.1 (PUMP TO VALVE)	1
6801-32	HOSE, HIGH PRESSURE, NO.1 (VALVE TO LIFT)	1
6801-33	HOSE, HIGH PRESSURE, NO.2 (VALVE TO LIFT)	2
6801-34	HOSE, HIGH PRESSURE, NO.1 (TILT FRONT)	2
6801-35	HOSE, HIGH PRESSURE, NO.1 (TILT REAR)	2
6801-43	FITTING (FOR TILT CYLINDER)	2
6801-46	FITTING (FOR LIFT CYLINDER)	2
6801-48	HOSE, LOW PRESSURE (TANK TO P/S PUMP)	1
6801-48A	CLAMP	2
6801-50	HOSE, LOW PRESSURE, NO.1 (LIFT TO TANK)	2
6801-50A	CLAMP (FOR LIFT TO TANK NO.1 HOSE)	4
6801-51	HOSE, LOW PRESSURE, NO.1 (VALVE TO TANK)	1
6801-51A	CLAMP (FOR VALVE TO TANK NO.1 HOSE)	2
6801-54	HOSE, LOW PRESSURE NO.1 (RELIEF TO TANK)	1
6801-54A	CLAMP (FOR RELIEF TO TANK NO.1 HOSE)	2
6801-55	HOSE, LOW PRESSURE (TANK TO PUMP)	1
6801-55A	CLAMP (FOR TANK TO PUMP HOSE)	2
6801-59	HOSE, LOW PRESSURE, NO.2 (LIFT TO TANK)	1
6801-59A	CLAMP (FOR LIFT TO TANK NO.2 HOSE)	2
6801-60A	PACKING, OIL TANK RETAINER	1
6801-69	HOSE, HIGH PRESSURE (P/S PUMP TO CYLINDER)	1
6801-75	HOSE, HIGH PRESSURE (STEERING TO RELIEF)	1
6801-AA	BAND, LIFT CYLINDER OVERFLOW HOSE	6
6801-AB	CLAMP	1
6801-AC	RING, O	1
6801-AD	BOLT	6
6801-AI	RING, O	2
6801-AM	CLAMP, HOSE	3
6801-AP	PIPE	1
6801-AR	FITTING	1
6801-AT	FITTING	2
6801-AU	RING, O	2
6801-AV	RING, O	1
6801-AW	ELBOW SUB-ASSY, 3-WAY	1
6801-AX	LAP, OIL TANK OVERFLOW PIPE	1
6801-AZ	SPRING, COMPRESSION	1
6801-BA	PLUG	1
6801-BB	SPRING, COMPRESSION	1
6801-BC	BALL, STEEL	1
6801-BD	RING, O	1
6801-BM	NUT	2
6801-BO	RING, O	1

(V) (12) 6215

PART NAME CODE	PART NAME	QTY
6801-BT	WASHER	6
6801-BW	BOLT	2
6801-BX	FITTING	1
6801-CC	CASE, OIL FILTER	1
6801-CH	FITTING	1
6801-CI	FITTING	1
6801-CK	FILTER, OIL	1
6801-CL	COVER, OIL FILTER	1
6801-CM	STRAINER SUB-ASSY, OIL TANK	1
6801-CN	TUBE, SPIRAL	1
6801-CO	ELBOW	1
6801-CR	BRACKET, OIL FILTER	1
6801-CZ	PIPE SUB-ASSY (LIFT CYLINDER RETURN)	1
6801-DP	ELBOW	1
6801-EL	FITTING	1
6801-ET	FITTING	1
6801-EU	FITTING	1
6801-FA	RING, O	1
6801-FC	WASHER	2
6801-FI	NIPPLE	1
6801-FJ	BRACKET, CLAMP	1
6801-FK	BRACKET, CLAMP	1

(V) (13) 6215