

TOYOTA INDUSTRIAL VEHICLE

PARTS CATALOG

02-3FG33, 35, 40
02-FGE35, FG45

No.G300-4

TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.

TOYOTA

FORKLIFT TRUCK

PARTS CATALOG

MODEL	-----	-	<u>FG</u>	-----
FRAME NO.			<u>FG</u>	-----
ENGINE NO.			<u>2F</u>	-----
LIFTING HEIGHT				----- mm

DESCRIPTION

LPG Convertible Type	Cyclone Air Cleaner Dual Element
LPG Exclusive Type	UL-approved Model Type G
Upswept Exhaust	UL-approved Model Type GS
Catalytic Muffler	Fully Oil Charged Lift Cylinder
Cyclone Air Cleaner Single Element	

TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.

QUICK REFERENCE INDEX

INTRODUCTION

ENGINE

FUEL SYSTEM

CHASSIS

BODY

ELECTRICAL SYSTEM

MAST

HYDRAULIC SYSTEM

G300-3 (2F, MTM)
 G300-4 (2F, ATM) 8511

GENERAL INFORMATION

This parts catalog has been prepared for the customers of Toyota Industrial Vehicles and this shows only the part name codes instead of parts numbers.

When ordering parts from your local Toyota dealer, please specify the complete model number of the truck, the engine number or frame number. Also it is essential that you specify the part name codes described in the pages of illustrations and text.

The complete model number and frame number are shown in the front page of this catalog. All the columns in this quick reference index are supposed to be filled out by both the factory and your local dealer.

For the industrial vehicle with optional equipment, which is described in the lower part of the DESCRIPTION, it is imperative for you to specify optional equipment when ordering parts.

Your Toyota dealer has always been furnished with enough information to decode the correct part numbers based on your information of model number, engine number or frame number as well as part name code.

INFORMATIONS D'ORDRE GENERAL

Ce catalogue de pièces a été préparé pour les propriétaires de Véhicules Industriels Toyota. On n'y trouvera que les codes de désignation de pièces au lieu des numéros de pièces.

Pour la commande de pièces auprès de votre concessionnaire Toyota, prière de spécifier le numéro de modèle complet de l'engin, le numéro du moteur ou le numéro du châssis. Il est aussi nécessaire de spécifier les codes de désignation de pièces comme ils sont décrits dans les pages d'illustrations et dans le texte.

Le numéro de modèle complet et le numéro de châssis sont indiqués en première page de ce catalogue. Toutes les colonnes de l'index de référence rapide devraient être remplies par l'usine et par votre concessionnaire.

Pour le véhicule industriel avec équipement optionnel, décrit en bas de page sous la rubrique "DESCRIPTION", il convient de bien spécifier qu'il s'agit de cet équipement lors de commande de pièces.

Votre concessionnaire Toyota est toujours suffisamment informé pour décoder les numéros de pièces sur la base de votre information du numéro de modèle, du numéro de moteur ou de châssis, et des codes de désignation de pièces.

INFORMACION GENERAL

Este catálogo de piezas ha sido preparado para los clientes de vehículos industriales de TOYOTA, e incluye tan sólo los códigos de nombre de pieza en lugar de los números de pieza.

Cuando solicite piezas a su distribuidor local de TOYOTA especifique por favor el número de modelo completo del vehículo, el número de motor o el número de bastidor. Asimismo, es esencial que Vd. especifique los códigos de nombre de pieza descritos en las páginas de ilustraciones y de texto.

El número completo de modelo y el número de bastidor se indican en la portada de este catálogo. Se supone que todas las columnas de este índice de referencia se han rellonado, tanto por parte de la fábrica como por parte de su distribuidor local.

En lo que concierne a los vehículos industriales con equipos opcionales, que se describen en la parte baja de la DESCRIPCION, es absolutamente necesario que especifique equipos opcionales cuando solicite piezas de repuesto.

Su distribuidor local de TOYOTA posee la información necesaria para descifrar los números correctos de cada pieza a base de su información de número de modelo, número de motor o número de bastidor, así como el código de nombre de la pieza.

ALLGEMEINE INFORMATION

Dieser Teilekatalog wurde für die Benutzer von Toyota Industriefahrzeugen zusammengestellt und zeigt anstelle von Teilenummern nur die Teilennamen-Kodes.

Geben Sie bei Teilebestellungen von Ihrem Toyota-Händler am Platz bitte die vollständige Modellnummer des Fahrzeugs, die Motornummer oder Fahrgestellnummer an. Es ist auch erforderlich, daß Sie die in den Illustrationen und im Text beschriebenen Teilennamen-Kodes angeben.


Die vollständige Modellnummer und Fahrgestellnummer finden Sie auf der Vorderseite dieses Katalogs. Alle Spalten in dieser Bezugsstabelle sollen sowohl vom Werk als von Ihrem Händler am Platz ausgefüllt werden.

Für Industriefahrzeuge mit Sonderausrüstung, welche im unteren Teil der BESCHREIBUNG erläutert ist, müssen Sie bei der Bestellung von Teilen unbedingt diesbezügliche Angaben machen.

Ihr Toyota-Händler verfügt stets über genügend Information, um die richtigen Teilenummern zu entschlüsseln, basiert auf Ihren Angaben zu Modellnummer, Motornummer oder Fahrgestellnummer und den Teilennamen-Kodes.

ILLUSTRATION ET COMPOSITION DU DE TEXTE DE CODE DE DESIGNATION DE PIECE

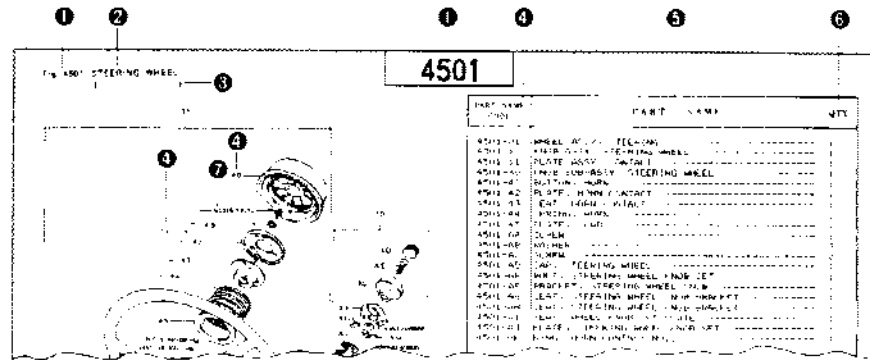 Une (1) page contiendra essentiellement une illustration et ses codes de désignation de pièce. Toutefois, lorsque l'espace réservé au texte est insuffisant, la continuation se trouvera sur la page suivante.



- 1 Numéro de figure
Ce catalogue de pièces a été préparé en fonction des numéros de figures.
- 2 Titre de figure
Une désignation de pièce représentative, celle d'une pièce d'un ensemble important, est indiquée comme titre de figure de l'illustration.
- 3 Sous-titre
La désignation optionnelle ou les spécifications spéciales de chaque illustration sont indiquées.
- 4 Code de désignation de pièce
Obtenu en combinant le numéro de figure et les codes des illustrations inhérents à chaque pièce, ce code permettra à votre concessionnaire Toyota de trouver les numéros de pièces corrects.
- 5 Désignation de pièce
La désignation de la pièce est indiquée pour chacun des codes de désignation de pièce.
- 6 Q'ty (quantité)
La colonne quantité indique les pièces utilisées de l'unité de code de désignation de pièce. La quantité maximum est indiquée quand la quantité utilisée diffère pour chacun des véhicules. Quand la quantité de pièces utilisées diffère ou lorsqu'elle dépasse 100 pièces, la quantité 99 est indiquée.
- 7 Numéros de pièces standard
Les pièces standard comme les boulons, les écrous, les rondelles, etc., sont décrits dans les numéros de pièces. Pour commander ces pièces, prière de spécifier les numéros de pièces.

ABBILDUNG UND TEXTSEITENAUFBAU FÜR TEILENAMEN-KODE


Grundsätzlich finden Sie auf einer (1) Seite sowohl die Abbildung als auch den Teilnamen-Kode.

Wenn für den Text jedoch nicht genügend Platz vorhanden ist, wird er auf der nächsten Seite fortgesetzt.

- 1 Abbildungsnummer
Dieser Teilkatalog wurde nach Abbildungsnummern zusammengestellt.
- 2 Abbildungstitel
Ein stellvertretender Teilname, welcher zugleich die Bezeichnung für die Hauptbaugruppe ist, wird als Abbildungstitel der Illustration angegeben.
- 3 Untertitel
Ein zusätzlicher Name oder eine besondere Kennzeichnung werden für jede Illustration angegeben.
- 4 Teilnamen-Kode
Dies ist eine Kombination von ziffern und Abbildungskodes, die jedes Teil betreffen. Es ist ein Schlüssel für Ihren Toyota-Händler, um die richtigen Teilenummern zu finden.
- 5 Teilname
Grundsätzlich wird der Teilname für alle Teilnamen-Kodes angegeben.
- 6 QTY (Menge)
Die Mengenspalte gibt die benutzte Stückzahl von Teilnamen-Kode Einheiten an.
Wenn die benutzte Stückzahl je nach Fahrzeug verschieden ist, wird die Höchstmenge angegeben.
Wenn die benutzte Menge 100 Stück überschreiten kann, wird als Menge 99 angegeben.
- 7 Standardteile-Nummern
Die Standardteile, wie Schrauben, Muttern, Unterlegscheiben usw., sind in den Teilenummern beschrieben. Geben Sie bei Bestellung dieser Teile die Teilenummern an.

ILLUSTRATION AND PART NAME CODE TEXT PAGE COMPOSITION

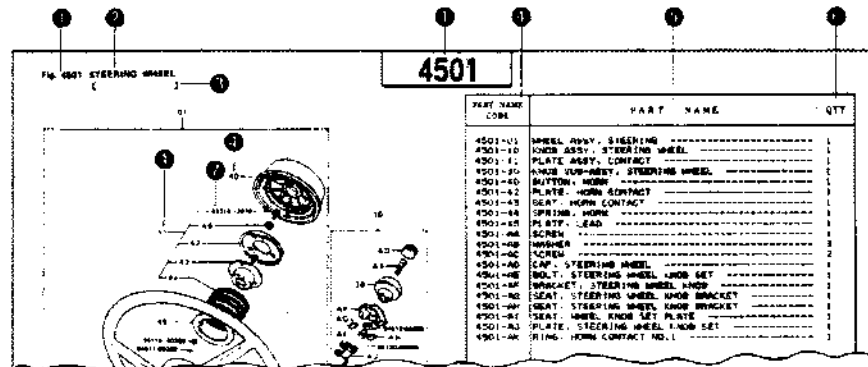 Essentially, one (1) page will present both the illustration and part name code. However, when the space for text page is not enough the next page will be used in succession.



- 1 Figure number
This parts catalog has been prepared according to the figure numbers.
- 2 Figure title
A representative part name which is the major assembly part name is shown as the figure title of the illustration.
- 3 Sub title
The optional name or special specification of each illustration are indicated.
- 4 Part name code
This is a combination of figure number and codes of illustrations pertaining to each part. This is a key for your Toyota dealer to find the correct part numbers.
- 5 Part name
As a rule, the part name is indicated for each of the part name codes.
- 6 QTY (Quantity)
The quantity column indicates the utilized pieces of part name code unit. When the utilized quantity changes according to each of the vehicles, maximum is indicated.
When the utilized quantity of the parts differs or is more than 100 pieces, quantity 99 is indicated.
- 7 Standard parts numbers
The standard parts such as the bolts, nuts, washer, etc. are described with parts numbers. When ordering these parts, specify parts numbers.

COMPOSICION DE LAS PAGINAS DE ILUSTRACIONES Y DE TEXTO DE CODIGOS DE NOMBRE DE PIEZAS

Básicamente, una (1) página incluirá tanto la ilustración como el código de nombre de la pieza.

No obstante, si el espacio no fuese suficiente, se utilizará la página siguiente.

- 1 Número de figura
Este catálogo de piezas se ha preparado de acuerdo con los números de las figuras.
- 2 Título de las figuras
Como título de las figuras de la página de ilustraciones, se incluye un nombre que sea representativo del nombre del mayor conjunto.
- 3 Subtítulo
Se indican el nombre opcional o las especificaciones especiales de cada ilustración.
- 4 Código de nombre de pieza
Se trata de una combinación de número de figura y de código de las ilustraciones correspondientes a cada pieza. Esta es la clave para que su distribuidor local de TOYOTA pueda encontrar el número de pieza correcto.
- 5 Nombre de la pieza
Como norma, se indica el nombre de cada uno de los códigos de nombre de pieza.
- 6 QTY (Cantidad)
La columna de cantidad indica el número de piezas utilizadas de cada unidad de código de nombre de pieza.
Cuando la cantidad utilizada es intercambiable entre cada uno de los vehículos, se indica el máximo.
Cuando la cantidad de piezas utilizadas pueda diferir o ser superior a 100, se indica como cantidad 99.
- 7 Números de piezas normalizadas
Las piezas corrientes, tales como pernos, tuercas, arandelas etc., se describen con número de pieza. Cuando solicite tales piezas, indique su número de pieza.

DATA PLATE & SERIAL NUMBERS

For retrieving correct part numbers, it's indispensable to know the truck model, as well as frame number (or engine number).
Customers can obtain said information in the data plate on the truck or in this user parts catalog.

PLAQUE DE DONNEES TECHNIQUES & NUMEROS DE SERIE

Pour relever correctement le numéro des pièces, il est indispensable de connaître le modèle de l'engin, ainsi que le numéro du châssis (ou du moteur).
Les propriétaires peuvent trouver ladite information sur la plaque de données techniques de l'engin ou dans le présent ouvrage.


PLACA DE DATOS Y NUMEROS DE SERIE

Para obtener los números de pieza correctos, es indispensable conocer el modelo del vehículo, así como el número del bastidor (o del motor).
Los clientes pueden obtener dicha información por la placa de datos del vehículo o este catálogo de piezas para el usuario.


DATENPLATTE & SERIENNUMMERN

Um die richtige Teilenummer zu ermitteln, müssen unbedingt das Fahrzeugmodell sowie die Fahrgestellnummer (oder die Motornummer) bekannt sein.
Kunden können diese Angaben von der Datenplatte am Fahrzeug oder in diesem Teilekatalog für Benutzer entnehmen.

Data plate
Placa de datos
Plaque de données techniques
Datenplatte

 TOYOTA LIFT TRUCK	
MODEL	_____
CODE NO. OF SPECIAL MODEL, MODEL OF ATTACHMENT	_____
FRAME NO.	_____
LIFTING HEIGHT	_____
CAPACITY	_____
WEIGHT	_____
PROD. YEAR	_____
TOYODA AUTOMATIC LOOM WORKS, LTD. KARIYA, JAPAN	

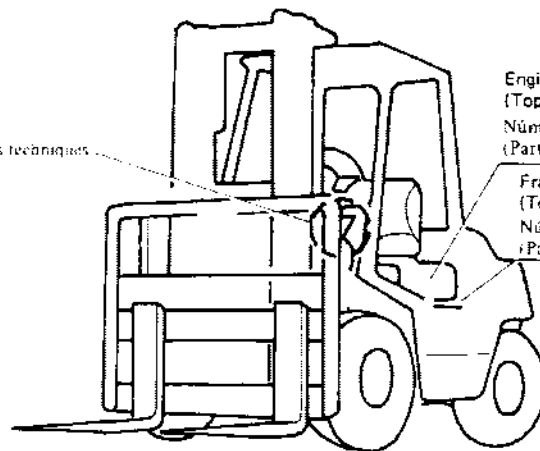 Data plate
Placa de datos
Plaque de données techniques
Datenplatte



Engine Number
(Top of the cylinder head)
Número de motor
(Parte superior de la culata)

Numéro de moteur
(sur la culasse)
Motornummer
(Oben am Zylinderkopf)

Frame Number
(Top of the frame)
Número de bastidor
(Parte superior del bastidor)

Numéro de châssis
(haut du châssis)
Fahrgestellnummer
(Oben am Fahrgestell)

GENERAL INFORMATION

This parts catalog has been prepared for the customers of Toyota Industrial Vehicles and this shows only the part name codes instead of parts numbers.

When ordering parts from your local Toyota dealer, please specify the complete model number of the truck, the engine number or frame number. Also it is essential that you specify the part name codes described in the pages of illustrations and text.

The complete model number and frame number are shown in the front page of this catalog. All the columns in this quick-reference index are supposed to be filled out by both the factory and your local dealer.

For the industrial vehicle with optional equipment, which is described in the lower part of the DESCRIPTION, it is imperative for you to specify optional equipment when ordering parts.

Your Toyota dealer has always been furnished with enough information to decode the correct part numbers based on your information of model number, engine number or frame number as well as part name code.

INFORMATIONS D'ORDRE GENERAL

Ce catalogue de pièces a été préparé pour les propriétaires de Véhicules Industriels Toyota. On n'y trouvera que les codes de désignation de pièces au lieu des numéros de pièces.

Pour la commande de pièces auprès de votre concessionnaire Toyota, prière de spécifier le numéro de modèle complet de l'engin, le numéro du moteur ou le numéro du châssis. Il est aussi nécessaire de spécifier les codes de désignation de pièces comme ils sont décrits dans les pages d'illustrations et dans le texte.

Le numéro de modèle complet et le numéro de châssis sont indiqués en première page de ce catalogue. Toutes les colonnes de l'index de référence rapide devraient être remplies par l'usine et par votre concessionnaire.

Pour le véhicule industriel avec équipement optionnel, décrit en bas de page sous la rubrique "DESCRIPTION", il convient de bien spécifier qu'il s'agit de cet équipement lors de commande de pièces.

Votre concessionnaire Toyota est toujours suffisamment informé pour décoder les numéros de pièces sur la base de votre information du numéro de modèle, du numéro de moteur ou de châssis, et des codes de désignation de pièces.

INFORMACION GENERAL

Este catálogo de piezas ha sido preparado para los clientes de vehículos industriales de TOYOTA, e incluye tan sólo los códigos de nombre de pieza en lugar de los números de pieza.

Cuando solicite piezas a su distribuidor local de TOYOTA especifique por favor el número de modelo completo del vehículo, el número de motor o el número de bastidor. Asimismo, es esencial que Vd. especifique los códigos de nombre de pieza descritos en las páginas de ilustraciones y de texto.

El número completo de modelo y el número de bastidor se indican en la portada de este catálogo. Se supone que todas las columnas de este índice de referencia se han rellenado, tanto por parte de la fábrica como por parte de su distribuidor local.

En lo que concierne a los vehículos industriales con equipos opcionales, que se describen en la parte baja de la DESCRIPCION, es absolutamente necesario que especifique equipos opcionales cuando solicite piezas de repuesto.

Su distribuidor local de TOYOTA posee la información necesaria para descifrar los números correctos de cada pieza a base de su información de número de modelo, número de motor o número de bastidor, así como el código de nombre de la pieza.

ALLGEMEINE INFORMATION

Dieser Teilekatalog wurde für die Benutzer von Toyota Industriefahrzeugen zusammengestellt und zeigt anstelle von Teilenummern nur die Teilennamen-Kodes.

Geben Sie bei Teilebestellungen von Ihrem Toyota-Händler am Platz bitte die vollständige Modellnummer des Fahrzeugs, die Motornummer oder Fahrgestellnummer an. Es ist auch erforderlich, daß Sie die in den Illustrationen und im Text beschriebenen Teilennamen-Kodes angeben.


Die vollständige Modellnummer und Fahrgestellnummer finden Sie auf der Vorderseite dieses Katalogs. Alle Spalten in dieser Bezugsstabelle sollen sowohl vom Werk als von Ihrem Händler am Platz ausgefüllt werden.

Für Industriefahrzeuge mit Sonderausrüstung, welche im unteren Teil der BESCHREIBUNG erläutert ist, müssen Sie bei der Bestellung von Teilen unbedingt diesbezügliche Angaben machen.

Ihr Toyota-Händler verfügt stets über genügend Information, um die richtigen Teilenummern zu entschlüsseln, basiert auf Ihren Angaben zu Modellnummer, Motornummer oder Fahrgestellnummer und den Teilennamen-Kodes.

ILLUSTRATION ET COMPOSITION DU DE TEXTE DE CODE DE DESIGNATION DE PIECE

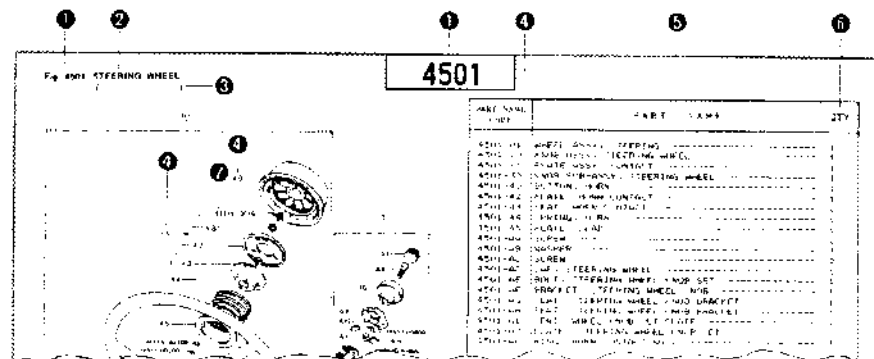 Une page contiendra essentiellement une illustration et ses codes de désignation de pièce. Toutefois, lorsque l'espace réservé au texte est insuffisant, la continuation se trouvera sur la page suivante.



- Numero de figure**
Ce catalogue de pièces a été préparé en fonction des numéros de figures.
- Titre de figure**
Une désignation de pièce représentative, celle d'une pièce d'un ensemble important, est indiquée comme titre de figure de l'illustration.
- Sous-titre**
La désignation optionnelle ou les spécifications spéciales de chaque illustration sont indiquées.
- Code de désignation de pièce**
Obtenu en combinant le numéro de figure et les codes des illustrations inhérents à chaque pièce. Ce code permettra à votre concessionnaire Toyota de trouver les numéros de pièces corrects.
- Désignation de pièce**
La désignation de la pièce est indiquée pour chacun des codes de désignation de pièce.
- Qty (quantité)**
La colonne quantité indique les pièces utilisées de l'année de code de désignation de pièce. La quantité maximum est indiquée quand la quantité utilisée diffère pour chacun des véhicules. Quand la quantité de pièces utilisées dépasse ou lorsqu'elle dépasse 100 pièces, la quantité 99 est indiquée.
- Numéros de pièces standard**
Les pièces standard comme les boulons, les écrous, les rondelles, etc., sont décrits dans les numéros de pièces. Pour commander les pièces, prière de spécifier les numéros de pièces.


ABBILDUNG UND TEXTSEITENAUFBAU FÜR TEILENAMEN-KODE

Grundsätzlich finden Sie auf einer (1) Seite sowohl die Abbildung als auch den Teilnamen-Kode. Wenn für den Text jedoch nicht genügend Platz vorhanden ist, wird er auf der nächsten Seite fortgesetzt.

- Abbildungsnummer**
Dieser Teilkatalog wurde nach Abbildungsnummern zusammengestellt.
- Abbildungstitel**
Ein stellvertretender Teilname, welcher zugleich die Bezeichnung für die Hauptbaugruppe ist, wird als Abbildungstitel der Illustration angegeben.
- Untertitel**
Ein zusätzlicher Name oder eine besondere Kennzeichnung werden für jede Illustration angegeben.
- Teilnamen-Kode**
Dies ist eine Kombination von ziffern und Abbildungskodes, die jedes Teil betreffen. Es ist ein Schlüssel für Ihren Toyota Händler, um die richtigen Teilenummern zu finden.
- Teilname**
Grundsätzlich wird der Teilname für alle Teilnamen-Kodes angegeben.
- QTY (Menge)**
Die Mengenspalte gibt die benutzte Stückzahl von Teilnamen-Kode-Einheiten an.
Wenn die benutzte Stückzahl je nach Fahrzeug verschieden ist, wird die Höchstmenge angegeben.
Wenn die benutzte Menge 100 Stück überschreiten kann, wird als Menge 99 angegeben.
- Standardteile-Nummern**
Die Standardteile, wie Schrauben, Mutttern, Unterlegscheiben usw., sind in den Teilenummern beschrieben. Geben Sie bei Bestellung dieser Teile die Teilenummern an.

ILLUSTRATION AND PART NAME CODE TEXT PAGE COMPOSITION

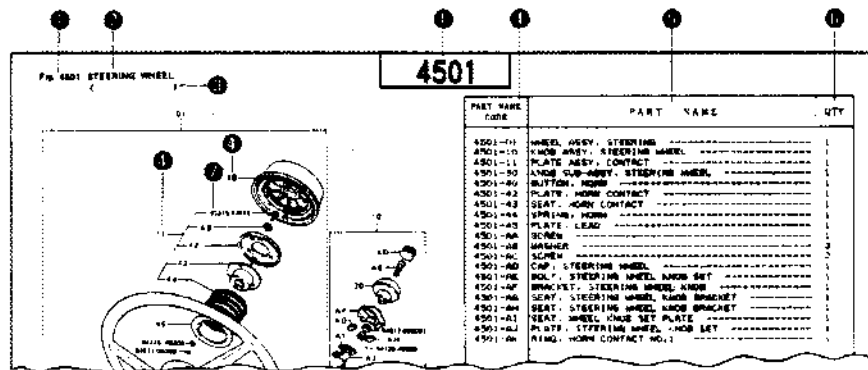 Essentially, one (1) page will present both the illustration and part name code. However, when the space for text page is not enough the next page will be used in succession.



- 1 Figure number
This parts catalog has been prepared according to the figure numbers.
- 2 Figure title
A representative part name which is the major assembly part name is shown as the figure title of the illustration.
- 3 Sub title
The optional name or special specification of each illustration are indicated.
- 4 Part name code
This is a combination of figure number and codes of illustrations pertaining to each part. This is a key for your Toyota dealer to find the correct part numbers.
- 5 Part name
As a rule, the part name is indicated for each of the part name codes.
- 6 QTY (Quantity)
The quantity column indicates the utilized pieces of part name code unit. When the utilized quantity changes according to each of the vehicles, maximum is indicated.
When the utilized quantity of the parts differs or is more than 100 pieces, quantity 99 is indicated.
- 7 Standard parts numbers
The standard parts such as the bolts, nuts, washer, etc. are described with parts numbers. When ordering these parts, specify parts numbers.

COMPOSICION DE LAS PAGINAS DE ILUSTRACIONES Y DE TEXTO DE CODIGOS DE NOMBRE DE PIEZAS

Básicamente, una (1) página incluirá tanto la ilustración como el código de nombre de la pieza.

No obstante, si el espacio no fuese suficiente, se utilizará la página siguiente.

- 1 Número de figura
Este catálogo de piezas se ha preparado de acuerdo con los números de las figuras.
- 2 Título de las figuras
Como título de las figuras de la página de ilustraciones, se incluye un nombre que sea representativo del nombre del mayor conjunto.
- 3 Subtítulo
Se indican el nombre opcional o las especificaciones especiales de cada ilustración.
- 4 Código de nombre de pieza
Se trata de una combinación de número de figura y de código de las ilustraciones correspondientes a cada pieza. Esta es la clave para que su distribuidor local de TOYOTA pueda encontrar el número de pieza correcto.
- 5 Nombre de la pieza
Como norma, se indica el nombre de cada uno de los códigos de nombre de pieza.
- 6 QTY (Cantidad)
La columna de cantidad indica el número de piezas utilizadas de cada unidad de código de nombre de pieza.
Cuando la cantidad utilizada es intercambiable entre cada uno de los vehículos, se indica el máximo.
Cuando la cantidad de piezas utilizadas pueda diferir o ser superior a 100, se indica como cantidad 99.
- 7 Números de piezas normalizadas
Las piezas corrientes, tales como pernos, tuercas, arandelas etc., se describen con número de pieza. Cuando solicite tales piezas, indique su número de pieza.

DATA PLATE & SERIAL NUMBERS

For retrieving correct part numbers, it's indispensable to know the truck model, as well as frame number (or engine number). Customers can obtain said information in the data plate on the truck or in this user parts catalog.

PLAQUE DE DONNEES TECHNIQUES & NUMEROS DE SERIE

Pour relever correctement le numéro des pièces, il est indispensable de connaître le modèle de l'engin, ainsi que le numéro du châssis (ou du moteur). Les propriétaires peuvent trouver ladite information sur la plaque de données techniques de l'engin ou dans le présent ouvrage.


PLACA DE DATOS Y NUMEROS DE SERIE

Para obtener los números de pieza correctos, es indispensable conocer el modelo del vehículo, así como el número del bastidor (o del motor). Los clientes pueden obtener dicha información por la placa de datos del vehículo o este catálogo de piezas para el usuario.


DATENPLATTE & SERIENNUMMERN

Um die richtige Teilenummer zu ermitteln, müssen unbedingt das Fahrzeugmodell sowie die Fahrgestellnummer (oder die Motornummer) bekannt sein. Kunden können diese Angaben von der Datenplatte am Fahrzeug oder in diesem Teilekatalog für Benutzer entnehmen.

Data plate
Placa de datos
Plaque de données techniques
Datenplatte

 TOYOTA LIFT TRUCK	
MODEL	_____
CODE NO. OF SPECIAL MODEL, MODEL OF ATTACHMENT	_____
FRAME NO.	_____
LIFTING HEIGHT	_____
CAPACITY	_____
WEIGHT	_____
PROD. YEAR	_____
TOYODA AUTOMATIC LOOM WORKS, LTD. KARIYA, JAPAN	



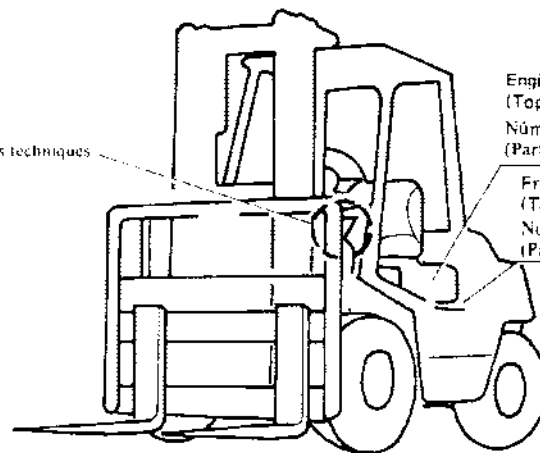 














 
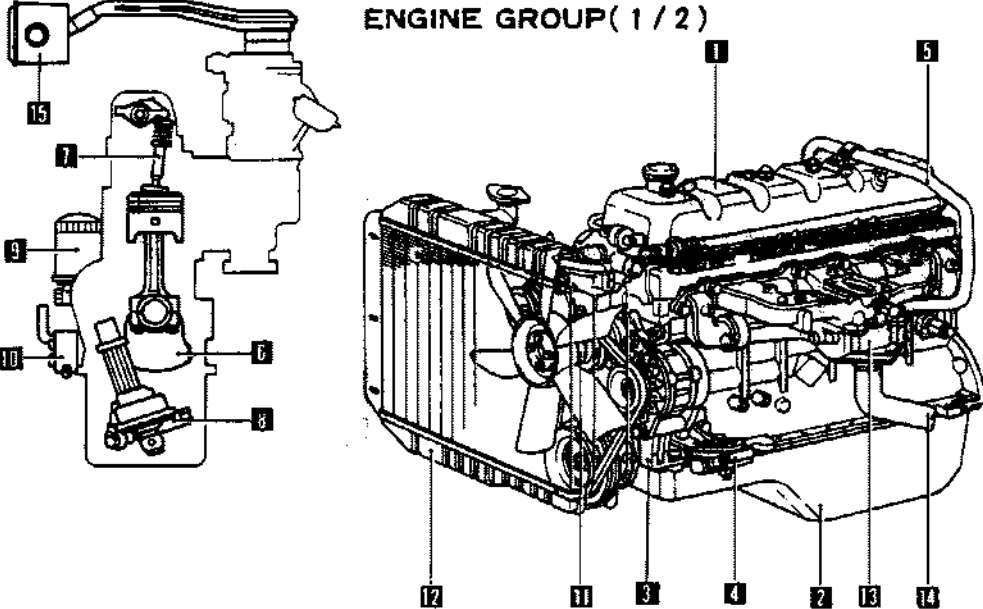 
Data plate
Placa de datos
Plaque de données techniques
Datenplatte



Engine Number (Top of the cylinder head)	Numéro de moteur (sur la culasse)
Numéro de motor (Parte superior de la culata)	Motornummer (Oben am Zylinderkopf)
Frame Number (Top of the frame)	Numéro de châssis (haut du châssis)
Numéro de bastidor (Parte superior del bastidor)	Fahrgestellnummer (Oben am Fahrgestell)

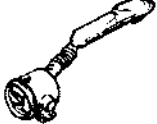 ILLUSTRATED INDEX
INDEX ILLUSTRÉ
ILLUSTRIRTES INHALTSVERZEICHNIS
INDICE ILLUSTRADO

  FIG. INDEX

<p>FIG.1101</p>  <p>Engine Assembly</p>	<p>FIG.1101</p>  <p>Short Block Assembly</p>	<p>FIG.1101</p>  <p>Over Haul Gasket Kit</p>	<p>FIG.1104</p>  <p>Cylinder Head</p>	<p>FIG.1105</p>  <p>Cylinder Block</p>	<p>FIG.1106</p>  <p>Gear Cover & End Plate</p>	<p>FIG.1107</p>  <p>Mounting</p>	
<p>ENGINE GROUP (1 / 2)</p> 							<p>FIG.1201</p>  <p>Ventilation Hose</p>
							<p>FIG.1301</p>  <p>Crankshaft & Piston</p>
							<p>FIG.1302</p>  <p>Camshaft & Valve</p>
							<p>FIG.1501</p>  <p>Oil Pump</p>
<p>FIG.1703</p>  <p>Air Cleaner</p>	<p>FIG.1702</p>  <p>Exhaust Pipe & Muffler</p>	<p>FIG.1701</p>  <p>Manifold</p>	<p>FIG.1603</p>  <p>Radiator & Water Outlet</p>	<p>FIG.1601</p>  <p>Water Pump</p>	<p>FIG.1503</p>  <p>Oil Cooler</p>	<p>FIG.1502</p>  <p>Oil Filter</p>	

Y-9000-0148

G300

0300-1

ILLUSTRATED INDEX
INDEX ILLUSTRÉ
ILLUSTRIRTES INHALTSVERZEICHNIS
INDICE ILLUSTRADO


FIG. INDEX

FIG.1901




Ignition Coil & Cord

 FIG.1902




Distributor

 FIG.1903




Alternator

 FIG.1904



Starter

 FIG.2101



Fuel Pipe

FIG.2103




Carburetor

FIG.2105



Air Governor

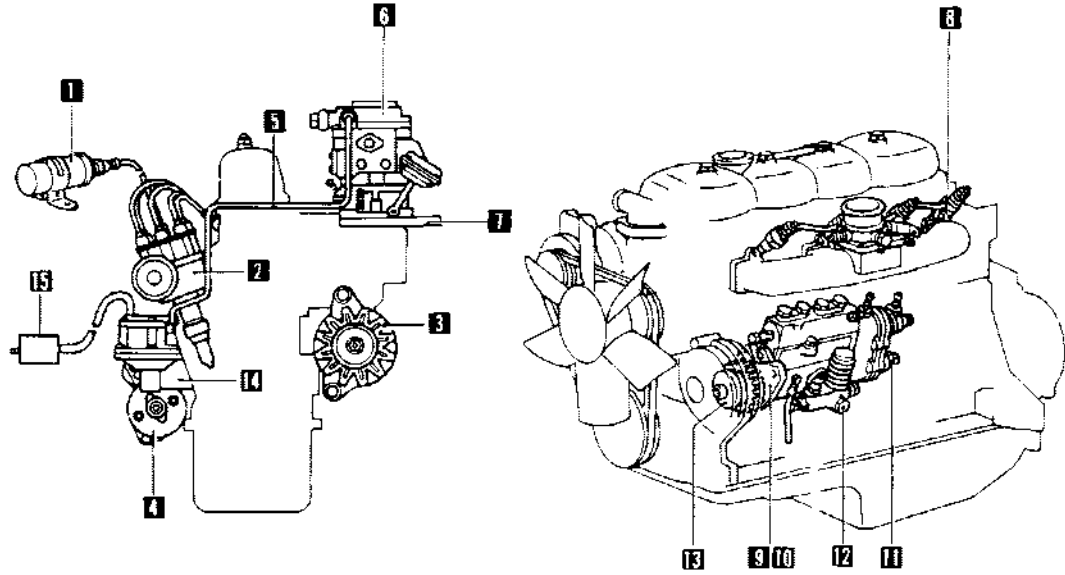 ENGINE, FUEL GROUP (2 / 2)




(Note) Illustrations in this chart apply to all LAND CRUISER line.

FIG.2201




Injection Nozzle

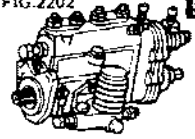 FIG.2202



Injection Pump Assembly

 FIG.2203



Injection Pump Body

FIG.2205



Mechanical Governor

FIG.2601




Accelerator Link

FIG.2303




Fuel Tank

 FIG.2302




Fuel Filter

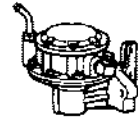 FIG.2301




Fuel Pump

 FIG.2207



Automatic Timer

 FIG.2206




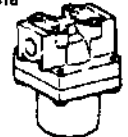 
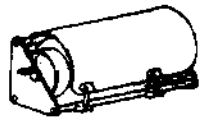 


Fuel Feed Pump

Y 0000 015

ILLUSTRATED INDEX
 INDEX ILLUSTRÉ
 ILLUSTRIRTES INHALTSVERZEICHNIS
 INDICE ILLUSTRADO

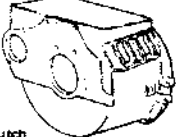 
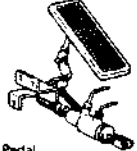 


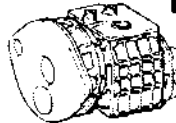 
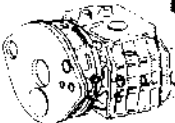 

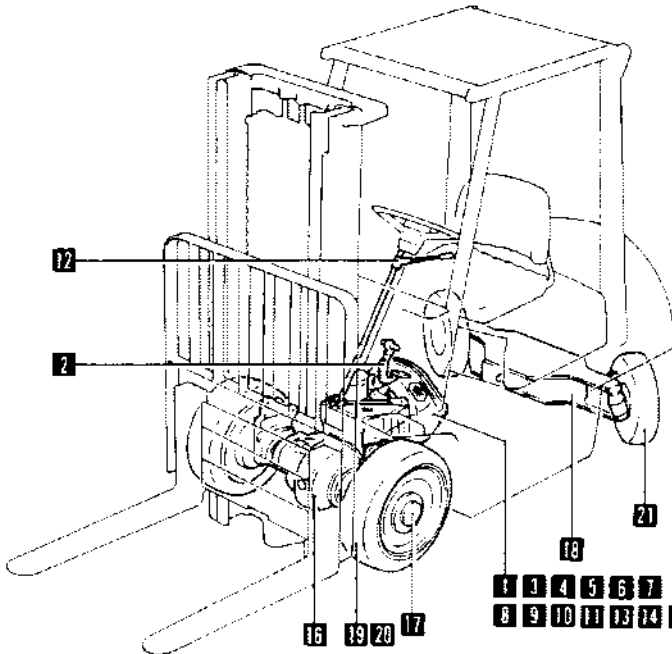 

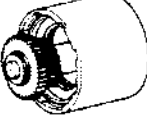 

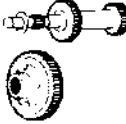 



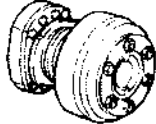 
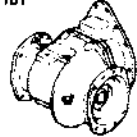 

 
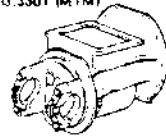 


FIG. INDEX

FIG. 2311  LPG Fuel Pipe	FIG. 2312  LPG Carburetor	FIG. 2314  LPG Regulator	FIG. 2316  LPG Filter	FIG. 2318  LPG Container		
LPG GROUP						

Y. 5008-000

ILLUSTRATED INDEX
 INDEX ILLUSTRÉ
 ILLUSTRIRTES INHALTSVERZEICHNIS
 INDIOE ILLUSTRADO

FIG. INDEX

<p>FIG. 3101 (MTM) 1</p>  <p>Clutch</p>	<p>FIG. 3102 (MTM) 2</p>  <p>Clutch Pedal</p>	<p>FIG. 3105 3</p>  <p>Clutch Booster</p>	<p>FIG. 3106 4</p>  <p>Flow Dividing Valve</p>	<p>FIG. 3201 (ATM) 5</p>  <p>Torqueconverter Housing</p>	<p>FIG. 3201 (ATM) 6</p>  <p>Overhaul Kit</p>	<p>FIG. 3202 (ATM) 7</p>  <p>Torqueconverter</p>
<p>CHASSIS GROUP (1/2)</p> 						
<p>FIG. 4403 21</p>  <p>Rear Wheel & Tire</p>						<p>FIG. 3203 (ATM) 8</p>  <p>Torqueconverter Clutch</p>
<p>FIG. 4402 20</p>  <p>Front Wheel & Tire (Double)</p>						<p>FIG. 3204 (ATM) 9</p>  <p>Torqueconverter Gear</p>
<p>FIG. 4408 19</p>  <p>Front Wheel & Tire</p>						<p>FIG. 3206 (ATM) 10</p>  <p>Control Valve</p>
<p>FIG. 4301 18</p>  <p>Rear Axle</p>	<p>FIG. 4201 17</p>  <p>Front Axle Shaft</p>	<p>FIG. 4101 16</p>  <p>Differential</p>	<p>FIG. 3303 (MTM) 15</p>  <p>Gear Shift Fork</p>	<p>FIG. 3302 (MTM) 14</p>  <p>Transmission Gear</p>	<p>FIG. 3301 (MTM) 13</p>  <p>Transmission Case</p>	<p>FIG. 3213 (ATM) 11</p>  <p>Torqueconverter Piping</p>
						<p>FIG. 3214 (ATM) 12</p>  <p>Control Shaft</p>

0060-018


ILLUSTRATED INDEX
INDEX ILLUSTRÉ
ILLUSTRIRTES INHALTSVERZEICHNIS
INDICE ILLUSTRADO

FIG. INDEX

5G300-831 3F035

'84.12

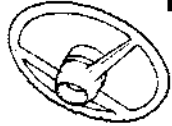 FIG. 4501



Steering Wheel

FIG. 4502



Steering Post

FIG. 4503



Hydrostatic Valve

FIG. 4507



Drag Link & Piping

FIG. 4508



Power Cylinder

FIG. 4601



Parking Brake

FIG. 4701



Brake Pedal

CHASSIS GROUP (2/2)


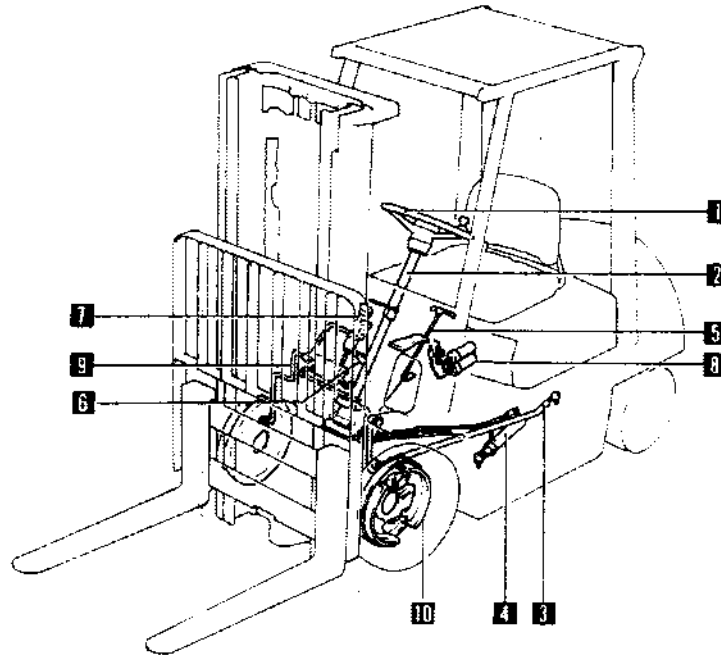 


FIG. 4704

 

Brake Valve

FIG. 4708



Brake Accumulator

FIG. 4714





 




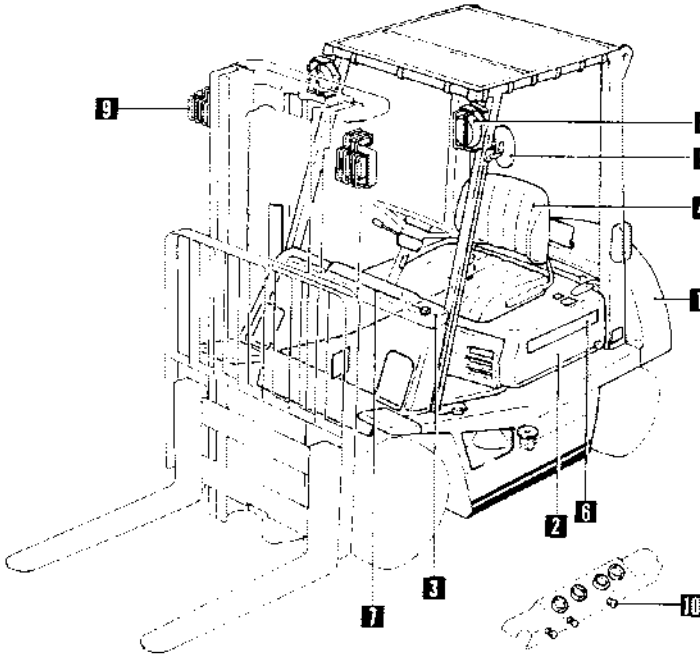 

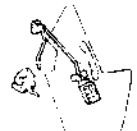 









Brake Pipe

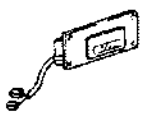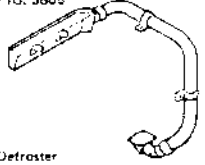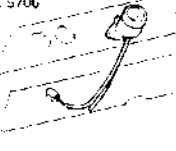   FIG. 4715



 
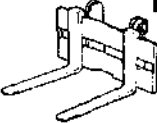 

 

 

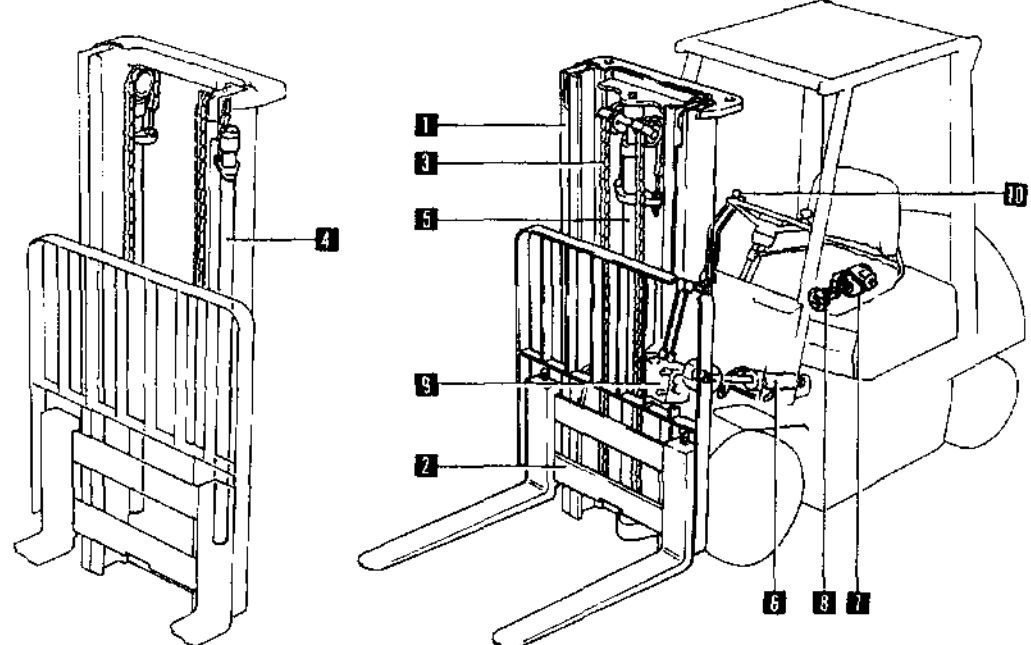 

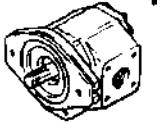 
 
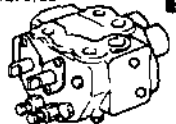 



Brake

Y.0000.0124

<p>FIG. 5101 1</p>  <p>Frame & Weigh</p>	<p>FIG. 5201 2</p>  <p>Hood</p>	<p>FIG. 5301 3</p>  <p>Instrument Panel</p>	<p>FIG. 530R 4</p>  <p>Driver Seat</p>	<p>FIG. 5401 5</p>  <p>Head Guard & Accessory</p>	<p>FIG. 5405 6</p>  <p>Indicator Plate</p>	<p>FIG. 5501</p>  <p>Steel Cabin</p>	
<p>BODY, ELECTRICAL GROUP</p> 							
							<p>FIG. 5502</p>  <p>Front Glass</p>
							<p>FIG. 5504</p>  <p>Door Lock</p>
							<p>FIG. 5601 7</p>  <p>Wiring</p>
							<p>FIG. 5611 8</p>  <p>Lamp</p>
<p>FIG. 5806</p>  <p>OK Monitor</p>	<p>FIG. 5805</p>  <p>Defroster</p>	<p>FIG. 5802</p>  <p>Heater</p>	<p>FIG. 5801</p>  <p>Wiper Motor & Blade</p>	<p>FIG. 570G</p>  <p>Speedometer</p>	<p>FIG. 5701 10</p>  <p>Meter & Switch</p>	<p>FIG. 5612 9</p>  <p>Lamp Bracket</p>	

ILLUSTRATED INDEX
 INDEX ILLUSTRÉ
 ILLUSTRIRTES INHALTSVERZEICHNIS
 INDICE ILLUSTRADO

FIG. INDEX

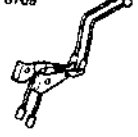 FIG. 6101 1  Mast	FIG. 6301 2  Lift Bracket & Fork	FIG. 6302 3  Chain & Chain Wheel	FIG. 6501 (V) 4  Lift Cylinder	FIG. 6502 (FV, FSV) 5  Front Lift Cylinder	FIG. 6503 (FV, FSV) 6  Rear Lift Cylinder	FIG. 6504 (M) 7  Lift Cylinder	
MAST, HYDRAULIC COMPONENT GROUP 							FIG. 6511 8  Tilt Cylinder
							FIG. 6701 9  Oil Pump
							FIG. 6704 10  Oil Pump Drive Shaft
							FIG. 6705 11  Oil Control Valve
				FIG. 6802 12  Mast Piping	FIG. 6801 13  Body Piping	FIG. 6709 14  Oil Control Valve Link	

Y. 0000-018 A

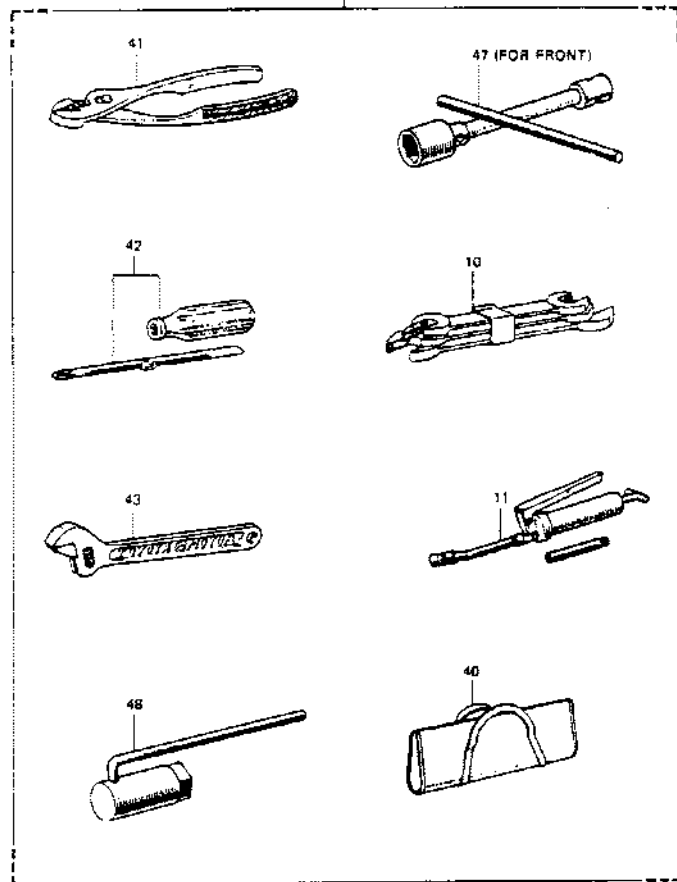 
.....MEMO.....

.....

2F


2F (SPECIAL DOUBLE)

01



0901-003

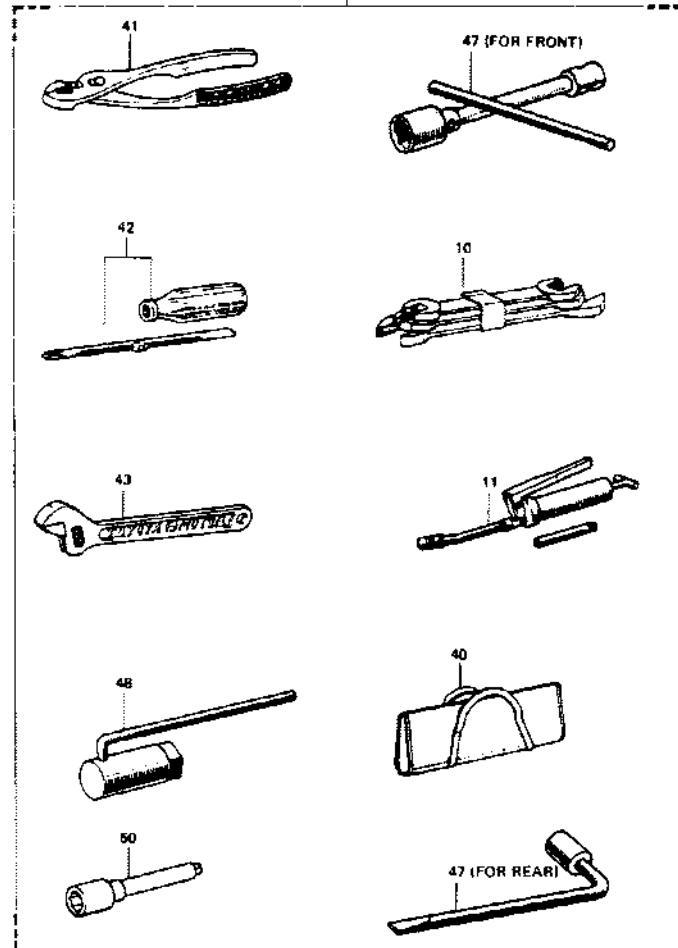 01



0901-004


G 300-001

PART NAME CODE	PART NAME	QTY
0901-01	TOOL SET, STANDARD -----	1
0901-10	SPANNER SET -----	1
0901-11	PUMP ASSY, GREASE -----	1
0901-40	BAG, TOOL -----	1
0901-41	PLIERS -----	1
0901-42	DRIVER, SCREW -----	1
0901-43	WRENCH, MONKEY -----	1
0901-47	WRENCH, HUB NUT BOX -----	1
0901-48	WRENCH, SPARK PLUG -----	1
0901-50	ADAPTOR, HUB NUT BOX WRENCH -----	1

2F


2F

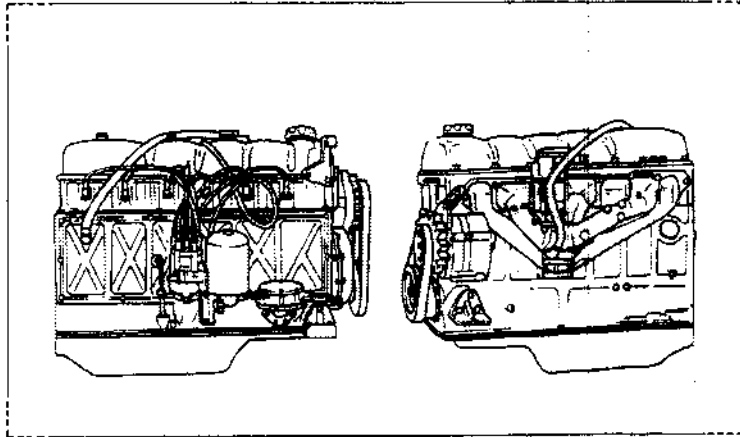 00




1101-015

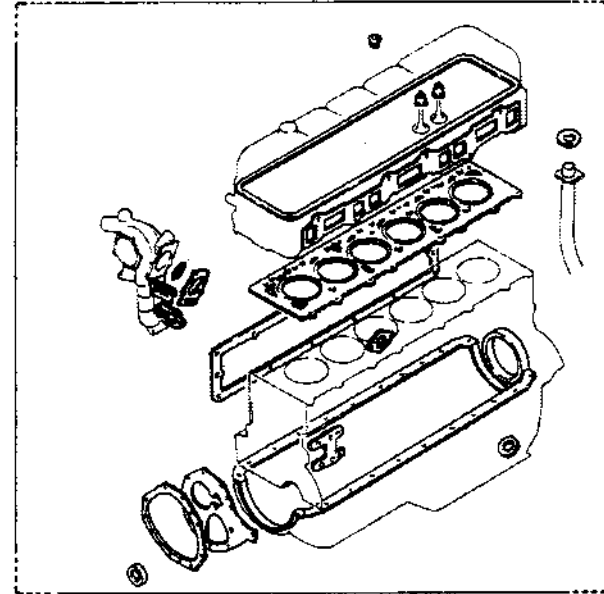 00K




00L

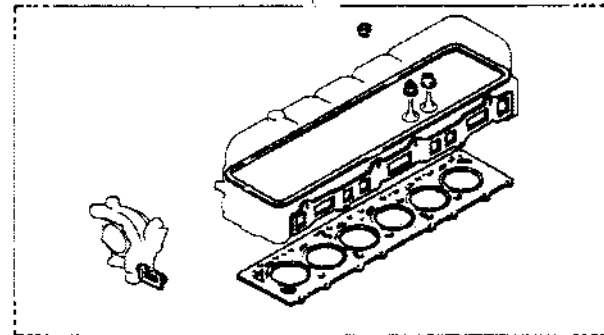 

1101-018

G300-001

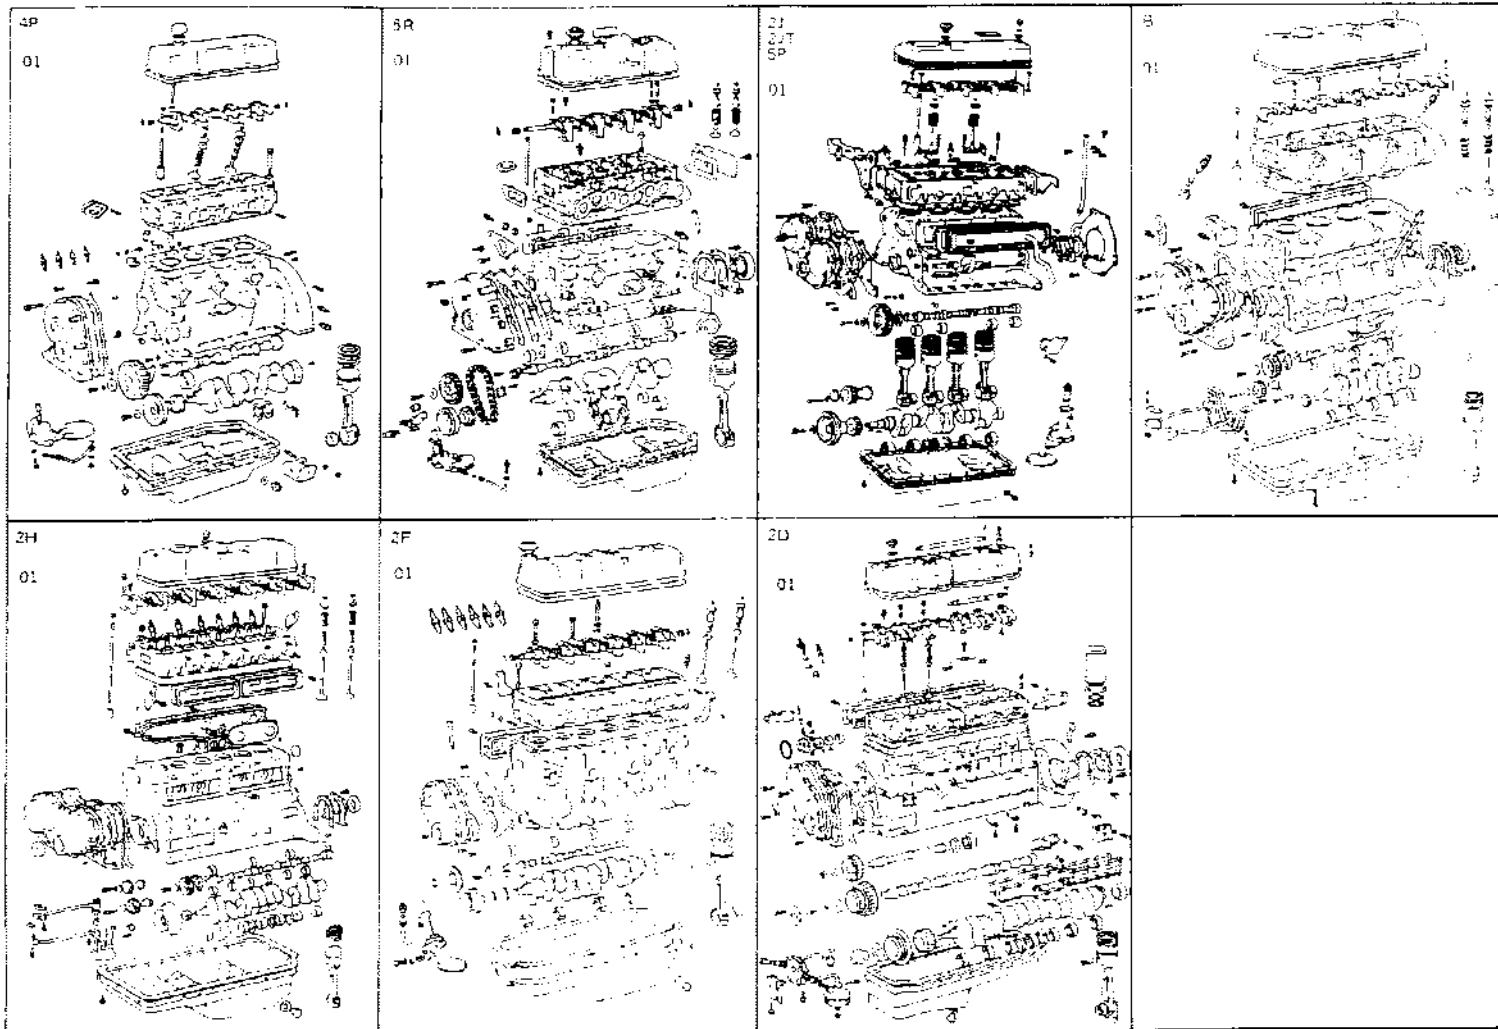 2F (PARTIAL ENGINE ASSY)



2F (SHORT BLOCK ASSY)

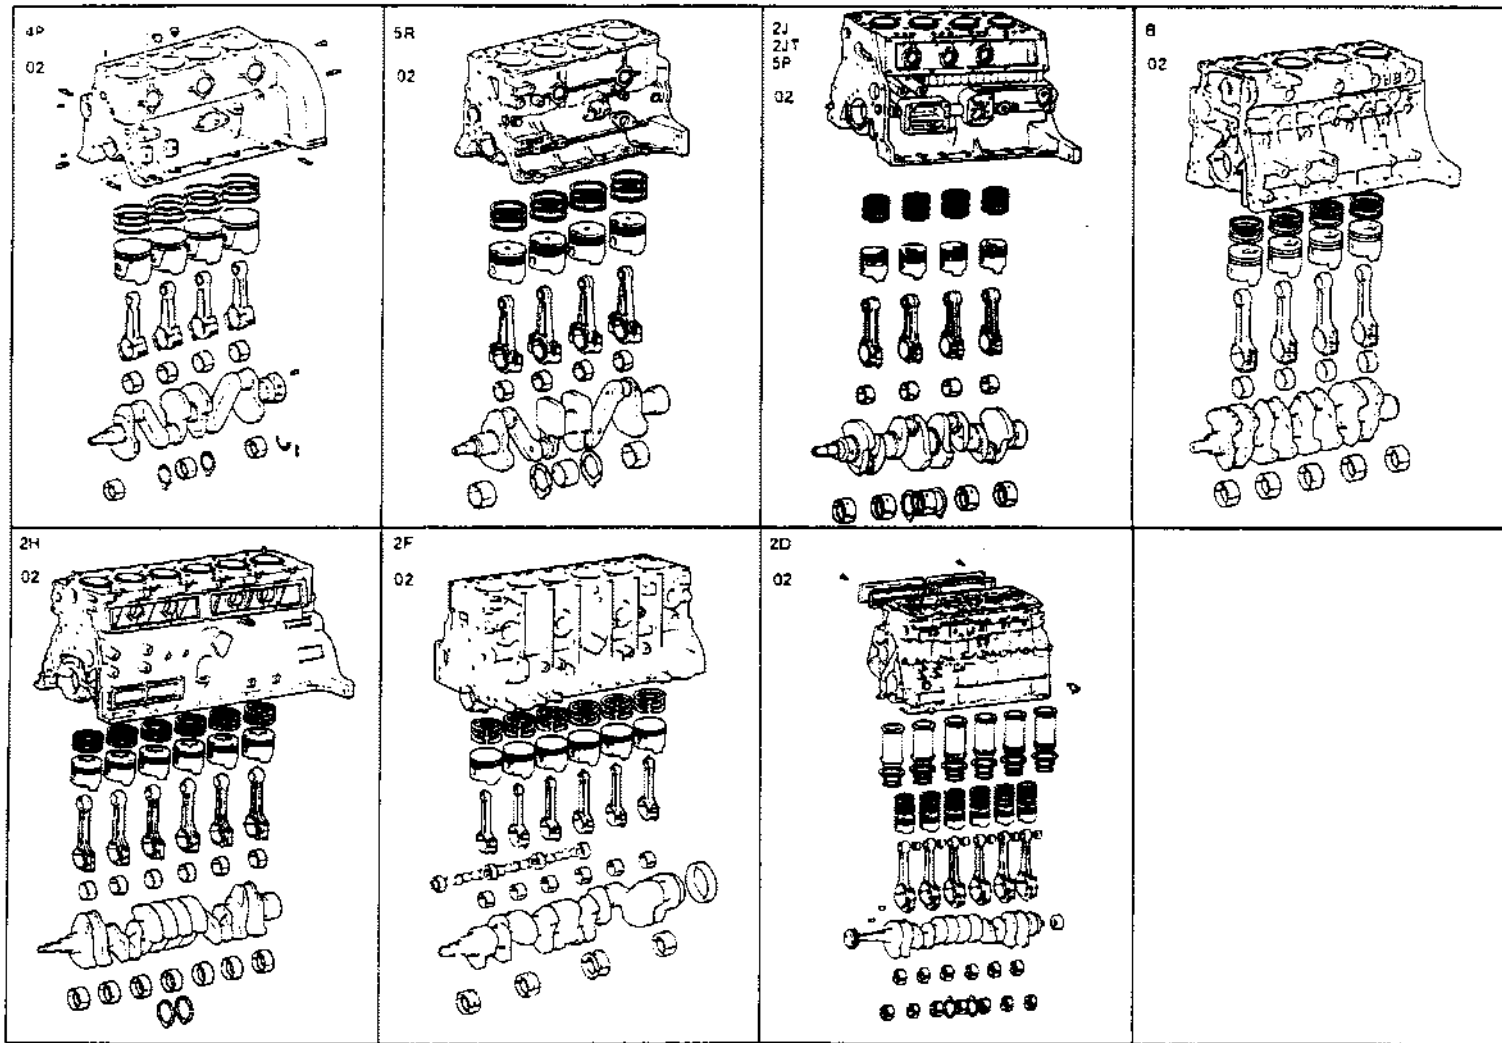 


FIG. 1101
ENGINE ASSY

1101

2F

87/08

PART NAME CODE	PART NAME	QTY
1101-00	ENGINE ASSY	1
1101-00K	GASKET KIT, ENGINE C/H	1
1101-00L	GASKET KIT, ENGINE VALVE GRIND	1
1101-02	BLOCK ASSY, SHORT	1

G300-004E




FIG. 1104
CYLINDER HEAD

1104

2F

85/04

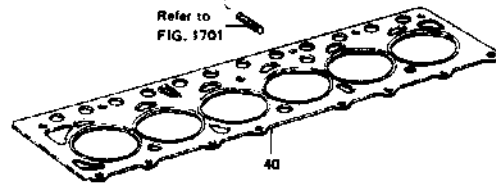 
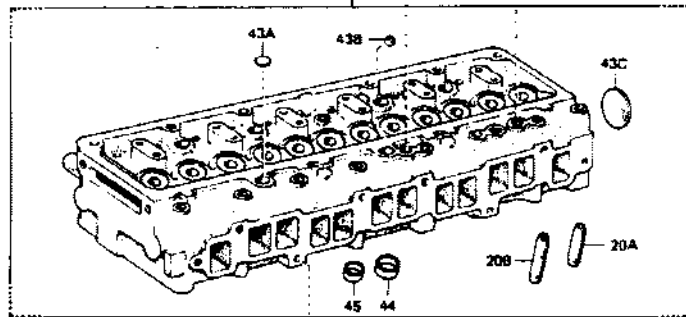 
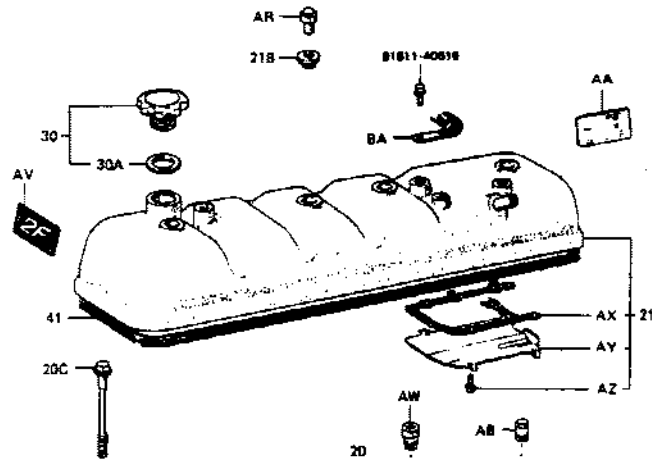 
2F



PART NAME CODE	PART NAME	QTY
1104-20	HEAD SUB-ASSY, CYLINDER	1
1104-20A	BUSH, VALVE GUIDE INTAKE	6
1104-20B	BUSH, VALVE GUIDE EXHAUST	6
1104-20C	BOLT (FOR CYLINDER HEAD SET)	15
1104-21	COVER SUB-ASSY, CYLINDER HEAD	1
1104-21B	WASHER, SEAL (FOR CYLINDER HEAD COVER)	4
1104-30	CAP SUB-ASSY, OIL FILLER	1
1104-30A	GASKET (FOR OIL FILLER CAP)	1
1104-40	GASKET, CYLINDER HEAD	1
1104-41	GASKET, CYLINDER HEAD COVER	1
1104-43A	PLUG, TIGHT, NO.1	8
1104-43B	PLUG, TIGHT, NO.2	1
1104-43C	PLUG, TIGHT, NO.3	1
1104-44	SEAT, VALVE INTAKE	6
1104-45	SEAT, VALVE EXHAUST	6
1104-AA	PLATE, CAUTION	1
1104-AB	PLUG, W/HEAD TAPER SCREW	1
1104-AR	NUT	4
1104-AV	PLATE, NAME	1
1104-AW	UNION	1
1104-AX	GASKET, VENTILATION BAFFLE	1
1104-AY	PLATE, VENTILATION BAFFLE	1
1104-AZ	BOLT	1
1104-BA	CLAMP	1

1104-008

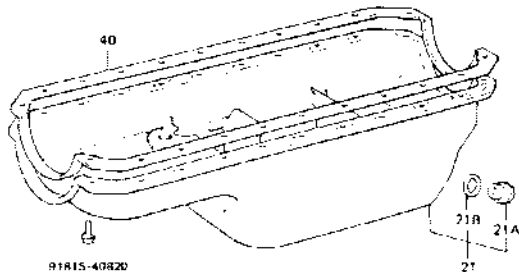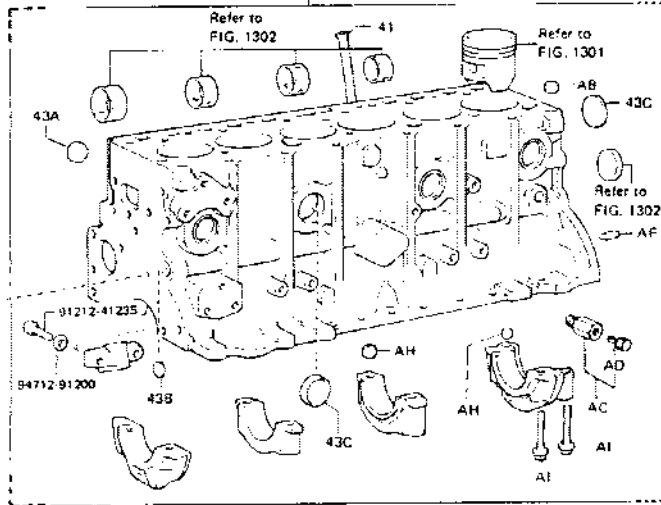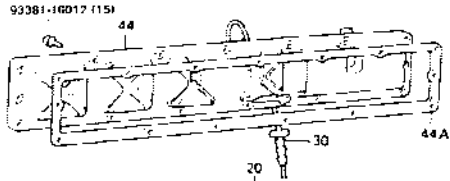   2F



1105 009

PART NAME	PART NAME	QTY
1105-20	BLOCK SUB-ASSY. CYLINDER	1
1105-21	PAN SUB-ASSY. OIL	1
1105-21A	PLUG (FOR OIL PAN DRAIN)	1
1105-21B	GASKET (FOR OIL PAN DRAIN PLUG)	1
1105-30	GAGE SUB-ASSY. OIL LEVEL	1
1105-40	GASKET, OIL PAN	1
1105-41	GUIDE, OIL LEVEL GAGE	1
1105-43A	PLUG, TIGHT, NO.1	4
1105-43B	PLUG, TIGHT, NO.2	2
1105-43C	PLUG, TIGHT, NO.3	5
1105-44	COVER, VALVE PUSH ROD	1
1105-44A	GASKET, VALVE PUSH ROD COVER	1
1105-45	NOZZLE, OIL	1
1105-AB	PIN, STRAIGHT	2
1105-AC	COCK SUB-ASSY. DRAIN	1
1105-AD	PLUG, DRAIN COCK	1
1105-AF	PIN, STRAIGHT	2
1105-AH	PIN, RING	2- A1
1105-AI	BOLT	4- A1


FIG. 1106
TIMING GEAR COVER & END PLATE

1106

ZF

87/08

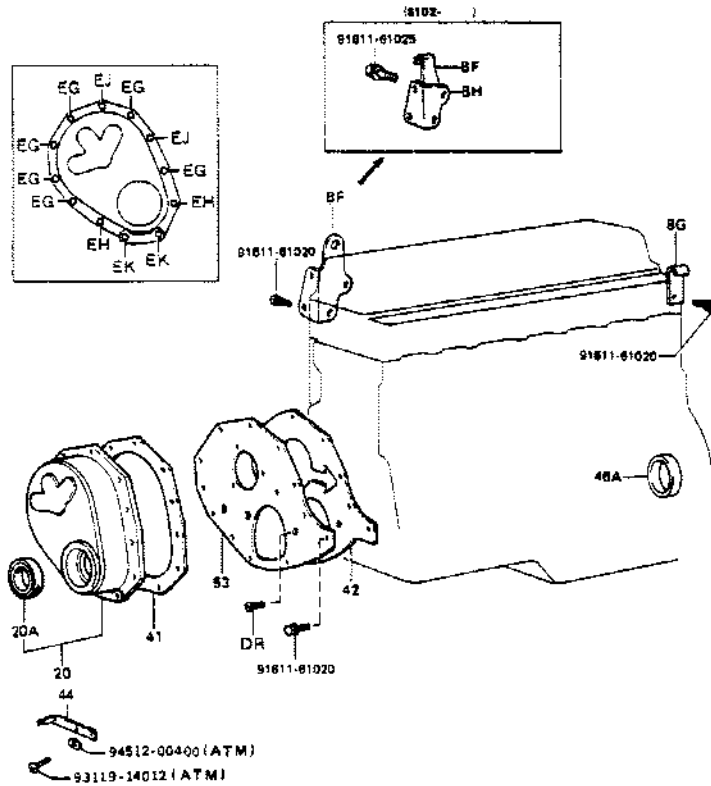 ZF



PART NAME	PART NAME	QTY
1106-20	COVER SUB-ASSY, TIMING GEAR (OR CHAIN)	1
1106-20A	SEAL, OIL (FOR TIMING GEAR COVER)	1
1106-41	GASKET, TIMING GEAR (OR CHAIN) COVER	1
1106-42	GASKET, FRONT END PLATE	1
1106-44	POINTEN, TIMING	1
1106-46A	SEAL, ENGINE REAR OIL	1
1106-33	PLATE, FRONT END	1
1106-8F	HANGER, ENGINE, NO.1	1
1106-8G	HANGER, ENGINE, NO.2	1
1106-8H	BRACKET	1
1106-DR	BOLT	3
1106-EG	BOLT	6
1106-EH	BOLT	4
1106-EX	BOLT	2

1106-008B

Q300-001E


FIG. 1107
MOUNTING

1107

2F

87/08

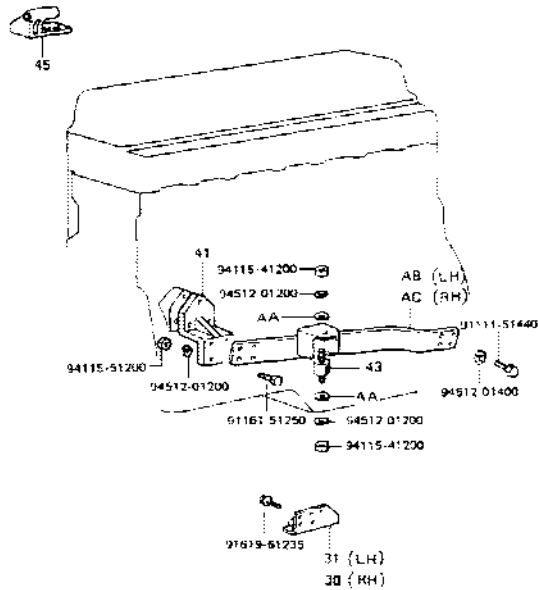 2F



PART NAME	PART NAME	QTY
CODE		
1107-30	SUPPORT SUB-ASSY, ENGINE BRACKET, RH	1
1107-31	SUPPORT SUB-ASSY, ENGINE BRACKET, LH	1
1107-40	BRACKET, ENGINE MOUNTING, FR, RH	1
1107-41	BRACKET, ENGINE MOUNTING, FR, LH	1
1107-43	INSULATOR, ENGINE MOUNTING, FR	2
1107-45	BRACKET, ALTERNATOR, NO.1	1
1107-AA	WASHER, PLATE	2
1107-AB	SUB-FRAME SUB-ASSY, LH	1
1107-AC	SUB-FRAME SUB-ASSY, RH	1

1107 008 A

G300-001E

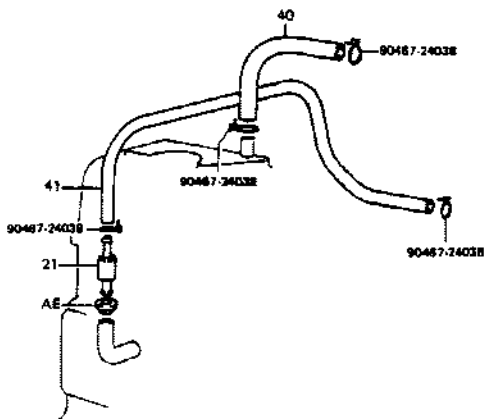 
VENTILATION HOSE

1201

2F

85/04

2F



1201-007

PART NAME CODE	PART NAME	QTY
1201-21	VALVE SUB-ASSY, VENTILATION	1
1201-40	HOSE, VENTILATION, NO.1	1
1201-41	HOSE, VENTILATION, NO.2	1
1201-AE	GROMMET	1


FIG. 1301
CRANKSHAFT & PISTON

1301

2F

87/02

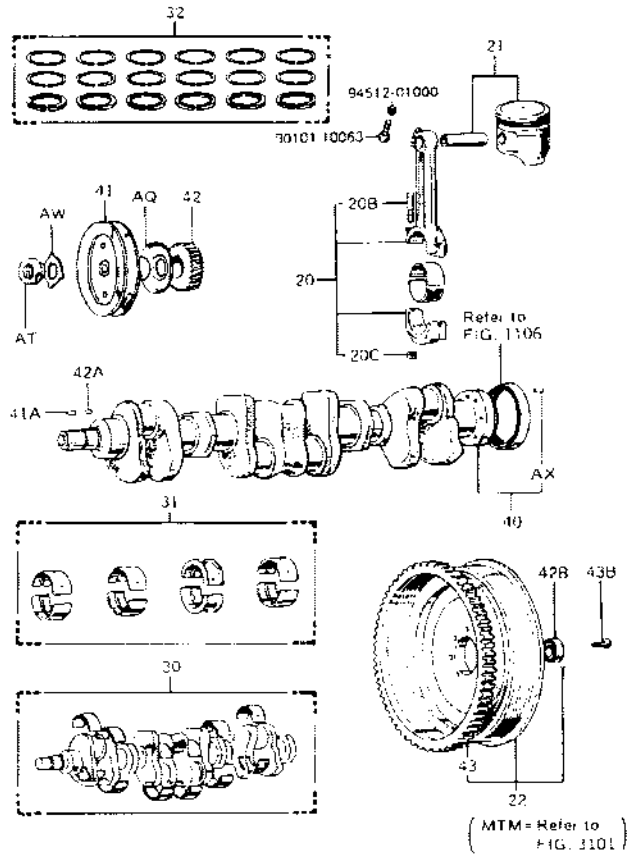 2F





1301 006 C

PART NAME	PART NAME	QTY
COOL		
1301-29	ROD SUB-ASSY, CONNECTING	6
1301-20B	BOLT, CONNECTING ROD	12
1301-20C	NUT, HEXAGON (FOR CONNECTING ROD)	12
1301-21	PISTON SUB-ASSY, W/PIN	6
1301-22	FLYWHEEL SUB-ASSY	1
1301-30	BEARING SET, CONNECTING ROD	1
1301-31	BEARING SET, CRANKSHAFT	1
1301-32	RING SET, PISTON	1
1301-40	CRANKSHAFT	1
1301-41	PULLEY, CRANKSHAFT	1
1301-41A	KEY, CRANKSHAFT (FOR PULLEY SET)	2
1301-42	GEAR OR SPROCKET, CRANKSHAFT TIMING	1
1301-42A	KEY, CRANKSHAFT (FOR TIMING GEAR SET)	1
1301-42B	BEARING (FOR INPUT SHAFT)	1
1301-43	GEAR, FLYWHEEL RING	1
1301-43B	BOLT, FLYWHEEL SET	6
1301-AT	NUT	1
1301-AX	PIN, STRAIGHT	1

G300-001E

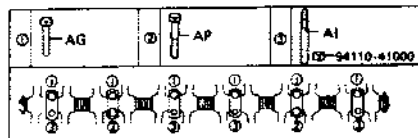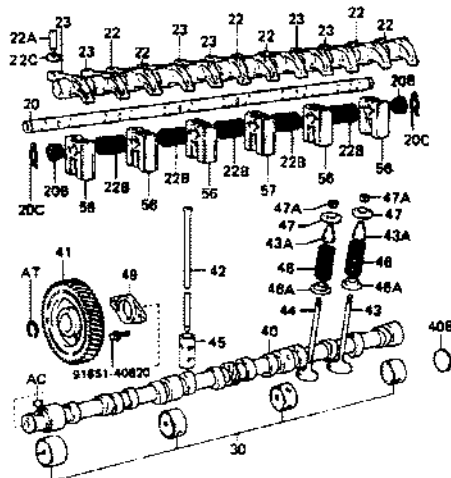  
2F



PART NAME CODE	PART NAME	QTY
1302-20	SHAFT SUB-ASSY, VALVE ROCKER, NO.1	1
1302-20B	SPRING, CONICAL (FOR VALVE ROCKER SHAFT)	2
1302-20C	SPRING, RETAINER (FOR VALVE ROCKER SHAFT)	2
1302-22	ARM SUB-ASSY, VALVE ROCKER, NO.1	6
1302-22A	SCREW, VALVE ADJUSTING	12
1302-22B	SPRING, COMPRESSION (FOR ROCKER ARM)	5
1302-22C	NUT, ADJUSTING SCREW HEXAGON	12
1302-23	ARM SUB-ASSY, VALVE ROCKER, NO.2	6
1302-30	BEARING SET, CAMSHAFT	1
1302-40	CAMSHAFT	1
1302-40B	PLUG, EXPANSION (FOR CAMSHAFT)	1
1302-41	GEAR OR SPROCKET, CAMSHAFT TIMING	1
1302-42	ROD, VALVE PUSH	12
1302-43	VALVE, INTAKE	6
1302-43A	SEAL OR RING, O (FOR VALVE STEM OIL)	12
1302-44	VALVE, EXHAUST	6
1302-45	LIFTER, VALVE	12
1302-46	SPRING, VALVE COMPRESSION	12
1302-46A	SEAT, VALVE SPRING	12
1302-47	RETAINER, VALVE SPRING	12
1302-47A	LOCK, VALVE SPRING RETAINER	24
1302-49	PLATE, CAMSHAFT THRUST	1
1302-56	SUPPORT, VALVE ROCKER, NO.1	5
1302-57	SUPPORT, VALVE ROCKER, NO.2	1
1302-AC	KEY	1
1302-AG	BOLT	6
1302-AI	BOLT, STUD	4
1302-AP	BOLT	2
1302-AT	RING, SHAFT SNAP	1

1302-00A

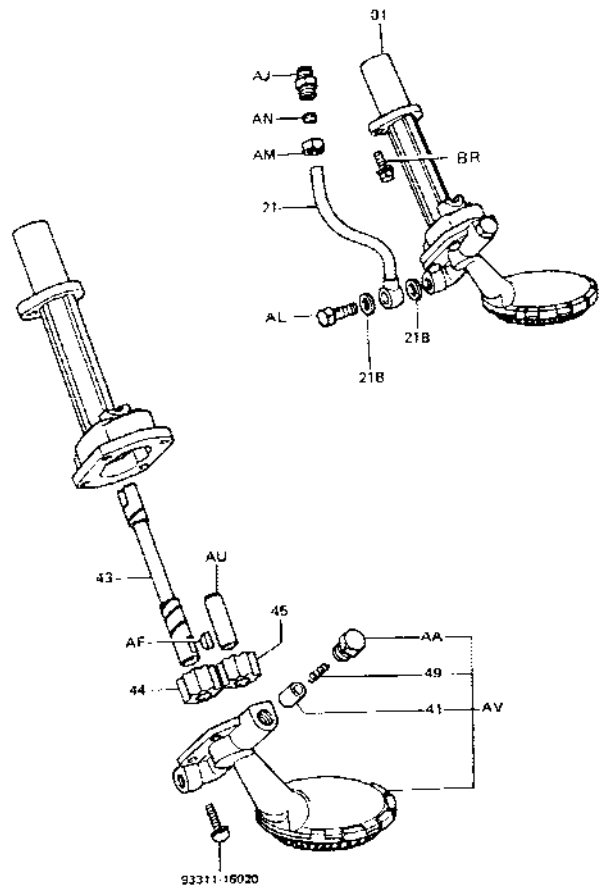 2F



PART NAME	PART NAME	QTY
CODE		
1501-01	PUMP ASSY, OIL	1
1501-21	PIPE SUB-ASSY, OIL PUMP OUTLET	1
1501-218	GASKET (FOR OIL PUMP OUTLET PIPE)	2
1501-41	VALVE, OIL PUMP RELIEF	1
1501-43	SHAFT, OIL PUMP	1
1501-44	GEAR, OIL PUMP DRIVE	1
1501-45	GEAR, OIL PUMP DRIVEN	1
1501-49	SPRING, OIL PUMP RELIEF VALVE	1
1501-AA	PLUG, OIL PUMP RELIEF VALVE	1
1501-AF	KEY, OIL PUMP DRIVEN SHAFT	1
1501-AJ	UNION	1
1501-AL	BOLT, UNION	1
1501-AM	NUT, UNION	1
1501-AN	SLEEVE, BALL	1
1501-AU	SHAFT, OIL PUMP DRIVEN	1
1501-AV	COVER SUB-ASSY	1
1501-BR	BOLT	1

*501 005A


FIG. 1502
OIL FILTER

1502

2F

86/03

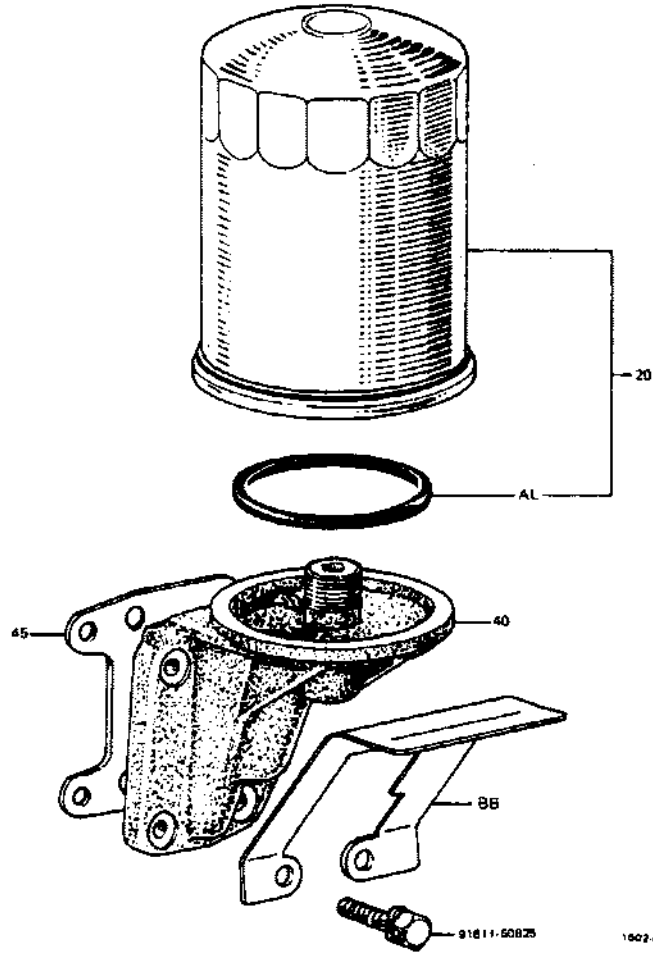 2F



PART NAME CODE	PART NAME	QTY
1502-20	ELEMENT SUB-ASSY, OIL FILTER	1
1502-40	BRACKET, OIL FILTER	1
1502-45	GASKET, OIL FILTER	1
1502-AL	GASKET	1
1502-BB	COVER, OIL PRESSURE	1

G300-001E


FIG. 1601
WATER PUMP

1601

2F

87/08

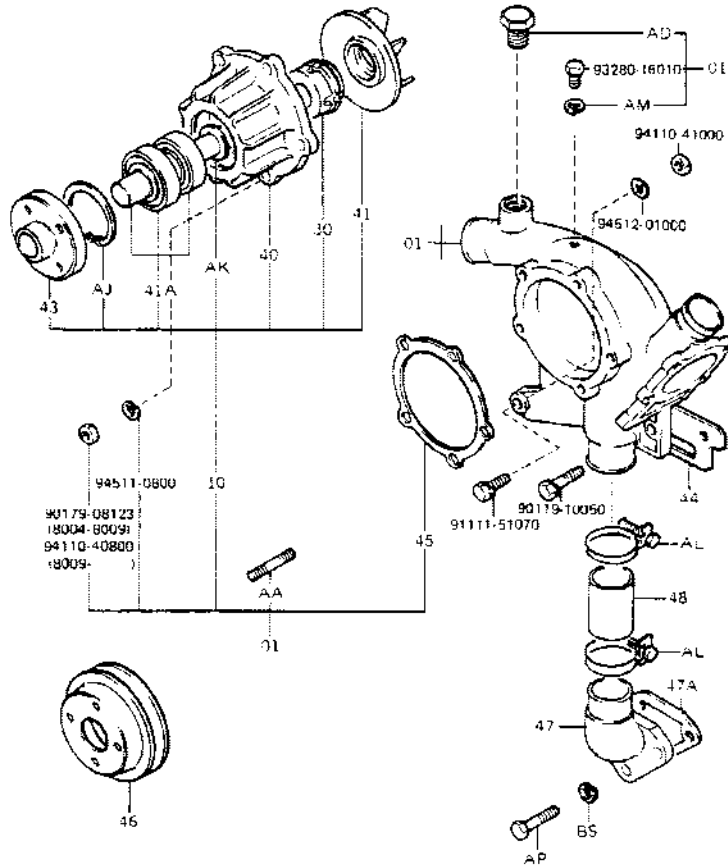 
2F



PART NAME	PART NAME	QTY
CODE		
1601-01	PUMP ASSY, WATER	1
1601-10	COVER ASSY, WATER PUMP	1
1601-30	SEAL SET, WATER PUMP	1
1601-40	COVER, WATER PUMP	1
1601-41	ROTOR, WATER PUMP	1
1601-41A	BEARING, WATER PUMP, NO. 1	1
1601-43	SEAT, WATER PUMP PULLEY	1
1601-44	GASKET, WATER PUMP	1
1601-45	GASKET, WATER PUMP COVER	1
1601-46	PULLEY, FAN	1
1601-47	INLET, WATER	1
1601-47A	GASKET, WATER INLET	1
1601-48	HOSE, WATER INLET	1
1601-AA	BOLT, STUD	5
1601-AD	PLUG, W/HEAD TAPER SCREW	1
1601-AJ	RING, HOLE SNAP	1
1601-AK	RING, SHAFT SNAP	1
1601-AL	CLAMP, HOSE	2
1601-AM	WASHER	1
1601-AP	BOLT	3

G300-001E

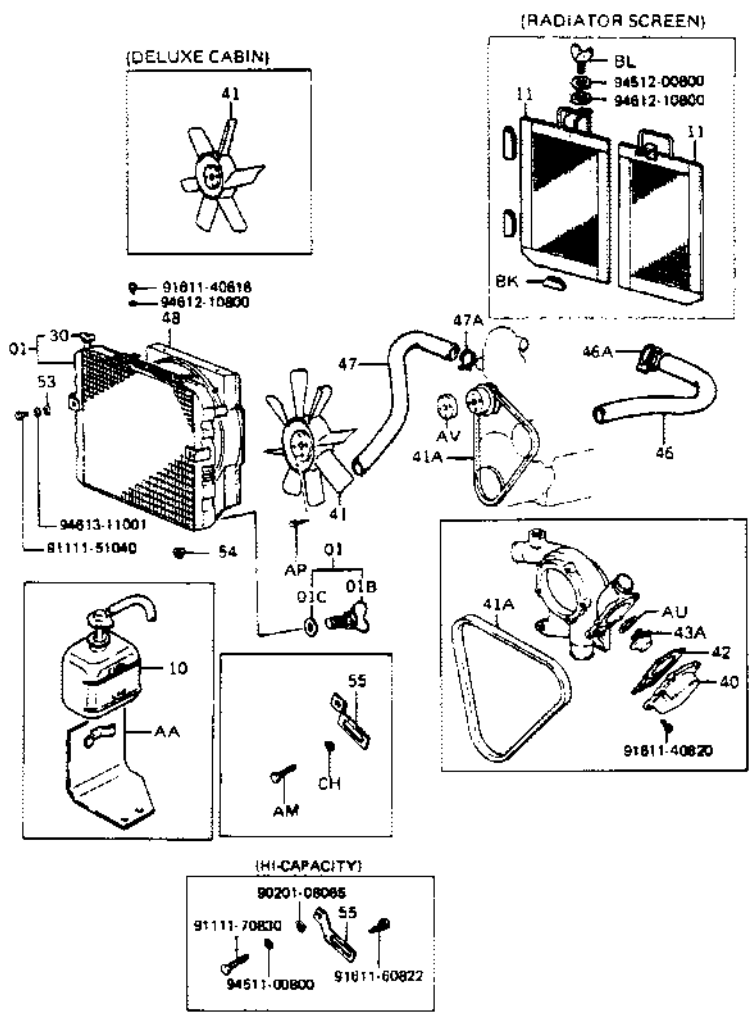 2F



PART NAME	PART NAME	QTY
CODE		
1603-01	RADIATOR ASSY	1
1603-01B	PLUG, DRAIN COCK	1
1603-01C	PACKING (FOR RADIATOR DRAIN COCK)	1
1603-10	TANK ASSY, RADIATOR RESERVE	1
1603-11	SCREEN SUB-ASSY, RADIATOR	1
1603-30	CAP SUB-ASSY, RADIATOR	1
1603-40	HOUSING, WATER OUTLET	1
1603-41	FAN	1
1603-41A	BELT, V	1
1603-42	GASKET, WATER OUTLET HOUSING	1
1603-43A	THERMOSTAT	1
1603-46	HOSE, RADIATOR, INLET	1
1603-46A	CLAMP, HOSE (FOR RADIATOR INLET)	2
1603-47	HOSE, RADIATOR, OUTLET	1
1603-47A	CLAMP, HOSE (FOR RADIATOR OUTLET)	2
1603-48	SHROUD, FAN, NO.1	1
1603-53	PLATE, RUBBER (FOR RADIATOR)	4
1603-54	RUBBER, MOUNTING (FOR RADIATOR)	2
1603-55	BAR, FAN BELT ADJUSTING	1
1603-AA	BRACKET, RESERVE TANK	1
1603-AM	BOLT	1
1603-AP	BOLT, FAN	4
1603-AU	GASKET	1
1603-AV	SPACER, FAN PULLEY	1
1603-BK	RUBBER	6
1603-BL	BOLT, WING	2

1603-141

G300-001E


FIG. 1701
MANIFOLD

1701

2F

85/07

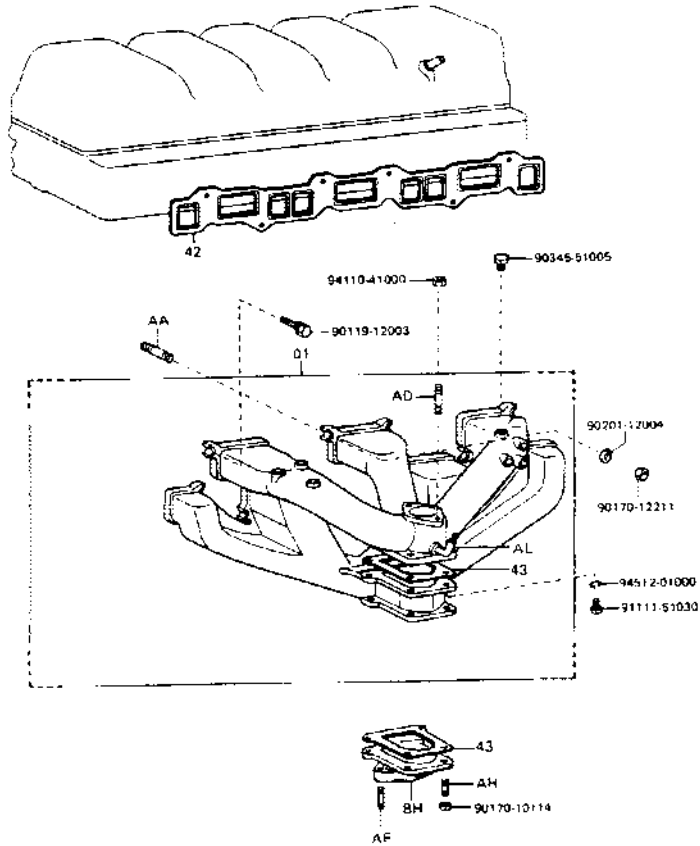 2F





PART NAME CODE	PART NAME	QTY
1701-01	MANIFOLD ASSY	1
1701-42	GASKET, MANIFOLD TO CYLINDER HEAD	1
1701-43	GASKET, INTAKE TO EXHAUST MANIFOLD	2
1701-AA	BOLT, STUD	2
1701-AD	BOLT, STUD	2
1701-AF	BOLT, STUD	2
1701-AH	BOLT, STUD	2
1701-AL	ELBOW	1
1701-BH	JOINT, EXHAUST MANIFOLD	1

1701-010

2F

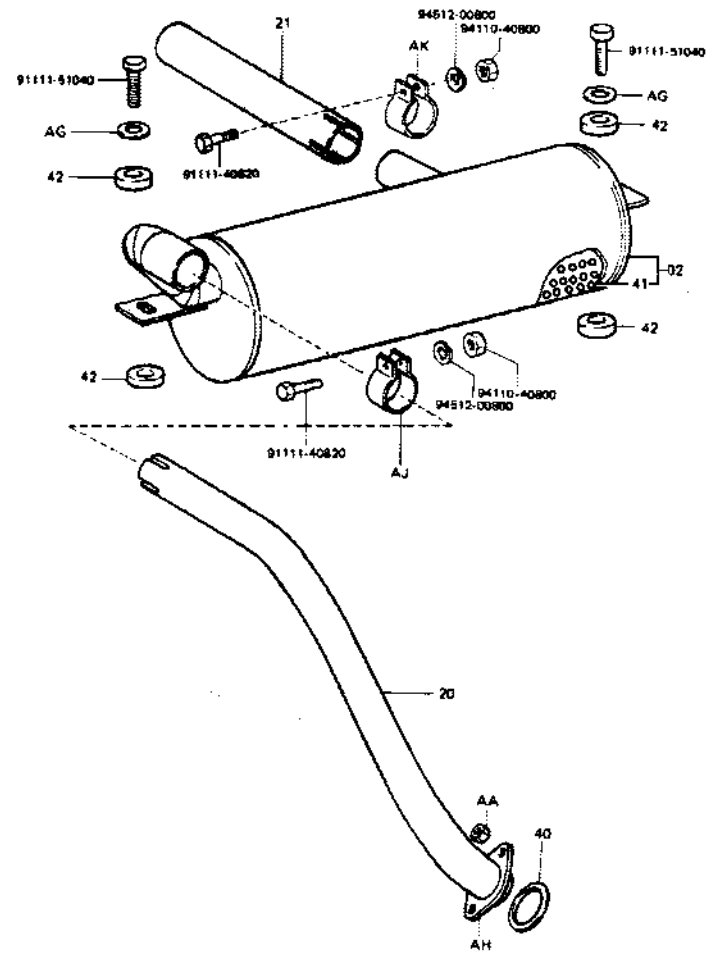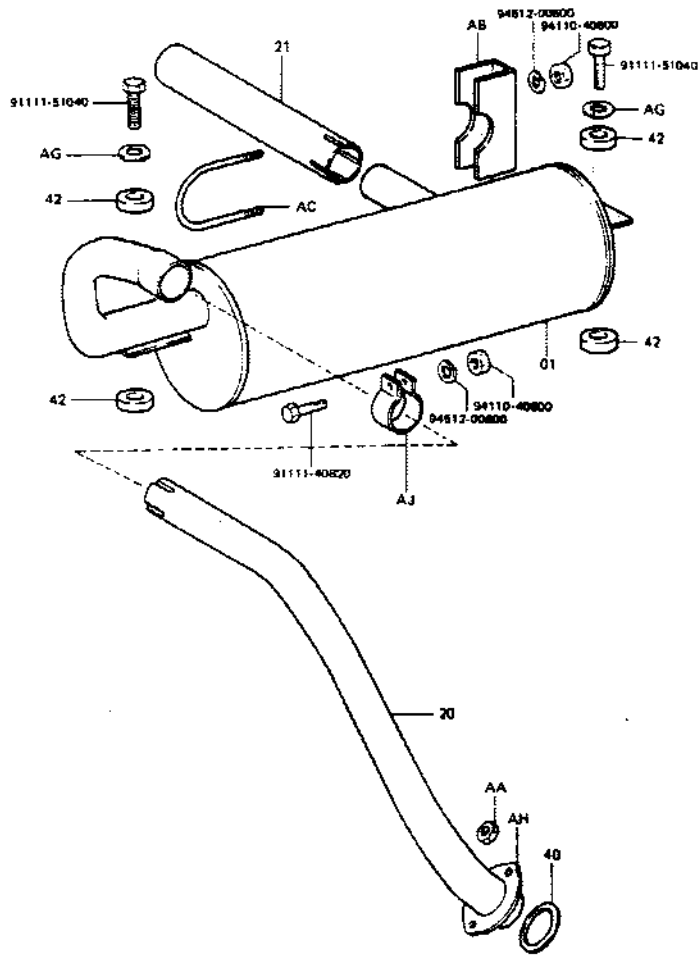  2F (CATALYTIC)



1702-011

1702-014A

G300-001

FIG. 1702
EXHAUST PIPE & MUFFLER

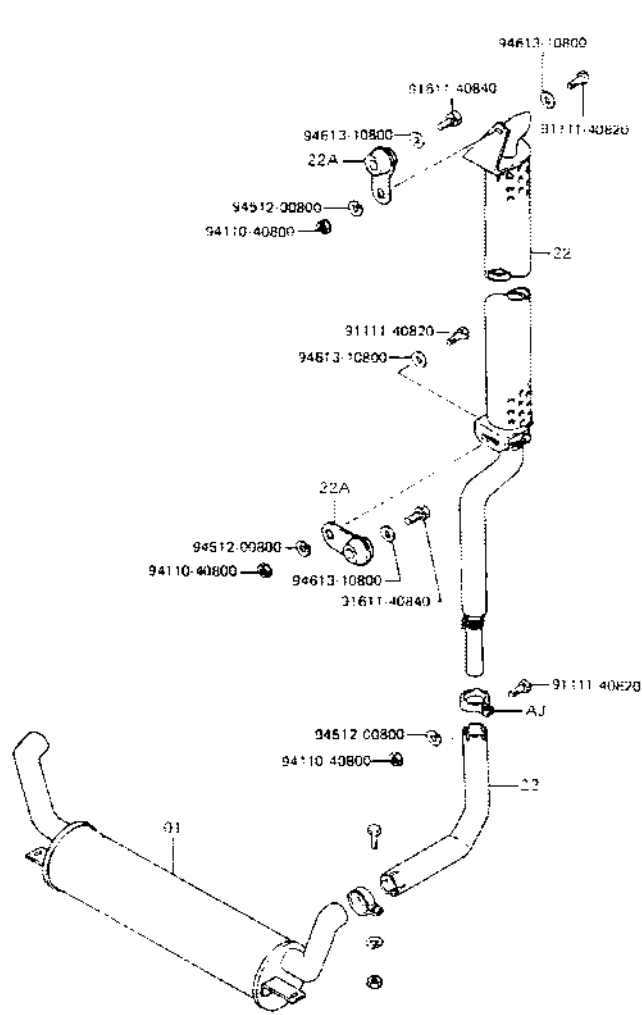 
1702

2F


87/08

2F..ATM (DELUXE CABIN)

2F (UPSWEPT)



1702-147

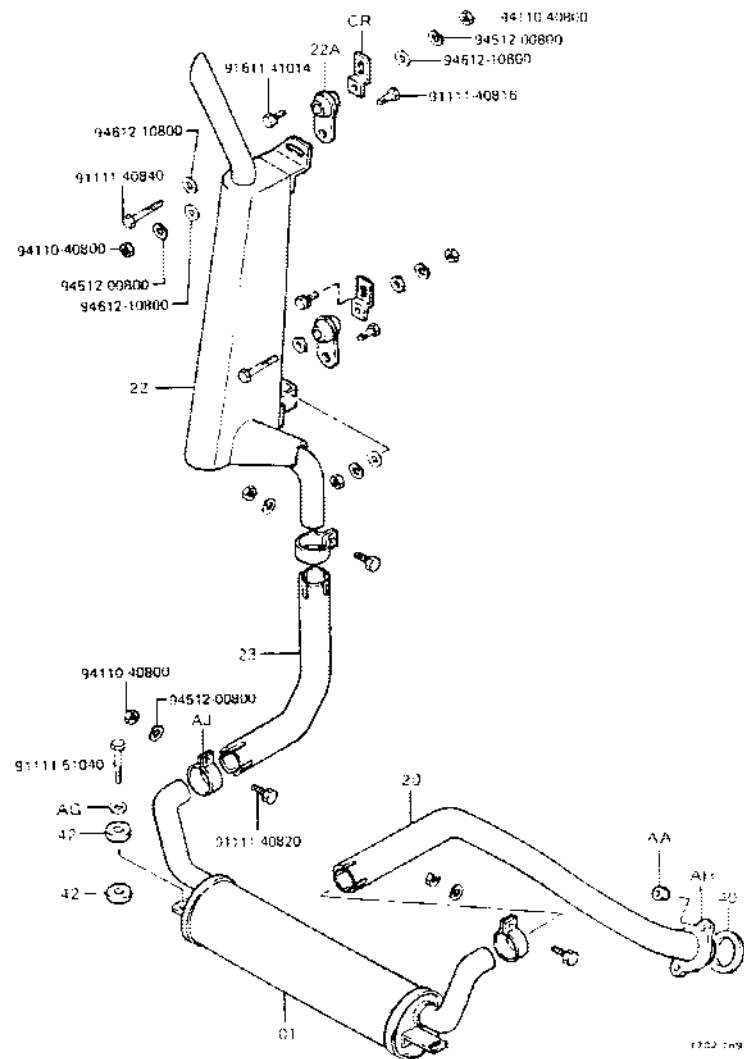 

1702-149







G.500-002

PART NAME: CODE	PART NAME	QTY
1702-01	MUFFLER ASSY	1
1702-02	MUFFLER ASSY, CATALYTIC	1
1702-20	PIPE SUB-ASSY, EXHAUST, NO-1	1
1702-21	PIPE SUB-ASSY, EXHAUST, NO-2	1
1702-22	PIPE SUB-ASSY, TAIL	1
1702-22A	RUBBER, MOUNTING	2
1702-23	PIPE, MUFFLER, MIDDLE	1
1702-40	GASKET, EXHAUST PIPE	1
1702-41	PELLET	1
1702-42	INSULATOR, MUFFLER MOUNTING	4
1702-AA	NUT, HEXAGON	2
1702-AB	BRACKET, CLAMP	1
1702-AC	BDLT, U	1
1702-AG	SPACER	2
1702-AH	FLANGE, EXHAUST PIPE	1
1702-AJ	CLAMP, PIPE	1
1702-AK	CLAMP, PIPE	1
1702-CR	BRACKET	2

2F

2F (CYCLONE SINGLE)

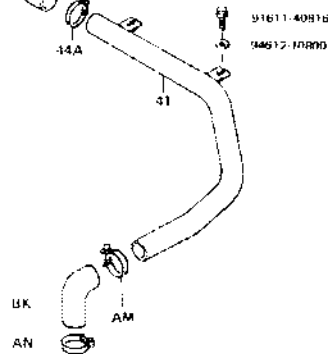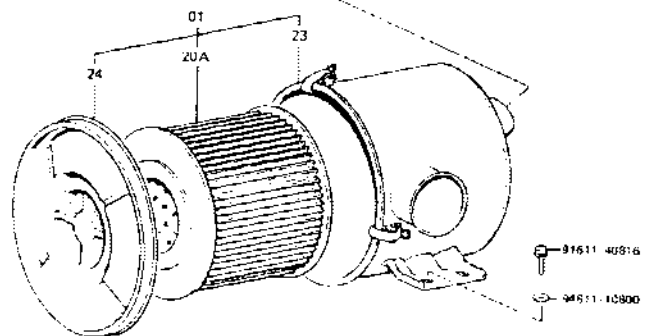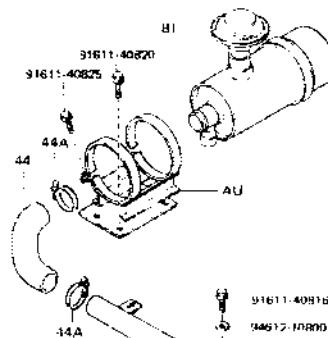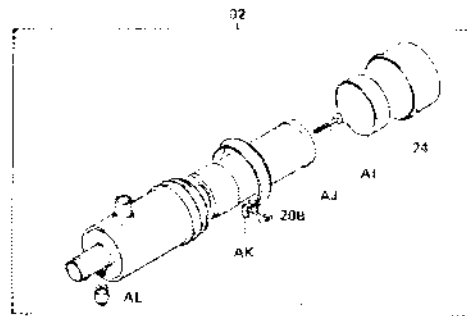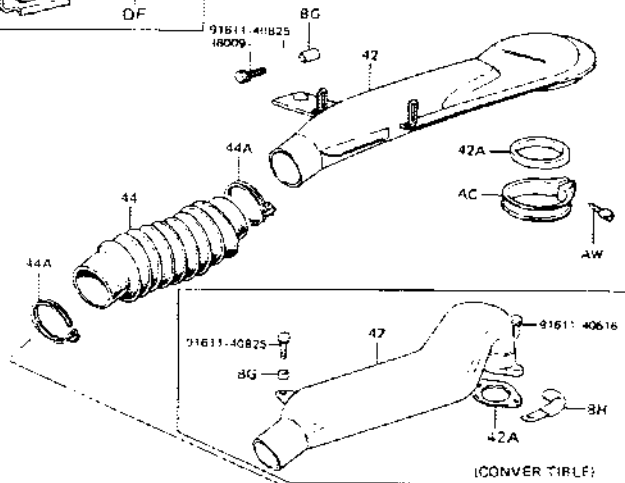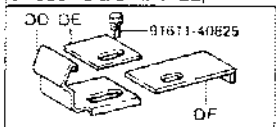      (STD)
(CYCLONE & SNORKEL)







1703-0118

1703-014

G300-001

2F..ATH (DELUXE CABINI)

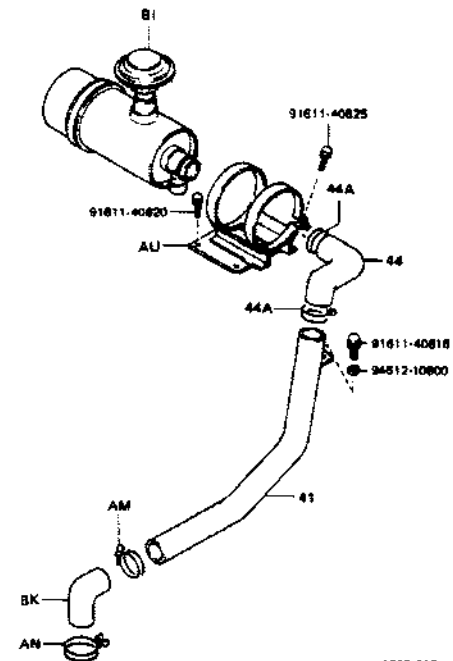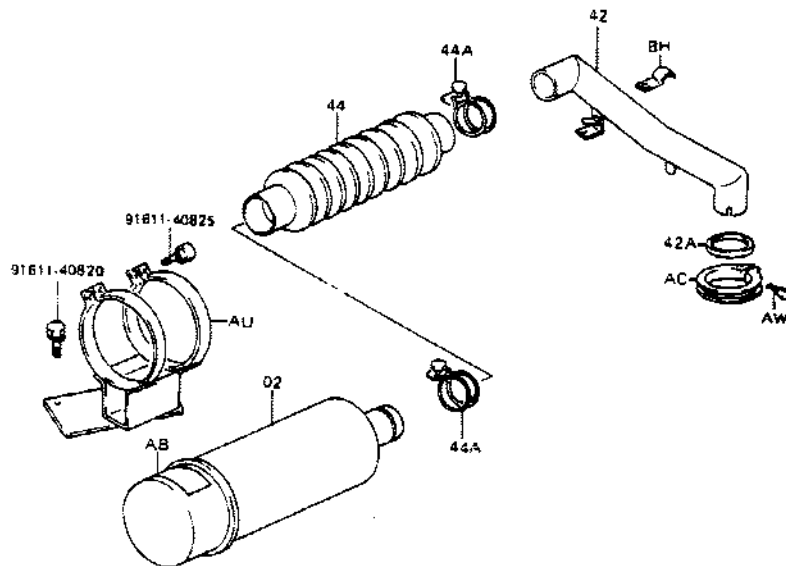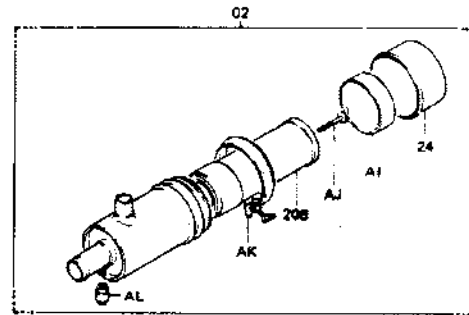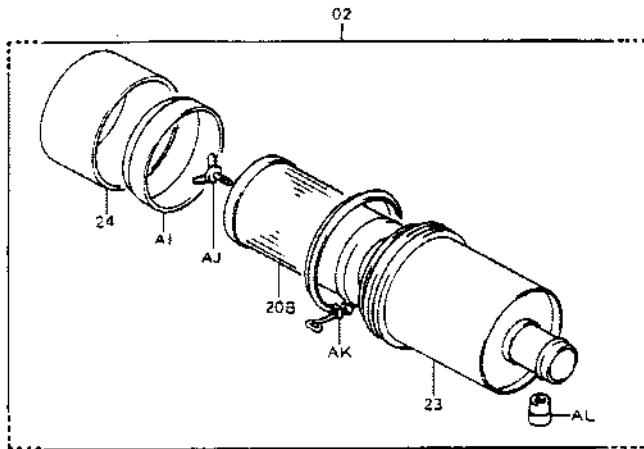    2F (ALL WEATHER..CYCLONE SINGLE)







1703-161

1703 017

G300-002

2F (CYCLONE DOUBLE)

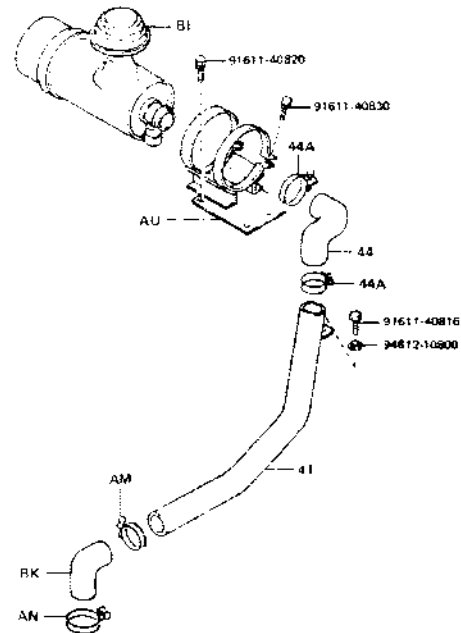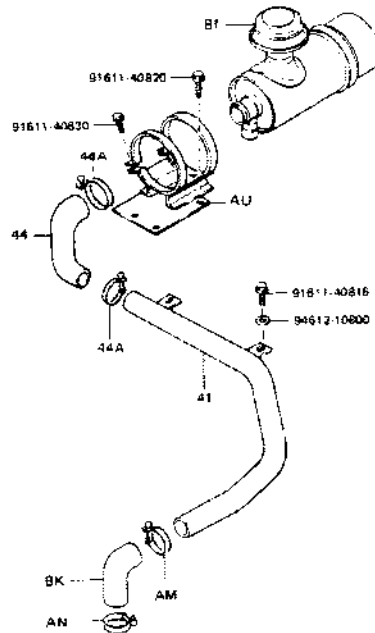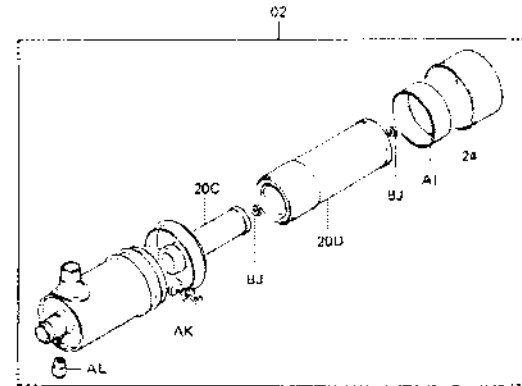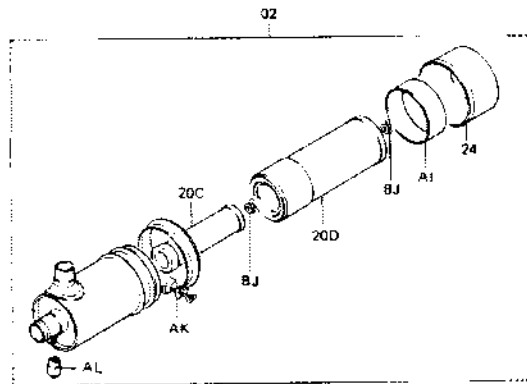    2F (ALL WEATHER - CYCLONE DOUBLE)



1703-019







1703-022

G300-005

PART NAME CODE	PART NAME	QTY
1703-01	CLEANER ASSY, AIR	1
1703-02	CLEANER ASSY, CYCLONE AIR	1
1703-20A	ELEMENT SUB-ASSY, AIR CLEANER	1
1703-20B	ELEMENT SUB-ASSY, CYCLONE AIR CLEANER	1
1703-20C	ELEMENT SUB-ASSY, CYCLONE AIR CLEANER, INNER	1
1703-20D	ELEMENT SUB-ASSY, CYCLONE AIR CLEANER, OUTER	1
1703-23	CASE SUB-ASSY, AIR CLEANER	1
1703-24	CAP SUB-ASSY, AIR CLEANER	1
1703-41	PIPE, AIR CLEANER	1
1703-42	CONNECTOR, AIR CLEANER	1
1703-42A	GASKET, AIR CLEANER CONNECTOR	1
1703-44	HOSE, AIR CLEANER, OUTLET NO.1	1
1703-44A	CLAMP (FOR AIR CLEANER OUTLET NO.1 HOSE)	1
1703-AC	BAND SUB-ASSY	1
1703-AI	BAFFLE, SCARP	1
1703-AJ	BOLT & GASKET ASSY	1
1703-AK	CLAMP ASSY	1
1703-AL	INDICATOR	1
1703-AM	CLAMP, HOSE	1
1703-AN	CLAMP, HOSE	1
1703-AU	BRACKET SUB-ASSY, CLEANER	1
1703-AW	IBOLT	1
1703-BG	SPACER	1
1703-BH	CLAMP	1
1703-BI	CAP ASSY	1
1703-BJ	NUT & GASKET ASSY	2
1703-BK	HOSE, AIR CLEANER	1
1703-QD	STOPPER, DAMPER	1
1703-DF	PLATE, DAMPER LOWER	1

2F

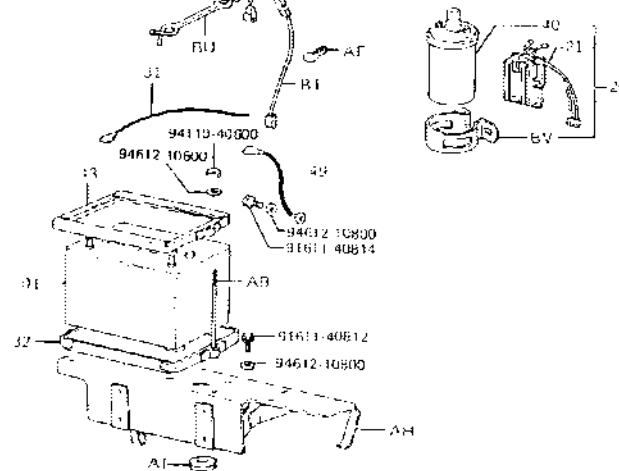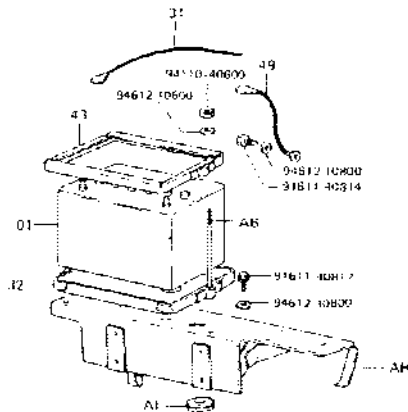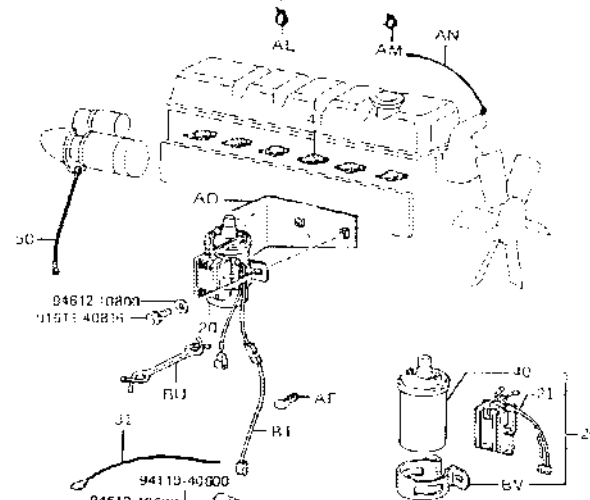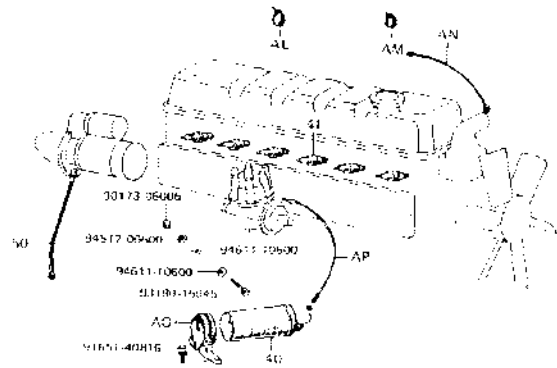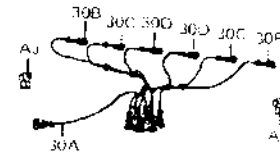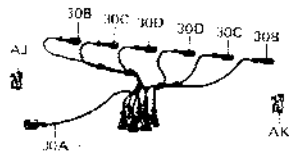      2F (FULL TRANSISTOR)




1901-025A

1901-025

PART NAME CODE	PART NAME	QTY
1901-01	BATTERY ASSY	1
1901-20	COIL ASSY, W/IGNITER	1
1901-21	IGNITER ASSY	1
1901-30	CORD SET, COIL & PLUG, W/RESISTIVE	1
1901-30A	CORD, COIL RESISTIVE	1
1901-30B	CORD, SPARK PLUG RESISTIVE, NO.1	2
1901-30C	CORD, SPARK PLUG RESISTIVE, NO.2	2
1901-30D	CORD, SPARK PLUG RESISTIVE, NO.3	2
1901-31	CABLE SUB-ASSY, BATTERY TO STARTER	1
1901-32	CASE SUB-ASSY, BATTERY	1
1901-40	COIL, IGNITION	1
1901-41	PLUG, SPARK	6
1901-43	CAP, BATTERY, NO.1	1
1901-49	CABLE, BATTERY EARTH	1
1901-50	STRAP, BOND	1
1901-AB	BOLT	2
1901-AD	BRACKET SUB-ASSY	1
1901-AP	CLAMP	1
1901-AH	BRACKET SUB-ASSY, BATTERY CASE	1
1901-AI	GROMMET	1
1901-AJ	CLAMP, IGNITION CORD, NO.2	1
1901-AK	CLAMP, IGNITION CORD, NO.1	1
1901-AL	CLAMP	1
1901-AM	CLAMP	1
1901-AN	WIRE SUB-ASSY, DISTRIBUTOR	1
1901-AQ	BAND, IGNITION COIL	1
1901-AP	WIRE SUB-ASSY, DISTRIBUTOR PRIMARY	1
1901-BT	CORD, IGNITION COIL	1
1901-BU	CLAMP	1
1901-BV	BRACKET ASSY	1

2F

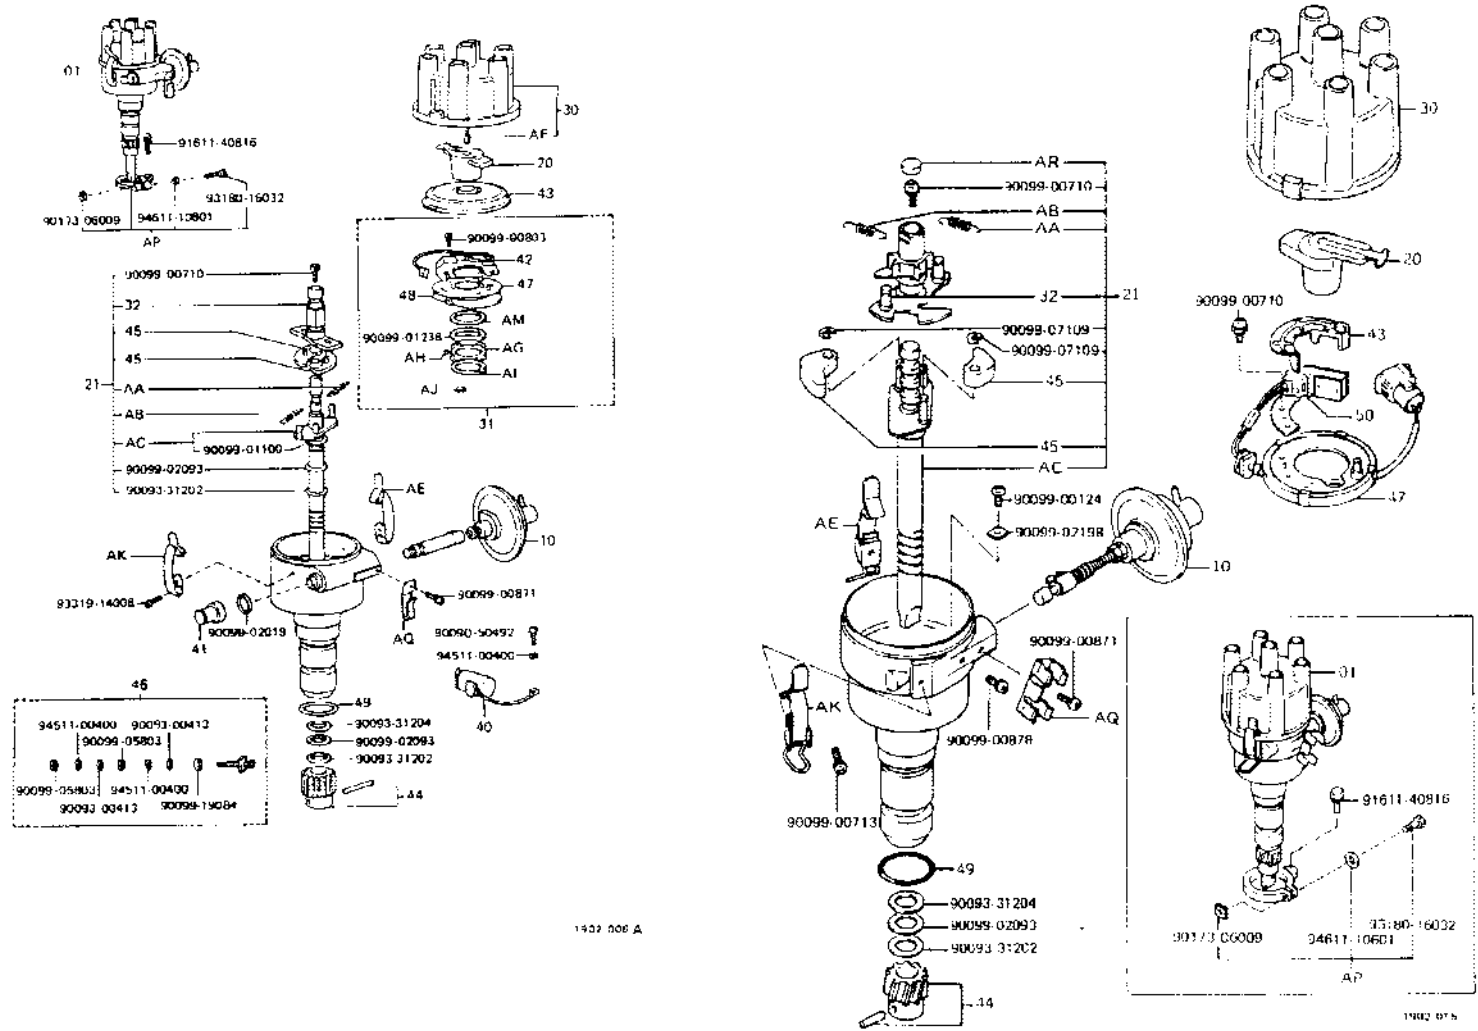 2F (FULL TRANSISTOR)



1902 006 A

1902 075

Q300-001

PART NAME CODE	PART NAME	QTY
1902-01	DISTRIBUTOR ASSY	1
1902-10	ADVANCER ASSY, VACUUM	1
1902-20	ROTOR SUB-ASSY, DISTRIBUTOR	1
1902-21	SHAFT AND GOVERNOR SUB-ASSY	1
1902-30	CAP SUB-ASSY, DISTRIBUTOR	1
1902-31	BREAKER SUB-ASSY, DISTRIBUTOR	1
1902-32	CAM SUB-ASSY, DISTRIBUTOR	1
1902-40	CONDENSER, DISTRIBUTOR	1
1902-41	CAP, ADJUSTER	1
1902-42	POINT, DISTRIBUTOR	1
1902-43	COVER, DUST PROOF	1
1902-44	GEAR, SPIRAL	1
1902-45	WEIGHT, GOVERNOR	2
1902-46	TERMINAL, DISTRIBUTOR	1
1902-47	PLATE, BREAKER	1
1902-48	PLATE, STATIONARY	1
1902-49	RING, DISTRIBUTOR HOUSING Q	1
1902-50	GENERATOR, SIGNAL	1
1902-AA	SPRING, GOVERNOR, A	1
1902-AB	SPRING, GOVERNOR, B	1
1902-AC	SHAFT & PLATE, GOVERNOR	1
1902-AE	SPRING SUB-ASSY, HOUSING CAP, B	1
1902-AF	PIECE, CAP CENTER	1
1902-AG	SPRING, BREAKER PLATE SET	1
1902-AH	BALL	4
1902-AI	RING, SNAP	1
1902-AJ	RING, SNAP	1
1902-AK	SPRING SUB-ASSY, HOUSING CAP, A	1
1902-AM	WASHER	99
1902-AP	CLAMP SUB-ASSY	1
1902-AQ	CLAMP, CORD	1
1902-AR	CAP	1

FIG. 1903
ALTERNATOR

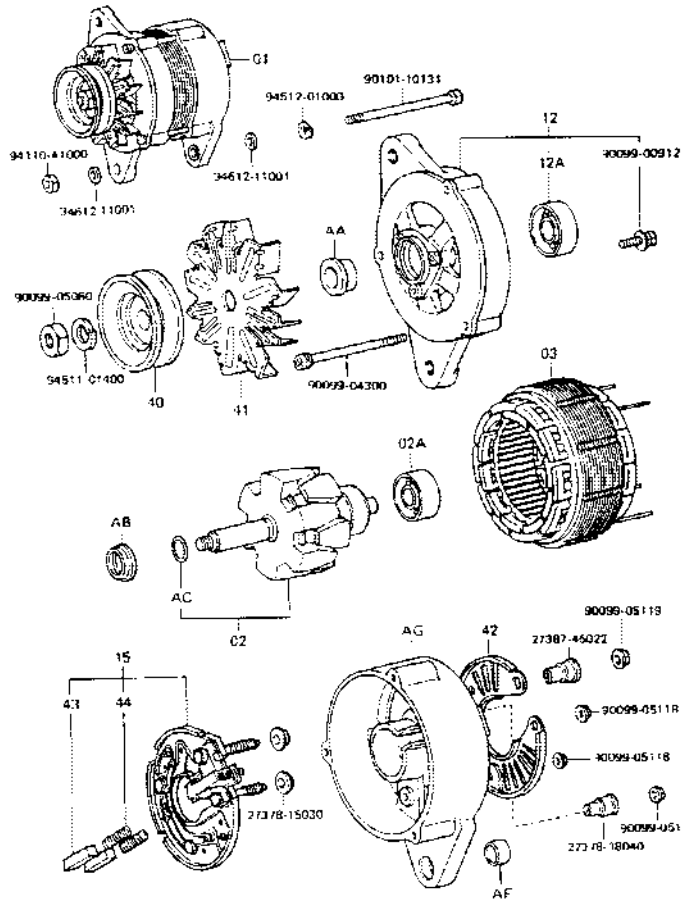 
1903

2F


87/08

2F

2F (HI-CAPACITY)



1903-028

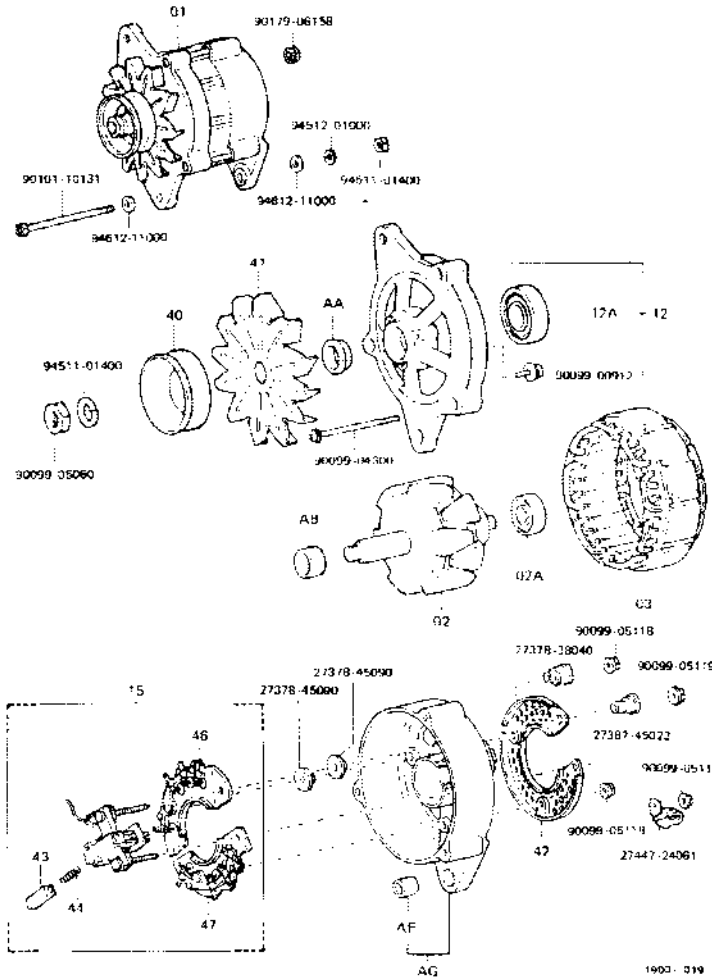 


1903-019

G.500-001


PART NAME CODE	PART NAME	QTY
1905-01	ALTERNATOR ASSY -----	1
1903-02	ROTOR ASSY, ALTERNATOR -----	1
1903-02A	BEARING (FOR ALTERNATOR ROTOR) -----	1
1903-03	STATOR ASSY, ALTERNATOR -----	1
1903-12	FRAME ASSY, DRIVE END -----	1
1903-12A	BEARING (FOR ALTERNATOR DRIVE END FRAME) -----	1
1903-15	RECTIFIER ASSY, W/BRUSH -----	1
1903-40	PULLEY, ALTERNATOR -----	1
1905-41	FAN, ALTERNATOR -----	1
1903-42	COVER, REAR END -----	1
1903-43	BRUSH, ALTERNATOR -----	1
1903-44	SPRING, BRUSH -----	2
1903-46	HOLDER, W/RECTIFIER POSITIVE -----	1
1903-47	HOLDER, W/RECTIFIER NEGATIVE -----	1
1903-AA	COLLAR, STEEL -----	1
1903-AB	RING, SPACER -----	1
1903-AC	RING, SNAP -----	1
1903-AF	BUSHING -----	1
1903-AG	FRAME, RECTIFIER END -----	1

2F...ATM

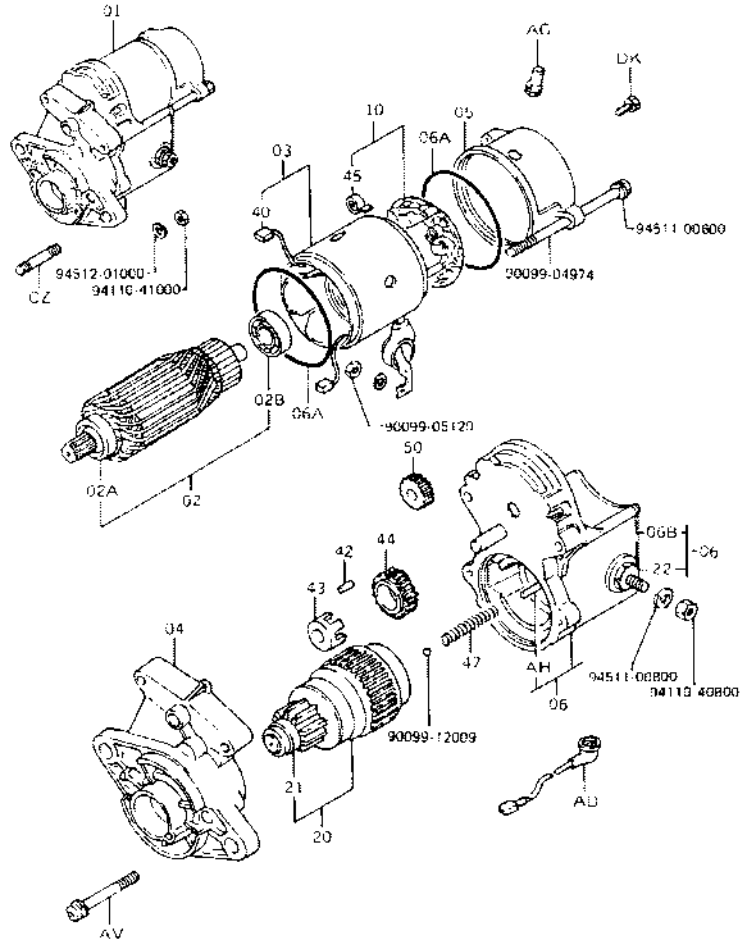 2F...MTM




1904 057

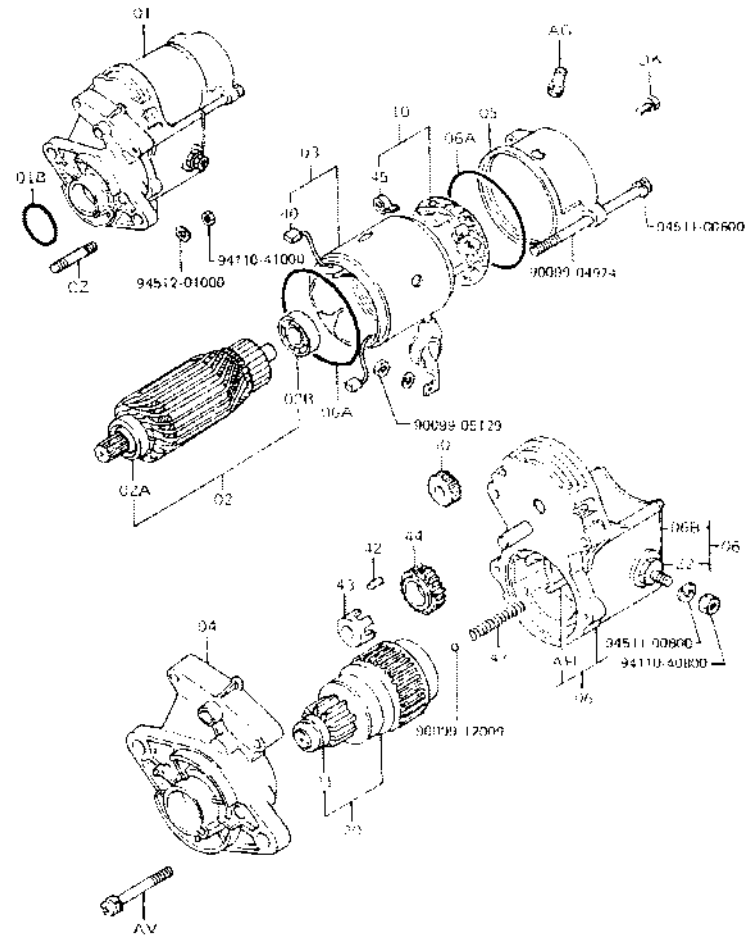 

1904 060

PART NAME CODE	PART NAME	QTY
1904-01	STARTER ASSY	1
1904-01B	RING, O (FOR STARTER HOUSING)	1
1904-02	ARMATURE ASSY, STARTER	1
1904-02A	BEARING, ARMATURE, NO.1	1
1904-02B	BEARING, ARMATURE, NO.2	1
1904-03	YOKE ASSY, STARTER	1
1904-04	HOUSING ASSY, STARTER DRIVE	1
1904-05	FRAME ASSY, COMMUTATOR END	1
1904-06	SWITCH ASSY, MAGNET	1
1904-06A	PACKING, RUBBER (FOR STARTER YOKE)	2
1904-06B	PACKING (FOR MAGNET SWITCH END COVER)	1
1904-10	HOLDER ASSY, STARTER BRUSH	1
1904-20	CLUTCH SUB-ASSY, STARTER	1
1904-21	PINION SUB-ASSY, STARTER	1
1904-22	CHIP SUB-ASSY, CONTACT	1
1904-40	BRUSH, STARTER	1
1904-42	ROLLER, STARTER IDLE GEAR CLUTCH	5
1904-43	RETAINER, STARTER IDLE GEAR	1
1904-44	GEAR, STARTER IDLE	1
1904-45	SPRING, STARTER BRUSH	4
1904-47	SPRING, STARTER MAGNET SWITCH RETURN	1
1904-49	RUBBER (FOR STARTER BEARING COVER)	1
1904-50	GEAR, STARTER PINION	1
1904-AD	WIRE, LEAD	1
1904-AQ	COVER, END FRAME	1
1904-AH	PLUNGER SUB-ASSY, CONTACTOR	1
1904-AV	SCREW, W/WASHER	2
1904-CZ	BOLT, STUD	2
1904-DK	SCREW, W/RING, O	2

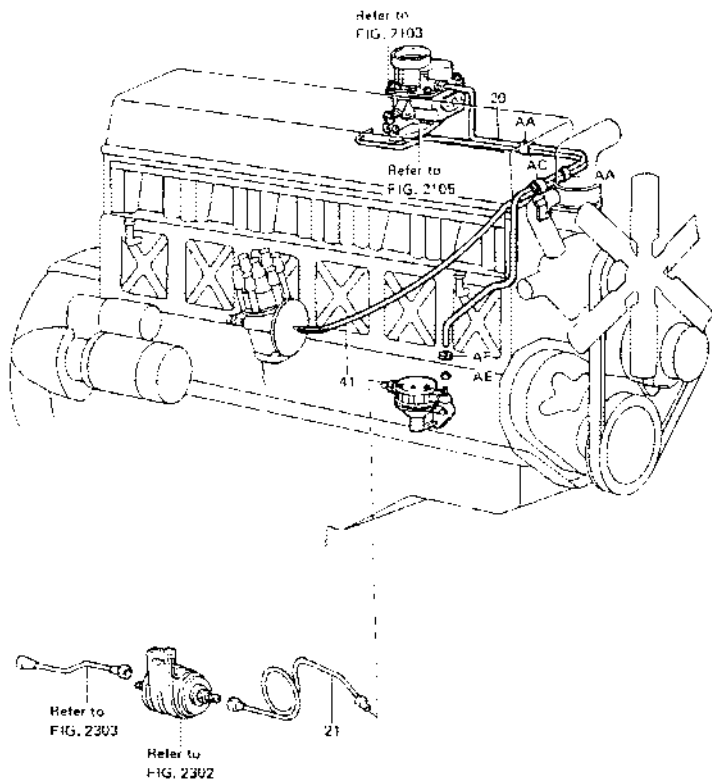 2F




PART NAME	PART NAME	QTY
CODE		
2101-20	PIPE SUB-ASSY, CARBURETOR FUEL	1
2101-21	PIPE SUB-ASSY, FILTER TO PUMP	1
2101-41	HOSE, DISTRIBUTOR VACUUM	1
2101-AA	CLIP	4
2101-AC	CLAMP, FUEL PIPE	1
2101-AE	OLIVE	4
2101-AF	NUT, UNION	4

2101-00MA




2F

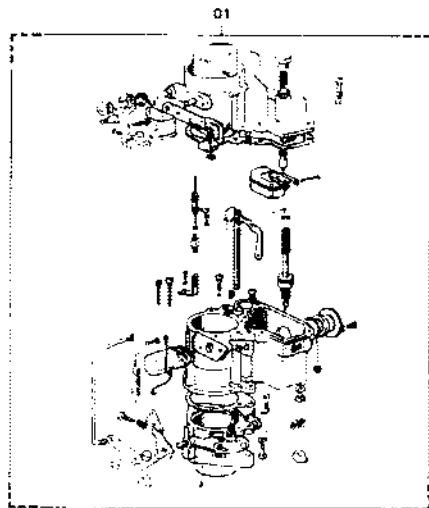 2F



D1K (INCL. •)

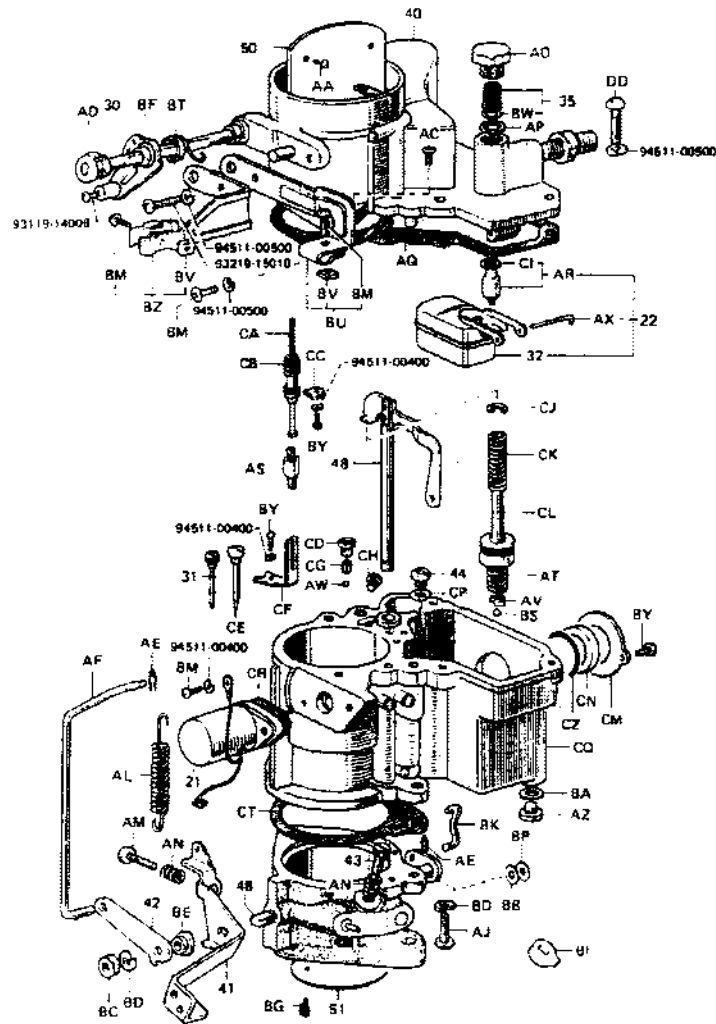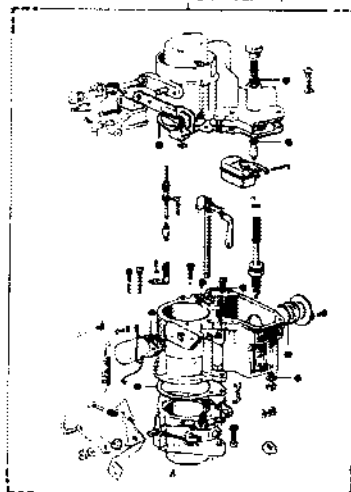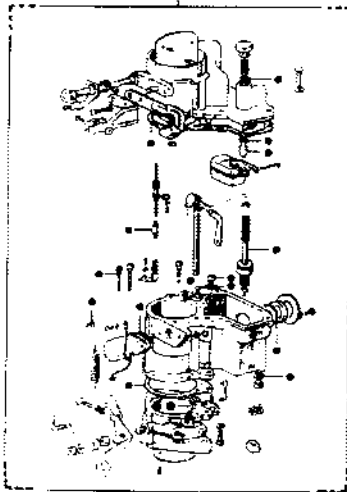   D1L (INCL. •)



2103-014


2103 014

PART NAME CODE	PART NAME	QTY
2103-01	CARBURETOR ASSY	1
2103-01K	CARBURETOR KIT	1
2103-01L	GASKET KIT, CARBURETOR	1
2103-21	VALVE SUB-ASSY, SLOW	1
2103-22	FLOAT & NEEDLE SUB-ASSY	1
2103-30	SHAFT SUB-ASSY, CHOKE	1
2103-31	JET SUB-ASSY, SLOW	1
2103-32	FLOAT SUB-ASSY	1
2103-35	STRAINER SUB-ASSY	1
2103-40	HORN, AIR	1
2103-41	LEVER, THROTTLE	1
2103-42	LEVER, 1ST IDLE ADJUSTING	1
2103-43	SCREW, IDLE ADJUSTING	1
2103-44	JET, 1ST MAIN	1
2103-46	SHAFT, 1ST THROTTLE	1
2103-48	ROD, LIFTER	1
2103-50	VALVE, CHOKE	1
2103-51	VALVE, THROTTLE	1
2103-AA	SCREW, CHOKE VALVE SET	2
2103-AC	SCREW	1
2103-AD	SPRING, CHOKE VALVE RELIEF	1
2103-AE	RING, SNAP	2
2103-AF	CONNECTOR, 1ST IDLE	1
2103-AJ	SCREW, SET	2
2103-AL	SPRING, THROTTLE BACK	1
2103-AM	SCREW, THROTTLE ADJUSTING	1
2103-AN	SPRING, IDLE ADJUSTING SCREW	2
2103-AD	PLUG, MAIN PASSAGE	1
2103-AP	GASKET, INLET STRAINER	1
2103-AQ	GASKET, AIR HORN	1
2103-AR	VALVE SUB-ASSY, NEEDLE	1
2103-AS	VALVE, POWER	1
2103-AT	SPRING, PUMP DUMPING	1
2103-AV	RETAINER, BALL CHECK	1
2103-AW	BALL, STEEL	1
2103-AX	PIN, FLOAT LEVER	1
2103-AZ	PLUG, NUT	1
2103-BA	GASKET, PASSAGE PLUG	1
2103-BB	SHIM	99
2103-BC	NUT, THROTTLE LEVER SET	1
2103-BD	WASHER, SPRING	3
2103-BE	COLLAR	1
2103-BF	LEVER	1
2103-BG	SCREW, VALVE SET	2
2103-BI	CAP, IDLE LIMIT	1
2103-BK	LINK, CONNECTING	1
2103-BM	SCREW	4
2103-BP	SHIM	99
2103-BS	BALL, STEEL	1
2103-BT	SPRING	1
2103-BU	CLAMP	1
2103-BV	NUT	2
2103-BW	CAP, STRAINER	1
2103-BY	SCREW	4
2103-BZ	CLAMP, THROTTLE WIRE	1
2103-CA	SPRING, POWER PISTON	1
2103-CB	PISTON, POWER	1
2103-CC	STOP, POWER PISTON	1
2103-CD	PLUG	1
2103-CE	BLEEDER SUB-ASSY, MAIN AIR	1
2103-CF	GUIDE	1
2103-CG	WEIGHT, PUMP DISCHARGE	1
2103-CH	PLUG, PUMP JET	1
2103-CI	GASKET	1


PART NAME CODE	PART NAME	QTY
2103-CJ	RETAINER	1
2103-CK	SPRING, PUMP	1
2103-CL	PLUNGER, PUMP	1
2103-CM	CLAMP, LEVEL GAGE	1
2103-CN	GLASS, LEVEL GAGE	1
2103-CP	GASKET	1
2103-CQ	BODY	1
2103-CR	GASKET	1
2103-CT	GASKET	1
2103-CZ	RING, O	1
2103-DD	SCREW	4

2F

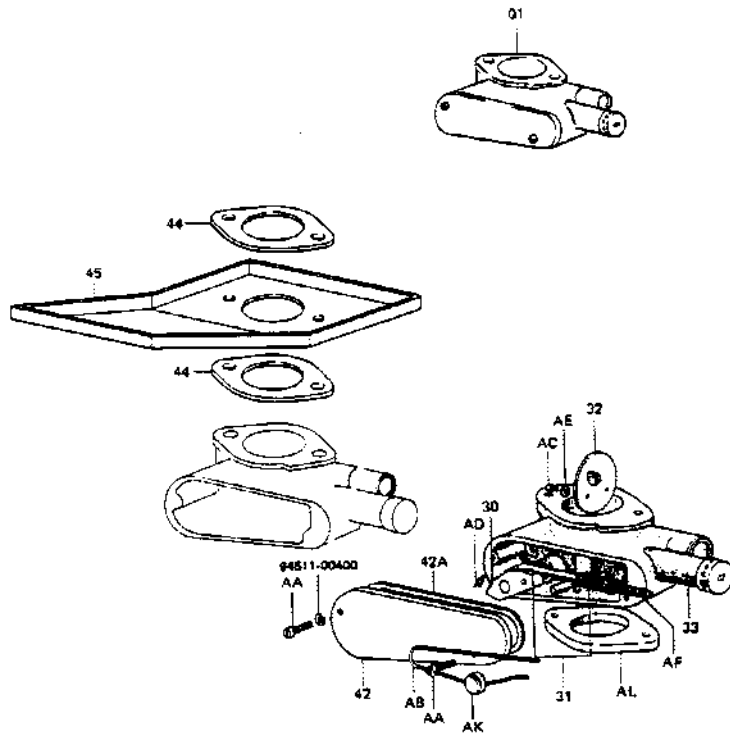 2F (EXCLUSIVE)



2105-002

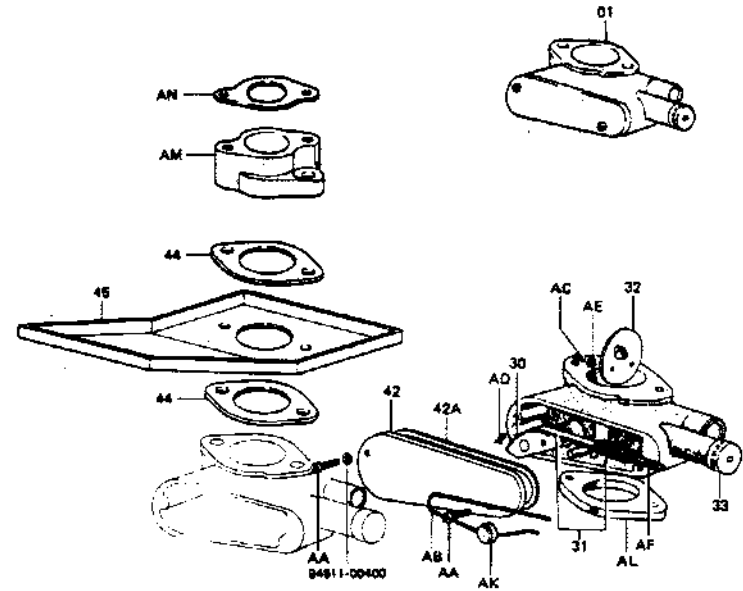 

2105-003

G300-001

PART NAME	PART NAME	QTY
CODE		
2105-01	GOVERNOR ASSY, AIR -----	1
2105-30	SHAFT SUB-ASSY, THROTTLE VALVE -----	1
2105-31	SPRING SUB-ASSY -----	1
2105-32	VALVE SUB-ASSY, AIR GOVERNOR THROTTLE -----	1
2105-33	CAP SUB-ASSY -----	1
2105-42	COVER -----	1
2105-42A	GASKET, COVER -----	1
2105-44	GASKET, FUEL INSULATOR PLATE -----	2
2105-45	PLATE, FUEL INSULATOR -----	1
2105-AA	SCREW, GOVERNOR COVER -----	2
2105-AB	WIRE -----	1
2105-AC	SCREW -----	2
2105-AD	RING, SNAP -----	1
2105-AE	MASHER, LOCK -----	2
2105-AF	SCREW, ADJUSTING -----	1
2105-AK	SEAL, ROD -----	1
2105-AL	GASKET, CARBURETOR -----	2
2105-AM	SPACER -----	1
2105-AN	GASKET -----	1


FIG. 2301
FUEL PUMP

2301

2F

85/04

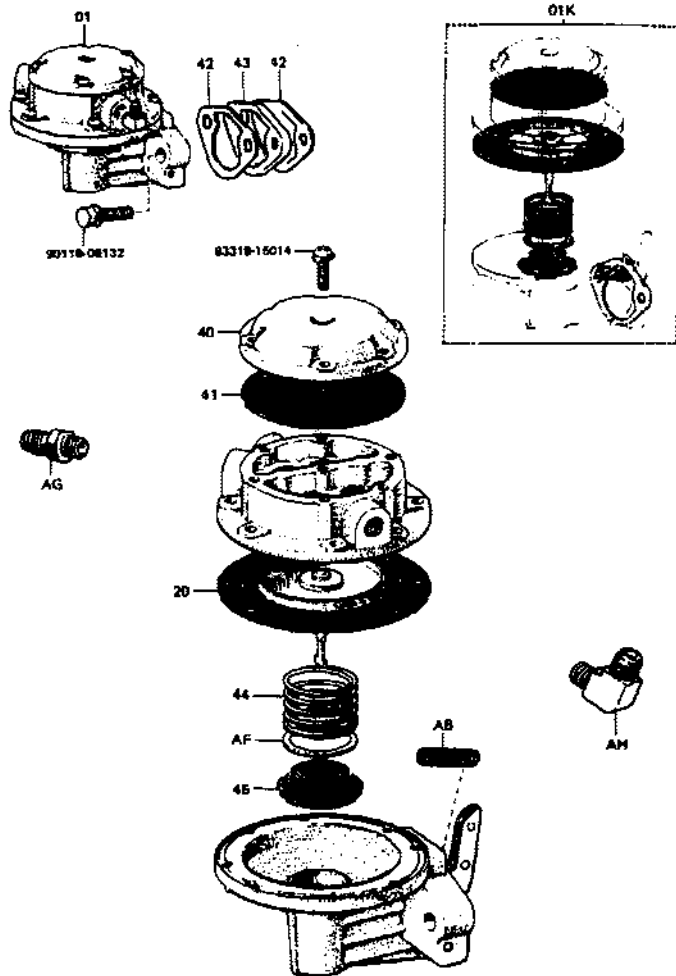 2F



PART NAME	PART NAME	QTY
CDDE		
2301-01	PUMP ASSY, FUEL	1
2301-01K	PUMP KIT, FUEL	1
2301-20	DIAPHRAGM SUB-ASSY	1
2301-40	COVER, FUEL PUMP UPPER	1
2301-41	GASKET, FUEL PUMP COVER	1
2301-42	GASKET, FUEL PUMP	2
2301-43	INSULATOR, FUEL PUMP	1
2301-44	SPRING, DIAPHRAGM	1
2301-45	PACKING, OIL SEAL	1
2301-AB	SPRING, ROCKER ARM	1
2301-AF	RETAINER, OIL SEAL PACKING	1
2301-AG	CONNECTOR	1
2301-AH	ELBOW	1

2301-008


FIG. 2302
FUEL FILTER

2302

2F

87/08

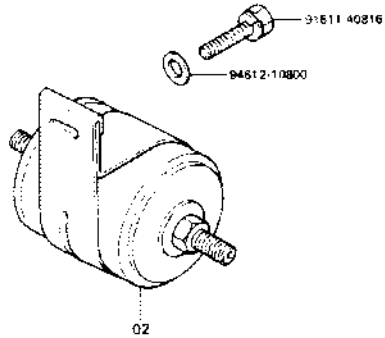 2F



2302-003

PART NAME CODE	PART NAME	QTY
2302-02	FILTER ASSY, FUEL (ELEMENT NO SERVICE TYPE)	

G300-001E

FIG. 2303
FUEL TANK & FUEL PIPE

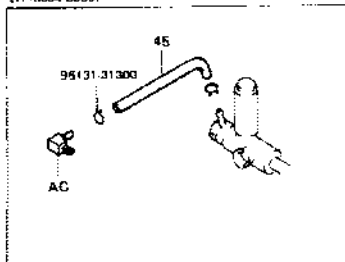 
2303

2F


87/08

2F

2H (8004-8009)




2H (8009-)

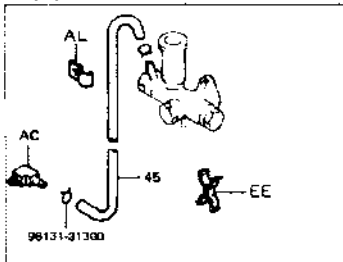 


2H (8009-)

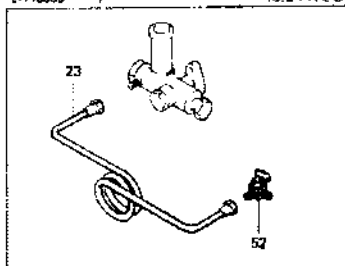 
(J.L. TYPE D)






2F

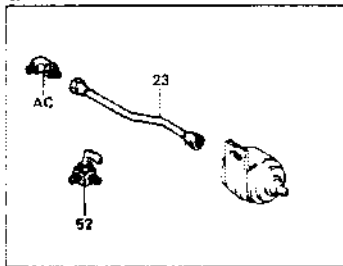 

2H

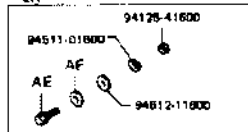 

2F

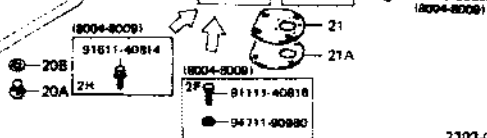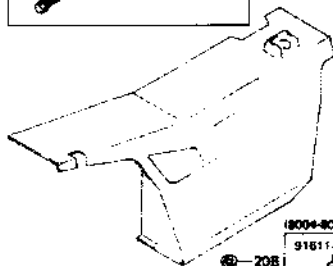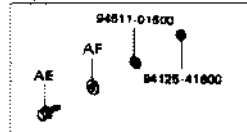   


2303-008C

PART NAME CODE	PART NAME	QTY
2303-10	CAP ASSY, FUEL TANK	1
2303-20A	PLUG, DRAIN (FOR FUEL TANK)	1
2303-20B	GASKET, DRAIN PLUG (FOR FUEL TANK)	1
2303-21	COVER SUB-ASSY, FUEL TANK	1
2303-21A	PACKING, FUEL TANK COVER	1
2303-23	PIPE SUB-ASSY, FUEL, NO.1	1
2303-42	VALVE, BREATHER	1
2303-42	ELBOW (FOR NOZZLE LEAKAGE PIPE)	1
2303-AA	BOLT	4
2303-AB	PLATE, SEPARATE	1
2303-AC	ELBOW	1
2303-AE	BOLT, FLANGE	1
2303-AF	GASKET	1
2303-AN	SCREW, SEALOCK	5


G300-001E

2F (CONVERTIBLE)

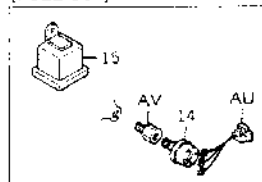 
(FUEL CUT)




(CANADA)

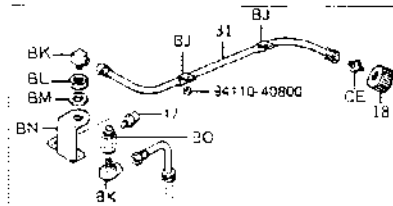 



(8306)

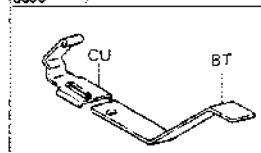 

(CANADA)

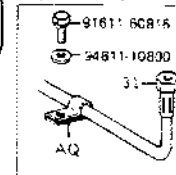 


(HEATER)

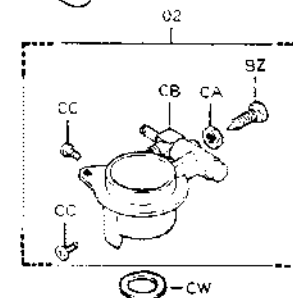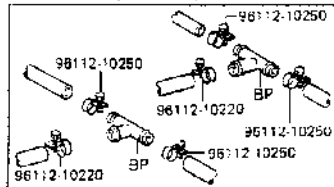  

2311-037G

G300-001

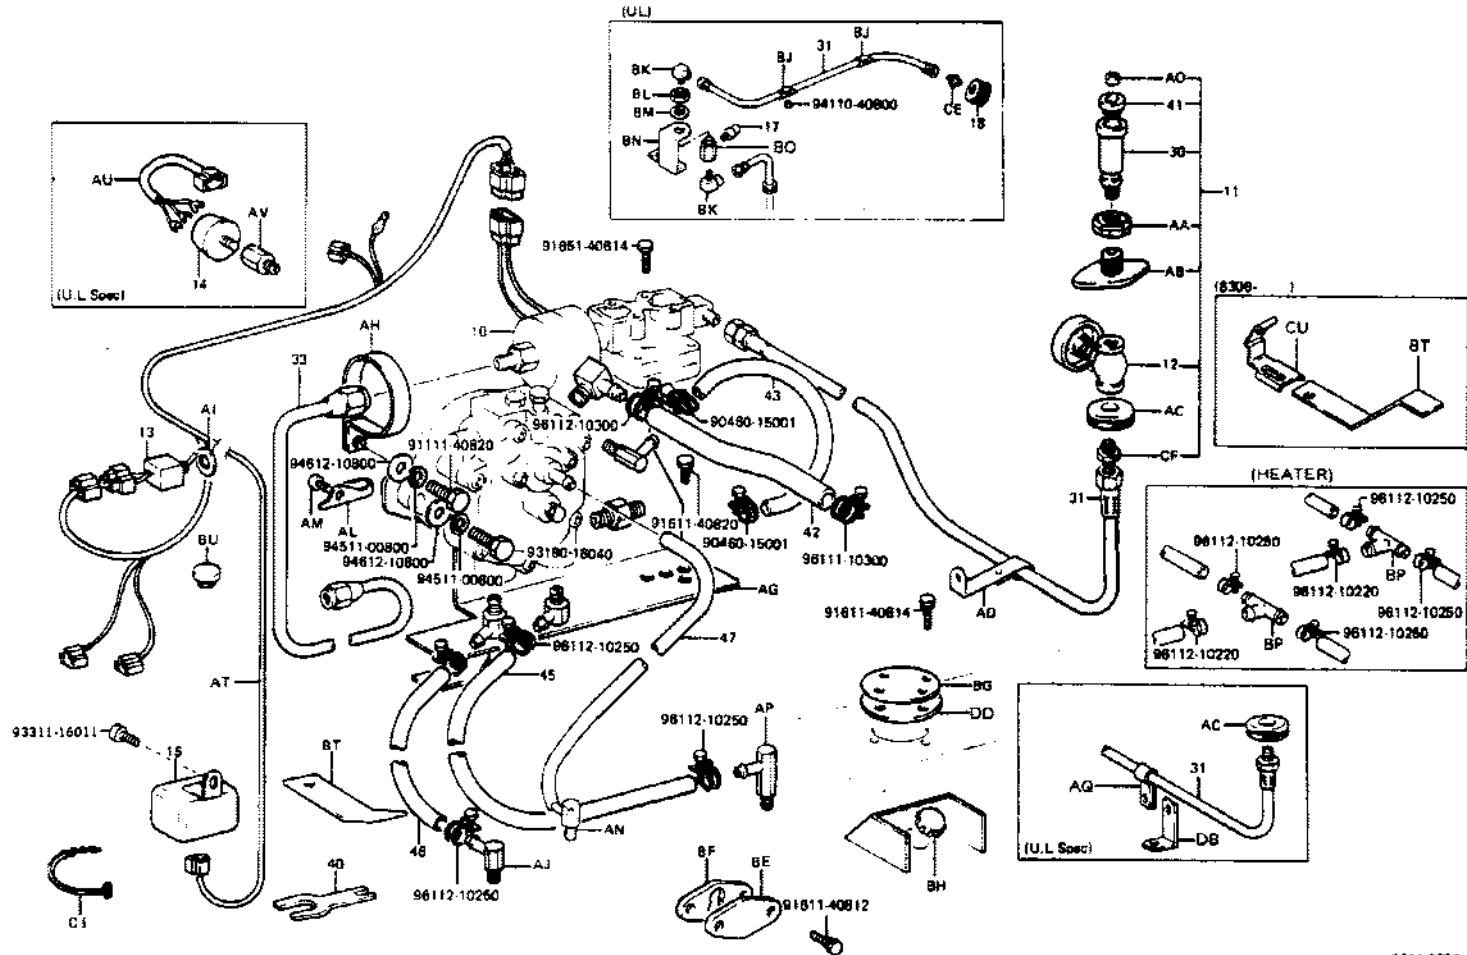 2F (EXCLUSIVE)




2311-038F

G300-002

PART NAME CODE	PART NAME	QTY
12311-02	ADAPTOR ASSY	1
12311-10	VALVE ASSY, SOLENOID, LPG	1
12311-11	CONNECTION ASSY, HIGH PRESSURE, LPG	1
12311-12	VALVE ASSY, SERVICE	1
12311-13	SWITCH ASSY, LPG	1
12311-14	SWITCH ASSY, OIL PRESSURE (FOR LPG)	1
12311-15	RELAY ASSY (FOR LPG)	1
12311-16	VALVE ASSY, SOLENOID, GASOLINE	1
12311-17	VALVE ASSY, RELIEF, LPG	1
12311-18	COUPLING ASSY, LPG	1
12311-30	SLEEVE SUB-ASSY, VALVE JOINT	1
12311-31	HOSE SUB-ASSY, (CONTAINER TO FILTER)	1
12311-33	PIPE SUB-ASSY, FUEL (VALVE TO REGULATOR)	1
12311-34	PIPE SUB-ASSY, FUEL, NO.1 (FOR GASOLINE)	1
12311-35	PIPE SUB-ASSY, FUEL, NO.2 (FOR GASOLINE)	1
12311-40	WRENCH, LPG HOSE	1
12311-41	PACKING, TANK VALVE JOINT	1
12311-42	HOSE, FUEL MAIN (REGULATOR TO CARBURETOR)	1
12311-43	HOSE, FUEL SLOW (REGULATOR TO CARBURETOR)	1
12311-45	HOSE, WATER, NO.1	1
12311-46	HOSE, WATER, NO.2	1
12311-47	HOSE, VACUUM	1
12311-AA	NUT, HEXAGON	1
12311-AB	NUT, UNION	1
12311-AC	GROMMET	1
12311-AD	CLAMP	1
12311-AG	BRACKET, REGULATOR	1
12311-AH	CLAMP	1
12311-AI	LABEL	1
12311-AJ	JOINT, WATER HOSE	1
12311-AL	CLAMP	1
12311-AM	SCREW	1
12311-AN	UNION	1
12311-AP	HOLDER	1
12311-AP	JOINT, WATER HOSE	1
12311-AQ	CLAMP	1
12311-AT	HARNESS, WIRE	1
12311-AU	HARNESS	1
12311-AV	JOINT	1
12311-AY	UNION	2
12311-BE	PLUG, PLATE	1
12311-BF	GASKET, FUEL PLUG	1
12311-BG	COVER, FUEL TANK	1
12311-BH	CAP, FUEL	1
12311-BJ	CLAMP	2
12311-BK	ELBOW	1
12311-BL	NUT	1
12311-BM	WASHER	1
12311-BN	BRACKET	1
12311-BQ	FITTING	1
12311-BP	3-WAY SUB-ASSY	2
12311-BT	BAR, HOSE CLAMP	1
12311-BW	PLUG, HOLE	1
12311-BZ	SCREW, POWER ADJUST	1
12311-CA	NUT, POWER ADJUST	1
12311-CB	UNION	1
12311-CC	ROD	2
12311-CE	CONNECTOR	1
12311-CF	CONNECTOR	1
12311-CI	BAND, CLAMP	2
12311-CU	STOPPER, DAMPER	1
12311-DB	BRACKET	1
12311-DD	PACKING, FUEL TANK	1

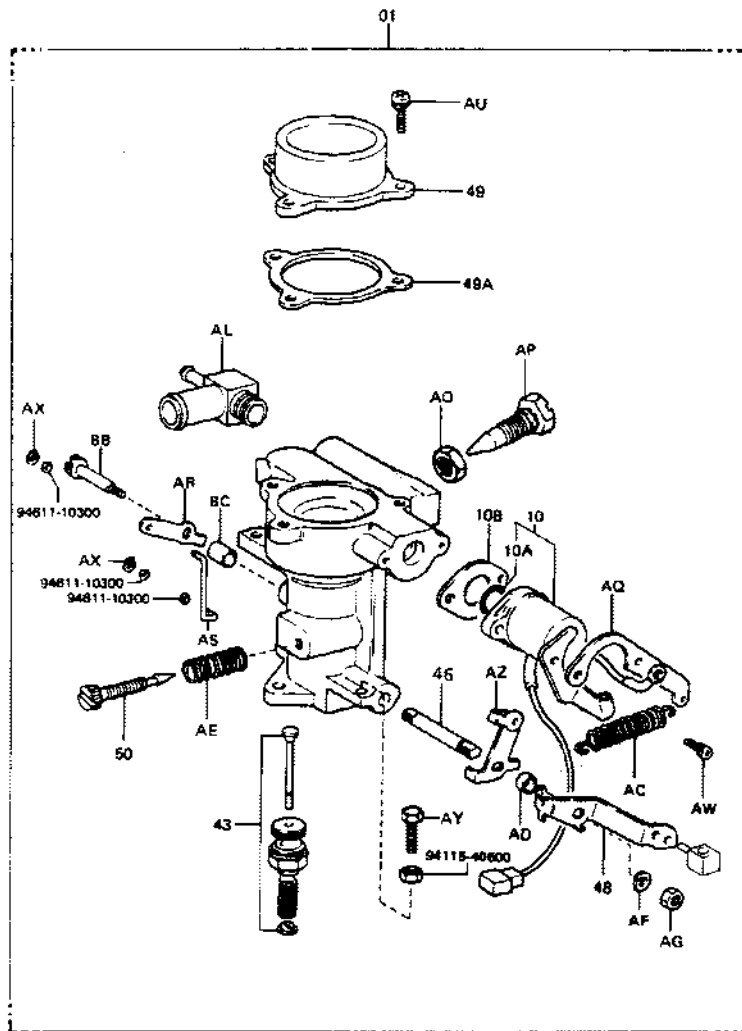 2F (EXCLUSIVE)




2312-004B

PART NAME CODE	PART NAME	QTY
2312-01	CARBURETOR ASSY, LPG	1
2312-10	VALVE ASSY, SOLENOID	1
2312-10A	RING, O (FOR SOLENOID VALVE)	1
2312-10B	GASKET (FOR SOLENOID VALVE)	1
2312-43	VALVE, POWER	1
2312-46	SHAFT, THROTTLE	1
2312-48	LEVER, THROTTLE	1
2312-49	HORN, AIR	1
2312-49A	GASKET, AIR HORN	1
2312-50	SCREW, THROTTLE ADJUST	1
2312-AC	SPRING, THROTTLE BACK	1
2312-AD	COLLAR	1
2312-AE	SPRING, IDLE ADJUST SCREW	1
2312-AF	WASHER, LOCK	1
2312-AG	NUT, THROTTLE LEVEL SET	1
2312-AL	UNION	1
2312-AD	NUT, POWER JET	1
2312-AP	SCREW, POWER JET	1
2312-AQ	BRACKET	1
2312-AR	LEVER	1
2312-AS	LINK	1
2312-AU	PLUG	3
2312-AW	SCREW	2
2312-AX	RING, SNAP	2
2312-AY	SCREW	1
2312-AZ	LEVER	1
2312-BB	SCREW	1
2312-BC	COLLAR	1


G300-001E

2F (CONVERTIBLE)

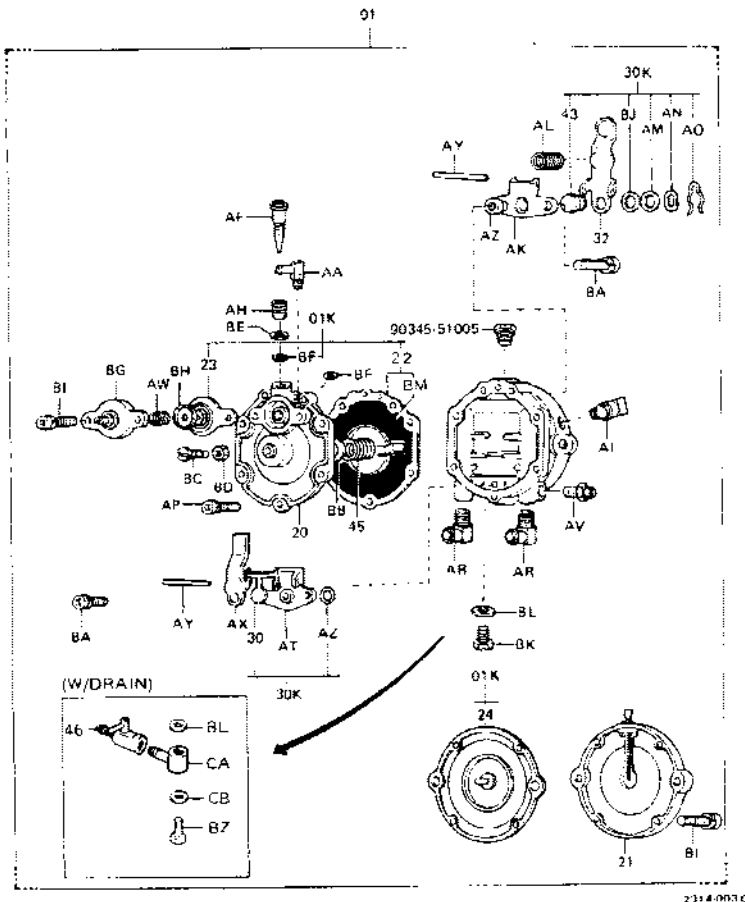 2F (EXCLUSIVE)



2314-003C

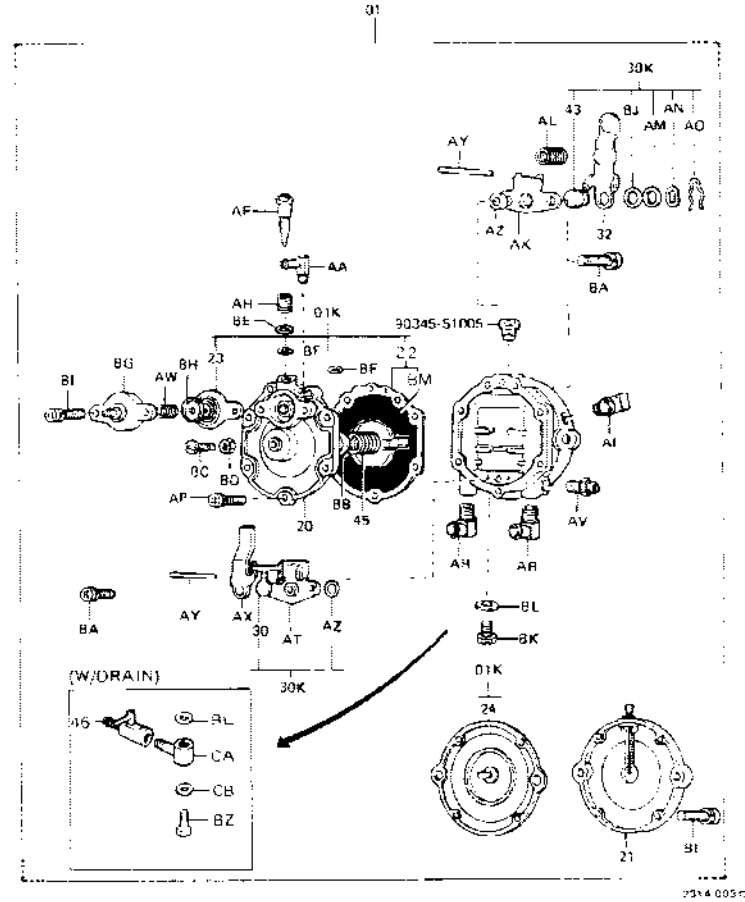 

2314-003C

PART NAME: CODE	PART NAME	QTY
2314-01	REGULATOR ASSY, LPG	1
2314-01K	DIAPHRAGM O/H KIT	1
2314-20	COVER SUB-ASSY, 1ST REGULATOR	1
2314-21	COVER SUB-ASSY, 2ND REGULATOR	1
2314-22	DIAPHRAGM SUB-ASSY, 1ST	1
2314-23	DIAPHRAGM SUB-ASSY, VACUUM LOCK	1
2314-24	DIAPHRAGM SUB-ASSY, 2ND REGULATOR	1
2314-30	VALVE SUB-ASSY, 1ST	1
2314-30K	VALVE O/H KIT	1
2314-32	LEVER SUB-ASSY, 2ND VALVE	1
2314-43	VALVE, ELASTIC FACE	1 - 2
2314-45	SPRING, 1ST REGULATOR	1
2314-46	COCK, DRAIN	1
2314-AA	UNION	1
2314-AF	SCREW, IDLE ADJUST	1
2314-AH	SPRING, IDLE ADJUST SCREW	1
2314-AI	UNION	1
2314-AK	SEAT, 2ND VALVE	1
2314-AL	SPRING, 2ND REGULATOR	1
2314-AM	RETAINER, WIRE SUPPORT	1
2314-AN	WASHER, WAVE	1
2314-AD	RING, SNAP	1
2314-AP	SCREW	7
2314-AR	UNION	2
2314-AT	SEAT, 1ST VALVE	1
2314-AV	UNION	1
2314-AW	SPRING, VACUUM LOCK DIAPHRAGM	1
2314-AX	LEVER, 1ST VALVE	1
2314-AY	PIN	2
2314-AZ	RING, O	2
2314-BA	SCREW	4
2314-BB	GUIDE, SPRING	1
2314-BC	SCREW	1
2314-BD	NUT	1
2314-BE	WASHER	1
2314-BF	RING, O	2
2314-BG	COVER	1
2314-BH	SHELL	1
2314-BI	SCREW	6
2314-BJ	WASHER	1
2314-BK	PLUG	1
2314-BL	GASKET	1
2314-BM	DIAPHRAGM	1
2314-BZ	BOLT, UNION	1
2314-CA	UNION	1
2314-CB	GASKET	1


FIG. 2315
LPG FILTER

2315

2F

86/03

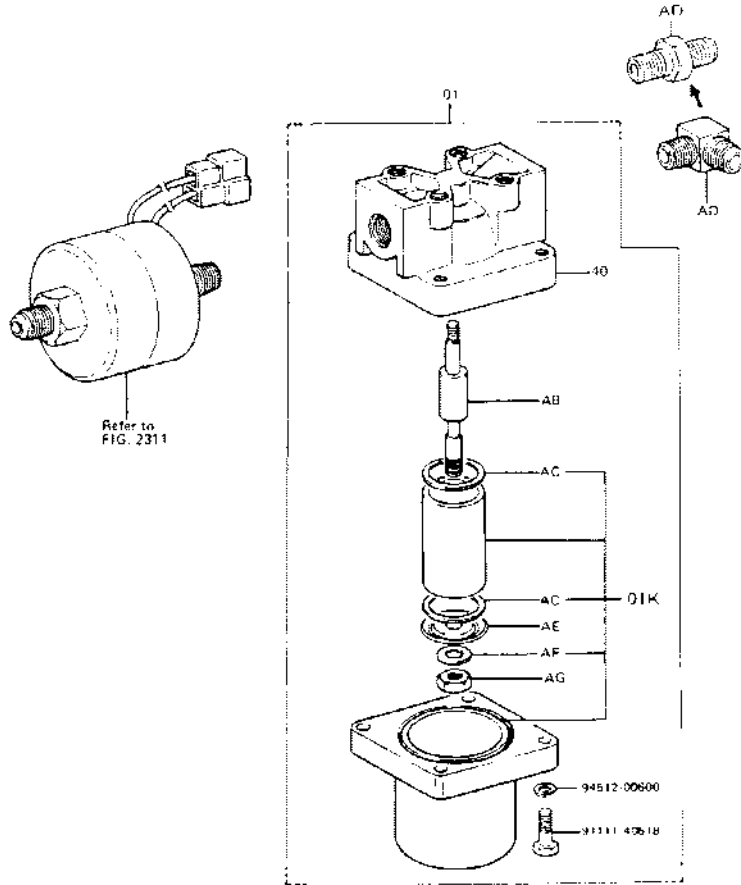 2F



PART NAME		QTY
CODE	PART NAME	
2315-01	FILTER ASSY, LPG	1
2315-01K	ELEMENT KIT	1
2315-40	BODY, FILTER	1
2315-AB	BOLT SUB-ASSY, STUD	1
2315-AC	GASKET	2
2315-AD	UNION	1
2315-AE	PLATE, ELEMENT	1
2315-AF	GASKET	1
2315-AG	NUT, SET	1

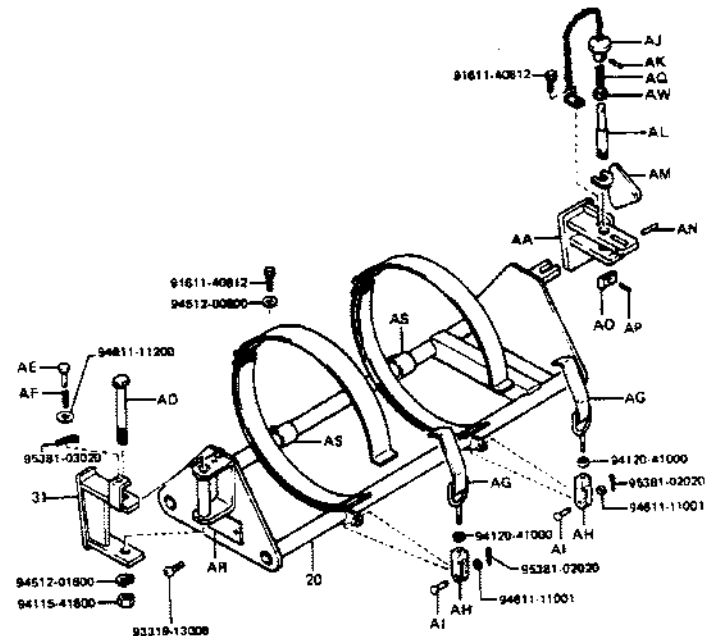 
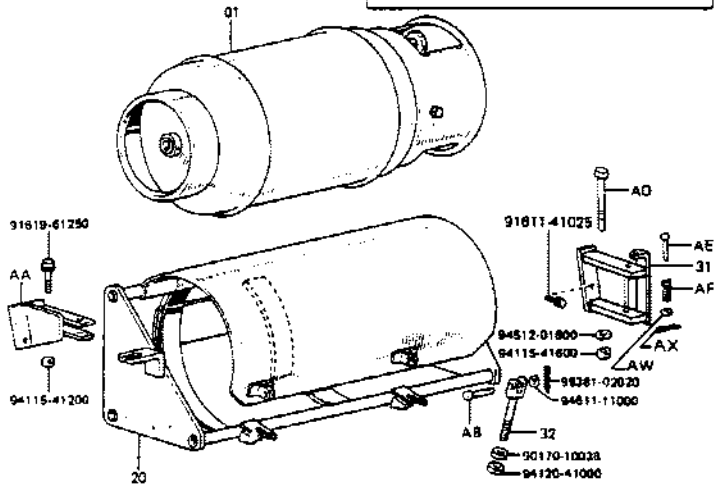 
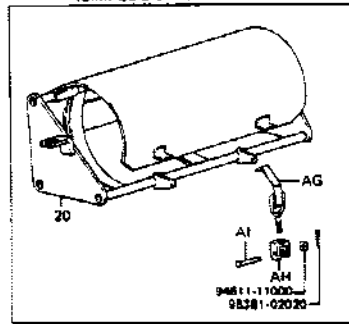 
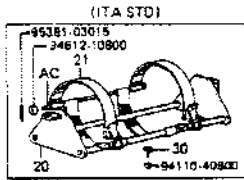 
2315 0010

G300-001E

2F

2F (UL, CANADA)

(SIMPLE DETACHABLE TYPE)




2316-004A

2316-001B

Q300-001

PART NAME	PART NAME	QTY
CODE		
2316-01	CONTAINER ASSY, LPG	1
2316-20	BRACKET SUB-ASSY, LPG CONTAINER	1
2316-21	BAND SUB-ASSY	2
2316-30	HOOK SUB-ASSY	2
2316-31	SUPPORT SUB-ASSY, CONTAINER	1
2316-32	ROD SUB-ASSY, BRACKET SET	2
2316-AA	STOPPER, L.P.G CONTAINER	1
2316-AB	PIN	2
2316-AC	PIN	1
2316-AD	SHAFT	1
2316-AE	PIN	1
2316-AF	SPRING	1
2316-AG	CLAMP SUB-ASSY	2
2316-AH	CLEVIS	2
2316-AI	PIN	2
2316-AJ	KNOB SUB-ASSY	1
2316-AK	PIN, SPRING	1
2316-AL	PIN, STOPPER	1
2316-AM	STOPPER SUB-ASSY	1
2316-AN	PIN, SPRING	1
2316-AD	STOPPER, LOWER	1
2316-AP	PIN, SPRING	1
2316-AQ	SPRING	1
2316-AR	PLATE, CUSHION	1
2316-AS	CLAMP	2
2316-AW	WASHER, PLATE	1
2316-AX	PIN, COTTER	1

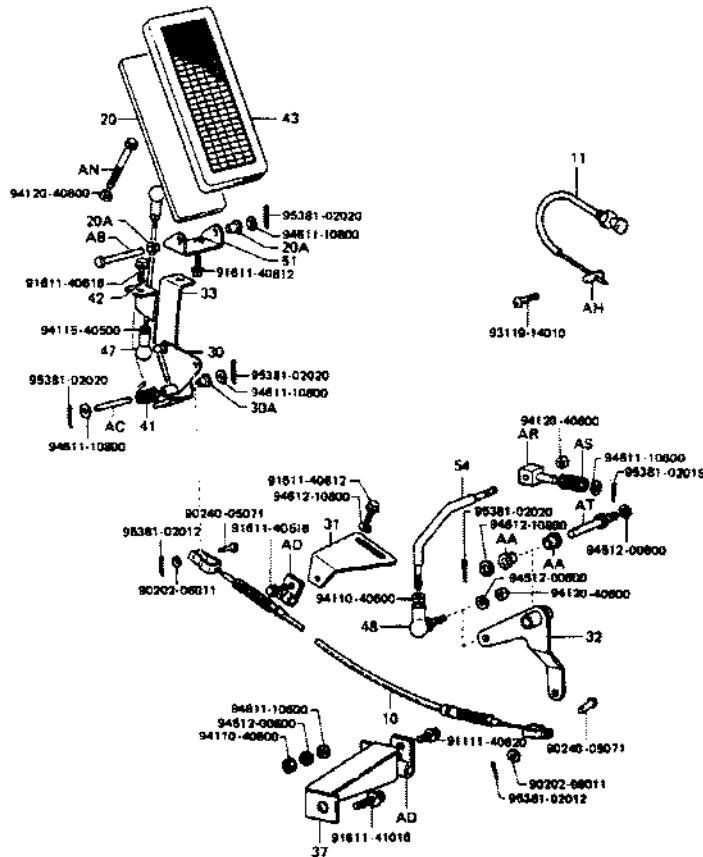 2F






2601-007 A

PART NAME	PART NAME	QTY
CODE		
2601-10	WIRE ASSY, ACCELERATOR FLEXIBLE	1
2601-11	WIRE ASSY, CHOKE	1
2601-20	PEDAL SUB-ASSY, ACCELERATOR	1
2601-20A	BUSH (FOR ACCELERATOR PEDAL)	2
2601-30	ARM SUB-ASSY, ACCELERATOR LINK, NO.1	1
2601-30A	BUSH (FOR ACCELERATOR LINK ARM)	2
2601-31	BRACKET SUB-ASSY, ACCELERATOR WIRE, NO.1	1
2601-32	LEVER SUB-ASSY, ACCELERATOR	1
2601-33	BRACKET SUB-ASSY, ACCELERATOR ARM, NO.1	1
2601-37	BRACKET SUB-ASSY, ACCELERATOR WIRE, NO.2	1
2601-41	SPRING, TORSION, NO.1	1
2601-42	ROD, ACCELERATOR PEDAL	1
2601-43	PAO, PEDAL	1
2601-47	END, CONNECTING ROD, NO.1	2
2601-48	END, CONNECTING ROD, NO.2	1
2601-51	BRACKET, PEDAL	1
2601-54	ROD, CARBURETOR CONNECTING	1
2601-AA	BUSH	2
2601-AB	PIN, W/HOLE	1
2601-AC	PIN	1
2601-AD	CLAMP	2
2601-AH	STOPPER	1
2601-AN	BOLT	1
2601-AR	PIN, ACCELERATOR LINK JOINT	1
2601-AS	SPRING, ACCELERATOR LINK PIN	1
2601-AT	PIN, ACCELERATOR LINK BAR	1

.....MEMO.....

.....

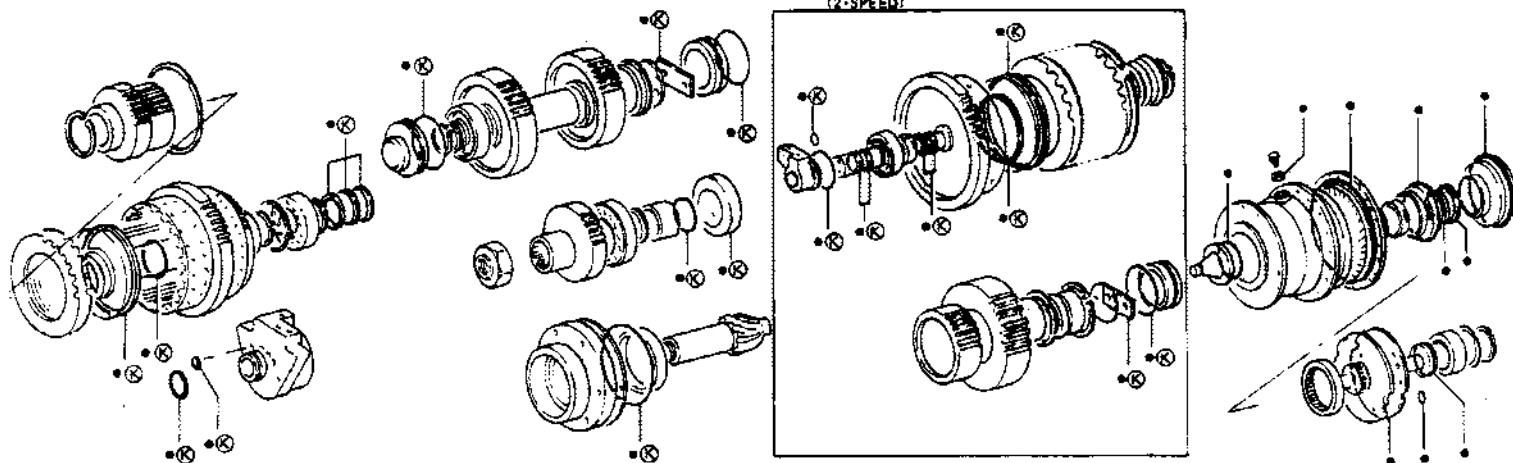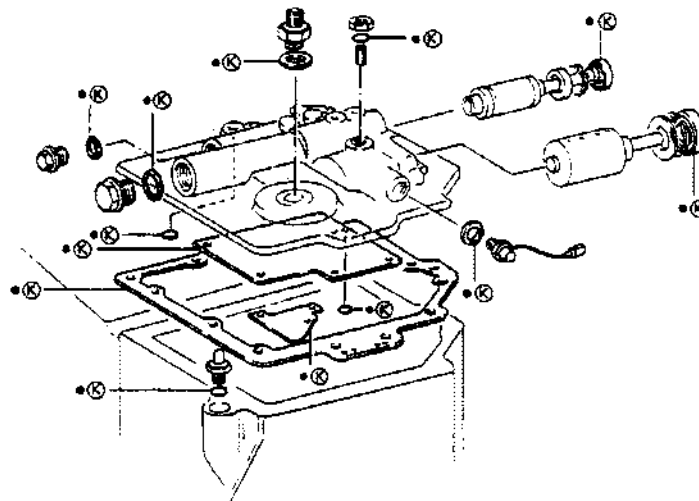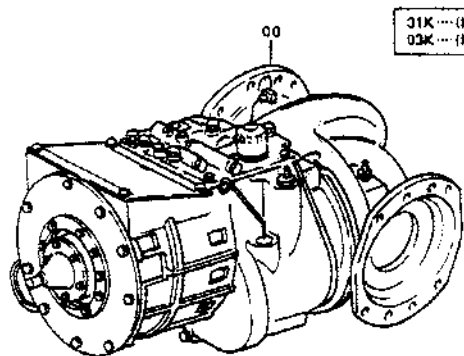   ATM



3201-008

G300-001


FIG. 3201
TORQUECONVERTER HOUSING

3201

ATM

87/08

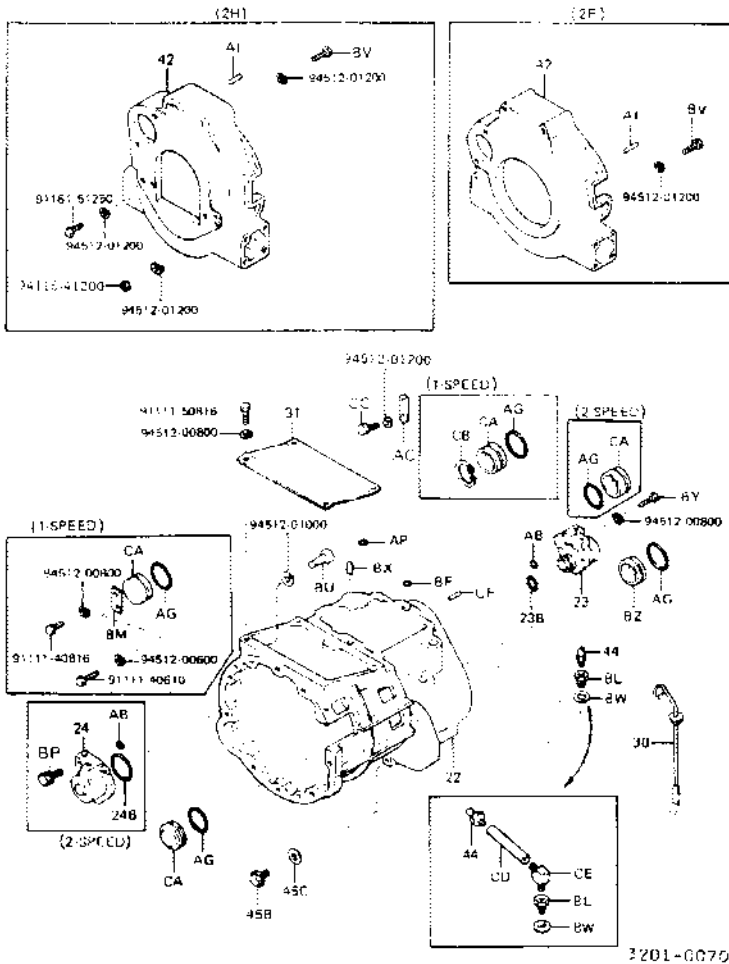 ATM




PART CODE	PART NAME	QTY
3201-00	TRANSMISSION ASSY, AUTOMATIC, W/DIFFERENTIAL	1
3201-01K	TRANSMISSION O/H KIT, AUTOMATIC	1
3201-03K	TRANSMISSION O/H KIT (FOR TORQUECONVERTER)	1
3201-22	CASE SUB-ASSY, TRANSMISSION	1
3201-23	CASE SUB-ASSY, SERVO, NO.1	1
3201-23B	RING, O (FOR SERVO CASE)	1
3201-24	CASE SUB-ASSY, SERVO, NO.2	1
3201-24B	RING, O (FOR SERVO CASE)	1
3201-30	GAGE SUB-ASSY, OIL LEVEL	1
3201-31	COVER SUB-ASSY, UPPER	1
3201-42	PLATE, TORQUECONVERTER END	1
3201-44	BREATHER, AIR	1
3201-45B	PLUG, DRAIN	2
3201-45C	GASKET (FOR DRAIN PLUG)	2
3201-AB	RING, O	3- 51
3201-AC	HANGER	2
3201-AG	RING, O	3- 4
3201-AI	PIN, STRAIGHT	2
3201-AP	RING, O	4
3201-BF	RING, O	2
3201-BL	ADAPTOR, AIR BREATHER	1
3201-BM	PLATE	1
3201-BP	BOLT	1
3201-BU	BOLT	10
3201-BV	BOLT	2- 51
3201-BW	WASHER, SEAL	1
3201-BX	ORIFICE	1
3201-BY	BOLT	1- 2
3201-BZ	PLATE, SEAL	1
3201-CA	PLATE, SEAL	2- 3
3201-CB	RING, HOLE SNAP	1
3201-CC	BOLT	1
3201-CD	ADAPTOR, AIR BREATHER, NO.2	1
3201-CE	ELBOW	1
3201-CF	PIN, LOCK	2

G300-002E

PART NAME	PART NAME	QTY
CODE		
3202-01	TORQUE CONVERTER ASSY	1
3202-01X	TORQUE CONVERTER O/H KIT	1
3202-21	RUNNER SUB-ASSY, TURBINE	1
3202-22	SHAFT SUB-ASSY, STATOR	1
3202-22A	PACKING (FOR STATOR SHAFT)	1
3202-23	IMPELLER SUB-ASSY, PUMP	1
3202-25A	RING, O (FOR PUMP IMPELLER)	1
3202-26	STATOR SUB-ASSY	1
3202-27	PLATE SUB-ASSY, FLEXIBLE	1
3202-27A	SHIM (FOR FLEXIBLE PLATE)	1
3202-28	COVER SUB-ASSY, DRIVE (DISC SUB-ASSY)	1
3202-28A	BEARING (FOR DRIVE COVER)	1
3202-28B	PLUG, DRAIN (FOR DRIVE COVER)	2
3202-28C	GASKET, DRAIN PLUG (FOR DRIVE COVER)	2
3202-30	CASE SUB-ASSY, OIL PUMP	1
3202-30A	RING, O (FOR OIL PUMP CASE)	1
3202-31	EXTENSION SUB-ASSY, PUMP IMPELLER (BOSS)	1
3202-31A	AFARING, PUMP IMPELLER EXTENSION	1
3202-31B	RING, O (FOR PUMP IMPELLER EXTENSION)	1
3202-31C	RING, SEAL (FOR PUMP IMPELLER EXTENSION)	1
3202-41	PIECE, CENTER (BOSS, PILOT)	1
3202-43	SHAFT, TURBINE (SHAFT, INPUT)	1
3202-43A	BEARING, TURBINE SHAFT	1
3202-43B	RING, SEAL (FOR TURBINE SHAFT)	1
3202-43C	RING, SHAFT SNAP (FOR TURBINE SHAFT BEARING)	1
3202-43E	RING, HOLE SNAP (FOR TURBINE SHAFT BEARING)	1
3202-45	HUB (FACE, INNER)	1
3202-45A	BEARING, THRUST (FOR HUB)	1
3202-45B	WASHER, THRUST, NO.1 (FOR HUB)	1
3202-45C	WASHER, THRUST, NO.2 (FOR HUB)	1
3202-45D	WASHER, THRUST, NO.3 (FOR HUB)	1
3202-52	ROLLER (FOR STATOR)	10
3202-53	SPRING (FOR STATOR)	10
3202-54	CAP, SPRING (FOR STATOR)	10
3202-AA	RING, O	1
3202-AB	RING, SHAFT SNAP	1
3202-AC	BOLT	24
3202-AI	RING, HOLE SNAP	1
3202-AL	BOLT	10
3202-AR	BOLT	9
3202-AU	WASHER, PLATE	24
3202-AX	SEAL, OIL	1
3202-AY	SPACER	1
3202-AZ	BOLT	8
3202-BE	SPACER	1
3202-BJ	WASHER, PLATE	10
3202-BN	PLATE	1

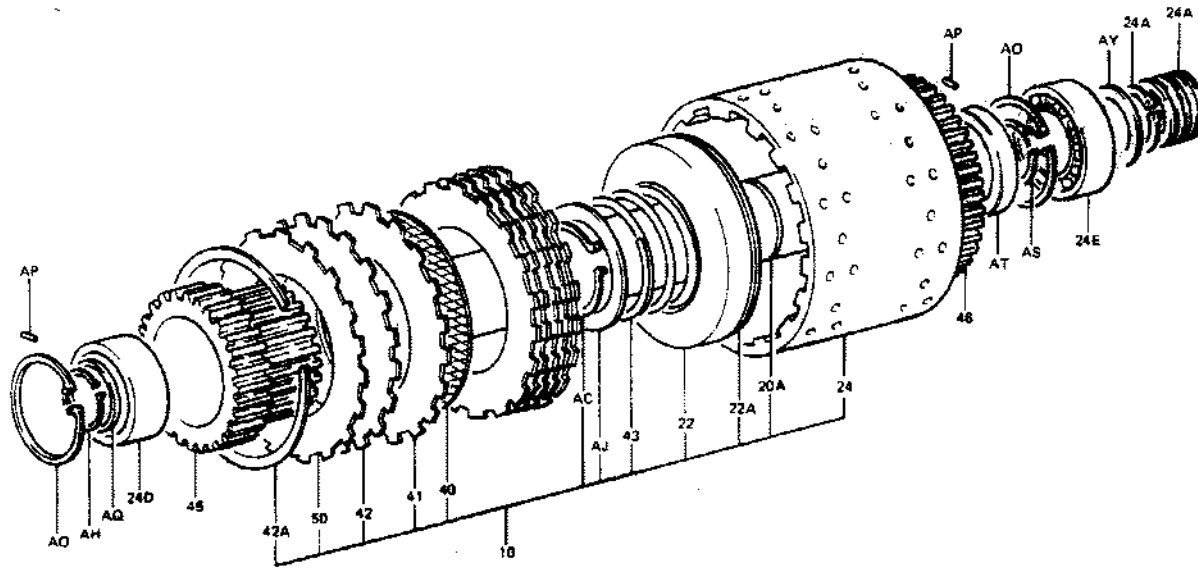 ATM (1-SPEED)



3203-085

Q300-001


FIG. 3203
TORQUE CONVERTER CLUTCH

3203

ATM

86/08

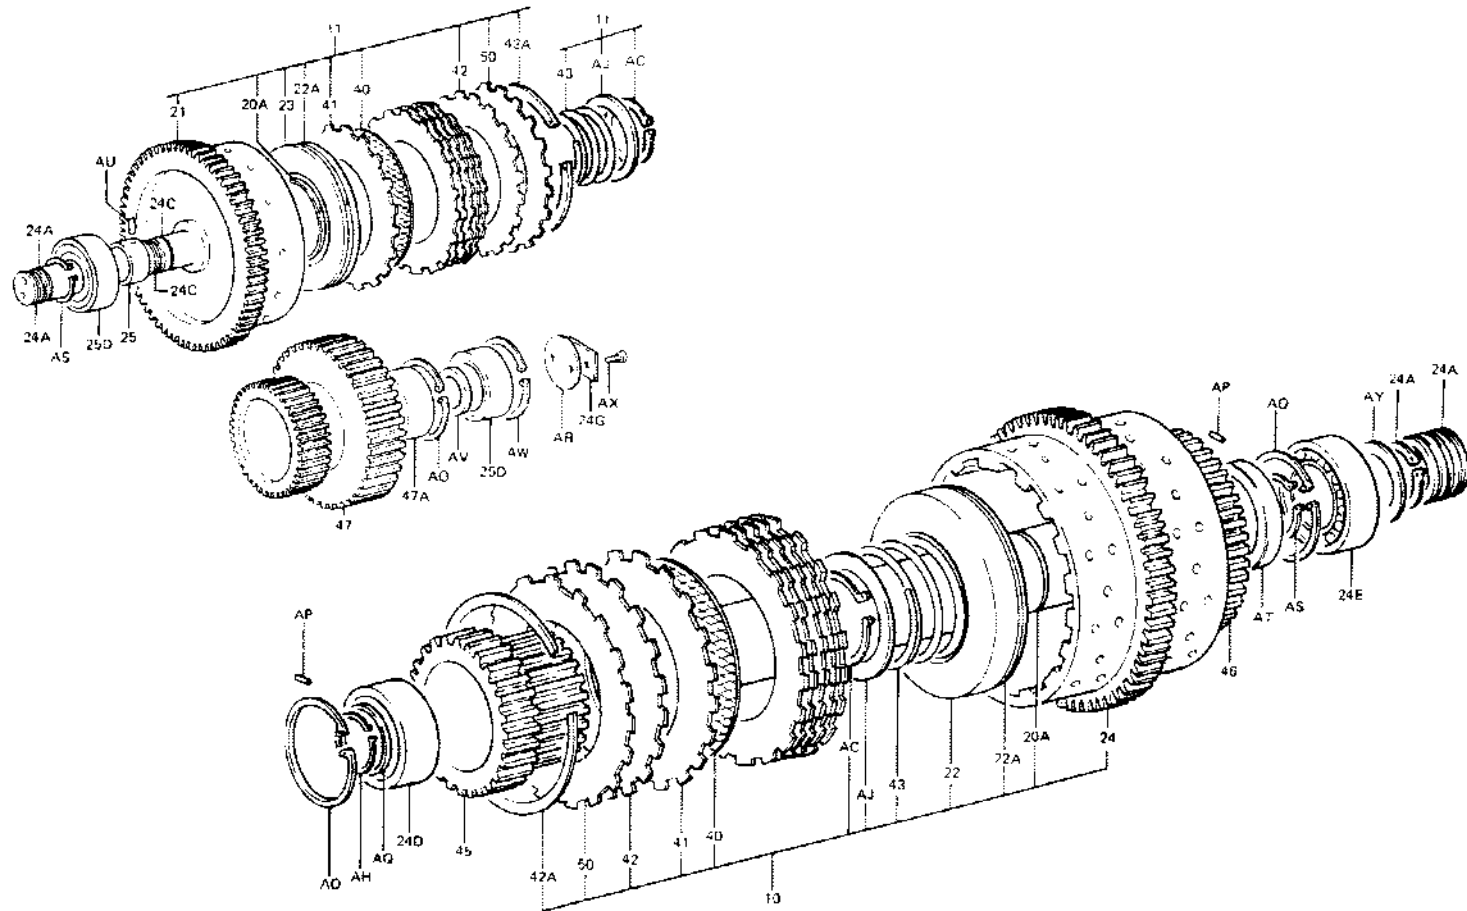 ATM 12-SPEED




3203-0038

G300-002

PART NAME CODE	PART NAME	QTY
3203-10	DRUM ASSY, CLUTCH, NO.1	1
3203-11	DRUM ASSY, CLUTCH, NO.2	1
3203-20A	RING, SEAL (FOR CLUTCH DRUM)	2- 3
3203-21	DRUM SUB-ASSY, CLUTCH, NO.2	1
3203-22	PISTON SUB-ASSY, CLUTCH, NO.1	2
3203-22A	RING, PISTON (FOR CLUTCH PISTON)	2- 3
3203-23	PISTON SUB-ASSY, CLUTCH, NO.2	1
3203-24	SHAFT SUB-ASSY, CLUTCH, NO.1	1
3203-24A	RING, SEAL (FOR CLUTCH SHAFT)	3- 5
3203-24G	RING, O (FOR CLUTCH SHAFT)	2
3203-24D	BEARING, NO.1 (FOR NO.1 CLUTCH SHAFT)	2
3203-24E	BEARING, NO.2 (FOR NO.1 CLUTCH SHAFT)	1
3203-24G	WASHER, LOCK (FOR CLUTCH SHAFT)	2
3203-25	SHAFT SUB-ASSY, CLUTCH, NO.2	1
3203-25D	BEARING, NO.1 (FOR NO.2 CLUTCH SHAFT)	2
3203-40	DISC, CLUTCH	12-18
3203-41	PLATE, CLUTCH	12-18
3203-42	PLATE, CLUTCH PRESSURE	2- 3
3203-42A	RING, HOLE SNAP (FOR CLUTCH PRESSURE PLATE)	2- 3
3203-43	SPRING, CLUTCH RETURN	2- 3
3203-45	GEAR, CLUTCH (FORWARD)	1
3203-46	GEAR, CLUTCH (REVERSE)	1
3203-47	GEAR, CLUTCH (FORWARD 2ND)	1
3203-47A	BEARING (FOR FORWARD 2ND CLUTCH GEAR)	1
3203-50	PLATE, CLUTCH CAMBER	2- 3
3203-AC	RING, SHAFT SNAP	2- 3
3203-AH	RING, SHAFT SNAP	1
3203-AJ	RETAINER, SPRING	2- 3
3203-AD	RING, HOLE SNAP	2- 4
3203-AP	PIN, SPRING	2
3203-AQ	SPACER	1
3203-AR	PLATE, LOCK	1
3203-AS	RING, SNAP	2- 3
3203-AT	SPACER	1
3203-AU	PIN, SPRING	1
3203-AV	SPACER	1
3203-AW	RING, HOLE SNAP	1
3203-AX	BOLT	2
3203-AY	SPACER	1

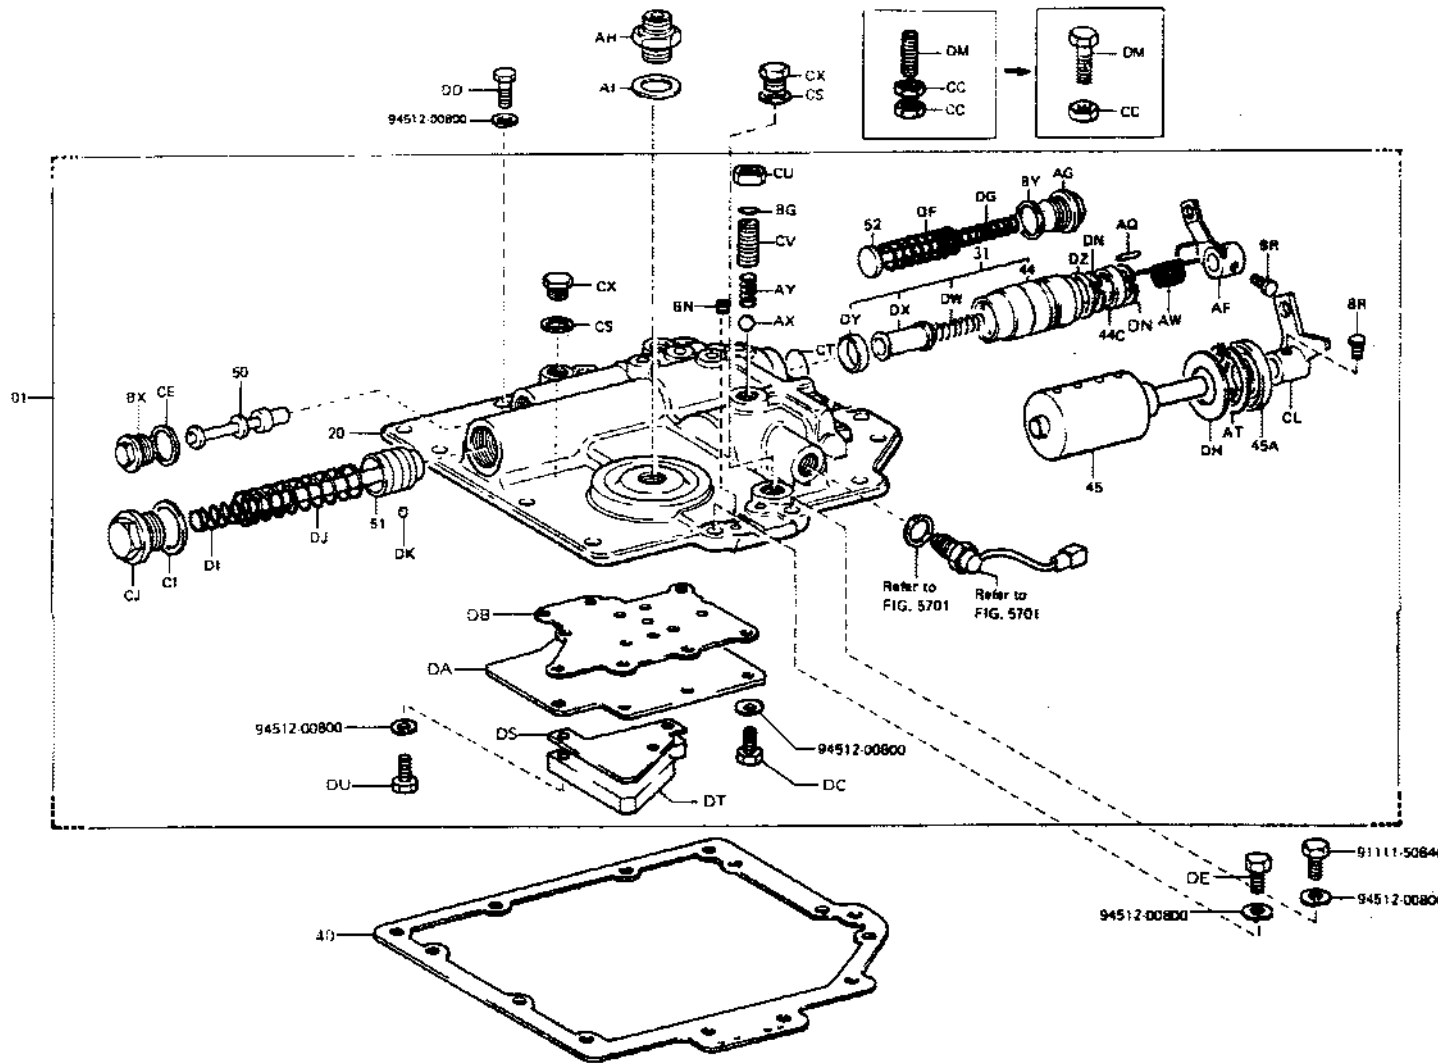 ATM



PART NAME CODE	PART NAME	QTY
3206-01	COVER & VALVE ASSY, TRANSMISSION	1
3206-20	COVER SUB-ASSY, UPPER	1
3206-31	VALVE SUB-ASSY, INCHING	1
3206-40	PACKING, TRANSMISSION COVER	1
3206-44	VALVE, INCHING	1
3206-44C	SEAL, OIL (FOR INCHING VALVE)	1
3206-45	VALVE, SELECTOR	1
3206-45A	SEAL, OIL (FOR SELECTOR VALVE)	1
3206-50	VALVE, REGULATOR	1
3206-51	PISTON, ACCUMULATOR	1
3206-52	RETAINER, SPRING (FOR REGULATOR VALVE)	1
3206-AF	LEVER, INCHING	1
3206-AG	PLUG	1
3206-AH	NIPPLE	1
3206-AI	GASKET	1
3206-AQ	FIN, SPRING	1
3206-AT	RING, SNAP	1
3206-AW	SPRING, INCHING VALVE	1
3206-AX	BALL, STEEL	1
3206-AY	SPRING	1
3206-BG	RING, O	1
3206-BN	PLUG, TAPER	3-9
3206-BR	BOLT, LOCK	2
3206-BX	PLUG	1
3206-BY	PACKING	1
3206-CC	NUT	3-6
3206-CF	PACKING	1
3206-CI	PACKING	1
3206-CJ	PLUG	1
3206-CL	LEVER, SELECTOR	1
3206-C5	PACKING	2
3206-CT	RING, O	1
3206-CU	NUT	1
3206-CV	BOLT, ADJUST	1
3206-CX	PLUG	2
3206-DA	PLATE, SUB	1
3206-DB	PACKING, SUB PLATE	1
3206-DC	BOLT	10
3206-DD	BOLT	9
3206-DE	BOLT	5
3206-DF	SPRING, REGULATOR, OUTER	1
3206-DG	SPRING, REGULATOR, INNER	1
3206-DH	WASHER, THRUST	1
3206-DI	SPRING, ACCUMULATOR, INNER	1
3206-DJ	SPRING, ACCUMULATOR, OUTER	1
3206-DK	ORIFICE	1
3206-DM	BOLT, STOP	1-3
3206-DN	RING, SNAP	1-2
3206-DS	PACKING	1
3206-DT	COVER	1
3206-DU	BOLT	3
3206-DW	SPRING, INCHING	1
3206-DX	PISTON, INCHING	1
3206-DY	PLUG	1
3206-DZ	WASHER, THRUST	1


FIG. 3213
TORQUE CONVERTER PIPING

3213

ATM

86/03

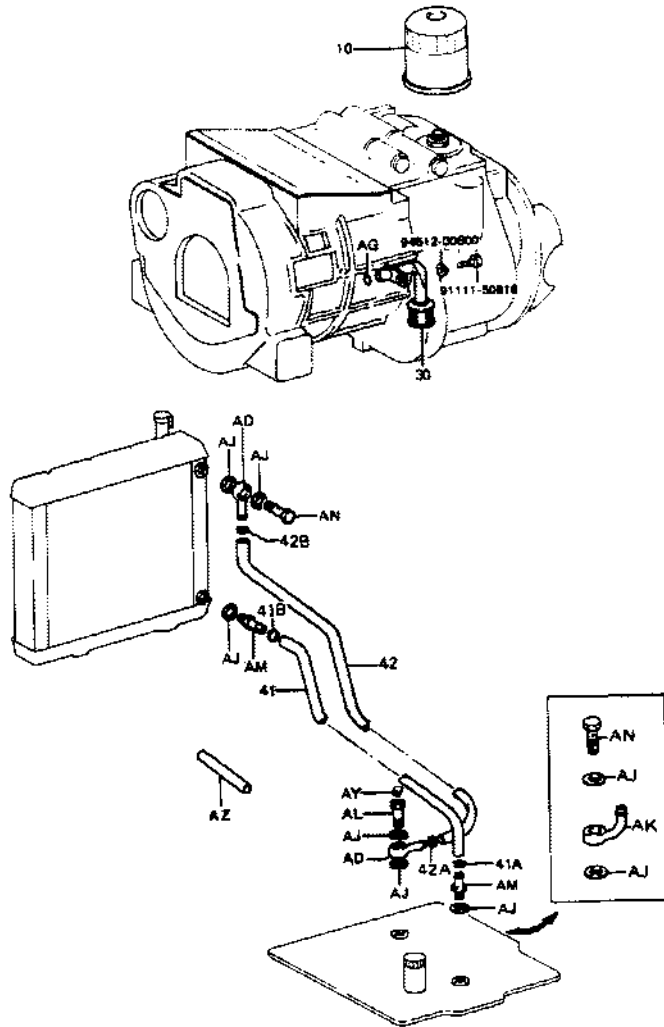 ATM





3213-004C

PART NAME CODE	PART NAME	QTY
3213-10	FILTER ASSY, OIL	1
3213-30	STRAINER SUB-ASSY, OIL (SCREEN)	1
3213-41	HOSE, LOW PRESSURE, NO.1 (FOR OIL COOLER)	1
3213-41A	CLAMP, NO.1 (FOR OIL COOLER HOSE)	1
3213-41B	CLAMP, NO.2 (FOR OIL COOLER HOSE)	1
3213-42	HOSE, LOW PRESSURE, NO.2 (FOR OIL COOLER)	1
3213-42A	CLAMP	1
3213-42B	CLAMP, HOSE	1
3213-AD	UNION	2
3213-AG	RING, O	1
3213-AJ	PACKING	1- 6
3213-AK	UNION	1
3213-AL	BOLT, UNION	1
3213-AM	NIPPLE	1
3213-AN	BOLT, UNION	1- 2
3213-AY	PLUG	1
3213-AZ	PROTECTOR, HOSE	1

G300-001E

ATM (LH LEVER)

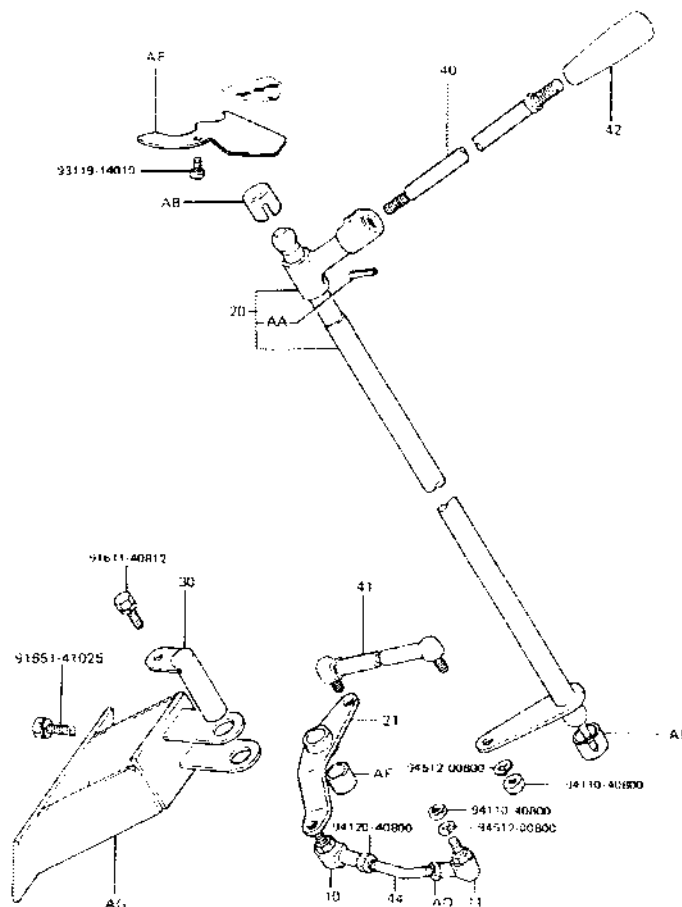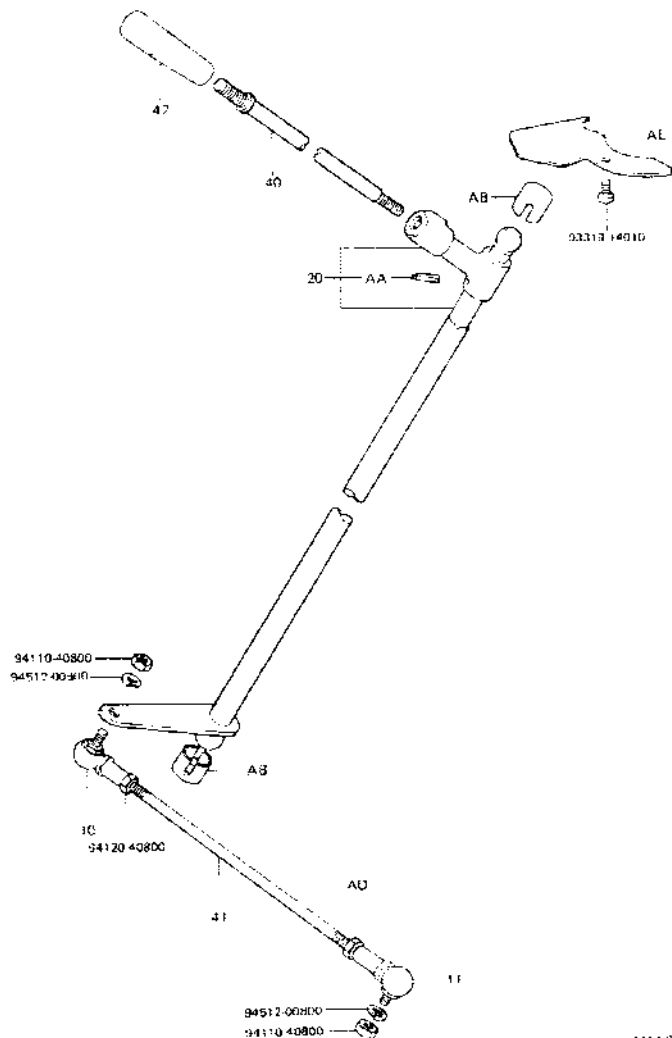  ATM (RH LEVER)




3214-005A

3214-302

PART NAME CODE	PART NAME	QTY
3214-10	END ASSY, CONNECTING ROD, NO.1	1
3214-11	END ASSY, CONNECTING ROD, NO.2	1
3214-20	SHAFT SUB-ASSY, CONTROL	1
3214-21	LINK SUB-ASSY, CONTROL SHAFT	1
3214-30	PIN SUB-ASSY, LINK	1
3214-40	LEVER, CONTROL	1
3214-41	ROD, FORWARD & REVERSE CHANGE, NO.1	1
3214-42	KNOB, SHIFT LEVER	1
3214-44	ROD, FORWARD & REVERSE CHANGE, NO.2	1
3214-AA	PIN, SPRING	1
3214-AB	BUSHING, SOLID	2
3214-AO	NUT	1
3214-AE	PLATE, CHANGE LEVER CENTER	1
3214-AF	BUSHING, SOLID	1
3214-AQ	BRACKET, CHANGE LEVER	1

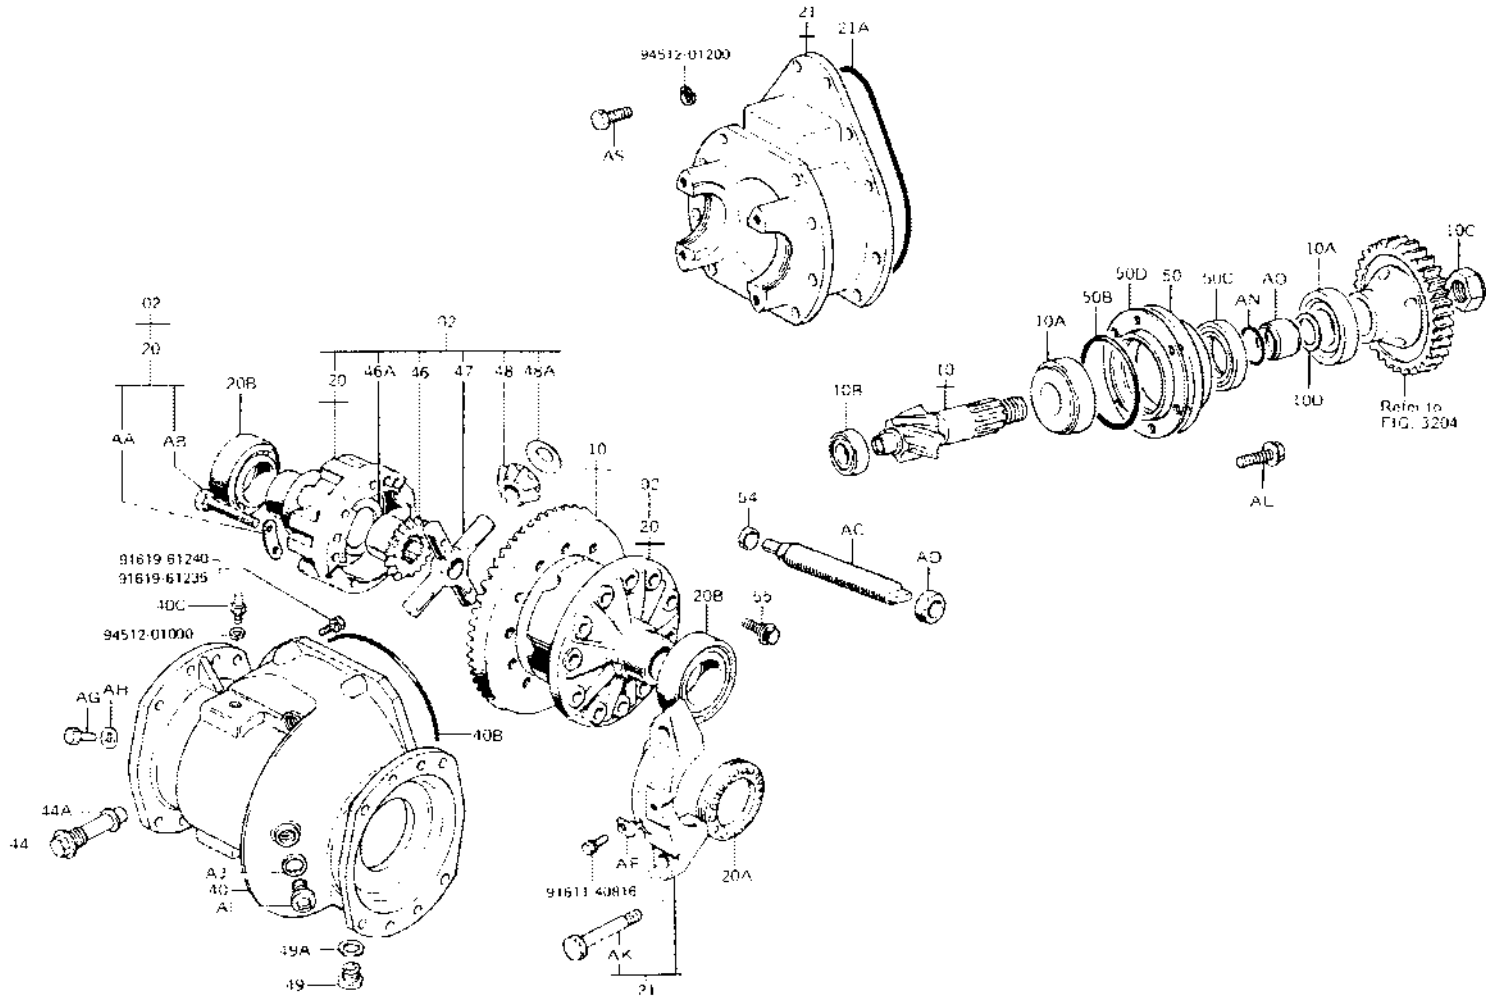 ATM



PART NAME: CODE	PART NAME	QTY
4101-02	CASE ASSY, DIFFERENTIAL	1
4101-10	RING GEAR & PINION SET, DIFFERENTIAL	1
4101-10A	BEARING, DRIVE PINION	2
4101-10B	BEARING, DRIVE PINION PILOT	1
4101-10C	NUT, LOCK	1
4101-10D	SHIM, BEARING PRELOAD ADJUST	99
4101-20	CASE SUB-ASSY, DIFFERENTIAL	1
4101-20A	NUT, ADJUSTING	2
4101-20B	BEARING, DIFFERENTIAL CASE	2
4101-1	CARRIER, SUB-ASSY, DIFFERENTIAL	1
4101-21A	RING, O (FOR DIFFERENTIAL CARRIER)	1
4101-40	HOUSING, DIFFERENTIAL	1
4101-40B	RING, O (FOR DIFFERENTIAL HOUSING)	1
4101-40C	PLUG, BREATHER (FOR DIFFERENTIAL HOUSING)	1
4101-44	PLUG (FOR INPUT SHAFT)	1
4101-44A	PACKING (FOR INPUT SHAFT PLUG)	1
4101-48	GEAR, SIDE	2
4101-48A	WASHER, SIDE GEAR THRUST	2
4101-47	SPIDER	1
4101-48	PINION	4
4101-48A	WASHER, PINION THRUST	4
4101-49	PLUG, DRAIN	1
4101-49A	GASKET, DRAIN PLUG	1
4101-50	RETAINER, DRIVE PINION BEARING	1
4101-50B	RING, O (FOR BEARING RETAINER)	1
4101-50C	SEAL, OIL (FOR BEARING RETAINER)	1
4101-50D	SHIM, DIFFERENTIAL DRIVE PINION BEARING	99
4101-54	CAP, RING GEAR THRUST SCREW	1
4101-55	BOLT, RING GEAR SET	12
4101-AB	BOLT	16
4101-AC	SCREW, RING GEAR THRUST	1
4101-AD	NUT	1
4101-AF	LOCK, ADJUSTING	2
4101-AG	PLUG, W/HEAD STRAIGHT SCREW	1
4101-AH	GASKET	1
4101-AI	PLUG	1
4101-AJ	GASKET	1
4101-AX	BOLT	4
4101-AL	BOLT	6
4101-AN	RING, O	1
4101-AO	SPACER, BEARING	1
4101-AS	BOLT	12


FIG. 4201
FRONT AXLE SHAFT

4201

ATM

85/04

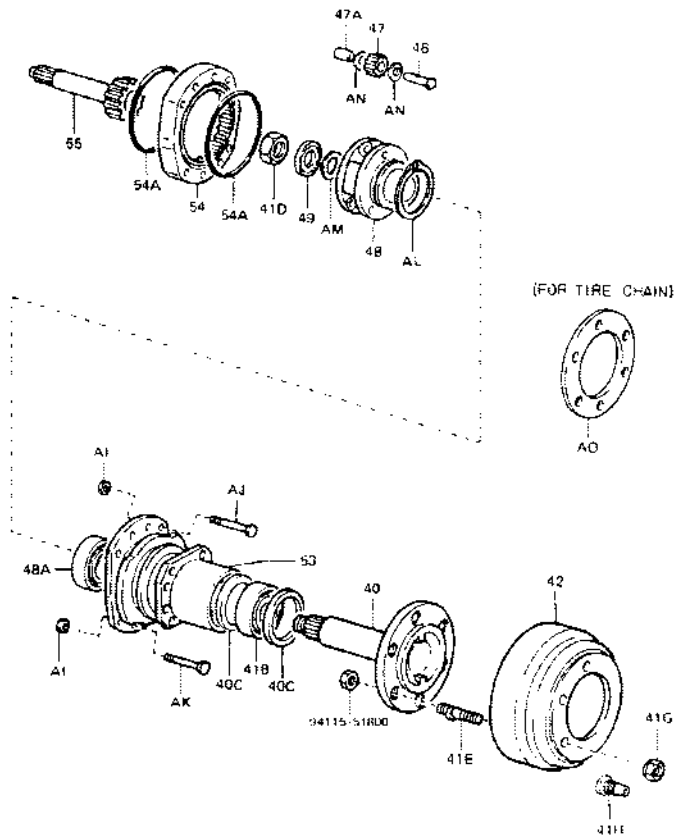 ATM



4201-006A

PART NAME	PART NAME	QTY
4201-40	SHAFT, FRONT AXLE	2
4201-40C	SEAL, DIL (FOR FRONT AXLE SHAFT)	2
4201-41B	BEARING, NO.1 (FOR FRONT AXLE HUB)	2
4201-41D	NUT, BEARING LOCK	2
4201-41E	BOLT, HUB	12-16
4201-41G	NUT, HUB	12-16
4201-41H	BOLT, DOUBLE WHEEL STOP	12-16
4201-42	DRUM, BRAKE	2
4201-46	SHAFT, PLANET GEAR	6
4201-47	GEAR, PLANET	6
4201-47A	BUSH (FOR PLANET GEAR)	6
4201-48	CARRIER, PLANET GEAR	2
4201-48A	BEARING (FOR PLANET GEAR CARRIER)	2
4201-49	PLATE, LOCK NUT	2
4201-53	HOUSING, FRONT AXLE	1
4201-54	GEAR, INTERNAL	2
4201-54A	RING, O (FOR INTERNAL GEAR)	4
4201-55	SHAFT, FRONT AXLE INNER	2
4201-A1	NUT, SELF LOCK	16
4201-AJ	BOLT	4
4201-AK	BOLT	12
4201-AL	RING, SHAFT SNAP	7
4201-AM	SHIM	99
4201-AN	WASHER, THRUST	12
4201-AD	SPACER	2


FIG. 4301
REAR AXLE & TIE-ROD

4301

ATM

87/08

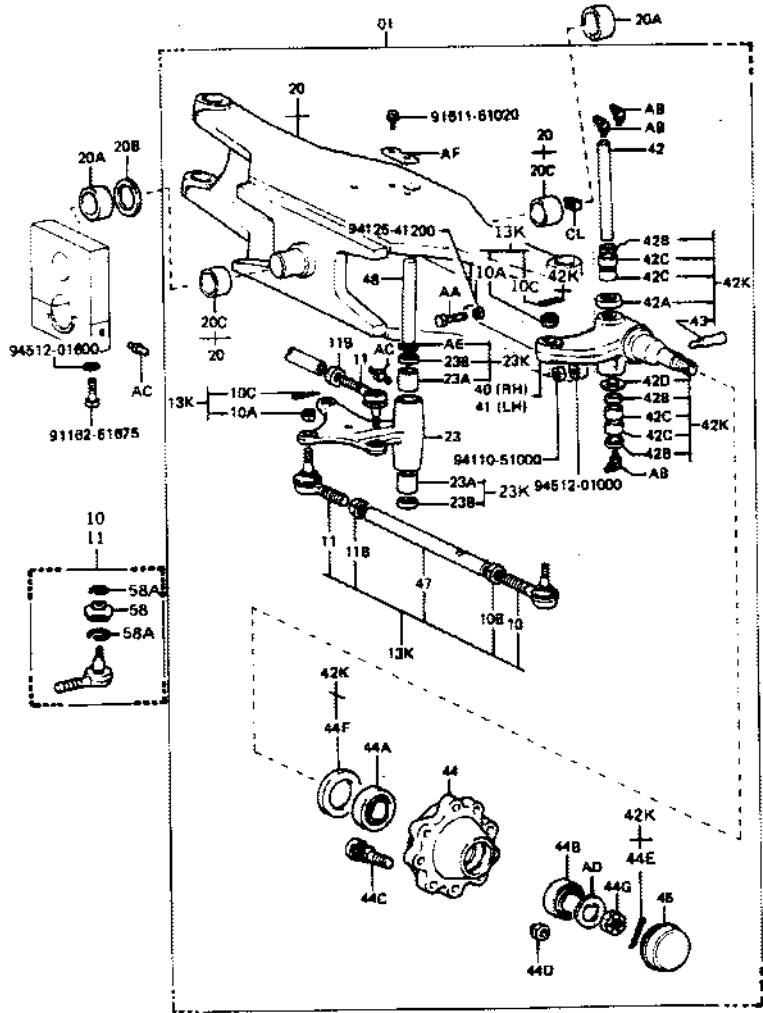 ATM



4301-0190

PART NAME	PART NAME	QTY
CODE		
4301-01	AXLE ASSY, RR	1
4301-10	END ASSY, TIE-ROD, NO.1	2
4301-10A	NUT, CASTLE (FOR TIE-ROD END)	4
4301-10B	NUT (RH THREADS)	2
4301-10C	PIN, COTTER (FOR TIE-ROD END)	4
4301-11	END ASSY, TIE-ROD, NO.2	2
4301-11B	NUT (LH THREADS)	2
4301-13K	TIE-ROD KIT	2
4301-20	BEAM SUB-ASSY, REAR AXLE	1
4301-20A	BUSH, REAR AXLE BEAM	2
4301-20B	SHIM, REAR AXLE BEAM	1
4301-20C	BUSH, REAR AXLE BEAM	2
4301-23	BELLCRANK SUB-ASSY, STEERING	1
4301-23A	BEARING (FOR STEERING BELLCRANK)	2
4301-23B	SEAL, OIL (FOR STEERING BELLCRANK)	2
4301-23K	SEAL KIT, BELLCRANK PIN	1
4301-40	KNUCKLE, STEERING, RH	1
4301-41	KNUCKLE, STEERING, LH	1
4301-42	PIN, STEERING KNUCKLE KING	2
4301-42A	BEARING, STEERING KNUCKLE THRUST	2
4301-42B	SEAL, OIL, NO.1	4
4301-42C	BEARING, NEEDLE	4
4301-42D	SHIM, STEERING KNUCKLE	2
4301-42K	SEAL KIT, KING PIN	2
4301-43	PIN, KING PIN LOCK	2
4301-44	HUB, REAR AXLE	2
4301-44A	BEARING, INNER	2
4301-44B	BEARING, OUTER	2
4301-44C	BOLT, HUB	16
4301-44D	NUT, HUB	16
4301-44E	PIN, REAR AXLE COTTER	2
4301-44F	SEAL, OIL (FOR REAR AXLE HUB)	2
4301-44G	NUT, CASTLE (FOR REAR AXLE HUB)	2
4301-45	CAP, REAR AXLE HUB	2
4301-47	TIE-ROD	2
4301-48	PIN, BELLCRANK	1
4301-5B	BOOT, TIE-ROD END	4
4301-5BA	RING (FOR TIE-ROD END BOOT)	4
4301-AA	BOLT	2
4301-AB	FITTING, GREASE	6
4301-AC	FITTING, GREASE	1
4301-AD	WASHER, CLAW	2
4301-AE	SHIM	1
4301-AF	PLATE, STOPPER	1
4301-CL	FITTING, GREASE	1

G300-001E


FIG-4401
FRONT WHEEL & TIRE(SINGLE)

4401



ATM

87/08

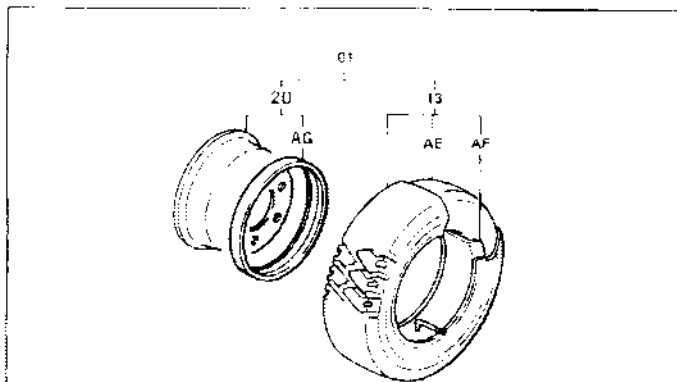 ATM (SINGLE)



(UNIQUE, TRUKUSHI)

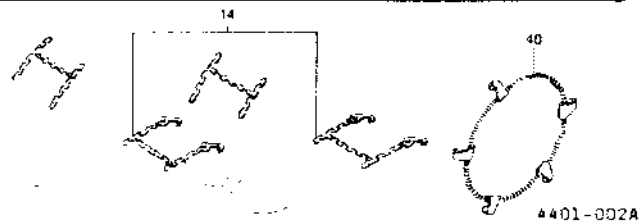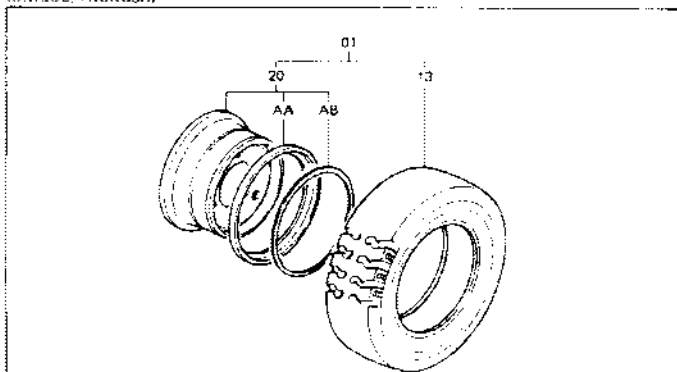  

PART NAME

CODE

PART NAME

QTY

4401-01	WHEEL ASSY	2
4401-13	TIRE ASSY	2
4401-14	CHAIN ASSY, TIRE	1
4401-20	WHEEL SUB-ASSY, DISC	2
4401-40	BAND, CHAIN	1
4401-AA	FLANGE, SIDE	2
4401-AB	RING, LOCK	2
4401-AE	TUBE SUB-ASSY	2
4401-AF	FLAP	2
4401-AG	RING, SIDE	2

G300-001E

FIG. 4402
FRONT WHEEL & TIRE (DOUBLE)

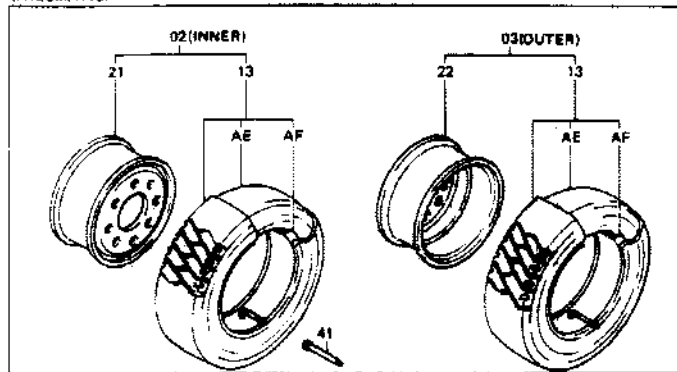 
4402

ATM



87/08

ATM (DOUBLE)

(PNEUMATIC)



(UNIQUE, TRUKUSH)

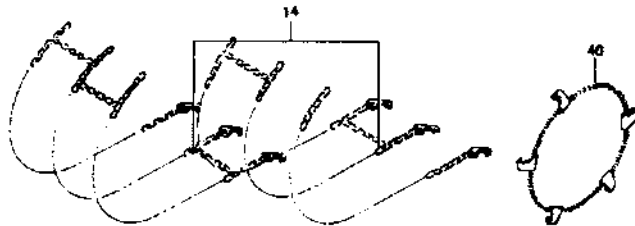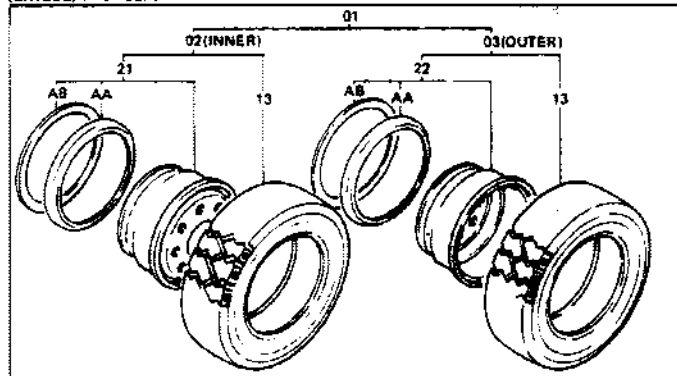  

4402-002 A

PART NAME:		QTY
CODE	PART NAME	
4402-01	WHEEL ASSY	2
4402-02	WHEEL ASSY, INNER	2
4402-03	WHEEL ASSY, OUTER	2
4402-13	TIRE ASSY	4
4402-14	CHAIN ASSY, TIRE	1
4402-21	WHEEL SUB-ASSY, DISC, INNER	2
4402-22	WHEEL SUB-ASSY, DISC, OUTER	2
4402-40	BAND, CHAIN	1
4402-41	EXTENSION, WHEEL TUBE VALVE	2
4402-AA	FLANGE, SIDE	4
4402-AB	RING, LOCK	4
4402-AE	TUBE SUB-ASSY	4
4402-AF	FLAP	4

G300-001E

FIG. 4403
REAR WHEEL & TIRE

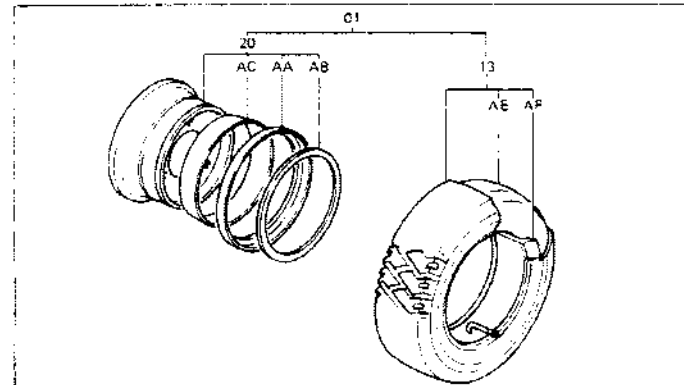 
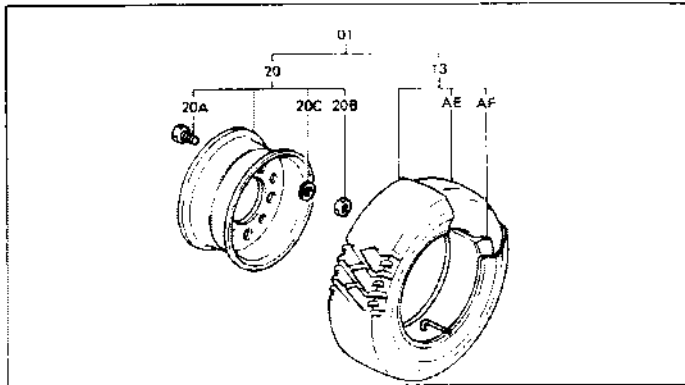 
4403

ATM

87/08



ATM (DIVIDED RIM)

ATM (SIDE RING RIM)



(UNIQUE, TRUKUSH)

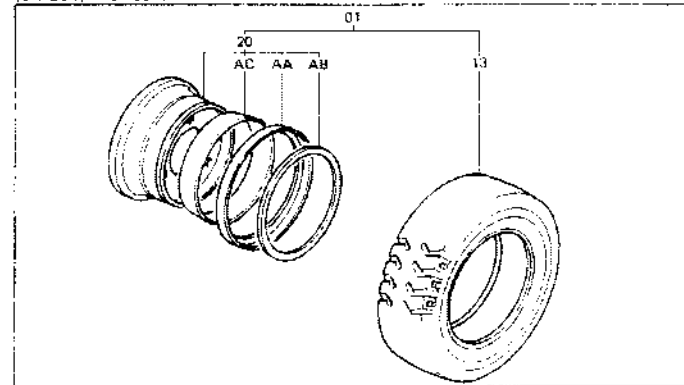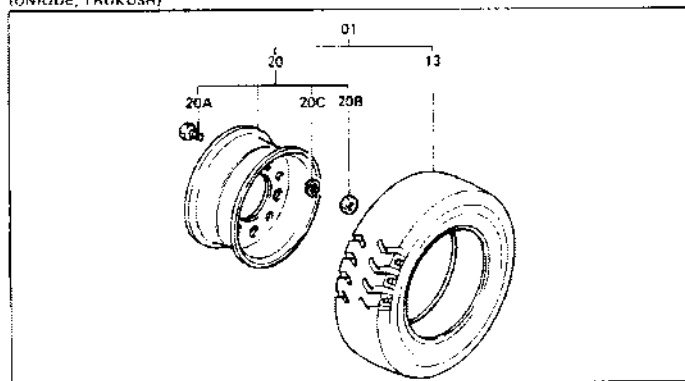  (UNIQUE, TRUKUSH)



4403-004

4403-003

G300-001

PART NAME CODE	PART NAME	QTY
4403-01	WHEEL ASSY	2
4403-13	TIRE ASSY	2
4403-20	WHEEL SUB-ASSY, DISC	2
4403-20A	BOLT, DISC WHEEL SET	16
4403-20B	NUT, WHEEL SET	16
4403-20C	WASHER, WHEEL SET	16
4403-AA	PLANGE, SIDE	2
4403-AB	RING, LOCK	2
4403-AC	BAND, BEND SHEET	2
4403-AE	TUBE SUB-ASSY	2
4403-AF	FLAP	2


FIG. 4501
STEERING WHEEL

4501

ATM

85/04

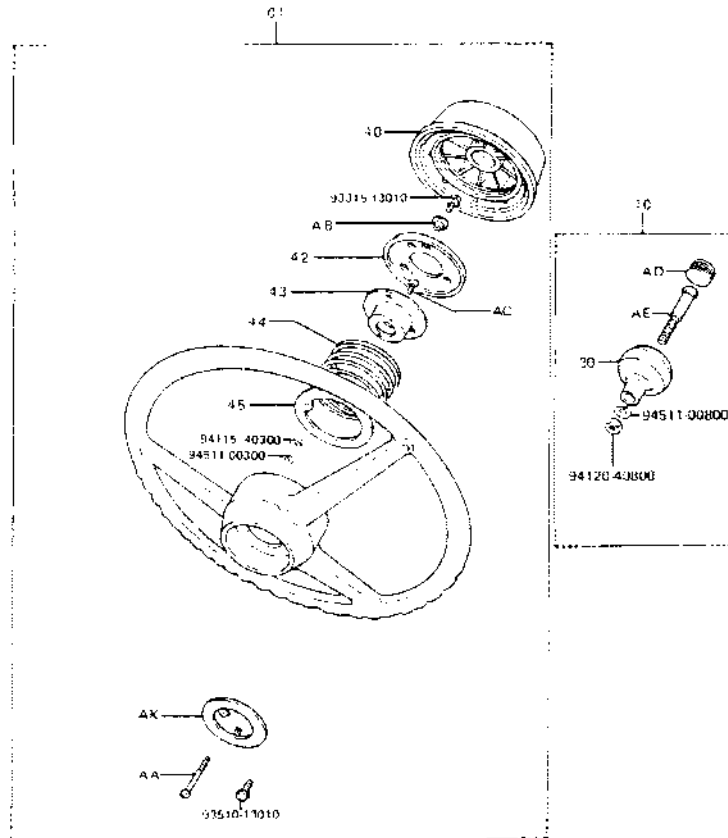 ATM






4501 021A

PART NAME CODE	PART NAME	QTY
4501-01	WHEEL ASSY, STEERING	1
4501-10	KNOB ASSY, STEERING WHEEL	1
4501-30	KNOB SUB-ASSY, STEERING WHEEL	1
4501-40	BUTTON, HORN	1
4501-42	PLATE, HORN CONTACT	1
4501-43	SEAT, HORN CONTACT	1
4501-44	SPRING, HORN	1
4501-45	PLATE, LEAD	1
4501-AA	SCREW	1
4501-AB	WASHER	3
4501-AC	SCREW	2
4501-AD	CAP, STEERING WHEEL	1
4501-AE	BOLT, STEERING WHEEL KNOB SET	1
4501-AK	RING, HORN CONTACT NO.1	1

ATM (1/2)

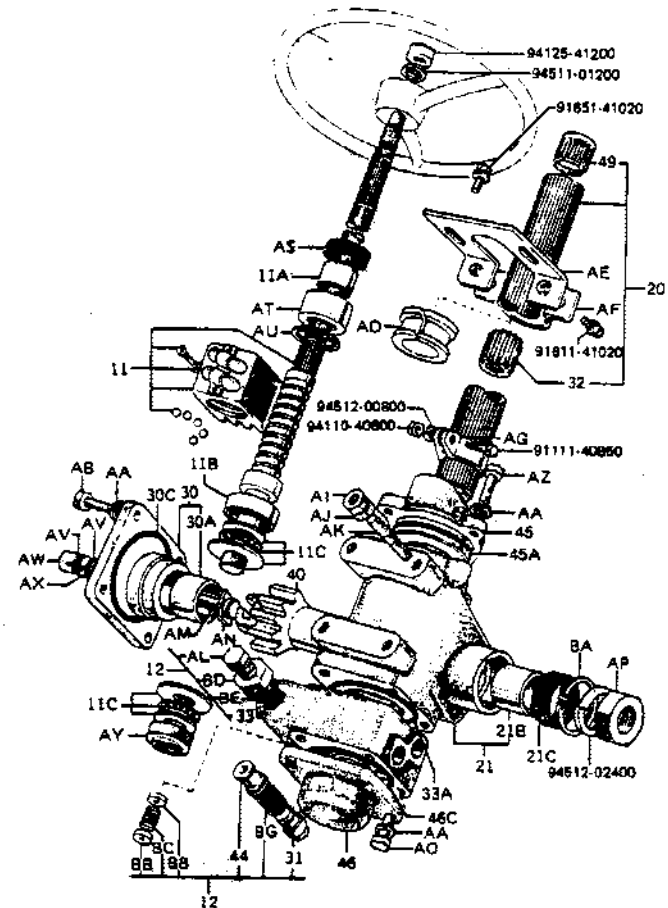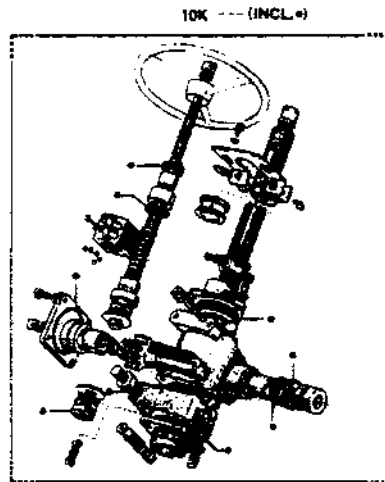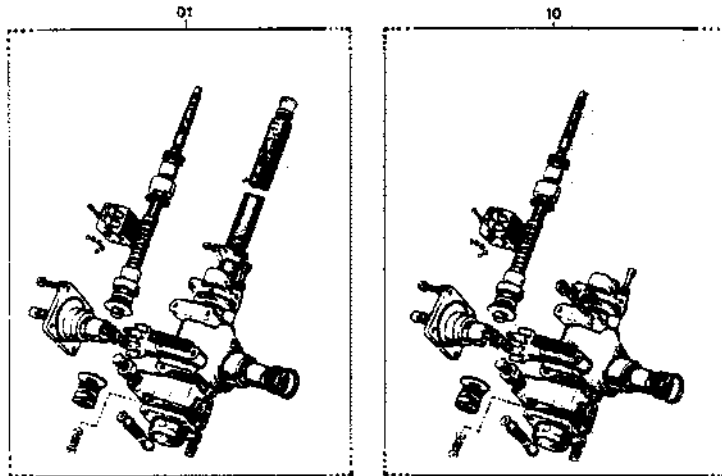   ATM (2/2)



4502-006

4502-001

Q300-001


FIG. 4502
STEERING POST

4502

ATM

87/08

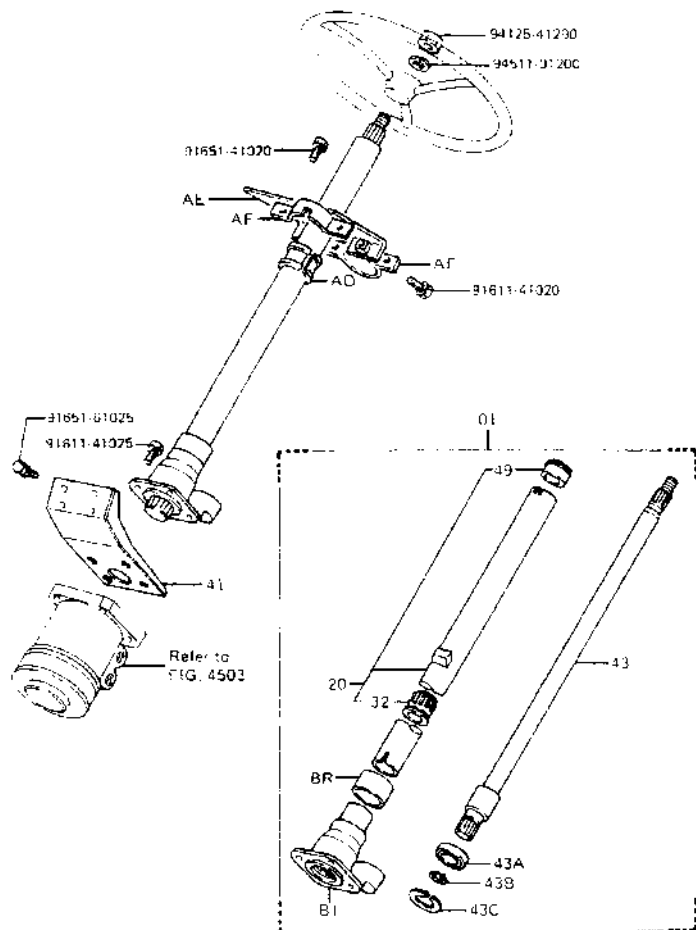 ATM (DELUXE CABIN)



4502 1004

PART NAME	PART NAME	QTY
CODE		
4502-01	POST ASSY, STEERING	1
4502-10	GEAR ASSY, STEERING	1
4502-10K	GEAR D/H KIT, STEERING	1
4502-11	BALL SCREW SET	1
4502-11A	BEARING, NO.1 (FOR BALL SCREW SET)	1
4502-11B	BEARING, NO.2 (FOR BALL SCREW SET)	1
4502-11C	BEARING, THRUST (FOR BALL SCREW SET)	2
4502-12	BODY ASSY, VALVE	1
4502-20	JACKET SUB-ASSY, MAST	1
4502-21	BDX SUB-ASSY, STEERING GEAR	1
4502-21B	BEARING, NO.1 (FOR SECTOR SHAFT)	1
4502-21C	SEAL, OIL (FOR SECTOR SHAFT)	1
4502-30	COVER SUB-ASSY, SIDE	1
4502-50A	BUSH, SECTOR SHAFT, NO.2	1
4502-30C	RING, O (FOR SIDE COVER)	1
4502-31	VALVE SET, RELIEF	1
4502-32	INSULATOR SUB-ASSY, W/COLUMN BUSH	1
4502-33	BODY SET, VALVE	1
4502-33A	RING, O (FOR VALVE BODY SET)	1
4502-40	SHAFT, SECTOR	1
4502-41	BRACKET, STEERING	1
4502-43	SHAFT, STEERING MAIN	1
4502-43A	BEARING (FOR STEERING MAIN SHAFT)	1
4502-43B	RING, SHAFT SNAP (FOR STEERING MAIN SHAFT)	1
4502-43C	RING, HOLE SNAP (FOR MAIN SHAFT BEARING)	1
4502-44	PISTON, BALANCE	1
4502-45	COVER, TOP	1
4502-45A	RING, O (FOR TOP COVER)	1
4502-46	COVER, END	1
4502-44C	RING, O (FOR END COVER)	1
4502-49	GROMMET, STEERING COLUMN (INSULATOR)	1
4502-AA	WASHER, SPRING	11
4502-AB	BOLT	4
4502-AD	GROMMET	1
4502-AE	STAY SUB-ASSY, STEERING	1
4502-AF	CLAMP	2
4502-AG	CLAMP, STEERING COLUMN, LOWER	1
4502-AI	NUT	4
4502-AJ	WASHER, SPRING	4
4502-AK	BOLT, STUD	4
4502-AL	PLUG, OIL	1
4502-AM	BOLT, ADJUSTING	1
4502-AN	PLATE, ADJUSTING	1
4502-AO	BOLT	4
4502-AP	NUT	1
4502-AS	SEAL, OIL	1
4502-AT	COLLAR	1
4502-AU	RING, SNAP	1
4502-AV	PACKING	2
4502-AW	NUT	1
4502-AX	NUT	1
4502-AY	NUT, LOCK	1
4502-AZ	BOLT	3
4502-HA	RING, SNAP	1
4502-BB	SEAT	4
4502-BC	SPRING	4
4502-BD	STOPPER, BALANCE PISTON	1
4502-BE	RING, O	1
4502-BG	SPRING, BALANCE PISTON	1
4502-BR	BODY, MAST JACKET	1
4502-BT	JACKET	1

G500-002E


FIG. 4503
HYDROSTATIC STEERING VALVE

4503

ATM

86/03

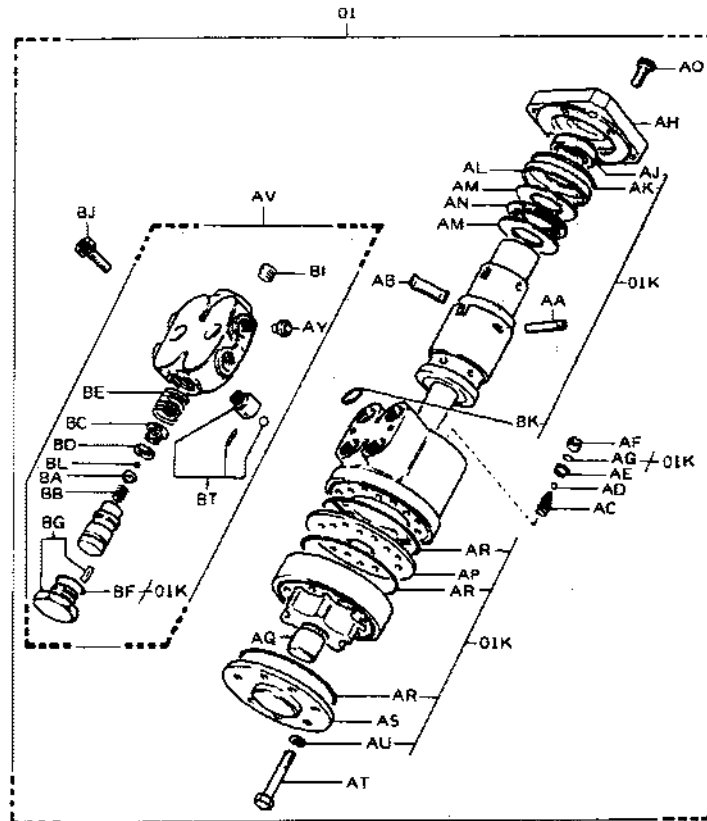 ATM (DELUXE CABIN)



PART NAME	PART NAME	QTY
CODE		
4503-01	VALVE ASSY, HYDROSTATIC STEERING	1
4503-01K	VALVE O/H KIT, HYDROSTATIC STEERING	1
4503-AA	PIN, STRAIGHT	1
4503-AB	SPRING, CENTERING	6
4503-AC	SPRING	1
4503-AD	BALL, STEEL	1
4503-AE	SEAT	1
4503-AF	PLUG	1
4503-AG	RING, O	1
4503-AH	PLATE, MOUNTING	1
4503-AJ	PACKING, Y	1
4503-AK	RING, O	1
4503-AL	COUPLER	1
4503-AM	RACE, SIDE	2
4503-AN	BEARING, NEEDLE	1
4503-AQ	BOLT, SOCKET	4
4503-AP	PLATE, SIDE	1
4503-AQ	SPACER	1
4503-AR	RING, O	3
4503-AS	CAP, END	1
4503-AT	BOLT	7
4503-AU	GASKET	7
4503-AV	VALVE ASSY, RELIEF	1
4503-AY	NIPPLE	4
4503-BA	RETAINER	1
4503-BB	SPRING	1
4503-BC	VALVE	1
4503-BD	SHIM	99
4503-BE	SPRING	1
4503-BF	RING, O	1
4503-BG	PLUG	1
4503-BI	PLUG	1
4503-BJ	BOLT, SOCKET	2
4503-BK	RING, O	4
4503-BL	BALL, STEEL	1
4503-BT	VALVE ASSY, CHECK	1

G300-001E




FIG. 4507
 DRAG LINK & STEERING PIPING

4507

ATM

87/08

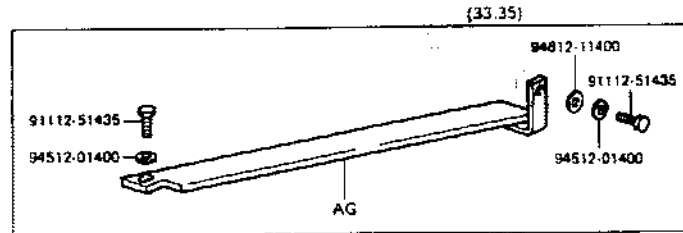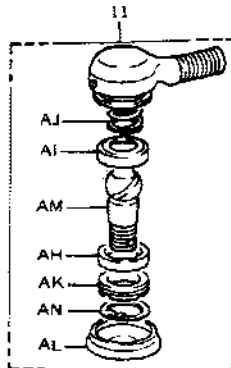  
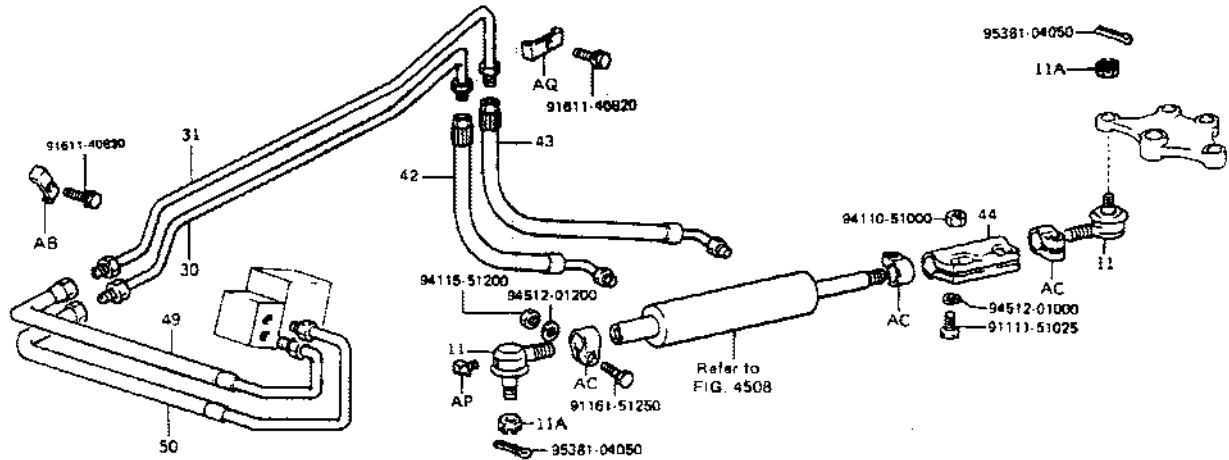 
ATM (DELUXE CABIN)



4507-078



Q300-002

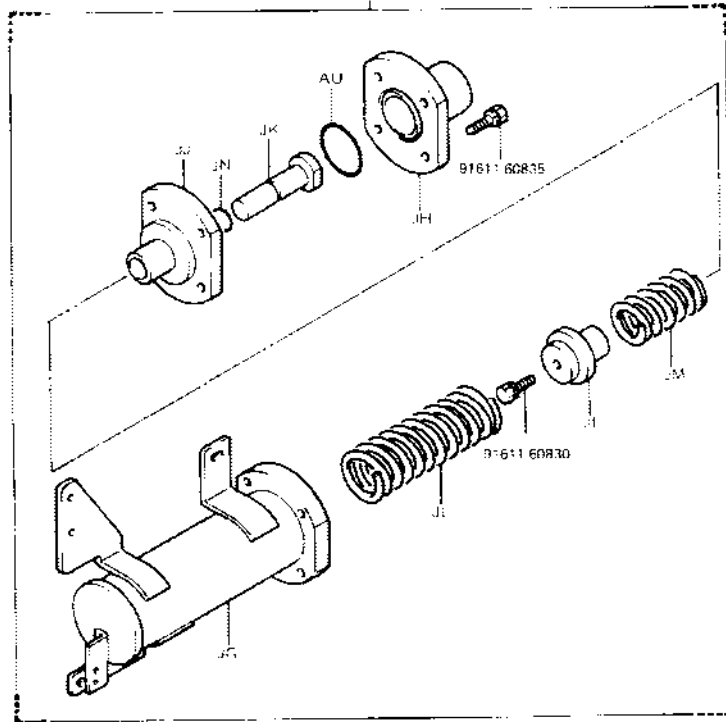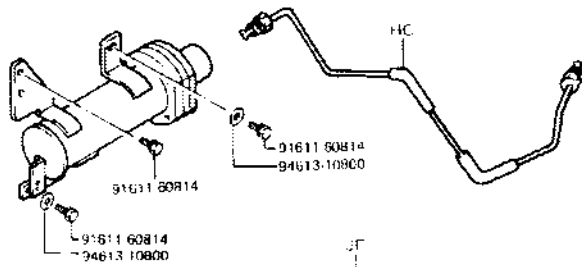  ATM (P/S ACCUMULATOR) (2/2)



4507 093

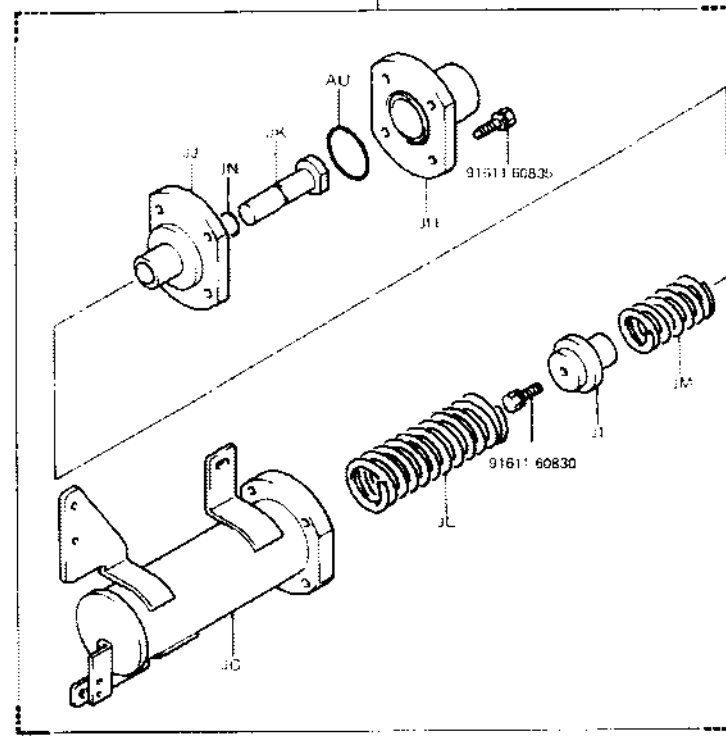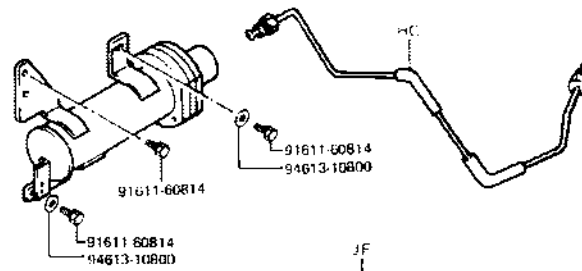  ATM (SOFTONE, SUPER LUG, SUPER SOFTONE) (2/2)



4507 093



FIG. 4507
DRAG LINK & STEERING PIPING

4507

ATM

87/08

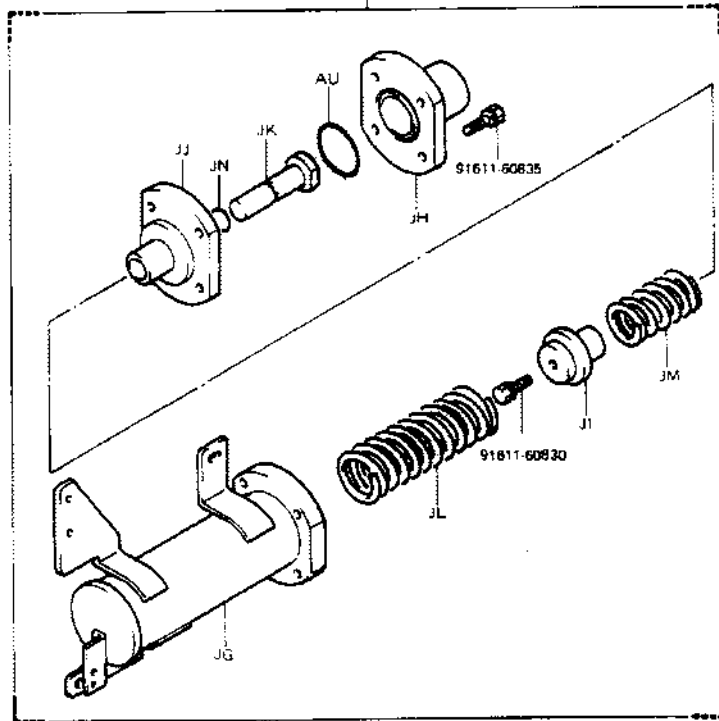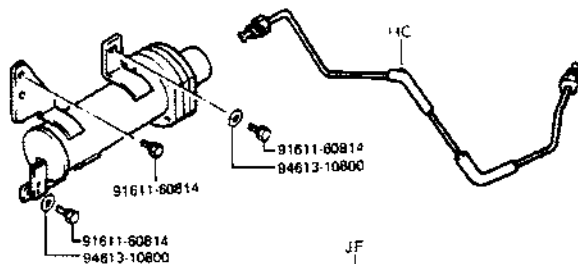  ATM (TRUKUSH, UNIQUE) (2/2)




4507 093

PART NAME CODE	PART NAME	QTY
4507-10	END ASSY, DRAG LINK	2
4507-10A	NUT, CASTLE (FOR DRAG LINK END)	2
4507-11	END ASSY, POWER CYLINDER	2
4507-11A	NUT, CASTLE (FOR POWER CYLINDER END)	2
4507-30	PIPE SUB-ASSY, NO.1 (STEERING TO CYLINDER)	1
4507-31	PIPE SUB-ASSY, NO.2 (STEERING TO CYLINDER)	1
4507-40	MOD, DRAG LINK, NO.1	1
4507-41	ARM, PITMAN	1
4507-42	HOSE, POWER CYLINDER, NO.1	1
4507-43	HOSE, POWER CYLINDER, NO.2	1
4507-44	END, POWER CYLINDER	1
4507-49	HOSE, POWER CYLINDER, NO.3	1
4507-50	HOSE, POWER CYLINDER, NO.4	1
4507-69	BOOT (FOR END)	2
4507-69A	RING (FOR END BODY)	2
4507-AA	CLAMP, END	2
4507-AB	CLAMP, PIPE	1
4507-AC	CLAMP, END	1
4507-AG	GUARD SUB-ASSY, CYLINDER	1
4507-AH	SEAT, BALL STUD	2
4507-AI	SEAT, BALL STUD	2
4507-AJ	SPRING	2
4507-AK	PLUG	2
4507-AL	BOOT	2
4507-AM	STUD, BALL	2
4507-AN	RING, SNAP	2
4507-AP	NIPPLE, GREASE	2
4507-AD	CLAMP	1
4507-AU	RING, O	1
4507-HC	PIPE SUB-ASSY	1
4507-JF	ACCUMULATOR ASSY	1
4507-JG	CYLINDER SUB-ASSY, ACCUMULATOR	1
4507-JH	COVER, ACCUMULATOR CYLINDER	1
4507-JI	PISTON, ACCUMULATOR, NO.1	1
4507-JJ	GUIDE, ACCUMULATOR CYLINDER	1
4507-JK	PISTON, ACCUMULATOR, NO.2	1
4507-JL	SPRING, ACCUMULATOR, NO.1	1
4507-JM	SPRING, ACCUMULATOR, NO.2	1
4507-JN	PACKING, ACCUMULATOR	1


G300-004E

ATM..33,35.E35.40

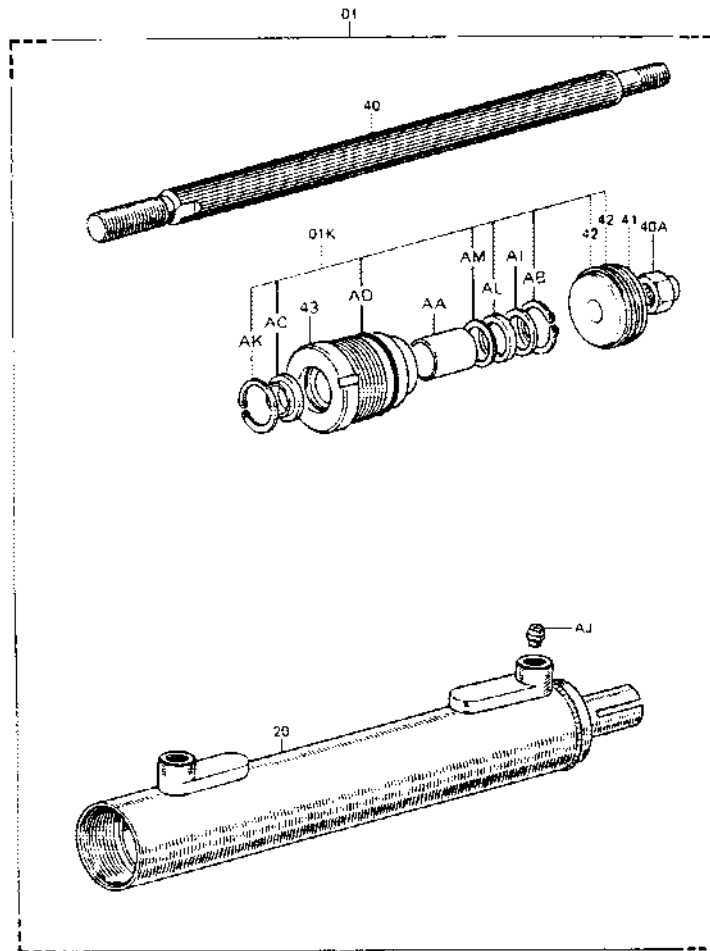 ATM..33,35.E35.40 (DPT..ID=55)



4508-045

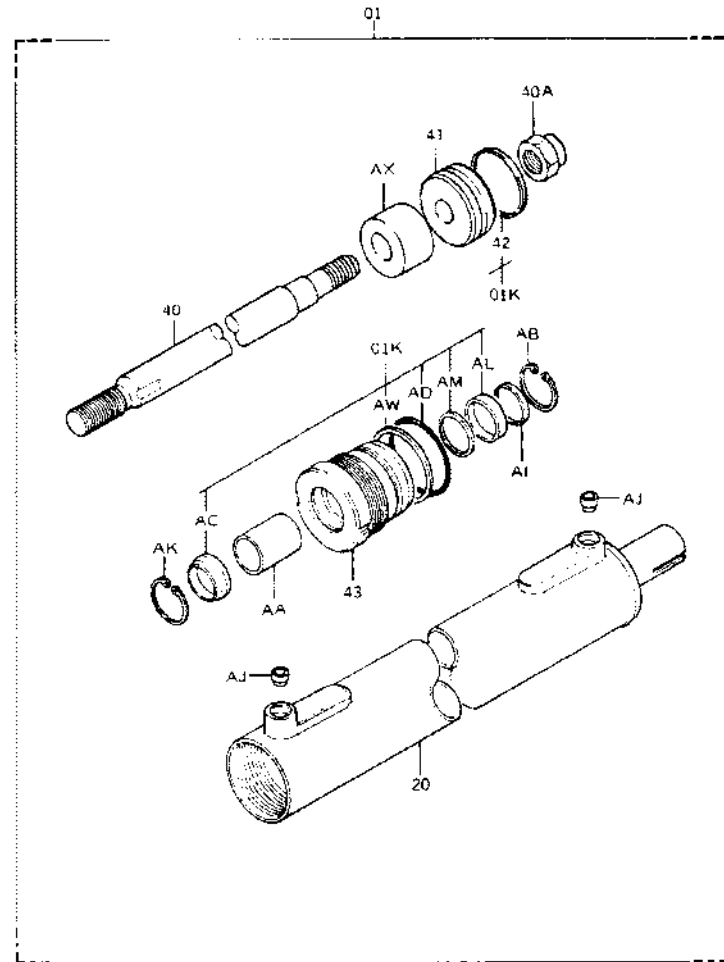 


4508-014A


G300-001

ATM..45

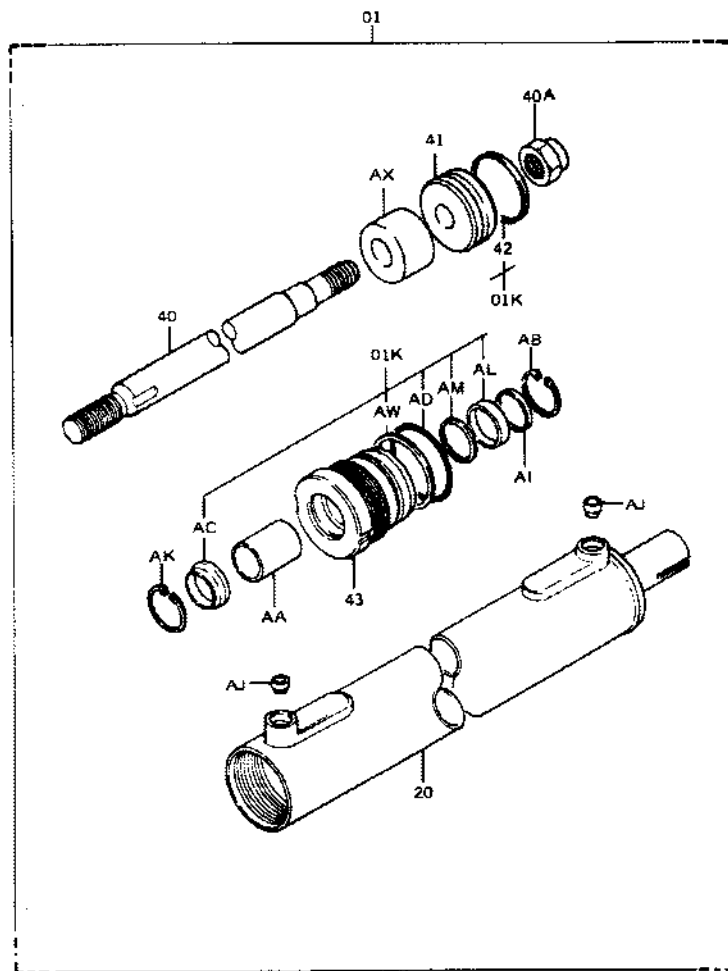 ATM (DELUXE CABIN)



4508-014A

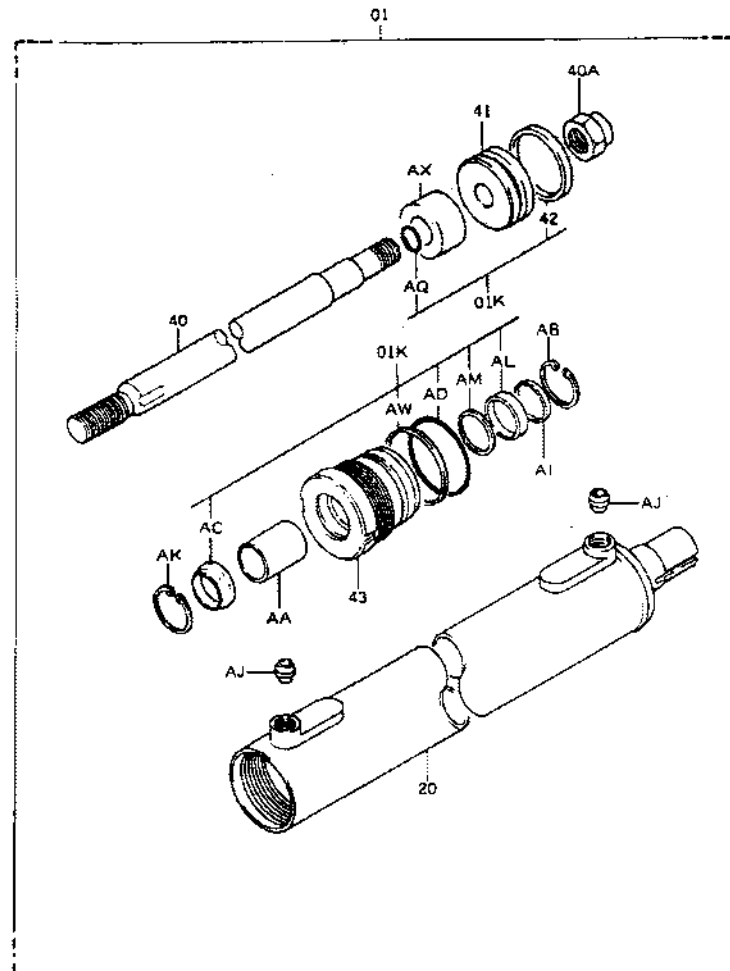 

4508-032A

G300-002

PART NAME CODE	PART NAME	QTY
4508-01	CYLINDER ASSY. POWER	1
4508-01K	PACKING KIT. POWER CYLINDER	1
4508-20	CYLINDER SUB-ASSY. POWER	1
4508-40	ROD, PISTON	1
4508-40A	NUT, SELF LOCK (FOR PISTON)	1
4508-41	PISTON	1
4508-42	RING, PISTON	1
4508-43	GUIDE, ROD	2
4508-AA	BUSH	1
4508-AB	RING, SNAP	1
4508-AC	SEAL, DUST	1
4508-AD	RING, O	1
4508-AI	COLLAR, REAR COVER	1
4508-AJ	SEAT	2
4508-AK	RING, SNAP	1
4508-AL	PACKING, U	1
4508-AM	RING, BACK UP	1
4508-AQ	RING, O	1
4508-AW	RING, BACK UP	1
4508-AX	SPACER	1


FIG. 4601
PARKING BRAKE

4601

ATM

85/04

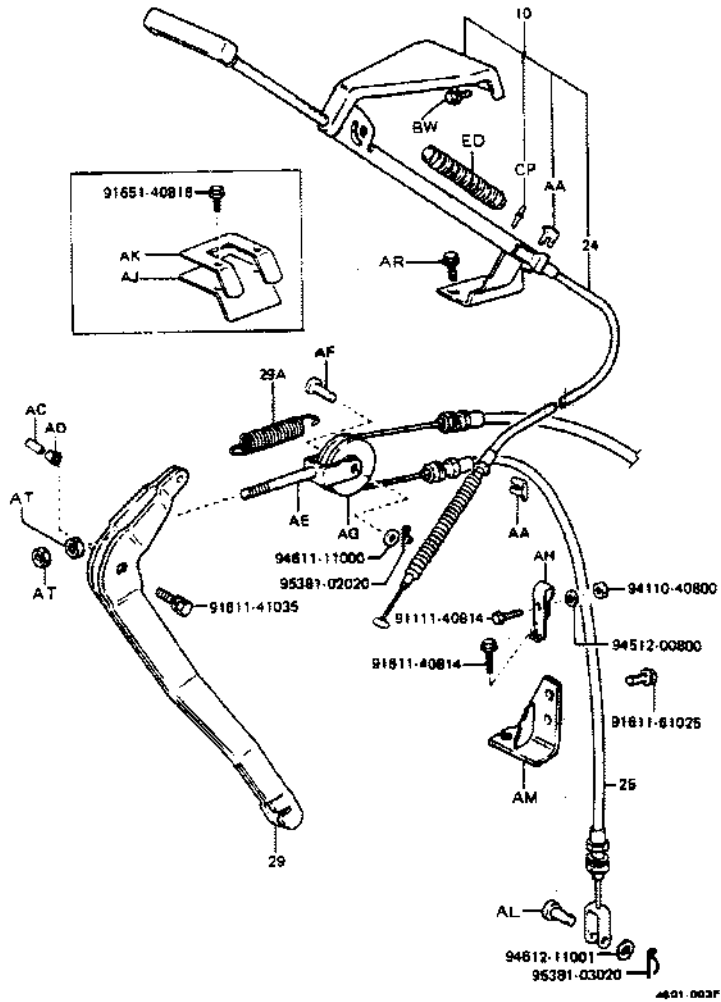 ATM



PART NAME CODE	PART NAME	QTY
4601-10	HANDLE ASSY, PARKING BRAKE	1
4601-24	CABLE SUB-ASSY, PARKING BRAKE, NO.1	1
4601-25	CABLE SUB-ASSY, PARKING BRAKE, NO.2	1
4601-29	LEVER SUB-ASSY, INTERMEDIATE	1
4601-29A	SPRING, TENSION (FOR INTERMEDIATE LEVER)	1
4601-AA	CLIP	2
4601-AC	SPACER	1
4601-AD	BUSHING, NYLON	1
4601-AE	BAR SUB-ASSY, EQUALIZER	1
4601-AF	PIN, W/HOLE	1
4601-AG	PULLEY	1
4601-AH	CLAMP, WIRE SET	2
4601-AJ	GROMMET	1
4601-AK	PLATE, GROMMET	1
4601-AL	PIN, W/HOLE	2
4601-AM	BRACKET, PARKING BRAKE	1
4601-AR	BOLT	2
4601-AT	NUT	2
4601-BW	BOLT	2
4601-CP	PIN, PARKING BRAKE PLUNGER	2
4601-ED	TUBE	1

FIG. 4701
BRAKE PEDAL

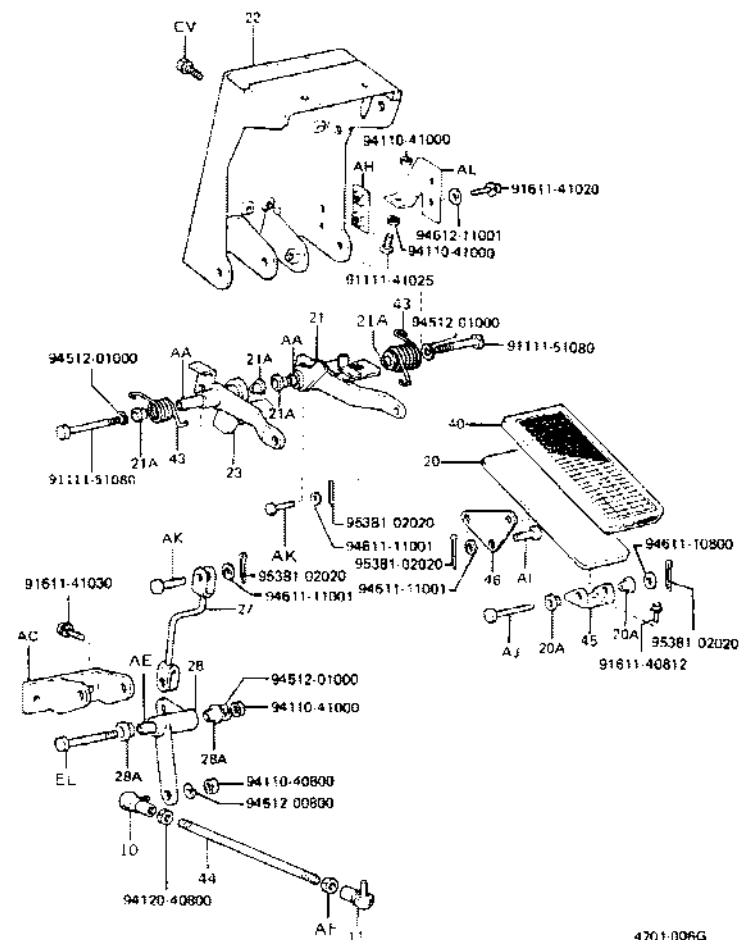 
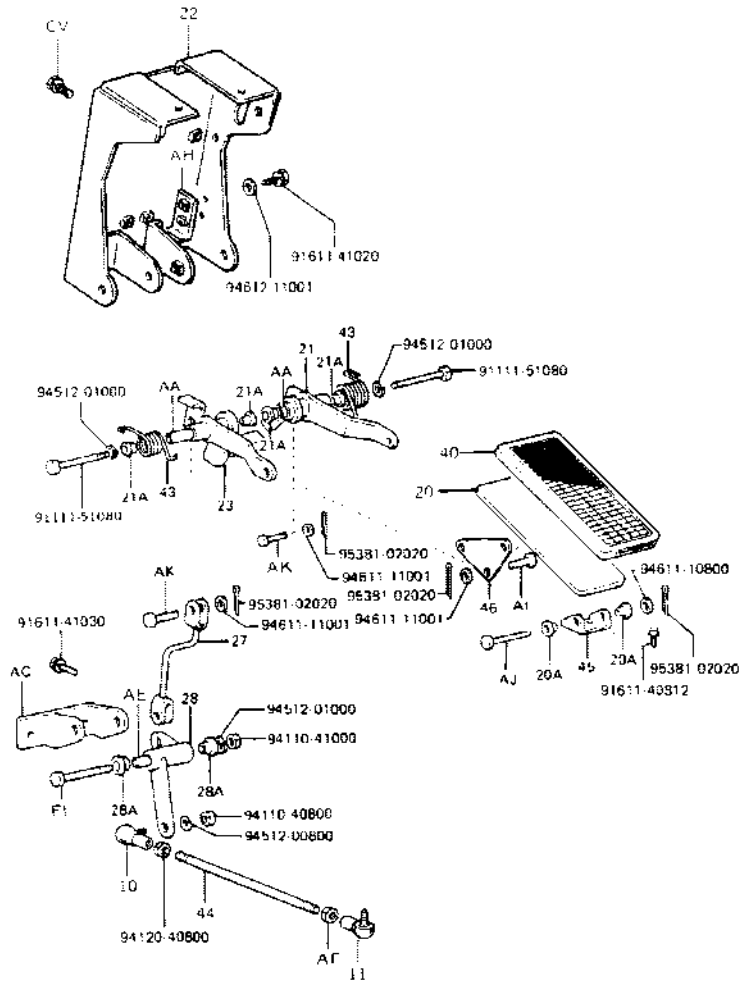 
4701

ATM

86/08

ATM

ATM(ALL WEATHER)



4701-004G

4701-006G

G300-001


FIG. 4701
BRAKE PEDAL

4701

ATM

86/08

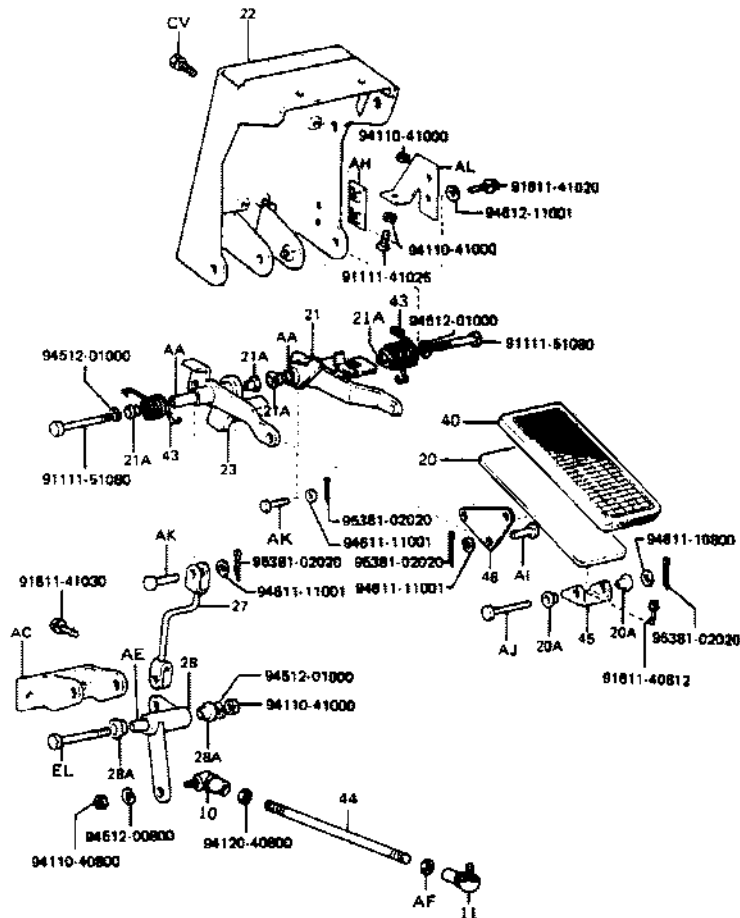 ATM (DELUXE CABIN)



PART NAME	PART NAME	QTY
CODE		
4701-10	END ASSY, INCHING ROD, NO.1	1
4701-11	END ASSY, INCHING ROD, NO.2	1
4701-20	PEDAL SUB-ASSY, BRAKE	1
4701-20A	BUSH (FOR BRAKE PEDAL)	4
4701-21	LINK SUB-ASSY, BRAKE, NO.1	1
4701-21A	BUSH (FOR BRAKE LINK)	4
4701-22	BRACKET SUB-ASSY, BRAKE PEDAL	1
4701-23	LINK SUB-ASSY, BRAKE, NO.2	1
4701-27	ROD SUB-ASSY, INCHING	1
4701-28	LINK SUB-ASSY, INCHING	1
4701-28A	BUSH (FOR INCHING LINK)	2
4701-40	PAD, PEDAL	1
4701-43	SPRING, TORSION (FOR PEDAL RETURN)	1
4701-44	ROD, INCHING	1
4701-45	BRACKET, BRAKE PEDAL	2
4701-46	LINK, BRAKE, NO.1	4
4701-AA	SPACER	2
4701-AC	BRACKET, LINK	1
4701-AE	SPACER	1
4701-AF	INUT	1
4701-AJ	PIN, W/HOLE	4
4701-AJ	PIN, W/HOLE	2
4701-AK	PIN, W/HOLE	3
4701-CV	BOLT	6
4701-EL	BOLT	1

4701-0908


G300-002E

FIG. 4704
BRAKE VALVE

4704

ATM 85/04

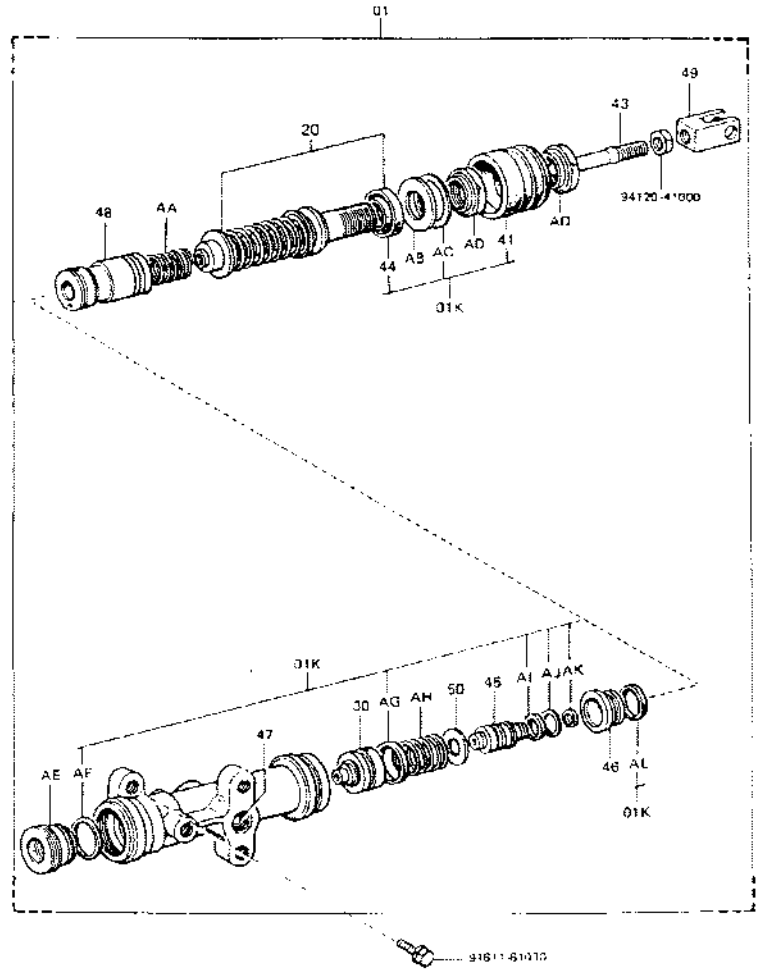 ATH



4704 002A

PART NAME	PART NAME	QTY
4704-01	VALVE ASSY, BRAKE	1
4704-01K	VALVE O/H KIT, BRAKE	1
4704-20	PISTON SUB-ASSY, INPUT	1
4704-30	VALVE SUB-ASSY, CLOSED	1
4704-41	SCOT	1
4704-43	ROD, PUSH	1
4704-44	CUP, CYLINDER	1
4704-45	PISTON, REACTION	1
4704-46	GUIDE, REACTION PISTON	1
4704-47	SEAT, UNION	2
4704-48	SPOOL, BRAKE VALVE	1
4704-49	CLEVIS	1
4704-50	RETAINER, SPRING	1
4704-AA	SPRING, COMPRESSION	1
4704-AB	WASHER, PLATE	1
4704-AC	RING, SNAP	1
4704-AD	NUT	2
4704-AE	PLUG, HOLE	1
4704-AF	RING, O	1
4704-AG	RING, O	1
4704-AH	SPRING, VALVE RETURN	1
4704-AI	RING, U	1
4704-AJ	RING, BACK UP	1
4704-AK	RING, O	1
4704-AL	RING, O	1


FIG. 4706
BRAKE ACCUMULATOR

4706

ATM

85/04

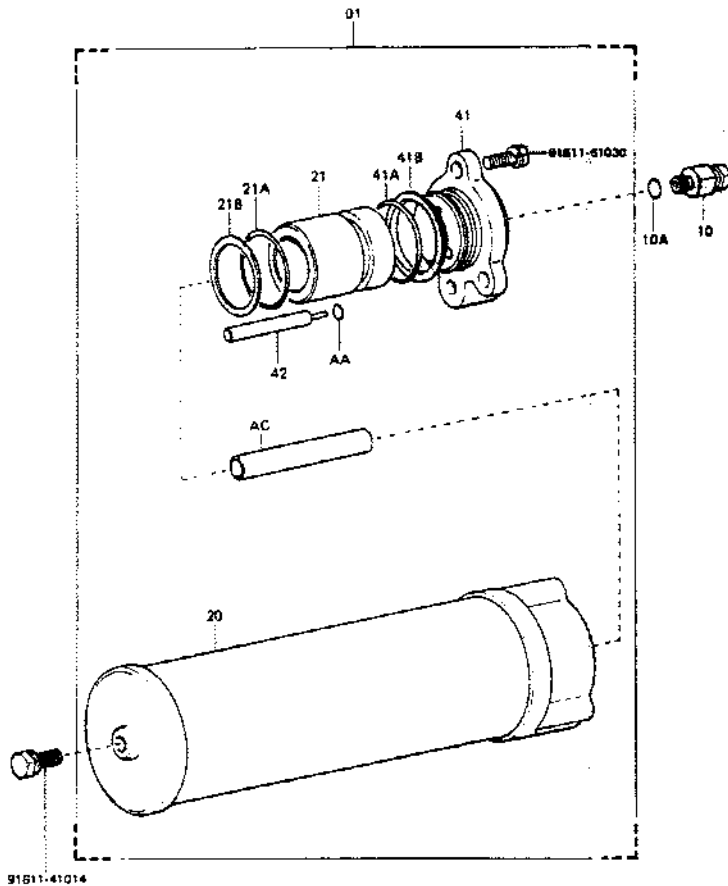 
ATM



PART NAME CODE	PART NAME	QTY
4706-01	ACCUMULATOR ASSY	2
4706-10	VALVE ASSY, CHECK	2
4706-10A	RING, O (FOR CHECK VALVE)	2
4706-20	ACCUMULATOR SUB-ASSY	2
4706-21	PISTON SUB-ASSY	2
4706-21A	RING, O (FOR PISTON)	2
4706-21B	RING, BACK UP (FOR PISTON)	2
4706-41	COVER, BODY	2
4706-41A	RING, O (FOR BODY COVER)	2
4706-41B	RING, BACK UP (FOR BODY COVER)	2
4706-42	ROD, STROKE SWITCH	2
4706-AA	RING, O	2
4706-AC	STOPPER	2

4706-002

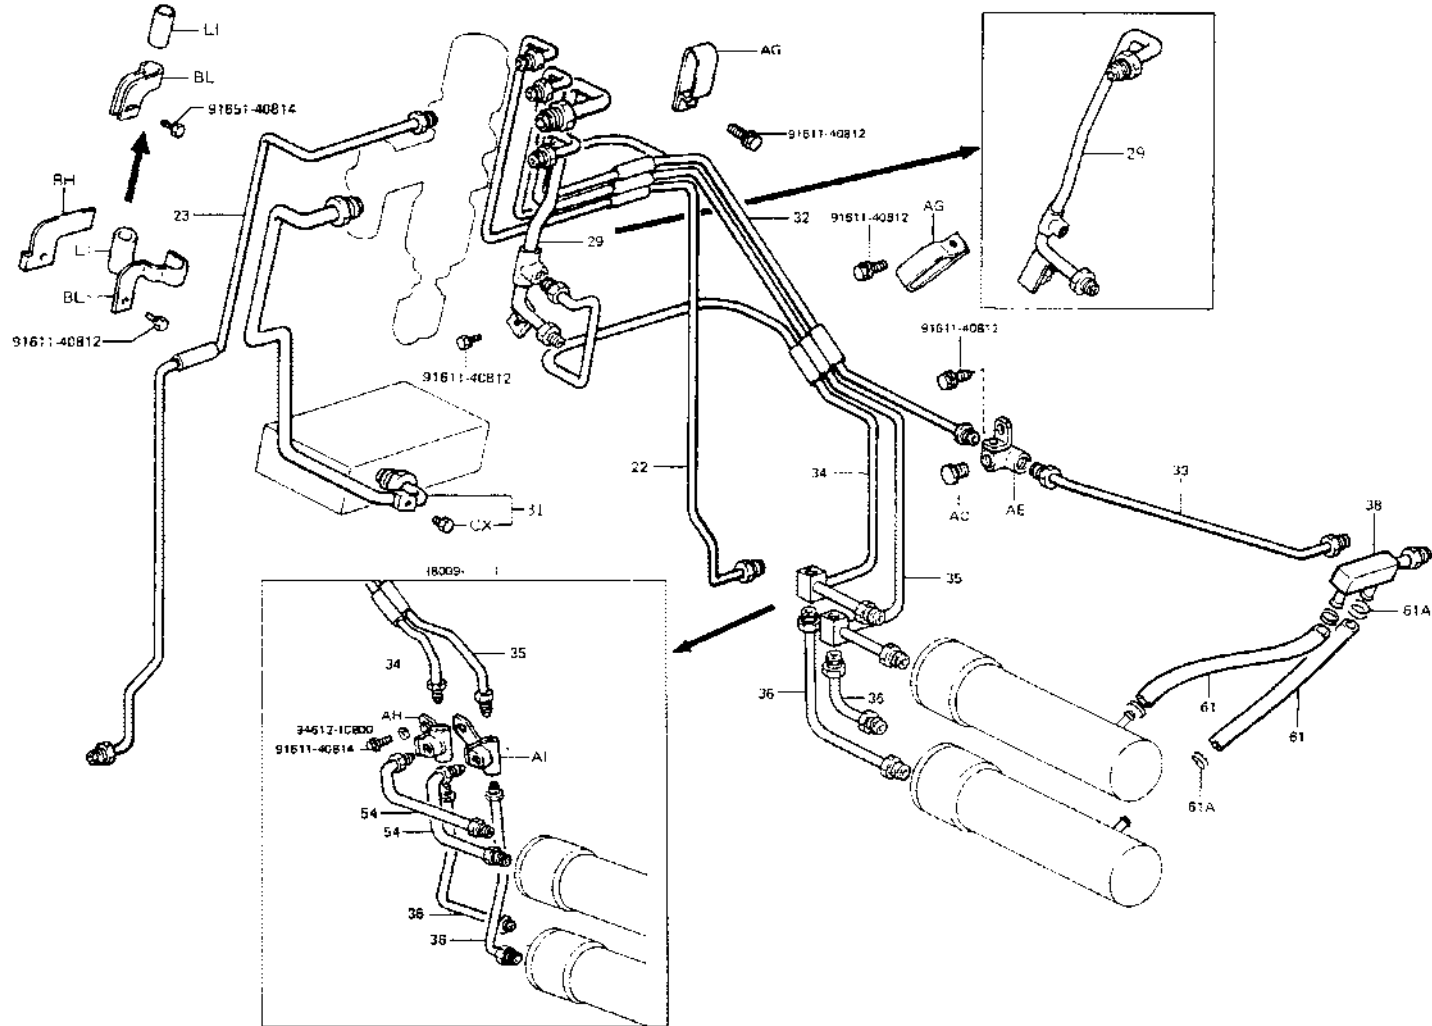 2F..ATM



4714-005E

G300-001


FIG. 4714
BRAKE PIPE

4714

ATM

87/02

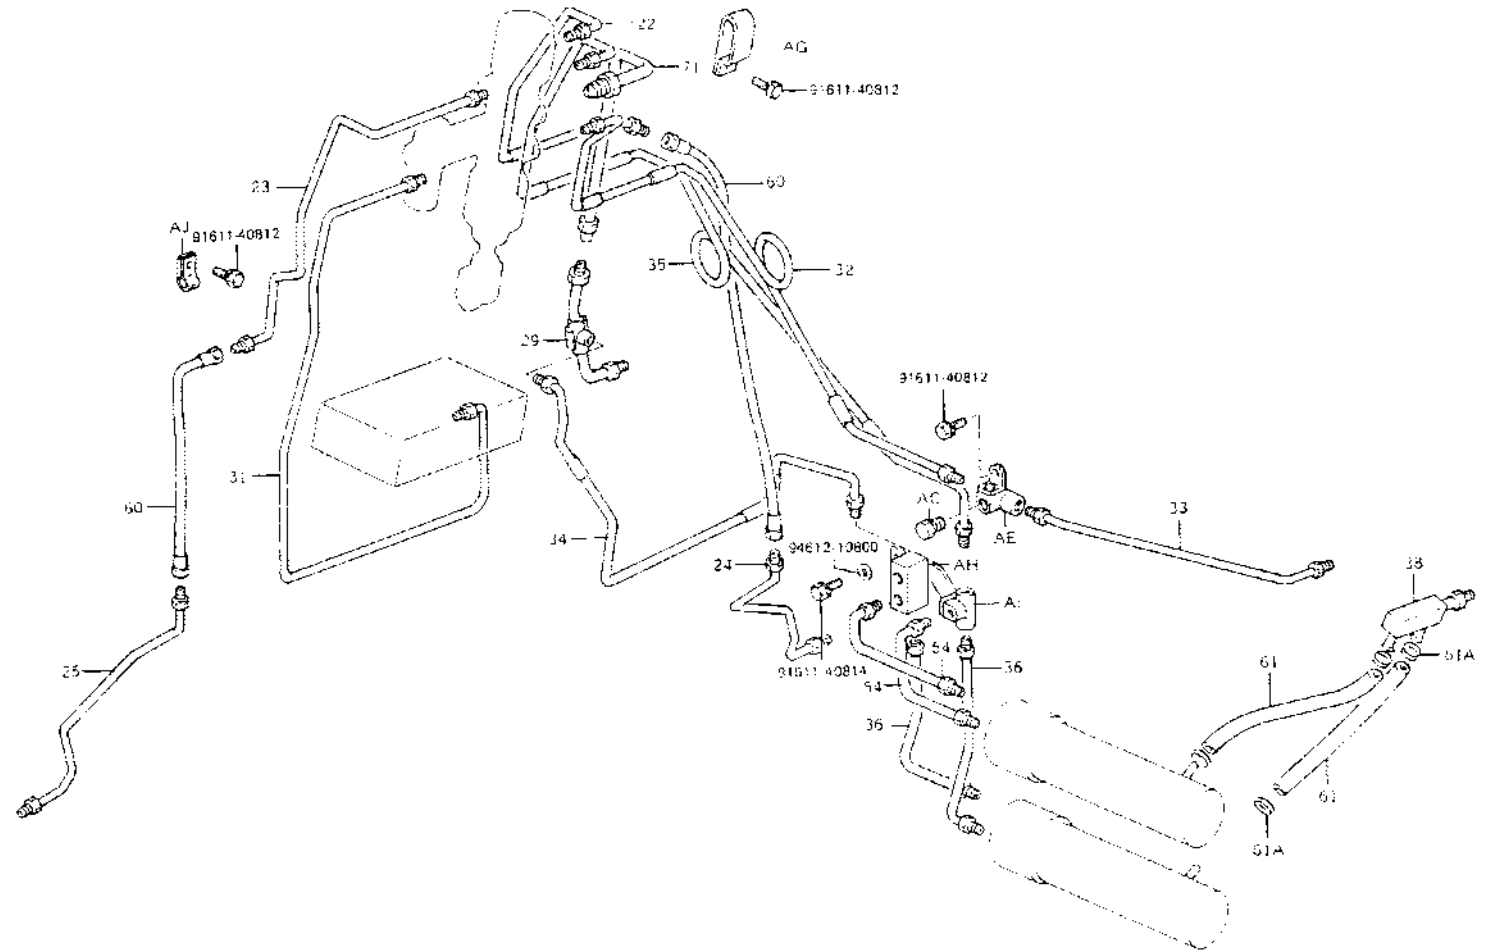 2F..ATM (DELUXE CABIN)



4714 080a

Q300-003


FIG. 4714
BRAKE PIPE

4714

ATM

87/02

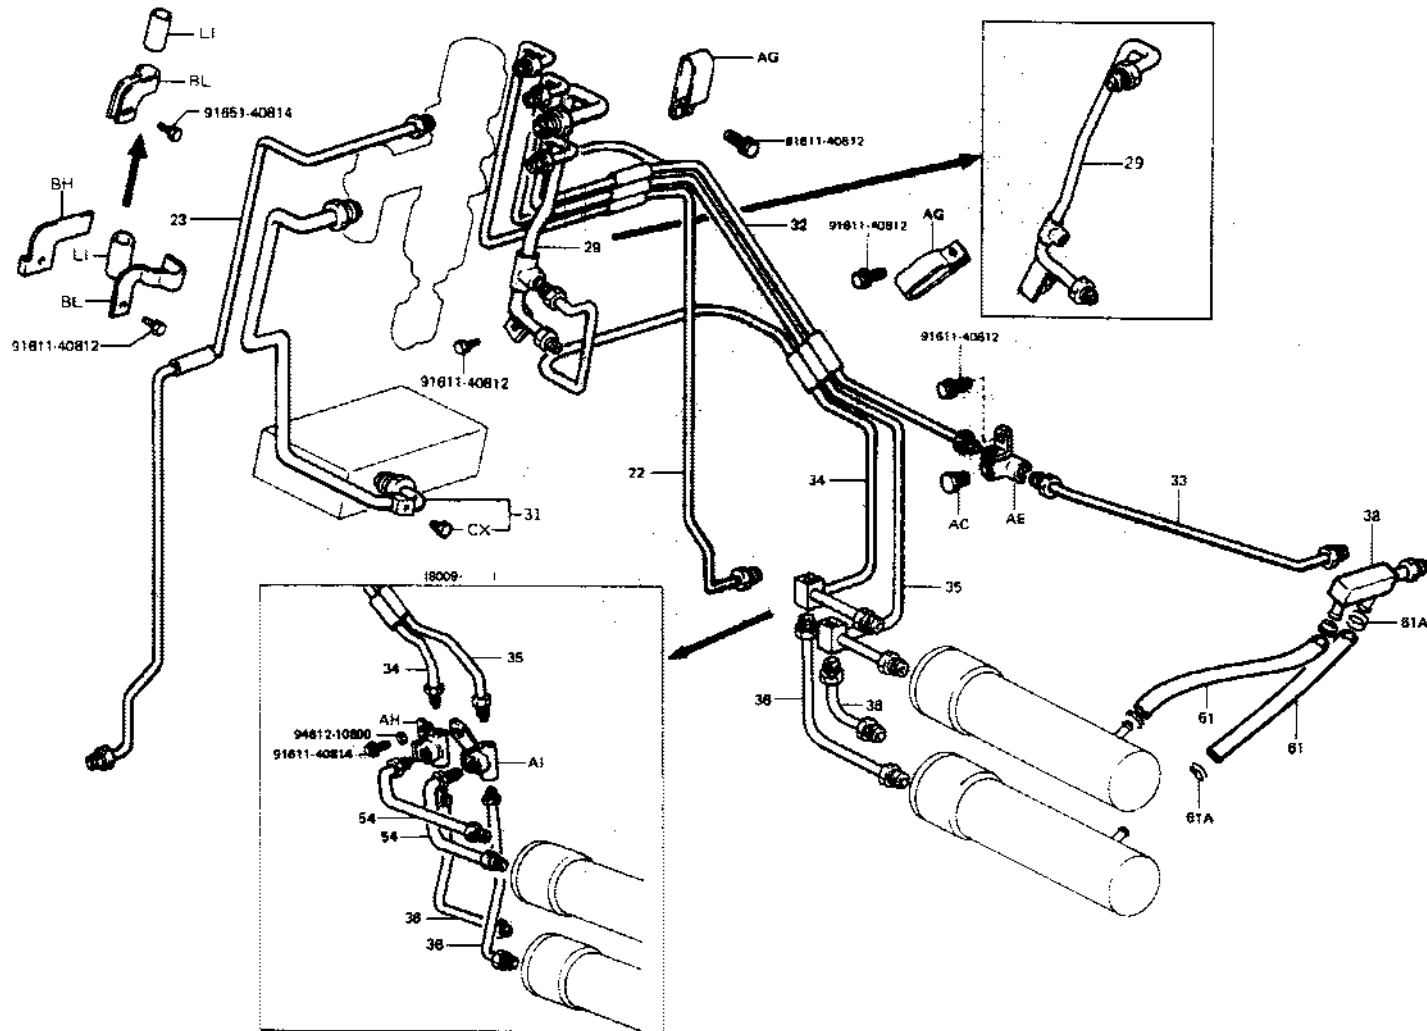 2H..ATM



4714-005E

G300-004


FIG. 4714
BRAKE PIPE

4714

ATM

87/02

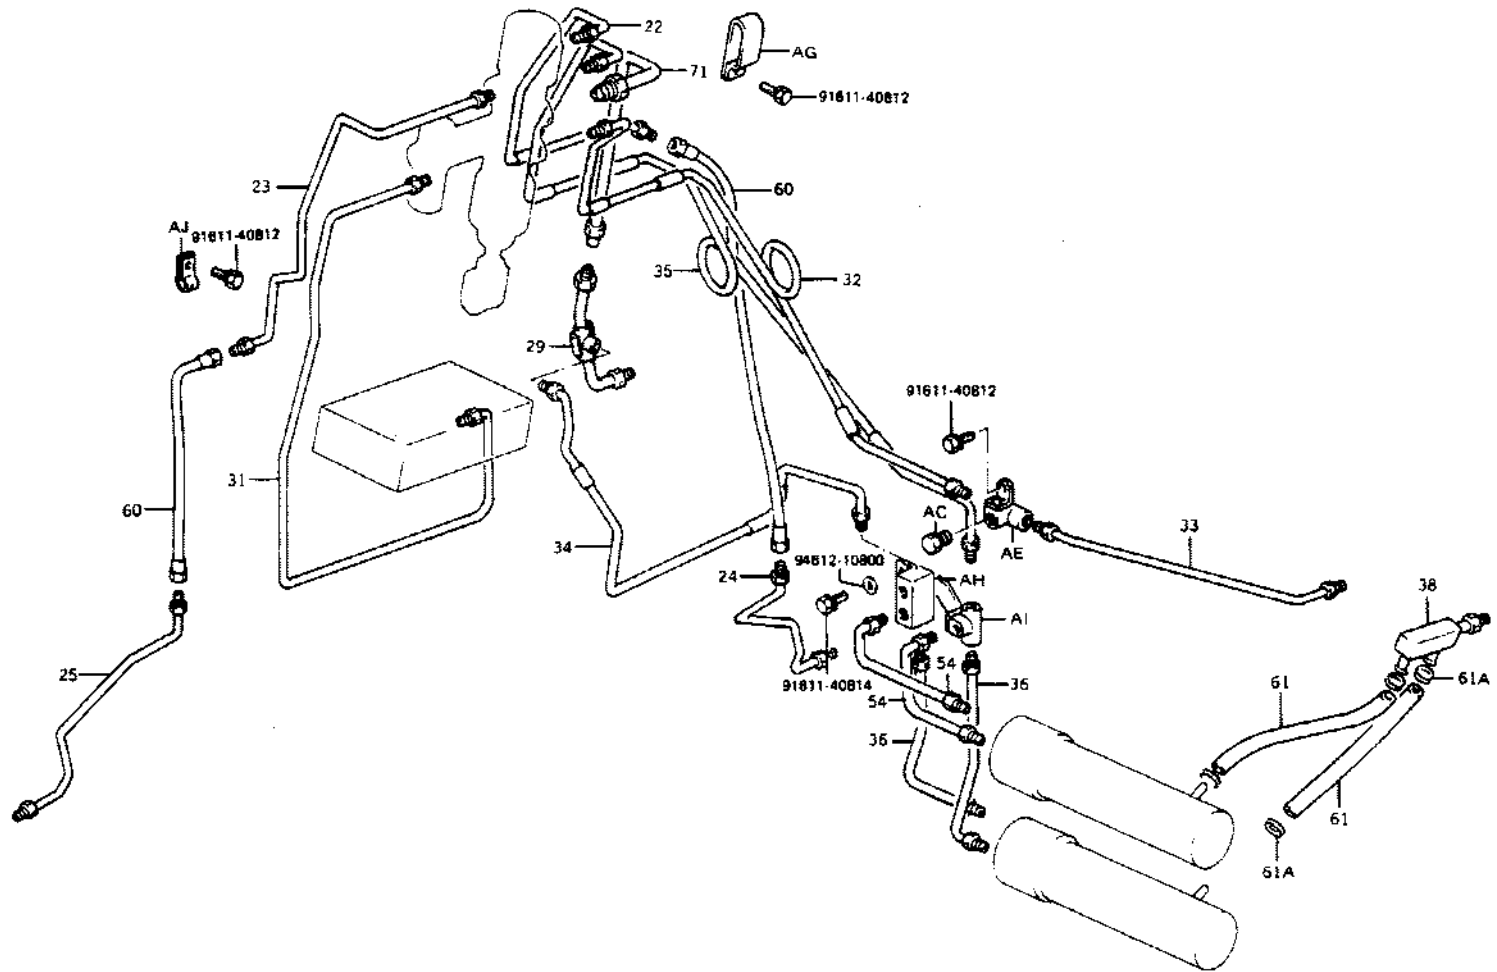 2H..ATM (DELUXE CABIN)



4714-080A

Q300-006

PART NAME / CODE	PART NAME	QTY
4714-13	ACTUATOR ASSY, PISTON	1
4714-22	PIPE SUB-ASSY, BRAKE, RH NO.1	1
4714-23	PIPE SUB-ASSY, BRAKE, LH NO.1	1
4714-24	PIPE SUB-ASSY, BRAKE, RH NO.2	1
4714-25	PIPE SUB-ASSY, BRAKE, LH NO.2	1
4714-29	PIPE SUB-ASSY, VALVE TO VALVE, NO.1	1
4714-31	PIPE SUB-ASSY, VALVE TO STEERING	1
4714-32	PIPE SUB-ASSY, RETURN, NO.1 (VALVE TO TANK)	1
4714-33	PIPE SUB-ASSY, RETURN, NO.2 (VALVE TO TANK)	1
4714-34	PIPE SUB-ASSY, ACCUMULATOR, NO.1	1
4714-35	PIPE SUB-ASSY, ACCUMULATOR, NO.2	1
4714-36	PIPE SUB-ASSY, ACCUMULATOR TO VALVE, NO.1	2
4714-38	PIPE SUB-ASSY, RETURN (ACCUMULATOR TO TANK)	1
4714-54	PIPE SUB-ASSY, ACCUMULATOR TO VALVE, NO.3	2
4714-60	HOSE, HIGH PRESSURE (FOR BRAKE MAIN)	2
4714-61	HOSE, LOW PRESSURE (ACCUMULATOR TO TANK)	1
4714-61A	CLAMP (FOR ACCUMULATOR TO TANK HOSE)	4
4714-71	HOSE, VALVE TO VALVE	1
4714-72	HOSE, VALVE TO STEERING	1
4714-AC	PLUG	1
4714-AE	3-WAY SUB-ASSY	1
4714-AG	CLAMP	2
4714-AH	3-WAY SUB-ASSY, NO.1	1
4714-AI	3-WAY SUB-ASSY, NO.2	1
4714-AJ	CLAMP	1
4714-BL	CLAMP	1
4714-CX	PLUG	1
4714-LI	RUBBER	1


FIG. 4715
DRUM BRAKE

4715

ATM

85/07

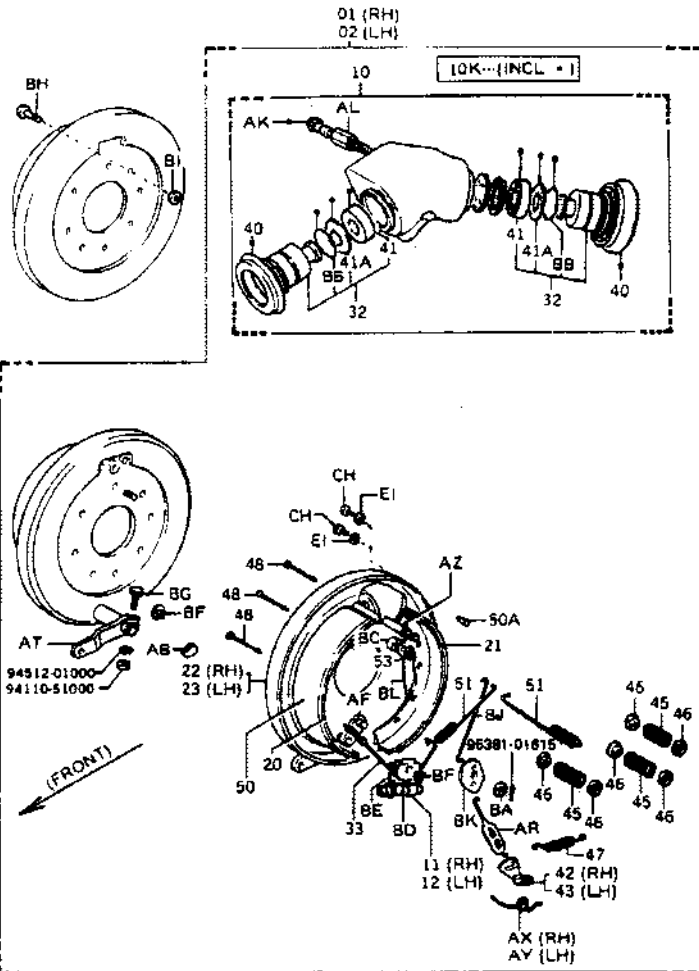 ATM



PART NAME CODE	PART NAME	QTY
4715-01	BRAKE ASSY, RH	1
4715-02	BRAKE ASSY, LH	1
4715-10	CYLINDER ASSY, WHEEL	1
4715-10K	CYLINDER O/H KIT, WHEEL	1
4715-11	SCREW ASSY, ADJUSTING, RH	2
4715-12	SCREW ASSY, ADJUSTING, LH	1
4715-20	SHOE SUB-ASSY (FOR FRONT OR UPPER)	1
4715-21	SHOE SUB-ASSY (FOR REAR OR LOWER)	1
4715-22	PLATE SUB-ASSY, BACKING, RH	1
4715-23	PLATE SUB-ASSY, BACKING, LH	1
4715-32	PISTON SUB-ASSY, WHEEL CYLINDER	4
4715-33	CABLE & FITTING SUB-ASSY	2
4715-40	BODY, WHEEL CYLINDER	4
4715-41	CUP, WHEEL CYLINDER PISTON	4
4715-41A	RING, BACK UP (FOR CYLINDER PISTON CUP)	4
4715-42	LEVER, AUTOMATIC ADJUSTMENT, RH	1
4715-43	LEVER, AUTOMATIC ADJUSTMENT, LH	1
4715-45	SPRING, SHOE HOLD DOWN	4
4715-46	CUP, SHOE HOLD DOWN	8
4715-47	SPRING, ADJUSTER	2
4715-48	PIN, SHOE HOLD DOWN	8
4715-50	LINING, BRAKE	2
4715-50A	RIVET, BRAKE LINING	80
4715-51	SPRING, ANCHOR TO SHOE	2
4715-53	RING, PARKING LEVER RETAINING	4
4715-AB	COVER, HOLE	2
4715-AP	LEVER SUB-ASSY, PARKING	2
4715-AX	CAP, BLEEDER SCREW	2
4715-AL	SCREW, BLEEDER	2
4715-AR	LINK	2
4715-AT	LEVER, ACTUATOR	1
4715-AX	SPRING, LEVER RETURN, RH	1
4715-AY	SPRING, LEVER RETURN, LH	1
4715-AZ	BOLT, SHOE RETURN SPRING	2
4715-BA	WASHER	2
4715-BB	RING, O	4
4715-BC	BOLT, PARKING LEVER	4
4715-BD	SHOEVE, PARKING BRAKE CABLE	2
4715-BE	RETAINER, PARKING BRAKE CABLE	2
4715-BF	RING, RETAINING	4
4715-BG	BOLT	2
4715-BH	BOLT, BRAKE SET	12
4715-BI	NUT, LOCK	4
4715-BJ	LINK, AUTOMATIC ADJUSTER, UPPER	1
4715-BK	LEVER, AUTOMATIC ADJUSTER	2
4715-BL	LEVER, PARKING	4
4715-CH	BOLT	4
4715-EI	WASHER, SPRING	4

PART NAME CODE	PART NAME	QTY
5101-30	DRAWBAR SUB-ASSY	1
5101-31	COVER SUB-ASSY, RADIATOR	1
5101-34	GUARD SUB-ASSY, MUD, RH	1
5101-35	GUARD SUB-ASSY, MUD, LH	1
5101-AA	GUARD, MUD, FRONT	2
5101-AB	BOLT	4
5101-AC	WASHER, WAVE	4
5101-AD	HOSE, LOW PRESSURE	1
5101-AE	CLAMP SUB-ASSY	2
5101-AF	BOLT, HEXAGON	1
5101-AG	WASHER, PLATE	1
5101-AH	BRACKET SUB-ASSY, RADIATOR COVER	2
5101-AI	SPONGE	1
5101-AJ	MAT	1
5101-AK	HOOK SUB-ASSY	2
5101-AL	NUT, CASTLE	2
5101-AM	WASHER, PLATE	4
5101-AN	WRENCH, WEIGHT BOLT BOX	1
5101-AD	HANDLE, WEIGHT BOLT BOX WRENCH	1
5101-AT	SPACER	2
5101-AU	COVER SUB-ASSY, UNDER	1
5101-AV	GUARD SUB-ASSY, CYLINDER	1
5101-AH	WASHER, PLATE	1 - 5
5101-AX	WASHER, PLATE	4
5101-AY	PLUG, HOLE	4
5101-AZ	PLUG, HOLE	2
5101-BA	BRACKET, RADIATOR COVER	3
5101-BB	BOLT	4
5101-BV	SUPPORT SUB-ASSY, FRONT AXLE	1
5101-BW	BOLT	4
5101-BX	BOLT	6
5101-EV	BOLT, W/WASHER	4
5101-HJ	SAFETY WALK	1
5101-IA	BOLT, W/WASHER	5
5101-KC	PLATE, UNDER	1
5101-LG	PIPE	1


FIG. 5201
HOOD & HINGE

5201

ATM

87/08

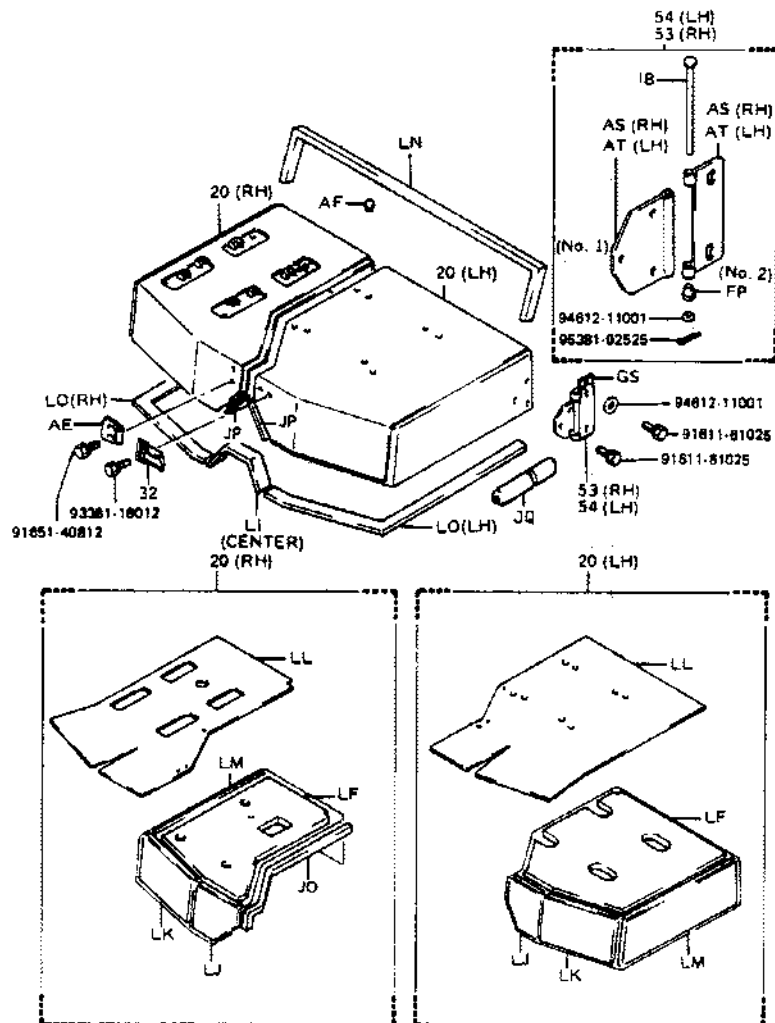 ATM (DELUXE CABIN)



5201-086E

PART NAME	PART NAME	QTY
CODE		
5201-10	STAY ASSY, ENGINE (OR BATTERY) HOOD	1
5201-20	HOOD SUB-ASSY, ENGINE (OR BATTERY)	1
5201-20A	SEAL, ENGINE (OR BATTERY) HOOD	1
5201-30	HINGE SUB-ASSY, ENGINE (OR BATTERY) HOOD	1
5201-32	CATCH SUB-ASSY (FOR HOOD)	1
5201-33	STAY SUB-ASSY, ENGINE (OR BATTERY) HOOD	1
5201-40	RUBBER, CUSHION (FOR HOOD)	1
5201-45	DAMPER, ENGINE HOOD	1
5201-53	HINGE ASSY, HOOD, RH	1
5201-54	HINGE ASSY, HOOD, LH	1
5201-AA	STAY SUB-ASSY, ENGINE HOOD	1
5201-AB	PIN, W/HOLE	1
5201-AD	SCREW, W/TOOTHED WASHER	8
5201-AE	HOOK, HOOD LOCK	1
5201-AF	PLUG, HOLE	4
5201-AG	PLUG, HOLE	4
5201-AH	PLATE, HEAT INSULATOR	1
5201-AI	CLIP	1
5201-AS	HINGE SUB-ASSY, HOOD, RH	1
5201-AT	HINGE SUB-ASSY, HOOD, LH	1
5201-FP	BUSH	4
5201-GS	SHIM	99
5201-GX	BRACKET SUB-ASSY, DAMPER	1
5201-HH	WASHER, PLATE	1
5201-HW	WASHER, PLATE	2
5201-IB	PIN, HINGE	2
5201-JD	SEAL	1
5201-JP	SEAL	2
5201-JQ	SEAL	2
5201-LE	WASHER, PLATE	1
5201-LF	FORM, ENGINE HOOD	1
5201-LI	SEAL, ENGINE HOOD	1
5201-LJ	FORM, ENGINE HOOD	1
5201-LK	FORM	1
5201-LL	SHEET, ENGINE HOOD	1
5201-LM	FORM	1
5201-LN	SEAL, ENGINE HOOD, RR	1

G300-002E

FIG. 5301
INSTRUMENT PANEL & FLOOR

5301

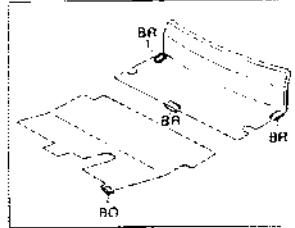 
ATM

87/08


ATM

ATM (ALL WEATHER)





(TOE BOARD PAD)



(MTM)

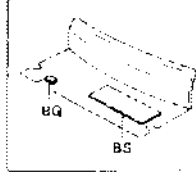 

(ATM)

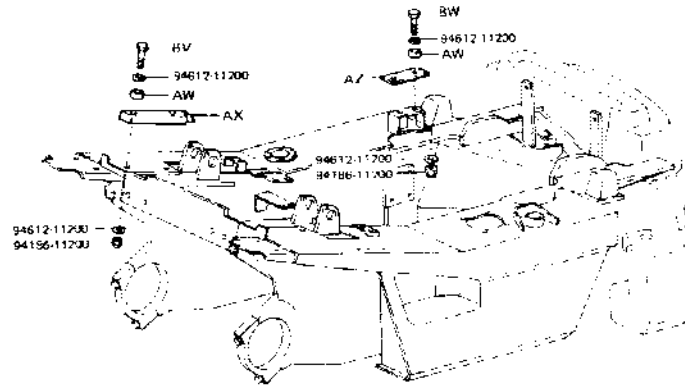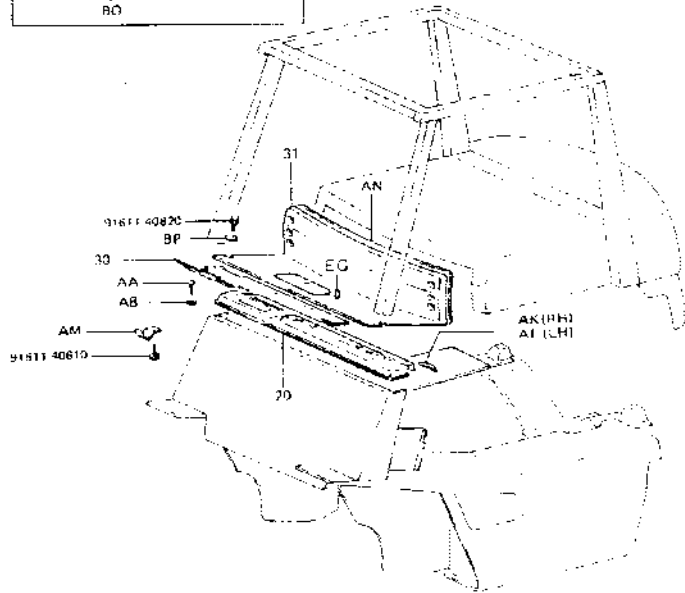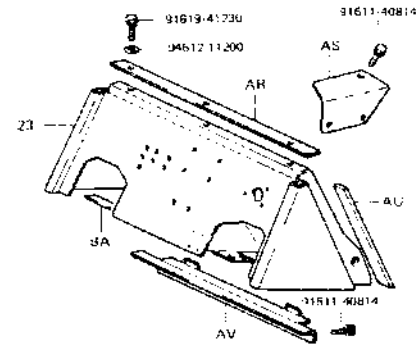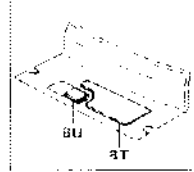    

93510-14008



5301 035 A

G300-001

FIG-5301
INSTRUMENT PANEL & FLOOR

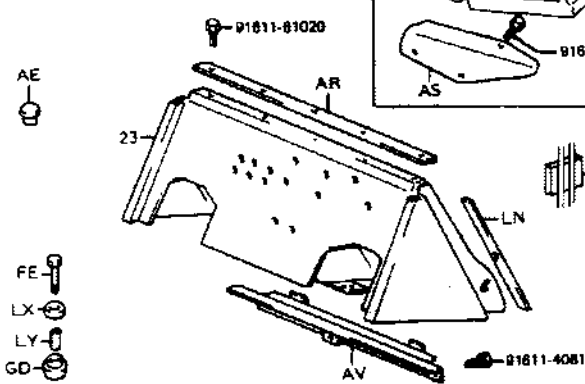 
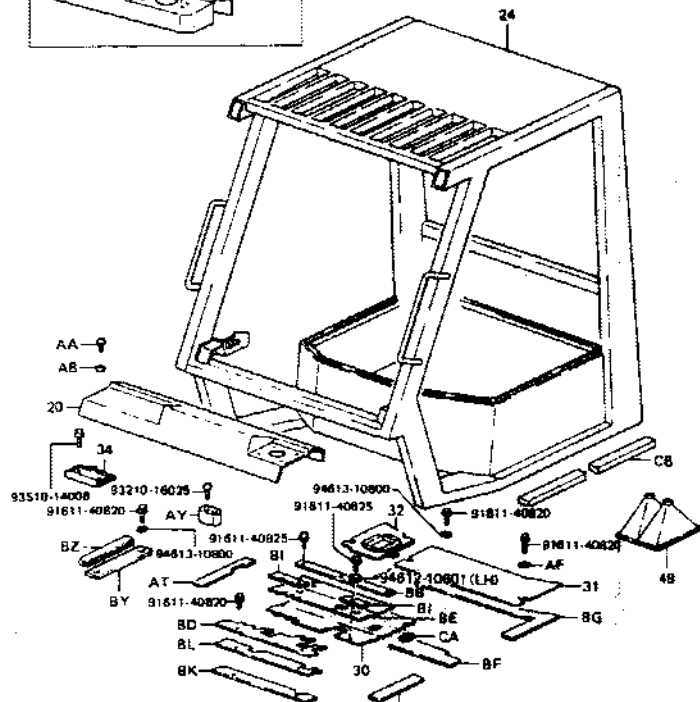 
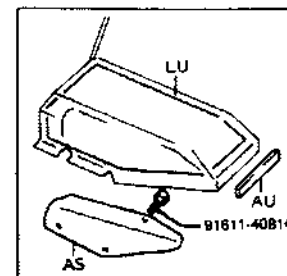 
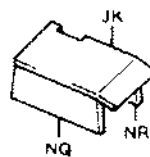 
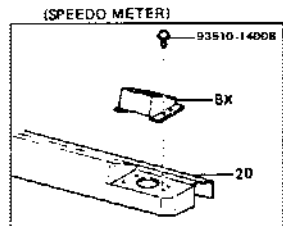 
5301

ATM


87/08

ATM (ALL WEATHER)

ATM (DELUXE CABIN) (1/2)



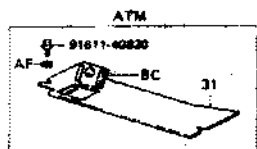 - FE
- LX
- LY
- GD
- FB
- NL
- FE
- LX
- LY
- GD
- NL



5301 001A

- 94612-11600
- 94512-01600
- 94115-51600

5301-107B

Q300-002



PART NAME CODE	PART NAME	QTY
5301-20	PANEL SUB-ASSY, INSTRUMENT	1
5301-23	PROTECTOR SUB-ASSY, FR	1
5301-24	BODY SUB-ASSY	1
5301-30	TOE-BOARD SUB-ASSY, NO.1	1
5301-31	TOE-BOARD SUB-ASSY, NO.2	1
5301-34	CLAMP SUB-ASSY, PAPER	1
5301-AA	SCREW	4
5301-AC	PLUG	1
5301-AD	PLUG	1
5301-AE	PLUG	1
5301-AF	WASHER, PLATE	2
5301-AK	EDGE, RH	1
5301-AL	EDGE, LH	1
5301-AM	SPRING	1
5301-AN	RUBBER, REAR TOE-BOARD	1
5301-AR	RUBBER, BODY SEAL	1
5301-AS	COVER, TILT CYLINDER SIDE	1
5301-AT	RUBBER, TOE-BOARD SIDE	1
5301-AU	SEAL	2
5301-AV	BRACKET SUB-ASSY, TOE-BOARD REAR	1
5301-AW	CUSHION	8
5301-AX	CUSHION, FRONT	1
5301-AY	RUBBER, CUSHION	2
5301-AZ	CUSHION, REAR	2
5301-BA	SEAL, TILT CYLINDER COVER	2
5301-BB	PLATE, RUBBER SET, REAR	1
5301-BC	RUBBER, TOE-BOARD COVER	1 - 2
5301-BD	BRACKET SUB-ASSY, TOE-BOARD	1
5301-BE	RUBBER, TOE-BOARD, UPPER	1
5301-BF	RUBBER, TOE-BOARD, REAR	1
5301-BG	SEAL, RUBBER	1
5301-BI	PLATE, RUBBER SET, FRONT	1
5301-BK	RUBBER, TOE-BOARD, LOWER	1
5301-BL	RUBBER, BRACKET	1
5301-BM	SEAL, RUBBER NO.2	1
5301-BN	SEAL, RUBBER NO.3	2
5301-BO	PAD	1
5301-BP	WASHER, PLATE	2
5301-BR	PAD	3
5301-BT	SAFETY WALK	1
5301-BU	SAFETY WALK	1
5301-BV	BOLT	4
5301-BW	BOLT	4
5301-BX	PLATE, SPEEDOMETER	1
5301-CA	RUBBER, TOE-BOARD, SIDE	2
5301-CB	SEAL	1
5301-CN	PLATE	1
5301-CQ	PLATE	1
5301-CU	RUBBER	1
5301-CW	RUBBER	1
5301-CY	RUBBER	1
5301-DA	RUBBER	1
5301-EQ	PLATE, RUBBER	1
5301-FB	SPACER	2
5301-FE	BOLT	2
5301-FN	PLATE	2
5301-FO	RUBBER	1
5301-GD	INSULATOR	4
5301-JK	RUBBER	1
5301-JN	RUBBER	1
5301-JQ	RUBBER	1
5301-LH	SEAL	2
5301-LP	FOAM, REAR TOE-BOARD	1
5301-LQ	FOAM, FRONT TOE-BOARD	1

PART NAME CODE	PART NAME	QTY
5301-LB	FOAM, REAR TOE-BOARD	1
5301-LT	RUBBER, TOE-BOARD, FRONT	1
5301-LU	RUBBER, TILT COVER	1
5301-LV	RUBBER, TOE-BOARD, UPPER	1
5301-LW	FOAM, SEAT STAND	1
5301-LX	INSULATOR, CAB MOUNTING, UPR	4
5301-LY	PIPE	2
5301-MC	RUBBER, TOE-BOARD	2
5301-MD	SEAL, ENGINE HOOD, LOWER	2
5301-NL	SPACER	4
5301-NM	FOAM	1
5301-NN	FOAM	1
5301-NQ	FOAM	1
5301-NP	FOAM	1
5301-NR	FOAM	1
5301-NS	FOAM	2
		1

5308

ATM

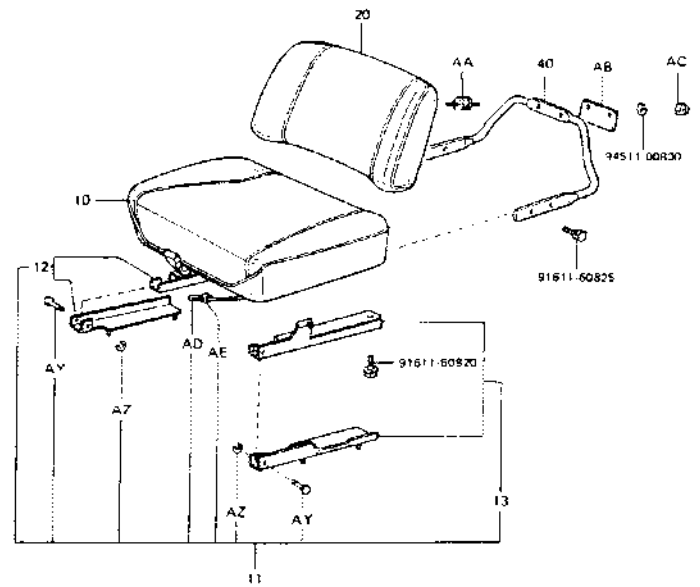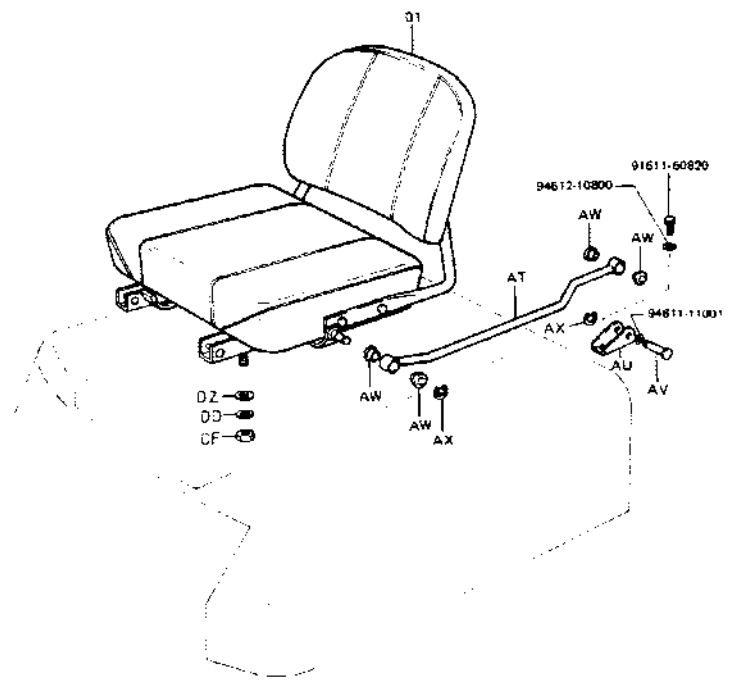  ATM




5308-006A

5308 603


G300-001

ATM (ALL WEATHER)

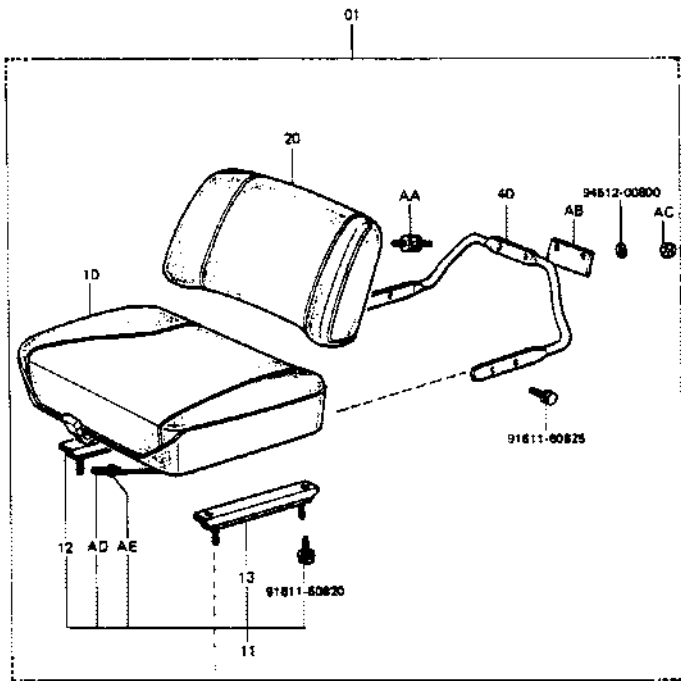 ATM (W/ABSORBER)



- DZ
- DO
- CF

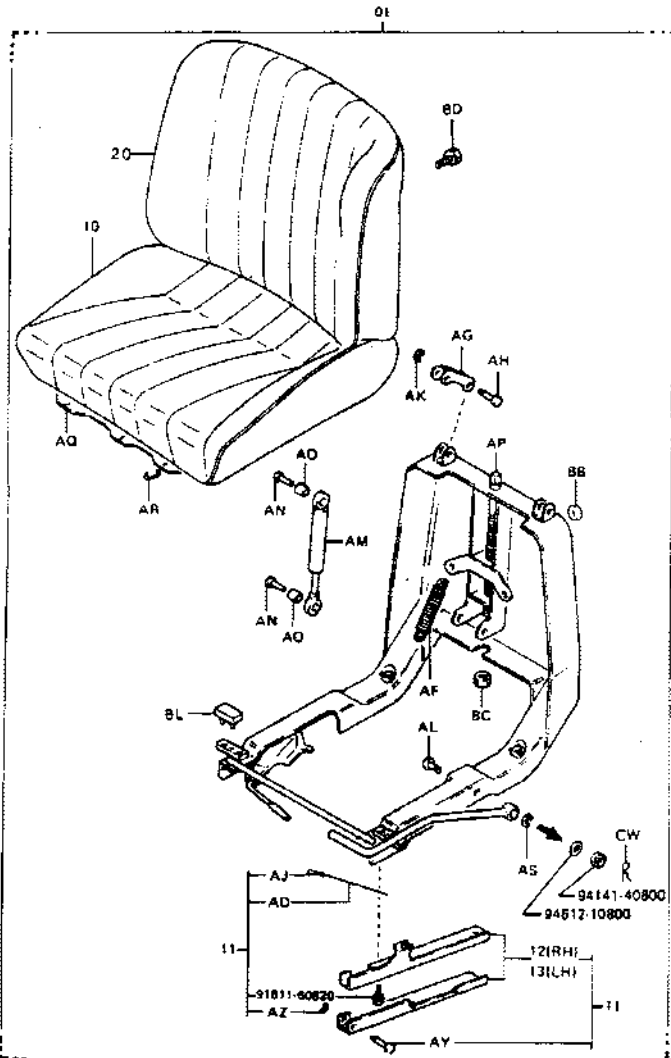 

5308-108

5308-0199
Q300-002

FIG. 5308
DRIVER SEAT

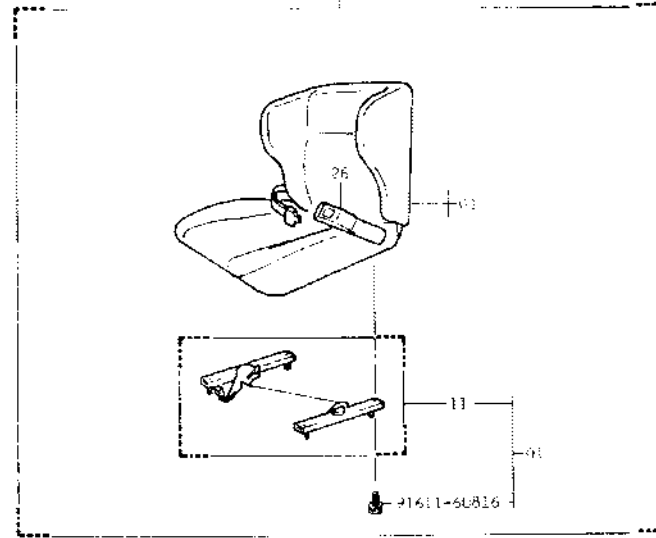 
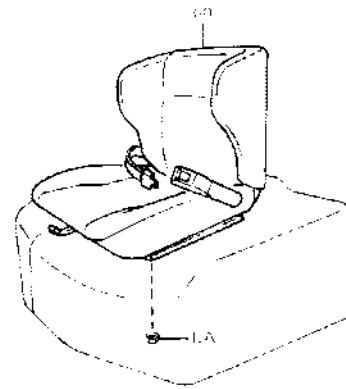 
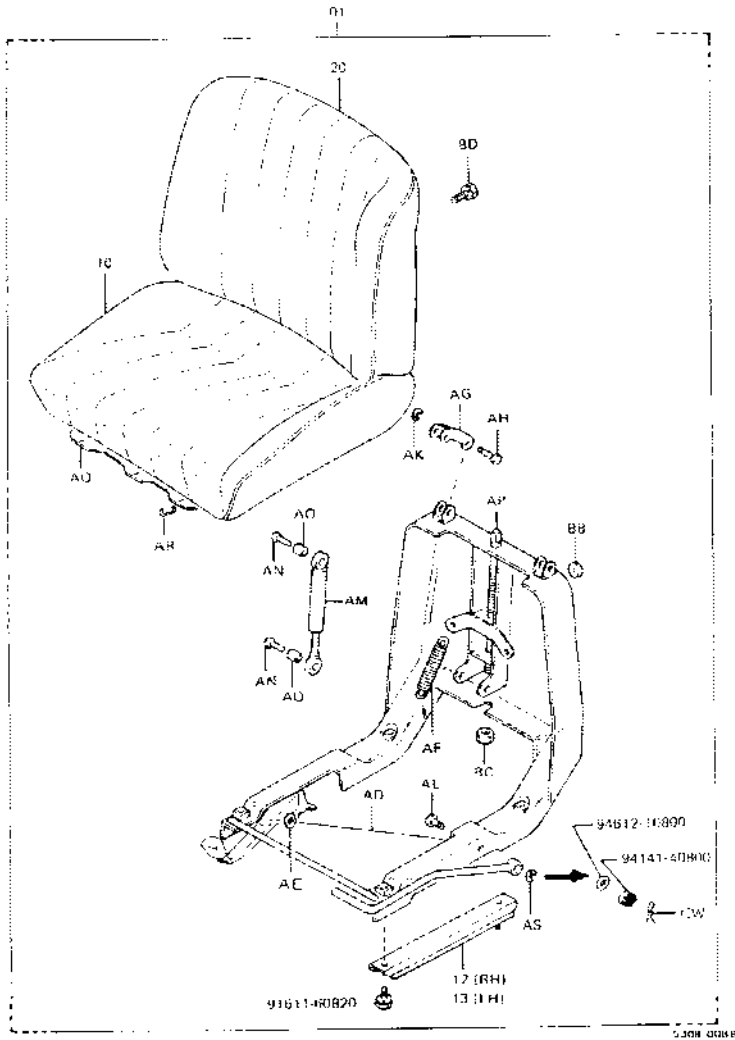 
5308

ATM

87/08

ATM (ALL WEATHER...W/ABSORBER)

ATM (ORS)



5308-109A

G300-003

PART NAME	PART NAME	QTY
CODE		
5308-00	SEAT ASSY, W/BELT	1
5308-01	SEAT ASSY	1
5308-10	CUSHION ASSY	1
5308-11	TRACK ASSY	1
5308-12	TRACK ASSY, SEAT OUTER, RH	1
5308-13	TRACK ASSY, SEAT OUTER, LH	1
5308-20	SEAT SUB-ASSY, BACK	1
5308-26	BELT ASSY, SEAT	1
5308-40	FRAME, BACK SEAT	1
5308-AA	RUBBER, VIBRATION ISOLATOR	2
5308-AB	BRACKET, NUMBER PLATE	1
5308-AC	NUT, CAP	2
5308-AD	WIRE	1
5308-AE	WASHER	2
5308-AF	SPRING, TENSION, BACK SEAT	2
5308-AQ	LINK	2
5308-AH	PIN	4
5308-AJ	COIL, SPRING	2
5308-AK	RING, E	4
5308-AL	PIN, NO.2	2
5308-AM	ABSORBER, SHOCK	1
5308-AN	PIN, NO.3	2
5308-AD	BUSH	2
5308-AP	ADJUSTER, ROD	1
5308-AQ	RUBBER, SEAT CUSHION	1
5308-AR	HODK, SEAT CUSHION	10
5308-AS	RING, E	2
5308-AT	STAY SUB-ASSY, SEAT	1
5308-AU	BRACKET, SEAT STAY	1
5308-AV	PIN	1
5308-AW	BUSH	4
5308-AX	RING, E	2
5308-AY	PIN	2
5308-AZ	RING, E	2
5308-BB	CUSHION	1
5308-BC	NUT, STOPPER	1
5308-BL	CUSHION	1
5308-CF	NUT	4
5308-CW	PIN, CUTTER	2
5308-EA	NUT	4


FIG. 5401
HEAD GUARD & ACCESSORY

5401

ATM

85/04

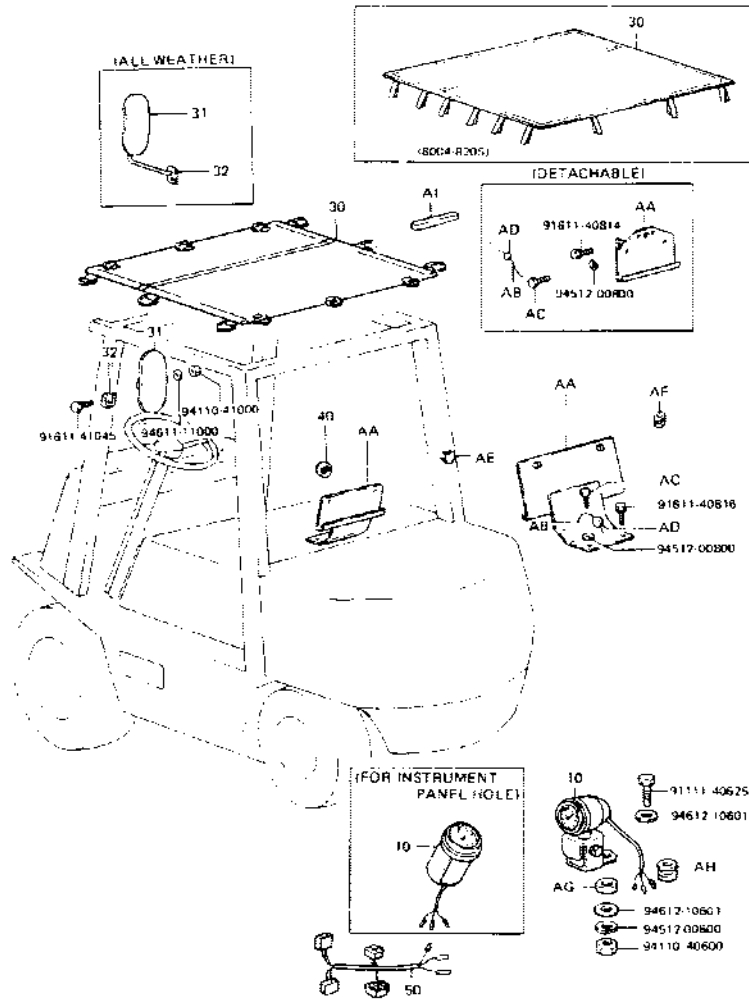 ATM













PART NAME	PART NAME	QTY
5401-10	CLOCK ASSY	1
5401-30	SHEET SUB-ASSY, HEAD GUARD	1
5401-31	MIRROR SUB-ASSY, BACK	2
5401-32	BRACKET SUB-ASSY, BACK MIRROR	2
5401-40	REFLECTOR	1
5401-50	HARNESS SUB-ASSY, CLOCK	1
5401-AA	BRACKET SUB-ASSY, LICENCE PLATE	1
5401-AB	WIRE	1
5401-AC	BOLT, HEAD W/HOLE HEXAGON	1- 2
5401-AD	SEAL, ROD	1
5401-AE	PLUG, HOLE	2
5401-AF	GROMMET	1
5401-AG	CUSHION, RUBBER	2
5401-AH	GROMMET	1
5401-AI	CUSHION, SEAT	2

5401-003A

ATM

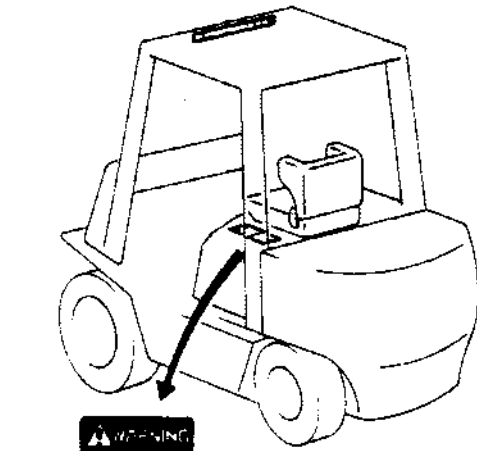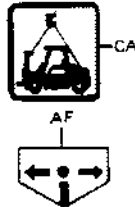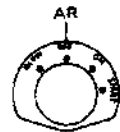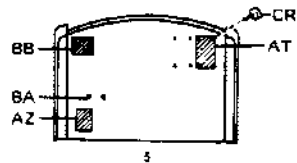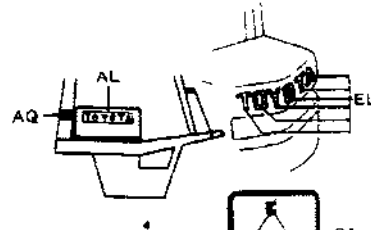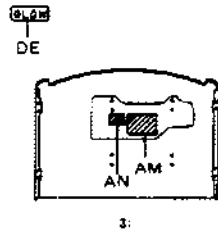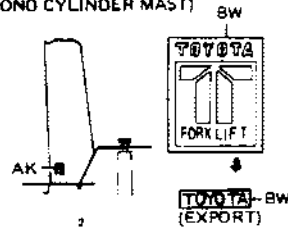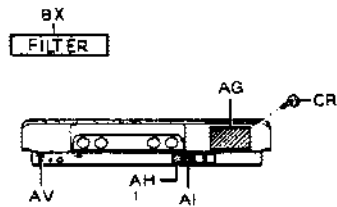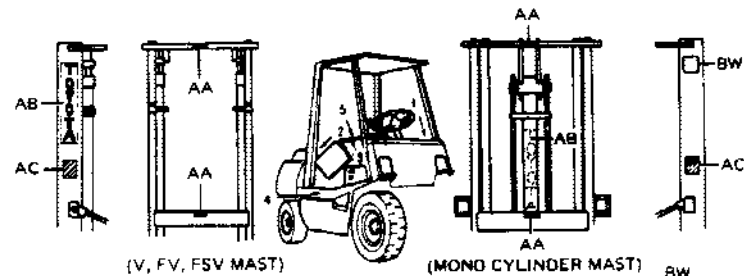          ATM (DRS)



5405-003G



5405-227

G300-001

PART NAME CODE	PART NAME	QTY
5405-AA	PLATE, CAUTION	2
5405-AB	MARK, TOYOTA	1- 2
5405-AC	PLATE, CAUTION	2
5405-AF	PLATE, SHIFT LEVER INDICATOR	1
5405-AG	PLATE, LOAD INDICATOR	1
5405-AH	PLATE, LIFT INDICATOR	1
5405-AI	PLATE, TILT INDICATOR	1
5405-AK	PLATE, INDICATOR	1
5405-AL	MARK, TOYOTA	2
5405-AM	PLATE, SERVICE INDICATOR	1
5405-AN	PLATE, INDICATOR	1
5405-AQ	PLATE, CAPACITY INDICATOR	2
5405-AR	PLATE, CAUTION	1
5405-AT	PLATE, CAUTION	1
5405-AV	PLATE, ACCUMULATOR INDICATOR	1
5405-AZ	PLATE, CAUTION	1
5405-BA	MARK, DELTA	1
5405-BB	PLATE, INDICATOR	1
5405-BW	MARK, SYMBOL	2
5405-BX	PLATE, INDICATOR	1
5405-CA	PLATE, CAUTION	1
5405-CR	RIVET	4
5405-OE	PLATE, INDICATOR	1
5405-OF	PLATE, INDICATOR	1
5405-DL	PLATE, INDICATOR	1
5405-EL	MARK, TOYOTA	1

ATM (DELUXE CABIN) (1/2)

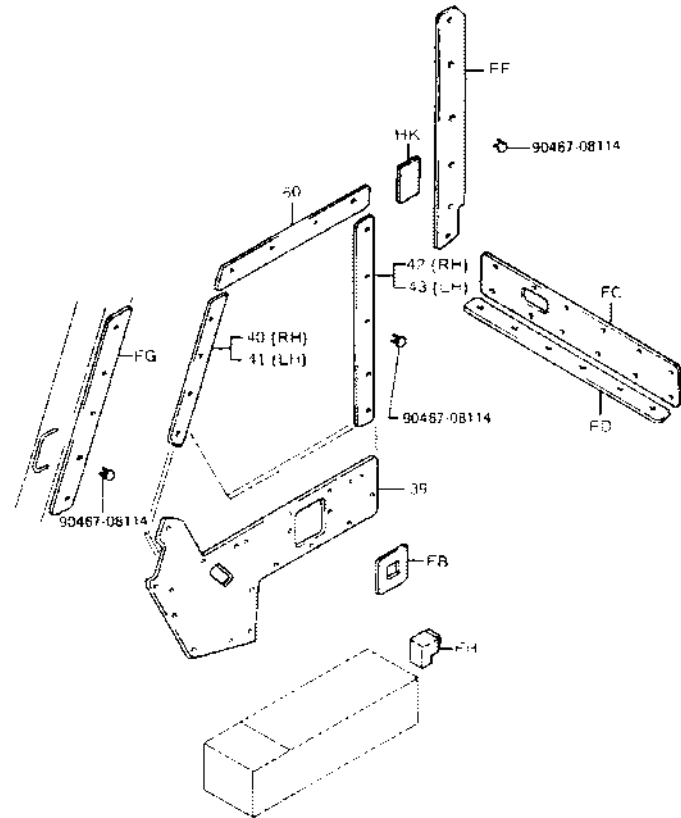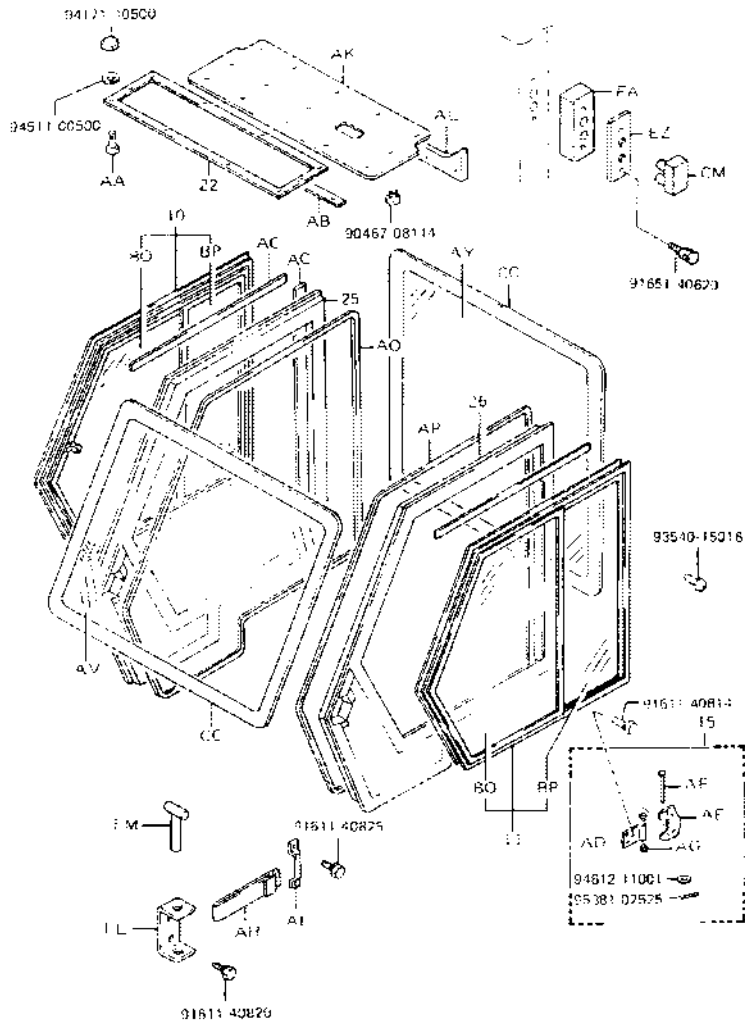  ATM (DELUXE CABIN) (2/2)



5501-026A


5501-024B

G300-002

PART NAME CODE	PART NAME	QTY
5501-10	WINDOW ASSY, DOOR, RH	1
5501-11	WINDOW ASSY, DOOR, LH	1
5501-15	HINGE ASSY, DOOR	2
5501-20	WINDOW SUB-ASSY, FR, FIXED	1
5501-21	WINDOW SUB-ASSY, RR, FIXED	1
5501-22	WINDOW SUB-ASSY, UPR, FIXED	1
5501-25	DOOR SUB-ASSY, RH	1
5501-26	DOOR SUB-ASSY, LH	1
5501-39	BOARD, DOOR TRIM, LWR	1
5501-40	BOARD, DOOR TRIM, FR, RH	1
5501-41	BOARD, DOOR TRIM, FR, LH	1
5501-42	BOARD, DOOR TRIM, RR, RH	1
5501-43	BOARD, DOOR TRIM, RR, LH	1
5501-40	BOARD, DOOR TRIM, UPR	1
5501-AA	SCREW	10
5501-AB	SEAL, RUBBER	4
5501-AC	SEAL, RUBBER	9
5501-AD	HINGE SUB-ASSY, NO.1	4
5501-AE	HINGE SUB-ASSY, NO.2	4
5501-AF	PIN, HINGE	4
5501-AG	BUSH	8
5501-AH	BELT, DOOR STOPPER	2
5501-AI	BRACKET, BELT	2
5501-AJ	CLIP	26
5501-AK	BOARD, ROOF TRIM	1
5501-AL	BOARD, ROOF TRIM	1
5501-AM	CLIP	5
5501-AN	PLATE, ROOF TRIM BOARD SET	1
5501-AD	WEATHERSTRIP, DOOR, RH	1
5501-AP	WEATHERSTRIP, DOOR, LH	1
5501-AT	FRAME SUB-ASSY, FRONT FIXED WINDOW	1
5501-AU	WEDGE, RUBBER	2
5501-AV	GLASS, FRONT FIXED	1
5501-AW	FRAME SUB-ASSY, REAR FIXED WINDOW	1
5501-AX	WEDGE, RUBBER	1
5501-AY	GLASS, REAR FIXED	1
5501-AZ	FRAME SUB-ASSY, UPPER FIXED WINDOW	1
5501-BA	WEDGE, RUBBER	1
5501-BB	GLASS, UPPER FIXED	1
5501-BC	FRAME SUB-ASSY, SIDE WINDOW	1
5501-BD	FRAME SUB-ASSY, INNER, FRONT	1
5501-BE	FRAME SUB-ASSY, INNER	2
5501-BF	FRAME, SIDE WINDOW, UPPER	1
5501-BG	WEATHERSTRIP, OUTER	2
5501-BH	WEATHERSTRIP, INNER	2
5501-BI	WEDGE, RUBBER	2
5501-BJ	HANDLE ASSY, SIDE WINDOW CATCH	2
5501-BK	BRACKET, SIDE WINDOW, INNER, SIDE	4
5501-BL	BRACKET, CATCH	4
5501-BM	BRACKET, SIDE WINDOW, SIDE	4
5501-BN	SPACER, SIDE WINDOW, FRONT SIDE	2
5501-BO	GLASS, DOOR FIXED WINDOW	2
5501-BP	GLASS, DOOR SLIDE WINDOW	2
5501-CC	WEATHERSTRIP	2
5501-CM	RUBBER, CUSHION	2
5501-EZ	PLATE	2
5501-FA	SPACER	2
5501-FB	SPONGE	1
5501-FC	BOARD, RR PROTECTOR TRIM, NO.1	1
5501-FD	BOARD, RR PROTECTOR TRIM, NO.2	1
5501-FF	BOARD, RR PILLAR	1
5501-FG	BOARD, STAY	1
5501-FH	RECEPTACLE ASSY, RR	1
5501-FL	BRACKET, BELT	2

PART NAME CODE	PART NAME	QTY
5501-FH	PIN, DOOR STOPPER	2

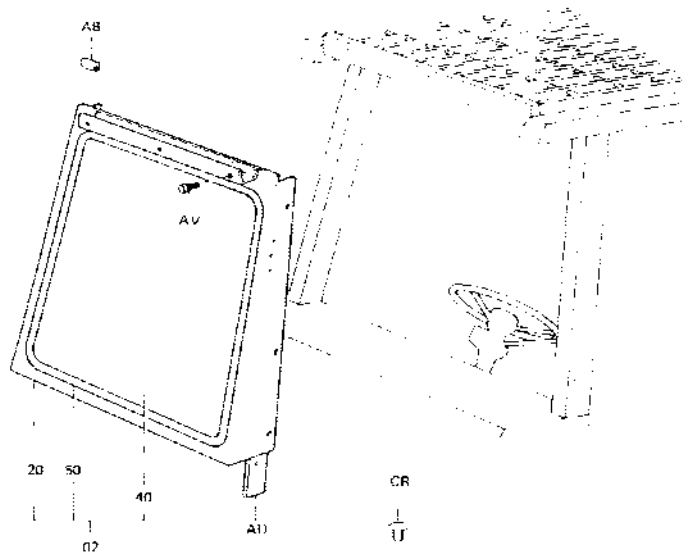 ATM(FRONT GLASS)





PART NAME	PART NAME	QTY
CODE		
5502-02	PANEL ASSY. FRONT GLASS	1
5502-20	PANEL SUB-ASSY. FRONT GLASS	1
5502-40	GLASS, WINDSHIELD	1
5502-50	WEATHER STRIP	1
5502-AB	SEAL, RUBBER	1
5502-AD	RUBBER, WINDSHIELD	2
5502-AV	BOLT, W/WASHER	11
5502-CR	PLUG, HOLE	1

5502 (REV. 0)

ATM (ALL WEATHER)

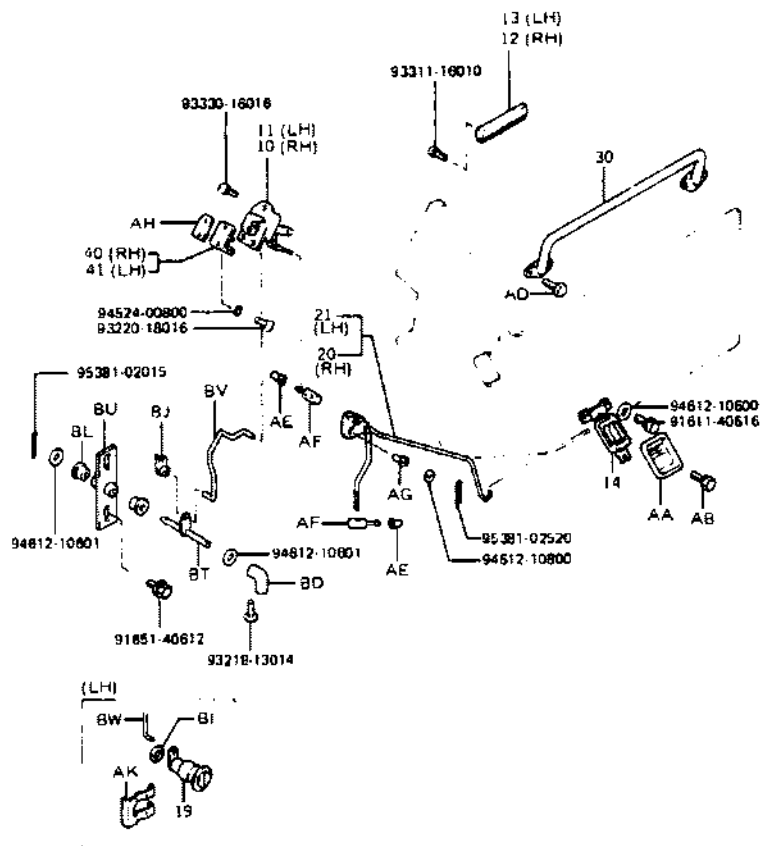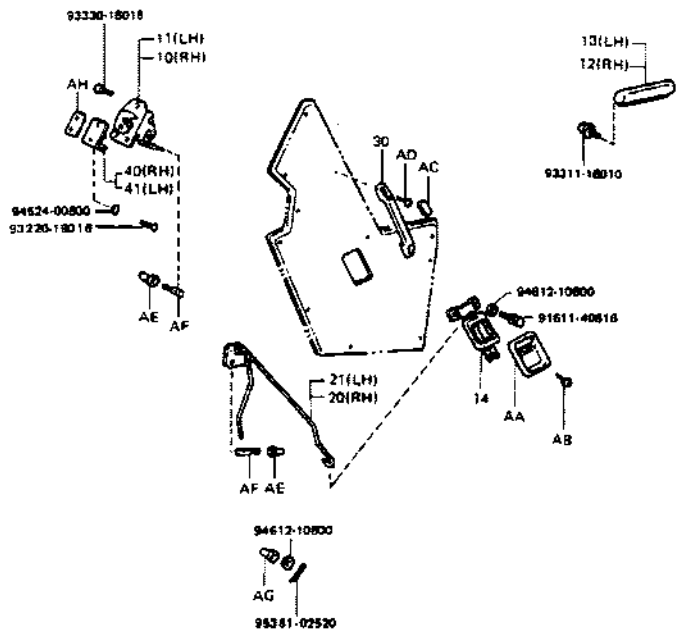  ATM (DELUXE CABIN)





5504-001

5504 013A

PART NAME CODE	PART NAME	QTY
5504-10	LOCK ASSY, DOOR, RH	1
5504-11	LOCK ASSY, DOOR, LH	1
5504-12	HANDLE ASSY, FRONT DOOR OUTSIDE, RH	1
5504-13	HANDLE ASSY, FRONT DOOR OUTSIDE, LH	1
5504-14	HANDLE ASSY, DOOR INSIDE	2
5504-19	CYLINDER & KEY SET, DOOR LOCK, LH	1
5504-20	LINK SUB-ASSY, DOOR W/ROD, RH	1
5504-21	LINK SUB-ASSY, DOOR W/ROD, LH	1
5504-30	GRIP SUB-ASSY, ASSIST	2
5504-40	STRIKER, DOOR LOCK, RH	1
5504-41	STRIKER, DOOR LOCK, LH	1
5504-AA	CASE, DOOR INSIDE HANDLE	2
5504-AB	SCREW	2
5504-AC	PLUG, ASSIST GRIP	4
5504-AD	SCREW, W/WASHER	4
5504-AE	BUSHING	2
5504-AF	JOINT, ADJUSTING	2
5504-AG	BUSHING	1
5504-AH	SHIM, DOOR LOCK STRIKER	4
5504-AK	CLAMP	1
5504-BD	KNOB	1
5504-BI	PAD	1
5504-BJ	SNAP	1
5504-HI	BUSH	2
5504-BT	LINK SUB-ASSY, DOOR LOCK	1
5504-BU	BOSS SUB-ASSY, DOOR LOCK LINK	1
5504-BV	ROD, DOOR LOCK, RH	1
5504-BW	ROD, DOOR LOCK, LH	1

ATM

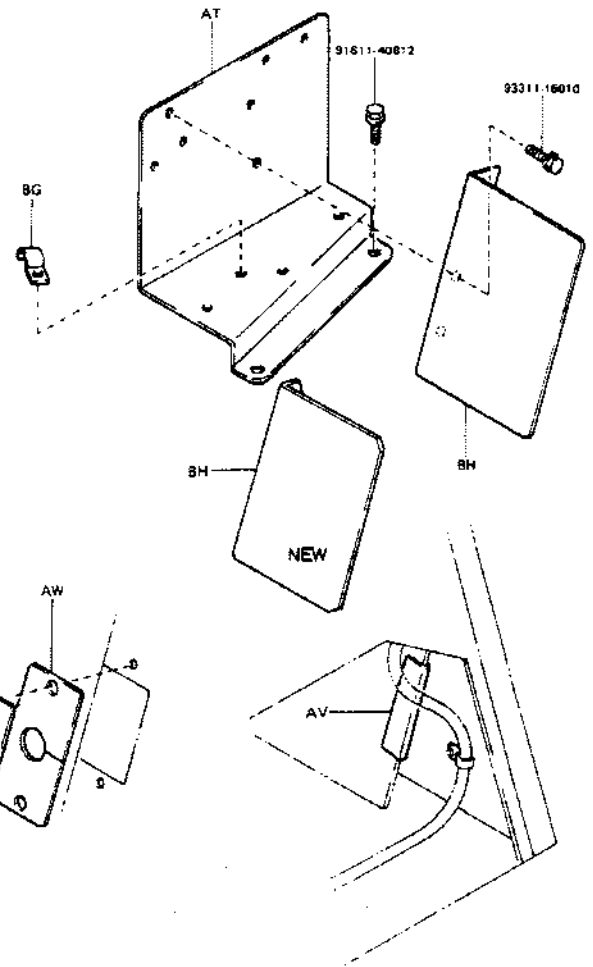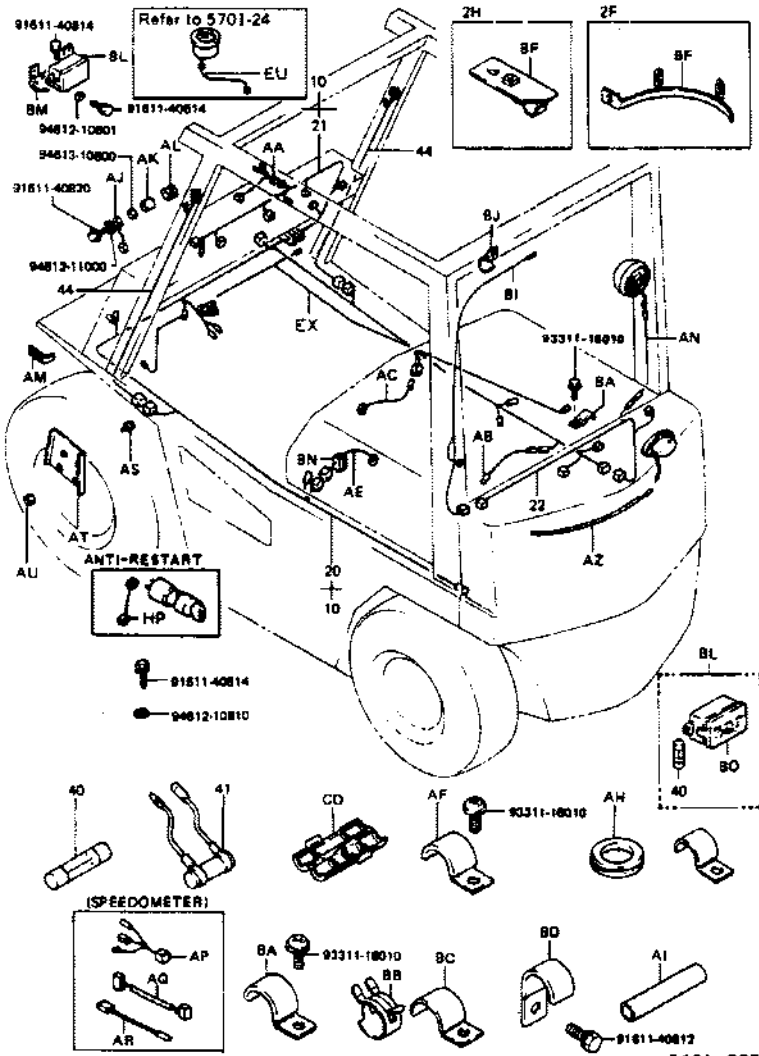  ATM (ALL WEATHER)




5601-003E


5601-005

G300-001


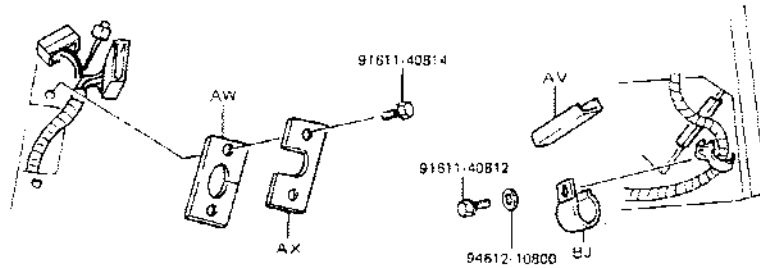 
ATM (DELUXE CABIN)




(ELECTRICAL PARTS PLATE)

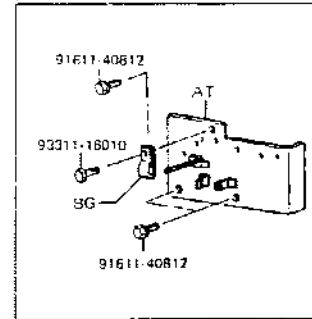 


(HEAD LAMP HARNESS)

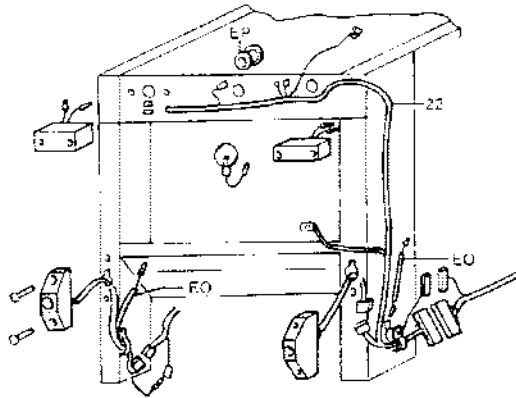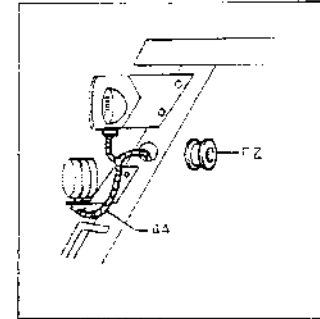  

(DOOR SWITCH)

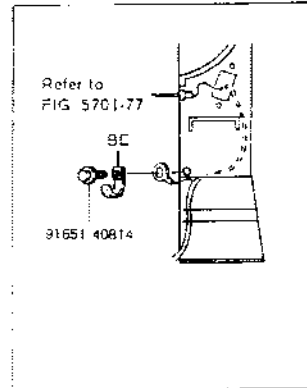 

(FRONT PROTECTOR)

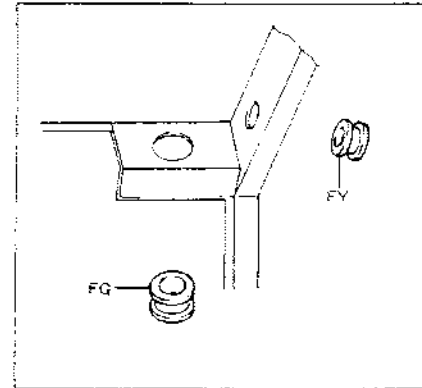 


5601-067A

G300-002














PART NAME CODE	PART NAME	QTY
5601-10	HARNESS ASSY, WIRING	1
5601-20	HARNESS SUB-ASSY, MAIN	1
5601-21	HARNESS SUB-ASSY, PANEL	1
5601-22	HARNESS SUB-ASSY, RR	1
5601-40	FUSE	1
5601-41	RESISTOR	3
5601-44	CORD, FRONT LAMP	2
5601-AA	CORD, OIL PRESSURE	1
5601-AB	CORD, WATER TEMPERATURE	1
5601-AC	CORD, TORCON HEAT GAGE	1
5601-AE	HARNESS, WIRE	1
5601-AF	CLAMP	1
5601-AH	GROMMET	2
5601-AI	TUBE	1
5601-AJ	WIRE, LAMP BRACKET EARTH	2
5601-AK	COLLAR	4
5601-AL	WASHER, RUBBER	4
5601-AM	CLAMP	6
5601-AN	CORD, WORKING LAMP	1
5601-AP	CORD, SPEEDMETER	1
5601-AQ	CORD, SPEEDMETER	1
5601-AS	BOLT, W/WASHER	2
5601-AT	PLATE SUB-ASSY	1
5601-AU	SPONGE	2
5601-AV	GROMMET	1
5601-AW	SEAL, HARNESS HOLE	1
5601-AX	PLATE, HARNESS HOLE	1
5601-AZ	CORD, LICENCE LAMP	1
5601-BA	CLAMP	2
5601-BB	CLIP	1
5601-BC	CLAMP	2
5601-BD	CLAMP, ENGINE WIRE HARNESS	1
5601-BE	CLAMP	1
5601-BF	CLAMP SUB-ASSY	1
5601-BG	CLAMP	1
5601-BH	COVER, OIL	1
5601-BI	HARNESS SUB-ASSY, WORKING & LICENCE	1
5601-BJ	CLAMP	1
5601-BM	BRACKET SUB-ASSY, FUSE BLOCK	1
5601-BO	COVER, FUSE BLOCK	1
5601-CO	HOLDER, FUSE	1
5601-EO	CORD, OODR SWITCH	2
5601-EP	GROMMET	2
5601-EQ	WASHER, RUBBER	2
5601-EU	CORD, HOUR METER	1
5601-FY	GROMMET	2
5601-FZ	GROMMET	1
5601-HP	HARNESS	1

5611

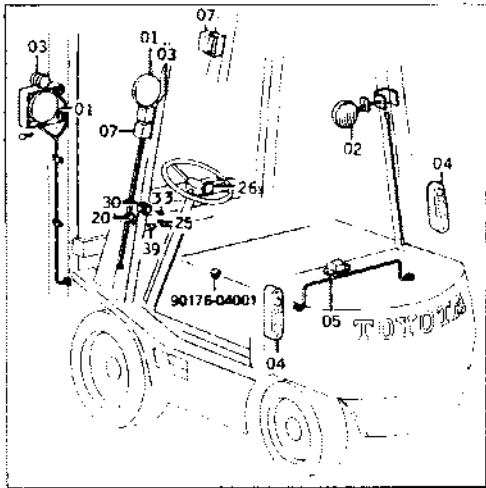 ATM



(DELUXE CABIN)

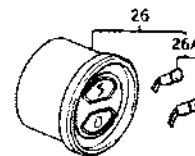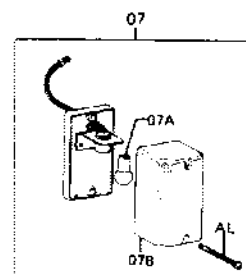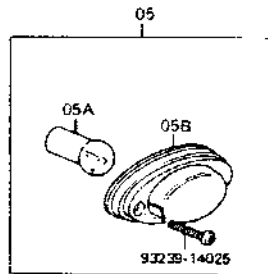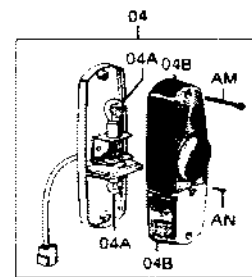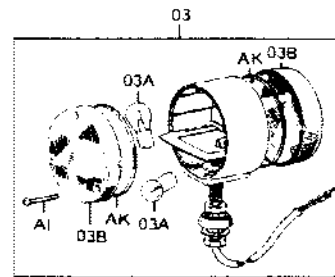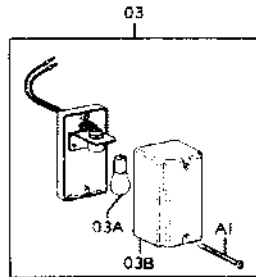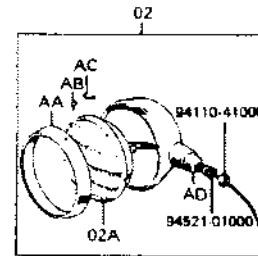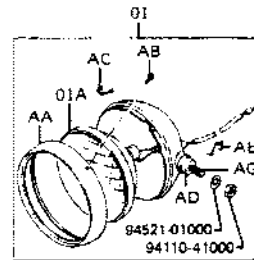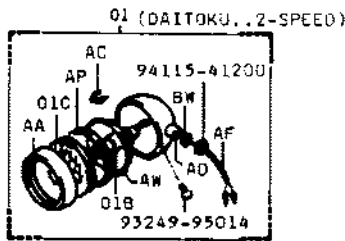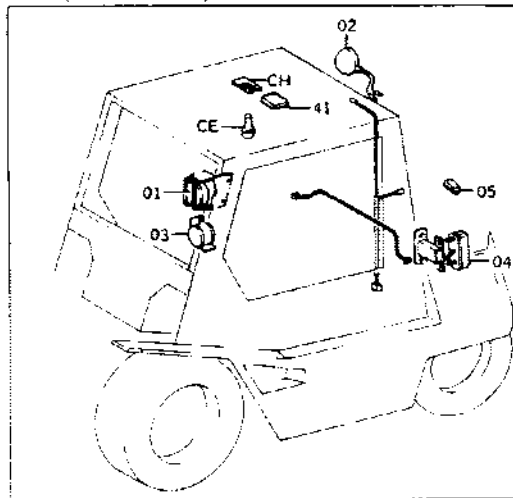             

5611-003F

G300-001

PART NAME	PART NAME	QTY
CODE		
5611-01	LAMP ASSY, HEAD	2
5611-01A	UNIT, SEALBEAM (FOR HEAD LAMP)	2
5611-02	LAMP ASSY, WORKING	1
5611-02A	UNIT, SEALBEAM (FOR WORKING LAMP)	2
5611-03	LAMP ASSY, FLASHER	2
5611-03A	BULB (FOR FLASHER LAMP)	2
5611-03B	LENS (FOR FLASHER LAMP)	2
5611-04	LAMP ASSY, REAR COMBINATION	1
5611-04A	BULB (FOR REAR COMBINATION LAMP)	1
5611-04B	LENS (FOR REAR COMBINATION LAMP)	1
5611-05	LAMP ASSY, LICENCE	1
5611-05A	BULB (FOR LICENCE LAMP)	1
5611-05B	LENS (FOR LICENCE LAMP)	1
5611-07	LAMP ASSY, CLEARANCE	2
5611-07A	BULB (FOR CLEARANCE LAMP)	2
5611-07B	LENS (FOR CLEARANCE LAMP)	2
5611-20	LAMP ASSY, ACCUMULATOR PILOT	1
5611-23	LAMP ASSY, OIL PRESSURE PILOT	1
5611-24	LAMP ASSY, CHARGE WARNING	1
5611-25	LAMP ASSY, WORKING PILOT	1
5611-26	LAMP ASSY, COMBINATION PILOT	1
5611-26A	BULB (FOR COMBINATION PILOT LAMP)	2
5611-33	LAMP ASSY, PILOT (FOR SEDIMENTER)	1
5611-39	LAMP ASSY, PILOT (FOR GLOW)	1
5611-41	LAMP ASSY, ROOM	1
5611-AA	RING	2
5611-AB	SCREW	2
5611-AC	SPRING, SET	6
5611-AD	SPACER	2
5611-AE	SPRING, SET	2
5611-AG	BOLT	2
5611-AI	SCREW	4
5611-AK	PACKING	4
5611-AL	SCREW	4
5611-AM	SCREW	2
5611-AN	SCREW, TAP	2
5611-CE	SCREW	4
5611-CH	SPACER	1


FIG. 5612
LAMP BRACKET

5612


ATM

87/08

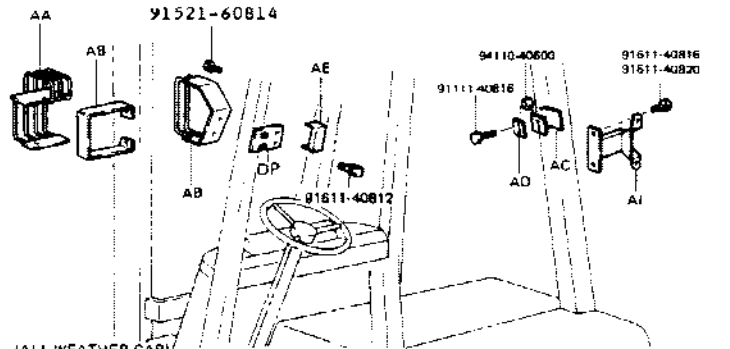 
ATM



(ALL WEATHER CAB)

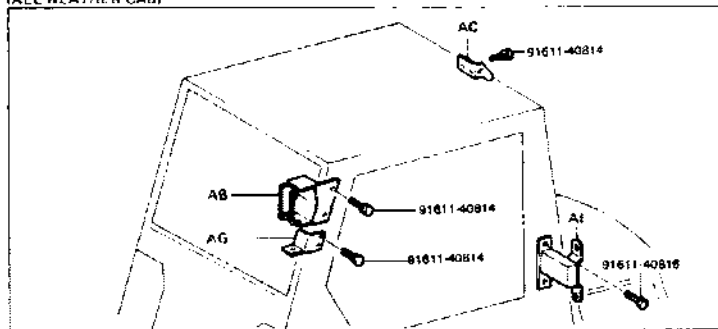 

(FRONT GLASS)

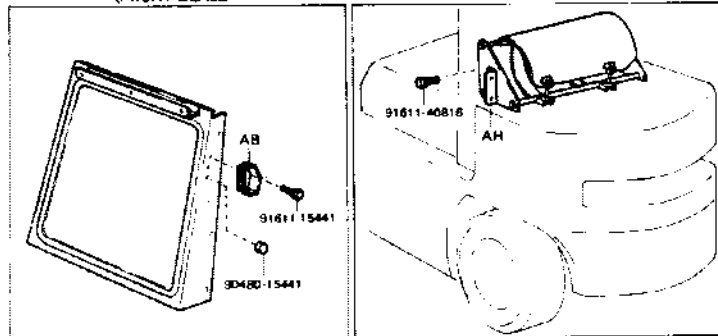 

5612-003B

PART NAME	PART NAME	QTY
5612-AA	PROTECTOR SUB-ASSY, HEAD LAMP	1
5612-AB	BRACKET SUB-ASSY, HEAD LAMP	1
5612-AC	BRACKET, BACK LAMP	1
5612-AD	PLATE	1
5612-AE	COVER, CLEARANCE LAMP	2
5612-AG	BRACKET, FLASHER LAMP	1
5612-AH	BRACKET, REAR LAMP	2
5612-AI	BRACKET SUB-ASSY, COMBINATION LAMP	1
5612-OP	BRACKET SUB-ASSY, HEAD LAMP	2

G300-001E


FIG. 5701
METER & SWITCH

5701

ATM

86/08

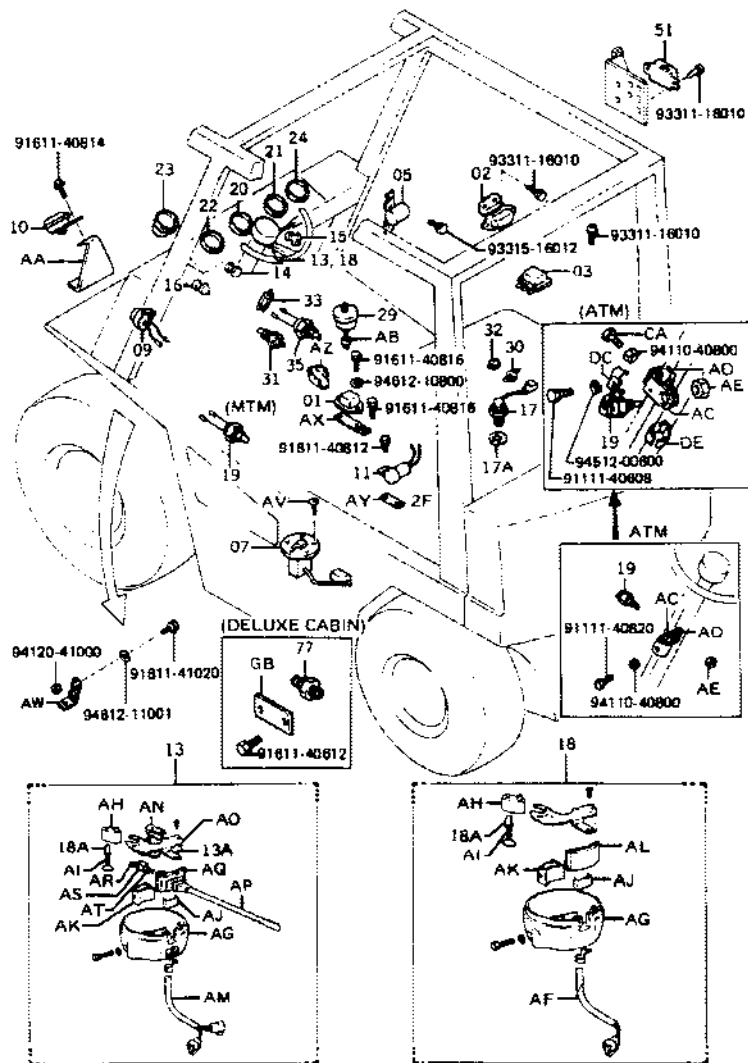 ATM



PART NAME CODE	PART NAME	QTY
5701-01	REGULATOR ASSY, GENERATOR	1
5701-02	RELAY ASSY, STARTER	1
5701-03	RELAY ASSY, GLOW PLUG	1
5701-05	RELAY ASSY, FLASHER	1
5701-07	UNIT ASSY, FUEL	1
5701-09	BUZZER ASSY, ACCUMULATOR INDICATOR	1
5701-10	HORN ASSY	1
5701-11	BUZZER ASSY, BACK	1
5701-13	SWITCH ASSY, TURN SIGNAL	1
5701-13A	SWITCH ASSY, MICRO (FOR TURN SIGNAL SWITCH)	2
5701-14	SWITCH ASSY, LIGHT CONTROL	1
5701-15	SWITCH ASSY, IGNITION STARTER	1
5701-16	SWITCH ASSY, OVER INJECTION	1
5701-17	SWITCH ASSY, NEUTRAL SAFETY	1
5701-17A	GASKET (FOR NEUTRAL SAFETY SWITCH)	1
5701-18	SWITCH ASSY, HORN	1
5701-18A	CONTACT, HORN	1
5701-19	SWITCH ASSY, BACK-UP LAMP	1
5701-20	GAGE ASSY, FUEL	1
5701-21	GAGE ASSY, WATER TEMPERATURE (ENGINE)	1
5701-22	GAGE ASSY, TEMPERATURE (TORCON)	1
5701-23	GAGE ASSY, OIL PRESSURE (ENGINE)	1
5701-24	METER ASSY, HOUR	1
5701-29	GAGE ASSY, OIL PRESSURE SENDER (ENGINE)	1
5701-30	GAGE ASSY, WATER TEMPERATURE SENDER (ENGINE)	1
5701-31	GAGE ASSY, TEMPERATURE SENDER (TORCON)	1
5701-32	SWITCH ASSY, OIL PRESSURE (ENGINE)	1
5701-33	SWITCH ASSY, STOP LAMP	1
5701-35	SWITCH ASSY, ACCUMULATOR PILOT	2
5701-51	TIMER, PREHEATING	1
5701-77	SWITCH ASSY, COURTESY LAMP	2
5701-AA	BRACKET SUB-ASSY, HORN	1
5701-AB	BUSHING	1
5701-AC	PLATE, BACK UP LAMP SWITCH	1
5701-AD	CLAMP, BACK UP LAMP SWITCH	1
5701-AE	NUT, HEXAGON	1
5701-AF	HARNESS ASSY	1
5701-AG	BODY, SWITCH	1
5701-AH	HOLDER, HORN POINT	1
5701-AI	SPRING, HORN CONTACT	1
5701-AJ	COVER	1
5701-AK	BLOCK, LOCKING	1
5701-AL	COVER, RUBBER	1
5701-AM	HARNESS ASSY	1
5701-AN	ACTUATOR	2
5701-AO	PLATE, SWITCH	1
5701-AP	LEVER, SIGNAL	1
5701-AQ	BELLOWS	1
5701-AR	ROLLER	1
5701-AS	HOLDER, ROLLER	1
5701-AT	SPRING	1
5701-AV	SCREW	5
5701-AW	BRACKET SUB-ASSY, STOP SWITCH	1
5701-AX	BRACKET SUB-ASSY, REGULATOR	1
5701-AY	BRACKET SUB-ASSY, BACK BUZZER	1
5701-AZ	PLATE, COVER	1
5701-DC	CLAMP	1
5701-DE	CLIP	1
5701-DF	BOLT	1
5701-GB	COVER, ROOM LAMP SWITCH	2

1701-0038

G300-001E

FIG. 5706
SPEEDOMETER & SPEED ALARM

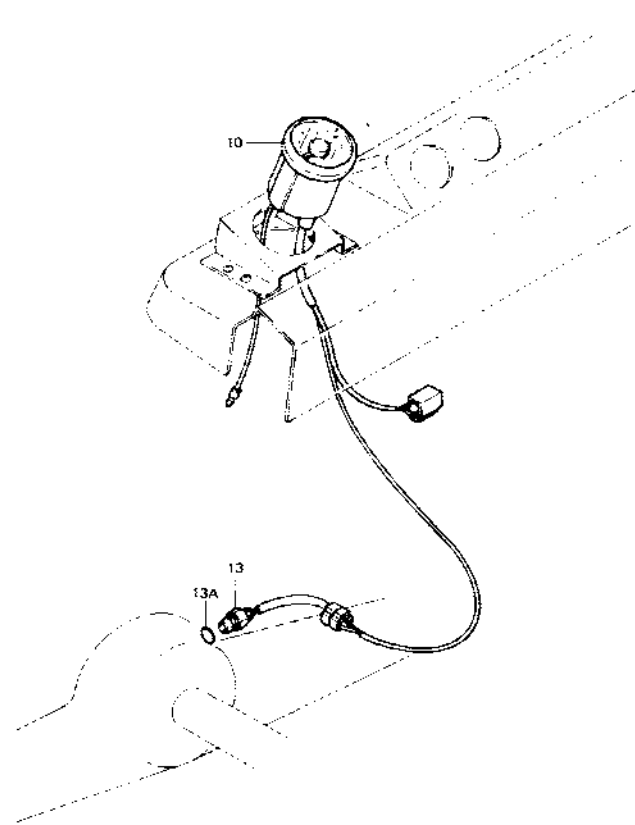 
5706

ATM



87/08

ATM (SPEEDOMETER)

ATM (SPEED ALARM)



5706 004

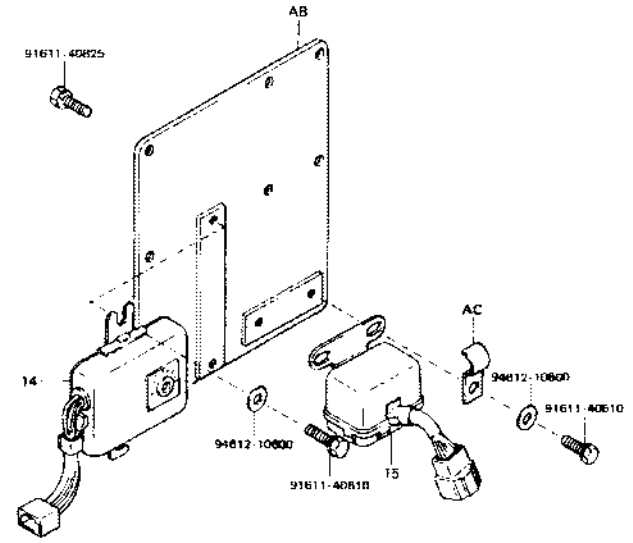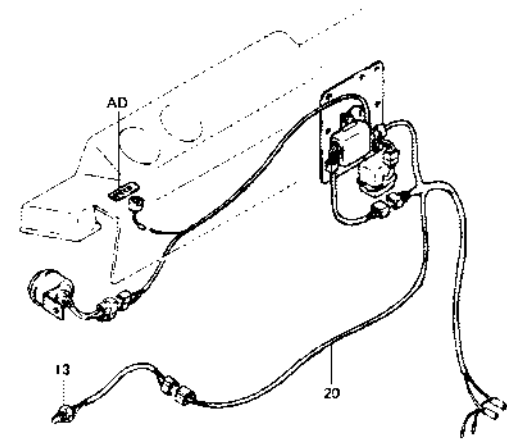  

5706-003

G 300-001

FIG 5706

SPEEDOMETER & SPEED ALARM

5706

ATM


87/08

PART NAME CODE	PART NAME	QTY
5706-10	SPEEDOMETER ASSY	1
5706-13	PICK-UP ASSY, SPEEDOMETER	1
5706-13A	GASKET (FOR SPEEDOMETER PICK-UP)	1
5706-14	BOX ASSY, SPEED ALARM	1
5706-15	RELAY ASSY	1
5706-20	HARNES SUB-ASSY, SPEED ALARM	1
5706-AB	BRACKET SUB-ASSY, SPEED ALARM	1
5706-AC	CLAMP	1
5706-AD	PLATE, SPEED INDICATOR	1


G300-002E

ATM (FRONT GLASS)

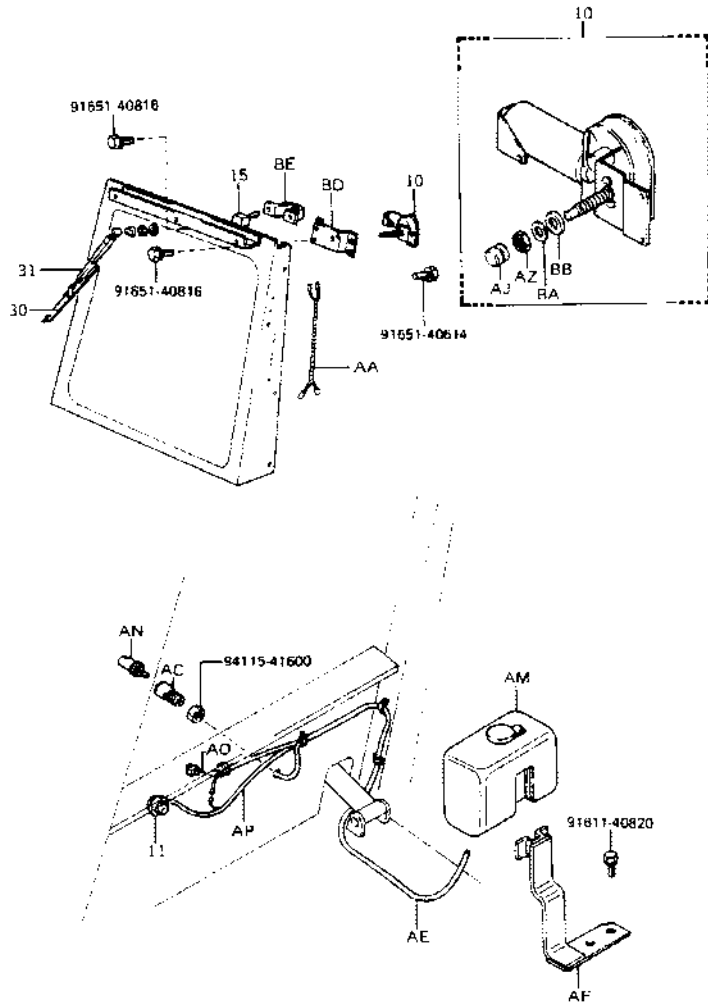 ATM (ALL WEATHER)



5801 018

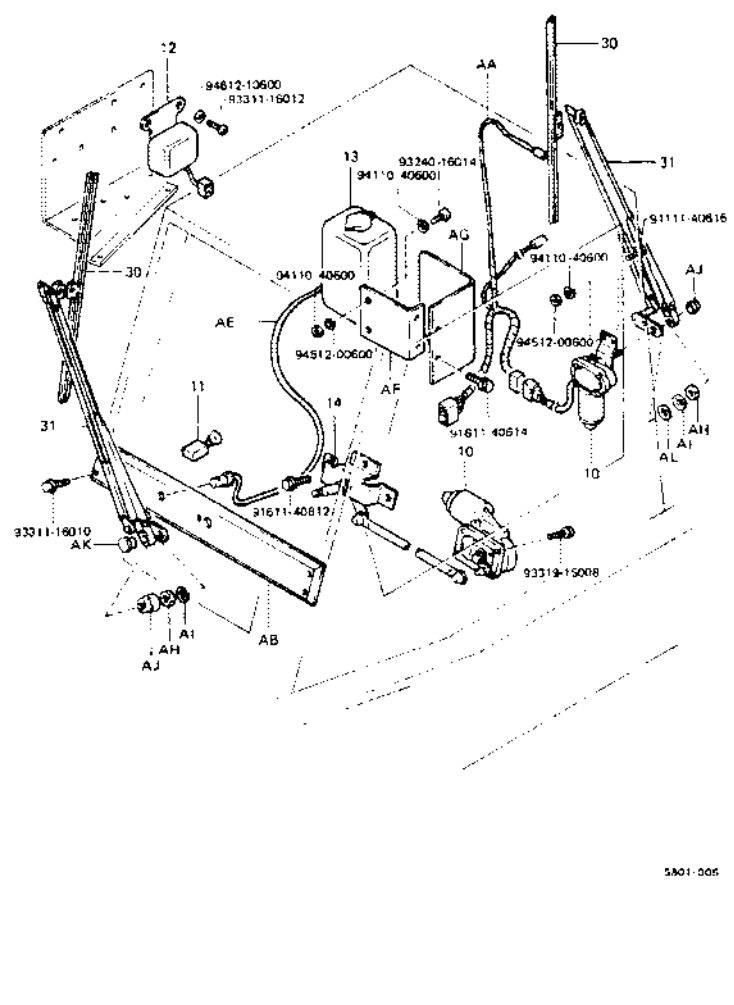 

5801-005

G300-001


FIG. 5801
WIPER MOTOR & BLADE

5801

ATM

87/08

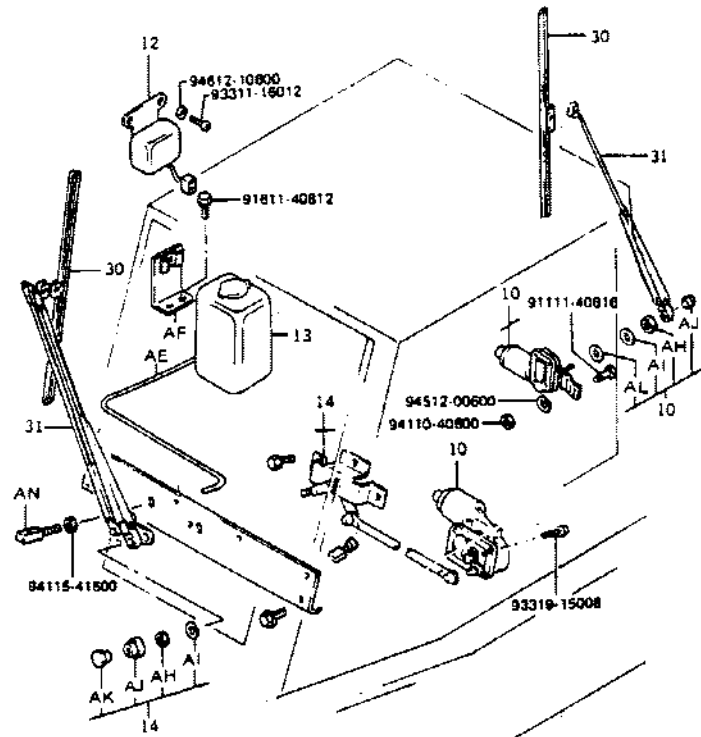 ATM (OELUXE CABIN)



PART NAME CODE	PART NAME	QTY
5801-10	MOTOR ASSY, WIPER	1
5801-11	SWITCH ASSY, WIPER	1
5801-12	RELAY ASSY (FOR WIPER)	1
5801-13	WASHER ASSY, WINDSHIELD	1
5801-14	LINK ASSY, WIPER	1
5801-15	SWITCH ASSY, WIPER	1
5801-30	BLADE SUB-ASSY, WIPER	1
5801-31	ARM SUB-ASSY, WIPER	1
5801-AA	HARNESSE, WIPER	1
5801-AB	COVER, WIPER	1
5801-AC	ADAPTOR, NOZZLE	1
5801-AE	HOSE	1
5801-AF	BRACKET SUB-ASSY, WASHER TANK	1
5801-AG	COVER, WIND SHIELD WASHER TANK	1
5801-AH	NUT	1
5801-AI	WASHER	1
5801-AJ	CAP, SEAL	1
5801-AK	NUT, CAP	1
5801-AL	GROMMET	1
5801-AM	TANK ASSY, WASHER	1
5801-AN	NOZZLE ASSY, WASHER	1
5801-AD	CORD, WASHER	1
5801-AP	HARNESSE, WASHER	1
5801-AZ	NUT	1
5801-BA	WASHER, CUP	1
5801-BB	GROMMET	1
5801-BD	BRACKET, WIPER MOTOR	1
5801-BE	BRACKET SUB-ASSY, SWITCH	1

5801-031

G300-002E



FIG. 5802
HEATER

5802

ATM 87/08

ATM (ALL WEATHER HEATER)

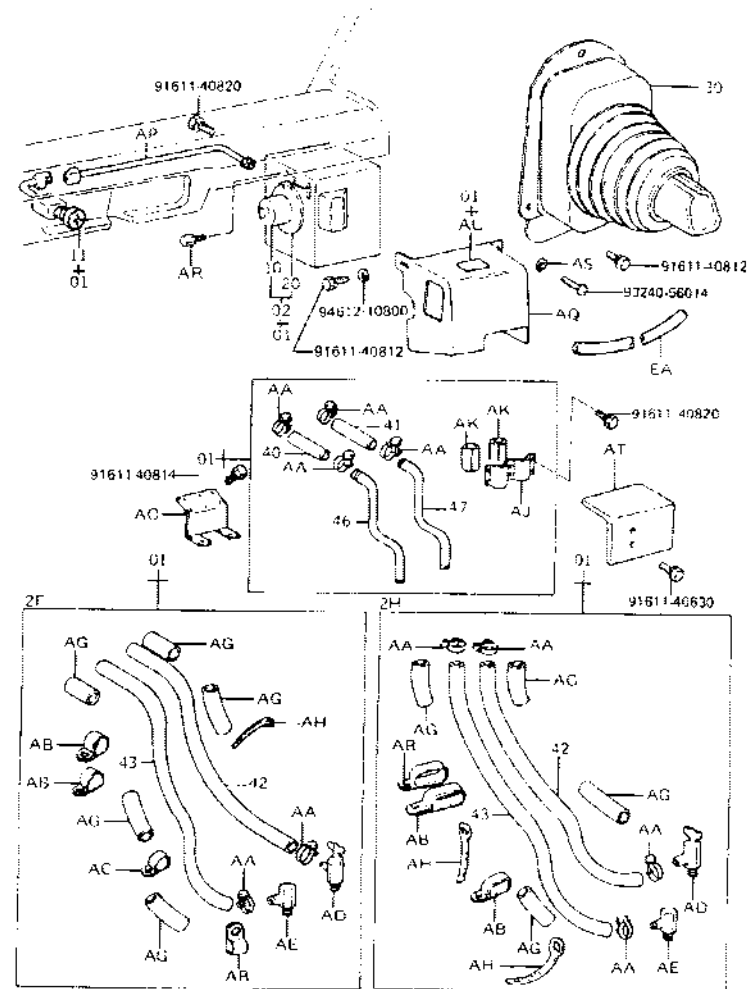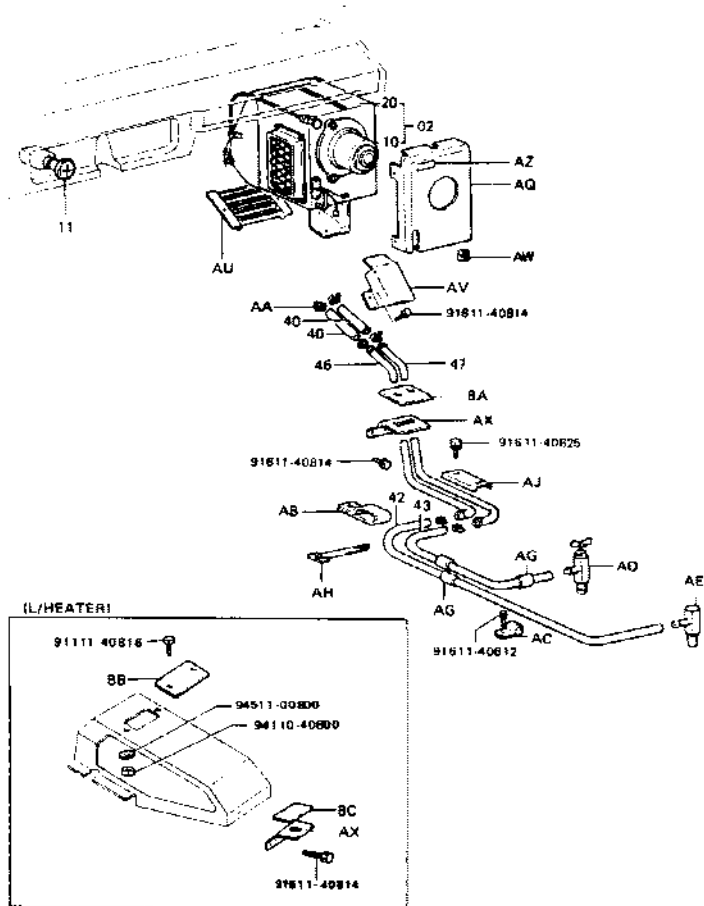  ATM (HEATER)




5802 004


5802 015A

G300-001

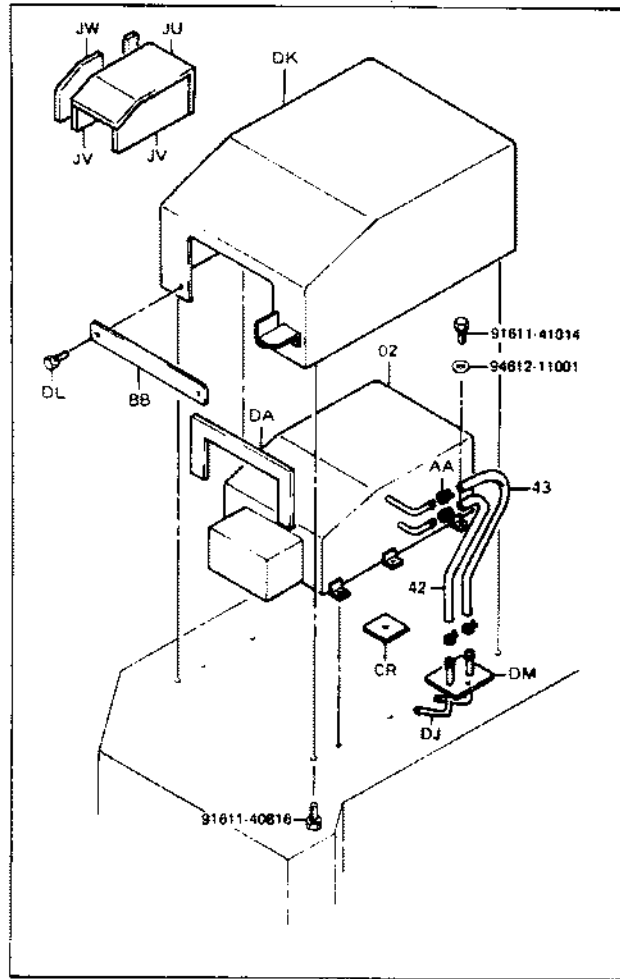 
ATM (DELUXE CABIN)



(2H)

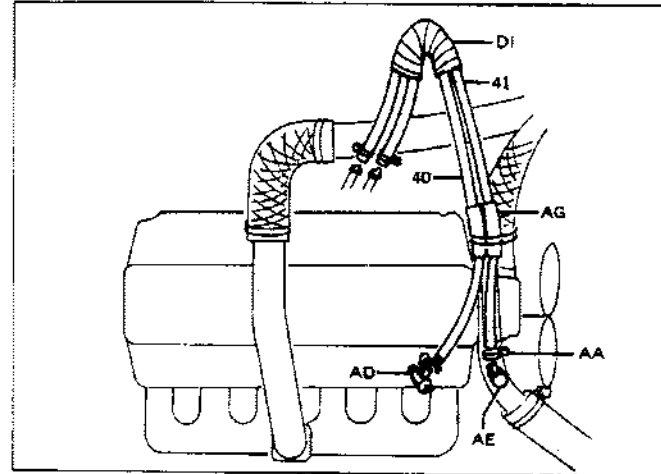 

(2F)

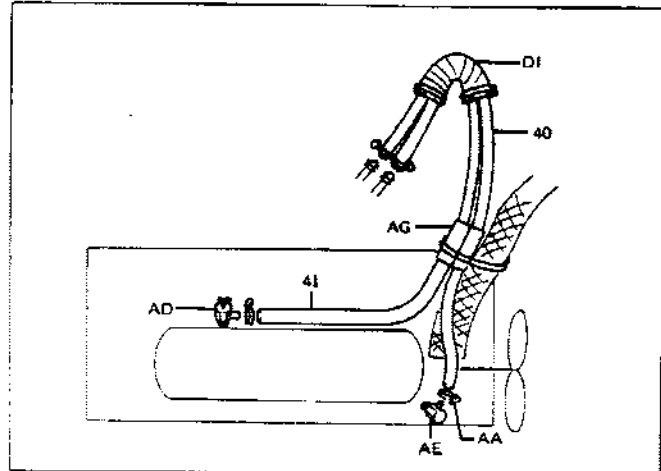 

5802-032A

Q300-002

PART NAME CODE	PART NAME	QTY
5802-01	HEATER & ACCESSORY ASSY	1
5802-02	HEATER ASSY	1
5802-10	MOTOR ASSY	1
5802-11	SWITCH ASSY, HEATER	1
5802-20	UNIT SUB-ASSY, RADIATOR	1
5802-30	BOOT SUB-ASSY, TILT	1
5802-40	HOSE, NO.1	1
5802-41	HOSE, NO.2	1
5802-42	HOSE, NO.3	1
5802-43	HOSE, NO.4	1
5802-46	PIPE, NO.1	1
5802-47	PIPE, NO.2	1
5802-AA	CLAMP	8
5802-AB	CLAMP	2
5802-AC	CLAMP	1-2
5802-AD	JOINT	1
5802-AE	JOINT	1
5802-AG	BUSHING	2-5
5802-AH	BAND	1
5802-AJ	CLAMP	1
5802-AK	PROTECTOR	2
5802-AL	PLATE, CAUTION	1
5802-AD	BRACKET SUB-ASSY, PIPE	1
5802-AP	HARNESS SUB-ASSY, HEATER	1
5802-AQ	COVER, HEATER	1
5802-AR	BOLT	2
5802-AS	WASHER, WAVE	2
5802-AT	COVER, PIPE	1
5802-AU	VENT, HEATER	1
5802-AV	COVER, WATER PIPE	1
5802-AW	GROMMET	2
5802-AX	GUIDE, WATER PIPE	2
5802-AZ	ORNAMENT, CONTROL	1
5802-BA	GROMMET	1
5802-BB	COVER	1
5802-BC	SEAL	1
5802-CR	RUBBER	1
5802-DA	SPUNGE	1
5802-DI	TUBE, SPIRAL	1
5802-DJ	PIPE SUB-ASSY, WATER	1
5802-DK	COVER SUB-ASSY, HEATER	1
5802-DL	SCREW	2
5802-DM	RUBBER, HEATER PIPE	1
5802-EA	RUBBER, EDGE	1
5802-JU	FOAM	1
5802-JV	FOAM	1
5802-JW	FOAM	1


FIG. 5805
DEFROSTER

5805

ATM

87/08

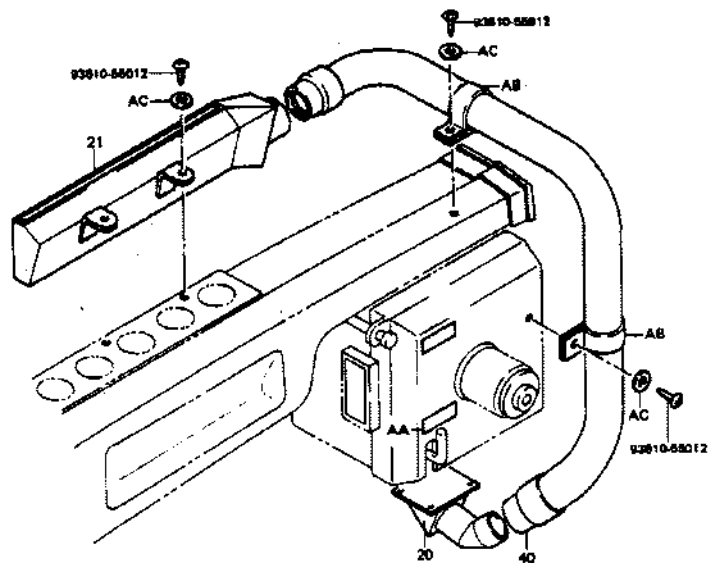 ATM (ALL WEATHER HEATER)



PART NAME	PART NAME	QTY
CODE		
5805-20	DUCT SUB-ASSY, AIR	1
5805-21	BOX SUB-ASSY, DEFROSTER	1
5805-40	HOSE, DEFROSTER	1
5805-AA	ORNAMENT, CONTROL	1
5805-AB	CLAMP	2
5805-AC	WASHER, PLATE	4

5805-001

G300-001E



FIG. 5806
OK MONITOR

5806

ATM

87/08

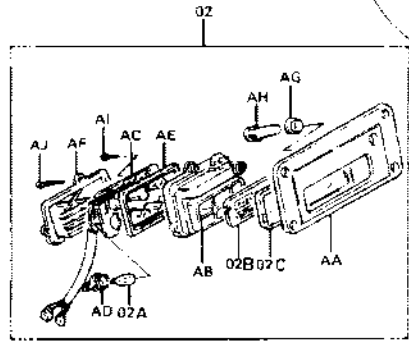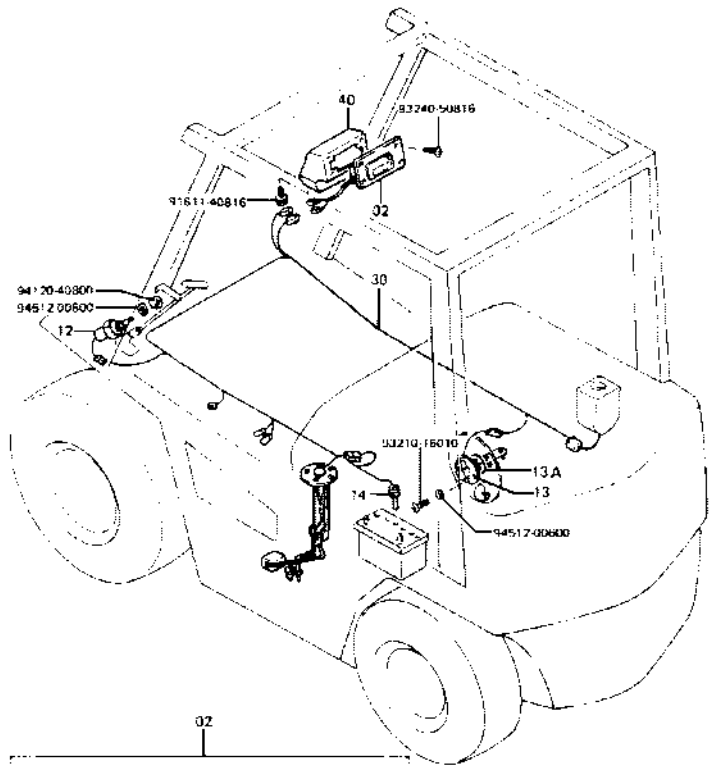  ATM (OK MONITOR)





PART NAME CODE	PART NAME	QTY
5806-02	OK MONITOR ASSY	1
5806-02A	BULB (FOR OK MONITOR)	6
5806-02B	LENS (FOR OK MONITOR)	1
5806-02C	GLASS (FOR OK MONITOR)	1
5806-12	SWITCH ASSY, COURTESY LAMP (FOR PARKING)	1
5806-13	SWITCH ASSY, FUEL LEVEL	1
5806-13A	RING, O (FOR FUEL LEVEL SWITCH)	1
5806-14	SWITCH ASSY, LEVEL WARNING (FOR BATTERY)	1
5806-30	HARNES SUB-ASSY, MONITOR	1
5806-40	BRACKET SUB-ASSY, OK MONITOR	1
5806-AA	HOOD	1
5806-AB	CASE	1
5806-AC	PLATE SUB-ASSY	1
5806-AD	SOCKET	6
5806-AE	PACKING	1
5806-AF	CASE, LOWER	1
5806-AG	BUSH	1
5806-AH	KNOB	1
5806-AI	SCREW, TAPPING	1
5806-AJ	SCREW, TAPPING	4

5806 003

G300-001E

33..55..E35..40..FSV

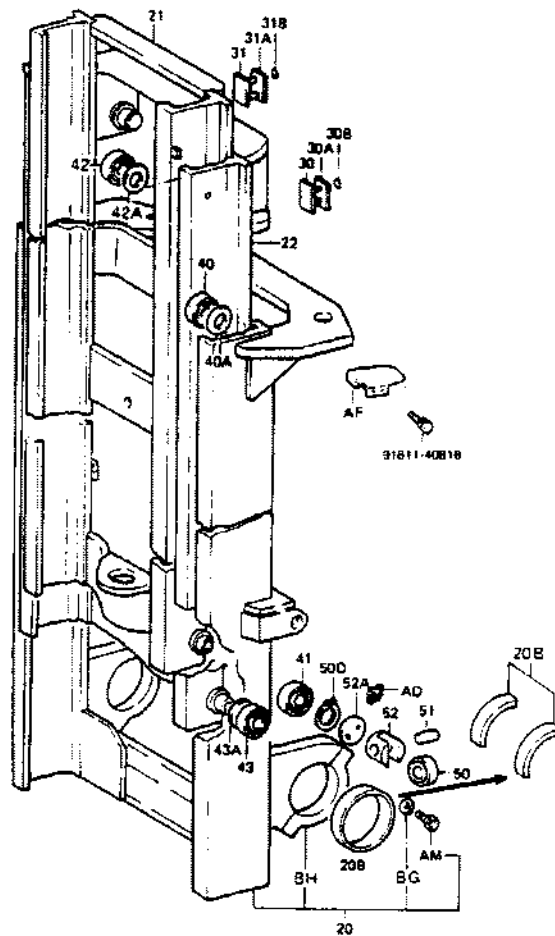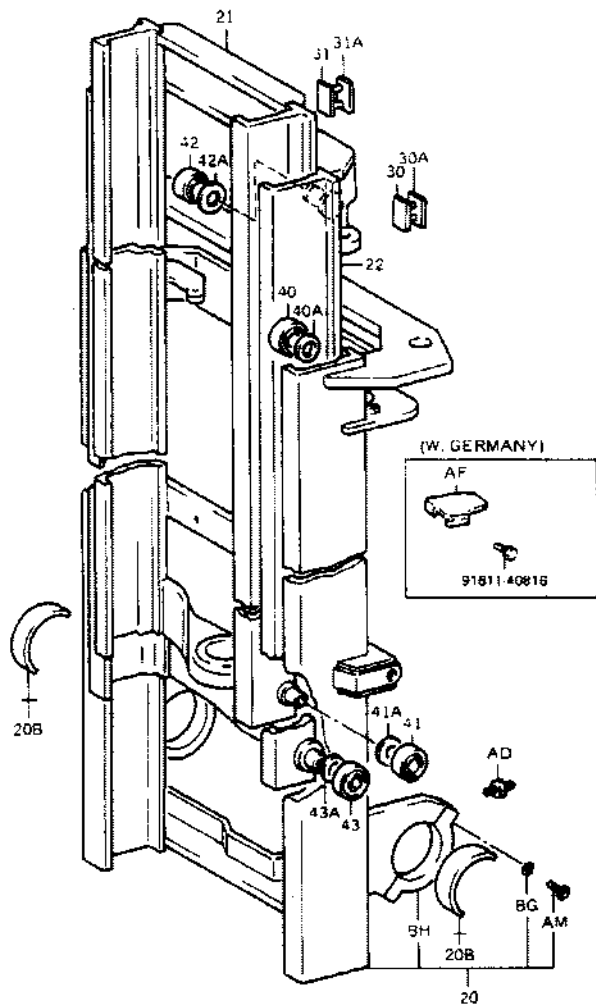  49..FSV



6101-268

6101 0120


G300-001

PART NAME CODE	PART NAME	QTY
6101-20	MAST SUB-ASSY, OUTER	1
6101-20B	BUSH, MAST SUPPORT	1
6101-21	MAST SUB-ASSY, INNER	1
6101-22	MAST SUB-ASSY, MIDDLE	1
6101-30	STRIP SUB-ASSY, OUTER MAST	2
6101-30A	SHIM, OUTER MAST STRIP	99
6101-30B	RING, O (FOR OUTER MAST STRIP)	4
6101-31	STRIP SUB-ASSY, MIDDLE MAST	2
6101-31A	SHIM, MIDDLE MAST STRIP	99
6101-31B	RING, O (FOR MIDDLE MAST STRIP)	4
6101-40	ROLLER, LIFT (FOR OUTER MAST)	2
6101-40A	SHIM, LIFT ROLLER (FOR OUTER MAST)	99
6101-41	ROLLER, LIFT (FOR INNER MAST)	2
6101-41A	SHIM, LIFT ROLLER (FOR INNER MAST)	99
6101-42	ROLLER, LIFT (FOR MIDDLE MAST UPPER)	2
6101-42A	SHIM, LIFT ROLLER (FOR MIDDLE MAST UPPER)	99
6101-43	ROLLER, LIFT (FOR MIDDLE MAST LOWER)	2
6101-43A	SHIM, LIFT ROLLER (FOR MIDDLE MAST LOWER)	99
6101-50	ROLLER, SIDE (FOR INNER MAST)	2
6101-50D	RING, SHAFT SNAP (FOR INNER MAST SIDE ROLLER)	2
6101-51	SHAFT, SIDE ROLLER (FOR INNER MAST)	2
6101-52	HOLDER, SIDE ROLLER SHAFT (FOR INNER MAST)	2
6101-52A	SHIM (FOR INNER MAST SHAFT HOLDER)	99
6101-AD	FITTING, GREASE	2
6101-AF	COVER, ROLLER	1
6101-AM	BOLT	4
6101-BG	WASHER, SPRING	4
6101-BH	CAP, MAST SUPPORT	2







33, 35, E35, 40, FSV

45, FSV

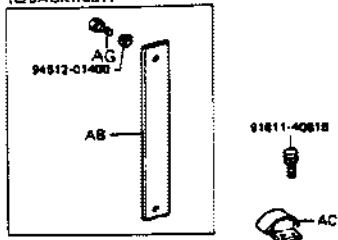 (L/BACKREST)



(L/BACKREST)

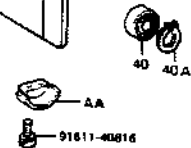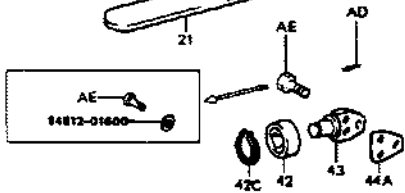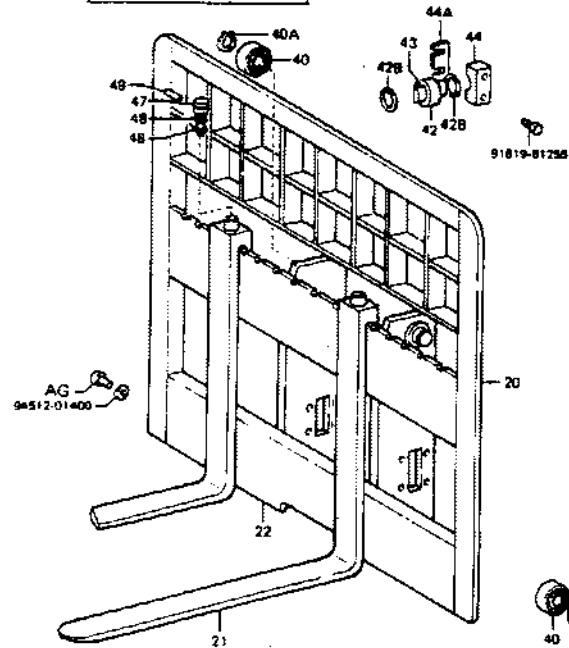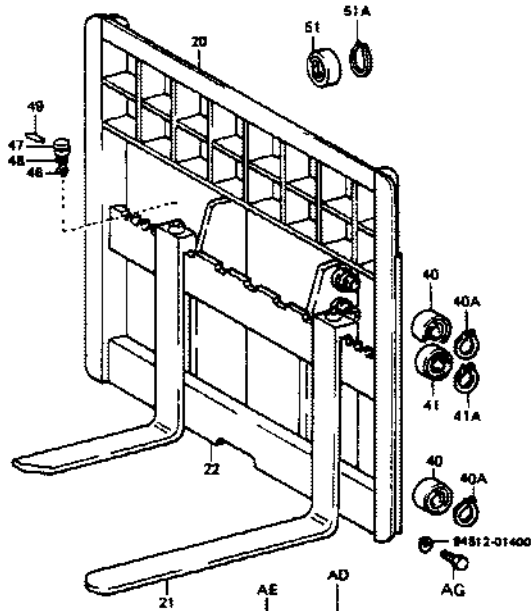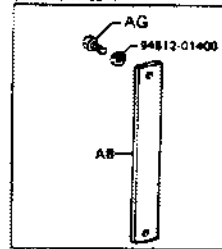      

6301-0099

G300-001

PART NAME CODE	PART NAME	QTY
6301-20	BACKREST SUB-ASSY	1
6301-21	FORK SUB-ASSY	2
6301-22	BRACKET SUB-ASSY, LIFT	1
6301-40	ROLLER, LIFT (UPPER, LOWER)	2-4
6301-40A	RING, SHAFT SNAP (UPPER, LOWER)	2-4
6301-41	ROLLER, LIFT (CENTER)	2
6301-41A	RING, SHAFT SNAP (CENTER)	2
6301-42	ROLLER, SIDE	2-4
6301-42B	SPACER (FOR SIDE ROLLER)	8
6301-42C	RING, SHAFT SNAP (FOR SIDE ROLLER)	2
6301-43	SHAFT, SIDE ROLLER	2-4
6301-44	HOLDER, SIDE ROLLER SHAFT	8
6301-44A	SHIM (FOR SHAFT HOLDER)	99
6301-46	PIN, FORK STOPPER	2
6301-47	KNDB, FORK STOPPER PIN	2
6301-48	SPRING, FORK STOPPER PIN	2
6301-49	PIN, SPRING (FOR FORK STOPPER PIN)	2
6301-51	ROLLER, SIDE (OUTER)	2
6301-51A	RING, SHAFT SNAP	2
6301-AA	COVER, LIFT BRACKET ROLLER	2-4
6301-AB	PLATE, SIDE	2
6301-AC	COVER, LIFT BRACKET ROLLER	2
6301-AE	BOLT	8
6301-AG	BOLT	4

FIG. 6302
CHAIN & CHAIN WHEEL

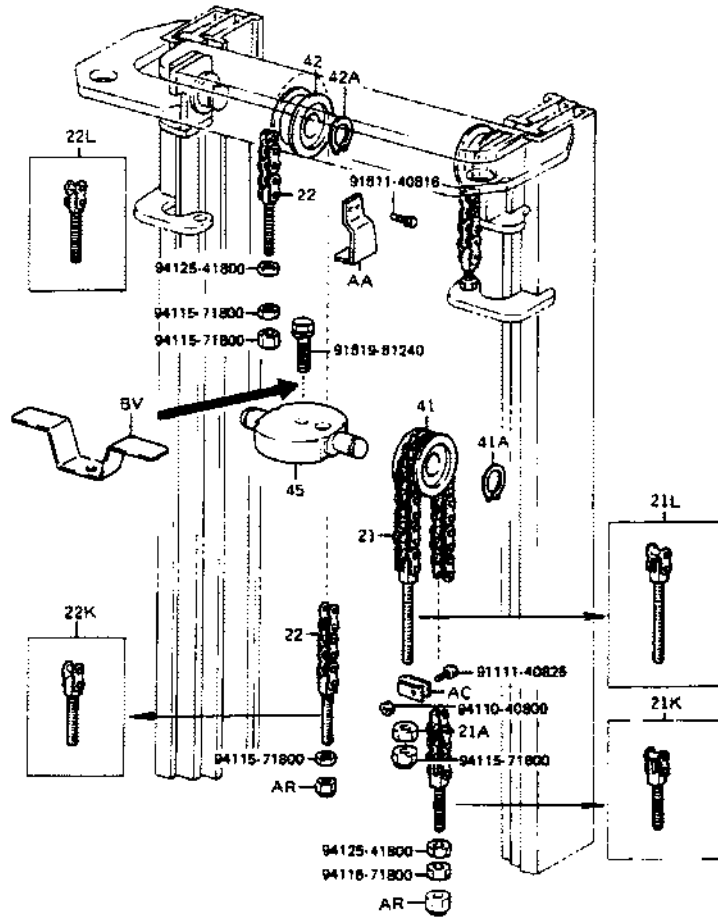 
6302

FSV


85/04

33,35,E35,40..FSV

43..FSV



6302 0428

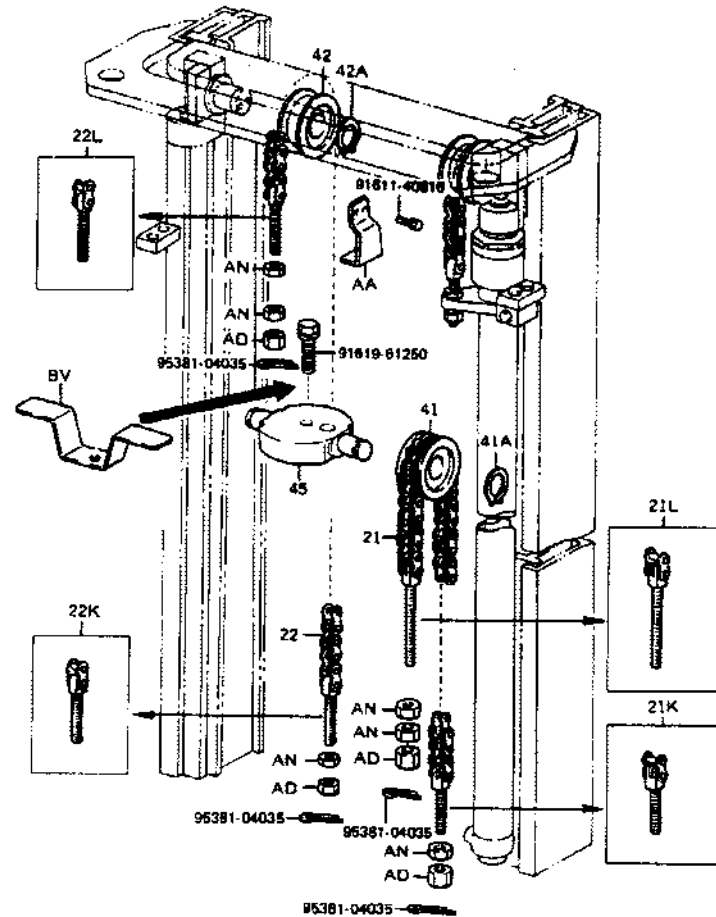 

6302 0118

FIG. 6302
CHAIN & CHAIN WHEEL

6302

FSV

85/04

PART NAME CODE	PART NAME	QTY
6302-21	CHAIN SUB-ASSY (FRONT)	2
6302-21A	NUT, CHAIN ADJUST (FRONT)	2
6302-21K	BOLT KIT, CHAIN ANCHOR, NO.1 (FRONT)	2
6302-21L	BOLT KIT, CHAIN ANCHOR, NO.2 (FRONT)	2
6302-22	CHAIN SUB-ASSY (REAR)	2
6302-22K	BOLT KIT, CHAIN ANCHOR, NO.1 (REAR)	2
6302-22L	BOLT KIT, CHAIN ANCHOR, NO.2 (REAR)	2
6302-41	WHEEL, CHAIN (FRONT)	2
6302-41A	RING, SHAFT SNAP (FOR FRONT CHAIN WHEEL)	2
6302-42	WHEEL, CHAIN (REAR)	2
6302-42A	RING, SHAFT SNAP (FOR CHAIN WHEEL)	2
6302-45	SUPPORT, CHAIN WHEEL	1
6302-AA	PLATE, CHAIN STOPPER	4
6302-AC	CLAMP, CHAIN ANCHOR BOLT	2
6302-AD	NUT, HEXAGON	8
6302-AN	NUT, HEXAGON	12
6302-AR	NUT, LOCK	4

FIG. 6502
FRONT LIFT CYLINDER

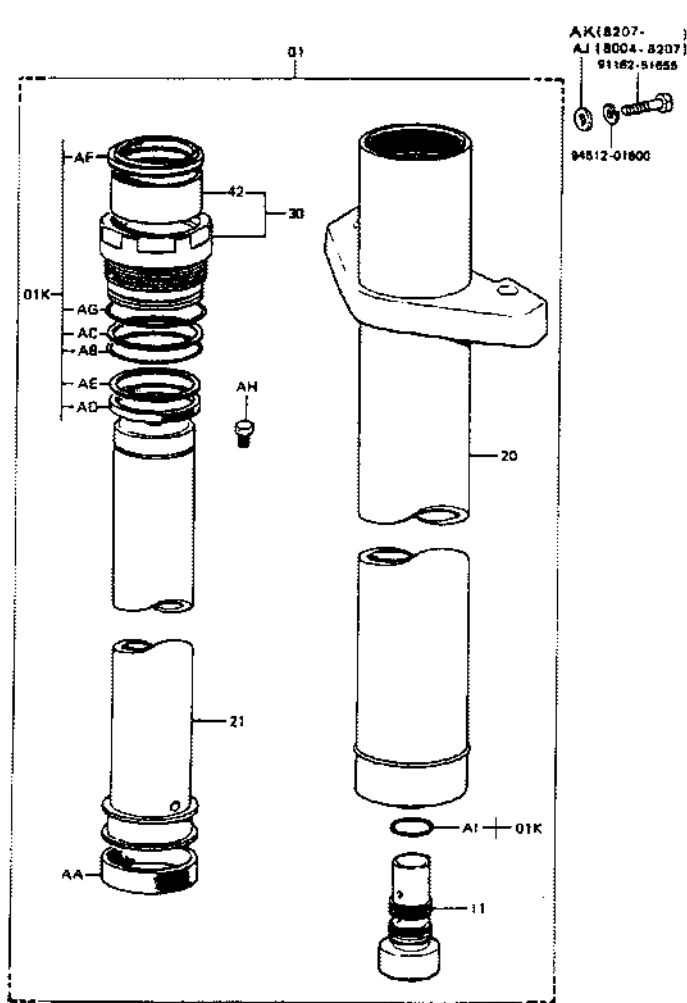 
6502

FSV


85/04

33.35.E35.40..FSV

45..FSV



6502-003 B

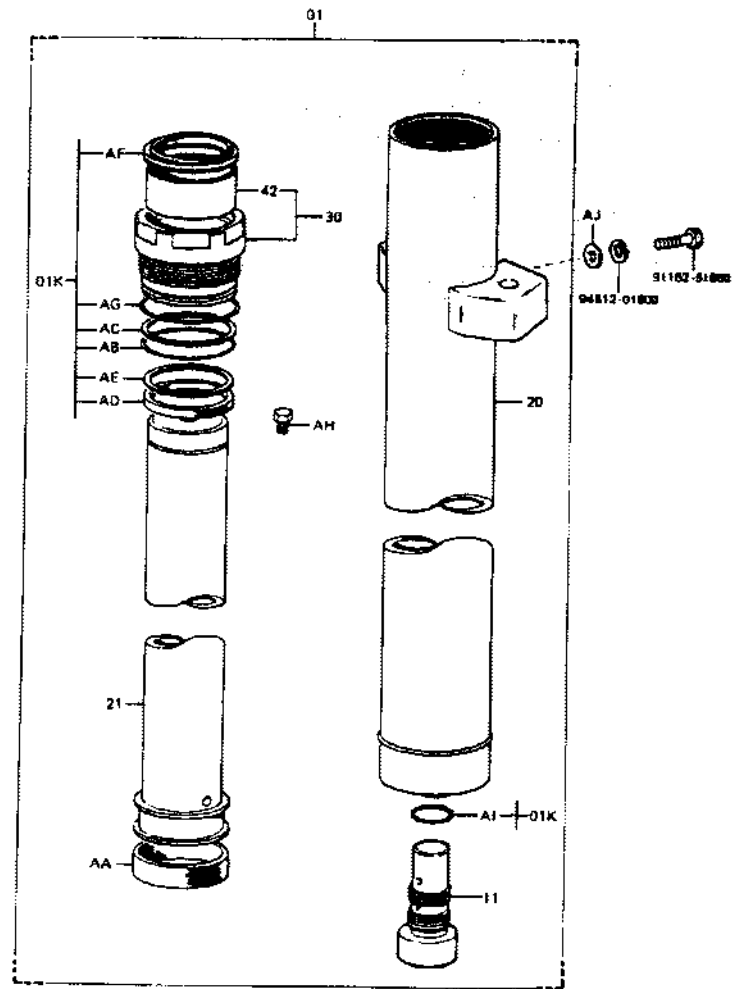 

6502 004 A

E18-6502

FRONT LIFT CYLINDER

6502

FSV

85/04

PART NAME CODE	PART NAME	QTY
6502-01	CYLINDER ASSY, LIFT	1
6502-01X	CYLINDER O/H KIT, LIFT	1
6502-11	VALVE ASSY, SAFETY DOWN	1
6502-20	CYLINDER SUB-ASSY, LIFT	1
6502-21	ROD SUB-ASSY, LIFT CYLINDER	1
6502-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD	1
6502-42	SLEEVE, LIFT CYLINDER ROD GUIDE	1
6502-AA	BUSHING	1
6502-AB	RING, O	1
6502-AC	RING, BACK UP	1
6502-AD	PACKING, U	1
6502-AE	RING, BACK UP	1
6502-AF	SEAL, DUST	1
6502-AG	RING, O	1
6502-AH	PLUG	1
6502-AI	RING, O	1
6502-AJ	COLLAR	2
6502-AK	WASHER, PLATE	2

FIG. 6503
REAR LIFT CYLINDER

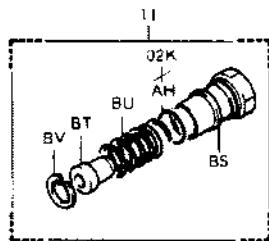 
6503

F5V


87/08

33, 35, E33, 40 • F5V


45 • F5V



02(LH)

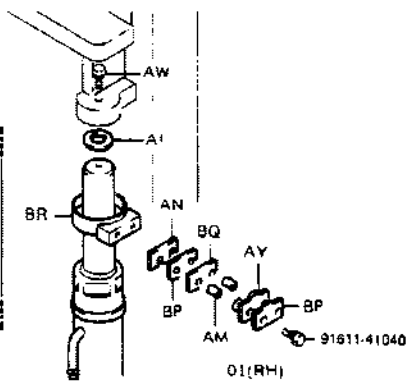 


01(RH)

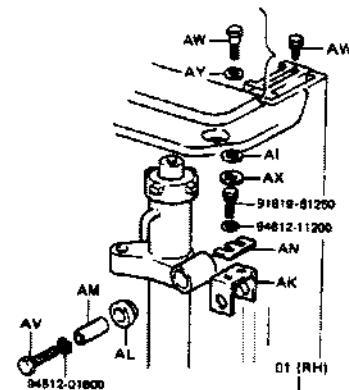 


02 (LH)

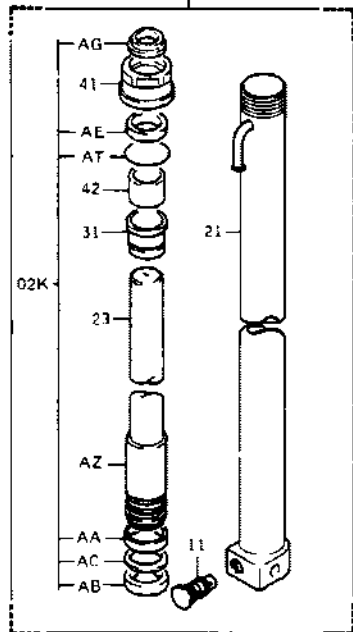 
01 (RH)



02K

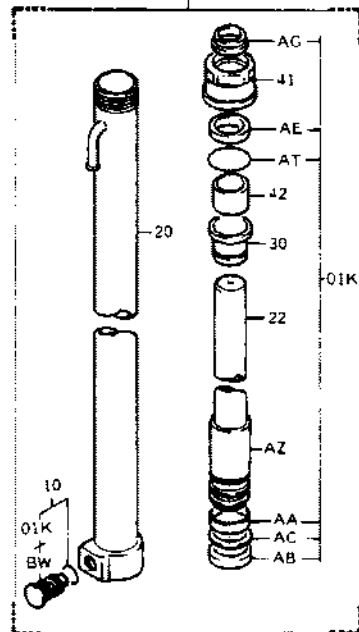 


6503-045

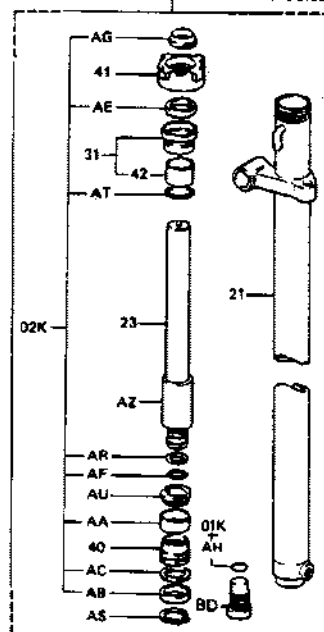 

02K

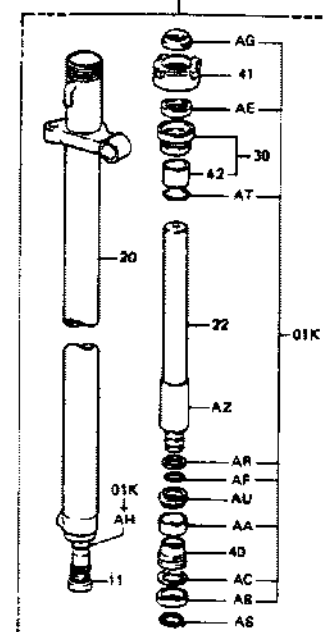 21



6503-008B

Q300-001




PART NAME	PART NAME	QTY
CODE		
6503-01	CYLINDER ASSY, LIFT, RH	1
6503-01K	CYLINDER O/H KIT, LIFT, RH	1
6503-02	CYLINDER ASSY, LIFT, LH	1
6503-02K	CYLINDER O/H KIT, LIFT, LH	1
6503-10	VALVE ASSY, FLOW REGULATOR	1
6503-11	VALVE ASSY, SAFETY DOWN	1
6503-20	CYLINDER SUB-ASSY, LIFT, RH	1
6503-21	CYLINDER SUB-ASSY, LIFT, LH	1
6503-22	ROD SUB-ASSY, LIFT CYLINDER, RH	1
6503-23	ROD SUB-ASSY, LIFT CYLINDER, LH	1
6503-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD, RH	1
6503-31	GUIDE SUB-ASSY, LIFT CYLINDER ROD, LH	1
6503-40	PISTON, LIFT CYLINDER	2
6503-41	COVER, LIFT CYLINDER	2
6503-42	SLEEVE, LIFT CYLINDER ROD GUIDE	2
6503-AA	RING, WEAR	2
6503-AB	PACKING, U	2
6503-AC	RING, BACK UP	2
6503-AE	PACKING, U	2
6503-AF	RING, O	2
6503-AG	SEAL, DUST	2
6503-AH	RING, O	1 2
6503-AI	SHIM	99
6503-AK	BRACKET SUB-ASSY, LIFT CYLINDER	2
6503-AL	BUSHING	4
6503-AM	SPACER	2 4
6503-AN	SHIM	99
6503-AR	RING, BACK UP	2
6503-AS	RING, SHAFT SNAP	2
6503-AT	RING, O	2
6503-AU	RING, STOPPER	2
6503-AV	BOLT	2
6503-AW	BOLT	2
6503-AY	RUBBER	2
6503-AZ	SPACER, LIFT CYLINDER	2
6503-BD	PLUG	1
6503-BP	PLATE	4
6503-BQ	RUBBER	2
6503-BR	SUPPORT SUB-ASSY	2
6503-HS	BODY	1
6503-BT	PISTON	1
6503-BU	SPRING	1
6503-BV	RING, SNAP	1
6503-BW	RING, O	1

FSV (TILT RANGE TABLE)

FSV

テイルト角度表
TABLE OF TILT RANGE

生産期間 PROD. DATE	型式 MODELS	タイヤ TIRE	揚 高 LIFTING HEIGHT	備 考 DISCRIPTION	テイルト角 TILT RANGE
8004-	M, V		H2000-H4000	33, 35, 40	8D - 12D
8004-	M, V	SINGLE	H4500-H6000	33, 35, 40	8D - 8D
8004-	M, V	DOUBLE	H4500-H5000	33, 35, 40	8D - 12D
8004-	M, V		H2000-H3700	E35	8D - 12D
8004-	M, V	SINGLE	H4000-H5000	E35	8D - 8D
8004-	M, V	DOUBLE	H4000-H5000	E35	8D - 12D
8004-	V		H2000-H4000	45	8D - 12D
8004-	V	SINGLE	H4500-H6000	45	8D - 8D
8004-	V	DOUBLE	H4500-H5000	45	8D - 12D
8004-	FSV		H3700-H6000	33, 35, E35, 40, 45	8D - 8D
8004-	FV		H2000-H4000	33, 35, E35, 40, 45	8D - 12D
8004-	FV, M, V		H2000	ALL WEATHER CAB 33, 35, E35, 40	8D - 10D
8004-	FV, V		H2000	ALL WEATHER CAB 45	8D - 8D
8004-	FV, V		H2500-H4000	ALL WEATHER CAB 45	8D - 10D

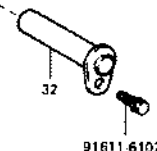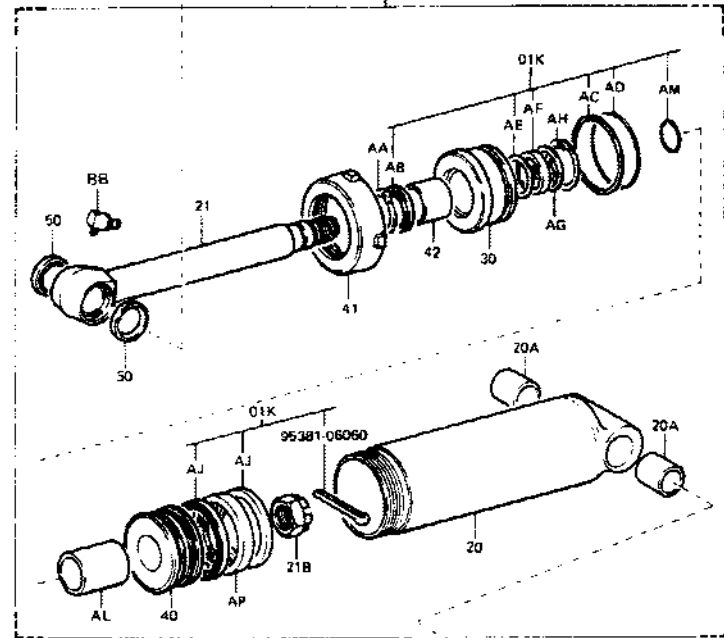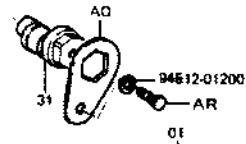   

6511-004A

91611-61020

6511-074

G300-001

FIG. 6511
TILT CYLINDER

6511

FSV






87/08

PART NAME CODE	PART NAME	QTY
6511-01	CYLINDER ASSY, TILT	2
6511-01K	CYLINDER O/H KIT, TILT	2
6511-20	CYLINDER SUB-ASSY, TILT	2
6511-20A	BUSH, PIN (FOR CYLINDER)	4
6511-21	ROD SUB-ASSY, TILT CYLINDER PISTON	2
6511-21B	NUT, CASTLE	2
6511-30	GUIDE SUB-ASSY, TILT CYLINDER ROD	2
6511-31	PIN SUB-ASSY, TILT CYLINDER, FR	2
6511-32	PIN SUB-ASSY, TILT CYLINDER, RR	2
6511-40	PISTON, TILT CYLINDER	2
6511-41	COVER, TILT CYLINDER	2
6511-42	SLEEVE, TILT CYLINDER ROD GUIDE	2
6511-50	SEAL, GREASE	4
6511-AA	RING, HOLE SNAP	2
6511-AB	SEAL, DUST	2
6511-AC	RING, BACK UP	2
6511-AD	RING, O	2
6511-AE	RING, BACK UP	2
6511-AF	PACKING, U	2
6511-AG	PLATE, STOPPER	2
6511-AH	RING, HOLE SNAP	2
6511-AJ	PACKING, U	4
6511-AL	SPACER, TILT CONTROL	2
6511-AM	RING, O	2
6511-AP	SLEEVE, CYLINDER PISTON	2
6511-AQ	PLATE, STOPPER	2
6511-AR	BOLT	2
6511-BB	FITTING, GREASE	2




G500-002E

2F...FSV

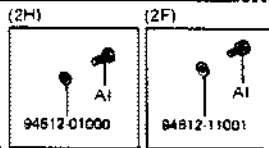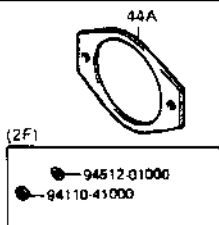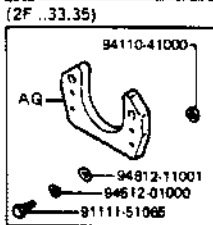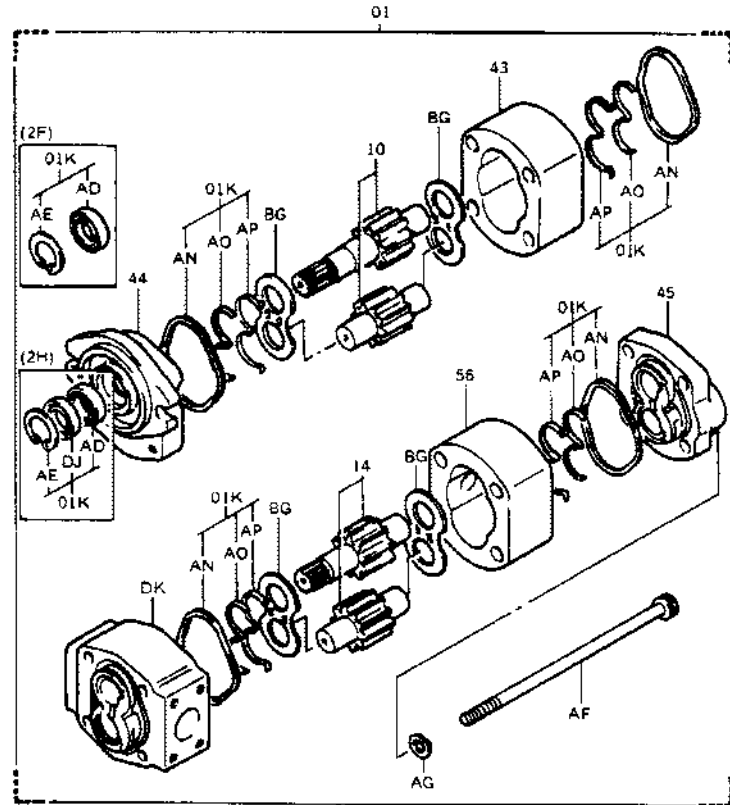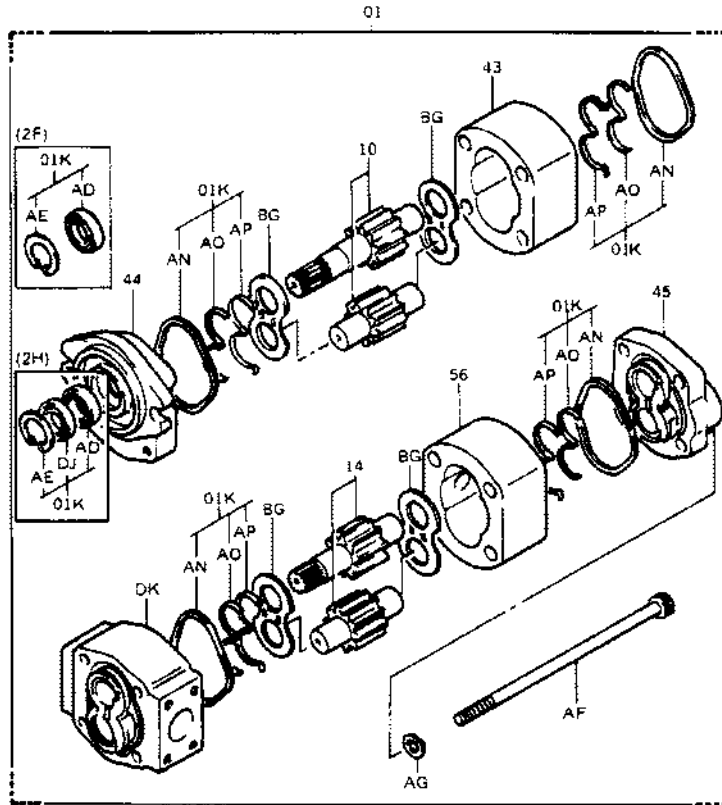     2H...FSV




6701-077

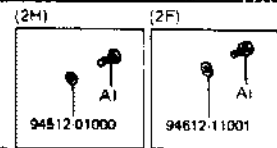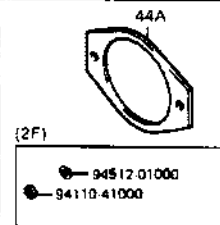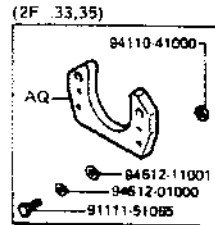   

6701-077

PART NAME CODE	PART NAME	QTY
6701-01	PUMP ASSY, OIL -----	1
6701-01X	PUMP O/H KIT, OIL -----	1
6701-10	GEAR SET -----	1
6701-14	GEAR SET -----	1
6701-43	BODY -----	1
6701-44	FLANGE, MOUNTING -----	1
6701-44A	PACKING, OIL PUMP -----	1
6701-45	COVER -----	1
6701-56	BODY -----	1
6701-AD	SEAL, OIL -----	1- 2
6701-AE	RING, SNAP -----	1
6701-AF	BOLT -----	4
6701-AG	WASHER, SPRING -----	4
6701-AI	BOLT -----	2
6701-AN	GASKET -----	2- 4
6701-AD	SPACER -----	4
6701-AP	GASKET -----	2
6701-AQ	PLATE, OIL PUMP SET -----	1
6701-BG	PLATE, SIDE, A -----	4
6701-DJ	SEAL, OIL -----	1
6701-DK	PLATE, ADAPTOR -----	1


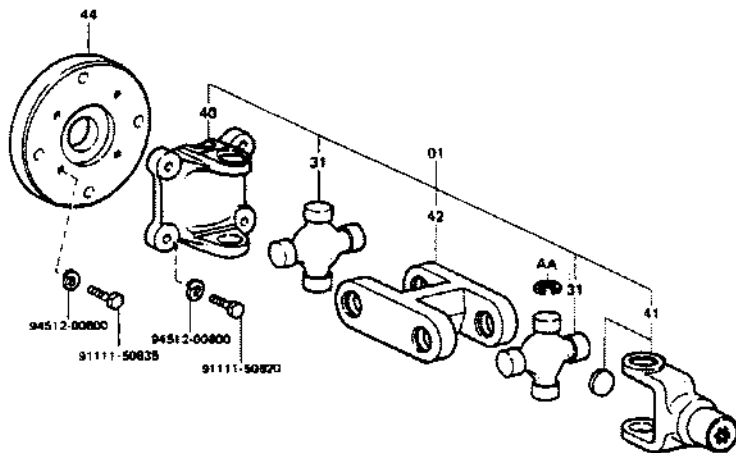 
ZF--FSV






PART NAME CODE	PART NAME	QTY
6704-01	DRIVE ASSY, OIL PUMP	1
6704-31	SPIDER KIT, UNIVERSAL JOINT	2
6704-40	YOKE, UNIVERSAL JOINT FLANGE	1
6704-41	YOKE, OIL PUMP DRIVE JOINT	1
6704-42	YOKE, COUPLING	1
6704-44	PLATE, JOINT YOKE SET	1
6704-AA	RING, SHAFT SNAP	8

6704-001

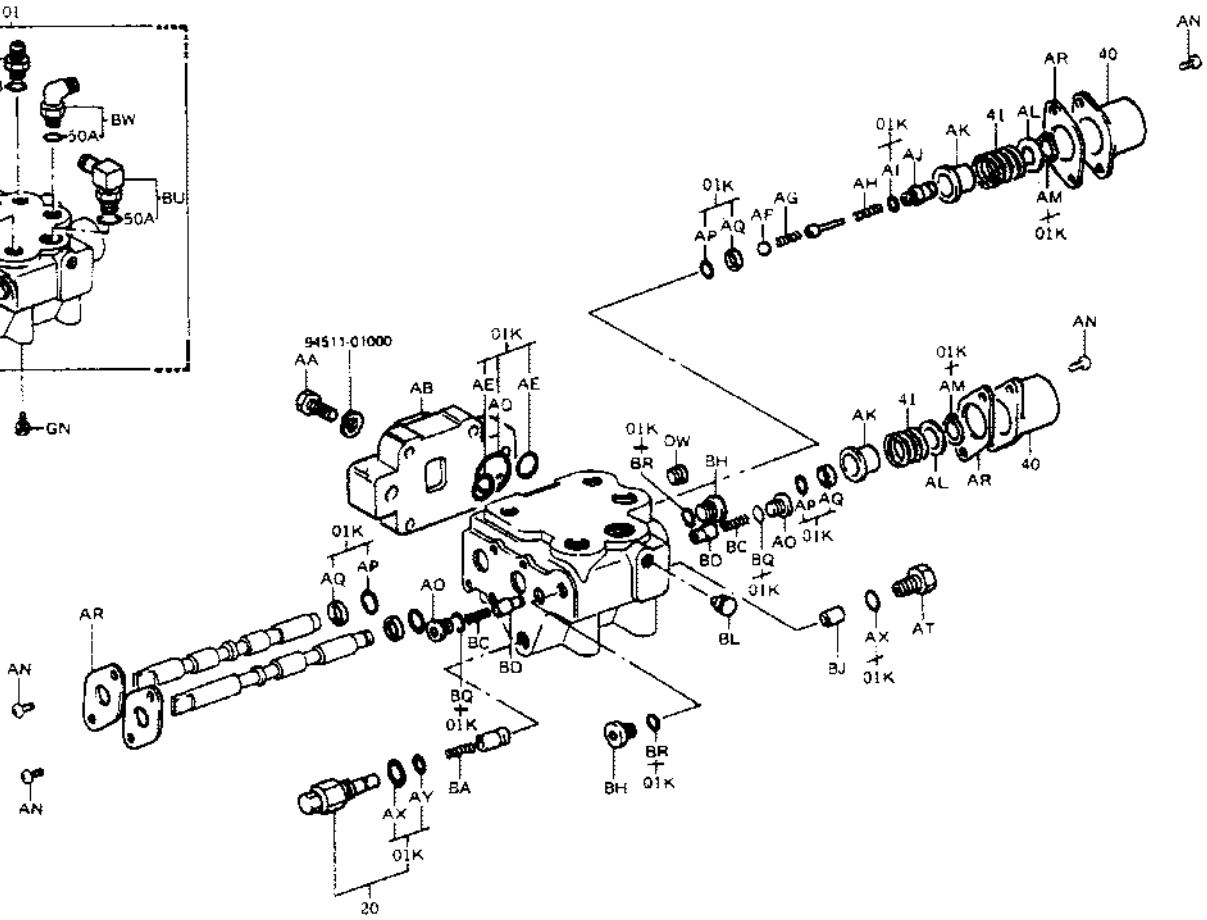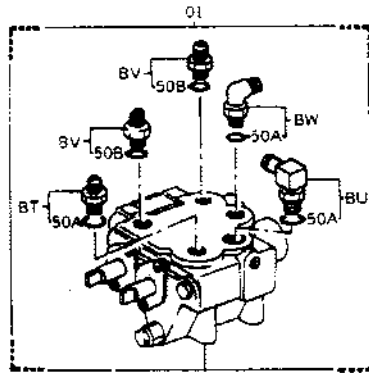  ZH.FSV



2F..FSV (3-WAY)

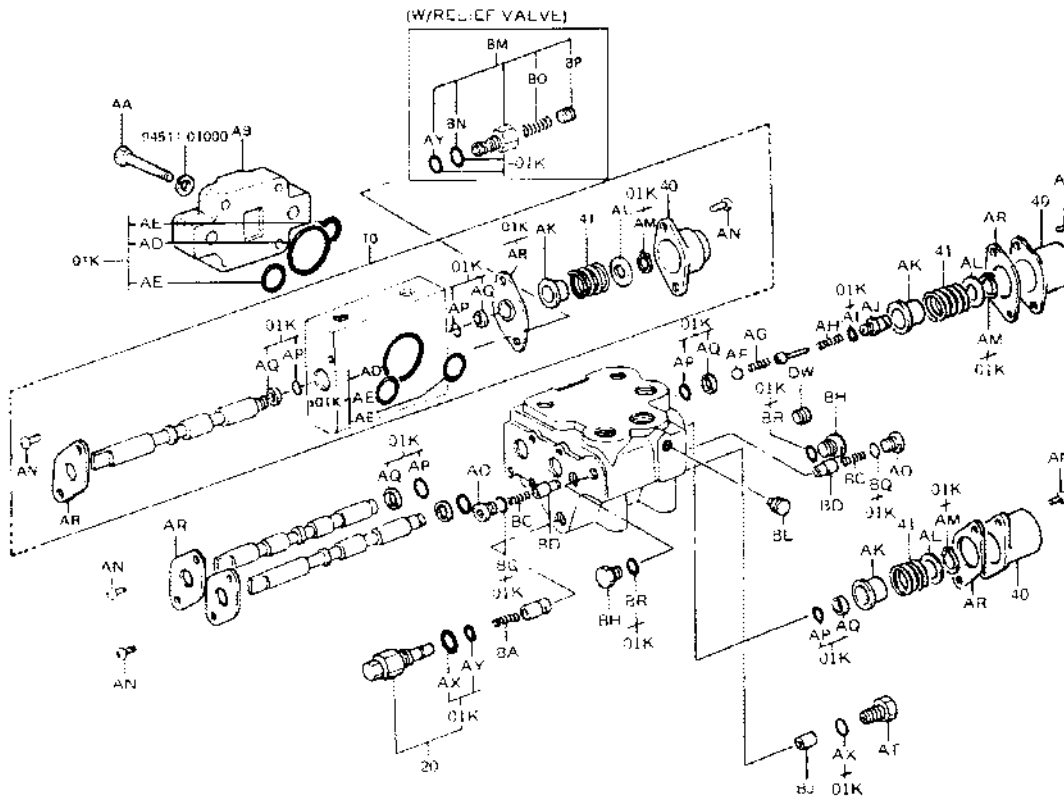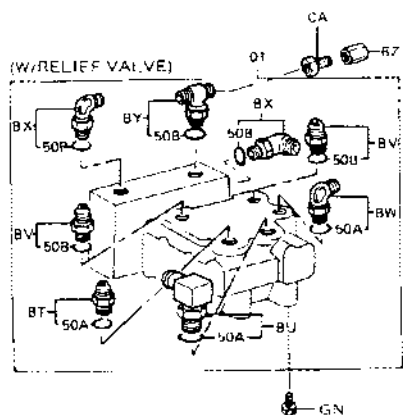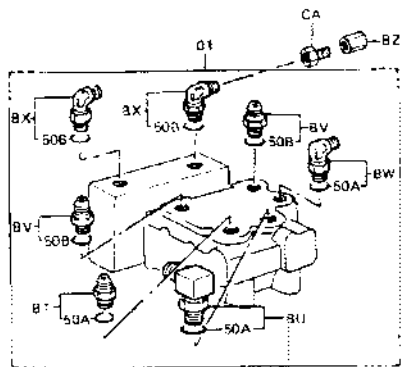   


6705-277

G300-003

PART NAME	PART NAME	QTY
CODE		
6705-01	VALVE ASSY, OIL CONTROL	1
6705-01K	VALVE O/H KIT, OIL CONTROL	1
6705-10	VALVE ASSY, PLUNGER SECTION, NO.1	1
6705-11	VALVE ASSY, PLUNGER SECTION, NO.2	1
6705-20	VALVE SET, PILOT RELIEF, NO.1	1
6705-25	HOUSING & SPOOL SET, ATTACHMENT, NO.1	1
6705-26	HOUSING & SPOOL SET, ATTACHMENT, NO.2	1
6705-40	COVER, SPRING	2
6705-41	SPRING, COMPRESSION (FOR SPOOL RETURN)	2
6705-50A	RING, O, NO.1 (FOR VALVE FITTING)	3
6705-50B	RING, O, NO.2 (FOR VALVE FITTING)	7
6705-AA	BOLT	4
6705-AB	HOUSING, INLET, NO.2	1
6705-AD	RING, O	1
6705-AE	RING, O	2
6705-AF	BALL, STEEL	1
6705-AG	SPRING	1
6705-AH	SPRING, COMPRESSION	1
6705-AI	RING, O	1
6705-AJ	STOPPER	1
6705-AK	HOLDER, SPRING	2
6705-AL	WASHER, PLATE	2
6705-AM	RING, SHAFT SNAP	2
6705-AN	SCREW	8
6705-AD	PLUG	2
6705-AP	RING, O	4
6705-AQ	RING, BACK UP	4
6705-AR	HOLDER, SEAL	4
6705-AT	STOPPER	1
6705-AU	STOPPER	1
6705-AV	RING, O	2
6705-AW	SPRING, COMPRESSION	1
6705-AX	RING, O	2- 1
6705-AY	RING, O	1- 2
6705-BA	SPRING, COMPRESSION	1
6705-BB	WIRE, ORIFICE TURNING	1
6705-BC	SPRING, COMPRESSION	2
6705-BD	PLUNGER, CHECK	2
6705-BE	STOPPER	1
6705-BH	PLUG	1- 2
6705-BJ	PLUG	2
6705-BJ	SEAT, VALVE	1
6705-BL	SEAT, INSERT	1- 2
6705-BM	VALVE SUB-ASSY, RELIEF	1
6705-BN	RING, O	1
6705-BO	SPRING	1
6705-BP	STOPPER	1
6705-BQ	RING, O	2
6705-BR	RING, O	2
6705-BT	FITTING	1
6705-BU	FITTING	1
6705-BV	FITTING	2
6705-BW	FITTING	1
6705-BX	FITTING	2
6705-BY	FITTING	1
6705-BZ	PLUG	2
6705-CA	FITTING	2
6705-CC	PLUG	1
6705-CD	PLUG	1
6705-GN	BOLT, W/WASHER	4

FSV

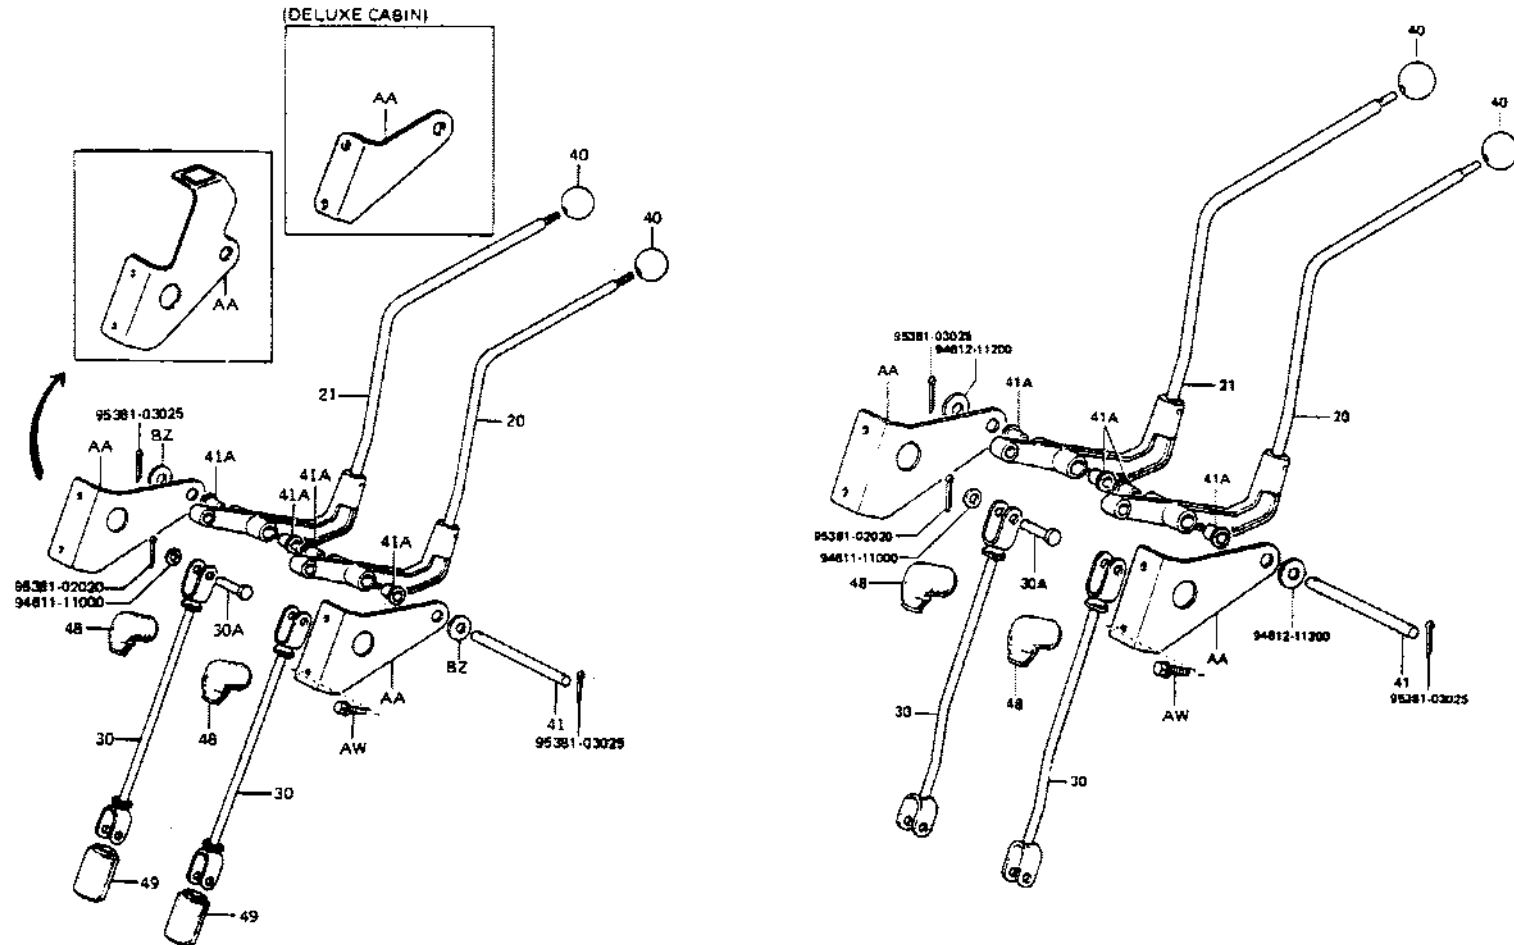 FSV (ALL WEATHER)





6709-008A

6709-1148

G300-001

FSV (3-WAY)

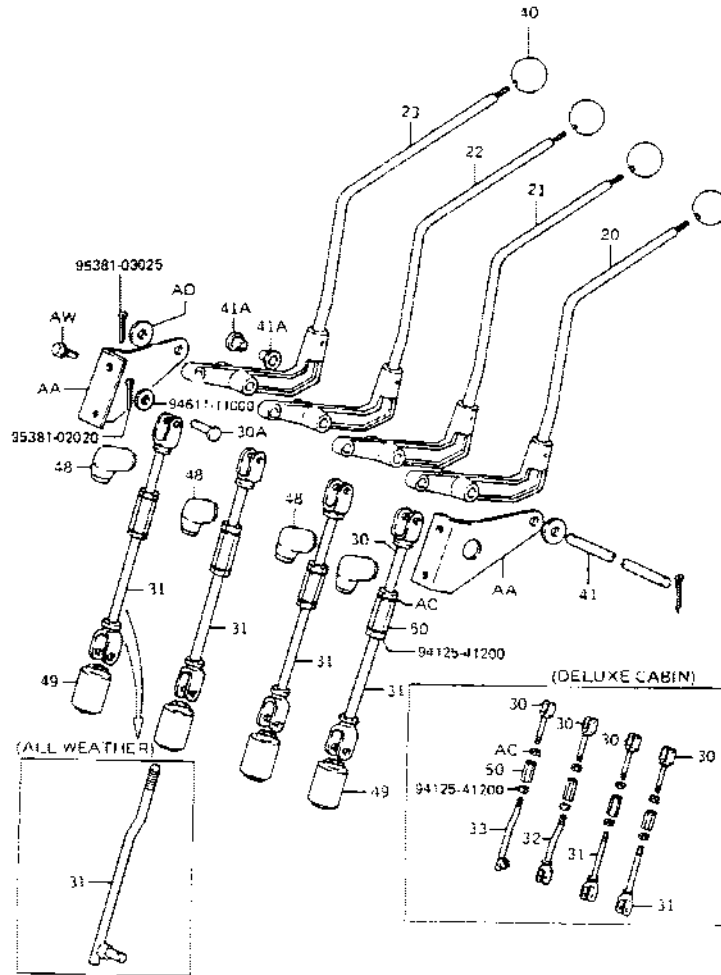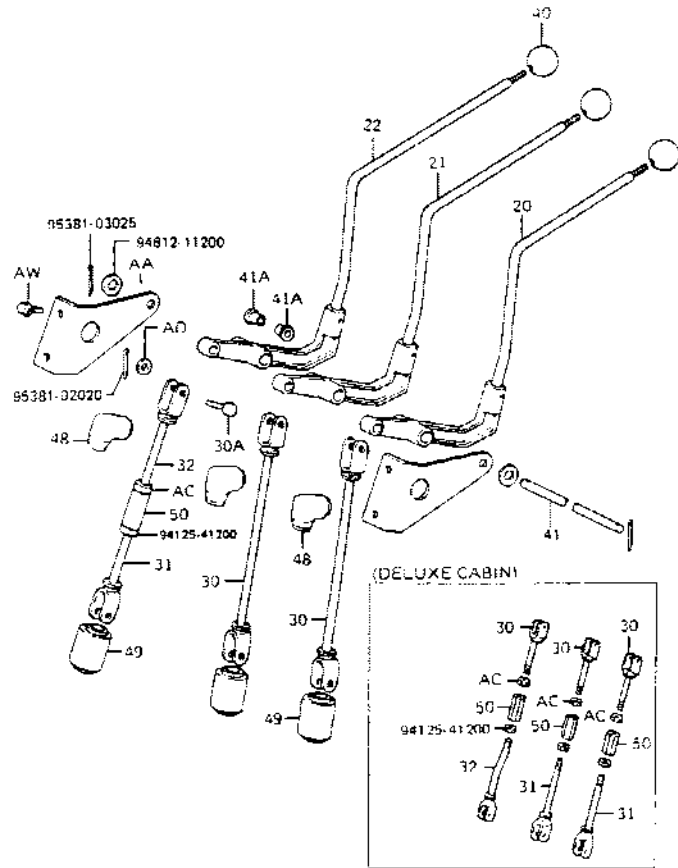  FSV (4-WAY)



6709 123

6709 038C

G300-002

FIG. 6709
DIL CONTROL VALVE LINK

6709

FSV



87/08

PART NAME CODE	PART NAME	QTY
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2	1
6709-22	LEVER SUB-ASSY, CONTROL VALVE, NO.3	1
6709-23	LEVER SUB-ASSY, CONTROL VALVE, NO.4	1
6709-30	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.1	2
6709-30A	PIN (FOR CONTROL VALVE LEVER ROD)	4
6709-31	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.2	1
6709-32	ROD SUB-ASSY	1
6709-33	ROD SUB-ASSY	1
6709-40	KNOB, DIL CONTROL VALVE LEVER	2
6709-41	PIN, DIL CONTROL VALVE LEVER	1
6709-41A	BUSH (FOR LEVER PIN)	4
6709-49	BOOT, CONTRL VALVE LINK, NO.2	2
6709-50	TURNBUCKLE	1
6709-AA	BRACKET SUB-ASSY	1
6709-AC	NUT	1
6709-AD	WASHER, PLATE	2
6709-AH	BOLT	4
6709-B2	WASHER, PLATE	2

G300-003E

2F--F5V (1/2)

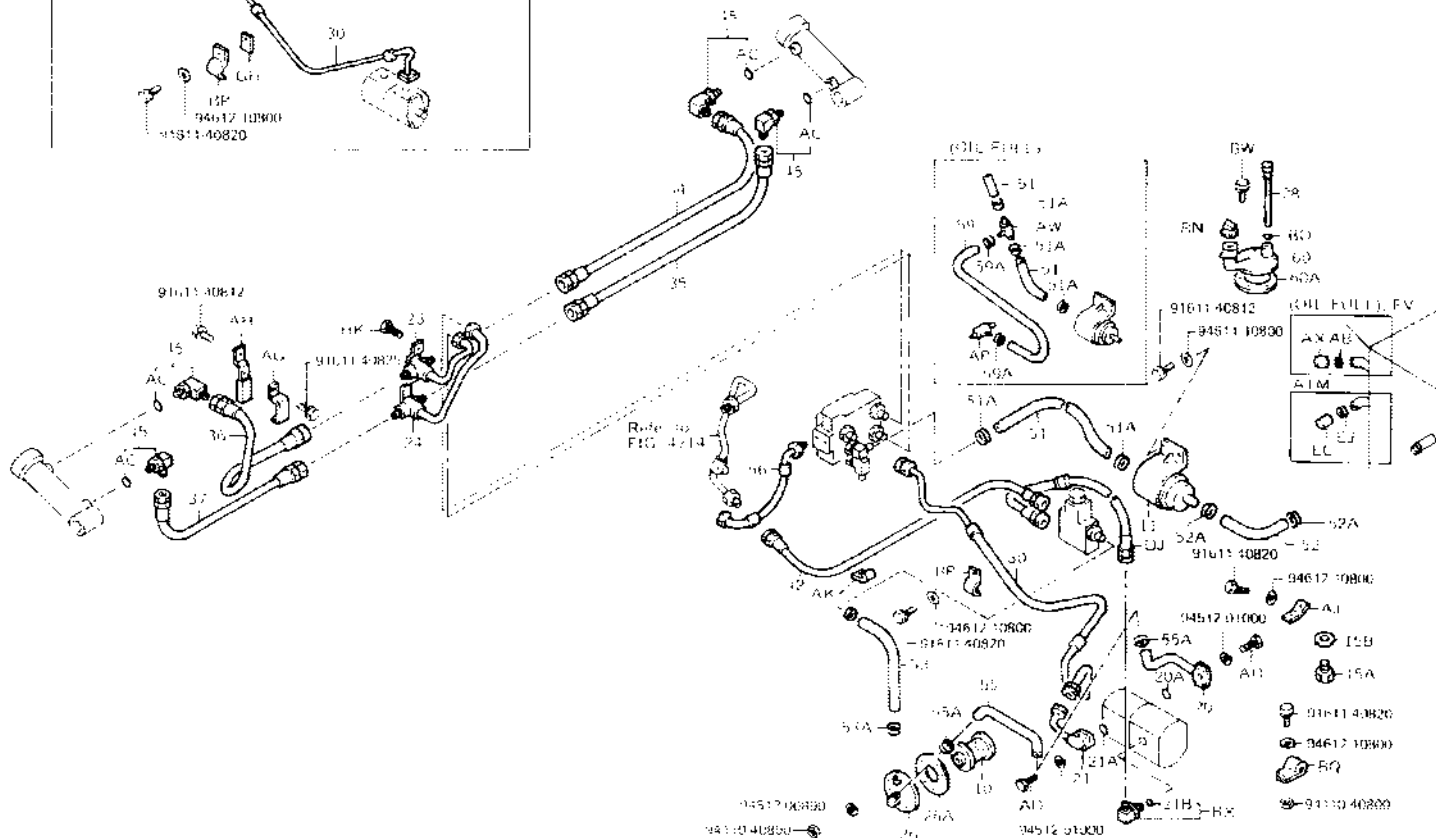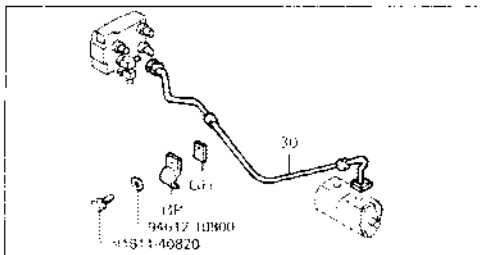  (OIL) (XL CABIN)



6801-136A

G300-001

FIG. 6801
BODY PIPING

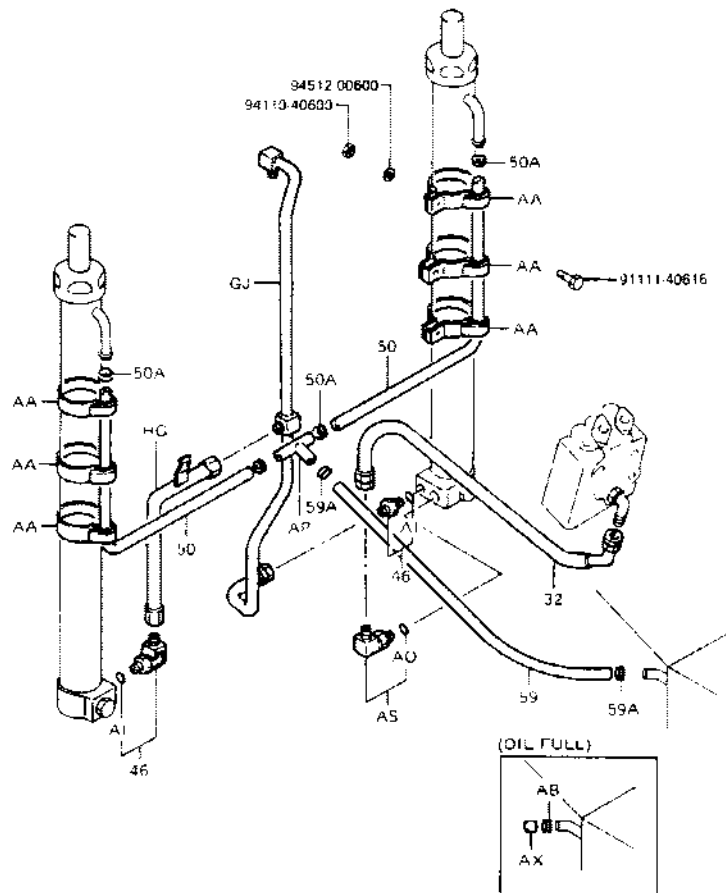 
6801

FSV

87/08

55, 55, E55, 40, F5V

(2/2)



6801 13R

PART NAME	PART NAME	QTY
CODE		
6801-10	FILTER ASSY, SUCTION	1
6801-11	FILTER ASSY, RETURN	1
6801-12	VALVE ASSY, FLOW REGULATOR	1
6801-15A	PLUG (FOR OIL TANK DRAIN)	1
6801-15B	GASKET (FOR OIL TANK DRAIN PLUG)	1
6801-20	PIPE SUB-ASSY (PUMP INLET)	1
6801-20A	RING, O (FOR OIL PUMP INLET)	1
6801-21	PIPE SUB-ASSY (PUMP OUTLET)	1
6801-21A	RING, O (FOR OIL PUMP OUTLET)	1
6801-21B	RING, O (FOR OIL PUMP OUTLET)	1
6801-23	PIPE SUB-ASSY (TILT CYLINDER FRONT)	1
6801-24	PIPE SUB-ASSY (TILT CYLINDER REAR)	1
6801-26	OUTLET SUB-ASSY, OIL TANK	1
6801-26A	PACKING, OIL TANK COVER	1
6801-28	GAGE SUB-ASSY, OIL LEVEL	1
6801-30	HOSE, HIGH PRESSURE, NO.1 (PUMP TO VALVE)	1
6801-32	HOSE, HIGH PRESSURE, NO.1 (VALVE TO LIFT)	1
6801-33	HOSE, HIGH PRESSURE, NO.2 (VALVE TO LIFT)	1
6801-34	HOSE, HIGH PRESSURE, NO.1 (TILT FRONT)	1
6801-35	HOSE, HIGH PRESSURE, NO.1 (TILT REAR)	1
6801-36	HOSE, HIGH PRESSURE, NO.2 (TILT FRONT)	1
6801-37	HOSE, HIGH PRESSURE, NO.2 (TILT REAR)	1
6801-42	HOSE, HIGH PRESSURE (DIVIDER TO VALVE)	1
6801-45	FITTING (FOR TILT CYLINDER)	4
6801-46	FITTING (FOR LIFT CYLINDER)	1-2
6801-50	HOSE, LOW PRESSURE, NO.1 (LIFT TO TANK)	2
6801-50A	CLAMP (FOR LIFT TO TANK NO.1 HOSE)	4
6801-51	HOSE, LOW PRESSURE, NO.1 (VALVE TO TANK)	1
6801-51A	CLAMP (FOR VALVE TO TANK NO.1 HOSE)	2
6801-52	HOSE, LOW PRESSURE, NO.2 (VALVE TO TANK)	1
6801-52A	CLAMP (FOR VALVE TO TANK NO.2 HOSE)	2
6801-53	HOSE, LOW PRESSURE, NO.1 (DIVIDER TO TANK)	1
6801-53A	CLAMP (FOR DIVIDER TO TANK NO.1 HOSE)	2
6801-55	HOSE, LOW PRESSURE (TANK TO PUMP)	1
6801-55A	CLAMP (FOR TANK TO PUMP HOSE)	2
6801-56	HOSE, LOW PRESSURE (STEERING TO VALVE)	1
6801-59	HOSE, LOW PRESSURE, NO.2 (LIFT TO TANK)	1
6801-59A	CLAMP (FOR LIFT TO TANK NO.2 HOSE)	2
6801-60	RETAINER, OIL TANK	1
6801-60A	PACKING, OIL TANK RETAINER	1
6801-AA	BAND, LIFT CYLINDER OVERFLOW HOSE	6
6801-AB	CLAMP	1
6801-AC	RING, O	4
6801-AD	BOLT	4
6801-AE	RING, O	2
6801-AG	CLAMP	1
6801-AH	BRACKET SUB-ASSY, TILT HOSE	1
6801-AI	RING, O	2
6801-AJ	BRACKET, HIGH PRESSURE HOSE	1
6801-AK	CLAMP	1
6801-AQ	RING, O	1
6801-AP	PIPE	1
6801-AR	FITTING	1
6801-AS	FITTING	1
6801-AT	FITTING	1
6801-AV	RING, O	3
6801-AW	ELBOW SUB-ASSY, 3-WAY	1
6801-AX	CAP, OIL TANK OVERFLOW PIPE	1
6801-AZ	SPRING, COMPRESSION	1
6801-BA	PLUG	1
6801-BB	SPRING, COMPRESSION	1
6801-BC	BALL, STEEL	1
6801-BD	RING, O	1
6801-BJ	BAND	1

G300-005

FIG. 6801
BODY PIPING

6801

FSV


87/08

PART NAME CODE	PART NAME	QTY
6801-BL	BOLT	1
6801-BN	CAP SUB-ASSY, OIL TANK	1
6801-BD	RING, O	1
6801-BP	CLAMP	1
6801-BQ	CLAMP	2
6801-BW	BOLT	6
6801-BX	FITTING	1
6801-DJ	HOSE, HIGH PRESSURE (PUMP TO DIVIDER)	1
6801-EC	CAP, RUBBER	1
6801-EJ	CLAMP	1
6801-GH	RUBBER	1
6801-GJ	PIPE SUB-ASSY	1
6801-HG	PIPE SUB-ASSY	1
6801-HR	BOLT	1


G300-006E

33.35.E35.40.FSV

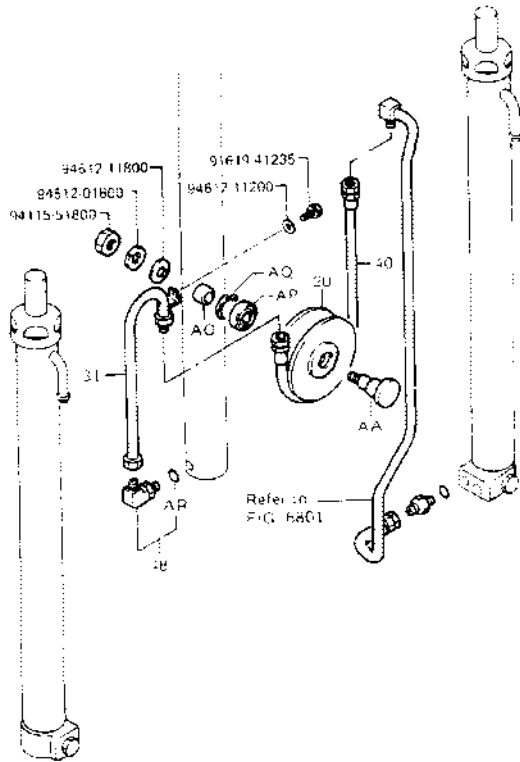 45.FSV



6802 215

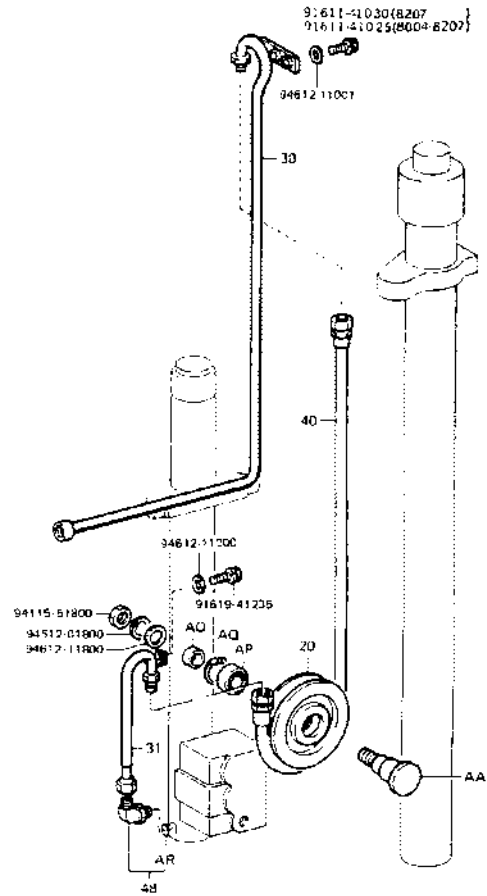 


6802-006 A

G300-001


PART NAME CODE	PART NAME	QTY
6802-28	PULLEY SUB-ASSY, HOSE GUIDE, NO.1	1
6802-30	PIPE SUB-ASSY, NO.1 (FRONT LIFT)	1
6802-31	PIPE SUB-ASSY, NO.2 (FRONT LIFT)	1
6802-40	HOSE, HIGH PRESSURE (FRONT LIFT PULLEY)	1
6802-48	FITTING (FOR FRONT LIFT CYLINDER)	1
6802-AA	PIN, HOSE GUIDE PULLEY	1
6802-AD	WASHER	1
6802-AP	BEARING	1
6802-AQ	RING, HOLE SNAP	1
6802-AR	RING, O	1

2F..FSV

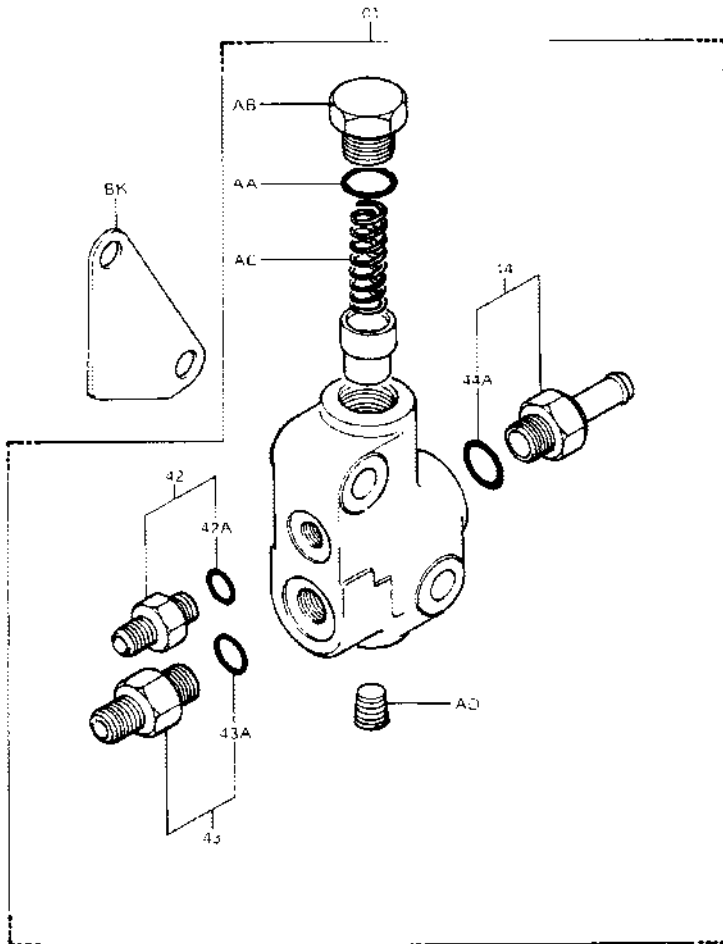 2H..FSV



6820 018 A

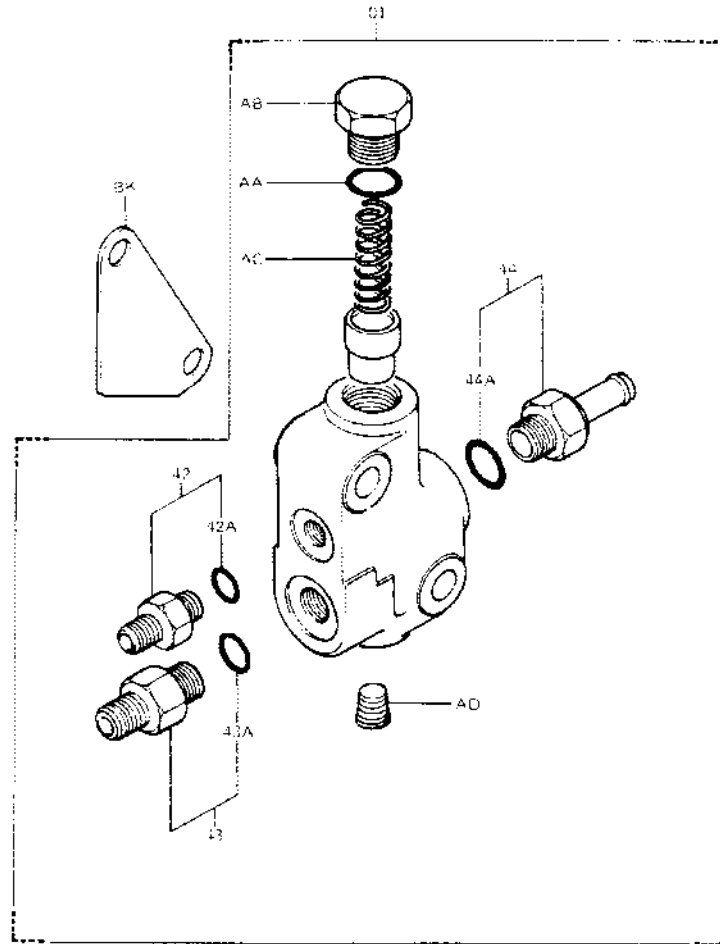 

6820 018 A

G500-001

FIG. 6820
FLOW DIVIDER

6820

FSV

87/08

PART NAME	PART NAME	QTY
CODE		
14820-01	FLOW DIVIDER ASSY	1
14820-42	FITTING	1
14820-42A	RING, O	1
14820-43	FITTING	1
14820-43A	RING, O	1
14820-44	FITTING	1
14820-44A	RING, O	1
14820-AA	RING, O	1
14820-AB	STOPPER	1
14820-AC	SPRING	1
14820-AD	PLUG	1
14820-BK	CUSHION SUB-ASSY	1

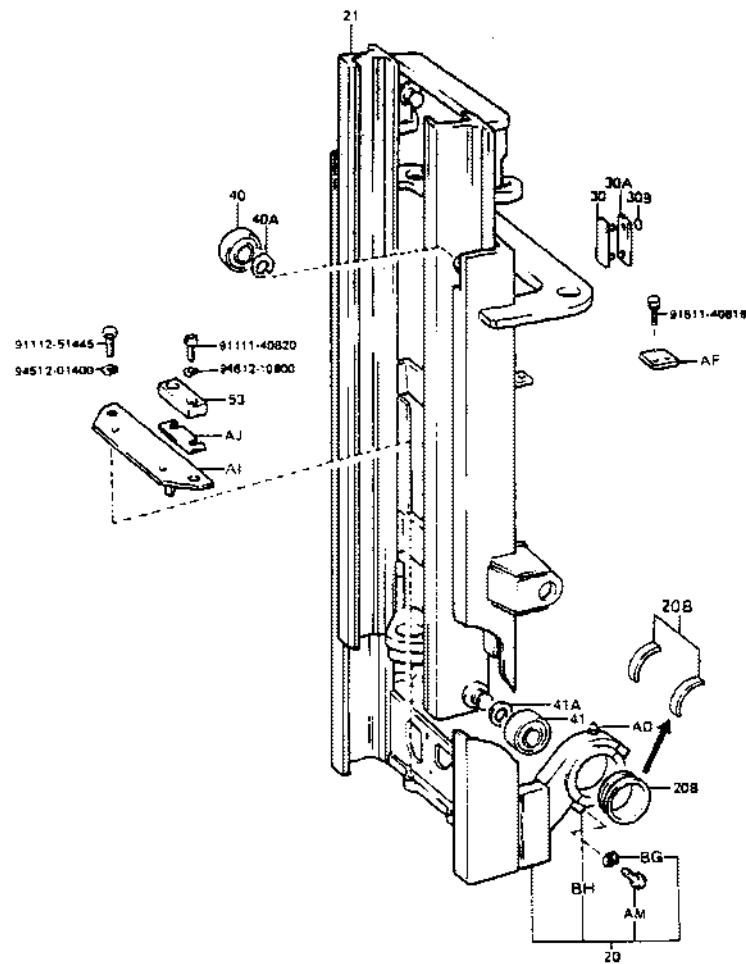 
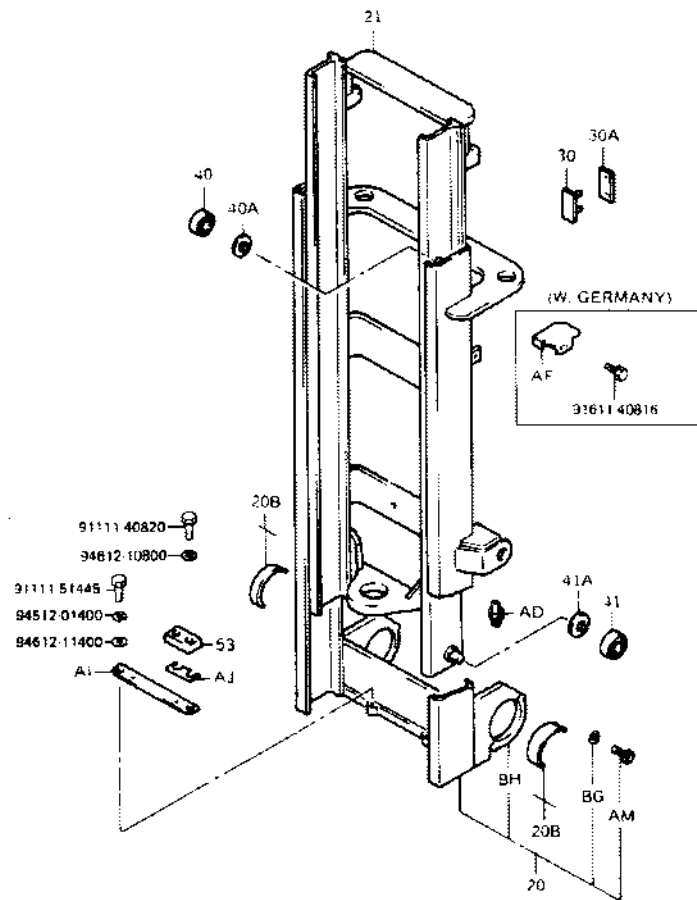 
G300-002E

..... MEMO

.....

33, 35, E35, 40, FV

43, FV



6101 288

6101 014C

Q300-001

FIG. 6101
MAST

6101

FV

87/08

PART NAME	PART NAME	QTY
CODE		
6101-20	MAST SUB-ASSY, OUTER	1
6101-20B	BUSH, MAST SUPPORT	1
6101-21	MAST SUB-ASSY, INNER	1
6101-30	STRIP SUB-ASSY, OUTER MAST	2
6101-30A	SHIM, OUTER MAST STRIP	99
6101-30B	RING, O (FOR OUTER MAST STRIP)	4
6101-40	ROLLER, LIFT (FOR OUTER MAST)	2
6101-40A	SHIM, LIFT ROLLER (FOR OUTER MAST)	99
6101-41	ROLLER, LIFT (FOR INNER MAST)	2
6101-41A	SHIM, LIFT ROLLER (FOR INNER MAST)	99
6101-53	CUSHION, MAST (FOR INNER MAST)	1
6101-A0	FITTING, GREASE	2
6101-AF	COVER, ROLLER	1-2
6101-AI	STOPPER	1
6101-AJ	SHIM, STOPPER	99
6101-AM	BOLT	4
6101-BG	WASHER, SPRING	4
6101-BH	CAP, MAST SUPPORT	2

G300-002E

FIG. 6301
LIFT BRACKET & FORK

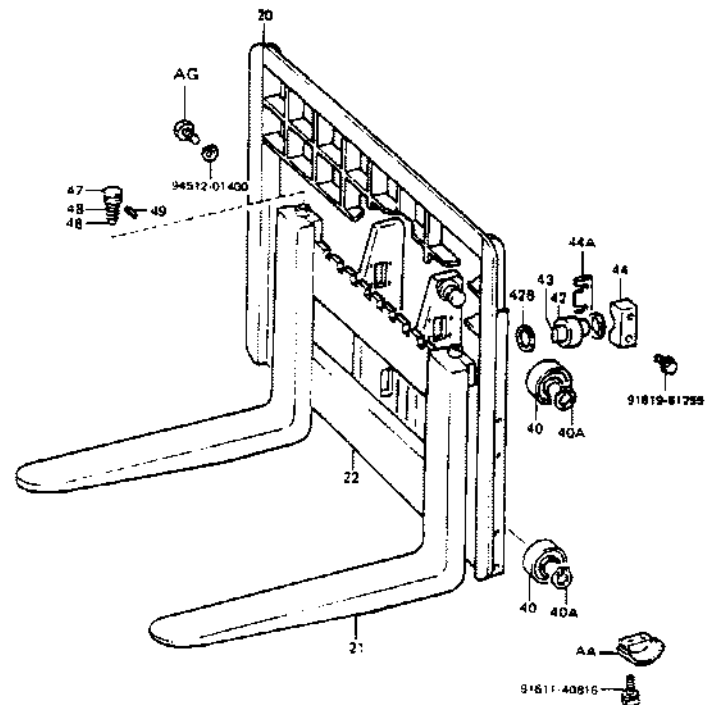 
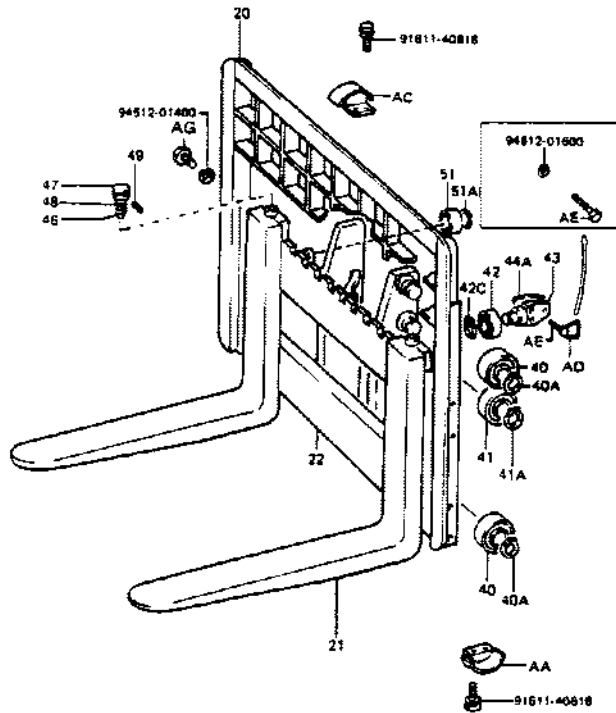 
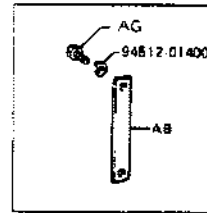 
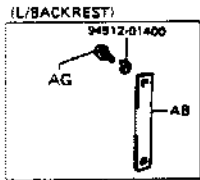 
6301

FV

87/08

33.35.E35.40.FV

45.FV



6301-0128

6301-0114

6300-001

PART NAME CODE	PART NAME	QTY
6301-20	BACKREST SUB-ASSY	1
6301-21	FORK SUB-ASSY	2
6301-22	BRACKET SUB-ASSY, LIFT	1
6301-40	ROLLER, LIFT (UPPER, LOWER)	7- 4
6301-40A	RING, SHAFT SNAP (UPPER, LOWER)	4
6301-41	ROLLER, LIFT (CENTER)	2
6301-41A	RING, SHAFT SNAP (CENTER)	2
6301-42	ROLLER, SIDE	2- 4
6301-42B	SPACER (FOR SIDE ROLLER)	8
6301-42C	RING, SHAFT SNAP (FOR SIDE ROLLER)	2
6301-43	SHAFT, SIDE ROLLER	2- 4
6301-44	HOLDER, SIDE ROLLER SHAFT	8
6301-44A	SHIM (FOR SHAFT HOLDER)	99
6301-46	PIN, FORK STOPPER	2
6301-47	KNOB, FORK STOPPER PIN	2
6301-48	SPRING, FORK STOPPER PIN	2
6301-49	PIN, SPRING (FOR FORK STOPPER PIN)	2
6301-51	ROLLER, SIDE (OUTER)	2
6301-51A	RING, SHAFT SNAP	2
6301-AA	COVER, LIFT BRACKET ROLLER	2- 4
6301-AB	PLATE, SIDE	2
6301-AC	COVER, LIFT BRACKET ROLLER	2
6301-AE	BOLT	6
6301-AG	BOLT	4

FIG 6302
CHAIN & CHAIN WHEEL

6302

FV

85/04

PART NAME CODE	PART NAME	QTY
6302-21	CHAIN SUB-ASSY (FRONT)	2
6302-21A	NUT, CHAIN ADJUST (FRONT)	2
6302-21K	BOLT KIT, CHAIN ANCHOR, NO.1 (FRONT)	2
6302-21L	BOLT KIT, CHAIN ANCHOR, NO.2 (FRONT)	2
6302-41	WHEEL, CHAIN (FRONT)	2
6302-41A	RING, SHAFT SNAP (FOR FRONT CHAIN WHEEL)	2
6302-45	SUPPORT, CHAIN WHEEL	1
6302-AA	PLATE, CHAIN STOPPER	4
6302-AC	CLAMP, CHAIN ANCHOR BOLT	2
6302-AD	NUT, HEXAGON	4
6302-AN	NUT, HEXAGON	4
6302-AR	NUT, LOCK	2
6302-AV	NUT	2

FIG. 6502
FRONT LIFT CYLINDER

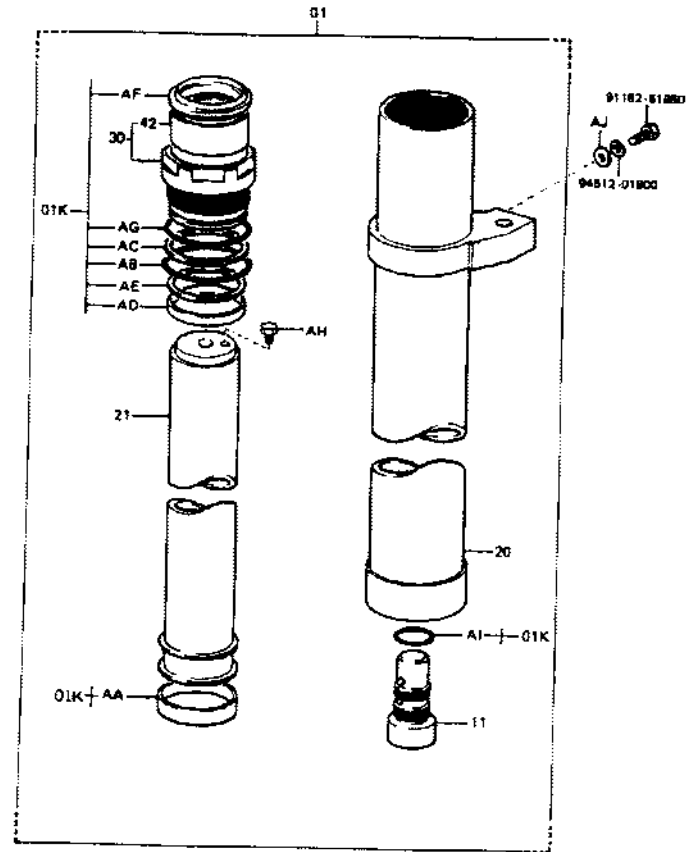 
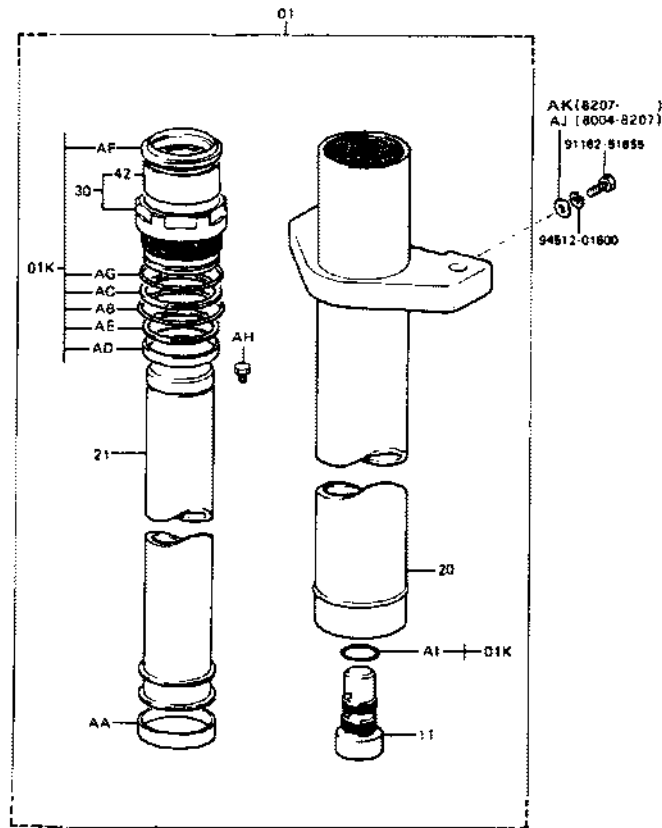 
6502

FV

85/04

33.35.E35.40..FV

45..FV



6502 0068

6502-0068

PART NAME CODE	PART NAME	QTY
6502-01	CYLINDER ASSY, LIFT	1
6502-01K	CYLINDER O/H KIT, LIFT	1
6502-11	VALVE ASSY, SAFETY DOWN	1
6502-20	CYLINDER SUB-ASSY, LIFT	1
6502-21	ROD SUB-ASSY, LIFT CYLINDER	1
6502-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD	1
6502-42	SLEEVE, LIFT CYLINDER ROD GUIDE	1
6502-AA	BUSHING	1
6502-AB	RING, O	1
6502-AC	RING, BACK UP	1
6502-AD	PACKING, U	1
6502-AE	RING, BACK UP	1
6502-AF	SEAL, DUST	1
6502-AG	RING, O	1
6502-AH	PLUG	1
6502-AI	RING, O	1
6502-AJ	COLLAR	2
6502-AK	WASHER, PLATE	2




FIG. 6503
REAR LIFT CYLINDER

6503



FV 87/08

33.35.635.40..FV

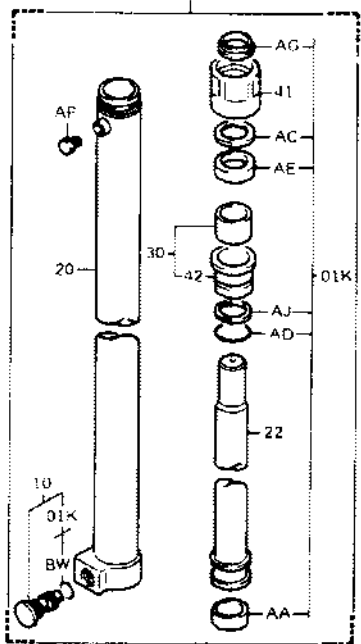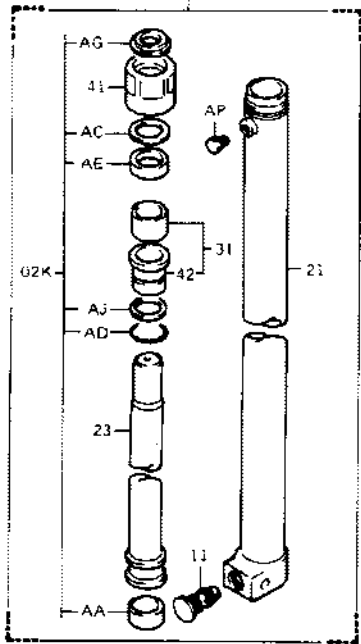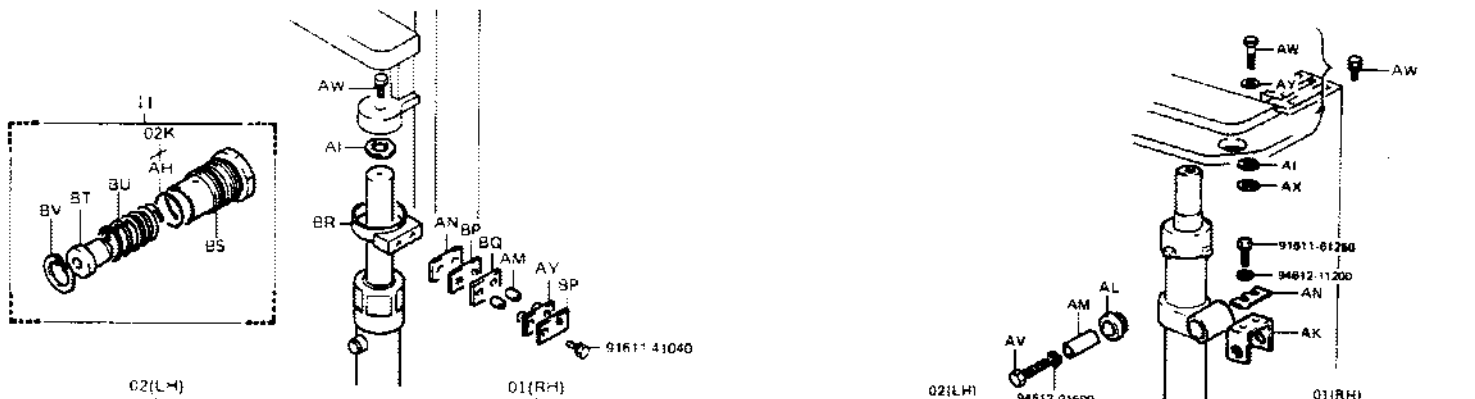   45..FV



6503 045

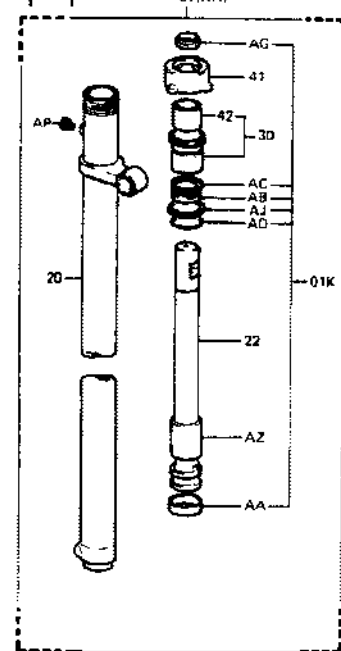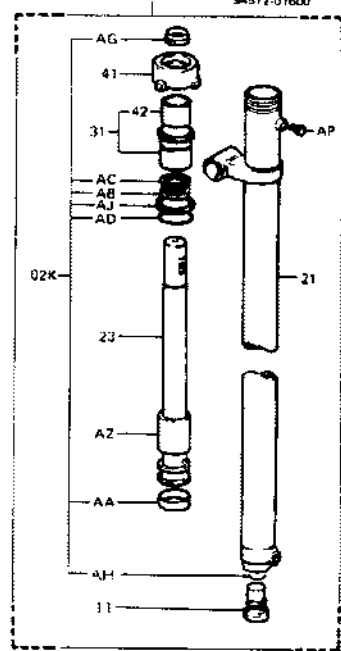  

6503-008C

G300-001



PART NAME CODE	PART NAME	QTY
6503-01	CYLINDER ASSY, LIFT, RH	1
6503-01K	CYLINDER O/H KIT, LIFT, RH	1
6503-02	CYLINDER ASSY, LIFT, LH	1
6503-02K	CYLINDER O/H KIT, LIFT, LH	1
6503-10	VALVE ASSY, FLOW REGULATOR	1
6503-11	VALVE ASSY, SAFETY DOWN	1
6503-20	CYLINDER SUB-ASSY, LIFT, RH	1
6503-21	CYLINDER SUB-ASSY, LIFT, LH	1
6503-22	ROD SUB-ASSY, LIFT CYLINDER, RH	1
6503-23	ROD SUB-ASSY, LIFT CYLINDER, LH	1
6503-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD, RH	1
6503-31	GUIDE SUB-ASSY, LIFT CYLINDER ROD, LH	1
6503-41	COVER, LIFT CYLINDER	2
6503-42	SLEEVE, LIFT CYLINDER ROD GUIDE	2
6503-AA	RING, WEAR	2
6503-AB	PACKING, U	2
6503-AC	RING, BACK UP	2
6503-AD	RING, O	2
6503-AE	PACKING, U	2
6503-AG	SEAL, DUST	2
6503-AH	RING, O	1
6503-AI	SHIM	99
6503-AJ	RING, BACK UP	2
6503-AK	BRACKET SUB-ASSY, LIFT CYLINDER	2
6503-AL	BUSHING	4
6503-AM	SPACER	2
6503-AN	SHIM	99
6503-AP	PLUG	2
6503-AV	BOLT	2
6503-AW	BOLT	2
6503-AX	WASHER	2
6503-AY	RUBBER	2
6503-AZ	SPACER, LIFT CYLINDER	2
6503-BP	PLATE	4
6503-BQ	RUBBER	2
6503-BR	SUPPORT SUB-ASSY	2
6503-BS	BODY	1
6503-BT	PISTON	1
6503-BU	SPRING	1
6503-BV	RING, SNAP	1
6503-BW	RING, O	1

FV (TILT RANGE TABLE)

FV

テイルト角度表
TABLE OF TILT RANGE

生産期間 PROD DATE	型式 MODELS	タイヤ TIRE	揚 高 LIFTING HEIGHT	備 考 DISRIPTION	テイルト角 TILT RANGE
8004-	M, V		H2000-H4000	33, 38, 40	80 - 120
8004-	M, V	SINGLE	H4800-H5000	33, 38, 40	80 - 80
8004-	M, V	DOUBLE	H4800-H5000	33, 38, 40	80 - 120
8004-	M, V		H2000-H3700	E35	80 - 120
9004-	M, V	SINGLE	H4000-H5000	E35	80 - 80
9004-	M, V	DOUBLE	H4000-H5000	E35	80 - 120
8004-	V		H2000-H4000	45	80 - 120
8004-	V	SINGLE	H4800-H5000	45	80 - 80
8004-	V	DOUBLE	H4800-H5000	45	80 - 120
8004-	FSV		H3700-H8000	33, 38, E35, 40, 45	80 - 80
8004-	FV		H2000-H4000	33, 38, E35, 40, 45	80 - 120
8004-	FV, M, V		H2000	ALL WEATHER CAB 33, 38, E35, 40	80 - 100
8004-	FV, V		H2000	ALL WEATHER CAB 45	80 - 80
8004-	FV, V		H2800-H4000	ALL WEATHER CAB 45	80 - 100

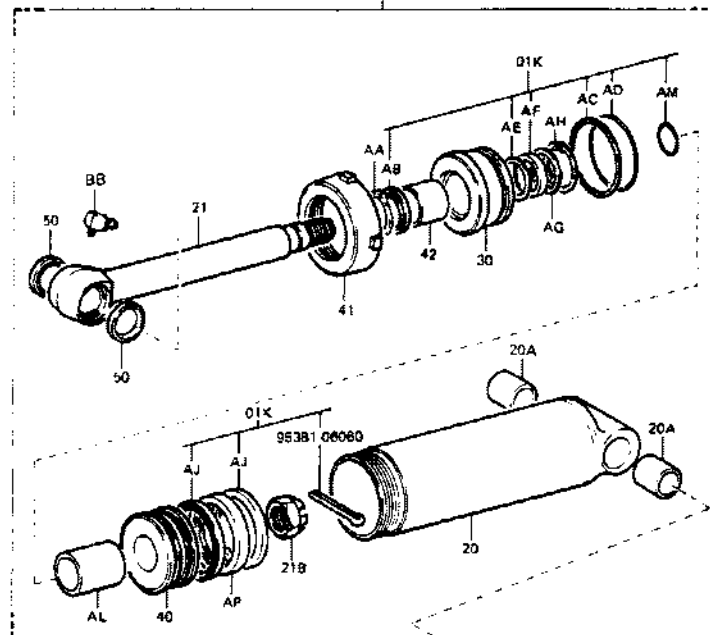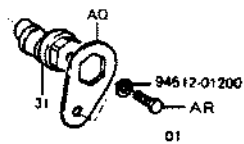  

8511-004A

91811-61020

0511-074

Q300-001

FIG:6511
TILT CYLINDER

6511

FV







87/08

PART NAME: CODE	PART NAME	QTY
6511-01	CYLINDER ASSY, TILT	2
6511-01K	CYLINDER O/H KIT, TILT	2
6511-20	CYLINDER SUB-ASSY, TILT	2
6511-20A	BUSH, PIN (FOR CYLINDER)	4
6511-21	ROD SUB-ASSY, TILT CYLINDER PISTON	2
6511-21B	NUT, CASTLE	2
6511-30	GUIDE SUB-ASSY, TILT CYLINDER ROD	2
6511-31	PIN SUB-ASSY, TILT CYLINDER, FR	2
6511-32	PIN SUB-ASSY, TILT CYLINDER, RR	2
6511-40	PISTON, TILT CYLINDER	2
6511-41	COVER, TILT CYLINDER	2
6511-42	SLEEVE, TILT CYLINDER ROD GUIDE	2
6511-50	SEAL, GREASE	4
6511-AA	RING, HOLE SNAP	2
6511-AB	SEAL, DUST	7
6511-AC	RING, BACK UP	2
6511-AD	RING, O	2
6511-AE	RING, BACK UP	2
6511-AF	PACKING, U	2
6511-AG	PLATE, STOPPER	2
6511-AH	RING, HOLE SNAP	2
6511-AJ	PACKING, U	4
6511-AL	SPACER, TILT CONTROL	2
6511-AM	RING, O	2
6511-AP	SLEEVE, CYLINDER PISTON	2
6511-AQ	PLATE, STOPPER	2
6511-AR	BOLT	2
6511-BB	FITTING, GREASE	4





G500-002E

2F..FV

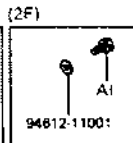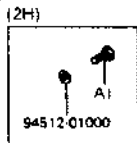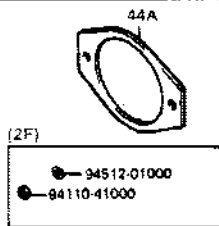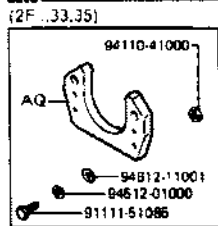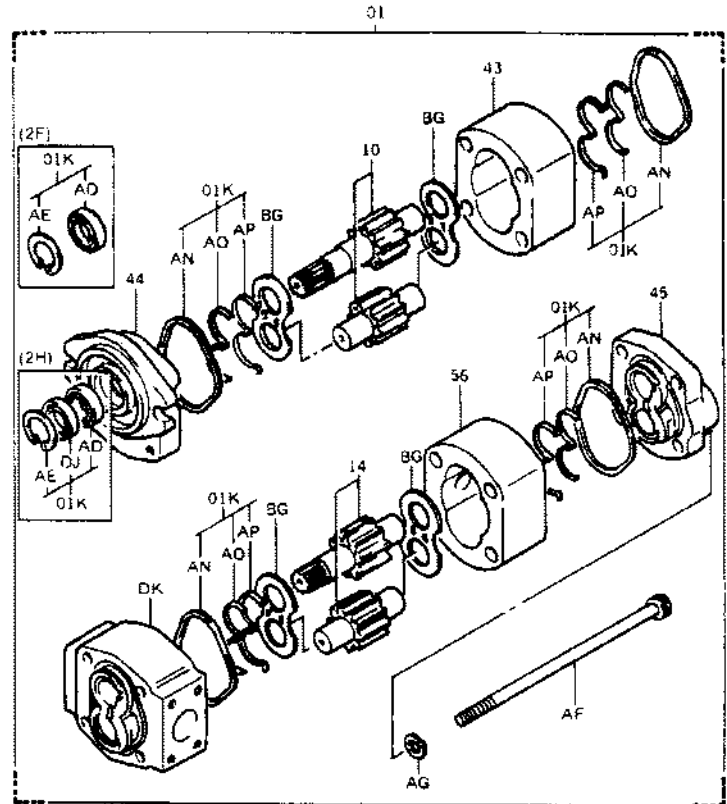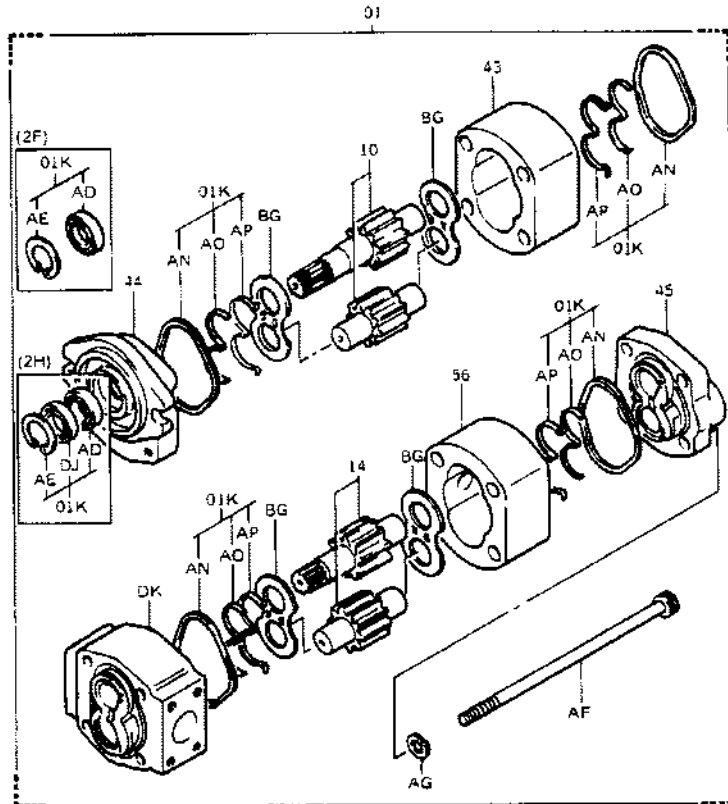      2M..FV



6701-077

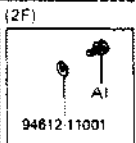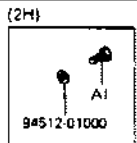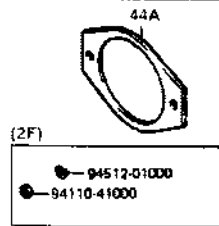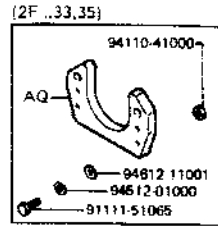    

6701-077

PART NAME CODE	PART NAME	QTY
6701-01	PUMP ASSY, OIL	1
6701-01K	PUMP D/H KIT, OIL	1
6701-10	GEAR SET	1
6701-14	GEAR SET	1
6701-23	BODY	1
6701-44	FLANGE, MOUNTING	1
6701-44A	PACKING, OIL PUMP	1
6701-45	COVER	1
6701-56	BODY	1
6701-AD	SEAL, OIL	1- 2
6701-AE	RING, SNAP	1
6701-AF	BOLT	4
6701-AQ	WASHER, SPRING	4
6701-AI	BOLT	2
6701-AN	GASKET	2- 4
6701-AD	SPACER	4
6701-AP	GASKET	2
6701-AQ	PLATE, OIL PUMP SET	1
6701-BG	PLATE, SIDE, A	4
6701-DJ	SEAL, OIL	1
6701-DX	PLATE, ADAPTOR	1


FIG. 8704
OIL PUMP DRIVE SHAFT

8704

FV

85/04

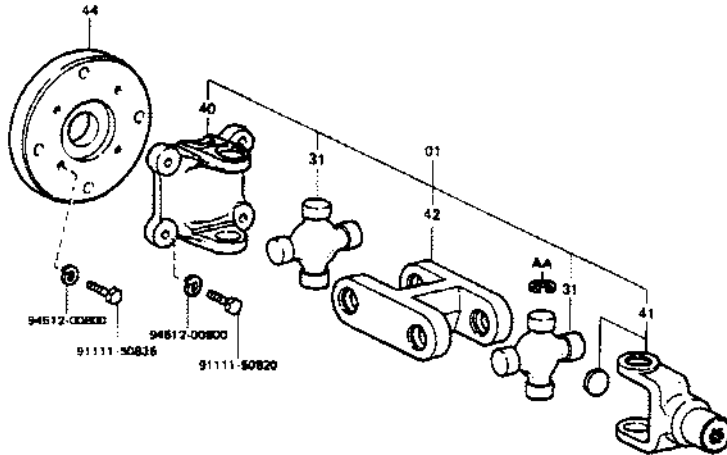 2F..FV



PART NAME CODE	PART NAME	QTY
6704-01	DRIVE ASSY, OIL PUMP	1
6704-31	SPIDER KIT, UNIVERSAL JOINT	2
6704-40	YOKE, UNIVERSAL JOINT FLANGE	1
6704-41	YOKE, OIL PUMP DRIVE JOINT	1
6704-42	YOKE, COUPLING	1
6704-44	PLATE, JOINT YOKE SET	1
6704-AA	RING, SHAFT SNAP	8

8704-001



FIG. 6705
OIL CONTROL VALVE

6705

FV

87/08


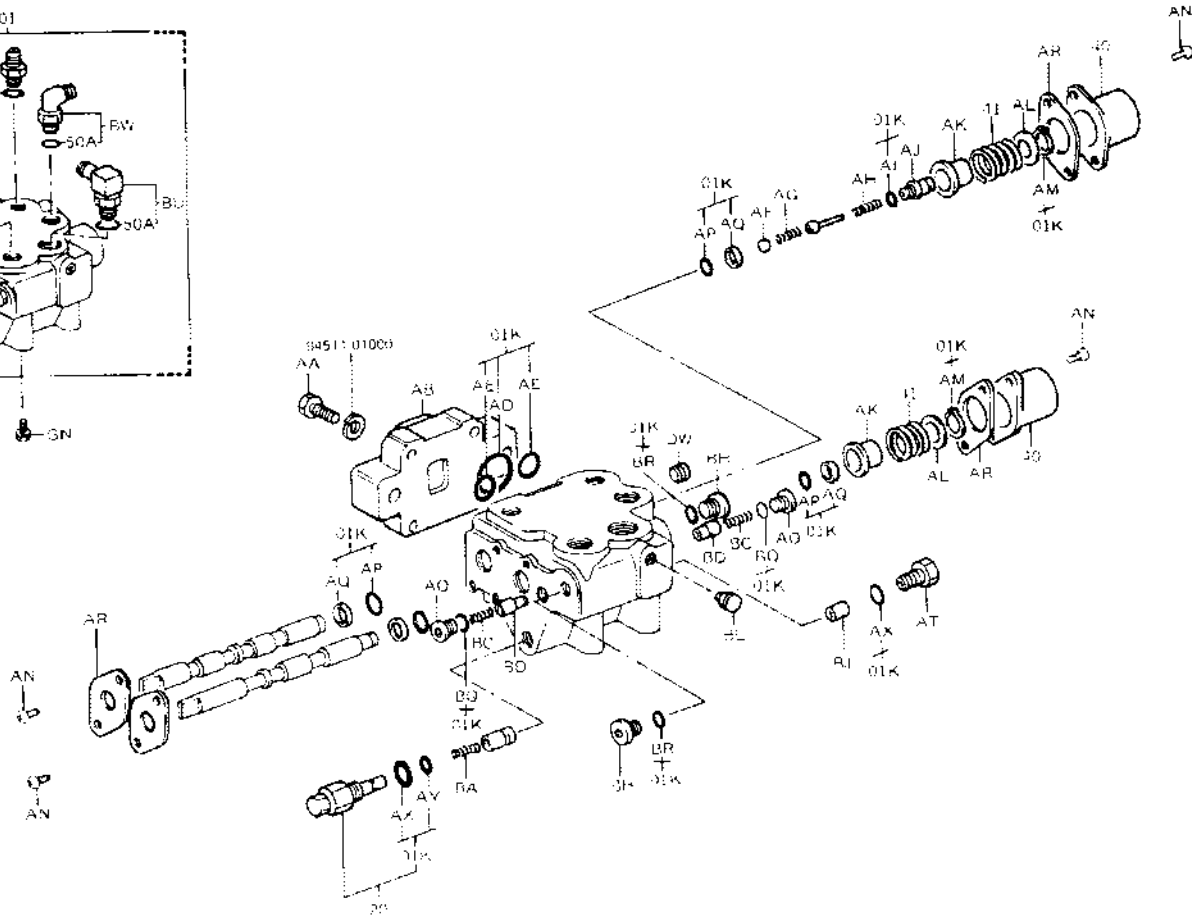 
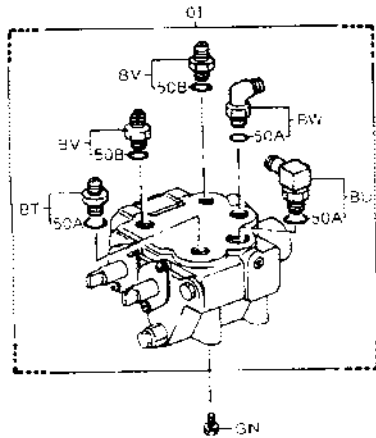 
2F..FV



6705-276

G300-001

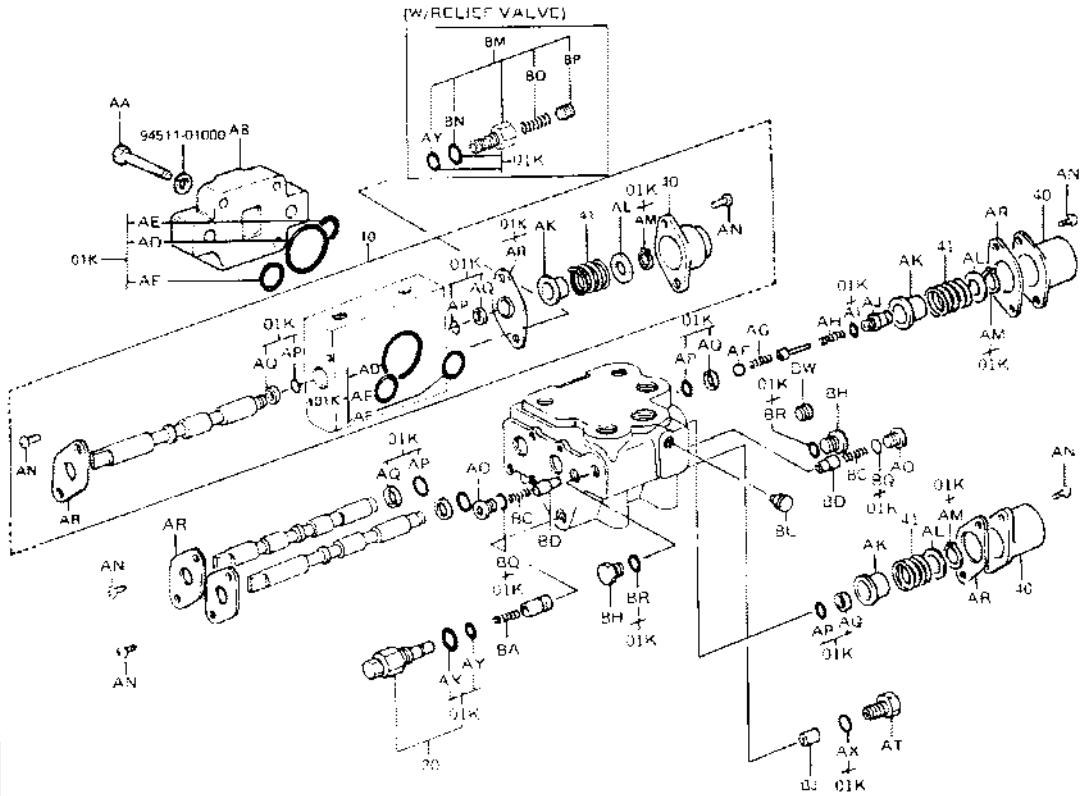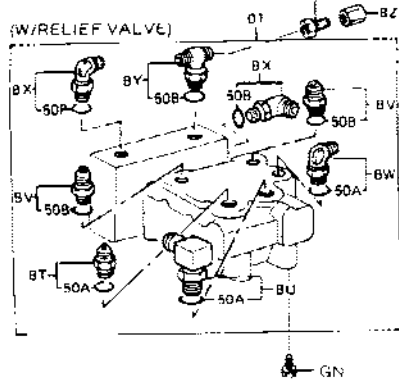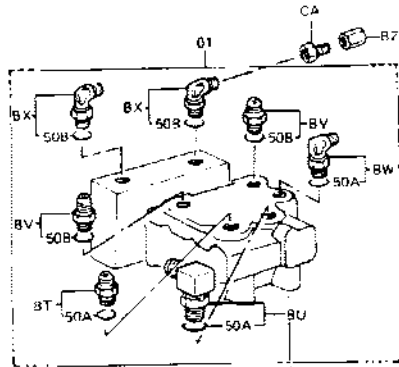   
2F..FV (3-WAY)



6705-277

G300-003

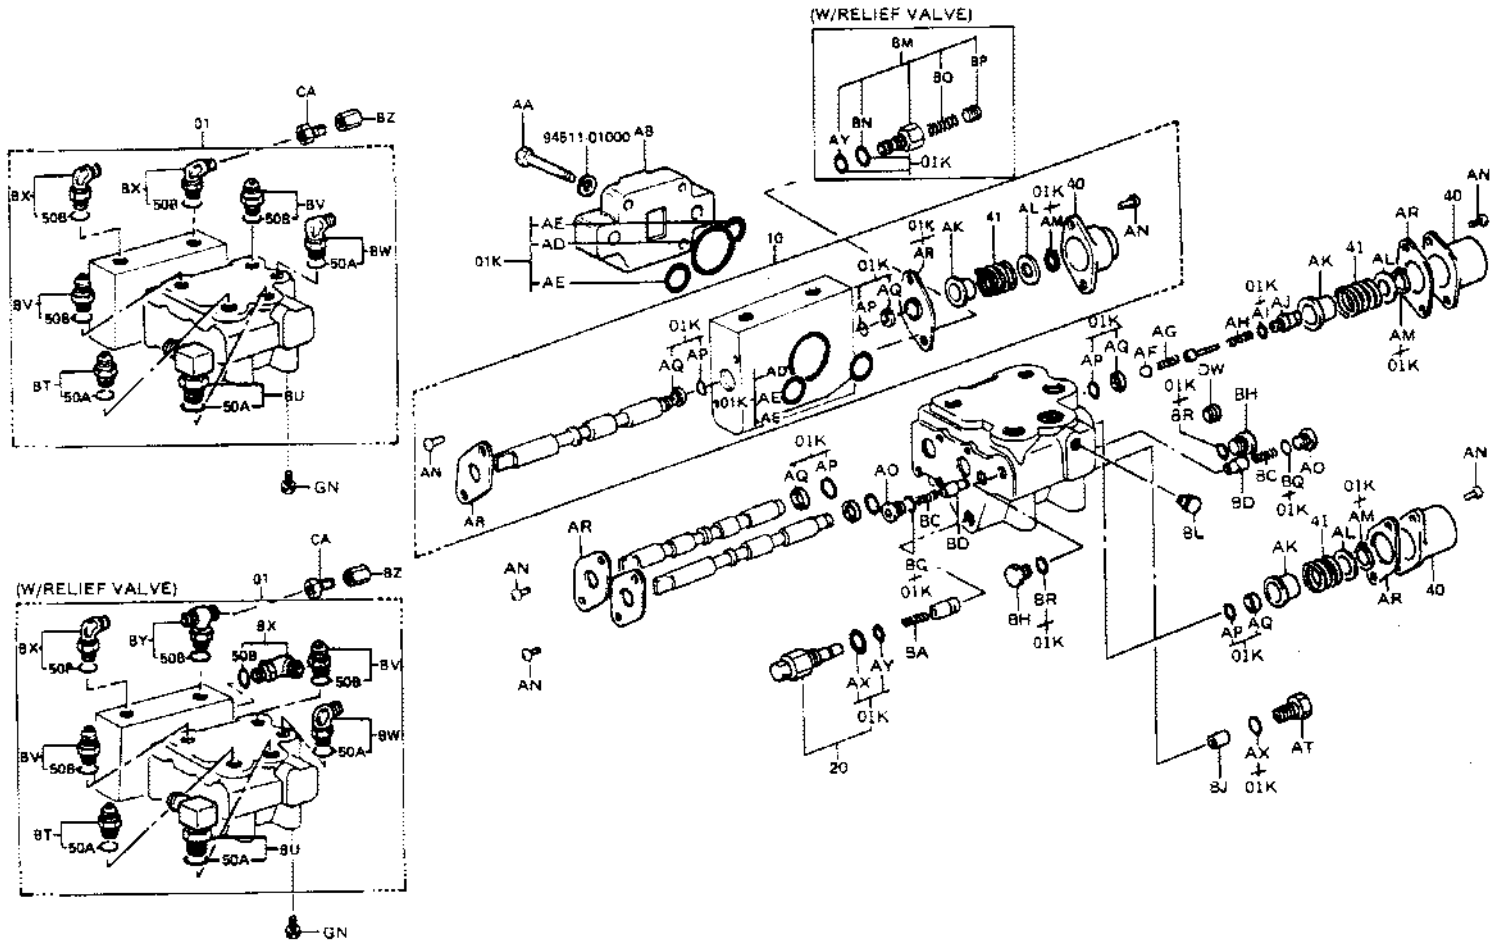 
2H..FV (3-WAY)



6706-277

G300-004

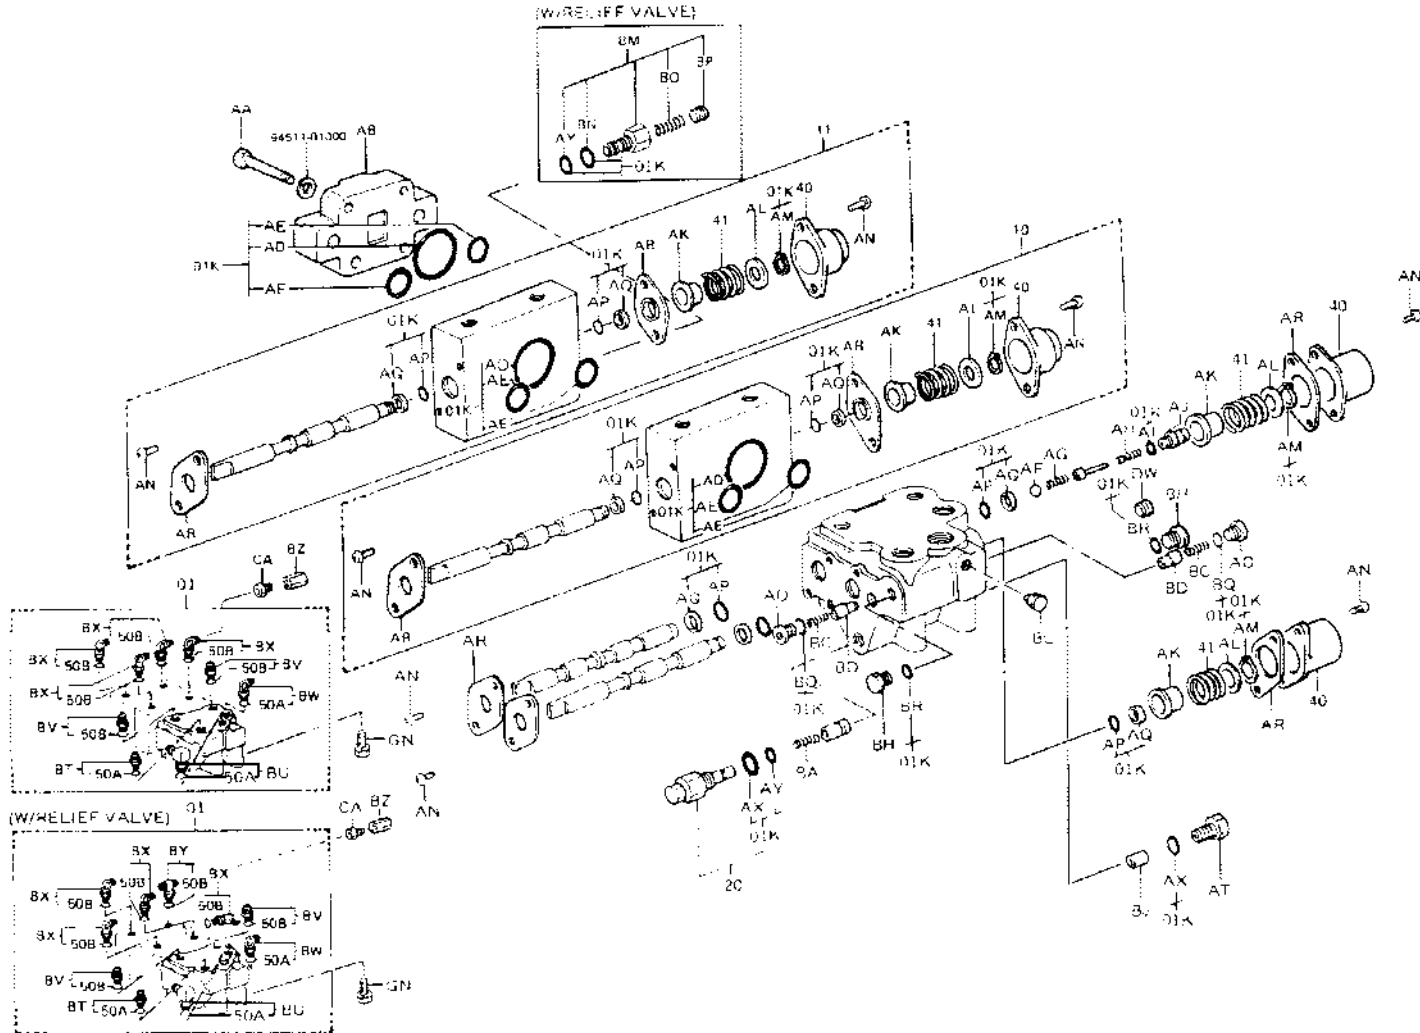 2F--FV (4-WAY)




6705 278

G300-005


PART NAME CODE	PART NAME	QTY
6705-01	VALVE ASSY, OIL CONTROL	1
6705-01K	VALVE O/H KIT, OIL CONTROL	1
6705-10	VALVE ASSY, PLUNGER SECTION, NO.1	1
6705-11	VALVE ASSY, PLUNGER SECTION, NO.2	1
6705-20	VALVE SET, PILOT RELIEF, NO.1	1
6705-25	HOUSING & SPOOL SET, ATTACHMENT, NO.1	1
6705-26	HOUSING & SPOOL SET, ATTACHMENT, NO.2	1
6705-40	COVER, SPRING	2
6705-41	SPRING, COMPRESSION (FOR SPOOL RETURN)	2
6705-504	RING, O, NO.1 (FOR VALVE FITTING)	3
6705-50B	RING, O, NO.2 (FOR VALVE FITTING)	2
6705-AA	BOLT	4
6705-AB	HOUSING, INLET, NO.2	1
6705-AD	RING, O	1
6705-AE	RING, O	2
6705-AF	BALL, STEEL	1
6705-AG	SPRING	1
6705-AH	SPRING, COMPRESSION	1
6705-AI	RING, O	1
6705-AJ	STOPPER	1
6705-AX	HOLDER, SPRING	2
6705-AL	WASHER, PLATE	2
6705-AM	RING, SHAFT SNAP	2
6705-AN	SCREW	8
6705-AD	PLUG	2
6705-AP	RING, O	4
6705-AQ	RING, BACK UP	4
6705-AR	HOLDER, SEAL	4
6705-AT	STOPPER	1
6705-AU	STOPPER	1
6705-AY	RING, O	2
6705-AW	SPRING, COMPRESSION	1
6705-AX	RING, O	2-3
6705-AY	RING, O	1-2
6705-BA	SPRING, COMPRESSION	1
6705-BB	WIRE, ORIFICE TURNING	1
6705-BC	SPRING, COMPRESSION	2
6705-BD	PLUNGER, CHECK	2
6705-BE	STOPPER	1
6705-BH	PLUG	1-2
6705-BI	PLUG	2
6705-BJ	SEAT, VALVE	1
6705-BL	SEAT, INSERT	1
6705-BM	VALVE SUB-ASSY, RELIEF	1-2
6705-BN	RING, O	1
6705-BQ	SPRING	1
6705-BP	STOPPER	1
6705-BG	RING, O	2
6705-BR	RING, O	2
6705-BT	FITTING	1
6705-BU	FITTING	1
6705-BV	FITTING	2
6705-BW	FITTING	1
6705-BX	FITTING	2
6705-BY	FITTING	1
6705-BZ	PLUG	2
6705-CA	FITTING	2
6705-CC	PLUG	1
6705-CW	PLUG	1
6705-GN	BOLT, W/WASHER	4

FV (3-WAY)

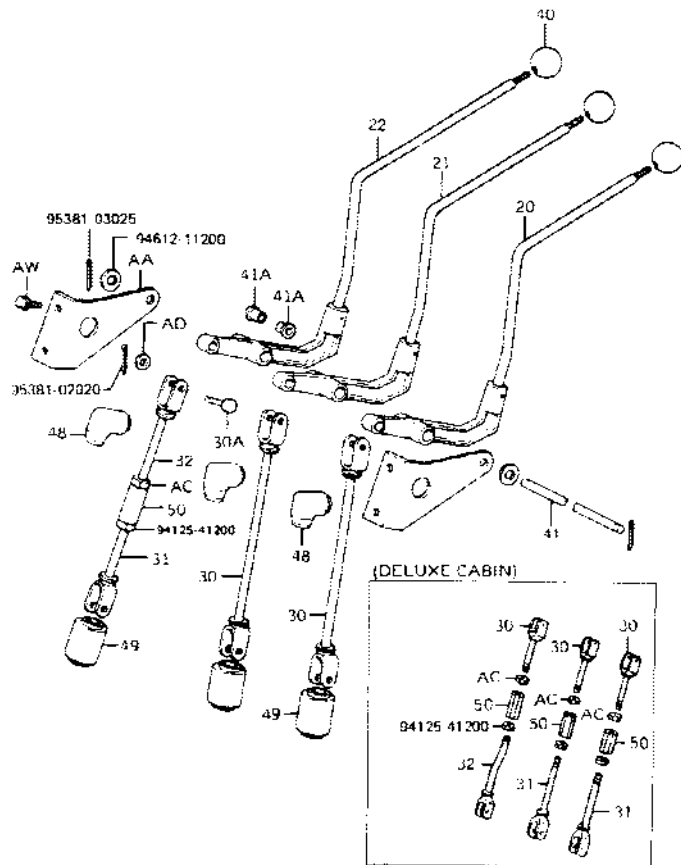 FV (4-WAY)



6709 129

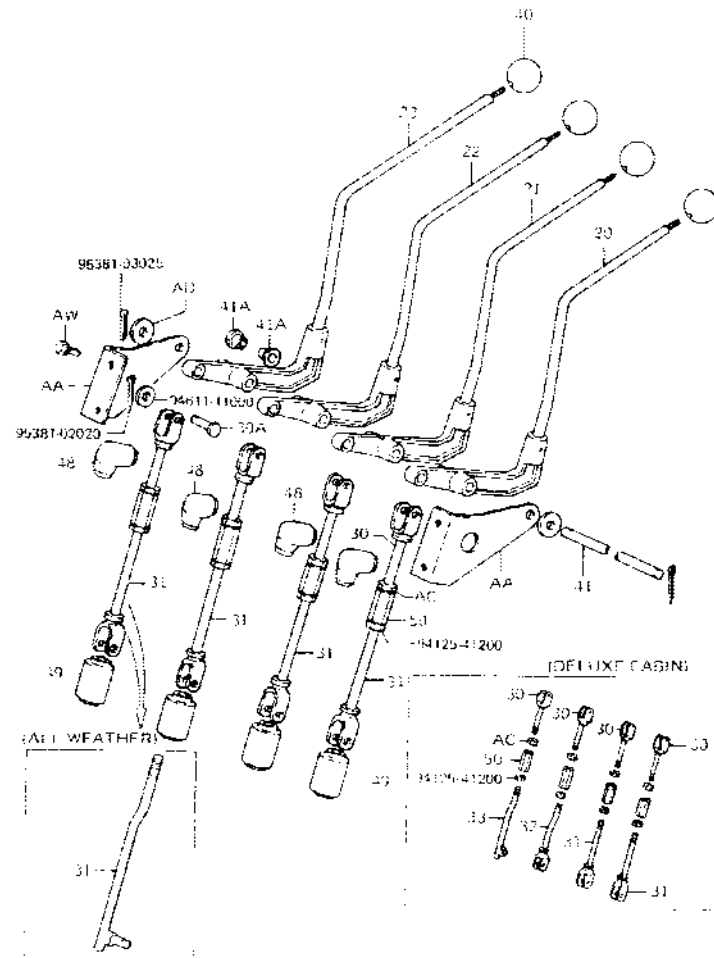 


6709 096C

G300-002

PART NAME CODE	PART NAME	QTY
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2	1
6709-22	LEVER SUB-ASSY, CONTROL VALVE, NO.3	1
6709-23	LEVER SUB-ASSY, CONTROL VALVE, NO.4	1
6709-30	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.1	2
6709-30A	PIN (FOR CONTROL VALVE LEVER ROD)	4
6709-31	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.2	1
6709-32	ROD SUB-ASSY	1
6709-33	ROD SUB-ASSY	1
6709-40	KNOB, OIL CONTROL VALVE LEVER	2
6709-41	PIN, OIL CONTROL VALVE LEVER	1
6709-41A	BUSH (FOR LEVER PIN)	4
6709-49	BOOT, CONTROL VALVE LINK, NO.2	2
6709-50	TURNBUCKLE	1
6709-AA	BRACKET SUB-ASSY	1
6709-AC	NUT	1
6709-AD	WASHER, PLATE	2
6709-AW	BOLT	4
6709-BZ	WASHER, PLATE	2

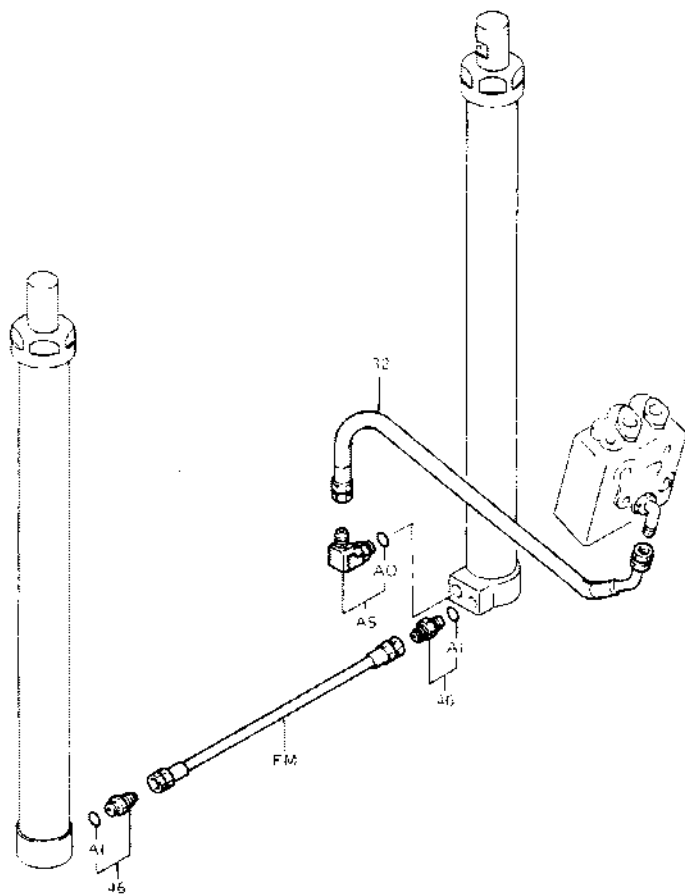 33.35.E35.40..FV (2/2)



PART CODE	PART NAME	QTY
6801-10	FILTER ASSY, SUCTION	1
6801-11	FILTER ASSY, RETURN	1
6801-12	VALVE ASSY, FLOW REGULATOR	1
6801-15A	PLUG (FOR OIL TANK DRAIN)	1
6801-15B	GASKET (FOR OIL TANK DRAIN PLUG)	1
6801-20	PIPE SUB-ASSY (PUMP INLET)	1
6801-20A	RING, O (FOR OIL PUMP INLET)	1
6801-21	PIPE SUB-ASSY (PUMP OUTLET)	1
6801-21A	RING, O (FOR OIL PUMP OUTLET)	1
6801-21B	RING, O (FOR OIL PUMP OUTLET)	1
6801-23	PIPE SUB-ASSY (TILT CYLINDER FRONT)	1
6801-24	PIPE SUB-ASSY (TILT CYLINDER REAR)	1
6801-26	OUTLET SUB-ASSY, OIL TANK	1
6801-26A	PACKING, OIL TANK COVER	1
6801-28	GAGE SUB-ASSY, OIL LEVEL	1
6801-30	HOSE, HIGH PRESSURE, NO.1 (PUMP TO VALVE)	1
6801-32	HOSE, HIGH PRESSURE, NO.1 (VALVE TO LIFT)	1
6801-33	HOSE, HIGH PRESSURE, NO.2 (VALVE TO LIFT)	1
6801-34	HOSE, HIGH PRESSURE, NO.1 (TILT FRONT)	1
6801-35	HOSE, HIGH PRESSURE, NO.1 (TILT REAR)	1
6801-36	HOSE, HIGH PRESSURE, NO.2 (TILT FRONT)	1
6801-37	HOSE, HIGH PRESSURE, NO.2 (TILT REAR)	1
6801-42	HOSE, HIGH PRESSURE (DIVIDER TO VALVE)	1
6801-45	FITTING (FOR TILT CYLINDER)	2
6801-46	FITTING (FOR LIFT CYLINDER)	1
6801-51A	CLAMP (FOR VALVE TO TANK NO.1 HOSE)	2
6801-52	HOSE, LOW PRESSURE, NO.2 (VALVE TO TANK)	1
6801-52A	CLAMP (FOR VALVE TO TANK NO.2 HOSE)	2
6801-53	HOSE, LOW PRESSURE, NO.1 (DIVIDER TO TANK)	1
6801-53A	CLAMP (FOR DIVIDER TO TANK NO.1 HOSE)	2
6801-55	HOSE, LOW PRESSURE (TANK TO PUMP)	1
6801-55A	CLAMP (FOR TANK TO PUMP HOSE)	2
6801-56	HOSE, LOW PRESSURE (STEERING TO VALVE)	1
6801-60	RETAINER, OIL TANK	1
6801-60A	PACKING, OIL TANK RETAINER	1
6801-AA	BAND, LIFT CYLINDER OVERFLOW HOSE	6
6801-AB	CLAMP	1
6801-AC	RING, O	2
6801-AD	BOLT	2
6801-AG	CLAMP	1
6801-AH	BRACKET SUB-ASSY, TILT HOSE	1
6801-AI	RING, O	1
6801-AJ	BRACKET, HIGH PRESSURE HOSE	1
6801-AK	CLAMP	1
6801-AO	RING, O	1
6801-AR	FITTING	1
6801-AS	FITTING	1
6801-AU	RING, O	1
6801-AV	RING, O	3
6801-AX	CAP, OIL TANK OVERFLOW PIPE	1
6801-AZ	SPRING, COMPRESSION	1
6801-9A	PLUG	1
6801-BB	SPRING, COMPRESSION	1
6801-BC	BALL, STEEL	1
6801-BD	RING, O	1
6801-BN	CAP SUB-ASSY, OIL TANK	1
6801-BO	RING, O	1
6801-BP	CLAMP	1
6801-BQ	CLAMP	1
6801-HW	NUT	2
6801-BX	FITTING	1
6801-DJ	HOSE, HIGH PRESSURE (PUMP TO DIVIDER)	1
6801-EC	CAP, RUBBER	1
6801-EJ	CLAMP	1

6801 139

G300-001

FIG. 6801
BODY PIPING

6801

FV

87/08

PART NAME CODE	PART NAME	QTY
6801-EM	HOSE, HIGH PRESSURE	1
6801-GH	RUBBER	1
6801-HK	BOLT	1

G300-002E


FIG. 6802
MAST PIPING

6802

FV

87/08

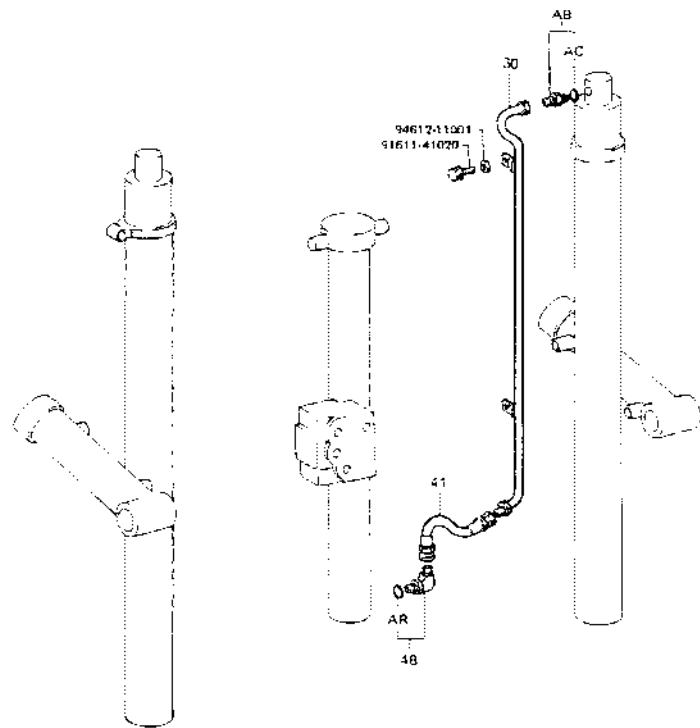 FV




6802 009 B

PART NAME	PART NAME	QTY
CODE		
6802-30	PIPE SUB-ASSY. NO.1 (FRONT LIFT)	1
6802-41	HOSE, HIGH PRESSURE, NO.1 (FRONT LIFT)	1
6802-48	FITTING (FOR FRONT LIFT CYLINDER)	1
6802-AB	FITTING	1
6802-AC	RING, O	1
6802-AR	RING, O	1


G300-007E

ZF..FV

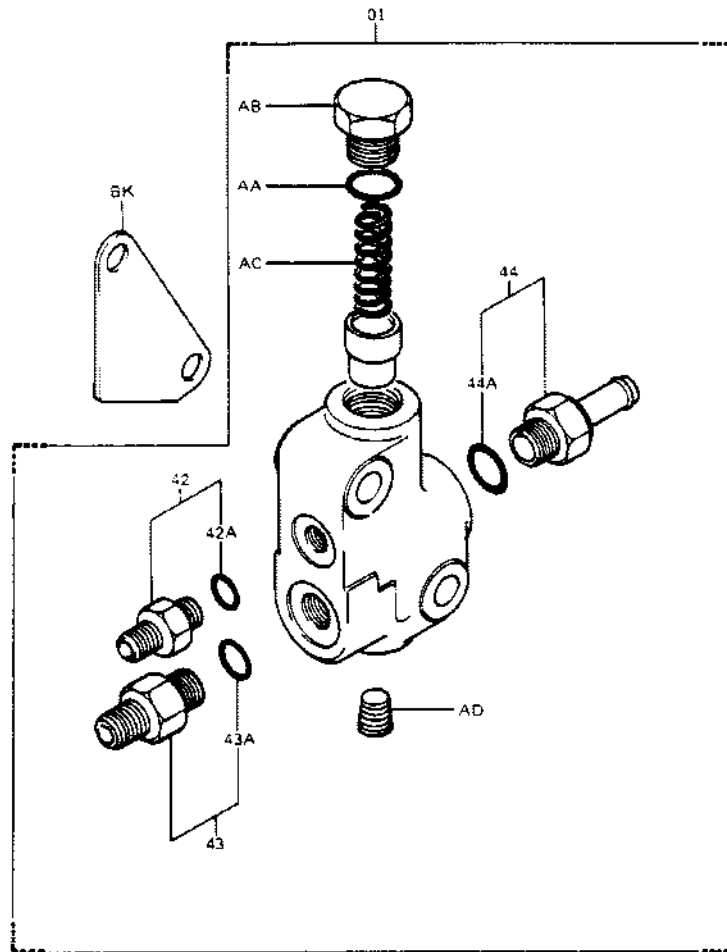 ZH..FV



6820-018 A

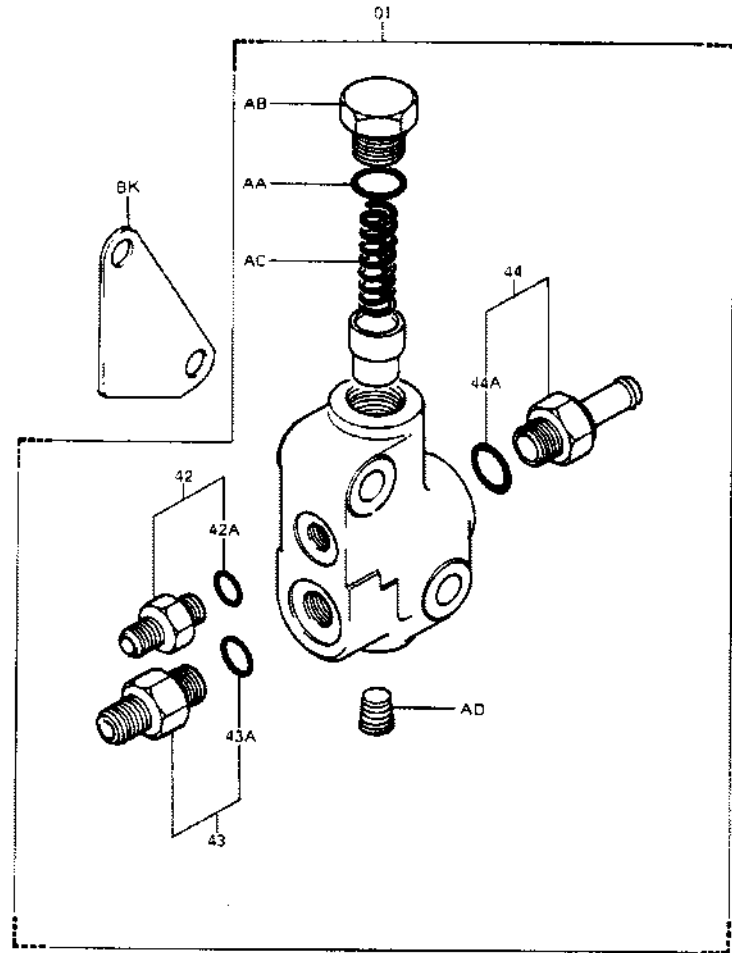 

6820-018 A

G300-001

FIG. 6820
FLOW DIVIDER

6820

FV

87/08

PART NAME CODE	PART NAME	QTY
6820-01	FLOW DIVIDER ASSY -----	1
6820-42	FITTING -----	1
6820-42A	RING, O -----	1
6820-43	FITTING -----	1
6820-43A	RING, O -----	1
6820-44	FITTING -----	1
6820-44A	RING, O -----	1
6820-4A	RING, O -----	1
6820-AB	STOPPER -----	1
6820-AC	SPRING -----	1
6820-AD	PLUG -----	1
6820-BX	CUSHION SUB-ASSY -----	1

G500-002E


FIG. 6101
MAST

6101

M

87/08

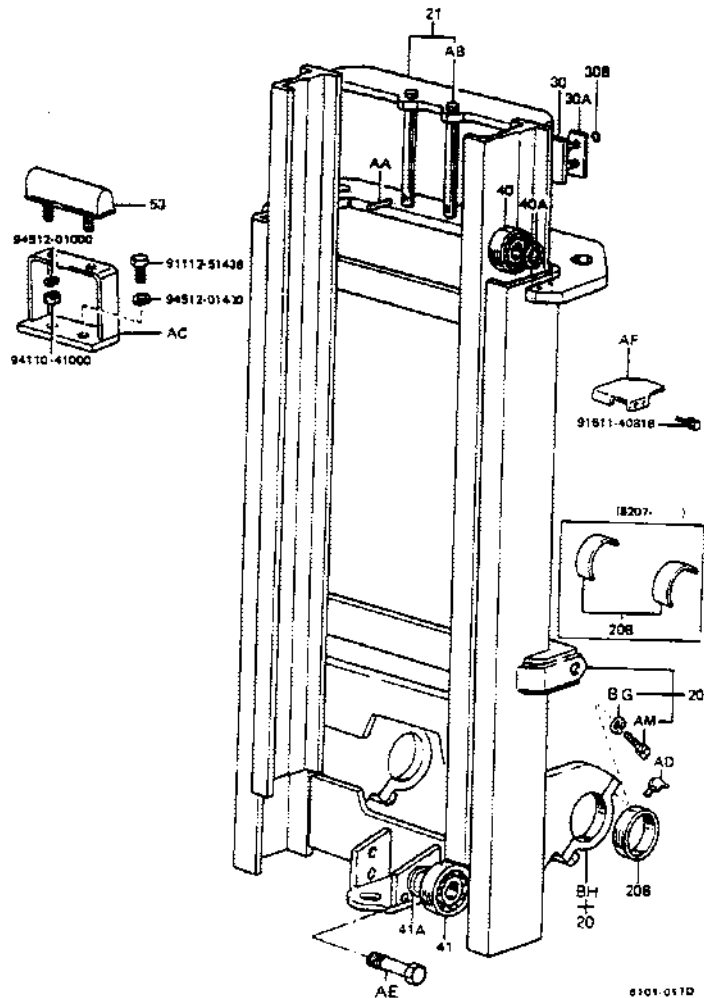 33-35-E35-40-M



PART NAME	PART NAME	QTY
CODE		
6101-20	MAST SUB-ASSY, OUTER	1
6101-20B	BUSH, MAST SUPPORT	1
6101-21	MAST SUB-ASSY, INNER	1
6101-30	STRIP SUB-ASSY, OUTER MAST	2
6101-30A	ISHIM, OUTER MAST STRIP	99
6101-30B	IRING, O (FOR OUTER MAST STRIP)	4
6101-40	ROLLER, LIFT (FOR OUTER MAST)	2
6101-40A	ISHIM, LIFT ROLLER (FOR OUTER MAST)	99
6101-41	ROLLER, LIFT (FOR INNER MAST)	2
6101-41A	ISHIM, LIFT ROLLER (FOR INNER MAST)	99
6101-53	CUSHION, MAST (FOR INNER MAST)	2
6101-AA	PIN, SPRING	2
6101-AB	GUIDE, CHAIN WHEEL SUPPORT	2
6101-AC	STOPPER, INNER MAST	2
6101-AD	FITTING, GREASE	2
6101-AE	BOLT, STOPPER	1
6101-AF	COVER, ROLLER	1
6101-AM	BOLT	4
6101-BG	WASHER, SPRING	4
6101-BH	CAP, MAST SUPPORT	2

Q300-001E


FIG. 6301
LIFT BRACKET & FORK

6301

M

87/08

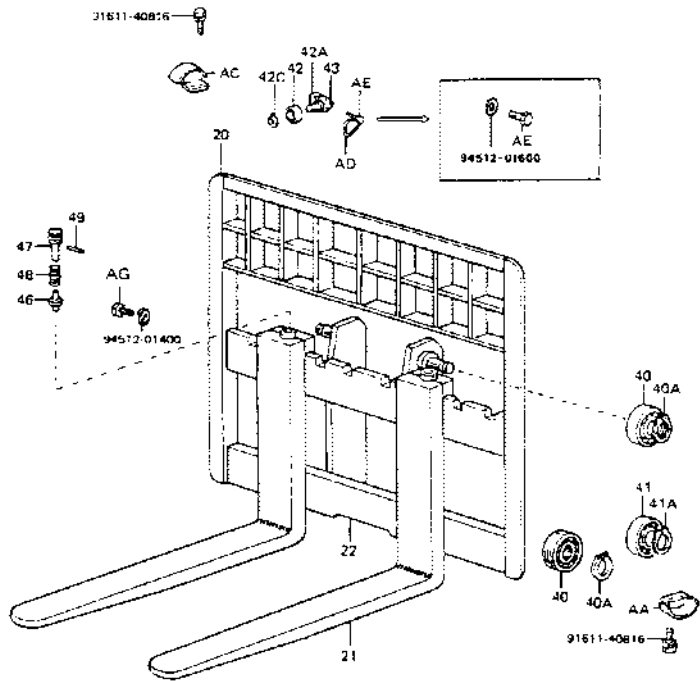 33.35.F35.40.M



PART NAME	PART NAME	QTY
CODE		
6301-20	BACKREST SUB-ASSY	1
6301-21	FORK SUB-ASSY	2
6301-22	BRACKET SUB-ASSY, LIFT	1
6301-40	ROLLER, LIFT (UPPER, LOWER)	7-4
6301-40A	RING, SHAFT SNAP (UPPER, LOWER)	4
6301-41	ROLLER, LIFT (CENTER)	2
6301-41A	RING, SHAFT SNAP (CENTER)	2
6301-42	ROLLER, SIDE	4
6301-42A	SHIM (FOR SIDE ROLLER)	99
6301-42C	RING, SHAFT SNAP (FOR SIDE ROLLER)	4
6301-43	SHAFT, SIDE ROLLER	4
6301-46	PIN, FORK STOPPER	2
6301-47	KNOB, FORK STOPPER PIN	2
6301-48	SPRING, FORK STOPPER PIN	2
6301-49	PIN, SPRING (FOR FORK STOPPER PIN)	2
6301-AA	COVER, LIFT BRACKET ROLLER	2
6301-AC	COVER, LIFT BRACKET ROLLER	2
6301-AE	BOLT	12

6301 0108

G300-001E


FIG 6302
CHAIN & CHAIN WHEEL

6302

M

85/04

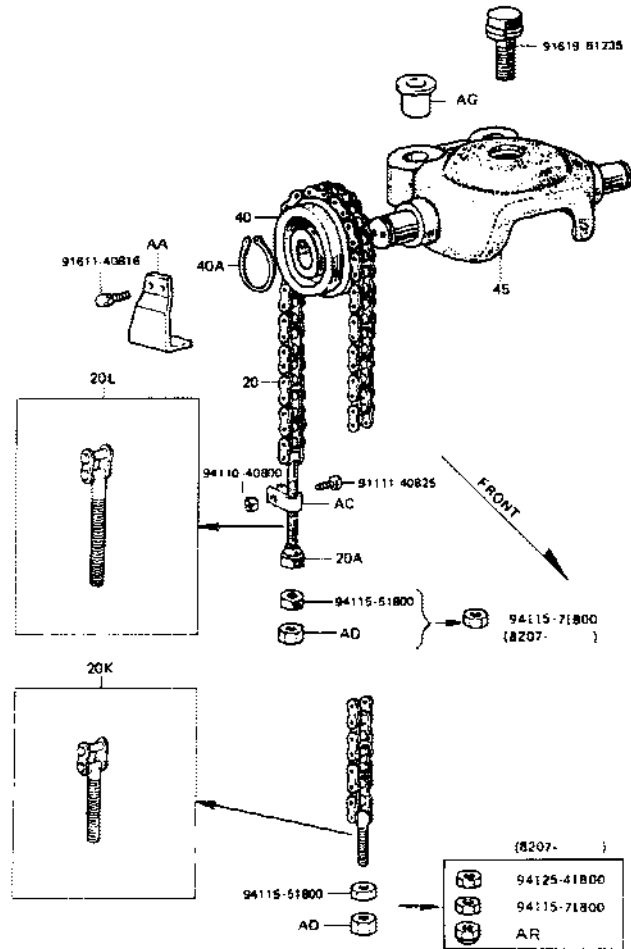 53,35.E35.40.M







6302-015A

PART NAME	PART NAME	QTY
CODE		
6302-20	CHAIN SUB-ASSY	2
6302-20A	NUT, CHAIN ADJUST	2
6302-20K	BOLT KIT, CHAIN ANCHOR, NO.1	2
6302-20L	BOLT KIT, CHAIN ANCHOR, NO.2	2
6302-40	WHEEL, CHAIN	2
6302-40A	RING, SHAFT SNAP (FOR CHAIN WHEEL)	2
6302-45	SUPPORT, CHAIN WHEEL	1
6302-AA	PLATE, CHAIN STOPPER	2
6302-AC	CLAMP, CHAIN ANCHOR BOLT	2
6302-AD	BUSHING	2
6302-AR	NUT, LOCK	2

PART NAME CODE	PART NAME	QTY
6511-01	CYLINDER ASSY, TILT	2
6511-01K	CYLINDER O/H KIT, TILT	2
6511-20	CYLINDER SUB-ASSY, TILT	2
6511-20A	BUSH, PIN (FOR CYLINDER)	4
6511-21	ROD SUB-ASSY, TILT CYLINDER PISTON	2
6511-21B	NUT, CASTLE	2
6511-30	GUIDE SUB-ASSY, TILT CYLINDER ROD	2
6511-31	PIN SUB-ASSY, TILT CYLINDER, FR	2
6511-32	PIN SUB-ASSY, TILT CYLINDER, RR	2
6511-40	PISTON, TILT CYLINDER	2
6511-41	COVER, TILT CYLINDER	2
6511-42	SLEEVE, TILT CYLINDER ROD GUIDE	2
6511-50	SEAL, GREASE	2
6511-AA	RING, HOLE SNAP	2
6511-AB	SEAL, DUST	2
6511-AC	RING, BACK UP	2
6511-AD	RING, O	2
6511-AE	RING, BACK UP	2
6511-AF	PACKING, U	2
6511-AG	PLATE, STOPPER	2
6511-AH	RING, HOLE SNAP	2
6511-AJ	PACKING, U	2
6511-AL	SPACER, TILT CONTROL	2
6511-AM	RING, O	2
6511-AP	SLEEVE, CYLINDER PISTON	2
6511-AQ	PLATE, STOPPER	2
6511-AR	BOLT	2
6511-BB	FITTING, GREASE	2

2F..M

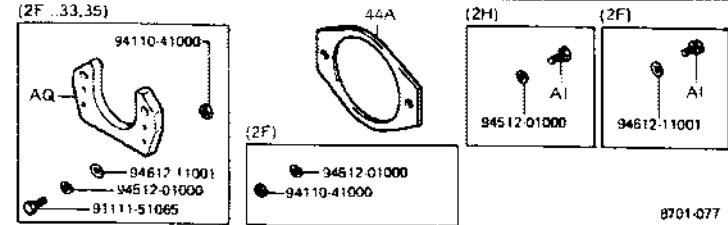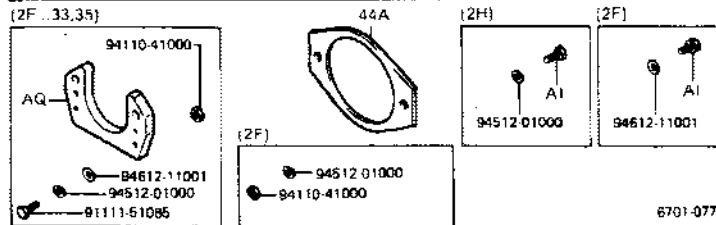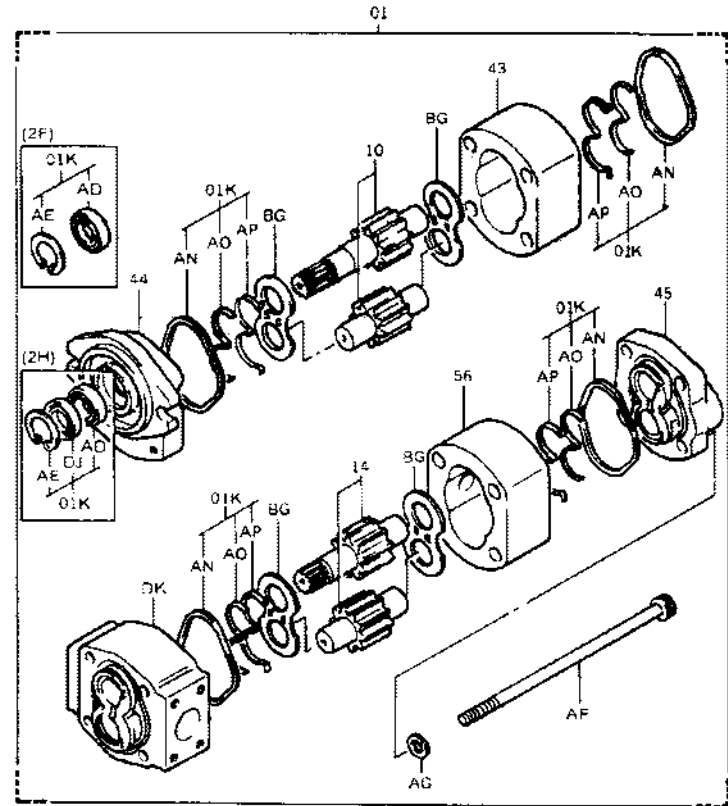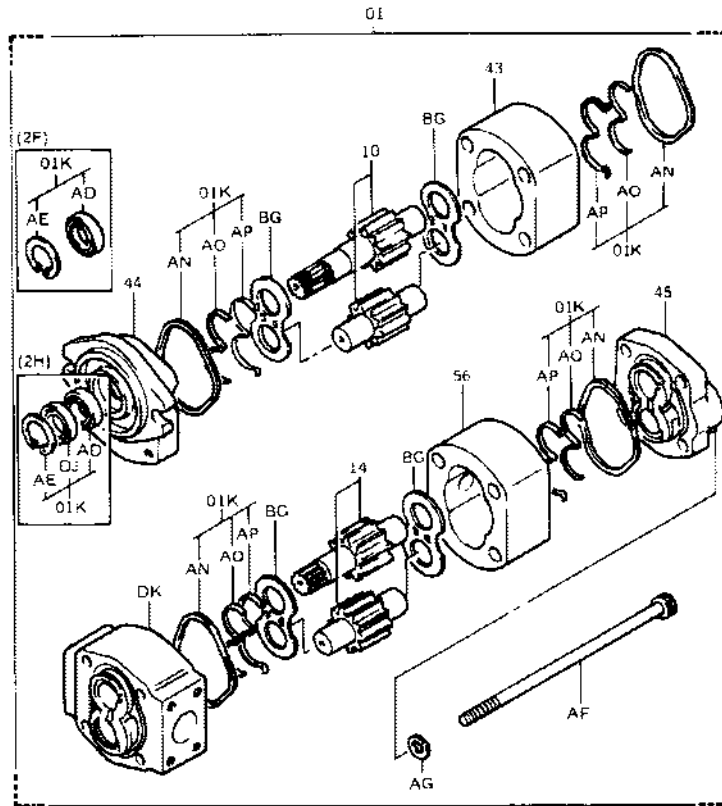    ZH..M



6701-077

8701-077

PART NAME CODE	PART NAME	QTY
6701-01	PUMP ASSY, OIL	1
6701-01K	PUMP O/H KIT, OIL	1
6701-10	GEAR SET	1
6701-14	GEAR SET	1
6701-43	BODY	1
6701-44	FLANGE, MOUNTING	1
6701-44A	PACKING, OIL PUMP	1
6701-45	COVER	1
6701-56	BODY	1
6701-AD	SEAL, OIL	1-2
6701-AE	RING, SNAP	1
6701-AF	BOLT	4
6701-AG	WASHER, SPRING	4
6701-AI	BOLT	2
6701-AN	GASKET	2-4
6701-AD	SPACER	4
6701-AP	GASKET	2
6701-4Q	PLATE, OIL PUMP SET	1
6701-BG	PLATE, SIDE, A	4
6701-DJ	SEAL, OIL	1
6701-DK	PLATE, ADAPTOR	1

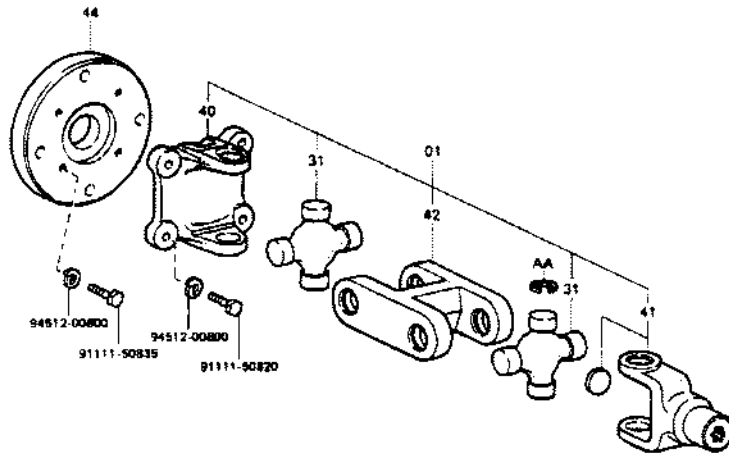 
6704-01 DRIVE SHAFT

6704

M

85/04

ZF...M



PART NAME CODE	PART NAME	QTY
6704-01	DRIVE ASSY, OIL PUMP	1
6704-31	SPIDER KIT, UNIVERSAL JOINT	2
6704-40	YOKE, UNIVERSAL JOINT FLANGE	1
6704-41	YOKE, OIL PUMP DRIVE JOINT	1
6704-42	YOKE, COUPLING	1
6704-44	PLATE, JOINT YOKE SET	1
6704-AA	RING, SHAFT SNAP	8

6704-001




FIG. 6705
OIL CONTROL VALVE

6705

M

87/08

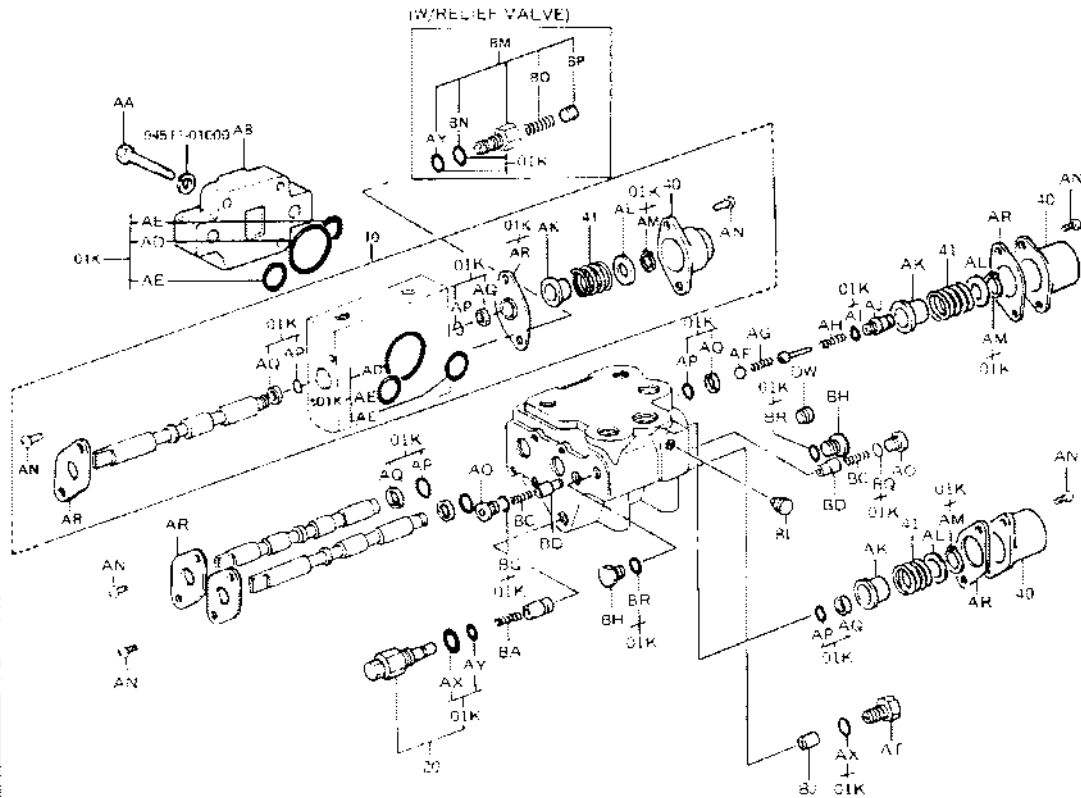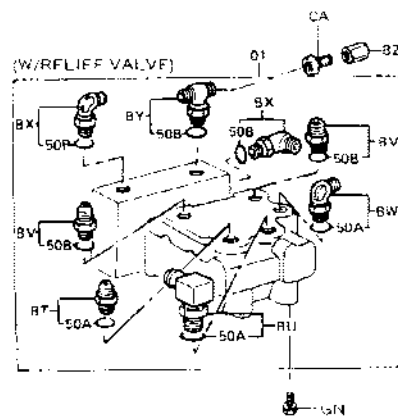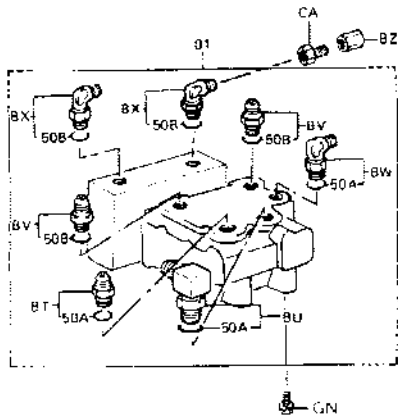   
2F..M (3-WAY)



6705-277

G300-003

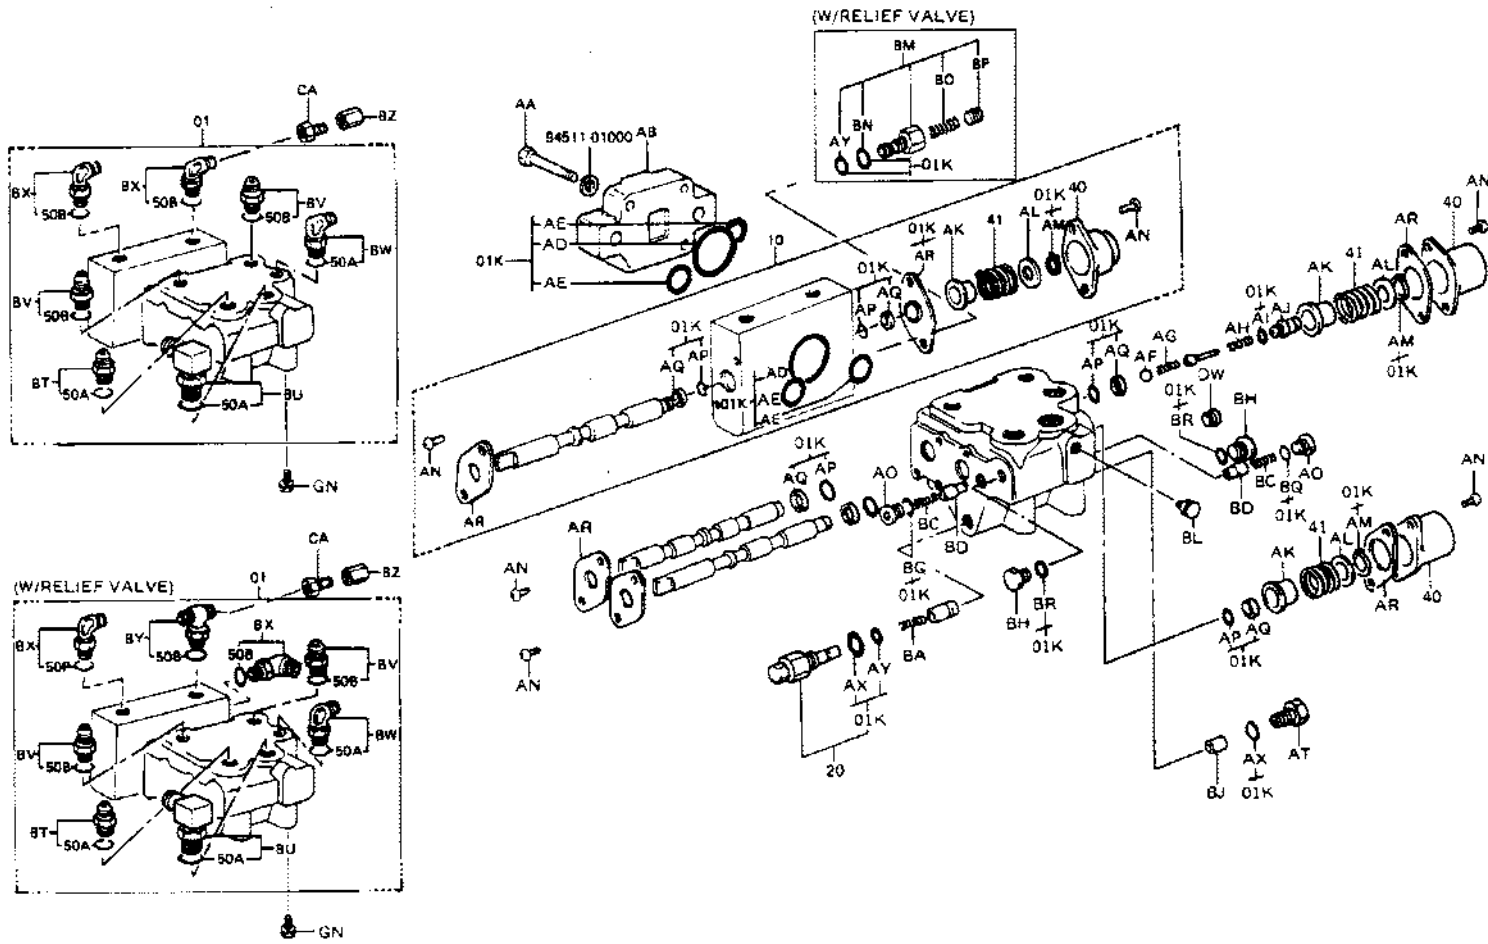 
2H..M (3-WAY)



6705-277

Q300-004

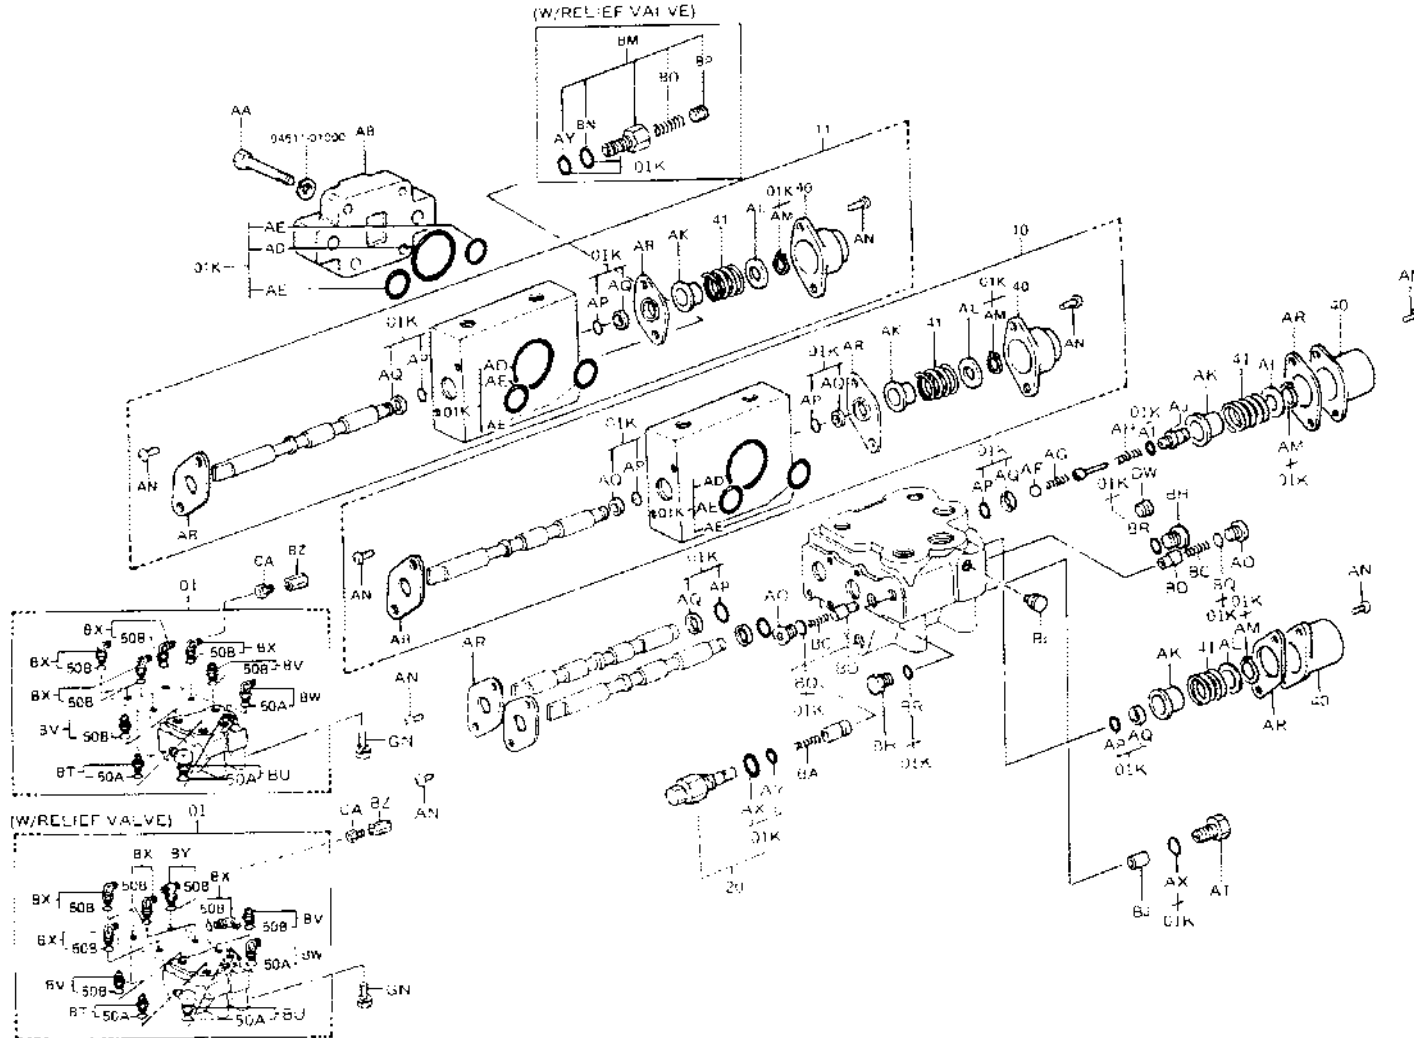 
ZF...M (4-WAY)



6705-2/8

3300-005

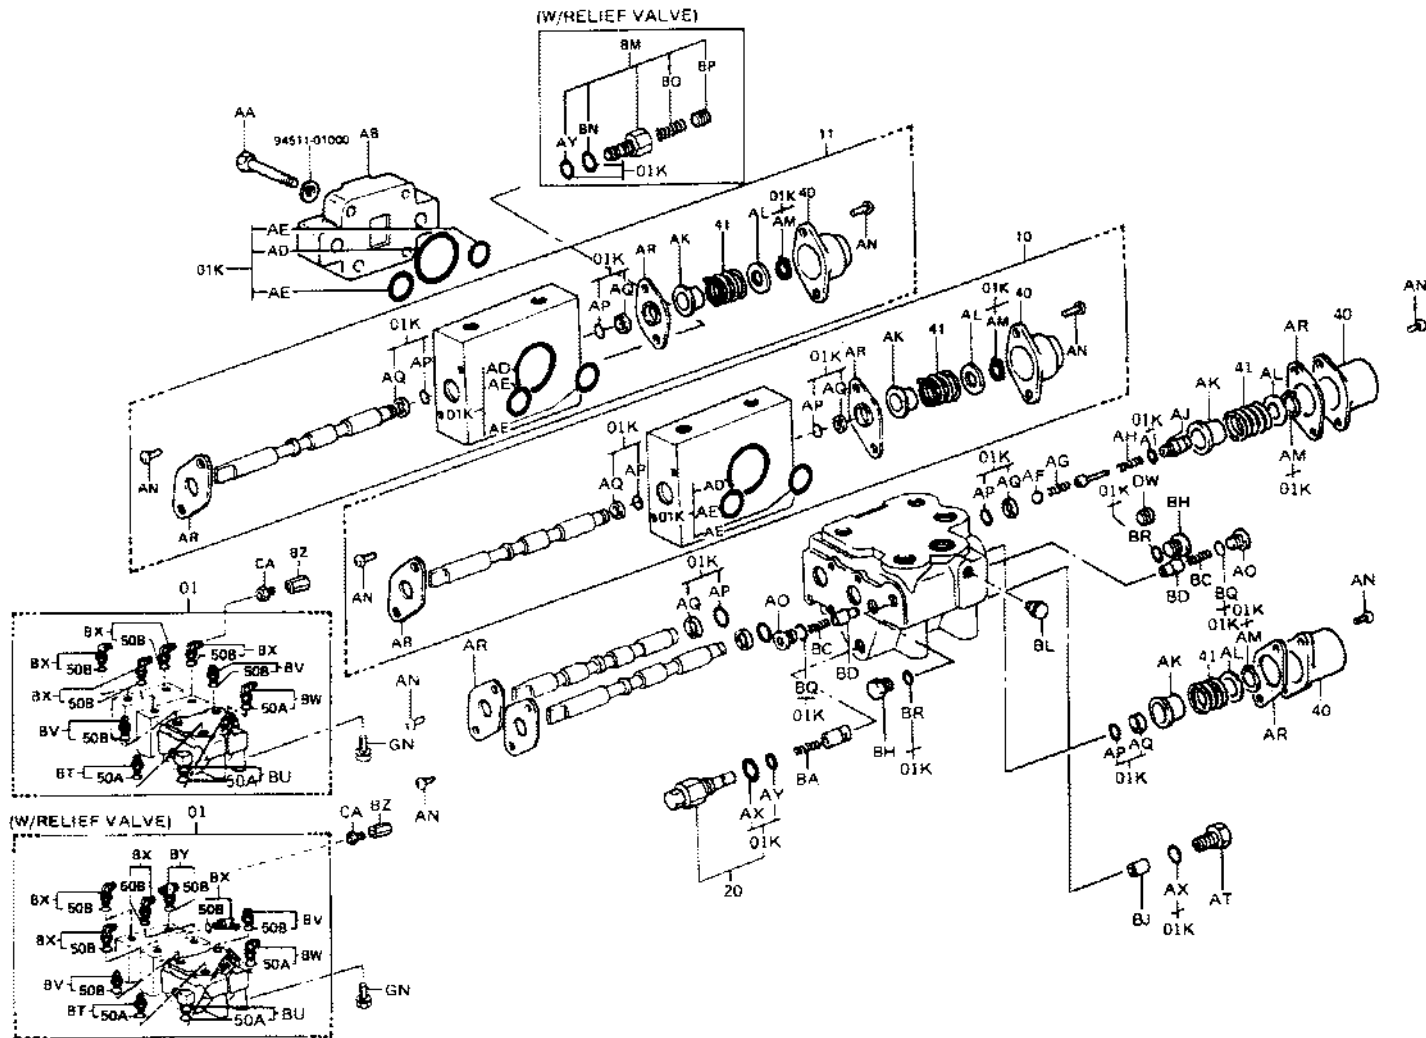 ZH-M (4-WAY)




6705-278

G300-006

PART NAME	PART NAME	QTY
CODE		
6705-01	VALVE ASSY, OIL CONTROL	1
6705-01K	VALVE O/H KIT, OIL CONTROL	1
6705-10	VALVE ASSY, PLUNGER SECTION, NO.1	1
6705-11	VALVE ASSY, PLUNGER SECTION, NO.2	1
6705-20	VALVE SET, PILOT RELIEF, NO.1	1
6705-25	HOUSING & SPOOL SET, ATTACHMENT, NO.1	1
6705-26	HOUSING & SPOOL SET, ATTACHMENT, NO.2	1
6705-40	COVER, SPRING	2
6705-41	SPRING, COMPRESSION (FOR SPOOL RETURN)	2
6705-50A	RING, O, NO.1 (FOR VALVE FITTING)	3
6705-50B	RING, O, NO.2 (FOR VALVE FITTING)	2
6705-AA	BOLT	4
6705-AB	HOUSING, INLET, NO.2	1
6705-AD	RING, O	1
6705-AE	RING, O	2
6705-AF	BALL, STEEL	1
6705-AG	SPRING	1
6705-AH	SPRING, COMPRESSION	1
6705-AI	RING, O	1
6705-AJ	STOPPER	1
6705-AK	HOLDER, SPRING	2
6705-AL	WASHER, PLATE	2
6705-AM	RING, SHAFT SNAP	2
6705-AN	SCREW	8
6705-AC	PLUG	2
6705-AP	RING, O	4
6705-AQ	RING, BACK UP	4
6705-AR	HOLDER, SEAL	4
6705-AT	STOPPER	1
6705-AU	STOPPER	1
6705-AV	RING, O	2
6705-AW	SPRING, COMPRESSION	1
6705-AX	RING, O	2-3
6705-AY	RING, O	1-2
6705-BA	SPRING, COMPRESSION	1
6705-BB	WIRE, CR/FICE TURNING	1
6705-BC	SPRING, COMPRESSION	2
6705-BD	PLUNGER, CHECK	2
6705-BE	STOPPER	1
6705-BH	PLUG	1-2
6705-BI	PLUG	2
6705-BJ	SEAT, VALVE	1
6705-BI	SEAT, INSERT	1-2
6705-BM	VALVE SUB-ASSY, RELIEF	1
6705-BN	RING, O	1
6705-BD	SPRING	1
6705-BP	STOPPER	1
6705-BQ	RING, O	2
6705-BR	RING, O	2
6705-BT	FITTING	1
6705-BU	FITTING	1
6705-BV	FITTING	2
6705-BW	FITTING	1
6705-BX	FITTING	2
6705-BY	FITTING	1
6705-BZ	PLUG	2
6705-CA	FITTING	2
6705-CC	PLUG	1
6705-OW	PLUG	1
6705-IN	BOLT, W/WASHER	4

M

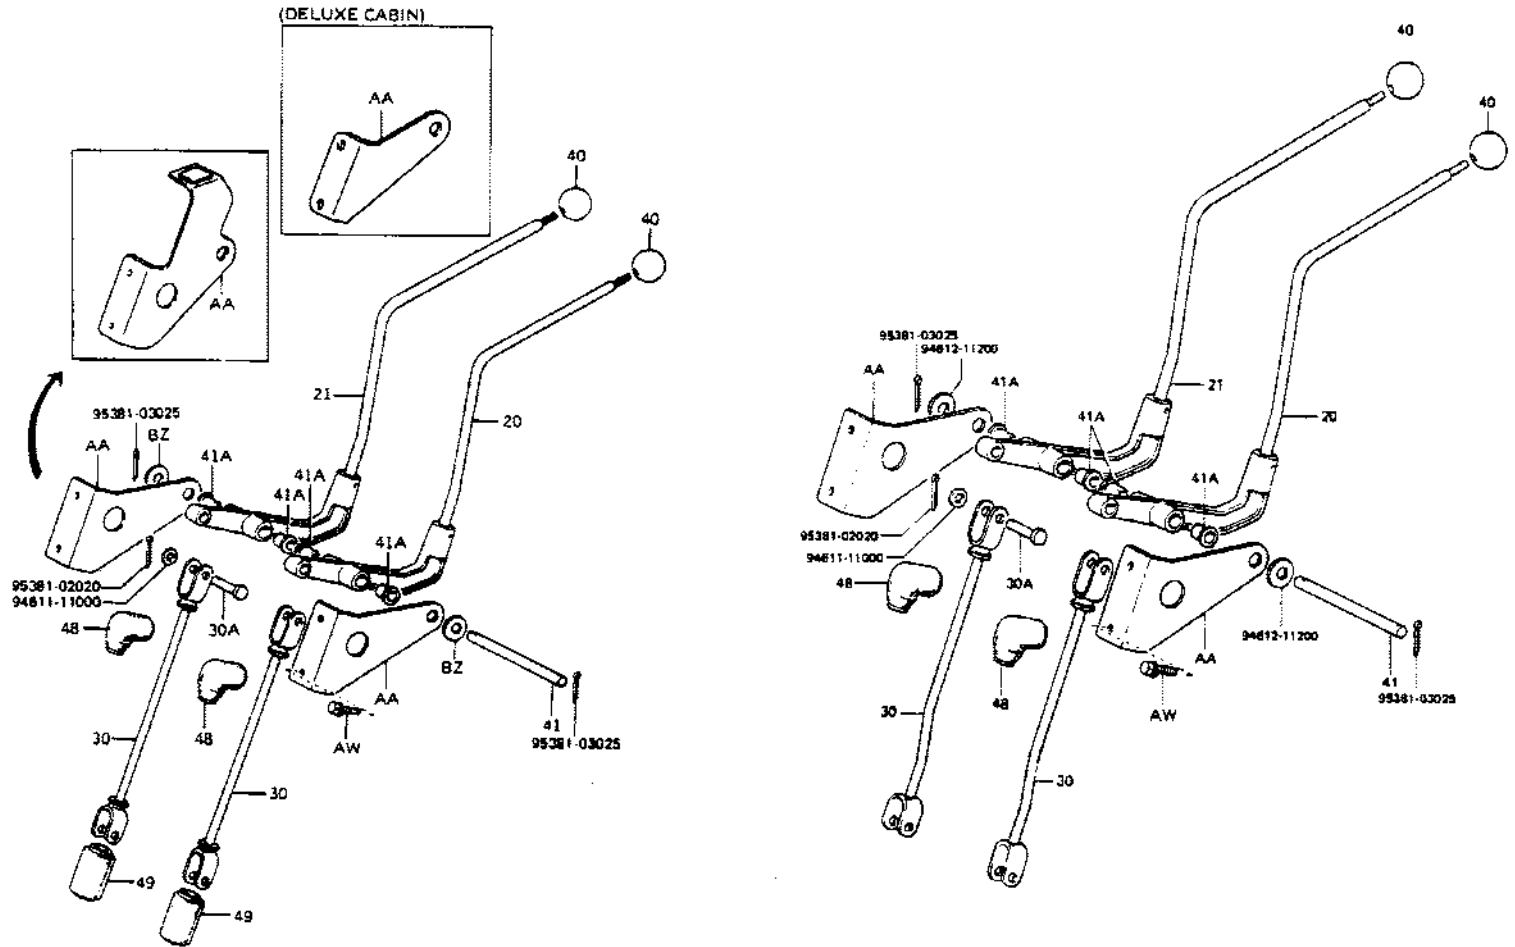 M (ALL WEATHER)




6709-0084

6709-11-88


Q300-001

M (3-WAY)

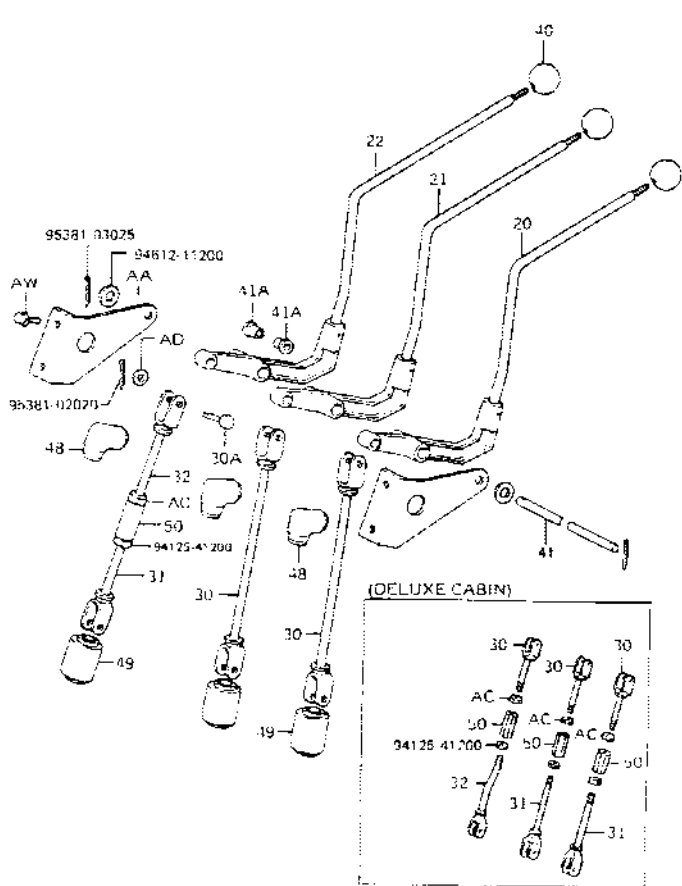 M (4-WAY)



8709-129

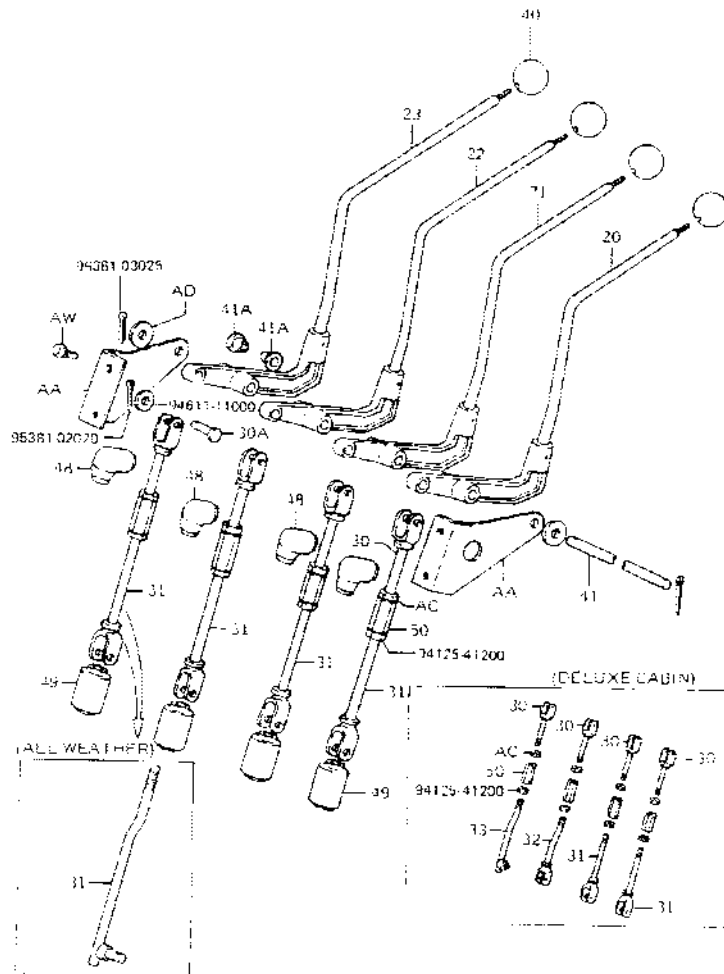 


6709-0300

PART NAME CODE	PART NAME	QTY
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2	1
6709-22	LEVER SUB-ASSY, CONTROL VALVE, NO.3	1
6709-23	LEVER SUB-ASSY, CONTROL VALVE, NO.4	1
6709-30	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.1	2
6709-30A	PIN (FOR CONTROL VALVE LEVER ROD)	4
6709-31	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.2	1
6709-32	ROD SUB-ASSY	1
6709-33	ROD SUB-ASSY	1
6709-40	KNOB, OIL CONTROL VALVE LEVER	2
6709-41	PIN, OIL CONTROL VALVE LEVER	1
6709-41A	BUSH (FOR LEVER PIN)	4
6709-49	BOOT, CONTROL VALVE LINK, NO.2	2
6709-50	TURNBUCKLE	1
6709-AA	BRACKET SUB-ASSY	1
6709-AC	NUT	1
6709-AD	WASHER, PLATE	2
6709-AW	BOLT	4
6709-B2	WASHER, PLATE	2


PART NAME CODE	PART NAME	QTY
6801-10	FILTER ASSY, SUCTION	1
6801-11	FILTER ASSY, RETURN	1
6801-15A	PLUG (FOR OIL TANK DRAIN)	1
6801-15B	GASKET (FOR OIL TANK DRAIN PLUG)	1
6801-20	PIPE SUB-ASSY (PUMP INLET)	1
6801-20A	RING, O (FOR OIL PUMP INLET)	1
6801-21	PIPE SUB-ASSY (PUMP OUTLET)	1
6801-21A	RING, O (FOR OIL PUMP OUTLET)	1
6801-21B	RING, O (FOR OIL PUMP OUTLET)	1
6801-23	PIPE SUB-ASSY (TILT CYLINDER FRONT)	1
6801-24	PIPE SUB-ASSY (TILT CYLINDER REAR)	1
6801-26	OUTLET SUB-ASSY, OIL TANK	1
6801-26A	PACKING, OIL TANK COVER	1
6801-28	GAGE SUB-ASSY, OIL LEVEL	1
6801-30	HOSE, HIGH PRESSURE, NO.1 (PUMP TO VALVE)	1
6801-32	HOSE, HIGH PRESSURE, NO.1 (VALVE TO LIFT)	1
6801-34	HOSE, HIGH PRESSURE, NO.1 (TILT FRONT)	1
6801-35	HOSE, HIGH PRESSURE, NO.1 (TILT REAR)	1
6801-36	HOSE, HIGH PRESSURE, NO.2 (TILT FRONT)	1
6801-37	HOSE, HIGH PRESSURE, NO.2 (TILT REAR)	1
6801-42	HOSE, HIGH PRESSURE (DIVIDER TO VALVE)	1
6801-45	FITTING (FOR TILT CYLINDER)	4
6801-46	FITTING (FOR LIFT CYLINDER)	1
6801-50	HOSE, LOW PRESSURE, NO.1 (LIFT TO TANK)	1
6801-50A	CLAMP (FOR LIFT TO TANK NO.1 HOSE)	2
6801-51	HOSE, LOW PRESSURE, NO.1 (VALVE TO TANK)	1
6801-51A	CLAMP (FOR VALVE TO TANK NO.1 HOSE)	2
6801-52	HOSE, LOW PRESSURE, NO.2 (VALVE TO TANK)	1
6801-52A	CLAMP (FOR VALVE TO TANK NO.2 HOSE)	2
6801-53	HOSE, LOW PRESSURE, NO.1 (DIVIDER TO TANK)	1
6801-53A	CLAMP (FOR DIVIDER TO TANK NO.1 HOSE)	2
6801-55	HOSE, LOW PRESSURE (TANK TO PUMP)	1
6801-55A	CLAMP (FOR TANK TO PUMP HOSE)	2
6801-56	HOSE, LOW PRESSURE (STEERING TO VALVE)	1
6801-60	RETAINER, OIL TANK	1
6801-60A	PACKING, OIL TANK RETAINER	1
6801-AA	BAND, LIFT CYLINDER OVERFLOW HOSE	2-3
6801-AB	CLAMP	1
6801-AC	RING, O	4
6801-AD	BOLT	4
6801-AG	CLAMP	1
6801-AH	BRACKET SUB-ASSY, TILT HOSE	1
6801-AI	RING, O	1
6801-AJ	BRACKET, HIGH PRESSURE HOSE	1
6801-AK	CLAMP	1
6801-AM	ELBOW SUB-ASSY, 3-WAY	1
6801-AX	CAP, OIL TANK OVERFLOW PIPE	1
6801-BK	GUARD, HOSE	1
6801-BN	CAP SUB-ASSY, OIL TANK	1
6801-BD	RING, O	1
6801-BP	CLAMP	1
6801-BQ	CLAMP	2
6801-BW	BOLT	6
6801-BX	FITTING	1
6801-DJ	HOSE, HIGH PRESSURE (PUMP TO DIVIDER)	1
6801-EC	CAP, RUBBER	1
6801-EJ	CLAMP	1
6801-GH	RUBBER	1
6801-HK	BOLT	1

ZF..M

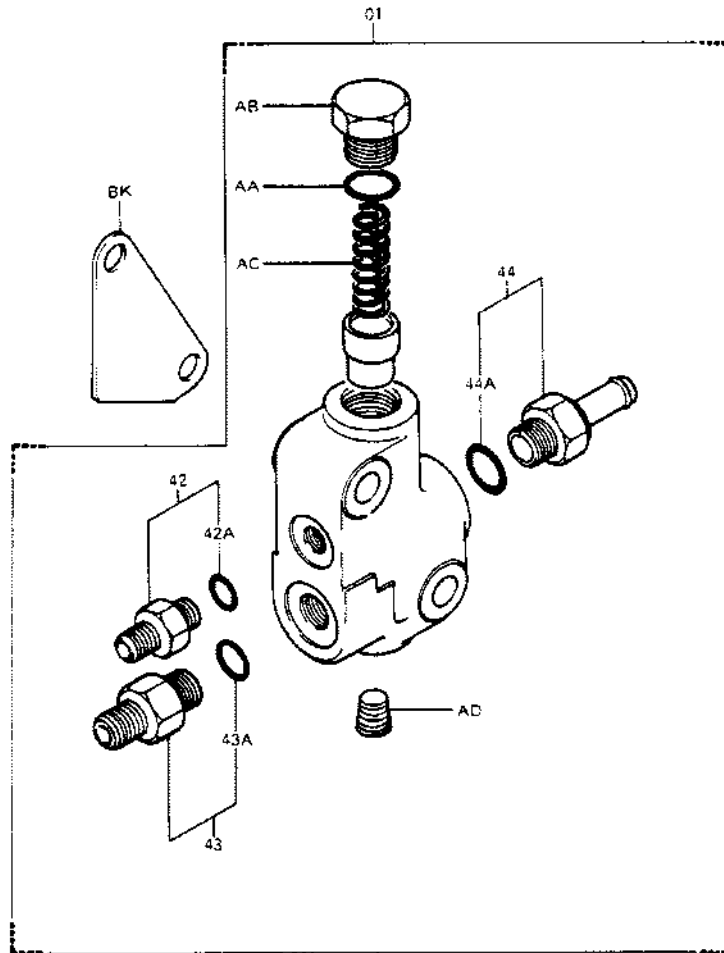 ZH..M



6820-018 A

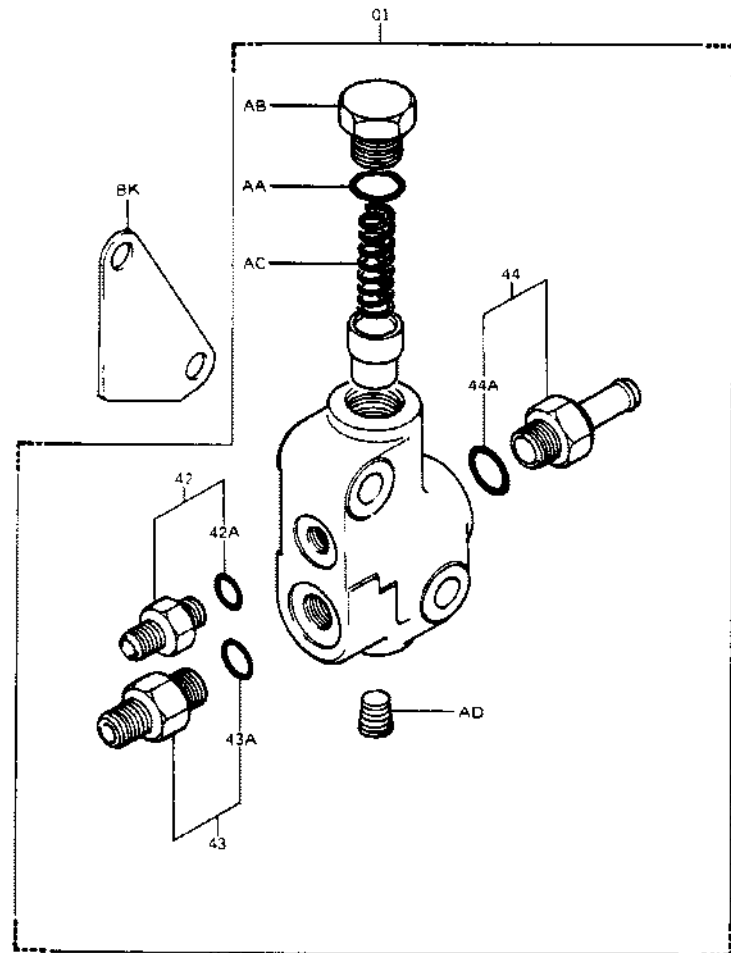 

6820-018 A

FIG-6820
FLOW DIVIDER

6820

M



87/08

PART NAME	PART NAME	QTY
CODE		
6820-01	FLOW DIVIDER ASSY	1
6820-02	FITTING	1
6820-02A	RING, O	1
6820-03	FITTING	1
6820-03A	RING, O	1
6820-04	FITTING	1
6820-04A	RING, O	1
6820-04A	RING, O	1
6820-0A	RING, O	1
6820-0B	STOPPER	1
6820-0C	SPRING	1
6820-0D	PLUG	1
6820-0K	CUSHION SUB-ASSY	1

G300-002E

33.35.235.40..V

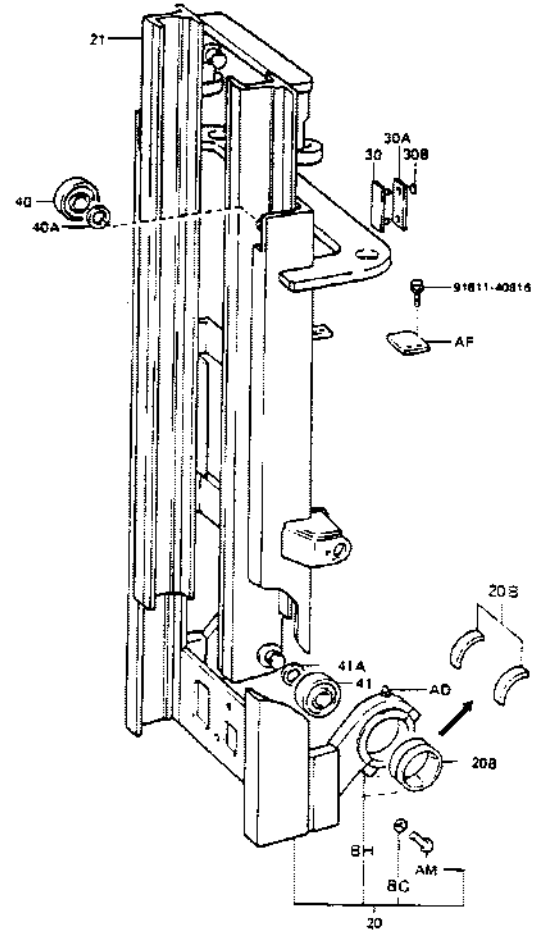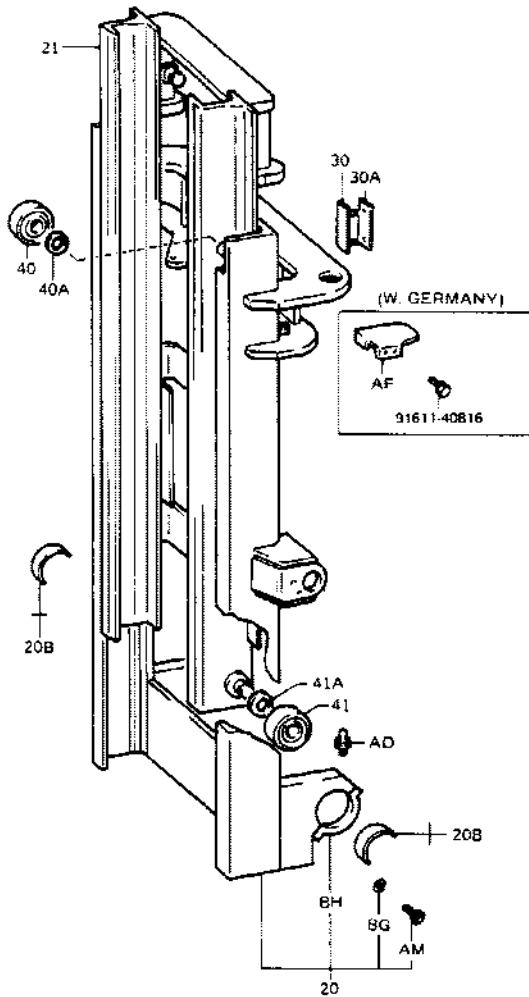  45..V



6101-016C

6101-270

G300-001

FIG. 6101
MAST

6101

V


87/08

PART NAME CODE	PART NAME	QTY
6101-20	MAST SUB-ASSY, OUTER	1
6101-20B	BUSH, MAST SUPPORT	1
6101-21	MAST SUB-ASSY, INNER	1
6101-30	STRIP SUB-ASSY, OUTER MAST	7
6101-30A	SHIM, OUTER MAST STRIP	99
6101-30B	RING, O (FOR OUTER MAST STRIP)	4
6101-40	ROLLER, LEFT (FOR OUTER MAST)	2
6101-40A	SHIM, LEFT ROLLER (FOR OUTER MAST)	99
6101-41	ROLLER, LEFT (FOR INNER MAST)	2
6101-41A	SHIM, LEFT ROLLER (FOR INNER MAST)	99
6101-42	ROLLER, LEFT (FOR MIDDLE MAST UPPER)	2
6101-AD	FITTING, GREASE	2
6101-AF	COVER, ROLLER	1-2
6101-AM	BOLT	4
6101-BG	WASHER, SPRING	4
6101-BH	CAP, MAST SUPPORT	2


G300-002E

33.35.E35.40.v

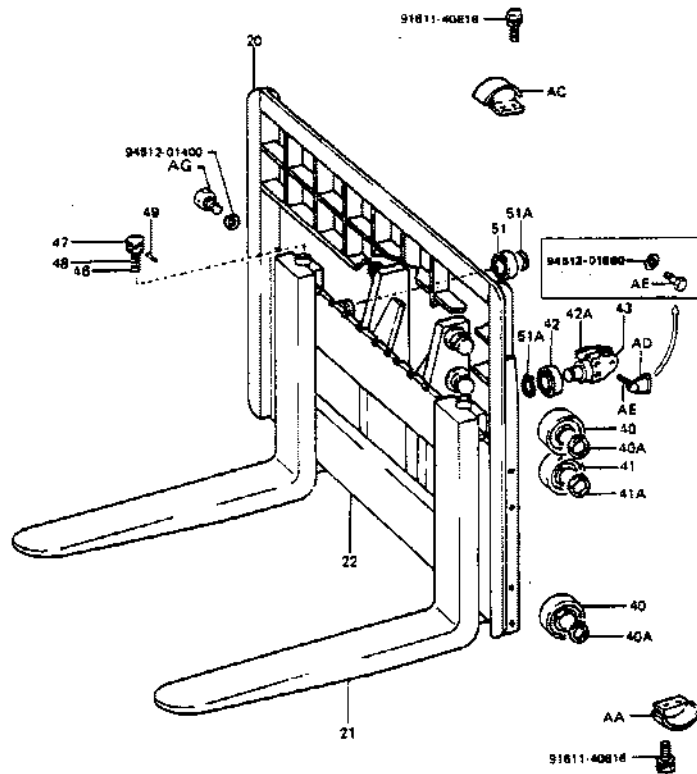 45.v



6301-014 B

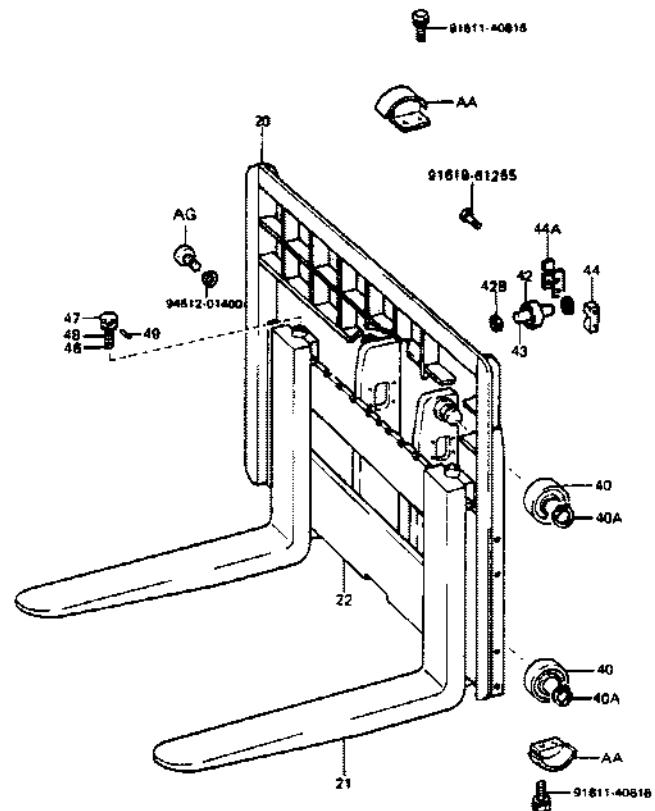 

6301-013 B

PART NAME CODE	PART NAME	QTY
6301-20	BACKREST SUB-ASSY	1
6301-21	FORK SUB-ASSY	2
6301-22	BRACKET SUB-ASSY, LIFT	1
6301-40	ROLLER, LIFT (UPPER, LOWER)	2-4
6301-40A	RING, SHAFT SNAP (UPPER, LOWER)	2
6301-41	ROLLER, LIFT (CENTER)	2
6301-41A	RING, SHAFT SNAP (CENTER)	2
6301-42	ROLLER, SIDE	2-4
6301-42A	SHIM (FOR SIDE ROLLER)	99
6301-42B	SPACER (FOR SIDE ROLLER)	8
6301-43	SHAFT, SIDE ROLLER	2-4
6301-44	HOLDER, SIDE ROLLER SHAFT	4
6301-44A	SHIM (FOR SHAFT HOLDER)	99
6301-46	PIN, FORK STOPPER	2
6301-47	KNOB, FORK STOPPER PIN	2
6301-48	SPRING, FORK STOPPER PIN	2
6301-49	PIN, SPRING (FOR FORK STOPPER PIN)	2
6301-51	ROLLER, SIDE (OUTER)	2
6301-51A	RING, SHAFT SNAP	4
6301-AA	COVER, LIFT BRACKET ROLLER	2-4
6301-AC	COVER, LIFT BRACKET ROLLER	2
6301-AE	BOLT	6

FIG. 6302
CHAIN & CHAIN WHEEL

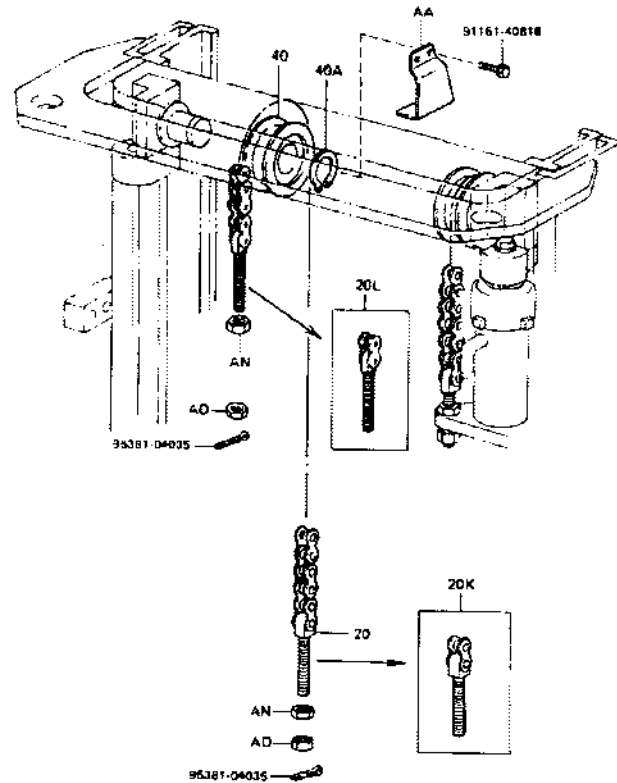 
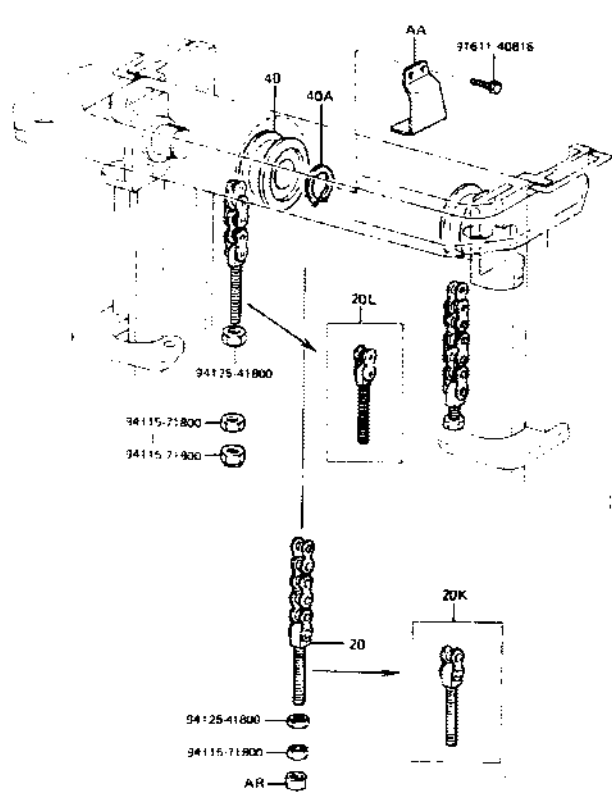 
6302

V

85/04

33.35.E35.40.V

43.V



6302 041A

6302 016

PART NAME CODE	PART NAME	QTY
6302-20	CHAIN SUB-ASSY	2
6302-20K	BOLT KIT, CHAIN ANCHOR, NO.1	2
6302-20L	BOLT KIT, CHAIN ANCHOR, NO.2	2
6302-40	WHEEL, CHAIN	2
6302-40A	RING, SHAFT SNAP (FOR CHAIN WHEEL)	2
6302-AA	PLATE, CHAIN STOPPER	2
6302-AD	NUT, HEXAGON	6
6302-AN	NUT, HEXAGON	4
6302-AR	NUT, LOCK	2

FIG. 6501
LIFT CYLINDER

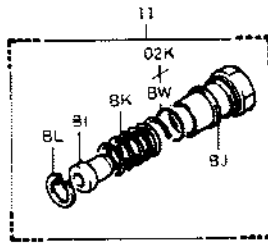 
6501

V


87/08

33,35,E35,40..V


45..V "M2000-M4000"




02(LH)

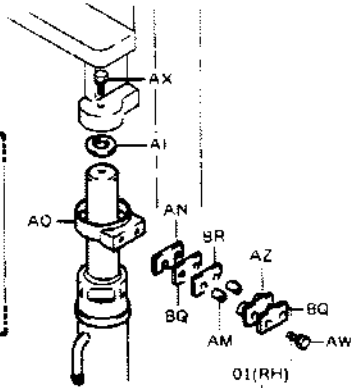 


01(RH)

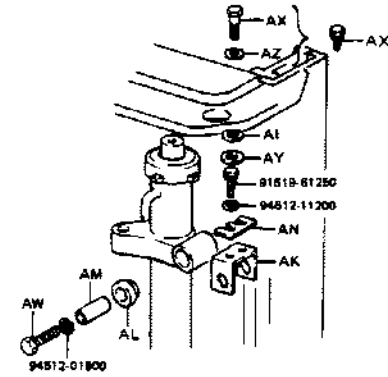 


94812-01800

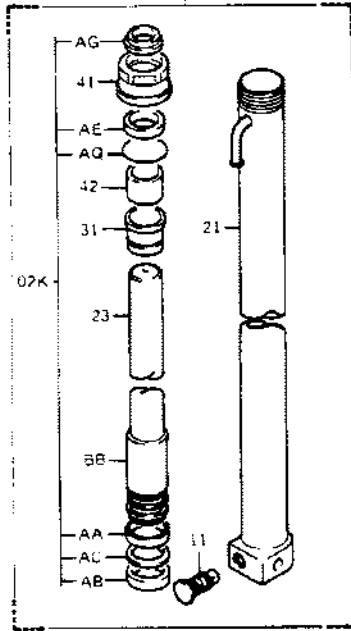 


02K

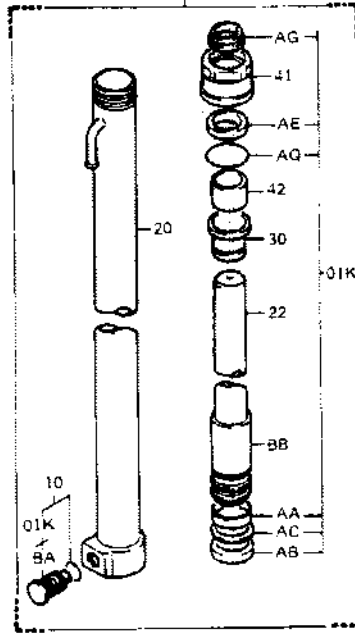 

8501-045

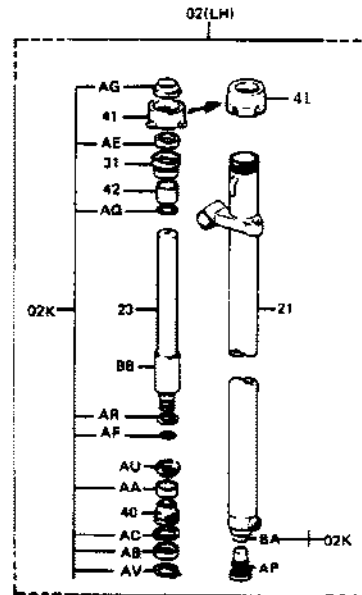 

02K

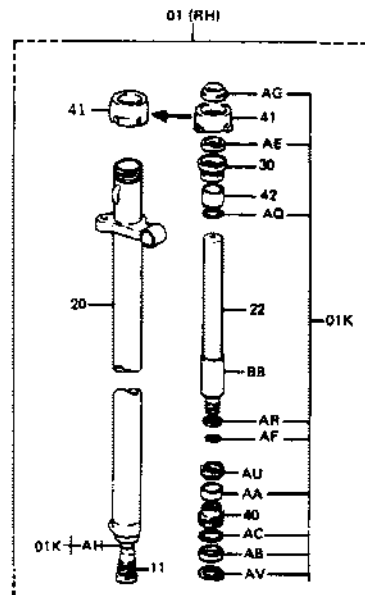 

01K

8501-008

G300-001


FIG. 6501
LIFT CYLINDER

6501

V


87/08

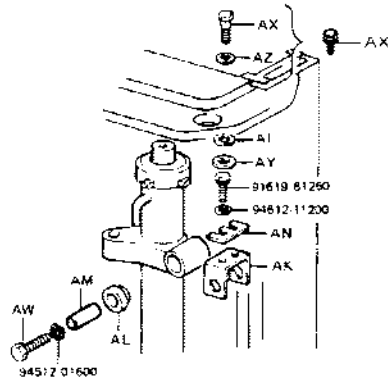 45.4V "H4500-H5000"



02(LH)

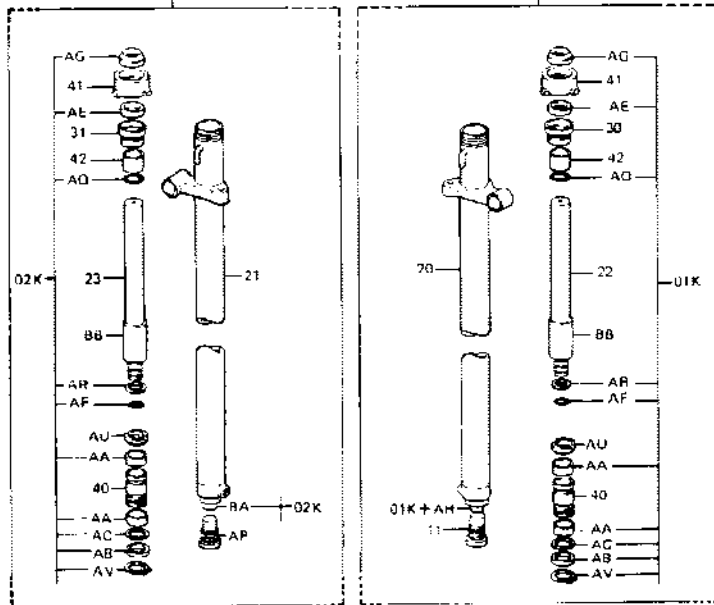 01(RH)



6501-009A


PART NAME	PART NAME	QTY
CODE		
6501-01	CYLINDER ASSY, LIFT, RH	1
6501-01K	CYLINDER O/H KIT, LIFT, RH	1
6501-02	CYLINDER ASSY, LIFT, LH	1
6501-02K	CYLINDER O/H KIT, LIFT, LH	1
6501-10	VALVE ASSY, FLOW REGULATOR	1
6501-11	VALVE ASSY, SAFETY DOWN	1
6501-20	CYLINDER SUB-ASSY, LIFT, RH	1
6501-21	CYLINDER SUB-ASSY, LIFT, LH	1
6501-22	ROD SUB-ASSY, LIFT CYLINDER, RH	1
6501-23	ROD SUB-ASSY, LIFT CYLINDER, LH	1
6501-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD, RH	1
6501-31	GUIDE SUB-ASSY, LIFT CYLINDER ROD, LH	1
6501-40	PISTON, LIFT CYLINDER	2
6501-41	COVER, LIFT CYLINDER	2
6501-42	SLEEVE, LIFT CYLINDER ROD GUIDE	2
6501-AA	RING, WEAR	2
6501-AB	PACKING, O	2
6501-AC	RING, BACK UP	2
6501-AE	PACKING, O	2
6501-AF	RING, O	2
6501-AG	SEAL, OUST	2
6501-AH	RING, O	1
6501-AJ	SHIM	99
6501-AK	BRACKET SUB-ASSY, LIFT CYLINDER	2
6501-AL	BUSHING	4
6501-AM	SPACER	7
6501-AN	SHIM	99
6501-AQ	SUPPORT, LIFT CYLINDER	2
6501-AP	PLUG	1
6501-AO	RING, O	2
6501-AR	RING, BACK UP	2
6501-AU	RING, STOPPER	2
6501-AV	RING, SHAFT SNAP	2
6501-AW	BOLT	2
6501-AX	BOLT	2
6501-AY	WASHER	2
6501-AZ	RUBBER	2
6501-BA	RING, O	1
6501-BB	SPACER, LIFT CYLINDER	2
6501-BI	PISTON	1
6501-BJ	ROD	1
6501-HK	SPRING	1
6501-BL	RING, SNAP	1
6501-BQ	PLATE	2
6501-BR	RUBBER	2

G300-002E

V (TILT RANGE TABLE)

テイルト角度表
TABLE OF TILT RANGE

生産期間 PROD DATE	型式 MODELS	タイヤ TIRE	揚 高 LIFTING HEIGHT	番 号 DISCRIPTION	テイルト角 TILT RANGE
8004-	M, V		H2000-H4000	33, 35, 40	8D - 12D
8004-	M, V	SINGLE	H4500-H6000	33, 36, 40	8D - 8D
8004-	M, V	DOUBLE	H4500-H6000	33, 36, 40	8D - 12D
8004-	M, V		H2000-H3700	E36	8D - 12D
8004-	M, V	SINGLE	H4000-H6000	E36	8D - 8D
8004-	M, V	DOUBLE	H4000-H6000	E36	8D - 12D
8004-	V		H2000-H4000	45	8D - 12D
8004-	V	SINGLE	H4500-H6000	45	8D - 8D
8004-	V	DOUBLE	H4500-H6000	45	8D - 12D
8004-	FSV		H3700-H6000	33, 36, E36, 40, 45	8D - 8D
8004-	FV		H2000-H4000	33, 35, E36, 40, 45	8D - 12D
8004-	FV, M, V		H2000	ALL WEATHER CAB 33, 35, E36, 40	8D - 10D
8004-	FV, V		H2000	ALL WEATHER CAB 45	8D - 8D
8004-	FV, V		H2600-H4000	ALL WEATHER CAB 45	8D - 10D

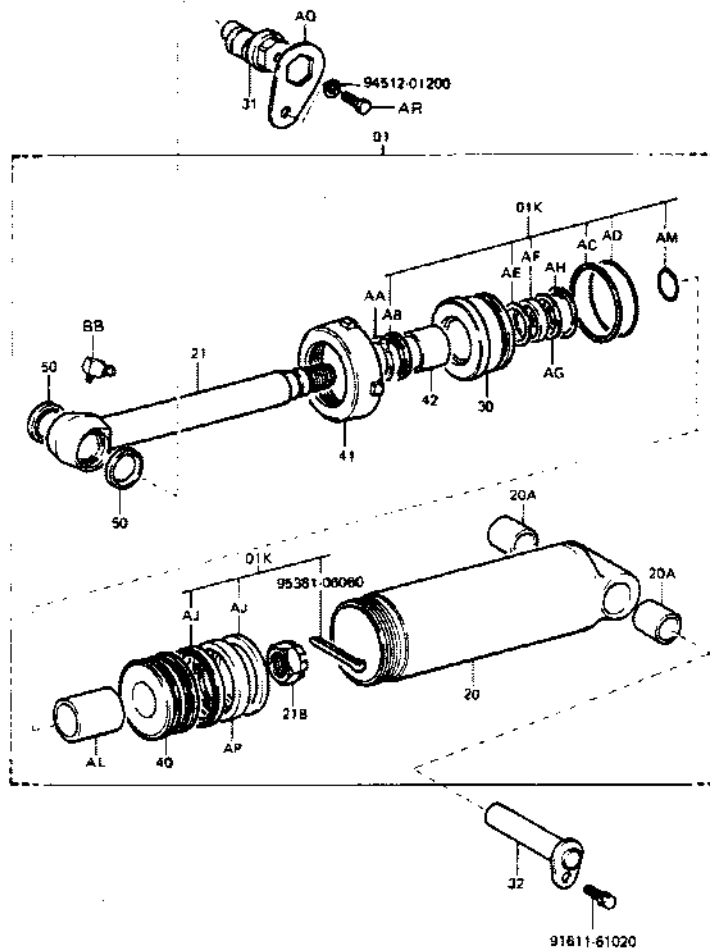 

6511-004A

91611-61020

6511-074

G300-001

PART NAME	PART NAME	QTY
CODE		
6511-01	CYLINDER ASSY, TILT	2
6511-01K	CYLINDER O/H KIT, TILT	2
6511-20	CYLINDER SUB-ASSY, TILT	2
6511-20A	BUSH, PIN (FOR CYLINDER)	4
6511-21	ROD SUB-ASSY, TILT CYLINDER PISTON	2
6511-21B	NUT, CASTLE	2
6511-30	GUIDE SUB-ASSY, TILT CYLINDER ROD	2
6511-31	PIN SUB-ASSY, TILT CYLINDER, FR	2
6511-32	PIN SUB-ASSY, TILT CYLINDER, RR	2
6511-40	PISTON, TILT CYLINDER	2
6511-41	COVER, TILT CYLINDER	2
6511-42	SLEEVE, TILT CYLINDER ROD GUIDE	2
6511-50	SEAL, GREASE	2
6511-AA	RING, HOLE SNAP	2
6511-AB	SEAL, DUST	2
6511-AC	RING, BACK UP	2
6511-AD	RING, O	2
6511-AE	RING, BACK UP	2
6511-AF	PACKING, J	2
6511-AG	PLATE, STOPPER	2
6511-AH	RING, HOLE SNAP	2
6511-AJ	PACKING, U	2
6511-AL	SPACER, TILT CONTROL	2
6511-AM	RING, O	2
6511-AP	SLEEVE, CYLINDER PISTON	2
6511-AQ	PLATE, STOPPER	2
6511-AR	BOLT	2
6511-8B	FITTING, GREASE	2

2F...V

2H...V

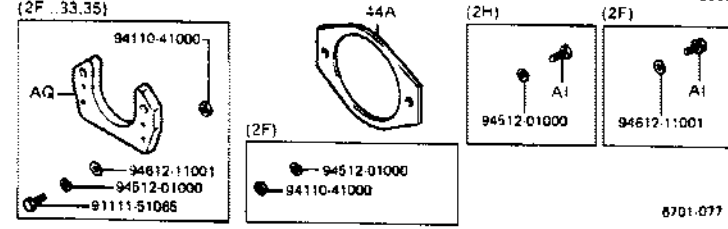 
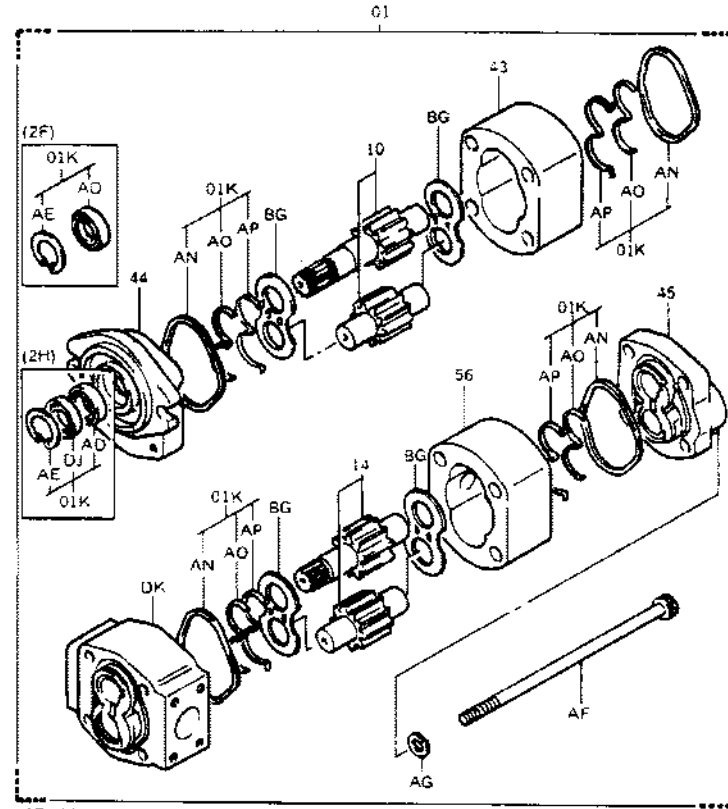 
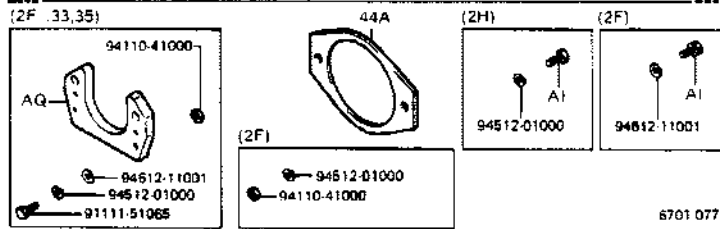 
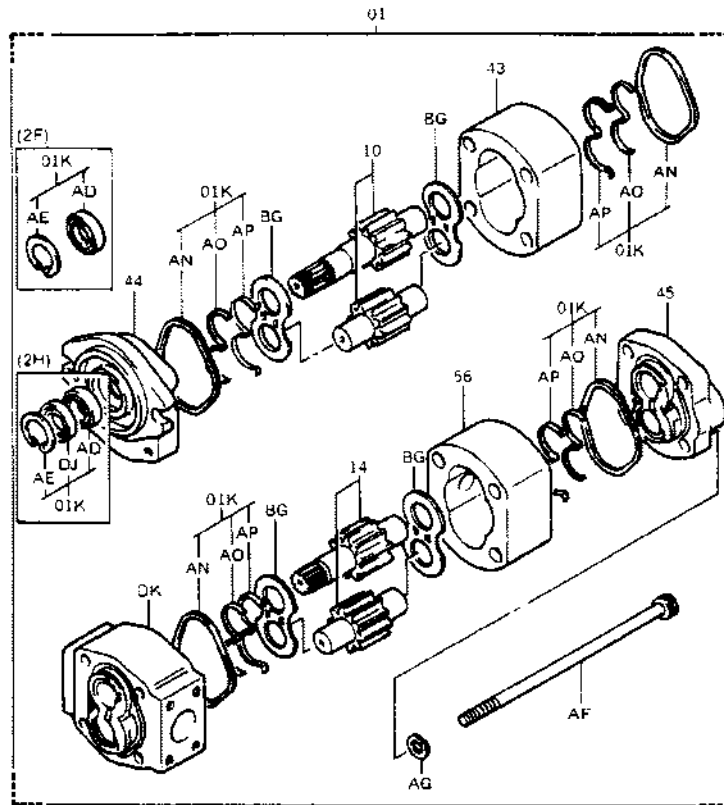 


FIG-6701
OIL PUMP

6701

V

87/08

PART NAME CODE	PART NAME	QTY
6701-01	PUMP ASSY, OIL	1
6701-01K	PUMP O/H KIT, OIL	1
6701-10	GEAR SET	1
6701-14	GEAR SET	1
6701-43	BODY	1
6701-44	FLANGE, MOUNTING	1
6701-44A	PACKING, OIL PUMP	1
6701-45	COVER	1
6701-56	BODY	1
6701-AD	SEAL, OIL	1 - Z
6701-AE	RING, SNAP	1
6701-AF	BOLT	4
6701-AG	WASHER, SPRING	4
6701-AJ	BOLT	2
6701-AN	GASKET	2 - 4
6701-AO	SPACER	4
6701-AP	GASKET	2
6701-AQ	PLATE, OIL PUMP SET	1
6701-BG	PLATE, SIDE, A	4
6701-OJ	SEAL, OIL	1
6701-OK	PLATE, ADAPTOR	1

G300-002E


FIG. 6704
OIL PUMP DRIVE SHAFT

6704

V

85/04

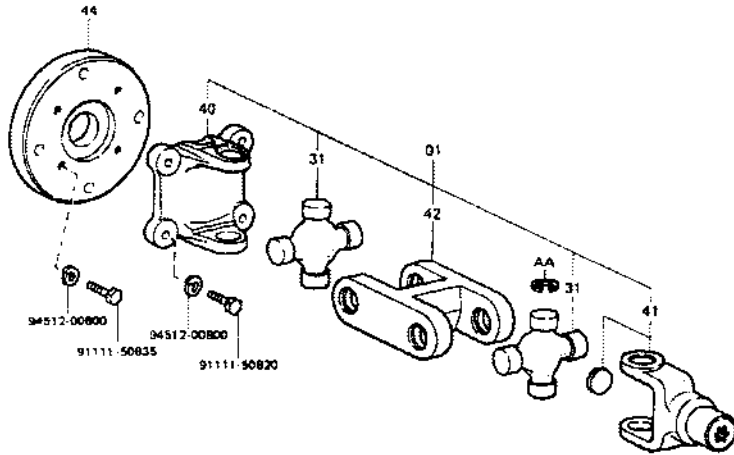 
2F..V



PART NAME	PART NAME	QTY
CODE		
6704-01	DRIVE ASSY, OIL PUMP	1
6704-31	SPIDER KIT, UNIVERSAL JOINT	2
6704-40	YOKE, UNIVERSAL JOINT FLANGE	1
6704-41	YOKE, OIL PUMP DRIVE JOINT	1
6704-42	YOKE, COUPLING	1
6704-44	PLATE, JOINT YOKE SET	1
6704-AA	RING, SHAFT SNAP	8

6704-001

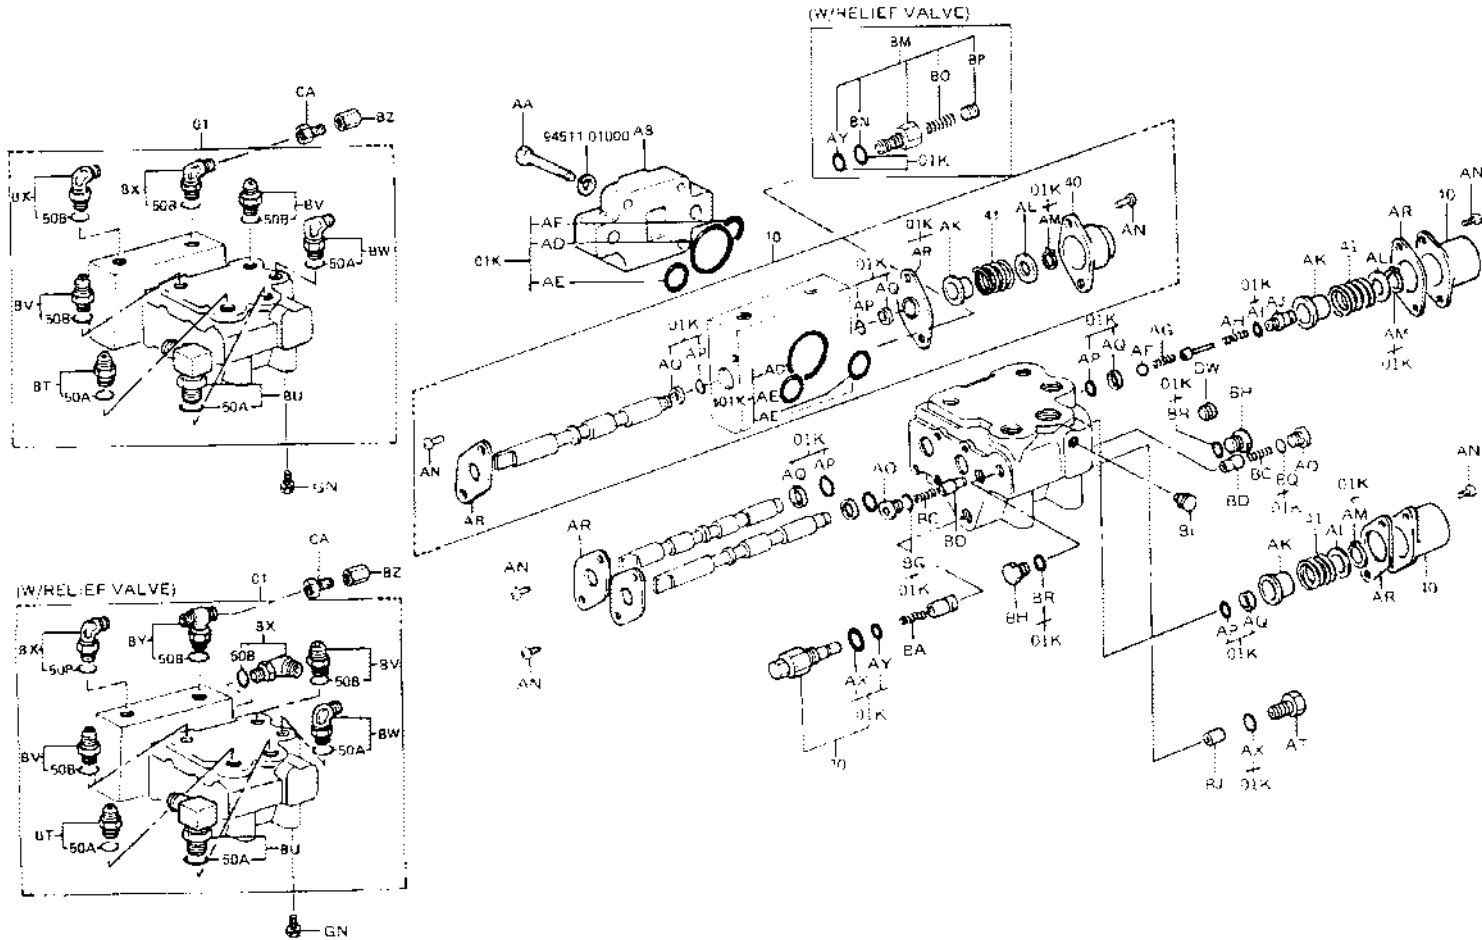 
2F...V (3-WAY)



6705-277

G380-003

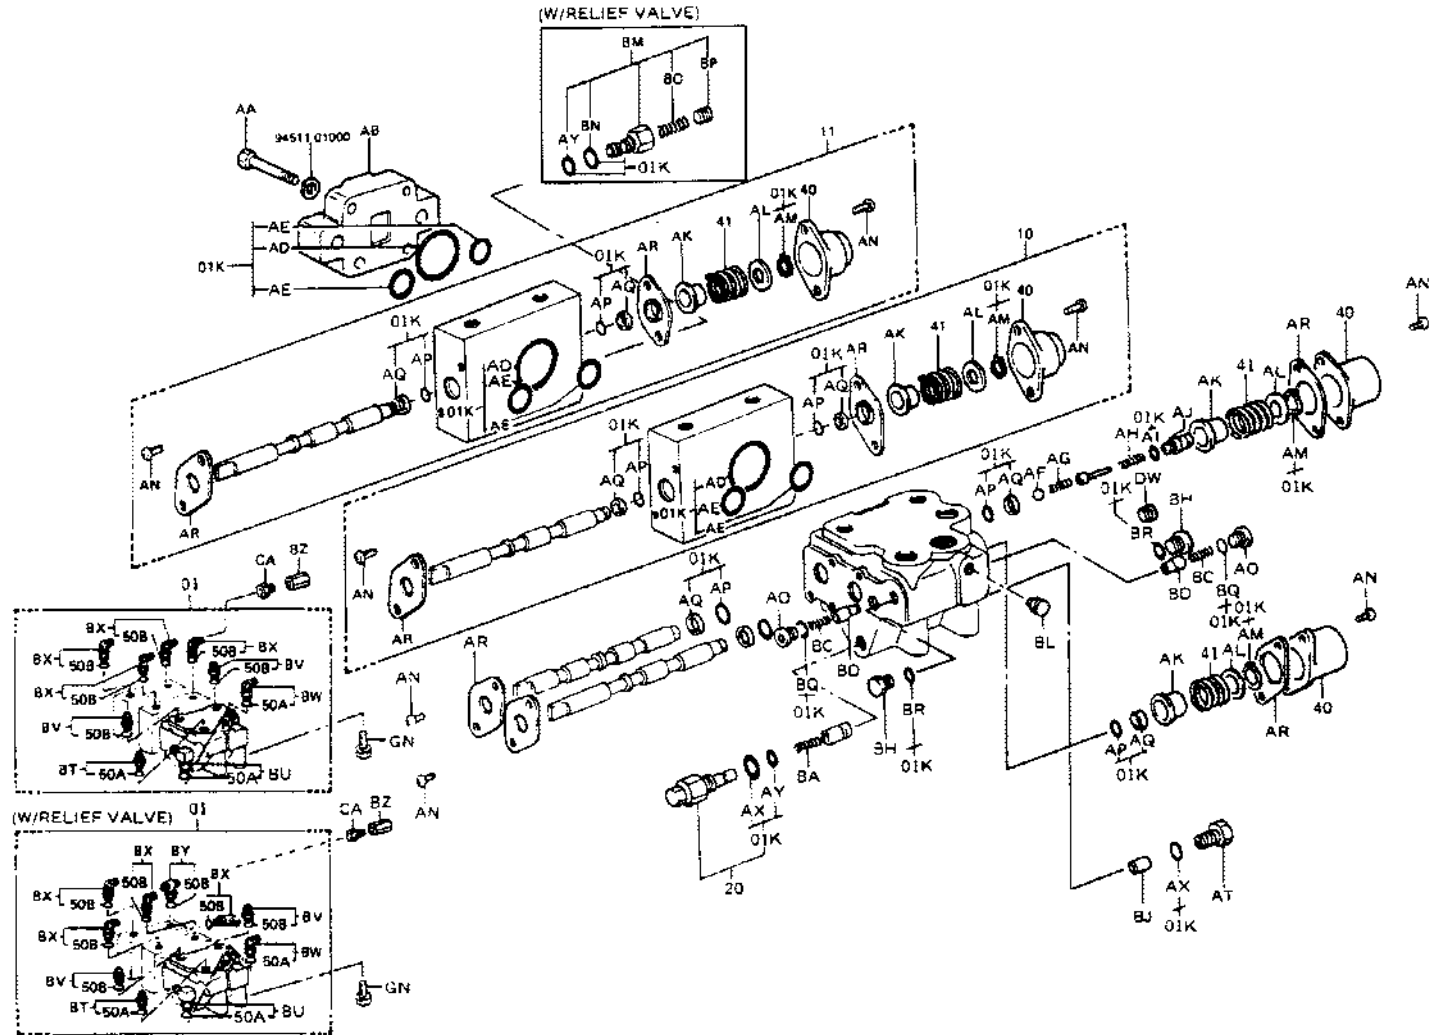 ZH-V (4-WAY)




6705 278

G300-006


PART NAME CODE	PART NAME	QTY
6705-01	VALVE ASSY, OIL CONTROL	1
6705-01K	VALVE O/H KIT, OIL CONTROL	1
6705-10	VALVE ASSY, PLUNGER SECTION, NO.1	1
6705-11	VALVE ASSY, PLUNGER SECTION, NO.2	1
6705-20	VALVE SET, PILOT RELIEF, NO.1	1
6705-25	HOUSING & SPOOL SET, ATTACHMENT, NO.1	1
6705-26	HOUSING & SPOOL SET, ATTACHMENT, NO.2	1
6705-40	COVER, SPRING	2
6705-41	SPRING, COMPRESSION (FOR SPOOL RETURN)	2
6705-50A	RING, O, NO.1 (FOR VALVE FITTING)	3
6705-50B	RING, O, NO.2 (FOR VALVE FITTING)	2
6705-AA	BOLT	4
6705-AB	HOUSING, INLET, NO.2	1
6705-AD	RING, O	1
6705-AE	RING, O	2
6705-AF	BALL, STEEL	1
6705-AG	SPRING	1
6705-AH	SPRING, COMPRESSION	1
6705-AI	RING, O	1
6705-AJ	STOPPER	1
6705-AK	HOLDER, SPRING	2
6705-AL	WASHER, PLATE	2
6705-AM	RING, SHAFT SNAP	2
6705-AN	SCREW	8
6705-AD	PLUG	2
6705-AP	RING, O	4
6705-AQ	RING, BACK UP	4
6705-AR	HOLDER, SEAL	4
6705-AT	STOPPER	1
6705-AU	STOPPER	1
6705-AV	RING, O	2
6705-AW	SPRING, COMPRESSION	1
6705-AX	RING, O	2
6705-AY	RING, O	1
6705-BA	SPRING, COMPRESSION	1
6705-BB	WIRE, DRIFICE TURNING	1
6705-BC	SPRING, COMPRESSION	2
6705-BD	PLUNGER, CHECK	2
6705-BE	STOPPER	1
6705-BH	PLUG	1
6705-BI	PLUG	2
6705-BJ	SEAT, VALVE	1
6705-BL	SEAT, INSERT	1
6705-BM	VALVE SUB-ASSY, RELIEF	2
6705-BN	RING, O	1
6705-BO	SPRING	1
6705-BP	STOPPER	1
6705-BQ	RING, O	2
6705-BR	RING, O	2
6705-BT	FITTING	1
6705-BU	FITTING	1
6705-BV	FITTING	2
6705-BW	FITTING	1
6705-BX	FITTING	2
6705-BY	FITTING	1
6705-BZ	PLUG	2
6705-CA	FITTING	2
6705-CC	PLUG	1
6705-DW	PLUG	1
6705-GN	BOLT, W/WASHER	4

V (3-WAY)

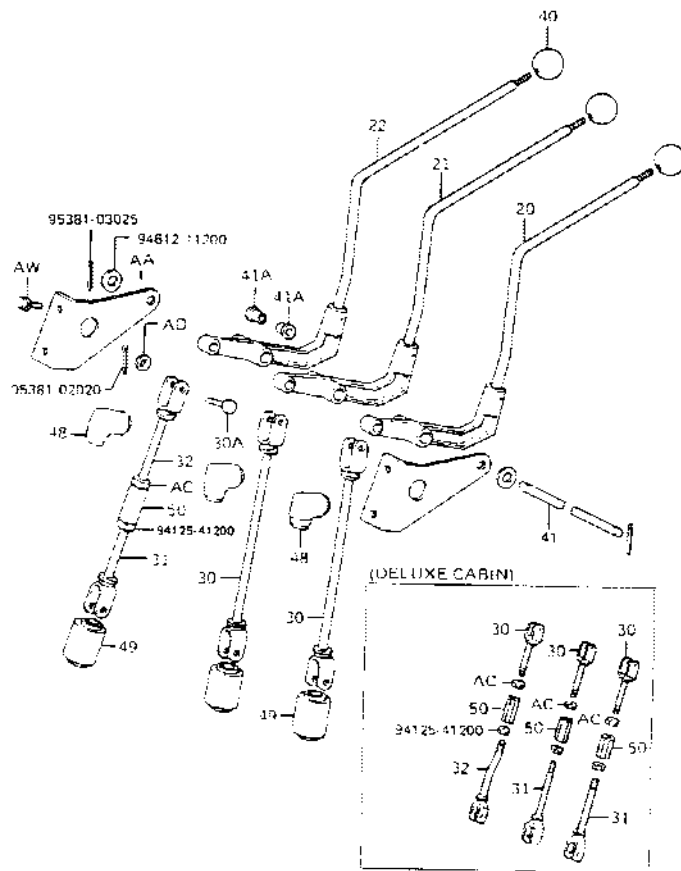 V (4-WAY)



6709 1.23

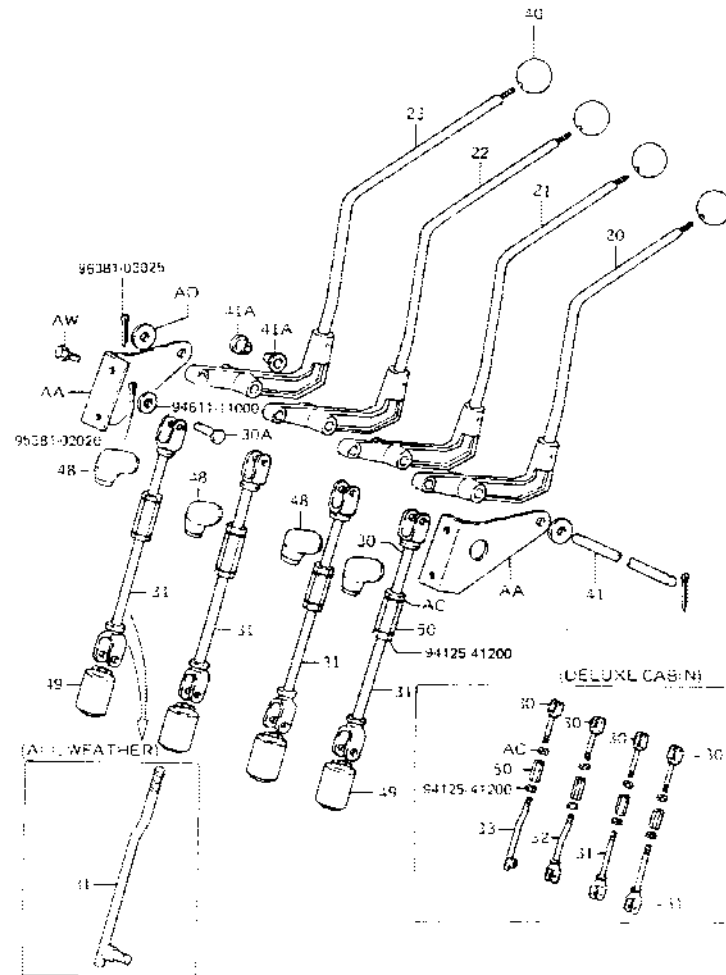 

4-09 030C

G500-002

FIG. 6709
OIL CONTROL VALVE LINK

6709

V

87/08

PART NAME	PART NAME	QTY
CODE		
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2	1
6709-22	LEVER SUB-ASSY, CONTROL VALVE, NO.3	1
6709-23	LEVER SUB-ASSY, CONTROL VALVE, NO.4	1
6709-30	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.1	2
6709-30A	PIN (FOR CONTROL VALVE LEVER ROD)	4
6709-31	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.2	1
6709-32	ROD SUB-ASSY	1
6709-33	ROD SUB-ASSY	1
6709-40	KNOB, OIL CONTROL VALVE LEVER	2
6709-41	PIN, OIL CONTROL VALVE LEVER	1
6709-41A	BUSH (FOR LEVER PIN)	4
6709-49	SDOT, CONTROL VALVE LINK, NO.2	2
6709-50	TURNUCKLE	1
6709-AA	BRACKET SUB-ASSY	1
6709-AC	NUT	1
6709-AD	WASHER, PLATE	2
6709-AW	BOLT	4
6709-BZ	WASHER, PLATE	2

G300-003E

FIG. 6801
BODY PIPING

6801

V


87/08

PART NAME CODE	PART NAME	QTY
4801-BQ	CLAMP	2
4801-BW	BOLT	6
4801-BX	FITTING	1
4801-OJ	HOSE, HIGH PRESSURE (PUMP TO DIVIDER)	1
4801-EC	CAP, RUBBER	1
4801-EJ	CLAMP	1
4801-EM	HOSE, HIGH PRESSURE	1
4801-GH	RUBBER	1
4801-HK	BOLT	1


G300-002E

2F..V

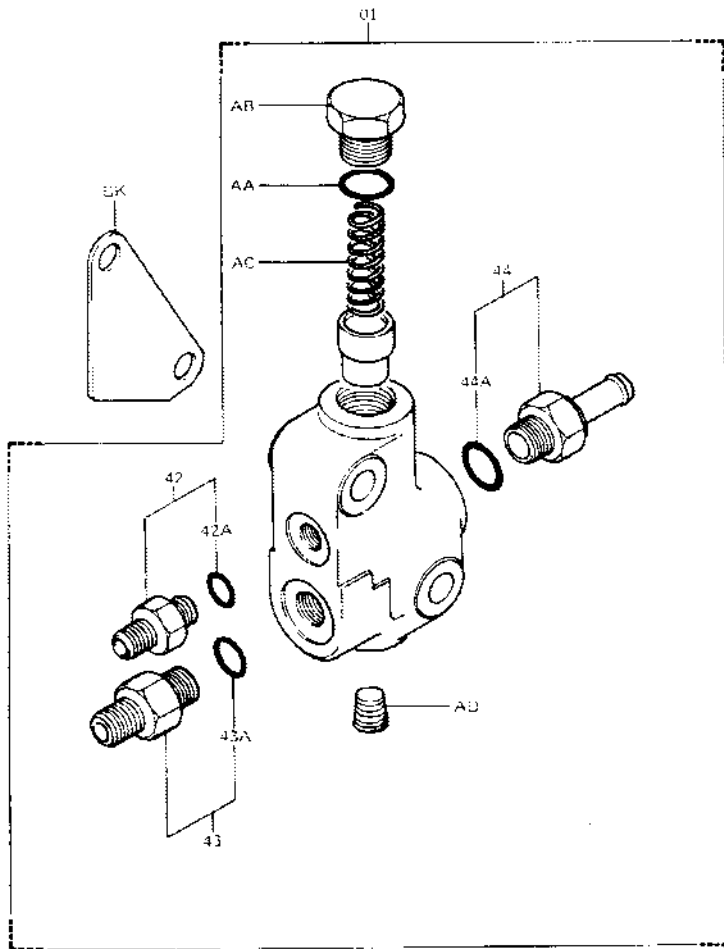 2H..V



6820 018 A

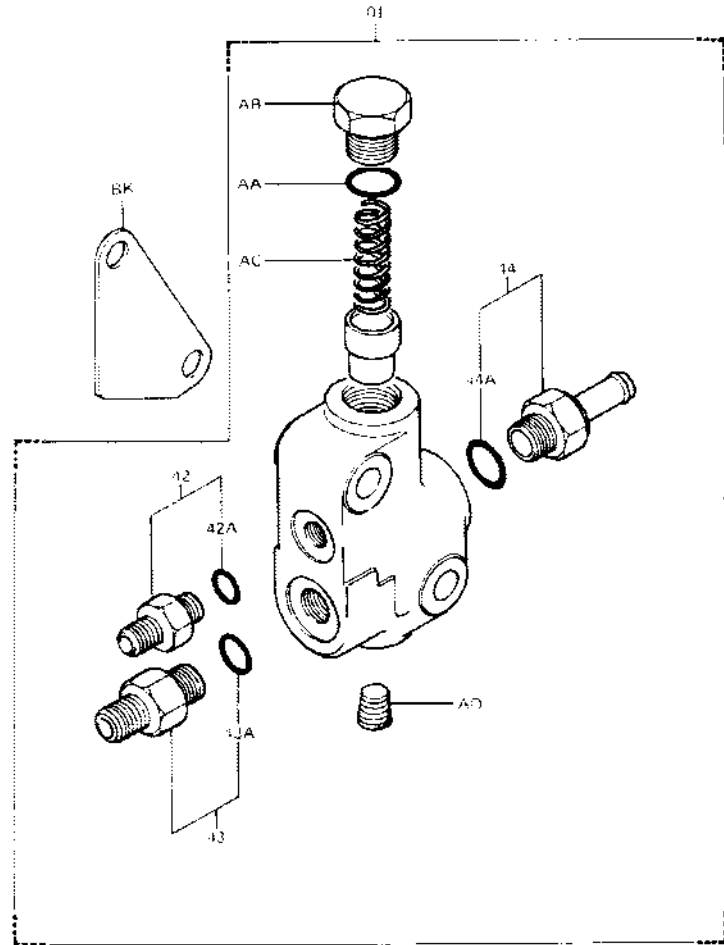 

6820 018 A

G300-001

FIG. 6820
FLOW DIVIDER

6820

V

87/08

PART NAME CODE	PART NAME	QTY
6820-01	FLOW DIVIDER ASSY	1
6820-42	FITTING	1
6820-42A	RING, O	1
6820-43	FITTING	1
6820-43A	RING, O	1
6820-44	FITTING	1
6820-44A	RING, O	1
6820-AA	RING, O	1
6820-AB	STOPPER	1
6820-AC	SPRING	1
6820-AD	PLUG	1
6820-BK	CUSHION SUB-ASSY	1

Q300-002E

.....MEMO.....

.....