

**TOYOTA
INDUSTRIAL
VEHICLE**

PARTS CATALOG

2FB 7,9

G201-1

**TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.**

TOYOTA

FORKLIFT TRUCK

PARTS CATALOG

MODEL	-----	<u>2 F B</u>	-----
FRAME NO.		<u>F B H 9</u>	-----
LIFTING HEIGHT		-----	mm

DESCRIPTION

<ul style="list-style-type: none"> UL-approved Model Type E SCR Drive Cold Storage Model Type 45S Fully Oil Charged Lift Cylinder 	

TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.

QUICK REFERENCE INDEX

INTRODUCTION

ELECTRICAL SYSTEM

CHASSIS

BODY

ELECTRICAL SYSTEM

MAST

HYDRAULIC SYSTEM

GENERAL INFORMATION

This parts catalog has been prepared for the customers of Toyota Industrial Vehicles and this shows only the part name codes instead of parts numbers.

When ordering parts from your local Toyota dealer, please specify the complete model number of the truck, the engine number or frame number. Also it is essential that you specify the part name codes described in the pages of illustrations and text.

The complete model number and frame number are shown in the front page of this catalog. All the columns in this quick reference index are supposed to be filled out by both the factory and your local dealer.

For the industrial vehicle with optional equipment, which is described in the lower part of the DESCRIPTION, it is imperative for you to specify optional equipment when ordering parts.

Your Toyota dealer has always been furnished with enough information to decode the correct part numbers based on your information of model number, engine number or frame number as well as part name code.

INFORMATIONS D'ORDRE GENERAL

Ce catalogue de pièces a été préparé pour les propriétaires de Véhicules Industriels Toyota. On n'y trouvera que les codes de désignation de pièces au lieu des numéros de pièces.

Pour la commande de pièces auprès de votre concessionnaire Toyota, prière de spécifier le numéro de modèle complet de l'engin, le numéro du moteur ou le numéro du châssis. Il est aussi nécessaire de spécifier les codes de désignation de pièces comme ils sont décrits dans les pages d'illustrations et dans le texte.

Le numéro de modèle complet et le numéro de châssis sont indiqués en première page de ce catalogue. Toutes les colonnes de l'index de référence rapide devraient être remplies par l'usine et par votre concessionnaire.

Pour le véhicule industriel avec équipement optionnel, décrit en bas de page sous la rubrique "DESCRIPTION", il convient de bien spécifier qu'il s'agit de cet équipement lors de commande de pièces.

Votre concessionnaire Toyota est toujours suffisamment informé pour décoder les numéros de pièces sur la base de votre information du numéro de modèle, du numéro de moteur ou de châssis, et des codes de désignation de pièces.

INFORMACION GENERAL

Este catálogo de piezas ha sido preparado para los clientes de vehículos industriales de TOYOTA, e incluye tan sólo los códigos de nombre de pieza en lugar de los números de pieza.

Cuando solicite piezas a su distribuidor local de TOYOTA especifique por favor el número de modelo completo del vehículo, el número de motor o el número de bastidor. Asimismo, es esencial que Vd. especifique los códigos de nombre de pieza descritos en las páginas de ilustraciones y de texto.

El número completo de modelo y el número de bastidor se indican en la portada de este catálogo. Se supone que todas las columnas de este índice de referencia se han llenado, tanto por parte de la fábrica como por parte de su distribuidor local.

En lo que concierne a los vehículos industriales con equipos opcionales, que se describen en la parte baja de la DESCRIPCION, es absolutamente necesario que especifique equipos opcionales cuando solicite piezas de repuesto.

Su distribuidor local de TOYOTA posee la información necesaria para descifrar los números correctos de cada pieza a base de su información de número de modelo, número de motor o número de bastidor, así como el código de nombre de la pieza.

ALLGEMEINE INFORMATION

Dieser Teilekatalog wurde für die Benutzer von Toyota Industriefahrzeugen zusammengestellt und zeigt anstelle von Teilenummern nur die Teilennamen-Kodes.

Geben Sie bei Teilebestellungen von Ihrem Toyota-Händler am Platz bitte die vollständige Modellnummer des Fahrzeugs, die Motornummer oder Fahrgestellnummer an. Es ist auch erforderlich, daß Sie die in den Illustrationen und im Text beschriebenen Teilennamen-Kodes angeben.

Die vollständige Modellnummer und Fahrgestellnummer finden Sie auf der Vorderseite dieses Katalogs. Alle Spalten in dieser Bezugstabelle sollen sowohl vom Werk als von Ihrem Händler am Platz ausgefüllt werden.

Für Industriefahrzeuge mit Sonderausrüstung, welche im unteren Teil der BESCHREIBUNG erläutert ist, müssen Sie bei der Bestellung von Teilen unbedingt diesbezügliche Angaben machen.


Ihr Toyota-Händler verfügt stets über genügend Information, um die richtigen Teilenummern zu entschlüsseln, basiert auf Ihren Angaben zu Modellnummer, Motornummer oder Fahrgestellnummer und den Teilennamen-Kodes.

ILLUSTRATION AND PART NAME CODE TEXT PAGE COMPOSITION

Essentially, one (1) page will present both the illustration and part name code. However, when the space for text page is not enough the next page will be used in succession.

COMPOSICION DE LAS PAGINAS DE ILUSTRACIONES Y DE TEXTO DE CODIGOS DE NOMBRE DE PIEZAS

Básicamente, una (1) página incluirá tanto la ilustración como el código de nombre de la pieza. No obstante, si el espacio no fuese suficiente, se utilizará la página siguiente.

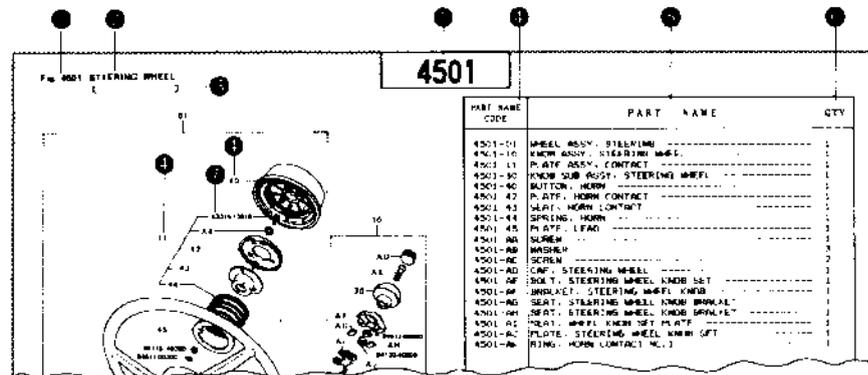

- Figure number**
This parts catalog has been prepared according to the figure numbers.
- Figure title**
A representative part name which is the major assembly part name is shown as the figure title of the illustration.
- Sub title**
The optional name or special specification of each illustration are indicated.
- Part name code**
This is a combination of figure number and codes of illustrations pertaining to each part. This is a key for your Toyota dealer to find the correct part numbers.
- Part name**
As a rule, the part name is indicated for each of the part name codes.
- QTY (Quantity)**
The quantity column indicates the utilized pieces of part name code unit. When the utilized quantity changes according to each of the vehicles, maximum is indicated. When the utilized quantity of the parts differs or is more than 100 pieces, quantity 99 is indicated.
- Standard parts numbers**
The standard parts such as the bolts, nuts, washer, etc. are described with parts numbers. When ordering these parts, specify parts numbers.

- Número de figura**
Este catálogo de piezas se ha preparado de acuerdo con los números de las figuras.
- Título de las figuras**
Como título de las figuras de la página de ilustraciones, se incluye un nombre que sea representativo del nombre del mayor conjunto.
- Subtítulo**
Se indican el nombre opcional o las especificaciones especiales de cada ilustración.
- Código de nombre de pieza**
Se trata de una combinación de número de figura y de código de las ilustraciones correspondientes a cada pieza. Esta es la clave para que su distribuidor local de TOYOTA pueda encontrar el número de pieza correcto.
- Nombre de la pieza**
Como norma, se indica el nombre de cada uno de los códigos de nombre de pieza.
- QTY (Cantidad)**
La columna de cantidad indica el número de piezas utilizadas de cada unidad de código de nombre de pieza. Cuando la cantidad utilizada es intercambiable entre cada uno de los vehículos, se indica el máximo. Cuando la cantidad de piezas utilizadas pueda diferir o ser superior a 100, se indica como cantidad 99.
- Números de piezas normalizadas**
Las piezas corrientes, tales como pernos, tuercas, arandelas etc., se describen con número de pieza. Cuando solicite tales piezas, indique su número de pieza.


ILLUSTRATION ET COMPOSITION DU DE TEXTE DE CODE DE DESIGNATION DE PIECE

Une (1) page contiendra essentiellement une illustration et ses codes de désignation de pièce. Toutefois, lorsque l'espace réservé au texte est insuffisant, la continuation se trouvera sur la page suivante.

ABBILDUNG UND TEXTSEITENAUFBAU FÜR TEILENAMEN-KODE

Grundsätzlich finden Sie auf einer (1) Seite sowohl die Abbildung als auch den Teilnamen-Kode.

Wenn für den Text jedoch nicht genügend Platz vorhanden ist, wird er auf der nächsten Seite fortgesetzt.

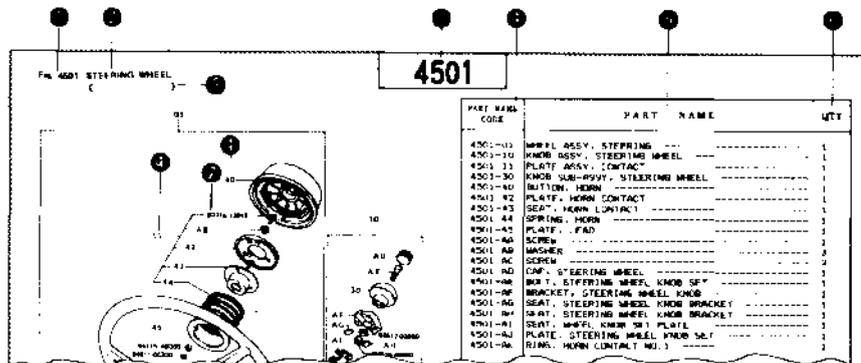

- Numéro de figure**
Ce catalogue de pièces a été préparé en fonction des numéros de figures.
- Titre de figure**
Une désignation de pièce représentative, celle d'une pièce d'un ensemble important, est indiquée comme titre de figure de l'illustration.
- Sous-titre**
La désignation optionnelle ou les spécifications spéciales de chaque illustration sont indiquées.
- Code de désignation de pièce**
Obtenu en combinant le numéro de figure et les codes des illustrations inhérents à chaque pièce, Ce code permettra à votre concessionnaire Toyota de trouver les numéros de pièces corrects.
- Désignation de pièce**
La désignation de la pièce est indiquée pour chacun des codes de désignation de pièce.
- Q'ty (quantité)**
La colonne quantité indique les pièces utilisées de l'unité de code de désignation de pièce. La quantité maximum est indiquée quand la quantité utilisée diffère pour chacun des véhicules. Quand la quantité de pièces utilisées diffère ou lorsqu'elle dépasse 100 pièces, la quantité 99 est indiquée.
- Numéros de pièces standard**
Les pièces standard comme les boulons, les écrous, les rondelles, etc. sont décrits dans les numéros de pièces. Pour commander ces pièces, prière de spécifier les numéros de pièces.

- Abbildungsnummer**
Dieser Teilekatalog wurde nach Abbildungsnummern zusammengestellt.
- Abbildungstitel**
Ein stellvertretender Teilname, welcher zugleich die Bezeichnung für die Hauptbaugruppe ist, wird als Abbildungstitel der Illustration angegeben.
- Untertitel**
Ein zusätzlicher Name oder eine besondere Kennzeichnung werden für jede Illustration angegeben.
- Teilnamen-Kode**
Dies ist eine Kombination von ziffern und Abbildungskodes, die jedes Teil betreffen. Es ist ein Schlüssel für Ihren Toyota-Händler, um die richtigen Teilenummern zu finden.
- Teilname**
Grundsätzlich wird der Teilname für alle Teilnamen-Kodes angegeben.
- QTY (Menge)**
Die Mengenspalte gibt die benutzte Stückzahl von Teilnamen-Kode-Einheiten an.
Wenn die benutzte Stückzahl je nach Fahrzeug Verschieden ist, wird die Höchstmenge angegeben.
Wenn die benutzte Menge 100 Stück überschreiten kann, wird als Menge 99 angegeben.
- Standardteile-Nummern**
Die Standardteile, wie Schrauben, Muttern, Unterlegscheiben usw., sind in den Teilenummern beschrieben. Geben Sie bei Bestellung dieser Teile die Teilenummern an.

DATA PLATE & SERIAL NUMBERS

For retrieving correct part numbers, it's indispensable to know the truck model, as well as frame number (or engine number).
Customers can obtain said information in the data plate on the truck or in this user parts catalog.

PLAQUE DE DONNEES TECHNIQUES & NUMEROS DE SERIE

Pour relever correctement le numéro des pièces, il est indispensable de connaître le modèle de l'engin, ainsi que le numéro du châssis (ou du moteur).
Les propriétaires peuvent trouver ladite information sur la plaque de données techniques de l'engin ou dans le présent ouvrage.

Data plate
Placa de datos
Plaque de données techniques
Datenplatte

 TOYOTA LIFT TRUCK	
MODEL	<input type="text"/>
CODE NO. OF SPECIAL MODEL	<input type="text"/>
MODEL OF ATTACHMENT	<input type="text"/>
VOLTAGE	<input type="text"/>
FRAME NO.	<input type="text"/>
LIFTING HEIGHT	<input type="text"/>
CAPACITY	<input type="text"/>
WEIGHT	<input type="text"/>
PROD. YEAR	<input type="text"/>
TOYOTA AUTOMATIC LOOM WORKS. LTD. KARIYA JAPAN	


PLACA DE DATOS Y NUMEROS DE SERIE

Para obtener los números de pieza correctos, es indispensable conocer el modelo del vehículo, así como el número del bastidor (o del motor).
Los clientes pueden obtener dicha información por la placa de datos del vehículo o este catálogo de piezas para el usuario.

DATENPLATTE & SERIENNUMMERN

Um die richtige Teilenummer zu ermitteln, müssen unbedingt das Fahrzeugmodell sowie die Fahrgestellnummer (oder die Motornummer) bekannt sein.
Kunden können diese Angaben von der Datenplatte am Fahrzeug oder in diesem Teilekatalog für Benutzer entnehmen.

Data plate
Placa de datos
Plaque de données techniques
Datenplatte

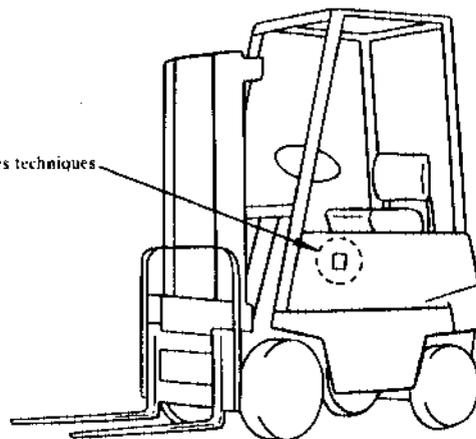


Frame Number
(Top of the frame)
Número de bastidor
(Parte superior del bastidor)

Numéro de châssis
(haut du châssis)
Fahrgestellnummer
(Oben am Fahrgestell)


FIG. INDEX

 FIG. 1401




ドライブモータ
Drive Motor

 FIG. 1402




ポンプドライブモータ
Pump Drive Motor

 FIG. 1403



P/S ポンプドライブモータ
P/S Pump Drive Motor

FIG. 2401

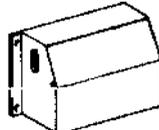

コントロールパネル
Control Panel

FIG. 2403



コンタクターアセンブリ
Contactor Assy

FIG. 2411



コンタクターアセンブリ
Contactor Assy

FIG. 2412



コンタクターパネル
Contactor Panel

エレクトリカル グループ ELECTRICAL GROUP

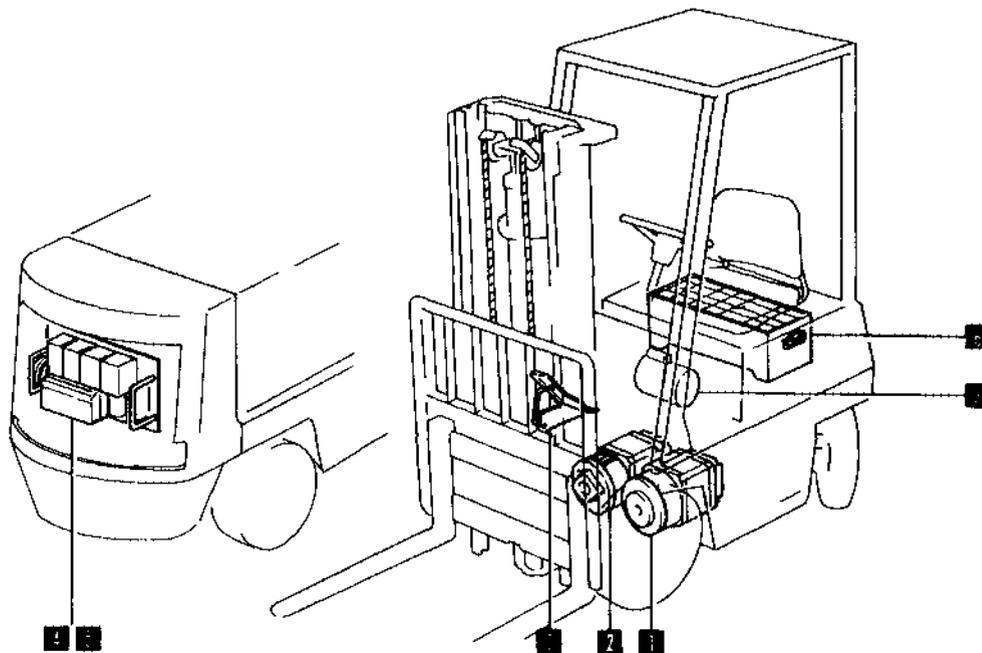


FIG. 2601




バッテリー
Battery

FIG. 2611



バッテリーマウントチャージャー
Battery Mount Charger

 FIG. 2612



バッテリーセパレートチャージャー
Battery Separate Charger

FIG. 2611



アクセルレーター
Accelerator

FIG. INDEX

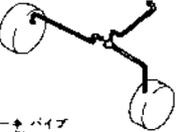
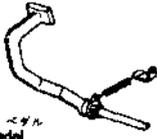
<p>FIG. 3306</p>  <p>ギヤ ケースと ギヤ Gear Case & Gear</p>	<p>FIG. 3310</p>  <p>チェンジ レバー Change Lever</p>	<p>FIG. 3701</p>  <p>プロペラ シャフト Propeller Shaft</p>	<p>FIG. 4101</p>  <p>ディファレンシャル Differential</p>	<p>FIG. 4201</p>  <p>フロント アクスル Front Axle</p>	<p>FIG. 4301</p>  <p>リア アクスル Rear Axle</p>	<p>FIG. 4401</p>  <p>フロント タイヤ (シングル) Front Tire (Single)</p>
<p>シャシ グループ CHASSIS GROUP</p>						<p>FIG. 4402</p>  <p>フロント タイヤ (ダブル) Front Tire (Double)</p>
						<p>FIG. 4403</p>  <p>リア タイヤ Rear Tire</p>
						<p>FIG. 4501</p>  <p>ステアリング ホイール Steering Wheel</p>
						<p>FIG. 4502</p>  <p>ステアリング ポスト Steering Post</p>
	<p>FIG. 4715</p>  <p>ドラム ブレーキ Drum Brake</p>	<p>FIG. 4714</p>  <p>ブレーキ パイプ Brake Pipe</p>	<p>FIG. 4702</p>  <p>ブレーキ マスター シリンダ Brake Master Cylinder</p>	<p>FIG. 4701</p>  <p>ブレーキ ペダル Brake Pedal</p>	<p>FIG. 4801</p>  <p>パーキング ブレーキ Parking Brake</p>	<p>FIG. 4507</p>  <p>ドラッグ リンクとパイピング Drag Link & Piping</p>

FIG. INDEX

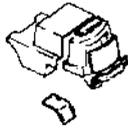
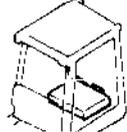
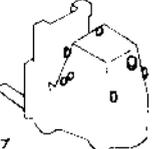
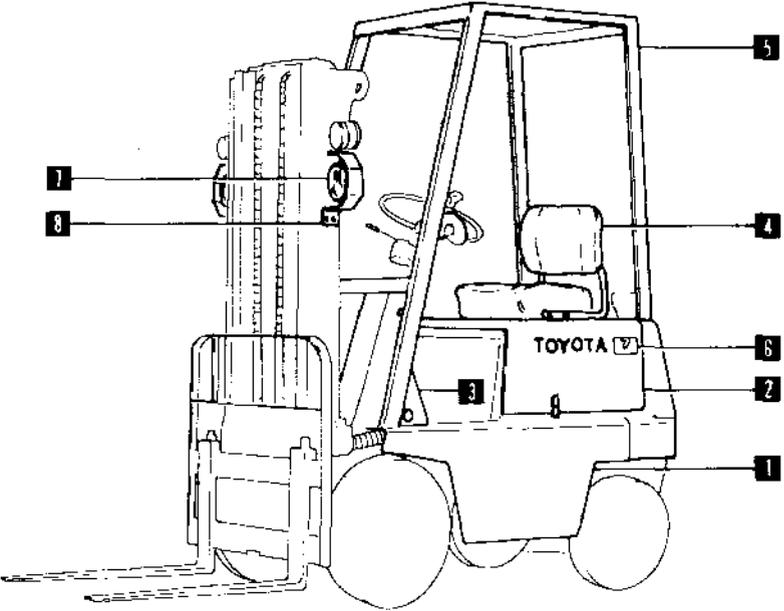
<p>FIG. 5101 1</p>  <p>フレームとウエイト Frame & Weight</p>	<p>FIG. 5201 2</p>  <p>フードとヒンジ Hood & Hinge</p>	<p>FIG. 5301 3</p>  <p>インストルメントパネルとフロア Instrument Panel & Floor</p>	<p>FIG. 5308 4</p>  <p>ドライバーシート Driver Seat</p>	<p>FIG. 5401 5</p>  <p>ヘッドガードとアクセサリ Head Guard & Accessory</p>	<p>FIG. 5405 6</p>  <p>インジケータプレート Indicator Plate</p>	<p>FIG. 5602</p>  <p>ワイヤリングとクランプ Wiring & Clamp</p>	
<p>ボデー、電気リカルグループ BODY ELECTRICAL GROUP</p>							<p>FIG. 5611 7</p>  <p>ランプ Lamp</p>
							<p>FIG. 5612 8</p>  <p>ランプブラケット Lamp Bracket</p>
							<p>FIG. 5702</p>  <p>モータースイッチ Motor & Switch</p>



FIG. INDEX


 





<p>FIG. 6101 1</p>  <p>マスト Mast</p>	<p>FIG. 6301 2</p>  <p>リフト ブラケット ト フォーク Lift Bracket & Fork</p>	<p>FIG. 6302 3</p>  <p>チェーン ト チェーン ホール Chain & Chain Wheel</p>	<p>FIG. 6501 (V) 4</p>  <p>リフト シリンダ Lift Cylinder</p>	<p>FIG. 6502 (FV) 4</p>  <p>フロント リフト シリンダ Front Lift Cylinder</p>	<p>FIG. 6503 (FV) 4</p>  <p>リア リフト シリンダ Rear Lift Cylinder</p>	<p>FIG. 6504 (M) 5</p>  <p>リフト シリンダ Lift Cylinder</p>
<p>マスト ハイドロリック コンポーネント グループ MAST, HYDRAULIC COMPONENT GROUP</p>						
						
<p>FIG. 6505 (F) 5</p>  <p>フロント リフト シリンダ Front Lift Cylinder</p> <p>FIG. 6506 (F) 5</p>  <p>リア リフト シリンダ Rear Lift Cylinder</p> <p>FIG. 6511 6</p>  <p>チルト シリンダ Tilt Cylinder</p> <p>FIG. 6701 7</p>  <p>オイル ポンプ Oil Pump</p> <p>FIG. 6802 8</p>  <p>マスト パイピング Mast Piping</p> <p>FIG. 6801 8</p>  <p>ボデー パイピング Body Piping</p> <p>FIG. 6709 9</p>  <p>オイル コントロール バルブ リンク Oil Control Valve Link</p> <p>FIG. 6705 8</p>  <p>オイル コントロール バルブ Oil Control Valve</p>						

FIG. 0901
STANDARD TOOL

0901

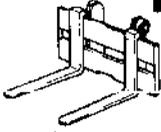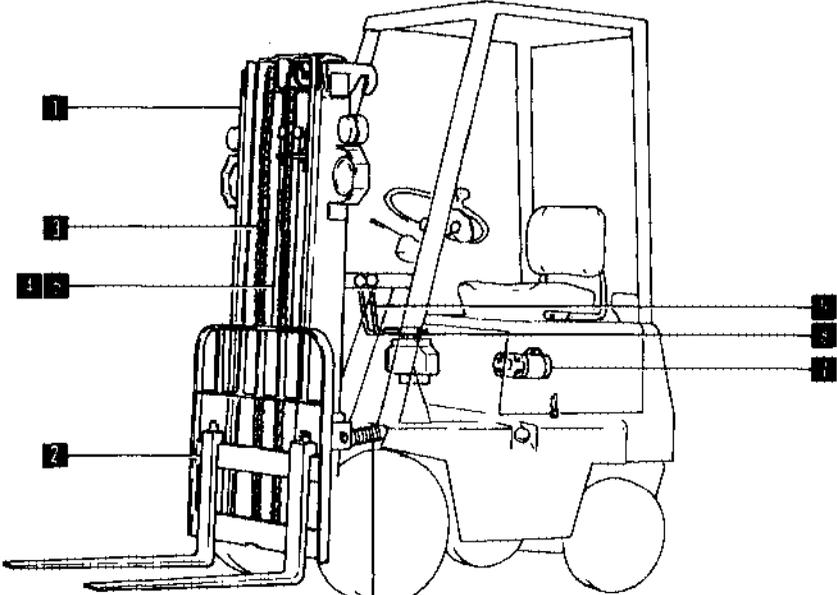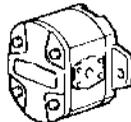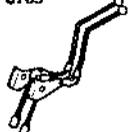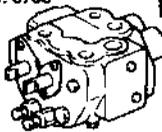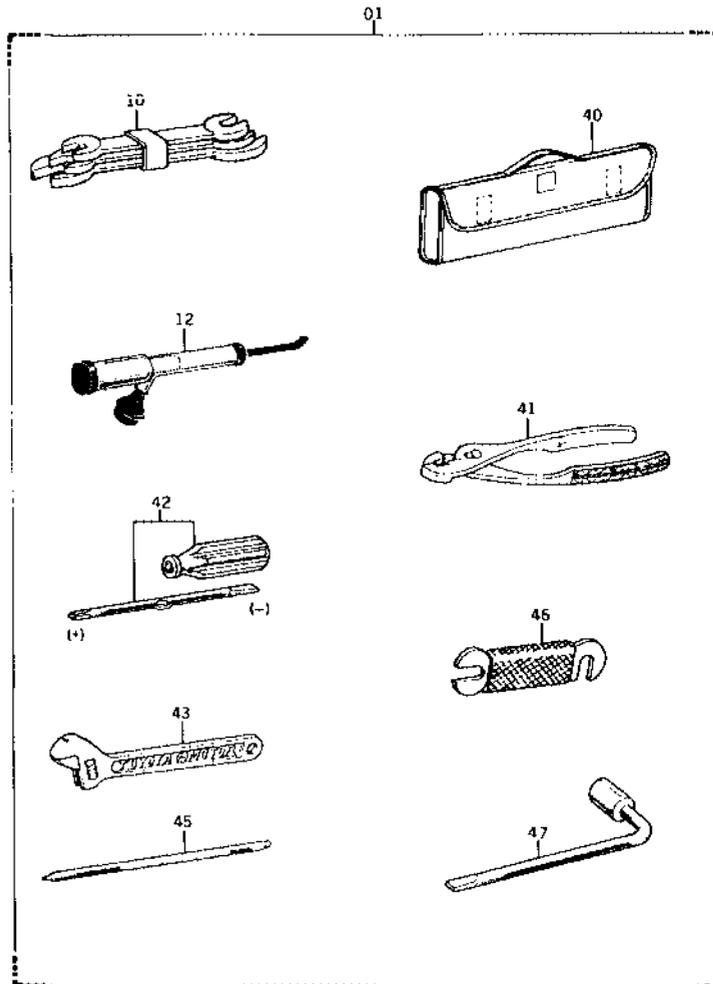

0901-020




PART NAME CODE	PART NAME	QTY
0901-01	TOOL SET, STANDARD -----	1
0901-10	SPANNER SET -----	1
0901-12	METER ASSY, HYDRAULIC SAILING -----	1
0901-40	BAG, TOOL -----	1
0901-41	PRIERS -----	1
0901-42	DRIVER, SCREW -----	1
0901-43	WRENCH, MONKEY -----	1
0901-45	ROD, THERMOMETER -----	1
0901-46	FUSE -----	1
0901-47	WRENCH, HUB NUT BOX -----	1

(MAIN) (1) G201


FIG. 1401
DRIVE MOTOR

1401

(DUST PROOF)

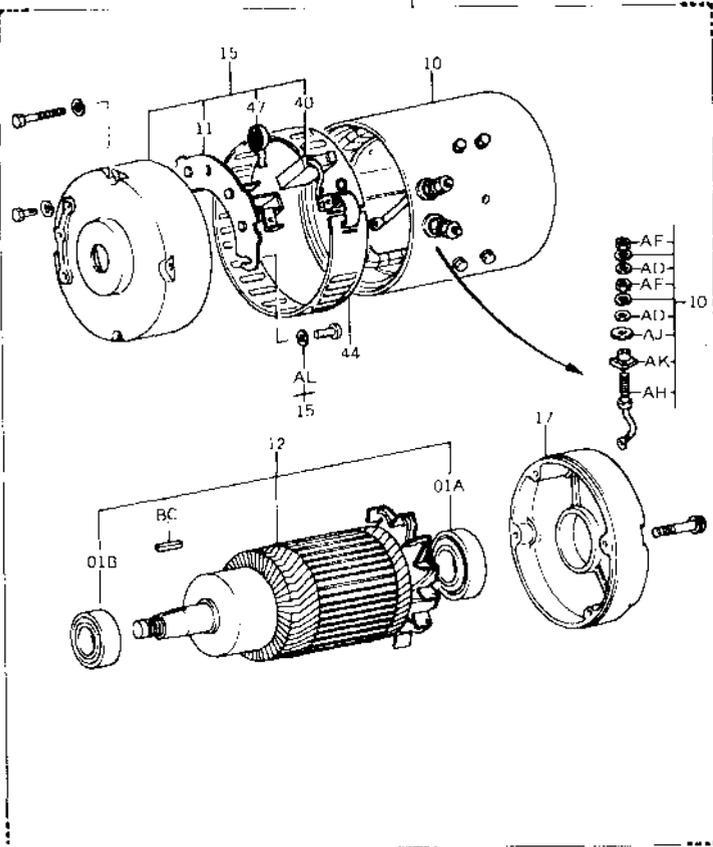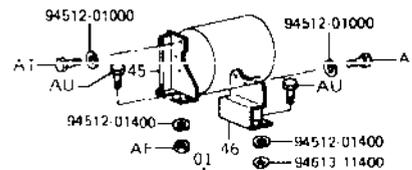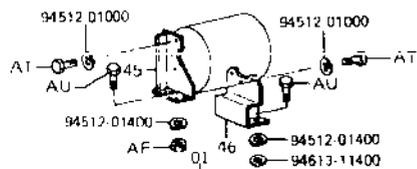

1401-062

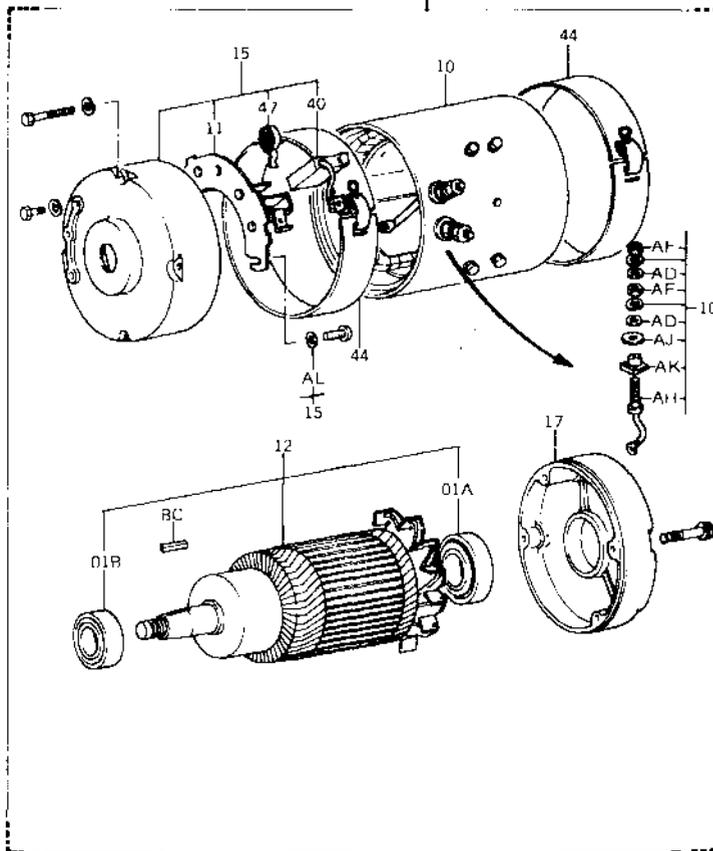


1401-062

FIG. 1401
DRIVE MOTOR

1401

(UL-E)

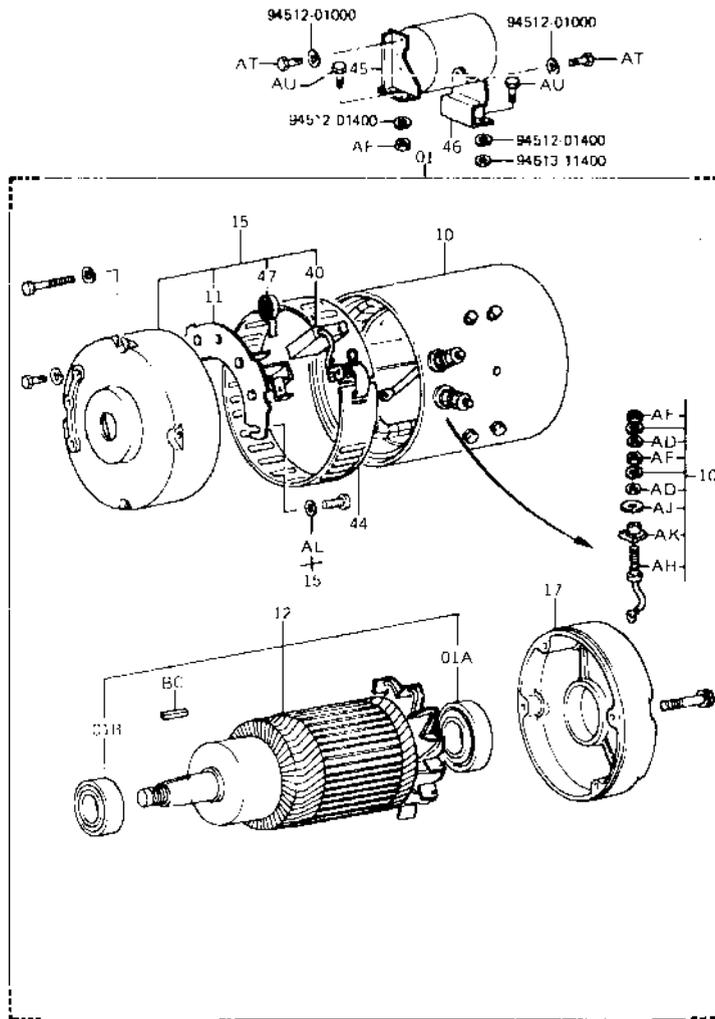


PART NAME CODE	PART NAME	QTY
1401-01	MOTOR ASSY. DRIVE -----	1
1401-01A	BEARING, DRIVE MOTOR, NO.1 -----	1
1401-01B	BEARING, DRIVE MOTOR, NO.2 -----	1
1401-10	YOKE ASSY -----	1
1401-11	HOLDER ASSY, BRUSH -----	1
1401-12	ARMATURE ASSY, DRIVE -----	1
1401-15	FRAME ASSY, COMMUTATOR -----	1
1401-17	FRAME, END -----	1
1401-40	BRUSH, DRIVE MOTOR -----	2
1401-44	COVER, BRUSH -----	1
1401-45	BRACKET, DRIVE MOTOR MOUNTING, NO.1 -----	1
1401-46	BRACKET, DRIVE MOTOR MOUNTING, NO.2 -----	1
1401-47	SPRING, DRIVE MOTOR BRUSH -----	7
1401-AD	WASHER, PLATE -----	8
1401-AF	NUT -----	4
1401-AH	TERMINAL SUB-ASSY, NO.1 -----	1
1401-AJ	BUSH, INSULATION -----	4
1401-AK	BUSH, STEPPED -----	4
1401-AL	WASHER, PLATE -----	3
1401-AM	WIRE SUB-ASSY -----	1
1401-AQ	NUT -----	8
1401-AS	WASHER, WAVE -----	1
1401-AT	BOLT -----	6
1401-AU	BOLT -----	6
1401-BC	KEY -----	1

(MAIN) (2)

G201

FIG. 1402
PUMP DRIVE MOTOR

1402

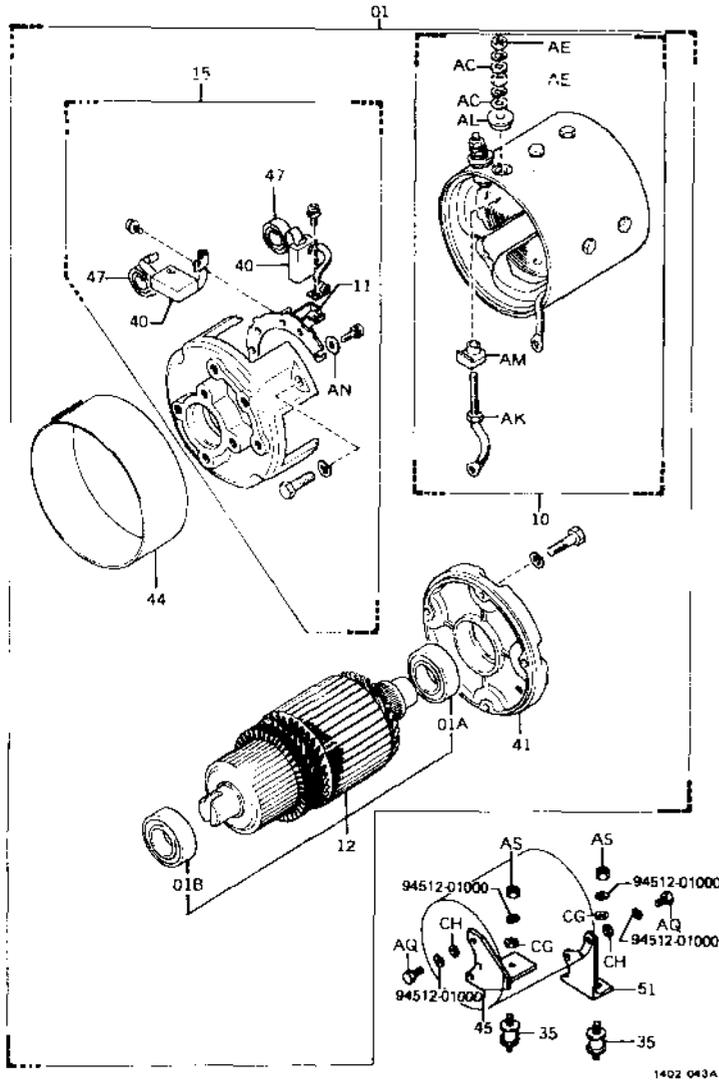


PART NAME CODE	PART NAME	QTY
1402-01	MOTOR ASSY, PUMP	1
1402-01A	BEARING, PUMP MOTOR, NO.1	1
1402-01B	BEARING, PUMP MOTOR, NO.2	1
1402-10	YOKE ASSY, PUMP MOTOR	1
1402-11	HOLDER ASSY, PUMP MOTOR	1
1402-17	ARMATURE ASSY, PUMP MOTOR	1
1402-15	FRAME ASSY, COMMUTATOR	1
1402-35	INSULATOR SUB-ASSY, MOTOR MOUNTING	3
1402-40	BRUSH, PUMP MOTOR	2
1402-41	BRACKET, NO.1	1
1402-44	COVER, BRUSH	1
1402-45	BRACKET, PUMP MOTOR MOUNTING	1
1402-47	SPRING, PUMP MOTOR BRUSH	2
1402-51	BRACKET, PUMP MOTOR MOUNTING NO.2	1
1402-AC	WASHER, PLATE	4
1402-AE	NUT	4
1402-AK	TERMINAL SUB-ASSY	1
1402-AL	BUSH, INSULATION	2
1402-AM	BUSH, STEPPED	2
1402-AN	WASHER, PLATE	3
1402-AQ	BOLT	6
1402-AS	NUT	4
1402-CG	WASHER, PLATE	4
1402-CH	WASHER, PLATE	6

(MAIN) (3) G201

FIG. 1403
POWER STEERING PUMP DRIVE MOTOR

1403

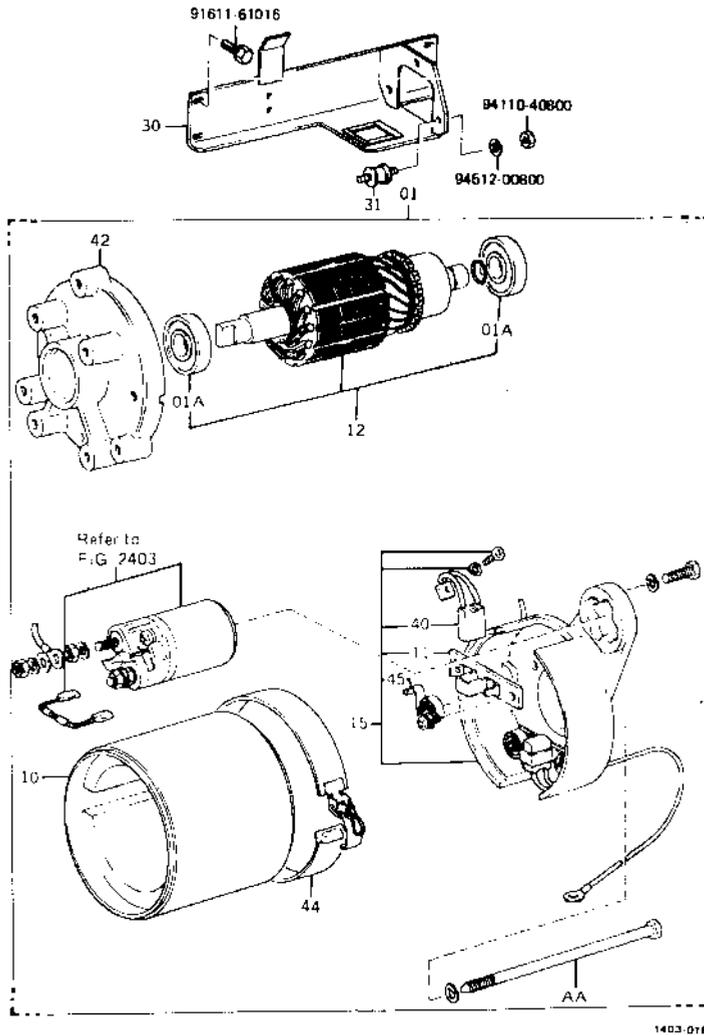

PART NAME CODE	PART NAME	QTY
1403-01	MOTOR ASSY, POWER STEERING -----	1
1403-01A	BEARING, POWER STEERING MOTOR -----	2
1403-10	YOKE ASSY, POWER STEERING MOTOR -----	1
1403-11	HOLDER ASSY, BRUSH -----	2
1403-12	ARMATURE ASSY, POWER STEERING -----	1
1403-15	FRAME ASSY, COMMUTATOR -----	1
1403-30	BRACKET SUB-ASSY, MOTOR MOUNTING -----	1
1403-31	INSULATOR SUB-ASSY, BODY MOUNTING -----	3
1403-40	BRUSH, POWER STEERING MOTOR -----	2
1403-42	BRACKET, NO.2 -----	1
1403-44	COVER, BRUSH -----	1
1403-45	SPRING, POWER STEERING MOTOR BRUSH -----	2
1403-AA	BOLT -----	1

(MAIN) (4)

G201

2401

PART NAME CODE	PART NAME	QTY
2401-D1	PANEL ASSY, DRIVE CONTROL -----	1
2401-10	GENERATOR ASSY, SIGNAL -----	1
2401-40	THYRISTOR, MAIN -----	1
2401-42	CONDENSER -----	1
2401-45	SENSOR, CURRENT -----	1
2401-46	DIODE -----	2
2401-51	HEATSINK, NO.1 -----	1
2401-52	REACTOR (L1) -----	1
2401-53	REACTOR (L2) -----	1
2401-54	HEATSINK, NO.2 -----	1
2401-55	THYRISTOR, SUB -----	2
2401-AC	COVER -----	1
2401-AE	INSULATOR -----	2
2401-AJ	NUT -----	1
2401-AN	BASE -----	1
2401-AT	BAR -----	1
2401-AU	BAR -----	1
2401-AX	INSULATOR -----	4
2401-BD	SCREW -----	2
2401-BE	SCREW -----	4
2401-BF	BAR -----	1
2401-BG	HOLDER, TERMINAL -----	2
2401-BH	HARNESS ASSY, WIRING -----	1
2401-BJ	BAR -----	2
2401-BK	WIRING -----	1
2401-BM	WASHER, SPRING -----	1
2401-BN	WASHER, PLATE -----	1
2401-BO	BAR -----	2
2401-BP	WASHER, PLATE -----	6
2401-BQ	WASHER, SPRING -----	5
2401-BR	BASE -----	1
2401-BT	SHEET -----	1
2401-BU	BRACKET SUB-ASSY, CAPACITOR -----	1
2401-BV	BRACKET SUB-ASSY -----	1
2401-BW	MAT -----	1
2401-BX	MAT -----	1
2401-BY	BRACKET SUB-ASSY, TERMINAL -----	1
2401-BZ	SHEET -----	1
2401-CA	PLATE, NAME -----	1
2401-CB	GROMMET -----	4
2401-CC	PLATE -----	1
2401-CD	NUT -----	5
2401-CE	SLEEVE -----	2
2401-CF	COVER, CONTROL BOX -----	1
2401-CG	CLAMP -----	1
2401-DC	SPACER, NO.1 -----	6
2401-DJ	WIRING, NO.1 -----	1
2401-DK	WIRING, NO.2 -----	1
2401-DL	WIRING, NO.3 -----	1
2401-DM	WIRING, NO.4 -----	1
2401-DN	WIRING, NO.5 -----	1
2401-DS	TERMINAL BLOCK, FUSE -----	3
2401-DT	BASE SUB-ASSY, CONTROL -----	1

(MAIN) (5) G201

PART NAME CODE	PART NAME	QTY
2401-OU	FUSE -----	2
2401-DW	SHEET -----	4
2401-DX	HARNESS ASSY, WIRING -----	1
2401-DY	COVER SUB-ASSY, CONTROL -----	1
2401-DZ	COVER -----	1
2401-EA	BUSH -----	1
2401-EB	BUSH -----	2
2401-ED	NUT -----	12
2401-EQ	BOOT -----	1
2401-ES	WASHER, SPRING -----	12
2401-ET	WASHER, PLATE -----	25
2401-EU	BAND -----	3
2401-EV	BAR -----	1
2401-EW	STAY SUB-ASSY -----	1
2401-EX	STAY -----	1
2401-EY	PLATE, FUSE -----	2
2401-EZ	PLATE, TERMINAL NUMBER -----	1
2401-FI	WIRING SUB-ASSY -----	1


(MAIN) (6) G201

FIG. 2403
CONTACTOR ASSY


2403

(SCR) (DRIVE)

(SCR) (SHORT)

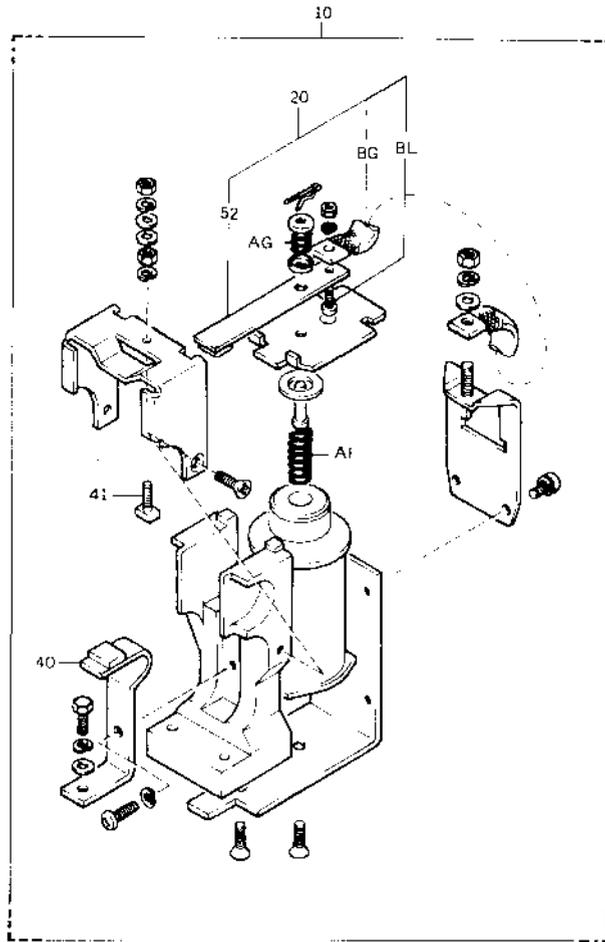

2403-008

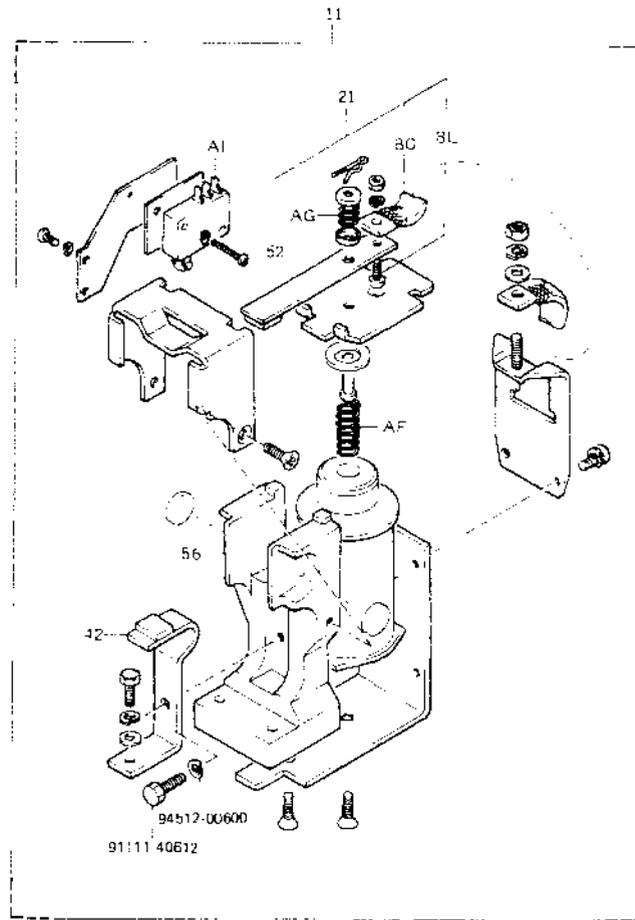



2403-009A

FIG-2403
CONTACTOR ASSY

2403

(SCR) (PUMP)

(P/S)

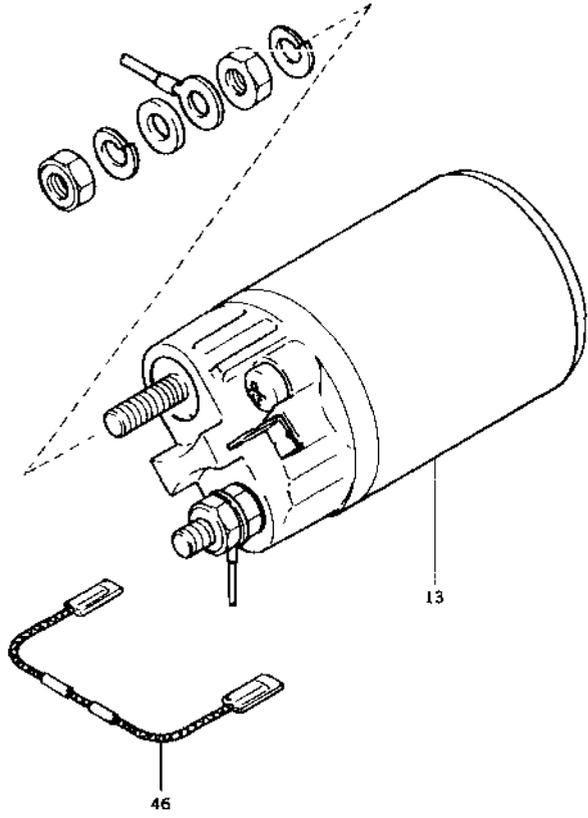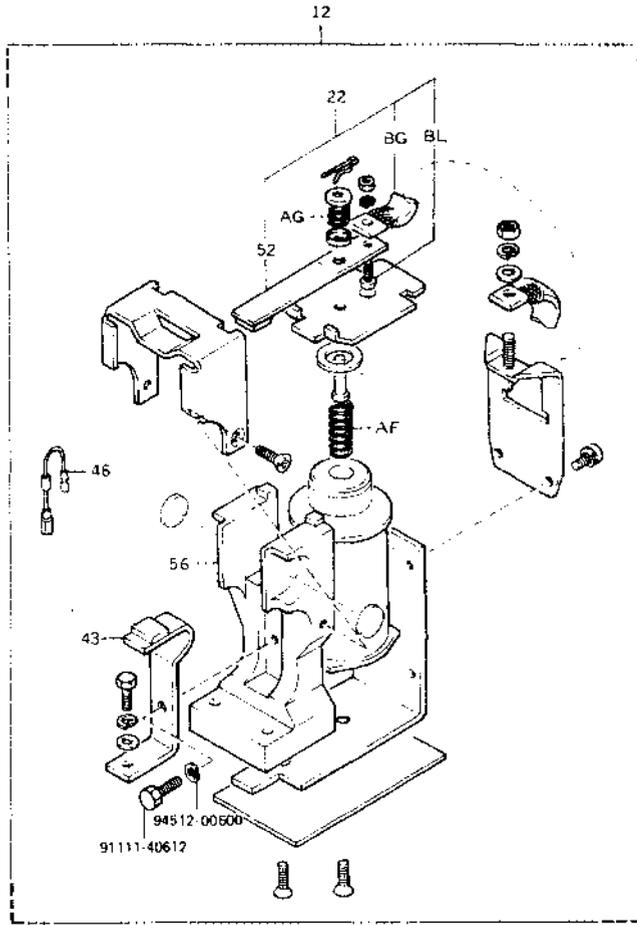

2403-019A

2403 006.

2403


PART NAME CODE	PART NAME	QTY
2403-10	CONTACTOR ASSY, DRIVE -----	2
2403-11	CONTACTOR ASSY, SHORT -----	1
2403-12	CONTACTOR ASSY, PUMP -----	1
2403-13	CONTACTOR ASSY, POWER STEERING -----	1
2403-20	CONTACT SUB-ASSY, DRIVE MOVING -----	2
2403-21	CONTACT SUB-ASSY, SHORT MOVING -----	1
2403-22	CONTACT SUB-ASSY, PUMP MOVING -----	1
2403-40	CONTACT, DRIVE FIXED, NO.1 -----	2
2403-41	CONTACT, DRIVE FIXED, NO.2 -----	2
2403-42	CONTACT, SHORT FIXED -----	1
2403-43	CONTACT, PUMP FIXED -----	1
2403-46	DIODE -----	1
2403-52	CONTACT, MOVING -----	2
2403-AF	SPRING, NO.1 -----	1
2403-AG	SPRING, NO.2 -----	1
2403-AI	SWITCH, MICRO -----	1
2403-BG	WIRE, LEAD -----	4
2403-BL	SCREW -----	4

(MAIN) (7) G201

FIG. 2411
CONTROL PANEL

2411

(RES)

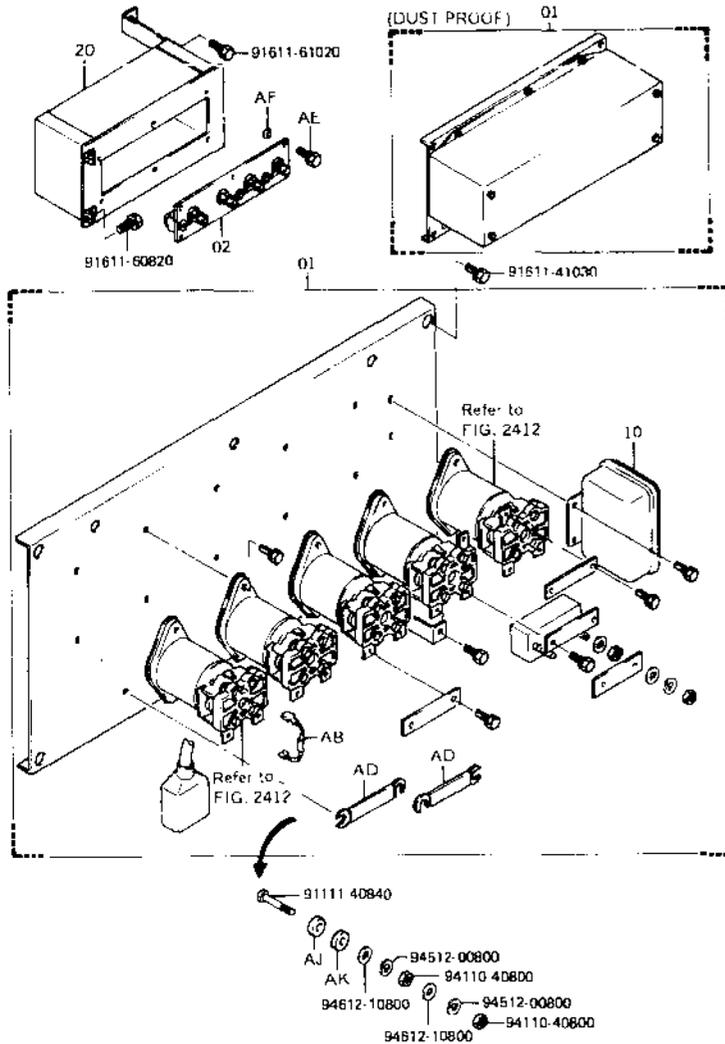

2411 013

PART NAME CODE	PART NAME	QTY
2411-01	PANEL ASSY, DRIVE CONTROL	1
2411-02	RESISTOR ASSY	1
2411-10	SIGNAL ASSY, CONTACTOR CONTROL	1
2411-20	BOX SUB-ASSY, RESISTER	1
2411-AB	DIODE	1
2411-AD	FUSE	2
2411-AE	BOLT, W/WASHER	6
2411-AF	WASHER, SPRING	6
2411-AJ	WASHER, CAP, LOWER	3
2411-AK	WASHER, CAP, UPPER	3


(MAIN) (8)

G201

FIG-2412
CONTACTOR ASSY

2412

(RES)

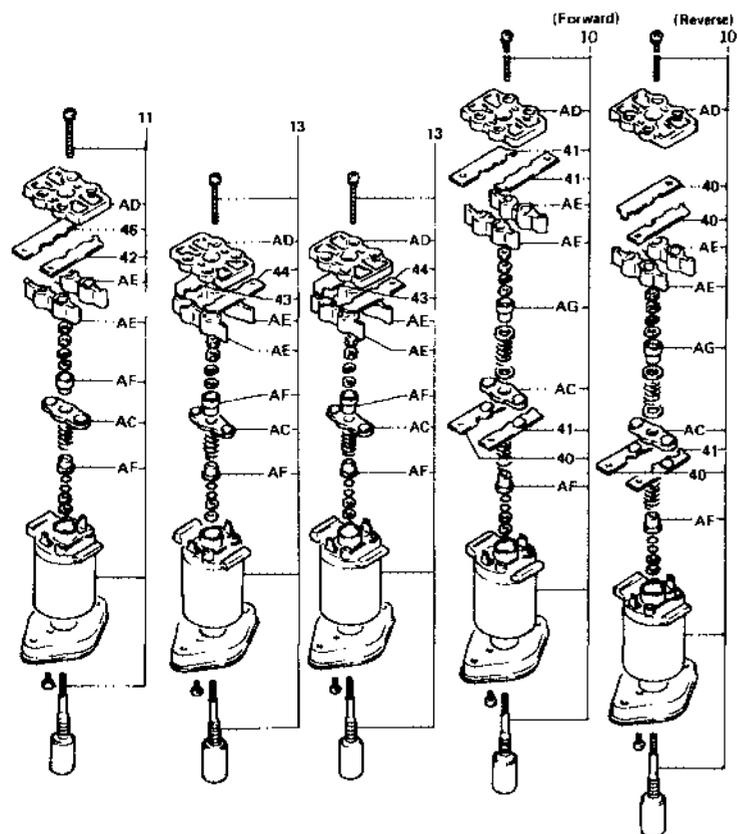

2412-002

PART NAME CODE	PART NAME	QTY
2412-10	CONTACTOR ASSY, DRIVE CHANGE -----	1
2412-11	CONTACTOR ASSY, PUMP -----	1
2412-13	CONTACTOR ASSY, RESISTOR CONTROL -----	2
2412-40	CONTACT, DRIVE CHANGE FIXED, NO.1 -----	1
2412-41	CONTACT, DRIVE CHANGE FIXED, NO.2 -----	1
2412-42	CONTACT, PUMP FIXED -----	1
2412-43	CONTACT, RESISTOR CONTROL FIXED -----	2
2412-44	CONTACT, RESISTOR CONTROL FIXED, NO.2 -----	2
2412-46	CONTACT, PUMP FIXED, NO.2 -----	1
2412-AC	MOVING, CONTACT -----	1
2412-AD	COVER -----	5
2412-AE	POLE -----	10
2412-AF	BUSH, STEPPED, NO.1 -----	8
2412-AG	BUSH, STEPPED, NO.2 -----	2

(MAIN) (9)






G201

FIG. 2501
BATTERY





2501

(G.S.)

(SHIN-KOBE)

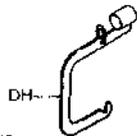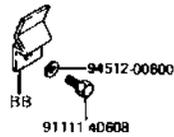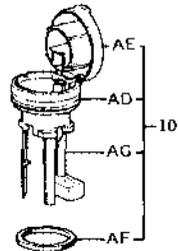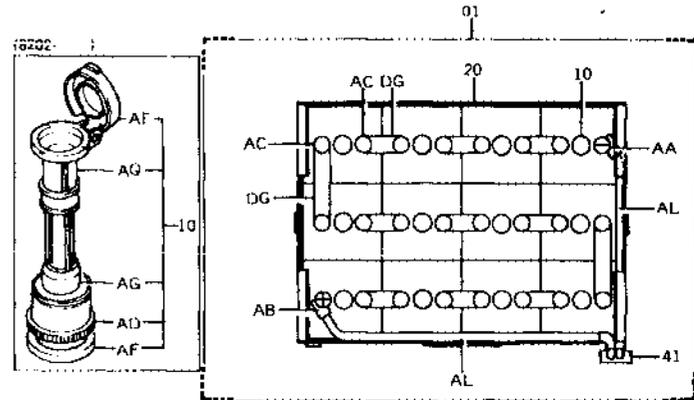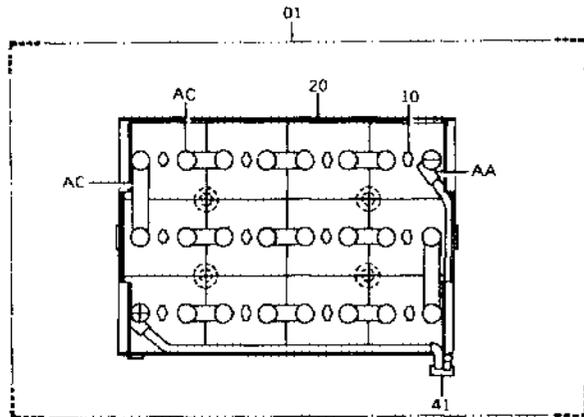



(L/HEADGUARD)

  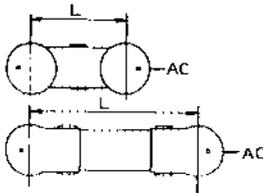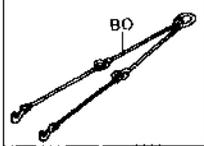








2501 072

2501

072

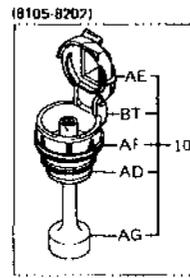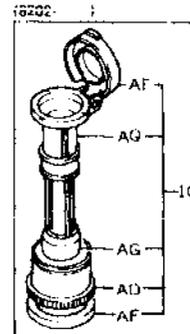

(L/HEADGUARD)

  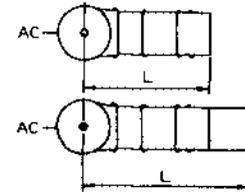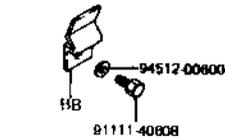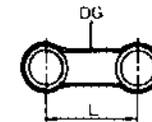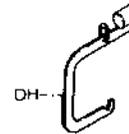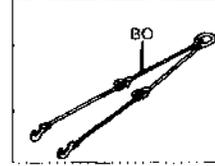

2501 074

074



6201-001-0188

FIG-2501
BATTERY


2501

(YUASA)






(8109)

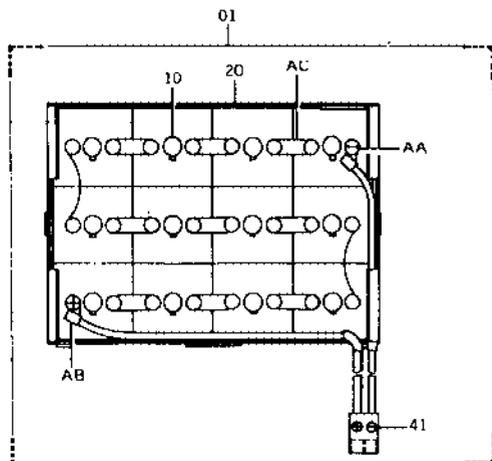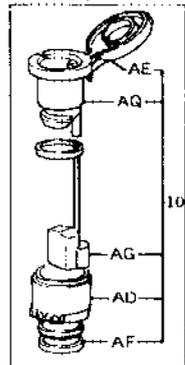

(8105-8109)

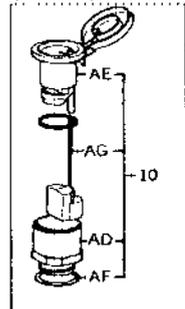

(L/HEADGUARD)

  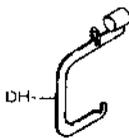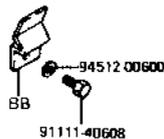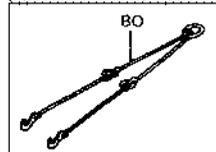

2501 073

PART NAME CODE	PART NAME	QTY
2501-01	BATTERY ASSY, W/CASE	1
2501-10	PLUG ASSY, VCNT	12
2501-20	CASE SUB-ASSY, BATTERY	1
2501-41	PLUG, BATTERY	1
2501-AA	COVER, TERMINAL, LH	1
2501-AB	COVER, TERMINAL, RH	1
2501-AC	COVER, TERMINAL	2
2501-AD	PLUG, VENT	1
2501-AE	CAP	12
2501-AF	PACKING	12
2501-AG	FLOAT	12
2501-AL	WIRE, LEADING	1
2501-AQ	FLOAT, ROD SUPPORT	12
2501-BA	STOPPER SUB-ASSY, BATTERY CASE	1
2501-BB	SPRING, BATTERY STOPPER	1
2501-BO	HANGER	1
2501-BX	PIPE, FILLING	12
2501-DG	CONNECTOR	2
2501-DH	HOOK SUB-ASSY, BATTERY HANGER	1


(MAIN) (10)

G201

FIG. 2511
BATTERY MOUNT CHARGER

2511

(SHIN-KOBE)

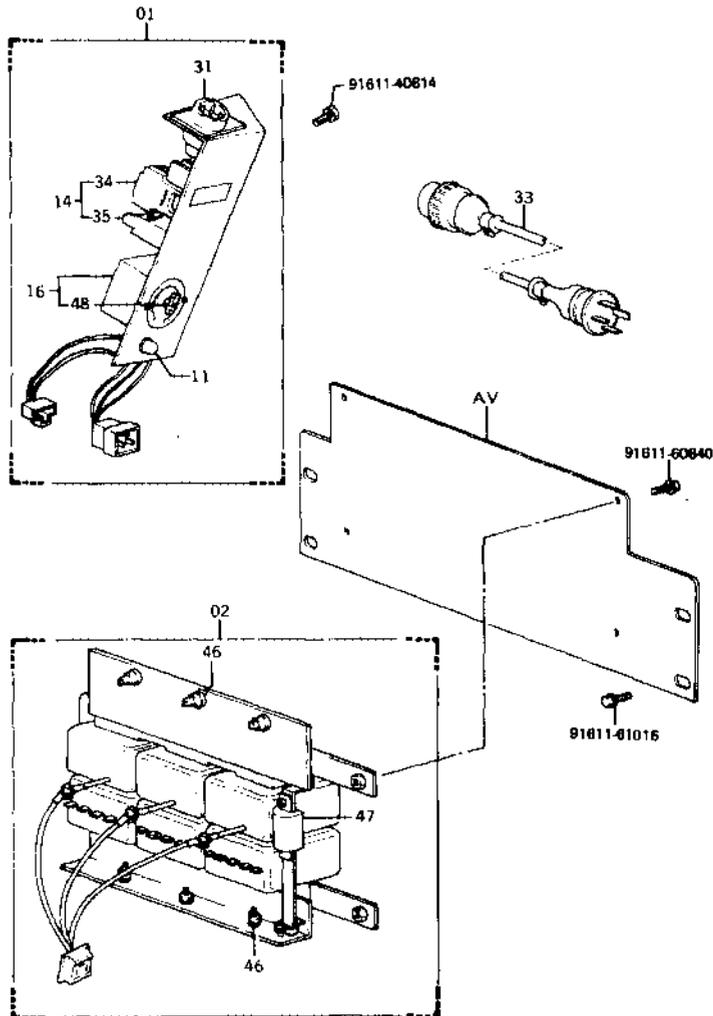

PART NAME CODE	PART NAME	QTY
2511-01	CHARGER ASSY, BATTERY -----	1
2511-02	TRANSFORMER ASSY -----	1
2511-11	LAMP ASSY, CHARGING -----	1
2511-14	SWITCH ASSY, MAGNET -----	1
2511-16	AVT ASSY -----	1
2511-31	PLUG SUB-ASSY -----	1
2511-33	CABLE SUB-ASSY, CHARGER -----	1
2511-34	SWITCH SUB-ASSY, MAGNET -----	1
2511-35	RELAY SUB-ASSY, THERMAL -----	1
2511-41	ELEMENT, SILICON, FORWARD -----	3
2511-42	ELEMENT, SILICON, REVERSE -----	3
2511-46	DIODE -----	3
2511-47	FUSE -----	1
2511-48	HANDLE (FOR AVT) -----	1
2511-AC	CONNECTOR, A -----	1
2511-AD	CONNECTOR, B -----	1
2511-AU	CONNECTOR -----	1
2511-AV	BRACKET, TRANSFORMER -----	1

2511 020

(MAIN) (II)




G201

FIG. 2512
BATTERY SEPARATE CHARGER


2512

(G.S.) (390, 420-460AH/5HR)

(G.S.) (280AH/5HR)

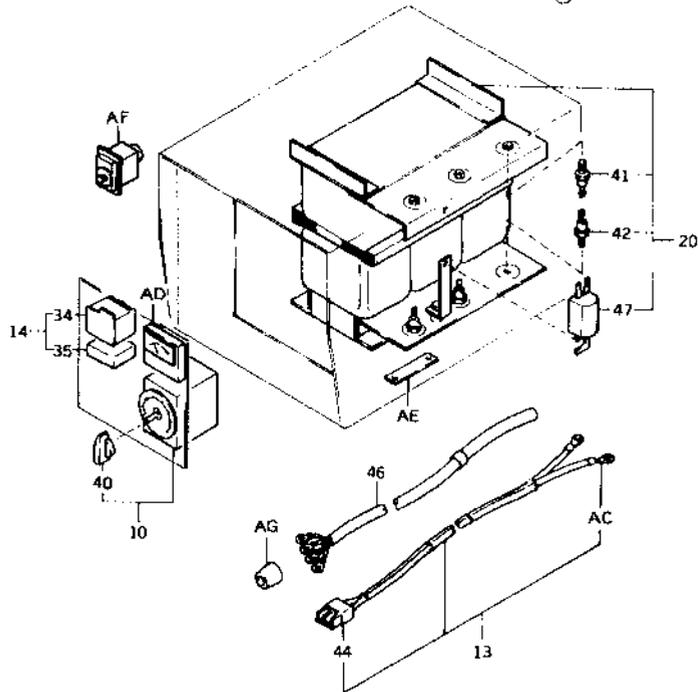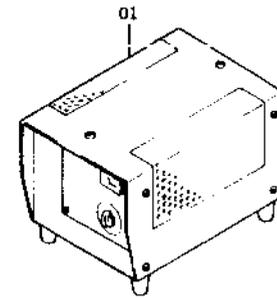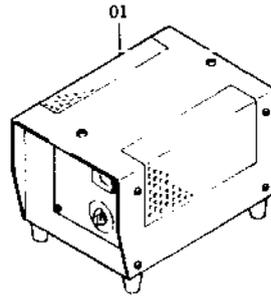

2512-004

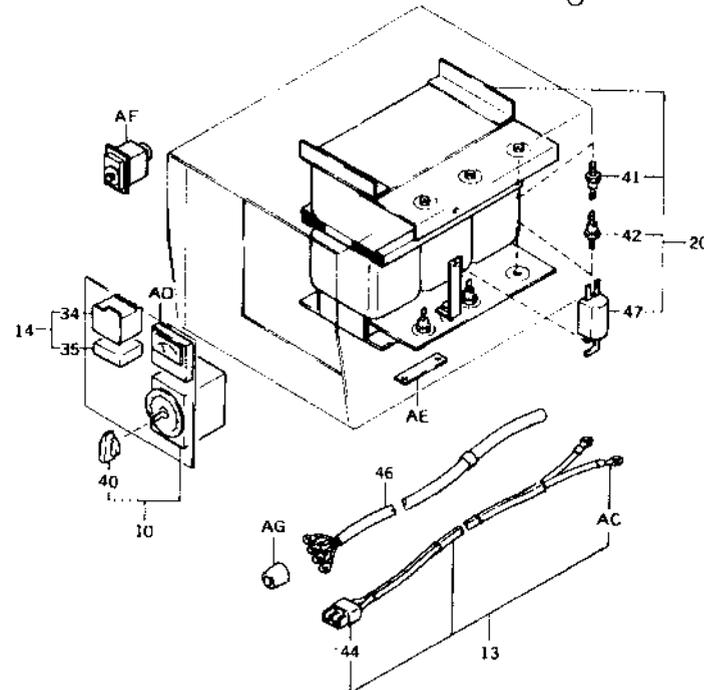




2512-004

FIG. 2512
BATTERY SEPARATE CHARGER


2512

(SHIN-KOBE...AC200V)

(SHIN-KOBE...AC400V)

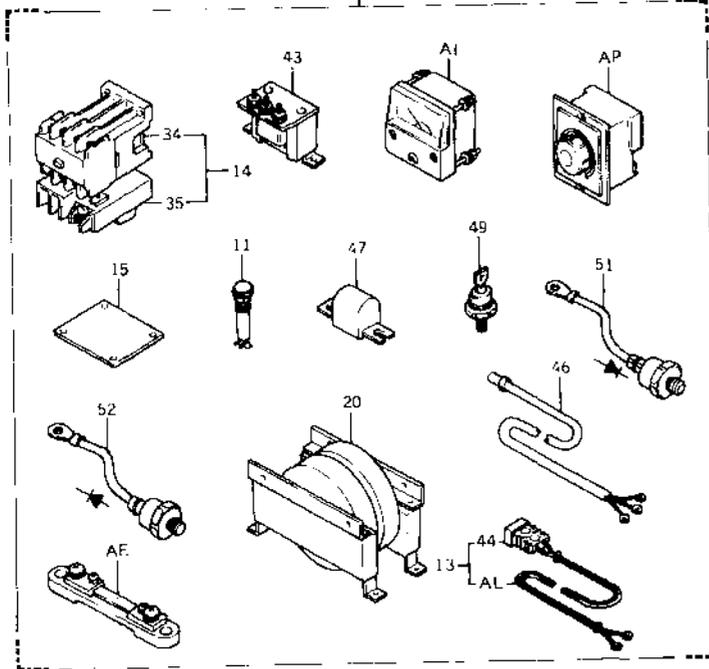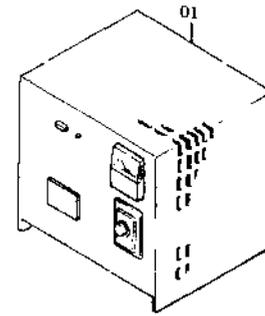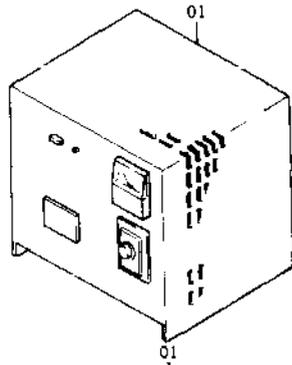

2512-037

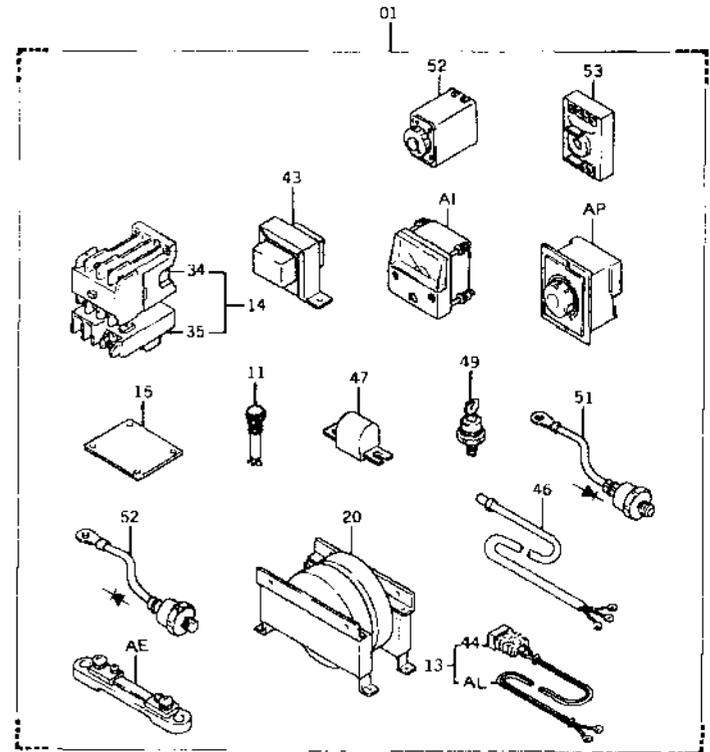



2512-040

FIG-2512
BATTERY SEPARATE CHARGER

2512

(YUASA) (280AH/5HR)

(YUASA) (390, 420-460AH/5HR)

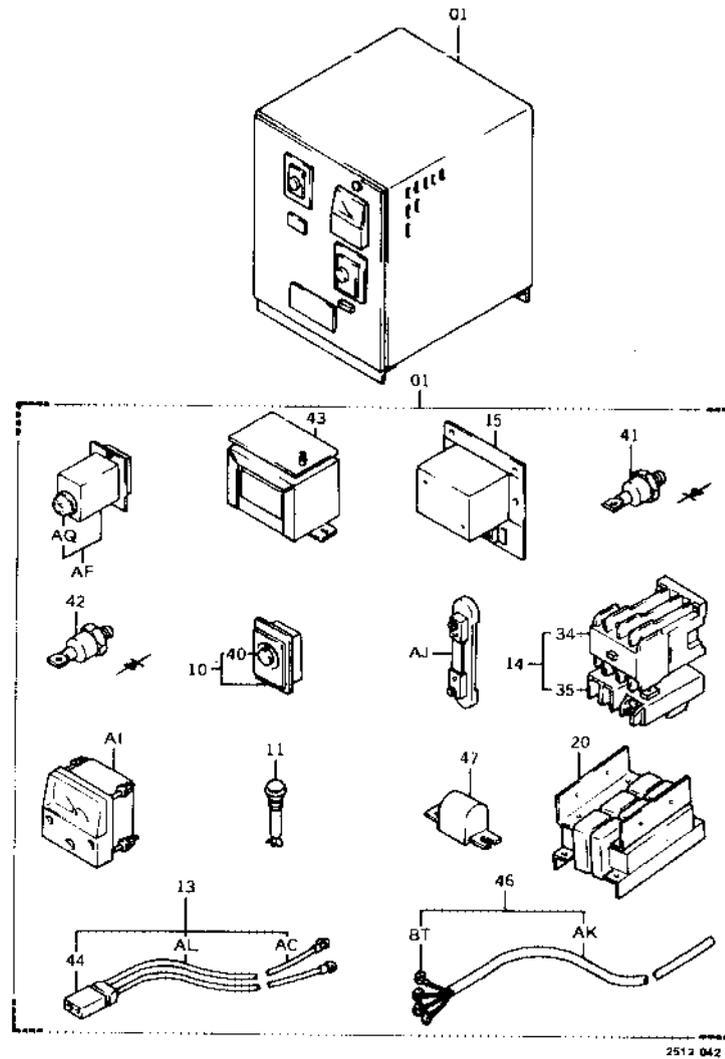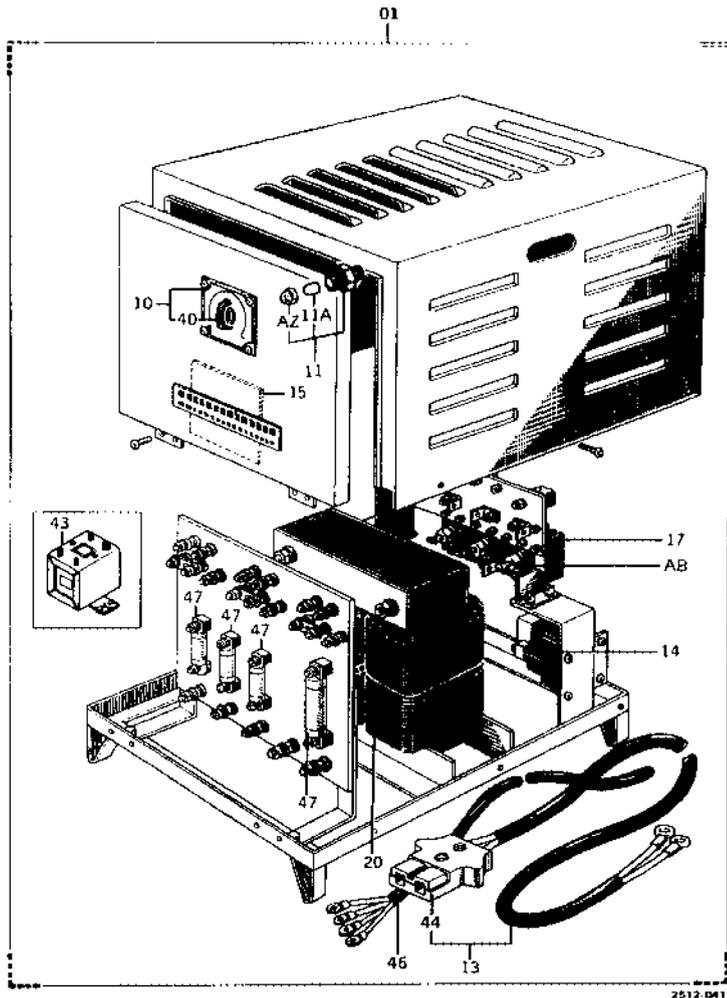

2512

PART NAME CODE	PART NAME	QTY
2512-01	CHARGER ASSY, BATTERY SEPARATE -----	1
2512-10	TIMER ASSY -----	1
2512-11	LAMP ASSY, CHARGING -----	1
2512-11A	BULB -----	1
2512-13	CABLE ASSY, CHARGER (DC) -----	1
2512-14	SWITCH ASSY, MAGNET -----	1
2512-15	RELAY ASSY, VOLTAGE -----	1
2512-17	RECTIFIER ASSY -----	1
2512-20	TRANSFORMER SUB-ASSY -----	1
2512-30	RELAY SUB-ASSY, VOLTAGE -----	1
2512-34	SWITCH SUB-ASSY, MAGNET -----	1
2512-35	RELAY SUB-ASSY, THERMAL -----	1
2512-40	HANDLE -----	1
2512-41	ELEMENT, SILICON, FORWARD -----	3
2512-42	ELEMENT, SILICON, REVERSE -----	3
2512-43	SUB-TRANSFORMER, CHARGER -----	1
2512-44	PLUG -----	1
2512-45	SOCKET -----	1
2512-46	CABLE (AC) -----	1
2512-47	FUSE -----	1- 3
2512-49	DIODE -----	2- 3
2512-50	DIODE -----	3
2512-51	DIODE -----	3
2512-52	TIMER, NO.2 -----	1
2512-53	PLUG, TIMER, NO.2 -----	1
2512-AB	ELEMENT, SILICON -----	2- 3
2512-AC	TERMINAL -----	2
2512-AD	METER ASSY, AMPERE -----	1
2512-AE	SHUNT -----	1
2512-AF	TIMER ASSY, TOTAL -----	1
2512-AG	RUBBER -----	4
2512-AI	AMMETER -----	1
2512-AJ	SHUNT -----	1
2512-AK	CABLE -----	1
2512-AL	CABLE -----	1- 2
2512-AM	FUSE ASSY -----	1
2512-AP	TIMER SUB-ASSY -----	1
2512-AQ	SOCKET (FOR TIMER) -----	1
2512-AT	FUSE -----	1
2512-AX	TRANSFORMER SUB-ASSY, AUXILIARY -----	1
2512-AY	RELAY SUB-ASSY -----	1
2512-AZ	LENS, RED -----	1
2512-BT	TERMINAL -----	1

(MAIN) (12)


G201

FIG. 2611
ACCELERATOR


2611

(RES)

(RES)

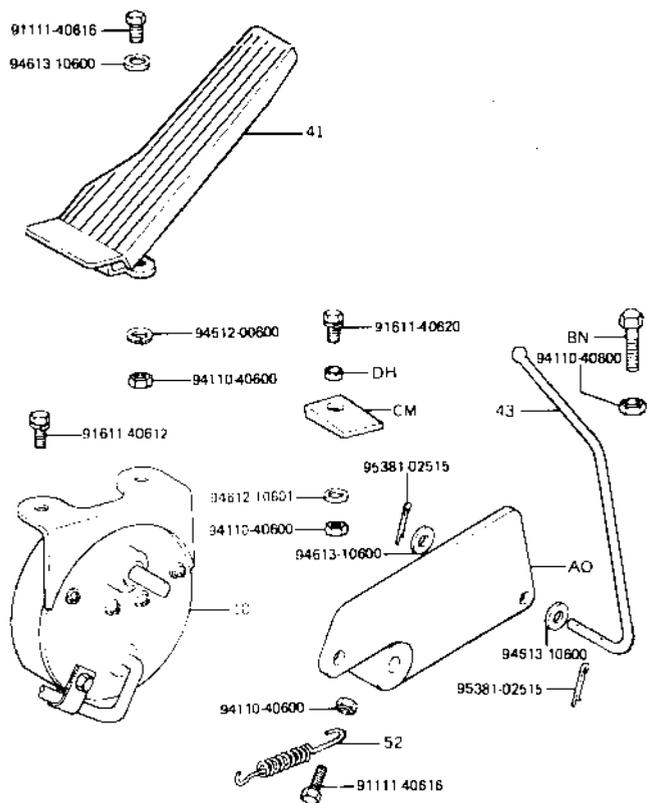

2611 02B

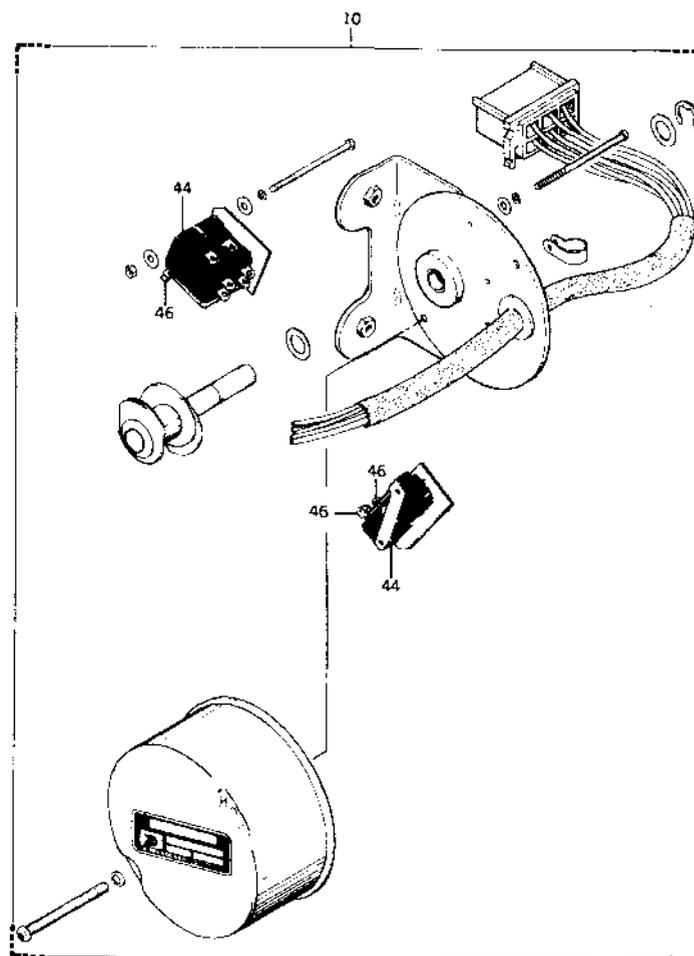




2611 02A

FIG. 2611
ACCELERATOR

2611

(SCR)

(SCR)

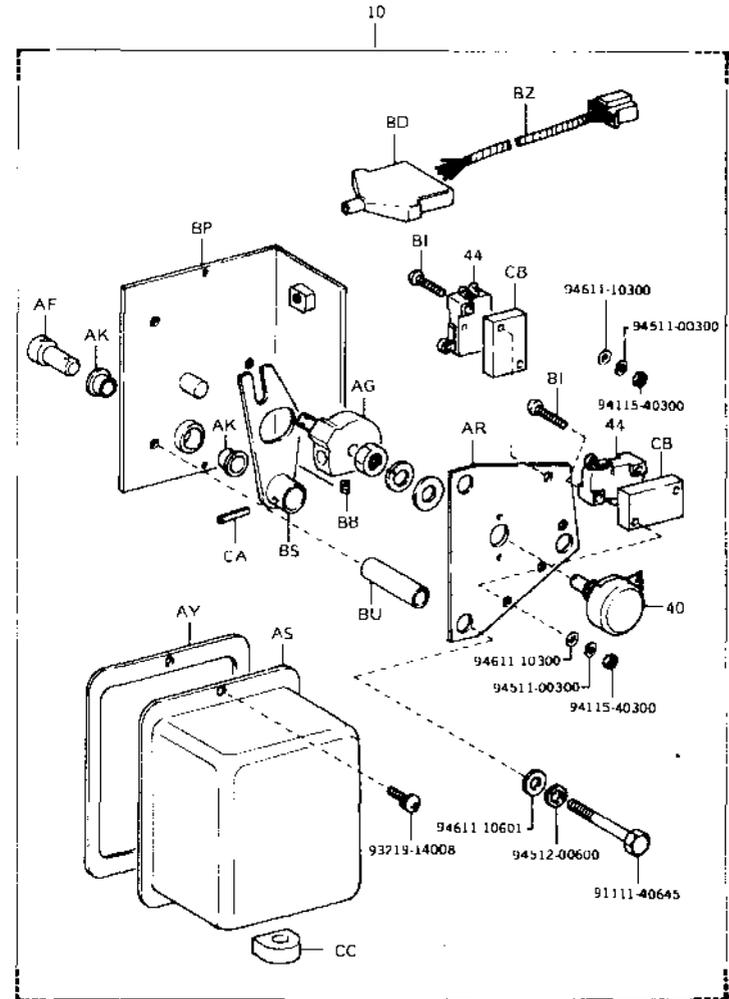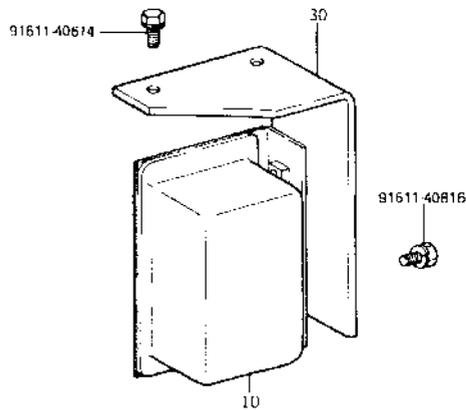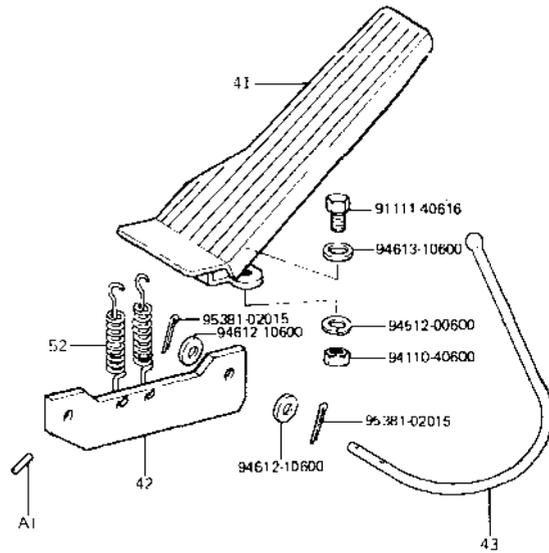

2611-02

2611-01B


2611

PART NAME CODE	PART NAME	QTY
7611-10	SWITCH ASSY, ACCELERATOR (PEDAL TYPE) -----	1
7611-30	BRACKET SUB-ASSY, ACCELERATOR BOX -----	1
7611-40	VARI-OHM -----	1
7611-41	PEDAL, ACCELERATOR -----	1
7611-42	ARM, ACCELERATOR LINK -----	1
7611-43	ROD, ACCELERATOR PEDAL -----	1
7611-44	SWITCH, MICRO -----	2
7611-46	ACTUATOR -----	3
7611-52	SPRING, TENSION, NO.1 -----	1
7611-AF	SHAFT -----	1
7611-AG	CAM -----	1
7611-AI	PIN, SPRING -----	1
7611-AK	BUSHING -----	2
7611-AD	ARM SUB-ASSY -----	1
7611-AR	SUPPORT -----	1
7611-AS	COVER -----	1
7611-AY	PACKING -----	1
7611-B8	SCREW -----	2
7611-BD	BOOTS -----	1
7611-BI	SCREW -----	4
7611-BN	BOLT -----	1
7611-BP	HOLDER -----	1
7611-BS	LEVER, SWITCH -----	1
7611-BU	SPACER -----	3
7611-BZ	HARNNESS SUB-ASSY -----	1
7611-CA	PIN, SPRING -----	1
7611-CB	PLATE -----	2
7611-CC	GROMMET -----	1
7611-CM	CUSHION, ACCELERATOR ARM -----	1
7611-DH	BUSH, ACCELERATOR ARM -----	1

(MAIN) (13) 6201

FIG. 3305
GEAR CASE & GEAR

3305

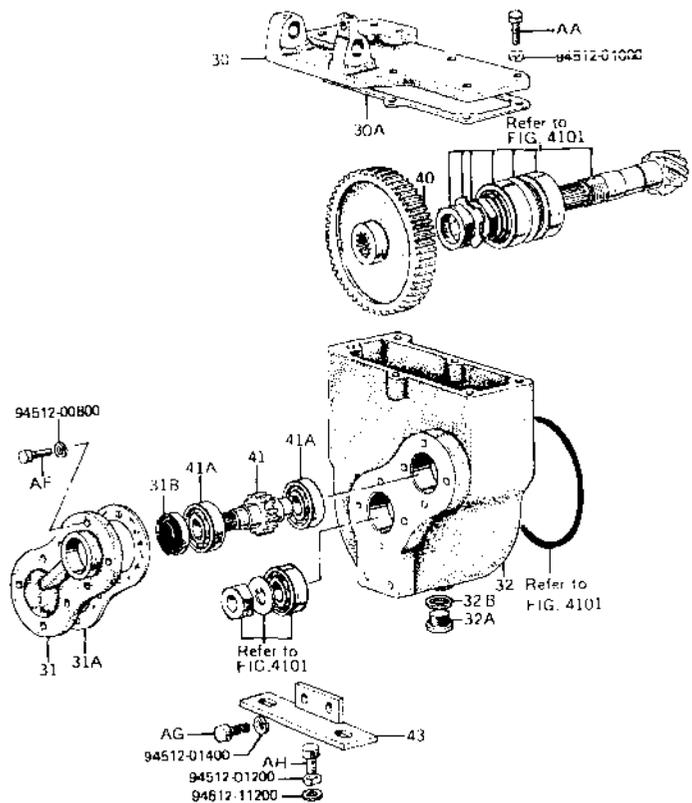

PART NAME CODE	PART NAME	QTY
3305-30	COVER, GEAR CASE -----	1
3305-30A	PACKING, GEAR CASE COVER -----	1
3305-31	COVER, GEAR CASE RR -----	1
3305-31A	GASKET, GEAR CASE RR COVER -----	1
3305-31B	SEAL, OIL (FOR REAR COVER) -----	1
3305-32	CASE, GEAR -----	1
3305-32A	PLUG, DRAIN -----	1
3305-32B	GASKET, DRAIN PLUG -----	2
3305-40	GEAR, OUTPUT -----	1
3305-41	GEAR, DRIVE -----	1
3305-41A	BEARING (FOR DRIVE GEAR) -----	2
3305-43	BRACKET, GEAR CASE -----	1
3305-AA	BOLT -----	2
3305-AF	BOLT -----	8
3305-AG	BOLT, HEXAGON -----	2
3305-AH	BOLT -----	2

3305 0044

(MAIN) (14)


G201

FIG. 3310
CHANGE LEVER


3310

(RES)

(SCR)

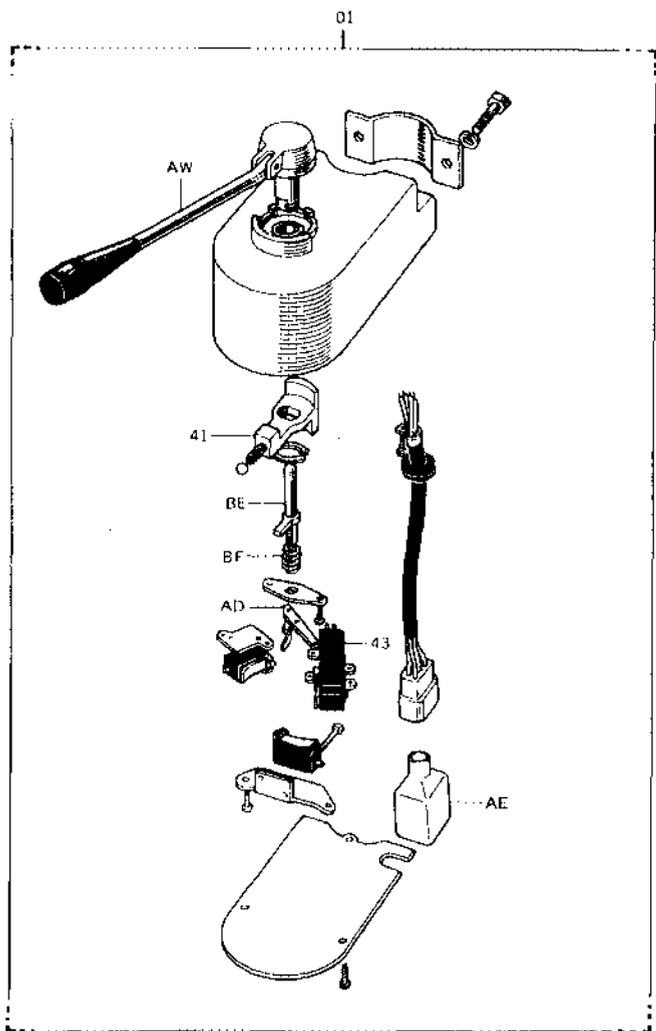

3310-008A

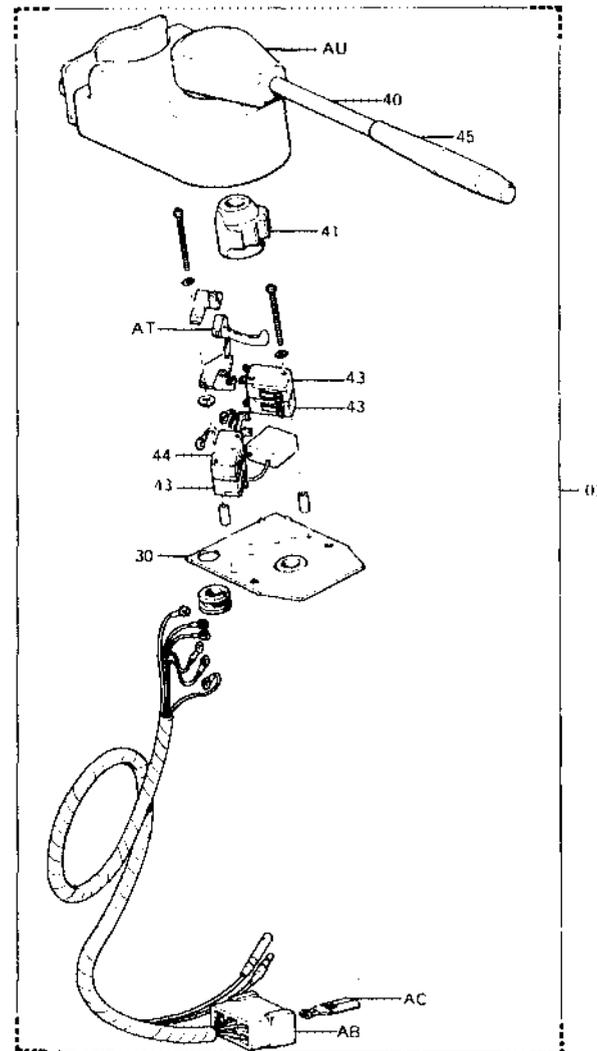

3310-009A

3310


PART NAME CODE	PART NAME	QTY
3310-01	SWITCH ASSY, DIRECTION -----	1
3310-30	PLATE SUB-ASSY, SPARK KILLER -----	1
3310-40	LEVER -----	1
3310-41	CAM -----	1
3310-43	SWITCH, MICRO, NO.1 -----	3
3310-44	SWITCH, MICRO, NO.2 (HORN) -----	1
3310-45	KNOB -----	1
3310-AB	PLUG -----	1
3310-AC	TAB -----	1
3310-AD	ACTUATOR -----	5
3310-AT	LEVER, HORN -----	1
3310-AJ	BOSS, LEVER -----	1
3310-AW	LEVER SUB-ASSY -----	1
3310-B0	CLIP -----	1
3310-BE	ROD -----	1
3310-BF	SPRING -----	1

(MAIN) (15)

G201

FIG. 3701
PROPELLER SHAFT & UNIVERSAL JOINT

3701

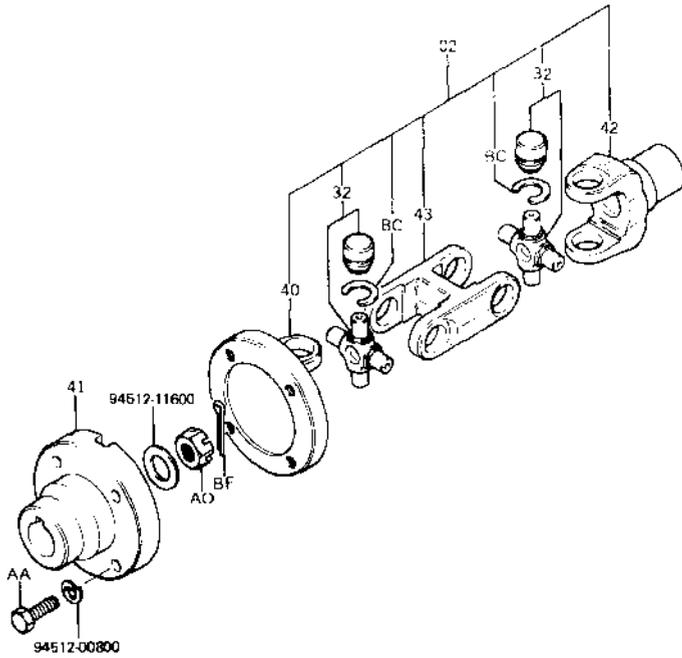

3701-006A


PART NAME CODE	PART NAME	QTY
3701-02	JOINT ASSY, UNIVERSAL -----	1
3701-32	SPIRDER SET, UNIVERSAL -----	2
3701-40	YOKE, UNIVERSAL JOINT FLANGE -----	1
3701-41	FLANGE, UNIVERSAL JOINT -----	1
3701-42	YOKE, SPLINE -----	1
3701-43	YOKE, COUPLING -----	1
3701-AA	BOLT -----	4
3701-A0	NUT, CASTLE -----	1
3701-BC	RING, SNAP -----	8
3701-BF	PIN, STOPPER -----	1

(MAIN) (16)

G201

FIG. 4101
DIFFERENTIAL

4101

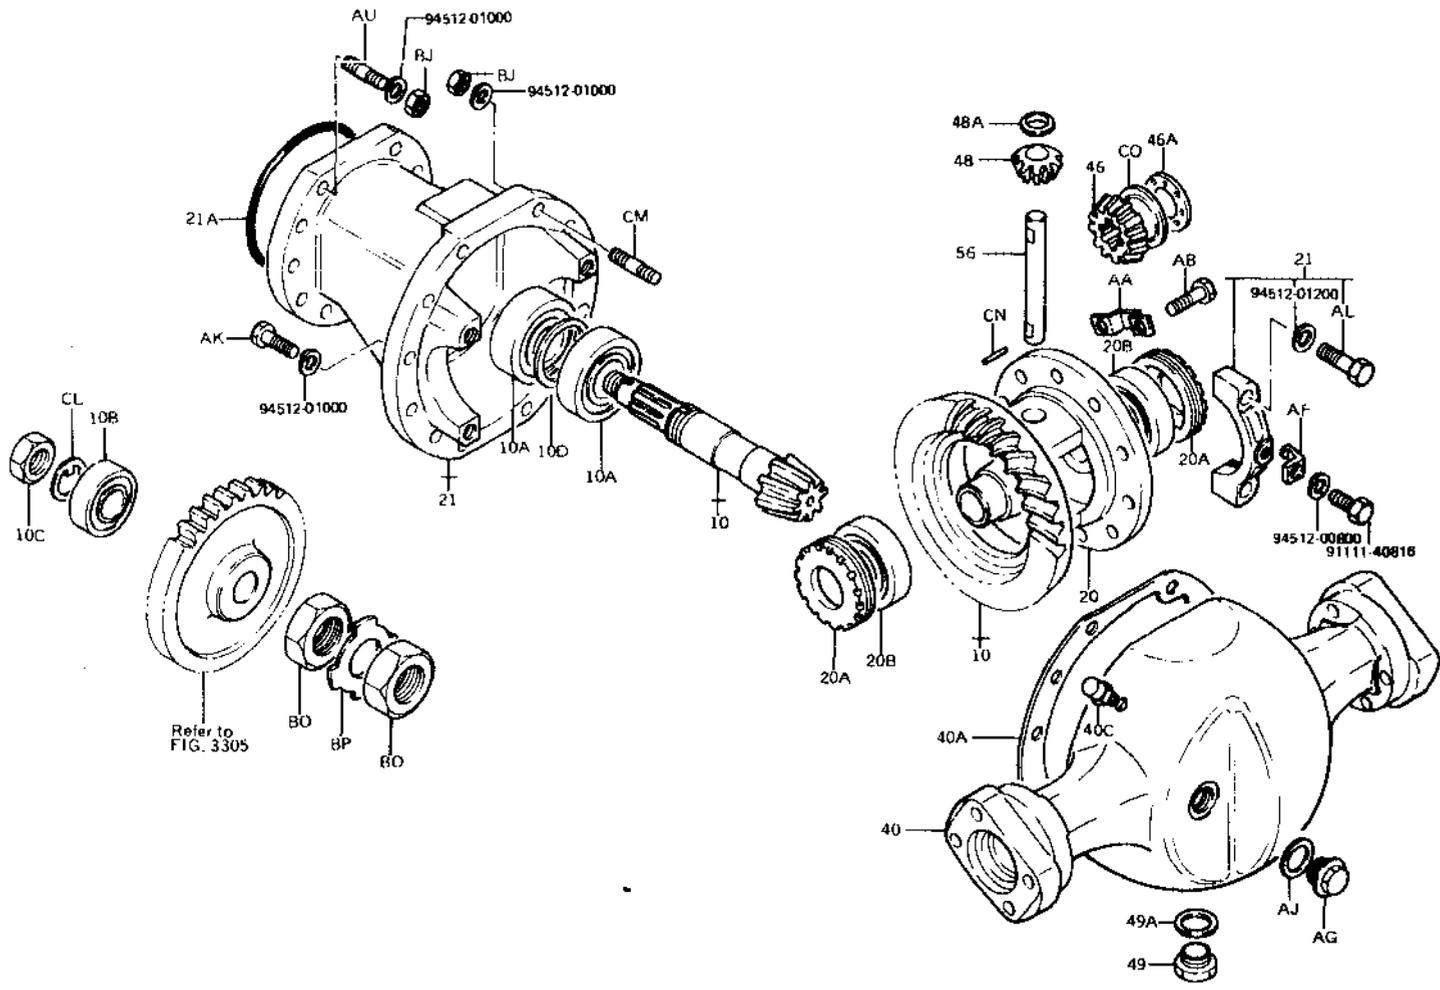

4101-028A

4101



PART NAME CODE	PART NAME	QTY
4101-10	RING GEAR & PINION SET, DIFFERENTIAL -----	1
4101-10A	BEARING, DRIVE PINION -----	2
4101-10B	BEARING, DRIVE PINION PILOT -----	1
4101-10C	NUT, LOCK -----	1
4101-10D	SHIM, BEARING PRELOAD ADJUST -----	99
4101-20	CASE SUB-ASSY, DIFFERENTIAL -----	1
4101-20A	NUT, ADJUSTING -----	2
4101-20B	BEARING, DIFFERENTIAL CASE -----	2
4101-21	CARRIER SUB-ASSY, DIFFERENTIAL -----	1
4101-21A	RING, O (FOR DIFFERENTIAL CARRIER) -----	1
4101-40	HOUSING, DIFFERENTIAL -----	1
4101-40A	GASKET (FOR DIFFERENTIAL HOUSING) -----	1
4101-40C	PLUG, BREATHER (FOR DIFFERENTIAL HOUSING) --	1
4101-46	GEAR, SIDE -----	2
4101-46A	WASHER, SIDE GEAR THRUST -----	2
4101-48	PINION -----	2
4101-48A	WASHER, PINION THRUST -----	2
4101-49	PLUG, DRAIN -----	1
4101-49A	GASKET, DRAIN PLUG -----	1
4101-56	SHAFT, DIFFERENTIAL PINION -----	1
4101-AA	PLATE, BOLT LOCK -----	5
4101-AB	BOLT -----	10
4101-AF	LOCK, ADJUSTING -----	2
4101-AG	PLUG, W/HEAD STRAIGHT SCREW -----	1
4101-AJ	GASKET -----	1
4101-AK	BOLT -----	8
4101-AL	BOLT -----	4
4101-AU	BOLT, STUD -----	11
4101-BJ	NUT -----	15
4101-BO	NUT -----	2
4101-BP	WASHER -----	1
4101-CL	WASHER, CLAW -----	1
4101-CM	BOLT, STUD -----	4
4101-CN	PIN, STRAIGHT -----	1
4101-CO	WASHER, CONICAL SPRING -----	2

(MAIN) (17)

G201

FIG. 4201
FRONT AXLE SHAFT

4201

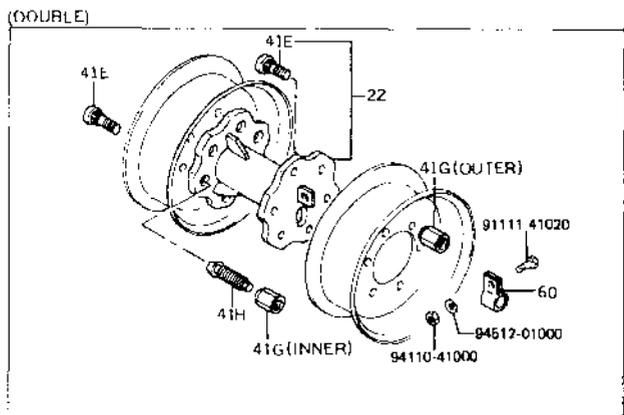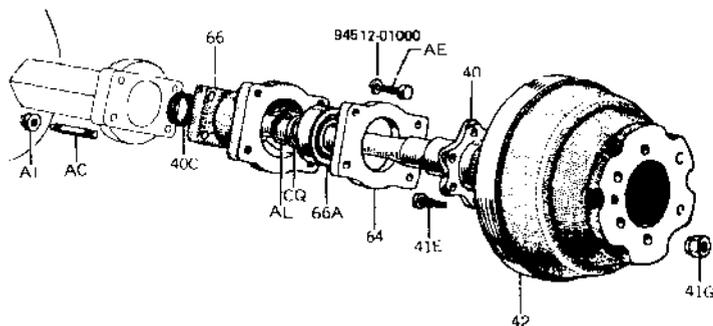

4201-038A


PART NAME CODE	PART NAME	QTY
4201-22	BRACKET SUB-ASSY, DOUBLE TIRE -----	2
4201-40	SHAFT, FRONT AXLE -----	2
4201-40C	SEAL, OIL (FOR FRONT AXLE SHAFT) -----	2
4201-41E	BOLT, HUB -----	12
4201-41G	NUT, HUB -----	12
4201-41H	BOLT, DOUBLE WHEEL STOP -----	12
4201-42	DRUM, BRAKE -----	2
4201-60	CLAMP, FRONT RIM -----	2
4201-64	CAP, FRONT AXLE BEARING -----	2
4201-66	END, FRONT AXLE HOUSING -----	2
4201-66A	BEARING (FOR HOUSING END) -----	2
4201-AC	BOLT, STUD BRAKE SET -----	8
4201-AE	NUT, SELF LOCK -----	8
4201-AI	RING, SHAFT SNAP -----	2
4201-AL	STOPPER, BEARING -----	2
4201-CQ		

(MAIN) (18)

G201

FIG. 4301
REAR AXLE & TIE-ROD

4301

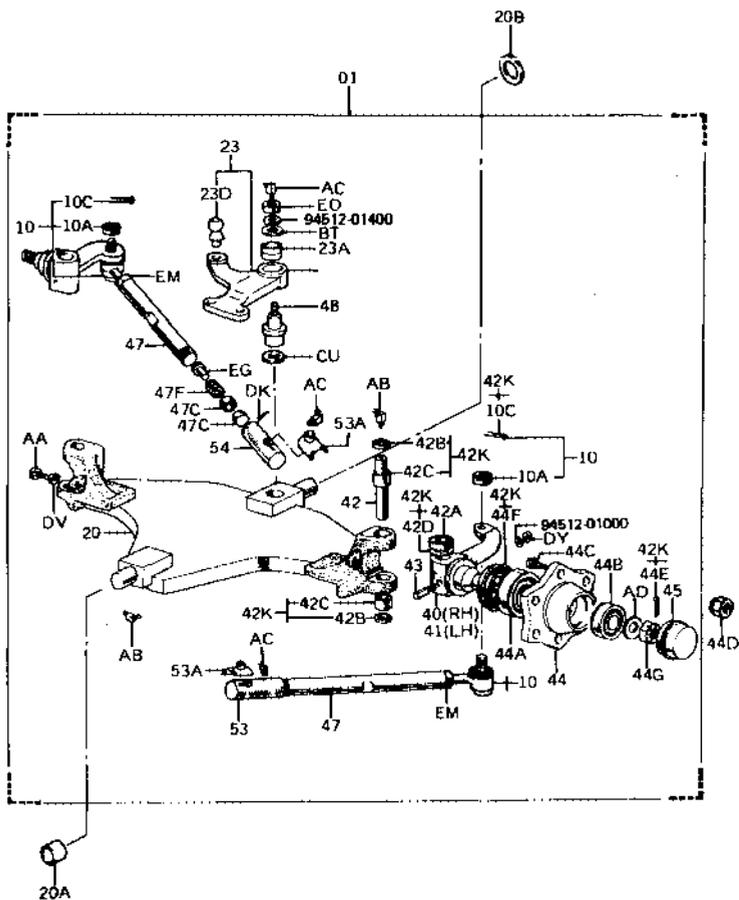

4301-0218


PART NAME CODE	PART NAME	QTY
4301-01	AXLE ASSY, RR	1
4301-10	END ASSY, TIE-ROD, NO.1	2
4301-10A	NUT, CASTLE (FOR TIE-ROD END)	2
4301-10C	PIN, COTTER (FOR TIE-ROD END)	2
4301-20	BEAM SUB-ASSY, REAR AXLE	1
4301-20A	BUSH, REAR AXLE BEAM	2
4301-20B	SHIM, REAR AXLE BEAM	99
4301-23	BELLCRANK SUB-ASSY, STEERING	1
4301-23A	BEARING (FOR STEERING BELLCRANK)	2
4301-23D	KNOB, STEERING LINK JOINT	3
4301-40	KNUCKLE, STEERING, RH	1
4301-41	KNUCKLE, STEERING, LH	1
4301-42	PIN, STEERING KNUCKLE KING	2
4301-42A	BEARING, STEERING KNUCKLE THRUST	2
4301-42B	SEAL, OIL, NO.1	4
4301-42C	BEARING, NEEDLE	4
4301-42D	SHIM, STEERING KNUCKLE	99
4301-43	PIN, KING PIN LOCK	2
4301-44	HUB, REAR AXLE	2
4301-44A	BEARING, INNER	2
4301-44B	BEARING, OUTER	2
4301-44C	BOLT, HUB	12
4301-44D	NUT, HUB	12
4301-44E	PIN, REAR AXLE COTTER	2
4301-44F	SEAL, OIL (FOR REAR AXLE HUB)	2
4301-44G	NUT, CASTLE (FOR REAR AXLE HUB)	2
4301-45	CAP, REAR AXLE HUB	2
4301-47	TIE-ROD	2
4301-47C	SEAT, BALL STUD, NO.1 (FOR TIE-ROD)	4
4301-47F	SPRING (FOR TIE-ROD)	2
4301-48	PIN, BELLCRANK	1
4301-53	END, TIE-ROD, NO.1	1
4301-53A	SEAL, DUST (FOR TIE-ROD END)	2
4301-54	END, TIE-ROD, NO.2	1
4301-AA	BOLT	2
4301-AB	FITTING, GREASE	4
4301-AC	FITTING, GREASE	3
4301-AD	WASHER, CLAW	2
4301-BT	WASHER, PLATE	1
4301-CU	SPACER	1
4301-DK	PIN, COTTER	2
4301-DY	NUT	2
4301-DY	NUT	14
4301-EG	SEAT, SPRING	2
4301-EM	NUT	2
4301-EO	NUT	1

(MAIN) (19)




G201

FIG. 4401
FRONT WHEEL & TIRE (SINGLE)

4401

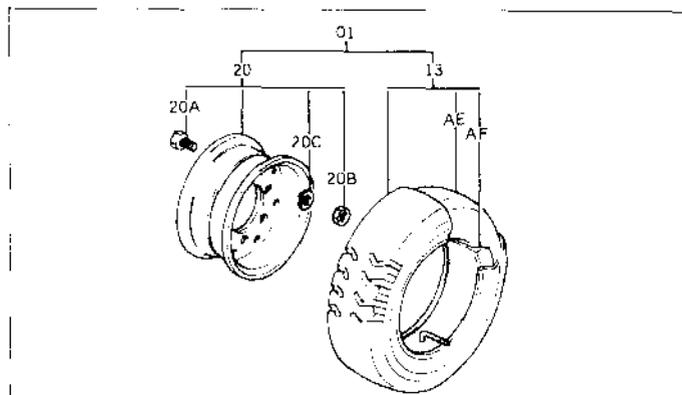

(UN. QUL. TRUKUSH)

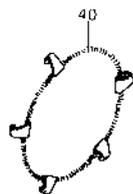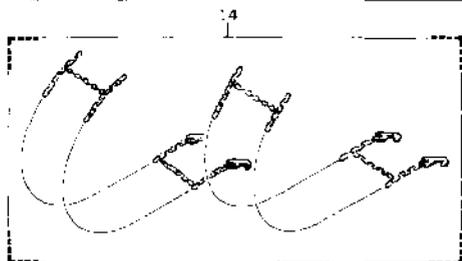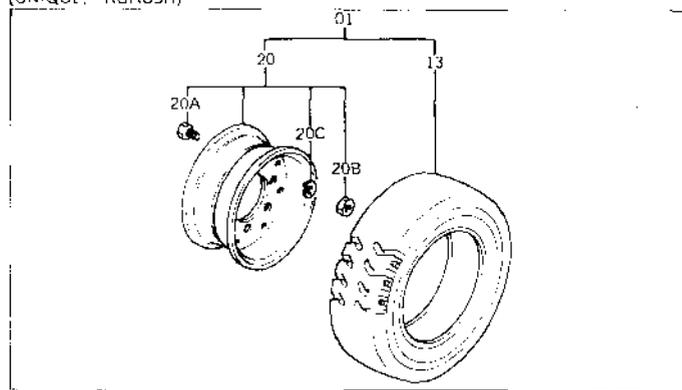

4401 027


PART NAME CODE	PART NAME	QTY
4401-01	WHEEL ASSY -----	2
4401-13	TIRE ASSY -----	2
4401-14	CHAIN ASSY, TIRE -----	1
4401-20	WHEEL SUB-ASSY, DISC -----	2
4401-20A	BOLT (FOR DISC WHEEL SET) -----	12
4401-20B	NUT (FOR DISC WHEEL SET) -----	12
4401-20C	WASHER, SPRING (FOR DISC WHEEL SET) -----	12
4401-40	BAND, CHAIN -----	1
4401-AE	TUBE SUB-ASSY -----	2
4401-AF	FLAP -----	2

(MAIN) (20)



G201

FIG. 4402
FRONT WHEEL & TIRE (DOUBLE)

4402

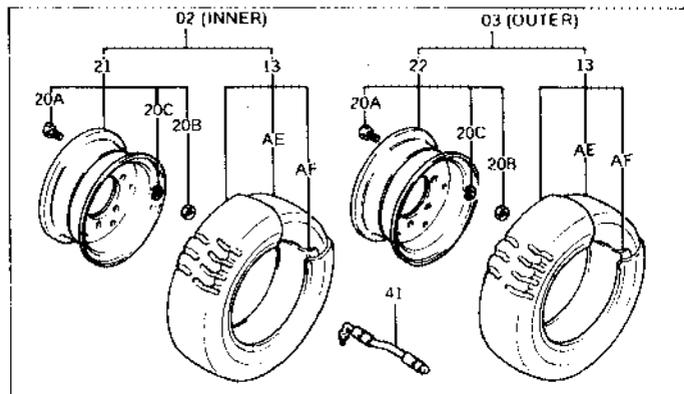

(UNIQUE TRUKUSH)

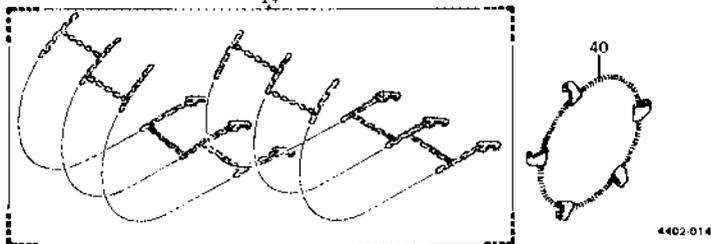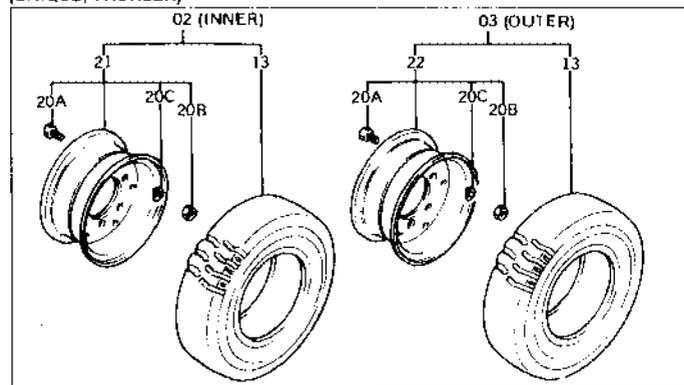


PART NAME CODE	PART NAME	QTY
4402-02	WHEEL ASSY, INNER -----	2
4402-03	WHEEL ASSY, OUTER -----	2
4402-13	TIRE ASSY -----	4
4402-14	CHAIN ASSY, TIRE -----	1
4402-20A	BOLT (FOR DISC WHEEL SET) -----	24
4402-20B	NUT (FOR DISC WHEEL SET) -----	24
4402-20C	WASHER, SPRING (FOR DISC WHEEL SET) -----	24
4402-21	WHEEL SUB-ASSY, DISC, INNER -----	2
4402-22	WHEEL SUB-ASSY, DISC, OUTER -----	2
4402-40	BAND, CHAIN -----	1
4402-41	EXTENSION, WHEEL TUBE VALVE -----	2
4402-AE	TUBE SUB-ASSY -----	4
4402-AF	FLAP -----	4

(MAIN) (21)


G201

FIG. 4403
REAR WHEEL & TIRE

4403

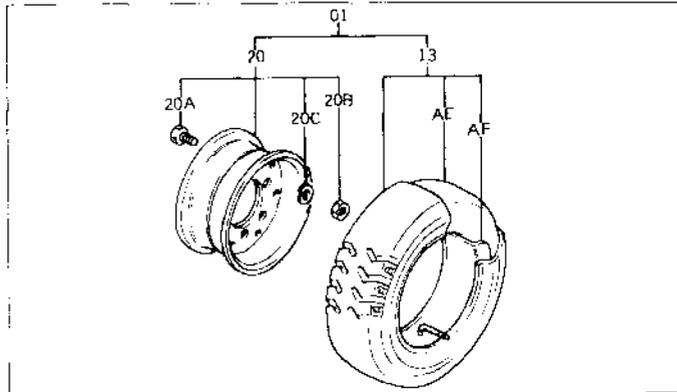

(UNIQUE, TURKISH)

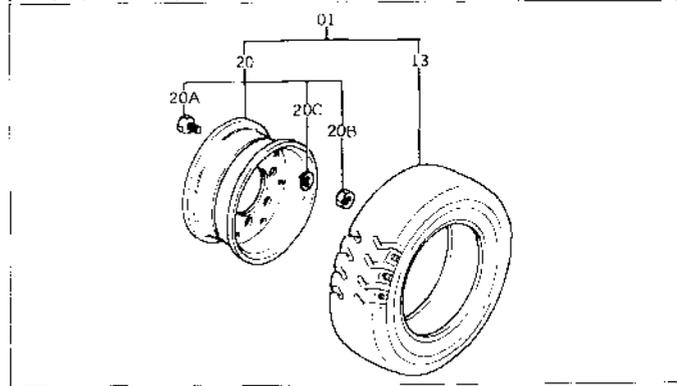

4403 027


PART NAME CODE	PART NAME	QTY
4403-01	WHEEL ASSY -----	2
4403-13	TIRE ASSY -----	2
4403-20	WHEEL SUB-ASSY, DISC -----	2
4403-20A	BOLT, DISC WHEEL SET -----	12
4403-20B	NUT, WHEEL SET -----	12
4403-20C	WASHER, WHEEL SET -----	12
4403-AE	TUBE SUB-ASSY -----	2
4403-AF	F. AP -----	2

(MAIN) (22)

G201

FIG. 4501
STEERING WHEEL

4501

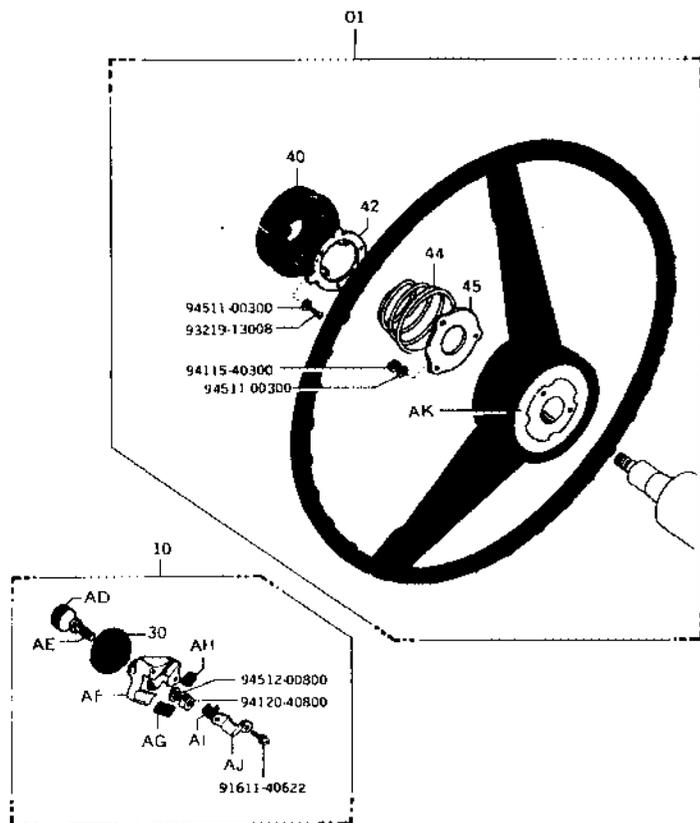

4501-01DS

PART NAME CODE	PART NAME	QTY
4501-01	WHEEL ASSY, STEERING -----	1
4501-10	KNOB ASSY, STEERING WHEEL -----	1
4501-30	KNOB SUB-ASSY, STEERING WHEEL -----	1
4501-40	BUTTON, HORN -----	1
4501-42	PLATE, HORN CONTACT -----	1
4501-44	SPRING, HORN -----	1
4501-45	PLATE, LEAD -----	1
4501-AD	CAP, STEERING WHEEL -----	1
4501-AE	BOLT, STEERING WHEEL KNOB SET -----	1
4501-AF	BRACKET, STEERING WHEEL KNOB -----	1
4501-AG	SEAT, STEERING WHEEL KNOB BRACKET -----	1
4501-AH	SEAT, STEERING WHEEL KNOB BRACKET -----	1
4501-AI	SEAT, WHEEL KNOB SET PLATE -----	1
4501-AJ	PLATE, STEERING WHEEL KNOB SET -----	1
4501-AK	RING, HORN CONTACT NO.1 -----	1

(MAIN) (23)





G201

FIG. 4502
STEERING POST

4502

(M/S)

(P/S)

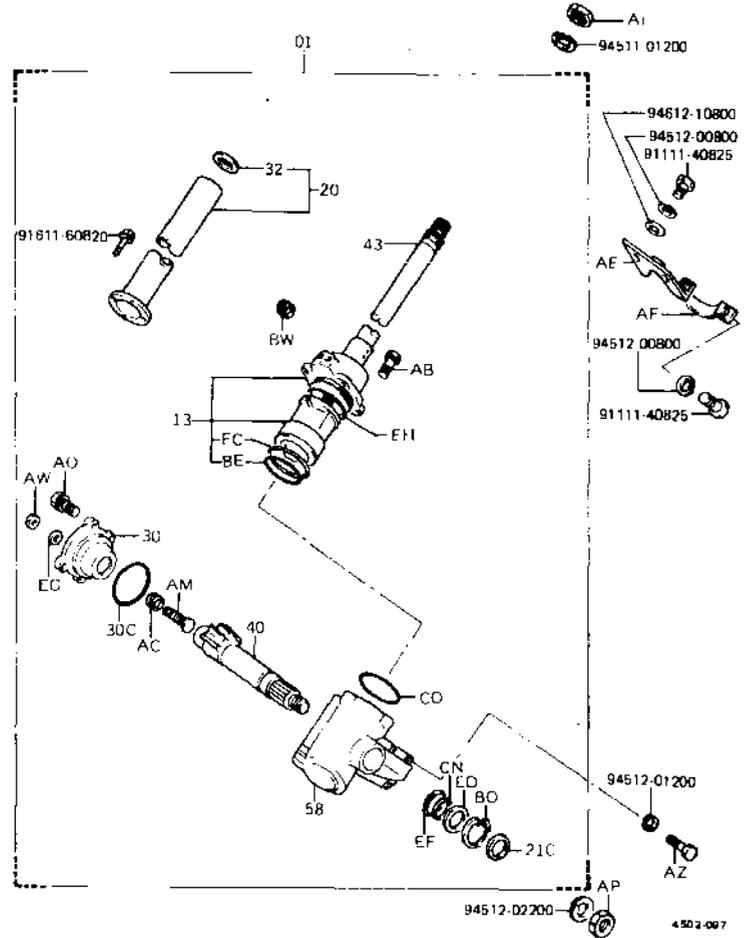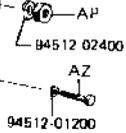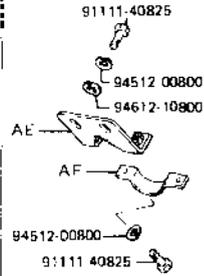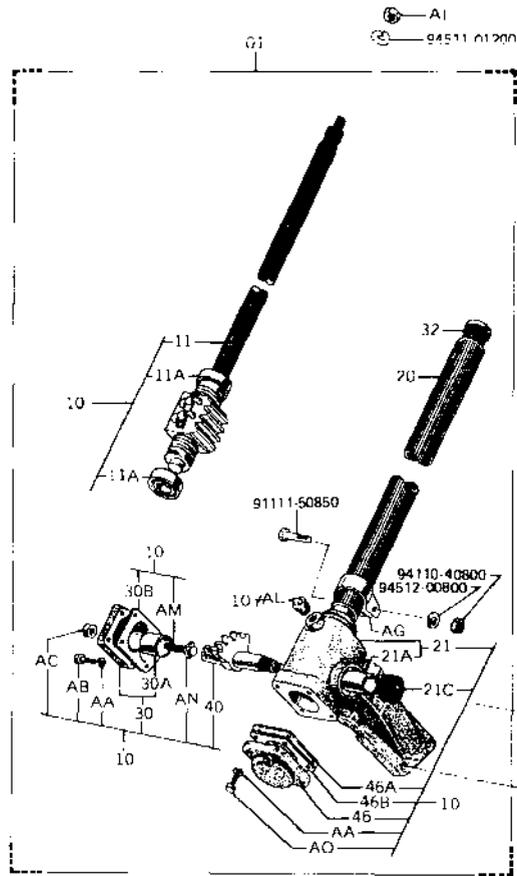

4403 047A

4502

PART NAME CODE	PART NAME	QTY
4502-01	POST ASSY, STEERING -----	1
4502-10	GEAR ASSY, STEERING -----	1
4502-11	BALL SCREW SET -----	1
4502-11A	BEARING, NO.1 (FOR BALL SCREW SET) -----	2
4502-13	VALVE ASSY, POWER STEERING CONTROL -----	1
4502-20	JACKET SUB-ASSY, MAST -----	1
4502-21	BOX SUB-ASSY, STEERING GEAR -----	1
4502-21A	BUSH, SECTOR SHAFT, NO.1 -----	1
4502-21C	SEAL, OIL (FOR SECTOR SHAFT) -----	1
4502-30	COVER SUB-ASSY, SIDE -----	1
4502-30A	BUSH, SECTOR SHAFT, NO.2 -----	1
4502-30B	PACKING, SIDE COVER -----	1
4502-30C	RING, O (FOR SIDE COVER) -----	1
4502-32	INSULATOR SUB-ASSY, W/COLUMN BUSH -----	1
4502-40	SHAFT, SECTOR -----	1
4502-43	SHAFT, STEERING MAIN -----	1
4502-46	COVER, END -----	1
4502-46A	PACKING, END COVER -----	2
4502-46B	SHIM (FOR END COVER) -----	99
4502-58	HOUSING SUB-ASSY, STEERING GEAR -----	1
4502-AA	WASHER, SPRING -----	8
4502-AB	BOLT -----	4
4502-AC	NUT -----	1
4502-AD	SPRAY SUB-ASSY, STEERING -----	1
4502-AE	CLAMP -----	1
4502-AG	CLAMP, STEERING COLUMN, LOWER -----	1
4502-AI	NUT -----	1
4502-AL	PLUG, OIL -----	1
4502-AM	BOLT, ADJUSTING -----	1
4502-AN	PLATE, ADJUSTING -----	99
4502-AO	BOLT -----	4
4502-AP	NUT -----	1
4502-AW	NUT -----	1
4502-AZ	BOLT -----	3
4502-BE	RING, O -----	1
4502-BO	RING, HOLE SNAP -----	1
4502-BW	BOLT -----	1
4502-CN	RING, O -----	1
4502-CD	RING, O -----	1
4502-EC	RING -----	1
4502-ED	RING -----	1
4502-EF	RING -----	1
4502-FG	WASHER, SEAL -----	1
4502-EH	RING, O -----	1



(MAIN) (24) G201

FIG. 4507
DRAG LINK & STEERING PIPING

4507

(1/2)

(P/S) (2/2)

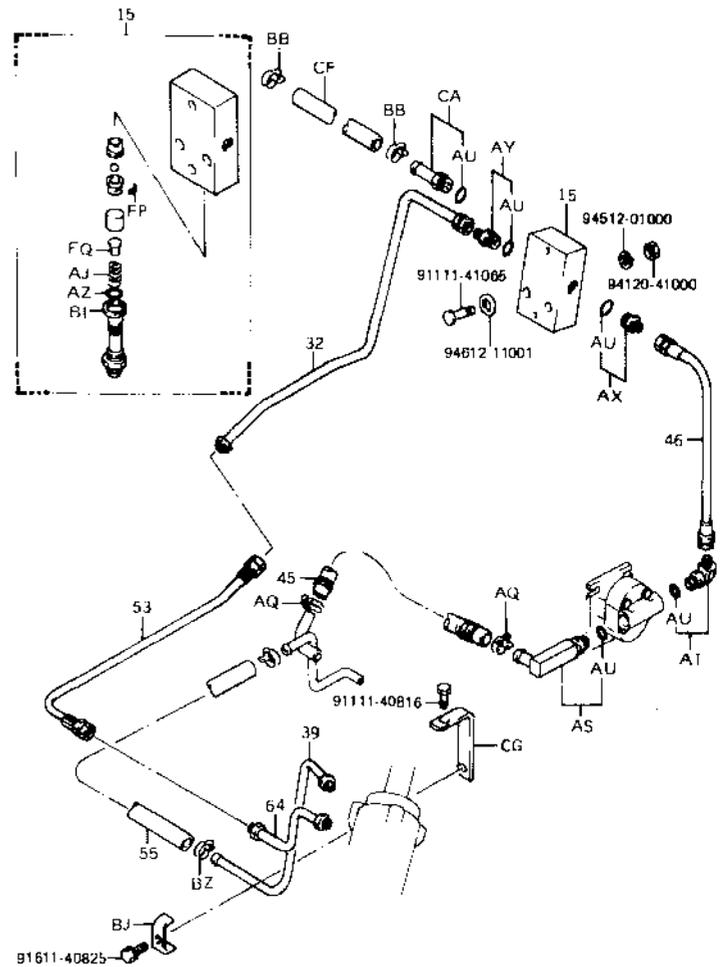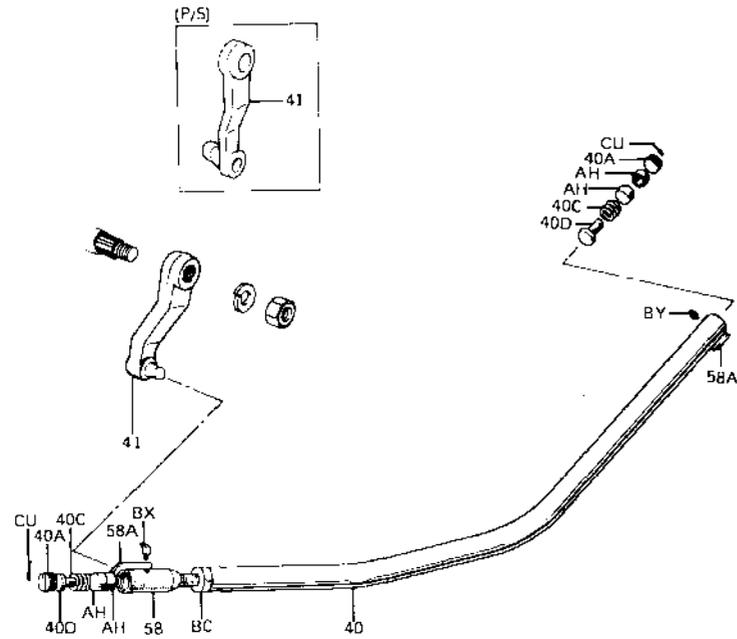

4507 032B

4507 07D

4507

PART NAME CODE	PART NAME	QTY
4507-16	VALVE ASSY, RE TRF -----	1
4507-32	PIPE SUB-ASSY (PUMP TO STEERING) -----	1
4507-39	PIPE SUB-ASSY, OUTLET -----	1
4507-40	ROD, DRAG LINK, NO.1 -----	1
4507-40A	PLUG (FOR DRAG LINK ROD) -----	2
4507-40C	SPRING, DRAG LINK -----	2
4507-40D	SEAT (FOR DRAG LINK ROD) -----	2
4507-41	ARM, PITMAN -----	1
4507-45	HOSE, POWER STEERING PUMP SUCTION -----	1
4507-46	HOSE, HIGH PRESSURE -----	1
4507-58	END, DRAG LINK ROD, FRONT -----	1
4507-58A	SEAL, OUST (FOR DRAG LINK END) -----	1
4507-64	PIPE SUB-ASSY, POWER STEERING GEAR INLET -----	1
4507-AH	SEAT, BALL STUD -----	4
4507-AJ	SPRING -----	1
4507-AQ	CLAMP -----	2
4507-AS	FITTING -----	1
4507-AT	FITTING -----	1
4507-AU	RING, O -----	5
4507-AX	FITTING -----	1
4507-AY	FITTING -----	1
4507-AZ	RING, O -----	1
4507-BB	CLAMP -----	2
4507-BC	NUT -----	1
4507-BI	WASHER -----	1
4507-BJ	CLAMP -----	1
4507-BX	FITTING, GREASE -----	1
4507-BY	FITTING, GREASE -----	1
4507-BZ	CLAMP -----	2
4507-CA	FITTING -----	1
4507-CF	HOSE, LOW PRESSURE -----	1
4507-CG	BRACKET SUB-ASSY, PIPE CLAMP -----	1
4507-CU	PIN, COTTER -----	2
4507-FP	WIRE -----	1
4507-FQ	GUIDE -----	1


(MAIN) (25)

G201

FIG. 4510
STEERING OIL PUMP

4510

(P/S)

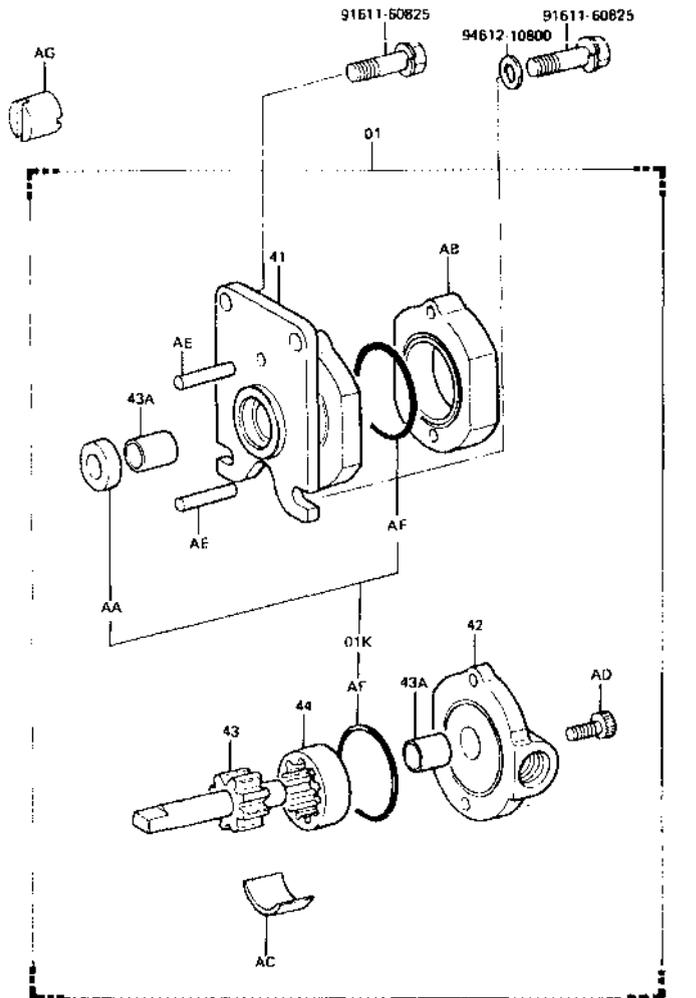

4510 009 A


PART NAME CODE	PART NAME	QTY
4510-01	PUMP ASSY, POWER STEERING -----	1
4510-01K	PUMP KIT, POWER STEERING -----	1
4510-41	FLANGE, MOUNTING -----	1
4510-42	COVER -----	1
4510-43	SHAFT, PINION -----	1
4510-43A	BUSH (FOR PINION SHAFT) -----	2
4510-44	GEAR, INTERNAL -----	1
4510-AA	SEAL, OIL -----	1
4510-AB	HOUSING, OIL PUMP -----	1
4510-AC	SEGMENT -----	1
4510-AD	BOLT -----	4
4510-AE	PIN -----	2
4510-AF	RING, O -----	2
4510-AG	JOINT, OLDDHAM -----	1

(MAIN) (26)

G201

FIG. 4601
PARKING BRAKE

4601

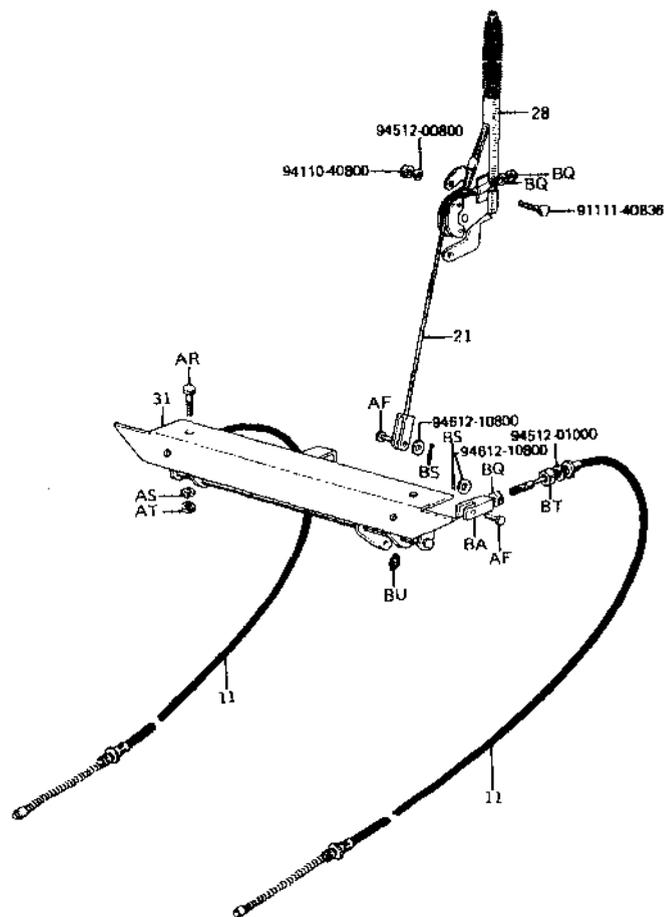

4601-029


PART NAME CODE	PART NAME	QTY
4601-11	WIRE ASSY, PARKING BRAKE -----	2
4601-21	WIRE SUB-ASSY, PARKING BRAKE -----	1
4601-28	LEVER SUB-ASSY, PARKING BRAKE -----	1
4601-31	BRACKET SUB-ASSY, PARKING BRAKE LEVER -----	1
4601-AF	PIN, W/HOLE -----	3
4601-AR	BOLT -----	4
4601-AS	WASHER, SPRING -----	6
4601-AT	NUT -----	4
4601-BA	CLEVIS, NO.1 -----	2
4601-BQ	NUT -----	4
4601-BS	PIN, COTTER -----	3
4601-BT	NUT -----	2
4601-BU	FITTING, GREASE -----	2

(MAIN) (27)

G201

FIG. 4701
BRAKE PEDAL

4701

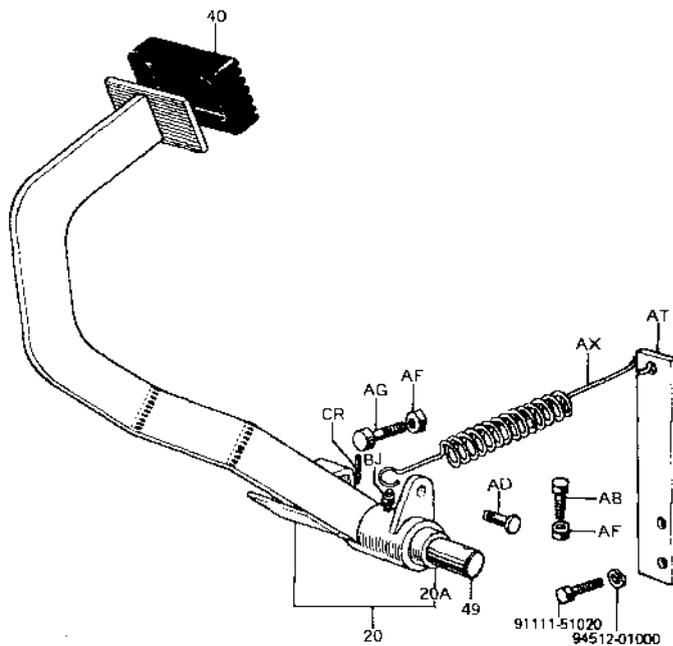

PART NAME CODE	PART NAME	QTY
4701-20	PEDAL SUB-ASSY, BRAKE	1
4701-20A	BUSH (FOR BRAKE PEDAL)	1
4701-40	PAD, PEDAL	1
4701-49	SHAFT, BRAKE PEDAL	1
4701-AB	BOLT	1
4701-AD	PIN, W/HOLE	1
4701-AF	NUT	2
4701-AG	BOLT, ADJUST	1
4701-AT	HANGER, BRAKE SPRING	1
4701-AX	SPRING, RETURN	1
4701-BJ	FITTING, GREASE	1
4701-CR	PIN, COTTER	1


4701 038 H

(MAIN) (28)

G201

FIG. 4702
BRAKE MASTER CYLINDER

4702

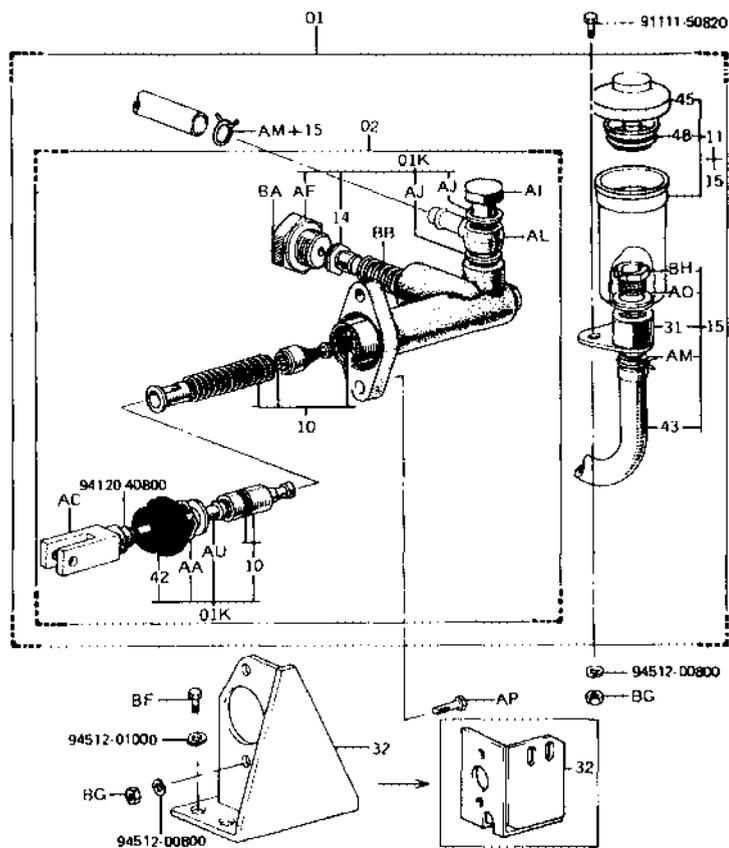



PART NAME CODE	PART NAME	QTY
4702-01	CYLINDER ASSY, MASTER	1
4702-01K	CYLINDER O/H KIT, MASTER	1
4702-02	CYLINDER ASSY, MASTER L/HOSE	1
4702-10	PISTON SUB-ASSY, MASTER CYLINDER	1
4702-11	RESERVOIR SET, MASTER CYLINDER	1
4702-14	VALVE ASSY	1
4702-15	RESERVOIR SET, W/HOSE	1
4702-31	BRACKET SUB-ASSY, RESERVOIR	1
4702-32	BRACKET SUB-ASSY, MASTER CYLINDER	1
4702-42	BOOT	1
4702-43	HOSE, RESERVOIR	1
4702-45	CAP, RESERVOIR	1
4702-48	STRAINER	1
4702-AA	RING, HOLE SNAP	1
4702-AC	CLEVIS, PUSH ROD	1
4702-AF	GASKET	1
4702-AI	BOLT, UNION	1
4702-AJ	GASKET	2
4702-AL	UNION	1
4702-AM	CLAMP	2
4702-AO	WASHER	1
4702-AP	BOLT	2
4702-AU	ROD SUB-ASSY, MASTER CYLINDER PUSH	1
4702-BA	PLUG	1
4702-BB	SPRING, COMPRESSION	1
4702-BF	BOLT	4
4702-BG	NUT	4
4702-BH	BOLT, RESERVOIR SET	1

(MAIN) (29)

G201

FIG. 4714
BRAKE PIPE

4714

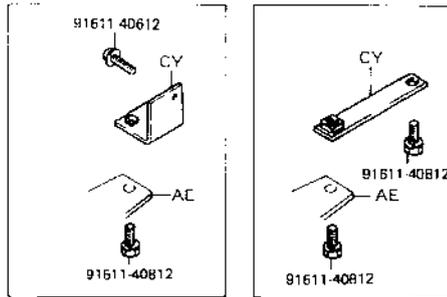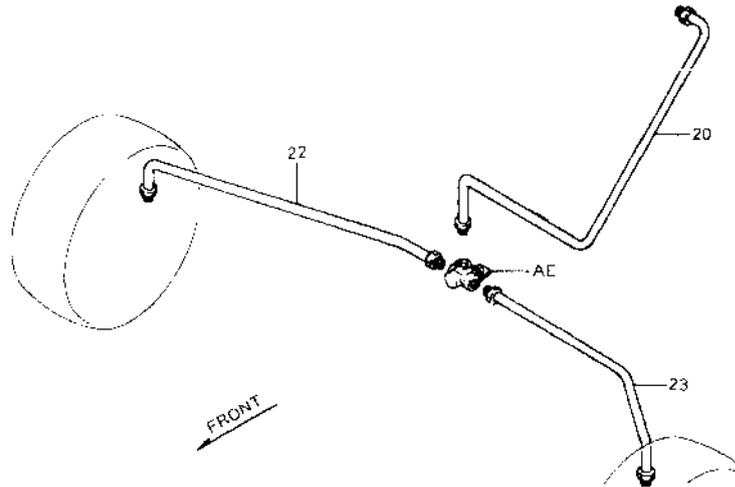

4714-06R



PART NAME CODE	PART NAME	QTY
4714-20	PIPE SUB-ASSY, BRAKE, MAIN NO.1	1
4714-22	PIPE SUB-ASSY, BRAKE, RH NO.1	1
4714-23	PIPE SUB-ASSY, BRAKE, LH NO.1	1
4714-AC	PLUG	1
4714-AK	4-WAY SUB-ASSY, BRAKE	1
4714-CY	BRACKET, 3-WAY	1

(MAIN) (30)

G201

FIG. 4715
DRUM BRAKE

4715

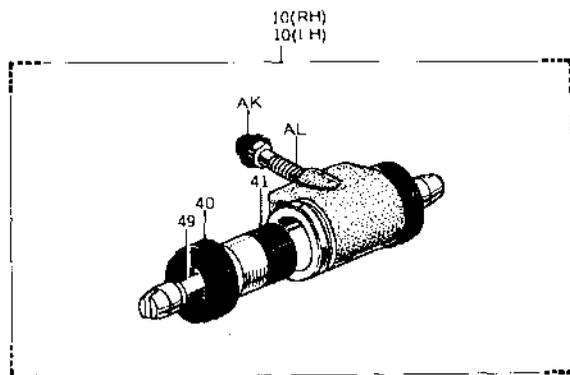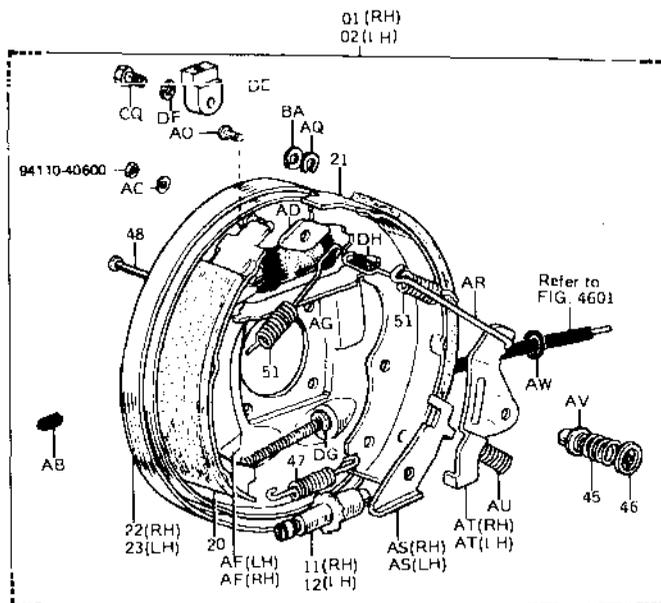

4715 026A


PART NAME CODE	PART NAME	QTY
4715-01	BRAKE ASSY, RH	1
4715-02	BRAKE ASSY, LH	1
4715-10	CYLINDER ASSY, WHEEL	1
4715-11	SCREW ASSY, ADJUSTING, RH	1
4715-12	SCREW ASSY, ADJUSTING, LH	1
4715-20	SHOE SUB-ASSY (FOR FRONT OR UPPER)	2
4715-21	SHOE SUB-ASSY (FOR REAR OR LOWER)	2
4715-22	PLATE SUB-ASSY, BACKING, RH	1
4715-23	PLATE SUB-ASSY, BACKING, LH	1
4715-40	BOOT, WHEEL CYLINDER	4
4715-41	CUP, WHEEL CYLINDER PISTON	4
4715-45	SPRING, SHOE HOLD DOWN	4
4715-46	CUP, SHOE HOLD DOWN	6
4715-47	SPRING, ADJUSTER	2
4715-48	PIN, SHOE HOLD DOWN	4
4715-49	ROD, PUSH	4
4715-51	SPRING, ANCHOR TO SHOE	4
4715-AB	COVER, HOLE	2
4715-AC	WASHER	4
4715-AD	PLATE, SHOE GUIDE	2
4715-AF	LEVER SUB-ASSY, PARKING	1
4715-AG	STRUT, LEVER	2
4715-AK	CAP, BLEEDER SCREW	2
4715-AL	SCREW, BLEEDER	2
4715-AO	PIN, LEVER	2
4715-AQ	RING, U	2
4715-AR	LINK	2
4715-AS	LEVER, PAWL	1
4715-AT	LEVER, ACTUATOR	1
4715-AU	SPRING, ACTUATOR	2
4715-AV	SLEEVE	2
4715-AW	PACKING, RUBBER	2
4715-BA	WASHER	2
4715-CQ	BOLT, UNION	2
4715-DE	UNION	2
4715-DF	GASKET	4
4715-DG	RING, U	2
4715-DH	SPRING	2

(MAIN) (31)

G201

FIG-5101
FRAME & WEIGHT

5101

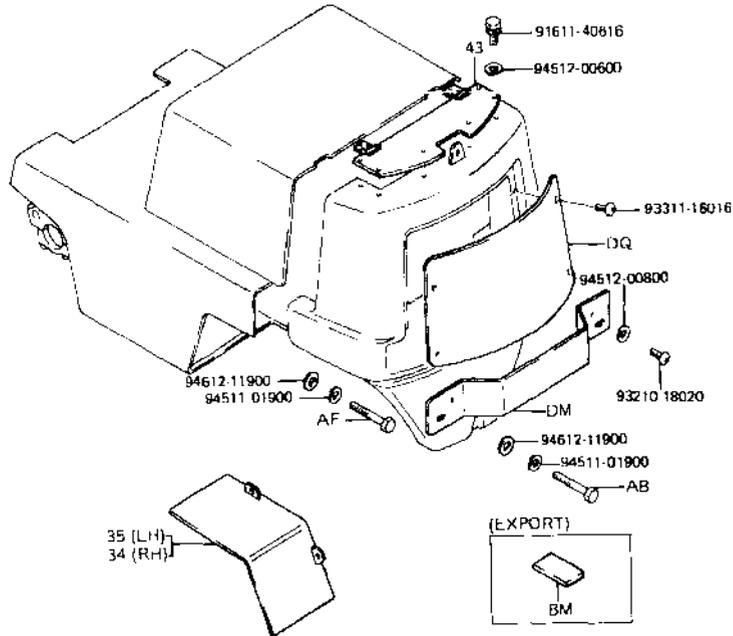

PART NAME CODE	PART NAME	QTY
5101-34	GUARD SUB-ASSY, MUO, RH -----	1
5101-35	GUARD SUB-ASSY, MUO, LH -----	1
5101-43	COVER, CONTROL -----	1
5101-AB	BOLT -----	1
5101-AF	BOLT, HEXAGON -----	2
5101-BM	CUSHION -----	2
5101-DM	COVER SUB-ASSY, REAR -----	1
5101-DQ	COVER SUB-ASSY, REAR -----	1


5101 043

(MAIN) (32)

G201

FIG. 5201
HOOD & HINGE

5201

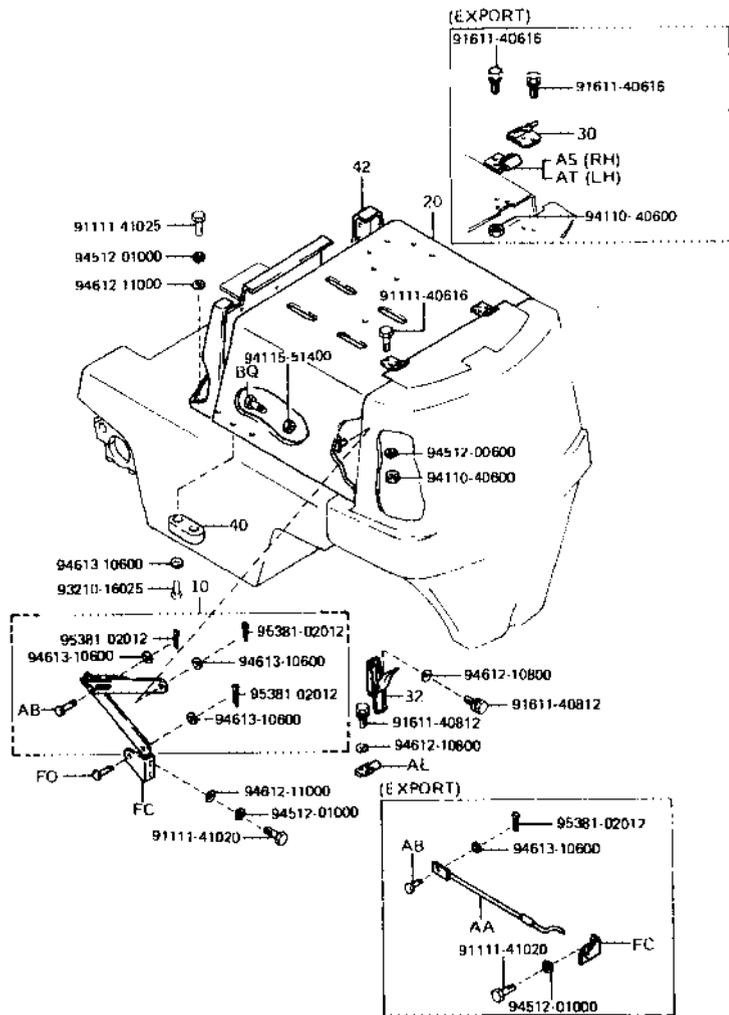

5201-041

PART NAME CODE	PART NAME	QTY
5201-10	STAY ASSY, ENGINE (OR BATTERY) HOOD -----	1
5201-20	HOOD SUB-ASSY, ENGINE (OR BATTERY) -----	1
5201-30	HINGE SUB-ASSY, ENGINE (OR BATTERY) HOOD ---	2
5201-32	CATCH SUB-ASSY (FOR HOOD) -----	1
5201-40	RUBBER, CUSHION (FOR HOOD) -----	2
5201-42	COVER SUB-ASSY, FRONT -----	1
5201-AA	STAY SUB-ASSY, ENGINE HOOD -----	1
5201-AB	PIN, W/HOLE -----	1
5201-AE	HOOK, HOOD LOCK -----	1
5201-AS	HINGE SUB-ASSY, HOOD, RH -----	1
5201-AT	HINGE SUB-ASSY, HOOD, LH -----	1
5201-BQ	BOLT -----	2
5201-FC	BRACKET, STAY -----	1
5201-FO	PIN -----	1


(MAIN) (33)

G201

FIG. 5301
INSTRUMENT PANEL & FLOOR

5301

(2FB/7)

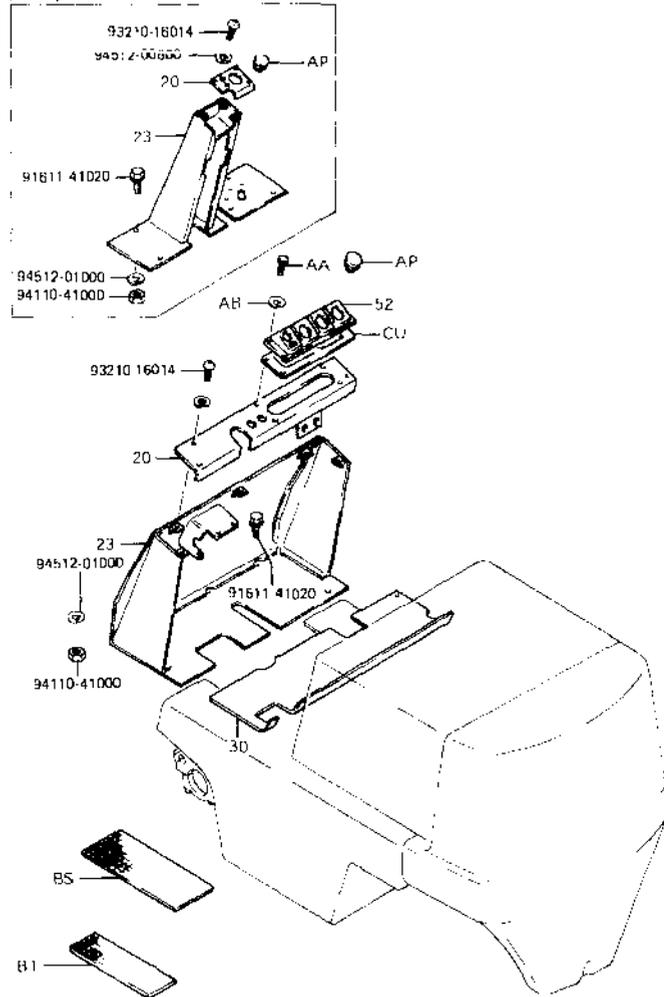

5301 Q49

PART NAME CODE	PART NAME	QTY
5301-20	PANEL SUB-ASSY, INSTRUMENT -----	1
5301-29	PROJECTOR SUB-ASSY, FR -----	1
5301-3D	TOE-BOARD SUB-ASSY, NO.1 -----	1
5301-52	PANEL, INSTRUMENT, UPPER -----	1
5301-AA	SCREW -----	4
5301-AB	WASHER, WAVE -----	4
5301-AP	PLUG, HOLE -----	1
5301-BS	SAFETY WALK -----	1
5301-BT	SAFETY WALK -----	1
5301-CU	RUBBER -----	1


(MAIN) (34)

G201

FIG. 5308
DRIVER SEAT

5308

(UL)

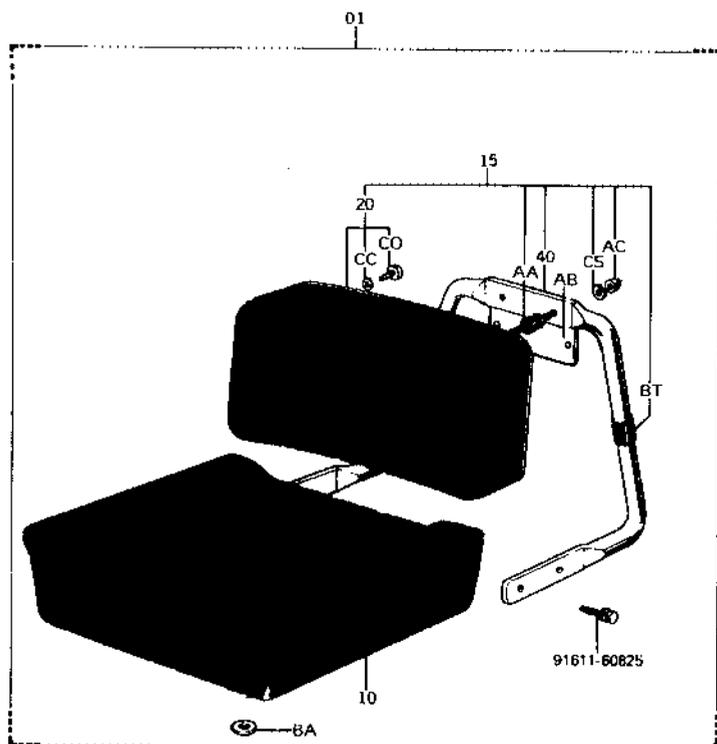


BA

94612-10800

94512-00800

94110-40800

5308-041A

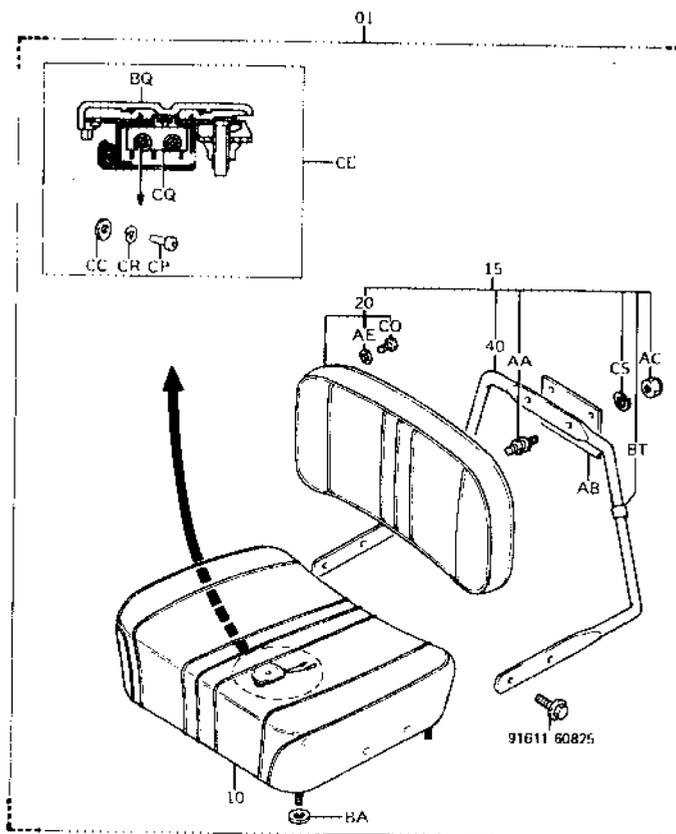

94612 10800

94512-00800

94110-40800

5308-042


5308

PART NAME CODE	PART NAME	QTY
5308-01	SEAT ASSY -----	1
5308-10	CUSHION ASSY -----	1
5308-15	SEAT ASSY, BACK -----	1
5308-20	SEAT SUB-ASSY, BACK -----	1
5308-40	FRAME, BACK SEAT -----	1
5308-AA	RUBBER, VIBRATION ISOLATOR -----	2
5308-AB	BRACKET, NUMBER PLATE -----	1
5308-AC	NUT, CAP -----	2
5308-AE	WASHER -----	8
5308-BA	SPACER -----	4
5308-BQ	PLATE -----	1
5308-BT	STOPPER -----	2
5308-CC	WASHER, PLATE -----	2
5308-CE	SWITCH SUB-ASSY, SEAT -----	1
5308-CD	SCREW -----	8
5308-CP	SCREW -----	2
5308-CQ	SWITCH -----	1
5308-CH	WASHER, SPRING -----	2
5308-CS	WASHER, SPRING -----	2

(MAIN) (35) G201

FIG. 5401
HEAD GUARD & ACCESSORY

5401

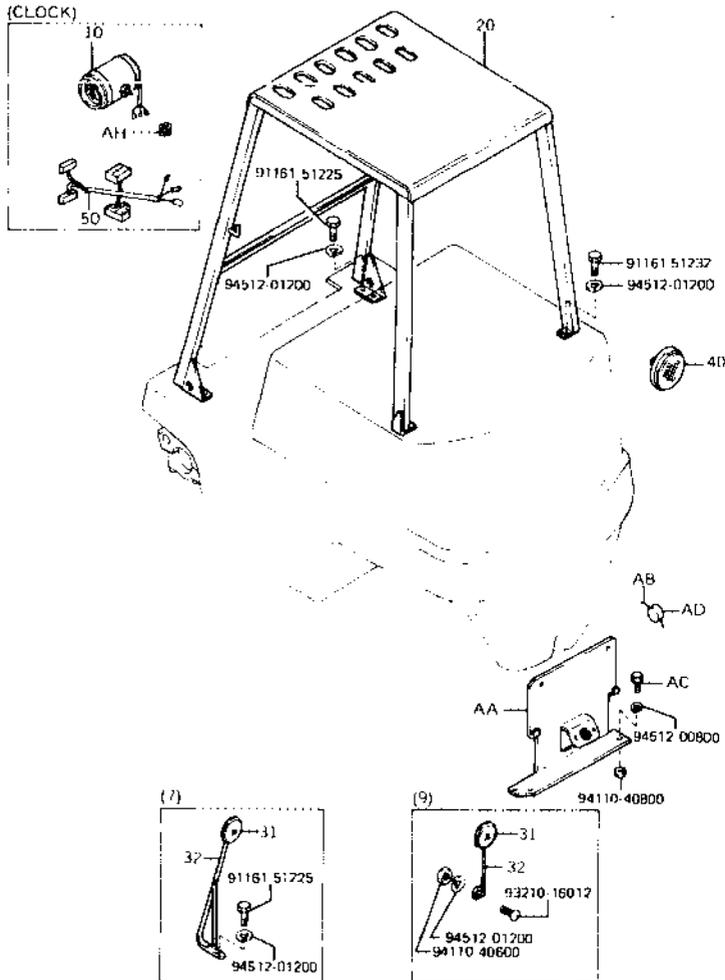


PART NAME CODE	PART NAME	QTY
5401-20	GUARD SUB-ASSY, HEAD -----	1
5401-31	MIRROR SUB-ASSY, BACK -----	2
5401-32	BRACKET SUB-ASSY, BACK MIRROR -----	2
5401-40	REFLECTOR -----	2
5401-AA	BRACKET SUB-ASSY, LICENCE PLATE -----	1
5401-AB	WIRE -----	1
5401-AC	BOLT, HEAD W/HOLE HEXAGON -----	1
5401-AD	SEAL, ROD -----	1

(MAIN) (36)

G201

FIG. 5405
INDICATOR PLATE

5405

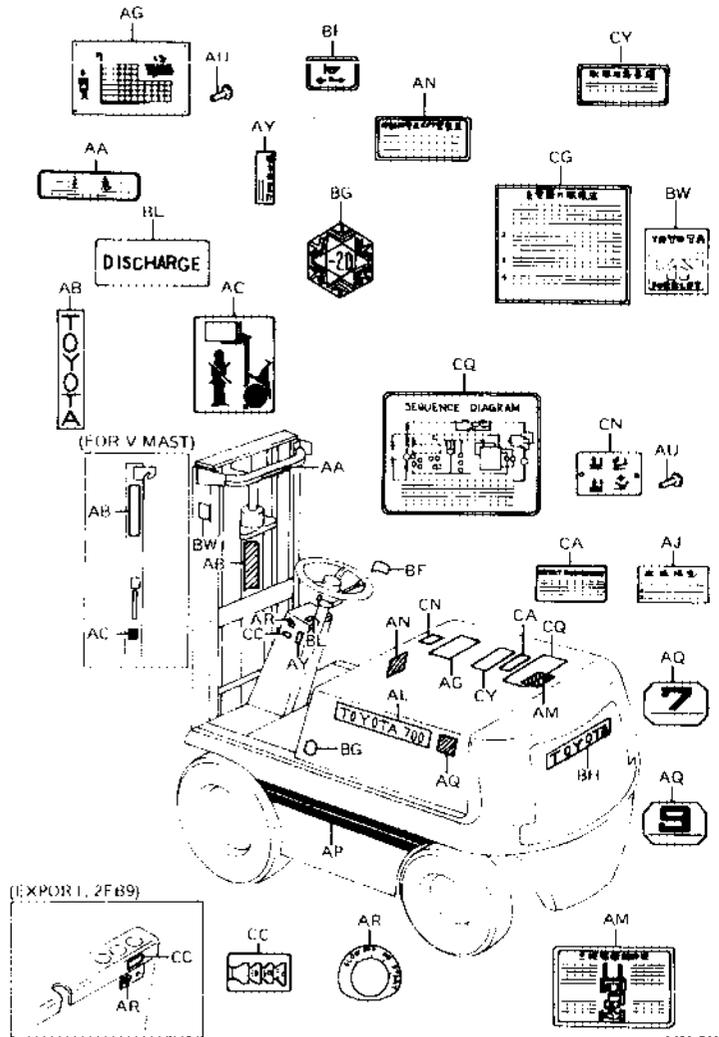

5405 014

PART NAME CODE	PART NAME	QTY
5405-AA	PLATE, CAUTION	1
5405-AC	PLATE, CAUTION	1
5405-AG	PLATE, LOAD INDICATOR	1
5405-AJ	PLATE, CAUTION	1
5405-AL	TOYOTA MARK	2
5405-AM	PLATE, SERVICE INDICATOR	1
5405-AN	PLATE, INDICATOR	1
5405-AP	STRIPE	2
5405-AQ	PLATE, CAPACITY INDICATOR	2
5405-AR	PLATE, CAUTION	1
5405-AU	RIVET	6
5405-AY	PLATE, INDICATOR	1
5405-BF	PLATE, DIRECTION	1
5405-BG	PLATE, TEMPERATURE	2
5405-BH	MARK, TOYOTA	1
5405-BL	PLATE, DISCHARGE INDICATOR	1
5405-BW	MARK, SYMBOL	2
5405-CA	PLATE, CAUTION	1
5405-CC	PLATE, CAUTION	1
5405-CG	PLATE, CAUTION	1
5405-CN	PLATE, INDICATOR	1
5405-CQ	PLATE, SEQUENCE DIAGRAM	1
5405-CY	PLATE, CAUTION	1

(MAIN) (37)



G201

MEMO

FIG-5602
WIRING & CLAMP

5602

(UL)

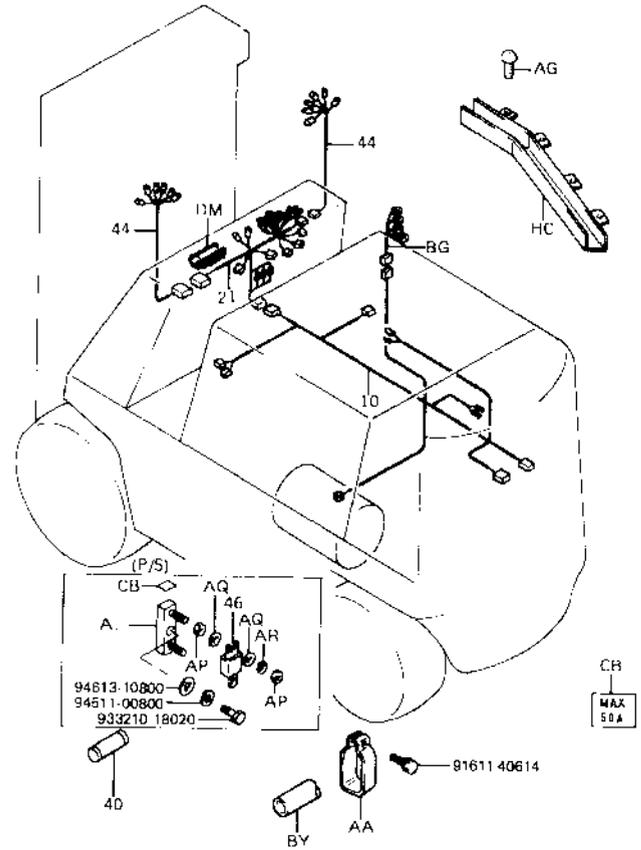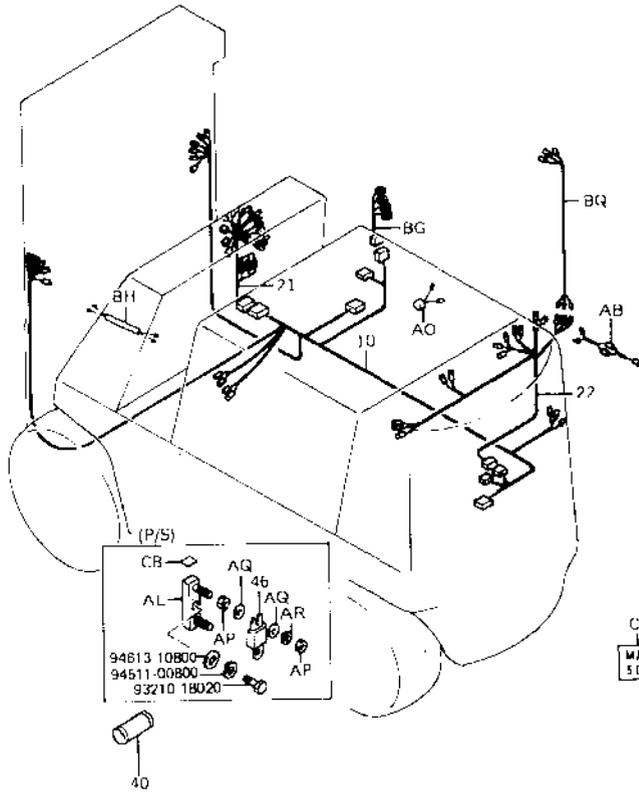

5602 046A


5602 047A

FIG. 5602
WIRING & CLAMP

5602

(RES)

(SCR)

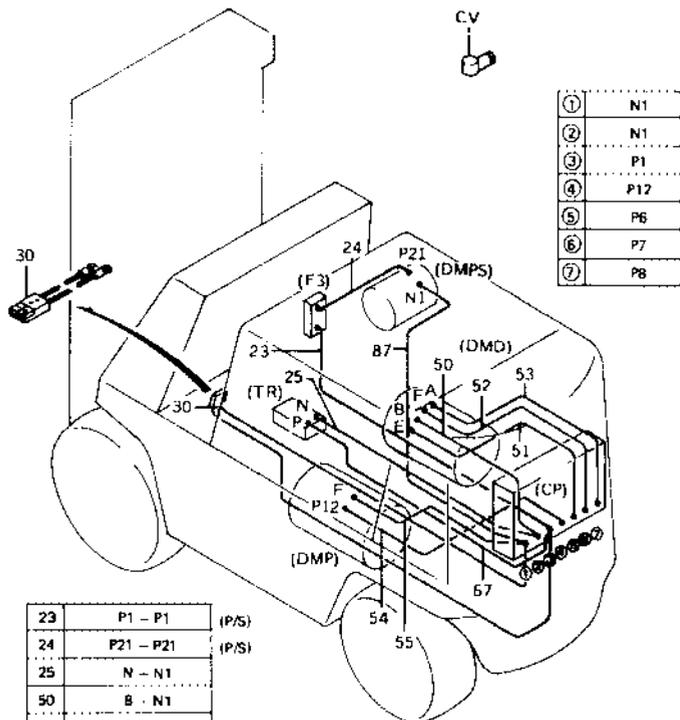


①	N1
②	N1
③	P1
④	P12
⑤	P6
⑥	P7
⑦	P8

23	P1 - P1	(P/S)
24	P21 - P21	(P/S)
25	N - N1	
50	B - N1	
51	E - P6	
52	F - P7	
53	A - P8	
54	P12 - P12	
55	F - N1	
67	P - P1	
87	N1 - N1	(P/S)

- (P/S)
- 91111-40816
 - 94512-00800
 - 94110-40800

5502-046

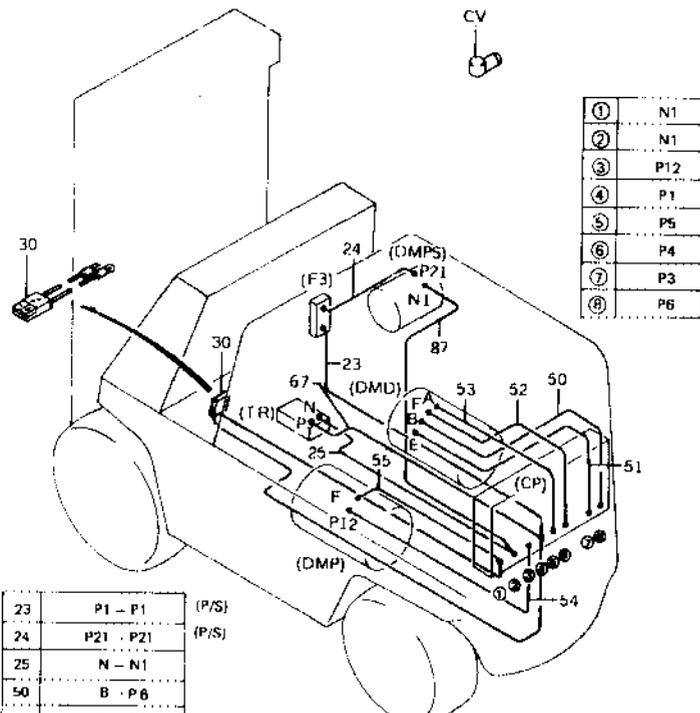

①	N1
②	N1
③	P12
④	P1
⑤	P5
⑥	P4
⑦	P3
⑧	P6

23	P1 - P1	(P/S)
24	P21 - P21	(P/S)
25	N - N1	
50	B - P6	
51	E - P3	
52	F - P4	
53	A - P5	
54	P12 - P12	
55	F - N1	
67	P - P1	
87	N1 - N1	(P/S)

- (P/S)
- 91111-40816
 - 94512-00800
 - 94110-40800

5602-087

5602


PART NAME CODE	PART NAME	QTY
5602-10	HARNESS ASSY, WTRING -----	1
5602-21	HARNESS SUB-ASSY, PANEL -----	1
5602-22	HARNESS SUB-ASSY, RR -----	1
5602-23	WIRING SUB-ASSY, POWER STEERING -----	1
5602-24	WIRING SUB-ASSY, POWER STEERING -----	1
5602-25	WIRING SUB-ASSY, CHARGER -----	1
5602-30	CONNECTOR SUB-ASSY -----	1
5602-40	FUSE -----	2
5602-44	CORD, HEAD LAMP -----	2
5602-46	FUSE -----	1
5602-50	WIRING, DRIVE MOTOR, NO.1 -----	1
5602-51	WIRING, DRIVE MOTOR, NO.2 -----	1
5602-52	WIRING, DRIVE MOTOR, NO.3 -----	1
5602-53	WIRING, DRIVE MOTOR, NO.4 -----	1
5602-54	WIRING, PUMP MOTOR, NO.1 -----	1
5602-55	WIRING, PUMP MOTOR, NO.2 -----	1
5602-67	WIRING, CHARGER -----	1
5602-87	WIRING SUB-ASSY -----	1
5602-AA	CLAMP -----	4
5602-AB	HARNESS, CHIME -----	1
5602-AG	BOLT -----	8
5602-AL	TERMINAL, FUSE BLOCK -----	1
5602-AD	HARNESS, POWER STEERING -----	1
5602-AP	NUT -----	4
5602-AQ	WASHER, PLATE -----	4
5602-AR	WASHER, SPRING -----	2
5602-BG	HARNESS, PUMP SWITCH -----	1
5602-BH	HARNESS, SIDE BRAKE SWITCH -----	1
5602-BQ	HARNESS, ROTARY LAMP -----	1
5602-BY	COVER SUB-ASSY, HARNESS -----	2
5602-DB	PLAE, FUSE -----	1
5602-CV	CAP -----	99
5602-DM	INSULATOR, EDGE -----	2
5602-HC	HOLDER SUB-ASSY, MAIN LEAD -----	1

(MAIN) (38)

G201

FIG. 5611
LAMP

5611

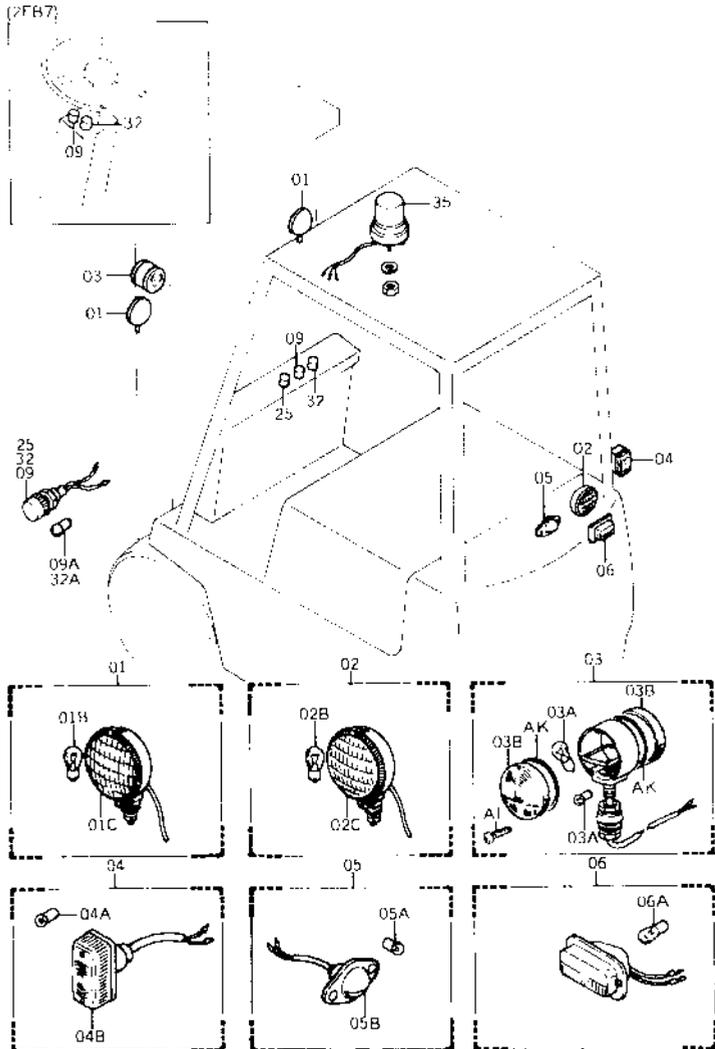

5611-03R

PART NAME CODE	PART NAME	QTY
5611-01	LAMP ASSY, HEAD -----	2
5611-01B	BULB (FOR HEAD LAMP) -----	1
5611-01C	LENS (FOR HEAD LAMP) -----	2
5611-02	LAMP ASSY, WORKING -----	2
5611-02B	BULB (FOR WORKING LAMP) -----	1
5611-02C	LENS (FOR WORKING LAMP) -----	1
5611-03	LAMP ASSY, FLASHER -----	2
5611-03A	BULB (FOR FLASHER LAMP) -----	2
5611-03B	LENS (FOR FLASHER LAMP) -----	2
5611-04	LAMP ASSY, REAR COMBINATION -----	2
5611-04A	BULB (FOR REAR COMBINATION LAMP) -----	2
5611-04B	LENS (FOR REAR COMBINATION LAMP) -----	2
5611-05	LAMP ASSY, LICENCE -----	1
5611-05A	BULB (FOR LICENCE LAMP) -----	1
5611-05B	LENS (FOR LICENCE LAMP) -----	1
5611-06	LAMP ASSY, BACK-UP -----	1
5611-06A	BULB (FOR BACK-UP LAMP) -----	1
5611-09	LAMP ASSY, PILOT -----	1
5611-09A	BULB (FOR PILOT LAMP) -----	1
5611-25	LAMP ASSY, WORKING PILOT -----	1
5611-32	LAMP ASSY, DISCHARGE PILOT -----	1
5611-32A	BULB (FOR DISCHARGE PILOT) -----	1
5611-35	LAMP ASSY, ROTARY -----	1
5611-A1	SCREW -----	12
5611-AK	PACKING -----	4


(MAIN) (39)

G201

FIG. 6101
MAST

6101

FV

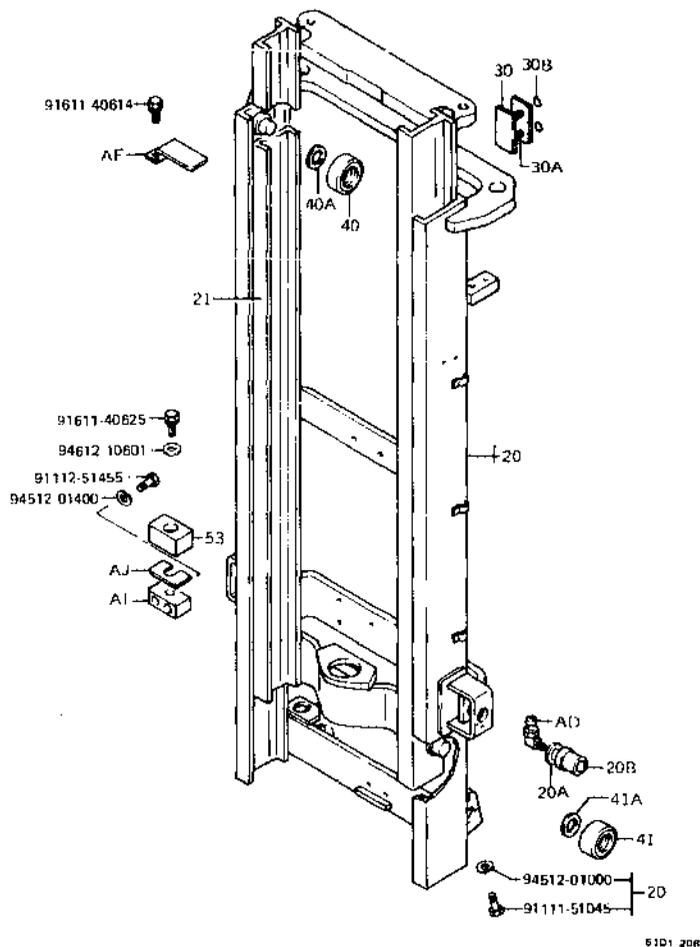

PART NAME CODE	PART NAME	QTY
6101-20	MAST SUB-ASSY, OUTER -----	1
6101-20A	SHIM -----	99
6101-20B	BUSH, MAST SUPPORT -----	2
6101-21	MAST SUB-ASSY, INNER -----	1
6101-30	STRIP SUB-ASSY, OUTER MAST -----	2
6101-30A	SHIM, OUTER MAST STRIP -----	99
6101-30B	RING, O (FOR OUTER MAST STRIP) -----	4
6101-40	ROLLER, LIFT (FOR OUTER MAST) -----	2
6101-40A	SHIM, LIFT ROLLER (FOR OUTER MAST) -----	99
6101-41	ROLLER, LIFT (FOR INNER MAST) -----	2
6101-41A	SHIM, LIFT ROLLER (FOR INNER MAST) -----	99
6101-53	CUSHION, MAST (FOR INNER MAST) -----	1
6101-AD	FITTING, GREASE -----	2
6101-AF	COVER, ROLLER -----	2
6101-AH	BOLT -----	4
6101-AI	STOPPER -----	1
6101-AJ	SHIM, STOPPER -----	99



(FV) (1)

6201

FIG. 6301
LIFT BRACKET & FORK

6301

FV

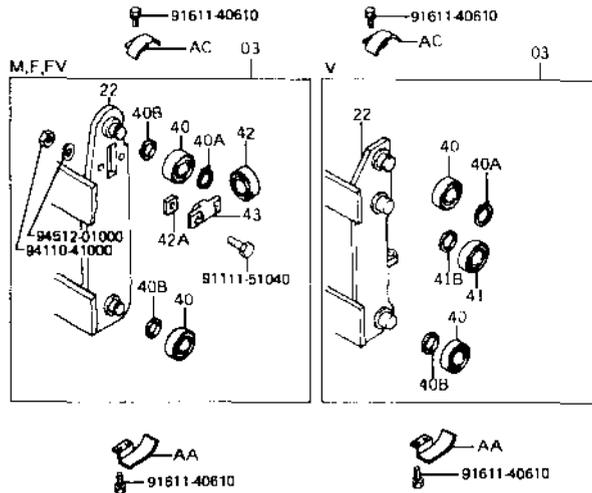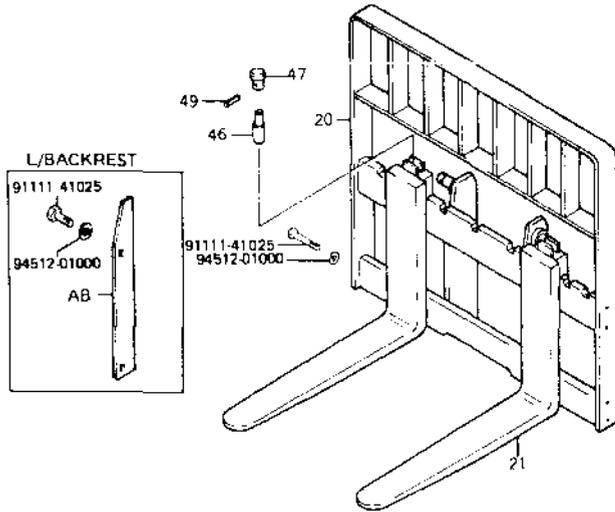

6301-085A

PART NAME CODE	PART NAME	QTY
6301-03	BRACKET ASSY, LIFT -----	1
6301-70	BACKREST SUB-ASSY -----	1
6301-21	FORK SUB-ASSY -----	2
6301-22	BRACKET SUB-ASSY, LIFT -----	1
6301-40	ROLLER, LIFT (UPPER, LOWER) -----	4
6301-40A	RING, SHAFT SNAP (UPPER, LOWER) -----	2
6301-40B	SHIM, LIFT ROLLER -----	99
6301-42	ROLLER, SIDE -----	2
6301-42A	SHIM (FOR SIDE ROLLER) -----	99
6301-43	SHAFT, SIDE ROLLER -----	2
6301-46	PIN, FORK STOPPER -----	2
6301-47	KNOB, FORK STOPPER PIN -----	2
6301-49	PIN, SPRING (FOR FORK STOPPER PIN) -----	2
6301-AA	COVER, LIFT BRACKET ROLLER -----	1
6301-AB	PLATE, SIDE -----	2
6301-AC	COVER, LIFT BRACKET ROLLER -----	2


(FV) (?)

6201

FIG: 6302
CHAIN & CHAIN WHEEL

6302

FV

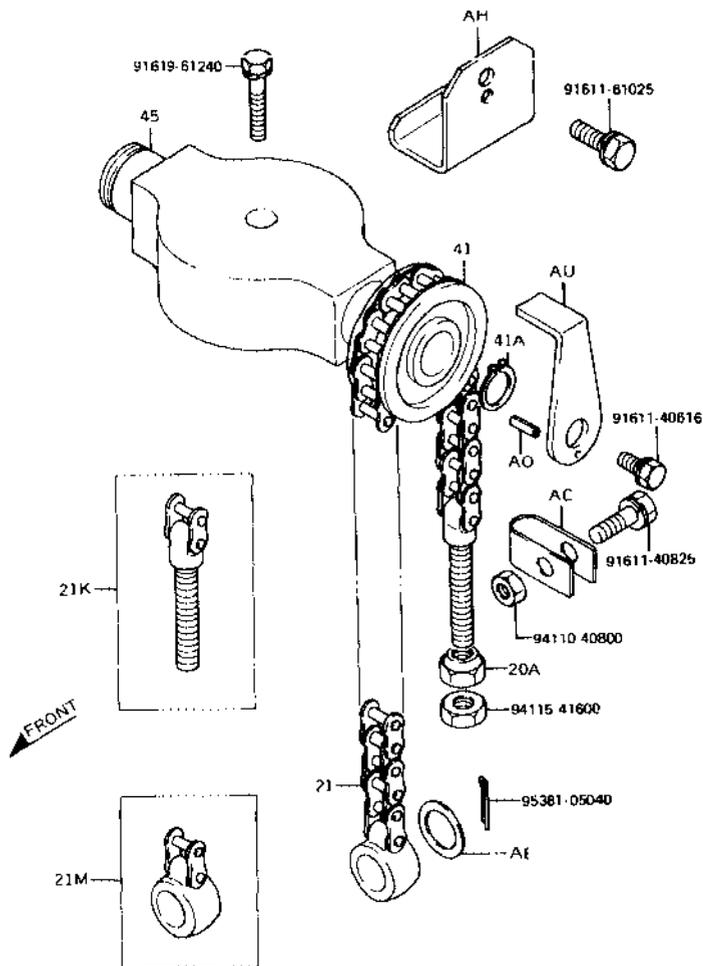

PART NAME CODE	PART NAME	QTY
6302-20A	NUT, CHAIN ADJUST -----	2
6302-21	CHAIN SUB-ASSY (FRONT) -----	2
6302-21K	BOLT KIT, CHAIN ANCHOR, NO.1 (FRONT) -----	2
6302-21M	BOLT KIT, CHAIN EYE (FRONT) -----	2
6302-41	WHEEL, CHAIN (FRONT) -----	2
6302-41A	RING, SHAFT SNAP (FOR FRONT CHAIN WHEEL) ---	2
6302-45	SUPPORT, CHAIN WHEEL -----	1
6302-AC	CLAMP, CHAIN ANCHOR BOLT -----	2
6302-AE	WASHER, CHAIN SPECIAL -----	2
6302-AH	COVER, CHAIN WHEEL -----	1
6302-AO	PIN, SPRING -----	2
6302-AU	STOPPER, CHAIN WHEEL -----	2

6302-135


(FV) (3)

G201

FIG-6502
FRONT LIFT CYLINDER

6502

FV

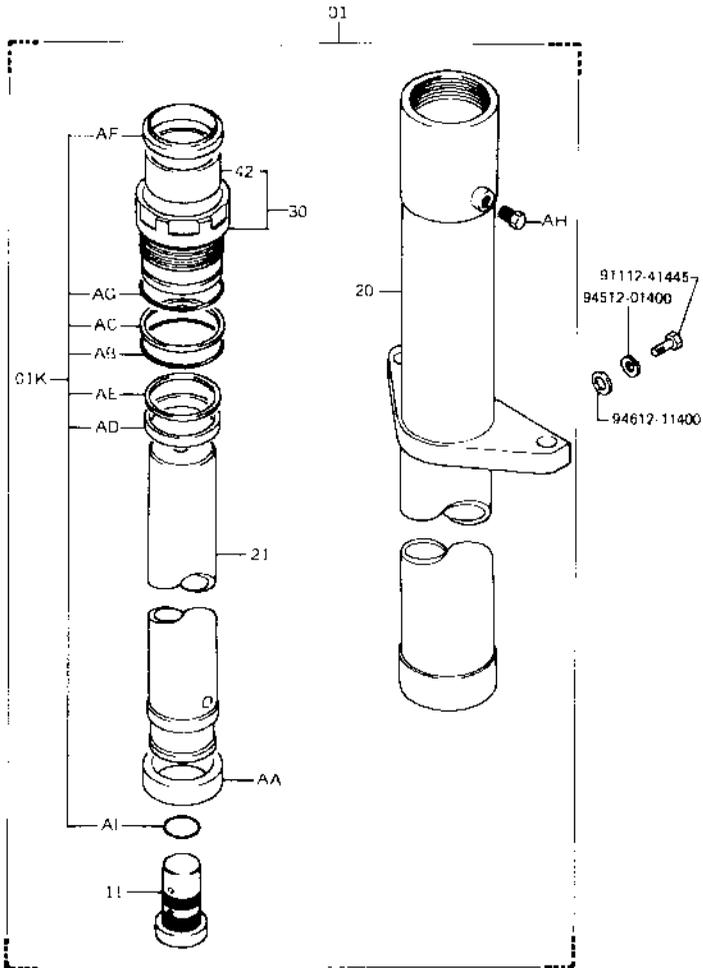

6502 023

PART NAME CODE	PART NAME	QTY
6502-01	CYLINDER ASSY, LIFT -----	1
6502-01K	CYLINDER O/H KIT, LIFT -----	1
6502-11	VALVE ASSY, SAFETY DOWN -----	1
6502-20	CY-LINDER SUB-ASSY, LIFT -----	1
6502-21	ROD SUB-ASSY, LIFT CYLINDER -----	1
6502-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD -----	1
6502-42	SLEEVE, LIFT CYLINDER ROD GUIDE -----	1
6502-AA	BUSHING -----	1
6502-AB	RING, O -----	1
6502-AC	RING, BACK UP -----	1
6502-AD	PACKING, U -----	1
6502-AE	RING, BACK UP -----	1
6502-AF	SLA., DUST -----	1
6502-AG	RING, O -----	1
6502-AH	PLUG -----	1
6502-AI	RING, O -----	1


{ FV } (4)

G201

FIG. 6503
REAR LIFT CYLINDER

6503

FV

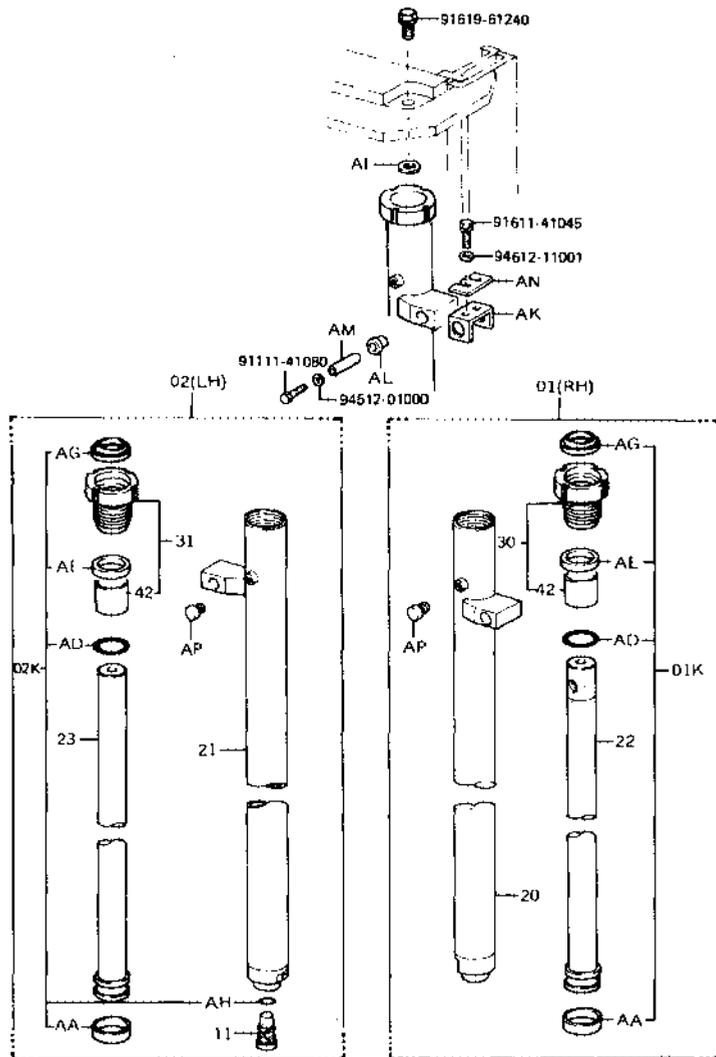


PART NAME CODE	PART NAME	QTY
6503-01	CYLINDER ASSY, LIFT, RH	1
6503-01K	CYLINDER O/H KIT, LIFT, RH	1
6503-02	CYLINDER ASSY, LIFT, LH	1
6503-02K	CYLINDER O/H KIT, LIFT, LH	1
6503-11	VALVE ASSY, SAFETY DOWN	1
6503-20	CYLINDER SUB-ASSY, LIFT, RH	1
6503-21	CYLINDER SUB-ASSY, LIFT, LH	1
6503-22	ROD SUB-ASSY, LIFT CYLINDER, RH	1
6503-23	ROD SUB-ASSY, LIFT CYLINDER, LH	1
6503-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD, RH	1
6503-31	GUIDE SUB-ASSY, LIFT CYLINDER ROD, LH	1
6503-42	SLEEVE, LIFT CYLINDER ROD GUIDE	2
6503-AA	RING, WEAR	2
6503-AD	RING, O	2
6503-AF	PACKING, U	2
6503-AG	SEAL, DUST	2
6503-AH	RING, O	1
6503-AI	SHIM	99
6503-AK	BRACKET SUB-ASSY, LIFT CYLINDER	2
6503-AL	BUSHING	4
6503-AM	SPACER	2
6503-AN	SHIM	99
6503-AP	PLUG	2

(FV) (5) 6201

FIG. 6511
TILT CYLINDER

6511

FV

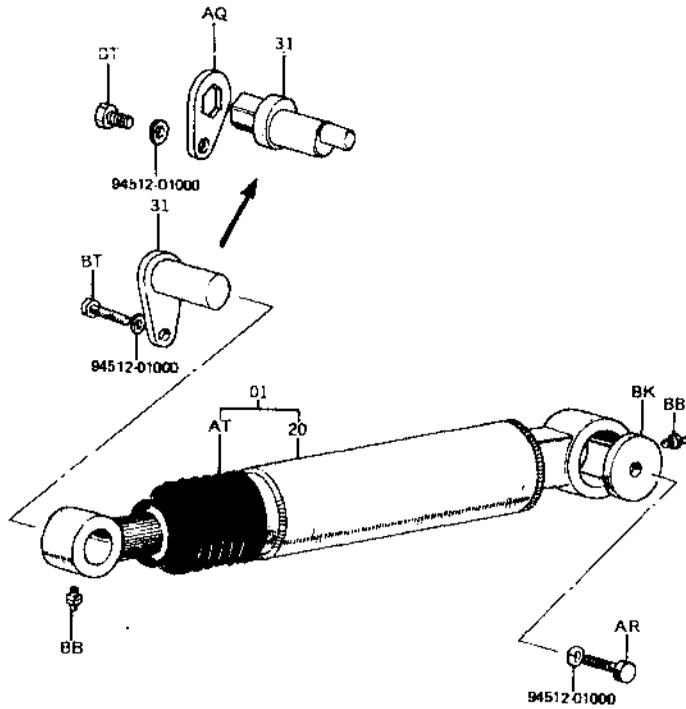

6511-034A

PART NAME CODE	PART NAME	QTY
6511-01	CYLINDER ASSY, TILT -----	2
6511-20	CYLINDER SUB-ASSY, TILT -----	2
6511-31	PIN SUB-ASSY, TILT CYLINDER, FR -----	2
6511-AQ	PLATE, STOPPER -----	2
6511-AR	BOLT -----	2
6511-AT	BOOT SUB-ASSY -----	2
6511-BB	FITTING, GREASE -----	4
6511-BK	PLATE -----	2
6511-BT	BOLT -----	2

(FV) (7)

G201

6701

PART NAME CODE	PART NAME	QTY
6701-01	PUMP ASSY, OIL -----	1
6701-01K	PUMP D/H KIT, OIL -----	1
6701-10	GEAR SET -----	1
6701-15	BODY & GEAR SET -----	1
6701-43	BODY -----	1
6701-44	FLANGE, MOUNTING -----	1
6701-45	COVER -----	1
6701-AD	SEAL, OIL -----	1
6701-AE	RING, SNAP -----	1
6701-AF	BOLT -----	4
6701-AH	SEAL, BODY -----	1
6701-AI	BOLT -----	4
6701-AN	GASKET -----	1
6701-AP	GASKET -----	1
6701-AR	RING, O -----	1
6701-BE	PIN -----	2
6701-BF	WASHER -----	4
6701-BG	PLATE, SIDE, A -----	1
6701-BH	PLATE, SIDE, B -----	1
6701-BI	JOINT, OLDHAM -----	1

(FV) (8)




6701

FIG. 6705
DIE CONTROL VALVE

6705

FV

FV

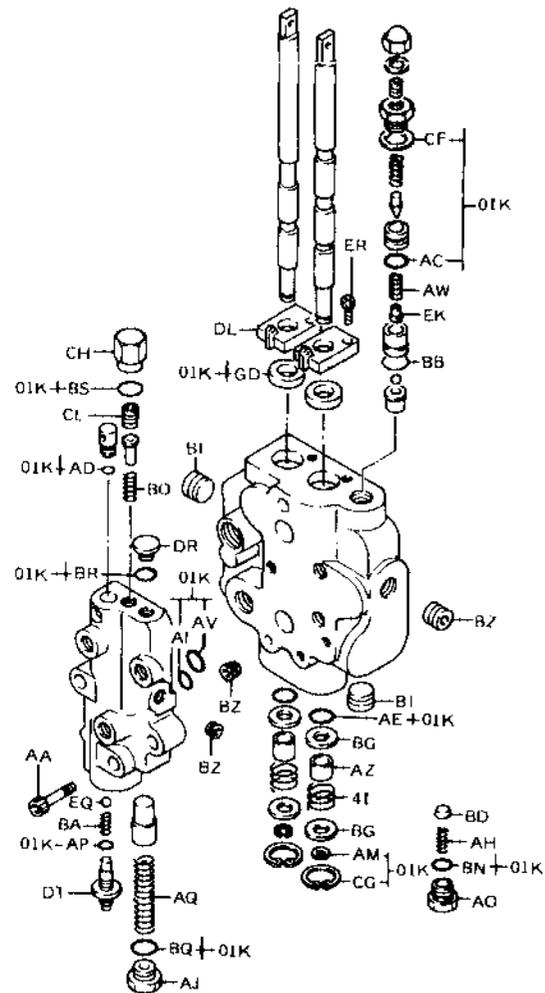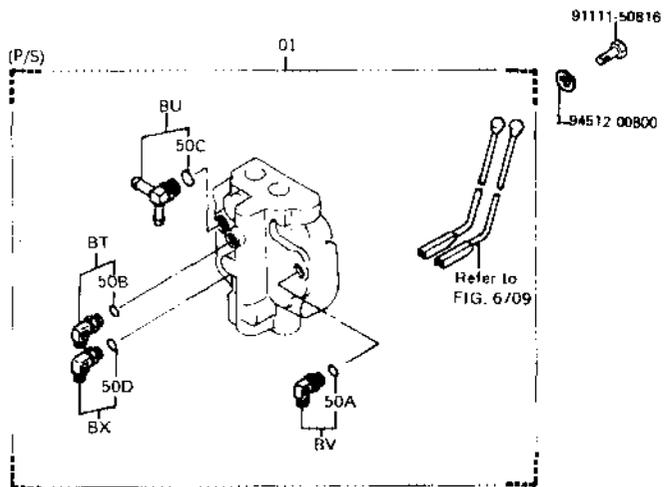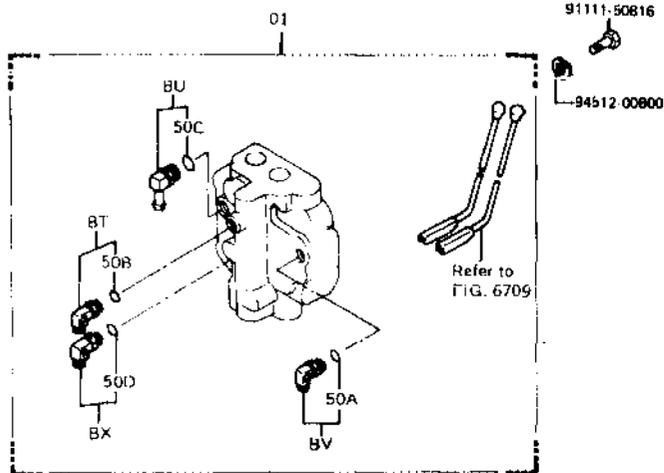

6705-222



6705-219

FIG. 6705
OIL CONTROL VALVE

6705

FV (3-WAY)

FV (3-WAY)

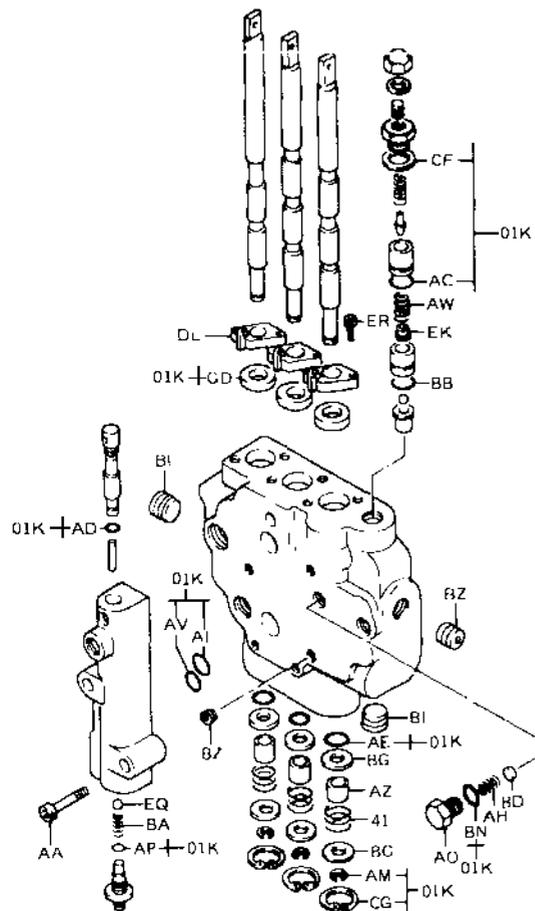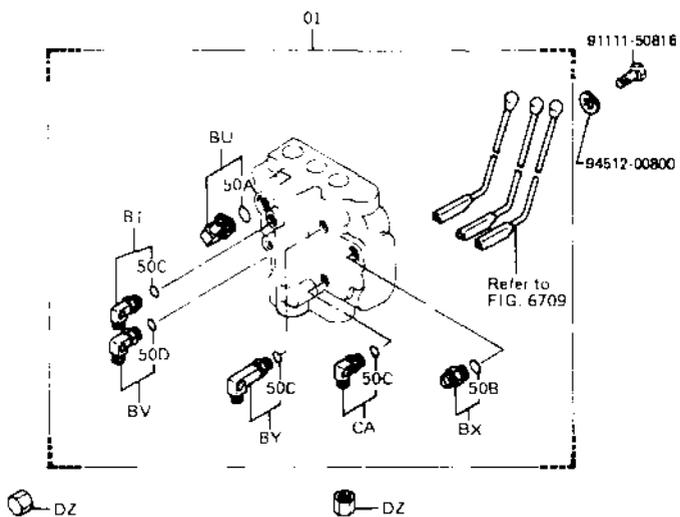

6705 229

6705 224

6705

PART NAME CODE	PART NAME	QTY
6705-01	VALVE ASSY, OIL CONTROL -----	1
6705-01K	VALVE O/H KIT, OIL CONTROL -----	1
6705-41	SPRING, COMPRESSION (FOR SPOOL RETURN) -----	2
6705-50A	RING, O, NO.1 (FOR VALVE FITTING) -----	1
6705-50B	RING, O, NO.2 (FOR VALVE FITTING) -----	1
6705-50C	RING, O, NO.3 (FOR VALVE FITTING) -----	1
6705-50D	RING, O, NO.4 (FOR VALVE FITTING) -----	1
6705-AA	BOLT -----	3
6705-AC	RING, O -----	1
6705-AD	RING, O -----	1
6705-AE	RING, O -----	2
6705-AH	SPRING, COMPRESSION -----	1
6705-AI	RING, O -----	1
6705-AM	RING, SHAFT SNAP -----	2
6705-AO	PLUG -----	1
6705-AP	RING, O -----	1
6705-AV	RING, O -----	2
6705-AW	SPRING, COMPRESSION -----	1
6705-AZ	COLLAR -----	2
6705-BA	SPRING, COMPRESSION -----	1
6705-BB	WIRE, DRIFICE TURNING -----	1
6705-BD	PLUNGER, CHECK -----	1
6705-BG	WASHER -----	4
6705-BI	PLUG -----	2
6705-BN	RING, O -----	1
6705-BT	FITTING -----	1
6705-BU	FITTING -----	1
6705-BV	FITTING -----	1
6705-BX	FITTING -----	1
6705-BY	FITTING -----	1
6705-BZ	PLUG -----	4
6705-CA	FITTING -----	1
6705-CF	SEAL -----	1
6705-CG	RING, HOLE SNAP -----	2
6705-DL	BRACKET, LEVER -----	2
6705-DT	NIPPLE, NO.1 -----	1
6705-DZ	PLUG -----	2
6705-EK	GUIDE -----	1
6705-EQ	BALL, STEEL -----	1
6705-ER	BOLT -----	4
6705-GD	SEAL, DUST -----	2


(F V) (9) G201

FIG. 6709
DIL CONTROL VALVE LINK


6709

FV

FV (3-WAY)

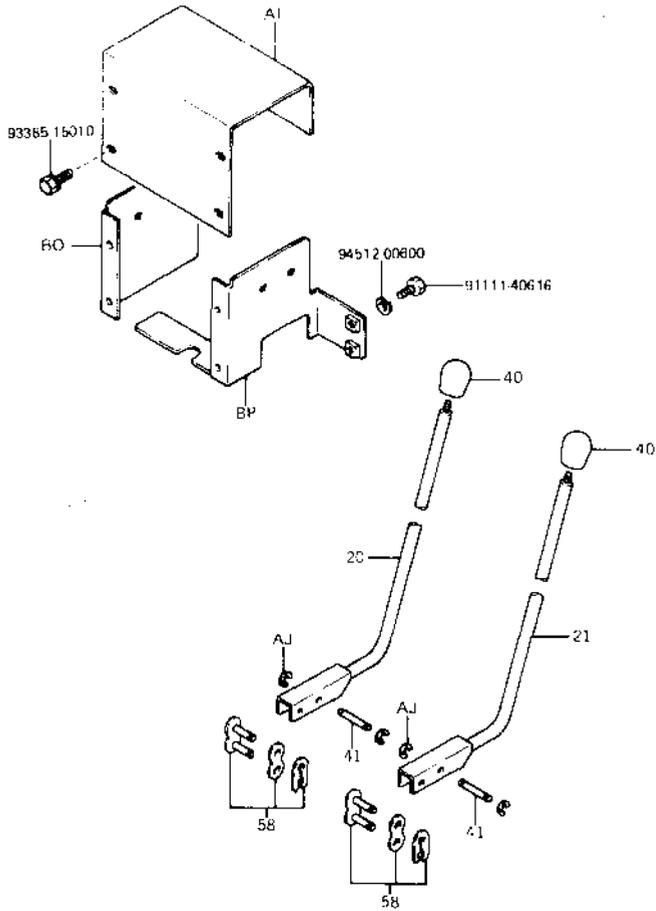

8709-052

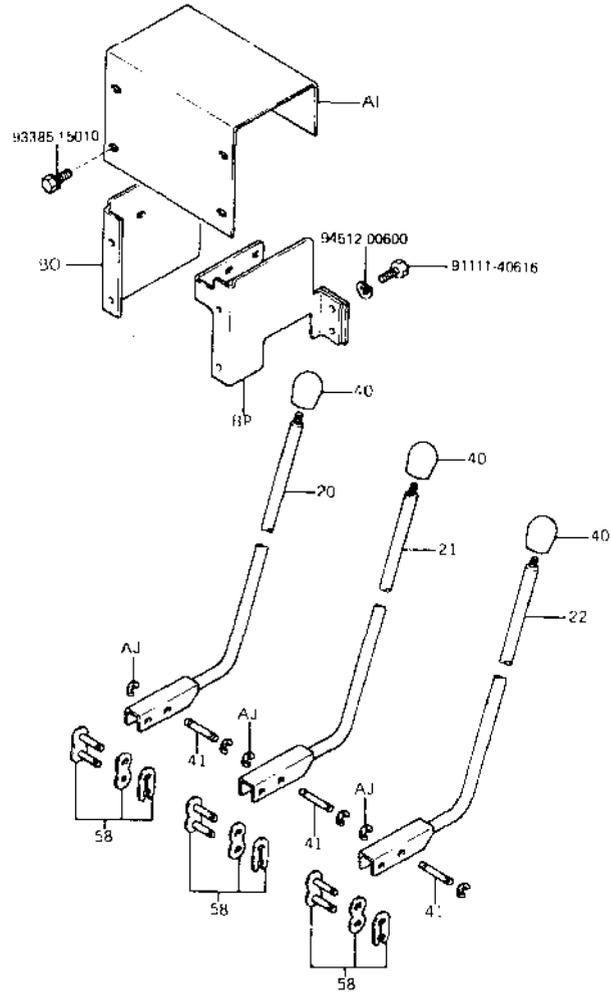

8709-053

6709

PART NAME CODE	PART NAME	QTY
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1 -----	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2 -----	1
6709-22	LEVER SUB-ASSY, CONTROL VALVE, NO.3 -----	1
6709-40	KNOB, OIL CONTROL VALVE LEVER -----	2
6709-41	PIN, OIL CONTROL VALVE LEVER -----	2
6709-58	JOINT, SET LINK -----	2
6709-A1	COVER, CONTROL BOX -----	1
6709-A1	RING, SNAP -----	4
6709-BP	BRACKET SUB-ASSY, LIMIT SWITCH TILT -----	1


(FV) (10)

G201

FIG. 6801
HOSE PIPING

6801

FV

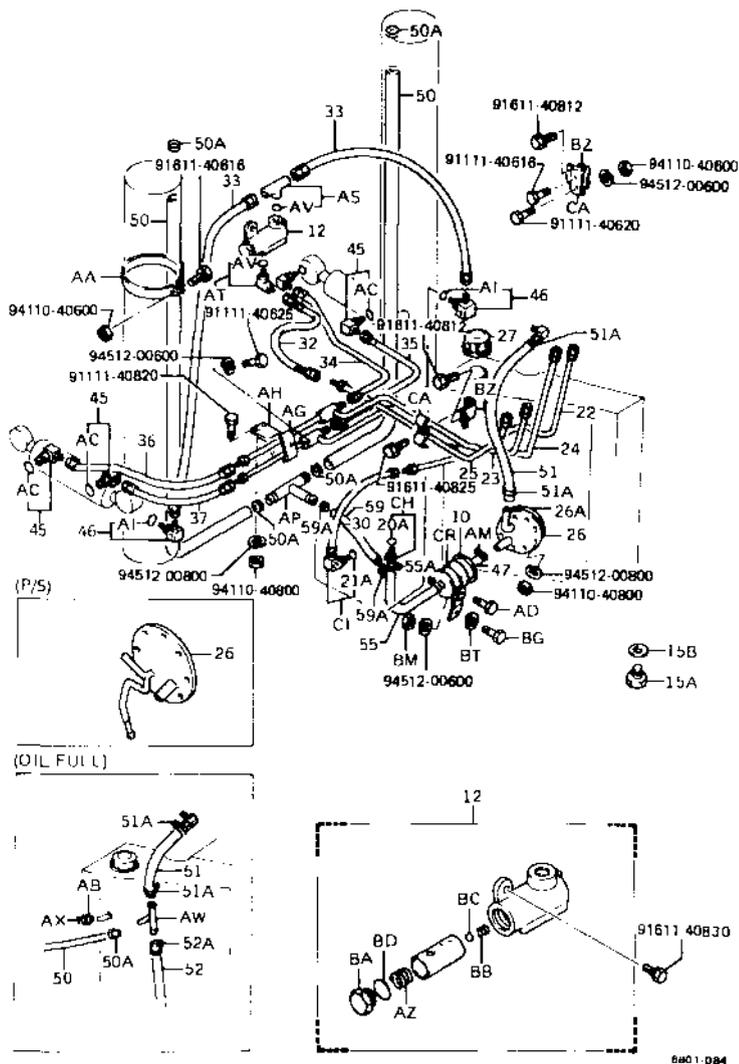

PART NAME CODE	PART NAME	QTY
6801-10	FILTER ASSY, SUCTION	1
6801-12	VALVE ASSY, FLOW REGULATOR	1
6801-15A	PLUG (FOR OIL TANK DRAIN)	1
6801-15B	GASKET (FOR OIL TANK DRAIN PLUG)	1
6801-20A	RING, O (FOR OIL PUMP INLET)	1
6801-21A	RING, O (FOR OIL PUMP OUTLET)	1
6801-22	PIPE SUB-ASSY (PUMP TO VALVE)	1
6801-23	PIPE SUB-ASSY (TILT CYLINDER FRONT)	1
6801-24	PIPE SUB-ASSY (TILT CYLINDER REAR)	1
6801-25	PIPE SUB-ASSY (VALVE TO LIFT CYLINDER)	1
6801-26	OUTLET SUB-ASSY, OIL TANK	1
6801-26A	PACKING, OIL TANK COVER	1
6801-27	CAP SUB-ASSY, OIL TANK	1
6801-30	HOSE, HIGH PRESSURE, NO.1 (PUMP TO VALVE)	1
6801-32	HOSE, HIGH PRESSURE, NO.1 (VALVE TO LIFT)	1
6801-33	HOSE, HIGH PRESSURE, NO.2 (VALVE TO LIFT)	2
6801-34	HOSE, HIGH PRESSURE, NO.1 (TILT FRONT)	1
6801-35	HOSE, HIGH PRESSURE, NO.1 (TILT REAR)	1
6801-36	HOSE, HIGH PRESSURE, NO.2 (TILT FRONT)	1
6801-37	HOSE, HIGH PRESSURE, NO.2 (TILT REAR)	1
6801-45	FITTING (FOR TILT CYLINDER)	4
6801-46	FITTING (FOR LIFT CYLINDER)	2
6801-47	HOSE, LOW PRESSURE (TANK TO FILTER)	1
6801-50	HOSE, LOW PRESSURE, NO.1 (LIFT TO TANK)	1-2
6801-50A	CLAMP (FOR LIFT TO TANK NO.1 HOSE)	2-4
6801-51	HOSE, LOW PRESSURE, NO.1 (VALVE TO TANK)	1
6801-51A	CLAMP (FOR VALVE TO TANK NO.1 HOSE)	2
6801-55	HOSE, LOW PRESSURE (TANK TO PUMP)	1
6801-55A	CLAMP (FOR TANK TO PUMP HOSE)	2
6801-AB	CLAMP	1
6801-AC	RING, D	4
6801-AD	BOLT	1
6801-AG	CLAMP	1
6801-AH	BRACKET SUB-ASSY, TILT HOSE	1
6801-AI	RING, O	2
6801-AM	CLAMP, HOSE	2
6801-AS	FITTING	1
6801-AT	FITTING	1
6801-AV	RING, O	2
6801-AX	CAP, OIL TANK OVERFLOW PIPE	1
6801-AZ	SPRING, COMPRESSION	1
6801-BA	PLUG	1
6801-BB	SPRING, COMPRESSION	1
6801-BC	BALL, STEEL	1
6801-BD	RING, O	1
6801-BG	BOLT	1
6801-BM	NUT	1
6801-BT	WASHER	1
6801-BZ	PLATE	1
6801-CA	PLATE	1
6801-CH	FITTING	1
6801-CI	FITTING	1
6801-CR	BRACKET, OIL FILTER	1

(FV) (11)

G201

6801


084

6201 001-0257

FIG. 6802
MAST PIPING

6802

FV

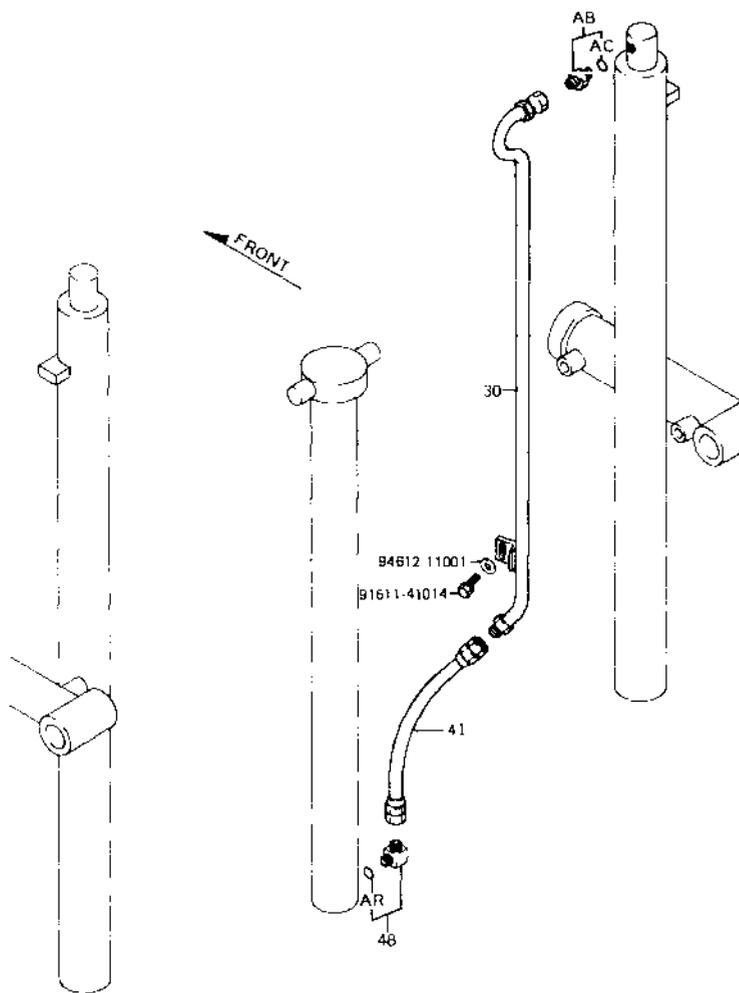

PART NAME CODE	PART NAME	QTY
6802-30	PIPE SUB-ASSY, NO.1 (FRONT LIFT) -----	1
6802-41	HOSE, HIGH PRESSURE, NO.1 (FRONT LIFT) -----	1
6802-48	FITTING (FOR FRONT LIFT CYLINDER) -----	1
6802-AB	FITTING -----	1
6802-AR	RING, O -----	1

6802 165

(FV) (12)


G201

MEMO

FIG. 6101
MAST

6101

v

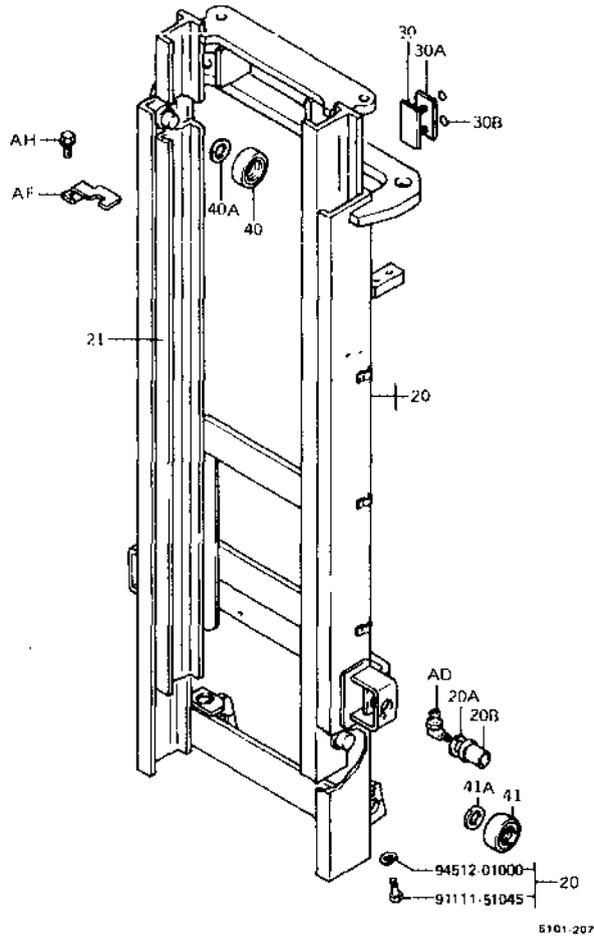

PART NAME CODE	PART NAME	QTY
6101-20	MAST SUB-ASSY, OUTER	1
6101-20A	SHIM	99
6101-20B	BUSH, MAST SUPPORT	2
6101-21	MAST SUB-ASSY, INNER	1
6101-30	STRIP SUB-ASSY, OUTER MAST	2
6101-30A	SHIM, OUTER MAST STRIP	99
6101-30B	RING, O (FOR OUTER MAST STRIP)	4
6101-40	ROLLER, LIFT (FOR OUTER MAST)	2
6101-40A	SHIM, LIFT ROLLER (FOR OUTER MAST)	99
6101-41	ROLLER, LIFT (FOR INNER MAST)	2
6101-41A	SHIM, LIFT ROLLER (FOR INNER MAST)	99
6101-AD	FITTING, GREASE	2
6101-AF	COVER, ROLLER	2
6101-AH	BOLT	4



(V) (1)

G201

FIG. 6301
LIFT BRACKET & FORK

6301

V

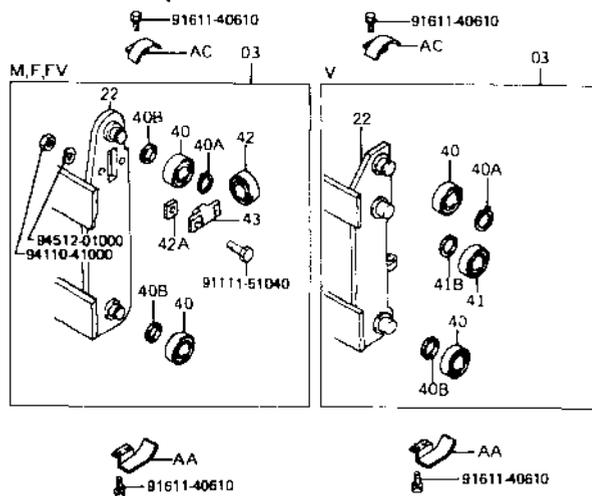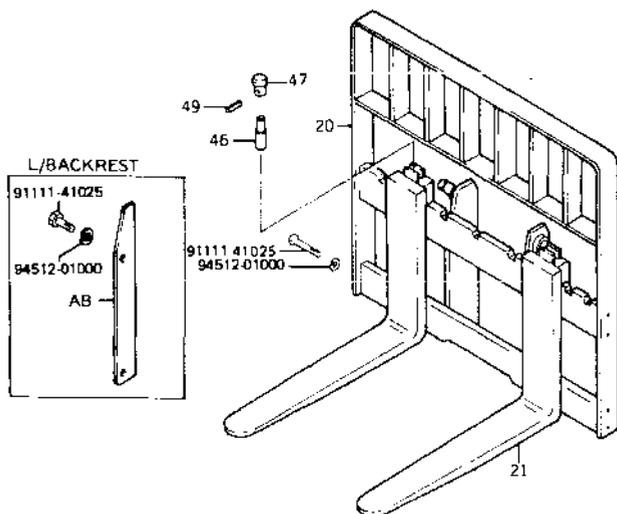

6301-085A

PART NAME CODE	PART NAME	QTY
6301-03	BRACKET ASSY. LIFT -----	1
6301-20	BACKREST SUB-ASSY -----	1
6301-21	FORK SUB-ASSY -----	2
6301-22	BRACKET SUB-ASSY, LIFT -----	1
6301-40	ROLLER, LIFT (UPPER, LOWER) -----	4
6301-40A	RING, SHAFT SNAP (UPPER, LOWER) -----	2
6301-40B	SHJM, LIFT ROLLER -----	99
6301-41	ROLLER, LIFT (CENTER) -----	2
6301-41B	SHJM (CENTER) -----	99
6301-46	PIN, FORK STOPPER -----	2
6301-47	KNOB, FORK STOPPER PIN -----	2
6301-49	PIN, SPRING (FOR FORK STOPPER PIN) -----	2
6301-AA	COVER, LIFT BRACKET ROLLER -----	1
6301-AC	COVER, LIFT BRACKET ROLLER -----	2


(V) (2)

G201

FIG. 6302
CHAIN & CHAIN WHEEL

6302

V

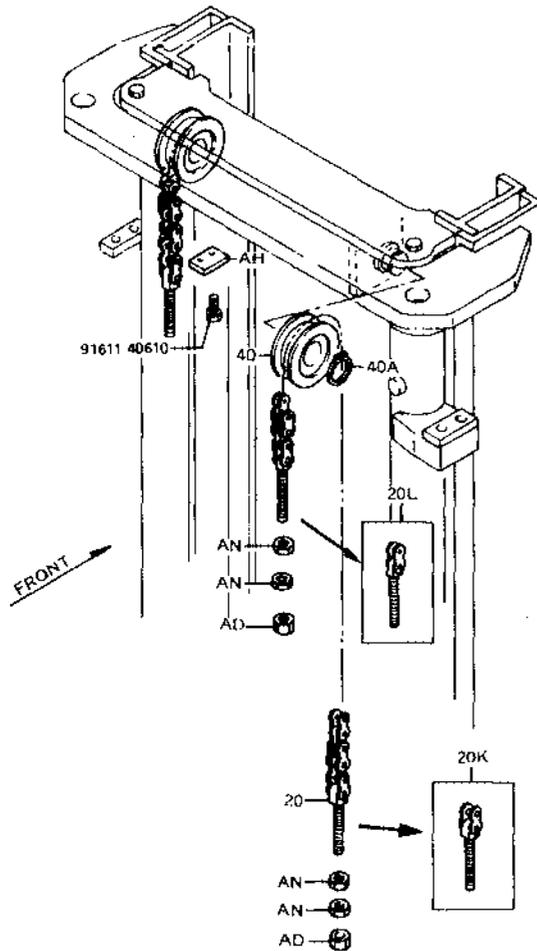

6302 134

PART NAME CODE	PART NAME	QTY
6302-20	CHAIN SUB-ASSY -----	2
6302-20K	BOLT KIT, CHAIN ANCHOR, NO.1 -----	2
6302-20L	BOLT KIT, CHAIN ANCHOR, NO.2 -----	2
6302-40	WHEEL, CHAIN -----	2
6302-40A	RING, SHAFT SNAP (FOR CHAIN WHEEL) -----	2
6302-AD	NUT, HEXAGON -----	4
6302-AH	COVER, CHAIN WHEEL -----	2
6302-AL	COVER, CHAIN WHEEL -----	8


(V) (3)

G201

FIG. 6501
LIFT CYLINDER

6501

V

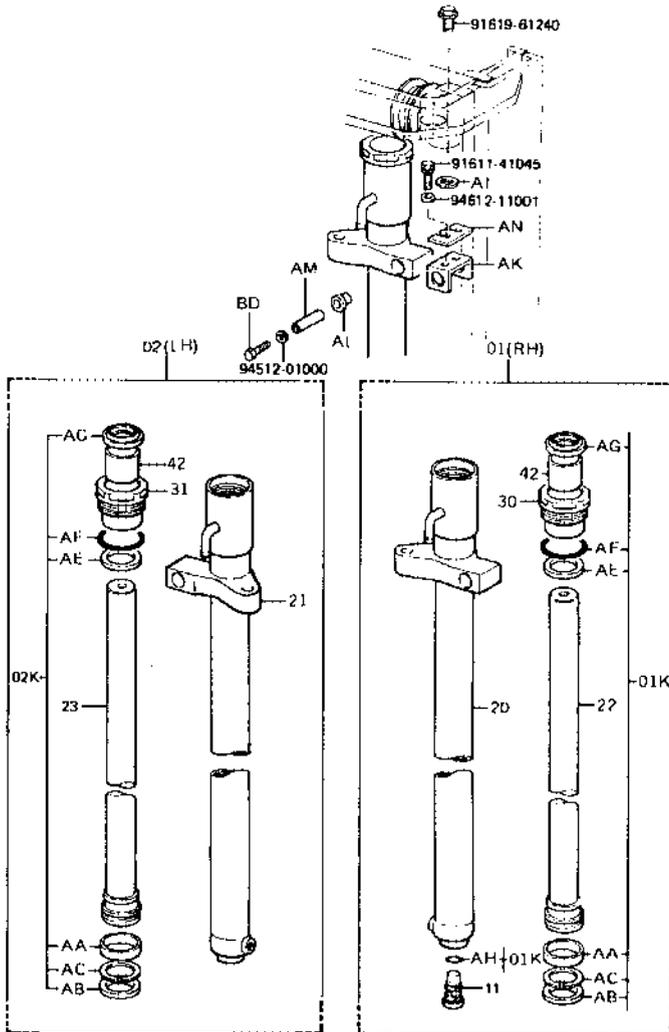

6501 034

PART NAME CODE	PART NAME	QTY
6501-01	CYLINDER ASSY, LIFT, RH	1
6501-01K	CYLINDER O/H KIT, LIFT, RH	1
6501-02	CYLINDER ASSY, LIFT, LH	1
6501-02K	CYLINDER O/H KIT, LIFT, LH	1
6501-11	VALVE ASSY, SAFETY DOWN	1
6501-20	CYLINDER SUB-ASSY, LIFT, RH	1
6501-21	CYLINDER SUB-ASSY, LIFT, LH	1
6501-22	ROD SUB-ASSY, LIFT CYLINDER, RH	1
6501-23	ROD SUB-ASSY, LIFT CYLINDER, LH	1
6501-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD, RH	1
6501-31	GUIDE SUB-ASSY, LIFT CYLINDER ROD, LH	1
6501-42	SLEEVE, LIFT CYLINDER ROD GUIDE	2
6501-AA	RING, WEAR	2
6501-AB	PACKING, U	2
6501-AC	RING, BACK UP	2
6501-AE	PACKING, U	2
6501-AF	RING, O	2
6501-AG	SEAL, DUST	1- 2
6501-AH	RING, O	1
6501-AI	SHIM	99
6501-AK	BRACKET SUB-ASSY, LIFT CYLINDER	2
6501-AL	BUSHING	4
6501-AM	SPACER	2
6501-AN	SHIM	99
6501-BO	BOLT	2


(V) (4)

G201

FIG. 6511
TILT CYLINDER

6511

v

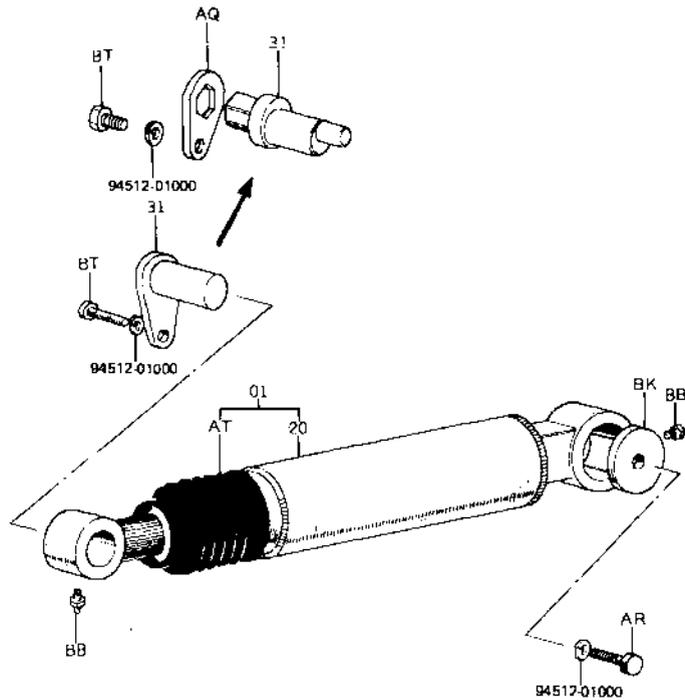

6511-054A

PART NAME CODE	PART NAME	QTY
6511-01	CYLINDER ASSY, TILT -----	2
6511-20	CYLINDER SUB-ASSY, TILT -----	2
6511-31	PIN SUB-ASSY, TILT CYLINDER, FR -----	2
6511-AQ	PLATE, STOPPER -----	2
6511-AR	BOLT -----	2
6511-AT	BOOT SUB-ASSY -----	2
6511-BB	FITTING, GREASE -----	4
6511-BK	PLATE -----	2
6511-BT	BOLT -----	2

(V) (6) G201



MEMO

FIG. 6701
BILGE PUMP

6701

7.-V

9.-V

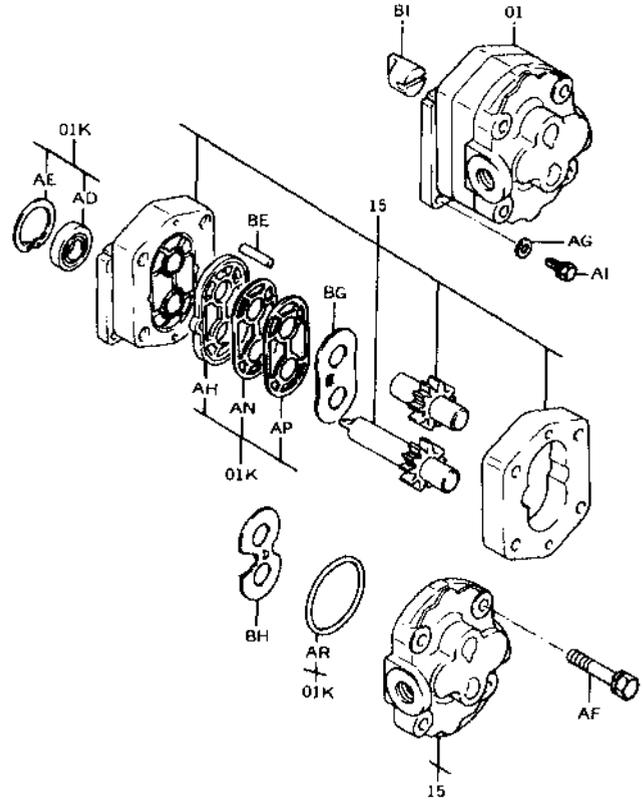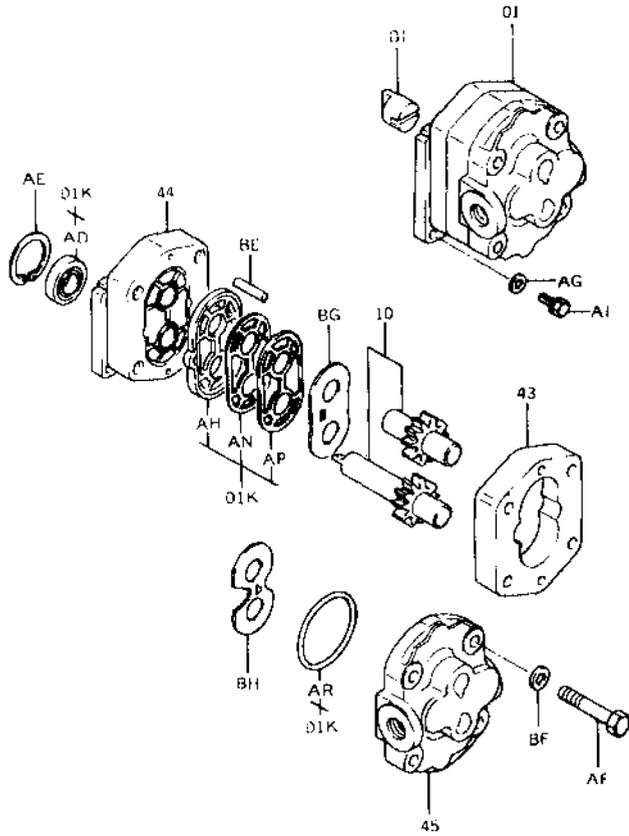

6701-063

6701-062

6701

062

063

6701-001-0284

6701

PART NAME CODE	PART NAME	QTY
6701-01	PUMP ASSY, OIL -----	1
6701-01K	PUMP O/H KIT, OIL -----	1
6701-10	GEAR SET -----	1
6701-15	BODY & GEAR SET -----	1
6701-43	BODY -----	1
6701-44	FLANGE, MOUNTING -----	1
6701-45	COVER -----	1
6701-AD	SEAL, OIL -----	1
6701-AE	RING, SNAP -----	1
6701-AF	BOLT -----	4
6701-AH	SEAL, BODY -----	1
6701-A1	BOLT -----	4
6701-AN	GASKET -----	1
6701-AP	GASKET -----	1
6701-AR	RING, O -----	1
6701-BE	PIN -----	2
6701-BF	WASHER -----	4
6701-BG	PLATE, SIDE, A -----	1
6701-BH	PLATE, SIDE, B -----	1
6701-BI	JOINT, OLOHAM -----	1

(V) (7)



G201

FIG. 6705
DIL CONTROL VALVE

6705

V (3-WAY)

V (3-WAY)

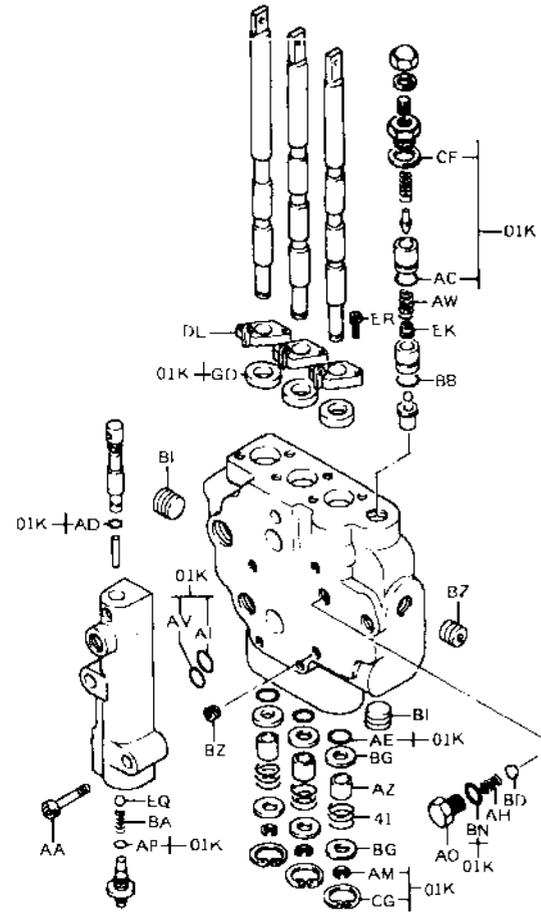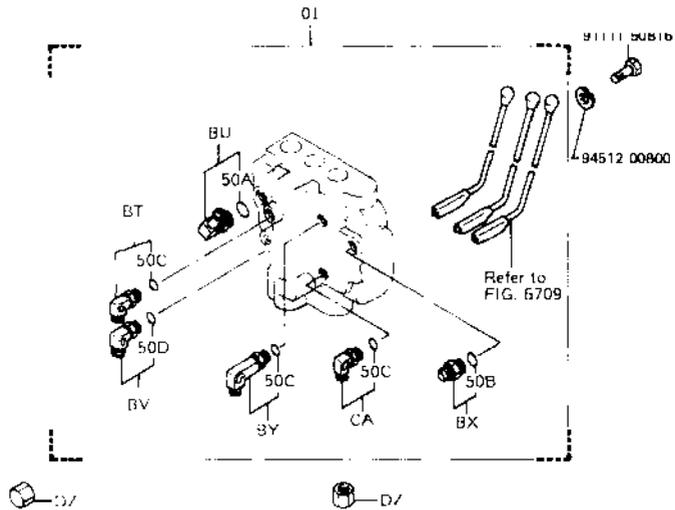

6705 229

6705-224

6705


PART NAME CODE	PART NAME	QTY
6705-D1	VALVE ASSY, OIL CONTROL -----	1
6705-D1K	VALVE O/H KIT, OIL CONTROL -----	1
6705-41	SPRING, COMPRESSION (FOR SPOOL RETURN) -----	2
6705-50A	RING, O, NO.1 (FOR VALVE FITTING) -----	1
6705-50B	RING, O, NO.2 (FOR VALVE FITTING) -----	1
6705-50C	RING, O, NO.3 (FOR VALVE FITTING) -----	1
6705-50D	RING, O, NO.4 (FOR VALVE FITTING) -----	1
6705-AA	BOLT -----	3
6705-AC	RING, O -----	1
6705-AD	RING, O -----	1
6705-AE	RING, O -----	2
6705-AH	SPRING, COMPRESSION -----	1
6705-AI	RING, O -----	1
6705-AM	RING, SHAFT SNAP -----	2
6705-AD	PLUG -----	1
6705-AP	RING, O -----	1
6705-AV	RING, O -----	2
6705-AW	SPRING, COMPRESSION -----	1
6705-AZ	COLLAR -----	2
6705-BA	SPRING, COMPRESSION -----	1
6705-BB	WIRE, ORIFICE TURNING -----	1
6705-BD	PLUNGER, CHECK -----	1
6705-BG	WASHER -----	4
6705-BI	PLUG -----	2
6705-BN	RING, O -----	1
6705-BT	FITTING -----	1
6705-BU	FITTING -----	1
6705-BV	FITTING -----	1
6705-BX	FITTING -----	1
6705-BY	FITTING -----	1
6705-RZ	PLUG -----	4
6705-CA	FITTING -----	1
6705-CF	SEAL -----	1
6705-CG	RING, HOLE SNAP -----	2
6705-DL	BRACKET, LEVER -----	2
6705-DT	NIPPLE, NO.1 -----	1
6705-DZ	PLUG -----	2
6705-EK	GUIDE -----	1
6705-EQ	BALL, STEEL -----	1
6705-ER	BOLT -----	4
6705-GD	SEAL, DUST -----	2

(V) (B) G201


FIG. 6709
OIL CONTROL VALVE LINK

6709

V (3-WAY)

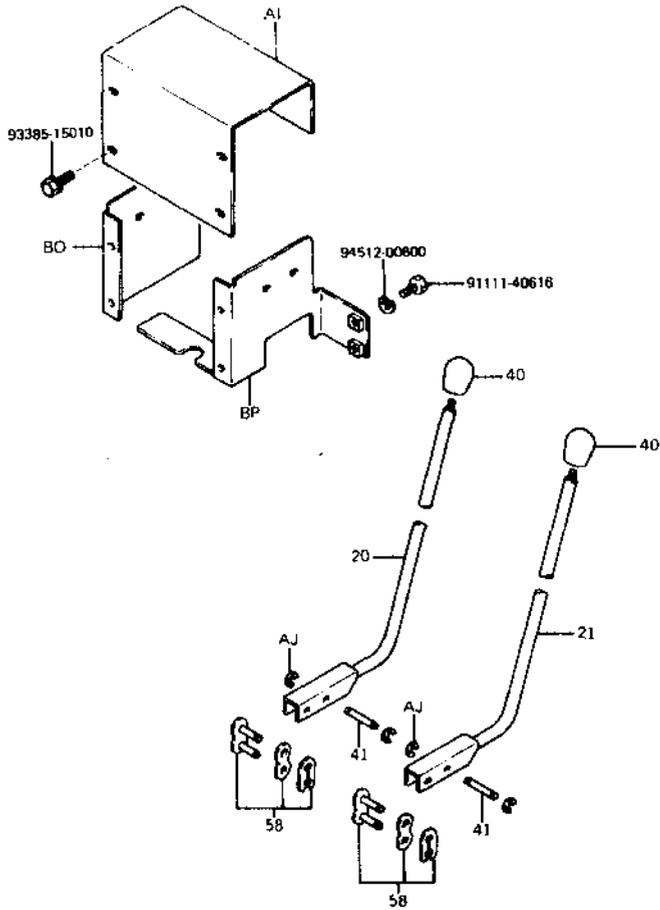

6709 052

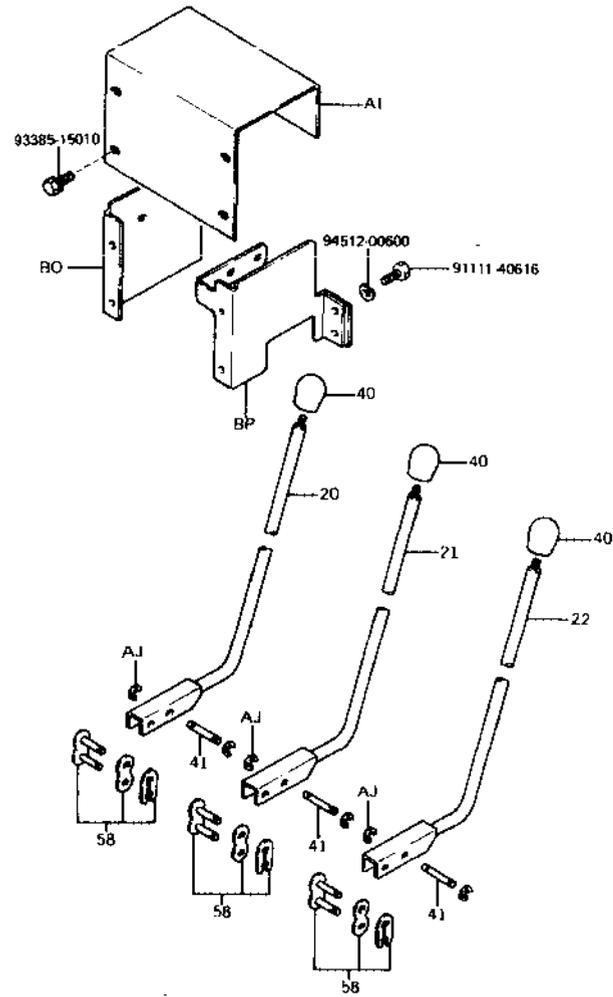

6709 053

6709

052

053

6201-001-0280

6709

PART NAME CODE	PART NAME	QTY
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1 -----	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2 -----	1
6709-22	LEVER SUB-ASSY, CONTROL VALVE, NO.3 -----	1
6709-40	KNOB, OIL CONTROL VALVE LEVER -----	1
6709-41	PIN, OIL CONTROL VALVE LEVER -----	2
6709-58	JOINT, SET LINK -----	2
6709-A1	COVER, CONTROL BOX -----	1
6709-AJ	RING, SNAP -----	4
6709-BP	BRACKET SUB-ASSY, LIMIT SWITCH TILT -----	1

(V) (9) G201

6801

PART NAME CODE	PART NAME	QTY
6801-BM	NUT -----	1
6801-BT	WASHER -----	1
6801-BZ	PLATE -----	1
6801-CA	PLATE -----	1
6801-CH	FITTING -----	1
6801-CI	FITTING -----	1
6801-CR	BRACKET, OIL FILTER -----	1

(V) (11)

6201

MEMO

MEMO

MEMO