

TOYOTA INDUSTRIAL VEHICLE

PARTS CATALOG

**5FBCU15
30-5FBCU15
No.G817-1**

MANUFACTURED BY
TOYOTA INDUSTRIAL EQUIPMENT MFG., INC.

**TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.**

TOYOTA

FORKLIFT TRUCK

PARTS CATALOG

MODEL	- 5FBCU
FRAME NO.	5FBCU15
ENGINE NO.	
LIFTING HEIGHT	mm

DESCRIPTION

Cold Storage Model Type 20S	
36V Electrical System	
48V Electrical System	

TOYOTA MOTOR CORPORATION

TOYODA AUTOMATIC LOOM WORKS, LTD.

QUICK REFERENCE INDEX

INTRODUCTION

ELECTRICAL

CHASSIS

BODY

ELECTRICAL

MAST

HYDRAULIC COMPONENT

CYLINDER & PIPING

ATTACHMENT (B)

GENERAL INFORMATION

This parts catalog has been prepared for the customers of Toyota Industrial Vehicles and this shows only the part name codes instead of parts numbers.

When ordering parts from your local Toyota dealer, please specify the complete model number of the truck, the engine number or frame number. Also it is essential that you specify the part name codes described in the pages of illustrations and text.

The complete model number and frame number are shown in the front page of this catalog. All the columns in this quick reference index are supposed to be filled out by both the factory and your local dealer.

For the industrial vehicle with optional equipment, which is described in the lower part of the DESCRIPTION, it is imperative for you to specify optional equipment when ordering parts.

Your Toyota dealer has always been furnished with enough information to decode the correct part numbers based on your information of model number, engine number or frame number as well as part name code.

INFORMATIONS D'ORDRE GENERAL

Ce catalogue de pièces a été préparé pour les propriétaires de Véhicules Industriels Toyota. On n'y trouvera que les codes de désignation de pièces au lieu des numéros de pièces.

Pour la commande de pièces auprès de votre concessionnaire Toyota, prière de spécifier le numéro de modèle complet de l'engin, le numéro du moteur ou le numéro du châssis. Il est aussi nécessaire de spécifier les codes de désignation de pièces comme ils sont décrits dans les pages d'illustrations et dans le texte.

Le numéro de modèle complet et le numéro de châssis sont indiqués en première page de ce catalogue. Toutes les colonnes de l'index de référence rapide devraient être remplies par l'usine et par votre concessionnaire.

Pour le véhicule industriel avec équipement optionnel, décrit en bas de page sous la rubrique "DESCRIPTION", il convient de bien spécifier qu'il s'agit de cet équipement lors de commande de pièces.

Votre concessionnaire Toyota est toujours suffisamment informé pour décoder les numéros de pièces sur la base de votre information du numéro de modèle, du numéro de moteur ou de châssis, et des codes de désignation de pièces.

INFORMACION GENERAL

Este catálogo de piezas ha sido preparado para los clientes de vehículos industriales de TOYOTA, e incluye tan sólo los códigos de nombre de pieza en lugar de los números de pieza.

Cuando solicite piezas a su distribuidor local de TOYOTA especifique por favor el número de modelo completo del vehículo, el número de motor o el número de bastidor. Asimismo, es esencial que Vd. especifique los códigos de nombre de pieza descritos en las páginas de ilustraciones y de texto.

El número completo de modelo y el número de bastidor se indican en la portada de este catálogo. Se supone que todas las columnas de este índice de referencia se han llenado, tanto por parte de la fábrica como por parte de su distribuidor local.

En lo que concierne a los vehículos industriales con equipos opcionales, que se describen en la parte baja de la DESCRIPCION, es absolutamente necesario que especifique equipos opcionales cuando solicite piezas de repuesto.

Su distribuidor local de TOYOTA posee la información necesaria para descifrar los números correctos de cada pieza a base de su información de número de modelo, número de motor o número de bastidor, así como el código de nombre de la pieza.

ALLGEMEINE INFORMATION

Dieser Teilkatalog wurde für die Benutzer von Toyota Industriefahrzeugen zusammengestellt und zeigt anstelle von Teilenummern nur die Teilenamen-Kodes.

Geben Sie bei Teilebestellungen von Ihrem Toyota-Händler am Platz bitte die vollständige Modellnummer des Fahrzeugs, die Motornummer oder Fahrgestellnummer an. Es ist auch erforderlich, daß Sie die in den Illustrationen und im Text beschriebenen Teilenamen-Kodes angeben.


Die vollständige Modellnummer und Fahrgestellnummer finden Sie auf der Vorderseite dieses Katalogs. Alle Spalten in dieser Bezugstabelle sollen sowohl vom Werk als von Ihrem Händler am Platz ausgefüllt werden.

Für Industriefahrzeuge mit Sonderausstattung, welche im unteren Teil der BESCHREIBUNG erläutert ist, müssen Sie bei der Bestellung von Teilen unbedingt diesbezügliche Angaben machen.

Ihr Toyota-Händler verfügt stets über genügend Information, um die richtigen Teilenummern zu entschlüsseln, basiert auf Ihren Angaben zu Modellnummer, Motornummer oder Fahrgestellnummer und den Teilenamen-Kodes.

ILLUSTRATION AND PART NAME CODE TEXT PAGE COMPOSITION

Essentially, one (1) page will present both the illustration and part name code. However, when the space for text page is not enough the next page will be used in succession.

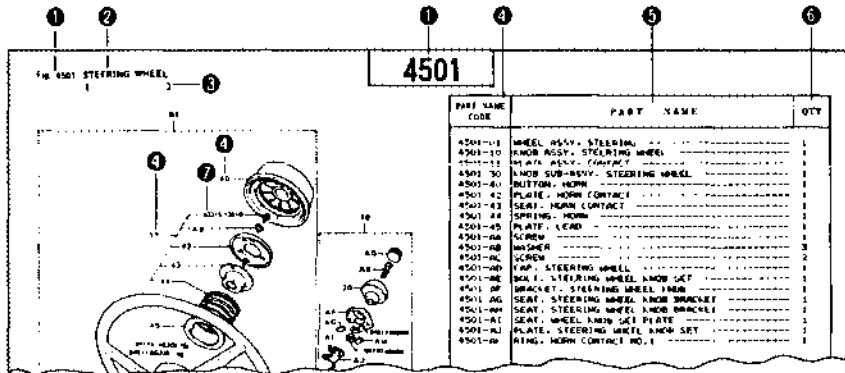

- ① Figure number
This parts catalog has been prepared according to the figure numbers.
- ② Figure title
A representative part name which is the major assembly part name is shown as the figure title of the illustration.
- ③ Sub title
The optional name or special specification of each illustration are indicated.
- ④ Part name code
This is a combination of figure number and codes of illustrations pertaining to each part. This is a key for your Toyota dealer to find the correct part numbers.
- ⑤ Part name
As a rule, the part name is indicated for each of the part name codes.
- ⑥ QTY (Quantity)
The quantity column indicates the utilized pieces of part name code unit. When the utilized quantity changes according to each of the vehicles, maximum is indicated.
When the utilized quantity of the parts differs or is more than 100 pieces, quantity 99 is indicated.
- ⑦ Standard parts numbers
The standard parts such as the bolts, nuts, washer, etc. are described with parts numbers. When ordering these parts, specify parts numbers.


COMPOSICION DE LAS PAGINAS DE ILUSTRAZIONES Y DE TEXTO DE CODIGOS DE NOMBRE DE PIEZAS

Básicamente, una (1) página incluirá tanto la ilustración como el código de nombre de la pieza.
No obstante, si el espacio no fuese suficiente, se utilizará la página siguiente.

- ① Número de figura
Este catálogo de piezas se ha preparado de acuerdo con los números de las figuras.
- ② Título de las figuras
Como título de las figuras de la página de ilustraciones, se incluye un nombre que sea representativo del nombre del mayor conjunto.
- ③ Subtítulo
Se indican el nombre opcional o las especificaciones especiales de cada ilustración.
- ④ Código de nombre de pieza
Se trata de una combinación de número de figura y de código de las ilustraciones correspondientes a cada pieza. Esta es la clave para que su distribuidor local de TOYOTA pueda encontrar el número de pieza correcto.
- ⑤ Nombre de la pieza
Como norma, se indica el nombre de cada uno de los códigos de nombre de pieza.
- ⑥ Cantidad (Cantidad)
La columna de cantidad indica el número de piezas utilizadas de cada unidad de código de nombre de pieza.
Cuando la cantidad utilizada es intercambiable entre cada uno de los vehículos, se indica el máximo.
Cuando la cantidad de piezas utilizadas pueda diferir o ser superior a 100, se indica como cantidad 99.
- ⑦ Números de piezas normalizadas
Las piezas corrientes, tales como pernos, tuercas, arandelas etc., se describen con número de pieza. Cuando solicite tales piezas, indique su número de pieza.

ILLUSTRATION ET COMPOSITION DU DE TEXTE DE CODE DE DESIGNATION DE PIECE

Une (1) page contiendra essentiellement une illustration et ses codes de désignation de pièce. Toutefois, lorsque l'espace réservé au texte est insuffisant, la continuation se trouvera sur la page suivante.

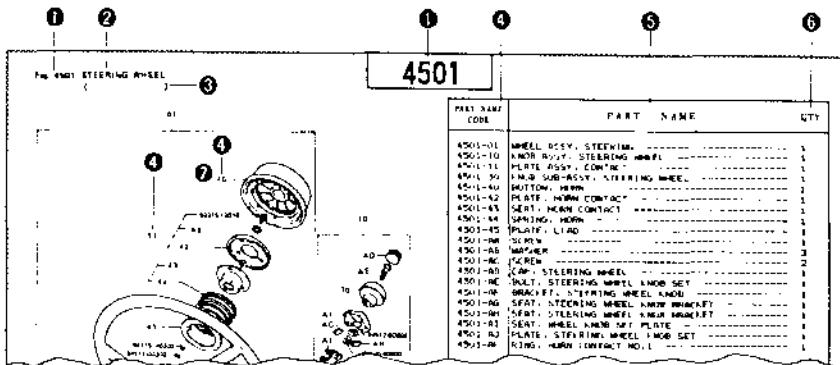

- ① Numéro de figure
Ce catalogue de pièces a été préparé en fonction des numéros de figures.
- ② Titre de figure
Une désignation de pièce représentative, celle d'une pièce d'un ensemble important, est indiquée comme titre de figure de l'illustration.
- ③ Sous-titre
La désignation optionnelle ou les spécifications spéciales de chaque illustration sont indiquées.
- ④ Code de désignation de pièce
Obtenu en combinant le numéro de figure et les codes des illustrations inhérents à chaque pièce. Ce code permettra à votre concessionnaire Toyota de trouver les numéros de pièces corrects.
- ⑤ Désignation de pièce
La désignation de la pièce est indiquée pour chacun des codes de désignation de pièce.
- ⑥ Q'ty (quantité)
La colonne quantité indique les pièces utilisées de l'unité de code de désignation de pièce. La quantité maximum est indiquée quand la quantité utilisée diffère pour chaque des véhicules. Quand la quantité de pièces utilisées diffère ou jusqu'à elle dépasse 100 pièces, la quantité 99 est indiquée.
- ⑦ Numéros de pièces standard
Les pièces standard comme les boulons, les écrous, les rondelles, etc. sont décrits dans les numéros de pièces. Pour commander ces pièces, prière de spécifier les numéros de pièces.

ABBILDUNG UND TEXTSEITENAUFBAU FÜR TEILENAMEN-KODE

Grundsätzlich finden Sie auf einer (1) Seite sowohl die Abbildung als auch den Teilenamen-Kode.

Wenn für den Text jedoch nicht genügend Platz vorhanden ist, wird er auf der nächsten Seite fortgesetzt.

- ① Abbildungsnummer
Dieser Teilekatalog wurde nach Abbildungsnummern zusammengestellt.
- ② Abbildungstitel
Ein stellvertretender Teilename, welcher zugleich die Bezeichnung für die Hauptbaugruppe ist, wird als Abbildungstitel der Illustration angegeben.
- ③ Untertitel
Ein zusätzlicher Name oder eine besondere Kennzeichnung werden für jede Illustration angegeben.
- ④ Teilenamen-Kode
Dies ist eine Kombination von Ziffern und Abbildungskodes, die jedes Teil betreffen. Es ist ein Schlüssel für Ihren Toyota-Händler, um die richtigen Teilenummern zu finden.
- ⑤ Teilename
Grundsätzlich wird der Teilename für alle Teilenamen-Kodes angegeben.
- ⑥ QTY (Menge)
Die Mengenspalte gibt die benutzte Stückzahl von Teilenamen-Kode-Einheiten an.
Wenn die benutzte Stückzahl je nach Fahrzeug verschieden ist, wird die Höchstmenge angegeben.
Wenn die benutzte Menge 100 Stück überschreiten kann, wird als Menge 99 angegeben.
- ⑦ Standardteile-Nummern
Die Standardteile, wie Schrauben, Muttern, Unterlegscheiben usw., sind in den Teilenummern beschrieben. Geben Sie bei Bestellung dieser Teile die Teilenummern an.

DATA PLATE & SERIAL NUMBERS

For retrieving correct part numbers, it's indispensable to know the truck model, as well as frame number (or engine number). Customers can obtain said information in the data plate on the truck or in this user parts catalog.

PLAQUE DE DONNEES TECHNIQUES & NUMEROS DE SERIE

Pour relever correctement le numéro des pièces, il est indispensable de connaître le modèle de l'engin, ainsi que le numéro du châssis (ou du moteur). Les propriétaires peuvent trouver ladite information sur la plaque de données techniques de l'engin ou dans le présent ouvrage.

Data plate
Placa de datos
Plaque de données techniques
Datenplatte


TOYOTA ELECTRIC FORKLIFT TRUCK		M A S T	
MODEL	SERIAL NO.	BACK TILT	
TYPE:	VOLTAGE	V. ATCH.	
FRONT TREAD	IN.	TIRE FR.	
MAX. AMPERE HOURS CAPACITY	AH	SIZE RR	
BATTERY TYPE	EO	BATTERY WT MIN./MAX.	LB./
MAX. LIFTING HEIGHT "A"	IN.	IN.	LB.
RATED CAPACITY WITH VERTICAL UPRIGHT EQUIPPED AS SHOWN C A P A C I T Y, LOAD CENTER "B": THIS FORKLIFT TRUCK			
LB.	IN.	MEETS OR EXCEEDS DESIGN	
LB.	IN.	SPECIFICATIONS OF ASME	
LB.	IN.	ANSI B56.1 IN EFFECT ON	
THE DATE OF MANUFACTURE			
 WARNING <small>IMPROPER OPERATION OR MAINTENANCE COULD RESULT IN INJURY OR DEATH. TRAINED OPERATORS ONLY. READ OPERATOR'S MANUAL FIRST.</small>			
BLACK		ORANGE	

PLACA DE DATOS Y NUMEROS DE SERIE

Para obtener los números de pieza correctos, es indispensable conocer el modelo del vehículo, así como el número del bastidor (o del motor). Los clientes pueden obtener dicha información por la placa de datos del vehículo o este catálogo de piezas para el usuario.


DATENPLATTE & SERIENNUMMERN

Um die richtige Teilenummer zu ermitteln, müssen unbedingt das Fahrzeugmodell sowie die Fahrgestellnummer (oder die Motornummer) bekannt sein. Kunden können diese Angaben von der Datenplatte am Fahrzeug oder in diesem Teilkatalog für Benutzer entnehmen.


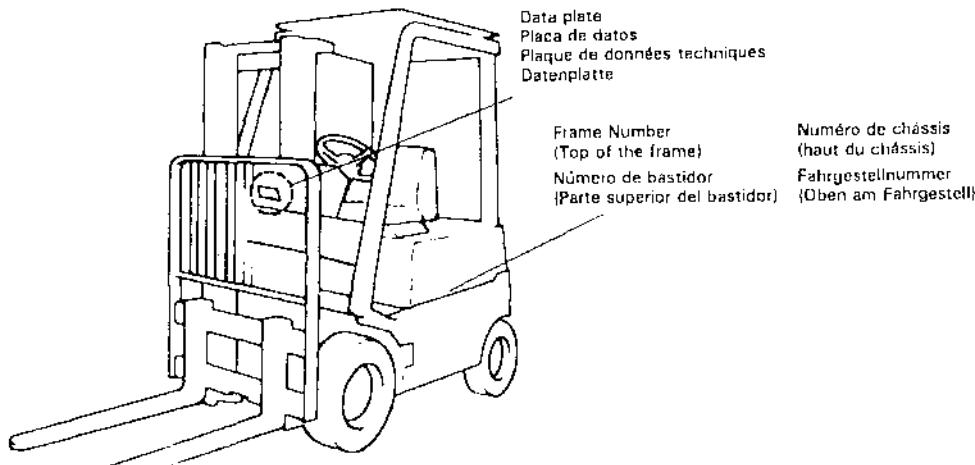


ILLUSTRATED INDEX
INDEX ILLUSTRE
ILLUSTRIRTES INHALTSVERZEICHNIS
INDICE ILLUSTRADO

FIG. INDEX

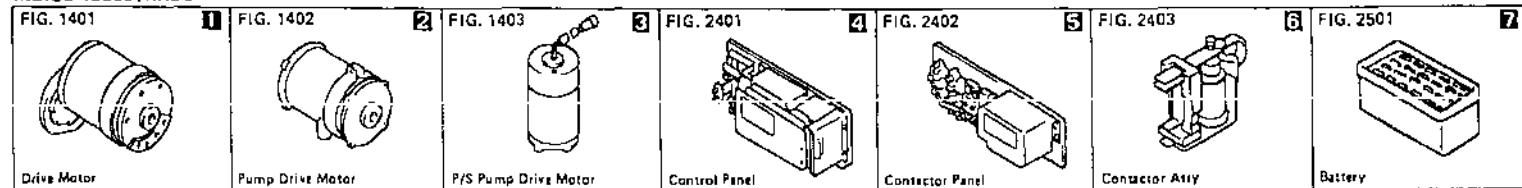


ELECTRICAL GROUP

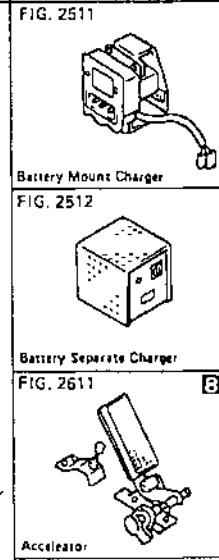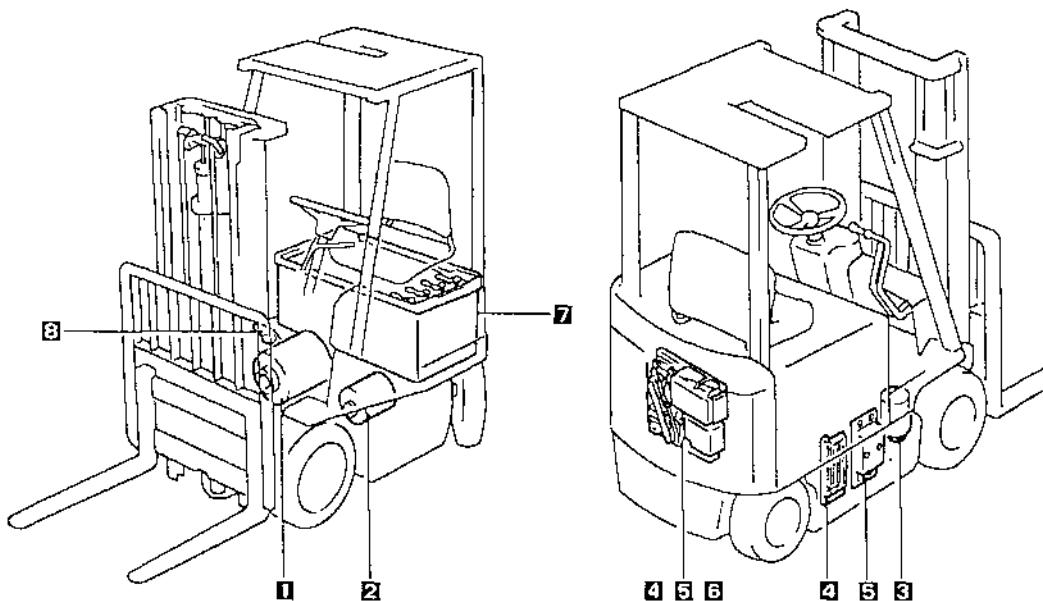

X-0000-525
G817-D01

ILLUSTRATED INDEX
INDEX ILLUSTRE
ILLUSTRIRTES INHALTSVERZEICHNIS
INDICE ILLUSTRADO

FIG. INDEX

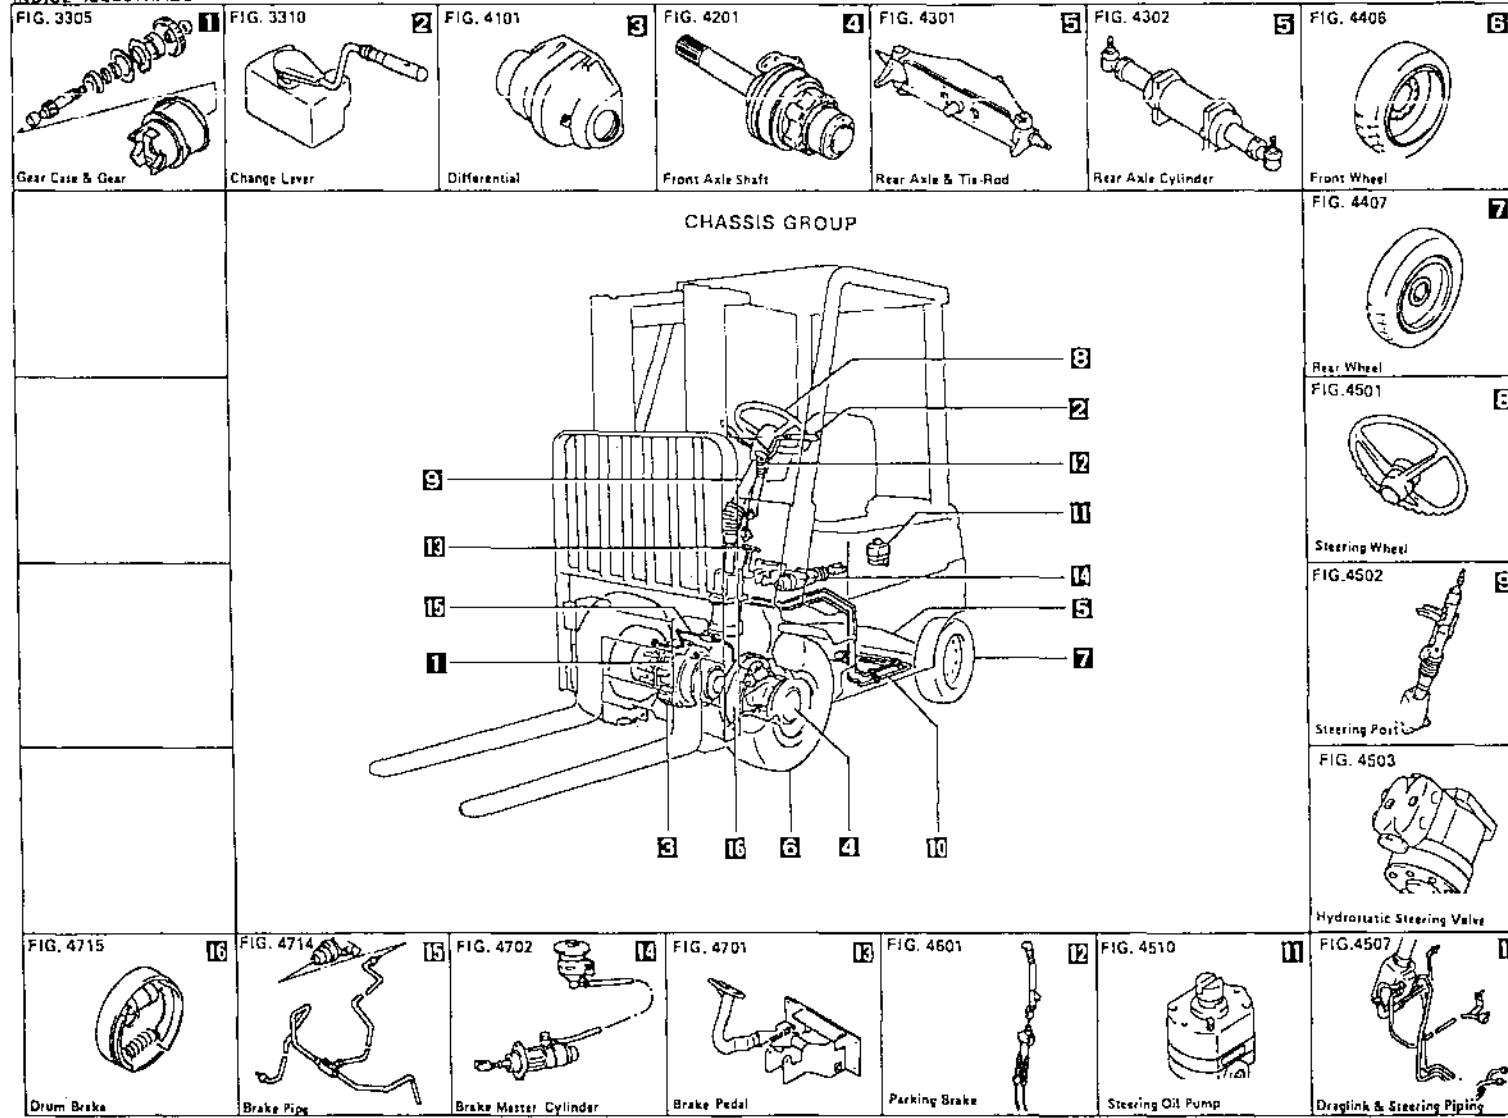

T-0000-526
G817-002

ILLUSTRATED INDEX


INDEX ILLUSTRE

ILLUSTRIRTES INHALTSVERZEICHNIS

INDICE ILLUSTRADO

FIG. INDEX

 FIG. 5101



Frame Weight

FIG. 5201



Hood & Hinge

FIG. 5301




Instrument Panel & Floor

FIG. 5308



Driver Seat

FIG. 5401

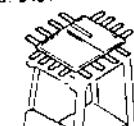

Head Guard & Accessory

FIG. 5405



Indicator Plate

FIG. 5602




Wiring & Clamp

FIG. 5611




Lamp

 FIG. 5612




Lamp Bracket

FIG. 5702

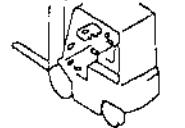


Meter & Switch

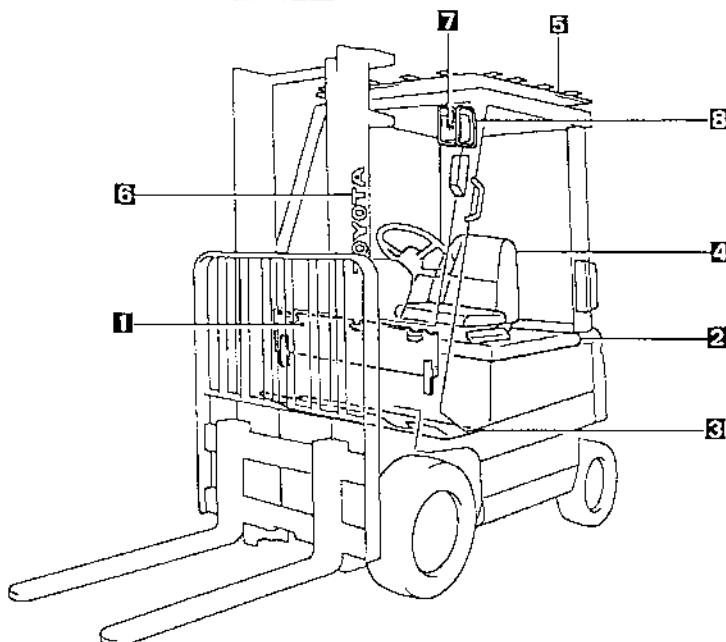v-0000-523
G817-003

ILLUSTRATED INDEX
INDEX ILLUSTRE
ILLUSTRATES INHALTSVERZEICHNIS
INDICE ILLUSTRADO

FIG. INDEX

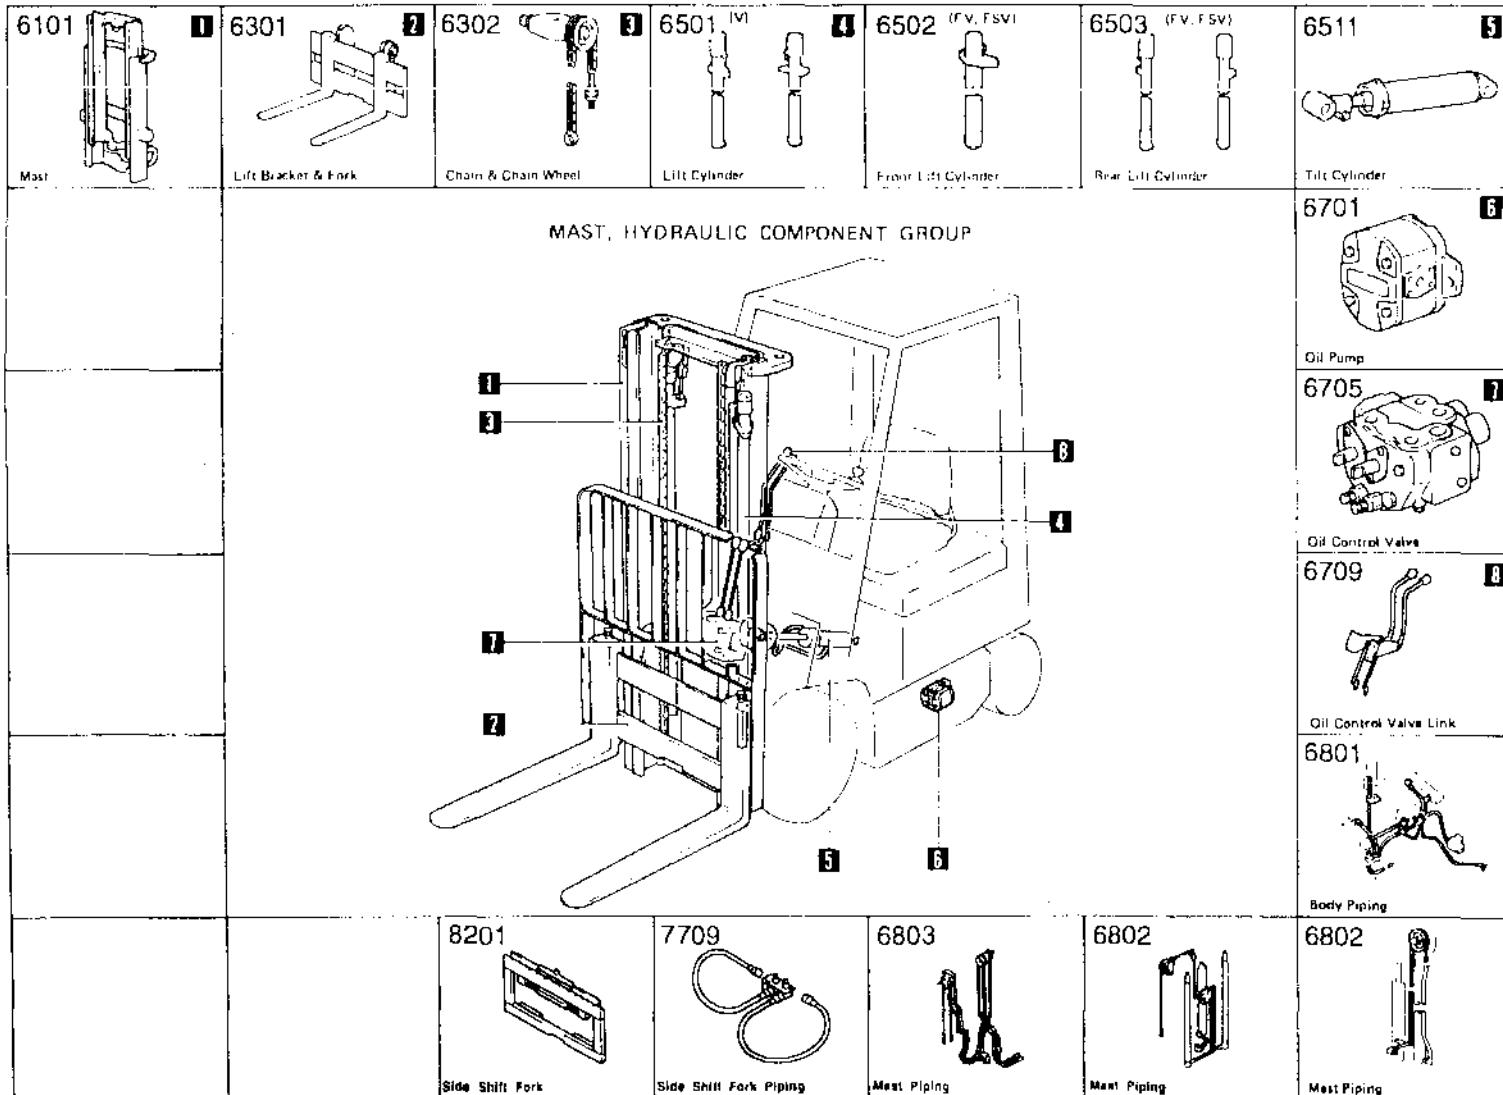

0000-602A
G817-004E


FIG. 1401
DRIVE MOTOR

1401


MAIN

97/05

DPR

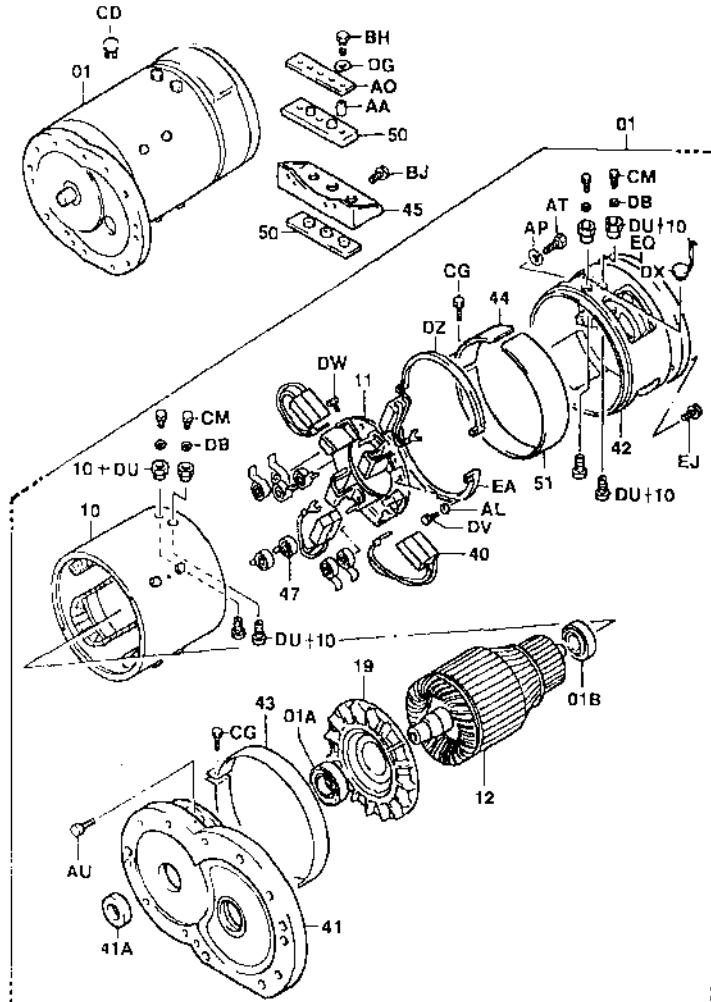

STM

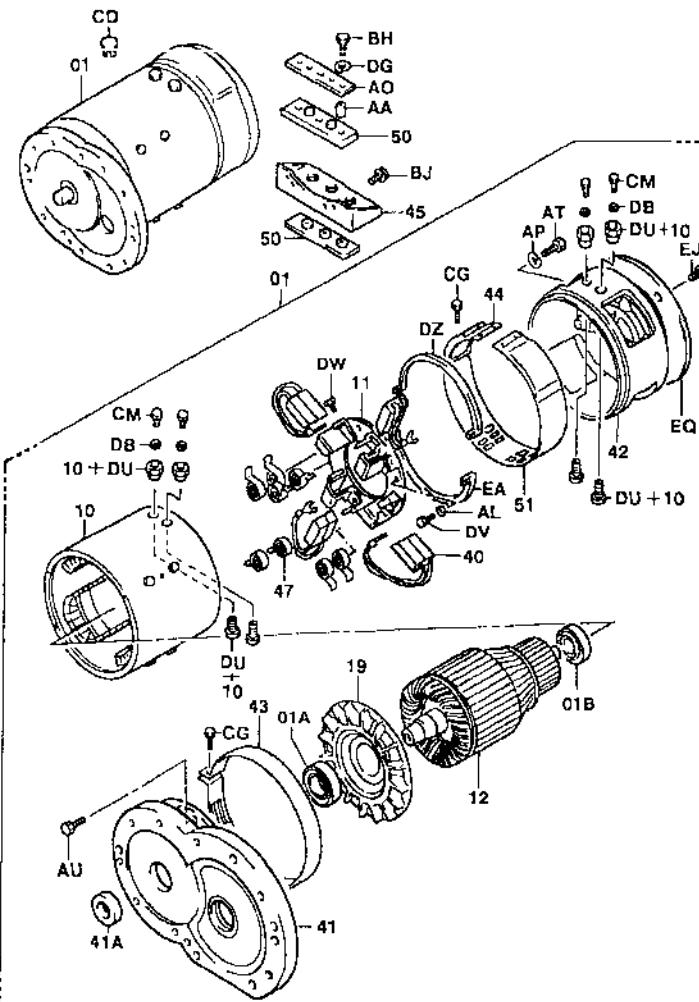

1401-114

1401-112

G817-001

1401-114


1401-112 000

FIG.1401
DRIVE MOTOR


1401

MAIN 97/05

STM (BRUSH WARNING)

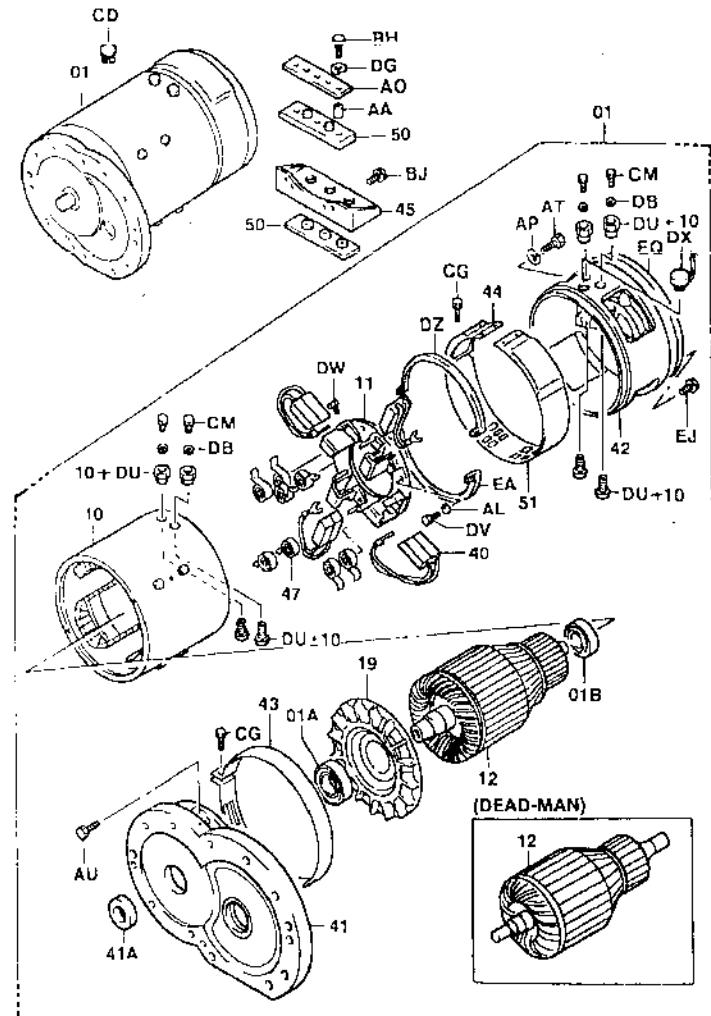

STM (DEAD-MAN)

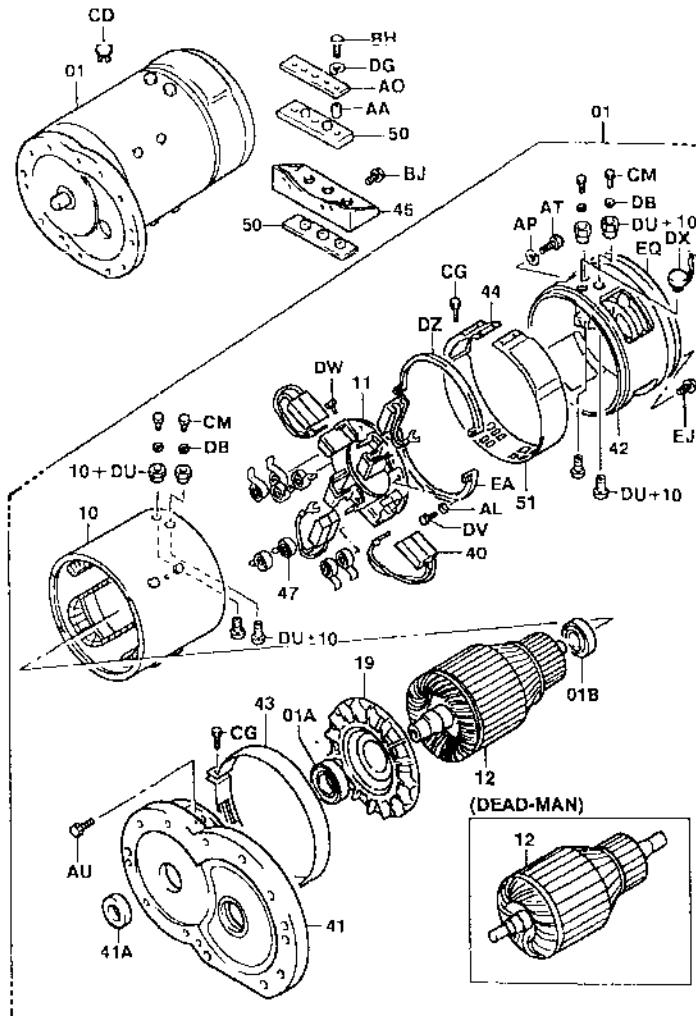

1401-113

1401-113

G817-002

1401-113


1401-113 0002

FIG. 1402
PUMP DRIVE MOTOR


1402

MAIN 97/05

OPR

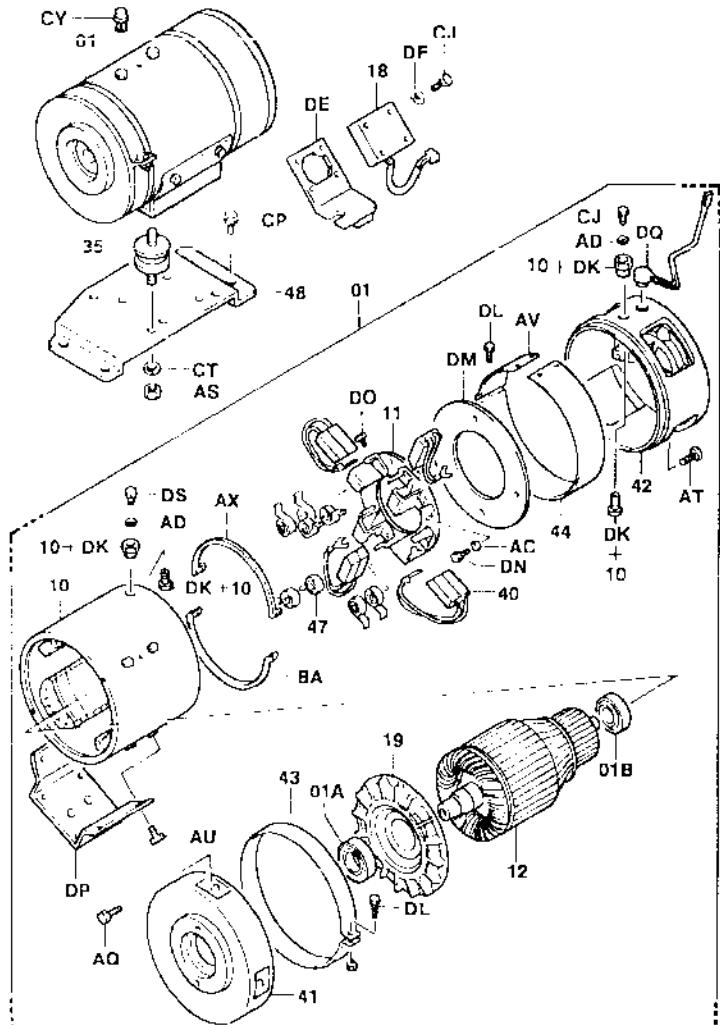

STM

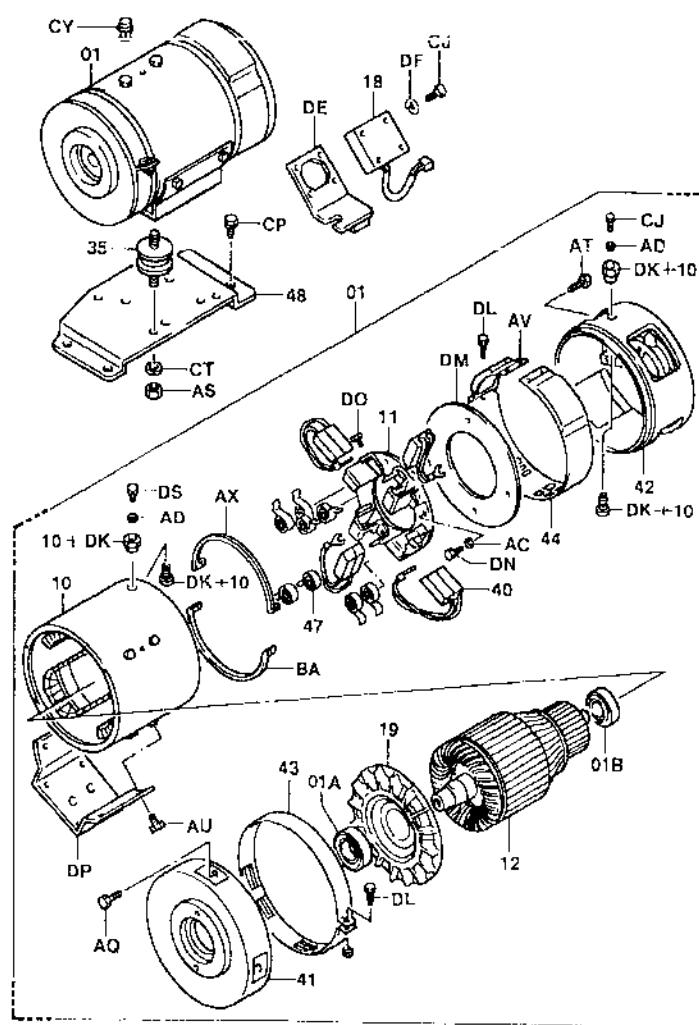

1402-102

1402-100A

G817-001


FIG. 1402
PUMP DRIVE MOTOR

1402

MAIN

97/05

STM (BRUSH WARNING)

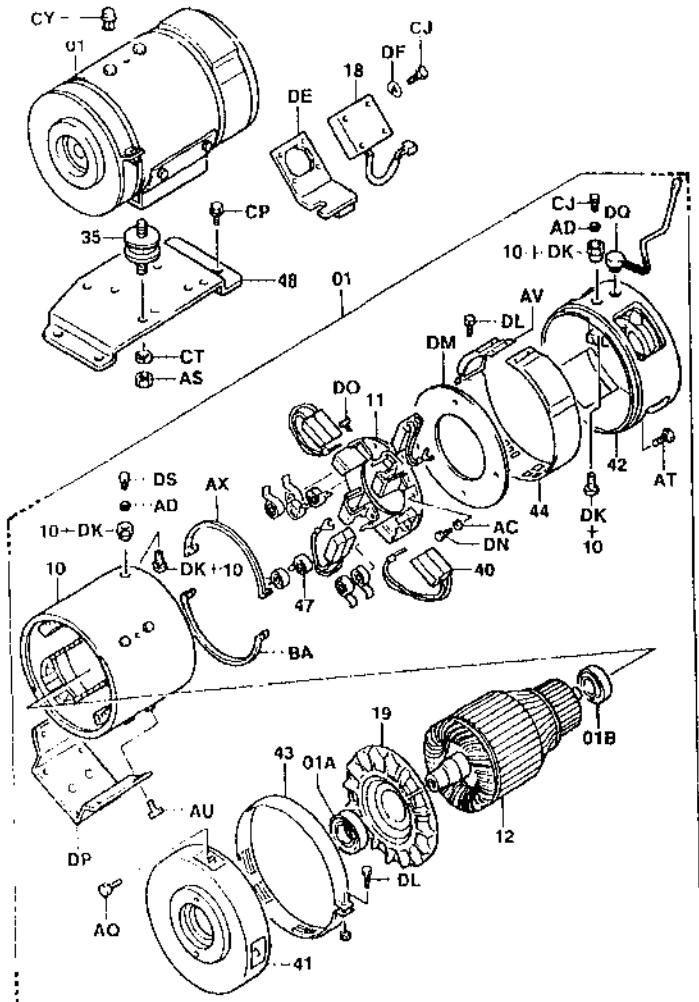

1402-101A

PART NAME CODE	PART NAME	QTY
1402-01	MOTOR ASSY, PUMP	1
1402-01A	BEARING, PUMP MOTOR, NO.1	1
1402-01B	BEARING, PUMP MOTOR, NO.2	1
1402-10	YOLKE ASSY, PUMP MOTOR	1
1402-11	HOLDER ASSY, PUMP MOTOR	1
1402-12	ARMATURE ASSY, PUMP MOTOR	1
1402-18	MOTOR ASSY, FAN	1
1402-19	FAN	1
1402-35	INSULATOR SUB-ASSY, MOTOR MOUNTING	2
1402-40	BRUSH, PUMP MOTOR	2- 4
1402-41	BRACKET, NO.1	1
1402-42	BRACKET, NO.2	1
1402-43	COVER, MOTOR	1
1402-44	COVER, BRUSH	1
1402-47	SPRING, PUMP MOTOR BRUSH	8
1402-48	PLATE, PUMP MOTOR SET	1
1402-AC	WASHER, PLATE	4
1402-AD	WASHER, SPRING	4
1402-AQ	BOLT	1
1402-AS	NUT	4
1402-AT	BOLT	4
1402-AU	BOLT	4
1402-AV	COVER	1
1402-AX	CLAMP	1
1402-BA	CLAMP	1
1402-CJ	SCREW	4
1402-CP	BOLT	3
1402-CT	WASHER, SPRING	4
1402-CY	PLUG	1
1402-DE	BRACKET, FAN	1
1402-DF	WASHER, SPRING	4
1402-OK	TERMINAL SET	2
1402-OL	SCREW	2
1402-OM	RING	1
1402-ON	SCREW	4
1402-OO	SCREW, W/WASHER	8
1402-OP	BRACKET, FOOT	1
1402-OQ	LEAD SET	1
1402-DS	SCREW	4

G817-002E


FIG.1403
POWER STEERING PUMP DRIVE MOTOR

1403


MAIN 95/04

DPR

STM

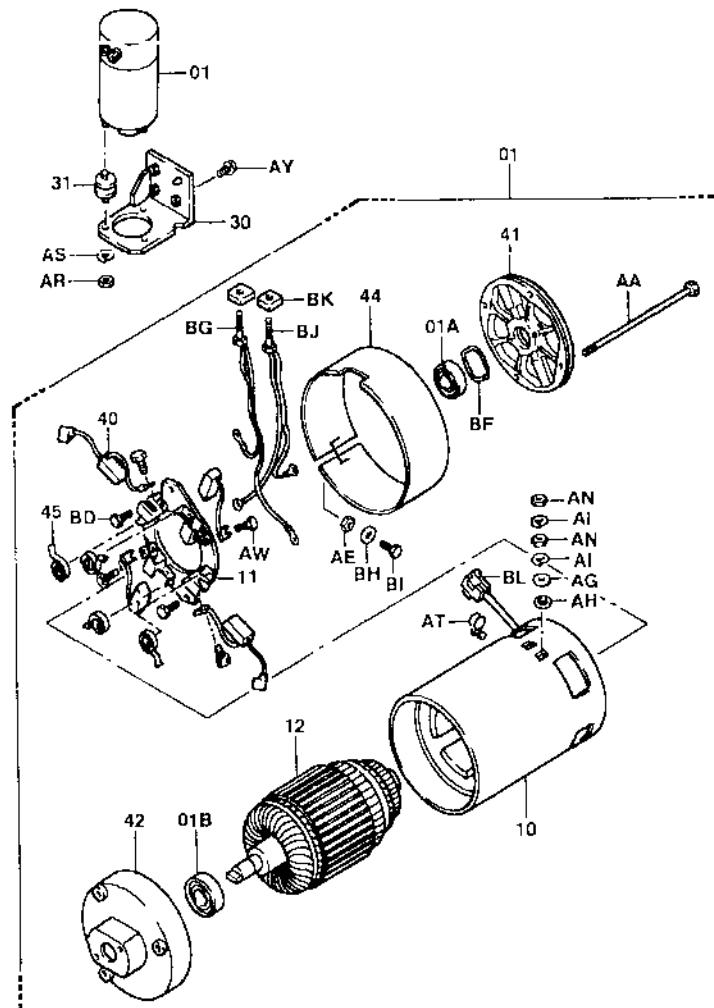

1403-035

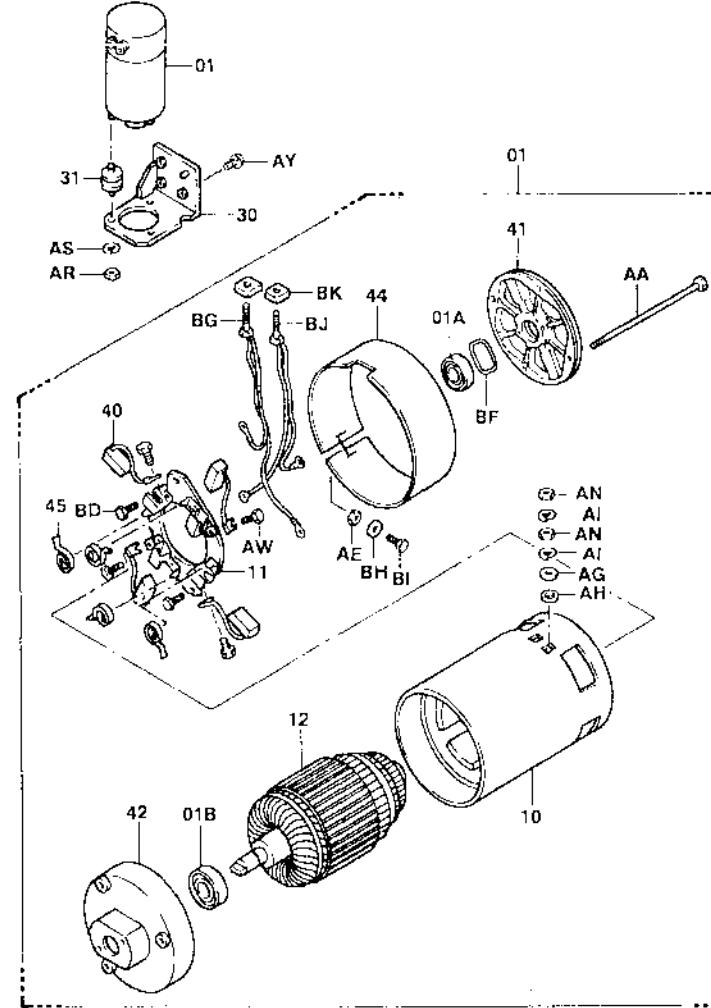

1403-034

G817-001

1403-035

1403-034 0226


FIG.1403
POWER STEERING PUMP DRIVE MOTOR

1403

MAIN

95/04

STM (BRUSH WARNING)

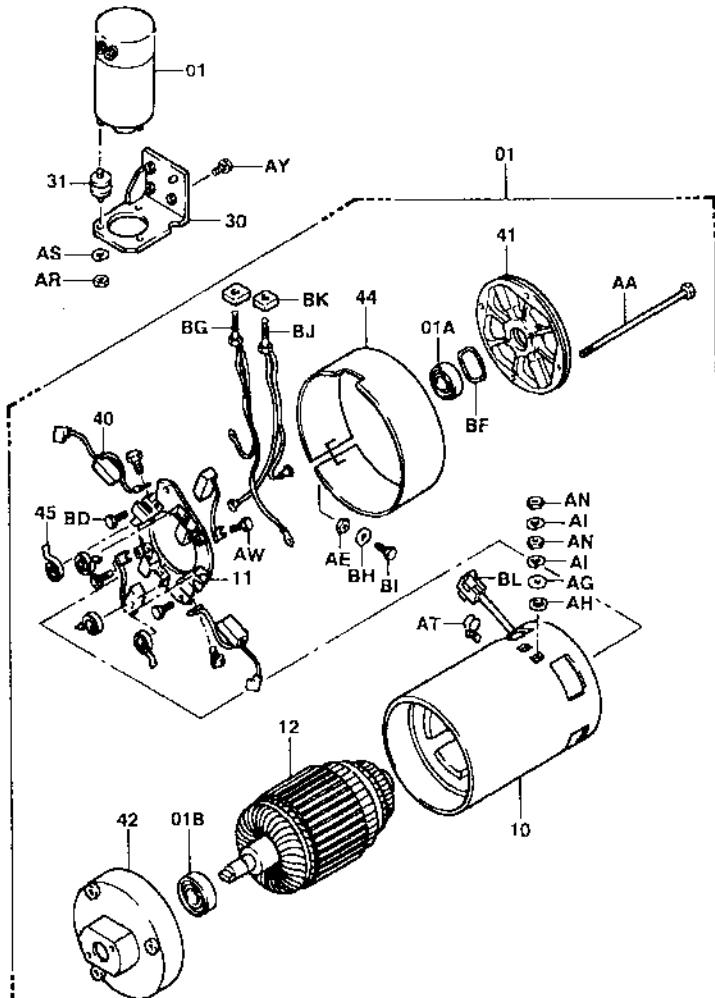

PART NAME	PART NAME	QTY
CODE		
1403-01	MOTOR ASSY, POWER STEERING	1
1403-01A	BEARING, POWER STEERING MOTOR	1
1403-01B	BEARING	1
1403-10	YODE ASSY, POWER STEERING MOTOR	1
1403-11	HOLDER ASSY, BRUSH	1
1403-12	ARMATURE ASSY, POWER STEERING	1
1403-30	BRACKET SUB-ASSY, MOTOR MOUNTING	1
1403-31	INSULATOR SUB-ASSY, BODY MOUNTING	3
1403-40	BRUSH, POWER STEERING MOTOR	2 - 4
1403-41	BRACKET, NO.1	1
1403-42	BRACKET, NO.2	1
1403-44	COVER, BRUSH	1
1403-45	SPRING, POWER STEERING MOTOR BRUSH	4
1403-AA	BOLT	2
1403-AE	NUT	1
1403-AG	WASHER, PLATE	2
1403-AM	WASHER, PLATE	2
1403-AI	WASHER, SPRING	4
1403-AN	NUT	4
1403-AR	NUT	3
1403-AS	WASHER, SPRING	3
1403-AT	CLAMP	1
1403-AW	SCREW	4
1403-AY	BOLT	3
1403-BD	SCREW	2
1403-BF	SHIM	1
1403-BG	TERMINAL SET	1
1403-BH	WASHER, PLATE	1
1403-BJ	SCREW	1
1403-BJ	TERMINAL SET	1
1403-BK	BUSHING	2
1403-BL	LEAD SET	1

1403-035


G817-002E

FIG.2401
CONTROL PANEL

2401

MAIN 97/05

(1/2)

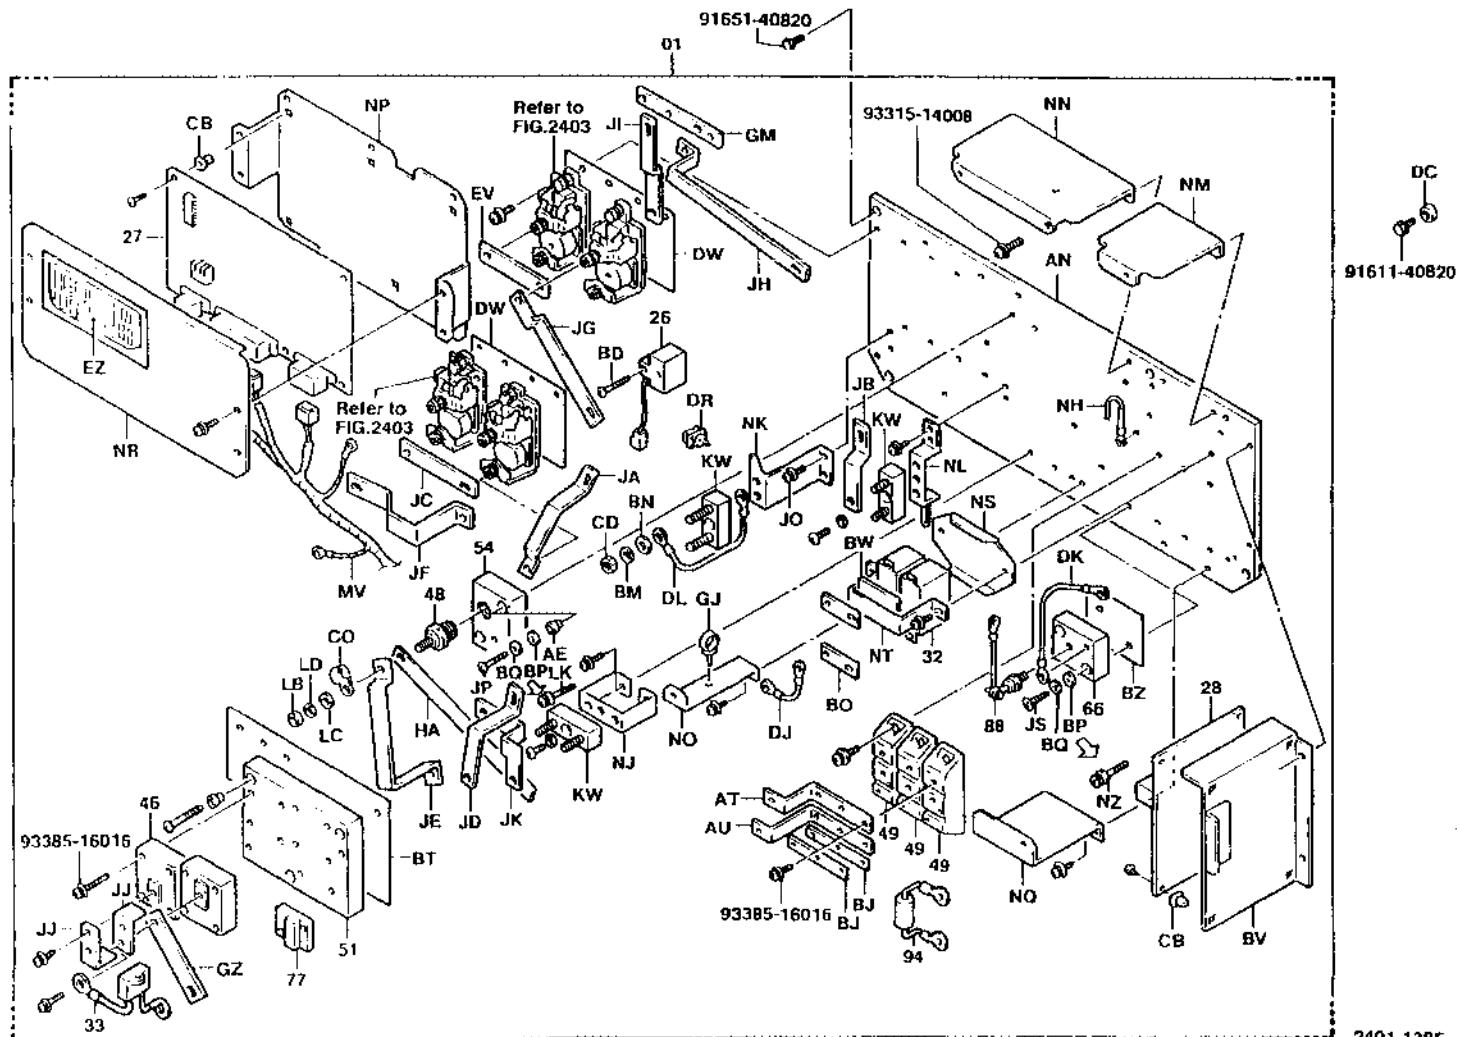

2401-13BF


G817-001

FIG. 2401
CONTROL PANEL

2401


MAIN 97/05

(2/2)

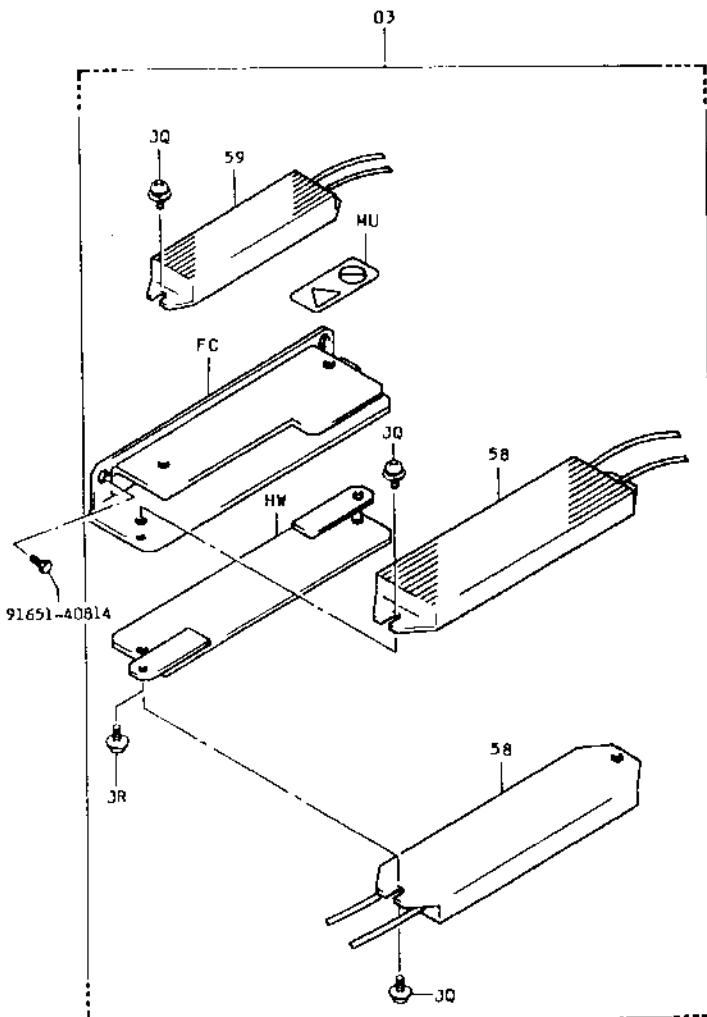

2401-140A

(EHP5) 13/31

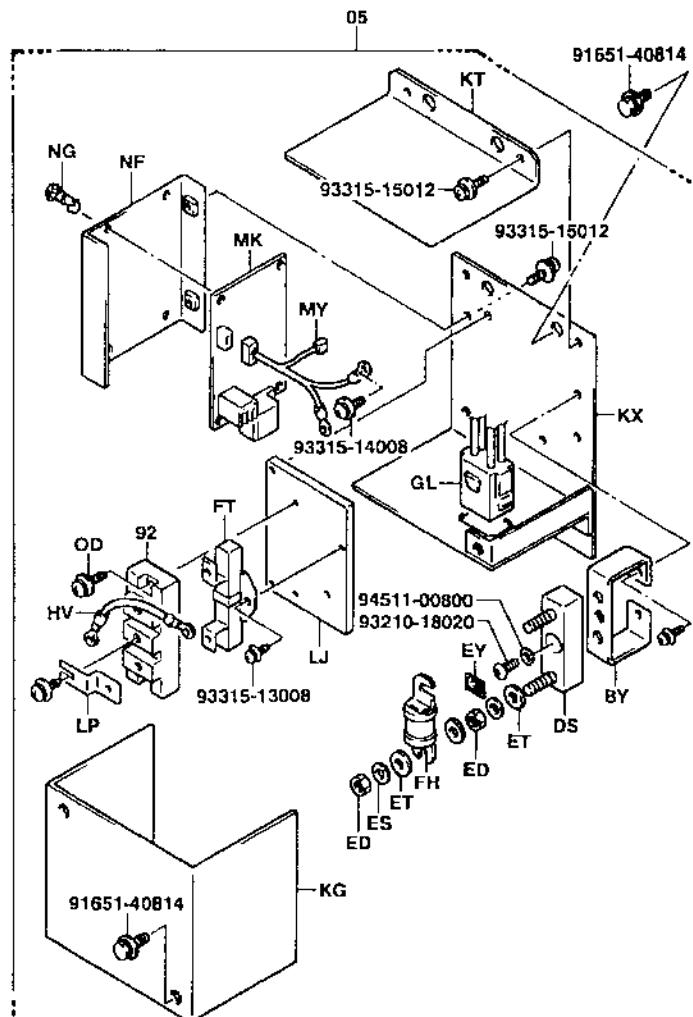

2401-139C

G817-002

2401-140A

2401-139C 0007

FIG.2401
CONTROL PANEL

2401

MAIN 97/05

PART NAME	PART NAME	QTY	PART NAME	PART NAME	QTY
CODE	CODE		CODE	CODE	
2401-01	PANEL ASSY, DRIVE CONTROL	1	2401-JC	BAR	1
2401-03	PANEL ASSY, RESISTOR	1	2401-JD	BAR	1
2401-05	PANEL ASSY, SPS CONTROL	1	2401-JE	BAR	1
2401-06	SENSOR ASSY, CURRENT	1	2401-JF	BAR	1
2401-27	BOARD ASSY	1	2401-JG	BAR	1
2401-28	BOARD ASSY	1	2401-JH	BAR	1
2401-32	CAPACITOR	2	2401-JI	BAR	1
2401-33	CAPACITOR	1	2401-JJ	BAR	2
2401-46	DIODE	2	2401-JK	BAR	1
2401-48	DIODE	1	2401-JL	SCREW	22
2401-49	TRANSISTOR	3	2401-JM	SCREW	2
2401-51	HEATSINK, NO.1	1	2401-JN	SCREW	4- 6
2401-54	HEATSINK, NO.2	1	2401-JR	SCREW	2
2401-58	RESISTOR, NO.1	1- 21	2401-JS	SCREW	5
2401-59	RESISTOR, NO.2	1	2401-KG	COVER	1
2401-66	HEATSINK	1	2401-KT	PLATE	1
2401-77	TRANSISTOR	1	2401-KW	BLOCK, TERMINAL FUSE	3
2401-88	DIODE SUB-ASSY	1	2401-KX	BASE SUB-ASSY	1
2401-92	TRANSISTOR	1	2401-LB	NUT	1
2401-94	DIODE	1	2401-LC	WASHER, PLATE	1
2401-AE	INSULATOR	7	2401-LO	WASHER, SPRING	1
2401-AN	BASE	1	2401-LJ	HEATSINK	1
2401-AT	BAR	1	2401-LK	SCREW, W/WASHER	5
2401-AU	BAR	1	2401-LP	BAR	1
2401-BD	SCREW	1	2401-MK	BOARD SUB-ASSY	1
2401-BJ	BAR	2	2401-MU	PLATE, CAUTION	1
2401-BK	WASHER, SPRING	9	2401-MV	HARNESS SUB-ASSY	1
2401-BN	WASHER, PLATE	9	2401-MY	HARNESS, SPS BOARD	1
2401-BD	BAR	2	2401-NF	BRACKET SUB-ASSY, BOARD	1
2401-BP	WASHER, PLATE	7	2401-NG	SPACER	4
2401-BQ	WASHER, SPRING	7	2401-NH	SENSOR SUB-ASSY, THERMAL	1
2401-BT	SHEET	1	2401-NJ	BRACKET SUB-ASSY, TERMINAL, NO.1	1
2401-BV	BRACKET SUB-ASSY	1	2401-NK	BRACKET SUB-ASSY, TERMINAL, NO.2	1
2401-BW	HAT	2	2401-NL	BRACKET SUB-ASSY, TERMINAL, NO.3	1
2401-BY	BRACKET SUB-ASSY, TERMINAL	1	2401-NM	BRACKET, CPU, NO.1	1
2401-BZ	SHEET	1	2401-NN	BRACKET, CPU, NO.2	1
2401-CB	GROMMET	10	2401-NO	BRACKET, CPU, NO.3	1
2401-CD	NUT	9	2401-NP	BASE SUB-ASSY, CPU BOARD	1
2401-CO	CLAMP	1	2401-NQ	BRACKET SUB-ASSY, CPU	1
2401-DC	SPACER, NO.1	2	2401-NR	COVER, CPU	1
2401-DJ	WIRING, NO.1	1	2401-NS	BRACKET, CAPACITOR	1
2401-DK	WIRING, NO.2	1	2401-NT	BAND, CAPACITOR	1
2401-DL	WIRING, NO.3	1	2401-NZ	SCREW, W/WASHER	2
2401-DR	CLAMP	1	2401-OO	SCREW	2
2401-DS	TERMINAL BLOCK, FUSE	1			
2401-DW	SHEET	2			
2401-ED	NUT	4			
2401-EG	WASHER, SPRING	4			
2401-ET	WASHER, PLATE	6			
2401-EV	BAR	1			
2401-EY	PLATE, FUSE	1			
2401-EZ	PLATE, TERMINAL NUMBER	1			
2401-FC	BRACKET, RESISTOR	1			
2401-FH	FUSE	1			
2401-FT	RESISTOR	1			
2401-GJ	CLIP	1			
2401-GL	WIRING SUB-ASSY	1			
2401-GM	BAR	1			
2401-GZ	BAR	1			
2401-HA	BAR	1			
2401-HV	WIRING	1			
2401-HW	BRACKET SUB-ASSY	1			
2401-JA	BAR	1			
2401-JB	BAR	1			

G817-003E

FIG. 2402
CONTACTOR PANEL



2402

MAIN

97/05

{1/2}

{2/2}

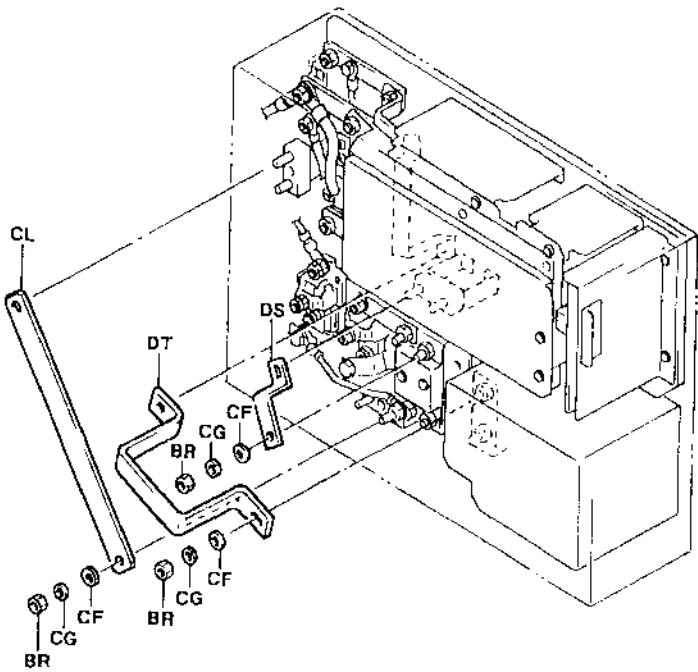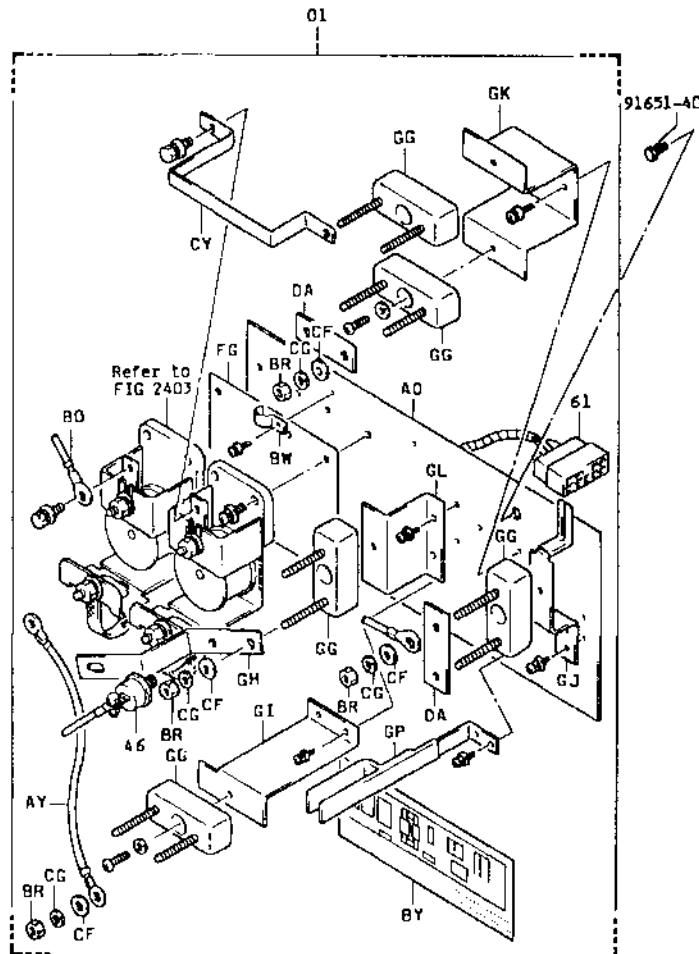

2402-083A

2402-087B


G817-001

FIG.2402
CONTACTOR PANEL

2402

MAIN 97/05

(PUMP CHOPPER)

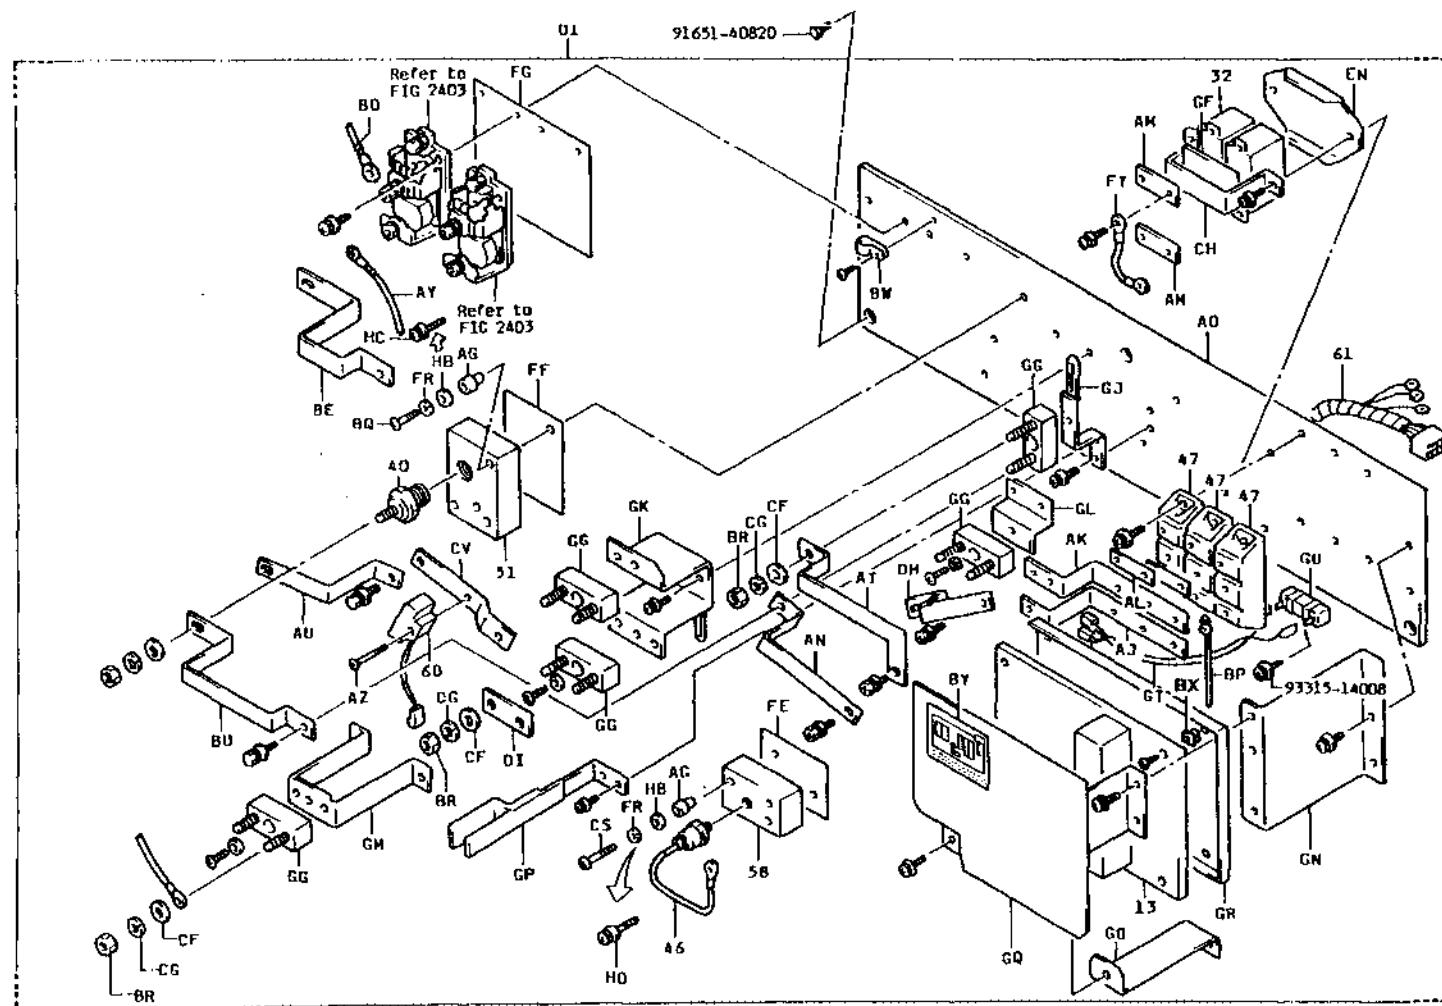

2402-084E

G817-002

2402 DBAE 0010


FIG.2402
CONTACTOR PANEL

2402

MAIN


97/05

DPR (P/S)

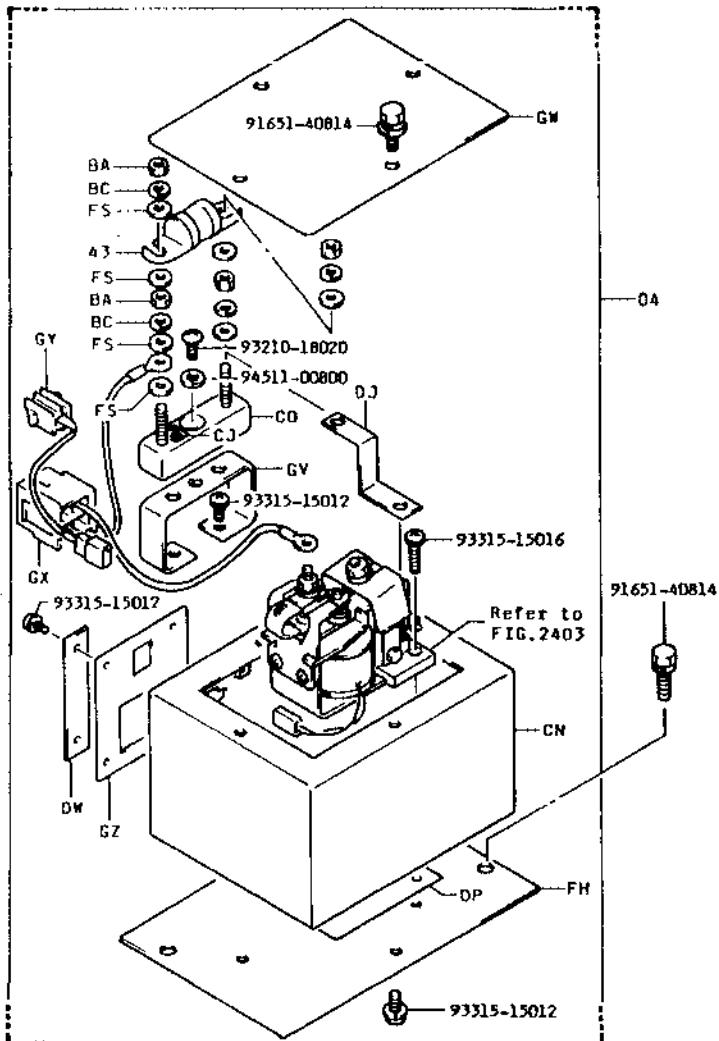

2402-086A

STM (P/S)

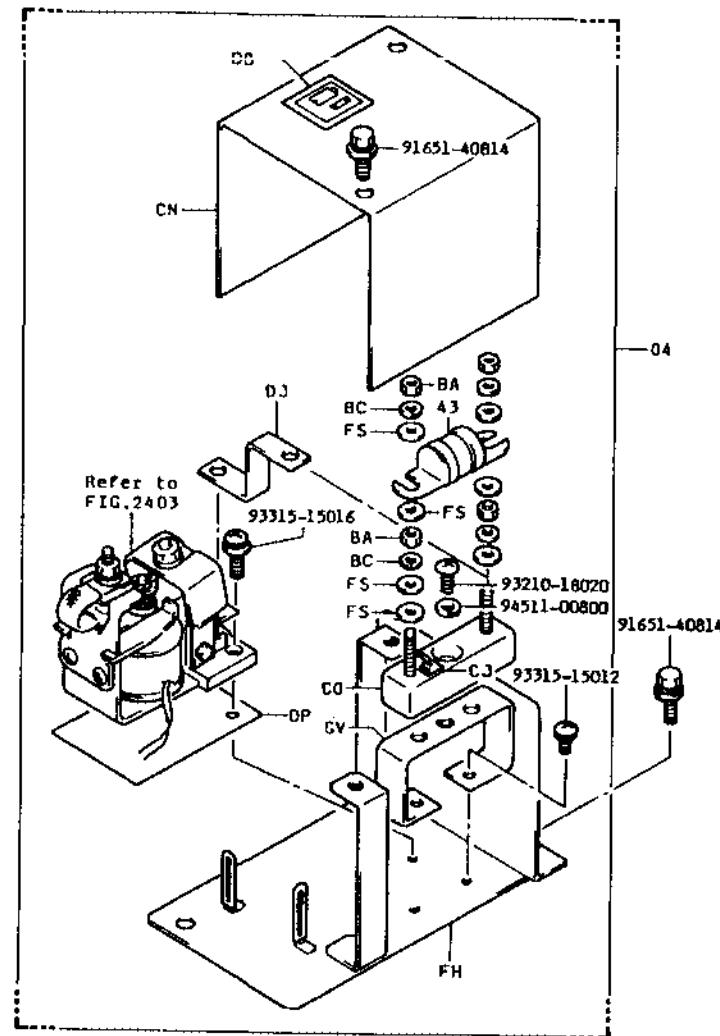

2402-085A

G817-003

Z402-086A

2402-085A-D011

FIG. 2402
CONTACTOR PANEL

2402

MAIN 97/05

PART NAME	PART NAME	QTY	PART NAME	PART NAME	QTY
CODE	CODE		CODE	CODE	
2402-01	PANEL ASSY, CONTACTOR	1	2402-GK	BRACKET SUB-ASSY, TERMINAL	1
2402-04	PANEL ASSY, F/F CONTACTOR	1	2402-GL	BRACKET SUB-ASSY, TERMINAL	1
2402-15	BOARD ASSY	1	2402-GM	BRACKET SUB-ASSY, TERMINAL	1
2402-32	CAPACITOR	2	2402-GN	BRACKET, RH	1
2402-40	DIODE	1	2402-GO	BRACKET, LH	1
2402-43	FUSE (F3)	1	2402-GP	CLAMP	1
2402-46	DIODE ASSY	1	2402-GQ	COVER SUB-ASSY	1
2402-47	TRANSISTOR	3	2402-GR	BASE SUB-ASSY	1
2402-51	HEATSINK	1	2402-GT	HARNESS SUB-ASSY, RESISTOR	1
2402-58	HEATSINK	1	2402-GU	RESISTOR	1
2402-60	SENSOR ASSY, CURRENT	1	2402-GV	BRACKET SUB-ASSY, TERMINAL	1
2402-61	HARNESS SUB-ASSY	1	2402-GW	COVER	1
2402-AG	INSULATOR	4	2402-GX	WIRING	1
2402-AJ	I BAR	1	2402-GY	HARNESS	1
2402-AK	I BAR	1	2402-GZ	GASKET	1
2402-AL	I BAR	1	2402-HC	SCREW, W/WASHER	2
2402-AM	I BAR	1	2402-HD	SCREW, W/WASHER	2
2402-AN	I BAR	1			
2402-AD	BASE	1			
2402-AT	I BAR	1			
2402-AU	I BAR	1			
2402-AY	WIRING	1			
2402-AZ	SCREW	1			
2402-BA	NUT	4			
2402-BC	WASHER, SPRING	4			
2402-BE	I BAR	1			
2402-BD	WIRING	1			
2402-BP	CLIP	1			
2402-BR	NUT	16-18			
2402-BU	I BAR	1			
2402-BW	CLAMP	2			
2402-BX	GROMMET	4			
2402-BY	I PLATE, TERMINAL NUMBER	1			
2402-CC	SPACER	1			
2402-CF	WASHER, PLATE	16-22			
2402-CG	WASHER, SPRING	16-18			
2402-CH	BAND	1			
2402-CJ	I PLATE, FUSE	1			
2402-CL	RESISTOR	1			
2402-CN	COVER	1			
2402-CO	TERMINAL	1			
2402-CV	I BAR	1			
2402-CY	BAR	1			
2402-DA	BAR	2			
2402-DB	I PLATE, TERMINAL	1			
2402-DH	I BAR	1			
2402-DI	I BAR	2			
2402-DJ	I BAR	1			
2402-DP	SHEET	1			
2402-DS	I BAR	1			
2402-DT	I BAR	1			
2402-DW	I PLATE	2			
2402-EN	I BRACKET	1			
2402-FF	SHEET	1			
2402-FG	SHEET	1			
2402-FH	BASE	1			
2402-FS	WASHER, PLATE	7			
2402-FT	WIRING	2			
2402-GF	MAT	2			
2402-GG	BLOCK, TERMINAL FUSE	5			
2402-GH	I BAR SUB-ASSY	1			
2402-GI	BRACKET SUB-ASSY, TERMINAL	1			
2402-GJ	BRACKET SUB-ASSY, TERMINAL	1			

G817-004E

FIG. 2403
CONTACTOR ASSY


2403

MAIN


95/04

(MF, MR)

(MG, MS, MP, MW)

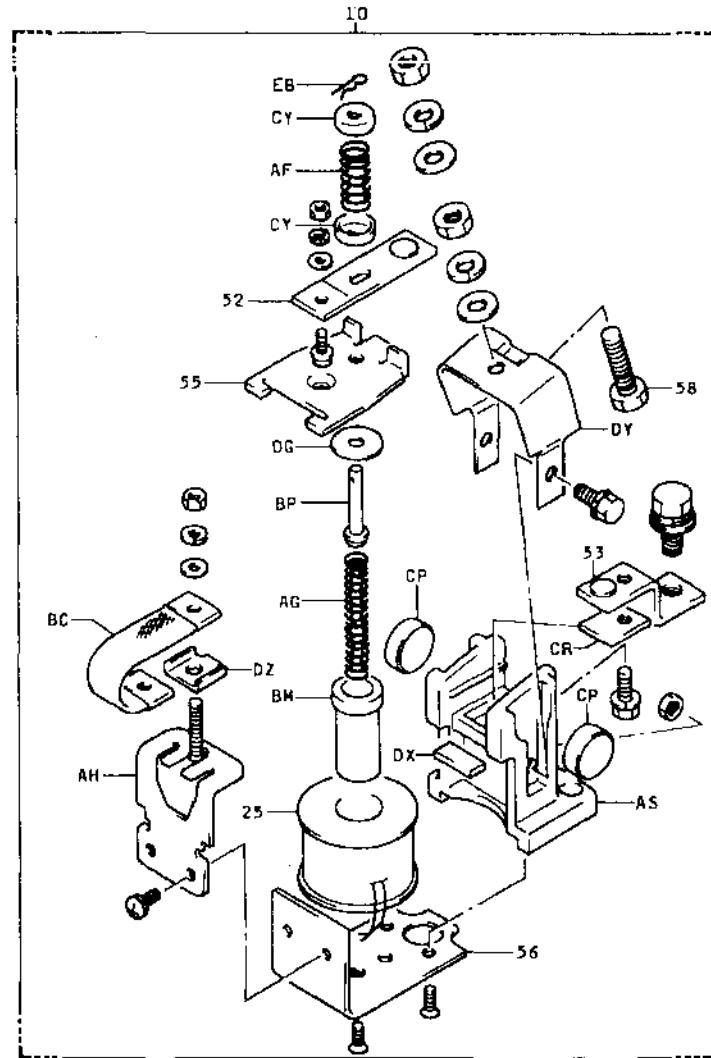

2403-068A

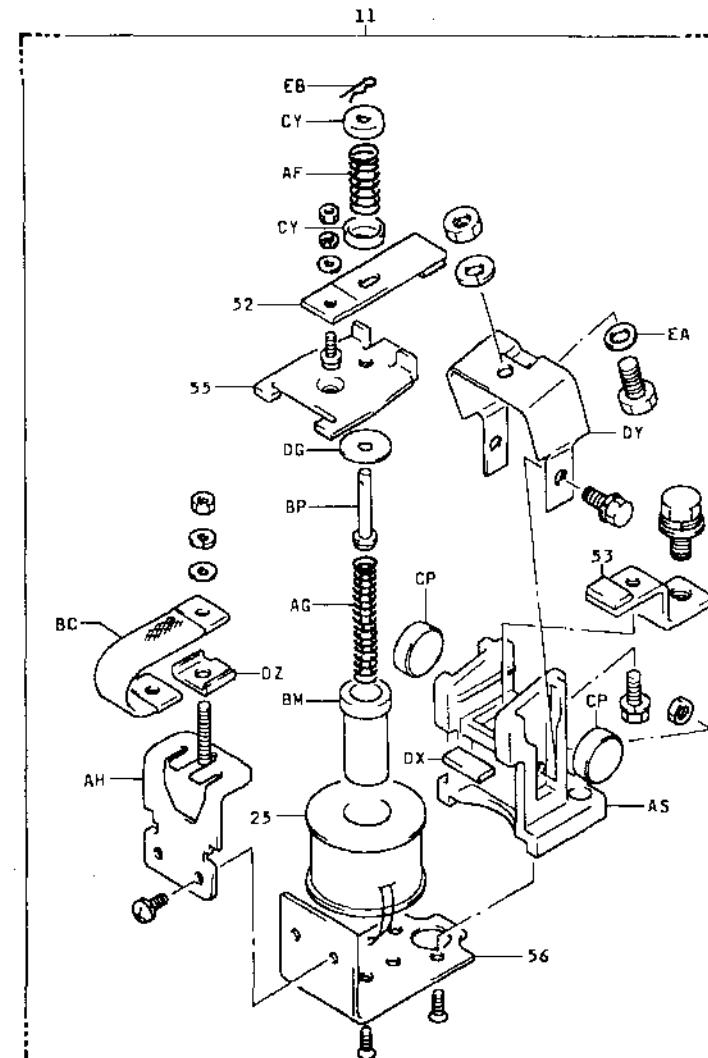

2403-069A

GB17-001

2403-068A

2403-069A U21S


FIG.2403
CONTACTOR ASSY

2403

MAIN

95/04

(P/S)

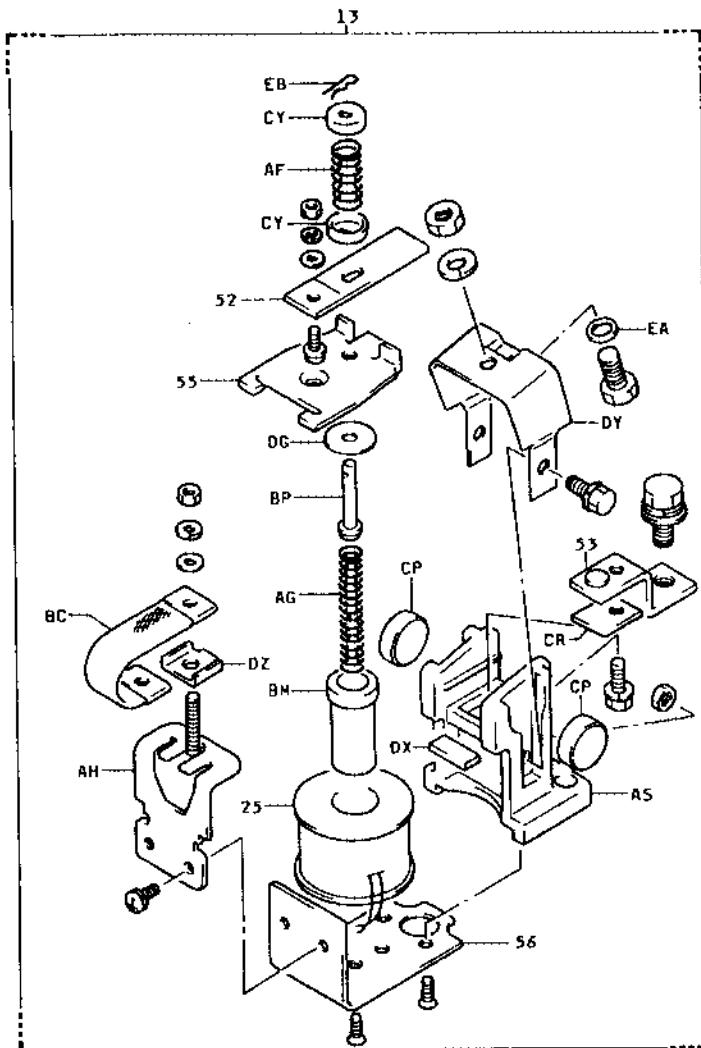

2403-070A

PART NAME CODE	PART NAME	QTY
2403-10	CONTACTOR ASSY, DRIVE	2
2403-11	CONTACTOR ASSY, SHOT	4
2403-13	CONTACTOR ASSY, POWER STEERING	1
2403-25	COIL SUB-ASSY	1- 4
2403-52	CONTACT, MOVING	1- 4
2403-53	CONTACT, STATIONARY	1- 4
2403-55	ARMATURE	1- 4
2403-56	FRAME	1- 4
2403-58	CONTACT, B	2
2403-AF	SPRING, NO.1	1- 4
2403-AG	SPRING, NO.2	1- 4
2403-AH	TERMINAL	1- 4
2403-AS	BASE	1- 4
2403-BC	WIRING	1- 4
2403-BM	CORE	1- 4
2403-BP	PIN	1- 4
2403-CP	MAGNET	1- 4
2403-CR	SPACER	1- 2
2403-CY	HOLDER	2- 8
2403-DG	SHEET	1- 4
2403-DX	PACKING	1- 4
2403-DY	YOLKE	1- 4
2403-DZ	WASHER, LOCK	1- 4
2403-EA	SPACER	2- 4
2403-EB	PIN, SNAP	1- 4


G817-002E

FIG. 2611
ACCELERATOR

2611

MAIN

95/04

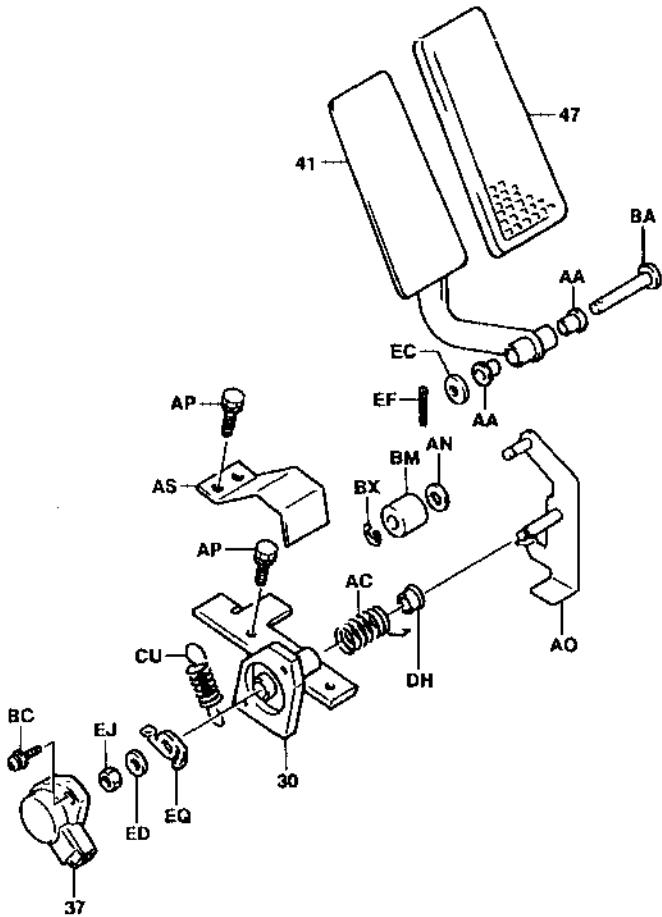

PART NAME CODE	PART NAME	QTY
2611-30	BRACKET SUB-ASSY, ACCELERATOR BOX	1
2611-37	SENSOR ASSY	1
2611-41	PEDAL, ACCELERATOR	1
2611-47	PAD, PEDAL	1
2611-AA	BUSHING	2
2611-AC	SPRING, ACCELERATOR	1
2611-AN	WASHER, SPRING	1
2611-AD	ARM SUB-ASSY	1
2611-AP	BOLT	4
2611-AS	COVER	1
2611-BA	PIN	1
2611-BC	SCREW	2
2611-BH	ROLLER, ACCELERATOR LINK	1
2611-BX	RING, SNAP	1
2611-CU	SPRING, COIL REAR	1
2611-DH	BUSHING, ACCELERATOR ARM	2
2611-EC	WASHER, PLATE	1
2611-ED	WASHER	1
2611-EF	PIN, COTTER	1
2611-EJ	NUT	1
2611-EQ	LEVER	1


2611-069A

G817-001E

FIG.3305
GEAR CASE & GEAR

3305

MAIN 95/04

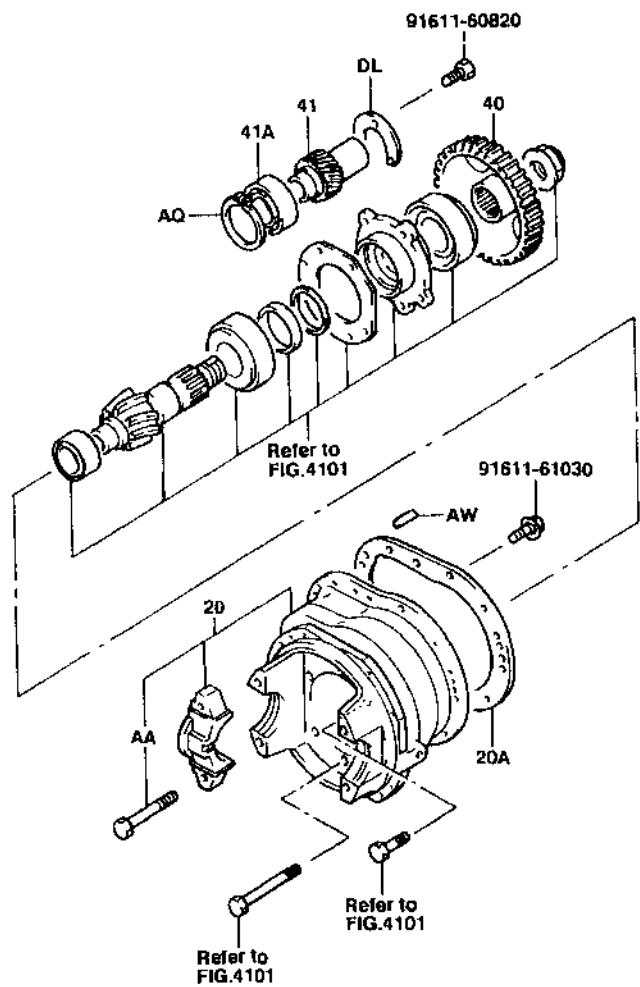

PART NAME CODE	PART NAME	QTY
3305-20	CASE SUB-ASSY, GEAR	1
3305-20A	GASKET, GEAR CASE	1
3305-40	GEAR, OUTPUT	1
3305-41	GEAR, DRIVE	1
3305-41A	BEARING (FOR DRIVE GEAR)	1
3305-AA	BOLT	6
3305-AQ	RING, SHAFT SNAP	1
3305-AW	PIN, STRAIGHT	2
3305-DL	PLATE, COVER	1

3305-013


G817-001E

FIG. 3310
CHANGE LEVER

3310

MAIN

95/04

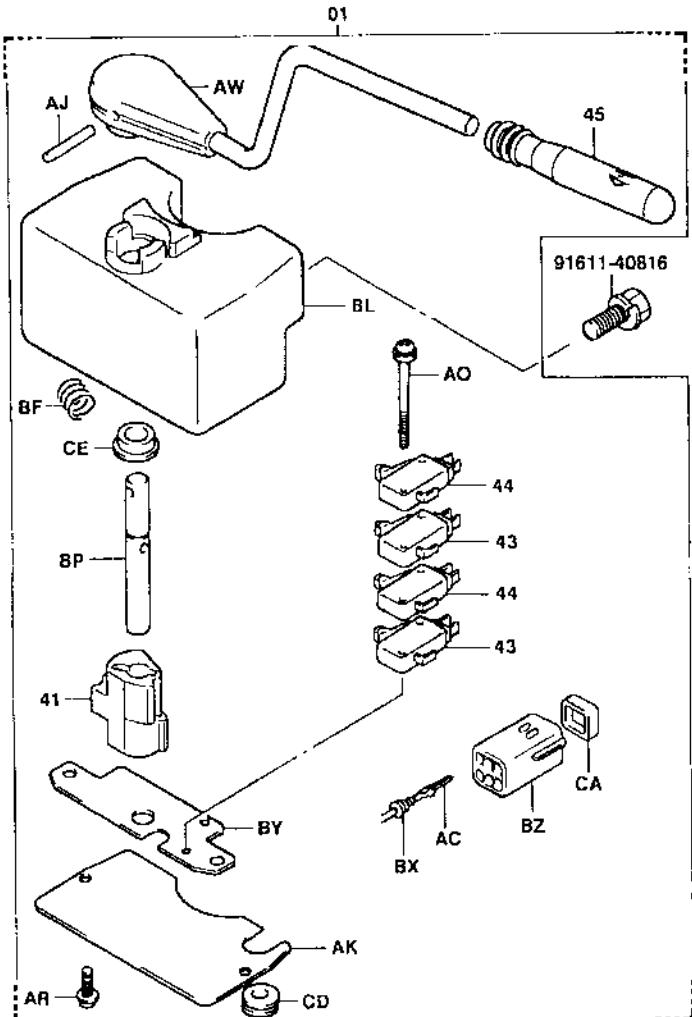

3310-028

PART NAME CODE	PART NAME	QTY
3310-01	SWITCH ASSY, DIRECTION	1
3310-41	CAM	1
3310-43	SWITCH, MICRO, NO.1	2
3310-44	SWITCH, MICRO, NO.2	2
3310-45	KNOB	1
3310-AC	TAB	6
3310-AJ	PIN, SPRING	1
3310-AK	PLATE	1
3310-AQ	SCREW	2
3310-AR	SCREW	4
3310-AW	LEVER SUB-ASSY	1
3310-BF	SPRING	1
3310-BL	CASE, DIRECTION SWITCH	1
3310-BP	SHAFT	1
3310-BX	CAP	6
3310-BY	BASE	1
3310-BZ	CONNECTOR	1
3310-CA	CONNECTOR	1
3310-CO	BUSHING	1
3310-CE	BUSHING	1


G817-001E

FIG. 4101
DIFFERENTIAL

4101

MAIN

95/04

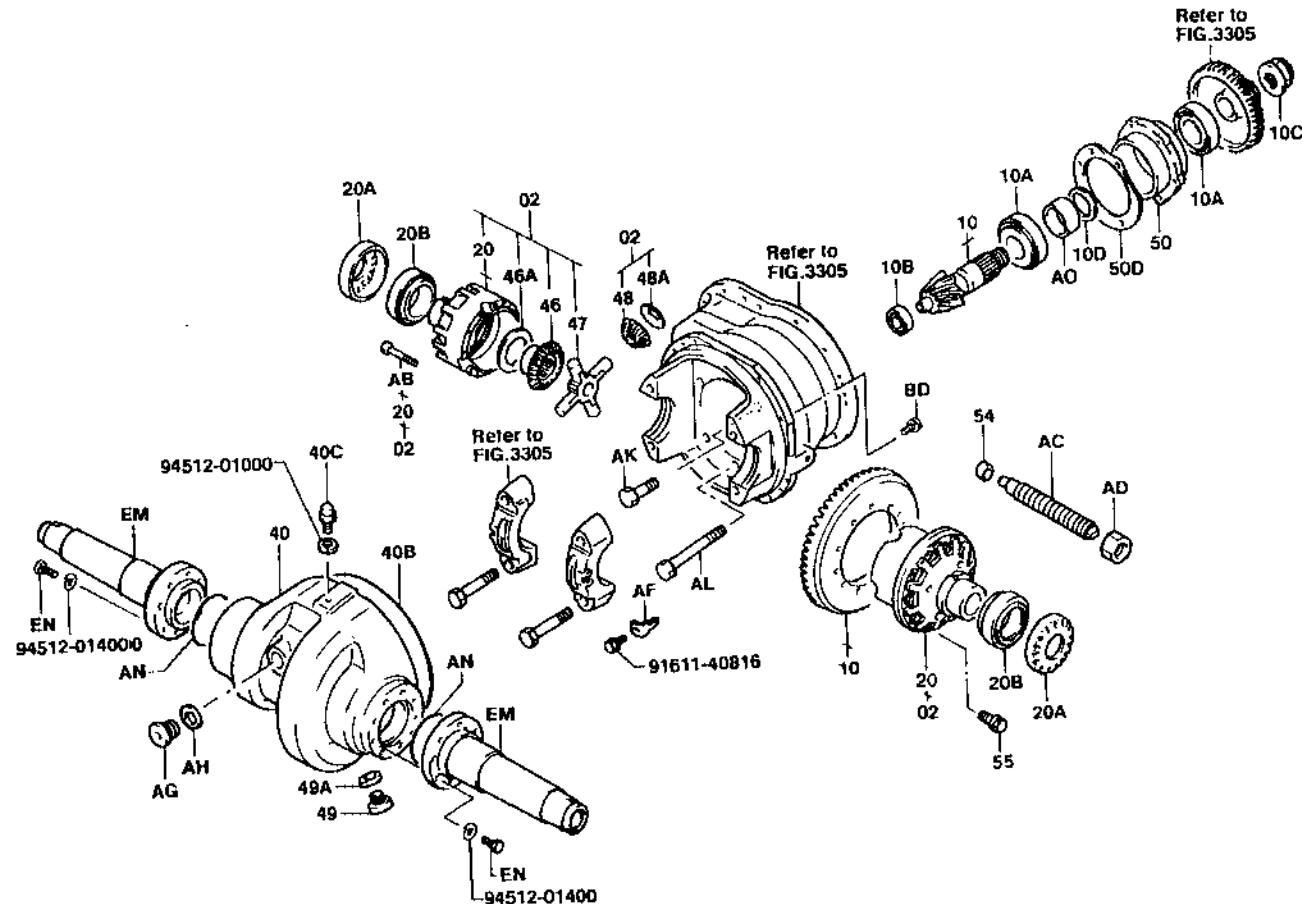

4101-129

G817-001

4101 129 0260

FIG. 4101
DIFFERENTIAL

4101

MAIN

95/04


PART NAME CODE	PART NAME	QTY
4101-02	CASE ASSY, DIFFERENTIAL	1
4101-10	RING GEAR & PINION SET, DIFFERENTIAL	1
4101-10A	BEARING, DRIVE PINION	2
4101-10B	BEARING, DRIVE PINION PILOT	1
4101-10C	NUT, LOCK	1
4101-10D	SHIM, BEARING PRELOAD ADJUST	99
4101-20	CASE SUB-ASSY, DIFFERENTIAL	1
4101-20A	NUT, ADJUSTING	2
4101-20B	BEARING, DIFFERENTIAL CASE	2
4101-40	HOUSING, DIFFERENTIAL	1
4101-40B	RING, O (FOR DIFFERENTIAL HOUSING)	1
4101-40C	PLUG, BREATHER (FOR DIFFERENTIAL HOUSING)	1
4101-46	GEAR, SIDE	2
4101-46A	WASHER, SIDE GEAR THRUST	2
4101-47	SPIDER	1
4101-48	PINION	4
4101-48A	WASHER, PINION THRUST	4
4101-49	PLUG, DRAIN	1
4101-49A	GASKET, DRAIN PLUG	1
4101-50	RETAINER, DRIVE PINION BEARING	1
4101-50D	SHIM, DIFFERENTIAL DRIVE PINION BEARING	99
4101-54	CAP, RING GEAR THRUST SCREW	1
4101-55	BOLT, RING GEAR SET	12
4101-AB	BOLT	12
4101-AC	SCREW, RING GEAR THRUST	1
4101-AD	NUT	1
4101-AF	LOCK, ADJUSTING	2
4101-AG	PLUG, W/HEAD STRAIGHT SCREW	1
4101-AH	GASKET	1
4101-AK	BOLT	2
4101-AL	BOLT	4
4101-AN	RING, O	2
4101-AD	SPACER, BEARING	1
4101-BD	BOLT	1~7
4101-EM	HOUSING, FR AXLE	2
4101-EN	BOLT	16

G817-002E

FIG. 4201
FRONT AXLE SHAFT

4201

MAIN 95/06

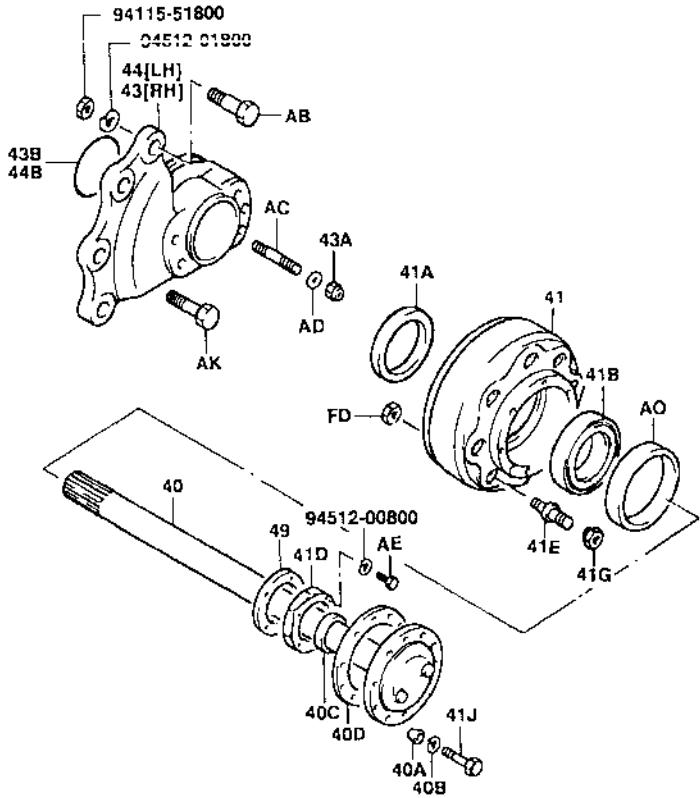

PART NAME CODE	PART NAME	QTY
4201-40	SHAFT, FRCNT AXLE	2
4201-40A	WASHER, CORN	16
4201-40B	WASHER, SPRING (FOR FRONT AXLE SHAFT)	16
4201-40C	SEAL, OIL (FOR FRONT AXLE SHAFT)	2
4201-40D	GASKET, FRONT AXLE SHAFT	2
4201-41	HUB, FRONT AXLE	2
4201-41A	SEAL, OIL (FOR FRONT AXLE HUB)	2
4201-41B	BEARING, NO.1 (FOR FRONT AXLE HUB)	2
4201-41D	NUT, BEARING LOCK	2
4201-41E	BOLT, HUB	16
4201-41G	NUT, HUB	16
4201-41J	BOLT (FOR FRONT AXLE SHAFT)	16
4201-43	BRACKET, FRONT AXLE, RH	1
4201-43A	NUT, BRAKE SET SELF	10
4201-43B	RING, O (FOR FRONT AXLE BRACKET)	1
4201-44	BRACKET, FRONT AXLE, LH	1
4201-44B	RING, O (FOR FRONT AXLE BRACKET)	1
4201-49	PLATE, LOCK NUT	2
4201-AB	BOLT, BRACKET SET	4
4201-AC	BOLT, STUD BRAKE SET	10
4201-AD	WASHER, GD SPRING	10
4201-AE	BOLT	2
4201-AK	BOLT	4
4201-AD	SPACER	2
4201-FD	NUT	16

4201-134 A


GB17-001E

FIG.4301
REAR AXLE & TIE-ROD

4301

MAIN

95/10

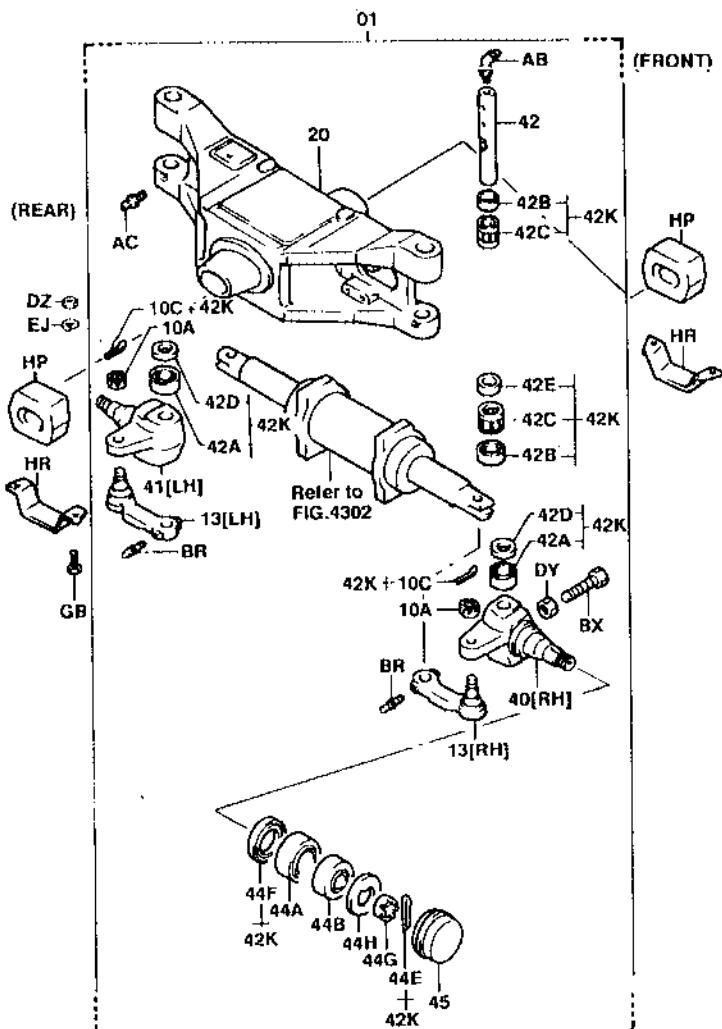

4301-100A

G817-001E


PART NAME	PART NAME	QTY
CODE		
4301-01	AXLE ASSY, RR	1
4301-10A	INUT, CASTLE (FOR TIE-ROD END)	2
4301-10C	PIN, COTTER (FOR TIE-ROD END)	2
4301-13	TIE-ROD ASSY	1
4301-20	BEAM SUB-ASSY, REAR AXLE	1
4301-40	KNUCKLE, STEERING, RH	1
4301-41	KNUCKLE, STEERING, LH	1
4301-42	PIN, STEERING KNUCKLE KING	2
4301-42A	BEARING, STEERING KNUCKLE THRUST	2
4301-42B	SEAL, OIL, NO.1	4
4301-42C	BEARING, NEFOLE	4
4301-42D	SHIM, STEERING KNUCKLE	99
4301-42E	SEAL, OIL, NO.2	2
4301-42F	SEAL KIT, KING PIN	2
4301-44A	BEARING, INNER	2
4301-44B	BEARING, OUTER	2
4301-44E	PIN, REAR AXLE COTTER	2
4301-44F	SEAL, OIL (FOR REAR AXLE HUB)	2
4301-44G	NUT, CASTLE (FOR REAR AXLE HUB)	2
4301-44H	WASHER, CLAW (FOR REAR AXLE HUB)	2
4301-45	CAP, REAR AXLE HUB	2
4301-AB	FITTING, GREASE	2
4301-AC	FITTING, GREASE	2
4301-BR	FITTING, GREASE	2
4301-BX	BOLT	2
4301-DY	NUT	2
4301-DZ	NUT	4
4301-EJ	WASHER, SPRING	4
4301-GB	BOLT	4
4301-HP	RUBBER, CUSHION	2
4301-HR	SUPPORT	2

FIG. 4302
REAR AXLE CYLINDER


4302

MAIN

97/04

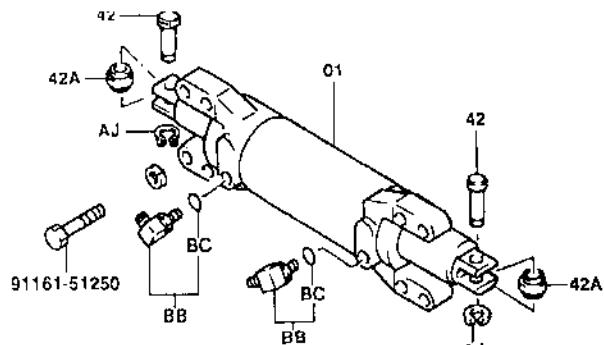

PART NAME CODE	PART NAME	QTY
4302-01	CYLINDER ASSY, REAR AXLE	1
4302-01K	CYLINDER O/D KIT, REAR AXLE	1
4302-21	ROD SUB-ASSY, REAR AXLE CYLINDER	1
4302-42	PIN, REAR AXLE CYLINDER	2
4302-42A	BUSHING (FOR REAR AXLE CYLINDER PIN)	2
4302-45	CYLINDER, REAR AXLE	1
4302-46	GUIDE, ROD	1
4302-AB	SEAL, DUST	2
4302-AC	PACKING, U	2
4302-AD	RING, O	2
4302-AJ	RING, SNAP	2
4302-AM	RING, BACK UP	2
4302-BB	FITTING	2
4302-BC	RING, O	2
4302-BP	PACKING	1
4302-BR	RING	1

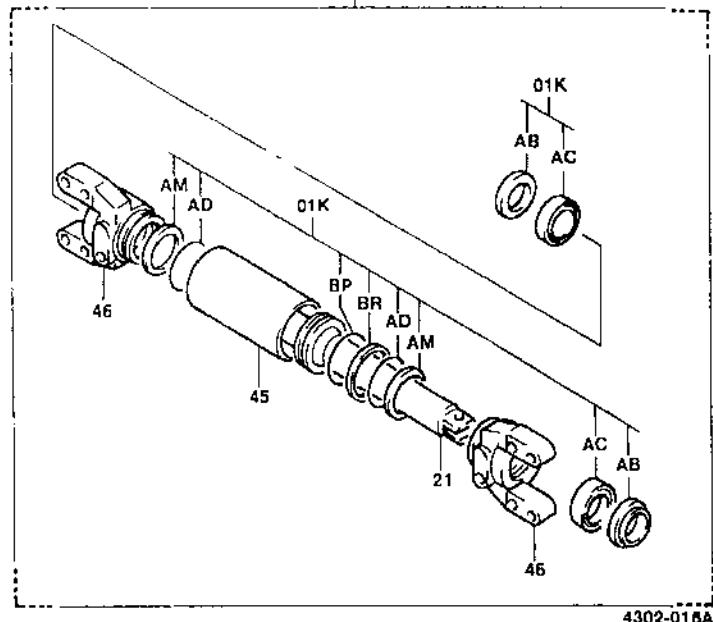

4302-018A


GB17-001E

FIG. 4406
FRONT WHEEL & TIRE

4406

MAIN

95/04

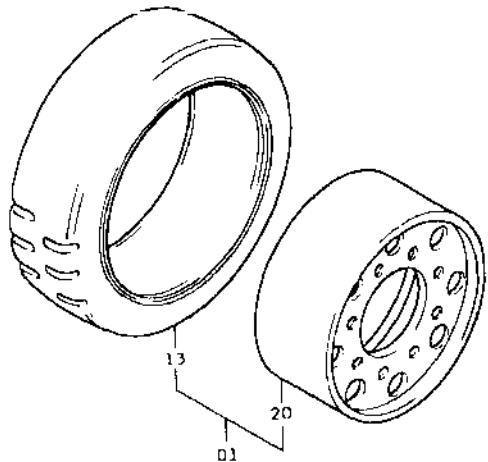

4406-007

PART NAME	CODE	PART NAME	QTY
WHEEL ASSY	4406-01		2
TIRE ASSY	4406-13		2
WHEEL SUB-ASSY, DISC	4406-20		2

G817-001E

4406 007


0245

FIG. 4407
REAR WHEEL & TIRE

4407

MAIN

95/04

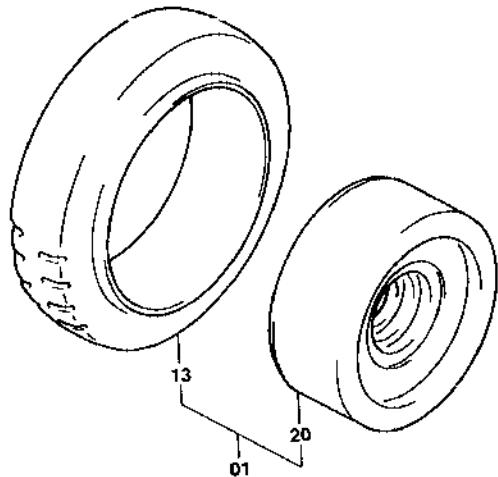

4407-007

PART NAME CODE	PART NAME	QTY
4407-01	WHEEL ASSY	2
4407-13	TIRE ASSY	2
4407-20	WHEEL SUB-ASSY, DISC	2

G817-001E

FIG. 4501
STEERING WHEEL


4501

MAIN




95/04

(U.S.A) IL/KNOB1



10

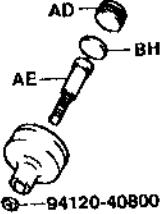

01

 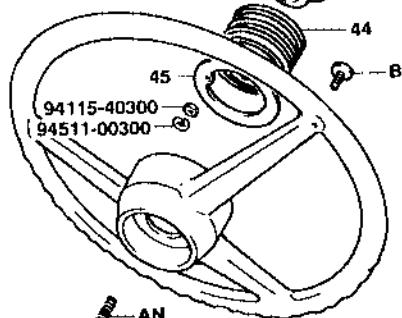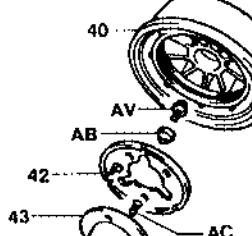

01

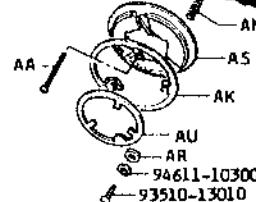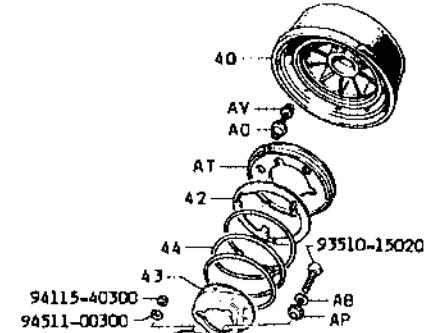

4501-041A

4501-016A

G817-001

4501-041A

4501-016A 0247

FIG.4501
STEERING WHEEL

4501

MAIN 95/04

PART NAME	PART NAME	QTY
14501-01	WHEEL ASSY, STEERING	1
14501-10	KNOB ASSY, STEERING WHEEL	1
14501-40	BUTTON, HORN	1
14501-42	PLATE, HORN CONTACT	1
14501-43	SEAT, HORN CONTACT	1
14501-44	SPRING, HORN	1
14501-45	PLATE, LEAD	1
14501-AA	SCREW	1
14501-AB	WASHER	3
14501-AC	SCREW	3
14501-AD	CAP, STEERING WHEEL	1
14501-AE	BOLT, STEERING WHEEL KNOB SET	1
14501-AK	RING, HORN CONTACT NO.1	1
14501-AN	SPRING, LEAD	1
14501-AD	SPACER, NO.3	3
14501-AP	SPACER, NO.5	3
14501-AQ	SPACER, NO.5	1
14501-AR	SPACER, NO.4	2
14501-AS	SPACER, NO.1	1
14501-AT	PLATE, HORN BUTTON SET	1
14501-AU	RING, HORN CONTACT NO.2	1
14501-AV	SCREW	3
14501-BF	CAP	1
14501-BH	PACKING	1


G817-002E

FIG. 4502
STEERING POST

4502

MAIN

95/04

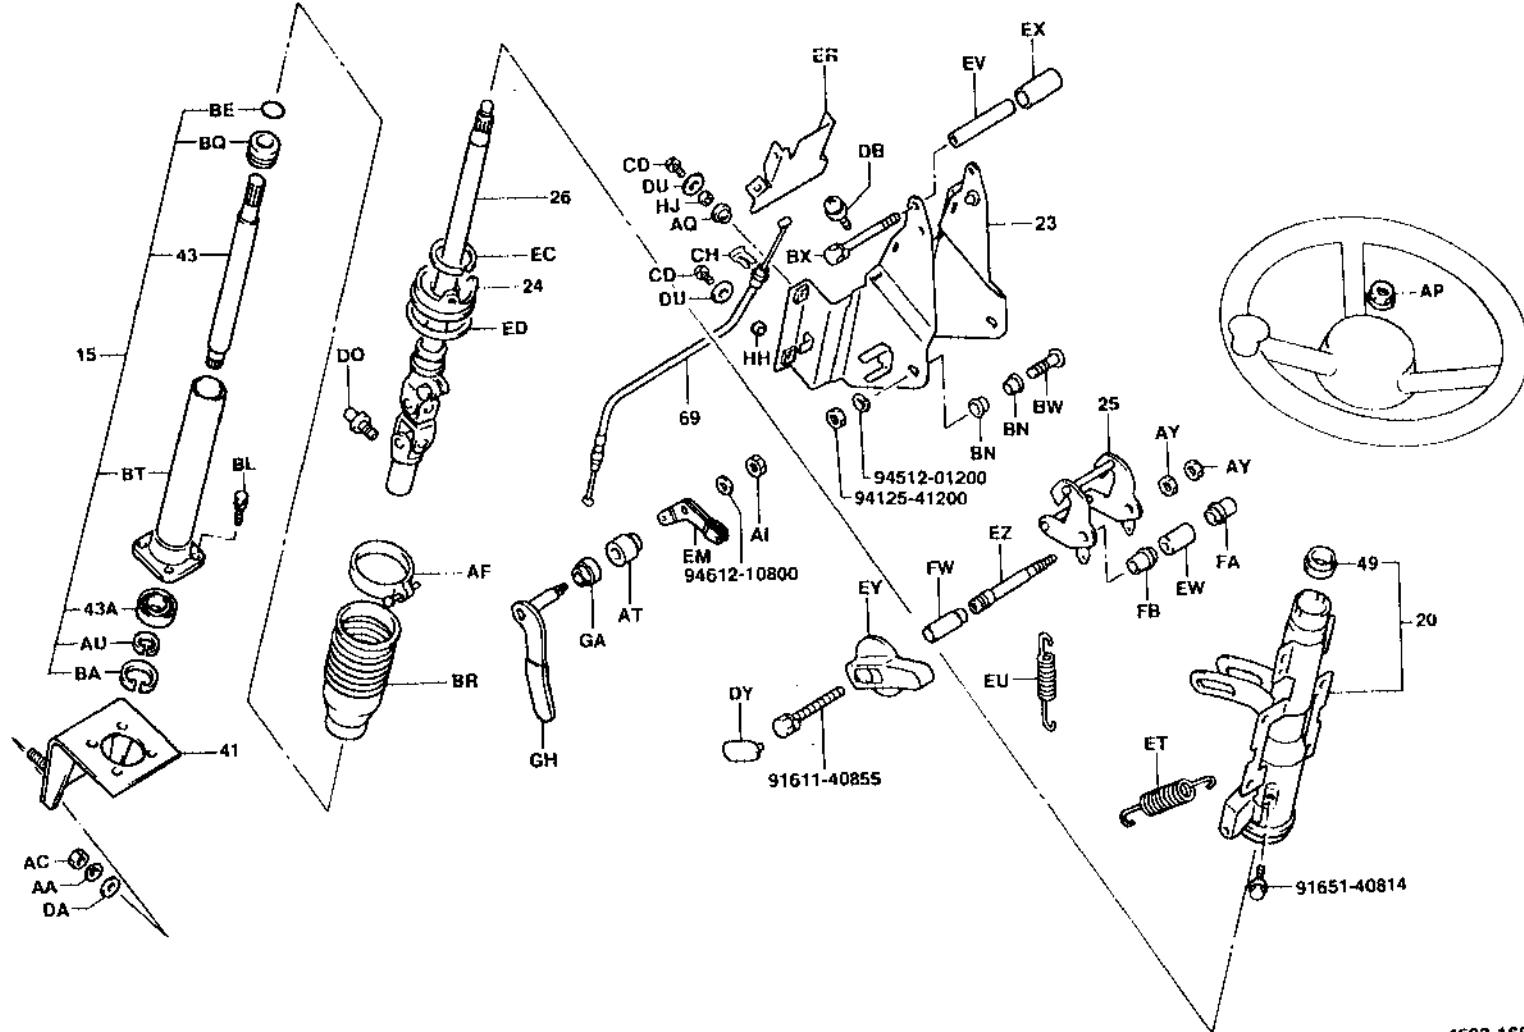

4502-168

G817-001

4502 168 0249

FIG. 4502
STEERING POST

4502

MAIN

95/04

PART NAME	PART NAME	QTY
14502-15	IPOST ASSY, STEERING	1
14502-20	IJACKET SUB-ASSY, MAST	1
14502-23	IBRACKET SUB-ASSY, TILT STEERING	1
14502-24	ISTOPPER SUB-ASSY, STEERING SHAFT	1
14502-25	ISTOPPER SUB-ASSY, STEERING	1
14502-26	ISHAFT SUB-ASSY, TILT STEERING	1
14502-41	IBRACKET, STEERING	1
14502-43	ISHAFT, STEERING MAIN	1
14502-43A	IBEARING (FOR STEERING MAIN SHAFT)	1
14502-49	IGROMMET, STEERING COLUMN (INSULATOR)	1
14502-69	IWIRE, TILT STEERING	1
14502-AA	IHASHER, SPRING	2
14502-AC	INUT	2
14502-AF	ICLAMP	1
14502-AI	INUT	1
14502-AL	IPUG, OIL	4
14502-AP	INUT	1
14502-AQ	IRUBBER, CUSHION, NO.1	2
14502-AT	ICOLLAR	1
14502-AU	IRING, SNAP	1
14502-AY	INUT, LOCK	2
14502-BA	IRING, SNAP	1
14502-BE	IRING, D	1
14502-BL	IBOLT, W/WASHER	4
14502-BN	IBUSHING	4
14502-BQ	IBUSHING	1
14502-BR	IBOLT, MAST JACKET	1
14502-BT	IJACKET	1
14502-BW	IBOLT	2
14502-BX	IBOLT	1
14502-CD	IBOLT	4
14502-CH	ICLIP	1
14502-DA	IWASHER	2
14502-DB	ISCREW	4
14502-DO	IFITTING, GREASE	1
14502-DU	IWASHER, PLATE	4
14502-DY	ICAP	1
14502-EC	IRING	1
14502-FD	IRING	1
14502-EM	IHOOK	1
14502-ER	ICOVER SUB-ASSY, STEERING BRACKET	1
14502-ET	ISPRING, TENSION	1
14502-FU	ISPRING, TENSION	1
14502-EV	PIPE	1
14502-EW	COLLAR, TILT LOCK	1
14502-EX	IHOSE	1
14502-EY	ILEVER SUB-ASSY, TILT LOCK	1
14502-EZ	IBOLT, TILT LOCK	1
14502-FA	INUT, ADJUSTING, RH	1
14502-FB	INUT, ADJUSTING, LH	1
14502-FW	PIPE	1
14502-GA	COLLAR	1
14502-GH	ILEVER SUB-ASSY, TILT LOCK	1
14502-HH	COLLAR	2
14502-HJ	COLLAR	2


G817-002E

FIG. 4503
HYDROSTATIC STEERING VALVE

4503

MAIN

95/10

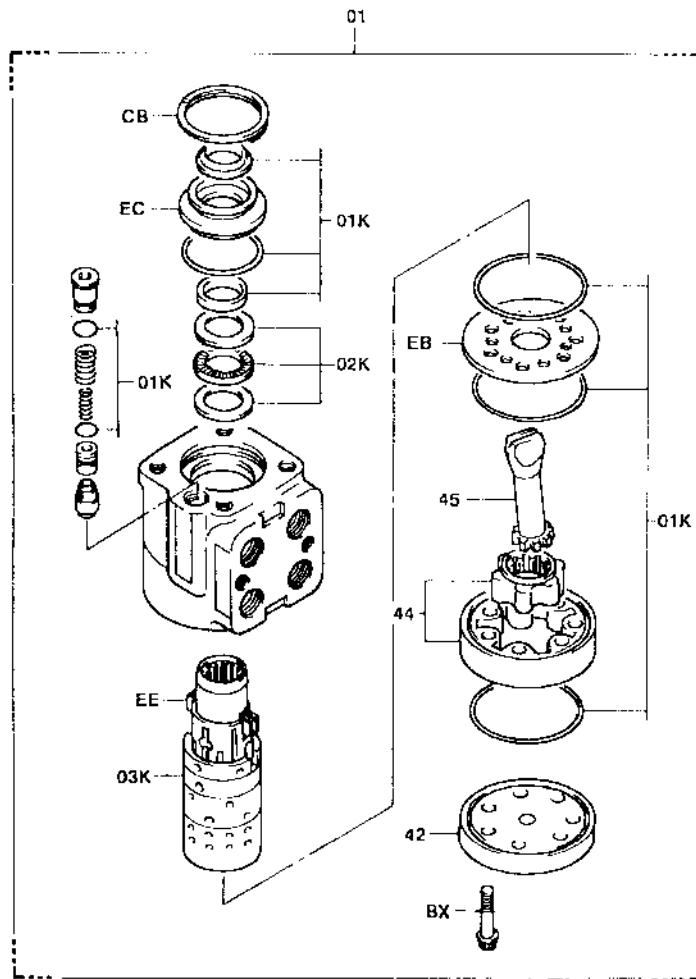

4503-019C


PART NAME CODE	PART NAME	QTY
4503-01	VALVE ASSY, HYDROSTATIC STEERING	1
4503-01K	VALVE D/M KIT, HYDROSTATIC STEERING	1
4503-02K	BEARING KIT	1
4503-03K	SPRING KIT	1
4503-42	CAP, END	1
4503-44	GFROTOR	1
4503-45	DRIVE	1
4503-BX	SCREW	7
4503-CR	RING, RETAINING	1
4503-EB	PLATE, WEAR	1
4503-EC	STOPPER, SEAL	1
4503-EE	PIN, CENTERING	1

G817-001E

FIG.4507
DRAG LINK & STEERING PIPING

4507

MAIN 95/04

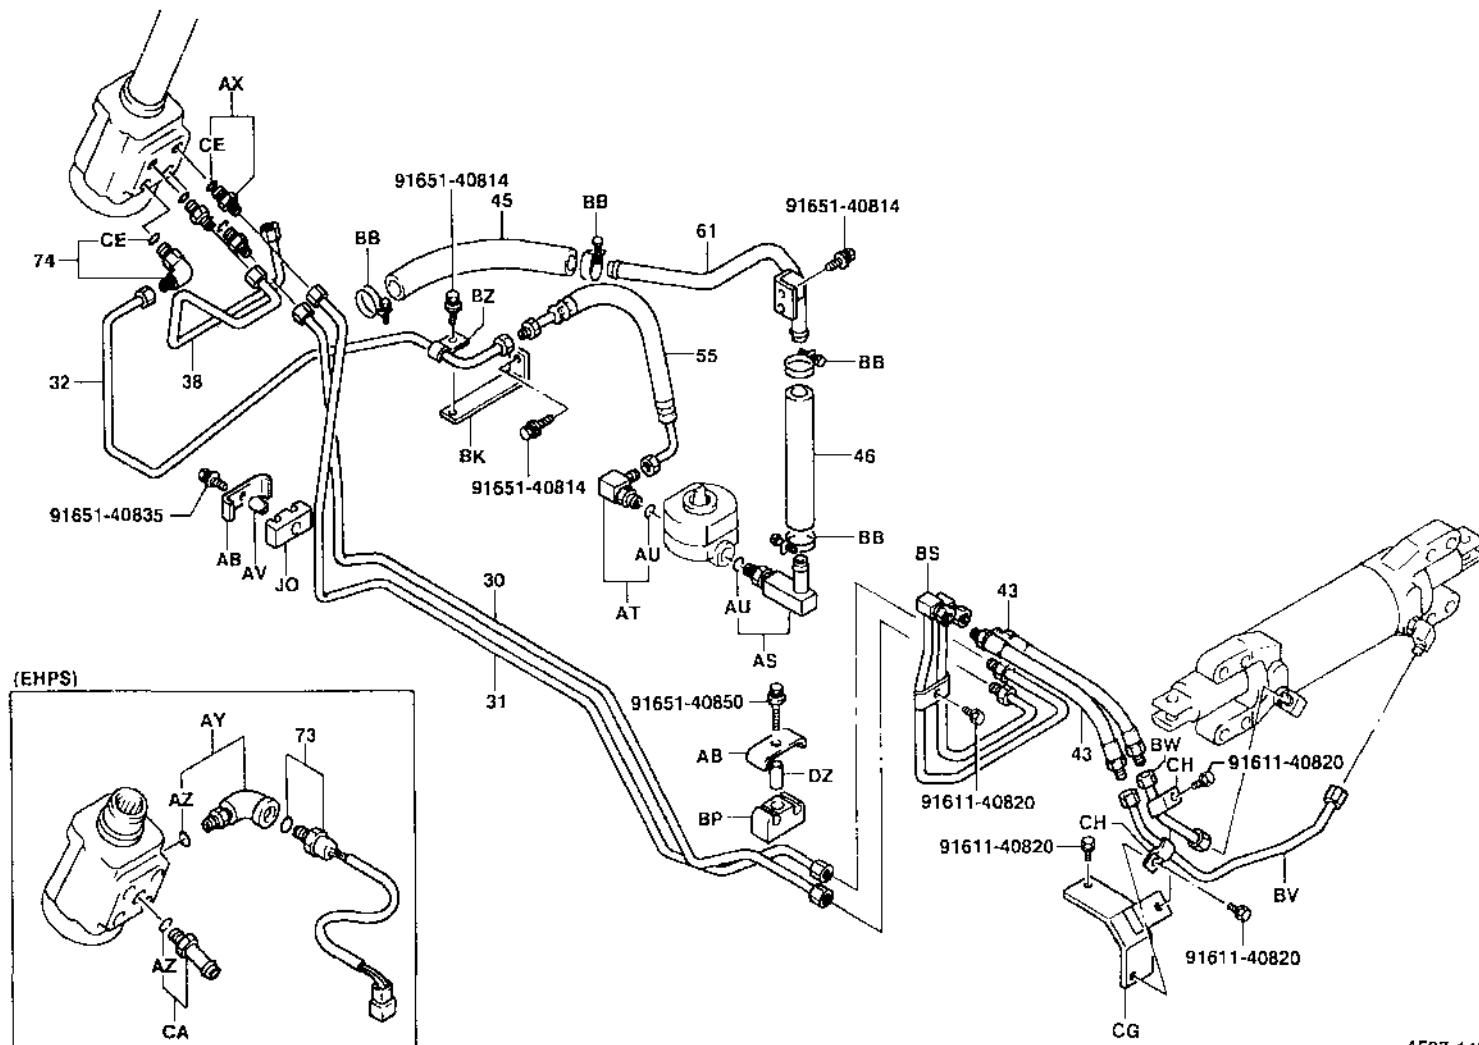

4507-140

G817-001

4507 140 0252

FIG. 4507
DRAG LINK & STEERING PIPING

4507

MAIN

95/04


PART NAME	PART NAME	QTY
CODE		
14507-30	PIPE SUB-ASSY, NO.1 (STEERING TO CYLINDER)	1
14507-31	PIPE SUB-ASSY, NO.2 (STEERING TO CYLINDER)	1
14507-32	PIPE ASSY (PUMP TO STEERING)	1
14507-38	PIPE SUB-ASSY (VALVE TO STEERING)	1
14507-43	HOSE, POWER CYLINDER, NO.2	2
14507-45	HOSE, POWER STEERING PUMP SUCTION	1
14507-46	HOSE, HIGH PRESSURE (PUMP TO STEERING)	1
14507-55	HOSE, LOW PRESSURE	1
14507-61	PIPE SUB-ASSY, SUCTION	1
14507-73	SWITCH ASSY, OIL PRESSURE	1
14507-74	VALVE, INLET CHECK	1
14507-AB	CLAMP, PIPE	2
14507-A5	FITTING	1
14507-AT	FITTING	1
14507-AU	RING, O	2
14507-AV	PIPE	1
14507-AX	FITTING	3
14507-AY	FITTING	1
14507-AZ	RING, O	2
14507-BB	CLAMP	4
14507-BK	PLATE	1
14507-BP	RUBBER, CUSHION	1
14507-BS	PIPE SUB-ASSY, POWER CYLINDER	1
14507-BV	PIPE SUB-ASSY, POWER CYLINDER	1
14507-BW	PIPE SUB-ASSY, POWER CYLINDER	1
14507-BZ	CLAMP	1
14507-CA	FITTING	1
14507-CE	RING, O	4
14507-CG	BRACKET SUB-ASSY, PIPE CLAMP	1
14507-CH	CLAMP	2
14507-DZ	PIPE	1
14507-JD	RUBBER, CUSHION	1

G817-002E

FIG. 4510
STEERING OIL PUMP

4510

MAIN 95/04

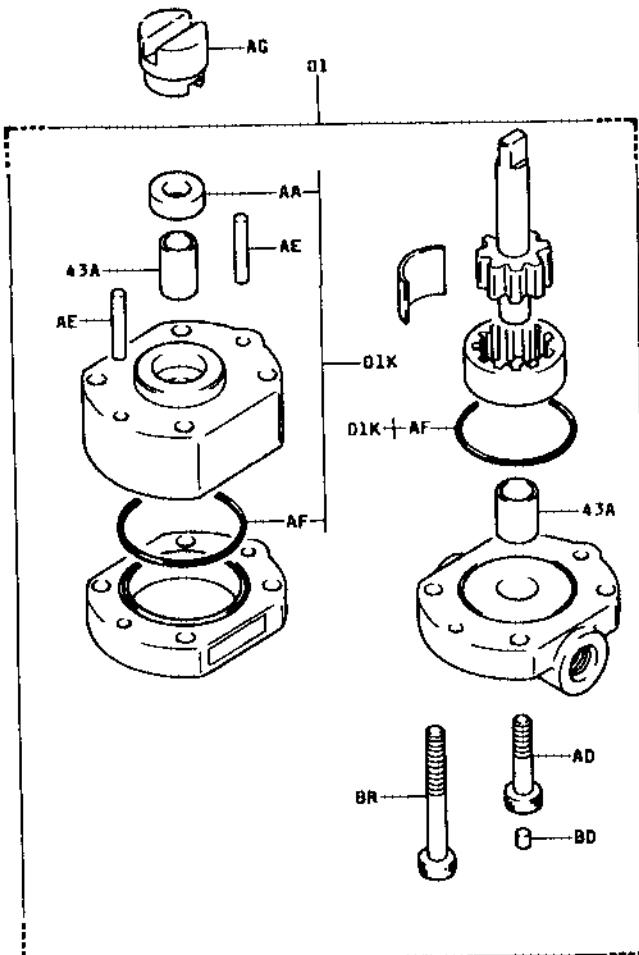

4510-01BB

PART NAME CODE	PART NAME	QTY
4510-01	PUMP ASSY, POWER STEERING	1
4510-01K	PUMP KIT, POWER STEERING	1
4510-4SA	BUSHING (FOR PINION SHAFT)	2
4510-AA	SEAL, OIL	1
4510-AD	BOLT	2
4510-AE	PIN	2
4510-AF	RING, O	2
4510-AG	JOINT, OLDHAM	1
4510-BD	PLUG	2
4510-BR	SCREW	2


G817-001E

FIG. 4601
PARKING BRAKE

4601

MAIN

95/04

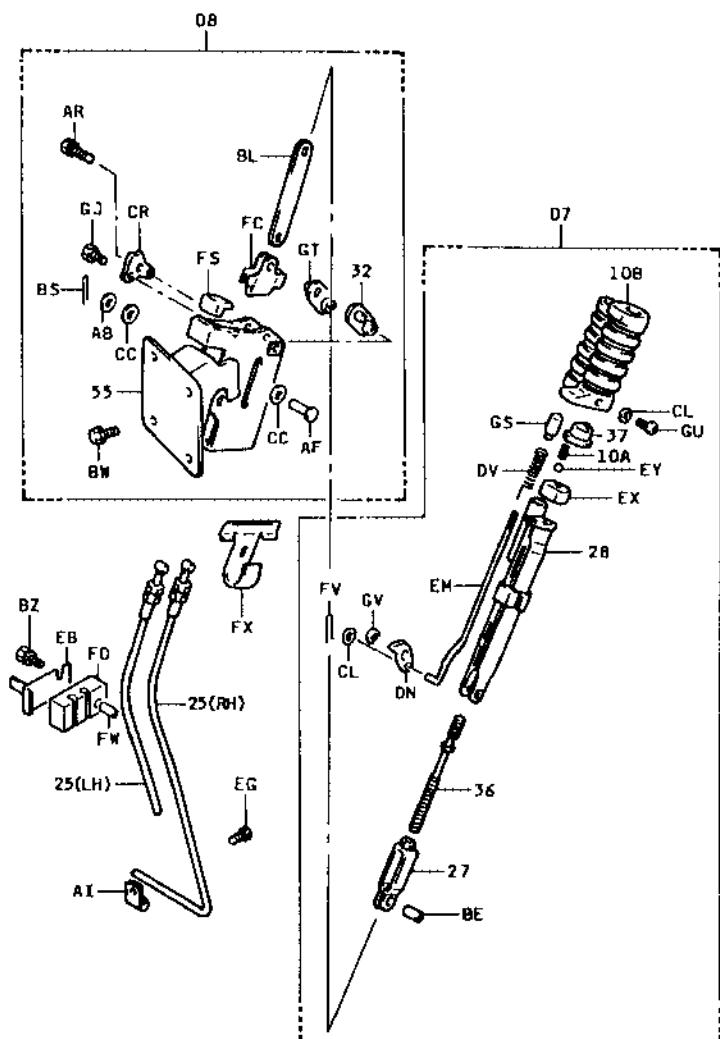

4601-106

PART NAME	PART NAME	QTY
CODE		
4601-07	LEVER SET, PARKING BRAKE	1
4601-08	BRACKET SET, PARKING BRAKE	1
4601-10A	SPRING, COMPRESSION	1
4601-10B	KNOB, SUB-ASSY, PARKING BRAKE	1
4601-25	CABLE SUB-ASSY, PARKING BRAKE, NO.2	1
4601-27	CLEVIS SUB-ASSY	1
4601-28	LEVER SUB-ASSY, PARKING BRAKE	1
4601-32	LINK SUB-ASSY, PARKING BRAKE, NO.1	1
4601-34	ROD SUB-ASSY, PARKING BRAKE	1
4601-37	KNOB SUB-ASSY, PARKING BRAKE RELEASE ROD	1
4601-55	BRACKET SUB-ASSY, PARKING BRAKE	1
4601-AB	WASHER, PLATE	1
4601-AC	PIN, W/HOLE	1
4601-AI	CLAMP	1
4601-AR	BOLT	1
4601-BE	PIN	1
4601-BL	PLATE, PARKING BRAKE	1
4601-BS	PIN, COTTER	1
4601-BW	BOLT	4
4601-BZ	BOLT	2
4601-CC	WASHER	2
4601-CL	WASHER	2
4601-CR	SECTOR, PARKING BRAKE LEVER	1
4601-DH	PAWL, PARKING BRAKE	1
4601-DV	SPRING, COMPRESSION	1
4601-EB	CLAMP, BRAKE CABLE	2
4601-EG	BOLT	1
4601-EM	ROD, PARKING BRAKE	1
4601-EX	KNOB	1
4601-EY	BALL	1
4601-FC	HOOK	1
4601-FD	RUBBER, PARKING BRAKE	2
4601-FS	STOPPER	1
4601-FV	PIN, COTTER	1
4601-FW	PIPE	2
4601-FX	STOPPER	1
4601-GJ	BOLT	1
4601-GS	KNOB, PARKING BRAKE	1
4601-GT	LINK SUB-ASSY, RH	1
4601-GU	SCREW	1
4601-GV	RING, E	1

GB17-001E


FIG. 4602
DEAD-MAN BRAKE

4602

MAIN

95/04

(DEAD-MAN) 11/21

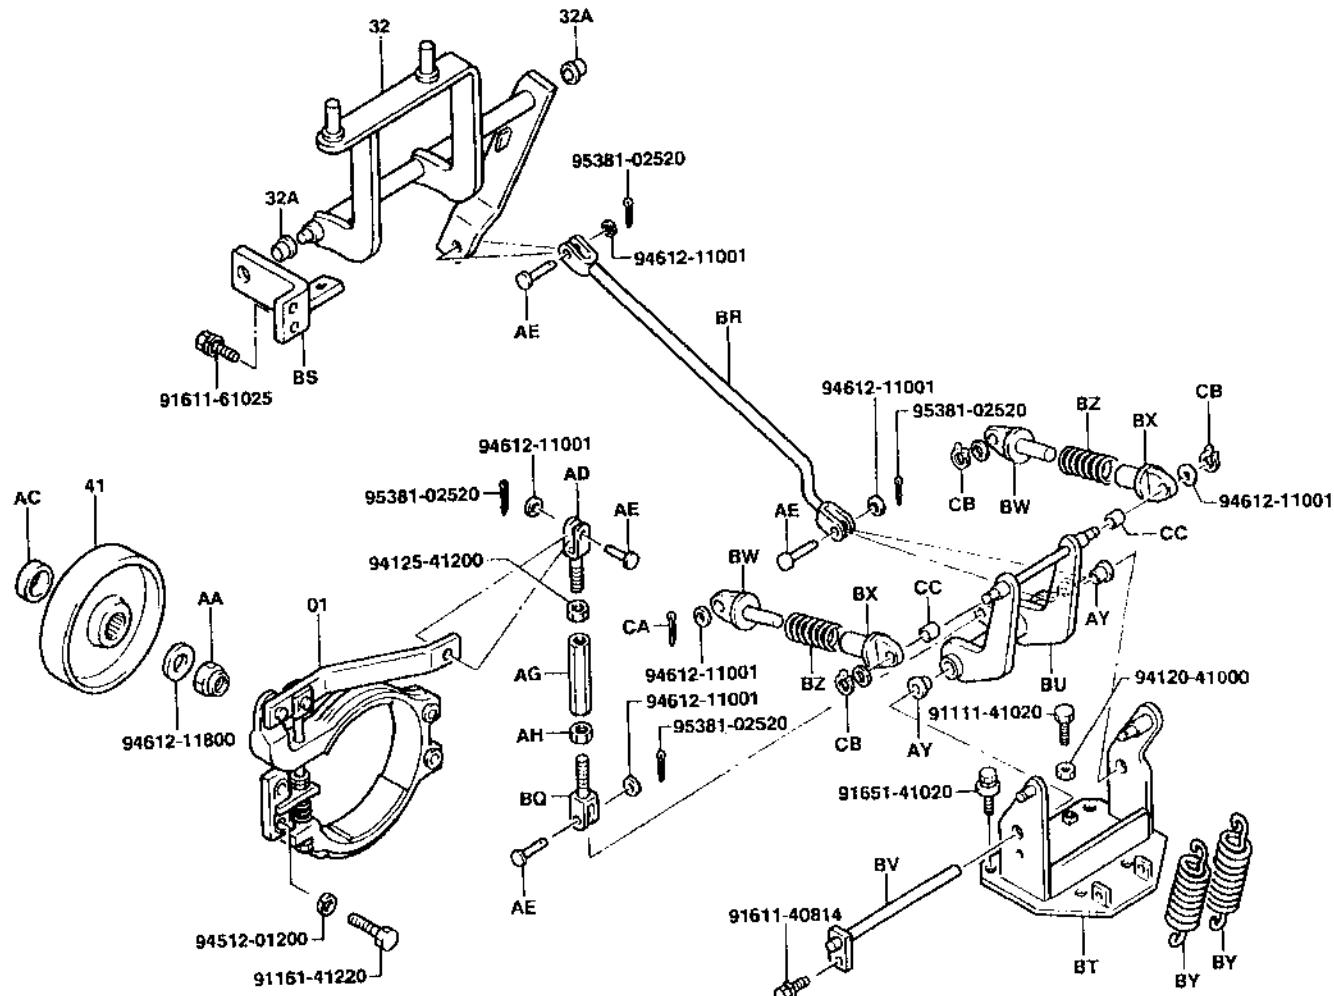

4602-009

G817-001

4602 009 0256


FIG. 4602
DEAD-MAN BRAKE

4602

MAIN

95/04

(DEAD-MAN) 12/21

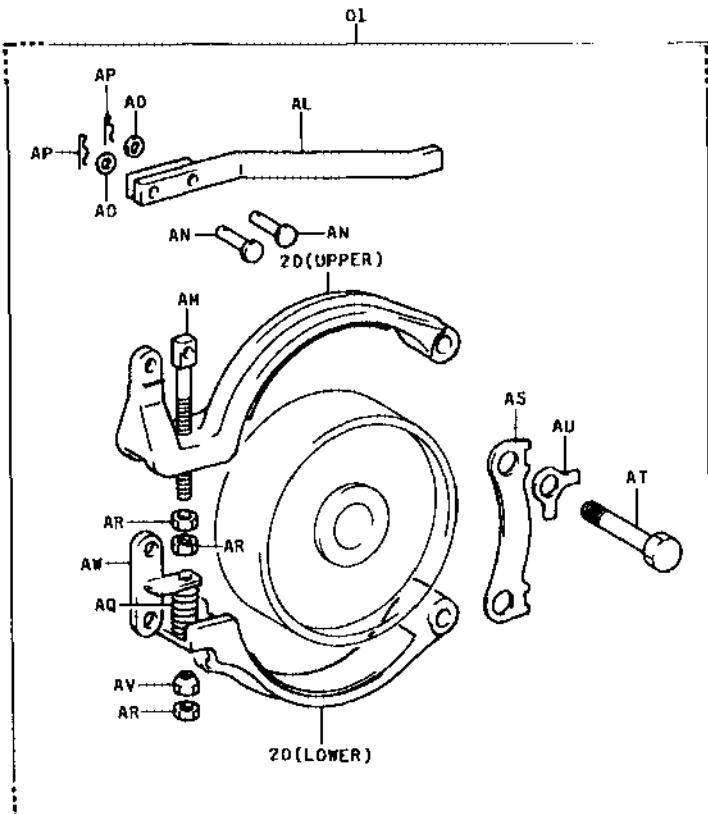

PART NAME CODE	PART NAME	QTY
4602-01	BRAKE ASSY, DEAD-MAN	1
4602-20	I SHOF SUB-ASSY, BRAKE	1
4602-32	I LIN SUB-ASSY, DEAD-MAN BRAKE	1
4602-32A	I BUSHING (FOR BRAKE LINK)	2
4602-41	I DRUM, DEAD-MAN BRAKE	1
4602-44	I NUT, SELF LOCK	1
4602-4C	I COLLAR	1
4602-4D	I ROD SUB-ASSY, DEAD-MAN BRAKE	1
4602-4E	I PIN, W/HOLE	4
4602-4G	I TURNBUCKLE	1
4602-4H	I NUT	1
4602-4L	I LEVER ASSY, BRAKE	1
4602-4M	I STRUT	1
4602-4N	I PIN, BRAKE LEVER	2
4602-4O	I WASHER, PLATE	2
4602-4P	I PIN, SNAP	2
4602-4Q	I SPRING, SHOE RETURN	1
4602-4R	I NUT	3
4602-4S	I PLATE, GUIDE	1
4602-4T	I STUD	2
4602-4U	I WASHER, LOCK	2
4602-4V	I NUT, STRUT	1
4602-4W	I BRACKET	1
4602-4Y	I BUSHING	2
4602-BQ	I ROD SUB-ASSY, DEAD-MAN BRAKE	1
4602-BR	I ROD SUB-ASSY, DEAD-MAN BRAKE	1
4602-BS	I BRACKET SUB-ASSY, LINK	1
4602-BT	I LINK SUB-ASSY, DEAD-MAN BRAKE	1
4602-BU	I PIN SUB-ASSY, BRAKE LINK	1
4602-BV	I BRACKET SUB-ASSY, SPRING	2
4602-BW	I BRACKET SUB-ASSY, SPRING	2
4602-BX	I SPRING, TENSION	2
4602-BZ	I SPRING, COMPRESSION	2
4602-CA	I PIN, COTTER	1
4602-CB	I RING, SHAFT SNAP	3
4602-CC	I BUSHING	4

4602-008


G817-002E

FIG. 4701
BRAKE PEDAL

4701

MAIN

95/04

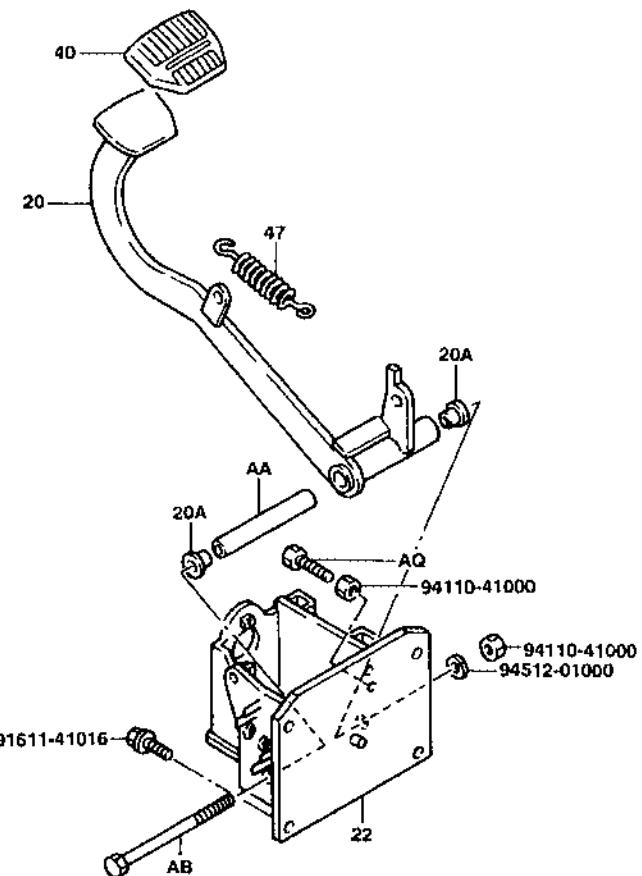

4701-159



G817-001E

FIG. 4702
BRAKE MASTER CYLINDER

4702

MAIN

95/04

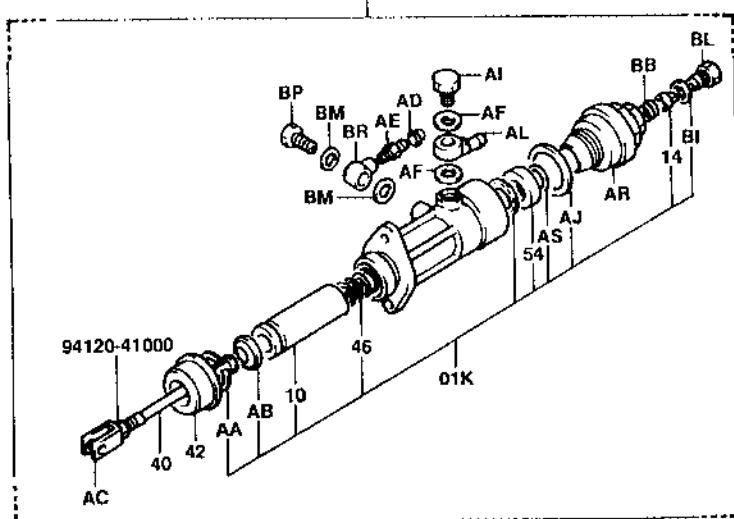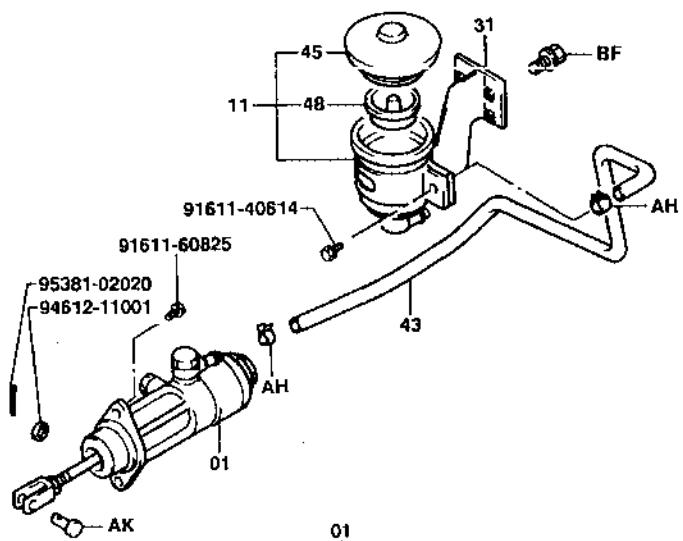

PART NAME CODE	PART NAME	QTY
4702-01	CYLINDER ASSY, MASTER	1
4702-01K	CYLINDER O/R KIT, MASTER	1
4702-10	PISTON SUB-ASSY, MASTER CYLINDER	1
4702-11	RESERVOIR SETI, MASTER CYLINDER	1
4702-14	VALVE ASSY	1
4702-31	BRACKET SUB-ASSY, RESERVOIR	1
4702-40	ROD, PUSH	1
4702-42	BOLT	1
4702-43	HOSE, RESERVOIR	1
4702-45	CAP, RESERVOIR	1
4702-46	SPRING, COMPRESSION (FOR PISTON RETURN)	1
4702-48	STRAINER	1
4702-54	CUP, CYLINDER	1
4702-AA	RING, HOLE SNAP	1
4702-AB	PLATE, PISTON STOP	1
4702-AC	CLEVIS, PUSH ROD	1
4702-AO	CAP, BLEEDER PLUG	1
4702-AE	PLUG, BLEEDER	1
4702-AF	GASKET	2
4702-AH	ICLIP	2
4702-AI	BOLT, UNION	1
4702-AJ	GASKET	1
4702-AK	PIN	1
4702-AL	UNION	1
4702-AR	CAP	1
4702-AS	SEAT	1
4702-BB	SPRING, COMPRESSION	1
4702-BF	BOLT	2
4702-BI	GASKET	1
4702-BL	PLUG	1
4702-BM	GASKET	2
4702-BP	BOLT, UNION	1
4702-BR	UNION	1


4702-075

G817-001E

FIG. 4714
BRAKE PIPE

4714

MAIN 95/04

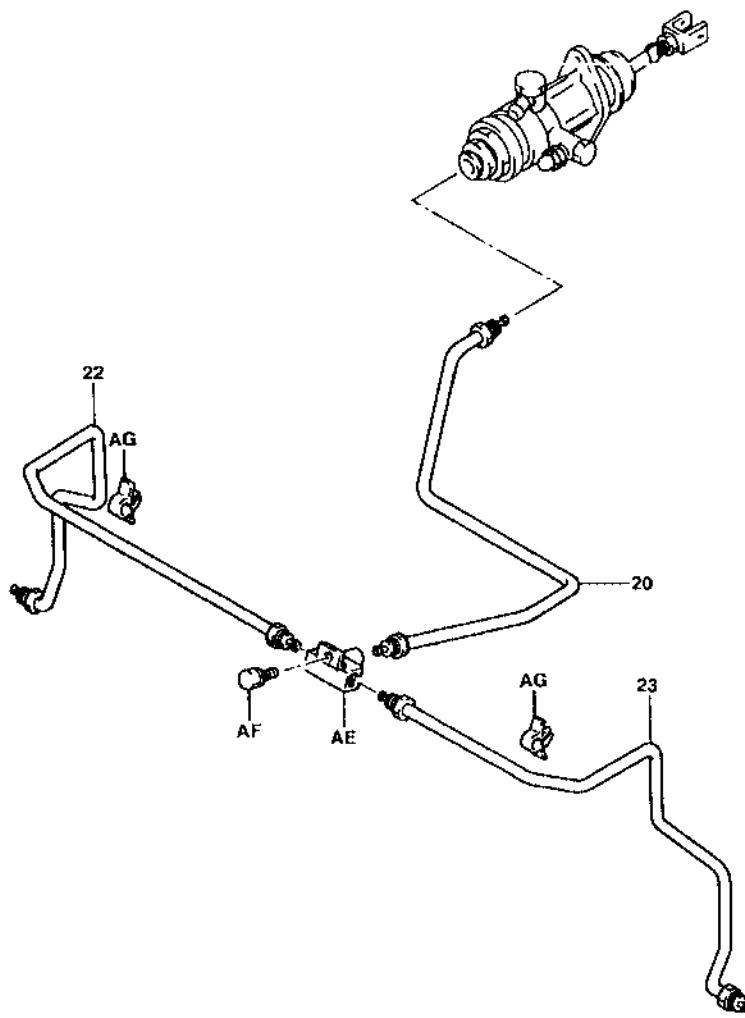

4714-155

PART NAME CODE	PART NAME	QTY
4714-20	PIPE SUB-ASSY, BRAKE, MAIN NO.1	1
4714-22	PIPE SUB-ASSY, BRAKE, RH NO.1	1
4714-23	PIPE SUB-ASSY, BRAKE, LH NO.1	1
4714-AE	3-WAY SUB-ASSY	1
4714-AF	BOLT	1
4714-AG	CLAMP	2


G817-001E

FIG. 4715
DRUM BRAKE

4715

MAIN

95/10

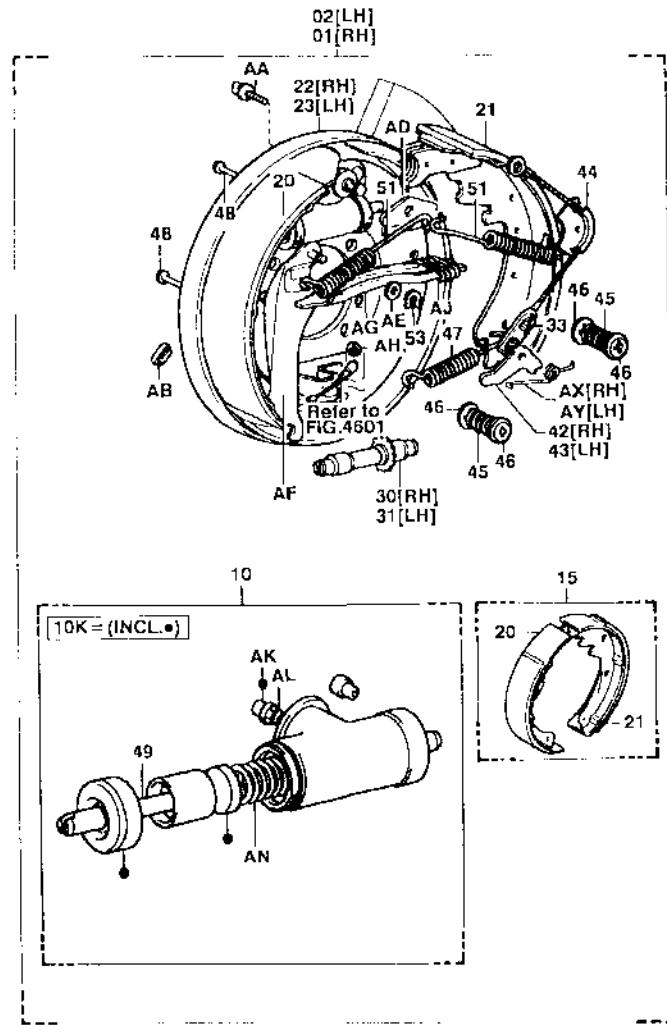

PART NAME CODE	PART NAME	QTY
4715-01	BRAKE ASSY, RH	1
4715-02	BRAKE ASSY, LH	1
4715-10	CYLINDER ASSY, WHEEL	2
4715-10K	CYLINDER O/H KIT, WHEEL	2
4715-15	SHOE SET, BRAKE	1
4715-20	SHOE SUB-ASSY (FOR FRONT OR UPPER)	2
4715-21	SHOE SUB-ASSY (FOR REAR OR LOWER)	1
4715-22	PLATE SUB-ASSY, BACKING, RH	1
4715-23	PLATE SUB-ASSY, BACKING, LH	1
4715-30	SCREW SUB-ASSY, ADJUSTING, RH	1
4715-31	SCREW SUB-ASSY, ADJUSTING, LH	1
4715-33	CABLE & FITTING SUB-ASSY	2
4715-41	CUP, WHEEL CYLINDER PISTON	4
4715-42	LEVER, AUTOMATIC ADJUSTMENT, RH	1
4715-43	LEVER, AUTOMATIC ADJUSTMENT, LH	1
4715-44	GUIDE, CABLE	2
4715-45	SPRING, SHOE HOLD DOWN	4
4715-46	CUP, SHOE HOLD DOWN	8
4715-47	SPRING, ADJUSTER	2
4715-48	PIN, SHOE HOLD DOWN	4
4715-49	ROD, PUSH	2
4715-51	SPRING, ANCHOR TO SHOE	2
4715-53	RING, PARKING LEVER RETAINING	2
4715-AA	BOLT & WASHER SET	4
4715-AB	COVER, HOLE	2
4715-AD	PLATE, SHOE GUIDE	2
4715-AE	WASHER, SPRING	2
4715-AF	LEVER SUB-ASSY, PARKING	1
4715-AG	STRUT, LEVER	2
4715-AH	RING, SNAP	2
4715-AJ	SPRING, STRUT TO SHOE	2
4715-AK	CAP, BLEEDER SCREW	2
4715-AL	SCREW, BLEEDER	2
4715-AN	SPRING, WHEEL CYLINDER	2
4715-AX	SPRING, LEVER RETURN, RH	1
4715-AY	SPRING, LEVER RETURN, LH	1


4715-0100

G817-001E

FIG. 5101
FRAME & WEIGHT

5101

MAIN 97/05

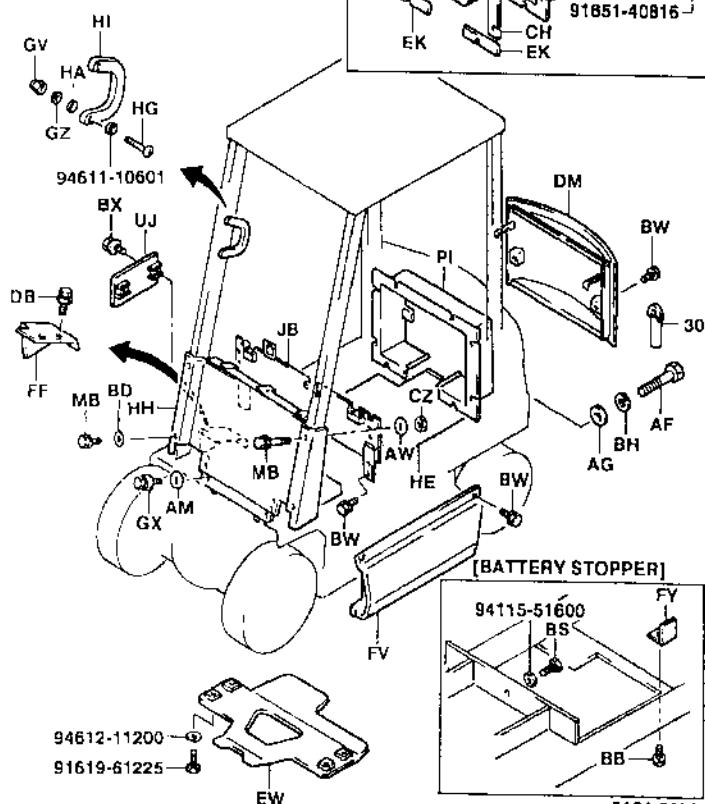

PART NAME	PART NAME	QTY
CODE		
5101-30	DRAWBAR SUB-ASSY	1
5101-4F	BOLT, HEXAGON	2
5101-AG	WASHER, PLATE	2
5101-AM	WASHER, PLATE	6
5101-BB	BOLT	2
5101-BD	WASHER, PLATE	4
5101-BH	WASHER, SPRING	2
5101-BS	BOLT	1
5101-BW	BOLT	10
5101-BX	BOLT	2
5101-CG	RUBBER	1
5101-CH	RUBBER	2
5101-CV	PLATE	1
5101-DB	BOLT	4
5101-DM	COVER SUB-ASSY, REAR	1
5101-EK	IRUBBER	2
5101-EW	IPLADE SUB-ASSY, SKID	1
5101-EZ	IRUBBER	2
5101-FF	COVER	1
5101-FR	ISPONGE	1
5101-FV	COVER SUB-ASSY, SIDE FRAME	2
5101-FY	STOPPER	2
5101-GF	RUBBER	2
5101-GV	NUT	2
5101-GX	BOLT	6
5101-GZ	WASHER, SPRING	2
5101-HA	WASHER, PLATE	2
5101-HE	COVER SUB-ASSY, LOWER	1
5101-HG	SCREW	2
5101-HH	IROTECTOR	1
5101-HI	IGRIP	1
5101-JB	IPLADE SUB-ASSY	1
5101-NB	IRUBBER	1
5101-PI	ICASE	1
5101-UJ	COVER SUB-ASSY, PS MOTOR	1


G817-001E

FIG. 5201
HOOD & HINGE

5201

MAIN

97/05

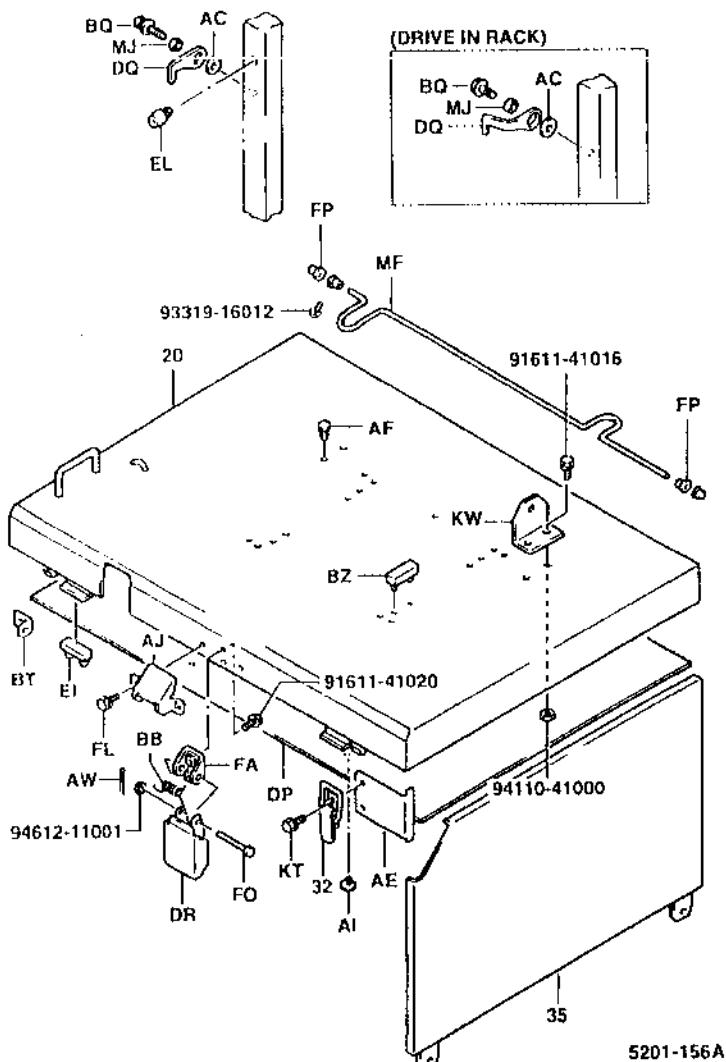

PART NAME CODE	PART NAME	QTY
S201-20	HOOD SUB-ASSY, ENGINE (OR BATTERY)	1
S201-32	CATCH Sub-ASSY (FOR HOOD)	2
S201-35	HOOD SUB-ASSY, SIDE	1
S201-AC	WASHER, PLATE	99
S201-AE	HOOK, HOOD LOCK	2
S201-AF	PLUG, HOLE	4
S201-AI	CLIP	6
S201-AJ	COVER	1
S201-AW	PIN, SNAP	1
S201-BB	SPRING	1
S201-BQ	BOLT	1
S201-BT	HOOK	1
S201-BZ	CUSHION	4
S201-DP	SHIELD	1
S201-DQ	HOOK	1
S201-DR	HOOK Sub-ASSY	1
S201-EI	CUSHION	2
S201-EL	CUSHION	2
S201-FA	BRACKET Sub-ASSY	1
S201-FL	BOLT, W/WASHER	2
S201-FD	PIN	1
S201-FP	BUSHING	4
S201-KT	BOLT	4
S201-KW	BRACKET	2
S201-MF	BAR	1
S201-MJ	COLLAR	2


G817-001E

FIG.5301
INSTRUMENT PANEL & FLOOR

5301

MAIN

95/04

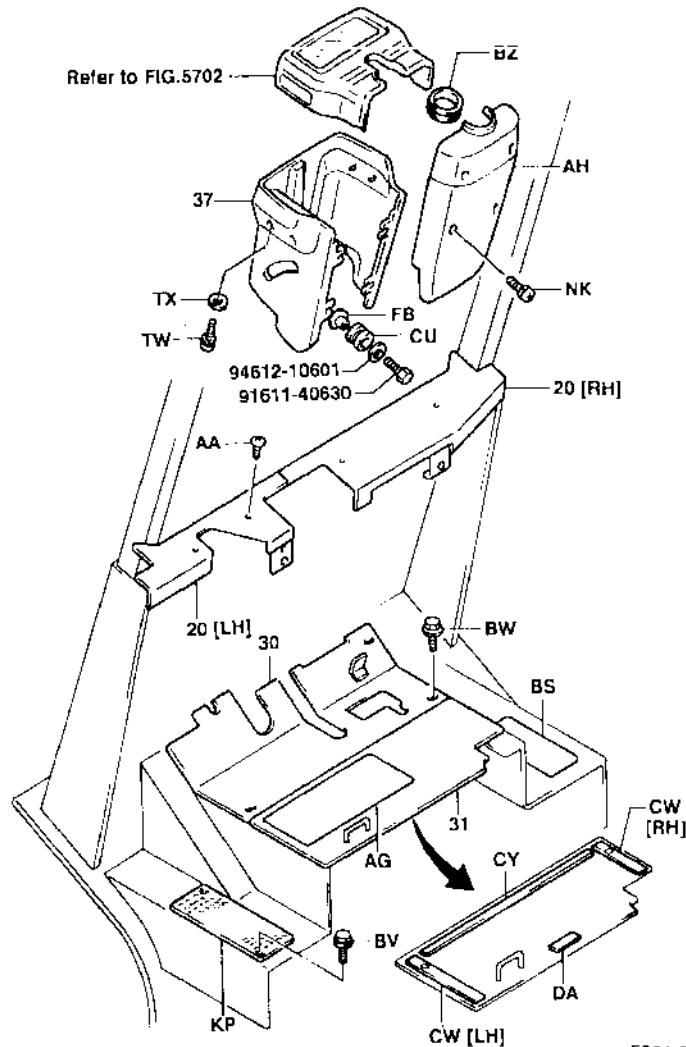

PART NAME CODE	PART NAME	QTY
5301-2D	PANEL SUB-ASSY, INSTRUMENT	1
5301-KA	TOE-BOARD SUB-ASSY, NO.1	1
5301-31	TOE-BOARD SUB-ASSY, NO.2	1
5301-37	COVER ASSY, METER CASE	1
5301-AA	SCREW	4
5301-AG	SAFETY WALK	1
5301-AH	COVER	1
5301-BS	SAFETY WALK	1
5301-BV	BOLT	2
5301-BW	BOLT	4
5301-BZ	GROMMET	1
5301-CU	RUBBER	4
5301-CW	RUBBER	1
5301-CY	RUBBER	1
5301-DA	RUBBER	1
5301-FB	SPACER	4
5301-KP	IMAT SUB-ASSY, STEP	1
5301-NK	SCREW	4
5301-TW	SCREW	5
5301-TX	WASHER, PLATE	5

G817-001E

FIG. 5308
DRIVER SEAT

5308

MAIN

95/04

STM (DEAD-MAN)

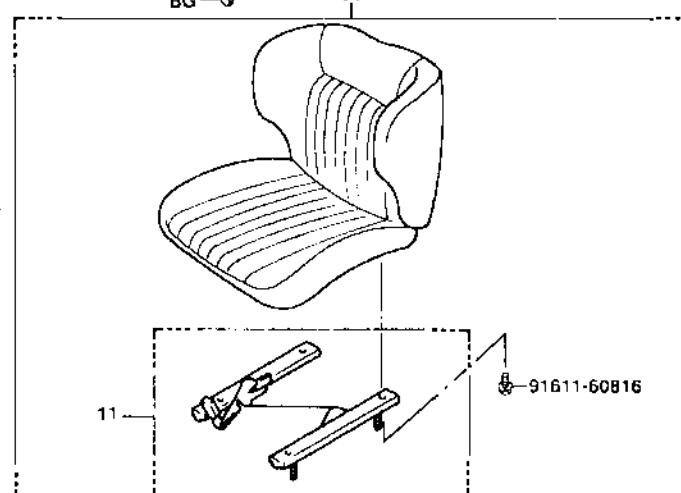
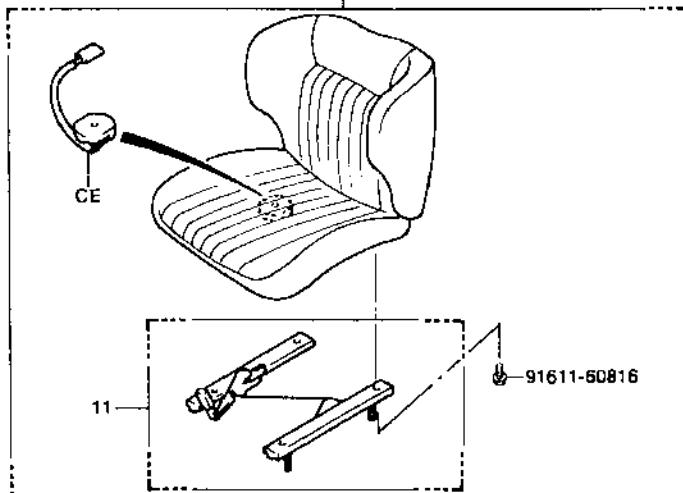
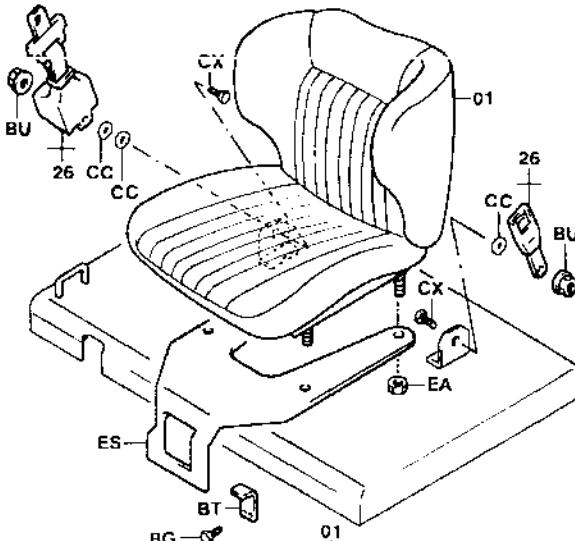
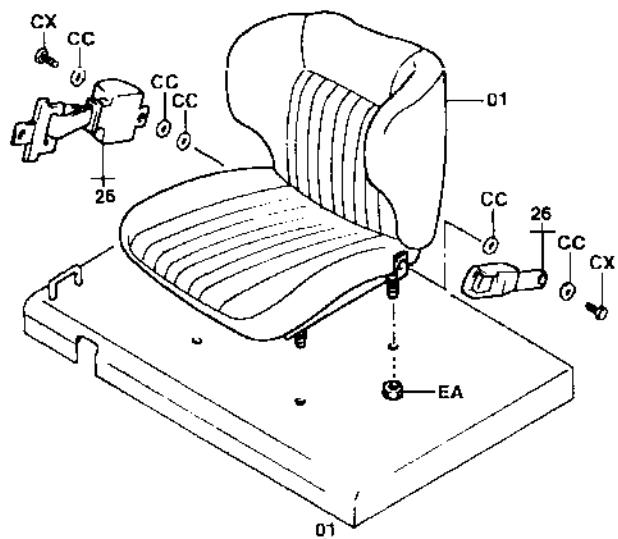




FIG. 5308
DRIVER SEAT

5308

MAIN

95/04

STM (DEAD-MAN)

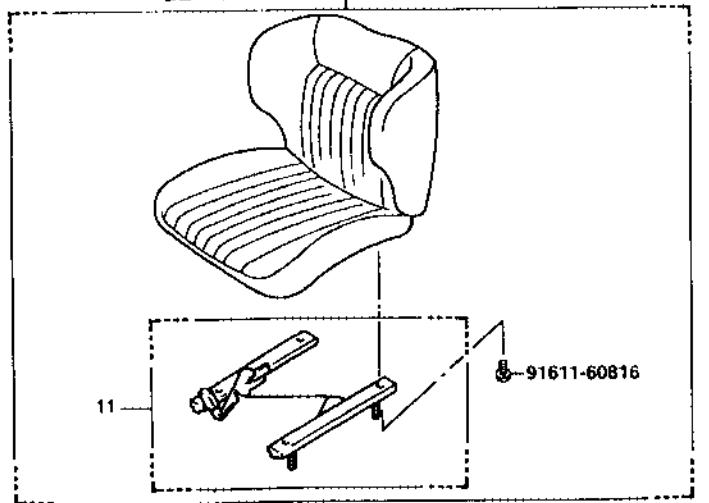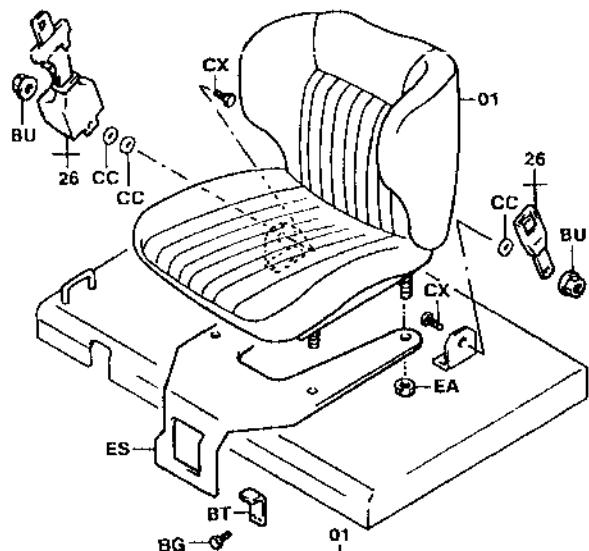

PART NAME	PART NAME	QTY
CODE		
5308-01	SEAT ASSY	1
5308-11	TRACK ASSY	1
5308-26	BELT ASSY, SEAT	1
5308-BG	BOLT	2
5308-BT	STOPPER	1
5308-BU	NUT	2
5308-CC	WASHER, PLATE	3- 5
5308-CE	SWITCH SUB-ASSY, SEAT	1
5308-CX	BOLT	2
5308-EA	NUT	4
5308-ES	BRACKET SUB-ASSY, SEAT	1

5308-183


G817-002E

FIG. 5401
HEAD GUARD & ACCESSORY

5401

MAIN

95/04

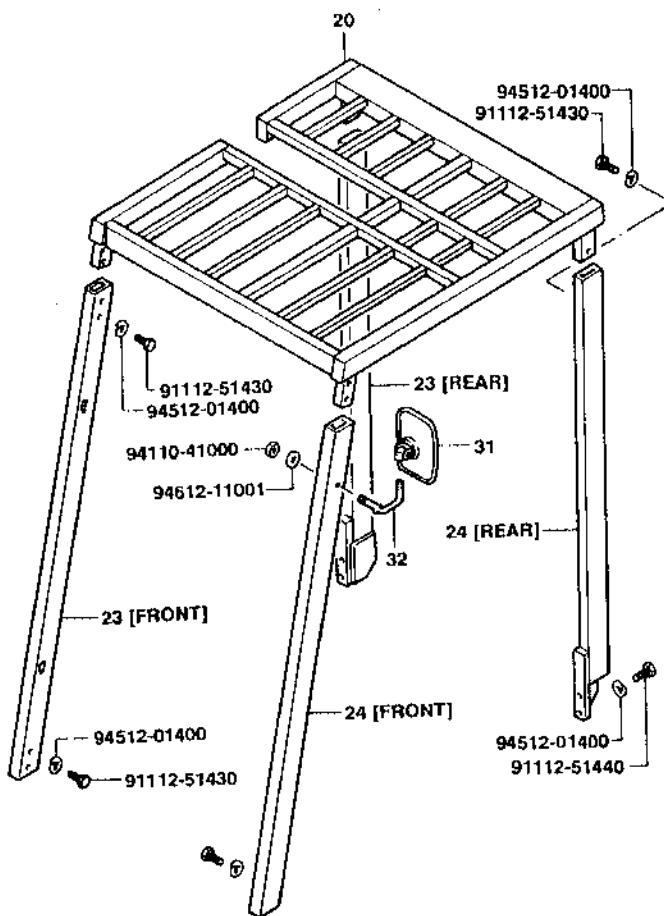

PART NAME CODE	PART NAME	QTY
15401-20	HEAD GUARD SUB-ASSY,	1
15401-23	PILLAR SUB-ASSY, RH	1
15401-24	PILLAR SUB-ASSY, LH	1
15401-31	MIRROR SUB-ASSY, BACK	2
15401-32	BRACKET SUB-ASSY, BACK MIRROR	1


5401-186

G817-001E

FIG.5405
INDICATOR PLATE

5405

MAIN 97/07

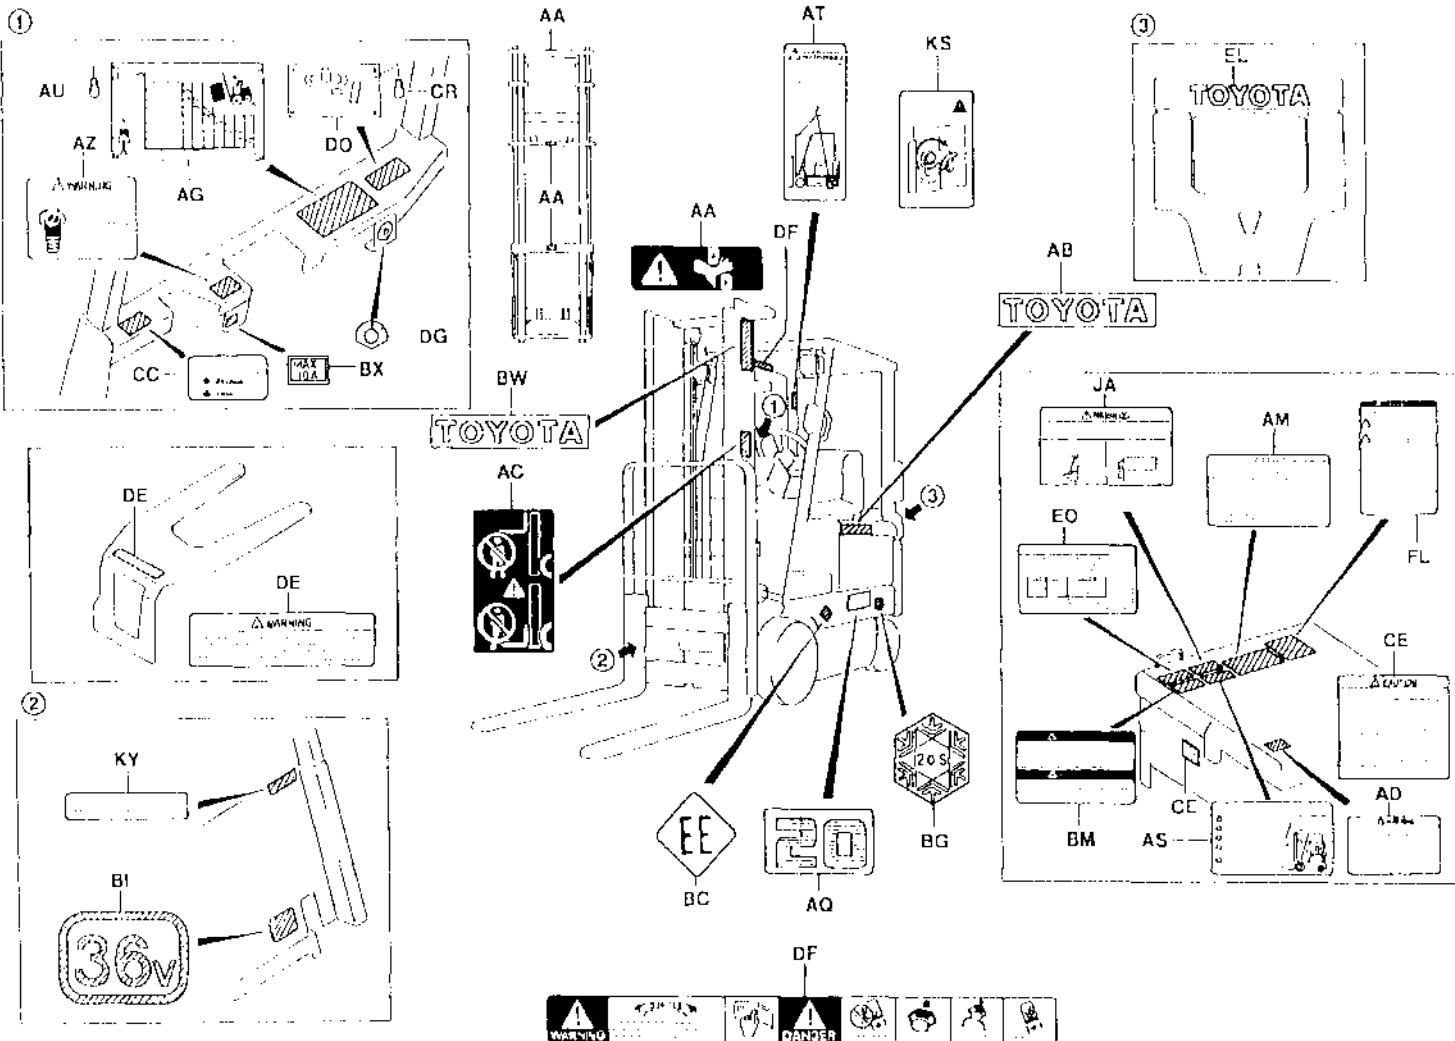

5405-468A

G817-001

L60-00A-006




FIG. 5405
INDICATOR PLATE

5405

MAIN

97/07

EVR

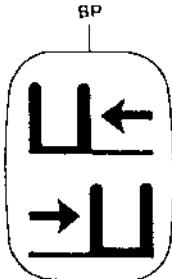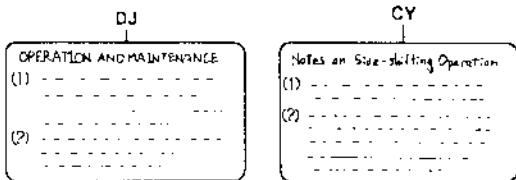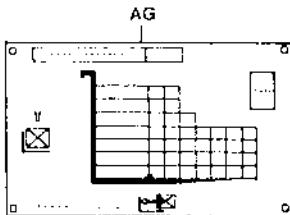

PART NAME	CODE	PART NAME	QTY
PLATE, CAUTION	5405-AA	PLATE, CAUTION	2 - 3
MARK, TOYOTA	5405-AB	PLATE, CAUTION	2
PLATE, CAUTION	5405-AC	PLATE, CAUTION	2
PLATE, CAUTION	5405-AD	PLATE, LOAD INDICATOR	1
PLATE, LOAD INDICATOR	5405-AG	PLATE, SERVICE INDICATOR	1
PLATE, CAPACITY INDICATOR	5405-AM	PLATE, INDICATOR	1
PLATE, INDICATOR	5405-AQ	PLATE, CAUTION	1
PLATE, CAUTION	5405-AT	TRIVIT	6
PLATE, CAUTION	5405-AU	PLATE, CAUTION	1
MARK, UL	5405-BZ	PLATE, TEMPERATURE	1
PLATE, VOLTAGE	5405-BG	PLATE, SAFETY DRIVE CHART	1
INDICATOR, SIDE SHIFT	5405-BM	INDICATOR, SIDE SHIFT	1
MARK, SYMBOL	5405-BW	PLATE, INDICATION	1
PLATE, CAUTION	5405-BX	PLATE, CAUTION	1
PLATE, CAUTION	5405-CC	PLATE, CAUTION	1
PLATE, CAUTION	5405-CE	PLATE, INDICATOR	1
PLATE, INDICATOR	5405-CY	PLATE, INDICATOR	1
PLATE, CAUTION	5405-DE	PLATE, CAUTION	1
PLATE, INDICATOR	5405-DF	MARK, TOYOTA	1
PLATE, CAUTION	5405-DG	PLATE, BATTERY CAPACITY	1
MARK, TOYOTA	5405-EL	PLATE, CAUTION	1
PLATE, BATTERY CAUTION	5405-EQ	PLATE, BATTERY CAUTION	1
PLATE, CAUTION	5405-FI	INDICATOR	1
PLATE, BATTERY CAUTION	5405-FL	PLATE, HOOD STAY CAUTION	1
	5405-JA		
	5405-KS		

5405-467

G817-002E


FIG.5602
WIRING & CLAMP

5602

MAIN

95/04

(1/2)

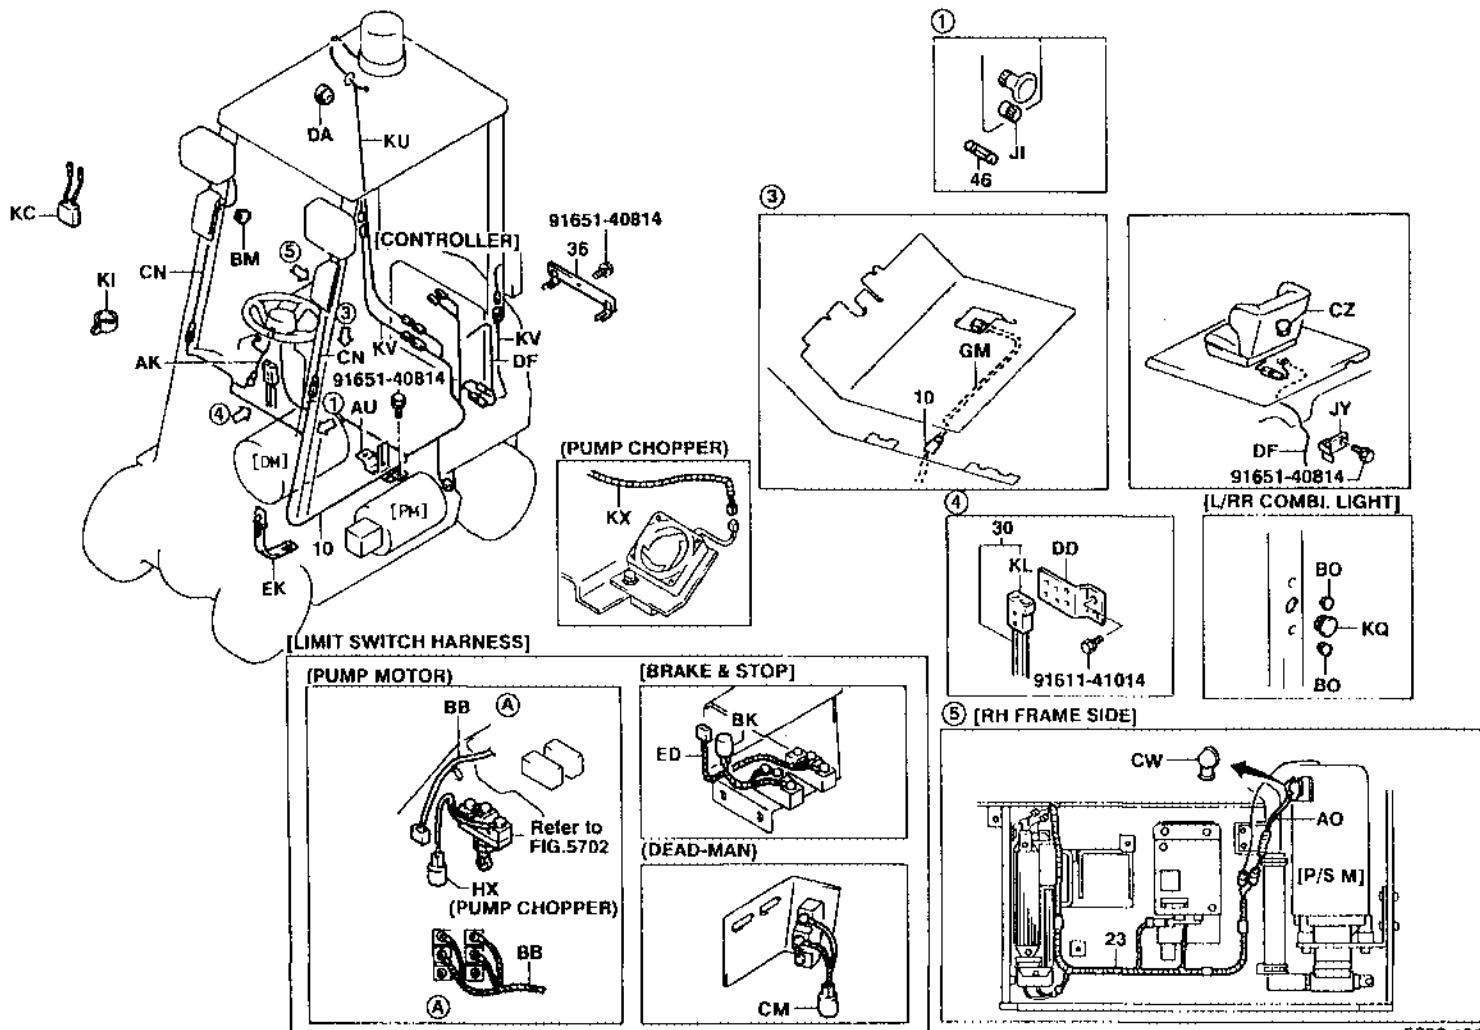

5602-182

G817-001

5602 182 0270

FIG. 5602
WIRING & CLAMP


5602

MAIN


95/04

(2/2)


P/N CODE	MARK
77	P4 - A
78	P5 - B
79	P6 - E
80	P7 - F
BP	P12 - A
CD	P13 - F
CD	N1 - F

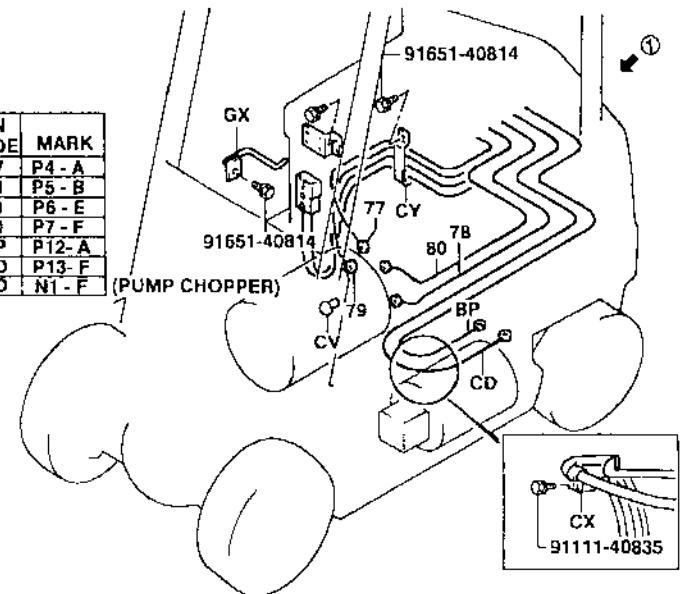

① [STD]

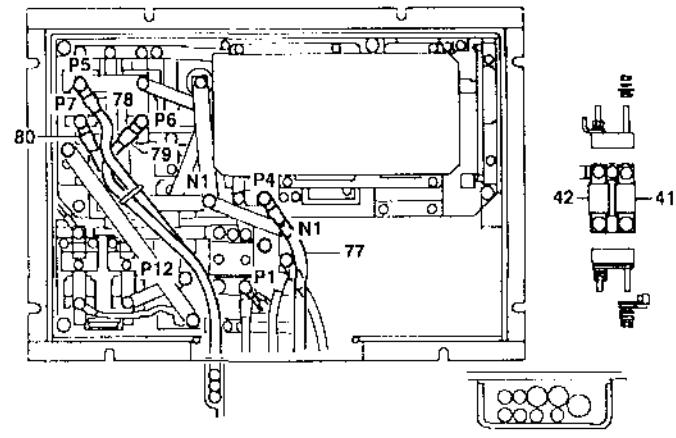

① (PUMP CHOPPER)

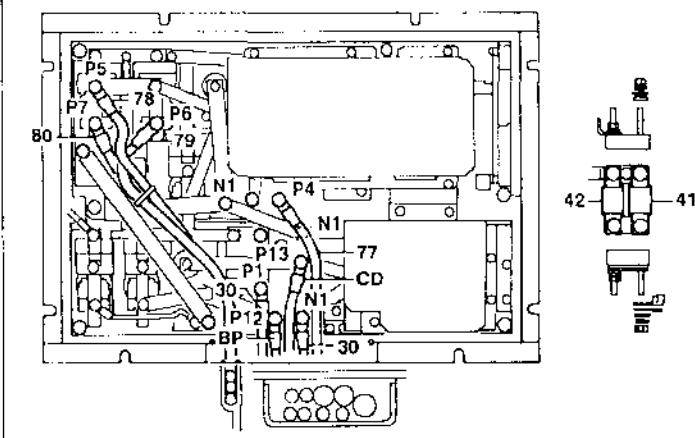

5602-183

G817-002

5602-183 0271


FIG.5602
WIRING & CLAMP

5602

MAIN 95/04

A48

A430,A450

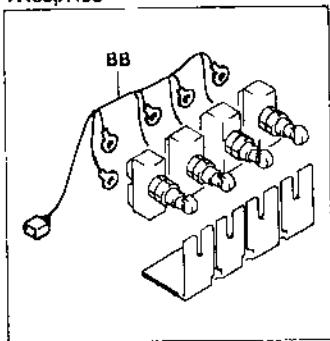

5602-181

PART NAME	PART NAME	QTY
CODE		
5602-10	HARNESS ASSY, WIRING	1
5602-23	WIRING SUB-ASSY, POWER STEERING	1
5602-30	CONNECTOR SUB-ASSY	1
5602-36	CLAMP SUB-ASSY, CABLE	1 - 2
5602-41	FUSE (F1)	1
5602-42	FUSE (F2)	1
5602-46	FUSE	2
5602-77	WIRING SUB-ASSY, DRIVE MOTOR	1
5602-78	WIRING SUB-ASSY, DRIVE MOTOR	1
5602-79	WIRING SUB-ASSY, DRIVE MOTOR	1
5602-80	WIRING SUB-ASSY, DRIVE MOTOR	1
5602-AK	HARNESS SUB-ASSY	1
5602-AD	HARNESS, POWER STEERING	1
5602-AU	CLAMP	2
5602-BB	HARNESS, LIMIT SWITCH	1
5602-BK	HARNESS, BRAKE SWITCH	1
5602-BM	GROMMET	2 - 4
5602-BQ	PLUG	4
5602-BP	WIRING SUB-ASSY, PUMP MOTOR	1
5602-CO	WIRING SUB-ASSY, PUMP MOTOR	1
5602-CM	HARNESS	1
5602-CN	HARNESS SUB-ASSY	2
5602-CV	CAP	6
5602-CW	CAP	2
5602-CX	CLAMP	1
5602-CY	CLAMP	1
5602-CZ	GROMMET	1
5602-DA	GROMMET	1
5602-DD	BRACKET, CONNECTOR	1
5602-DF	HARNESS, DEAD-MAN SWITCH	1
5602-ED	HARNESS	1
5602-EK	WIRE, EARTH	1
5602-GM	HARNESS	1
5602-GX	GUIDE SUB-ASSY, CABLE	1
5602-HX	HARNESS, PUMP CHOPPER	1
5602-JI	HOLDER, FUSE	1
5602-JY	CLAMP	1
5602-KC	ABSORBER	1
5602-KI	CLAMP	2
5602-KL	CONNECTOR	1
5602-KQ	PLUG	2
5602-KU	HARNESS	1
5602-KV	HARNESS	2
5602-KX	HARNESS	1


GB17-003E

FIG.5611
LAMP

5611

MAIN

97/05

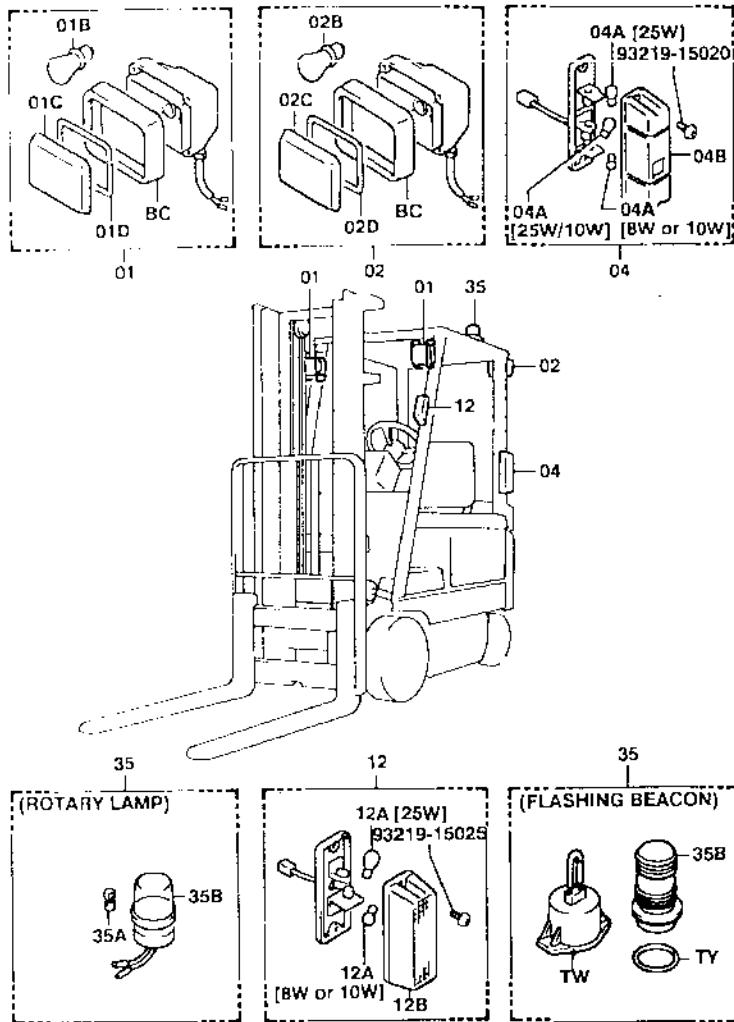

5611-163A




PART NAME CODE	PART NAME	QTY
5611-01	LAMP ASSY, HEAD	2
5611-01B	BULB (FOR HEAD LAMP)	2
5611-01C	LENS (FOR HEAD LAMP)	2
5611-01D	GASKET (FOR HEAD LAMP)	2
5611-02	LAMP ASSY, WORKING	1
5611-02B	BULB (FOR WORKING LAMP)	1
5611-02C	LENS (FOR WORKING LAMP)	1
5611-02D	GASKET (FOR WORKING LAMP)	1
5611-04	LAMP ASSY, REAR COMBINATION	2
5611-04A	BULB (FOR REAR COMBINATION LAMP)	2
5611-04B	LENS (FOR REAR COMBINATION LAMP)	2
5611-12	LAMP ASSY, FRONT COMBINATION	2
5611-12A	BULB (FOR FRONT COMBINATION)	2
5611-12B	LENS (FOR FRONT COMBINATION)	2
5611-35	LAMP ASSY, ROTARY	1
5611-35A	BULB (FOR ROTARY LAMP)	2
5611-35B	LENS (FOR ROTARY LAMP)	1
5611-BC	RIM	1
5611-TW	LAMP, STROBE	1
5611-TY	RING, O	1

G817-001E

FIG. 5612
LAMP BRACKET

5612

MAIN 97/05

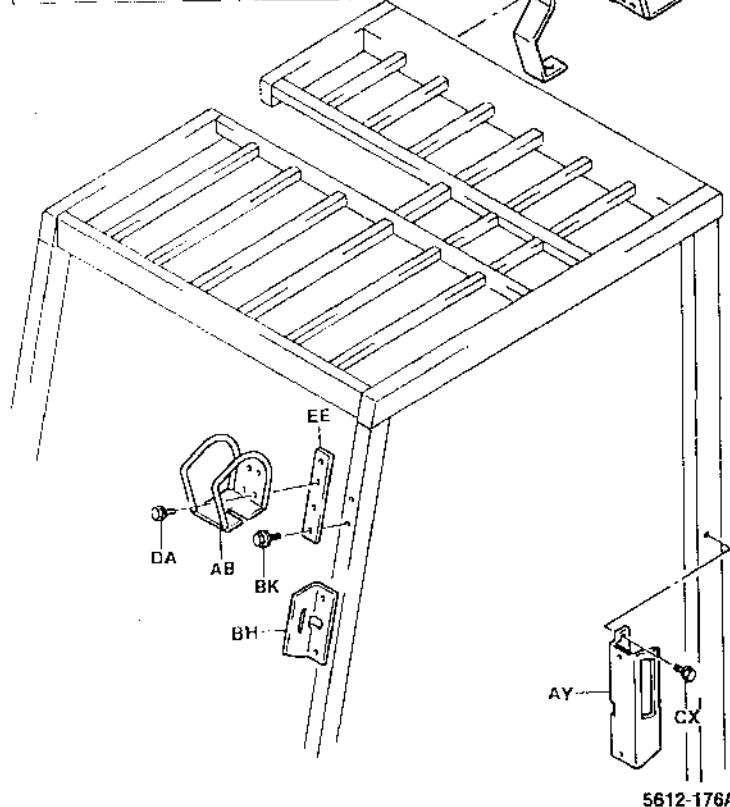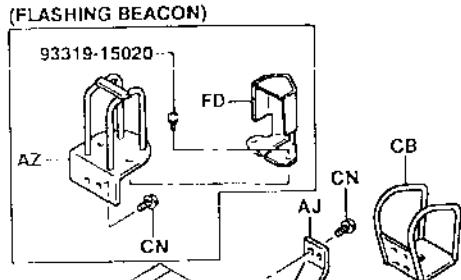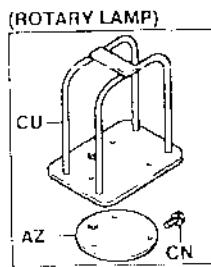

PART NAME	PART NAME	QTY
CODE		
5612-AB	BRACKET SUB-ASSY, HEAD LAMP	2
5612-AJ	BRACKFT, WORKING LAMP	1
5612-AY	GUARD SUB-ASSY, LAMP	1
5612-AZ	BRACKET SUB-ASSY, ROTARY LAMP	1
5612-BH	COVER	2
5612-BK	BOLT	4
5612-CB	BRACKET SUB-ASSY, WORKING LAMP	1
5612-CN	BOLT	2
5612-CU	BRACKET	1
5612-CX	BOLT	4
5612-DA	BOLT	4
5612-EE	PLATE	2
5612-FD	COVER SUB-ASSY	1

G817-001E


FIG.5702
METER & SWITCH

5702

MAIN

97/05

11/21

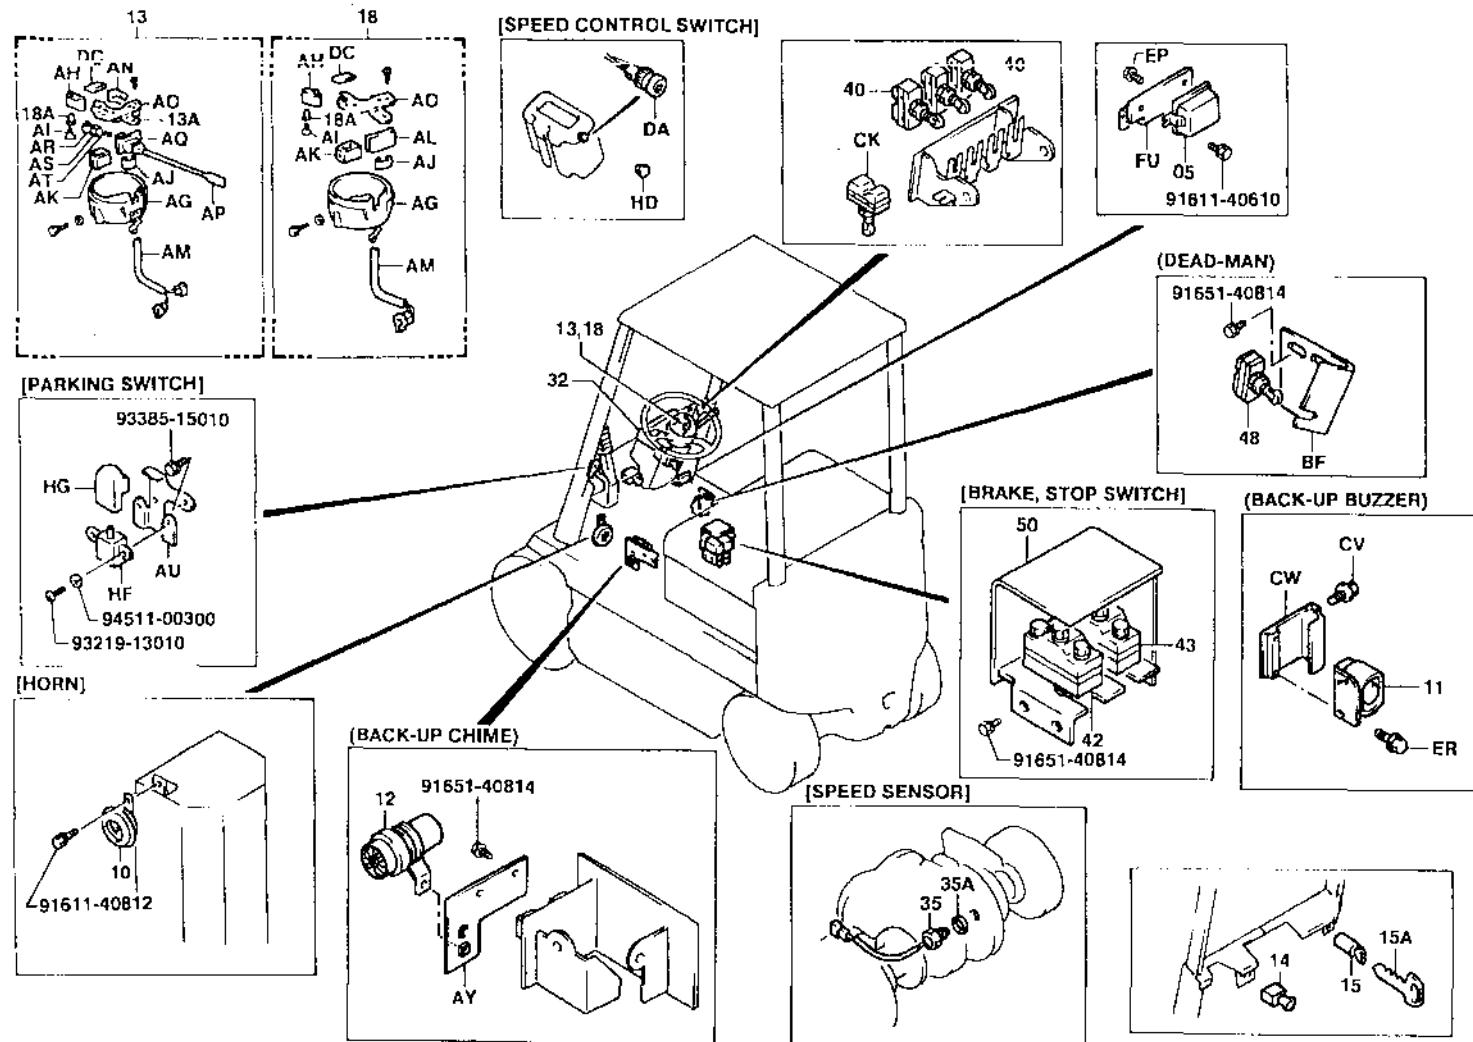

5702-101

G817-001

5702 101 0070


FIG. 5702
METER & SWITCH

5702


MAIN 97/05

12/21

A48

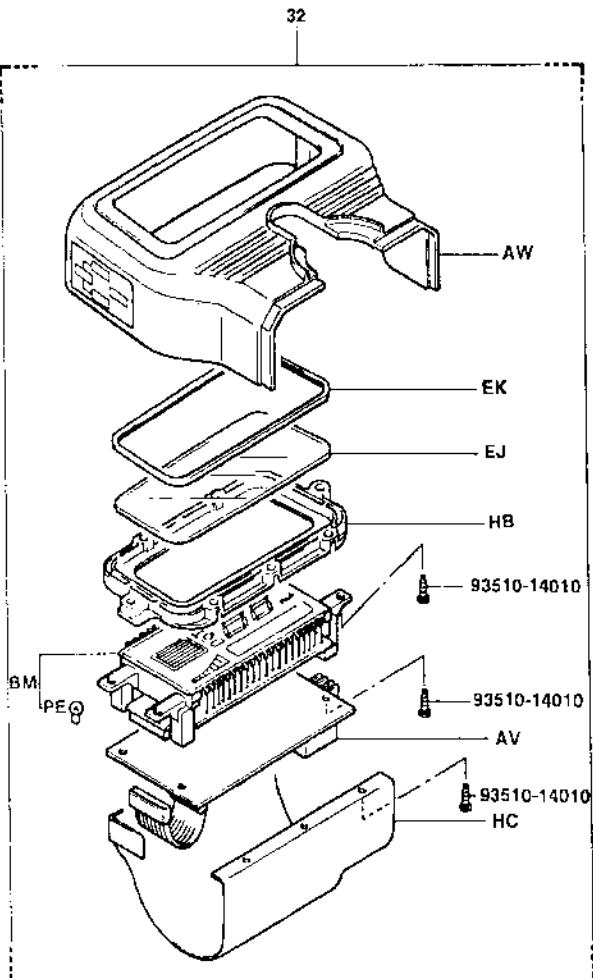

5702-068B

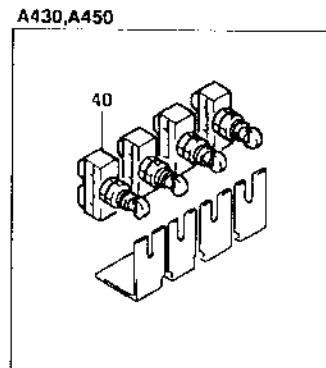

5702-100

G817-002

FIG. 5702
METER & SWITCH

5702

MAIN

97/05

PART NAME	PART NAME	QTY
I CODE		
15702-05	RELAY ASSY, FLASHER	1
15702-10	HORN ASSY	1
15702-11	BUZZER ASSY, BACK	1
15702-12	CHIME ASSY, BACK	1
15702-13	SWITCH ASSY, TURN SIGNAL	1
15702-13A	SWITCH SUB-ASSY, MICRO	2
15702-14	SWITCH ASSY, LIGHT CONTROL	1
15702-15	SWITCH ASSY, STARTER	1
15702-15A	KEY, CUT	1
15702-18	SWITCH ASSY, HORN	1
15702-18A	CONTACT, HORN	1
15702-19	METER ASSY, COMBINATION	1
15702-19	SENSOR ASSY, PICK UP	1
15702-35A	GASKET	99
15702-40	SWITCH ASSY, LIMIT (FOR PUMP MOTOR)	2-4
15702-42	SWITCH ASSY, LIMIT (FOR BRAKE)	1
15702-43	SWITCH ASSY, LIMIT (FOR STOP LAMP)	1
15702-48	SWITCH ASSY, LIMIT (FOR DEAD-MAN)	1
15702-50	BRACKET, BRAKE SWITCH	1
15702-AG	BODY, SWITCH	1
15702-AH	HOLDER, HORN POINT	1
15702-AI	SPRING, HORN CONTACT	1
15702-AJ	COVER	1
15702-AK	BLOCK, LOCKING	1
15702-AL	COVER, RUBBER	1
15702-AM	HARNESS ASSY	1
15702-AN	ACTUATOR	2
15702-AD	PLATE, SWITCH	1
15702-AP	LEVER, SIGNAL	1
15702-AQ	HELLOWS	1
15702-AR	ROLLER	1
15702-AS	HOLDER, ROLLER	1
15702-AT	SPRING	1
15702-AU	BRACKET, PARKING BRAKE	1
15702-AV	BOARD ASSY, METER COMBINATION	1
15702-AW	CASE, METER	1
15702-AY	BRACKET, CHIME	1
15702-BF	BRACKET, DEAD MAN SWITCH	1
15702-BM	PANEL ASSY	1
15702-CF	TERMINAL	2
15702-CK	SWITCH ASSY, LIMIT	1
15702-CV	BOLT	1
15702-CW	BRACKET SUB-ASSY, BACK BUZZER	1
15702-DA	SWITCH ASSY	1
15702-DC	VARISTOR	1
15702-EJ	GLASS, WINDOW	1
15702-EK	RUBBER, SEAL	1
15702-EP	BOLT	2
15702-ER	BOLT	2
15702-FU	BRACKET	1
15702-HB	PLATE, WINDOW	1
15702-HC	SHELLY, COVER	1
15702-HD	CAP	1
15702-HF	SWITCH ASSY	1
15702-HG	BOOT	1
15702-PE	BULB (FOR PANEL)	4

G817-003E

002

FIG. 6101
MAST


6101

MAIN


97/05

FSV

FV

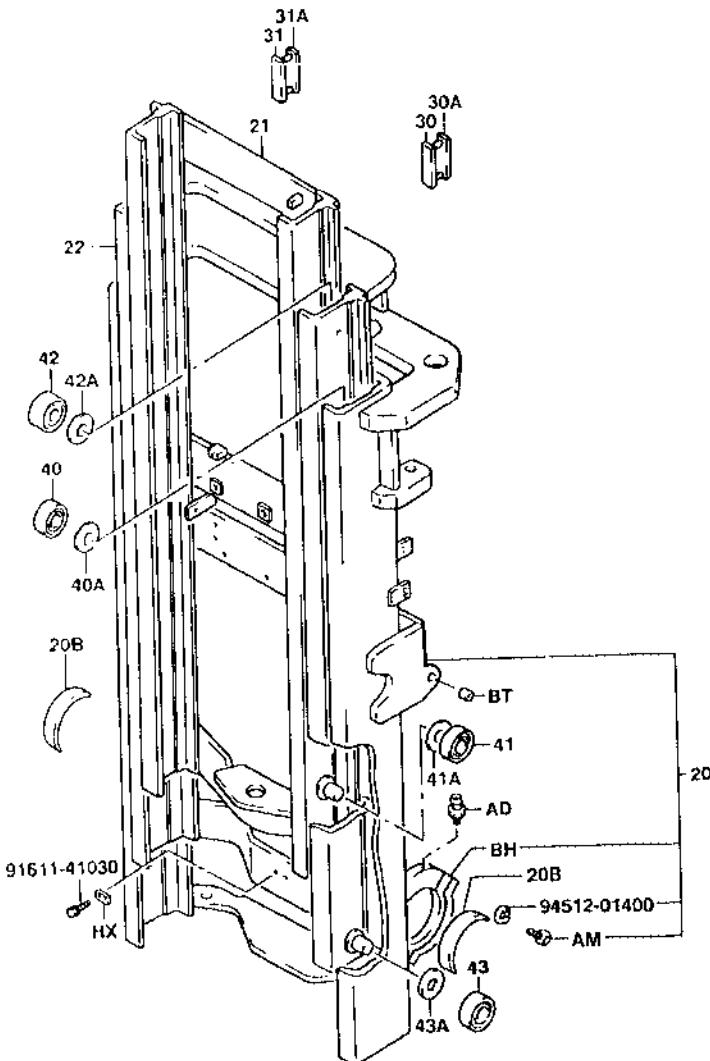

6101-402

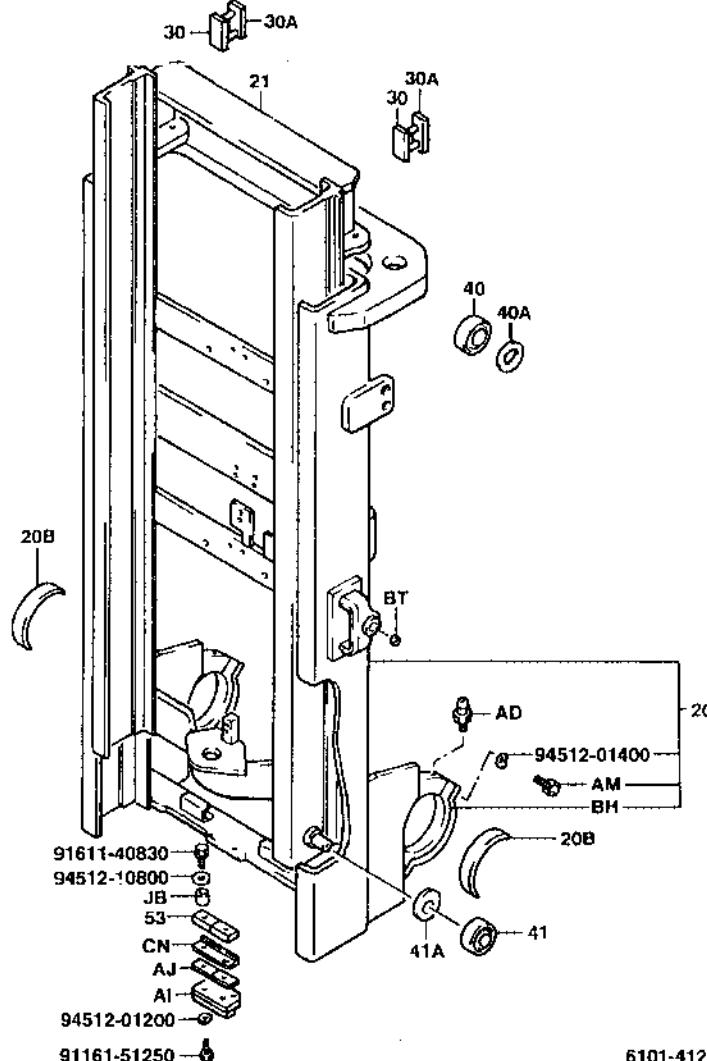

6101-412

G817-001

6101-402

6101-412 002


FIG. 6101
MAST

6101

MAIN

97/05

v

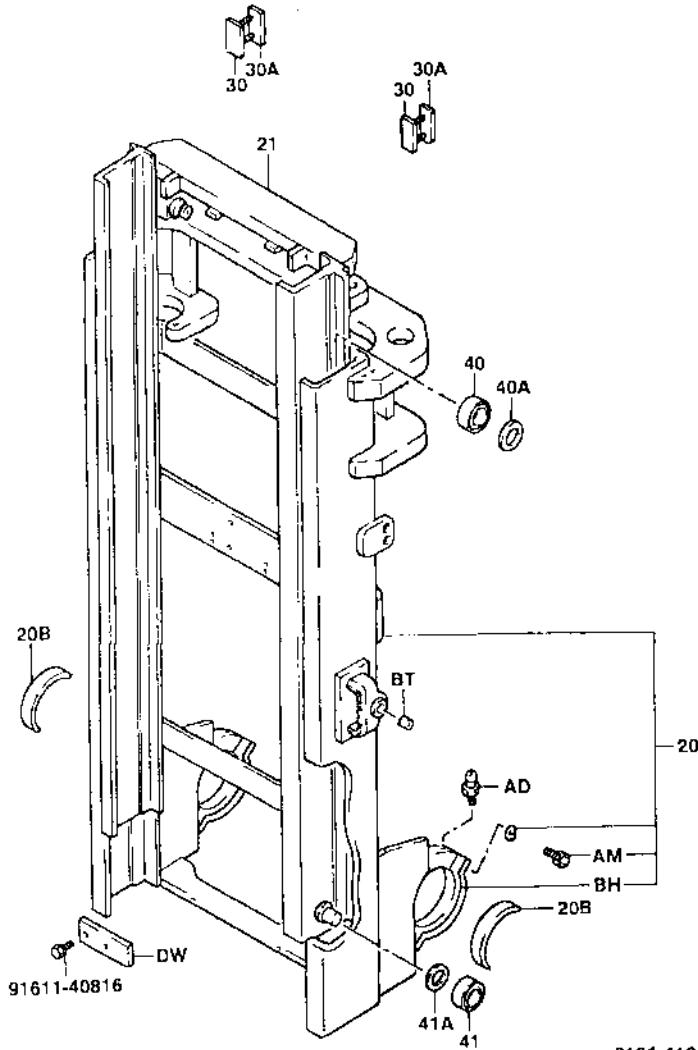

6101-413





PART NAME	PART NAME	QTY
CODE		
6101-20	MAST SUB-ASSY, OUTER	1
6101-20B	BUSHING, MAST SUPPORT	2
6101-21	MAST SUB-ASSY, INNER	1
6101-22	MAST SUB-ASSY, MIDDLE	1
6101-30	ISTRIP SUB-ASSY, OUTER MAST	2
6101-30A	SHIM, OUTER MAST STRIP	99
6101-31	ISTRIP SUB-ASSY, MIDDLE MAST	2
6101-31A	SHIM, MIDDLE MAST STRIP	99
6101-40	ROLLER, LIFT (FOR OUTER MAST)	2
6101-40A	SHIM, LIFT ROLLER (FOR OUTER MAST)	99
6101-41	ROLLER, LIFT (FOR INNER MAST)	2
6101-41A	SHIM, LIFT ROLLER (FOR INNER MAST)	99
6101-42	ROLLER, LIFT (FOR MIDDLE MAST UPPER)	2
6101-42A	SHIM, LIFT ROLLER (FOR MIDDLE MAST UPPER)	99
6101-43	ROLLER, LIFT (FOR MIDDLE MAST LOWER)	2
6101-45A	SHIM, LIFT ROLLER (FOR MIDDLE MAST LOWER)	99
6101-55	CUSHION, MAST (FOR INNER MAST)	2
6101-AD	FITTING, GREASE	2
6101-AI	STOPPER	1
6101-AJ	SHIM, STOPPER	99
6101-AH	BOLT	4
6101-BH	CAP, MAST SUPPORT	2
6101-BT	BUSHING	2
6101-CN	PLATE, STOPPER	1
6101-DW	COVER, HOSE	1
6101-HX	PLATE	1
6101-JB	COLLAR	2

GB17-002E

FIG.6301
LIFT BRACKET & FORK

6301

MAIN 97/05

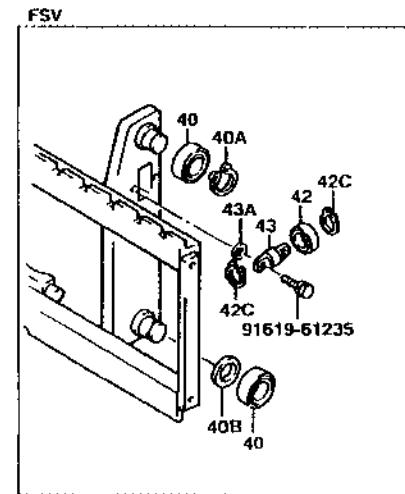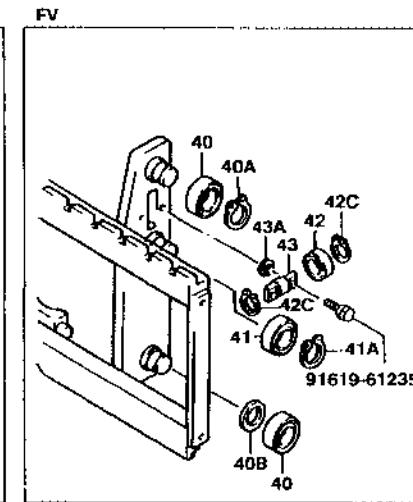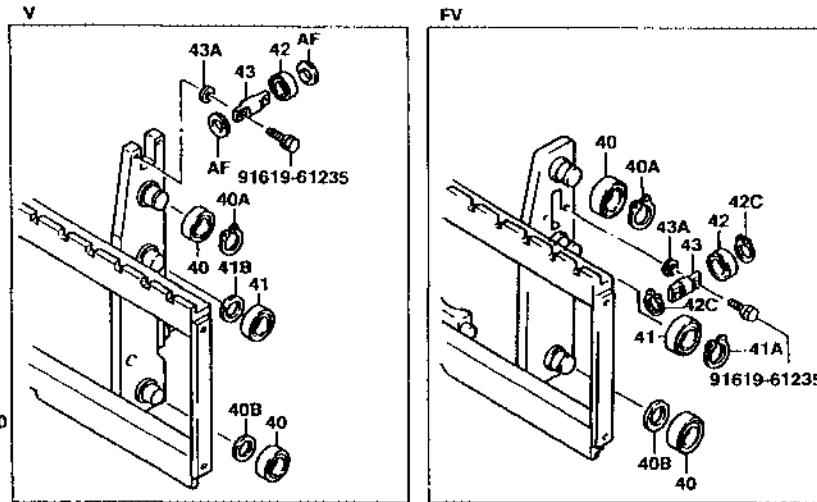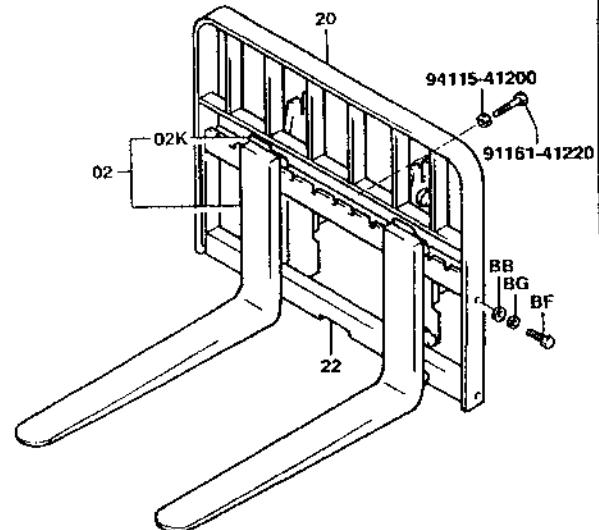

6301-391A

G817-001

FIG. 6301
LIFT BRACKET & FORK

6301

MAIN

97/05

PART NAME	PART NAME	QTY
I6301-02	IFORK ASSY	2
I6301-02K	ILEVER PIN KIT, FORK	2
I6301-2D	IBACKREST SUB-ASSY	1
I6301-22	IBRACKET SUB-ASSY, LIFT	1
I6301-40	IROLLER, LIFT (UPPER, LOWER)	2
I6301-40A	IRING, SHAFT SNAP (UPPER, LOWER)	2+ 4
I6301-40B	ISHIM, LIFT ROLLER	99
I6301-41	IROLLER, LIFT (CENTER)	2
I6301-41A	IRING, SHAFT SNAP (CENTER)	2
I6301-41B	ISHIM (CENTER)	99
I6301-42	IROLLER, SIDE	2
I6301-42C	IRING, SHAFT SNAP (FOR SIDE ROLLER)	4
I6301-43	ISHAFT, SIDE ROLLER	2
I6501-43A	ISHIM (FOR SIDE ROLLER SHAFT)	99
I6301-AF	IPLATE	4
I6301-BB	IWASHER	2
I6501-BF	IBOLT	2+ 4
I6501-BG	IWASHER	2+ 4

G817-002E

0076


FIG. 6302
CHAIN & CHAIN WHEEL

6302


MAIN 97/05

FSV

FV

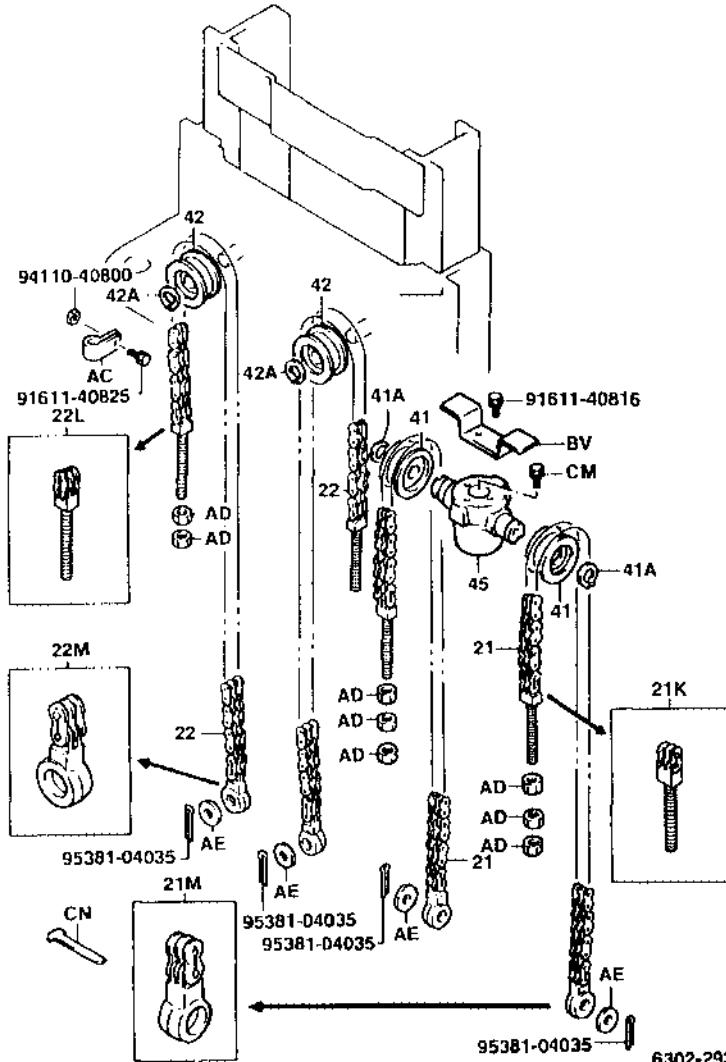

6302-293

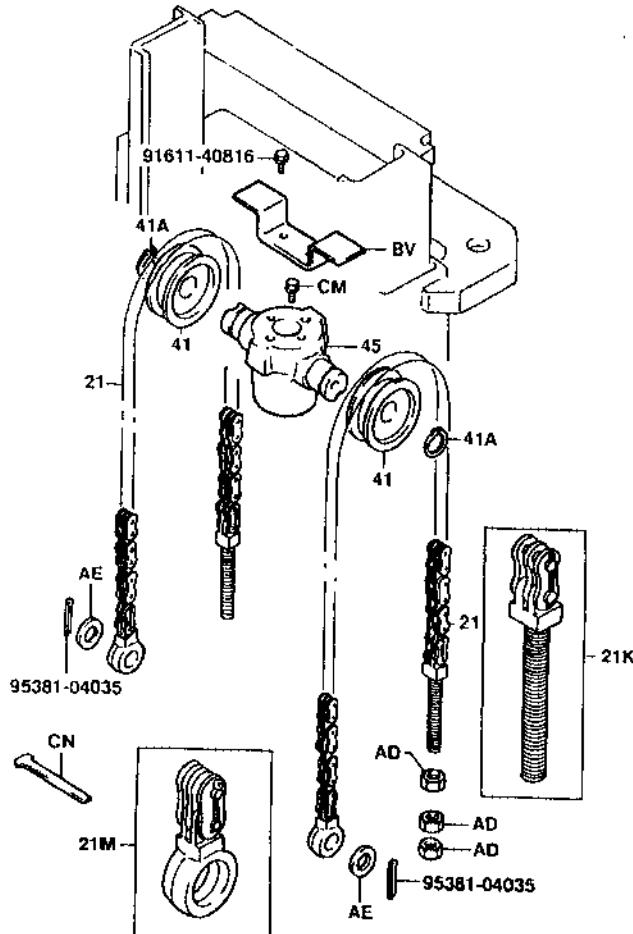

6302-294B


G817-001

FIG.6302
CHAIN & CHAIN WHEEL

6302

MAIN

97/05

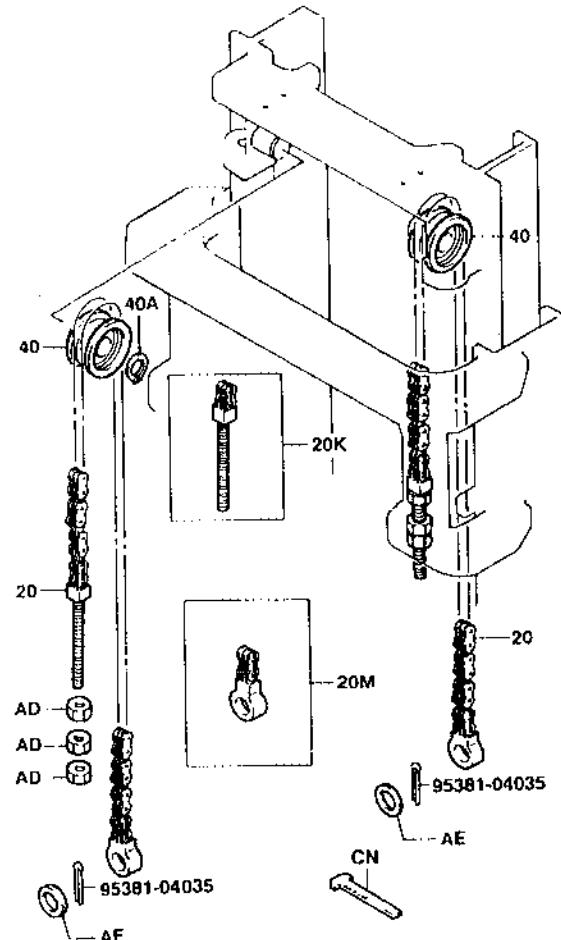

6302-295

PART NAME CODE	PART NAME	QTY
6302-20	CHAIN SUB-ASSY	2
6302-20K	BOLT KIT, CHAIN ANCHOR, NO.1	2
6302-20M	BOLT KIT, CHAIN EYE	2
6302-21	CHAIN SUB-ASSY (FRONT)	1- 2
6302-21K	BOLT KIT, CHAIN ANCHOR, NO.1 (FRONT)	2
6302-21M	BOLT KIT, CHAIN EYE (FRONT)	2
6302-22	CHAIN SUB-ASSY (REAR)	2
6302-22L	BOLT KIT, CHAIN ANCHOR, NO.2 (REAR)	2
6302-22M	BOLT KIT, CHAIN EYE	2
6302-40	WHEEL, CHAIN	2
6302-40A	RING, SHAFT SNAP (FOR CHAIN WHEEL)	2
6302-41	WHEEL, CHAIN (FRONT)	2
6302-41A	RING, SHAFT SNAP (FOR FRONT CHAIN WHEEL)	2
6302-42	WHEEL, CHAIN (REAR)	2
6302-42A	RING, SHAFT SNAP (FOR CHAIN WHEEL)	2
6302-45	SUPPORT, CHAIN WHEEL	1
6302-AC	CLAMP, CHAIN ANCHOR BOLT	2
6302-AD	NUT, HEXAGON	6-10
6302-AE	WASHER, CHAIN SPECIAL	2- 4
6302-BV	STOPPER, CHAIN	1
6302-CM	BOLT	1
6302-CN	GAGE, CHAIN	1

G817-002E


FIG.6501
LIFT CYLINDER

6501

MAIN

97/07

v

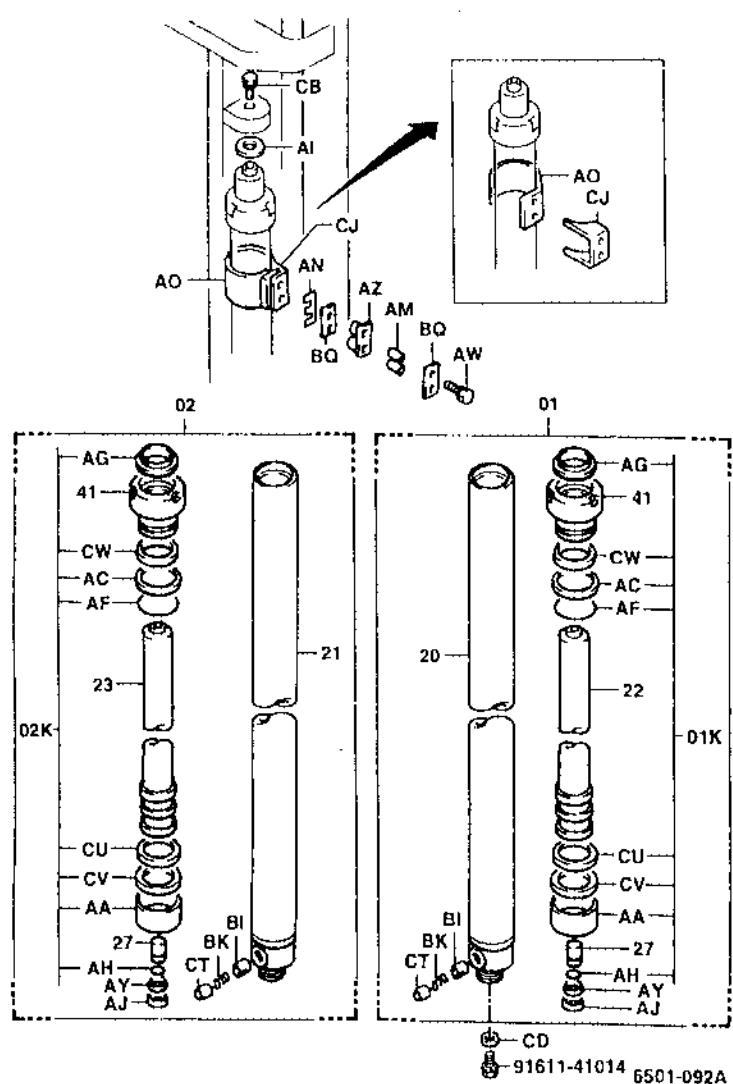

PART NAME CODE	PART NAME	QTY
6501-01	CYLINDER ASSY, LIFT, RH	1
6501-01K	CYLINDER O/H KIT, LIFT, RH	1
6501-02	CYLINDER ASSY, LIFT, LH	1
6501-02K	CYLINDER O/H KIT, LIFT, LH	1
6501-20	CYLINDER SUB-ASSY, LIFT, RH	1
6501-21	CYLINDER SUB-ASSY, LIFT, LH	1
6501-22	ROD SUB-ASSY, LIFT CYLINDER, RH	1
6501-23	ROD SUB-ASSY, LIFT CYLINDER, LH	1
6501-27	VALVE, CHECK	2
6501-41	COVER, LIFT CYLINDER	2
6501-AA	RING, WEAR	2
6501-AC	RING, BACK UP	2
6501-AF	RING, O	2
6501-AG	SEAL, DUST	2
6501-AH	RING, O	2
6501-AI	SHIM	22
6501-AJ	CLIP	2
6501-AM	SPACER	2
6501-AN	SHIM	22
6501-AQ	SUPPORT, LIFT CYLINDER	2
6501-AW	BOLT	2
6501-AY	WASHER	2
6501-AZ	ROD	2
6501-BI	PISTON	2
6501-BI	SPRING	2
6501-BQ	PLATE	2
6501-CB	BOLT	2
6501-CD	WASHER, PLATE	2
6501-CJ	PLATE	2
6501-CT	GUIDE, SPRING	2
6501-CU	RING	2
6501-CV	SEAL, PISTON	2
6501-CW	SEAL, ROD	2

Q817-001E

FIG. 6502
FRONT LIFT CYLINDER



6502

MAIN

95/04

FSV

FV

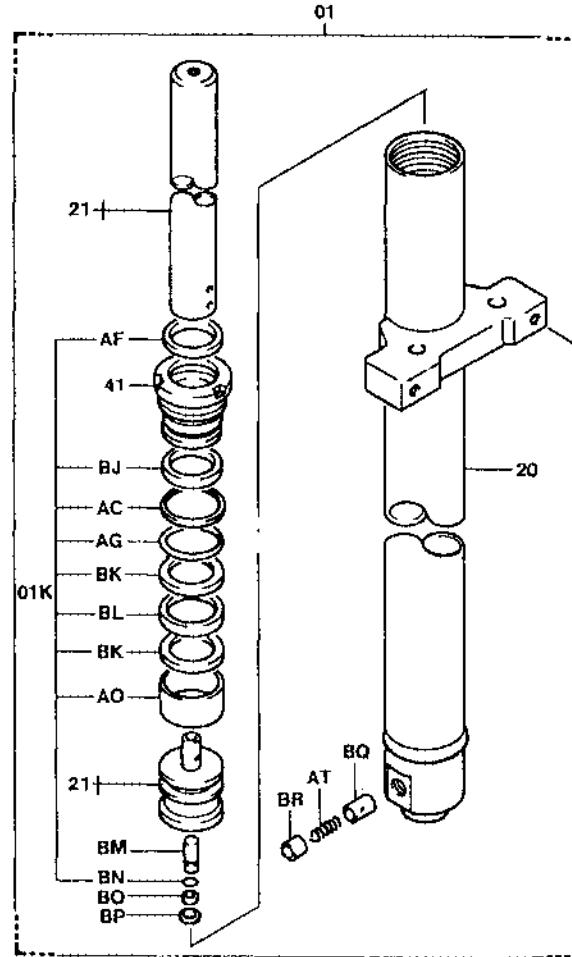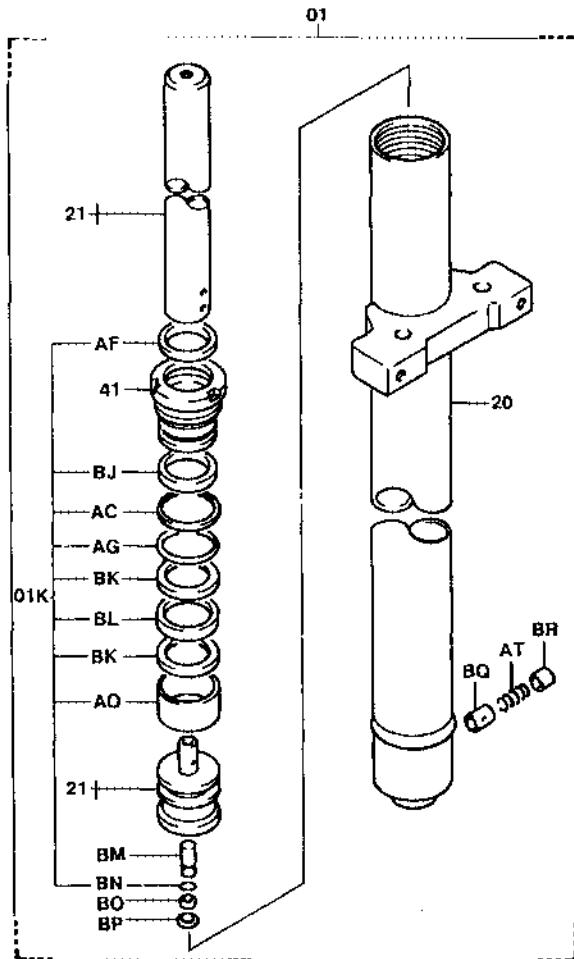

6502-076

6502-075

G817-001

6502 076

6502 075 0285

FIG. 6502
FRONT LIFT CYLINDER

6502

MAIN 95/04

PART NAME	PART NAME	QTY
16502-01	CYLINDER ASSY. LIFT	1
16502-01X	CYLINDER O/H KIT, LIFT	1
16502-20	CYLINDER SUB-ASSY, LIFT	1
16502-21	ROD, SUB-ASSY, LIFT CYLINDER	1
16502-41	COVER, LIFT CYLINDER	1
16502-AC	RING, BACK UP	1
16502-AF	SEAL, DUST	1
16502-AG	RING, O	1
16502-AL	BOLT	2
16502-AD	RING, WEAR	1
16502-AT	SPRING	1
16502-BJ	SEAL, ROD	1
16502-BK	RING	1
16502-BL	SEAL, PISTON	1
16502-BM	VALVE, CHECK	1
16502-BN	RING, O	1
16502-BO	WASHER	1
16502-BP	CLIP	1
16502-BQ	PISTON, FUSE	1
16502-BR	GUIDE, SPRING	1

G817-002E

0286

FIG. 6503
REAR LIFT CYLINDER







6503

MAIN

97/07

FSV

FV

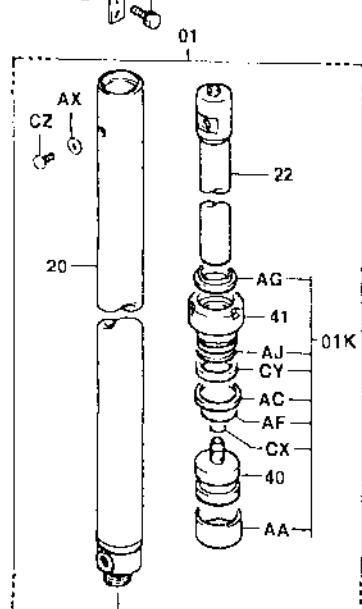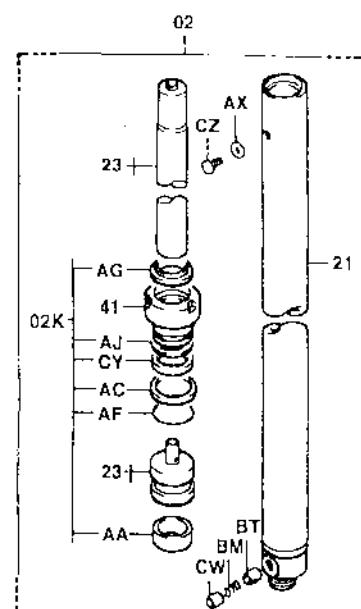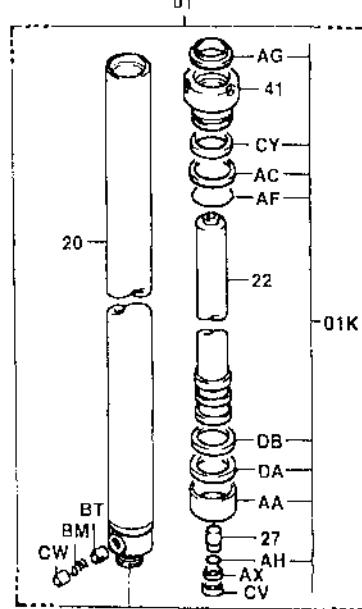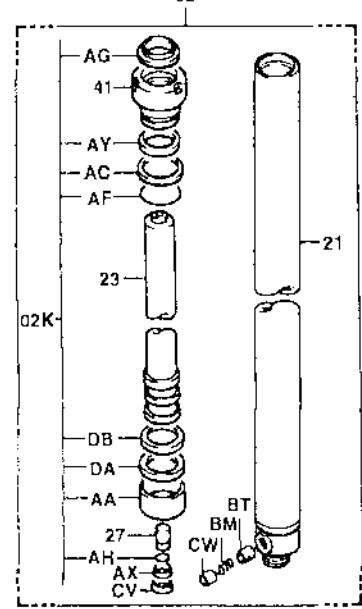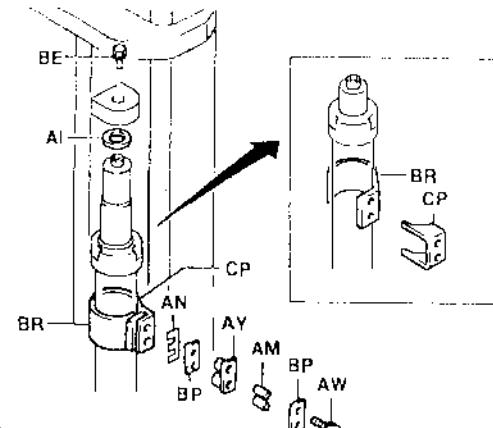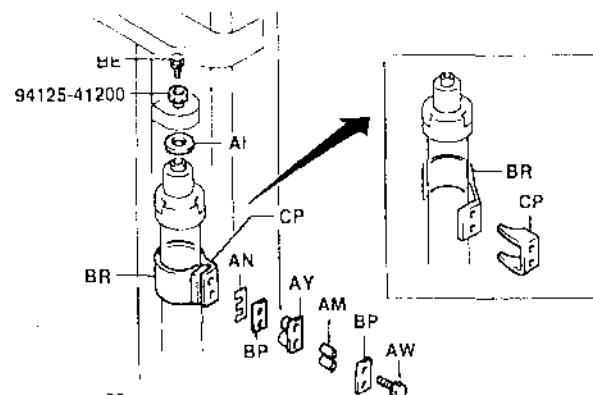

91611-41014

6503-082A

91611-41014

6503-092A

G817-001

FIG.6503
REAR LIFT CYLINDER

6503

MAIN

97/07

PART NAME	PART NAME	QTY
16503-01	CYLINDER ASSY, LIFT, RH	1
16503-01K	CYLINDER O/H XIT, LIFT, RH	1
16503-02	CYLINDER ASSY, LIFT, LH	1
16503-DPK	CYLINDER O/H XIT, LIFT, LH	1
16503-20	CYLINDER SUB-ASSY, LIFT, RH	1
16503-21	CYLINDER SUB-ASSY, LIFT, LH	1
16503-22	ROD SUB-ASSY, LIFT CYLINDER, RH	1
16503-23	ROD SUB-ASSY, LIFT CYLINDER, LH	1
16503-27	VALVE, CHECK	2
16503-40	PISTON, LIFT CYLINDER	1
16503-41	COVER, LIFT CYLINDER	2
16503-AA	RING, WEAR	2
16503-AC	RING, BACK UP	2
16503-AF	RING, O	2
16503-AG	SEAL, DUST	2
16503-AH	RING, O	2
16503-AT	SHIM	99
16503-AJ	RING, BACK UP	2
16503-AM	SPACER	4
16503-AN	SHIM	99
16503-AW	BOLT	4
16503-AX	WASHER	2
16503-AY	RUBBER	2
16503-BE	BOLT, STOPPER	2
16503-BM	SPRING	1- 2
16503-BP	PLATE	4
16503-BR	SUPPORT SUB-ASSY	2
16503-BT	PISTON	1- 2
16503-CE	WASHER	2
16503-CJ	BOLT	2
16503-CP	PLATE	2
16503-CV	CLIP	2
16503-CW	GUIDE, SPRING	1- 2
16503-CX	WIRE	1
16503-CY	SEAL, ROD	2
16503-CZ	SCREW, BLEED	2
16503-DA	SEAL, PISTON	2
16503-DB	RING	2

G817-002E



0001

FIG. 6511
TILT CYLINDER

6511

MAIN

97/05

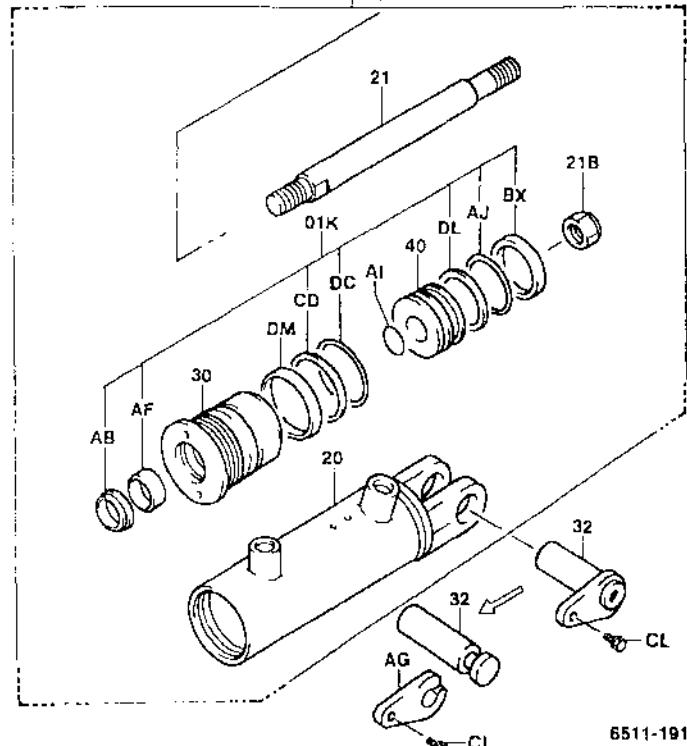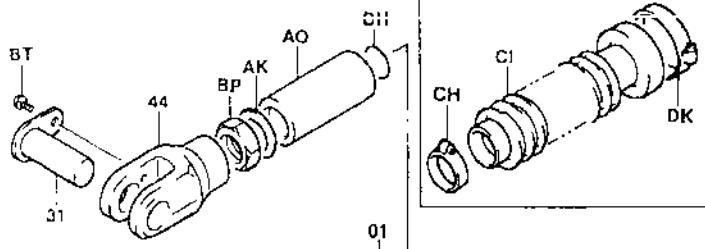


PART NAME	PART NAME	QTY
CODE		
6511-01	CYLINDER ASSY, TILT	1
6511-01K	CYLINDER O/H KIT, TILT	2
6511-20	CYLINDER SUB-ASSY, TILT	1
6511-21	ROD SUB-ASSY, TILT CYLINDER PISTON	2
6511-21B	NUT, CASTLE	2
6511-50	GUIDE SUB-ASSY, TILT CYLINDER ROD	2
6511-31	PIN SUB-ASSY, TILT CYLINDER, FR	2
6511-52	PIN SUB-ASSY, TILT CYLINDER, RR	2
6511-40	PISTON, TILT CYLINDER	2
6511-44	JOINT, PISTON ROD	1- 2
6511-AB	SEAL, DUST	2
6511-AF	PACKING, U	2
6511-AG	PLATE, STOPPER	2
6511-AI	RING, O	2
6511-AJ	PACKING, U	2
6511-AK	SHIM, TILT CONTROL	99
6511-AD	SPACER, TILT CONTROL	2
6511-BP	NUT	2
6511-BT	BOLT	2
6511-BX	RING, WEAR	2
6511-CD	RING, BACK UP	2
6511-CH	CLAMP	2
6511-CI	BOOT, CYLINDER	2
6511-CL	BOLT	2
6511-DC	SEAL, OIL	1
6511-DH	RING, O	2
6511-DK	CLAMP	2
6511-OL	SEAL EXPANDER, PISTON	2
6511-DM	RING	2

G817-001E

FIG. 6/01
OIL PUMP

6701

MAIN 97/05

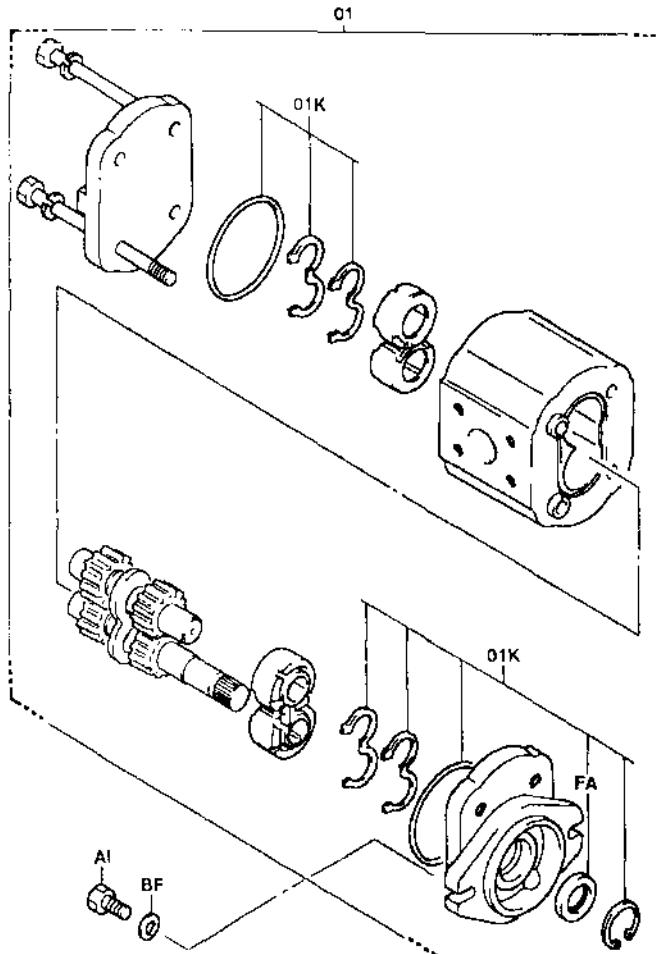

PART NAME CODE	PART NAME	QTY
6701-01	PUMP ASSY, OIL	1
6701-01K	PUMP O/H KIT, OIL	1
6701-AI	BOLT	2
6701-BF	WASHER	2
6701-FA	SEAL, SHAFT	1


FIG. 6705
DIL CONTROL VALVE

6705

MAIN

97/07

(2 WAY) (1/2")

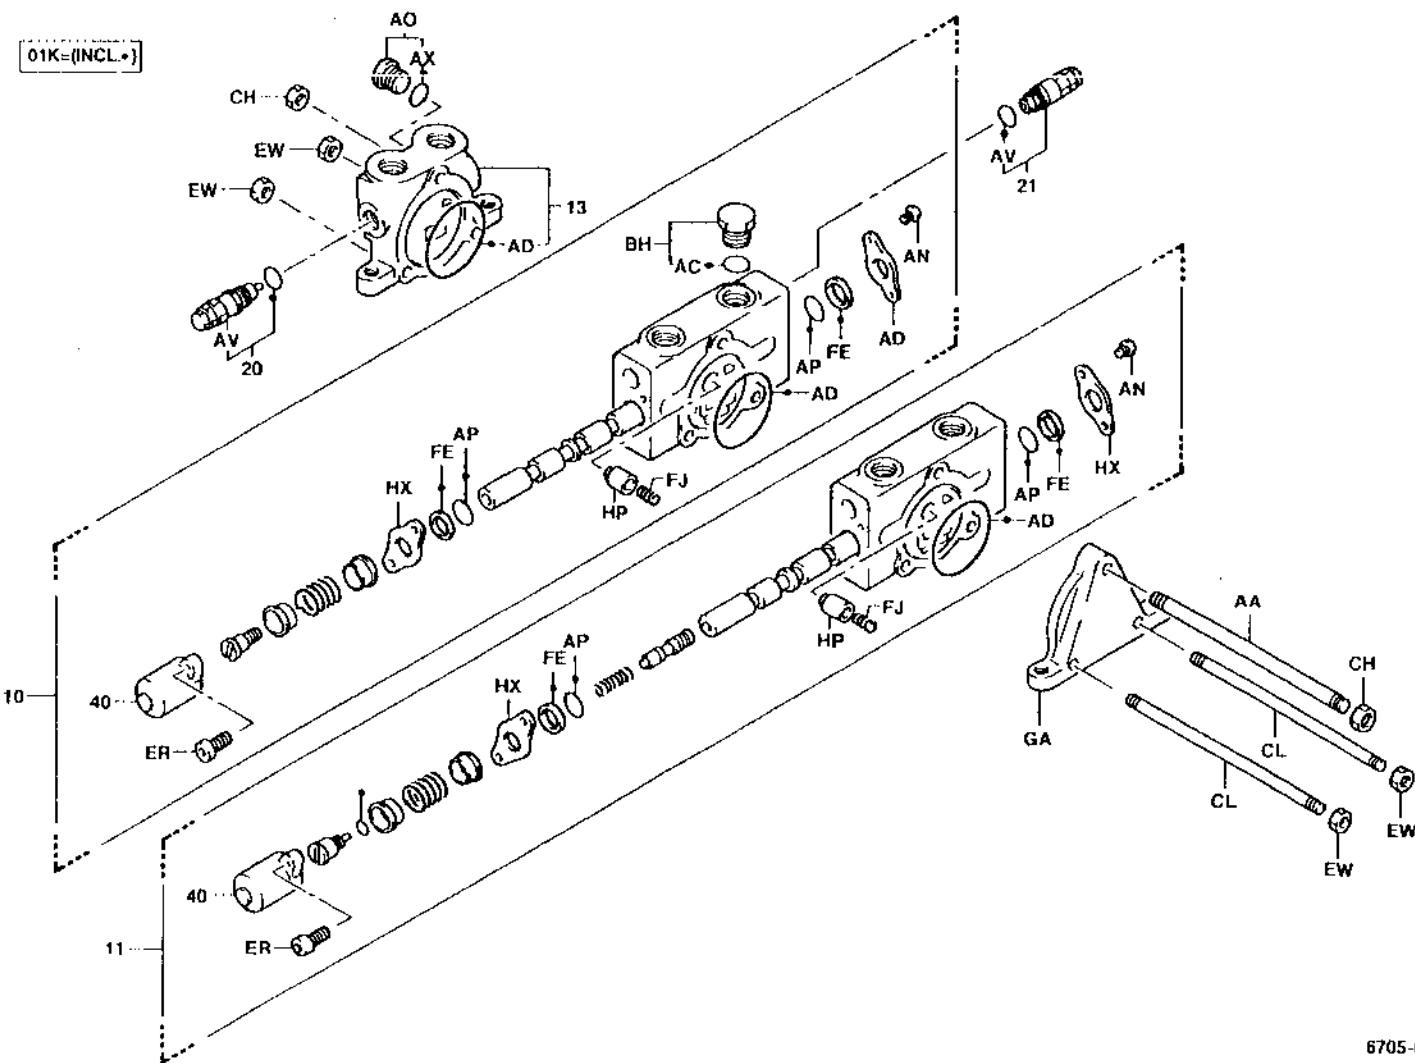

6705-648A

G817-001

000000000000


FIG. 6705
DIL CONTROL VALVE

6705

MAIN

97/07

U.S.-WAY 1 (1/2)

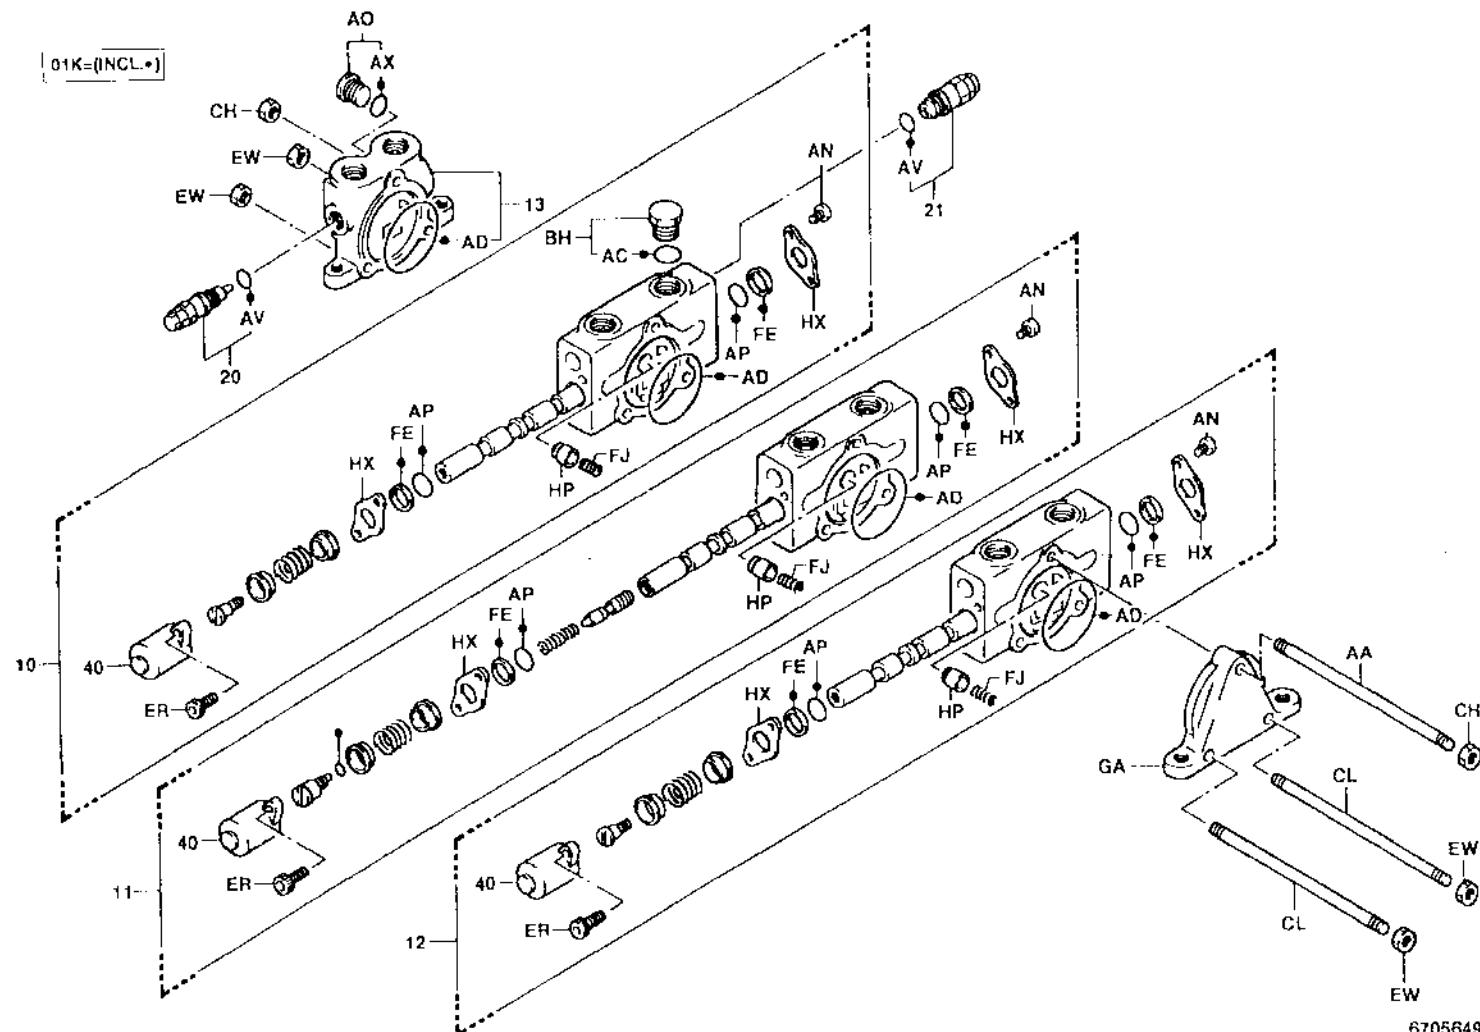

G817-002

4/25/1998 300


FIG. 6705
OIL CONTROL VALVE

6705

MAIN

97/07

14 WAY (1/2")

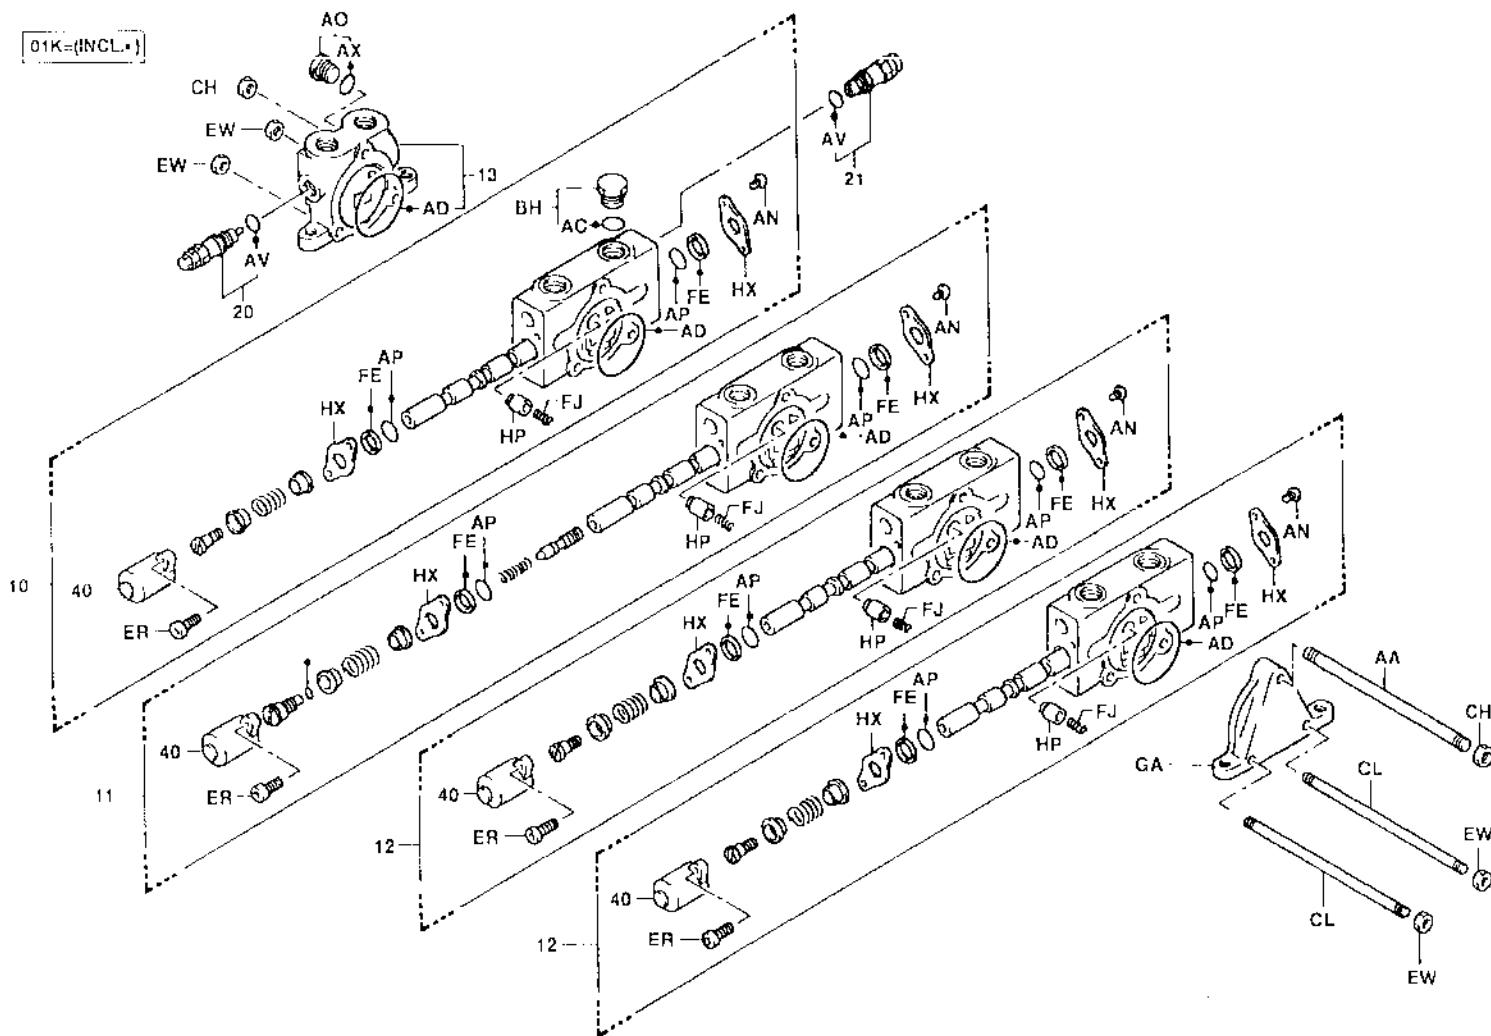

6705-656A

G817-003

L100 E-1A 400



FIG. 6705
OIL CONTROL VALVE

6705

MAIN 97/07

(5-WAY) (2/2)

(5-WAY) (2/2)

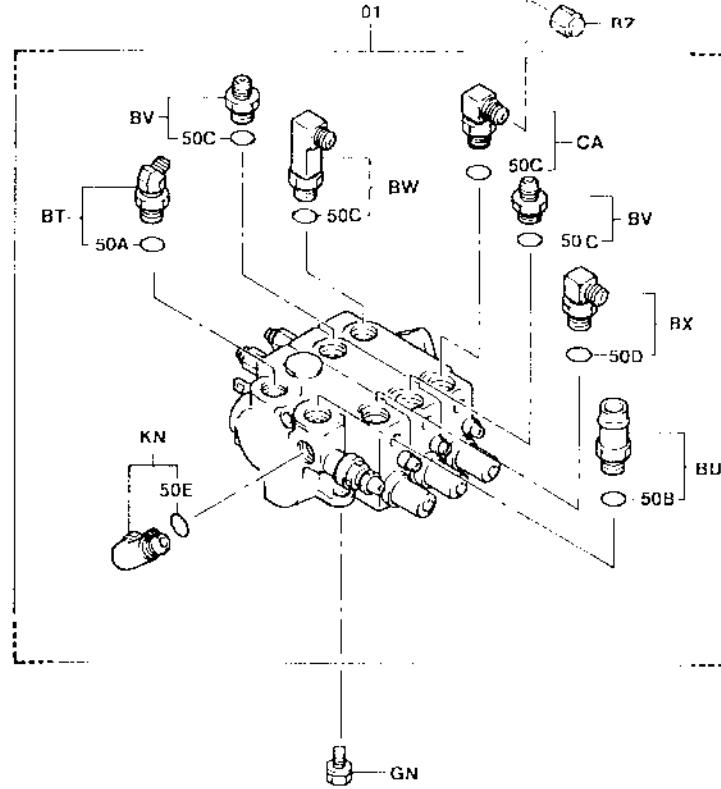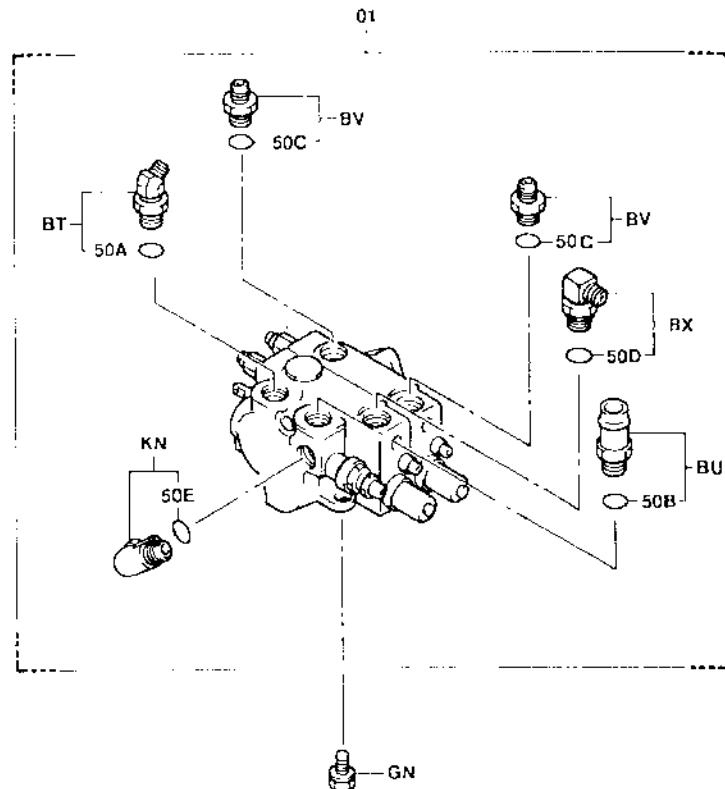

6705-654

6705-655


G817-004

FIG. 6705
OIL CONTROL VALVE

6705

MAIN 97/07

14-WAY 1 (2/2)

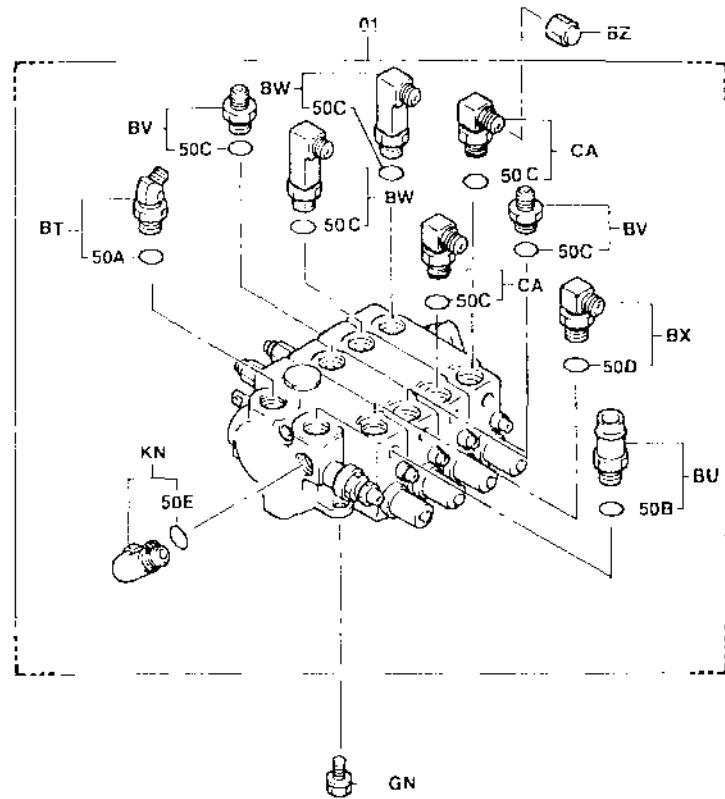

6705-657


G817-005

FIG. 6705
OIL CONTROL VALVE

6705

MAIN 97/07

A410 11/21

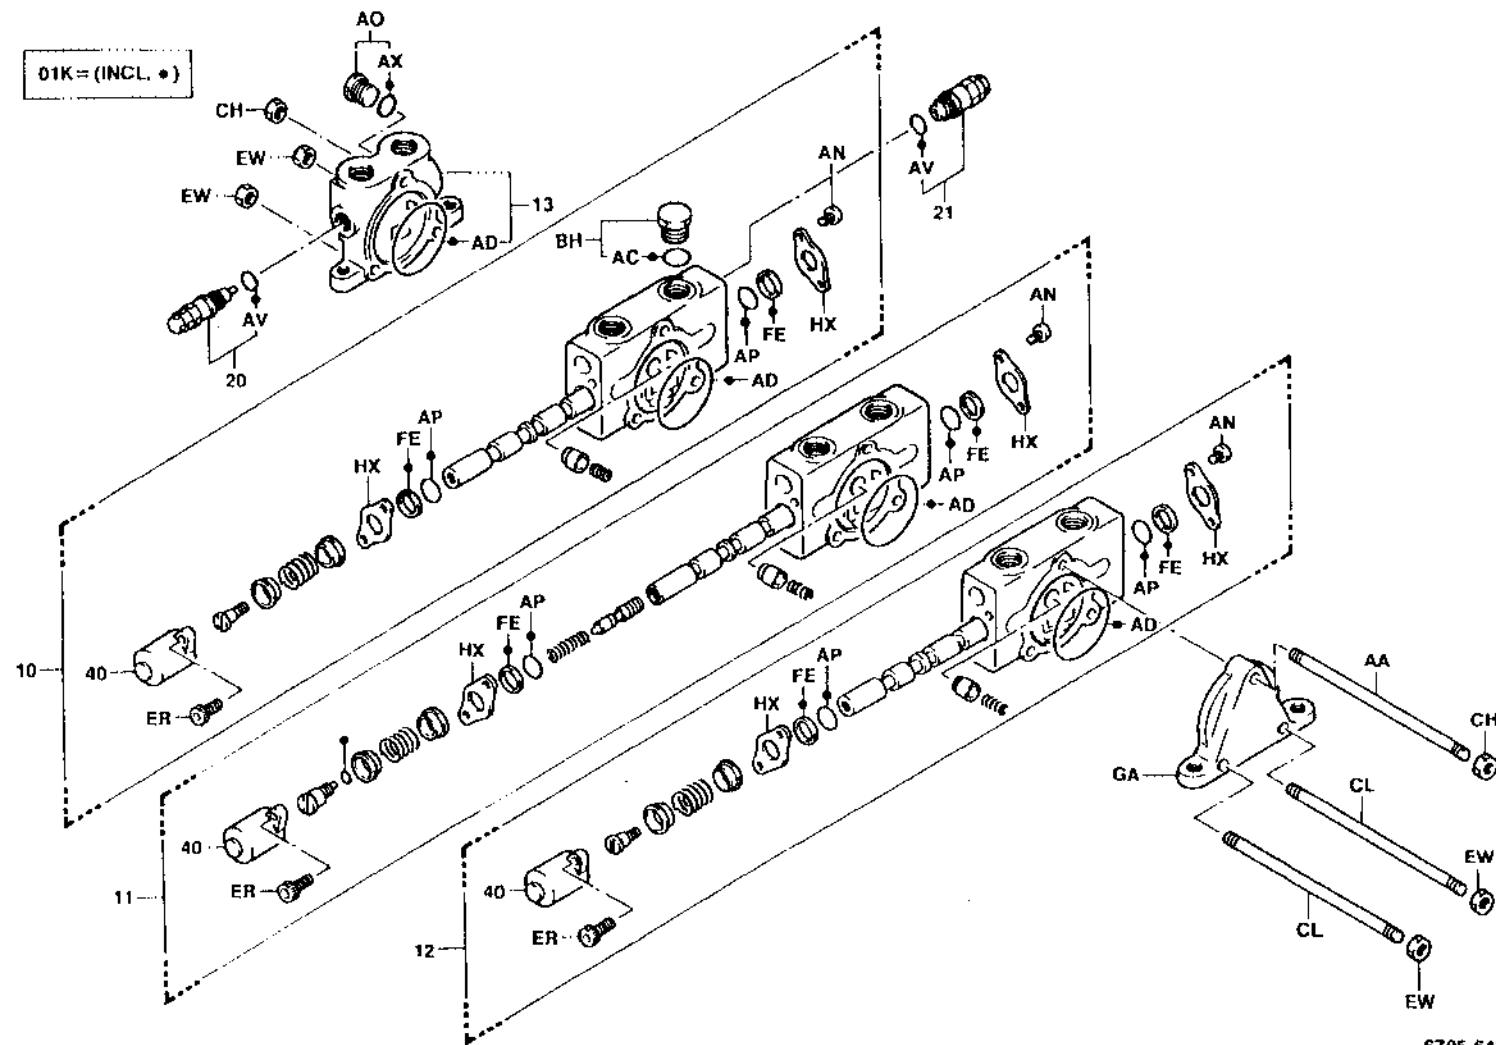

6705-649

G817-006

6705 649 006


FIG. 6705
OIL CONTROL VALVE

6705

MAIN

97/07

A410 12/1

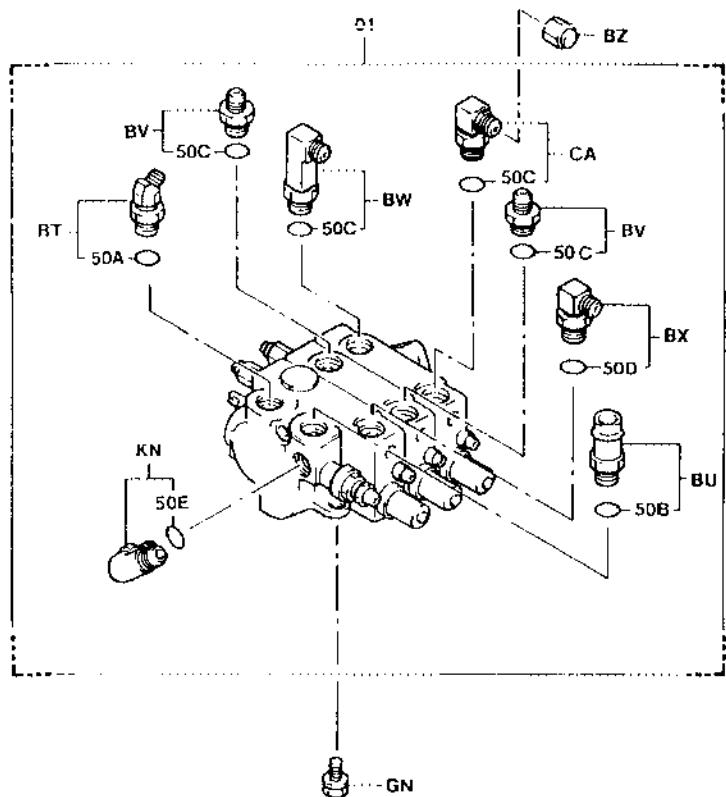

6705-655


GB17-007

FIG. 6705
OIL CONTROL VALVE

6705

MAIN 97/07

A450+A450 (1/2)

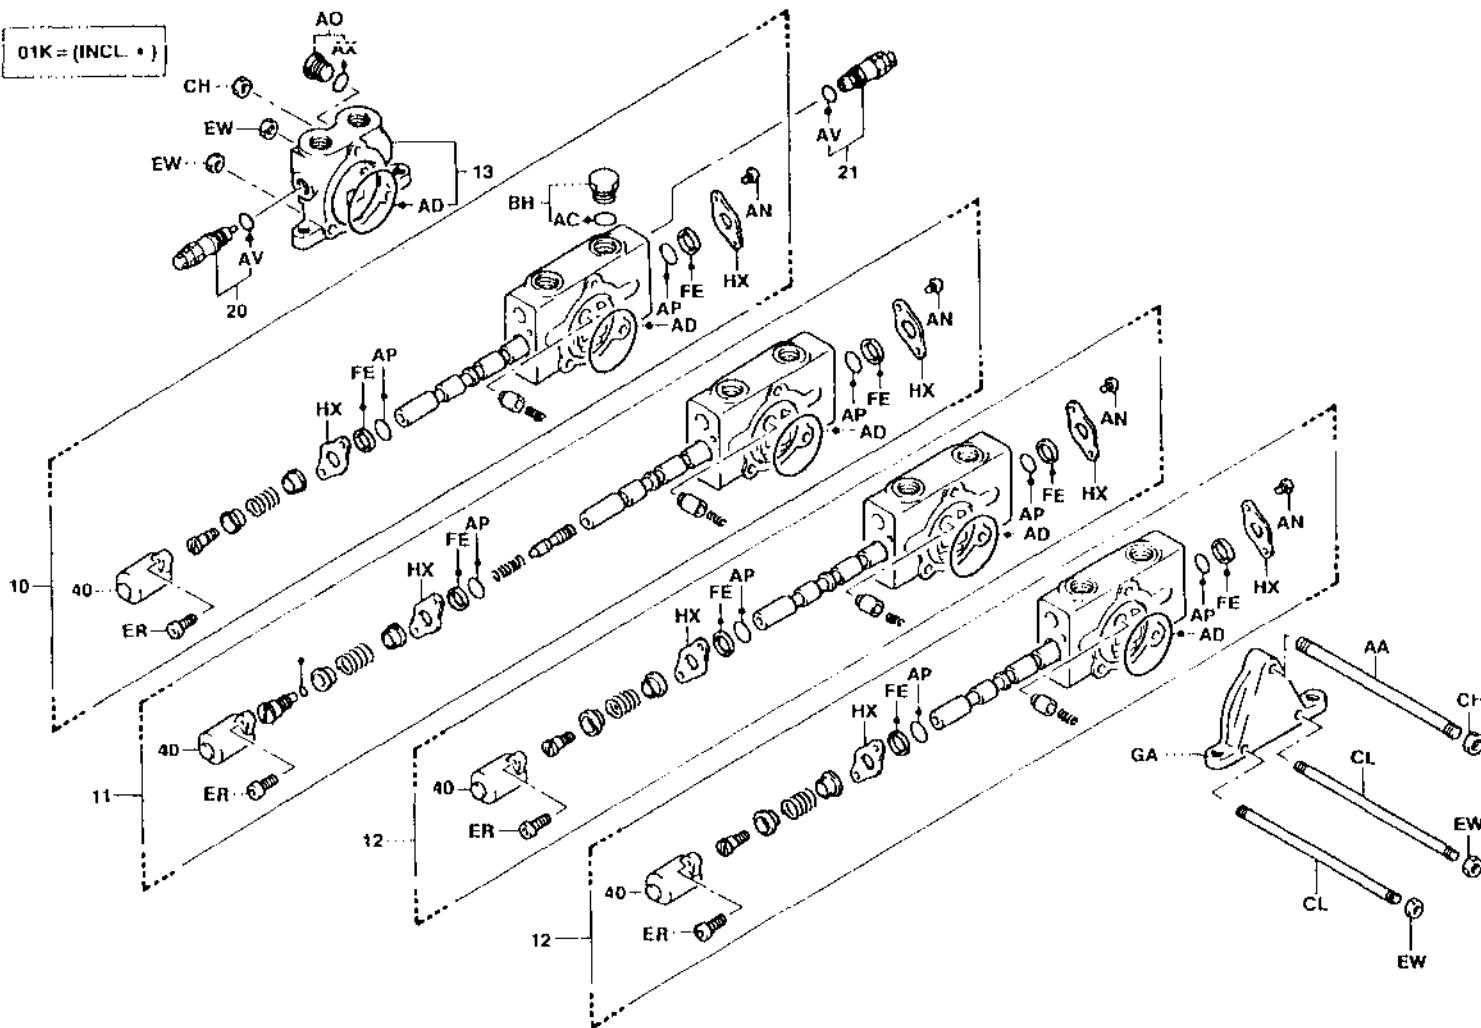

6705-656

G817-008

100-100-0005


FIG. 6705
OIL CONTROL VALVE

6705

MAIN

97/07

A450+A450 (2/2)

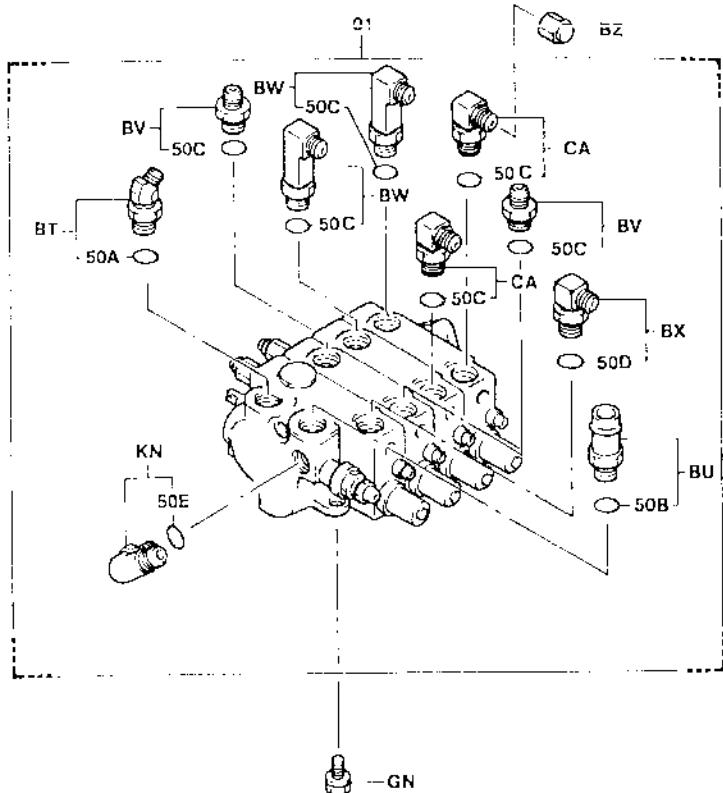

PART NAME CODE	PART NAME	QTY
6705-01	VALVE ASSY, OIL CONTROL	1
6705-02K	VALVE C/M KIT, OIL CONTROL	1
6705-10	VALVE ASSY, PLUNGER SECTION, NO.1	1
6705-11	VALVE ASSY, PLUNGER SECTION, NO.2	1
6705-12	VALVE ASSY, PLUNGER SECTION, NO.3	1- 2
6705-13	HOUSING ASSY, INLET, NO.1	1
6705-20	VALVE SLV, PILOT RELIEF, NO.1	1
6705-21	VALVE SET, PILOT RELIEF, NO.2	1
6705-40	COVER, SPRING	2- 4
6705-50A	RING, O, NO.1 (FOR VALVE FITTING)	1
6705-50B	RING, O, NO.2 (FOR VALVE FITTING)	1
6705-50C	RING, O, NO.3 (FOR VALVE FITTING)	1- 4
6705-50D	RING, O, NO.4 (FOR VALVE FITTING)	1
6705-50F	RING, O, NO.5 (FOR VALVE FITTING)	1
6705-AA	BOLT	1
6705-AC	RING, O	1
6705-AD	RING, O	5
6705-AN	SCREW	4- 8
6705-AU	PLUG	1
6705-AP	RING, O	4- 8
6705-AV	RING, O	2
6705-AX	RING, O	1
6705-BH	PLUG	1
6705-BT	FITTING	1
6705-BU	FITTING	1
6705-BV	FITTING	2
6705-BW	FITTING	1- 2
6705-BX	FITTING	1
6705-BZ	PLUG	2- 4
6705-CA	FITTING	1- 2
6705-CH	NUT	2
6705-CI	BOLT	2
6705-ER	BOLT	4- 8
6705-FW	NUT	4- 1
6705-FE	WIPER	4- 8
6705-FJ	POPPET	2- 4
6705-GA	HOUSING, OUTLET	1
6705-GN	BRKT, W/WASHER	3
6705-HP	SPRING	2- 4
6705-HX	PLATE, SEAL	4- 8
6705-KN	FITTING	1

6705-657




G817-009E

FIG. 6709
DIL CONTROL VALVE LINK

6709

MAIN 95/04




(2-WAY)

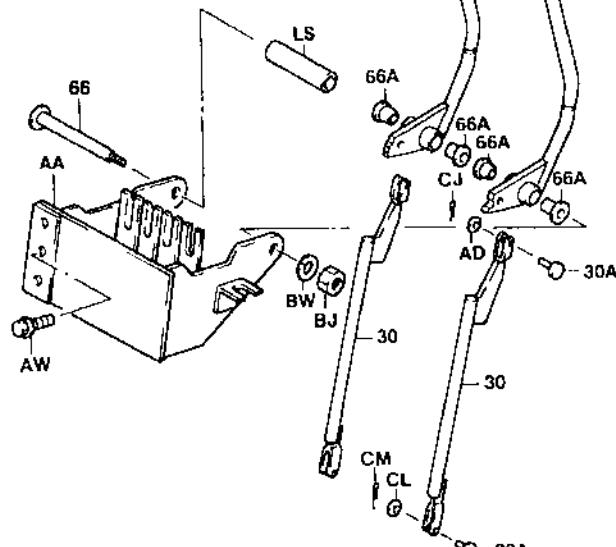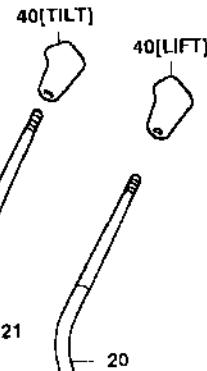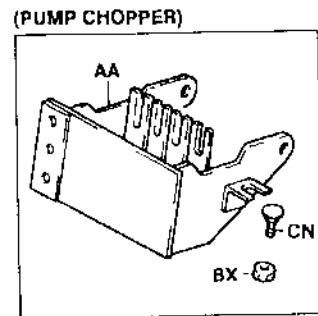

6709-268

6709 268

(3-WAY)

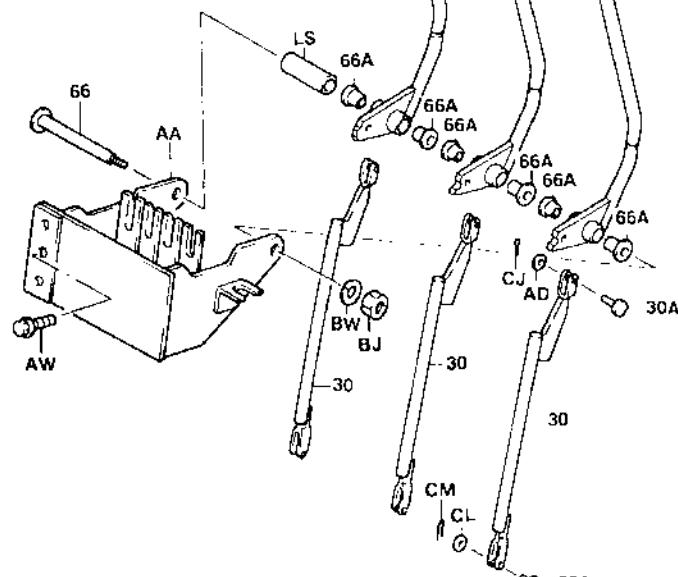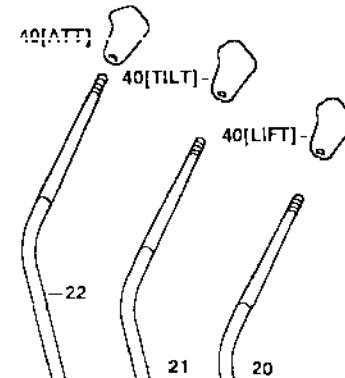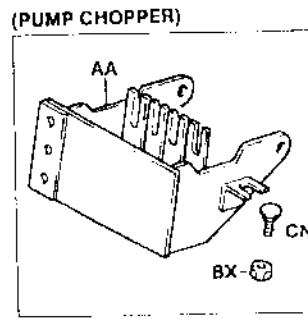

6709-269

G817-001

6709 269 3200

FIG. 6709
OIL CONTROL VALVE LINK

6709



MAIN

95/04

(4-WAY)



A410

(PUMP CHOPPER)

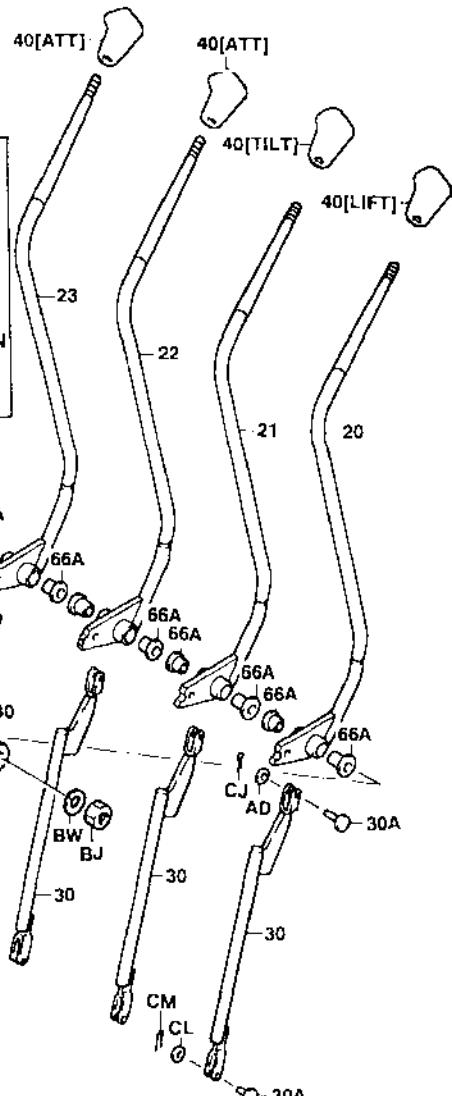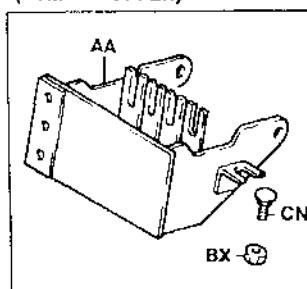

6709-270

(PUMP CHOPPER)

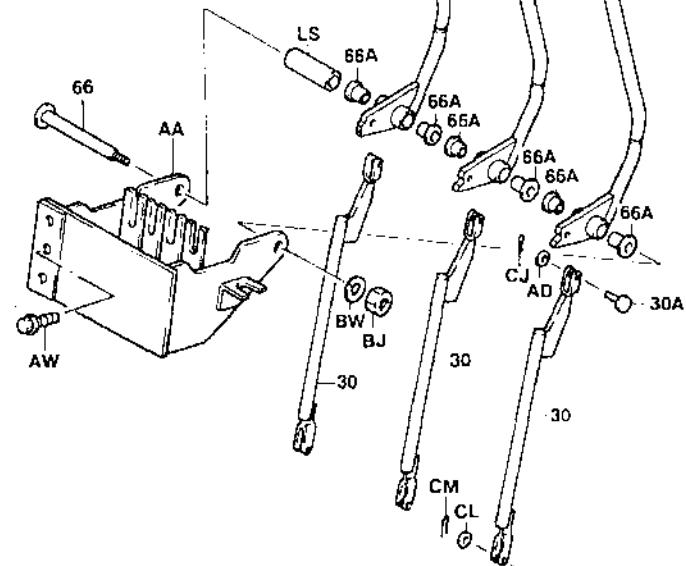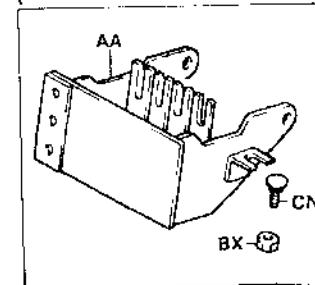

6709-269

G817-002

6709 270

6705 269 0301


FIG. 6709
OIL CONTROL VALVE LINK

6709

MAIN

95/04

A450, A450

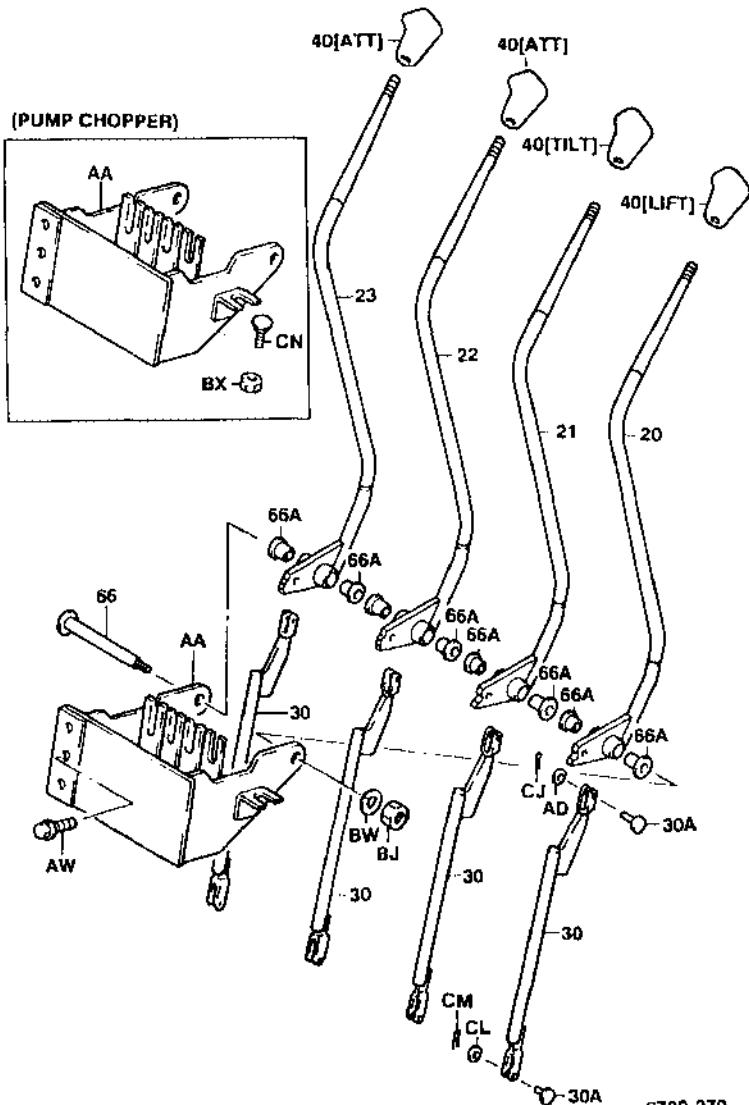

6709-270

PART NAME CODE	PART NAME	QTY
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2	1
6709-22	LEVER SUB-ASSY, CONTROL VALVE, NO.3	1
6709-23	LEVER SUB-ASSY, CONTROL VALVE, NO.4	1
6709-30	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.1	1+ 4
6709-30A	PIN (FOR CONTROL VALVE LEVER ROD)	2- 4
6709-40	KNOB, OIL CONTROL VALVE LEVER	1- 2
6709-66	BOLT (FOR VALVE LEVER)	1
6709-66A	BUSHING	4- 8
6709-AA	BRACKET SUB-ASSY	1
6709-AD	WASHER, PLATE	2- 4
6709-AW	BOLT	3
6709-BJ	NUT	3
6709-BW	WASHER, SPRING	1
6709-BX	NUT	1
6709-CJ	PIN	2- 4
6709-CL	WASHER, PLATE	2- 4
6709-CM	PIN, COTTER	2- 4
6709-CN	BOLT	1
6709-LS	PIPE	1

6709-270

G817-003E


002

FIG. 6801
BODY PIPING

6801

MAIN

97/05

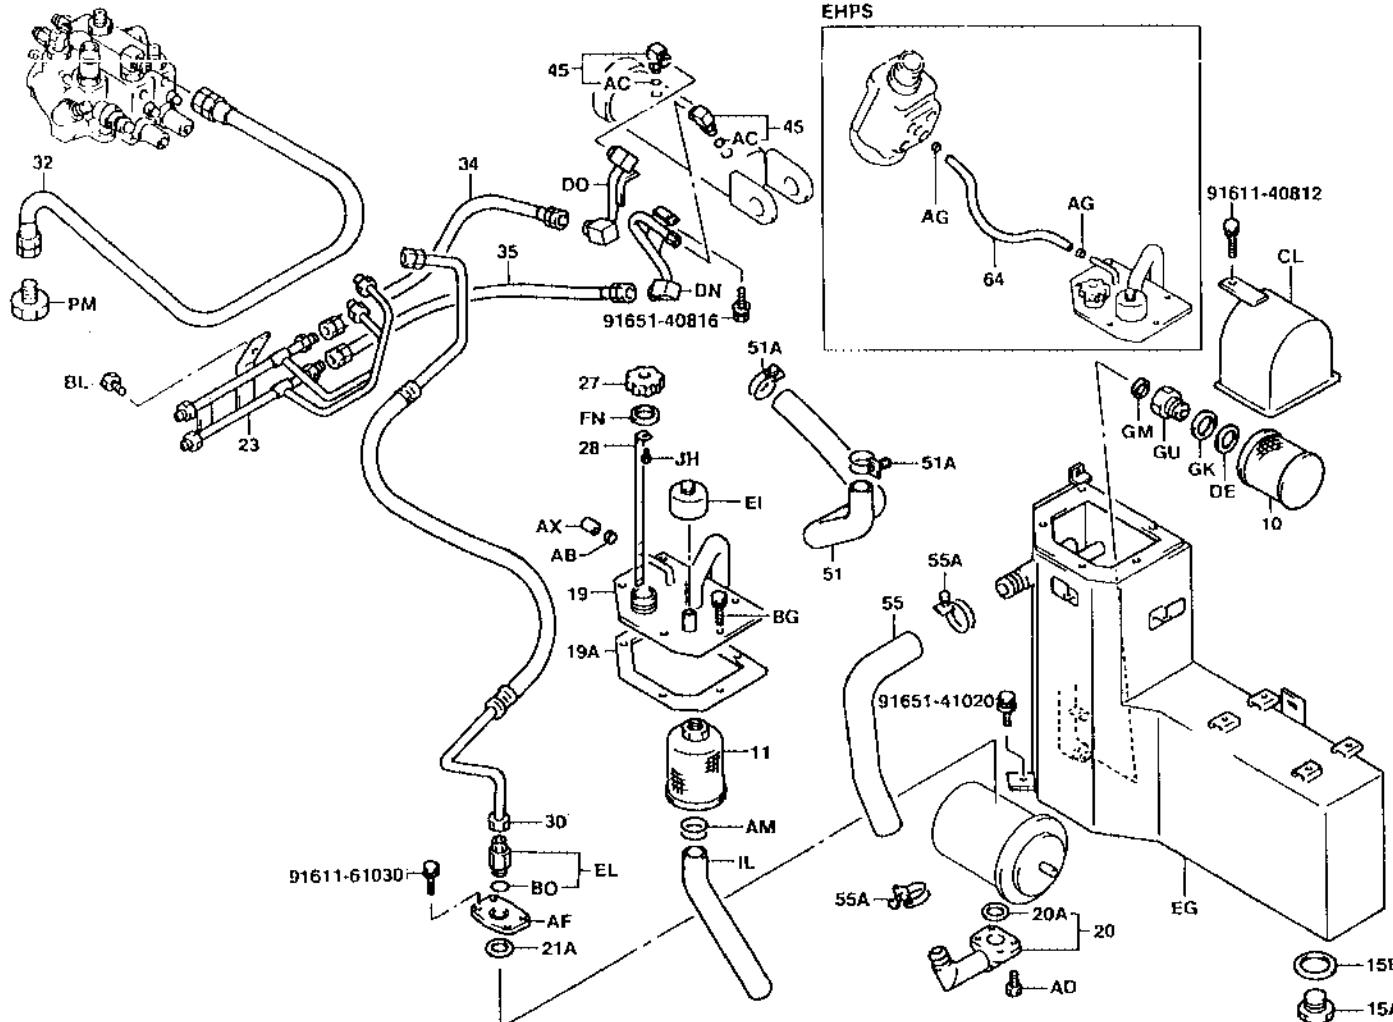

6801-315A

G817-001

6801 315A 0023

FIG.6801
BODY PIPING


6801

MAIN


97/05

FV

V

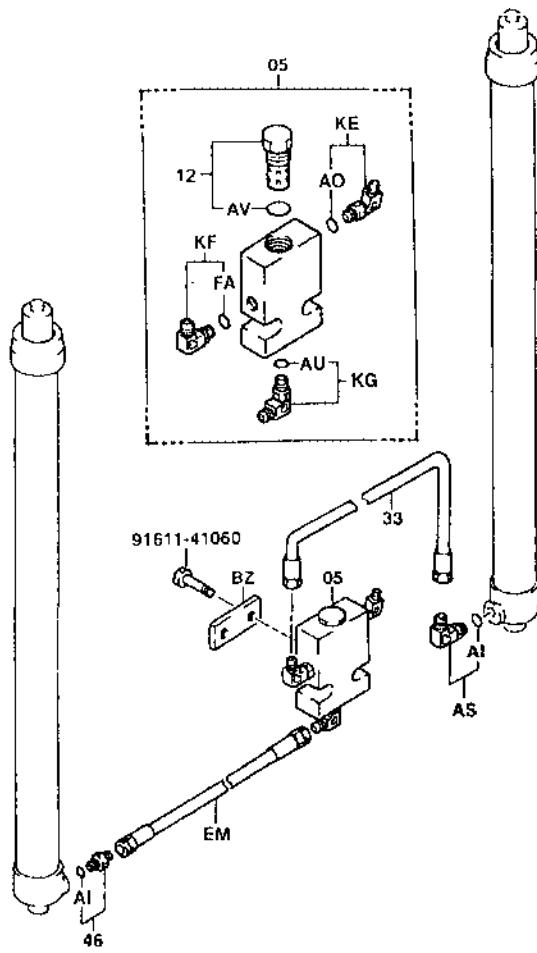

6801-313A

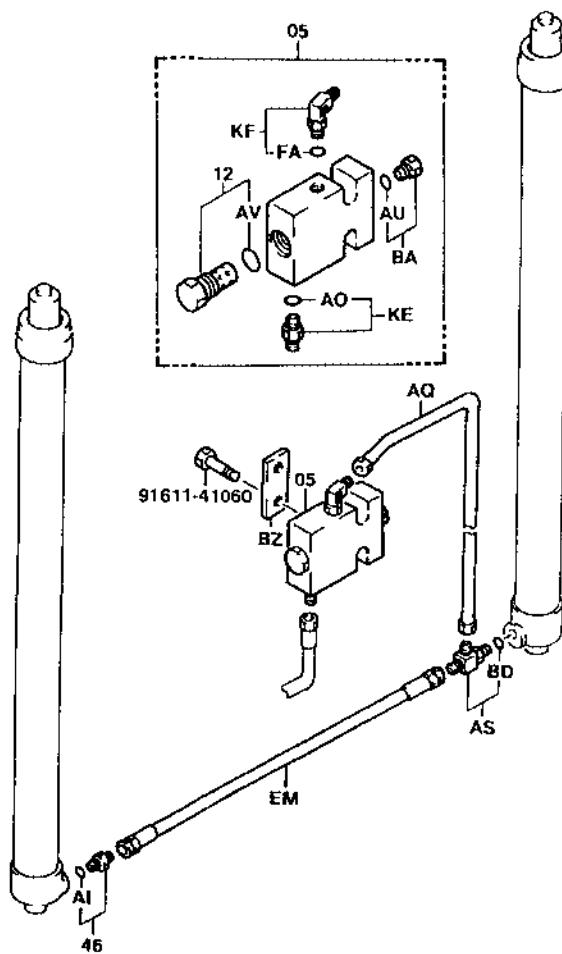

6801-314

G817-002

6801-313A

6801-314 004

FIG. 6801
BODY PIPING

6801

MAIN

97/05

PART NAME	PART NAME	QTY
CODE		
16801-05	REGULATOR ASSY, FLOW	1
16801-10	FILTER ASSY, SUCTION	1
16801-11	FILTER ASSY, RETURN	1
16801-12	VALVE ASSY, FLOW REGULATOR	1
16801-15A	PLUG (FOR OIL TANK DRAIN)	1
16801-15B	GASKET (FOR OIL TANK DRAIN PLUG)	1
16801-19	COVER ASSY, OIL TANK	1
16801-19A	PACKING SUB-ASSY	1
5801-20	PIPE SUB-ASSY (PUMP INLET)	1
6801-70A	RING, O (FOR OIL PUMP INLET)	1
6801-21A	RING, O (FOR OIL PUMP OUTLET)	1
6801-23	PIPE SUB-ASSY (TILT CYLINDER FRONT)	1
6801-27	CAP SUB-ASSY, OIL TANK	1
6801-28	GAGE SUB-ASSY, OIL LEVEL	1
6801-30	HOSE, HIGH PRESSURE, NO.1 (PUMP TO VALVE)	1
16801-32	HOSE, HIGH PRESSURE, NO.1 (VALVE TO LIFT)	1
16801-33	HOSE, HIGH PRESSURE, NO.2 (VALVE TO LIFT)	1
16801-34	HOSE, HIGH PRESSURE, NO.1 (TILT FRONT)	2
16801-35	HOSE, HIGH PRESSURE, NO.1 (TILT REAR)	2
16801-45	FITTING (FOR TILT CYLINDER)	4
6801-46	FITTING (FOR LIFT CYLINDER)	1
16801-51	HOSE, LOW PRESSURE, NO.1 (VALVE TO TANK)	1
6801-51A	CLAMP (FOR VALVE TO TANK NO.1 HOSE)	2
6801-55	HOSE, LOW PRESSURE (TANK TO PUMP)	1
6801-55A	CLAMP (FOR TANK TO PUMP HOSE)	2
6801-64	HOSE, STEERING BOX NO.2 (STEERING TO TANK)	1
16801-AH	CLAMP	1
16801-AC	RING, O	4
16801-AD	BOLT	2
16801-AF	FLANGE, SPLIT	1
16801-AG	CLAMP	2
16801-A:	RING, O	1- 2
6801-AM	CLAMP, HOSE	1
6801-AO	RING, O	1
6801-AQ	PIPE SUB-ASSY	1
6801-AS	FITTING	1
6801-AU	RING, O	1
6801-AV	RING, O	1
6801-AX	CAP, OIL TANK OVERFLOW PIPE	1
6801-BA	PLUG	1
16801-BD	RING, O	1
16801-BC	BOLT	5
16801-BL	BOLT	1
16801-BD	RING, O	1
16801-BZ	PLATE	1
16801-CL	COVER, OIL FILTER	1
16801-DE	SPACER	1
16801-DN	PIPE SUB-ASSY (TILT, REAR)	1
16801-DO	PIPE SUB-ASSY (TILT, FRONT)	1
6801-EG	TANK SUB-ASSY, OIL	1
6801-EJ	BREATHER ASSY, AIR	1
6801-EL	FITTING	1
6801-EM	HOSE, HIGH PRESSURE	1
6801-FA	RING, O	1
16801-FN	PACKING, OIL TANK CAP	1
16801-GK	PACKING	1
16801-GM	RING, O	1
16801-GU	BUSS	1
16801-IL	HOSE	1
16801-JH	SCREW	1
16801-KE	FITTING	1
16801-KF	FITTING	1
16801-KG	FITTING	1
16801-PM	PLUG	1

GB17-003E



FIG.6802
MAST PIPING

6802

MAIN 97/07

F.SV

F.V

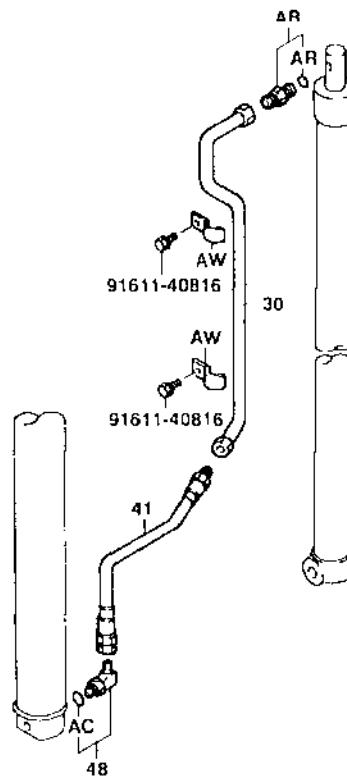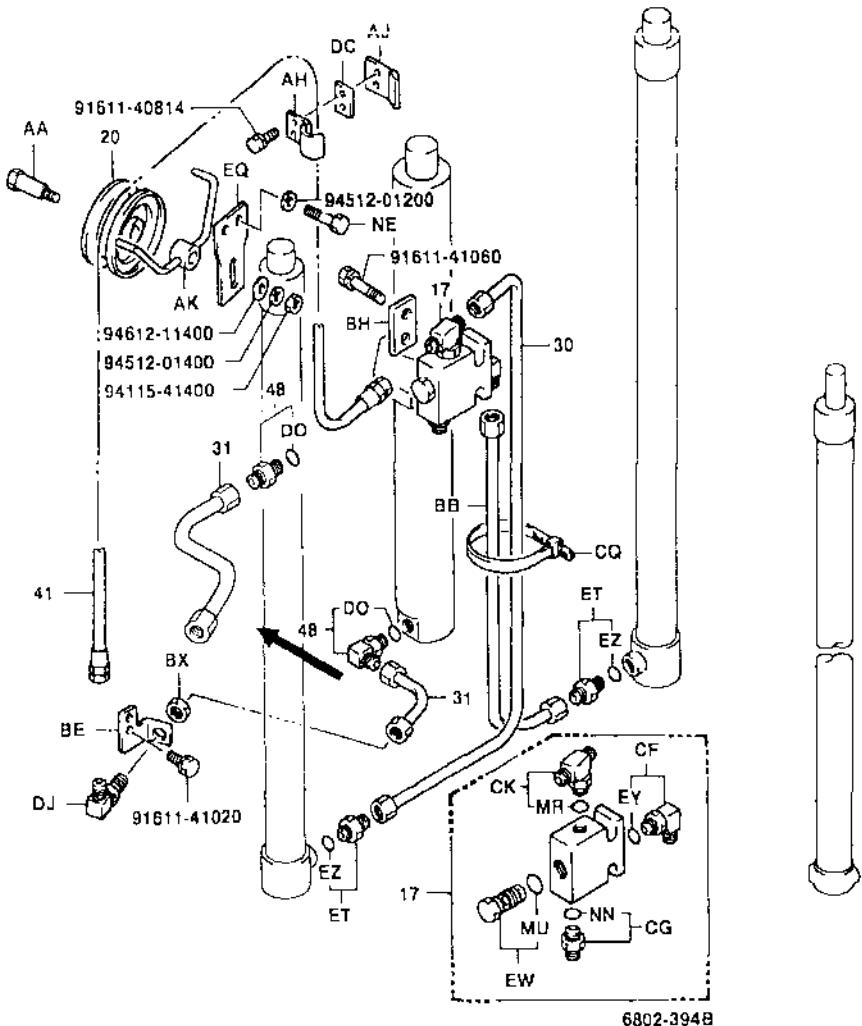

6802-396

G817-001

FIG. 6802
MAST PIPING


6802

MAIN


97/07

A410+A450+v

A450+v (RH)

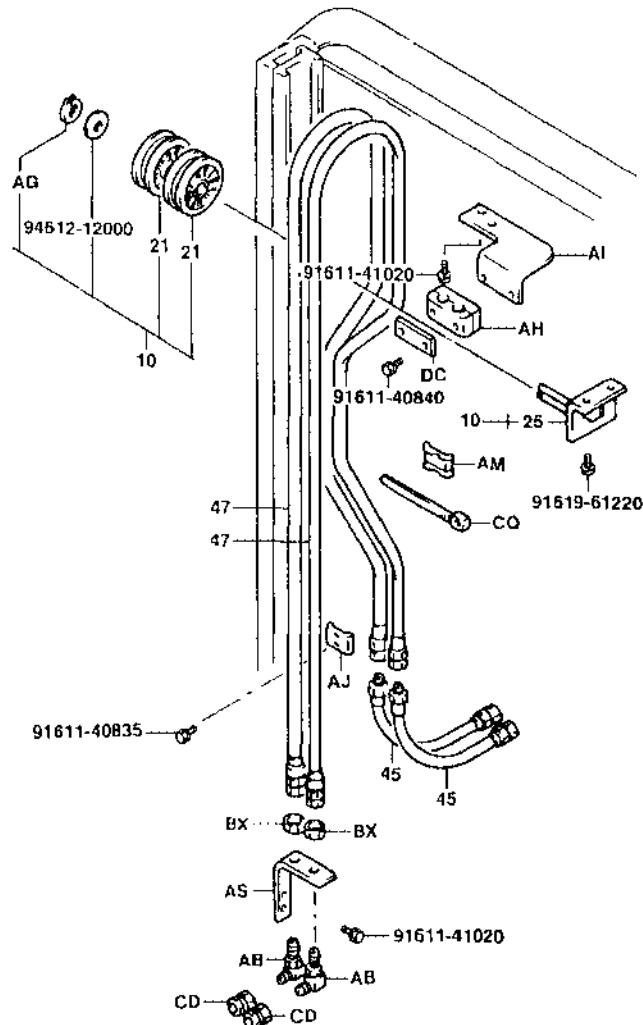

6802-392A

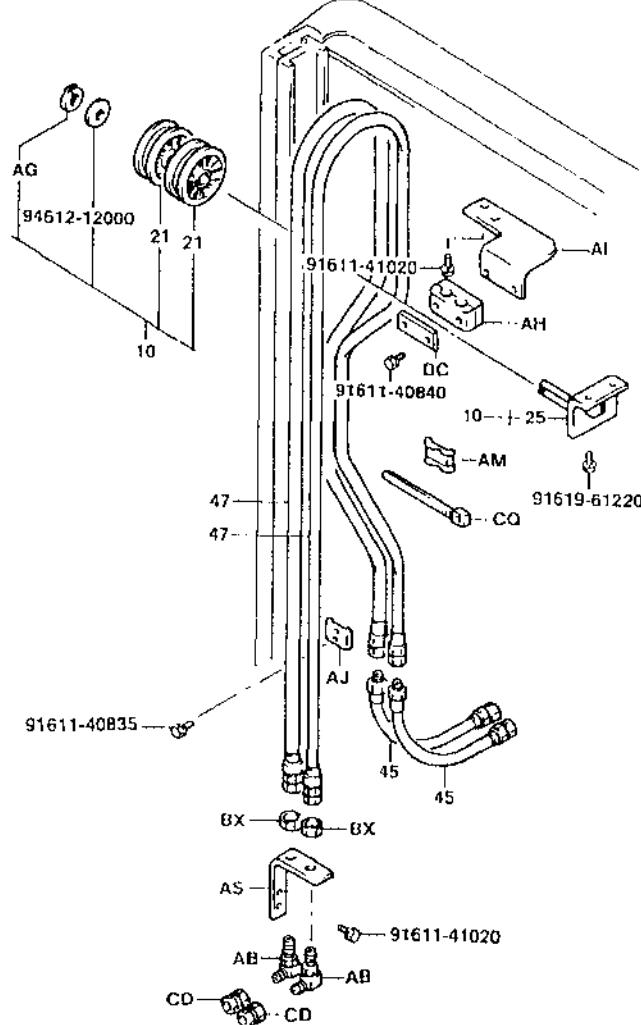

6802-392A


G817-002

FIG. 6802
MAST PIPING

6802

MAIN 97/07

A450-.V (LH)

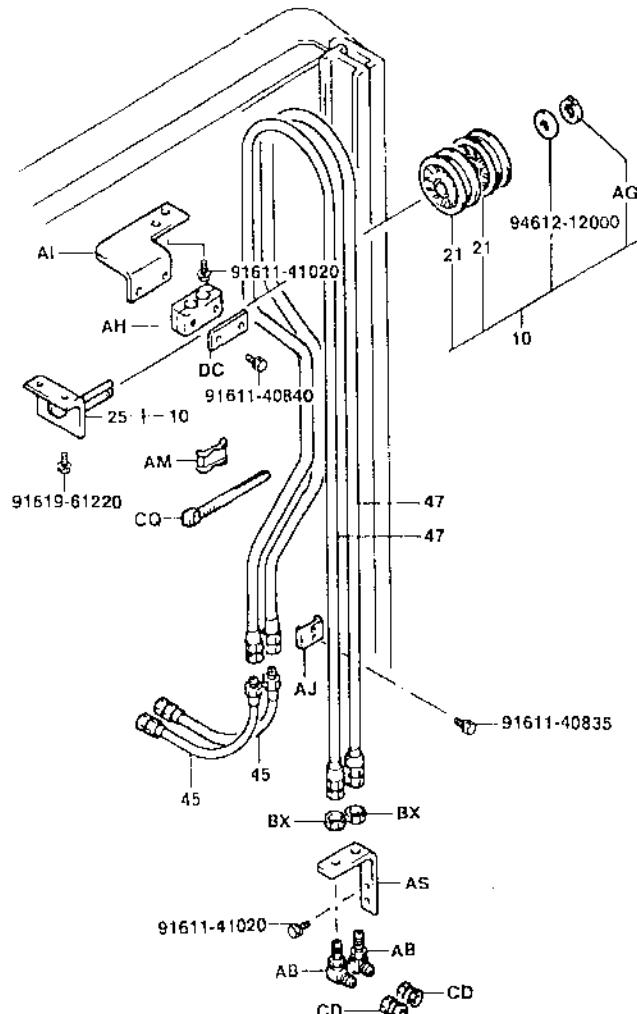

6802-393A

PART NAME / CODE	PART NAME	QTY
6802-10	PULLEY ASSY	1
6802-12	DEFLECTOR ASSY, FLOW	1
6802-20	PULLEY SUB ASSY, HOSE GUIDE, NO.1	1
6802-21	PULLEY SUB ASSY, HOSE GUIDE, NO.2	2- 4
6802-25	BRACKET SUB-ASSY, GUIDE PULLEY	1
6802-30	PIPE SUB-ASSY, NO.1 (FRONT LIFT)	1
6802-31	PIPE SUB-ASSY, NO.2 (FRONT LIFT)	1
6802-41	HOSE, HIGH PRESSURE, NO.1 (FRONT LIFT)	1
6802-45	HOSE, HIGH PRESSURE, NO.1 (FOR ATTACHMENT)	1
6802-47	HOSE, HIGH PRESSURE (FOR ATTACHMENT PULLEY)	2- 4
6802-48	FITTING (FOR FRONT LIFT CYLINDER)	1
6802-AA	FIT, HOSE GUIDE PULLEY	1
6802-AB	FITTING	1- 6
6802-AC	RING, O	1- 2
6802-AG	RING, SHAFT SNAP	1- 4
6802-AH	CLAMP	1
6802-AI	BRACKET, PIPE	1
6802-AJ	CLAMP	1- 2
6802-AK	GUIDE SUB-ASSY, HOSE	1
6802-AM	CLAMP SUB-ASSY, HOSE	2- 6
6802-AN	RING, O	1
6802-AS	BRACKET, PIPE	1- 2
6802-AW	CLAMP	1
6802-BB	HOSE, HIGH PRESSURE	2
6802-BE	BRACKET, HOSE CLAMP	1
6802-BH	PLATE	1
6802-BX	NUT	1- 4
6802-CD	CAP	2- 4
6802-CF	FITTING	1
6802-CG	FITTING	1
6802-CK	FITTING	1
6802-CQ	BAND	2- 6
6802-DC	PLATE	1- 2
6802-DJ	FITTING	1
6802-DD	RING, O	1
6802-EQ	BRACKET	1
6802-ET	FITTING	1
6802-EW	VALVE ASSY, FLOW REGULATOR	1
6802-EY	RING, O	1
6802-FZ	RING, O	2
6802-MR	RING, O	1
6802-MU	RING, O	1
6802-NF	BOLT	2
6802-NN	RING, O	1

G817-003E


FIG. 6803
MAST PIPING

6803


MAIN

97/07

A410+A4104+FSV

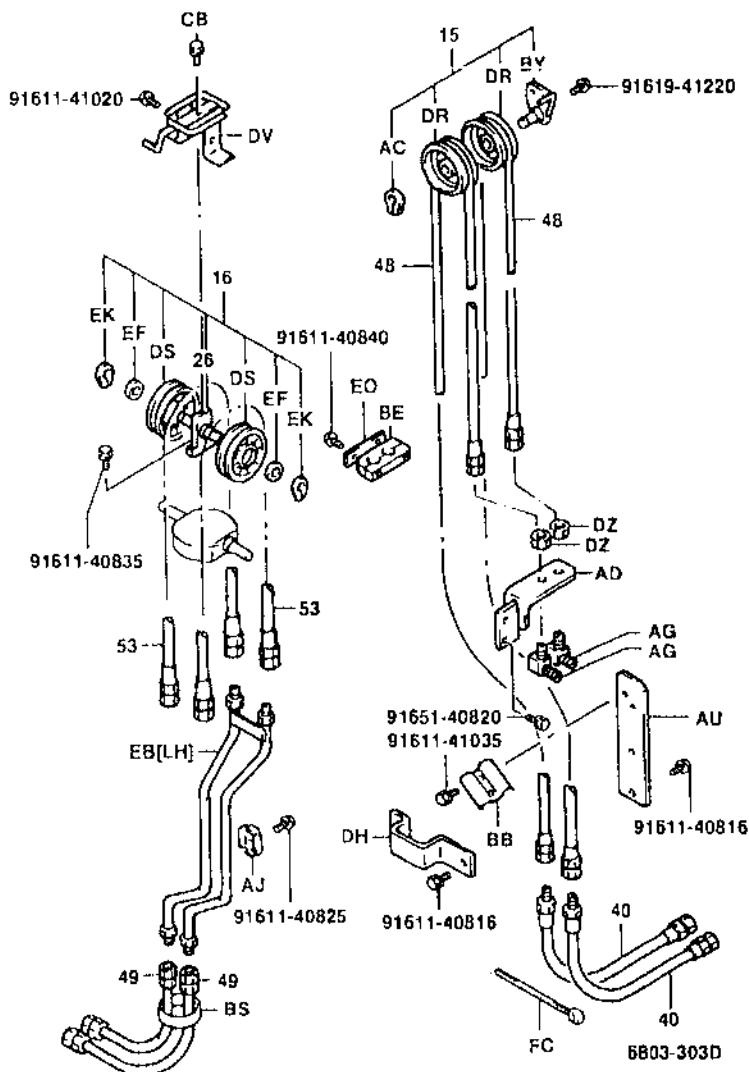

A450++FSV (LH)

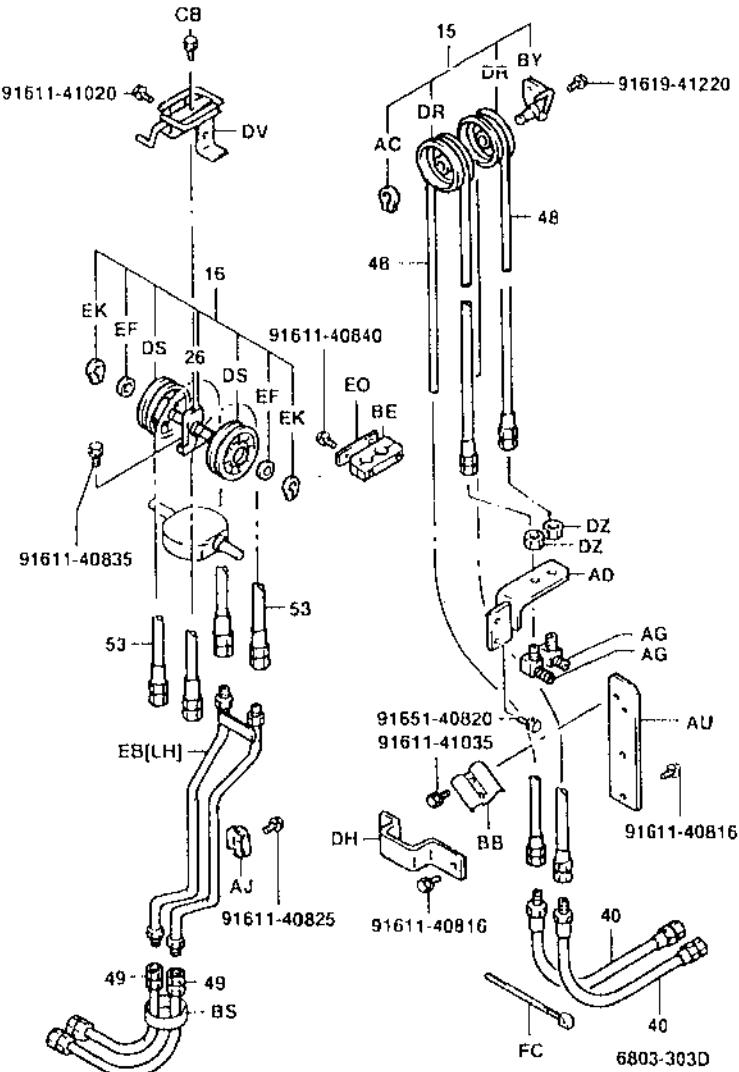

G817-001



FIG.6803
MAST PIPING

6803

MAIN 97/07

A450+FSV (RH)

A410,A450+FSV

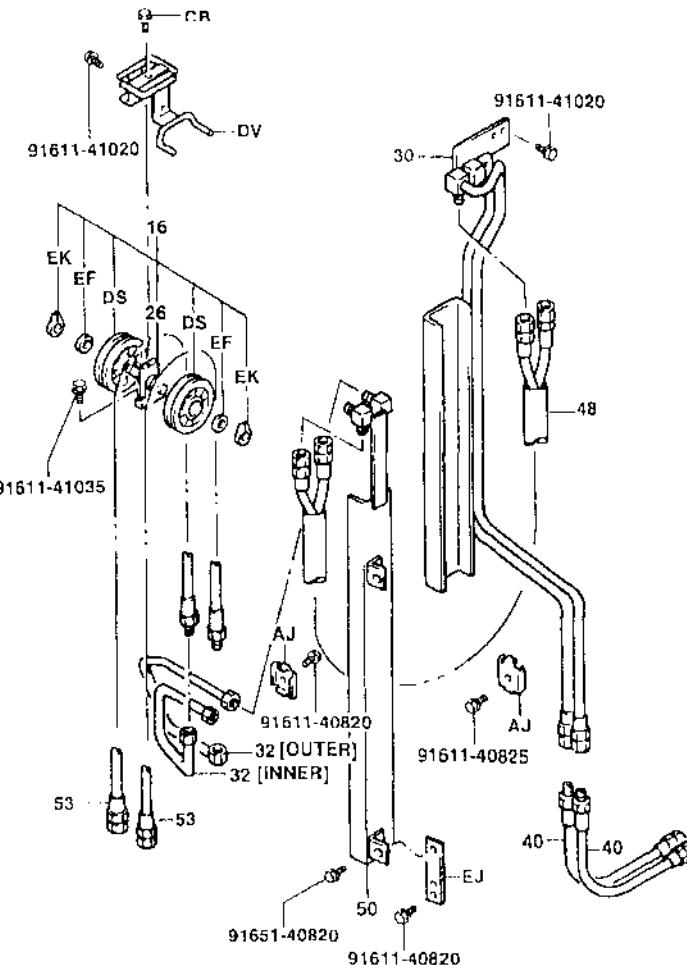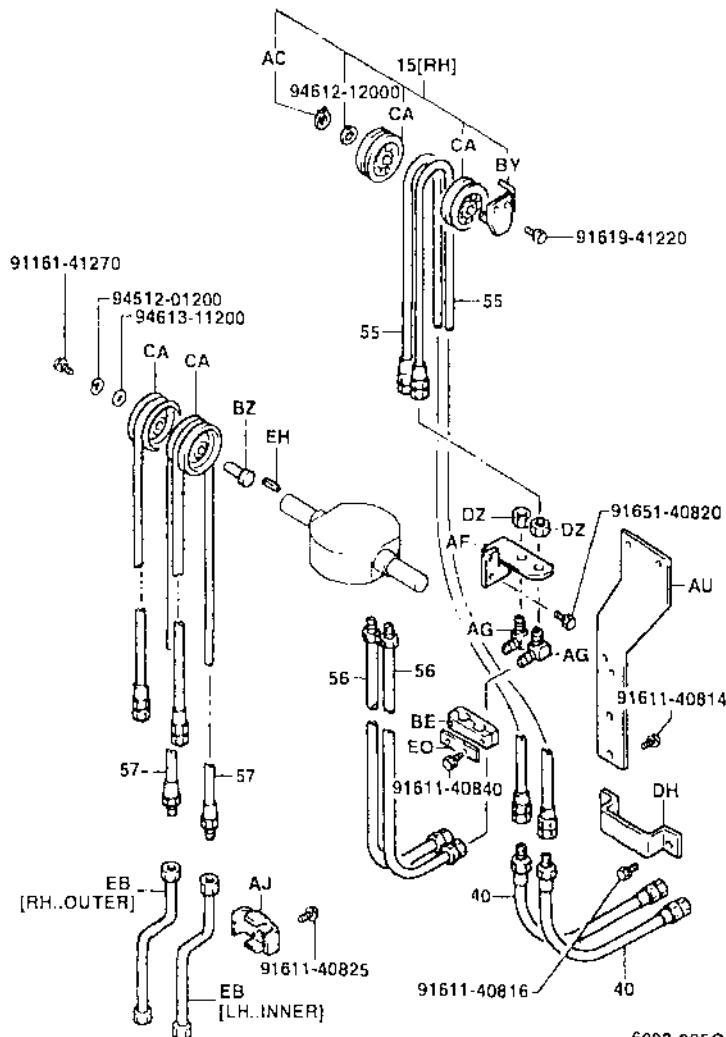

6817-002


FIG. 6803
MAST PIPING

6803


MAIN

97/07

A450xxFV (RH)

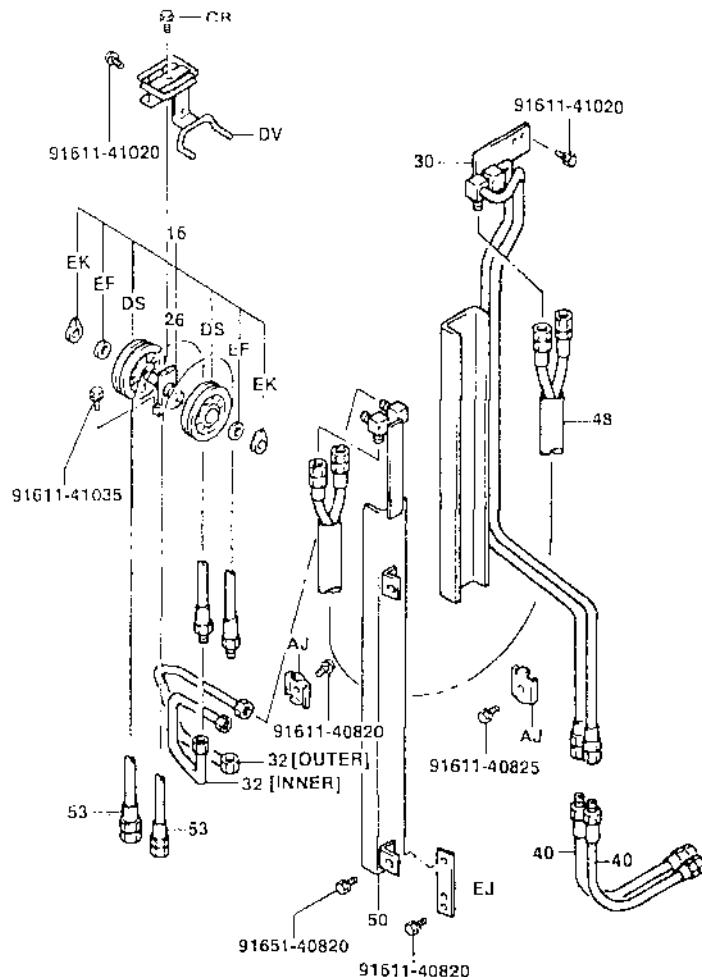

A450xxFV (LH)

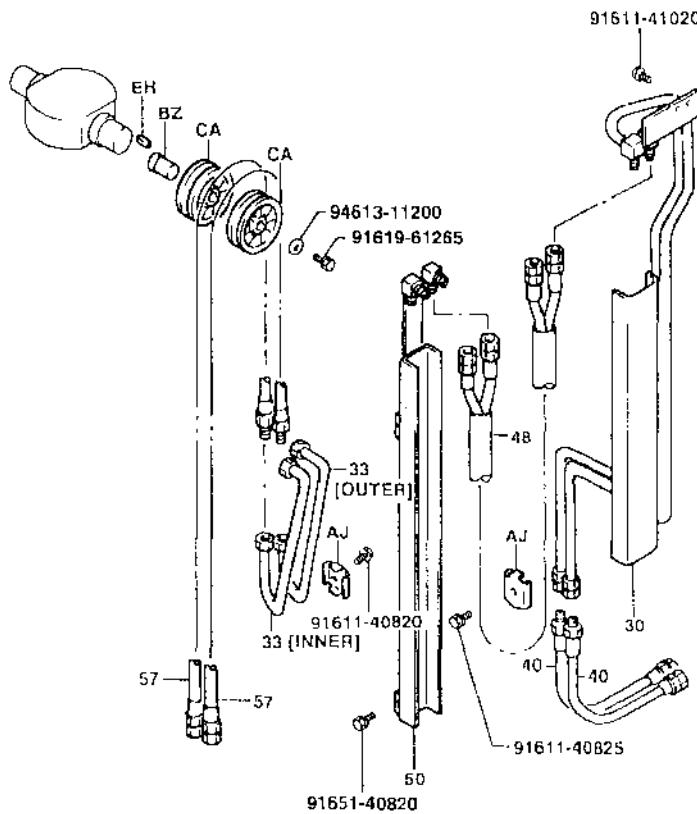

6803-297D

6803-296C


GW17-005

FIG.6803
MAST PIPING


6803

MAIN 97/07


A410+A450+SV (CIR TERMINATION)

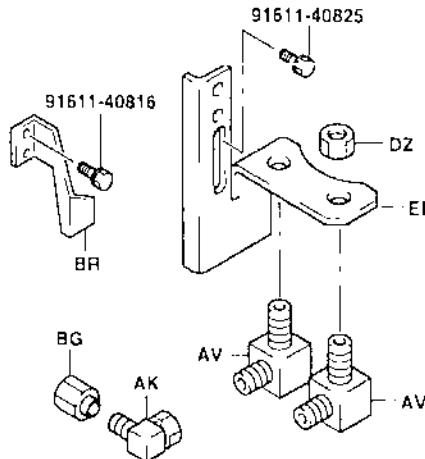

A410+A450+FV (CIR TERMINATION)

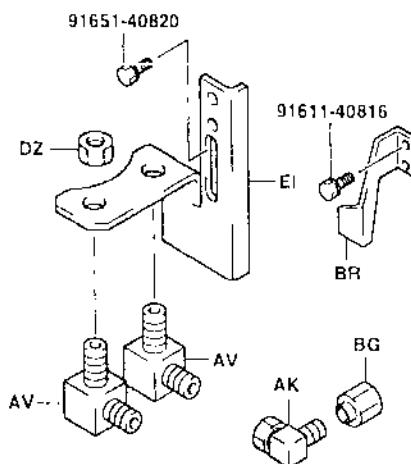


A410+A450+SV (ISDL TERMINATION)

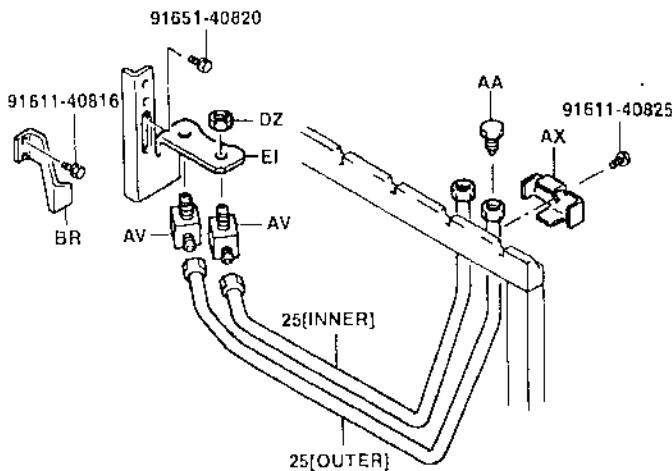

6803-298C

A410+A450+FV (ISDL TERMINATION)

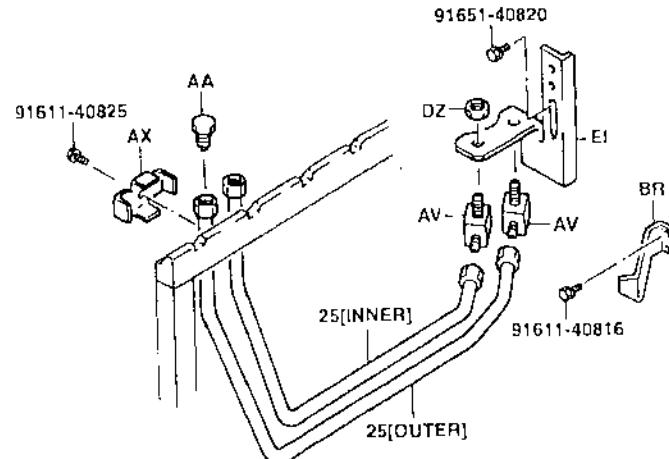

6803-300C

G817-004


FIG.6803
MAST PIPING

6803

MAIN


97/07

A450-+FSV (LH, SIDE TERMINATION)

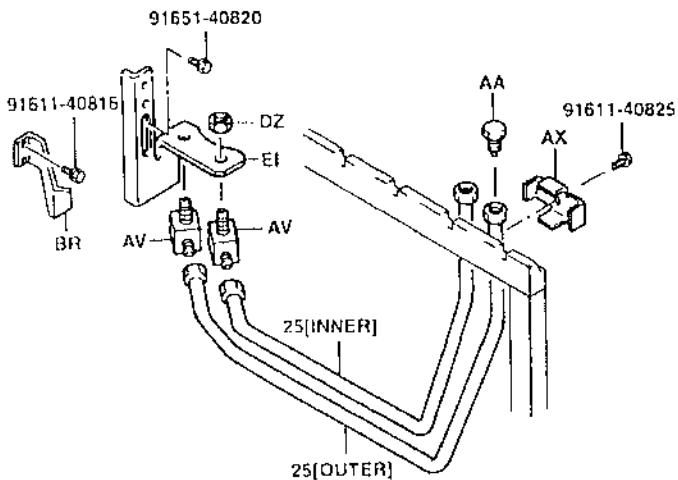


6803-29BC

A450-+FSV (RH)

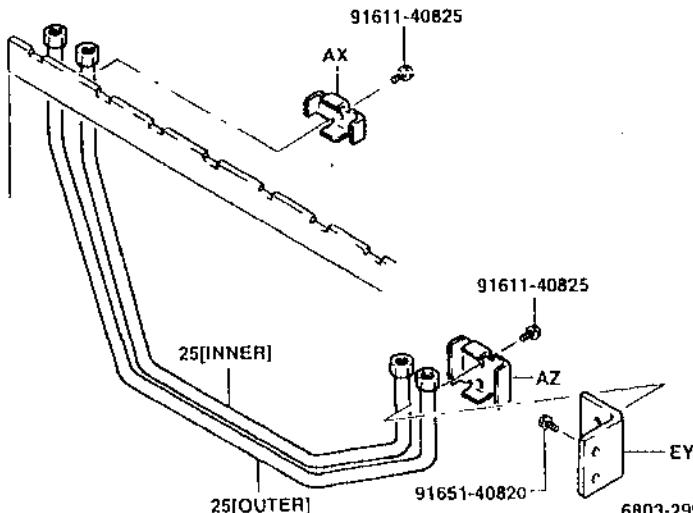


6803-299B

A450-+FSV (LH, CTR TERMINATION)

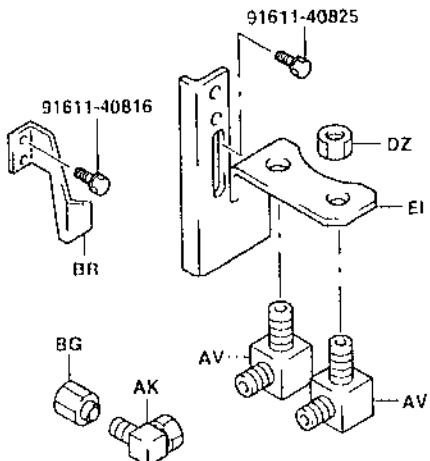

6803-353

A450-+FV (LH)

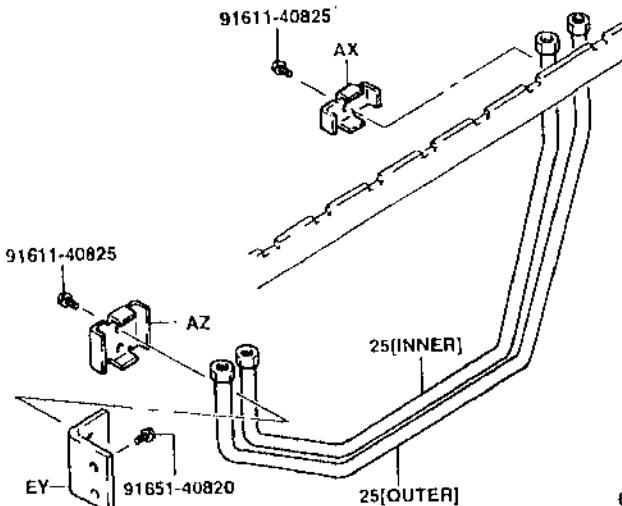

6803-301B


6803-299B
6803-301B

FIG.6803
MAST PIPING

6803


MAIN 97/07

A4504, FV (RH, SIDE TERMINATION)

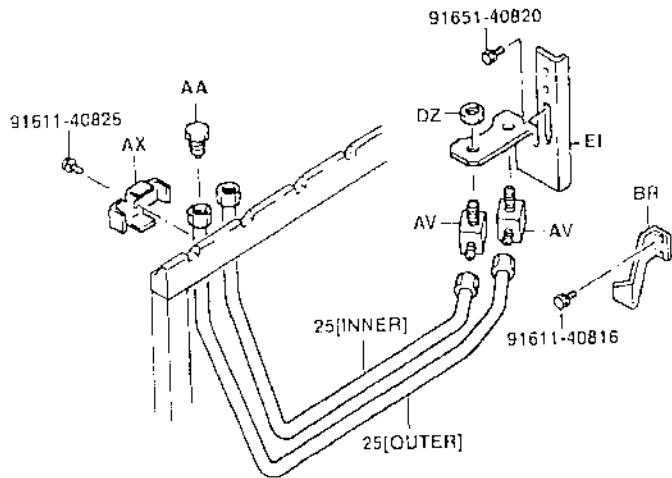

6803-300C

A4504, FV (RH, CTR TERMINATION)

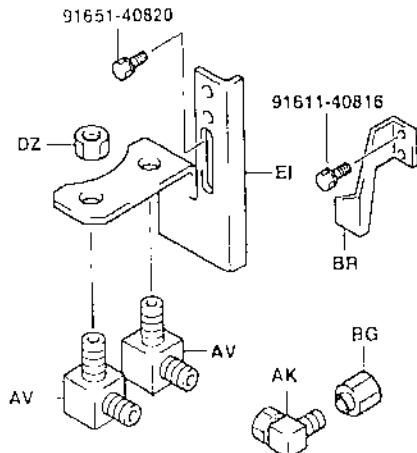

6803-354

PART NAME	PART NAME	QTY
CODE		
16803-15	PULLEY ASSY, HOSE	1
16803-16	BRACKET ASSY	1
16803-25	CONNECTOR SUB-ASSY	1
16803-26	BRACKET SUB-ASSY, HOSE PULLEY	1
16803-30	PIPE SUB ASSY, NO.1 (MAST)	1
16803-32	PIPE SUB-ASSY, NO.4 (MAST)	1
16803-33	PIPE SUB ASSY, NO.6 (MAST)	1
16803-40	HOSE, HIGH PRESSURE (VALVE TO MAST NO.1)	1
16803-48	HOSE, HIGH PRESSURE	2
16803-49	THRISE, HIGH PRESSURE	1
16803-50	GUIDE, HOSE	1
16803-53	HOSE, HIGH PRESSURE	2
16803-55	HOSE, HIGH PRESSURE	2
16803-56	HOSE, HIGH PRESSURE	2
16803-57	NUSE, HIGH PRESSURE	2
16803-AA	PLUG	2
16803-AC	RING, SNAP	2
16803-AD	BRACKET, ROTARY JOINT	1
16803-AF	BRACKET, HOSE REEL	1
16803-AG	FITTING	2
16803-AJ	ICLAMP	1
16803-AK	FITTING	2
16803-AU	PLATE	1
16803-AV	FITTING	2
16803-AX	ICLAMP, PIPE	1
16803-AZ	ICLAMP, HOSE	1
16803-BB	ICLAMP	1
16803-BE	CLAMP, HOSE	2
16803-BG	CAP	2
16803-BR	PLATE	1
16803-BS	BAND	1
16803-BY	BRACKET SUB-ASSY	1
16803-BZ	PIN	1
16803-CA	PULLEY	2
16803-CB	BOLT	5
16803-DH	ICLAMP	1
16803-DR	PULLEY	2
16803-DS	PULLEY	2
16803-DV	STOPPER SUB-ASSY	1
16803-DZ	NUT	2
16803-EB	PIPE SUB ASSY	1
16803-EF	WASHER, PLATE	2
16803-EL	BRACKET SUB-ASSY	1
16803-EJ	BRACKET SUB ASSY, GUIDE	1
16803-EK	RING, SHAFT SNAP	2
16803-ID	PLATE	1
16803-EY	PLATE	1

G817-006E


FIG. 7709
SIDE SHIFT FORK PIPING

7709

MAIN


97/05

E981-FSV-FV

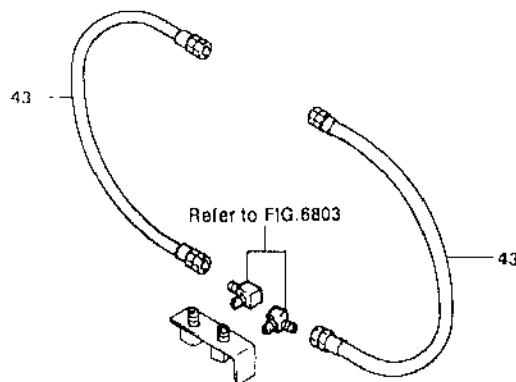

7709-105

E981-FV

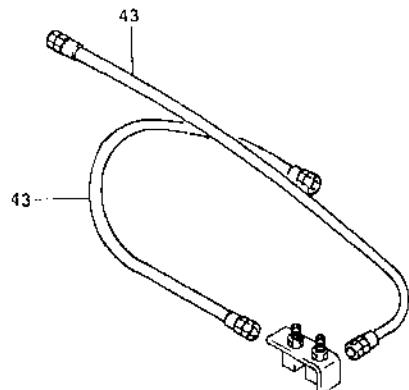

7709-106

PART NAME	CODE
HOSE, HIGH PRESSURE, NO.1	7709-43

PART NAME	QTY
HOSE, HIGH PRESSURE, NO.1	2

G817-001E


FIG.8201
SIDE SHIFT FORK

8201

MAIN

97/05

E98

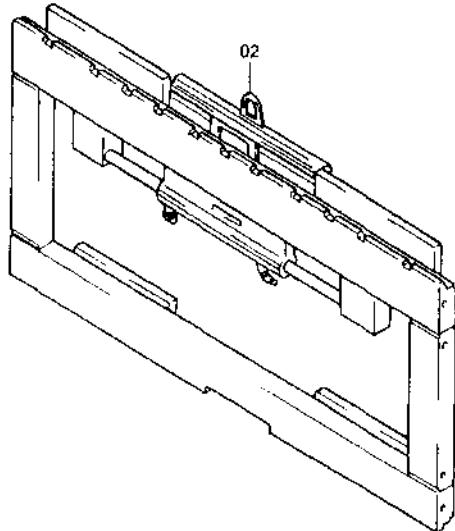

8201-096

PART NAME	PART NAME	QTY
CODE		
8201-02	SHIFTER ASSY, SIDE	1

G817-001E