

TOYOTA INDUSTRIAL VEHICLE

PARTS CATALOG

5FBCU18,20,25
30-5FBCU18,20,25
5FBCHU20,25
30-5FBCHU20,25

No.G818-1

MANUFACTURED BY
TOYOTA INDUSTRIAL EQUIPMENT MFG., INC.

TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.

TOYOTA

FORKLIFT TRUCK

PARTS CATALOG

MODEL	- 5FBC
FRAME NO.	5FBC
ENGINE NO.	
LIFTING HEIGHT	mm

DESCRIPTION

	Cold Storage Model Type 20S		
	36V Electrical System		
	48V Electrical System		

TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.

QUICK REFERENCE INDEX

INTRODUCTION

ELECTRICAL

CHASSIS

BODY

ELECTRICAL

MAST

HYDRAULIC COMPONENT

CYLINDER & PIPING

ATTACHMENT (B)

GENERAL INFORMATION

This parts catalog has been prepared for the customers of Toyota Industrial Vehicles and this shows only the part name codes instead of parts numbers.

When ordering parts from your local Toyota dealer, please specify the complete model number of the truck, the engine number or frame number. Also it is essential that you specify the part name codes described in the pages of illustrations and text.

The complete model number and frame number are shown in the front page of this catalog. All the columns in this quick reference index are supposed to be filled out by both the factory and your local dealer.

For the industrial vehicle with optional equipment, which is described in the lower part of the DESCRIPTION, it is imperative for you to specify optional equipment when ordering parts.

Your Toyota dealer has always been furnished with enough information to decode the correct part numbers based on your information of model number, engine number or frame number as well as part name code.

INFORMATIONS D'ORDRE GENERAL

Ce catalogue de pièces a été préparé pour les propriétaires de Véhicules Industriels Toyota. On n'y trouvera que les codes de désignation de pièces au lieu des numéros de pièces.

Pour la commande de pièces auprès de votre concessionnaire Toyota, prière de spécifier le numéro de modèle complet de l'engin, le numéro du moteur ou le numéro du châssis. Il est aussi nécessaire de spécifier les codes de désignation de pièces comme ils sont décrits dans les pages d'illustrations et dans le texte.

Le numéro de modèle complet et le numéro de châssis sont indiqués en première page de ce catalogue. Toutes les colonnes de l'index de référence rapide devraient être remplies par l'usine et par votre concessionnaire.

Pour le véhicule industriel avec équipement optionnel, décrit en bas de page sous la rubrique "DESCRIPTION", il convient de bien spécifier qu'il s'agit de cet équipement lors de commande de pièces.

Votre concessionnaire Toyota est toujours suffisamment informé pour décoder les numéros de pièces sur la base de votre information du numéro de modèle, du numéro de moteur ou de châssis, et des codes de désignation de pièces.

INFORMACION GENERAL

Este catálogo de piezas ha sido preparado para los clientes de vehículos industriales de TOYOTA, e incluye tan sólo los códigos de nombre de pieza en lugar de los números de pieza.

Cuando solicite piezas a su distribuidor local de TOYOTA especifique por favor el número de modelo completo del vehículo, el número de motor o el número de bastidor. Asimismo, es esencial que Vd. especifique los códigos de nombre de pieza descritos en las páginas de ilustraciones y de texto.

El número completo de modelo y el número de bastidor se indican en la portada de este catálogo. Se supone que todas las columnas de este índice de referencia se han rellenado, tanto por parte de la fábrica como por parte de su distribuidor local.

En lo que concierne a los vehículos industriales con equipos opcionales, que se describen en la parte baja de la DESCRIPCION, es absolutamente necesario que especifique equipos opcionales cuando solicite piezas de repuesto.

Su distribuidor local de TOYOTA posee la información necesaria para descifrar los números correctos de cada pieza a base de su información de número de modelo, número de motor o número de bastidor, así como el código de nombre de la pieza.

ALLGEMEINE INFORMATION

Dieser Teilekatalog wurde für die Benutzer von Toyota Industriefahrzeugen zusammengestellt und zeigt anstelle von Teilenummern nur die Teilennamen-Kodes.

Geben Sie bei Teilebestellungen von Ihrem Toyota-Händler am Platz bitte die vollständige Modellnummer des Fahrzeugs, die Motornummer oder Fahrgestellnummer an. Es ist auch erforderlich, daß Sie die in den Illustrationen und im Text beschriebenen Teilennamen-Kodes angeben.

Die vollständige Modellnummer und Fahrgestellnummer finden Sie auf der Vorderseite dieses Katalogs. Alle Spalten in dieser Bezugstabelle sollen sowohl vom Werk als von Ihrem Händler am Platz ausgefüllt werden.

Für Industriefahrzeuge mit Sonderausrüstung, welche im unteren Teil der BESCHREIBUNG erläutert ist, müssen Sie bei der Bestellung von Teilen unbedingt diesbezügliche Angaben machen.

Ihr Toyota-Händler verfügt stets über genügend Information, um die richtigen Teilenummern zu entschlüsseln, basiert auf Ihren Angaben zu Modellnummer, Motornummer oder Fahrgestellnummer und den Teilennamen-Kodes.


ILLUSTRATION AND PART NAME CODE TEXT PAGE COMPOSITION

Essentially, one (1) page will present both the illustration and part name code. However, when the space for text page is not enough the next page will be used in succession.

COMPOSICION DE LAS PAGINAS DE ILUSTRACIONES Y DE TEXTO DE CODIGOS DE NOMBRE DE PIEZAS

Básicamente, una (1) página incluirá tanto la ilustración como el código de nombre de la pieza.

No obstante, si el espacio no fuese suficiente, se utilizará la página siguiente.

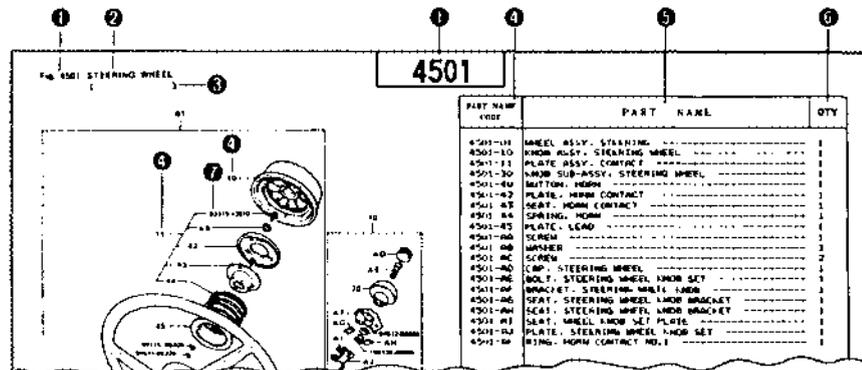

- 1 Figure number
This parts catalog has been prepared according to the figure numbers.
- 2 Figure title
A representative part name which is the major assembly part name is shown as the figure title of the illustration.
- 3 Sub title
The optional name or special specification of each illustration are indicated.
- 4 Part name code
This is a combination of figure number and codes of illustrations pertaining to each part. This is a key for your Toyota dealer to find the correct part numbers.
- 5 Part name
As a rule, the part name is indicated for each of the part name codes.
- 6 QTY (Quantity)
The quantity column indicates the utilized pieces of part name code unit. When the utilized quantity changes according to each of the vehicles, maximum is indicated. When the utilized quantity of the parts differs or is more than 100 pieces, quantity 99 is indicated.
- 7 Standard parts numbers
The standard parts such as the bolts, nuts, washer, etc. are described with parts numbers. When ordering these parts, specify parts numbers.

- 1 Número de figura
Este catálogo de piezas se ha preparado de acuerdo con los números de las figuras.
- 2 Título de las figuras
Como título de las figuras de la página de ilustraciones, se incluye un nombre que sea representativo del nombre del mayor conjunto.
- 3 Subtítulo
Se indican el nombre opcional o las especificaciones especiales de cada ilustración.
- 4 Código de nombre de pieza
Se trata de una combinación de número de figura y de código de las ilustraciones correspondientes a cada pieza. Esta es la clave para que su distribuidor local de TOYOTA pueda encontrar el número de pieza correcto.
- 5 Nombre de la pieza
Como norma, se indica el nombre de cada uno de los códigos de nombre de pieza.
- 6 QTY (Cantidad)
La columna de cantidad indica el número de piezas utilizadas de cada unidad de código de nombre de pieza. Cuando la cantidad utilizada es intercambiable entre cada uno de los vehículos, se indica el máximo. Cuando la cantidad de piezas utilizadas pueda diferir o ser superior a 100, se indica como cantidad 99.
- 7 Números de piezas normalizadas
Las piezas corrientes, tales como pernos, tuercas, arandelas etc., se describen con número de pieza. Cuando solicite tales piezas, indique su número de pieza.

ILLUSTRATION ET COMPOSITION DU DE TEXTE DE CODE DE DESIGNATION DE PIECE

Une (1) page contiendra essentiellement une illustration et ses codes de désignation de pièce. Toutefois, lorsque l'espace réservé au texte est insuffisant, la continuation se trouvera sur la page suivante.

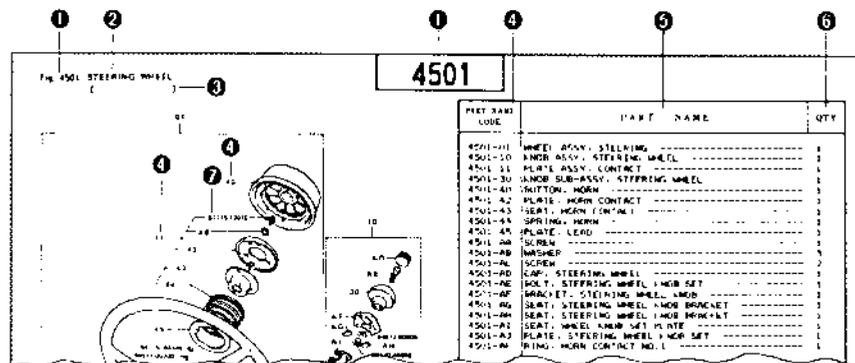


ABBILDUNG UND TEXTSEITENAUFBAU FÜR TEILENAMEN-KODE

Grundsätzlich finden Sie auf einer (1) Seite sowohl die Abbildung als auch den Teilnamen-Kode.

Wenn für den Text jedoch nicht genügend Platz vorhanden ist, wird er auf der nächsten Seite fortgesetzt.

- 1 Numéro de figure
Ce catalogue de pièces a été préparé en fonction des numéros de figures.
- 2 Titre de figure
Une désignation de pièce représentative, celle d'une pièce d'un ensemble important, est indiquée comme titre de figure de l'illustration.
- 3 Sous-titre
La désignation optionnelle ou les spécifications spéciales de chaque illustration sont indiquées.
- 4 Code de désignation de pièce
Obtenu en combinant le numéro de figure et les codes des illustrations inhérents à chaque pièce. Ce code permettra à votre concessionnaire Toyota de trouver les numéros de pièces corrects.
- 5 Désignation de pièce
La désignation de la pièce est indiquée pour chacun des codes de désignation de pièce.
- 6 Q'ty (quantité)
La colonne quantité indique les pièces utilisées de l'unité de code de désignation de pièce. La quantité maximum est indiquée quand la quantité utilisée diffère pour chacun des véhicules. Quand la quantité de pièces utilisées diffère ou lorsqu'elle dépasse 100 pièces, la quantité 99 est indiquée.
- 7 Numéros de pièces standard
Les pièces standard comme les boulons, les écrous, les rondelles, etc. sont décrits dans les numéros de pièces. Pour commander ces pièces, prière de spécifier les numéros de pièces.

- 1 Abbildungsnummer
Dieser Teilekatalog wurde nach Abbildungsnummern zusammengestellt.
- 2 Abbildungstitel
Ein stellvertretender Teilname, welcher zugleich die Bezeichnung für die Hauptbaugruppe ist, wird als Abbildungstitel der Illustration angegeben.
- 3 Untertitel
Ein zusätzlicher Name oder eine besondere Kennzeichnung werden für jede Illustration angegeben.
- 4 Teilnamen Kode
Dies ist eine Kombination von ziffern und Abbildungskodes, die jedes Teil betreffen. Es ist ein Schlüssel für Ihren Toyota Händler, um die richtigen Teilenummern zu finden.
- 5 Teilname
Grundsätzlich wird der Teilname für alle Teilnamen-Kodes angegeben.
- 6 QTY (Menge)
Die Mengenspalte gibt die benutzte Stückzahl von Teilnamen-Kode-Einheiten an.
Wenn die benutzte Stückzahl je nach Fahrzeug Verschieden ist, wird die Höchstmenge angegeben.
Wenn die benutzte Menge 100 Stück überschreiten kann, wird als Menge 99 angegeben.
- 7 Standardteile-Nummern
Die Standardteile, wie Schrauben, Mutttern, Unterlegscheiben usw., sind in den Teilenummern beschrieben. Geben Sie bei Bestellung dieser Teile die Teilenummern an.

DATA PLATE & SERIAL NUMBERS

For retrieving correct part numbers, it's indispensable to know the truck model, as well as frame number (or engine number).
Customers can obtain said information in the data plate on the truck or in this user parts catalog.

PLAQUE DE DONNEES TECHNIQUES & NUMEROS DE SERIE

Pour relever correctement le numéro des pièces, il est indispensable de connaître le modèle de l'engin, ainsi que le numéro du châssis (ou du moteur).
Les propriétaires peuvent trouver ladite information sur la plaque de données techniques de l'engin ou dans le présent ouvrage.

 
PLACA DE DATOS Y NUMEROS DE SERIE


Para obtener los números de pieza correctos, es indispensable conocer el modelo del vehículo, así como el número del bastidor (o del motor).
Los clientes pueden obtener dicha información por la placa de datos del vehículo o este catálogo de piezas para el usuario.

DATENPLATTE & SERIENNUMMERN

Um die richtige Teilenummer zu ermitteln, müssen unbedingt das Fahrzeugmodell sowie die Fahrgestellnummer (oder die Motornummer) bekannt sein.
Kunden können diese Angaben von der Datenplatte am Fahrzeug oder in diesem Teilekatalog für Benutzer entnehmen.

Data plate
Placa de datos
Plaque de données techniques
Datenplatte

TOYOTA ELECTRIC FORKLIFT TRUCK			
MODEL	MAST		
SERIAL NO.	BACK TILT		
TYPE	VOLTAGE	V/ATCH.	
FRONT TREAD	IN.	TIRE FR.	
MAX. AMPERER	AH	SIZE RR.	
HOURLY CAPACITY	EO	BATTERY WT. MIN./MAX.	LB./ LB.
BATTERY TYPE			
MAX. LIFTING HEIGHT "A"	IN.	TRUCK WEIGHT W/O BATTERY	LB.
RATED CAPACITY WITH VERTICAL UPRIGHT EQUIPPED AS SHOWN			
CAPACITY LOAD CENTER "B"		THIS FORKLIFT TRUCK	
LB.	IN.	MEETS OR EXCEEDS DESIGN	
LB.	IN.	SPECIFICATIONS OF ASME/	
LB.	IN.	ANSI B56.1 IN EFFECT ON	
	IN.	THE DATE OF MANUFACTURE.	
 <p>WARNING IMPROPER OPERATION OR MAINTENANCE COULD RESULT IN INJURY OR DEATH. TRAINED OPERATORS ONLY. READ OPERATOR'S MANUAL FIRST. 5/78/11 12240 71</p>			
BLACK	ORANGE		

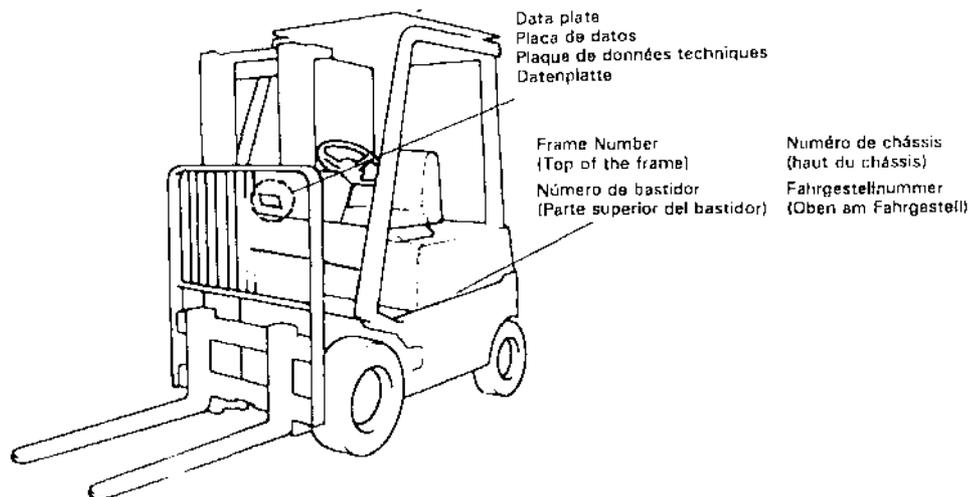

G818-9506

ILLUSTRATED INDEX
 INDEX ILLUSTRÉ
 ILLUSTRIRTES INHALTSVERZEICHNIS
 INDICE ILLUSTRADO


FIG. INDEX

FIG. 1401




Drive Motor

 FIG. 1402




Pump Drive Motor

 FIG. 1403




P/S Pump Drive Motor

FIG. 2401

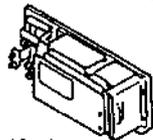

Control Panel

FIG. 2402

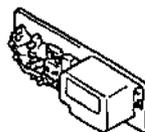


Contactor Panel

FIG. 2403



Contactor Assy

 FIG. 2501



Battery

ELECTRICAL GROUP


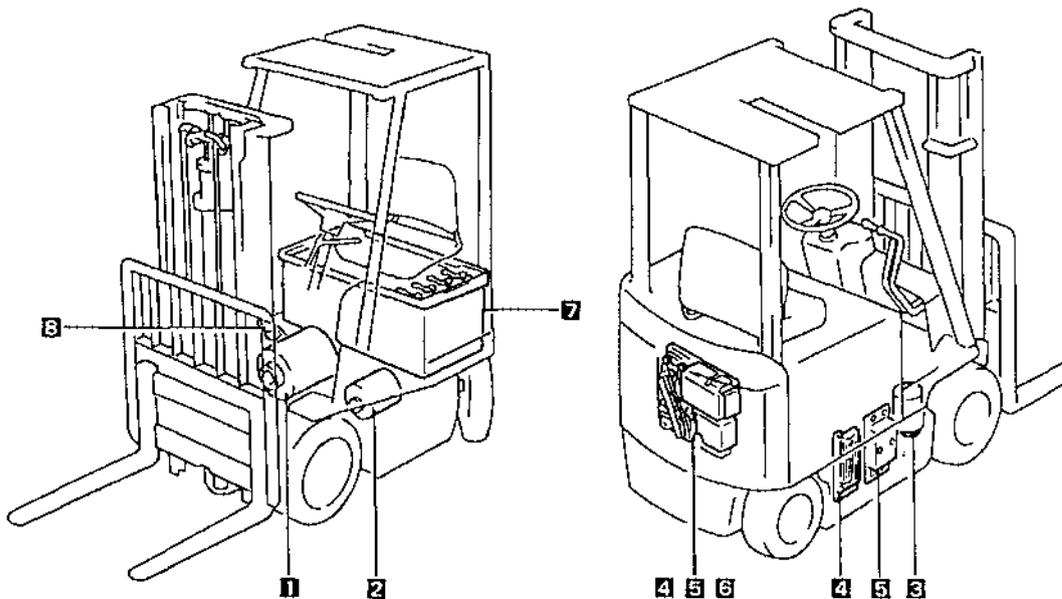


FIG. 2511




Battery Mount Charger

FIG. 2512

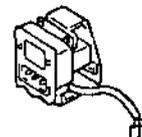

Battery Separate Charger

FIG. 2611

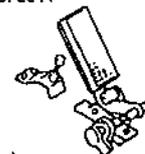


Accelerator

ILLUSTRATED INDEX
 INDEX ILLUSTRÉ
 ILLUSTRIRTES INHALTSVERZEICHNIS
 INDICE ILLUSTRADO


FIG. INDEX

FIG. 3305

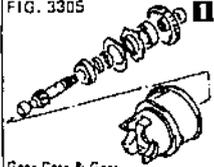

Gear Case & Gear

 FIG. 3310




Change Lever

FIG. 4101




Differential

FIG. 4201

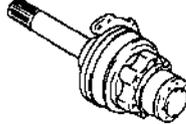


Front Axle Shaft

FIG. 4301

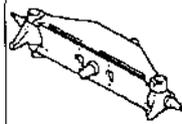

Rear Axle & Tie-Rod

FIG. 4302

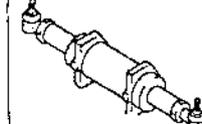

Rear Axle Cylinder

FIG. 4406



Front Wheel

CHASSIS GROUP



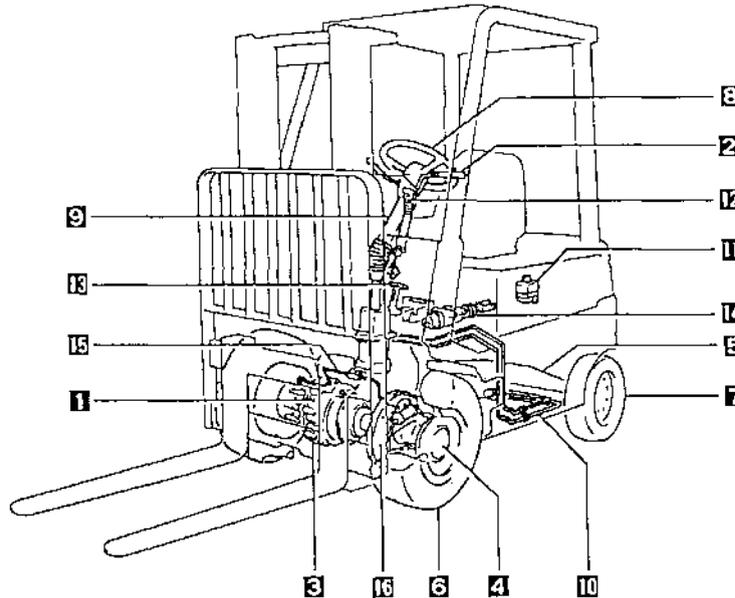


FIG. 4407

 

Rear Wheel

 FIG. 4501



Steering Wheel

FIG. 4502



Steering Post

FIG. 4503



Hydrostatic Steering Valve

FIG. 4715




Drum Brake

FIG. 4714



Brake Pipe

FIG. 4702

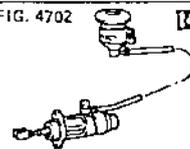

Brake Master Cylinder

FIG. 4701




Brake Pedal

FIG. 4601




Parking Brake

 FIG. 4510



Steering Oil Pump

 
 






FIG. 4507

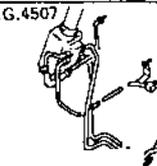

Draglink & Steering Piping

 

 
 
 
 







ILLUSTRATED INDEX
 INDEX ILLUSTRE
 ILLUSTRIRTES INHALTSVERZEICHNIS
 INDICE ILLUSTRADO

FIG. INDEX
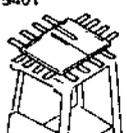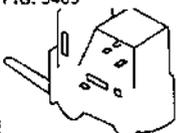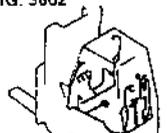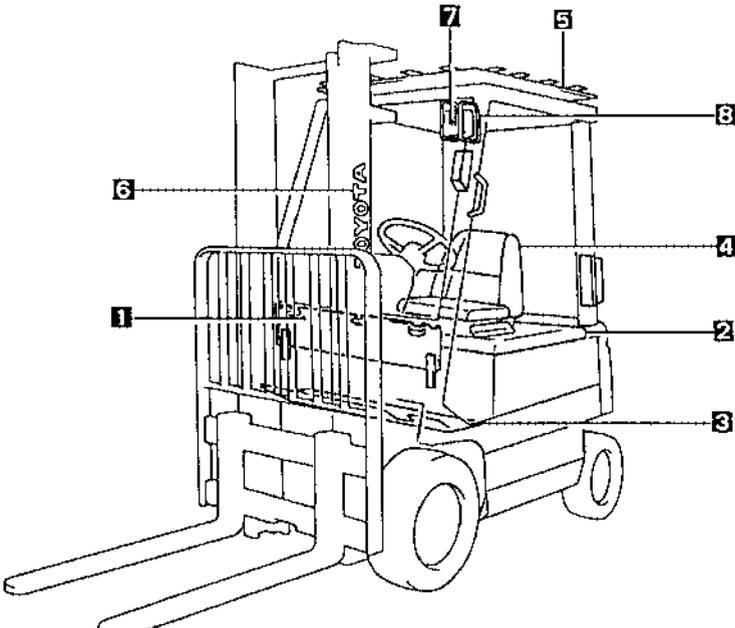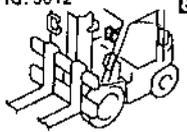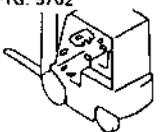
<p>FIG. 5101</p>  <p>Frame Weight</p>	<p>1 FIG. 5201</p>  <p>Hood & Hinge</p>	<p>2 FIG. 5301</p>  <p>Instrument Panel & Floor</p>	<p>3 FIG. 5308</p>  <p>Driver Seat</p>	<p>4 FIG. 5401</p>  <p>Head Guard & Accessory</p>	<p>5 FIG. 5405</p>  <p>Indicator Plate</p>	<p>6 FIG. 5602</p>  <p>Wiring & Clamp</p>
						<p>7 FIG. 5611</p>  <p>Lamp</p>
						<p>8 FIG. 5612</p>  <p>Lamp Bracket</p>
						<p>9 FIG. 5702</p>  <p>Meter & Switch</p>

ILLUSTRATED INDEX
 INDEX ILLUSTRE
 ILLUSTRIRTES INHALTSVERZEICHNIS
 INDICE ILLUSTRADO

FIG. INDEX
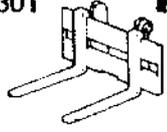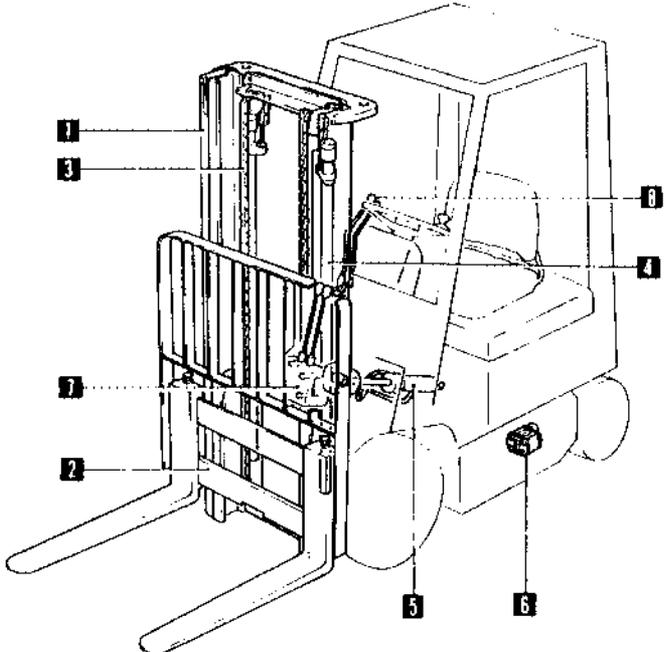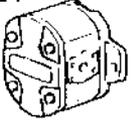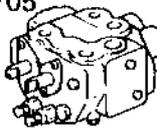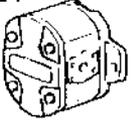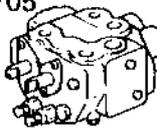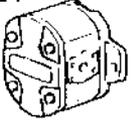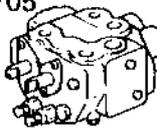
<p>6101 1</p>  <p>Mast</p>	<p>6301 2</p>  <p>Lift Bracket & Fork</p>	<p>6302 3</p>  <p>Chain & Chain Wheel</p>	<p>6501 (V) 4</p>  <p>Lift Cylinder</p>	<p>6502 (FV, FSV) 5</p>  <p>Front Lift Cylinder</p>	<p>6503 (FV, FSV) 6</p>  <p>Rear Lift Cylinder</p>	<p>6511 7</p>  <p>Tilt Cylinder</p>							
<p>MAST, HYDRAULIC COMPONENT GROUP</p> 													
<table border="1" style="width: 100%; text-align: center;"> <tr> <td data-bbox="152 1214 374 1397"></td> <td data-bbox="374 1214 595 1397"></td> <td data-bbox="595 1214 817 1397"> <p>8201</p>  <p>Side Shift Fork</p> </td> <td data-bbox="817 1214 1038 1397"> <p>7709</p>  <p>Side Shift Fork Piping</p> </td> <td data-bbox="1038 1214 1260 1397"> <p>6803</p>  <p>Mast Piping</p> </td> <td data-bbox="1260 1214 1481 1397"> <p>6802</p>  <p>Mast Piping</p> </td> <td data-bbox="1481 1214 1683 1397"> <p>6802</p>  <p>Mast Piping</p> </td> </tr> </table>									<p>8201</p>  <p>Side Shift Fork</p>	<p>7709</p>  <p>Side Shift Fork Piping</p>	<p>6803</p>  <p>Mast Piping</p>	<p>6802</p>  <p>Mast Piping</p>	<p>6802</p>  <p>Mast Piping</p>
		<p>8201</p>  <p>Side Shift Fork</p>	<p>7709</p>  <p>Side Shift Fork Piping</p>	<p>6803</p>  <p>Mast Piping</p>	<p>6802</p>  <p>Mast Piping</p>	<p>6802</p>  <p>Mast Piping</p>							
<table border="1" style="width: 100%; text-align: center;"> <tr> <td data-bbox="1481 487 1683 674"> <p>6701 8</p>  <p>Oil Pump</p> </td> </tr> <tr> <td data-bbox="1481 674 1683 860"> <p>6705 7</p>  <p>Oil Control Valve</p> </td> </tr> <tr> <td data-bbox="1481 860 1683 1047"> <p>6709 8</p>  <p>Oil Control Valve Link</p> </td> </tr> <tr> <td data-bbox="1481 1047 1683 1214"> <p>6801</p>  <p>Body Piping</p> </td> </tr> </table>							<p>6701 8</p>  <p>Oil Pump</p>	<p>6705 7</p>  <p>Oil Control Valve</p>	<p>6709 8</p>  <p>Oil Control Valve Link</p>	<p>6801</p>  <p>Body Piping</p>			
<p>6701 8</p>  <p>Oil Pump</p>													
<p>6705 7</p>  <p>Oil Control Valve</p>													
<p>6709 8</p>  <p>Oil Control Valve Link</p>													
<p>6801</p>  <p>Body Piping</p>													

0000-602A
 G818-004E


FIG. 1401
DRIVE MOTOR

1401


MAIN 96/03

DHM, DPR

HCB, STM

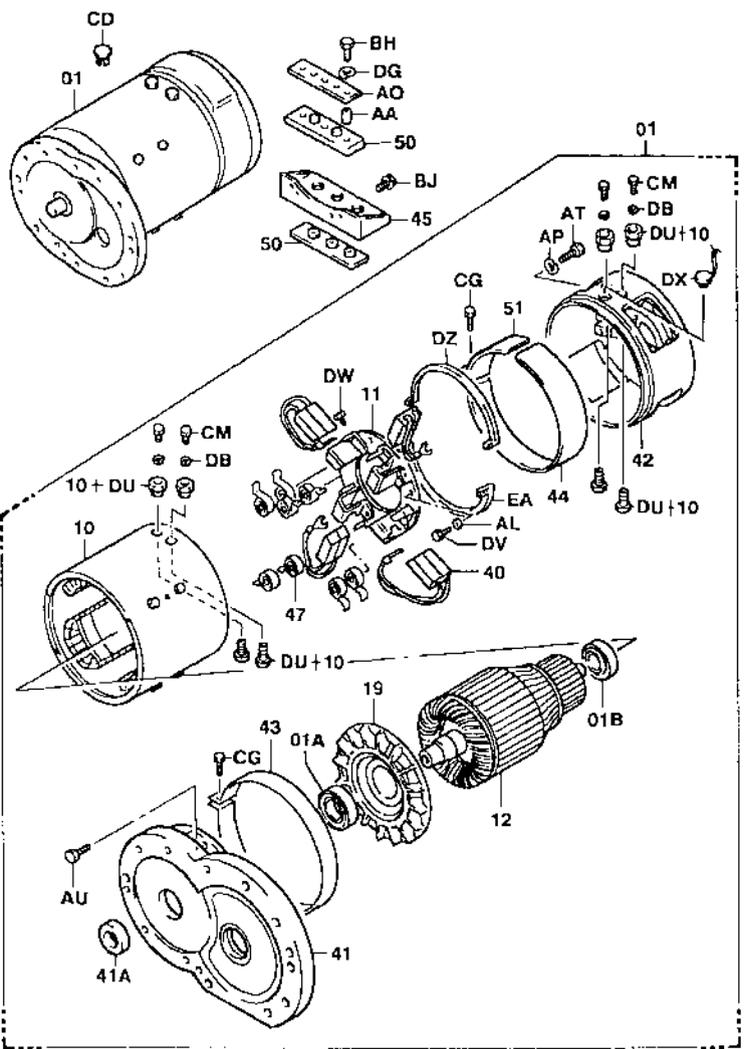

1401-098A

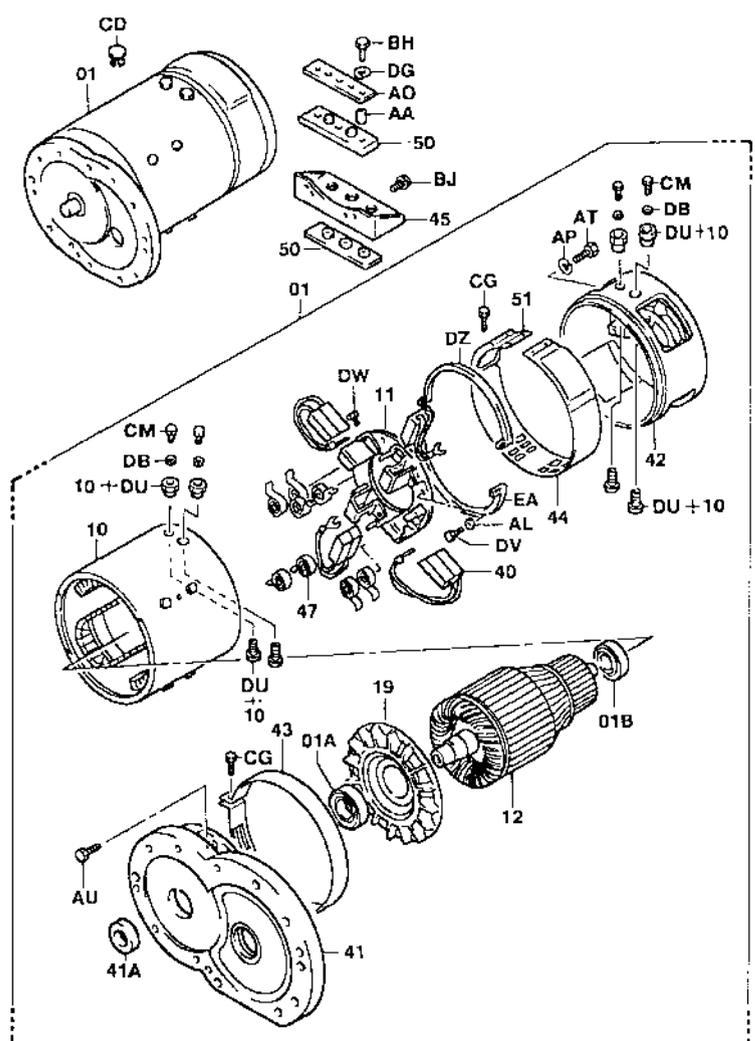

1401-096A

G816-001


FIG. 1401
DRIVE MOTOR

1401


MAIN 96/03

HCB, STM (BRUSH WARNING)

HCB, STM (DEAD-MAN)

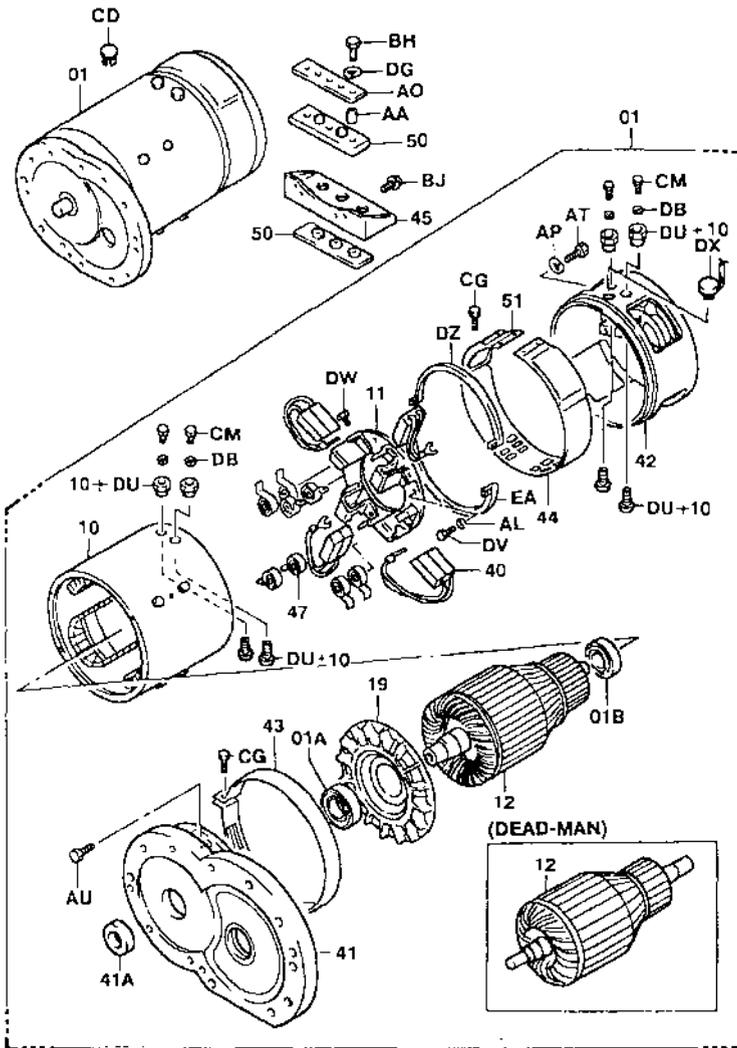

1401-097A

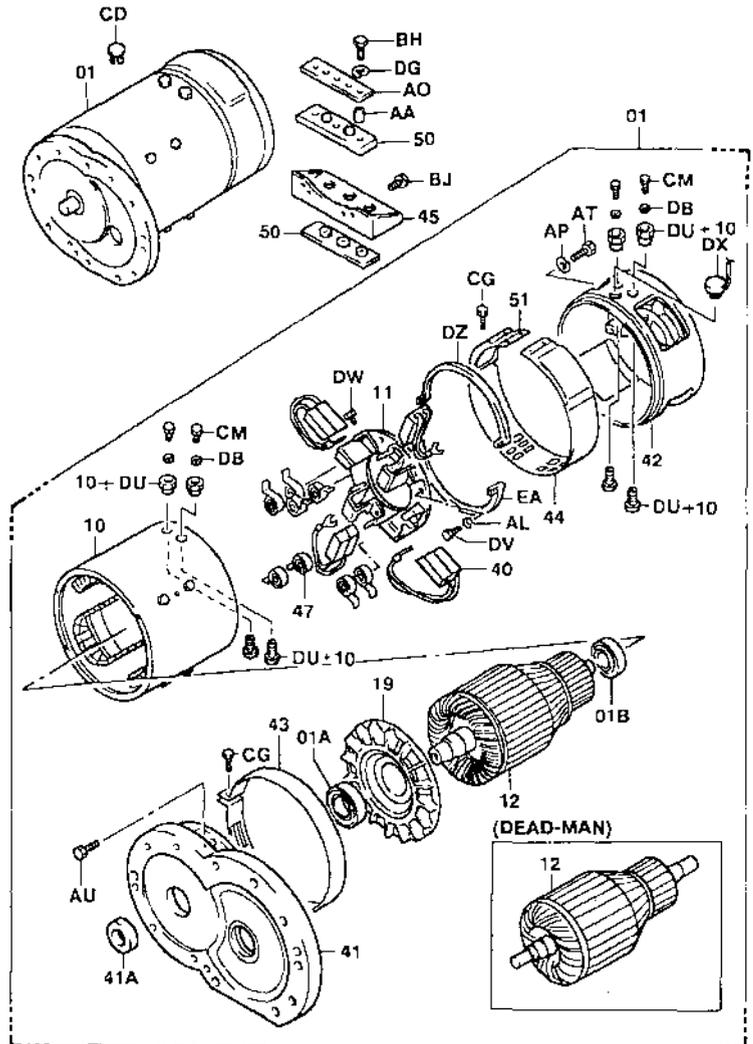

1401-097A

G818-002

FIG-1401
DRIVE MOTOR

1401

MAIN

96/03

PART NAME CODE	PART NAME	QTY
1401-01	MOTOR ASSY, DRIVE	1
1401-01A	BEARING, DRIVE MOTOR, NO.1	1
1401-01B	BEARING, DRIVE MOTOR, NO.2	1
1401-10	YOKE ASSY	1
1401-11	HOLDER ASSY, BRUSH	1
1401-12	ARMATURE ASSY, DRIVE	1
1401-19	FAN	1
1401-40	BRUSH, DRIVE MOTOR	2- 4
1401-41	BRACKET, NO. 1	1
1401-41A	SEAL, DIL (FOR BRACKET)	1
1401-42	BRACKET, NO. 2	1
1401-43	COVER, MOTOR	1
1401-44	COVER, BRUSH	1
1401-45	BRACKET, DRIVE MOTOR MOUNTING, NO.1	1
1401-47	SPRING, DRIVE MOTOR BRUSH	8
1401-50	RUBBER, CUSHION (FOR MOTOR MOUNTING)	2
1401-51	COVER, BRUSH NO.2	1
1401-AA	COLLAR	3
1401-AL	WASHER, PLATE	4
1401-AD	PLATE, CUSHION RUBBER	1
1401-AP	WASHER, SPRING	4
1401-AT	BOLT	4
1401-AU	BOLT	8
1401-BH	BOLT	5
1401-BJ	BOLT	4
1401-CD	PLUG	1
1401-CG	SCREW	2
1401-CM	SCREW	8
1401-DB	WASHER, SPRING	8
1401-DG	WASHER, SPRING	3
1401-DU	TERMINAL SET	4
1401-DV	SCREW	4
1401-DW	SCREW, W/WASHER	8
1401-DX	HARNESS	1
1401-DY	CLAMP	1
1401-DZ	BAR, CROSS	1
1401-LA	BAR, CROSS	1

G818-003E

FIG. 1402
PUMP DRIVE MOTOR


1402

MAIN


97/06

DHM, DPR

HCB, STM

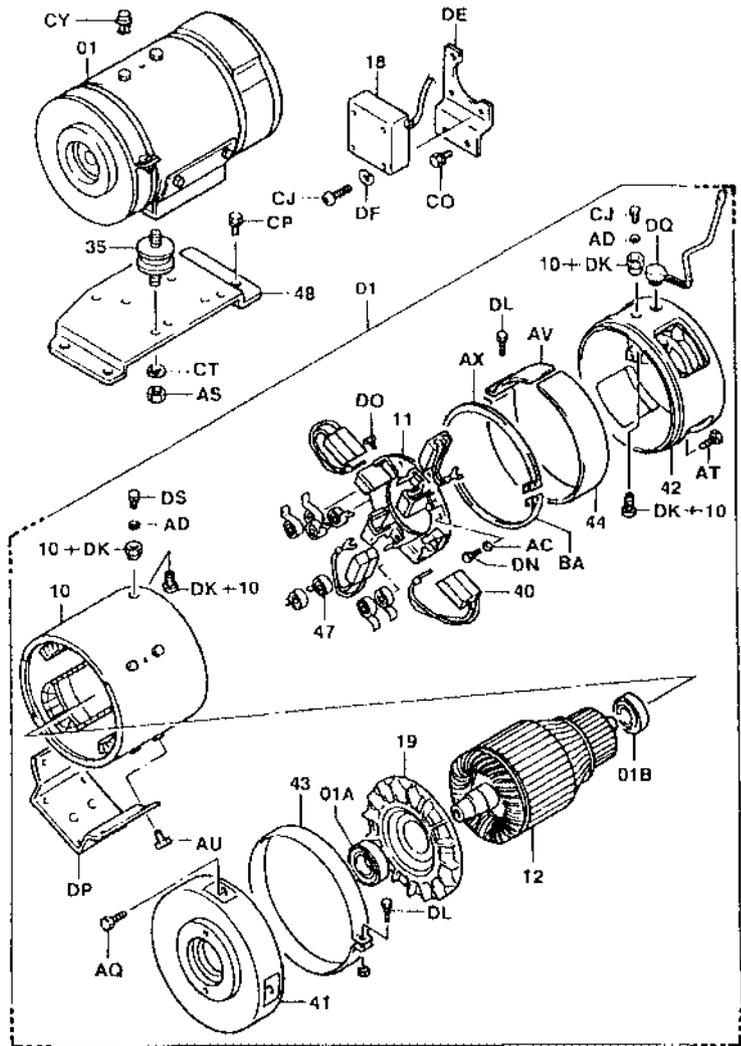

1402-105A

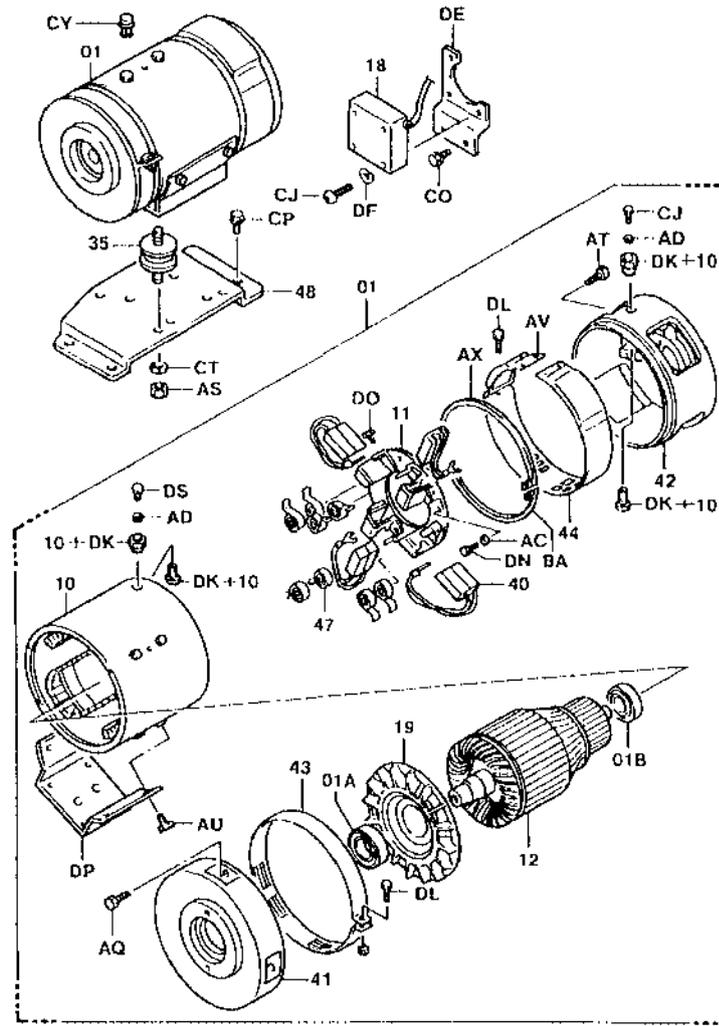

1402-103B

G81B-001


FIG. 1402
PUMP DRIVE MOTOR

1402

MAIN

97/06

HCB-51M (BRUSH WARNING)

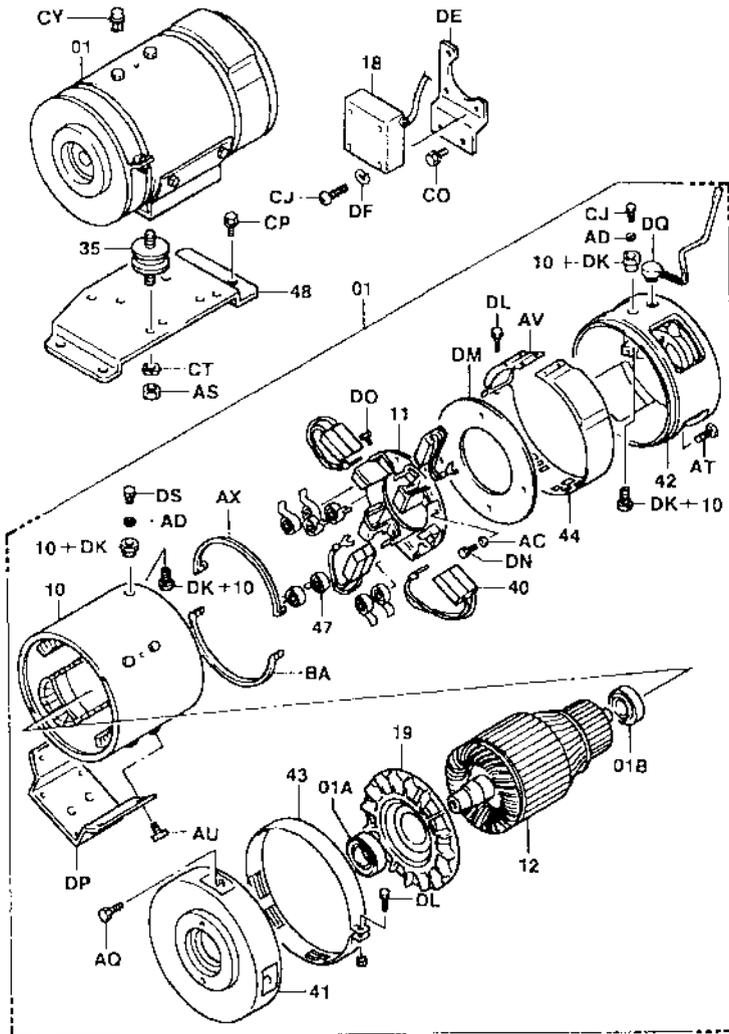

PART NAME	PART NAME	QTY
CODE		
1402-01	MOTOR ASSY, PUMP	1
1402-01A	BEARING, PUMP MOTOR, NO.1	1
1402-01B	BEARING, PUMP MOTOR, NO.2	1
1402-10	YOKE ASSY, PUMP MOTOR	1
1402-11	HOLDER ASSY, PUMP MOTOR	1
1402-12	ARMATURE ASSY, PUMP MOTOR	1
1402-18	MOTOR ASSY, FAN	1
1402-19	FAN	1
1402-35	INSULATOR SUB-ASSY, MOTOR MOUNTING	2
1402-40	BRUSH, PUMP MOTOR	2
1402-41	BRACKET, NO.1	1
1402-42	BRACKET, NO.2	1
1402-43	COVER, MOTOR	1
1402-44	COVER, BRUSH	1
1402-47	SPRING, PUMP MOTOR BRUSH	8
1402-48	PLATE, PUMP MOTOR SET	1
1402-AC	WASHER, PLATE	4
1402-AD	WASHER, SPRING	4
1402-AQ	BOLT	4
1402-AR	WASHER, SPRING	4
1402-AS	NUT	4
1402-AT	BOLT	4
1402-AU	BOLT	5
1402-AV	COVER	1
1402-AX	CLAMP	1
1402-BA	CLAMP	1
1402-CJ	SCREW	3
1402-CD	BOLT	2
1402-CP	BOLT	3
1402-CT	WASHER, SPRING	4
1402-CY	PLUG	1
1402-DE	BRACKET, FAN	1
1402-DF	WASHER, SPRING	5
1402-DK	TERMINAL SET	2
1402-DL	SCREW	2
1402-DN	SCREW	4
1402-DU	SCREW, W/WASHER	8
1402-DM	BRACKET, FOOT	1
1402-DQ	LEAD SET	1
1402-DS	SCREW	4

1402-104A

GB18-002E

FIG. 1403
POWER STEERING PUMP DRIVE MOTOR


1403

MAIN


95/04

DHM, DPR

HCB, STM

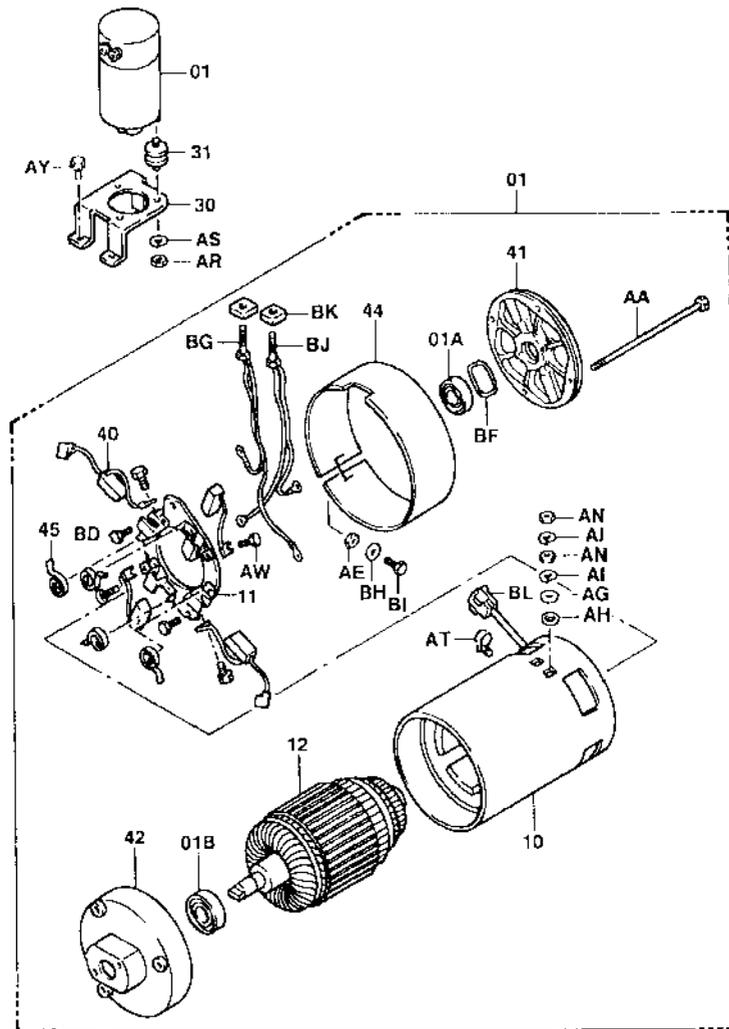

1403-037

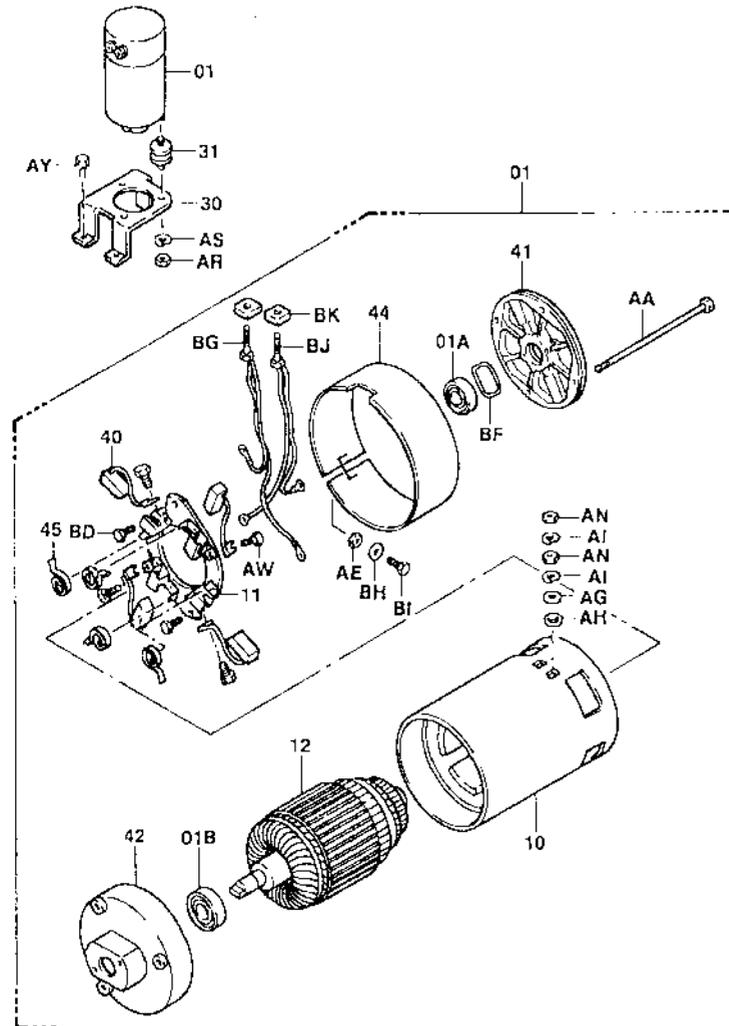

1403-036

G818-001


FIG. 1403
POWER STEERING PUMP DRIVE MOTOR

1403

MAIN

95/04

HCB-STM (BRUSH WARNING)

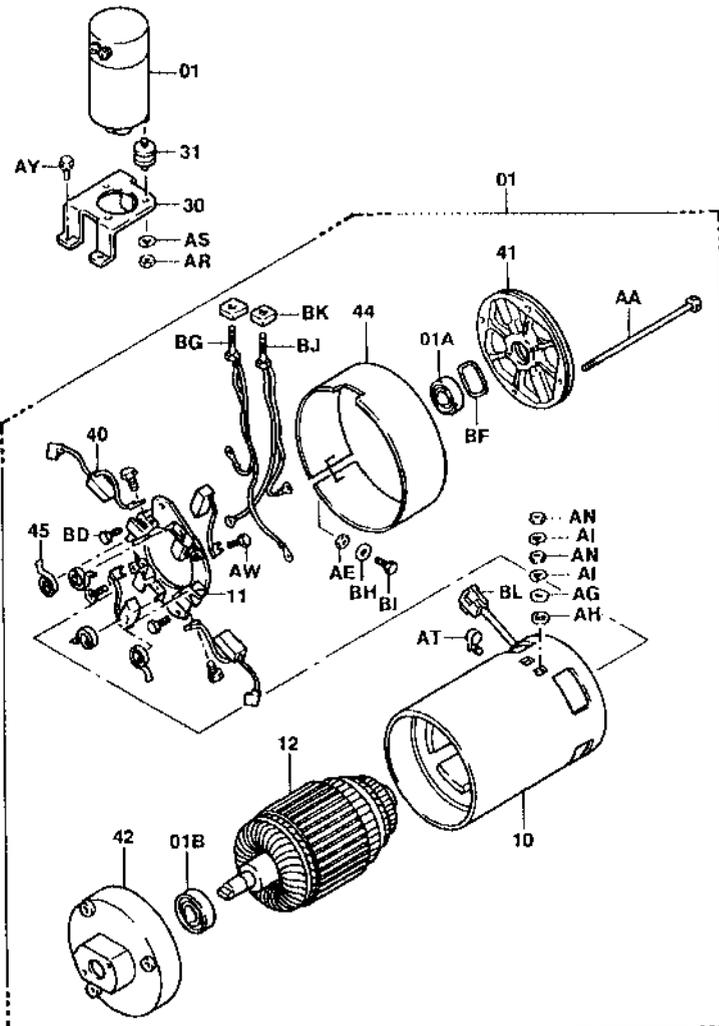

1403-037

PART NAME CODE	PART NAME	QTY
1403-01	MOTOR ASSY, POWER STEERING	1
1403-01A	BEARING, POWER STEERING MOTOR	1
1403-01B	BEARING	1
1403-10	YOKE ASSY, POWER STEERING MOTOR	1
1403-11	HOLDER ASSY, BRUSH	1
1403-12	ARMATURE ASSY, POWER STEERING	1
1403-30	BRACKET SUB-ASSY, MOTOR MOUNTING	1
1403-31	INSULATOR SUB-ASSY, BODY MOUNTING	3
1403-40	BRUSH, POWER STEERING MOTOR	2
1403-41	BRACKET, NO.1	1
1403-42	BRACKET, NO.2	1
1403-44	COVER, BRUSH	1
1403-45	SPRING, POWER STEERING MOTOR BRUSH	4
1403-AA	BOLT	2
1403-AE	NUT	1
1403-AG	WASHER, PLATE	2
1403-AH	WASHER, PLATE	2
1403-AI	WASHER, SPRING	4
1403-AN	NUT	4
1403-AR	NUT	3
1403-AS	WASHER, SPRING	3
1403-AT	CLAMP	1
1403-AW	SCREW	4
1403-AY	BOLT	3
1403-BD	SCREW	2
1403-BF	SHIM	1
1403-BG	TERMINAL SET	1
1403-BH	WASHER, PLATE	1
1403-BI	SCREW	1
1403-BJ	TERMINAL SET	1
1403-BK	BUSHING	2
1403-BL	LEAD SET	1

G818-002E


FIG. 2401
CONTROL PANEL

2401

MAIN

97/04

11/21

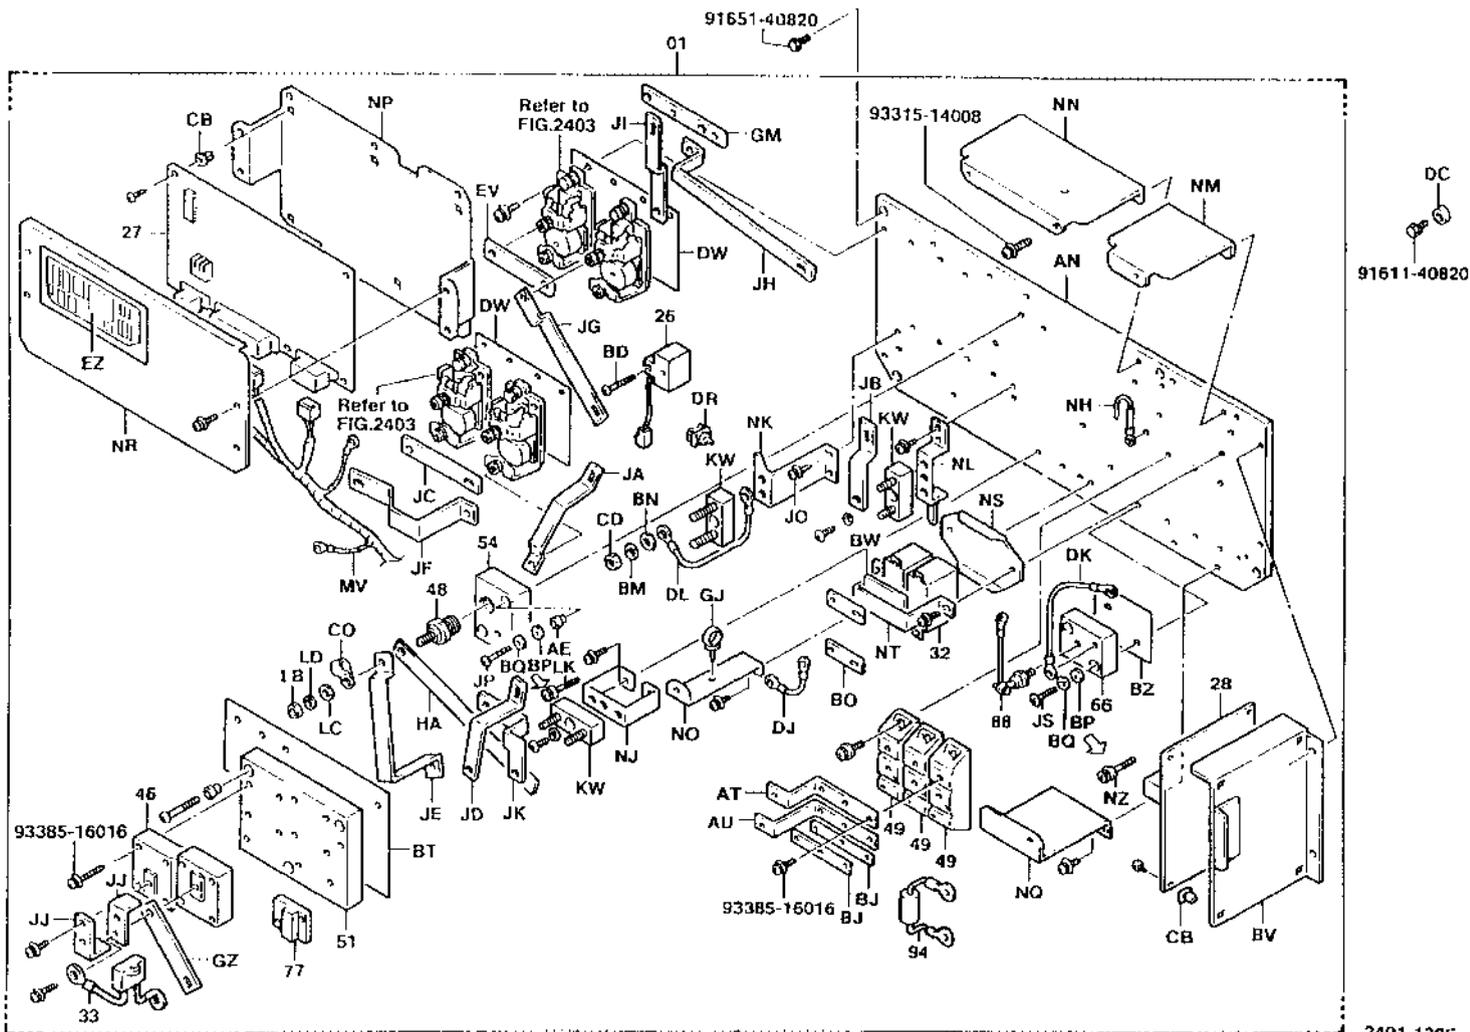


2401-138F


G818-001

(2/2)

(EHPS)

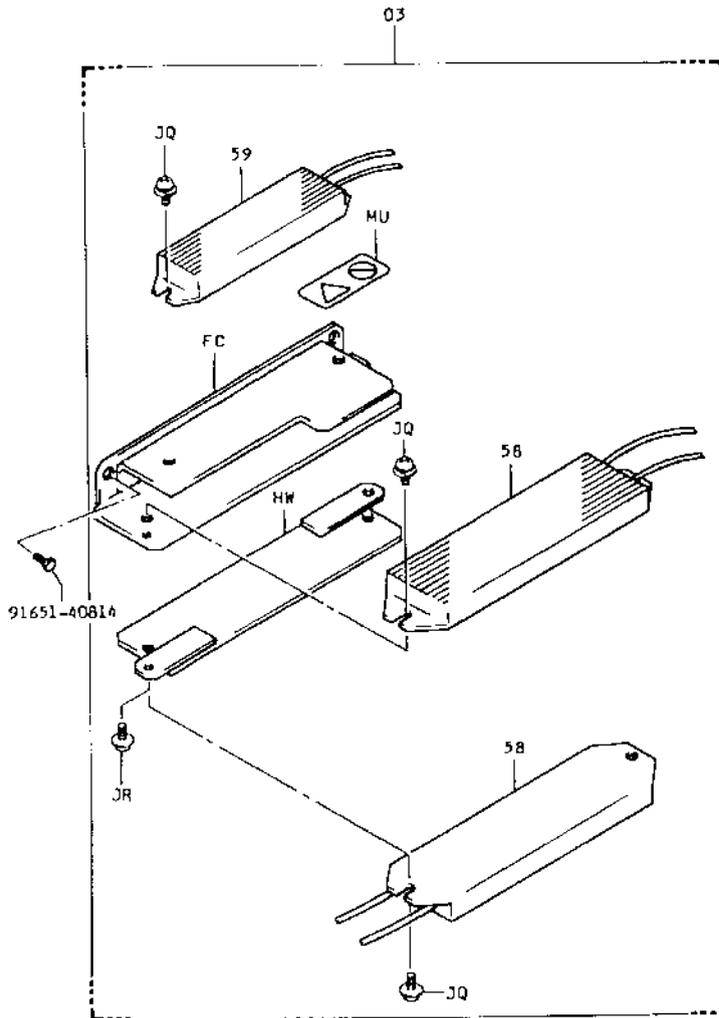

2401-140A

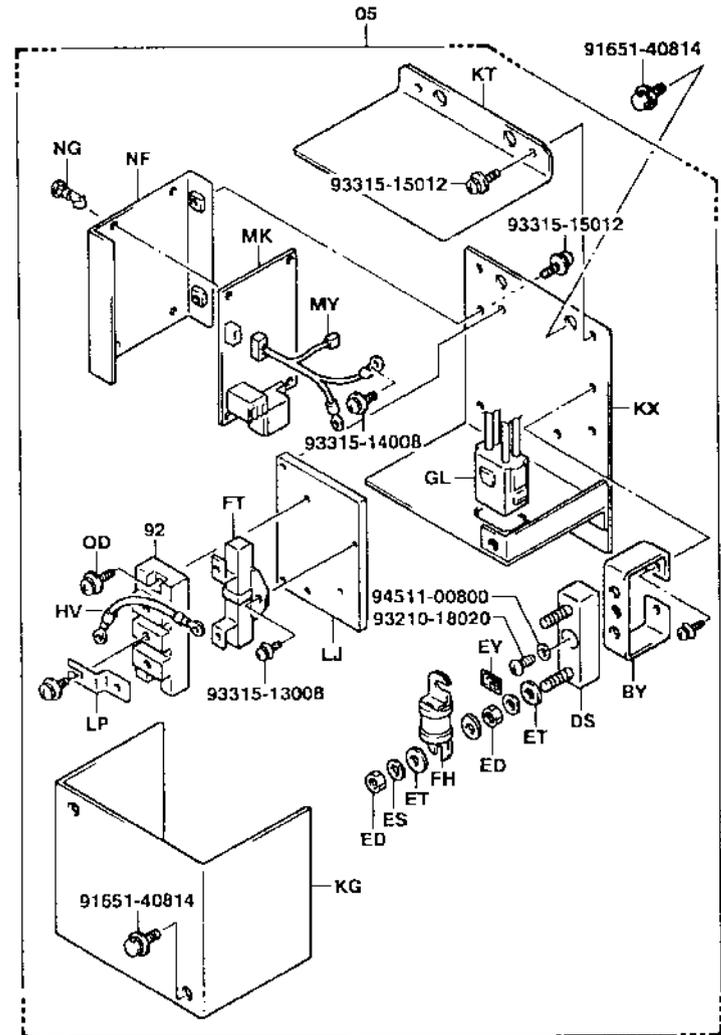

2401-139C

G818-002

FIG. 2401
CONTROL PANEL

2401

MAIN

97/04

PART NAME	PART NAME	QTY	PART NAME	PART NAME	QTY
CODE			CODE		
2401-01	PANELL ASSY, DRIVE CONTRL	1	2401-JC	IBAR	1
2401-03	PANEL ASSY, RESISTOR	1	2401-JD	IBAR	1
2401-05	PANEL ASSY, SPS CONTRL	1	2401-JE	IBAR	1
2401-26	SENSOR ASSY, CURRENT	1	2401-JF	IBAR	1
2401-27	BOARD ASSY	1	2401-JG	IBAR	1
2401-28	BOARD ASSY	1	2401-JH	IBAR	1
2401-32	CAPACITOR	2	2401-JI	IBAR	1
2401-33	CAPACITOR	1	2401-JJ	IBAR	2
2401-46	DIODE	2	2401-JK	IBAR	1
2401-48	DIODE	1	2401-JO	ISCRWL	2
2401-49	TRANSISTOR	3	2401-OP	ISCREW	2
2401-51	HEATSINK, NO.1	1	2401-QQ	ISCREW	4
2401-54	HEATSINK, NO.2	1	2401-JR	ISCREW	2
2401-58	RESISTOR, NO.1	2	2401-JS	ISCREW	5
2401-59	RESISTOR, NO.2	1	2401-KG	COVER	1
2401-65	HEATSINK	1	2401-KT	PLATE	1
2401-77	TRANSISTOR	1	2401-KW	IBLOCK, TERMINAL FUSE	3
2401-88	DIODE SUB-ASSY	1	2401-KX	IBASE SUB-ASSY	1
2401-92	TRANSISTOR	1	2401-LB	NUT	1
2401-94	DIODE	1	2401-LC	WASHER, PLATE	1
2401-AF	INSULATOR	7	2401-LD	WASHER, SPRING	1
2401-AN	IBASF	1	2401-LJ	HEATSINK	1
2401-AT	IBAR	1	2401-LK	ISCREW, W/WASHER	5
2401-AV	IBAR	1	2401-LP	IBAR	1
2401-BO	SCREW	1	2401-MK	BOARD SUB-ASSY	1
2401-BJ	BAR	2	2401-MU	PLATE, CAUTION	1
2401-BM	WASHER, SPRING	9	2401-MV	HARNESS SUB-ASSY	1
2401-BN	WASHER, PLATE	9	2401-MY	HARNESS, SPS BOARD	1
2401-BO	BAR	2	2401-NF	IBRACKET SUB-ASSY, BOARD	1
2401-BP	WASHER, PLATE	7	2401-NG	SPACER	4
2401-BQ	WASHER, SPRING	7	2401-NH	SENSOR SUB-ASSY, THERMAL	1
2401-BT	SHEET	1	2401-NJ	IBRACKET SUB-ASSY, TERMINAL, NO.1	1
2401-BV	BRACKET SUB-ASSY	1	2401-NK	IBRACKET SUB-ASSY, TERMINAL, NO.2	1
2401-BW	IMAT	2	2401-NL	IBRACKET SUB-ASSY, TERMINAL, NO.3	1
2401-BY	IBRACKET SUB-ASSY, TERMINAL	1	2401-NM	IBRACKET, CPU, NO.1	1
2401-BZ	ISHEET	1	2401-NN	IBRACKET, CPU, NO.2	1
2401-CB	IGRDMET	10	2401-ND	IBRACKET, CPU, NO.3	1
2401-CD	INUT	9	2401-NP	IBASE SUB-ASSY, CPU BOARD	1
2401-CO	ICLAMP	1	2401-NQ	IBRACKET SUB-ASSY, CPU	1
2401-OC	ISPACER, NO.1	2	2401-NR	ICOVER, CPU	1
2401-OJ	IWIRING, NO.1	1	2401-NS	IBRACKET, CAPACITOR	1
2401-DK	IWIRING, NO.2	1	2401-NT	IBAND, CAPACITOR	1
2401-DL	IWIRING, NO.3	1	2401-NZ	ISCREW, W/WASHER	2
2401-DR	ICLAMP	1	2401-OO	ISCRWL	2
2401-OS	ITERMINAL BLOCK, FUSE	1			
2401-DW	ISHEET	2			
2401-EO	INUT	4			
2401-ES	WASHER, SPRING	4			
2401-ET	WASHER, PLATE	6			
2401-EV	IBAR	1			
2401-FY	PLATE, FUSE	1			
2401-EZ	PLATE, TERMINAL NUMBER	1			
2401-FC	IBRACKET, RESISTOR	1			
2401-FH	IFUSE	1			
2401-FT	IRESISTOR	1			
2401-GJ	ICLIP	1			
2401-GL	IWIRING SUB-ASSY	1			
2401-GM	IBAR	1			
2401-GZ	IBAR	1			
2401-HA	IBAR	1			
2401-HV	IWIRING	1			
2401-HW	IBRACKET SUB-ASSY	1			
2401-JA	IBAR	1			
2401-JB	IBAR	1			

G818-003E

FIG. 2402
CONTACTOR PANEL



2402

MAIN

97/04

11/71

12/71

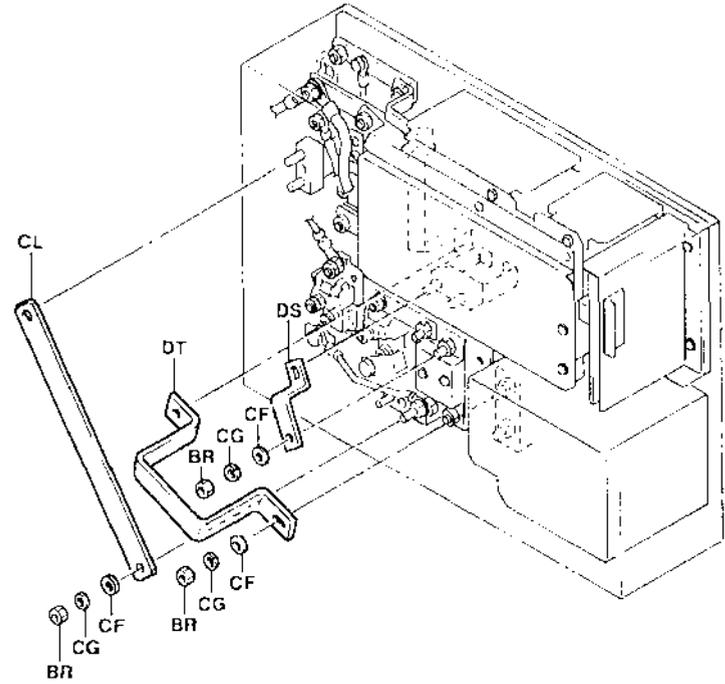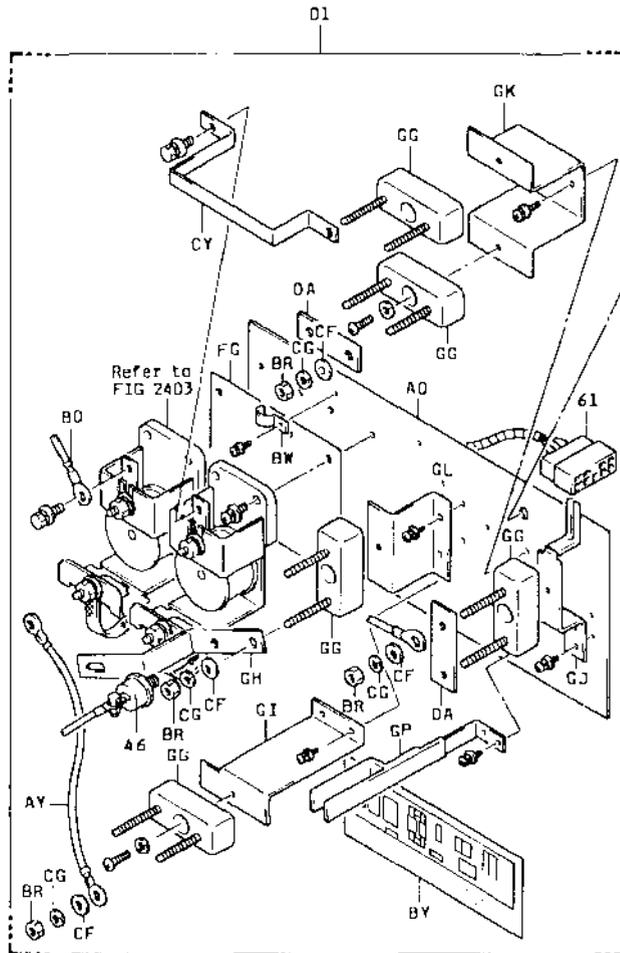

2402-083A

2402-087B

G818-001


FIG. 2402
CONTACTOR PANEL

2402

MAIN

97/04

DHM.DPR 13/31

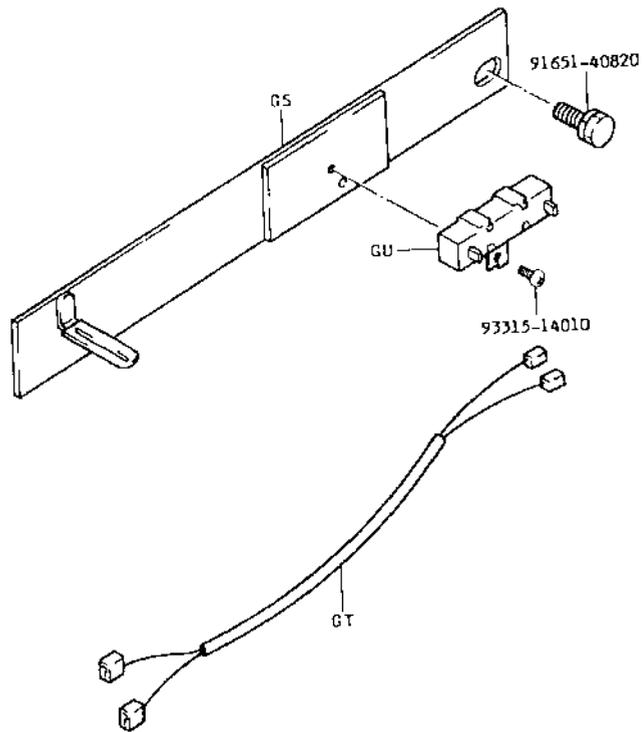

2402-088

GR18-002

FIG. 2402
CONTACTOR PANEL


2402

MAIN


97/04

DPR,DHM (P/S)

STM,HCB (P/S)

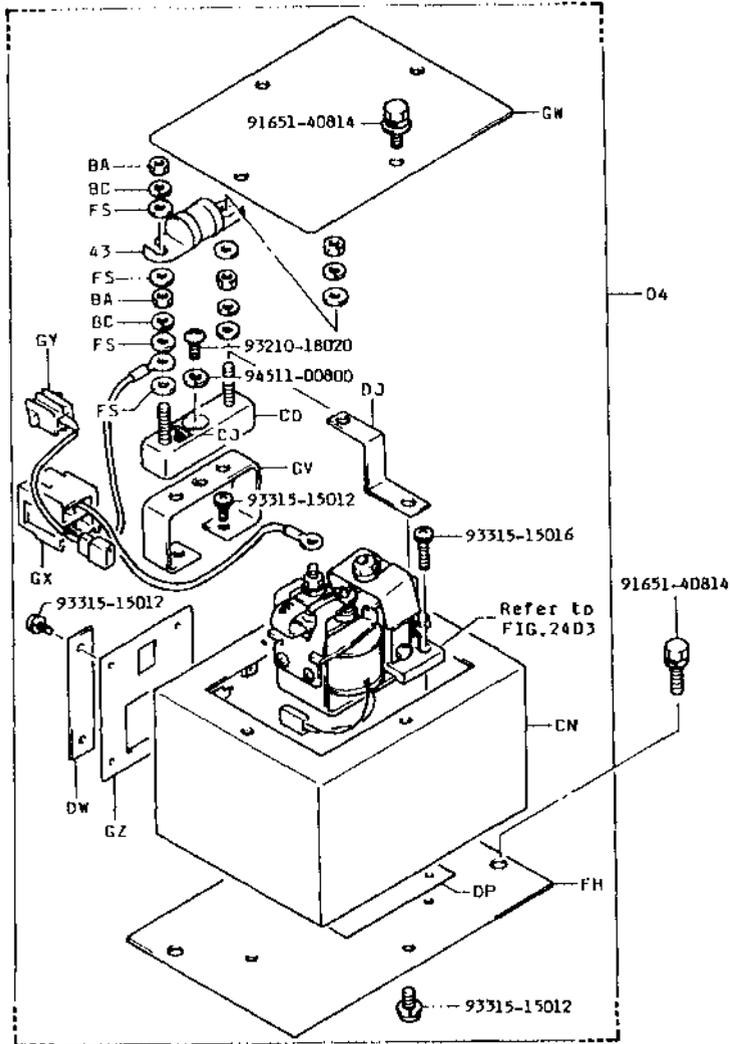

2402-086A

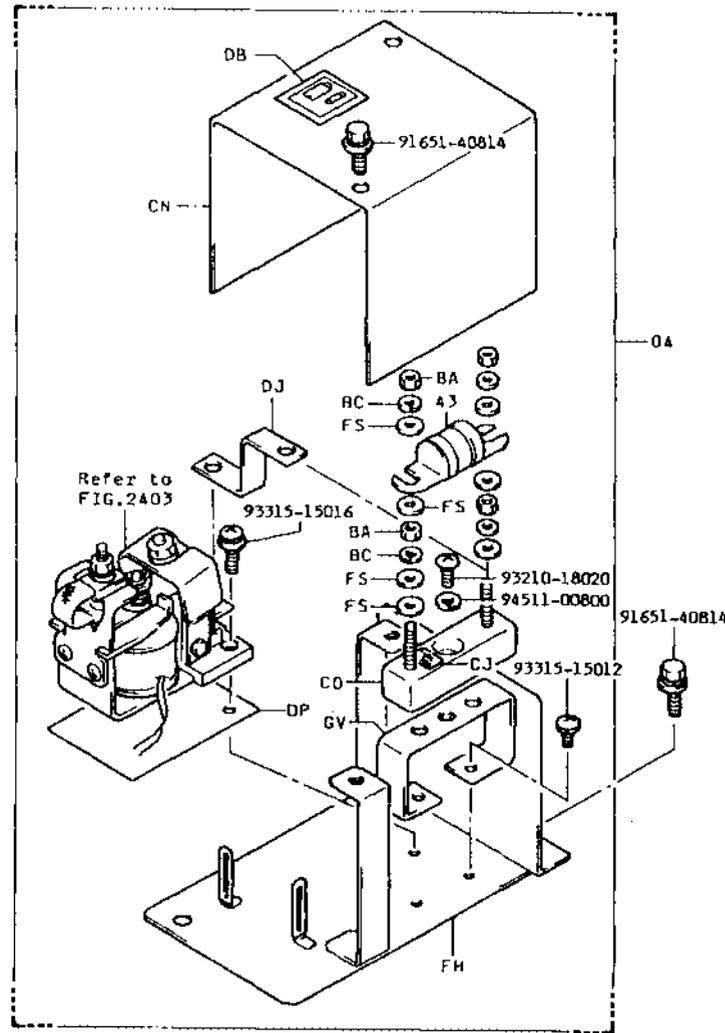

2402-085A

G818-004

FIG. 2402
CONTACTOR PANEL

2402

MAIN

97/04


PART NAME CODE	PART NAME	QTY
2402-01	PANEL ASSY, CONTACTOR	1
2402-04	PANEL ASSY, P/S CONTACTOR	1
2402-13	BOARD ASSY	1
2402-32	CAPACITOR	2
2402-40	DIDDLE	1
2402-43	FUSE (F3)	1
2402-46	DIODE ASSY	1
2402-47	TRANSISTOR	5
2402-51	HEATSINK	1
2402-58	HEATSINK	1
2402-60	SENSOR ASSY, CURRENT	1
2402-61	HARNLESS SUB-ASSY	1
2402-AG	INSULATOR	4
2402-AJ	BAR	1
2402-AK	BAR	1
2402-AL	BAR	1
2402-AM	BAR	1
2402-AN	BAR	1
2402-AD	BASE	1
2402-AT	BAR	1
2402-AU	BAR	1
2402-AY	WIRING	1
2402-AZ	SCREW	1
2402-BA	NUT	4
2402-BC	WASHER, SPRING	4
2402-BE	BAR	1
2402-BD	WIRING	1
2402-BP	CLIP	1
2402-BQ	SCREW	1
2402-UR	NUT	16-18
2402-UU	BAR	1
2402-BW	CLAMP	2
2402-BX	GROMMET	4
2402-BY	PLATE, TERMINAL NUMBER	1
2402-CC	SPACER	1
2402-CF	WASHER, PLATE	16-22
2402-CG	WASHER, SPRING	16-18
2402-CH	BAND	1
2402-CJ	PLATE, FUSE	1
2402-CL	RESISTOR	1
2402-CN	COVER	1
2402-CD	TERMINAL	1
2402-CS	SCREW	2
2402-CV	BAR	1
2402-CY	BAR	1
2402-DA	BAR	2
2402-DB	PLATE, TERMINAL	1
2402-DH	BAR	1
2402-D1	BAR	2
2402-DJ	BAR	1
2402-DP	SHEET	1
2402-DS	BAR	1
2402-DT	BAR	1
2402-DW	PLATE	2
2402-EN	BRACKET	1
2402-FE	SHEET	1
2402-FF	SHEET	1
2402-FG	SHEET	1
2402-FH	SHEET	1
2402-FM	BASE	1
2402-FR	WASHER, SPRING	4
2402-FS	WASHER, PLATE	7
2402-FT	WIRING	2
2402-QF	MAT	2
2402-GG	BLOCK, TERMINAL FUSE	5

PART NAME CODE	PART NAME	QTY
2402-GH	BAR SUB-ASSY	1
2402-G1	BRACKET SUB-ASSY, TERMINAL	1
2402-GJ	BRACKET SUB-ASSY, TERMINAL	1
2402-GK	BRACKET SUB-ASSY, TERMINAL	1
2402-GL	BRACKET SUB-ASSY, TERMINAL	1
2402-GM	BRACKET SUB-ASSY, TERMINAL	1
2402-GN	BRACKET, RH	1
2402-GO	BRACKET, LH	1
2402-GP	CLAMP	1
2402-GQ	COVER SUB-ASSY	1
2402-GR	BASE SUB-ASSY	1
2402-GS	BASE SUB-ASSY, RESISTOR	1
2402-GT	HARNLESS SUB-ASSY, RESISTOR	1
2402-GU	RESISTOR	1
2402-GV	BRACKET SUB-ASSY, TERMINAL	1
2402-GW	COVER	1
2402-GX	WIRING	1
2402-GY	HARNLESS	1
2402-GZ	GASKET	1
2402-HB	WASHER, PLATE	4
2402-HC	SCREW, W/WASHER	2
2402-HD	SCREW, W/WASHER	2


G818-005E

[MF, MR]

[MG, MS, MP, MW]

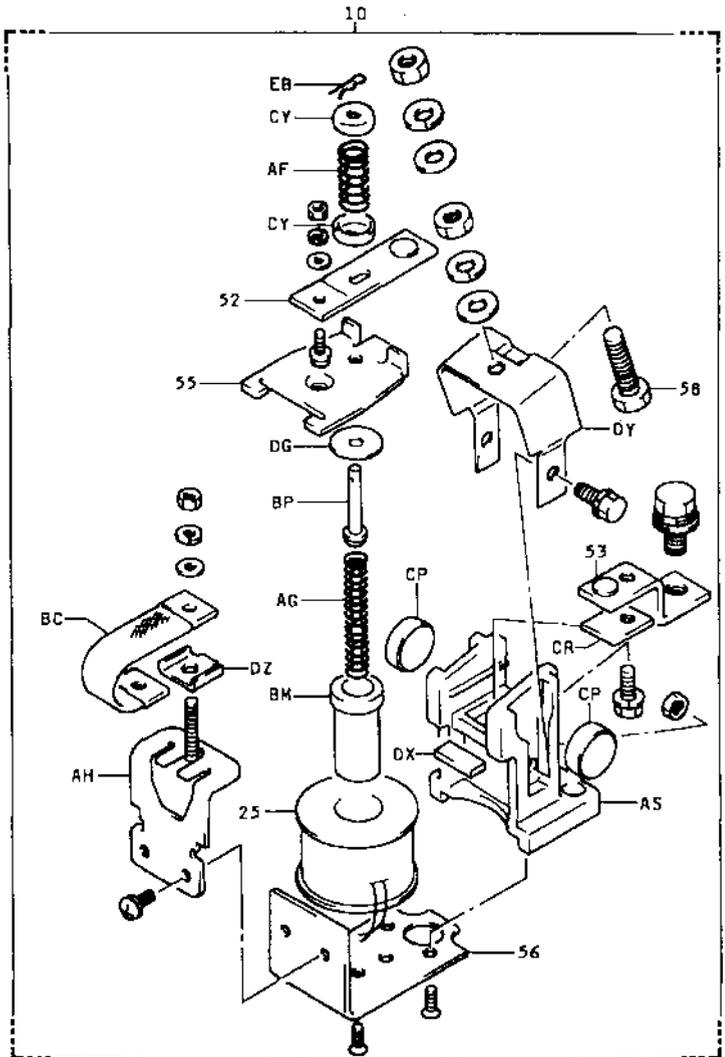

2403-068A

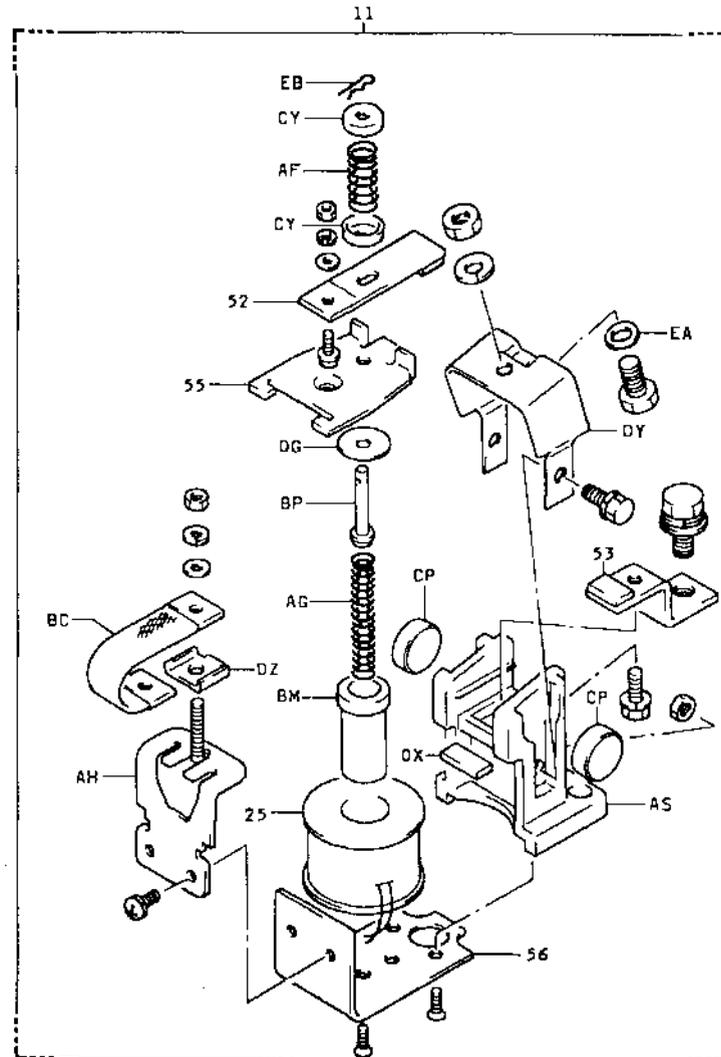

2403-069A

GB18-001


FIG. 2403
CONTACTOR ASSY

2403

MAIN

95/04

IP/S1

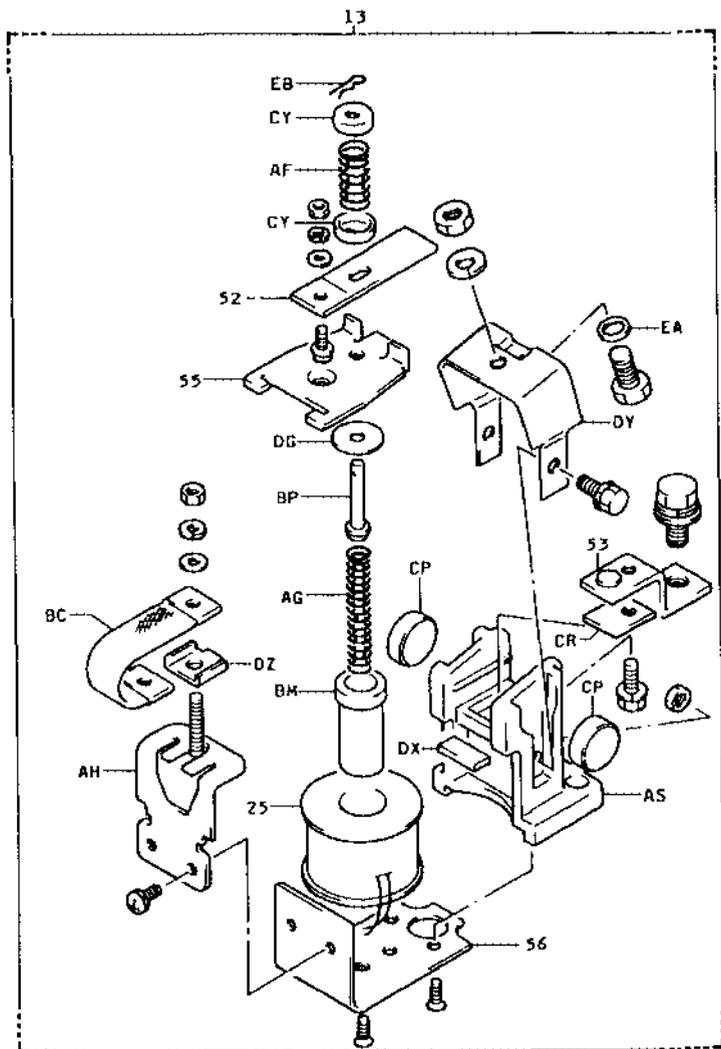

2403-070A

PART NAME CODE	PART NAME	QTY
2403-10	CONTACTOR ASSY, DRIVE	2
2403-11	CONTACTOR ASSY, SHORT	4
2403-13	CONTACTOR ASSY, POWER STEERING	1
2403-25	COIL SUB-ASSY	1- 4
2403-52	CONTACT, MOVING	1- 4
2403-53	CONTACT, STATIONARY	1- 4
2403-55	ARMATURE	1- 4
2403-56	FRAME	1- 4
2403-58	CONTACT, B	2
2403-AF	SPRING, NO.1	1- 4
2403-AG	SPRING, NO.2	1- 4
2403-AH	TERMINAL	1- 4
2403-AS	BASE	1- 4
2403-BC	WIRING	1- 4
2403-BM	CORE	1- 4
2403-BP	PIN	1- 4
2403-CP	MAGNET	1- 4
2403-CR	SPACER	1- 2
2403-CY	HOLDER	2- 8
2403-DG	SHEET	1- 4
2403-DX	PACKING	1- 4
2403-DY	YOKE	1- 4
2403-DZ	WASHER, LOCK	1- 4
2403-EA	SPACER	2- 4
2403-EB	PIN, SNAP	1- 4


G818-002E

FIG. 2611
ACCELERATOR

2611

MAIN

95/04

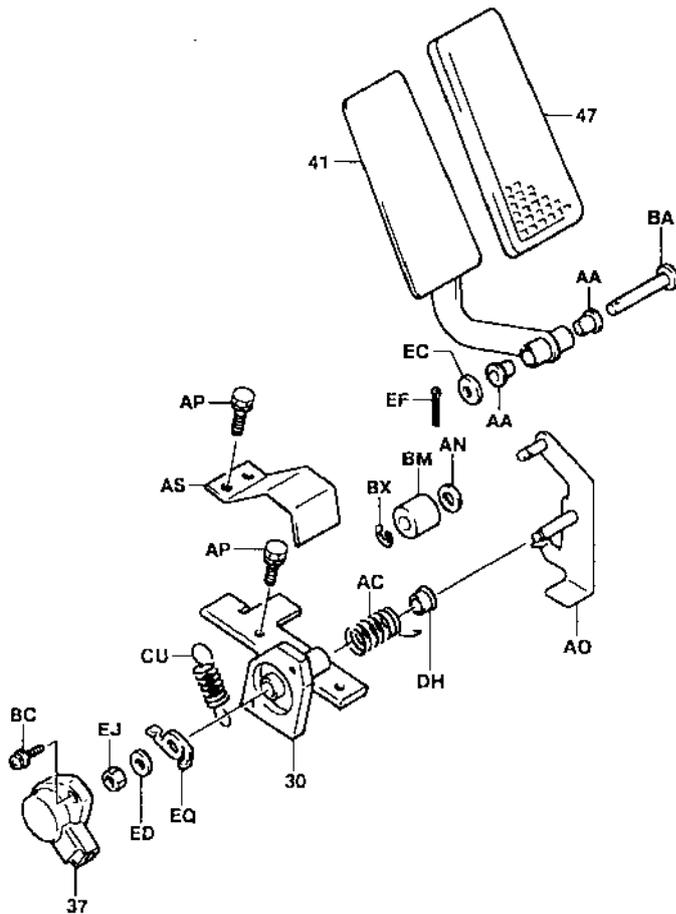

PART NAME CODE	PART NAME	QTY
2611-30	BRACKET SUB-ASSY, ACCELERATOR BOX	1
2611-37	SENSOR ASSY	1
2611-41	PEDAL, ACCELERATOR	1
2611-47	PAD, PEDAL	1
2611-AA	BUSHING	2
2611-AC	SPRING, ACCELERATOR	1
2611-AN	WASHER, SPRING	1
2611-AD	ARM SUB-ASSY	1
2611-AP	BOLT	4
2611-AS	COVER	1
2611-BA	PIN	1
2611-BC	SCREW	2
2611-BM	ROLLER, ACCELERATOR LINK	1
2611-BX	RING, SNAP	1
2611-CU	SPRING, COIL REAR	1
2611-DH	BUSHING, ACCELERATOR ARM	2
2611-EC	WASHER, PLATE	1
2611-ED	WASHER	1
2611-EF	PIN, COTTER	1
2611-EJ	NUT	1
2611-EQ	LEVER	1

2611-069A


G818-001E

FIG. 3305
GEAR CASE & GEAR

3305

MAIN

95/04

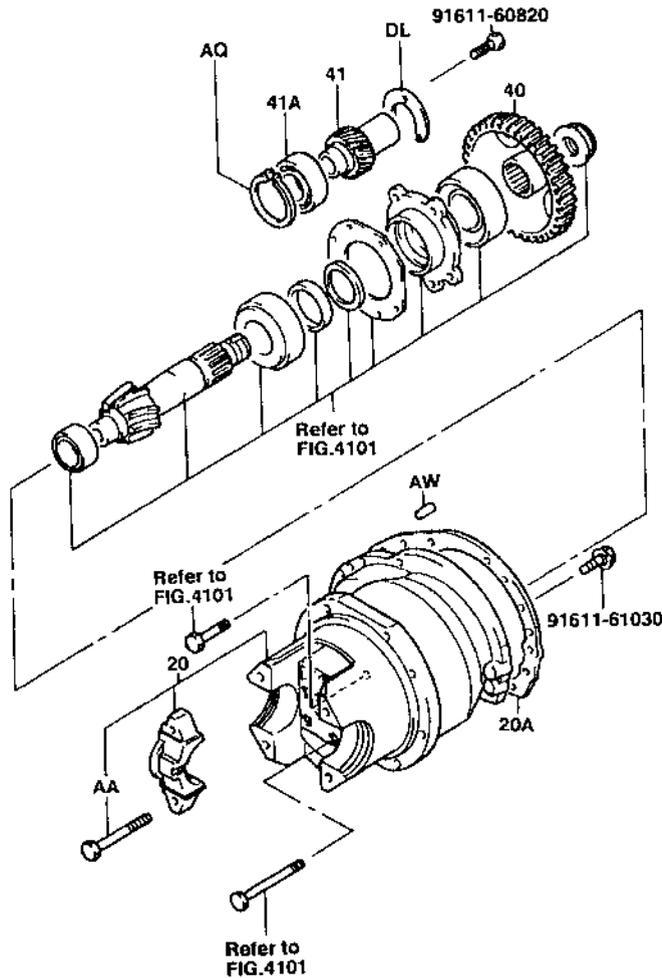

PART NAME CODE	PART NAME	QTY
3305-20	CASE SUB-ASSY, GEAR	1
3305-20A	GASKET, GEAR CASE	1
3305-40	GEAR, OUTPUT	1
3305-41	GEAR, DRIVE	1
3305-41A	BEARING (FOR DRIVE GEAR)	1
3305-AA	BOLT	4
3305-AQ	RING, SHAFT SNAP	1
3305-AW	PIN, STRAIGHT	2
3305-DL	PLATE, COVER	1

3305-014


G818-001E

FIG. 3310
CHANGE LEVER

3310

MAIN

95/04

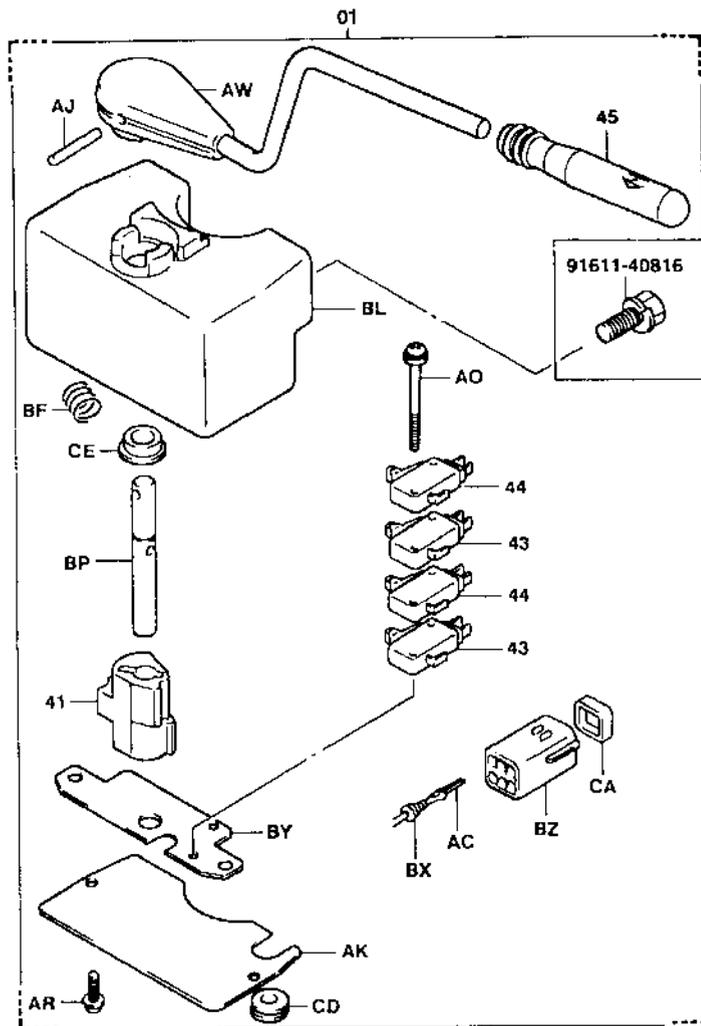

3310-028

PART NAME CODE	PART NAME	QTY
3310-01	SWITCH ASSY, DIRECTION	1
3310-41	CAM	1
3310-43	SWITCH, MICRO, NO.1	2
3310-44	SWITCH, MICRO, NO.2	2
3310-45	KNOB	1
3310-AC	TAB	6
3310-AJ	PIN, SPRING	1
3310-AK	PLATE	1
3310-AD	SCREW	2
3310-AR	SCREW	4
3310-AW	LEVER SUB-ASSY	1
3310-BF	SPRING	1
3310-BL	CASE, DIRECTION SWITCH	1
3310-BP	SHAFT	1
3310-BX	CAP	6
3310-BY	BASE	1
3310-BZ	CONNECTOR	1
3310-CA	CONNECTOR	1
3310-CD	BUSHING	1
3310-CE	BUSHING	1


G818-001E

FIG. 4101
DIFFERENTIAL

4101

MAIN

95/04

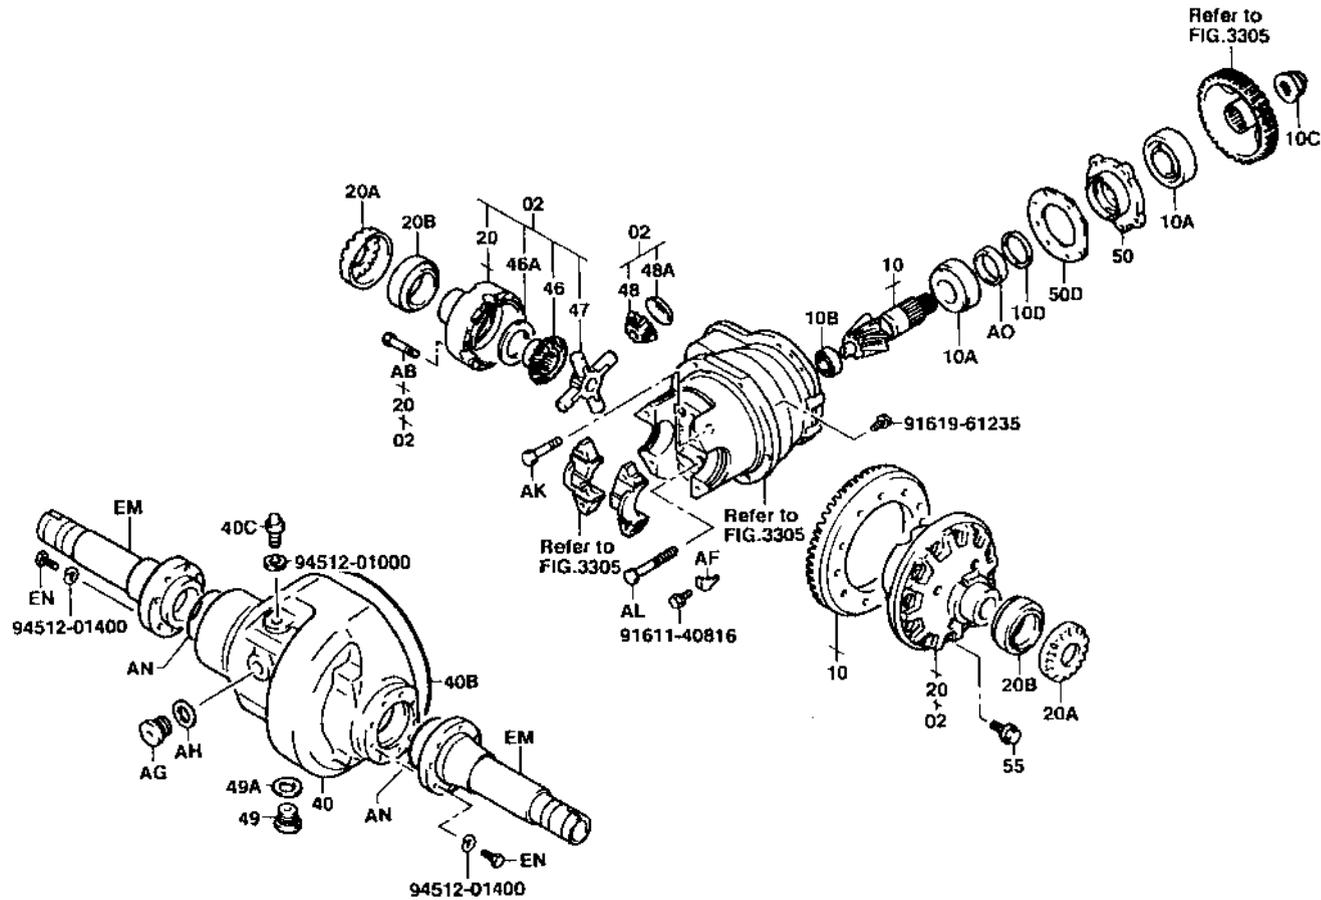

4101-130

G818-001

FIG. 4101
DIFFERENTIAL

4101

MAIN

95/04

PART NAME CODE	PART NAME	QTY
4101-02	CASE ASSY, DIFFERENTIAL	1
4101-10	RING GEAR & PINION SET, DIFFERENTIAL	1
4101-10A	BEARING, DRIVE PINION	2
4101-10B	BEARING, DRIVE PINION PILOT	1
4101-10C	NUT, LOCK	1
4101-10D	SHIM, BEARING PRELOAD ADJUST	99
4101-20	CASE SUB-ASSY, DIFFERENTIAL	1
4101-20A	NUT, ADJUSTING	2
4101-20B	BEARING, DIFFERENTIAL CASE	2
4101-40	HOUSING, DIFFERENTIAL	1
4101-40B	RING, D (FOR DIFFERENTIAL HOUSING)	1
4101-40C	PLUG, BREATHER (FOR DIFFERENTIAL HOUSING)	1
4101-46	GEAR, SIDE	2
4101-46A	WASHER, SIDE GEAR THRUST	2
4101-47	SPIDER	1
4101-48	PINION	4
4101-48A	WASHER, PINION THRUST	4
4101-49	PLUG, DRAIN	1
4101-49A	GASKET, DRAIN PLUG	1
4101-50	RETAINER, DRIVE PINION BEARING	1
4101-50D	SHIM, DIFFERENTIAL DRIVE PINION BEARING	99
4101-55	BOLT, RING GEAR SET	12
4101-AB	BOLT	16
4101-AF	LOCK, ADJUSTING	2
4101-AG	PLUG, W/HEAD STRAIGHT SCREW	1
4101-AH	GASKET	1
4101-AK	BOLT	2
4101-AL	BOLT	4
4101-AN	RING, D	2
4101-AD	SPACER, BEARING	1
4101-EM	HOUSING, FR AXLE	2
4101-EN	BOLT	16


G818-002E

FIG. 4201
FRONT AXLE SHAFT

4201

MAIN

95/04

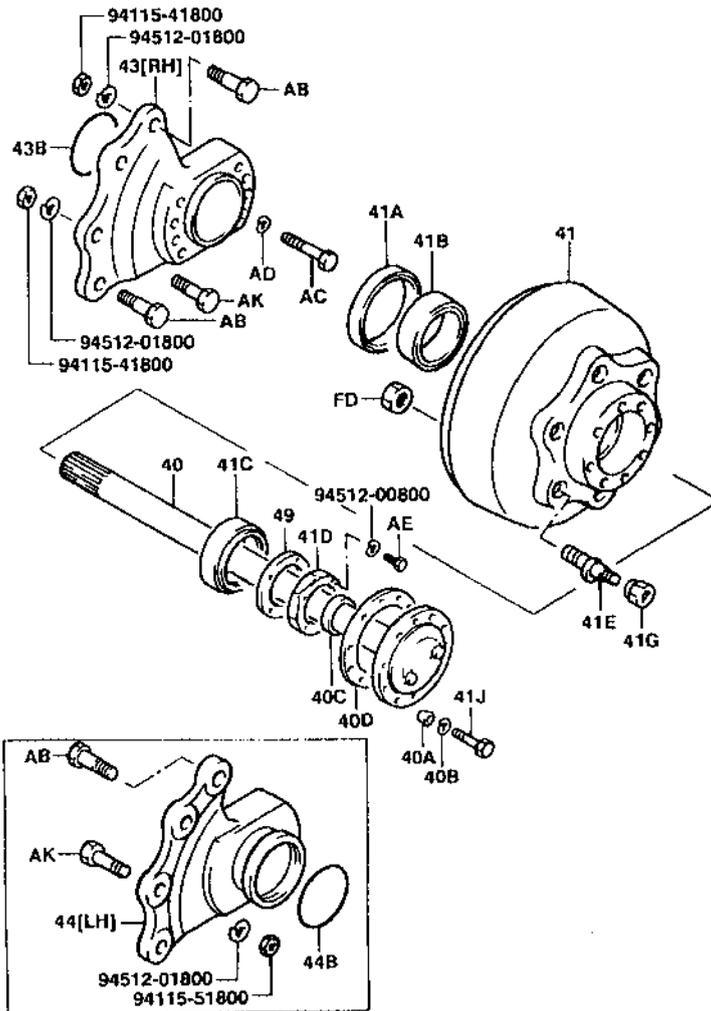

PART CODE	PART NAME	QTY
4201-40	SHAFT, FRONT AXLE	2
4201-40A	WASHER, CONN	16
4201-40B	WASHER, SPRING (FOR FRONT AXLE SHAFT)	16
4201-40C	ISEAL, OIL (FOR FRONT AXLE SHAFT)	2
4201-40D	IGASKET, FRONT AXLE SHAFT	2
4201-41	HUB, FRONT AXLE	2
4201-41A	ISEAL, OIL (FOR FRONT AXLE HUB)	2
4201-41B	IBEARING, NO.1 (FOR FRONT AXLE HUB)	2
4201-41C	IBEARING, NO.2 (FOR FRONT AXLE HUB)	2
4201-41D	INUT, BEARING LOCK	2
4201-41E	IBOLT, HUB	12
4201-41G	INUT, HUB	12
4201-41J	IBOLT (FOR FRONT AXLE SHAFT)	16
4201-43	IBRACKET, FRONT AXLE, RH	1
4201-43B	IRING, O (FOR FRONT AXLE BRACKET)	1
4201-44	IBRACKET, FRONT AXLE, LH	1
4201-44B	IRING, O (FOR FRONT AXLE BRACKET)	1
4201-49	PLATE, LOCK NUT	2
4201-AB	IBOLT, BRACKET SET	4
4201-AC	IBOLT, STUD BRAKE SET	16
4201-AD	IWASHER, CD SPRING	16
4201-AE	IBOLT	2
4201-AK	IBOLT	4
4201-FD	INUT	12

4201-135A


GB18-001E

FIG. 4301
REAR AXLE & TIE-ROD

4301

MAIN

95/04

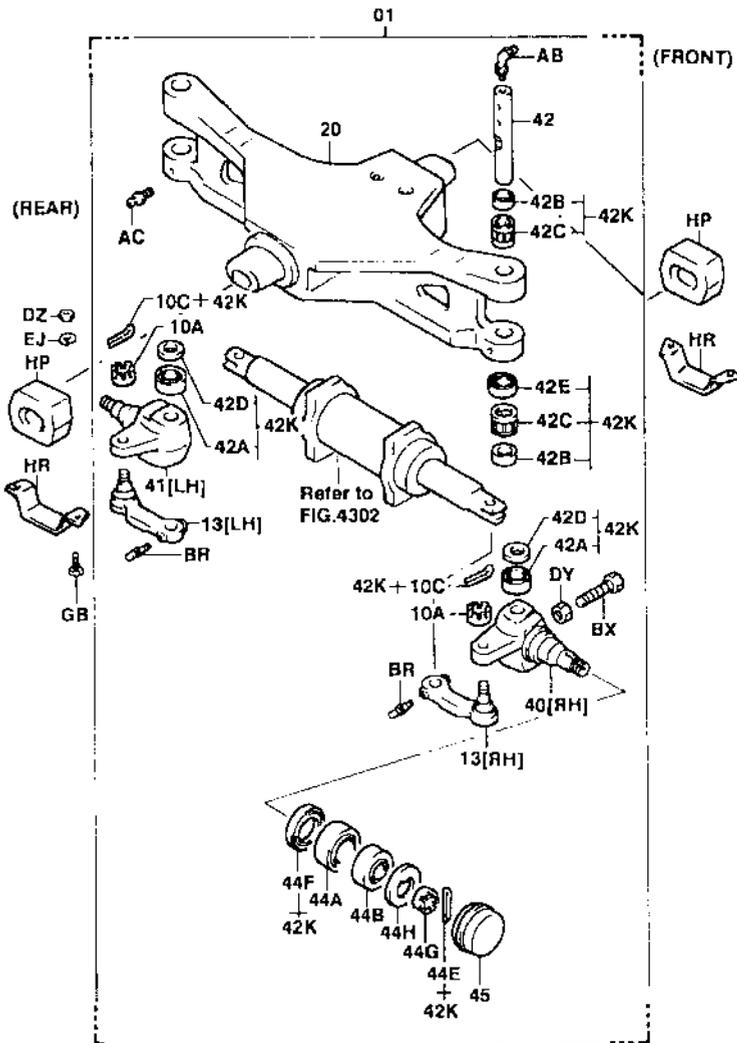

4301-101A

PART NAME	PART NAME	QTY
CODE		
4301-01	AXLE ASSY, RR	1
4301-10A	NUT, CASTLE (FOR TIE-ROD END)	2
4301-10C	PIN, COTTER (FOR TIE-ROD END)	2
4301-13	TIE-ROD ASSY	1
4301-20	BEAM SUB-ASSY, REAR AXLE	1
4301-40	KNUCKLE, STEERING, RH	1
4301-41	KNUCKLE, STEERING, LH	1
4301-42	PIN, STEERING KNUCKLE KING	2
4301-42A	BEARING, STEERING KNUCKLE THRUST	2
4301-42B	SEAL, OIL, NO.1	4
4301-42C	BEARING, NEEDLE	4
4301-42D	SHIM, STEERING KNUCKLE	99
4301-42E	SEAL, OIL, NO.2	2
4301-42K	SEAL KIT, KING PIN	1
4301-44A	BEARING, INNER	2
4301-44B	BEARING, OUTER	2
4301-44E	PIN, REAR AXLE COTTER	2
4301-44F	SEAL, OIL (FOR REAR AXLE HUB)	2
4301-44G	NUT, CASTLE (FOR REAR AXLE HUB)	2
4301-44H	WASHER, CLAW (FOR REAR AXLE HUB)	2
4301-45	CAP, REAR AXLE HUB	2
4301-AB	FITTING, GREASE	2
4301-AC	FITTING, GREASE	2
4301-BR	FITTING, GREASE	2
4301-BX	BOLT	2
4301-DY	NUT	2
4301-DZ	NUT	4
4301-EJ	WASHER, SPRING	4
4301-GB	BOLT	4
4301-HP	RUBBER, CUSHION	2
4301-HR	SUPPORT	2



G818-001E

FIG. 4302
REAR AXLE CYLINDER

4302

MAIN

97/04

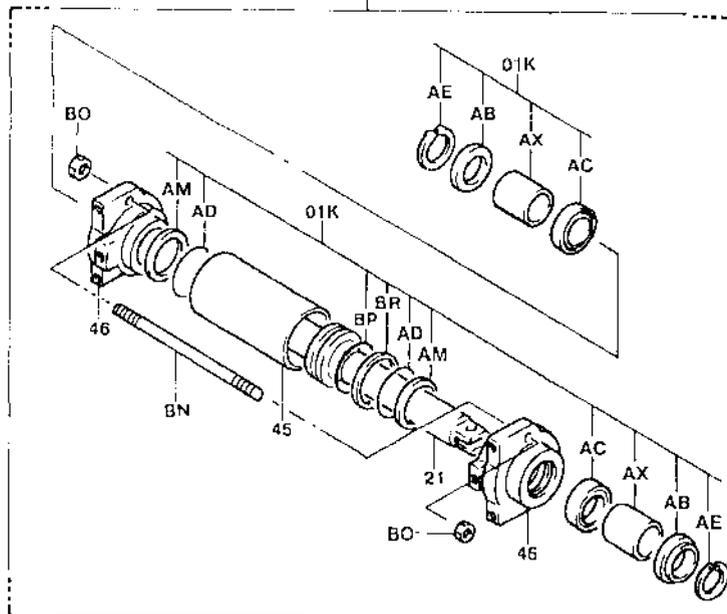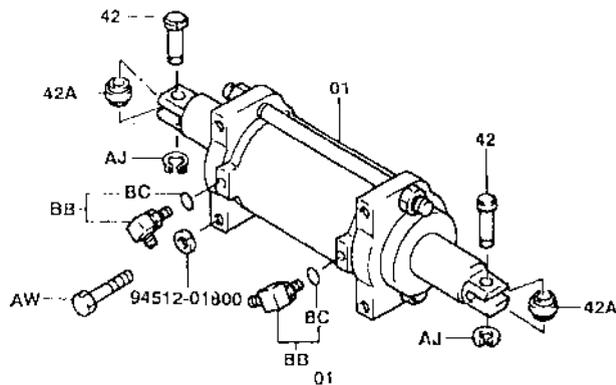

4302-015A

PART NAME	PART NAME	QTY
CODE		
4302-01	CYLINDER ASSY, REAR AXLE	1
4302-01K	CYLINDER O/H KIT, REAR AXLE	1
4302-21	ROD SUB-ASSY, REAR AXLE CYLINDER	1
4302-42	PIN, REAR AXLE CYLINDER	2
4302-42A	BUSHING (FOR REAR AXLE CYLINDER PIN)	2
4302-45	CYLINDER, REAR AXLE	1
4302-46	GUIDE, ROD	2
4302-AB	SEAL, DUST	2
4302-AC	PACKING, U	2
4302-AD	RING, O	2
4302-AE	RING, SNAP	2
4302-AJ	RING, SNAP	2
4302-AM	RING, BACK UP	2
4302-AW	BOLT	4
4302-AX	BUSHING	2
4302-BB	FITTING	2
4302-BC	RING, O	2
4302-BN	ROD, TIE	2
4302-BD	NUT, TIE ROD	4
4302-BP	PACKING	1
4302-BR	RING	1


G818-001E

FIG. 4406
FRONT WHEEL & TIRE

4406

MAIN

95/04

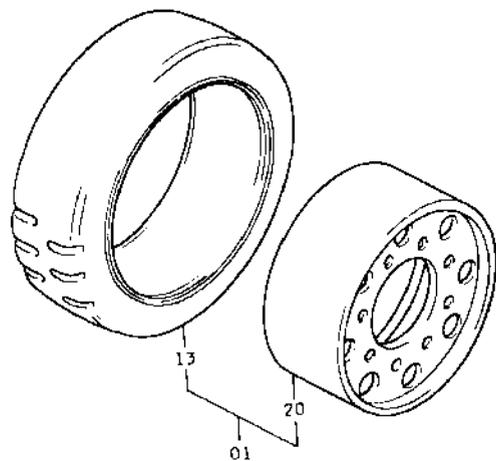

PART NAME CODE	PART NAME	QTY
4406-01	WHEEL ASSY	2
4406-13	TIRE ASSY	2
4406-20	WHEEL SUB-ASSY, DISC	2


G818-001E

FIG-4407
REAR WHEEL & TIRE

4407

MAIN

97/04

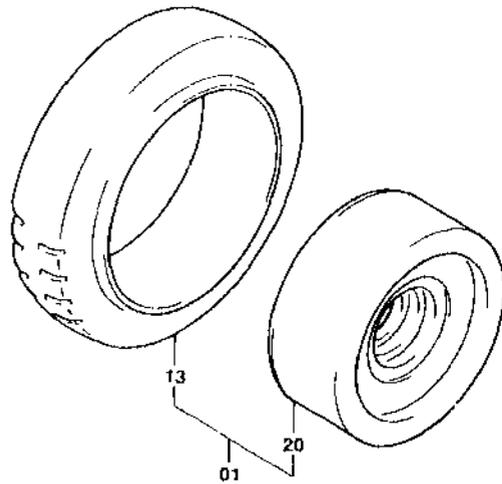

4407-007

PART NAME CODE	PART NAME	QTY
4407-01	WHEEL ASSY	2
4407-13	TIRE ASSY	2
4407-20	WHEEL SUB-ASSY, DISC	2

G818-001E


FIG. 4501
STEERING WHEEL

4501


MAIN

95/04

(U.S.A.) (L/KNOB)

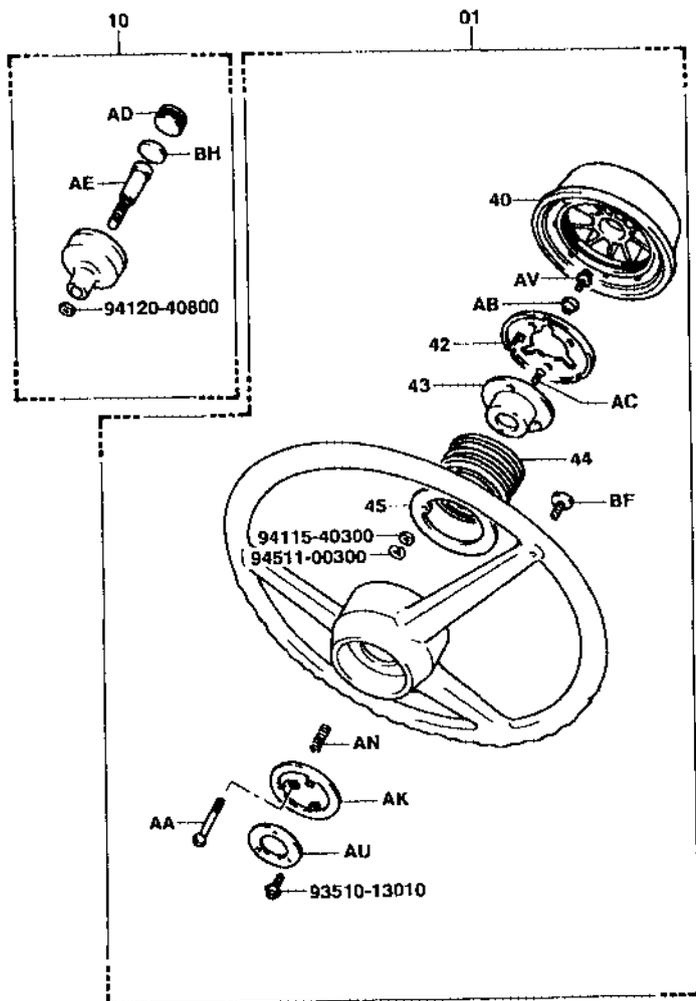

4501-041A

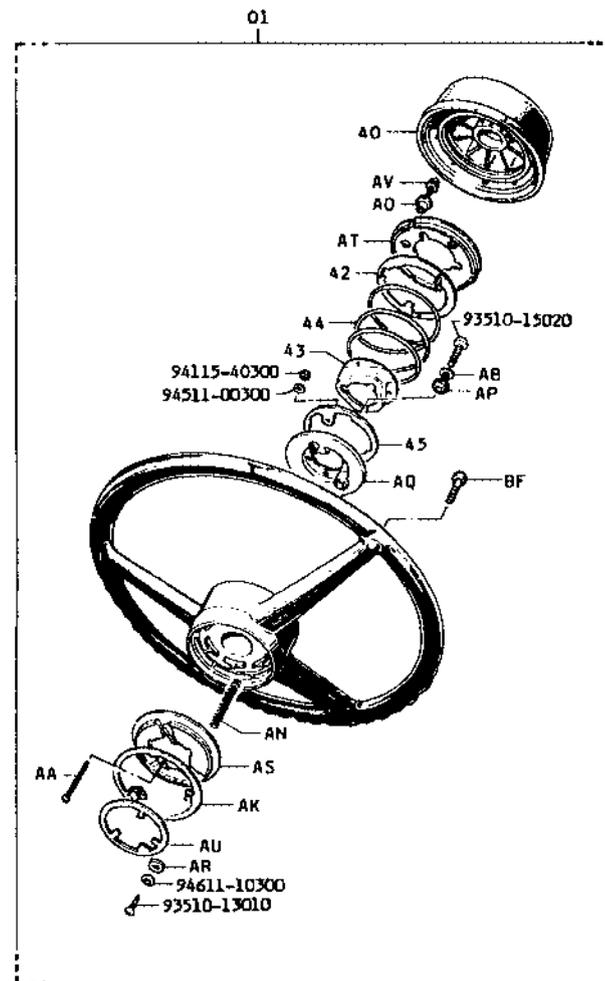

4501-016A

G818-001

FIG. 4501
STEERING WHEEL

4501

MAIN

95/04

PART NAME CODE	PART NAME	QTY
4501-01	WHEEL ASSY, STEERING	1
4501-10	KNOB ASSY, STEERING WHEEL	1
4501-40	BUTTON, HORN	1
4501-42	PLATE, HORN CONTACT	1
4501-43	SEAT, HORN CONTACT	1
4501-44	SPRING, HORN	1
4501-45	PLATE, LEAD	1
4501-AA	SCREW	1
4501-AB	WASHER	3
4501-AC	SCREW	3
4501-AD	CAP, STEERING WHEEL	1
4501-AE	BOLT, STEERING WHEEL KNOB SET	1
4501-AK	RING, HORN CONTACT NO.1	1
4501-AN	SPRING, LEAD	1
4501-AD	SPACER, NO.3	3
4501-AP	SPACER, NO.5	3
4501-AQ	SPACER, NO.5	1
4501-AR	SPACER, NO.4	2
4501-AS	SPACER, NO.1	1
4501-AT	PLATE, HORN BUTTON SET	1
4501-AU	RING, HORN CONTACT NO.2	1
4501-AV	SCREW	3
4501-BF	CAP	1
4501-BH	PACKING	1


6818-00ZE

FIG. 4502
STEERING POST

4502

MAIN

95/04

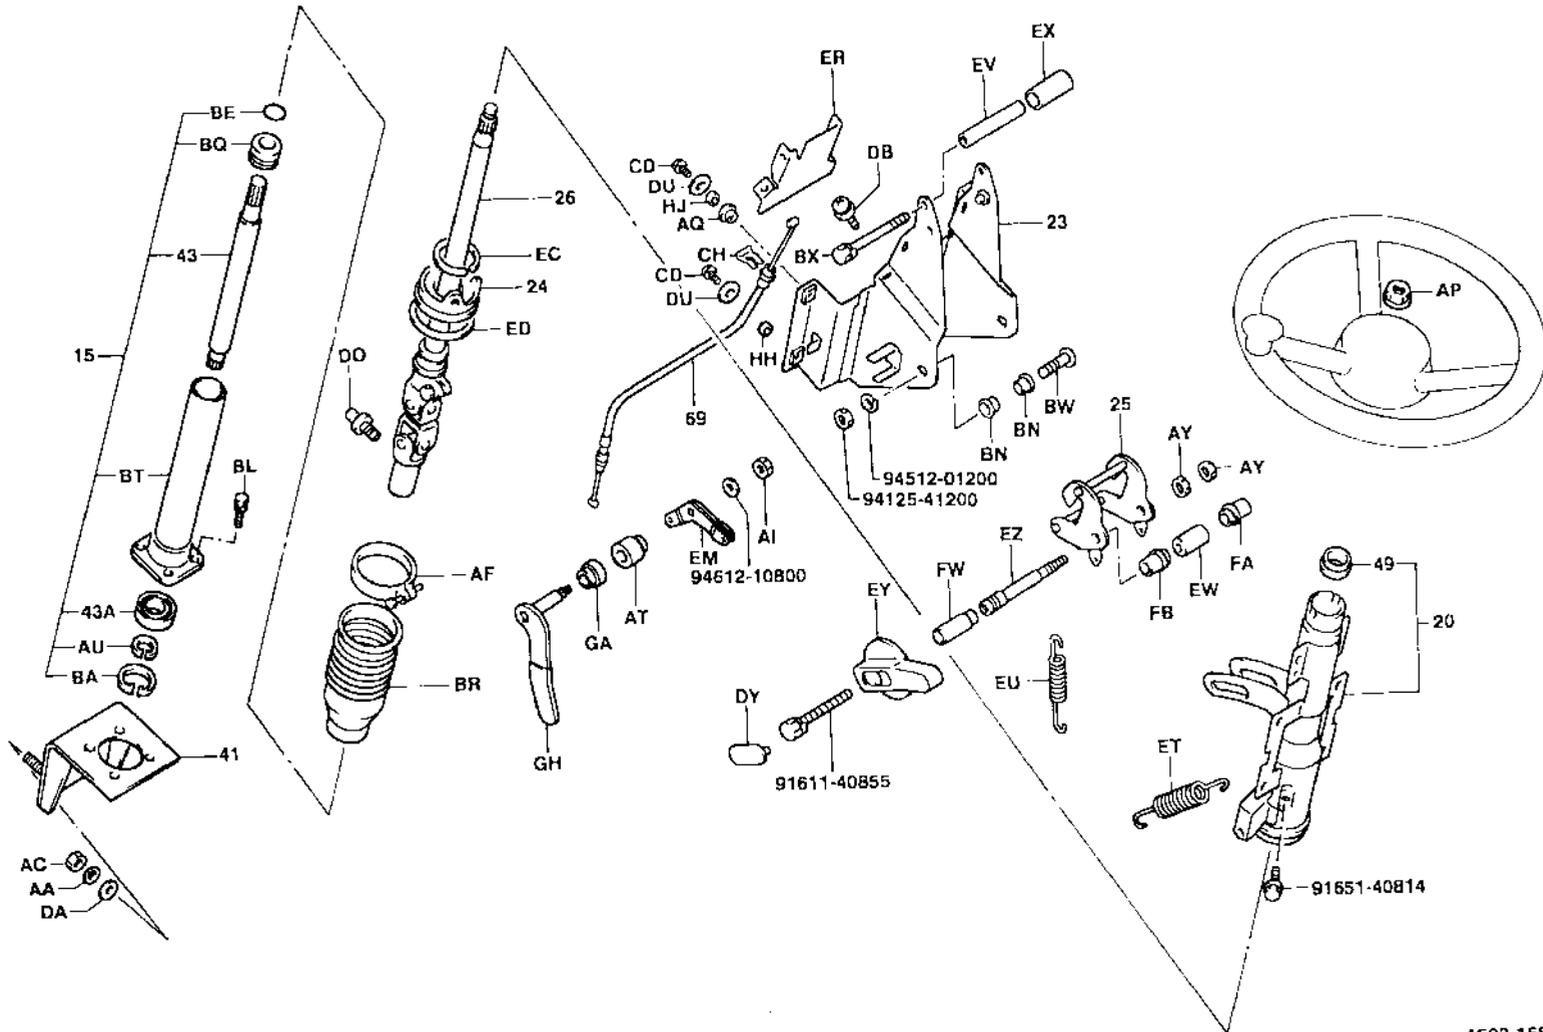

4502-168

G 818-001

FIG. 4502
STEERING PDST

4502

MAIN

95/04

PART NAME	PART NAME	QTY
CODE		
4502-15	POST ASSY, STEERING	1
4502-20	JACKET SUB-ASSY, MAST	1
4502-23	BRACKET SUB-ASSY, TILT STEERING	1
4502-24	STOPPER SUB-ASSY, STEERING SHAFT	1
4502-25	STOPPER SUB-ASSY, STEERING	1
4502-26	SHAFT SUB-ASSY, TILT STEERING	1
4502-41	BRACKET, STEERING	1
4502-43	SHAFT, STEERING MAIN	1
4502-43A	BEARING (FOR STEERING MAIN SHAFT)	1
4502-49	GROMMET, STEERING COLUMN (INSULATOR)	1
4502-69	WIRE, TILT STEERING	1
4502-AA	WASHER, SPRING	2
4502-AC	NUT	2
4502-AF	CLAMP	1
4502-AI	NUT	1
4502-AP	NUT	1
4502-AQ	RUBBER, CUSHION, NO.1	2
4502-AT	COLLAR	1
4502-AU	RING, SNAP	1
4502-AY	NUT, LOCK	2
4502-BA	RING, SNAP	1
4502-BE	RING, O	1
4502-BL	BOLT, W/WASHER	4
4502-BN	BUSHING	4
4502-BQ	BUSHING	1
4502-BR	BODY, MAST JACKET	1
4502-BT	JACKET	1
4502-BW	BOLT	2
4502-BX	BDLT	1
4502-CD	BDLT	4
4502-CH	CLIP	1
4502-DA	WASHER	2
4502-DB	SCREW	4
4502-DO	FITTING, GREASE	1
4502-DU	WASHER, PLATE	4
4502-DY	CAP	1
4502-EC	RING	1
4502-ED	RING	1
4502-EM	HOOK	1
4502-ER	COVER SUB-ASSY, STEERING BRACKET	1
4502-ET	SPRING, TENSION	1
4502-EV	SPRING, TENSION	1
4502-EV	PIPE	1
4502-EW	COLLAR, TILT LOCK	1
4502-EX	HDSE	1
4502-EY	LEVER SUB-ASSY, TILT LOCK	1
4502-EZ	BDLT, TILT LOCK	1
4502-FA	NUT, ADJUSTING, RH	1
4502-FB	NUT, ADJUSTING, LH	1
4502-FW	PIPE	1
4502-GA	COLLAR	1
4502-GH	LEVER SUB-ASSY, TILT LOCK	1
4502-HH	COLLAR	2
4502-HJ	COLLAR	2


G818-002E

FIG. 4503
HYDROSTATIC STEERING VALVE

4503

MAIN

95/10

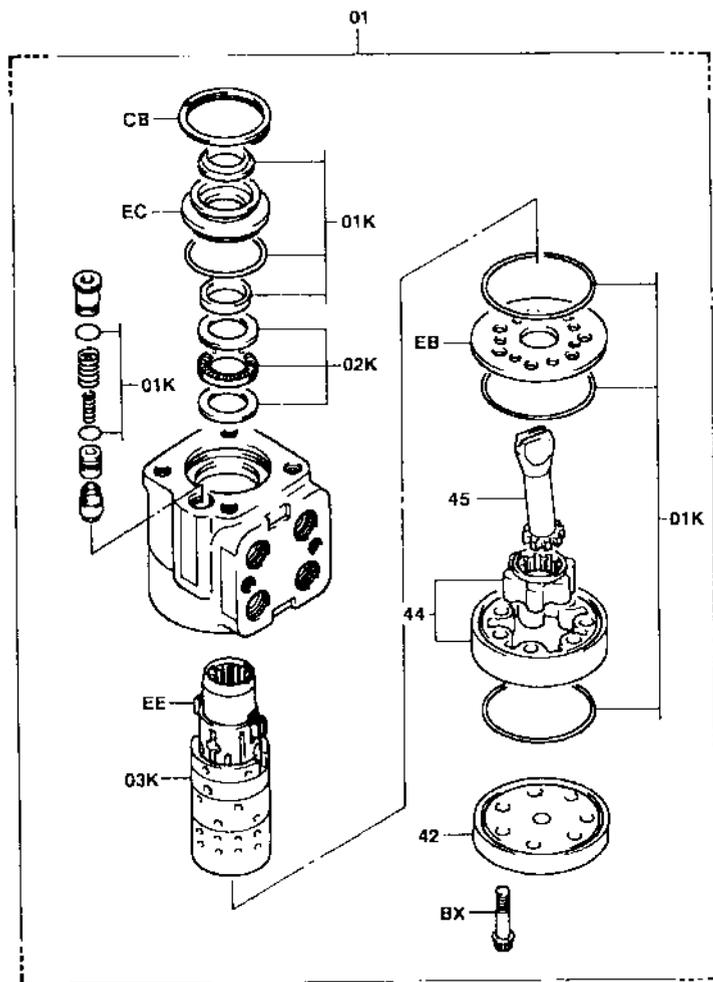

4503-019C

PART NAME	PART NAME	QTY
CODE		
4503-01	VALVE ASSY, HYDROSTATIC STEERING	1
4503-01K	VALVE D/H KIT, HYDROSTATIC STEERING	1
4503-02K	BEARING KIT	1
4503-03K	SPRING KIT	1
4503-42	CAP, END	1
4503-44	GEAR/DOR	1
4503-45	DRIVE	1
4503-BX	SCREW	7
4503-CB	RING, RETAINING	1
4503-EB	PLATE, WEAR	1
4503-EC	STOPPER, SEAL	1
4503-EE	PIN, CENTERING	1

G818-001E

FIG. 4507
DRAG LINK & STEERING PIPING

4507

MAIN

97/06

PART NAME CDDL	PART NAME	QTY
4507-30	PIPE SUB-ASSY, NO.1 (STEERING TO CYLINDER)	1
4507-31	PIPE SUB-ASSY, NO.2 (STEERING TO CYLINDER)	1
4507-32	PIPE SUB-ASSY (PUMP TO STEERING)	1
4507-38	PIPE SUB-ASSY (VALVE TO STEERING)	1
4507-43	HOSE, POWER CYLINDER, NO.2	2
4507-45	HOSE, POWER STEERING PUMP SUCTION	1
4507-46	HOSE, HIGH PRESSURE (PUMP TO STEERING)	1
4507-55	HOSE, LOW PRESSURE	1
4507-61	PIPE SUB-ASSY, SUCTION	1
4507-73	SWITCH ASSY, OIL PRESSURE	1
4507-74	VALVE, INLET CHECK	1
4507-AB	CLAMP, PIPE	2
4507-AS	FITTING	1
4507-AT	FITTING	1
4507-AU	RING, O	2
4507-AV	PIPE	1
4507-AX	FITTING	3
4507-AY	FITTING	1
4507-AZ	RING, O	2
4507-BB	CLAMP	4
4507-BC	NUT	2
4507-BK	PLATE	1
4507-BP	RUBBER, CUSHION	1
4507-BV	PIPE SUB-ASSY, POWER CYLINDER	1
4507-BW	PIPE SUB-ASSY, POWER CYLINDER	1
4507-BZ	CLAMP	1
4507-CA	FITTING	1
4507-CE	RING, O	4
4507-CG	BRACKET SUB-ASSY, PIPE CLAMP	1
4507-CH	CLAMP	1
4507-D2	PIPE	1
4507-JD	RUBBER, CUSHION	1
4507-KN	GUARD SUB-ASSY, HOSE	1
4507-KV	PLATE	1
4507-KW	BLT, STUD	2


G818-002E

FIG. 4510
STEERING OIL PUMP

4510

MAIN

95/04

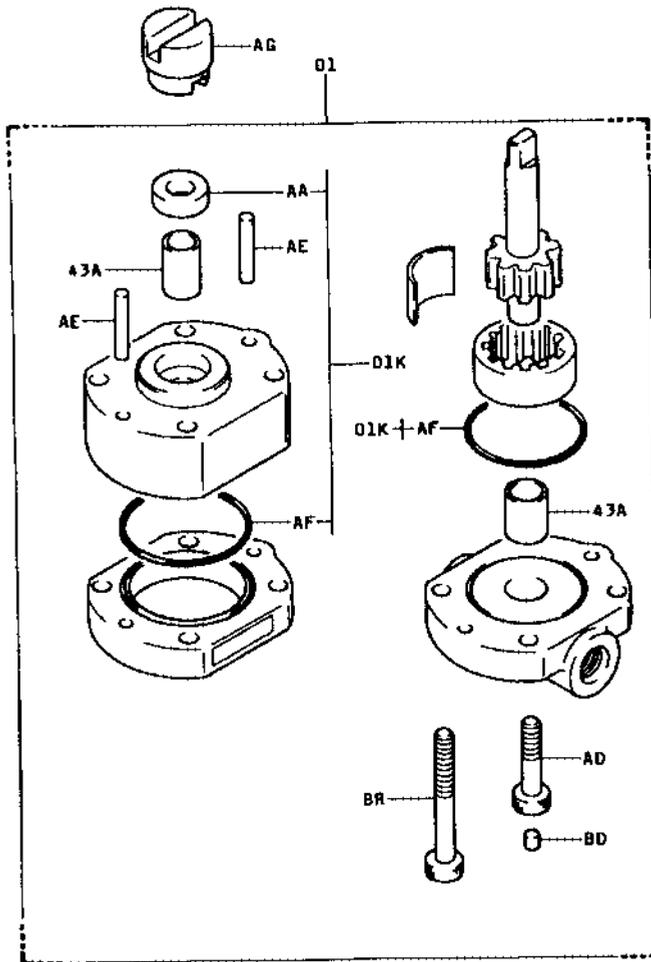

4510-0188

PART NAME	PART NAME	QTY
CODE		
4510-01	PUMP ASSY, POWER STEERING	1
4510-01K	PUMP KIT, POWER STEERING	1
4510-43A	BUSHING (FOR PINION SHAFT)	2
4510-AA	SEAL, OIL	1
4510-AD	BOLT	2
4510-AE	PIN	2
4510-AF	RING, O	2
4510-AG	JOINT, OLDHAM	1
4510-BD	PLUG	2
4510-BR	SCREW	2


G818-001E

FIG. 4601
PARKING BRAKE

4601

MAIN

95/04

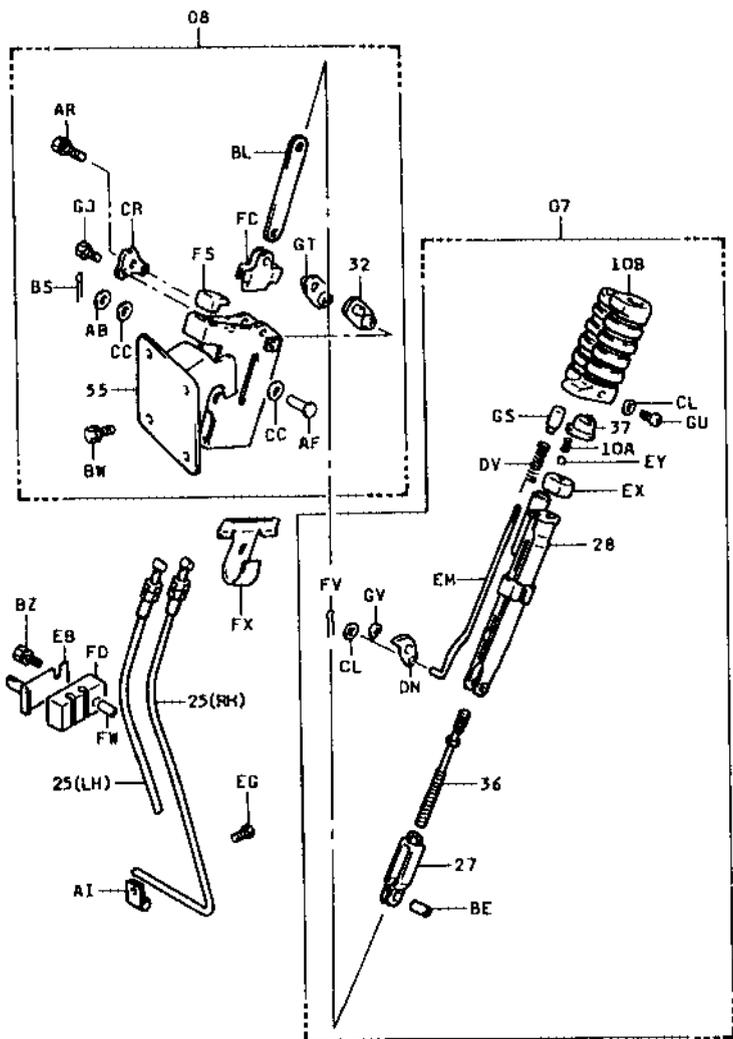

4601-106

PART NAME	PART NAME	QTY
CODE		
4601-07	LEVER SET, PARKING BRAKE	1
4601-08	BRACKET SET, PARKING BRAKE	1
4601-10A	SPRING, COMPRESSION	1
4601-10B	KNOB SUB-ASSY, PARKING BRAKE	1
4601-25	CABLE SUB-ASSY, PARKING BRAKE, NO.2	1
4601-27	CLEVIS SUB-ASSY	1
4601-28	LEVER SUB-ASSY, PARKING BRAKE	1
4601-32	LINK SUB-ASSY, PARKING BRAKE, NO.1	1
4601-36	ROD SUB-ASSY, PARKING BRAKE	1
4601-37	KNOB SUB-ASSY, PARKING BRAKE RELEASE ROD	1
4601-55	BRACKET SUB-ASSY, PARKING BRAKE	1
4601-AB	WASHER, PLATE	1
4601-AF	PIN, W/HOLE	1
4601-AI	CLAMP	1
4601-AR	BOLT	1
4601-BE	PIN	1
4601-BL	PLATE, PARKING BRAKE	1
4601-BS	PIN, COTTER	1
4601-BU	FITTING, GREASE	1
4601-BW	BOLT	4
4601-BZ	BOLT	2
4601-CC	WASHER	2
4601-CL	WASHER	2
4601-CR	SECTOR, PARKING BRAKE LEVER	1
4601-DN	PAWL, PARKING BRAKE	1
4601-DV	SPRING, COMPRESSION	1
4601-EB	CLAMP, BRAKE CABLE	2
4601-EG	BOLT	1
4601-EM	ROD, PARKING BRAKE	1
4601-EX	KNOB	1
4601-EY	BALL	1
4601-FC	HOOK	1
4601-FD	RUBBER, PARKING BRAKE	2
4601-FS	STOPPER	1
4601-FV	PIN, COTTER	1
4601-FW	PIPE	2
4601-FX	STOPPER	1
4601-GJ	BOLT	1
4601-GS	KNOB, PARKING BRAKE	1
4601-GT	LINK SUB-ASSY, RH	1
4601-GU	SCREW	1
4601-GV	RING, E	1

G818-001E


FIG. 4602
DEAD-MAN BRAKE

4602

MAIN

95/04

(DEAD-MAN) (2/2)

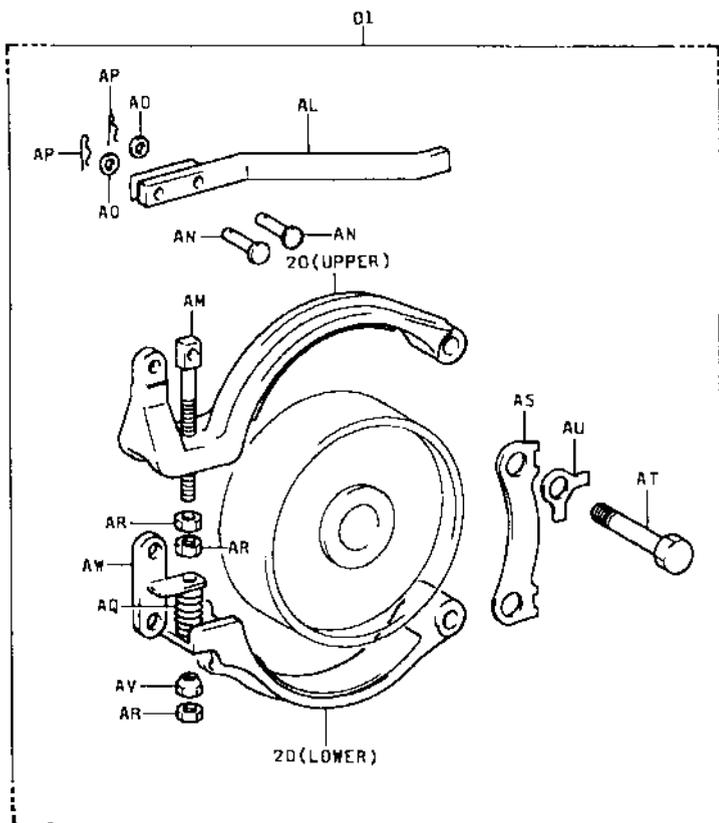

PART NAME		QTY
CODE	PART NAME	
4602-01	BRAKE ASSY, DEAD-MAN	1
4602-20	SHOE SUB-ASSY, BRAKE	1
4602-37	LINK SUB-ASSY, DEAD-MAN BRAKE	1
4602-37A	BUSHING (FOR BRAKE LINK)	2
4602-41	DRUM, DEAD-MAN BRAKE	1
4602-AA	NUT, SELF LOCK	1
4602-AC	COLLAR	1
4602-AD	ROD SUB-ASSY, DEAD-MAN BRAKE	1
4602-AE	PIN, W/HOLE	4
4602-AG	TURNBUCKLE	1
4602-AH	NUT	1
4602-AL	LEVER ASSY, BRAKE	1
4602-AM	STRUT	1
4602-AN	PIN, BRAKE LEVER	2
4602-AD	WASHER, PLATE	2
4602-AP	PIN, SNAP	2
4602-AQ	SPRING, SHOE RETURN	1
4602-AR	NUT	3
4602-AS	PLATE, GUIDE	1
4602-AT	STUD	2
4602-AU	WASHER, LOCK	2
4602-AV	NUT, STRUT	1
4602-AW	BRACKET	1
4602-AY	BUSHING	2
4602-BQ	ROD SUB-ASSY, DEAD-MAN BRAKE	1
4602-BR	ROD SUB-ASSY, DEAD-MAN BRAKE	1
4602-BS	BRACKET SUB-ASSY, LINK	1
4602-BT	BRACKET SUB-ASSY, DEAD-MAN BRAKE	1
4602-BV	PIN SUB-ASSY, BRAKE LINK	1
4602-BW	BRACKET SUB-ASSY, SPRING	2
4602-BX	BRACKET SUB-ASSY, SPRING	2
4602-BY	SPRING, TENSION	2
4602-BZ	SPRING, COMPRESSION	2
4602-CA	PIN, COTTER	1
4602-CB	RING, SHAFT SNAP	3
4602-CC	BUSHING	4

4602-008


G818-002E

FIG. 4701
BRAKE PEDAL

4701

MAIN

95/04

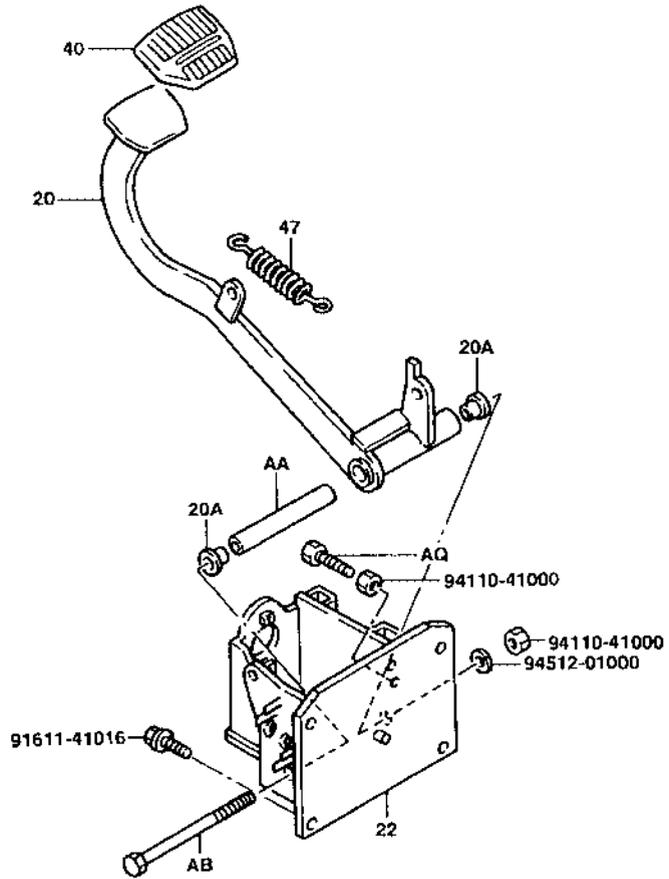

4701-159

PART NAME CODE	PART NAME	QTY
4701-20	PEDAL SUB-ASSY, BRAKE	1
4701-20A	BUSHING (FOR BRAKE PEDAL)	2
4701-22	BRACKET SUB-ASSY, BRAKE PEDAL	1
4701-40	PAD, PEDAL	1
4701-47	SPRING, TENSION (FOR PEDAL RETURN)	1
4701-AA	SPACER	1
4701-AB	BOLT	1
4701-AQ	BOLT	1



G818-001E

FIG. 4702
BRAKE MASTER CYLINDER

4702

MAIN

95/04

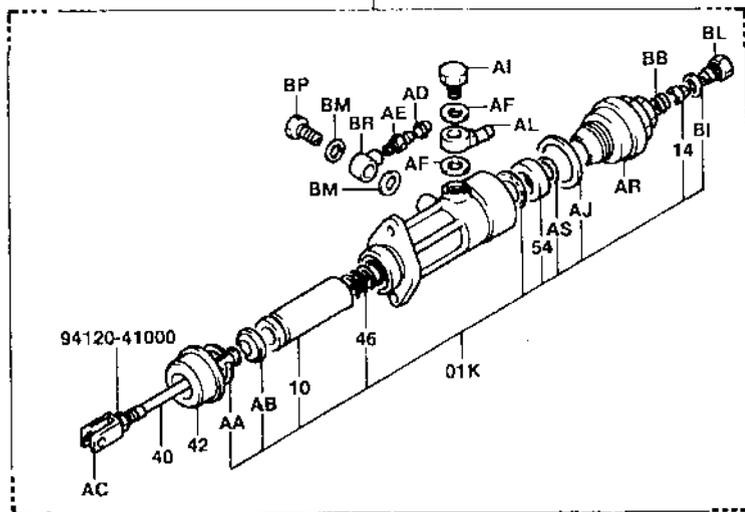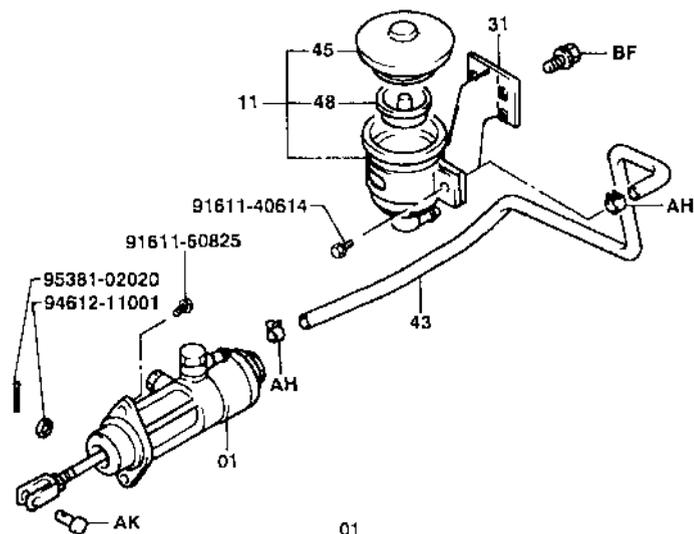

4702-075

PART NAME CODE	PART NAME	QTY
4702-01	CYLINDER ASSY, MASTER	1
4702-01K	CYLINDER O/H KIT, MASTER	1
4702-10	PISTON SUB-ASSY, MASTER CYLINDER	1
4702-11	RESERVOIR SET, MASTER CYLINDER	1
4702-14	VALVE ASSY	1
4702-31	BRACKET SUB-ASSY, RESERVOIR	1
4702-40	ROD, PUSH	1
4702-42	BOOT	1
4702-43	HOSE, RESERVOIR	1
4702-45	CAP, RESERVOIR	1
4702-46	SPRING, COMPRESSION (FOR PISTON RETURN)	1
4702-48	STRAINER	1
4702-54	CUP, CYLINDER	1
4702-AA	RING, HOLE SNAP	1
4702-AB	PLATE, PISTON STOP	1
4702-AC	CLEVIS, PUSH ROD	1
4702-AD	CAP, BLEEDER PLUG	1
4702-AE	PLUG, BLEEDER	1
4702-AF	GASKET	2
4702-AH	CLIP	2
4702-AI	BOLT, UNION	1
4702-AJ	GASKET	1
4702-AK	PIN	1
4702-AL	UNION	1
4702-AR	CAP	1
4702-AS	SEAT	1
4702-BB	SPRING, COMPRESSION	1
4702-BF	BOLT	2
4702-BI	GASKET	1
4702-BL	PLUG	1
4702-BM	GASKET	2
4702-BP	BOLT, UNION	1
4702-BR	UNION	1


G818-001E

FIG-4714
BRAKE PIPE

4714

MAIN

95/04

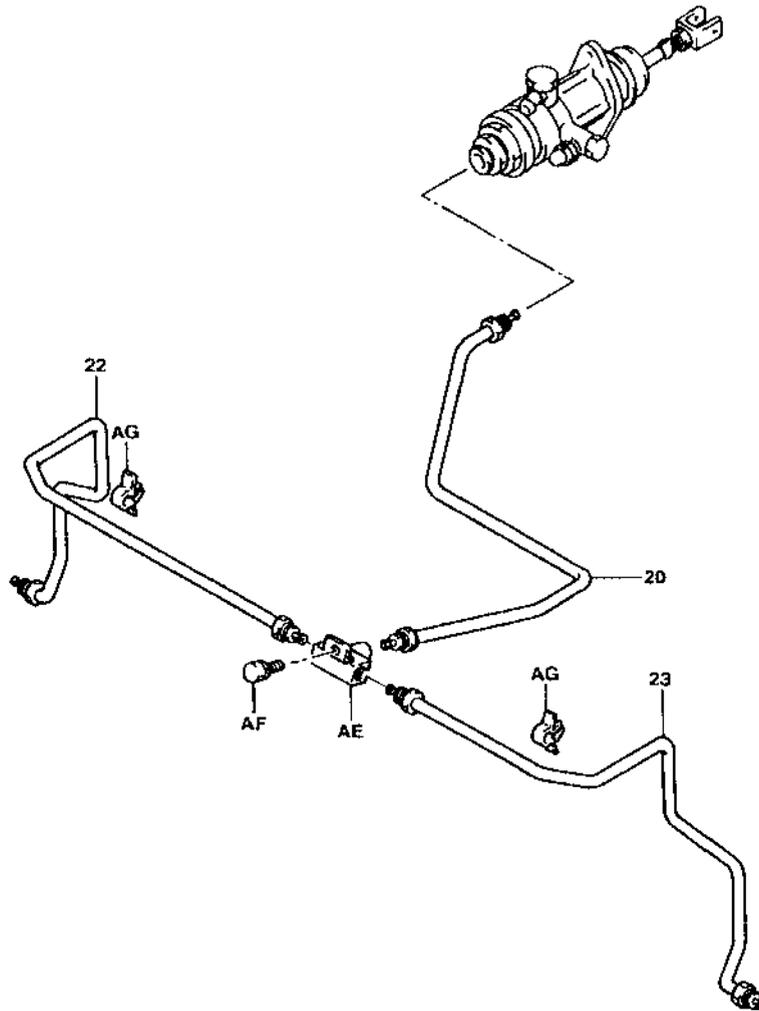

PART NAME CODE	PART NAME	QTY
4714-20	PIPE SUB-ASSY, BRAKE, MAIN NO.1	1
4714-22	PIPE SUB-ASSY, BRAKE, RH NO.1	1
4714-23	PIPE SUB-ASSY, BRAKE, LH NO.1	1
4714-AE	3-WAY SUB-ASSY	1
4714-AF	BOLT	1
4714-AG	CLAMP	2

4714-155


G818-001E

FIG. 4715
DRUM BRAKE

4715

MAIN

95/04

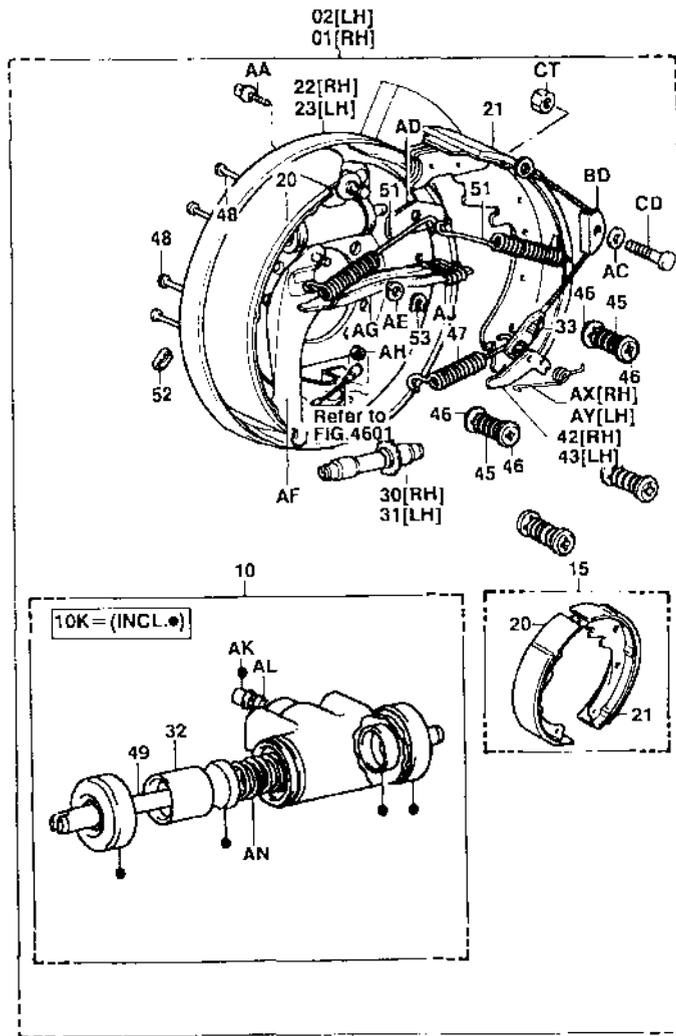

PART NAME	PART NAME	QTY
CODE		
4715-01	BRAKE ASSY, RH	1
4715-02	BRAKE ASSY, LH	1
4715-10	CYLINDER ASSY, WHEEL	2
4715-10K	CYLINDER D/H KIT, WHEEL	2
4715-20	SHOE SUB-ASSY (FOR FRONT OR UPPER)	2
4715-21	SHOE SUB-ASSY (FOR REAR OR LOWER)	1
4715-22	PLATE SUB-ASSY, BACKING, RH	1
4715-23	PLATE SUB-ASSY, BACKING, LH	1
4715-30	SCREW SUB-ASSY, ADJUSTING, RH	1
4715-31	SCREW SUB-ASSY, ADJUSTING, LH	1
4715-32	PISTON SUB-ASSY, WHEEL CYLINDER	4
4715-33	CABLE & FITTING SUB-ASSY	2
4715-42	LEVER, AUTOMATIC ADJUSTMENT, RH	1
4715-43	LEVER, AUTOMATIC ADJUSTMENT, LH	1
4715-45	SPRING, SHOE HOLD DOWN	8
4715-46	CUP, SHOE HOLD DOWN	16
4715-47	SPRING, ADJUSTER	2
4715-48	PIN, SHOE HOLD DOWN	8
4715-49	ROD, PUSH	4
4715-51	SPRING, ANCHOR TO SHOE	2
4715-52	COVER, ADJUSTING HOLE	2
4715-53	RING, PARKING LEVER RETAINING	2
4715-AA	BOLT & WASHER SET	4
4715-AC	WASHER	2
4715-AD	PLATE, SHOE GUIDE	2
4715-AE	WASHER, SPRING	2
4715-AF	LEVER SUB-ASSY, PARKING	1
4715-AG	STRUT, LEVER	1
4715-AH	RING, SNAP	2
4715-AJ	SPRING, STRUT TO SHOE	2
4715-AK	CAP, BLEEDER SCREW	2
4715-AL	SCREW, BLEEDER	2
4715-AN	SPRING, WHEEL CYLINDER	2
4715-AX	SPRING, LEVER RETURN, RH	1
4715-AY	SPRING, LEVER RETURN, LH	1
4715-BD	SHEAVE, PARKING BRAKE CABLE	2
4715-CD	PIN	2
4715-CT	NUT	2

4715-071B

G818-001E

FIG. 5101
FRAME & WEIGHT

5101

MAIN

97/04

(BATT. ROLL OUT) (2/2)

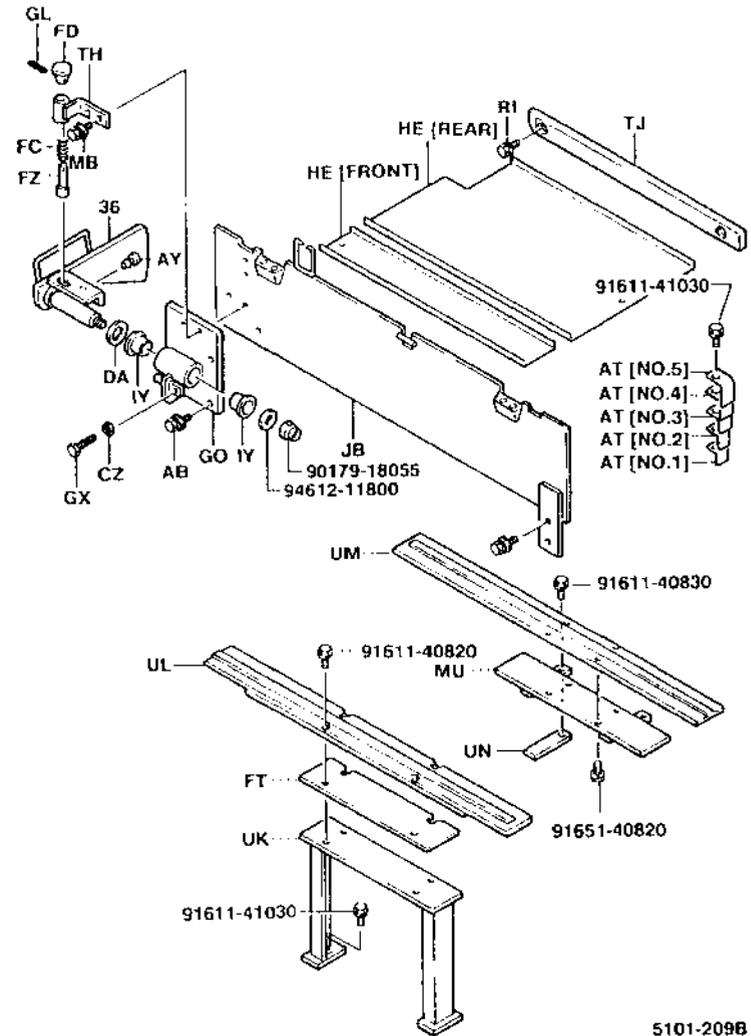
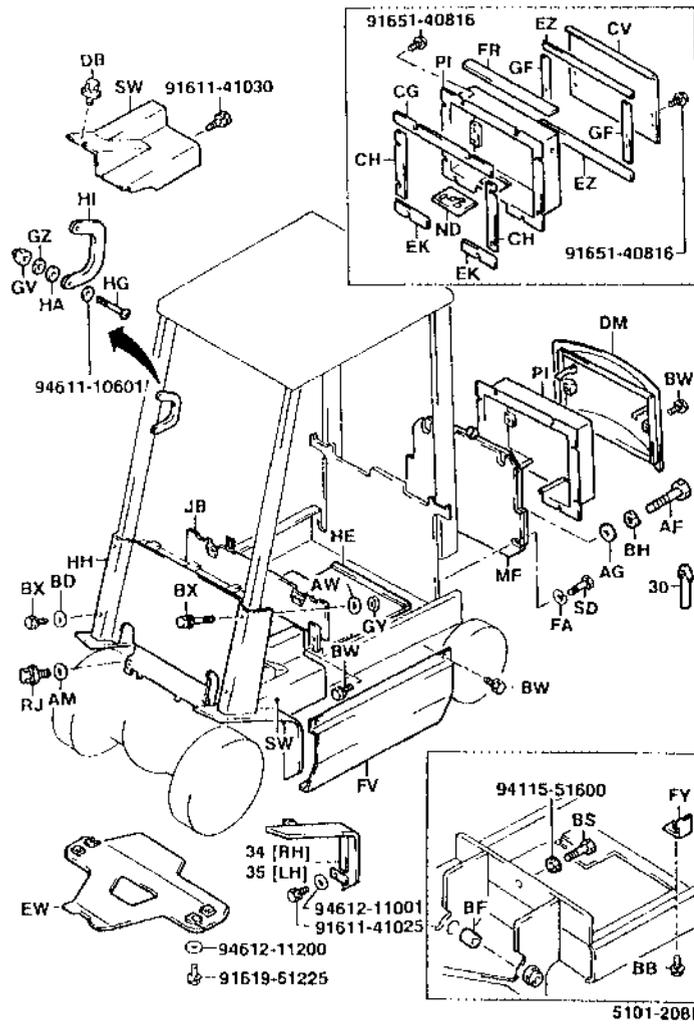


FIG. 5101
FRAME & WEIGHT

5101

MAIN

97/04

PART NAME:	PART NAME	QTY
CDDL		
5101-50	DRAWBAR SUB-ASSY	1
5101-54	GUARD SUB-ASSY, MUD, RH	1
5101-55	GUARD SUB-ASSY, MUD, LH	1
5101-56	STOPPER SUB-ASSY, BATTERY	1
5101-AB	BOLT	3
5101-AF	BOLT, HEXAGON	2
5101-AG	WASHER, PLATE	2
5101-AM	WASHER, PLATE	6
5101-AT	SPACER	2
5101-AY	PLUG, HOLE	1
5101-BB	IBOLT	2
5101-BD	WASHER, PLATE	4
5101-BF	BUSHING	2
5101-BH	WASHER, SPRING	2
5101-BS	IBOLT	1
5101-BW	BOLT	8-10
5101-CG	RUBBLER	1
5101-CN	RUBBLER	2
5101-CV	PLATE	1
5101-CZ	NUT	1
5101-DA	WASHER	1
5101-DB	IBOLT	2
5101-DM	COVER SUB-ASSY, REAR	1
5101-FK	RUBBER	2
5101-FW	PLATE SUB-ASSY, SKID	1
5101-LZ	RUBBER	2
5101-FA	WASHER, SPRING	4
5101-FC	SPRING	1
5101-FD	KNOB	1
5101-FR	SPONGE	1
5101-FT	SHIM	99
5101-FV	COVER SUB-ASSY, SIDE FRAME	1
5101-FY	STOPPER	2
5101-FZ	IPIN	1
5101-GF	RUBBER	2
5101-GI	IPIN	1
5101-GI	PLATE SUB-ASSY, BATTERY STOPPER	1
5101-GV	NUT	2
5101-GX	IBOLT	1
5101-GZ	WASHER, SPRING	2
5101-HA	WASHER, PLATE	2
5101-HF	COVER SUB-ASSY, LOWER	1
5101-HG	SCREW	2
5101-HH	PROTECTOR	1
5101-HJ	GRIP	1
5101-IY	BUSHING	2
5101-JB	PLATE SUB-ASSY	1
5101-MB	BOLT	2
5101-MF	BASE	1
5101-MU	BRACKET SUB-ASSY	1
5101-ND	RUBBER	1
5101-PI	CASE	1
5101-RI	BOLT	2
5101-RJ	BOLT	6
5101-SD	BOLT	4
5101-SW	STEP SUB-ASSY	1
5101-TH	LOCK SUB-ASSY, STOPPER	1
5101-IJ	PLATE, GUIDE	1
5101-UK	STAND SUB-ASSY, BATTERY	1
5101-UL	LINER SUB-ASSY, BATTERY, FR	1
5101-UM	LINER SUB-ASSY, BATTERY, RH	1
5101-UN	SHIM	99


G818-002E

FIG. 5201
HOOD & HINGE

5201

MAIN

97/04

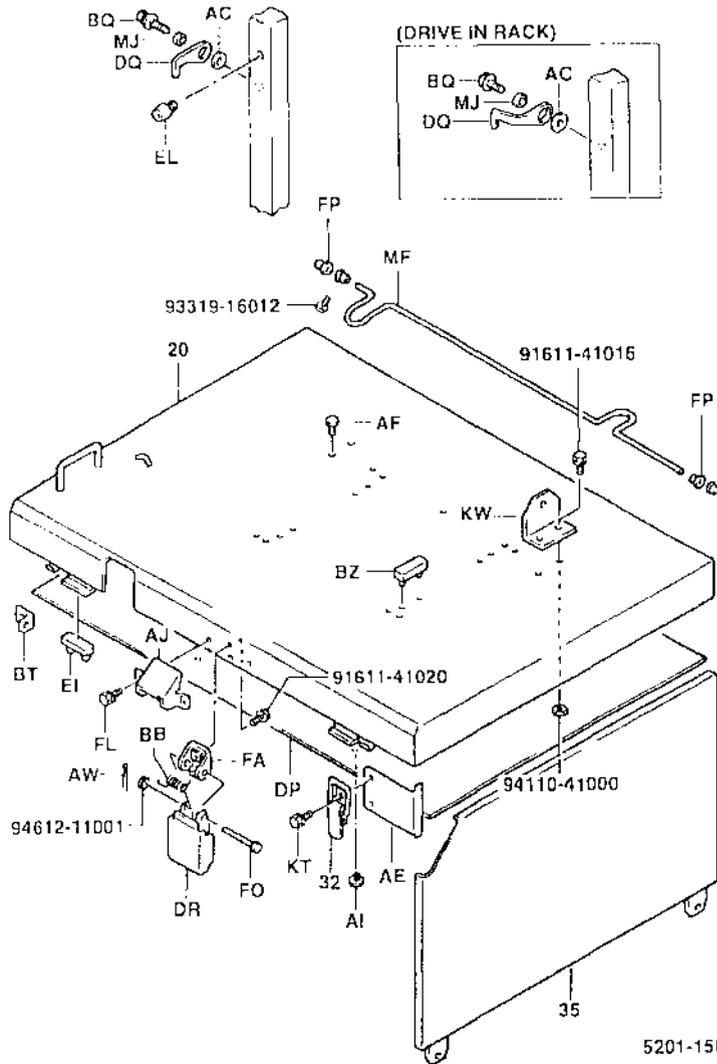

PART NAME	PART NAME	QTY
5201-20	HOOD SUB-ASSY. ENGINE (OR BATTERY)	1
5201-32	CATCH SUB-ASSY (FOR HOOD)	2
5201-35	HOOD SUB-ASSY. SIDE	1
5201-AC	WASHER, PLATE	99
5201-AE	HOOK, HOOD LOCK	2
5201-AF	PLUG, HOLE	4
5201-AI	CLIP	6-8
5201-AJ	COVER	1
5201-AW	PIN, SNAP	1
5201-BB	SPRING	1
5201-BQ	BOLT	1
5201-BT	HOOK	1
5201-BZ	CUSHION	4
5201-DP	SHFET	1
5201-DQ	HOOK	1
5201-DR	HOOK SUB-ASSY	1
5201-E1	CUSHION	2
5201-EL	CUSHION	2
5201-FA	BRACKET SUB-ASSY	1
5201-F1	BOLT, W/WASHER	2
5201-FD	PIN	1
5201-FP	BUSHING	4
5201-KT	BOLT	4
5201-KW	BRACKET	2
5201-MF	BAR	1
5201-MJ	COLLAR	2

5201-156A


G818-001E

FIG. 5301
INSTRUMENT PANEL & FLOOR

5301

MAIN

95/04

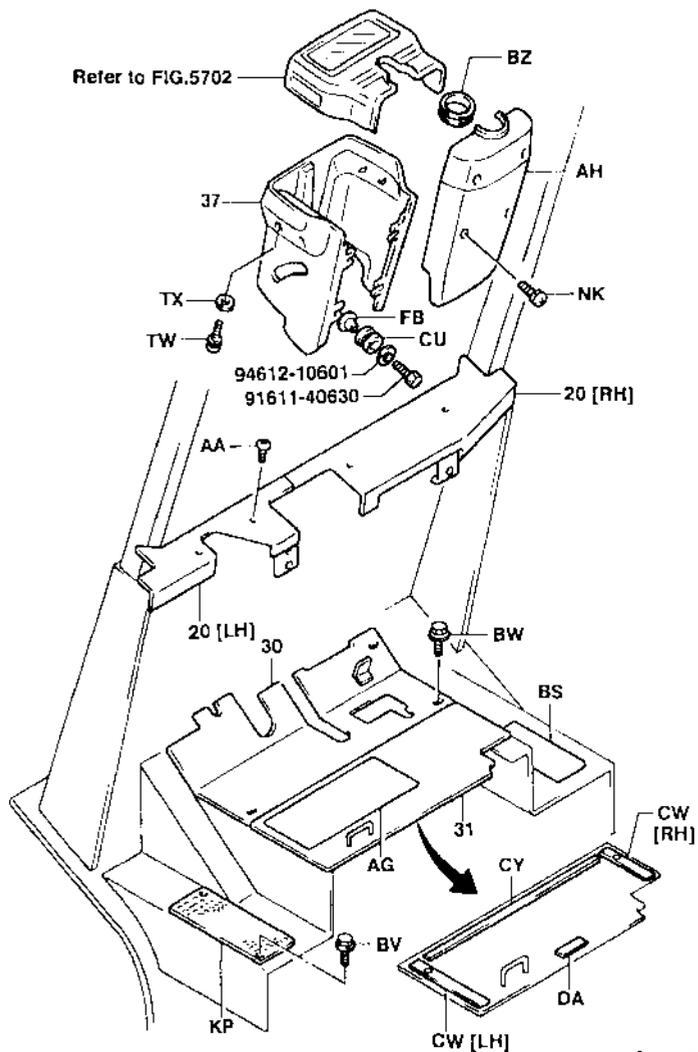

5301-212

PART NAME	PART NAME	QTY
CODE		
5301-20	PANEL SUB-ASSY, INSTRUMENT	1
5301-30	TOE-BOARD SUB-ASSY, NO.1	1
5301-31	TOE-BOARD SUB-ASSY, NO.2	1
5301-37	COVER ASSY, METER CASE	1
5301-AA	SCREW	4
5301-AG	SAFETY WALK	1
5301-AH	COVER	1
5301-BS	SAFETY WALK	1
5301-BV	BOLT	2
5301-BW	BOLT	4
5301-BZ	GROMMET	1
5301-CU	RUBBER	4
5301-CW	RUBBER	1
5301-CY	RUBBER	1
5301-DA	RUBBER	1
5301-FB	SPACER	4
5301-KP	MAT SUB-ASSY, STEP	1
5301-NK	SCREW	4
5301-TW	SCREW	5
5301-TX	WASHER, PLATE	5

G818-001E




FIG. 5308
DRIVER SEAT

5308


MAIN

95/04

HCB, STM (DEAD-MAN)

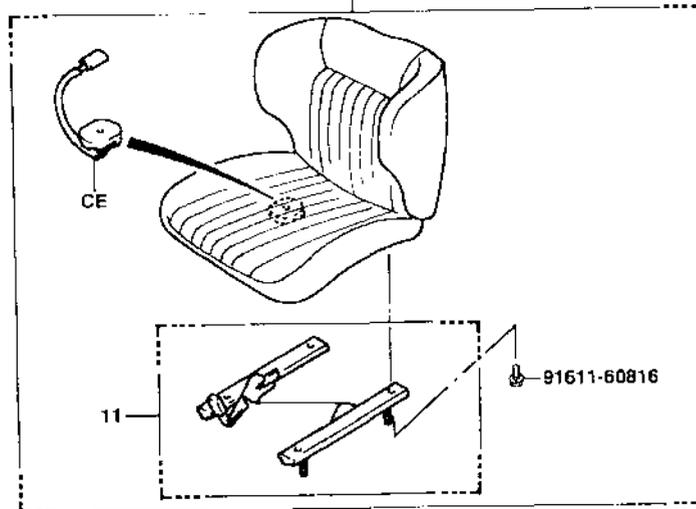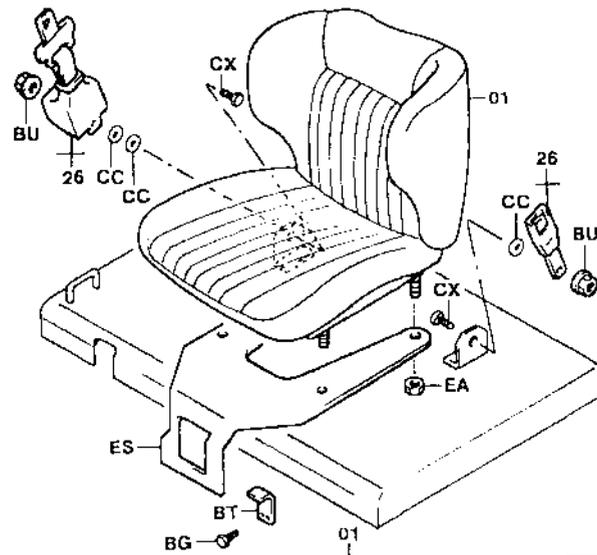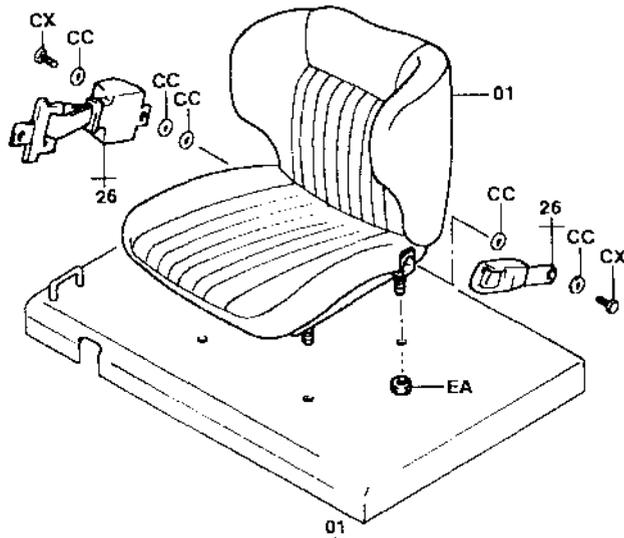

5308-182

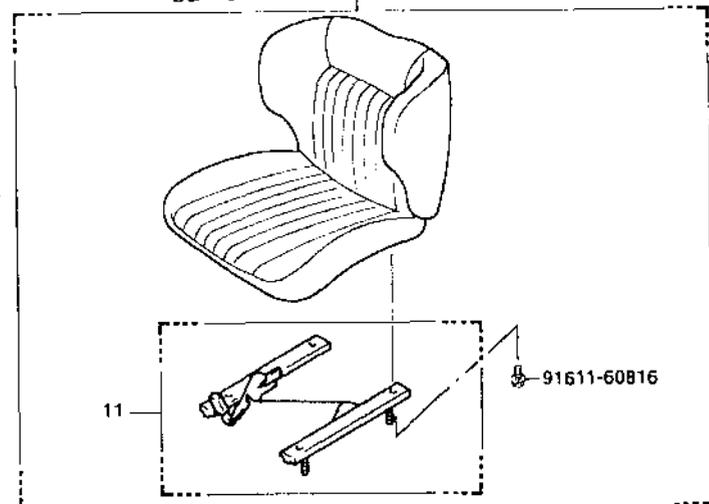

5308-183

G818-001



FIG. 5308
DRIVER SEAT

5308

MAIN

95/04

STM.:20,25 (BATT.ROLL OUT)

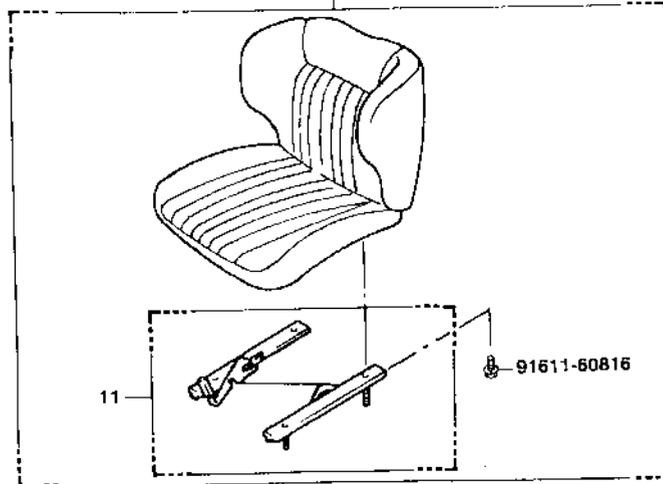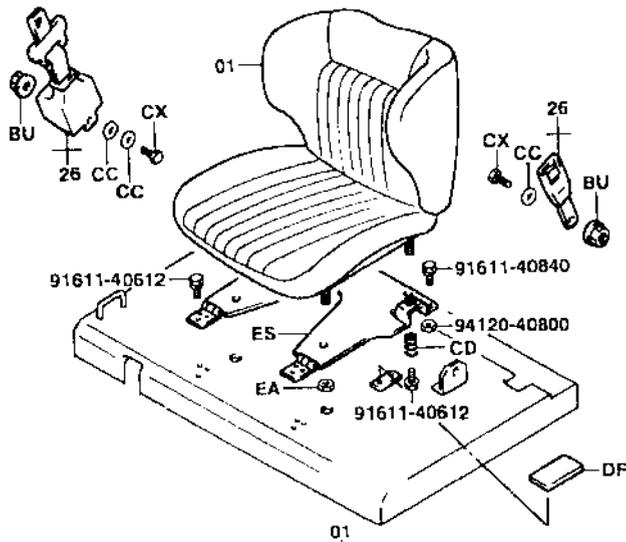

5308-184

PART NAME		QTY
CODE	PART NAME	
5308-01	SEAT ASSY	1
5308-11	TRACK ASSY	1
5308-26	BELT ASSY, SEAT	1
5308-BG	BOLT	2
5308-BT	STOPPER	1
5308-BU	NUT	2
5308-CC	WASHER, PLATE	3- 5
5308-CD	SPRING	2
5308-CE	SWITCH SUB-ASSY, SEAT	1
5308-CX	BOLT	2
5308-DF	RUBBER	2
5308-EA	NUT	4
5308-E5	BRACKET SUB-ASSY, SEAT	1


G818-002E

FIG. 5401
HEAD GUARD & ACCESSORY

5401

MAIN

95/04

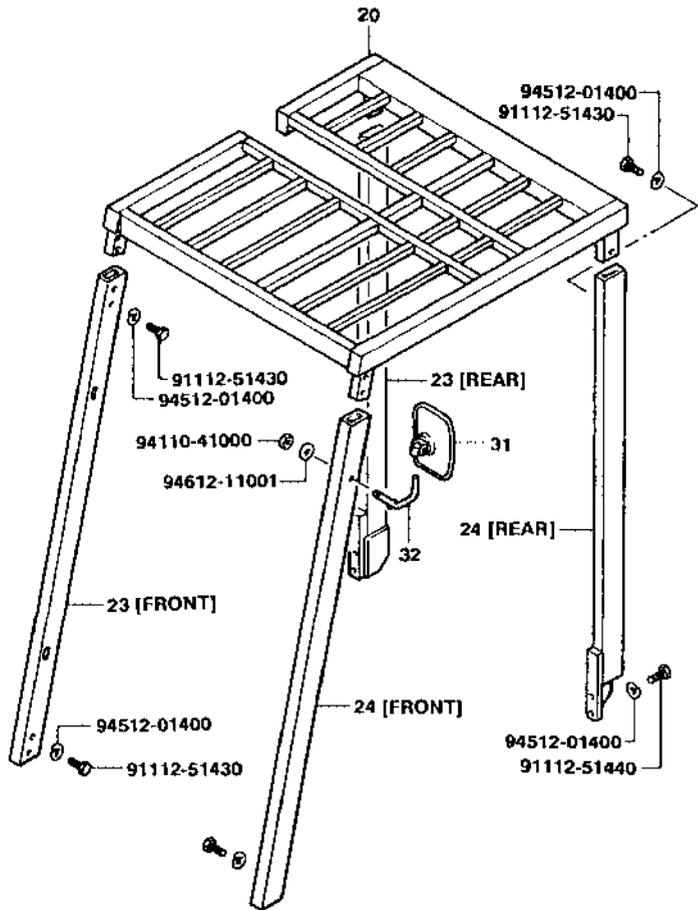

PART NAME	PART NAME	QTY
CODE		
5401-20	GUARD SUB-ASSY, HEAD	1
5401-23	PILLAR SUB-ASSY, RH	1
5401-24	PILLAR SUB-ASSY, LH	1
5401-31	MIRROR SUB-ASSY, BACK	2
5401-32	BRACKET SUB-ASSY, BACK MIRROR	1

5401-186


GB18-001E

FIG. 5405
INDICATOR PLATE

5405

MAIN

97/04

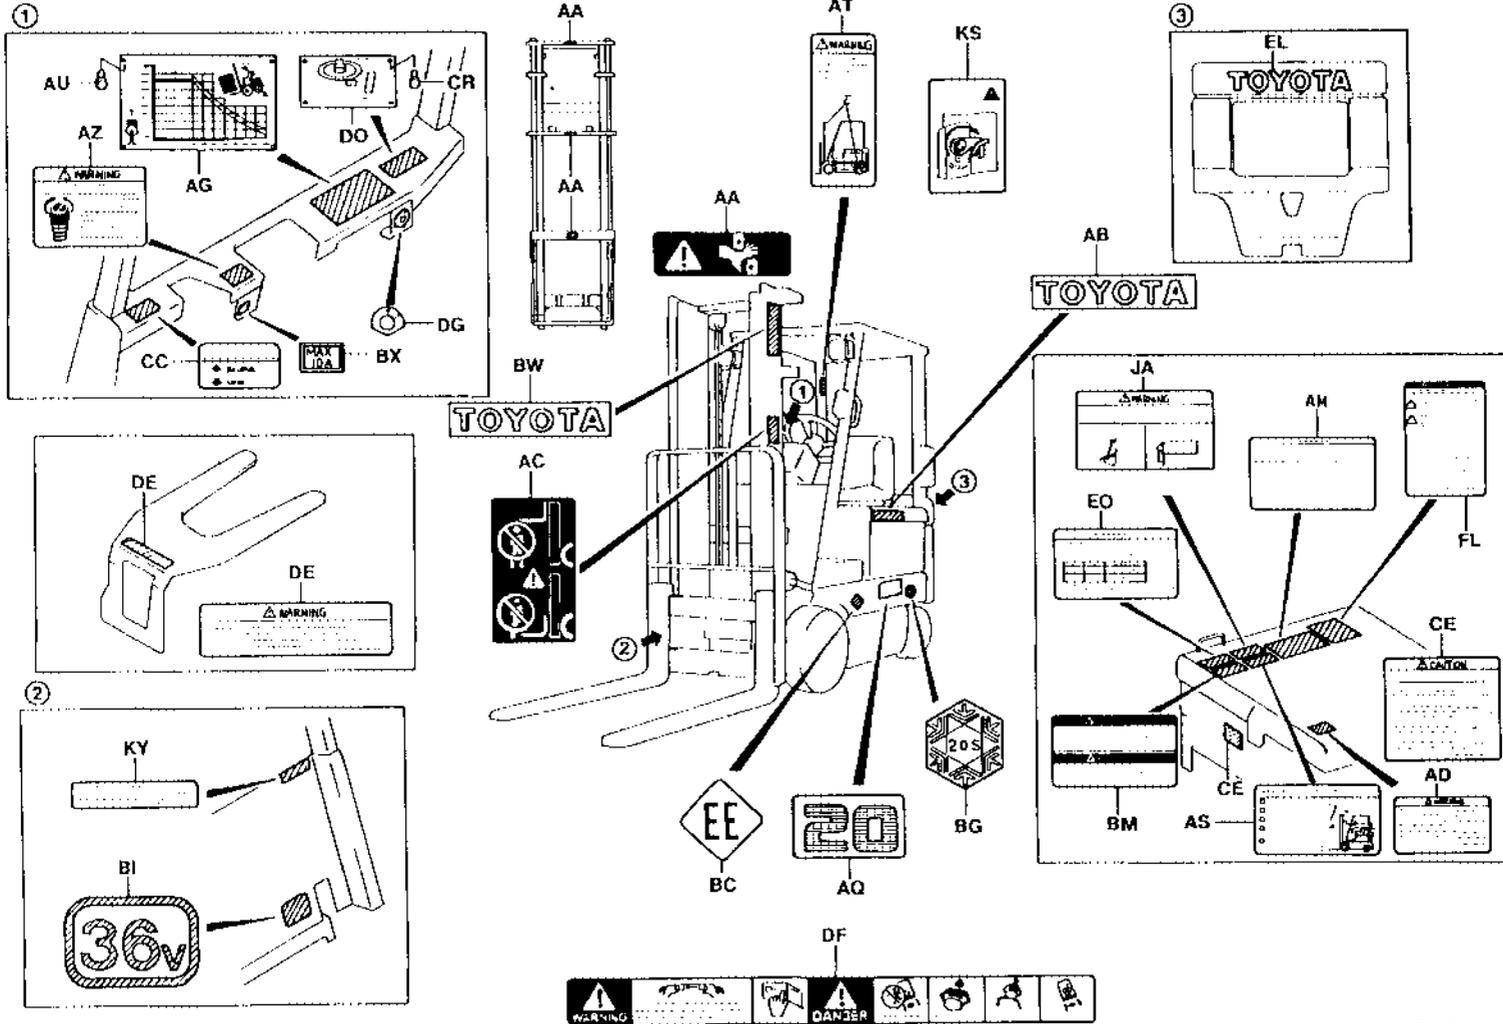

5405-468

G818-001





FIG. 5405
INDICATOR PLATE

5405

MAIN

97/04

E9#

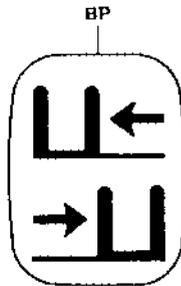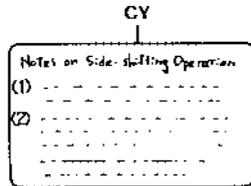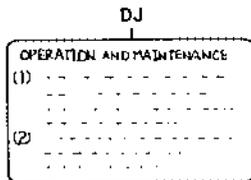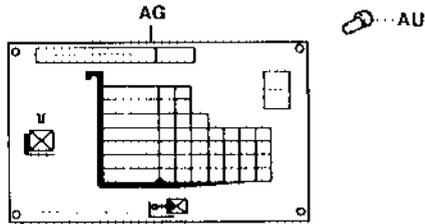


PART NAME	PART NAME	QTY
5405-AA	PLATE, CAUTION	2- 3
5405-AB	MARK, TOYOTA	2
5405-AC	PLATE, CAUTION	2
5405-AD	PLATE, CAUTION	1
5405-AG	PLATE, LOAD INDICATOR	1
5405-AM	PLATE, SERVICE INDICATOR	1
5405-AQ	PLATE, CAPACITY INDICATOR	2
5405-AS	PLATE, INDICATOR	1
5405-AT	PLATE, CAUTION	1
5405-AU	SCREW	4
5405-AZ	PLATE, CAUTION	1
5405-BC	MARK, UL	2
5405-BG	PLATE, TEMPERATURE	2
5405-BI	PLATE, VOLTAGE	1
5405-BM	PLATE, SAFETY DRIVE CHART	1
5405-BP	INDICATOR, SIDE SHIFT	1
5405-BW	MARK, SYMBOL	2
5405-BX	PLATE, INDICATOR	1
5405-CC	PLATE, CAUTION	1
5405-CE	PLATE, CAUTION	1
5405-CY	PLATE, CAUTION	1
5405-DE	PLATE, INDICATOR	1
5405-DF	PLATE, INDICATOR	1
5405-DG	PLATE, CAUTION	1
5405-EI	MARK, TOYOTA	1- 2
5405-EO	PLATE, BATTERY CAPACITY	1
5405-FI	PLATE, CAUTION	1
5405-FL	PLATE, BATTERY CAUTION	1
5405-JA	INDICATOR	1
5405-KS	PLATE, HOOD STAY CAUTION	1

5405-467

G818-002E

11/21

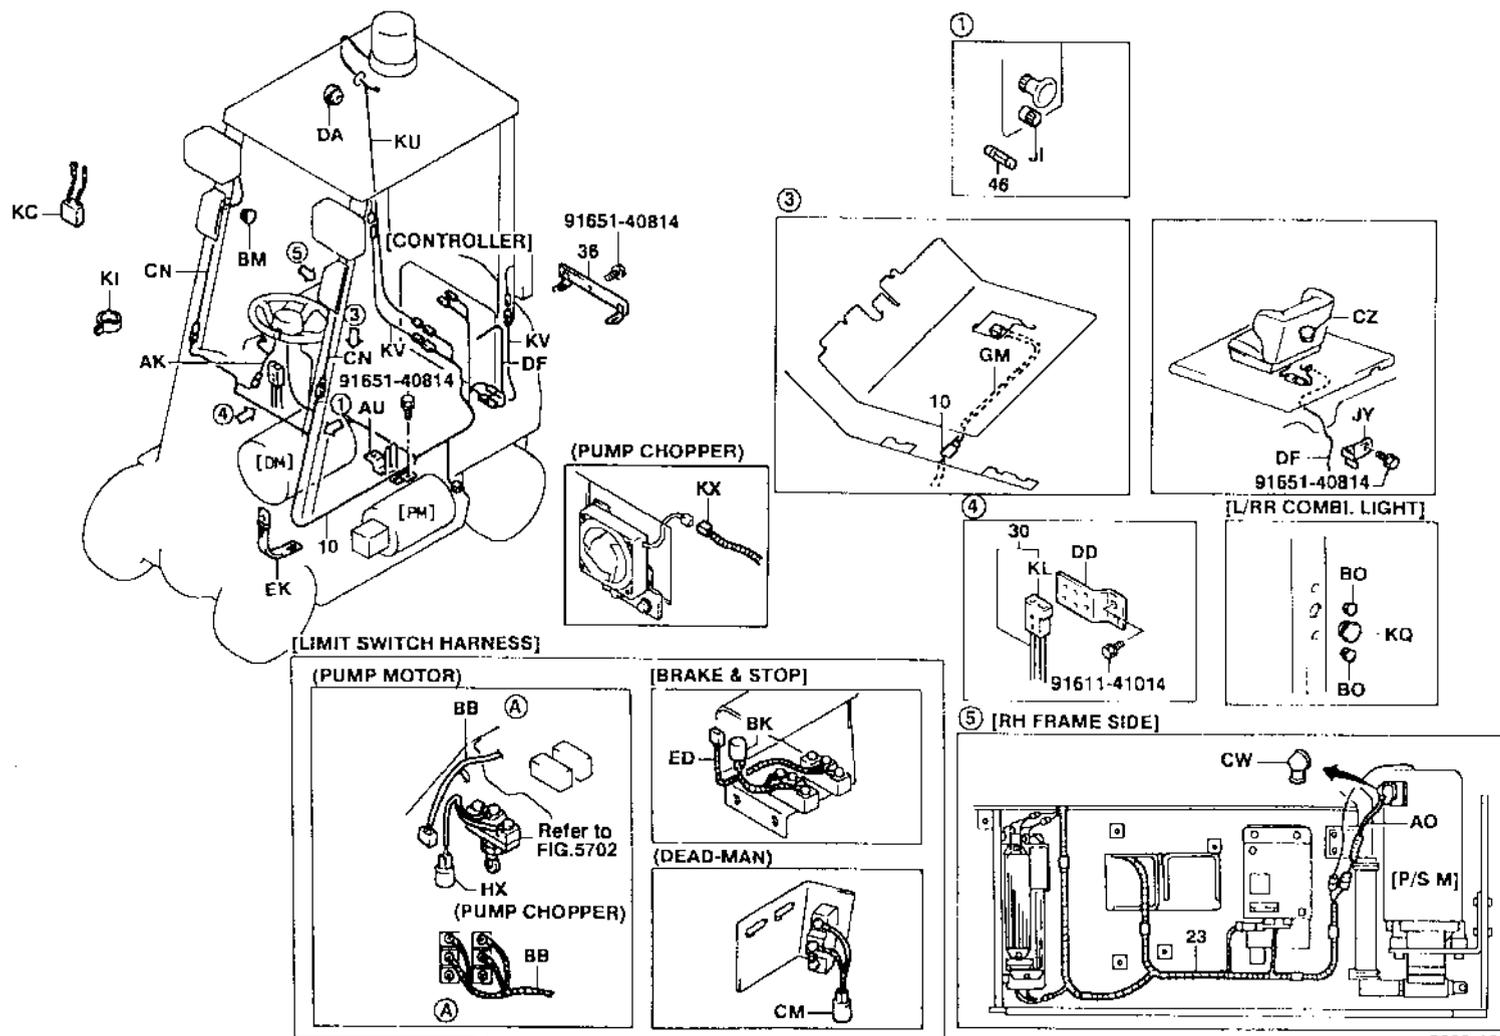


5602-184


G818-001

(2/2)


P/N CODE	MARK
77	P4 - A
78	P5 - B
79	P6 - E
80	P7 - F
BP	P12 - A
CD	P13 - F
CD	N1 - F

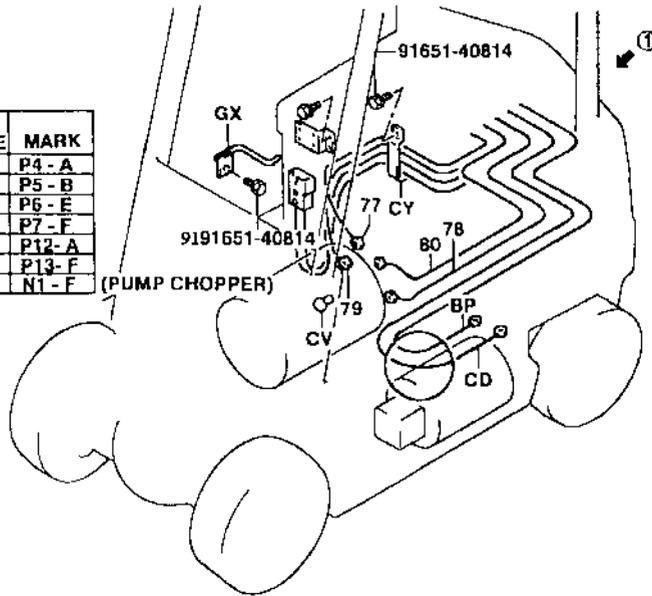

① [STD]

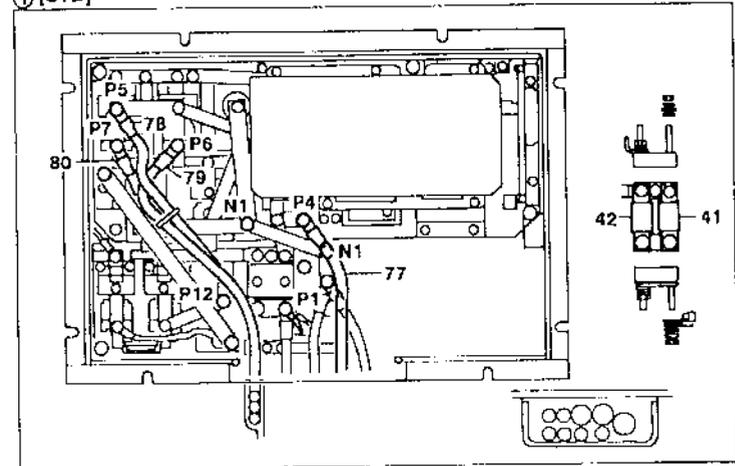

① (PUMP CHOPPER)

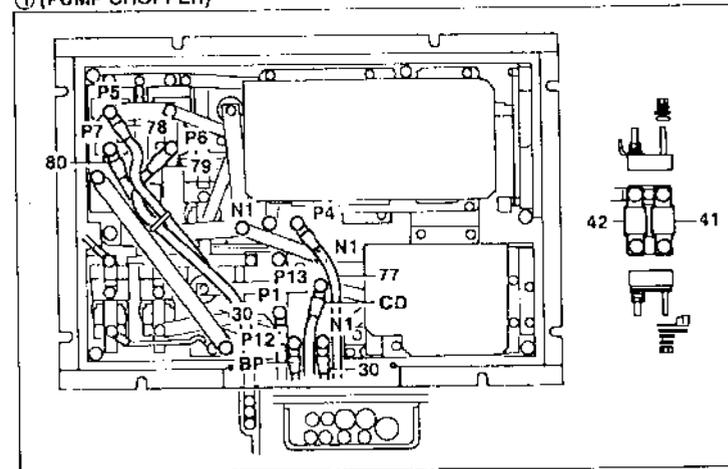

5602-185

GB18-002

FIG. 5602
WIRING & CLAMP


5602

MAIN

95/04

A48

A430,A450

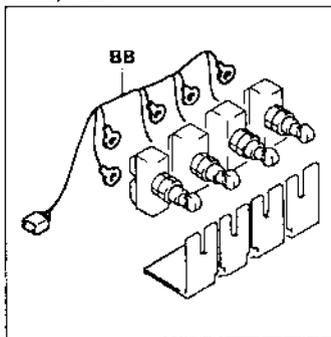

5602-181

PART NAME	PART NAME	QTY
CODE		
5602-10	HARNESS ASSY, WIRING	1
5602-23	WIRING SUB-ASSY, POWER STEERING	1
5602-30	CONNECTOR SUB-ASSY	1
5602-36	CLAMP SUB-ASSY, CABLE	1- 2
5602-41	FUSE (F1)	1
5602-42	FUSE (F2)	1
5602-46	FUSE	2
5602-77	WIRING SUB-ASSY, DRIVE MOTOR	1
5602-78	WIRING SUB-ASSY, DRIVE MOTOR	1
5602-79	WIRING SUB-ASSY, DRIVE MOTOR	1
5602-80	WIRING SUB-ASSY, DRIVE MOTOR	1
5602-AK	HARNESS SUB-ASSY	1
5602-AO	HARNESS, POWER STEERING	1
5602-AU	CLAMP	2
5602-BB	HARNESS, LIMIT SWITCH	1
5602-BK	HARNESS, BRAKE SWITCH	1
5602-BM	GROMMET	2- 4
5602-BO	PLUG	4
5602-BP	WIRING SUB-ASSY, PUMP MOTOR	1
5602-CD	WIRING SUB-ASSY, PUMP MOTOR	1
5602-CM	HARNESS	1
5602-CN	HARNESS SUB-ASSY	2
5602-CV	CAP	6
5602-CW	CAP	2
5602-CY	CLAMP	1
5602-CZ	GROMMET	1
5602-DA	GROMMET	1
5602-DD	BACKET, CONNECTOR	1
5602-DF	HARNESS, DEAD-MAN SWITCH	1
5602-ED	HARNESS	1
5602-EK	WIRE, EARTH	1
5602-GM	HARNESS	1
5602-GX	GUIDE SUB-ASSY, CABLE	1
5602-HT	HARNESS, SWITCH	1
5602-HX	HARNESS, PUMP CHOPPER	1
5602-J1	HOLDER, FUSE	1
5602-JY	CLAMP	1
5602-KC	ABSORBER	1
5602-KJ	CLAMP	2
5602-KL	CONNECTOR	1
5602-KQ	PLUG	2
5602-KU	HARNESS	1
5602-KV	HARNESS	2
5602-KX	HARNESS	1




GB18-005E

FIG. 5611
LAMP

5611

MAIN

97/04

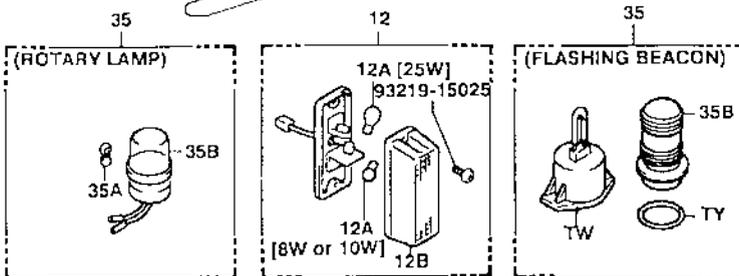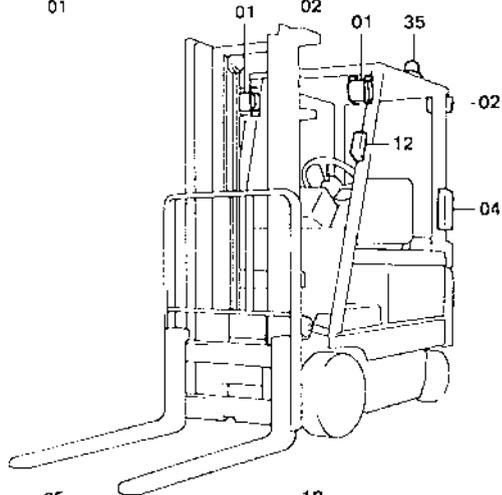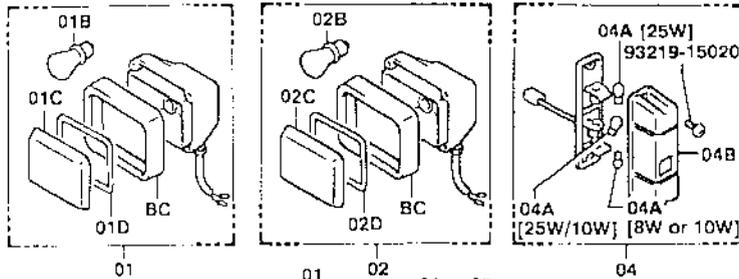

5611-163A

PART NAME CODE	PART NAME	QTY
5611-01	LAMP ASSY, HEAD	2
5611-01B	BULB (FOR HEAD LAMP)	2
5611-01C	LENS (FOR HEAD LAMP)	2
5611-01D	GASKET (FOR HEAD LAMP)	2
5611-02	LAMP ASSY, WORKING	1
5611-02B	BULB (FOR WORKING LAMP)	1
5611-02C	LENS (FOR WORKING LAMP)	1
5611-02D	GASKET (FOR WORKING LAMP)	1
5611-04	LAMP ASSY, REAR COMBINATION	2
5611-04A	BULB (FOR REAR COMBINATION LAMP)	2
5611-04B	LENS (FOR REAR COMBINATION LAMP)	2
5611-12	LAMP ASSY, FRONT COMBINATION	2
5611-12A	BULB (FOR FRONT COMBINATION)	2
5611-12B	LENS (FOR FRONT COMBINATION)	2
5611-35	LAMP ASSY, ROTARY	1
5611-35A	BULB (FOR ROTARY LAMP)	2
5611-35B	LENS (FOR ROTARY LAMP)	1
5611-BC	RIP	1-2
5611-TW	LAMP, STROBE	1
5611-TY	RING, O	1

G818-001E


FIG. 5612
LAMP BRACKET

5612




MAIN

97/04

(ROTARY LAMP)

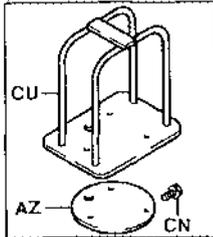

(FLASHING BEACON)

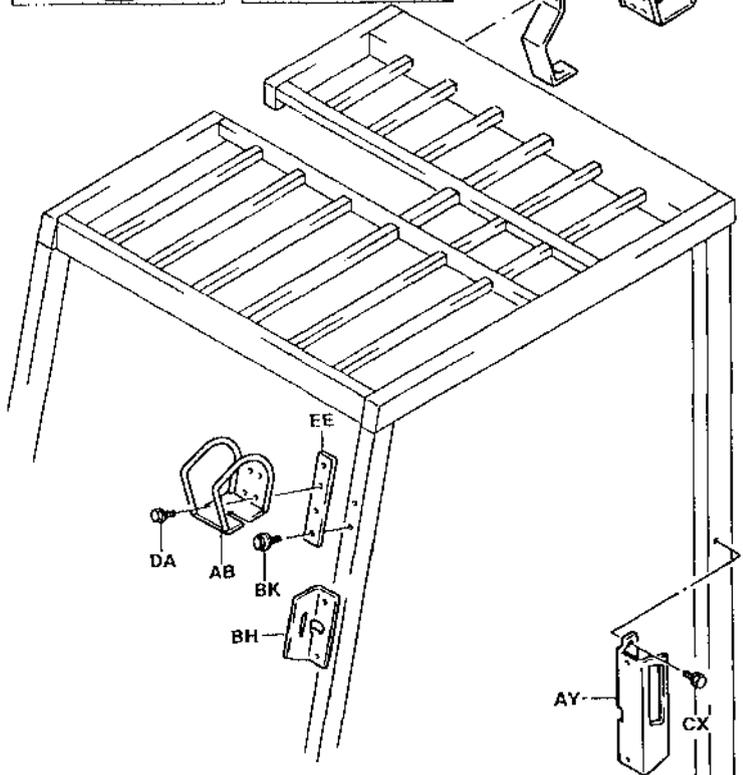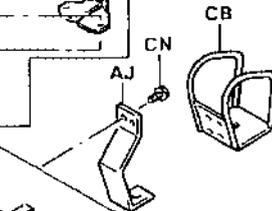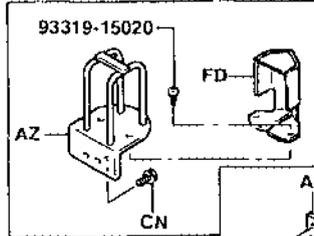

5612-176A

PART NAME	PART NAME	QTY
CODE		
5612-AB	BRACKET SUB-ASSY, HEAD LAMP	2
5612-AJ	BRACKET, WORKING LAMP	1
5612-AY	GUARD SUB-ASSY, LAMP	1
5612-AZ	BRACKET SUB-ASSY, ROTARY LAMP	1
5612-BH	COVER	2
5612-BK	BOLT	4
5612-CB	BRACKET SUB-ASSY, WORKING LAMP	1
5612-CN	BOLT	2
5612-CU	BRACKET	1
5612-CX	BOLT	4
5612-DA	BOLT	4
5612-EE	PLATE	2
5612-FD	COVER SUB-ASSY	1

6818-001E


FIG. 5702
METER & SWITCH

5702

MAIN

97/04

11/21

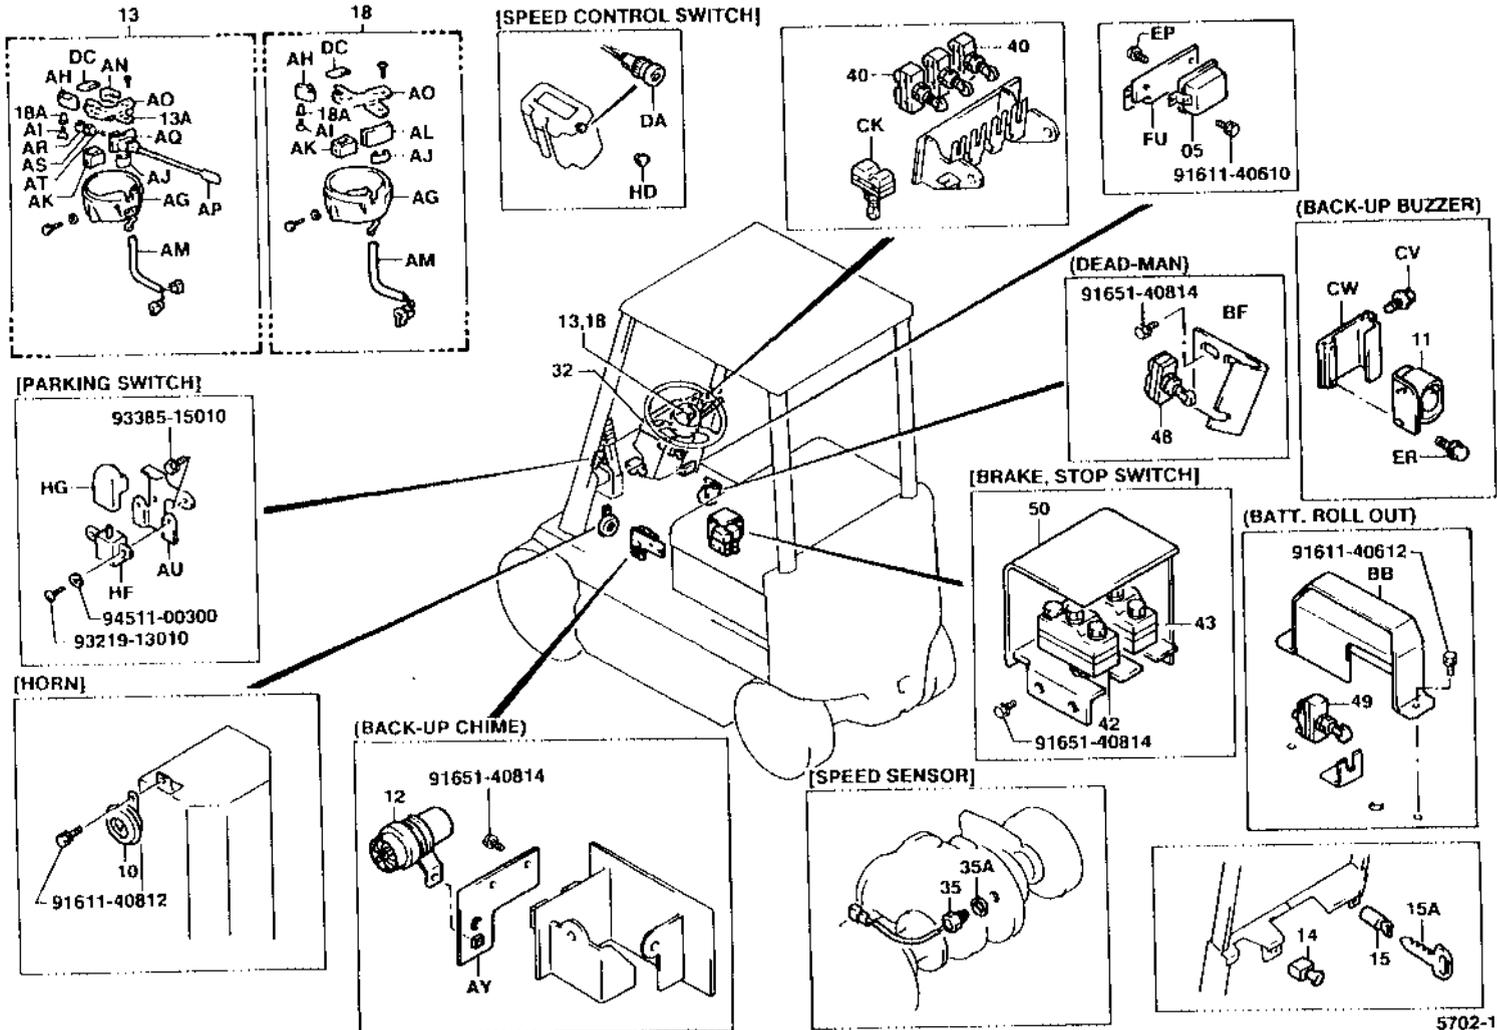

5702-102

G818-001

FIG. 5702
METER & SWITCH


5702

MAIN

97/04


12/71

A44

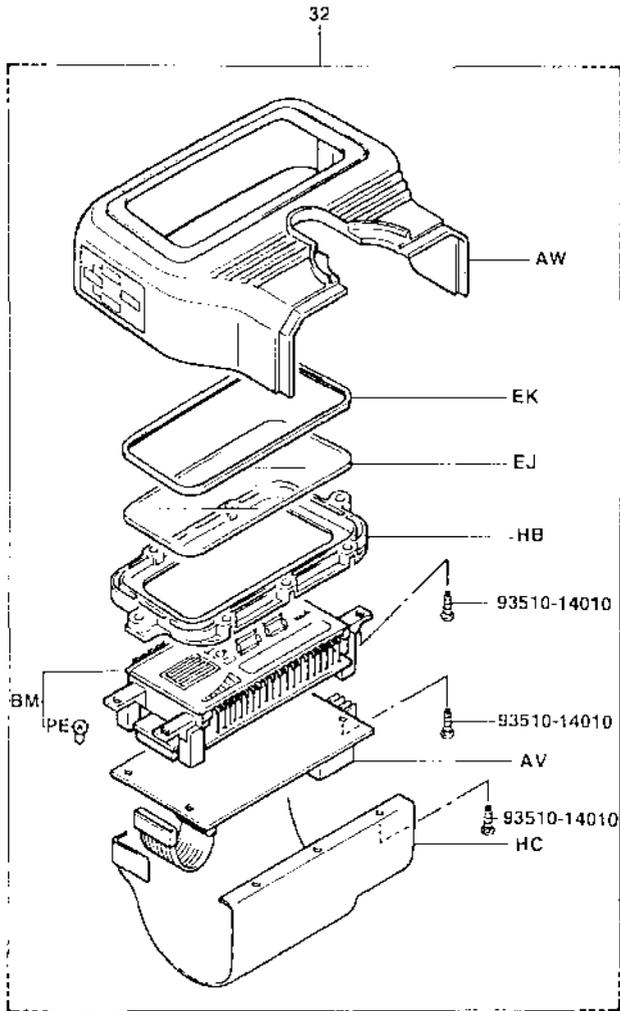

5702-068 B

A430,A450

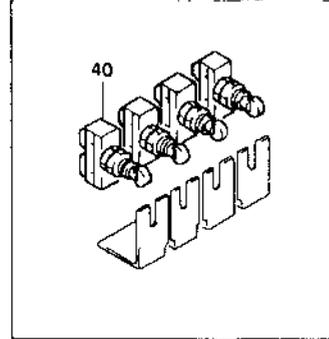

5702-100

G818-002

FIG. 5702
METER & SWITCH

5702

MAIN

9/7/04

PART NAME CODE	PART NAME	QTY
5702-05	RELAY ASSY, FLASHER	1
5702-10	HORN ASSY	1
5702-11	BUZZER ASSY, BACK	1
5702-12	CHIME ASSY, BACK	1
5702-13	SWITCH ASSY, TURN SIGNAL	1
5702-13A	SWITCH SUB-ASSY, MICRO	2
5702-14	SWITCH ASSY, LIGHT CONTROL	1
5702-15	SWITCH ASSY, STARTER	1
5702-15A	KEY, CUT	1
5702-1B	SWITCH ASSY, HORN	1
5702-1BA	CONTACT, HORN	1
5702-32	METER ASSY, COMBINATION	1
5702-35	SENSOR ASSY, PICK UP	1
5702-35A	GASKET	99
5702-40	SWITCH ASSY, LIMIT (FOR PUMP MOTOR)	2-4
5702-42	SWITCH ASSY, LIMIT (FOR BRAKE)	1
5702-43	SWITCH ASSY, LIMIT (FOR STOP LAMP)	1
5702-4B	SWITCH ASSY, LIMIT (FOR DEAD-MAN)	1
5702-49	SWITCH ASSY, LIMIT	1
5702-50	BRACKET, BRAKE SWITCH	1
5702-AG	BODY, SWITCH	1
5702-AH	HOLDER, HORN POINT	1
5702-AT	SPRING, HORN CONTACT	1
5702-AJ	COVER	1
5702-AK	BLICK, LOCKING	1
5702-AL	COVER, RUBBER	1
5702-AM	HARNASS ASSY	1
5702-AN	ACTUATOR	2
5702-AD	PLATE, SWITCH	1
5702-AP	LEVER, SIGNAL	1
5702-AQ	BELLOWS	1
5702-AR	ROLLER	1
5702-AS	HOLDER, ROLLER	1
5702-AT	SPRING	1
5702-AU	BRACKET, PARKING BRAKE	1
5702-AV	BOARD ASSY, METER COMBINATION	1
5702-AW	CASE, METER	1
5702-AY	BRACKET, CHIME	1
5702-BB	COVER, LIMIT SWITCH, NO.1	1
5702-BF	BRACKET, DEAD MAN SWITCH	1
5702-BH	PANEL ASSY	1
5702-CF	TERMINAL	2
5702-CK	SWITCH ASSY, LIMIT	1
5702-CV	BOLT	1
5702-CW	BRACKET SUB-ASSY, BACK BUZZER	1
5702-DA	SWITCH ASSY	1
5702-DC	VARISTOR	1
5702-LJ	GLASS, WINDOW	1
5702-EK	RUBBER, SEAL	1
5702-EP	BOLT	2
5702-ER	BOLT	2
5702-FU	BRACKET	1
5702-HB	PLATE, WINDOW	1
5702-HC	SHIFT, COVER	1
5702-HD	CAP	1
5702-HF	SWITCH ASSY	1
5702-HG	BOLT	1
5702-PE	BULB (FOR PANEL)	4

G818-003E

FIG. 6101
MAST


6101

MAIN


97/06

F5V

FV

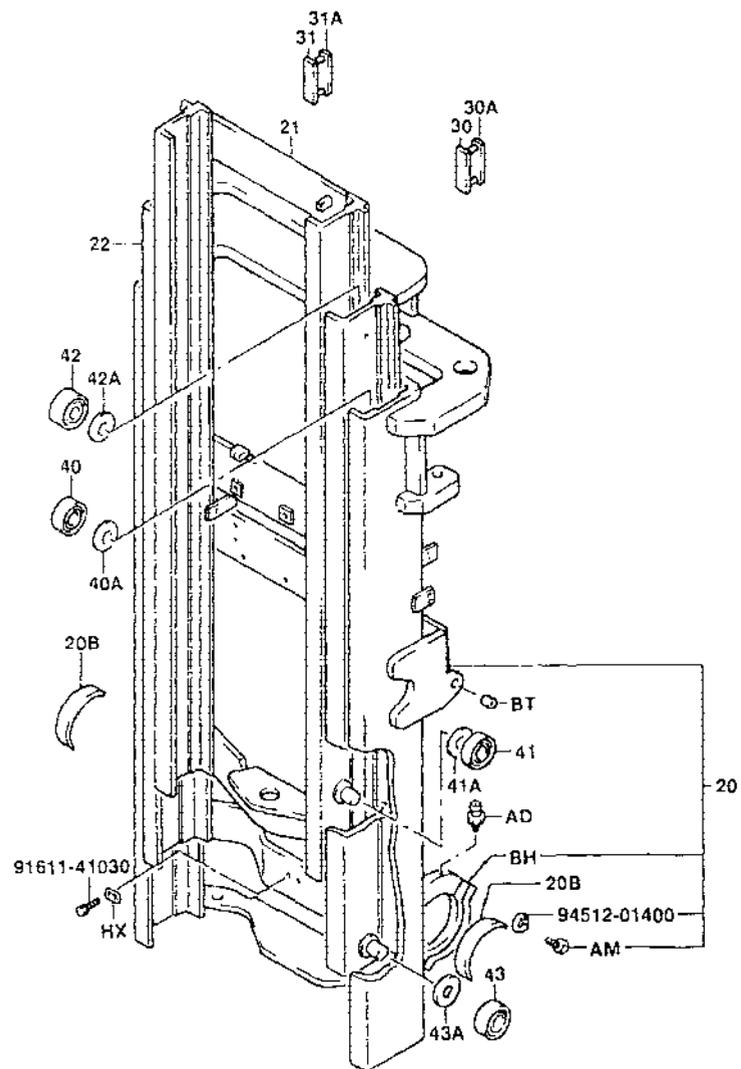

6101-402

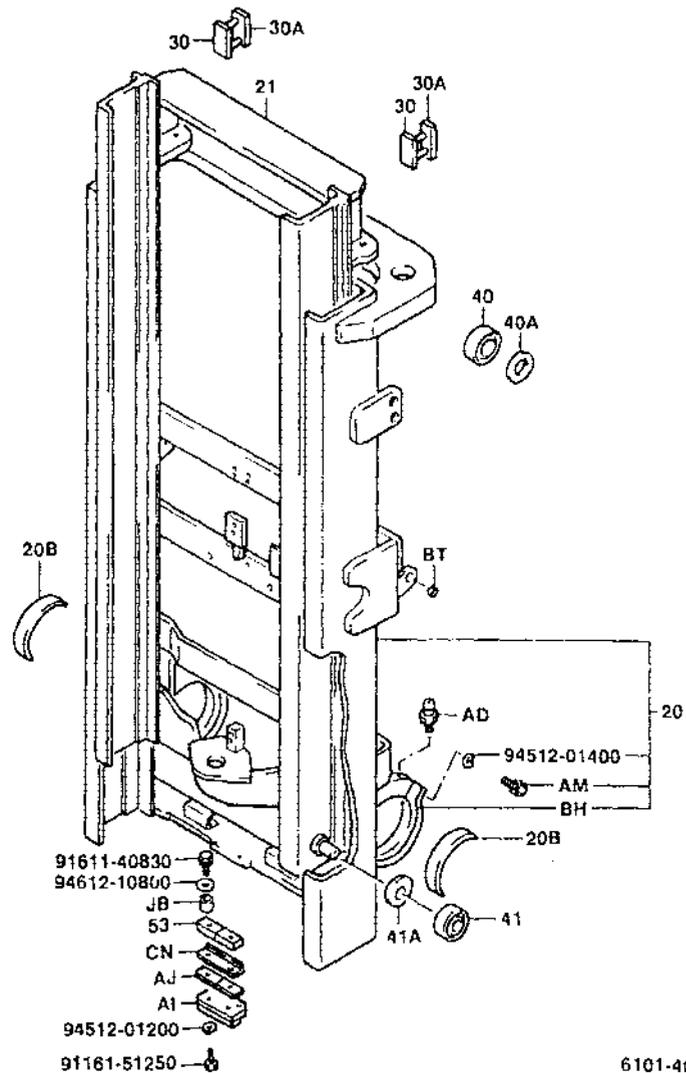

6101-406

GB18-001

FIG. 6101
MAST


6101

MAIN


97/06

QFV

V

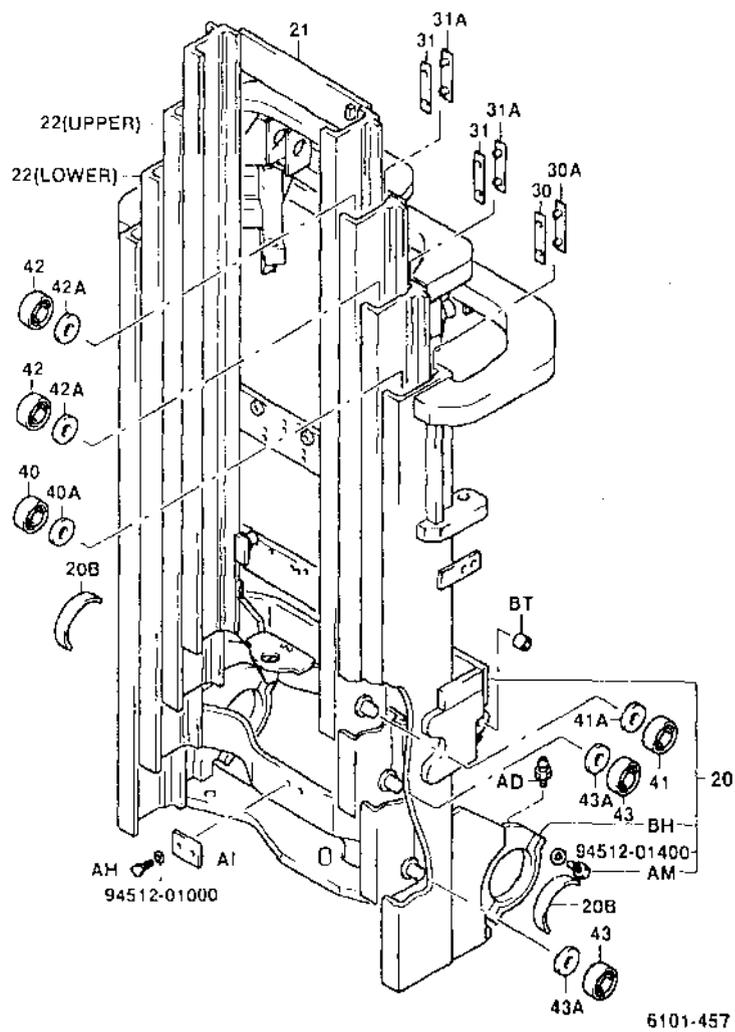

6101-457

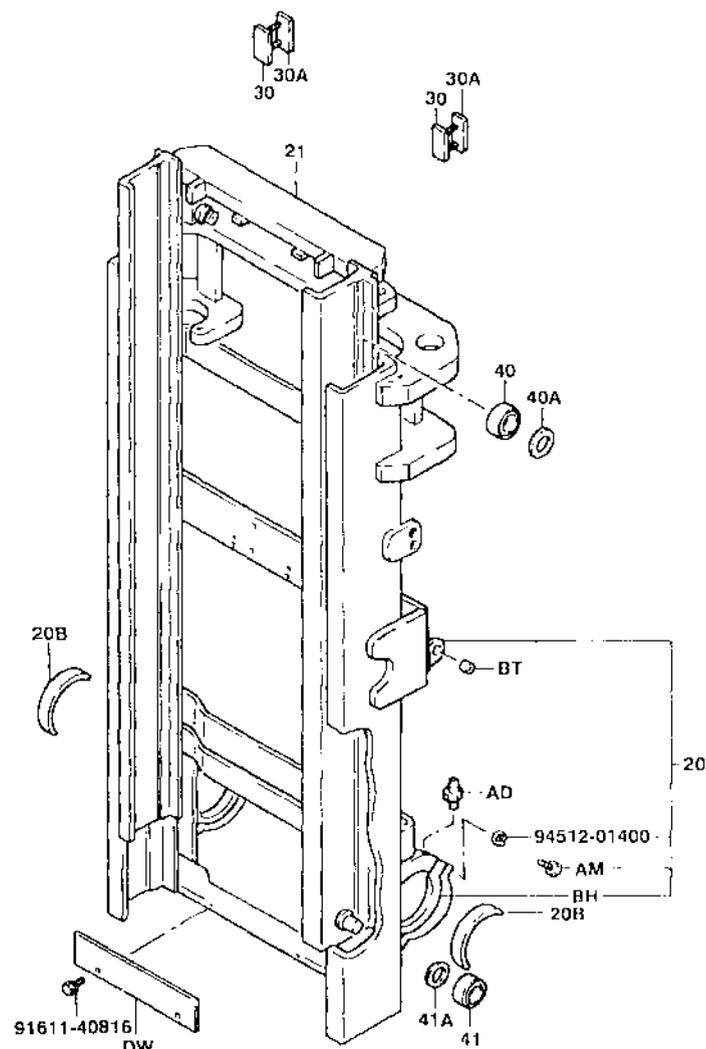

6101-407

G818-002

FIG. 6101
MAST

6101

MAIN

97/06

PART NAME CODE	PART NAME	QTY
6101-20	MAST SUB-ASSY, OUTER	1
6101-20B	BUSHING, MAST SUPPORT	2
6101-21	MAST SUB-ASSY, INNER	1
6101-22	MAST SUB-ASSY, MIDDLE	1
6101-30	STRIP SUB-ASSY, OUTER MAST	2
6101-30A	SHIM, OUTER MAST STRIP	99
6101-31	STRIP SUB-ASSY, MIDDLE MAST	2- 4)
6101-31A	SHIM, MIDDLE MAST STRIP	99
6101-40	ROLLER, LIFT (FOR OUTER MAST)	2
6101-40A	SHIM, LIFT ROLLER (FOR OUTER MAST)	99
6101-41	ROLLER, LIFT (FOR INNER MAST)	2
6101-41A	SHIM, LIFT ROLLER (FOR INNER MAST)	99
6101-42	ROLLER, LIFT (FOR MIDDLE MAST UPPER)	2- 4)
6101-42A	SHIM, LIFT ROLLER (FOR MIDDLE MAST UPPER)	99
6101-43	ROLLER, LIFT (FOR MIDDLE MAST LOWER)	2- 4)
6101-43A	SHIM, LIFT ROLLER (FOR MIDDLE MAST LOWER)	99
6101-55	CUSHION, MAST (FOR INNER MAST)	2
6101-AD	FITTING, GREASE	2
6101-AH	BOLT	2
6101-AI	STOPPER	1
6101-AJ	SHIM, STOPPER	99
6101-AM	BOLT	2
6101-BH	CAP, MAST SUPPORT	2
6101-BT	BUSHING	2
6101-CN	PLATE, STOPPER	1
6101-DW	COVER, HOSE	1
6101-HX	PLATE	1
6101-JB	COLLAR	2

G818-003E






5807

FIG. 6301
LIFT BRACKET & FORK

6301

MAIN

97/04

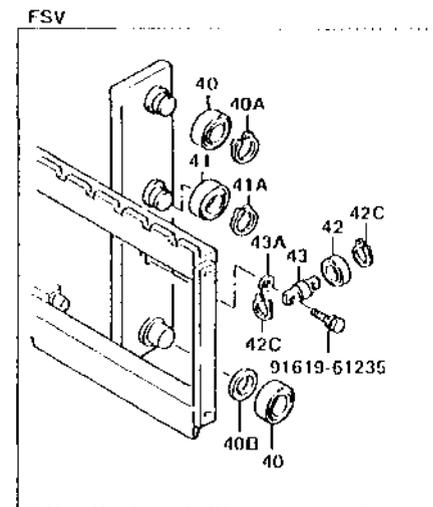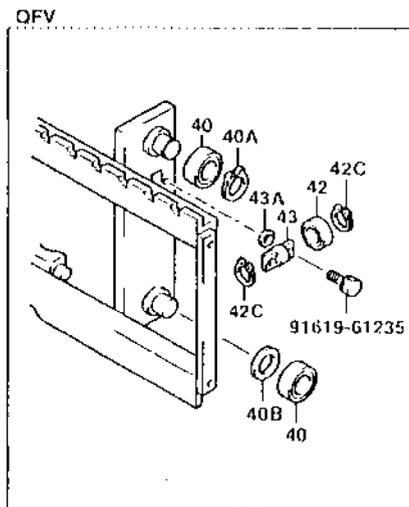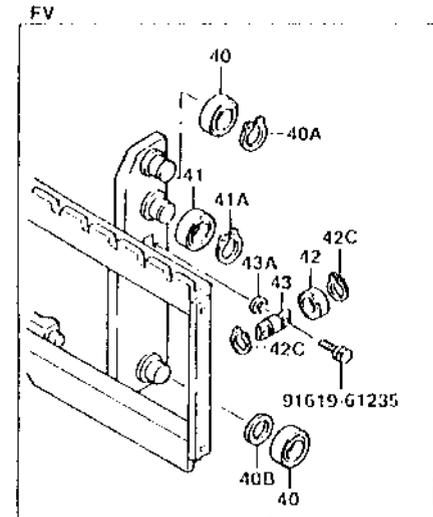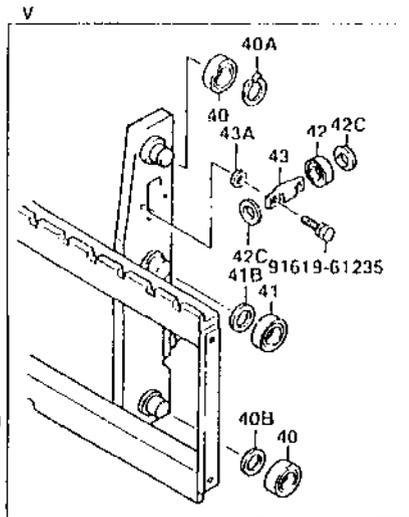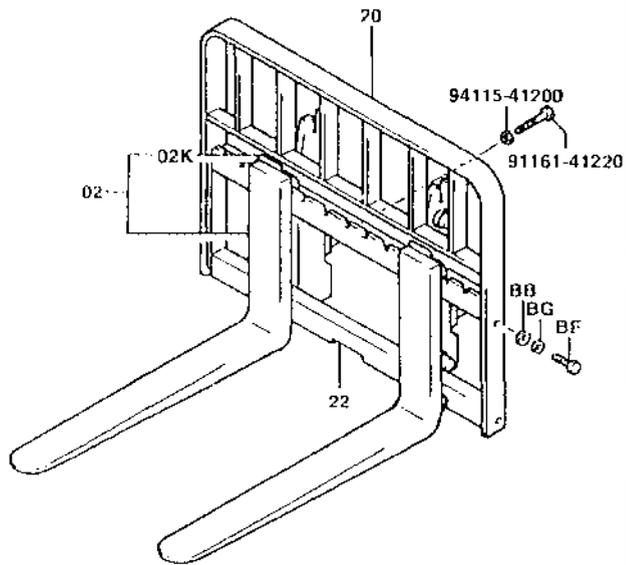

6301-394C

G.818-001

FIG. 6301
LIFT BRACKET & FORK

6301

MAIN

97/04

PART NAME CODE	PART NAME	QTY
6301-02	FORK ASSY	2
6301-02K	LEVER PIN KIT, FORK	2
6301-20	BACKREST SUB-ASSY	1
6301-22	BRACKET SUB-ASSY, LIFT	1
6301-40	ROLLER, LIFT (UPPER, LOWER)	2
6301-40A	RING, SHAFT SNAP (UPPER, LOWER)	2
6301-40B	SHIM, LIFT ROLLER	99
6301-41	ROLLER, LIFT (CENTER)	2
6301-41A	RING, SHAFT SNAP (CENTER)	2
6301-41B	SHIM (CENTER)	99
6301-42	ROLLER, SIDE	2
6301-42C	RING, SHAFT SNAP (FOR SIDE ROLLER)	4
6301-45	SHAFT, SIDE ROLLER	2
6301-45A	SHIM (FOR SIDE ROLLER SHAFT)	99
6301-88	WASHER	2
6301-8F	BOLT	2
6301-8G	WASHER	2

G818-002E

LDA

FIG. 6302
CHAIN & CHAIN WHEEL


6302

MAIN

97/06

F5V

FV

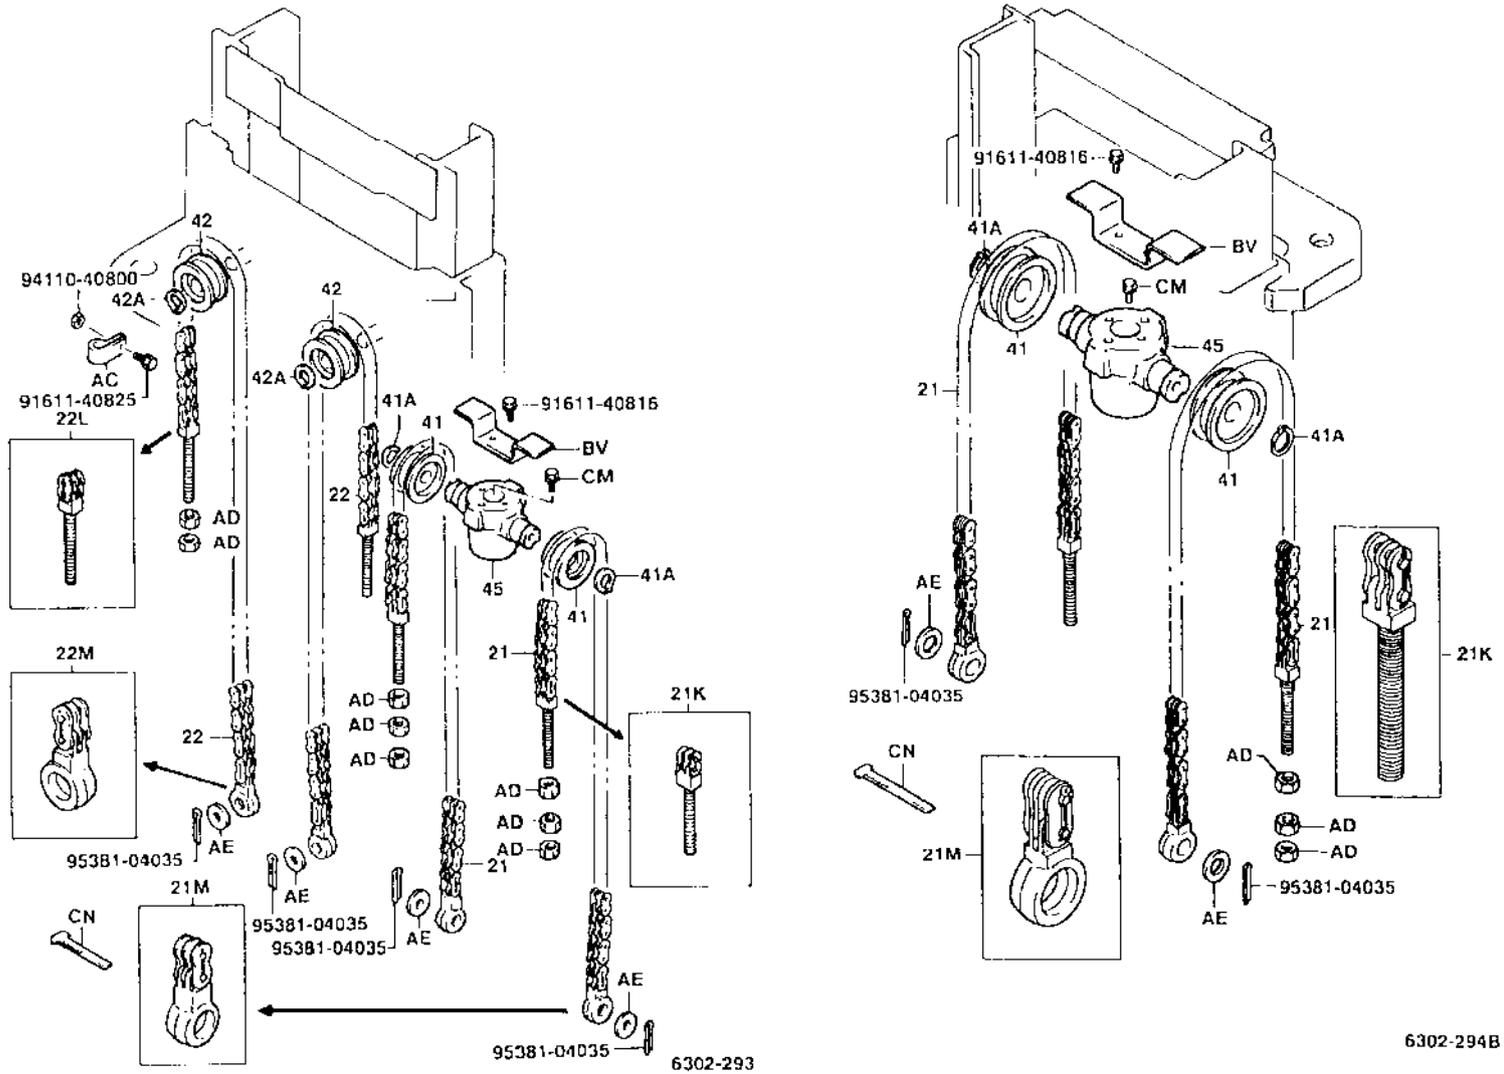

6302-294B

G818-001


FIG. 6302
CHAIN & CHAIN WHEEL

6302

MAIN

97/06

QFV

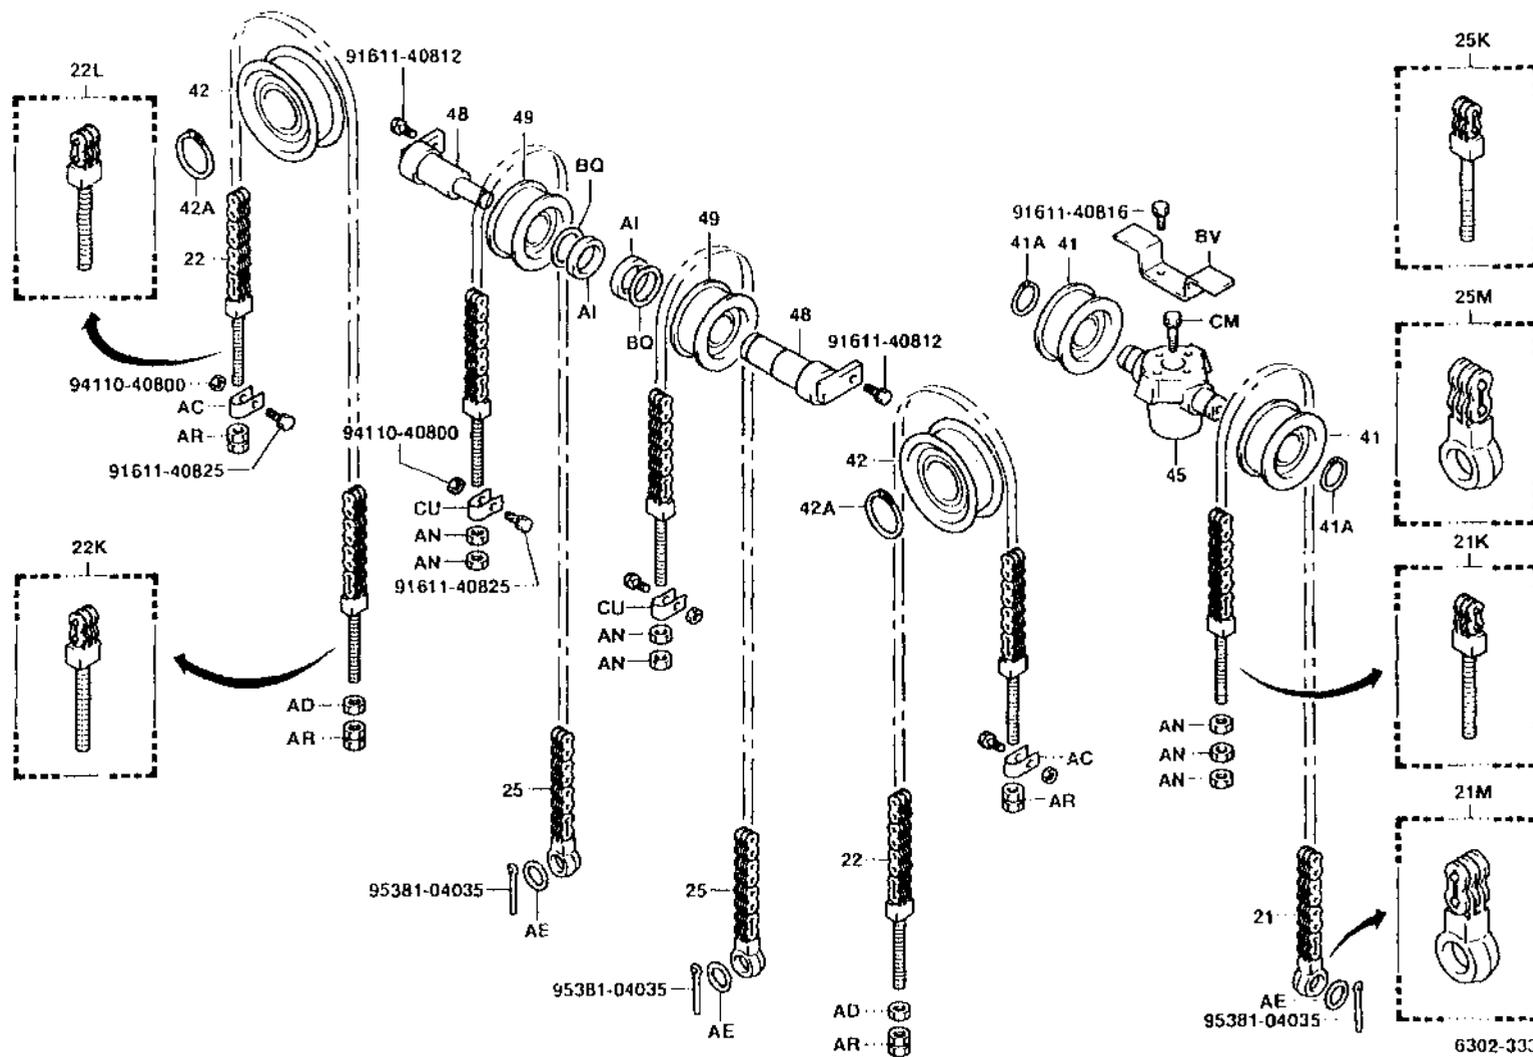

G818-002


FIG. 6302
CHAIN & CHAIN WHEEL

6302

MAIN

97/06

V

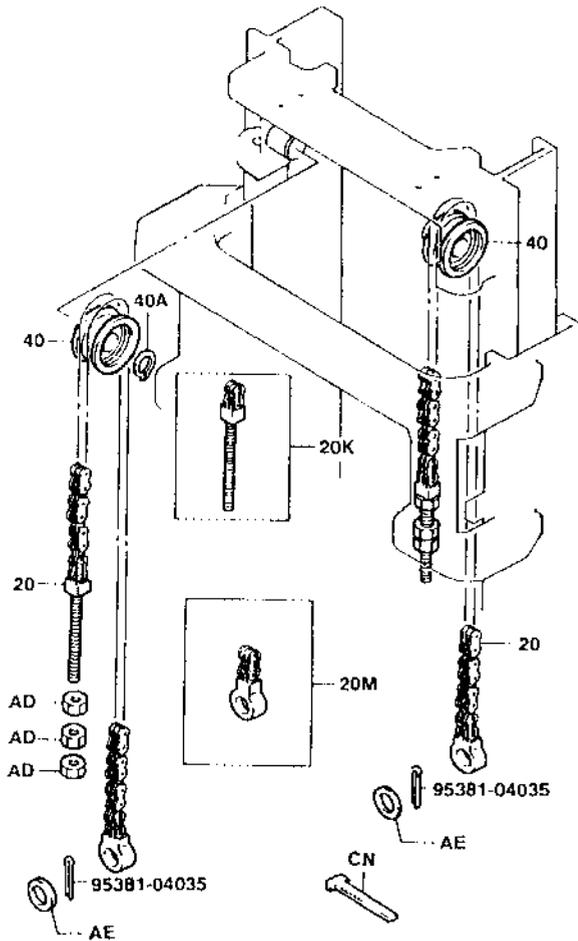

6302-295

PART NAME CODE	PART NAME	QTY
16302-20	CHAIN SUB-ASSY	2
16302-20K	BOLT KIT, CHAIN ANCHOR, NO.1	2
16302-20M	BOLT KIT, CHAIN EYE	2
16302-21	CHAIN SUB-ASSY (FRONT)	1-2
16302-21K	BOLT KIT, CHAIN ANCHOR, NO.1 (FRONT)	2
16302-21M	BOLT KIT, CHAIN EYE (FRONT)	2
16302-22	CHAIN SUB-ASSY (REAR)	1-2
16302-22K	BOLT KIT, CHAIN ANCHOR, NO.1 (REAR)	2
16302-22L	BOLT KIT, CHAIN ANCHOR, NO.2 (REAR)	2
16302-22M	BOLT KIT, CHAIN EYE	2
16302-25	CHAIN	2
16302-25K	BOLT KIT, CHAIN ANCHOR	2
16302-25M	BOLT KIT, CHAIN EYE	2
16302-40	WHEEL, CHAIN	2
16302-40A	RING, SHAFT SNAP (FOR CHAIN WHEEL)	2
16302-41	WHEEL, CHAIN (FRONT)	2
16302-41A	RING, SHAFT SNAP (FOR FRONT CHAIN WHEEL)	2
16302-42	WHEEL, CHAIN (REAR)	2
16302-42A	RING, SHAFT SNAP (FOR CHAIN WHEEL)	2
16302-45	SUPPORT, CHAIN WHEEL	1
16302-48	SHAFT, CHAIN WHEEL	1
16302-49	WHEEL, CHAIN	2
16302-AC	CLAMP, CHAIN ANCHOR BOLT	2
16302-AD	NUT, HEXAGON	2-10
16302-AE	WASHER, CHAIN SPECIAL	2-4
16302-A1	SPACER	2
16302-AN	NUT, HEXAGON	10
16302-AR	NUT, LOCK	4
16302-BQ	SHIM	29
16302-BV	STOPPER, CHAIN	1
16302-CM	BOLT	1
16302-CN	GAGE, CHAIN	1
16302-CU	CLAMP, CHAIN ANCHOR BOLT	2



G818-003E

FIG. 6501
LIFT CYLINDER

6501

MAIN

97/06

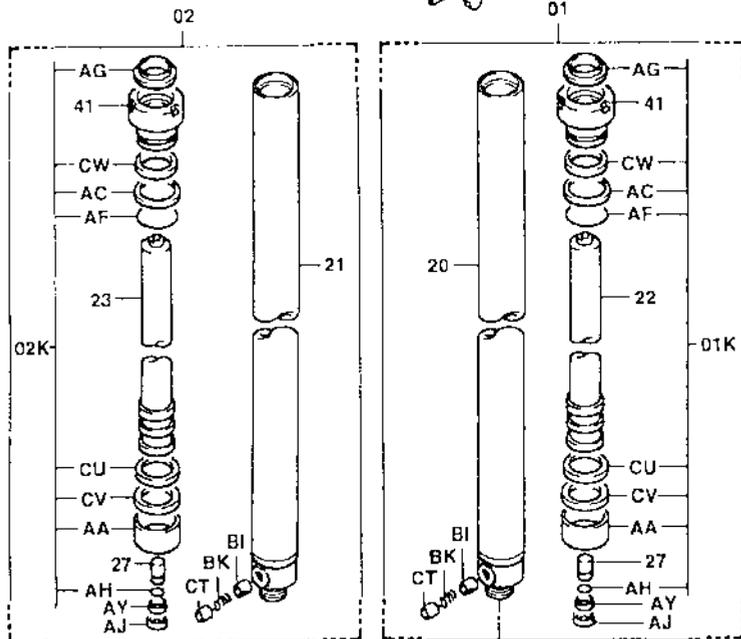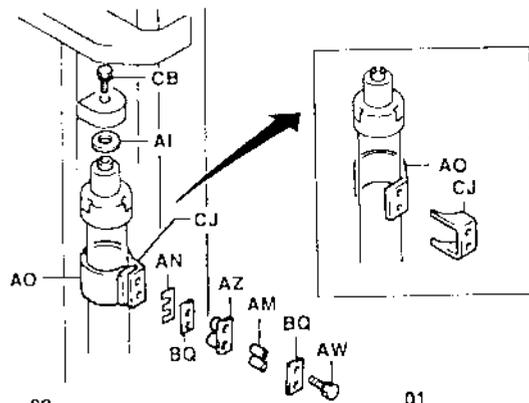

CD
91611-41014 6501-092A

PART NAME CODE	PART NAME	QTY
6501-01	CYLINDER ASSY, LIFT, RH	1
6501-01K	CYLINDER O/H KIT, LIFT, RH	1
6501-02	CYLINDER ASSY, LIFT, LH	1
6501-02K	CYLINDER O/H KIT, LIFT, LH	1
6501-20	CYLINDER SUB-ASSY, LIFT, RH	1
6501-21	CYLINDER SUB-ASSY, LIFT, LH	1
6501-22	ROD SUB-ASSY, LIFT CYLINDER, RH	1
6501-23	ROD SUB-ASSY, LIFT CYLINDER, LH	1
6501-27	VALVE, CHECK	2
6501-41	COVER, LIFT CYLINDER	2
6501-AA	RING, WEAR	2
6501-AC	RING, BACK UP	2
6501-AF	RING, O	2
6501-AG	SEAL, DUST	2
6501-AH	RING, O	2
6501-AI	SHIM	99
6501-AJ	CLIP	2
6501-AH	SPACER	4
6501-AN	SHIM	99
6501-AD	SUPPORT, LIFT CYLINDER	2
6501-AW	BOLT	4
6501-AY	WASHER	2
6501-AZ	RUBBER	2
6501-BI	PISTON	2
6501-BK	SPRING	2
6501-BQ	PLATE	4
6501-CB	BOLT	2
6501-CD	WASHER, PLATE	2
6501-CJ	PLATE	2
6501-CT	GUIDE, SPRING	2
6501-CU	RING	4
6501-CV	SEAL, PISTON	2
6501-CW	SEAL, ROD	2

G818-001E

FIG. 6502
FRONT LIFT CYLINDER


6502

MAIN


97/06

F5V,0FV

FV

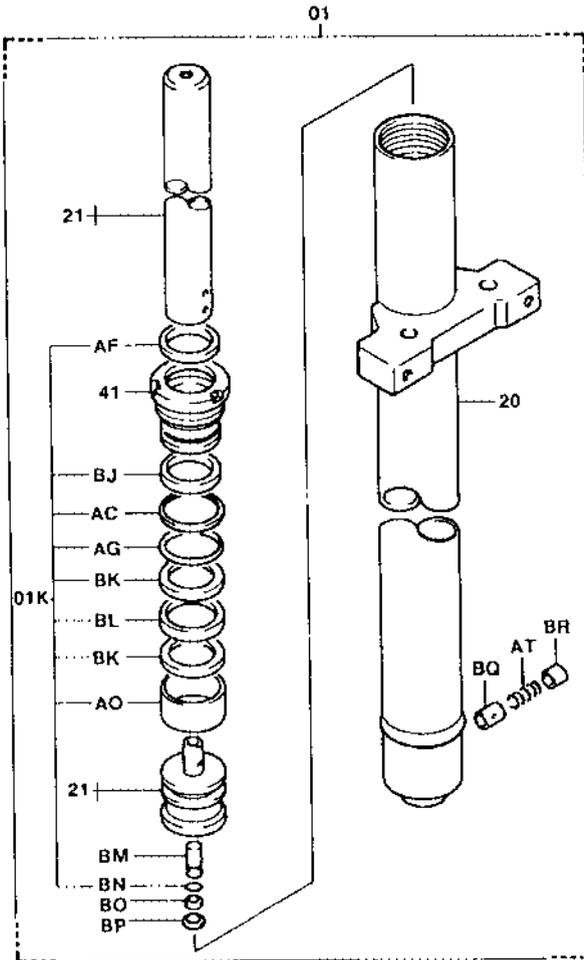

6502-076

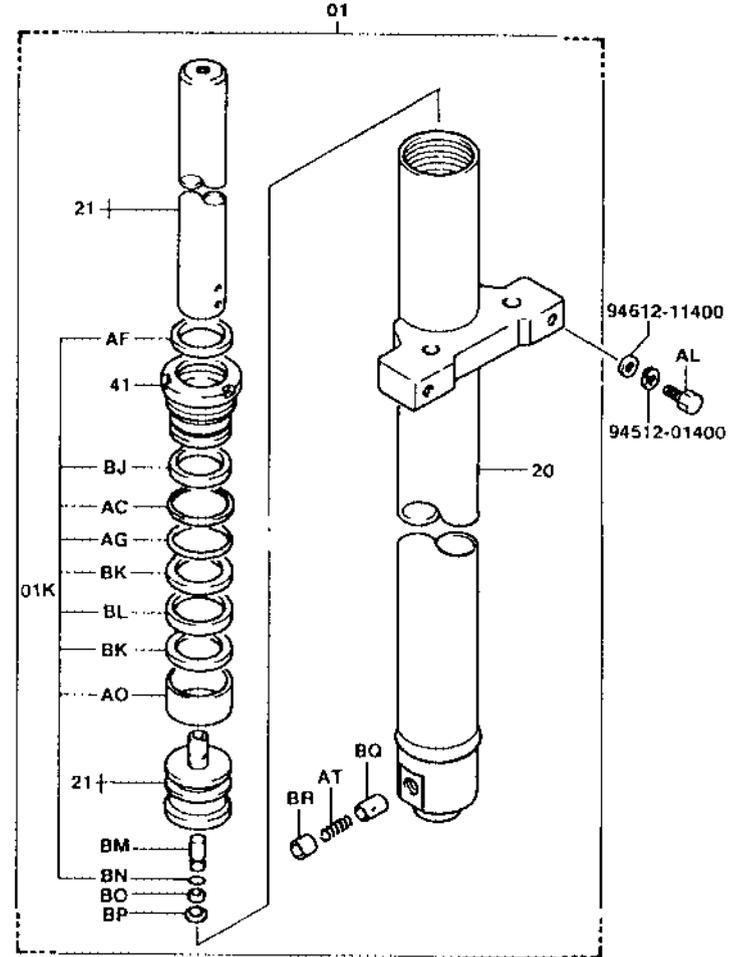

6502-075

G818-001

FIG. 6502
FRONT LIFT CYLINDER

6502

MAIN

97/06

PART NAME CODE	PART NAME	QTY
6502-01	CYLINDER ASSY, LIFT	1
6502-01K	CYLINDER O/H KIT, LIFT	1
6502-20	CYLINDER SUB-ASSY, LIFT	1
6502-21	ROD SUB-ASSY, LIFT CYLINDER	1
6502-41	COVER, LIFT CYLINDER	1
6502-AC	RING, BACK UP	1
6502-AF	SEAL, DUST	1
6502-AG	RING, O	1
6502-AL	BOLT	2
6502-AD	RING, WEAR	1
6502-AT	SPRING	1
6502-BJ	SEAL, ROD	1
6502-BX	RING	2
6502-BL	SEAL, PISTON	1
6502-BM	VALVE, CHECK	1
6502-BN	RING, O	1
6502-BO	WASHER	1
6502-BP	CLIP	1
6502-BQ	PISTON, FUSE	1
6502-BR	GUIDE, SPRING	1

G818-002E




FIG. 6503
REAR LIFT CYLINDER

6503

MAIN 97/06


FSV

FV

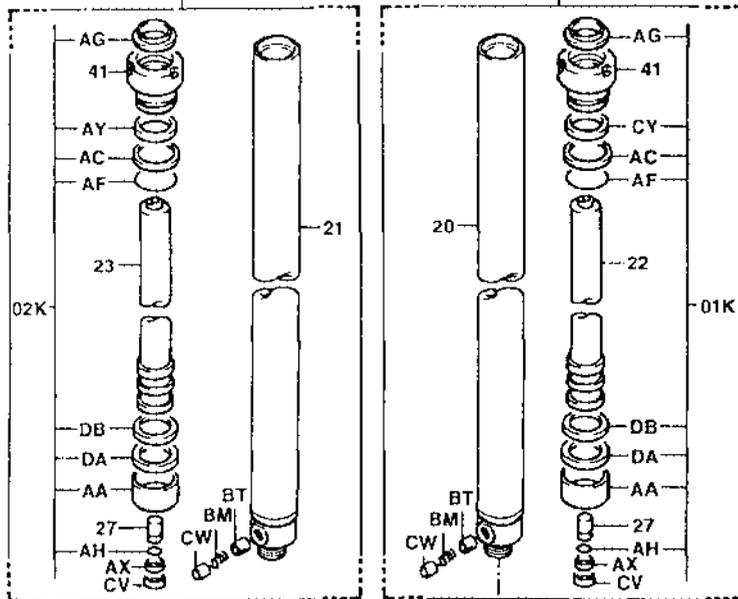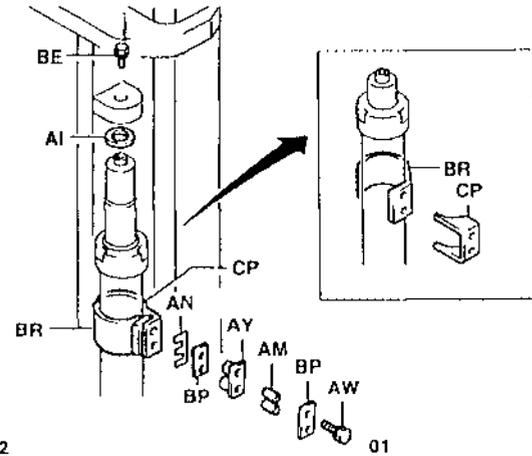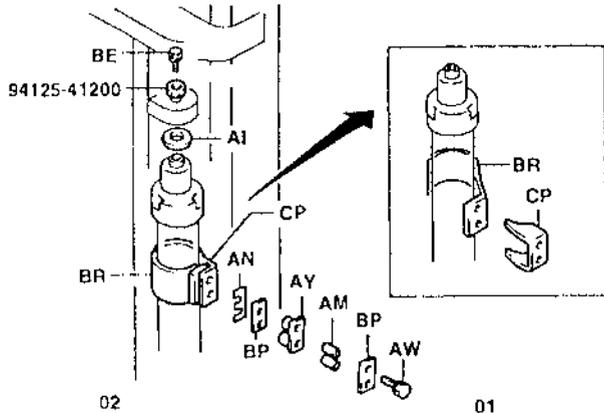

91611-41014

6503-082A

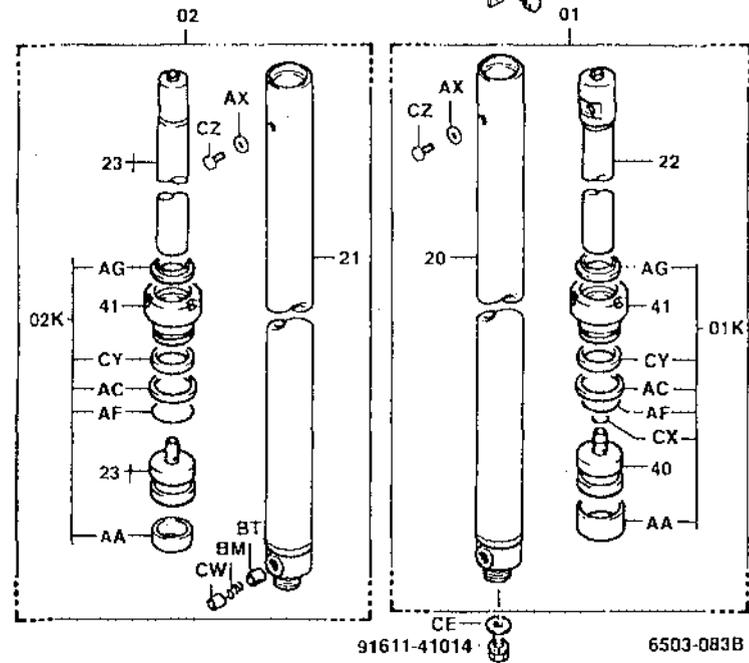

91611-41014

6503-083B

G818-001



FIG. 6503
REAR LIFT CYLINDER

6503

MAIN

97/06

QFV

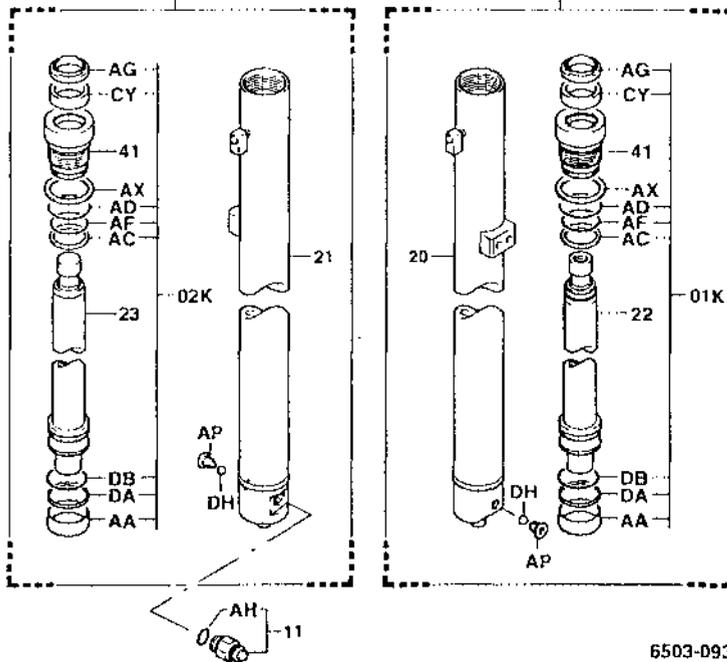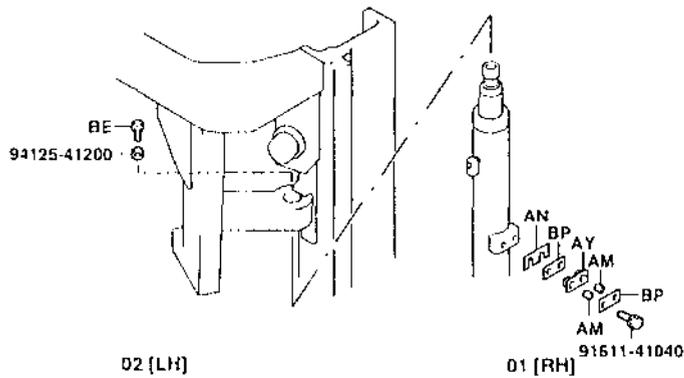

6503-093

PART NAME	PART NAME	QTY
CODE		
6503-01	CYLINDER ASSY, LIFT, RH	1
6503-01K	CYLINDER O/H KIT, LIFT, RH	1
6503-02	CYLINDER ASSY, LIFT, LH	1
6503-02K	CYLINDER O/H KIT, LIFT, LH	1
6503-11	VALVE ASSY, SAFETY DOWN	1
6503-20	CYLINDER SUB-ASSY, LIFT, RH	1
6503-21	CYLINDER SUB-ASSY, LIFT, LH	1
6503-22	ROD SUB-ASSY, LIFT CYLINDER, RH	1
6503-23	ROD SUB-ASSY, LIFT CYLINDER, LH	1
6503-27	VALVE, CHECK	2
6503-40	PISTON, LIFT CYLINDER	1
6503-41	COVER, LIFT CYLINDER	2
6503-AA	RING, WEAR	2
6503-AC	RING, BACK UP	2
6503-AD	RING, O	2
6503-AF	RING, O	2
6503-AG	SEAL, DUST	2
6503-AH	RING, O	1
6503-AI	SHIM	99
6503-AM	SPACER	4
6503-AN	SHIM	99
6503-AP	PLUG	2
6503-AW	BOLT	4
6503-AX	WASHER	2
6503-AY	RUBBER	2
6503-BE	BOLT, STOPPER	2
6503-BM	SPRING	1
6503-BP	PLATE	4
6503-BR	SUPPORT SUB-ASSY	2
6503-BT	PISTON SUB-ASSY	1
6503-CE	WASHER	2
6503-CJ	BOLT	2
6503-CP	PLATE	2
6503-CV	CLIP	2
6503-CW	GUIDE, SPRING	1
6503-CX	WIRE	2
6503-CY	SEAL, ROD	2
6503-CZ	SCREW, BLEED	2
6503-DA	SEAL, PISTON	2
6503-DB	RING	2
6503-DH	BALL	2


G818-002E

FIG. 6511
TILT CYLINDER



6511

MAIN

96/03

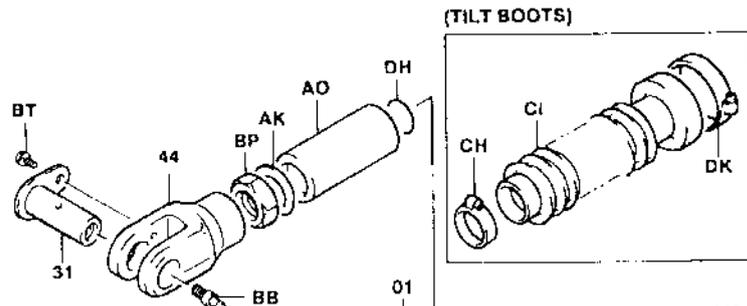

(TILT BOOTS)

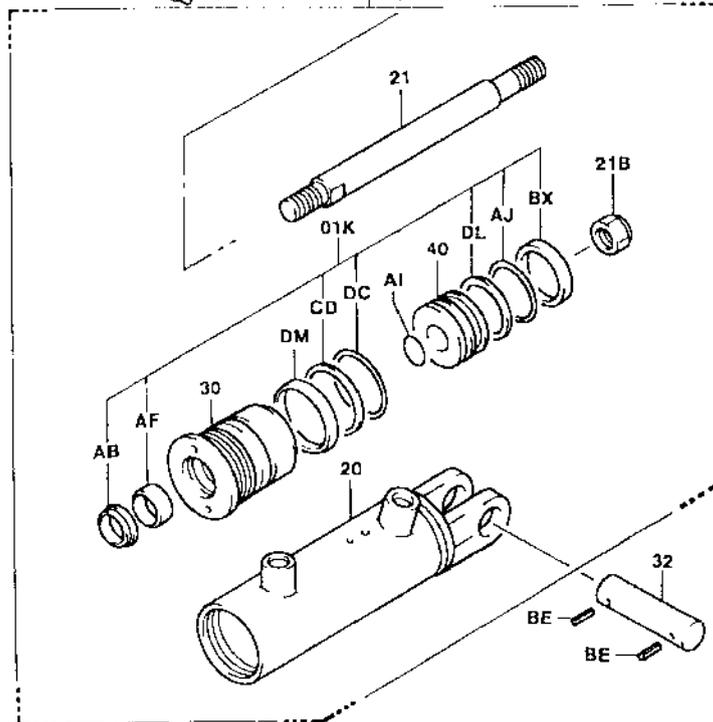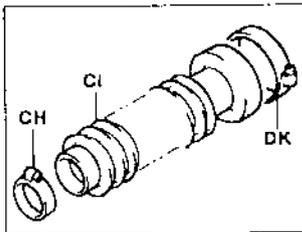

6511-186A

PART NAME CODE	PART NAME	QTY
6511-01	CYLINDER ASSY, TILT	1
6511-01K	CYLINDER D/H KIT, TILT	2
6511-20	CYLINDER SUB-ASSY, TILT	1
6511-21	ROD SUB-ASSY, TILT CYLINDER PISTON	2
6511-21B	NUT, CASTLE	2
6511-30	GUIDE SUB-ASSY, TILT CYLINDER ROD	2
6511-31	PIN SUB-ASSY, TILT CYLINDER, FR	2
6511-32	PIN SUB ASSY, TILT CYLINDER, RR	2
6511-40	PISTON, TILT CYLINDER	2
6511-44	JOINT, PISTON ROD	1
6511-AB	SEAL, DUST	2
6511-AF	PACKING, U	2
6511-AI	RING, O	2
6511-AJ	PACKING, U	2
6511-AK	SHIM, TILT CONTROL	2
6511-AD	SPACER, TILT CONTROL	2
6511-BB	FITTING, GREASE	2
6511-BE	PIN, SPRING	4
6511-BP	NUT	2
6511-BT	BDLT	2
6511-BX	RING, WEAR	2
6511-CD	RING, BACK UP	2
6511-CH	CLAMP	2
6511-CI	BOOT, CYLINDER	2
6511-DC	SEAL, OIL	2
6511-DH	RING, O	2
6511-DK	CLAMP	2
6511-DL	SEAL EXPANDER, PISTON	2
6511-DM	RING	2


G818-001E

FIG. 6701
OIL PUMP

6701

MAIN

96/03

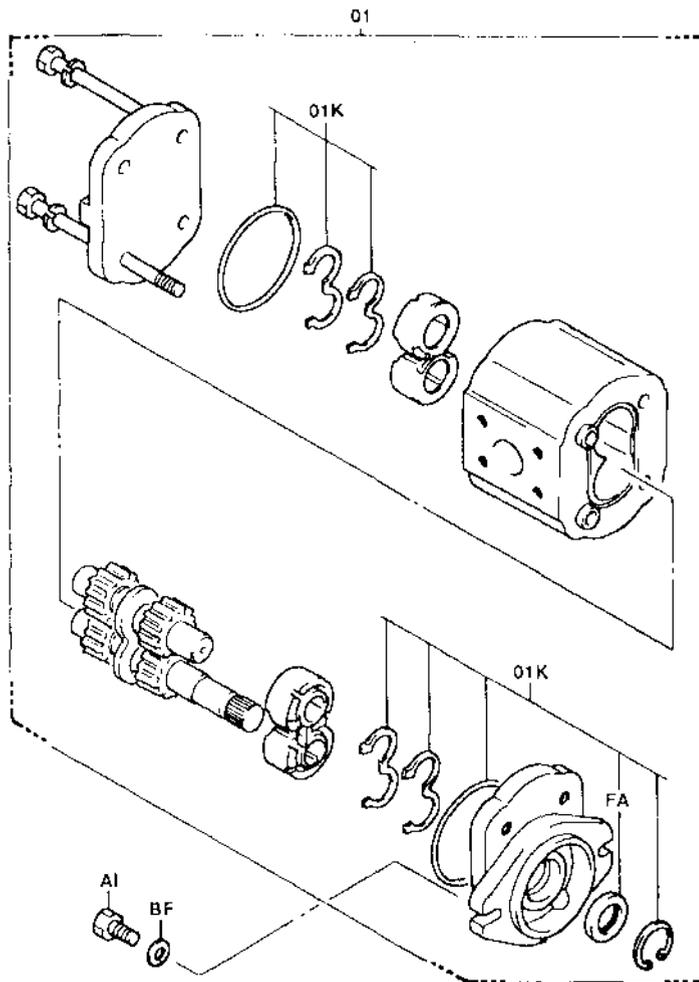

6701-135

CLIF	PART NAME	QTY
6701-01	PUMP ASSY, OIL	1
6701-01K	PUMP D/H KIT, OIL	1
6701-A1	BOLT	2
6701-BF	WASHER	2
6701-FA	SEAL, SHAFT	1

GNTB-001E

FIG. 6705
OIL CONTROL VALVE


6705

MAIN

97/06

(2-WAY) 11/21

[01K=(INCL.)]

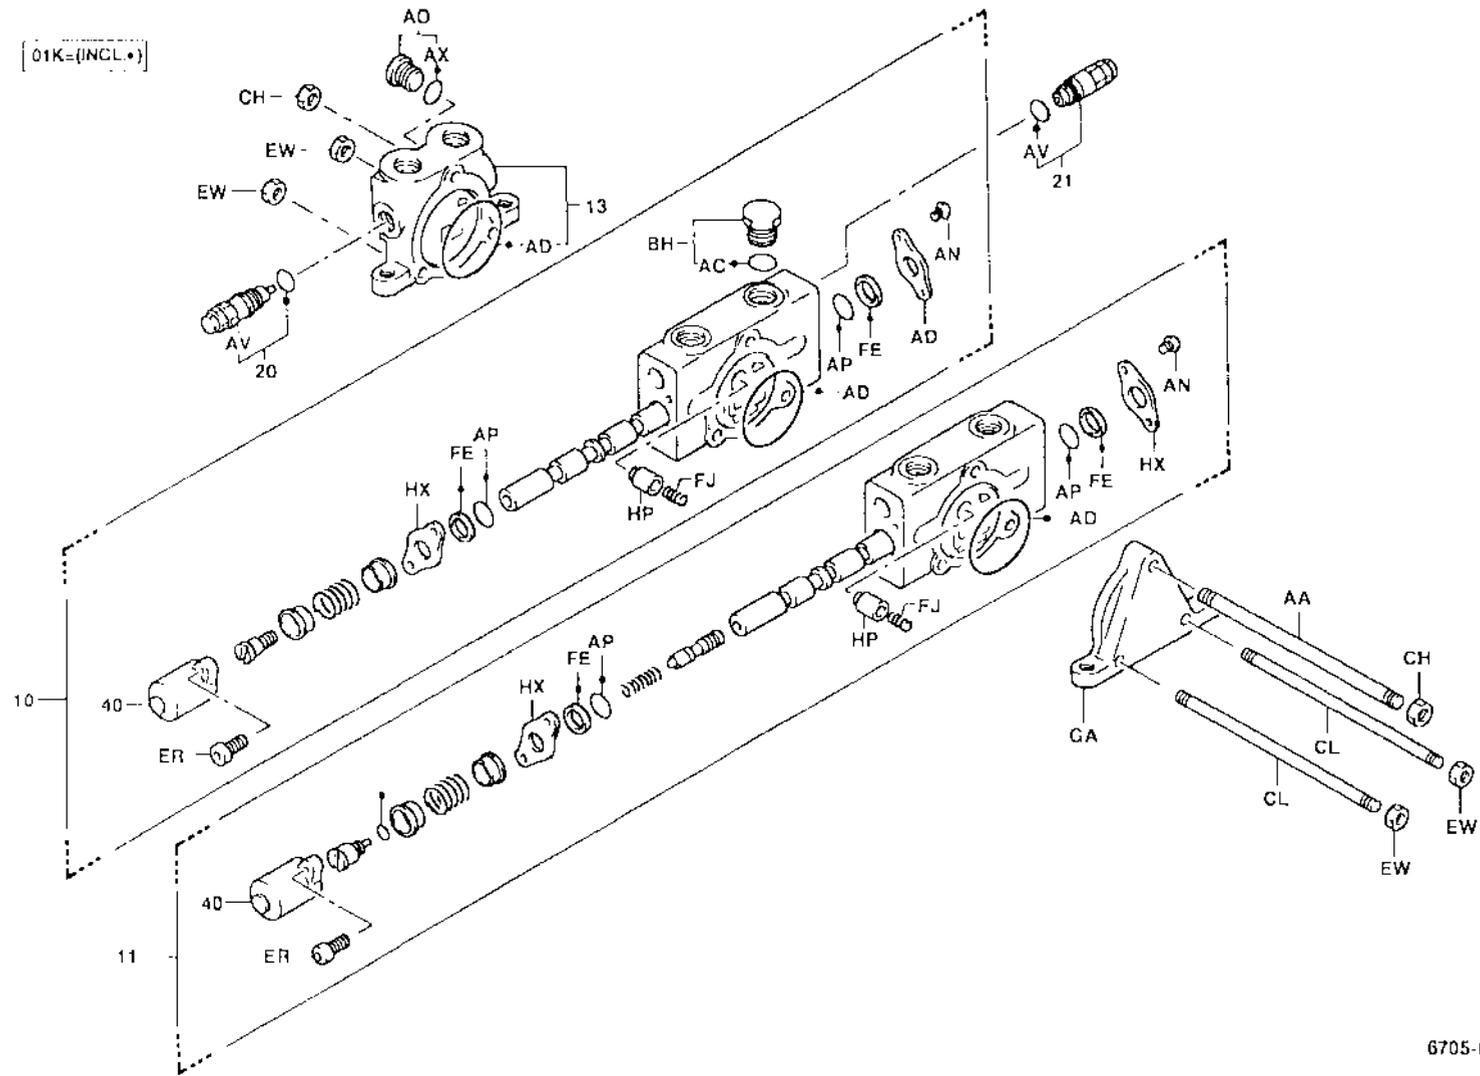

6705-648A

G818-001

LWS GINA WIL

FIG. 6705
OIL CONTROL VALVE


6705

MAIN

97/06

(5-WAY) (1/2)

01K=(INCL.)

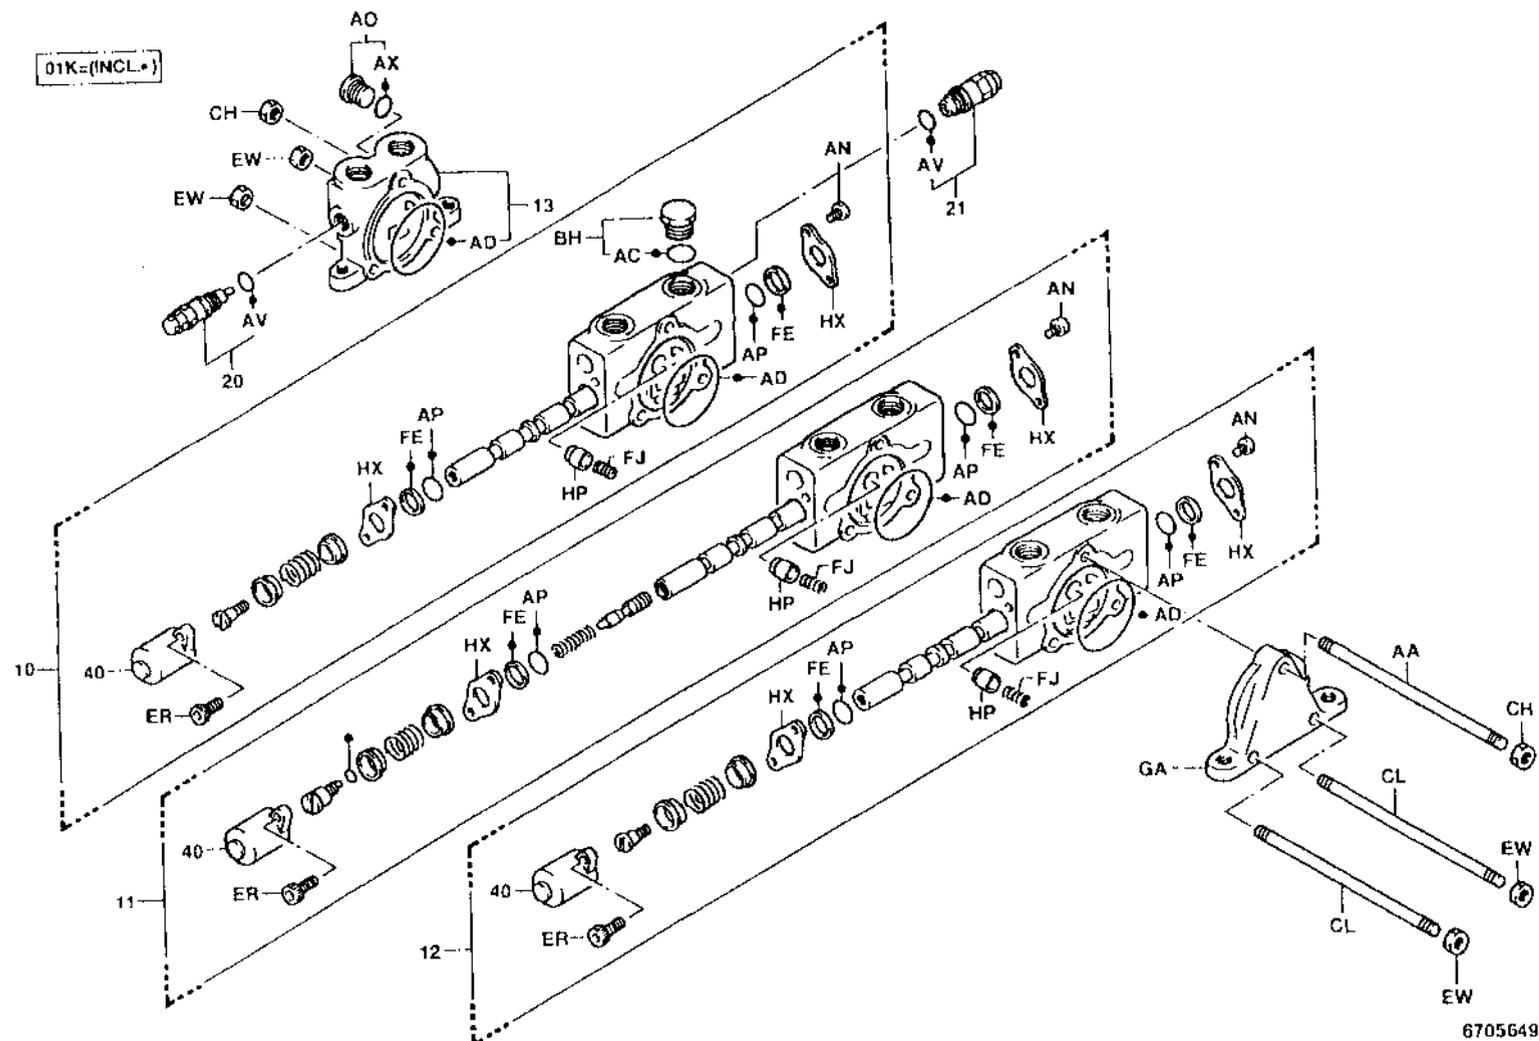

6705649A

G818-002

FIG. 6705
DIE CONTROL VALVE


6705

MAIN

97/06

[4-WAY] 11/21

01K=(INCL.)*

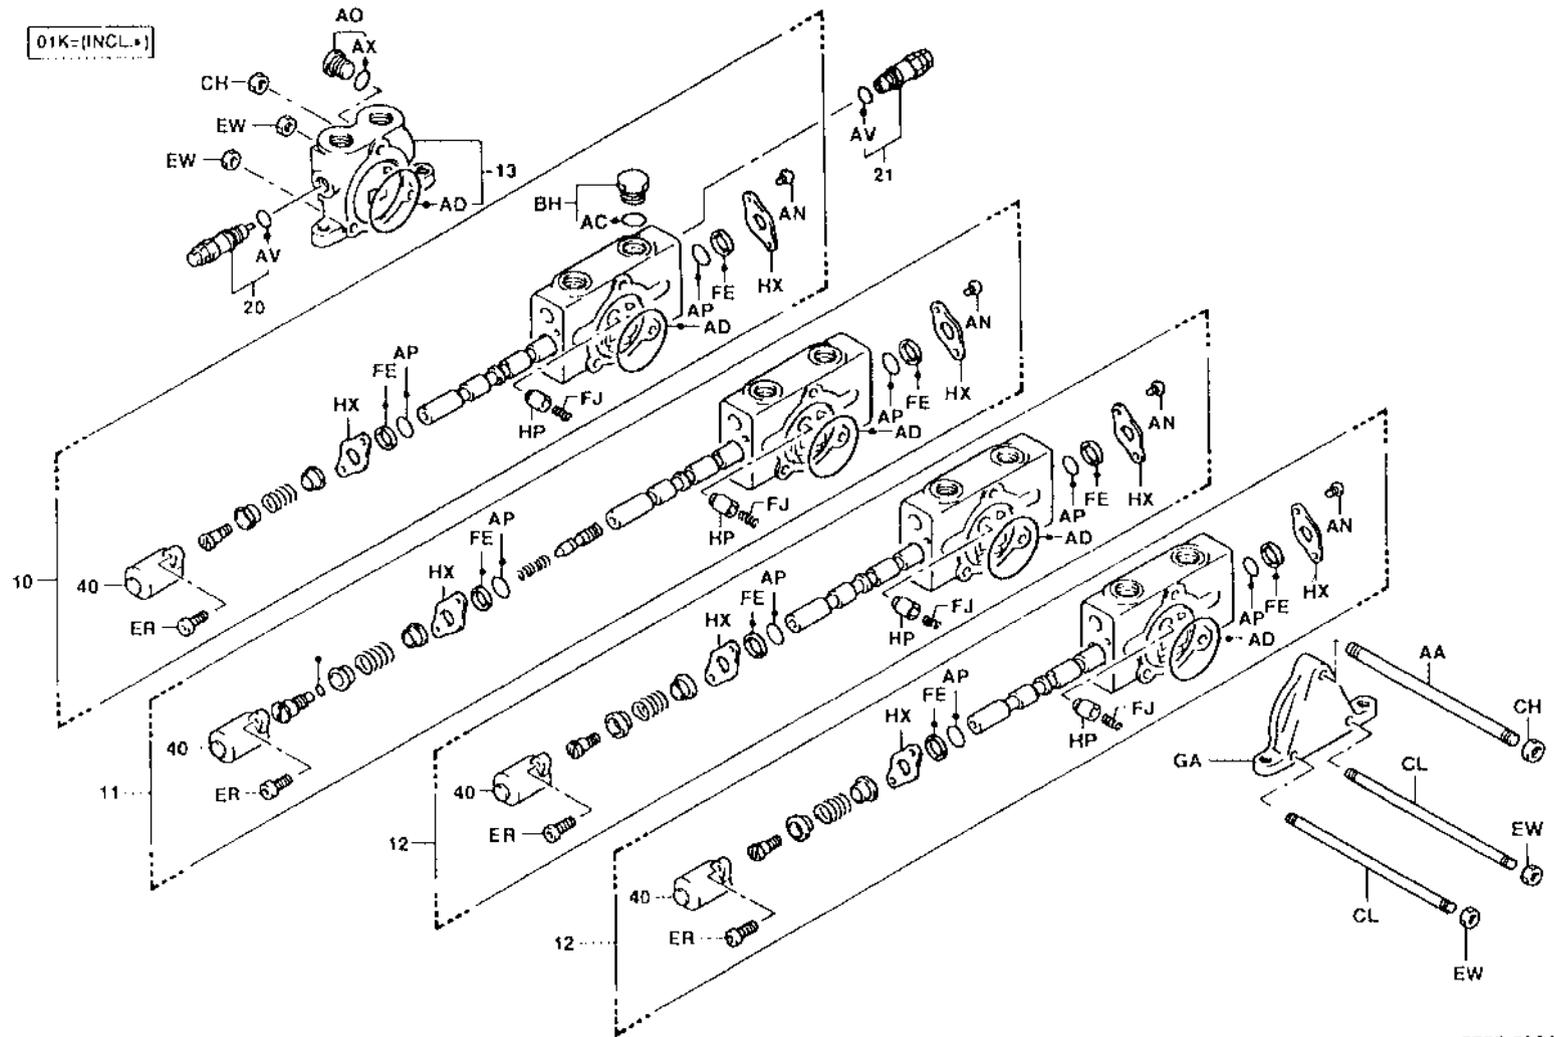

6705-656A

GB 18-003

6705 0000 0018

FIG. 6705
OIL CONTROL VALVE


6705

MAIN


97/06

(2-WAY) (2/2)

(3-WAY) (2/2)

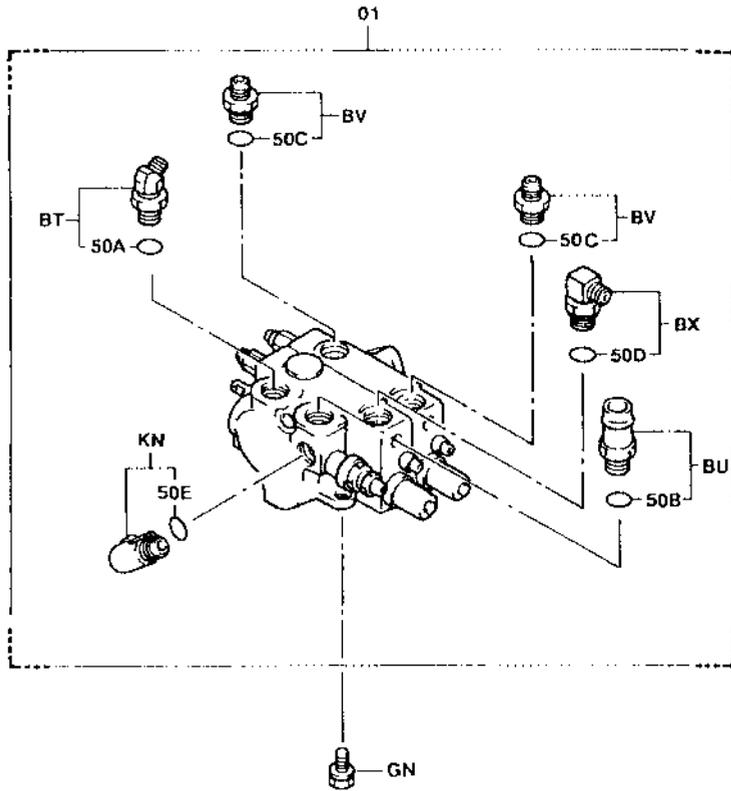

6705-654

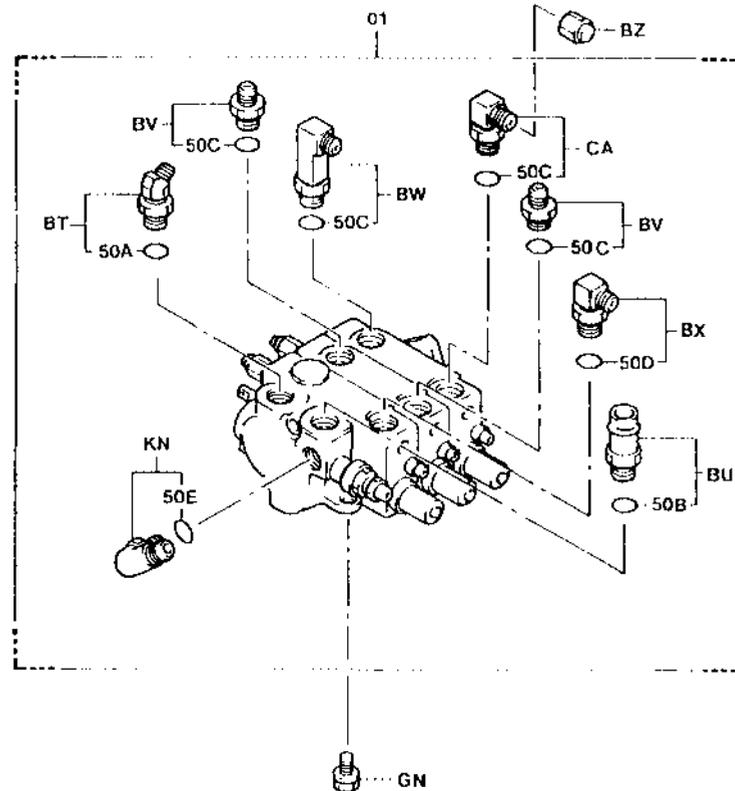

6705-655

G818-004


FIG. 6705
DIL CONTROL VALVE

6705

MAIN

97/06

(4-WAY) 12/21

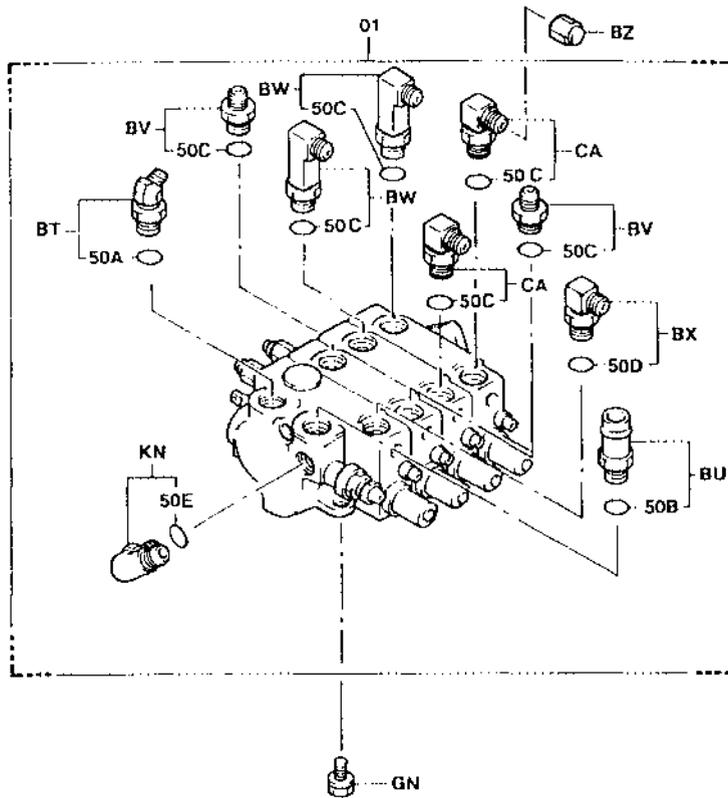

6705-657

G818-005

FIG. 6705
DIL CONTROL VALVE


6705

MAIN

97/06

A410 (1/2)

D1X=(INCL.)*

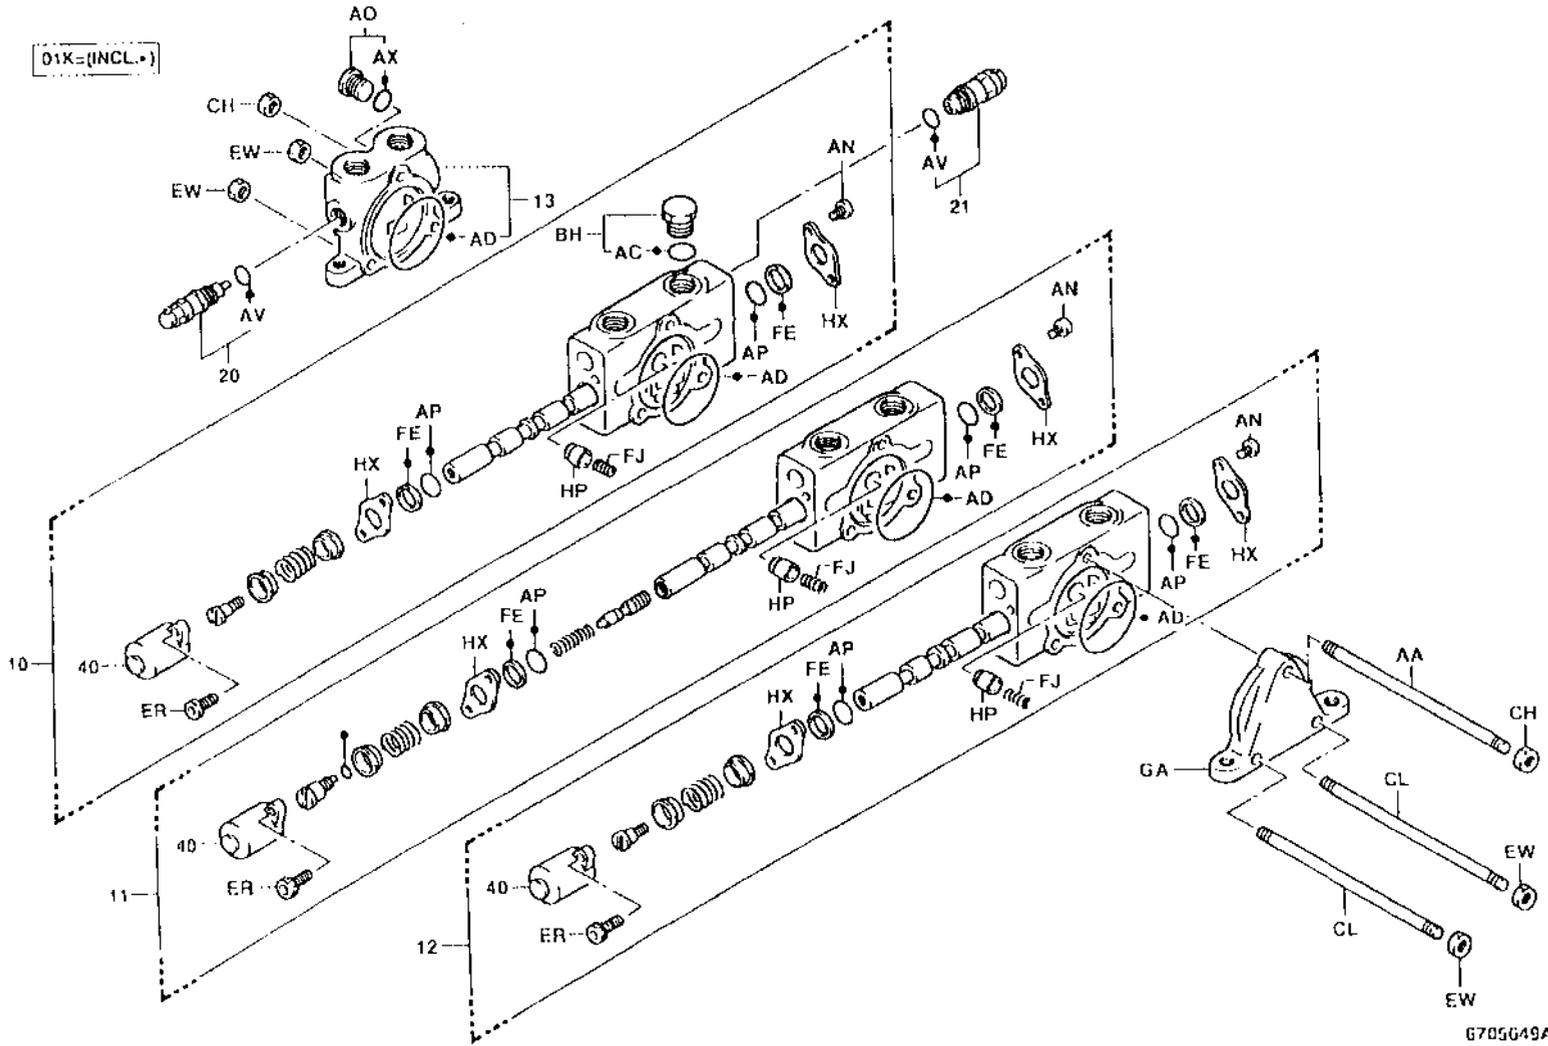

G705G49A

G818-006


FIG. 6705
DIE CONTROL VALVE

6705

MAIN

97/06

A410 (2/2)

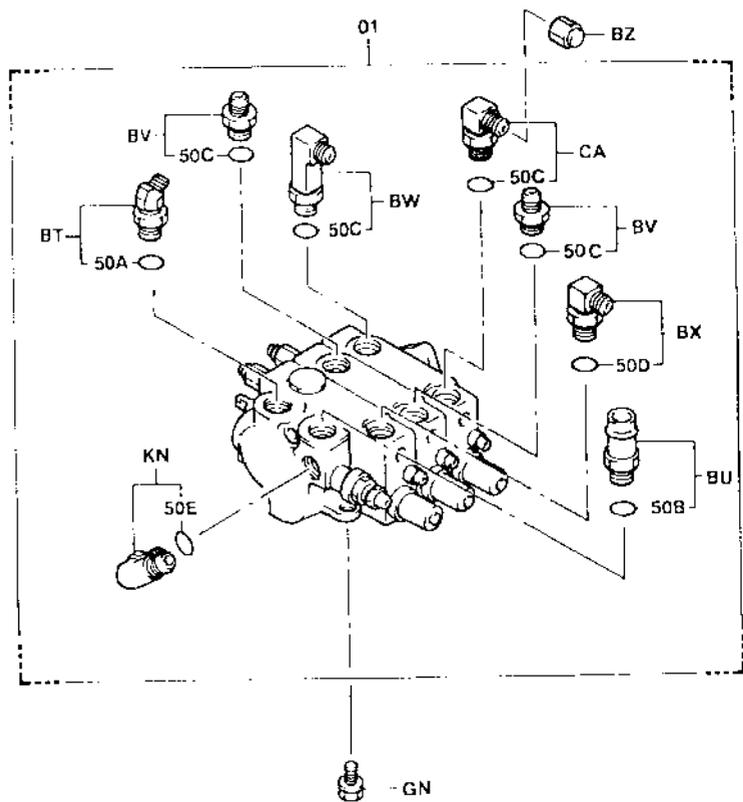


6705-655

G818-007

AC 50, AC 50 (11/2)

01K=(INCL.)

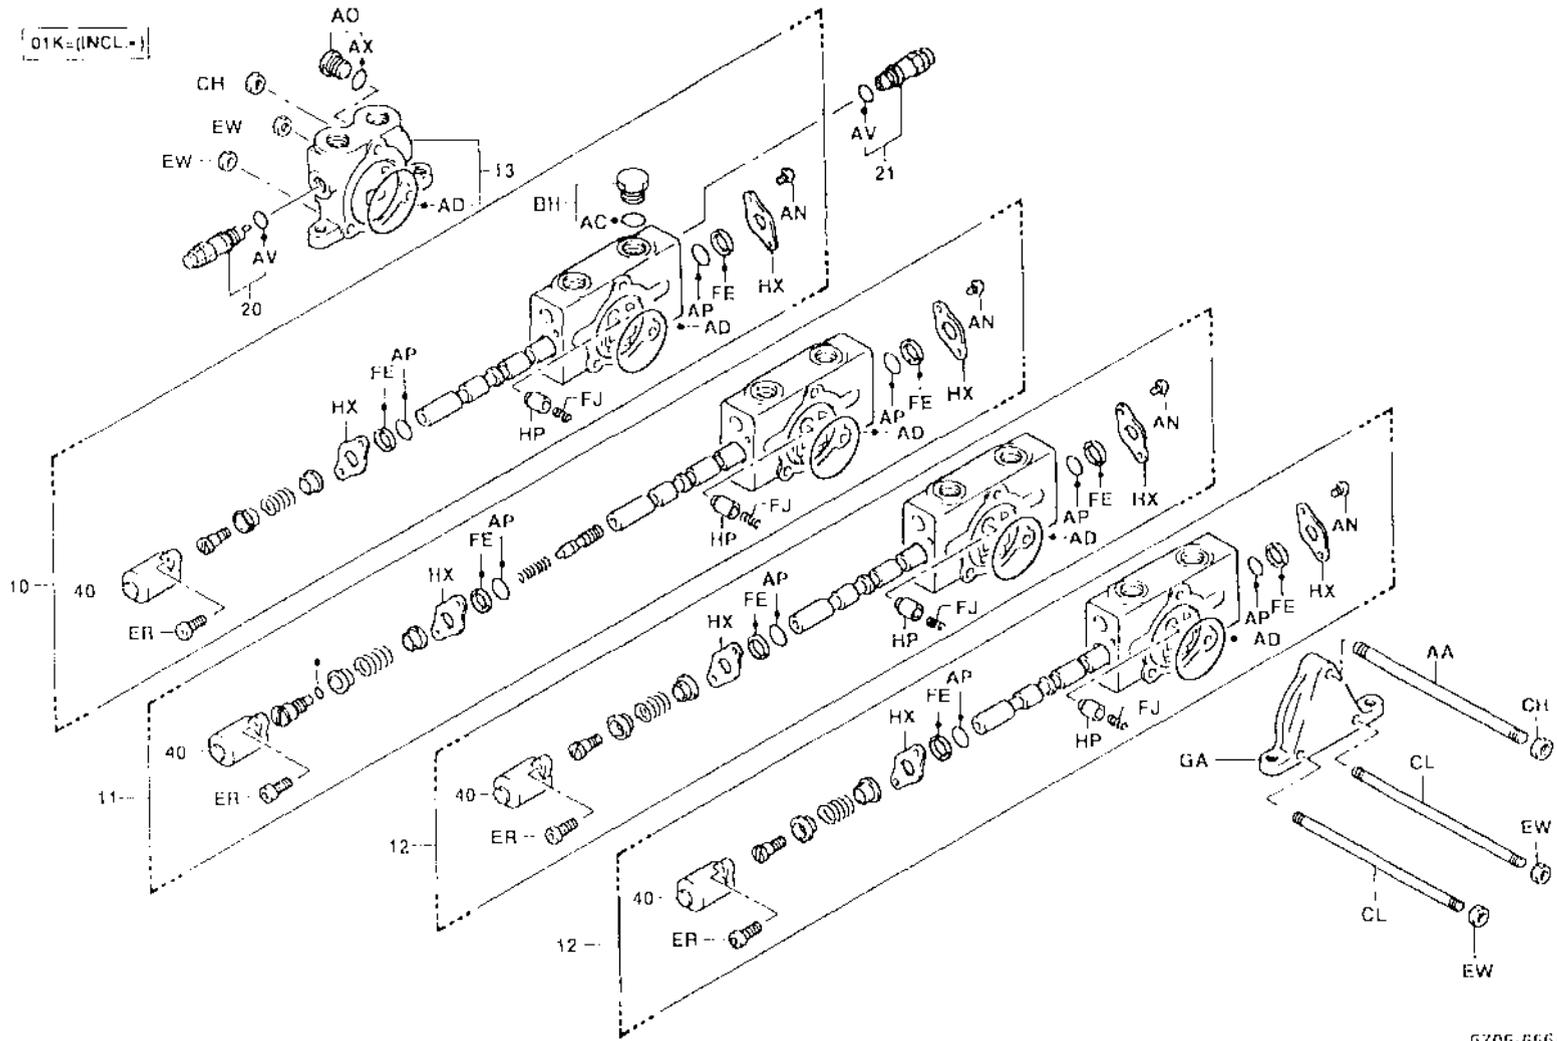

6705-856A

GM18-008

FIG-6709
DIL CONTROL VALVE LINK


6709

MAIN

95/04


(7-WAY)

(13-WAY)

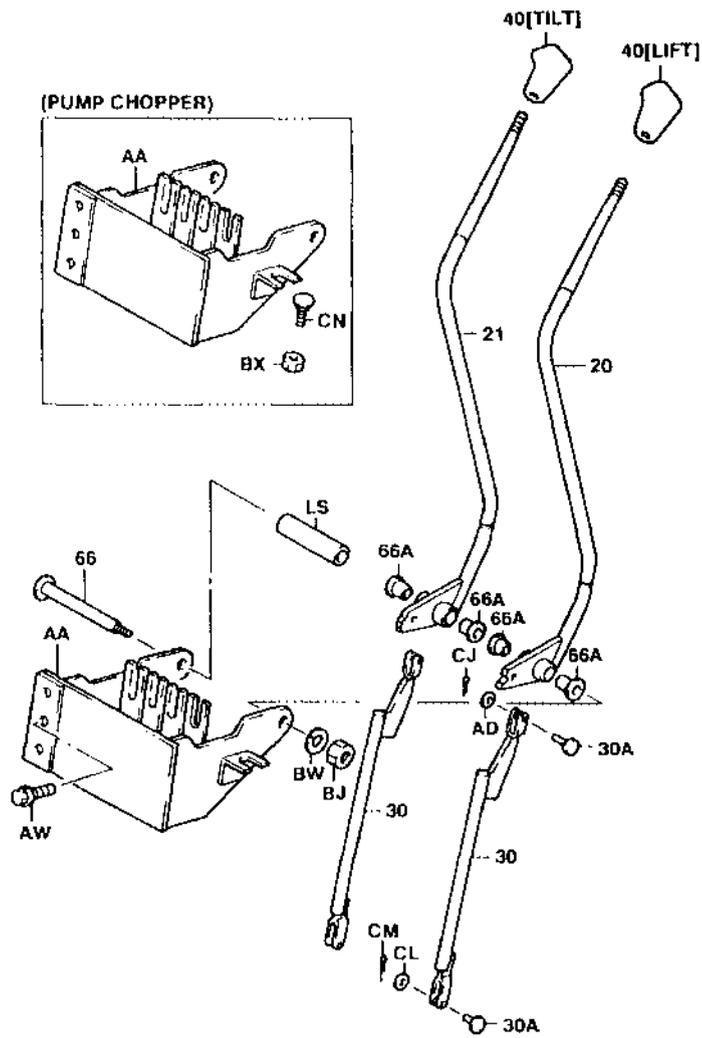

6709-268

6709 268

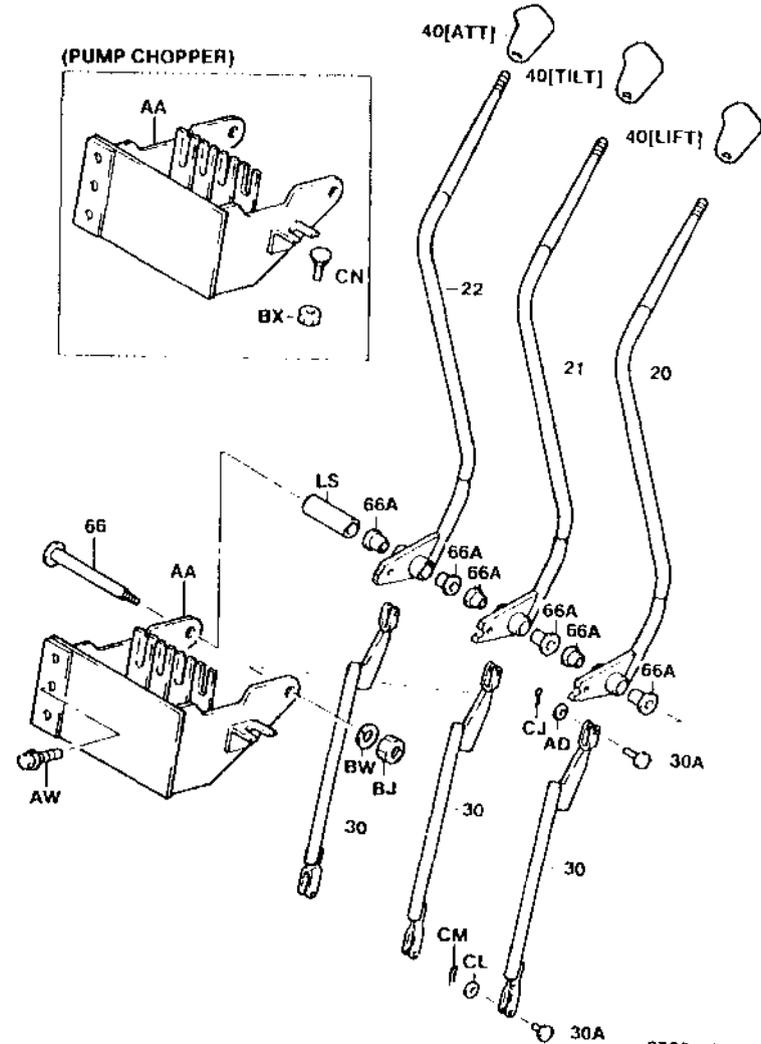

6709-269

G818-001

6709 269 0798

FIG. 6709
DLC CONTROL VALVE LINK



6709

MAIN 95/04

A410



A430, A430

(PUMP CHOPPER)

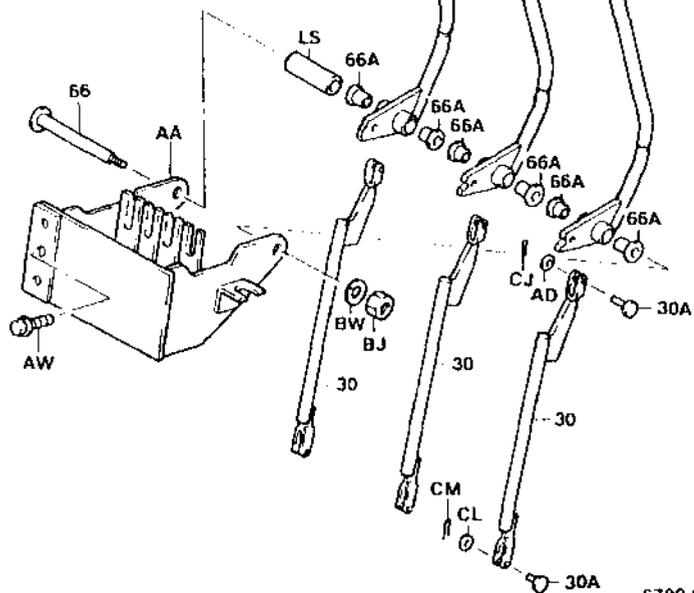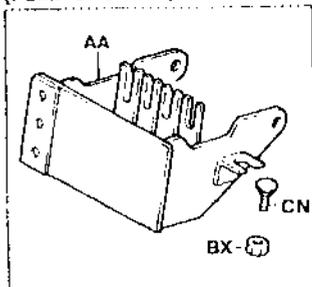

6709-269

(PUMP CHOPPER)

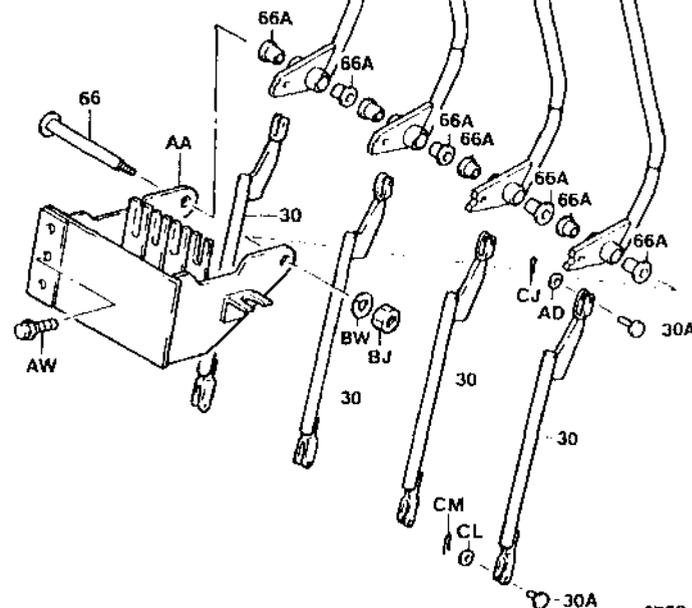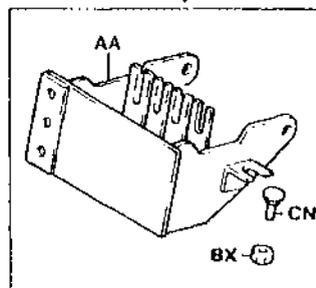

6709-270

G818-002

FIG. 6709
DIL CONTROL VALVE LINK

6709

MAIN

95/04

PART NAME CODE	PART NAME	QTY
16709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1	1
16709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2	1
16709-22	LEVER SUB-ASSY, CONTROL VALVE, NO.3	1
16709-23	LEVER SUB-ASSY, CONTROL VALVE, NO.4	1
16709-30	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.1	1- 4
16709-30A	IPIN (FOR CONTROL VALVE LEVER ROD)	2- 4
16709-40	KNOB, DIL CONTROL VALVE LEVER	1- 2
16709-66	BOLT (FOR VALVE LEVER)	1
16709-66A	BUSHING	4- 8
16709-AA	BRACKET SUB-ASSY	1
16709-AD	WASHER, PLATE	2- 4
16709-AW	BOLT	3
16709-BJ	NUT	1
16709-BW	WASHER, SPRING	1
16709-BX	NUT	1
16709-CJ	IPIN	2- 4
16709-CL	WASHER, PLATE	2- 4
16709-CM	IPIN, CUTTER	2- 4
16709-CM	BOLT	1
16709-LS	PIPE	1

G818-003E


FIG. 6801
BODY PIPING

6801

MAIN

97/06

FSV, FV, V

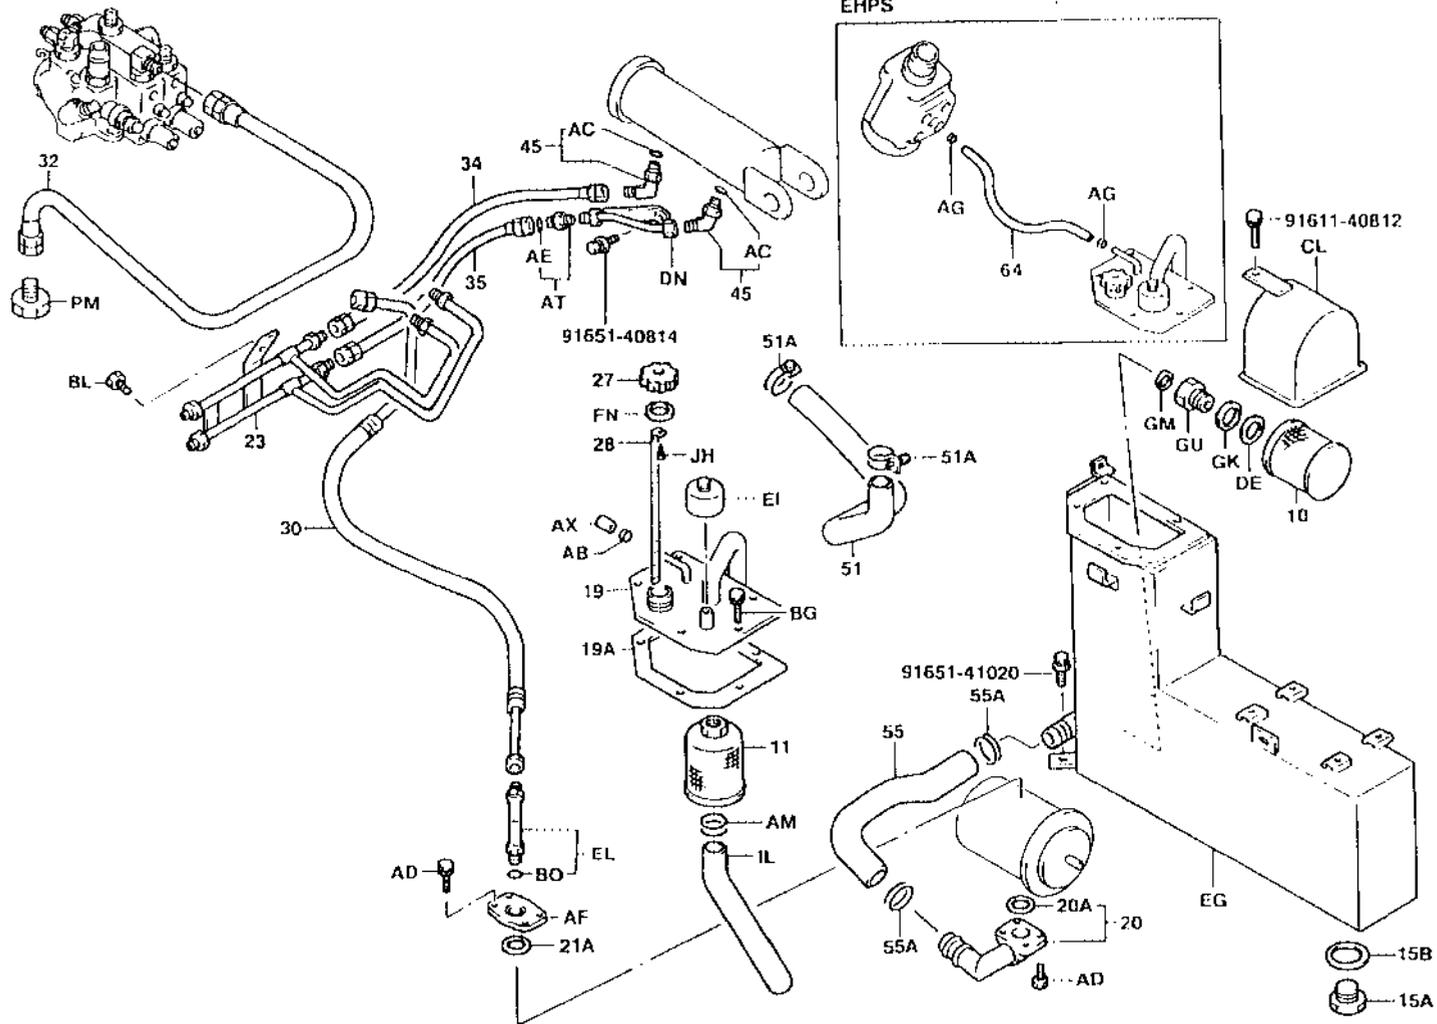

6801-316A

G518-001


FIG. 6801
BODY PIPING

6801

MAIN

9/7/06

FV

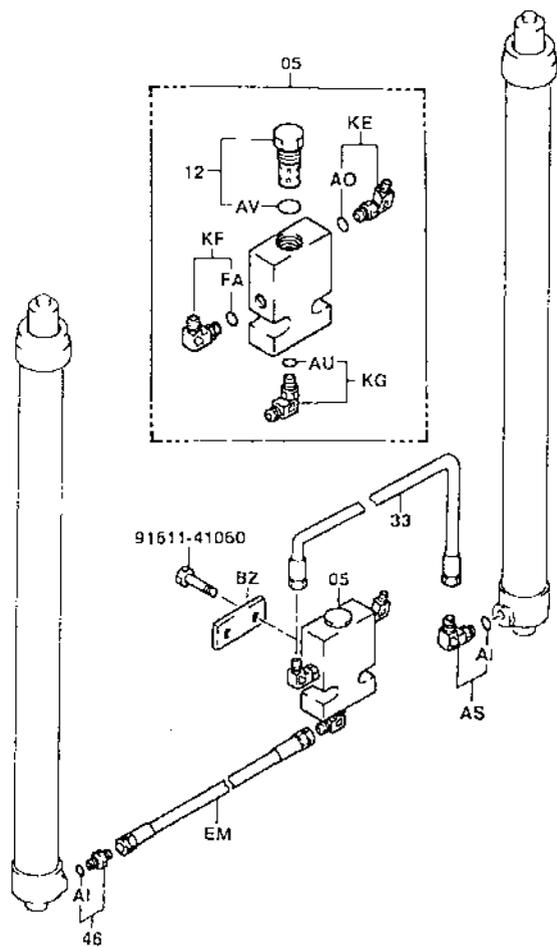

6801-313A


G818-002

FIG. 6801
BODY PIPING

6801

MAIN

97/06

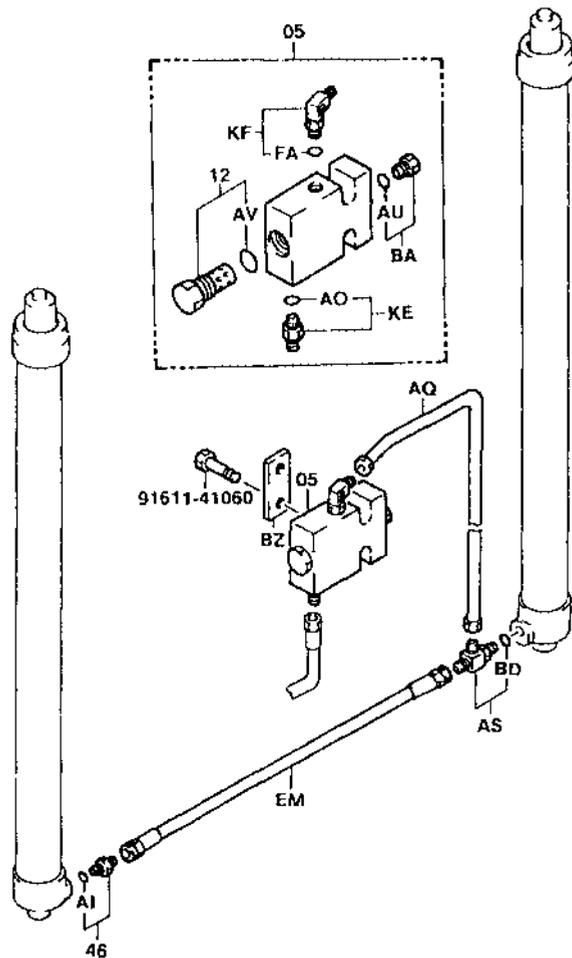

6801-314

PART NAME	PART NAME	QTY
CODE		
6801-05	REGULATOR ASSY, FLOW	1
6801-10	FILTER ASSY, SUCTION	1
6801-11	FILTER ASSY, RETURN	1
6801-17	VALVE ASSY, FLOW REGULATOR	1
6801-15A	PLUG (FOR OIL TANK DRAIN)	1
6801-15B	GASKET (FOR OIL TANK DRAIN PLUG)	1
6801-19	COVER ASSY, OIL TANK	1
6801-19A	PACKING SUB-ASSY	1
6801-20	PIPE SUB-ASSY (PUMP INLET)	1
6801-20A	RING, O (FOR OIL PUMP INLET)	1
6801-21A	RING, O (FOR OIL PUMP OUTLET)	1
6801-24	PIPE SUB-ASSY (TILT CYLINDER FRONT)	1
6801-27	CAP SUB-ASSY, OIL TANK	1
6801-28	GAGE SUB-ASSY, OIL LEVEL	1
6801-30	HOSE, HIGH PRESSURE, NO.1 (PUMP TO VALVE)	1
6801-32	HOSE, HIGH PRESSURE, NO.1 (VALVE TO LIFT)	1
6801-33	HOSE, HIGH PRESSURE, NO.2 (VALVE TO LIFT)	1
6801-34	HOSE, HIGH PRESSURE, NO.1 (TILT FRONT)	2
6801-35	HOSE, HIGH PRESSURE, NO.1 (TILT REAR)	2
6801-43	FITTING (FOR TILT CYLINDER)	2
6801-46	FITTING (FOR LIFT CYLINDER)	1
6801-51	HOSE, LOW PRESSURE, NO.1 (VALVE TO TANK)	1
6801-51A	CLAMP (FOR VALVE TO TANK NO.1 HOSE)	2
6801-55	HOSE, LOW PRESSURE (TANK TO PUMP)	1
6801-55A	CLAMP (FOR TANK TO PUMP HOSE)	2
6801-59	HOSE, LOW PRESSURE, NO.2 (LIFT TO TANK)	1
6801-59A	CLAMP (FOR LIFT TO TANK NO.2 HOSE)	2
6801-64	HOSE, STEERING BOX NO.2 (STEERING TO TANK)	1
6801-AB	CLAMP	1
6801-AC	RING, O	4
6801-AD	BOLT	6
6801-AL	RING, O	1
6801-AF	FLANGE, SPLIT	1
6801-AG	CLAMP	2
6801-AI	RING, O	1-2
6801-AM	CLAMP, HOSE	1
6801-AD	RING, O	1
6801-AQ	PIPE SUB-ASSY	1
6801-AS	FITTING	1
6801-AT	FITTING	1
6801-AU	RING, O	1
6801-AV	RING, O	1
6801-AX	CAP, OIL TANK OVERFLOW PIPE	1
6801-BA	PLUG	1
6801-BD	RING, O	1
6801-BG	BOLT	5
6801-BL	BOLT	1
6801-BO	RING, O	1
6801-BZ	PLATE	1
6801-CL	COVER, OIL FILTER	1
6801-DE	SPACER	1
6801-ON	PIPE SUB-ASSY (TILT, REAR)	1
6801-EG	TANK SUB-ASSY, OIL	1
6801-EI	BREATHER ASSY, AIR	1
6801-EL	FITTING	1
6801-EM	HOSE, HIGH PRESSURE	1
6801-FA	RING, O	1
6801-FN	PACKING, OIL TANK CAP	1
6801-GK	PACKING	1
6801-GM	RING, O	1
6801-GU	BOSS	1
6801-IL	HOSE	1
6801-JH	SCREW	1
6801-KE	FITTING	1

G818-004

FIG. 6801
BODY PIPING

6801

MAIN

97/06

PART NAME CODE	PART NAME	QTY
6801-KF	FITTING	1
6801-KG	FITTING	1
6801-PE	3-WAY, OVERFLOW	1
6801-PH	PLUG	1

G818-005E


FIG. 6802
MAST PIPING

6802

MAIN

97/06

QTY

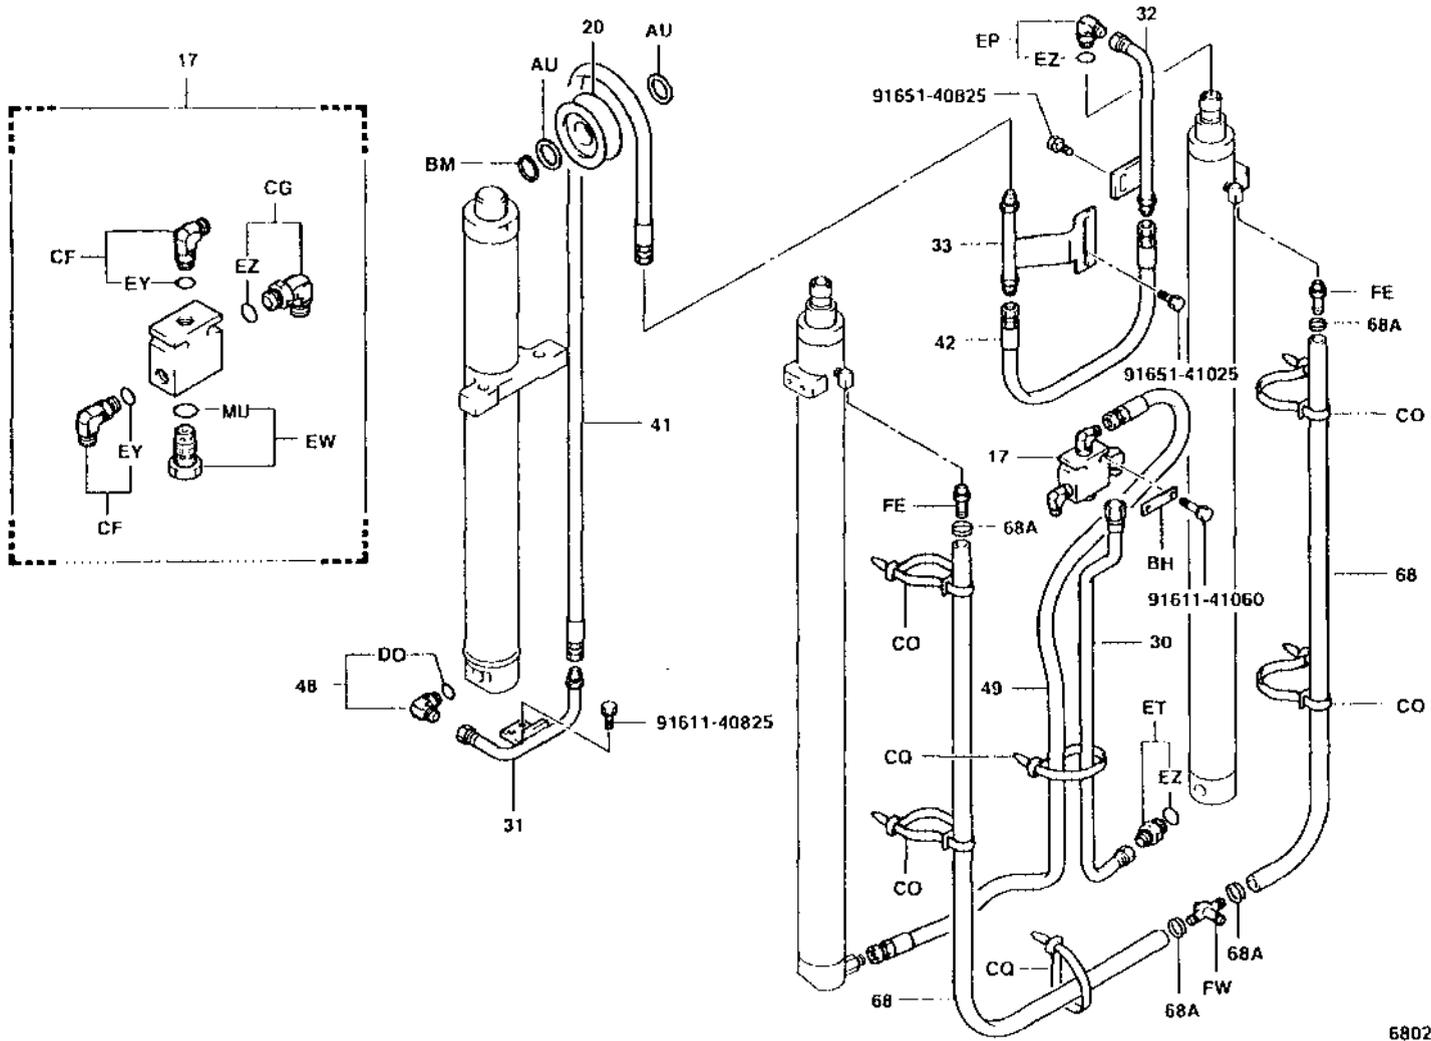

6802-440

G818-002

FIG. 6802
MAST PIPING


6802

MAIN

97/06


A410, A450, V

A450, V (RH)

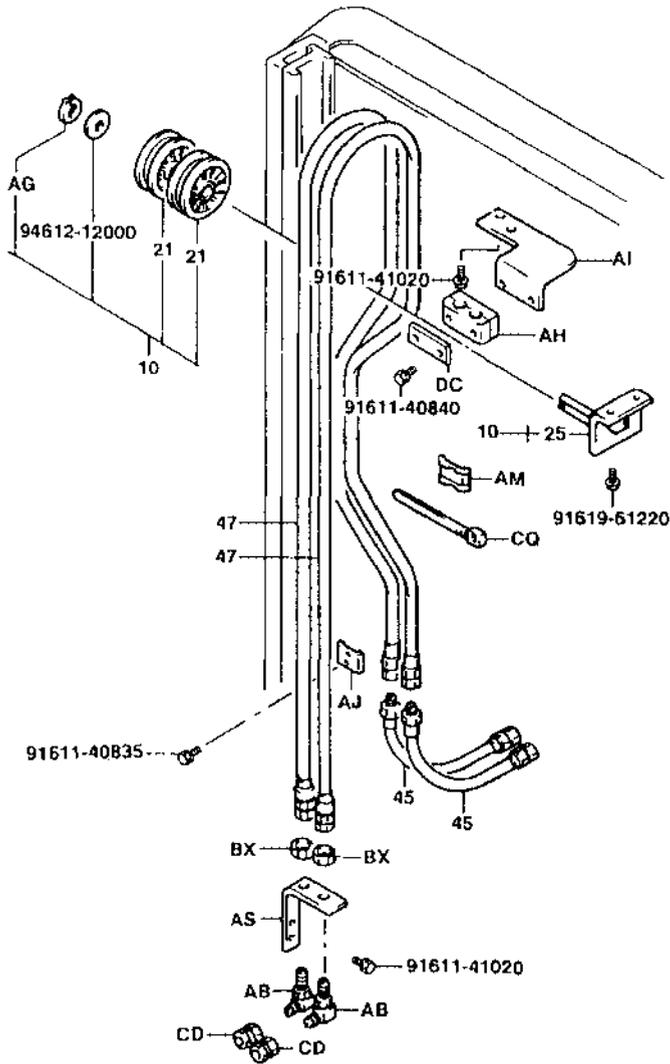

6802-392A

6802 392A

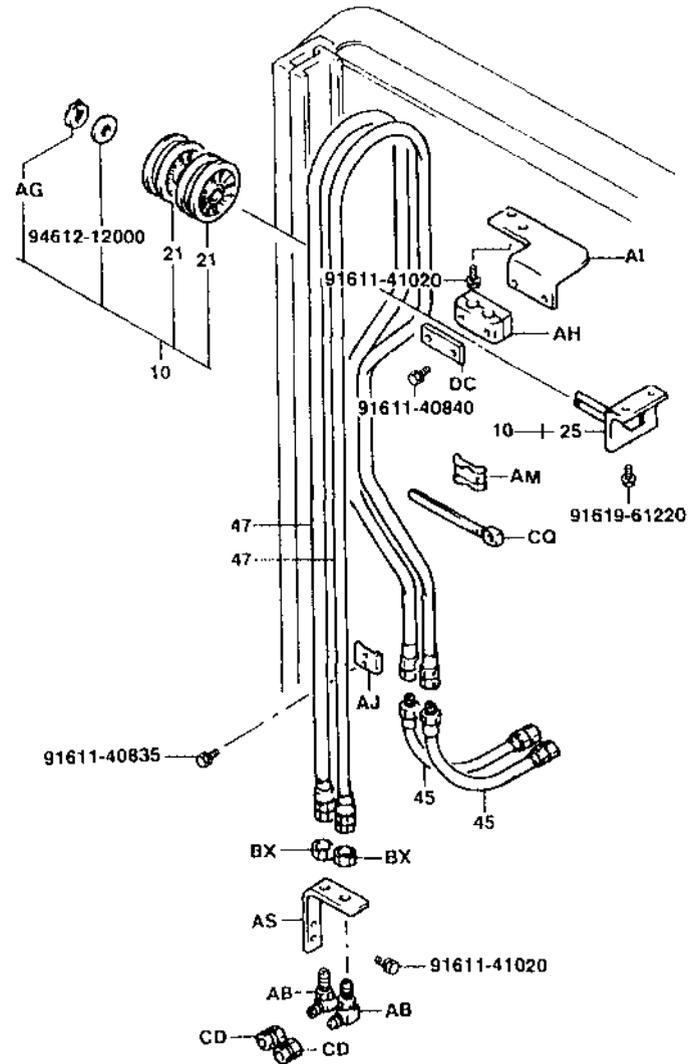

6802-392A

G818-003

6802 392A 0032


FIG. 6802
MAST PIPING

6802

MAIN

97/06

A450-V I.H.

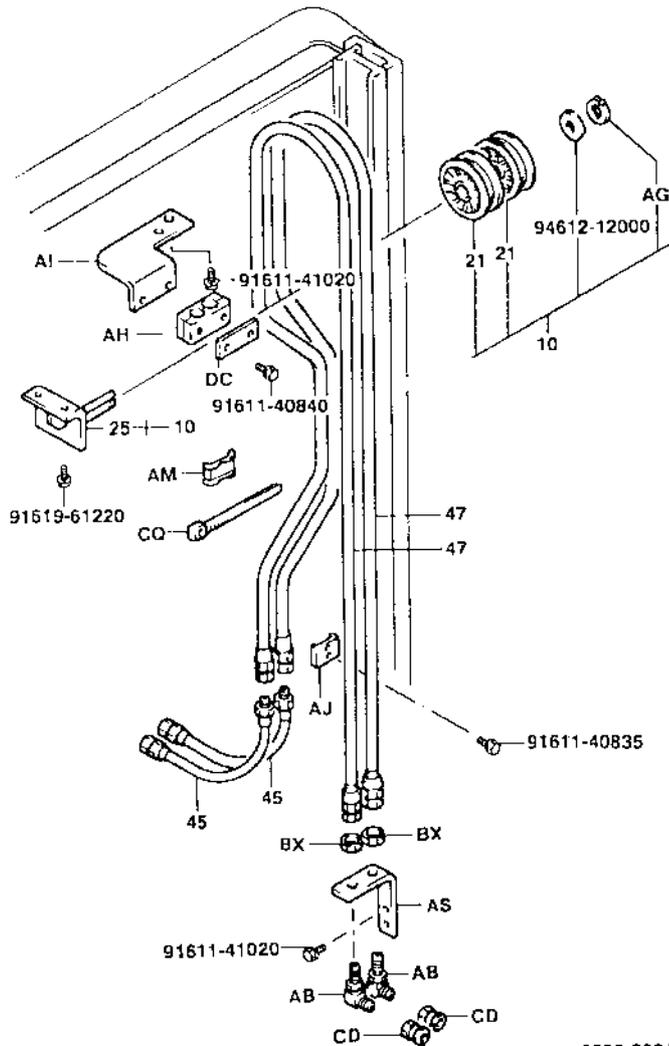

6802-393A

PART NAME	PART NAME	QTY
CODE		
6802-10	PULLEY ASSY	1
6802-17	REGULATOR ASSY, FLOW	1
6802-20	PULLEY SUB-ASSY, HOSE GUIDE, NO.1	1
6802-21	PULLEY SUB-ASSY, HOSE GUIDE, NO.2	2-4
6802-25	BRACKET SUB-ASSY, GUIDE PULLEY	1
6802-30	PIPE SUB-ASSY, NO.1 (FRONT LIFT)	1
6802-31	PIPL SUB-ASSY, NO.2 (FRONT LIFT)	1
6802-32	PIPE SUB-ASSY	1
6802-33	PIPE SUB-ASSY	1
6802-41	HOSE, HIGH PRESSURE, NO.1 (FRONT LIFT)	1
6802-42	HOSE, HIGH PRESSURE, NO.2 (FRONT LIFT)	1
6802-45	HOSE, HIGH PRESSURE, NO.1 (FOR ATTACHMLNT)	1
6802-47	HOSE, HIGH PRESSURE (FOR ATTACHMENT PULLEY)	2-4
6802-48	FITTING (FOR FRONT LIFT CYLINDER)	1
6802-49	HOSE, HIGH PRESSURE	1
6802-68	HOSE, LOW PRESSURE	1
6802-68A	CLAMP, HOSE	6
6802-AA	PIN, HOSE GUIDE PULLEY	1-4
6802-AD	FITTING	1-4
6802-AC	RING, O	1
6802-AG	RING, SHAFT SNAP	1-2
6802-AH	CLAMP	1-4
6802-AI	BRACKET, PIPE	1
6802-AJ	CLAMP	1-2
6802-AK	GUIDE SUB-ASSY, HOSE	1
6802-AM	CLAMP SUB-ASSY, HOSE	3-6
6802-AR	RING, O	1
6802-AS	BRACKET, PIPE	1-2
6802-AU	SPACER	2
6802-AW	CLAMP	2
6802-BB	HOSE, HIGH PRESSURE	1
6802-BH	PLATE	1
6802-BM	RING, SNAP	1
6802-BX	NUT	2-4
6802-CD	CAP	2-4
6802-CF	FITTING	1-2
6802-CG	FITTING	1
6802-CK	FITTING	1
6802-CO	SUPPORT	4
6802-CU	BAND	2-6
6802-DC	PLATE	1-2
6802-DO	RING, O	1
6802-EP	FITTING	1
6802-EQ	BRACKET	1
6802-ER	PLATE	1
6802-ET	FITTING	1
6802-EW	VALVE ASSY, FLOW REGULATOR	1
6802-EY	RING, O	1-2
6802-EZ	RING, O	2-3
6802-FE	CONNECTOR	2
6802-FW	3-WAY	1
6802-MR	RING, O	1
6802-MU	RING, O	1
6802-NE	BOLT	2
6802-NN	RING, O	1

G818-004E

FIG. 6803
MAST PIPING

6803

MAIN

97/06

A450..FSV [RH]

A410, A430..FV

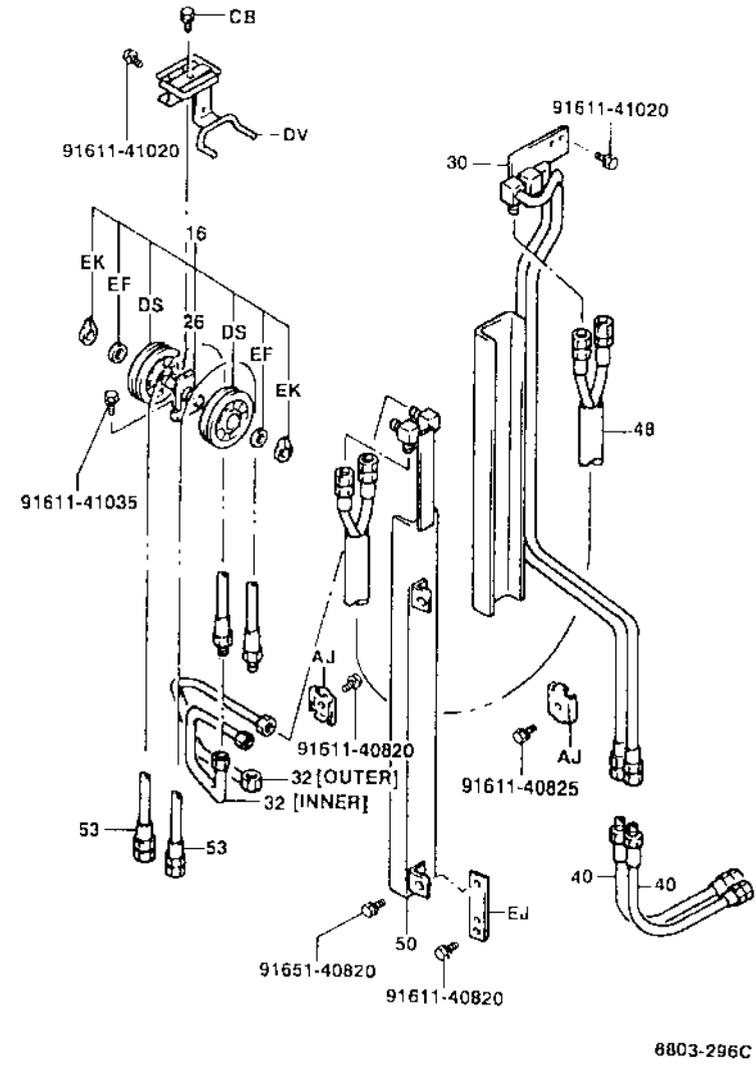
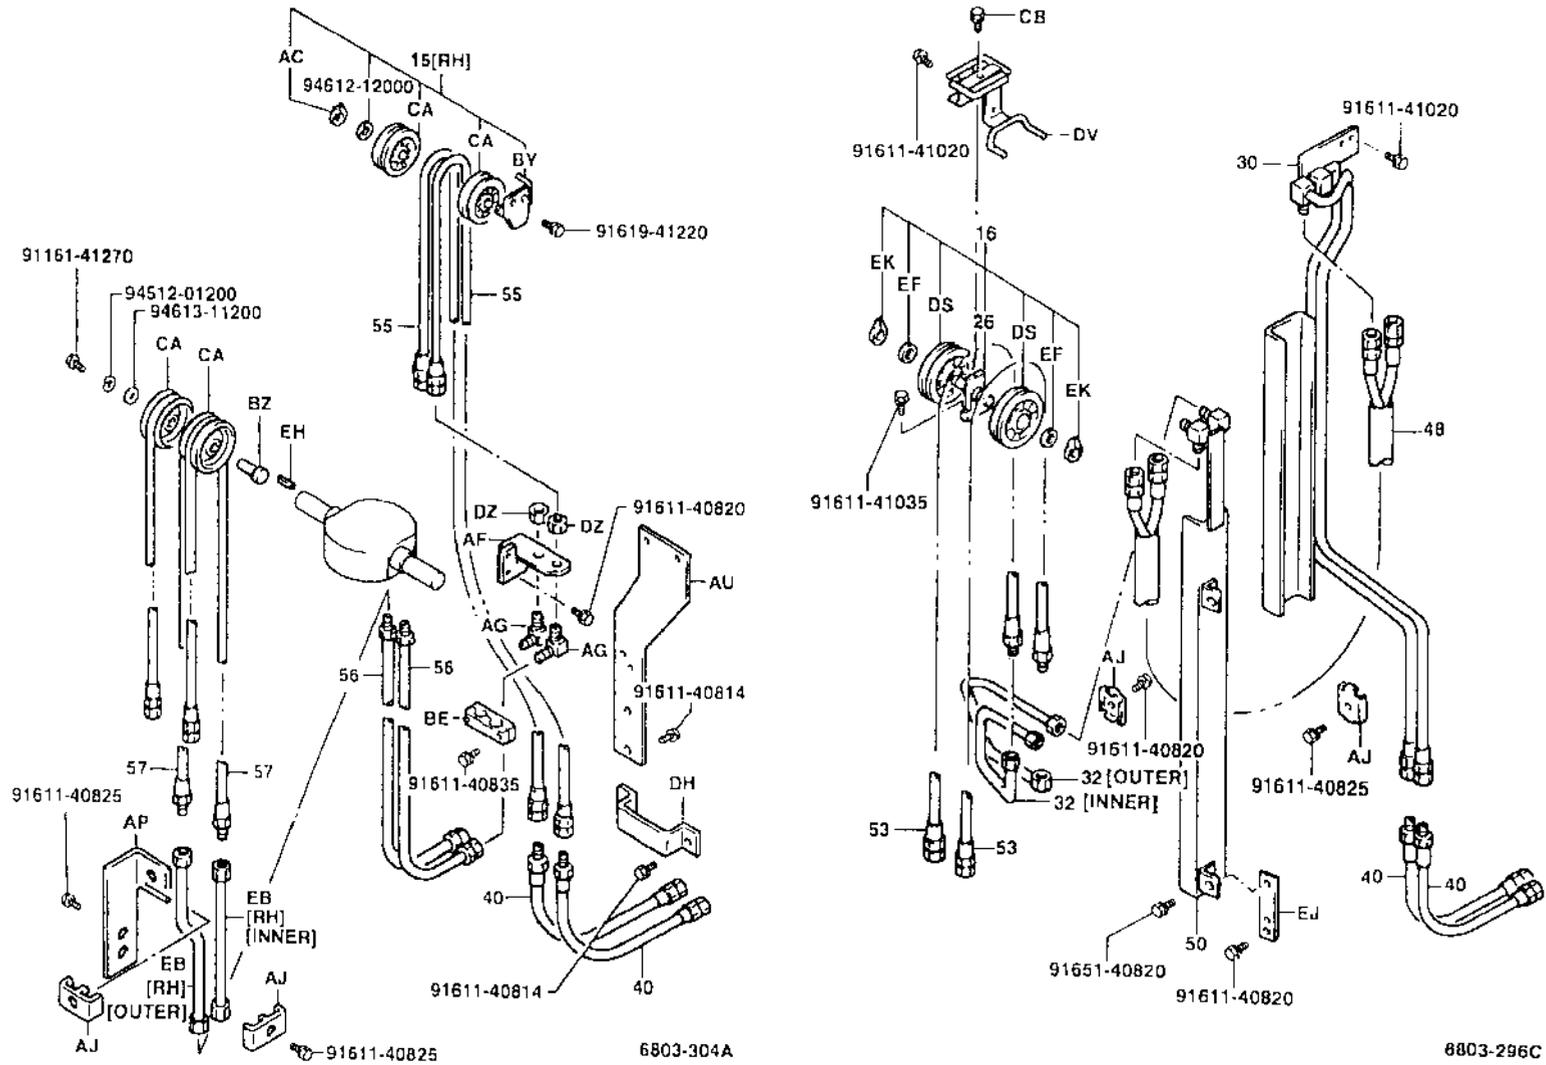


FIG. 6803
MAST PIPING


6803

MAIN


97/06

A45D--FV (RH)

A45D--FV (LH)

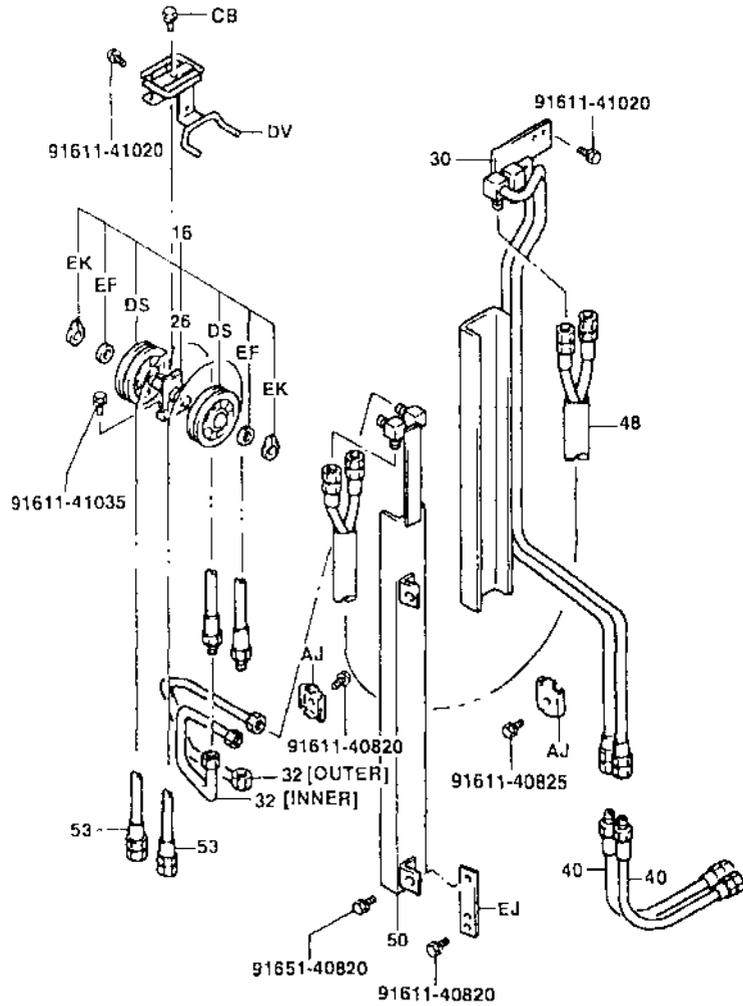

8803-296C

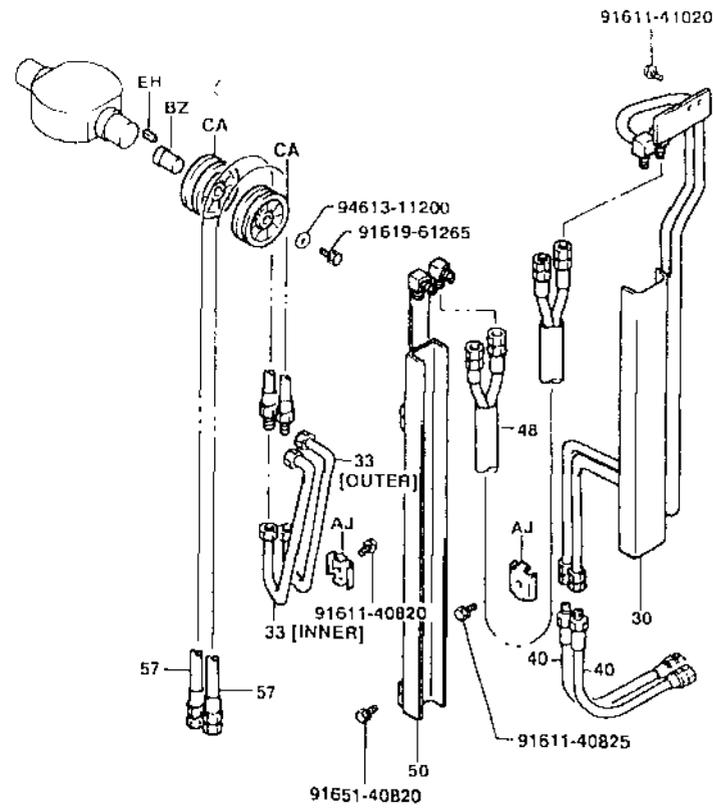

6803-297D

G818-003


FIG. 6803
MAST PIPING

6803

MAIN

97/06

A410.A450..QFV

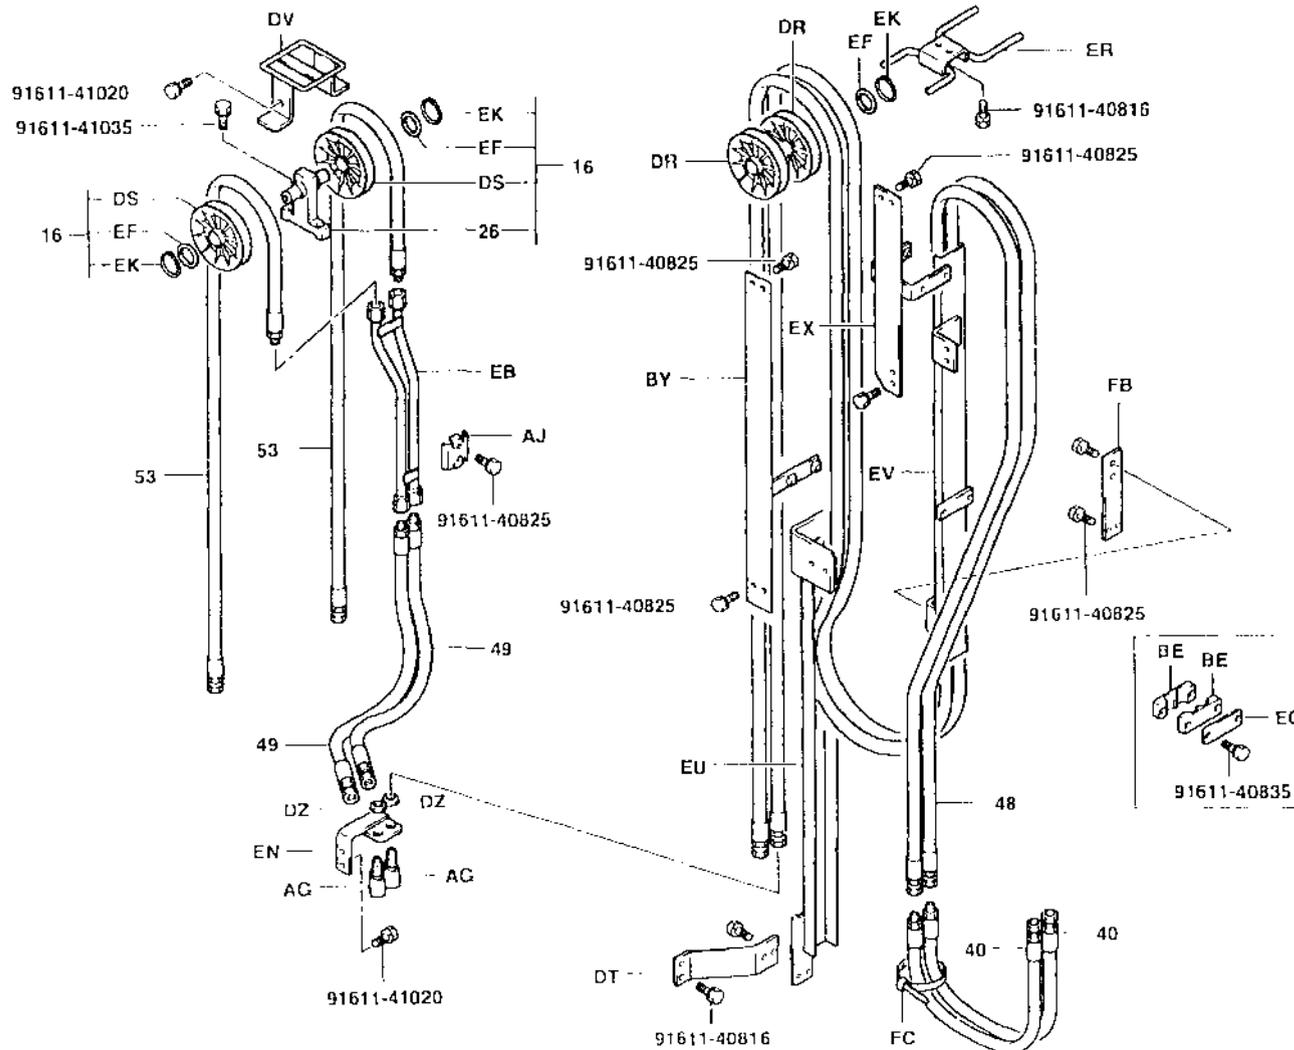

6803-355

6818-004


FIG. 6803
MAST PIPING

6803

MAIN

97/06

A450..QFV (LH)

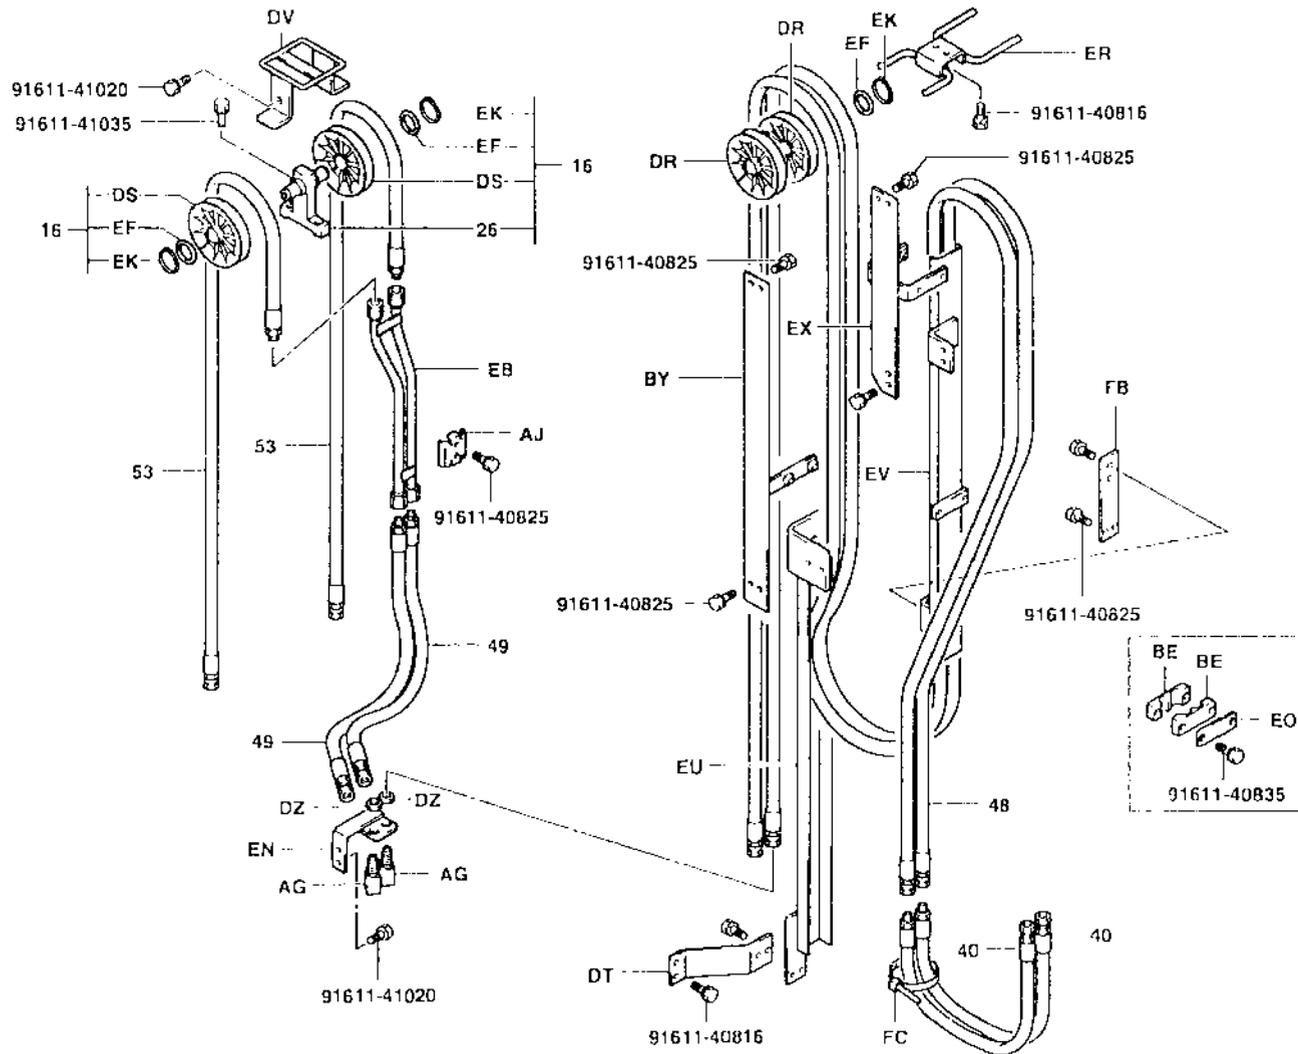

6803-355

G818-005


FIG. 6803
MAST PIPING

6803

MAIN

97/06

A450-QF V (R/N)

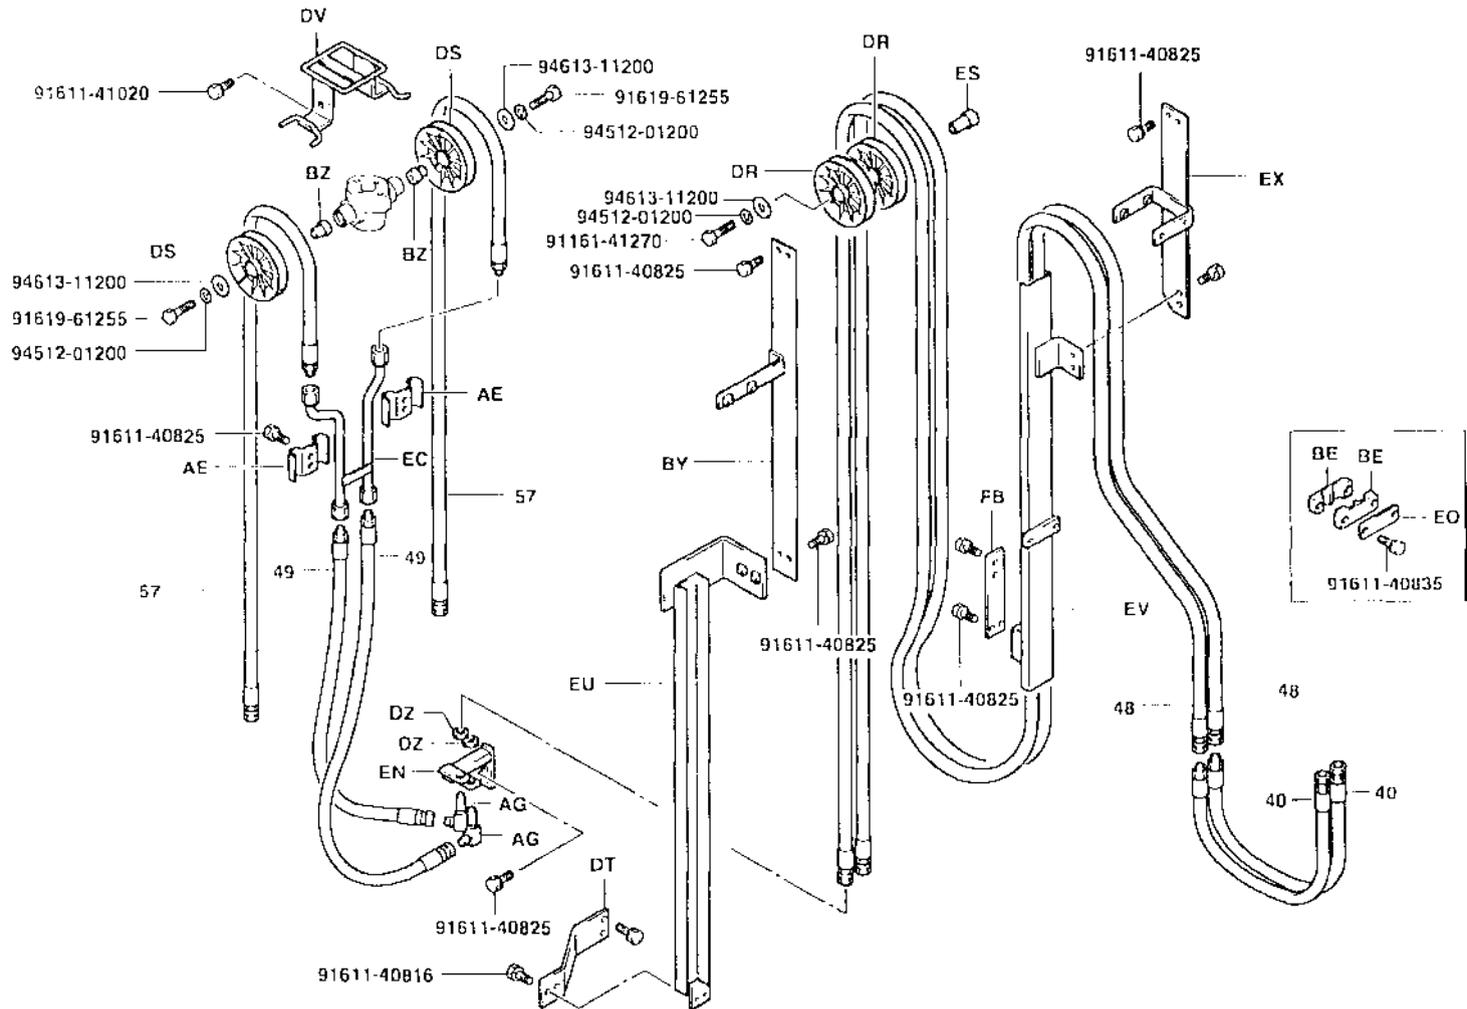


6803-356

G818-006


5807 356 06/23

A410, A430...FV (CTR TERMINATION)

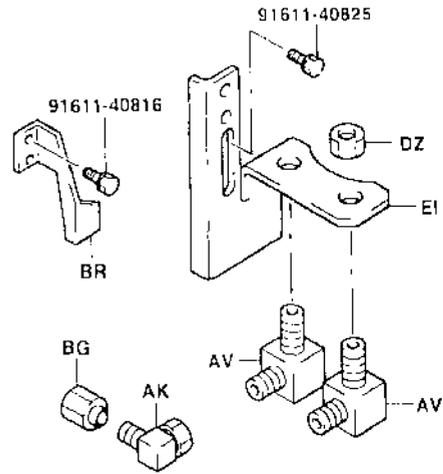


6803-353

A410, A430...FV (CTR TERMINATION)

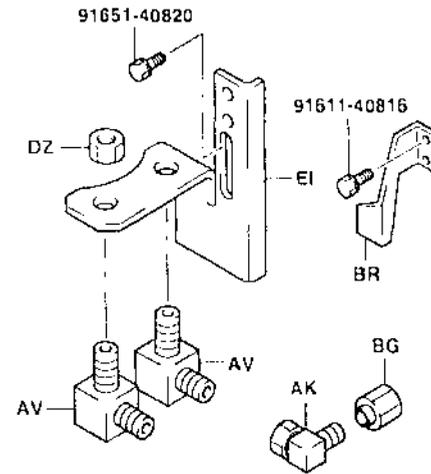


6803-354

A410, A430...FV (SIDE TERMINATION)

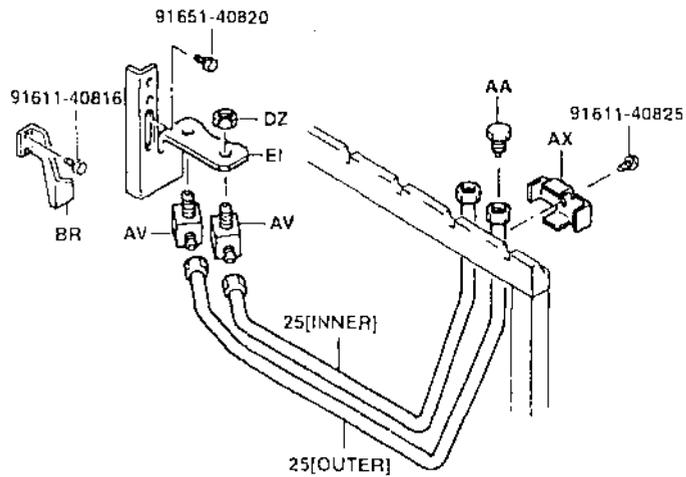

6803-298C

A410, A430...FV (SIDE TERMINATION)

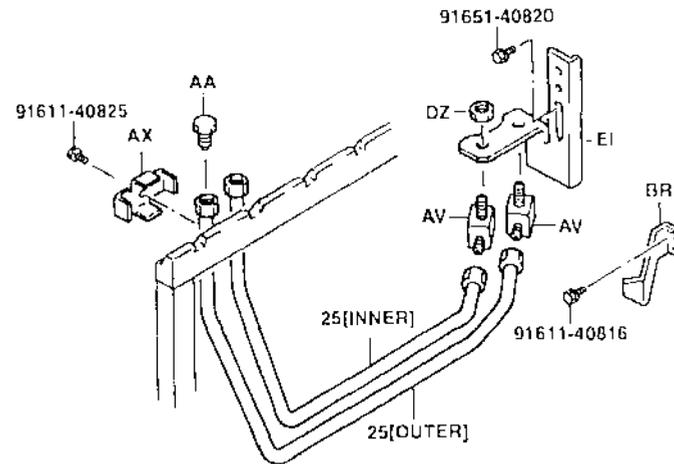

6803-300C

FIG. 6803
MAST PIPING


6803

MAIN


97/06

A410.A450..QFV

A450..QFV

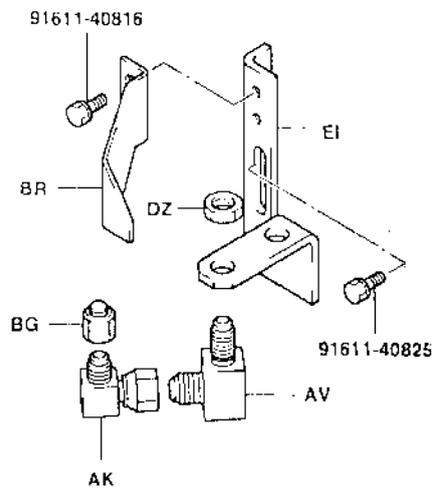

6803-357

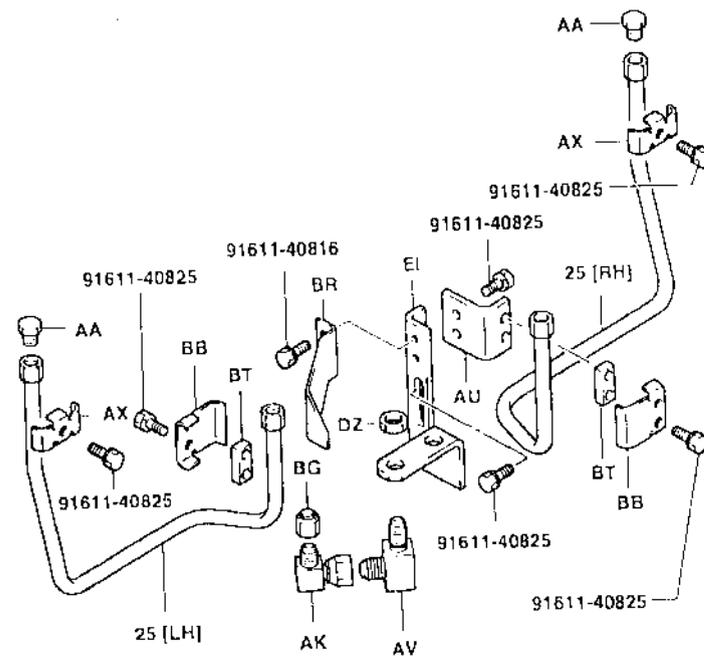

6803-358

G818-008


FIG. 6803
MAST PIPING

6803

MAIN


97/06

A450..FSV (LH) SIDE TERMINATION

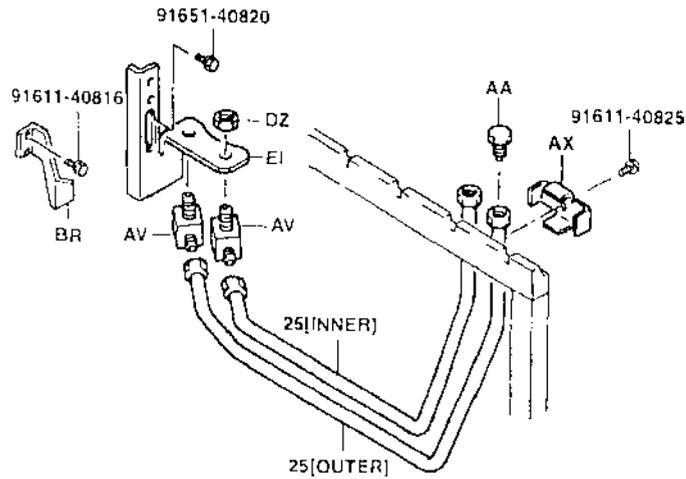


6803-298C

A450..FSV (RH)

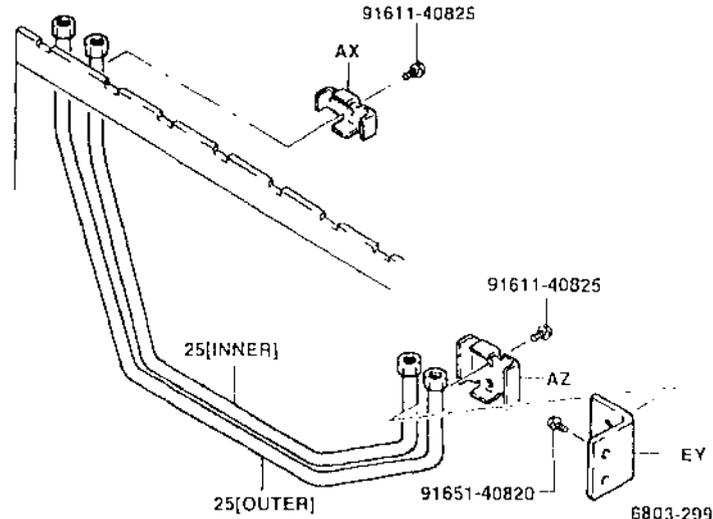


6803-299B

A450..FSV (LH) END TERMINATION

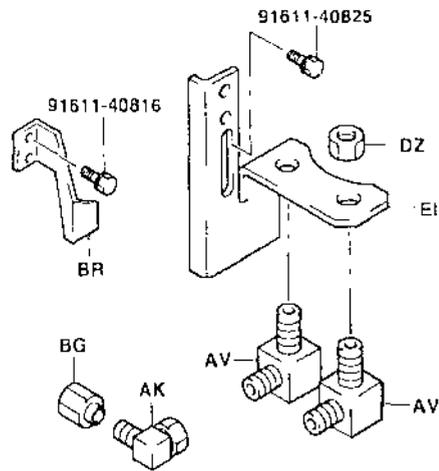

6803-353

A450..FSV (RH)

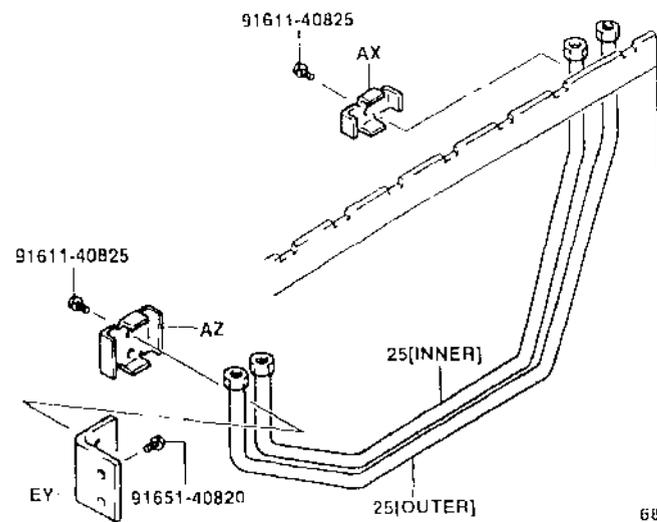

6803-301B
G818-009


FIG. 6803
MAST PIPING

6803

MAIN


97/06

A450..FV (RH, SIDE TERMINATION)

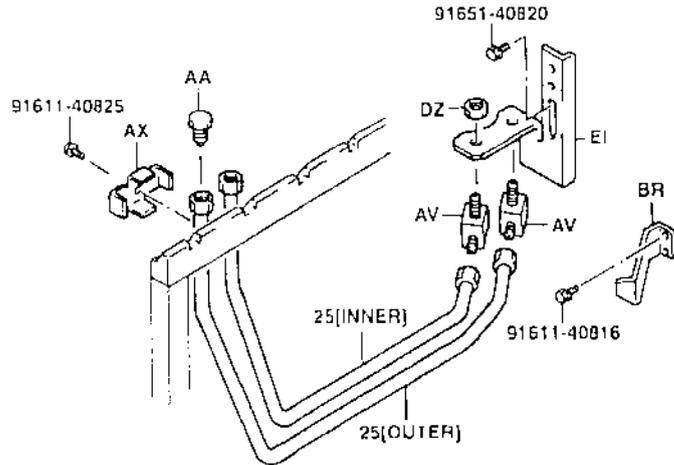

6803-300C

A450..FV (RH, CTR TERMINATION)

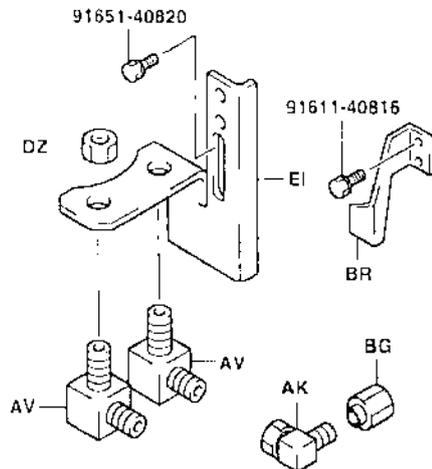

6803-354

PART NAME

CODE

CODE	PART NAME	QTY
6803-15	PULLEY ASSY, HOSE	1
6803-16	BRACKET ASSY	1
6803-25	CONNECTOR SUB-ASSY	1
6803-26	BRACKET SUB-ASSY, HOSE PULLEY	1
6803-30	PIPE SUB-ASSY, NO.1 (MAST)	1
6803-32	PIPE SUB-ASSY, NO.3 (MAST)	1
6803-33	PIPE SUB-ASSY, NO.4 (MAST)	1
6803-40	HOSE, HIGH PRESSURE (VALVE TO MAST NO.1)	1-2
6803-48	HOSE, HIGH PRESSURE	1-2
6803-49	HOSE, HIGH PRESSURE	2-4
6803-50	GUIDE, HOSE	1
6803-53	HOSE, HIGH PRESSURE	2
6803-55	HOSE, HIGH PRESSURE	2
6803-56	HOSE, HIGH PRESSURE	2
6803-57	HOSE, HIGH PRESSURE	2
6803-AA	PLUG	2-4
6803-AC	RING, SNAP	1-2
6803-AD	BRACKET, ROTARY JOINT	1
6803-AL	CLAMP, PIPE	2
6803-AF	BRACKET, HOSE REEL	1
6803-AG	FITTING	2-4
6803-AJ	CLAMP	1-2
6803-AX	FITTING	2
6803-AP	BRACKET, RH	1
6803-AU	PLATE	1
6803-AV	FITTING	2
6803-AX	CLAMP, PIPE	1-2
6803-AZ	CLAMP, HOSE	1
6803-BB	CLAMP	1-2
6803-BE	CLAMP, HOSE	2-28
6803-BG	CAP	2
6803-BR	PLATE	1
6803-B5	HAND	1
6803-BT	SPACER	2
6803-BY	BRACKET SUB-ASSY	1
6803-BZ	PIN	1-2
6803-CA	PULLEY	2-4
6803-CB	BOLT	5
6803-DH	CLAMP	1
6803-DR	PULLEY	2-4
6803-DS	PULLEY	2-4
6803-DT	BRACKET	1
6803-DV	STOPPER SUB-ASSY	1
6803-DZ	NUT	2-6
6803-EU	PIPE SUB-ASSY	1
6803-EC	PIPE SUB-ASSY	1
6803-EF	WASHER, PLATE	2-3
6803-EI	BRACKET SUB-ASSY	1
6803-EJ	BRACKET SUB-ASSY, GUIDE	1
6803-EK	RING, SHAFT SNAP	2-3
6803-EN	PLATE SUB-ASSY	1
6803-LO	PLATE	1-14
6803-EH	GUIDE, HOSE	1
6803-ES	PIN	1
6803-EU	GUIDE SUB-ASSY	1
6803-EV	GUIDE SUB-ASSY	1
6803-EX	BRACKET SUB-ASSY	1
6803-FY	PLATE	1
6803-FB	PLATE	1-2

G818-010E


FIG. 7709
SIDE SHIFT FORK PIPING

7709

MAIN


97/06

F98..FSV.FV.QFV

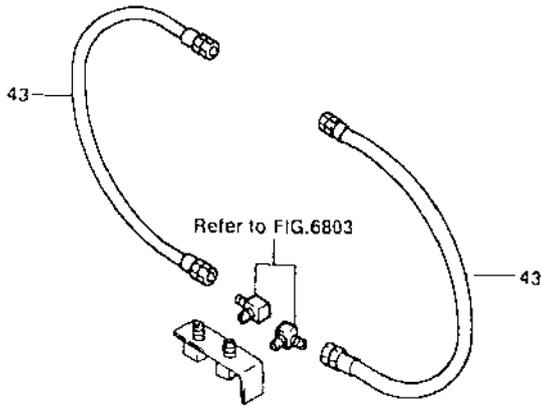

7709-105

E98..V

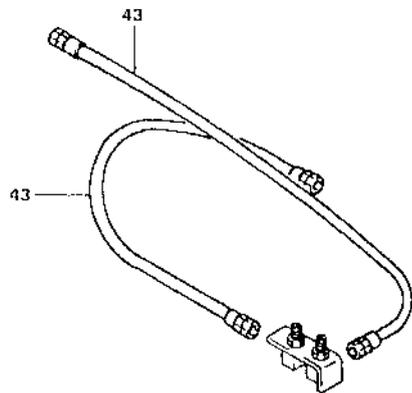

7709-106

PART NAME	PART NAME	QTY
CODE		
7709-43	HOSE, HIGH PRESSURE, NO.1	2

G818-001E


FIG. 8201
SIDE SHIFT FORK

8201

MAIN

97/04

E9#

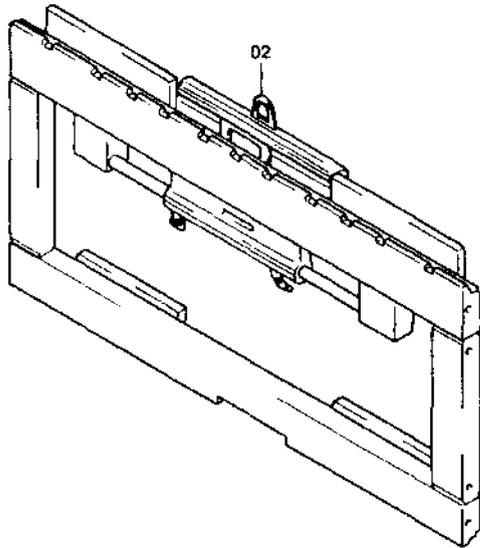

8201-096

PART NAME	PART NAME	QTY
CODE		
8201-02	SHIFTER ASSY. SIDE	1

G818-001E

MEMO