

TOYOTA INDUSTRIAL VEHICLE

PARTS CATALOG

5FBC18,20,25
5FBCH20,25
30-5FBC18,20,25
30-5FBCH20,25
No. G236-1

TOYOTA MOTOR CORPORATION
TOYODA AUTOMATIC LOOM WORKS, LTD.

TOYOTA

FORKLIFT TRUCK

PARTS CATALOG

MODEL	5 F B C	
FRAME NO.	5 F B C	
LIFTING HEIGHT		mm

DESCRIPTION

Cold Storage Model Type 45S 36V Electrical System 48V Electrical System	

<p>TOYOTA MOTOR CORPORATION TOYODA AUTOMATIC LOOM WORKS, LTD.</p>

QUICK REFERENCE INDEX

INTRODUCTION	
ELECTRICAL SYSTEM	
CHASSIS	
BODY	
ELECTRICAL SYSTEM	
MAST	
HYDRAULIC SYSTEM	

GENERAL INFORMATION

This parts catalog has been prepared for the customers of Toyota Industrial Vehicles and this shows only the part name codes instead of parts numbers.

When ordering parts from your local Toyota dealer, please specify the complete model number of the truck, the engine number or frame number. Also it is essential that you specify the part name codes described in the pages of illustrations and text.

The complete model number and frame number are shown in the front page of this catalog. All the columns in this quick reference index are supposed to be filled out by both the factory and your local dealer.

For the industrial vehicle with optional equipment, which is described in the lower part of the DESCRIPTION, it is imperative for you to specify optional equipment when ordering parts.

Your Toyota dealer has always been furnished with enough information to decode the correct part numbers based on your information of model number, engine number or frame number as well as part name code.

INFORMATIONS D'ORDRE GENERAL

Ce catalogue de pièces a été préparé pour les propriétaires de Véhicules Industriels Toyota. On n'y trouvera que les codes de désignation de pièces au lieu des numéros de pièces.

Pour la commande de pièces auprès de votre concessionnaire Toyota, prière de spécifier le numéro de modèle complet de l'engin, le numéro du moteur ou le numéro du châssis. Il est aussi nécessaire de spécifier les codes de désignation de pièces comme ils sont décrits dans les pages d'illustrations et dans le texte.

Le numéro de modèle complet et le numéro de châssis sont indiqués en première page de ce catalogue. Toutes les colonnes de l'index de référence rapide devraient être remplies par l'usine et par votre concessionnaire.

Pour le véhicule industriel avec équipement optionnel, décrit en bas de page sous la rubrique "DESCRIPTION", il convient de bien spécifier qu'il s'agit de cet équipement lors de commande de pièces.

Votre concessionnaire Toyota est toujours suffisamment informé pour décoder les numéros de pièces sur la base de votre information du numéro de modèle, du numéro de moteur ou de châssis, et des codes de désignation de pièces.

INFORMACION GENERAL

Este catálogo de piezas ha sido preparado para los clientes de vehículos industriales de TOYOTA, e incluye tan sólo los códigos de nombre de pieza en lugar de los números de pieza.

Cuando solicite piezas a su distribuidor local de TOYOTA especifique por favor el número de modelo completo del vehículo, el número de motor o el número de bastidor. Asimismo, es esencial que Vd. especifique los códigos de nombre de pieza descritos en las páginas de ilustraciones y de texto.

El número completo de modelo y el número de bastidor se indican en la portada de este catálogo. Se supone que todas las columnas de este índice de referencia se han rellenado, tanto por parte de la fábrica como por parte de su distribuidor local.

En lo que concierne a los vehículos industriales con equipos opcionales, que se describen en la parte baja de la DESCRIPCION, es absolutamente necesario que especifique equipos opcionales cuando solicite piezas de repuesto.

Su distribuidor local de TOYOTA posee la información necesaria para descifrar los números correctos de cada pieza a base de su información de número de modelo, número de motor o número de bastidor, así como el código de nombre de la pieza.

ALLGEMEINE INFORMATION

Dieser Teilekatalog wurde für die Benutzer von Toyota Industriefahrzeugen zusammengestellt und zeigt anstelle von Teilenummern nur die Teilennamen-Kodes.

Geben Sie bei Teilebestellungen von Ihrem Toyota-Händler am Platz bitte die vollständige Modellnummer des Fahrzeugs, die Motornummer oder Fahrgestellnummer an. Es ist auch erforderlich, daß Sie die in den Illustrationen und im Text beschriebenen Teilennamen-Kodes angeben.


Die vollständige Modellnummer und Fahrgestellnummer finden Sie auf der Vorderseite dieses Katalogs. Alle Spalten in dieser Bezugstabelle sollen sowohl vom Werk als von Ihrem Händler am Platz ausgefüllt werden.

Für Industriefahrzeuge mit Sonderausrüstung, welche im unteren Teil der BESCHREIBUNG erläutert ist, müssen Sie bei der Bestellung von Teilen unbedingt diesbezügliche Angaben machen.

Ihr Toyota-Händler verfügt stets über genügend Information, um die richtigen Teilenummern zu entschlüsseln, basiert auf Ihren Angaben zu Modellnummer, Motornummer oder Fahrgestellnummer und den Teilennamen-Kodes.

ILLUSTRATION AND PART NAME CODE TEXT PAGE COMPOSITION

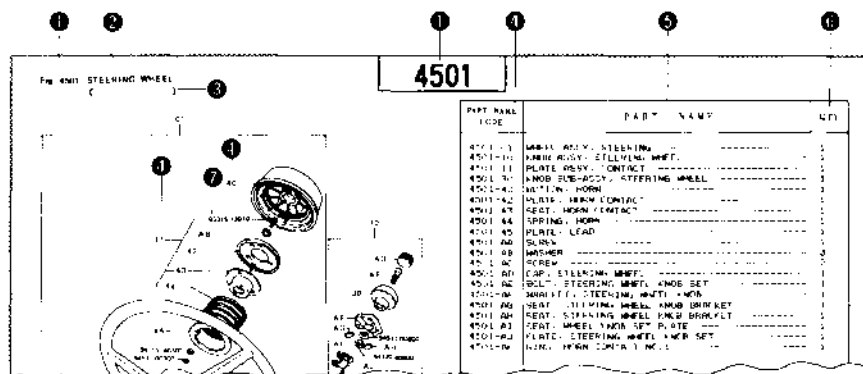 Essentially, one (1) page will present both the illustration and part name code. However, when the space for text page is not enough the next page will be used in succession.



- Figure number**
This parts catalog has been prepared according to the figure numbers.
- Figure title**
A representative part name which is the major assembly part name is shown as the figure title of the illustration.
- Sub title**
The optional name or special specification of each illustration are indicated.
- Part name code**
This is a combination of figure number and codes of illustrations pertaining to each part. This is a key for your Toyota dealer to find the correct part numbers.
- Part name**
As a rule, the part name is indicated for each of the part name codes.
- QTY (Quantity)**
The quantity column indicates the utilized pieces of part name code unit. When the utilized quantity changes according to each of the vehicles, maximum is indicated.
When the utilized quantity of the parts differs or is more than 100 pieces, quantity 99 is indicated.
- Standard parts numbers**
The standard parts such as the bolts, nuts, washer, etc. are described with parts numbers. When ordering these parts, specify parts numbers.

COMPOSICION DE LAS PAGINAS DE ILUSTRACIONES Y DE TEXTO DE CODIGOS DE NOMBRE DE PIEZAS


Básicamente, una (1) página incluirá tanto la ilustración como el código de nombre de la pieza.

No obstante, si el espacio no fuese suficiente, se utilizará la página siguiente.

- Número de figura**
Este catálogo de piezas se ha preparado de acuerdo con los números de las figuras.
- Título de las figuras**
Como título de las figuras de la página de ilustraciones, se incluye un nombre que sea representativa del nombre del mayor conjunto.
- Subtítulo**
Se indican el nombre especial o las especificaciones especiales de cada ilustración.
- Código de nombre de pieza**
Se trata de una combinación de número de figura y de código de las ilustraciones correspondientes a cada pieza. Esta es la clave para que su distribuidor local de TOYOTA pueda encontrar el número de pieza correcto.
- Nombre de la pieza**
Como norma, se indica el nombre de cada uno de los códigos de nombre de pieza.
- QTY (Cantidad)**
La columna de cantidad indica el número de piezas utilizadas de cada unidad de código de nombre de pieza.
Cuando la cantidad utilizada es intercambiable entre cada uno de los vehículos, se indica el máximo.
Cuando la cantidad de piezas utilizadas pueda diferir o ser superior a 100, se indica como cantidad 99.
- Números de piezas normalizadas**
Las piezas conjuntas, tales como pernos, tuercas, arandelas etc., se describen con número de pieza. Cuando solicite tales piezas, indique su número de pieza.

ILLUSTRATION ET COMPOSITION DU DE TEXTE DE CODE DE DESIGNATION DE PIECE

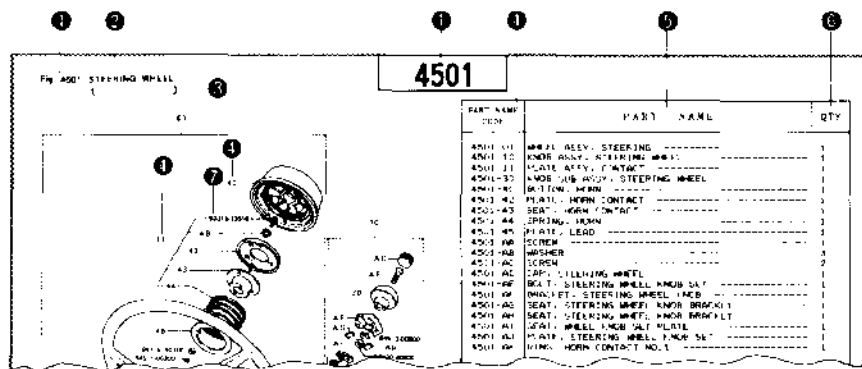 Une (1) page contiendra essentiellement une illustration et ses codes de designation de piece. Toutefois, lorsque l'espace réservé au texte est insuffisant, la continuation se trouvera sur la page suivante.



- 1** Numéro de figure
Ce catalogue de pièces a été préparé en fonction des numéros de figures.
- 2** Titre de figure
Une désignation de pièce représentative, celle d'une pièce d'un ensemble important, est indiquée comme titre de figure de l'illustration.
- 3** Sous-titre
La désignation optionnelle ou les spécifications spéciales de chaque illustration sont indiquées.
- 4** Code de désignation de pièce
Obtenu en combinant le numéro de figure et les codes des illustrations inhérents à chaque pièce. Ce code permettra à votre concessionnaire Toyota de trouver les numéros de pièces corrects.
- 5** Désignation de pièce
La désignation de la pièce est indiquée pour chacun des codes de désignation de pièce.
- 6** Q'ty (quantité)
La colonne quantité indique les pièces utilisées de l'unité de code de désignation de pièce. La quantité maximum est indiquée quand la quantité utilisée diffère pour chacun des véhicules. Quand la quantité de pièces utilisées diffère ou lorsqu'elle dépasse 100 pièces, la quantité 99 est indiquée.
- 7** Numéros de pièces standard
Les pièces standard comme les boulons, les écrous, les rondelles, etc. sont décrits dans les numéros de pièces. Pour commander ces pièces, priez de spécifier les numéros de pièces.

ABBILDUNG UND TEXTSEITENAUFBAU FÜR TEILENAMEN-KODE

Grundsätzlich finden Sie auf einer (1) Seite sowohl die Abbildung als auch den Teilnamen-Kode.
Wenn für den Text jedoch nicht genügend Platz vorhanden ist, wird er auf der nächsten Seite fortgesetzt.

- 1** Abbildungsnummer
Dieser Teilekatalog wurde nach Abbildungsnummern zusammengestellt.
- 2** Abbildungstitel
Ein stellvertretender Teilname, welcher zugleich die Bezeichnung für die Hauptbaugruppe ist, wird als Abbildungstitel der Illustration angegeben.
- 3** Untertitel
Ein zusätzlicher Name oder eine besondere Kennzeichnung werden für jede Illustration angegeben.
- 4** Teilnamen-Kode
Dies ist eine Kombination von ziffern und Abbildungskodes, die jedes Teil betreffen. Es ist ein Schlüssel für Ihren Toyota-Händler, um die richtigen Teilnummern zu finden.
- 5** Teilname
Grundsätzlich wird der Teilname für alle Teilnamen-Kodes angegeben.
- 6** QTY (Menge)
Die Mengenspalte gibt die benutzte Stückzahl von Teilnamen-Kode-Einheiten an.
Wenn die benutzte Stückzahl je nach Fahrzeug Verschieden ist, wird die Höchstmenge angegeben.
Wenn die benutzte Menge 100 Stück überschreiten kann, wird als Menge 99 angegeben.
- 7** Standardteile-Nummern
Die Standardteile, wie Schrauben, Muttern, Unterlegscheiben usw., sind in den Teilnummern beschrieben. Geben Sie bei Bestellung dieser Teile die Teilnummern an.


DATA PLATE & SERIAL NUMBERS

For retrieving correct part numbers, it's indispensable to know the truck model, as well as frame number (or engine number).
Customers can obtain said information in the data plate on the truck or in this user parts catalog.

PLAQUE DE DONNEES TECHNIQUES & NUMEROS DE SERIE


Pour relever correctement le numéro des pièces, il est indispensable de connaître le modèle de l'engin, ainsi que le numéro du châssis (ou du moteur).
Les propriétaires peuvent trouver ladite information sur la plaque de données techniques de l'engin ou dans le présent ouvrage.

Data plate
Placa de datos
Plaque de données techniques
Datenplatte

TOYOTA	
FORK LIFT TRUCK	
MODEL	
CODE NO. OF SPECIAL MODEL, MODEL OF ATTACHMENT	
FRAME NO.	
LIFTING HEIGHT	
CAPACITY	
TRUCK WEIGHT WITHOUT BATTERY	
BATTERY	MAX. VOLT
WEIGHT	MIN. V
PROD. YEAR	
 TOYOTA	
TOYODA AUTOMATIC LOOM WORKS, LTD.	
KARIYA, JAPAN	
57682-22501-71	

Frame Number
(Top of the frame)
Número de bastidor
(Parte superior del bastidor)

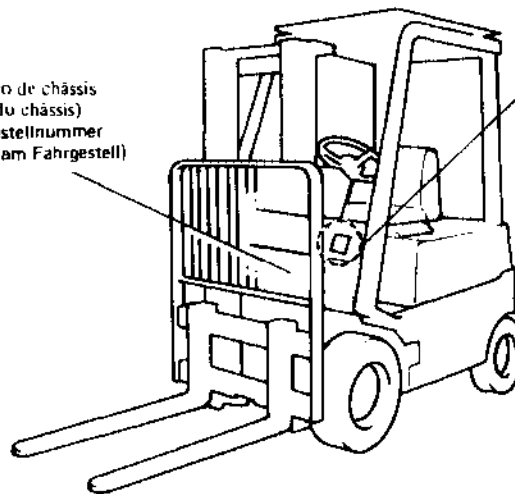 Numéro de châssis
(haut du châssis)
Fahrgestellnummer
(Oben am Fahrgestell)



Data plate
Placa de datos
Plaque de données techniques
Datenplatte

PLACA DE DATOS Y NUMEROS DE SERIE




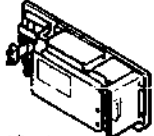 
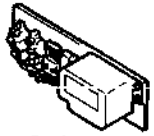 


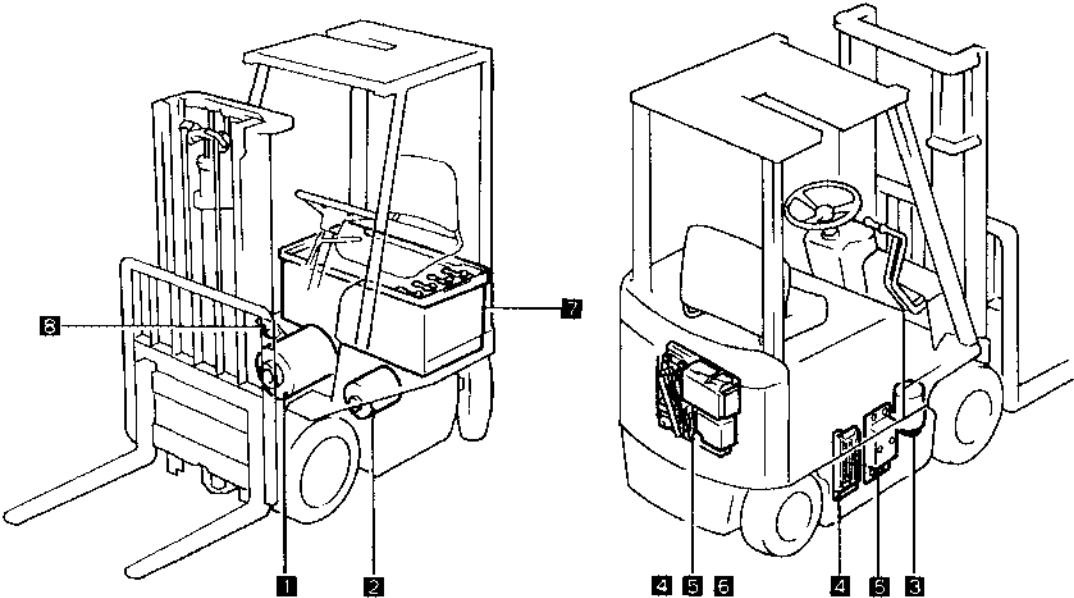 
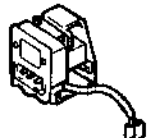 

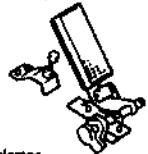 
Para obtener los números de pieza correctos, es indispensable conocer el modelo del vehículo, así como el número del bastidor (o del motor).
Los clientes pueden obtener dicha información por la placa de datos del vehículo o este catálogo de piezas para el usuario.

DATENPLATTE & SERIENNUMMERN

Um die richtige Teilenummer zu ermitteln, müssen unbedingt das Fahrzeugmodell sowie die Fahrstellnummer (oder die Motornummer) bekannt sein.
Kunden können diese Angaben von der Datenplatte am Fahrzeug oder in diesem Teilekatalog für Benutzer entnehmen.

ILLUSTRATED INDEX
 INDEX ILLUSTRÉ
 ILLUSTRIRTES INHALTSVERZEICHNIS
 INDICE ILLUSTRADO

FIG. INDEX

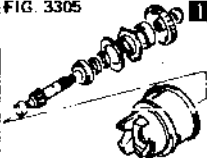 
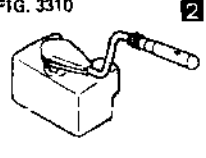 
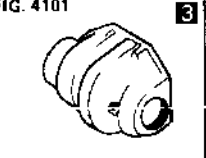 
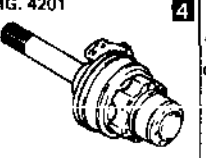 

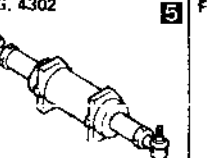 
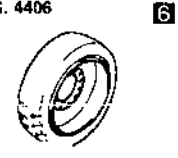 
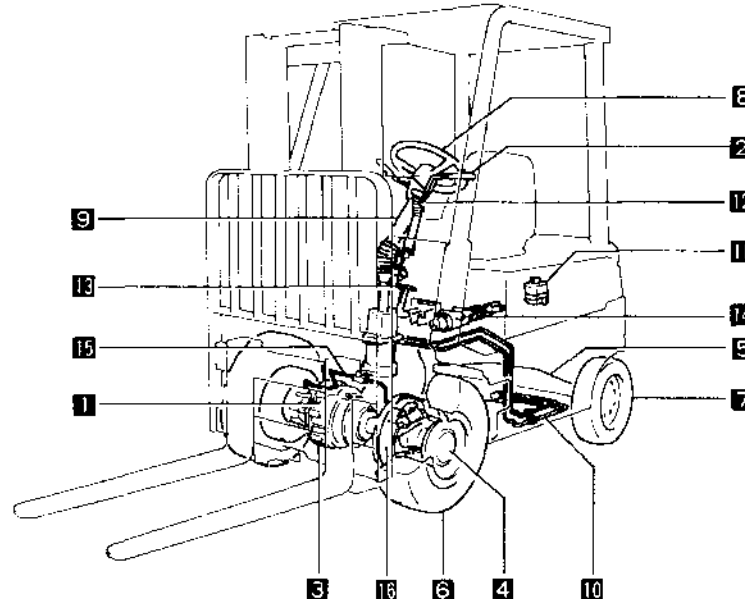 
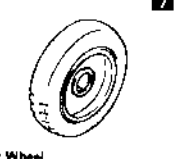 
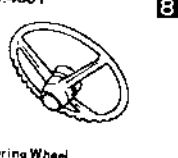 

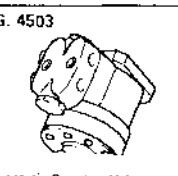 
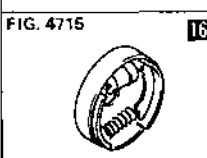 

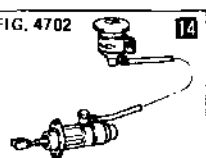 
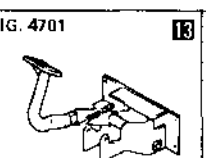 
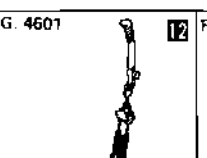 
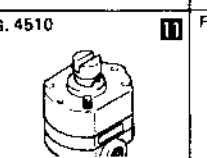 
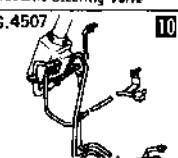 
<p>FIG. 1401</p>  <p>Drive Motor</p>	<p>FIG. 1402</p>  <p>Pump Drive Motor</p>	<p>FIG. 1403</p>  <p>P/S Pump Drive Motor</p>	<p>FIG. 2401</p>  <p>Control Panel</p>	<p>FIG. 2402</p>  <p>Contactor Panel</p>	<p>FIG. 2403</p>  <p>Contactor Assy</p>	<p>FIG. 2501</p>  <p>Battery</p>
<p>ELECTRICAL GROUP</p> 						<p>FIG. 2511</p>  <p>Battery Mount Charger</p>
						<p>FIG. 2512</p>  <p>Battery Separate Charger</p>
						<p>FIG. 2611</p>  <p>Accelerator</p>

v. 0000-525



ILLUSTRATED INDEX
 INDEX ILLUSTRÉ
 ILLUSTRIRTES INHALTSVERZEICHNIS
 INDICE ILLUSTRADO



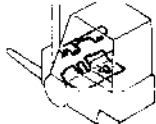 




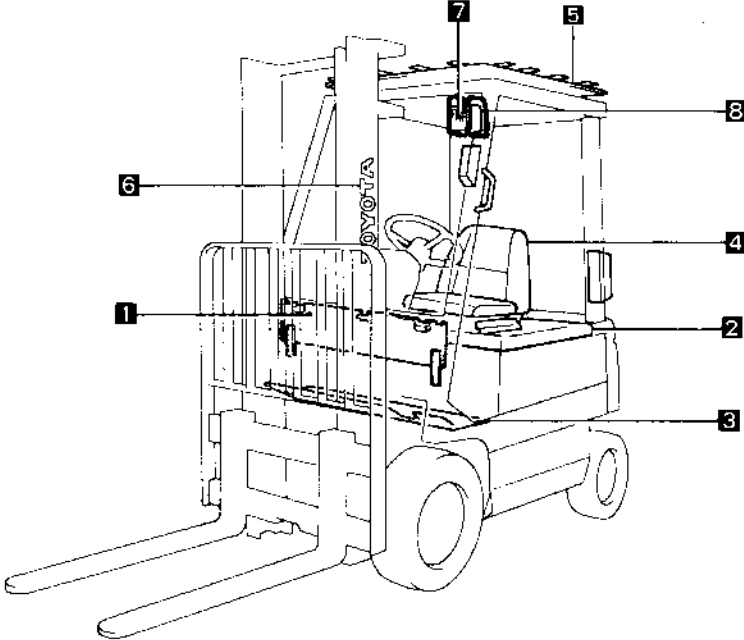 

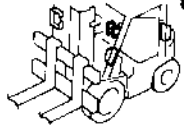 
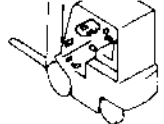 
FIG. INDEX

<p>FIG. 3305 1</p>  <p>Gear Case & Gear</p>	<p>FIG. 3310 2</p>  <p>Change Lever</p>	<p>FIG. 4101 3</p>  <p>Differential</p>	<p>FIG. 4201 4</p>  <p>Front Axle Shaft</p>	<p>FIG. 4301 5</p>  <p>Rear Axle & Tie-Rod</p>	<p>FIG. 4302 5</p>  <p>Rear Axle Cylinder</p>	<p>FIG. 4406 6</p>  <p>Front Wheel</p>	
<p>CHASSIS GROUP</p> 							<p>FIG. 4407 7</p>  <p>Rear Wheel</p>
							<p>FIG. 4501 8</p>  <p>Steering Wheel</p>
							<p>FIG. 4502 9</p>  <p>Steering Post</p>
							<p>FIG. 4503 10</p>  <p>Hydrostatic Steering Valve</p>
<p>FIG. 4715 13</p>  <p>Drum Brake</p>	<p>FIG. 4714 15</p>  <p>Brake Pipe</p>	<p>FIG. 4702 14</p>  <p>Brake Master Cylinder</p>	<p>FIG. 4701 18</p>  <p>Brake Pedal</p>	<p>FIG. 4601 12</p>  <p>Parking Brake</p>	<p>FIG. 4510 11</p>  <p>Steering Oil Pump</p>	<p>FIG. 4507 10</p>  <p>Draglink & Steering Piping</p>	

0000-526

ILLUSTRATED INDEX
 INDEX ILLUSTRÉ
 ILLUSTRIRTES INHALTSVERZEICHNIS
 INDICE ILLUSTRADO

FIG. INDEX


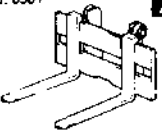 

 



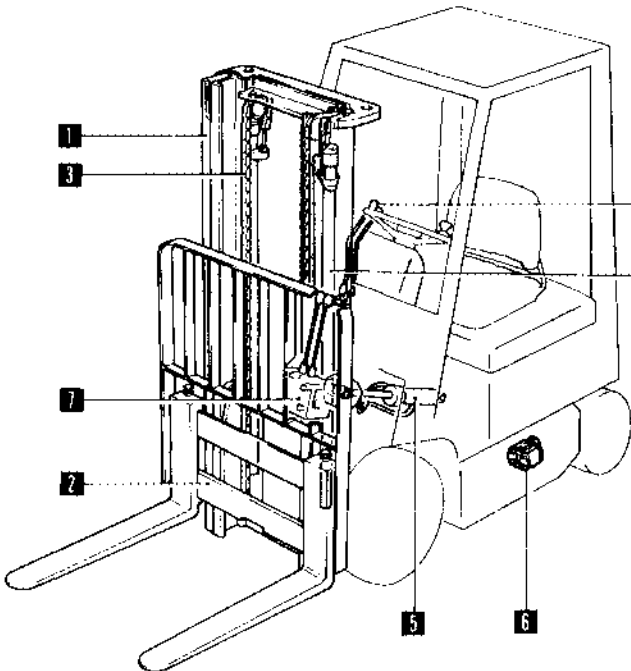 
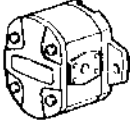 
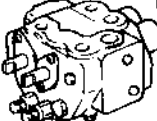 



<p>FIG. 5101</p>  <p>Frame Weight</p>	<p>FIG. 5201</p>  <p>Hood & Hinge</p>	<p>FIG. 5301</p>  <p>Instrument Panel & Floor</p>	<p>FIG. 5308</p>  <p>Driver Seat</p>	<p>FIG. 5401</p>  <p>Head Guard & Accessory</p>	<p>FIG. 5405</p>  <p>Indicator Plate</p>	<p>FIG. 5602</p>  <p>Wiring & Clamp</p>
						<p>FIG. 5611</p>  <p>Lamp</p>
						<p>FIG. 5612</p>  <p>Lamp Bracket</p>
						<p>FIG. 5702</p>  <p>Meter & Switch</p>

Y-0000-523



ILLUSTRATED INDEX
 INDEX ILLUSTRÉ
 ILLUSTRIRTES INHALTSVERZEICHNIS
 INDICE ILLUSTRADO

FIG. INDEX

<p>FIG. 6101 1</p>  <p>Mast</p>	<p>FIG. 6301 2</p>  <p>Lift Bracket & Fork</p>	<p>FIG. 5302 3</p>  <p>Chain & Chain Wheel</p>	<p>FIG. 6501 (V) 4</p>  <p>Lift Cylinder</p>	<p>FIG. 6502 (FV, FSV) 4</p>  <p>Front Lift Cylinder</p>	<p>FIG. 6503 (FV, FSV) 4</p>  <p>Rear Lift Cylinder</p>	<p>FIG. 6511 5</p>  <p>Tilt Cylinder</p>	
<p>MAST, HYDRAULIC COMPONENT GROUP</p> 							<p>FIG. 6701 6</p>  <p>Oil Pump</p>
							<p>FIG. 6705 7</p>  <p>Oil Control Valve</p>
							<p>FIG. 6709 8</p>  <p>Oil Control Valve Link</p>
							<p>FIG. 6801</p>  <p>Body Piping</p>
							<p>FIG. 6802</p>  <p>Mast Piping</p>


Y-0000-524

FIG. 0901
STANDARD TOOL

0901

MAIN

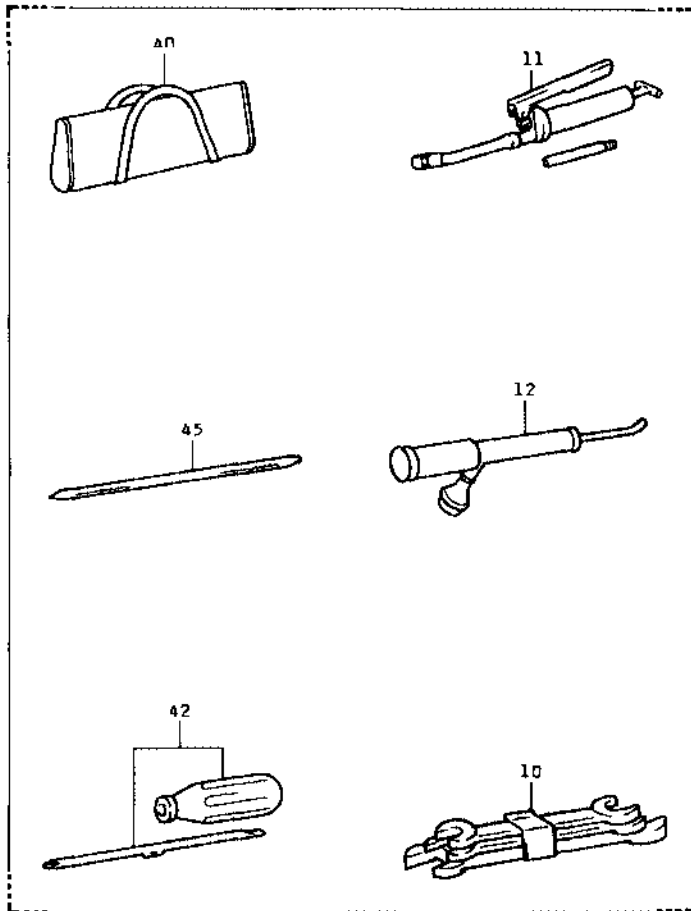 91/09



PART NAME CODE	PART NAME	QTY
0901-10	SPANNER SET	1
0901-11	PUMP ASSY, GREASE	1
0901-12	METER ASSY. HYDRAULIC SAILING	1
0901-40	BAG, TOOL	1
0901-42	DRIVER, SCREW	1
0901-45	ROD, THERMOMETER	1

0901-060

G236-001E

FIG. 1401
DRIVE MOTOR

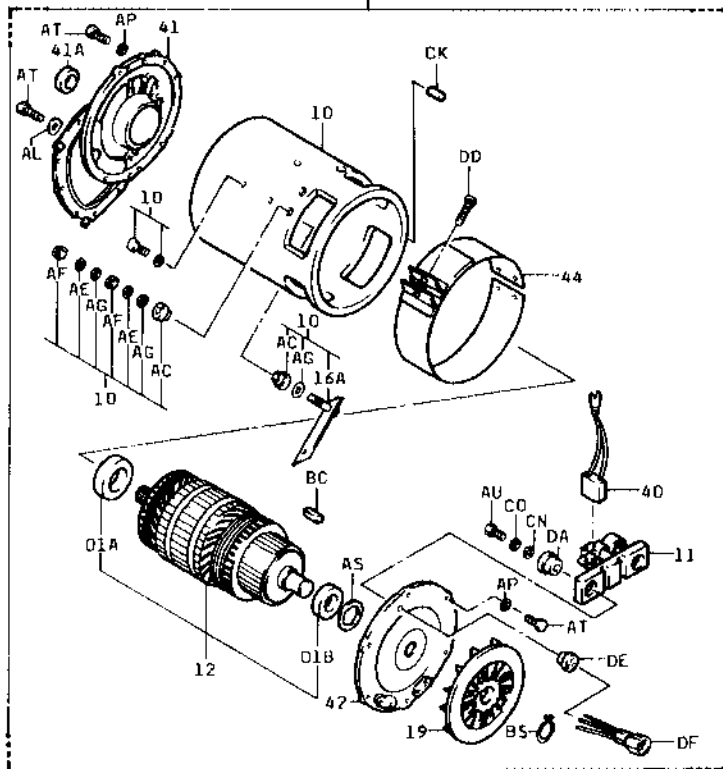 
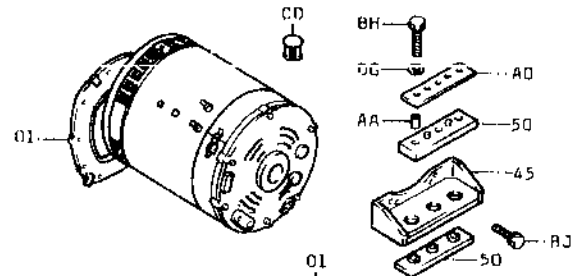 
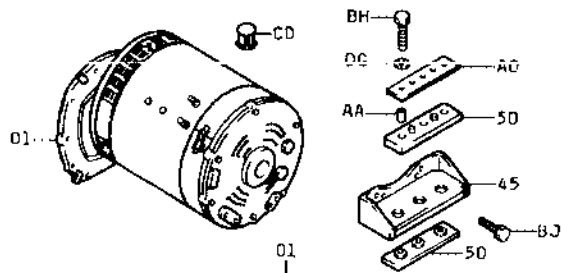 
1401

MAIN


91/09

DPR, DHM

STM, HCB



1401-087

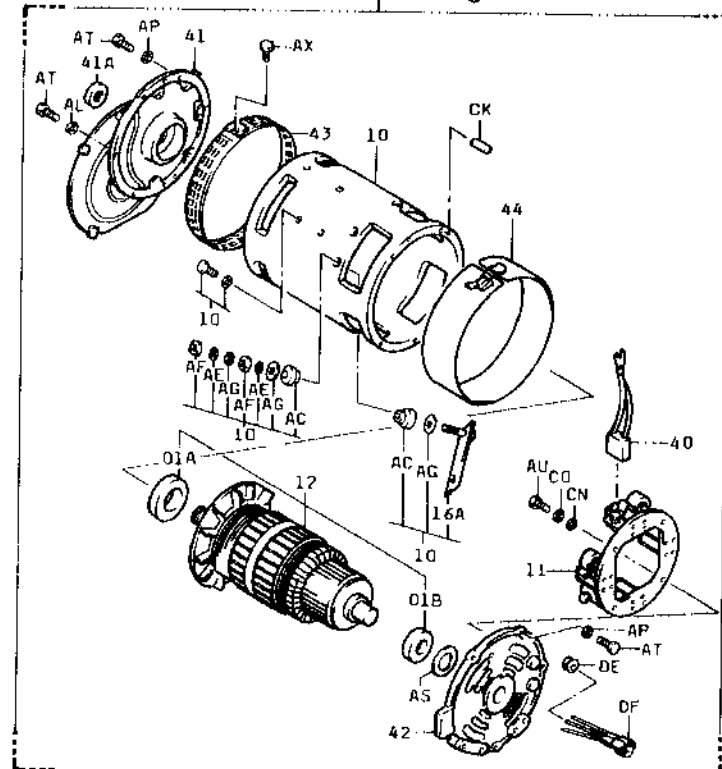 

1401-086

G236-001

FIG. 1401
DRIVE MOTOR

1401

MAIN

91/09

PART NAME CODE	PART NAME	QTY
1401-01	MOTOR ASSY, DRIVE	1
1401-01A	BEARING, DRIVE MOTOR, NO.1	1
1401-01B	BEARING, DRIVE MOTOR, NO.2	1
1401-10	YOKE ASSY	1
1401-11	HOLDER ASSY, BRUSH	1- 3
1401-12	ARMATURE ASSY, DRIVE	1
1401-16A	BOLT, STUD (TERMINAL)	1
1401-19	FAN	1
1401-40	BRUSH, DRIVE MOTOR	4
1401-41	BRACKET, NO.1	1
1401-41A	SEAL, DIL (FOR BRACKET)	1
1401-42	BRACKET, NO.2	1
1401-43	COVER, MOTOR	1
1401-44	COVER, BRUSH	1
1401-45	BRACKET, DRIVE MOTOR MOUNTING, NO.1	1
1401-50	RUBBER, CUSHION (FOR MOTOR MOUNTING)	2
1401-AA	COLLAR	3
1401-AC	INSULATOR	8
1401-AE	WASHER, SPRING	8
1401-AF	NUT	8
1401-AG	WASHER, PLATE	12
1401-AL	WASHER, PLATE	2
1401-AD	PLATE, CUSHION RUBBER	1
1401-AP	WASHER, SPRING	12
1401-AS	WASHER, WAVE	1
1401-AT	BOLT	14
1401-AU	BOLT	4- 8
1401-AX	BOLT	1
1401-BC	KEY	1
1401-BH	BOLT	3
1401-BJ	BOLT	4
1401-B5	RING, SHAFT SNAP	1
1401-CD	PLUG	1
1401-CK	PIN	1
1401-CN	WASHER, PLATE	4- 8
1401-CO	WASHER, SPRING	4- 8
1401-DA	INSULATOR	8
1401-DD	BOLT	1
1401-DE	BUSHING	1
1401-DF	WIRE, LEAD	1
1401-DG	WASHER, SPRING	3

G236-002E

FIG. 1402
PUMP DRIVE MOTOR

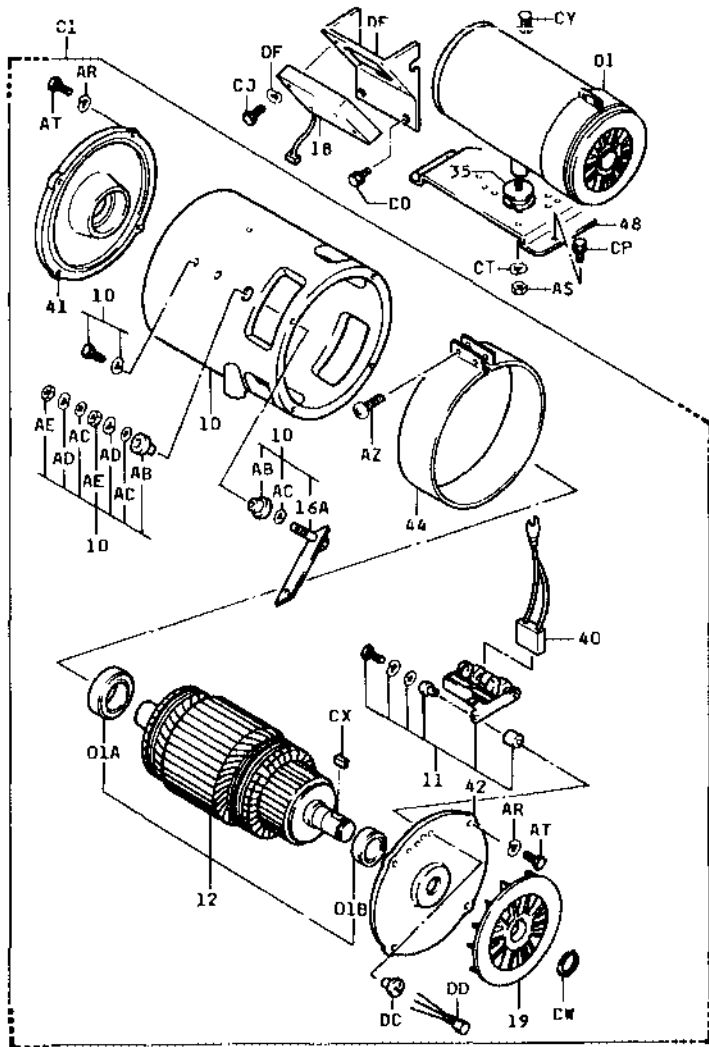 
1402

MAIN

91/09


DPR, DHM

STM, HCB



1402-090A

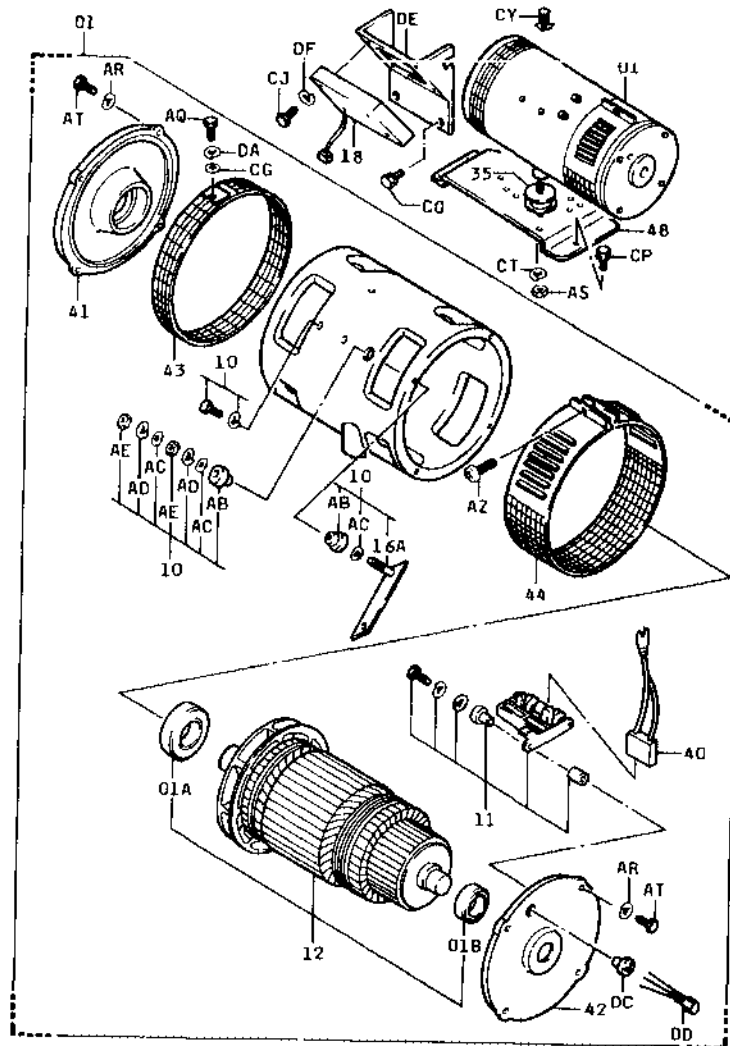 1402 090A



1402-089A

G236-001

1402 089A 0115

FIG. 1402
PUMP DRIVE MOTOR

1402

MAIN

91/09

PART NAME CODE	PART NAME	QTY
1402-01	MOTOR ASSY, PUMP	1
1402-01A	BEARING, PUMP MOTOR, NO.1	1
1402-01B	BEARING, PUMP MOTOR, NO.2	1
1402-10	YDKE ASSY, PUMP MOTOR	1
1402-11	HOLDER ASSY, PUMP MOTOR	1- 4
1402-12	ARMATURE ASSY, PUMP MOTOR	1
1402-16A	BOLT, STUD (TERMINAL)	1
1402-18	MOTOR ASSY, FAN	1
1402-19	FAN	1
1402-35	INSULATOR SUB-ASSY, MOTOR MOUNTING	3
1402-40	BRUSH, PUMP MOTOR	8
1402-41	BRACKET, NO.1	1
1402-42	BRACKET, NO.2	1
1402-43	COVER, MOTOR	1
1402-44	COVER, BRUSH	1
1402-48	PLATE, PUMP MOTOR SET	1
1402-AB	INSULATOR	4
1402-AC	WASHER, PLATE	6
1402-AD	WASHER, SPRING	4
1402-AE	NUT	4
1402-AQ	BOLT	1
1402-AR	WASHER, SPRING	8
1402-AS	NUT	3
1402-AT	BOLT	8
1402-AZ	BOLT	1- 2
1402-CG	WASHER, PLATE	1
1402-CJ	SCREW	4
1402-CO	BOLT	2
1402-CP	BOLT	3
1402-CT	WASHER, SPRING	3
1402-CW	RING, SNAP	1
1402-CX	KEY	1
1402-CY	PLUG	1
1402-DA	WASHER, SPRING	1
1402-DC	BUSHING	1- 3
1402-DD	WIRE, LEAD	1
1402-DE	BRACKET, FAN	1
1402-DF	WASHER, SPRING	4


G236-002E

FIG. 1403
POWER STEERING PUMP DRIVE MOTOR

1403

MAIN

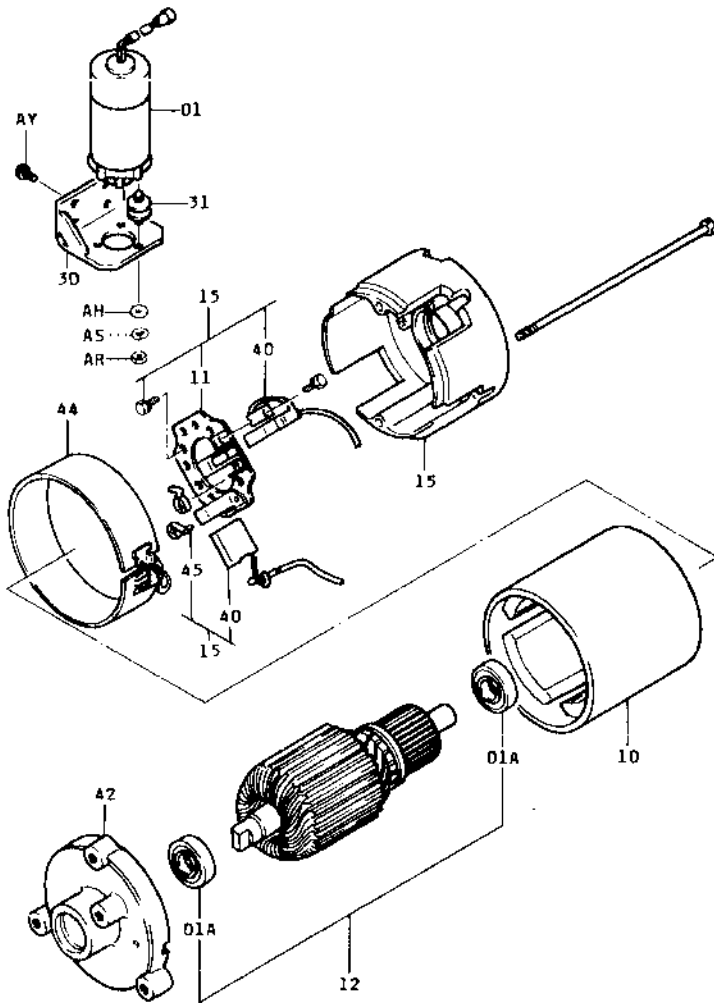 91/09




PART NAME CODE	PART NAME	QTY
1403-01	MOTOR ASSY, POWER STEERING	1
1403-01A	BEARING, POWER STEERING MOTOR	2
1403-10	YOKE ASSY, POWER STEERING MOTOR	1
1403-11	HOLDER ASSY, BRUSH	1
1403-12	ARMATURE ASSY, POWER STEERING	1
1403-15	FRAME ASSY, COMMUTATOR	1
1403-30	BRACKET SUB-ASSY, MOTOR MOUNTING	1
1403-31	INSULATOR SUB-ASSY, BODY MOUNTING	3
1403-40	BRUSH, POWER STEERING MOTOR	2
1403-42	BRACKET, NO.2	1
1403-44	COVER, BRUSH	1
1403-45	SPRING, POWER STEERING MOTOR BRUSH	2
1403-AH	WASHER, PLATE	3
1403-AR	NUT	3
1403-AS	WASHER, SPRING	3
1403-AY	BOLT	3

1403-028

G236-001E

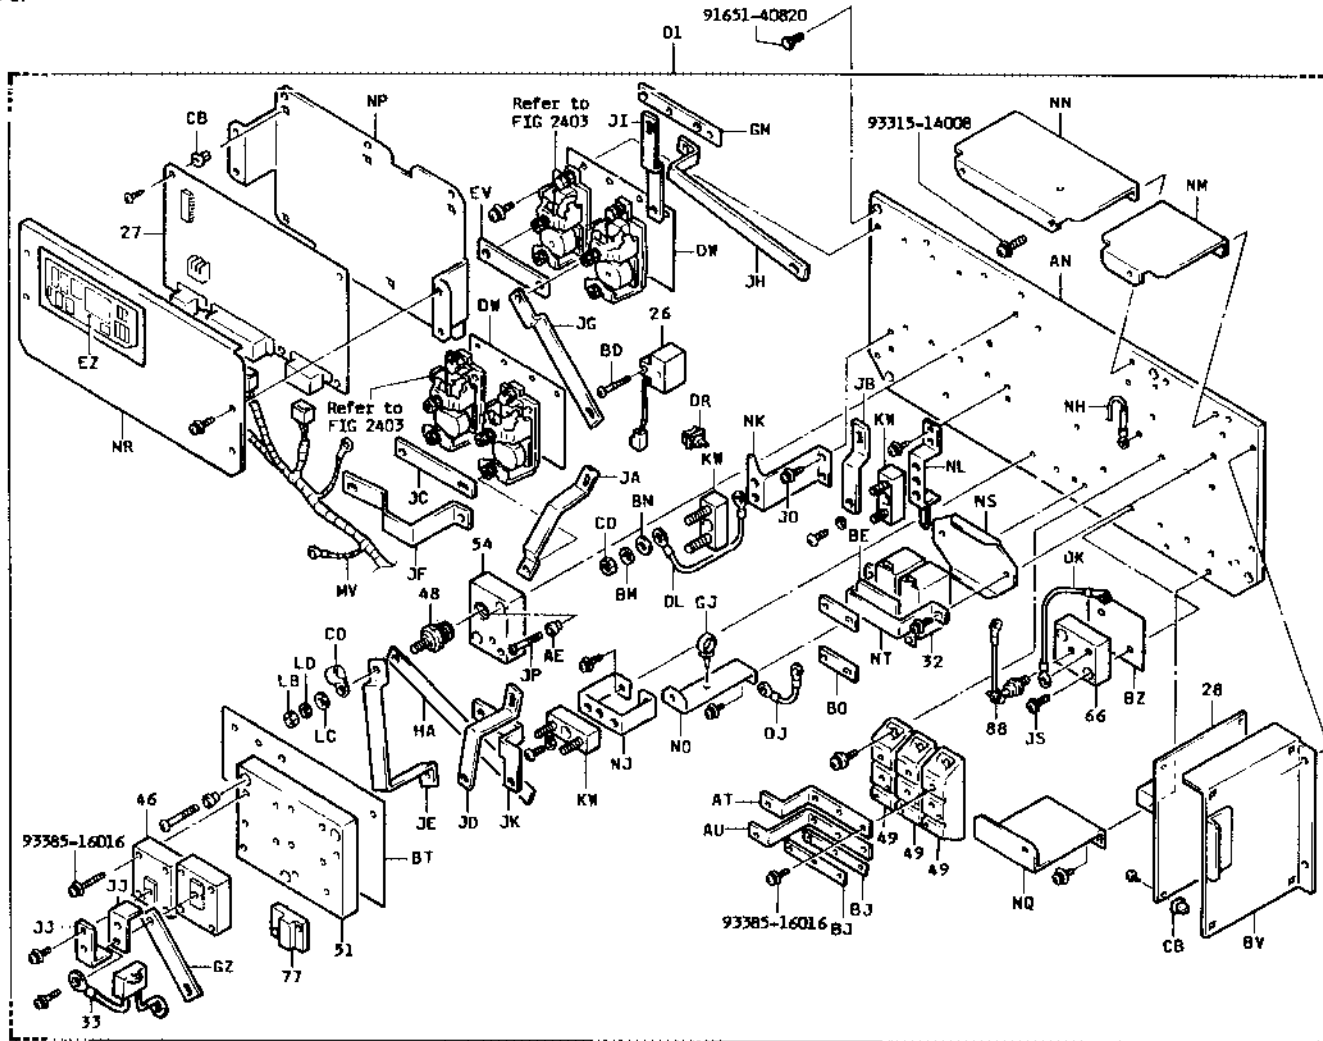 (1/2)




DC
91611-40820

2401-138C


G236-001

(2/2)

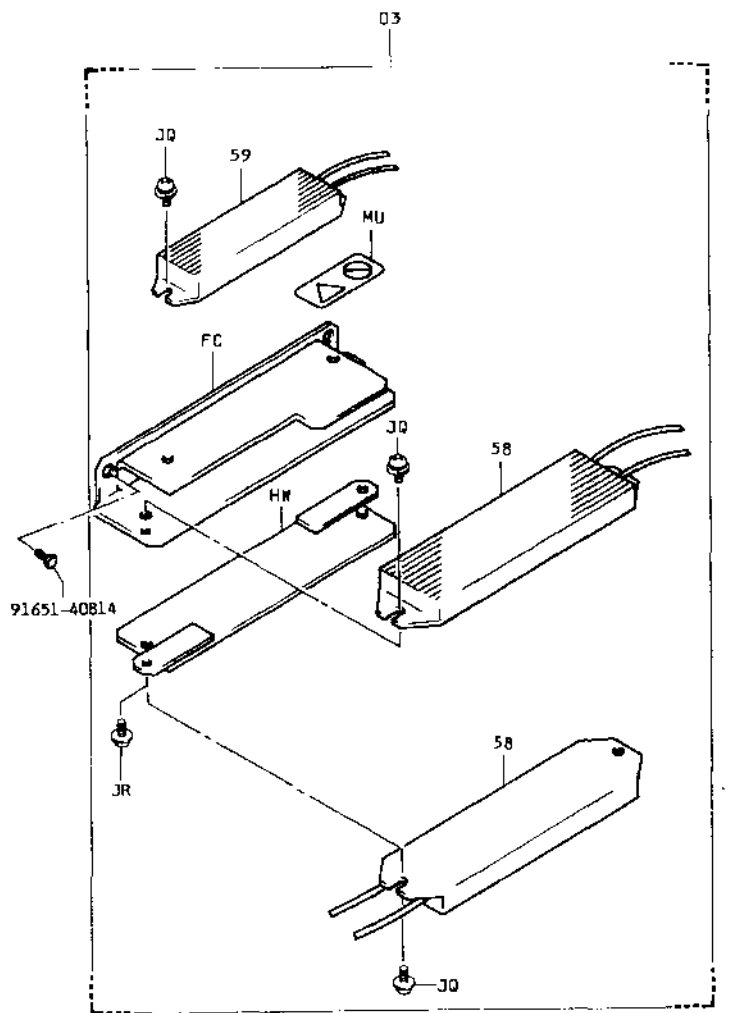 (EHP5)



2401-140A

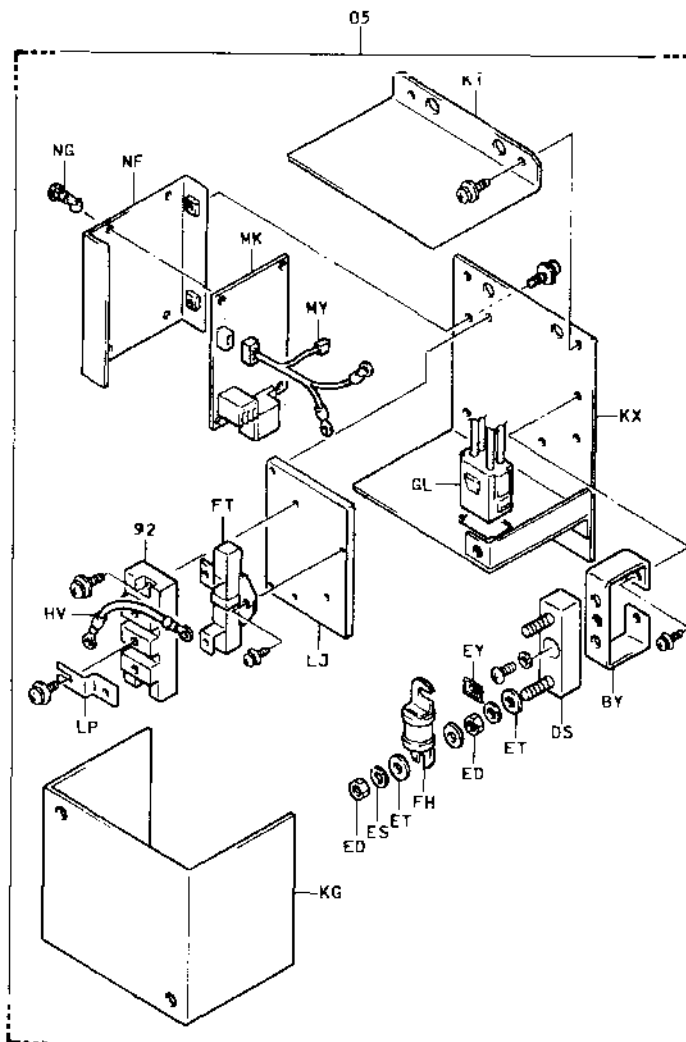 

2401-139A

G236-002

FIG-2401
CONTROL PANEL

2401

MAIN

92/02


PART NAME CODE	PART NAME	QTY
2401-01	PANEL ASSY, DRIVE CONTROL	1
2401-03	PANEL ASSY, RESISTOR	1
2401-05	PANEL ASSY, SPS CONTROL	1
2401-26	SENSOR ASSY, CURRENT	1
2401-27	BOARD ASSY	1
2401-28	BOARD ASSY	1
2401-32	CAPACITOR	2
2401-46	DIODE	2
2401-48	DIODE	1
2401-49	TRANSISTOR	3
2401-51	HEATSINK, NO.1	1
2401-54	HEATSINK, NO.2	1
2401-58	RESISTOR, NO.1	1- 2
2401-59	RESISTOR, NO.2	1
2401-66	HEATSINK	1
2401-77	TRANSISTOR	1
2401-88	DIODE SUB-ASSY	1
2401-92	TRANSISTOR	1
2401-AE	INSULATOR	7
2401-AN	BASE	1
2401-AT	BAR	1
2401-AU	BAR	1
2401-BD	SCREW	1
2401-BJ	BAR	2
2401-BH	WASHER, SPRING	9
2401-BN	WASHER, PLATE	9
2401-BO	BAR	2
2401-BT	SHEET	1
2401-BV	BRACKET SUB-ASSY	1
2401-BW	MAT	2
2401-BY	BRACKET SUB-ASSY, TERMINAL	1
2401-BZ	SHEET	1
2401-CB	GROMMET	10
2401-CD	NUT	9
2401-CQ	CLAMP	1
2401-DC	SPACER, NO.1	2
2401-DJ	WIRING, NO.1	1
2401-DK	WIRING, NO.2	1
2401-DL	WIRING, NO.3	1
2401-DR	CLAMP	1
2401-DS	TERMINAL BLOCK, FUSE	1
2401-DW	SHEET	2
2401-ED	NUT	4
2401-ES	WASHER, SPRING	4
2401-ET	WASHER, PLATE	6
2401-EV	BAR	1
2401-EY	PLATE, FUSE	1
2401-EZ	PLATE, TERMINAL NUMBER	1
2401-FC	BRACKET, RESISTOR	1
2401-FH	FUSE	1
2401-FT	RESISTOR	1
2401-GJ	CLIP	1
2401-GL	WIRING SUB-ASSY	1
2401-GM	BAR	1
2401-GZ	BAR	1
2401-HA	BAR	1
2401-HV	WIRING	1
2401-HW	BRACKET SUB-ASSY	1
2401-JA	BAR	1
2401-JB	BAR	1
2401-JC	BAR	1
2401-JD	BAR	1
2401-JE	BAR	1
2401-JF	BAR	1

PART NAME CODE	PART NAME	QTY
2401-JG	BAR	1
2401-JH	BAR	1
2401-JI	BAR	1
2401-JJ	BAR	2
2401-JK	BAR	1
2401-JD	SCREW	22
2401-JP	SCREW	2
2401-JQ	SCREW	4- 6
2401-JR	SCREW	2
2401-JS	SCREW	5
2401-KG	COVER	1
2401-KT	PLATE	1
2401-KW	BLOCK, TERMINAL FUSE	3
2401-KX	BASE SUB-ASSY	1
2401-LB	NUT	1
2401-LC	WASHER, PLATE	1
2401-LD	WASHER, SPRING	1
2401-LJ	HEATSINK	1
2401-LP	BAR	1
2401-MK	BOARD SUB-ASSY	1
2401-MU	PLATE, CAUTION	1
2401-MV	HARNESS SUB-ASSY	1
2401-MY	HARNESS, SPS BOARD	1
2401-NF	BRACKET SUB-ASSY, BOARD	1
2401-NG	SPACER	4
2401-NH	SENSOR SUB-ASSY, THERMAL	1
2401-NJ	BRACKET SUB-ASSY, TERMINAL, NO.1	1
2401-NK	BRACKET SUB-ASSY, TERMINAL, NO.2	1
2401-NL	BRACKET SUB-ASSY, TERMINAL, NO.3	1
2401-NM	BRACKET, CPU, NO.1	1
2401-NN	BRACKET, CPU, NO.2	1
2401-ND	BRACKET, CPU, NO.3	1
2401-NP	BASE SUB-ASSY, CPU BOARD	1
2401-NQ	BRACKET SUB-ASSY, CPU	1
2401-NR	COVER, CPU	1
2401-N5	BRACKET, CAPACITOR	1
2401-NT	BAND, CAPACITOR	1


G236-003E

(1/2)

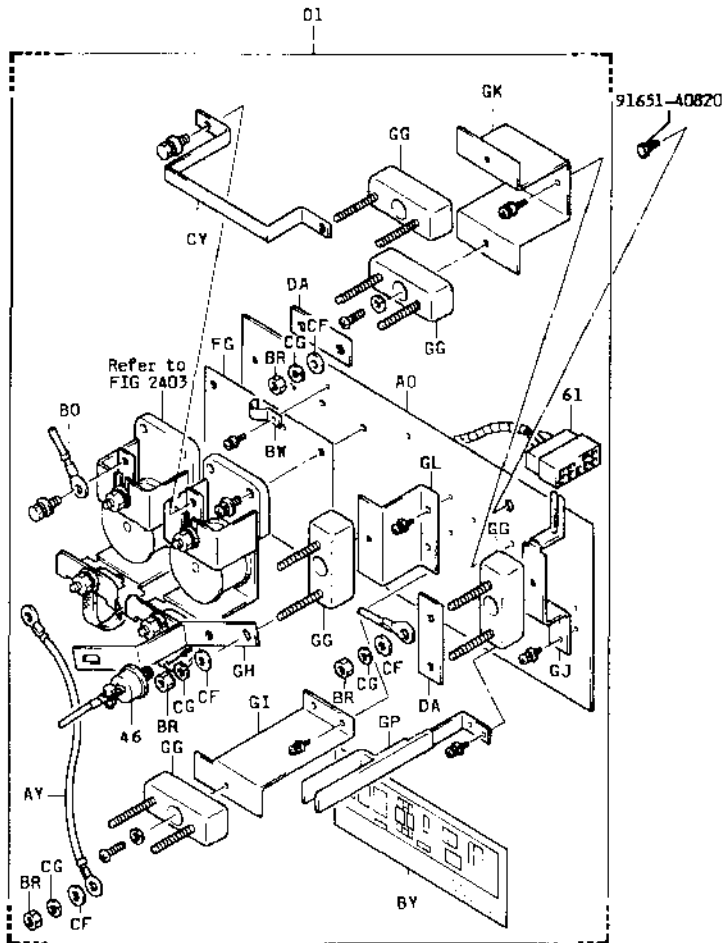 (2/2)



2402-083A

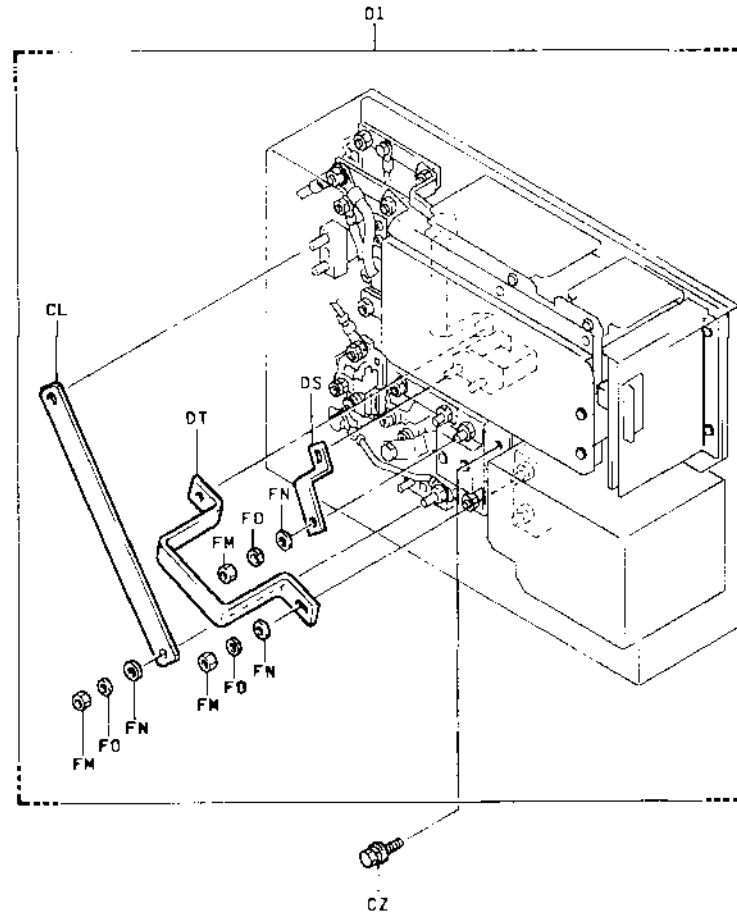 

2402-087A

G236-001


FIG. 2402
CONTACTOR PANEL

2402

MAIN

92/02

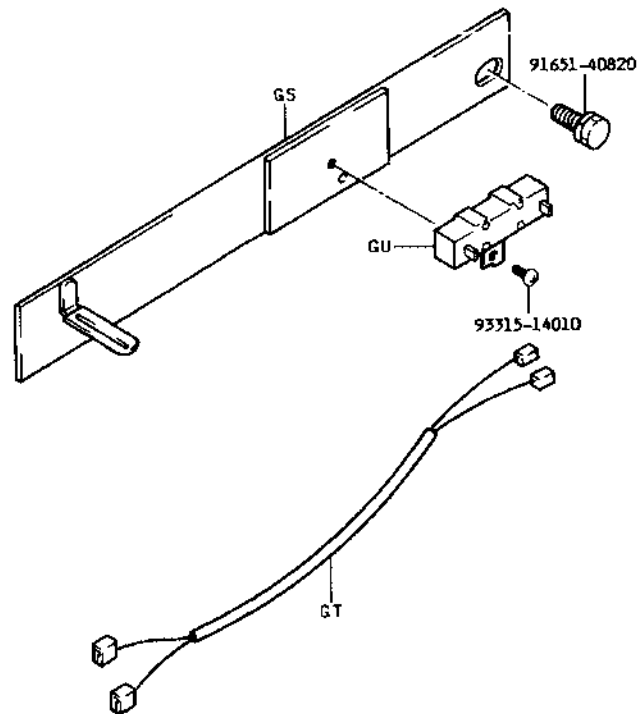 DPR-DHM (3/3)



2402-088


G236-002

FIG. 2402
CONTACTOR PANEL

2402

MAIN 92/02

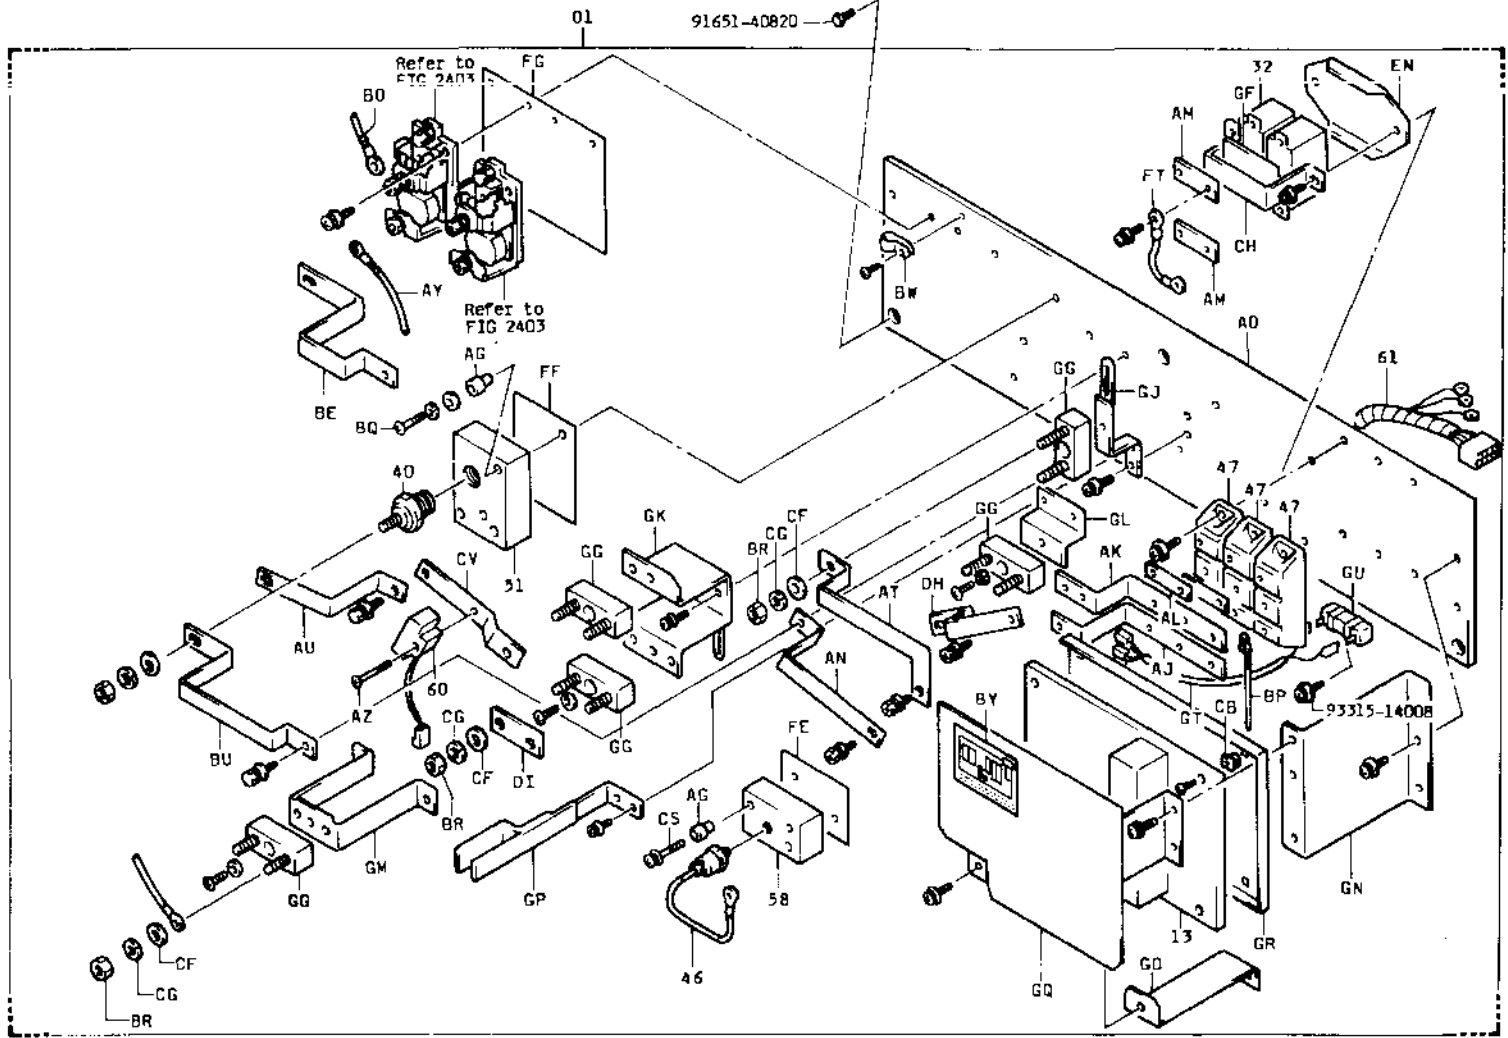 (PUMP CHOPPER) (1/1)




2402-084C


G236-003

DPR.DHM IP/SI

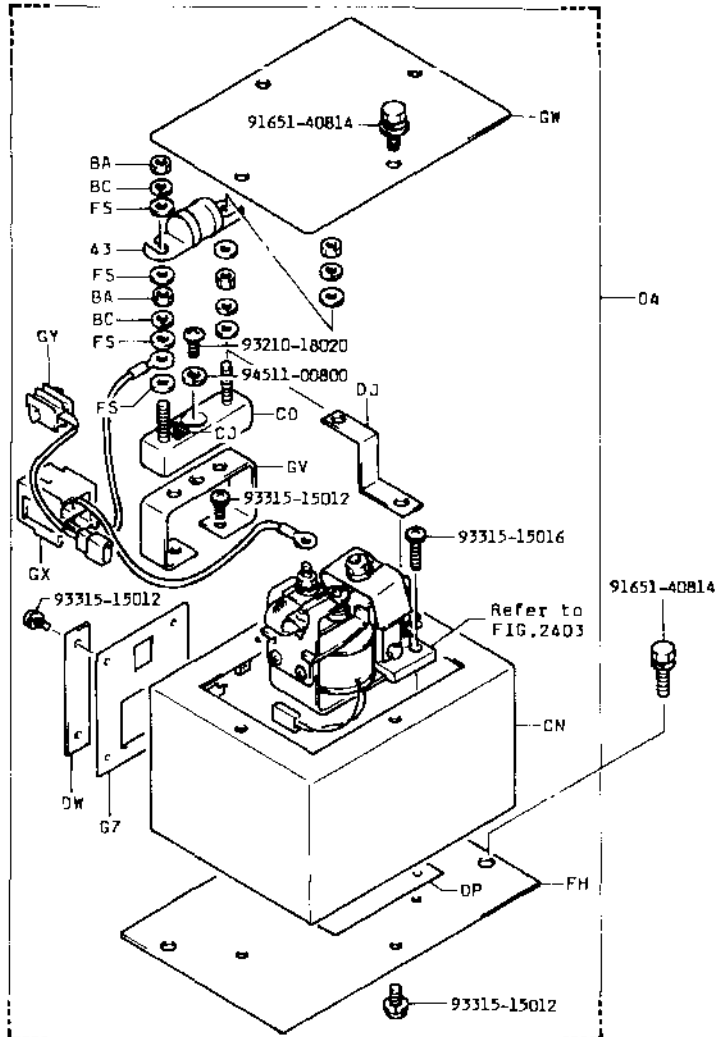 STM.HCB IP/SI



2402-086A

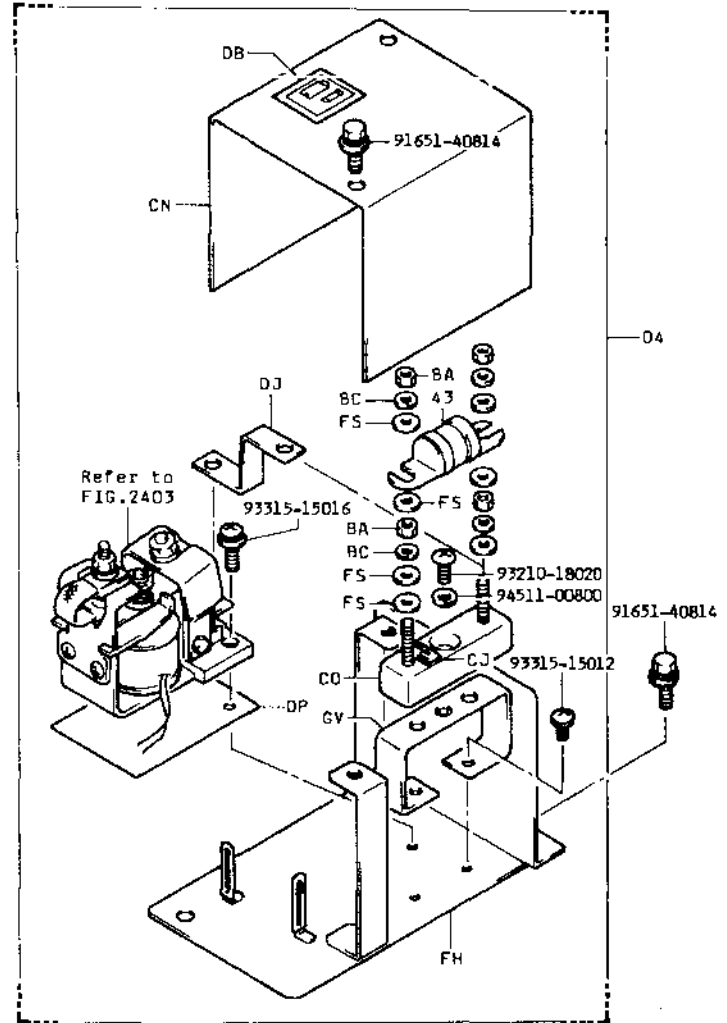 

2402-085A

G236-004

FIG. 2402
CONTACTOR PANEL

2402

MAIN

92/02

PART NAME CODE	PART NAME	QTY
2402-01	PANEL ASSY, CONTACTOR	1
2402-04	PANEL ASSY, P/S CONTACTOR	1
2402-13	BOARD ASSY	1
2402-32	CAPACITDR	2
2402-40	DIOIDE	1
2402-43	FUSE (F3)	1
2402-46	DIDDE ASSY	1
2402-47	TRANSISTDR	3
2402-51	HEATSINK	1
2402-58	HEATSINK	1
2402-60	SENSOR ASSY, CURRENT	1
2402-61	HARNESS SUB-ASSY	1
2402-AG	INSULATOR	4
2402-AJ	BAR	1
2402-AK	BAR	1
2402-AL	BAR	2
2402-AM	BAR	2
2402-AN	BAR	1
2402-AD	BASE	1
2402-AT	BAR	1
2402-AU	BAR	1
2402-AY	WIRING	1
2402-AZ	SCREW	1
2402-BA	NUT	4
2402-BC	WASHER, SPRING	4
2402-BE	BAR	1
2402-BD	WIRING	1
2402-BP	CLIP	1
2402-BQ	SCREW	2
2402-BR	NUT	16-18
2402-BU	BAR	1
2402-BW	CLAMP	2
2402-BX	GROMMET	4
2402-BY	PLATE, TERMINAL NUMBER	1
2402-CF	WASHER, PLATE	16-18
2402-CG	WASHER, SPRING	16-18
2402-CH	BAND	1
2402-CJ	PLATE, FUSE	1
2402-CL	RESISTOR	1
2402-CN	COVER	1
2402-CD	TERMINAL	1
2402-CS	SCREW	2
2402-CV	BAR	1
2402-CY	BAR	1
2402-DA	BAR	2
2402-DB	PLATE, TERMINAL	1
2402-DH	BAR	1
2402-DI	BAR	2
2402-DJ	BAR	1
2402-DP	SHEET	1
2402-DR	IBAR	1
2402-OS	IBAR	1
2402-DT	IBAR	1
2402-DW	IPLATE	2
2402-EN	IBRACKET	1
2402-FE	SHEET	1
2402-FF	SHEET	1
2402-FG	SHEET	1
2402-FH	IBASE	1
2402-FM	INUT	4
2402-FN	IWASHER, PLATE	6
2402-FO	IWASHER, SPRING	4
2402-FS	IWASHER, PLATE	7
2402-FT	IWIRING	2

PART NAME CODE	PART NAME	QTY
2402-GF	IMAT	2
2402-GG	IBLOCK, TERMINAL FUSE	5
2402-GH	IBAR SUB-ASSY	1
2402-GI	IBRACKET SUB-ASSY, TERMINAL	1
2402-GJ	IBRACKET SUB-ASSY, TERMINAL	1
2402-GK	IBRACKET SUB-ASSY, TERMINAL	1
2402-GL	IBRACKET SUB-ASSY, TERMINAL	1
2402-GM	IBRACKET SUB-ASSY, TERMINAL	1
2402-GN	IBRACKET, RH	1
2402-GD	IBRACKET, LH	1
2402-GP	ICLAMP	1
2402-GQ	ICOVER SUB-ASSY	1
2402-GR	IBASE SUB-ASSY	1
2402-GS	IBASE SUB-ASSY, RESISTOR	1
2402-GT	IHARNESS SUB-ASSY, RESISTOR	1
2402-GU	RESISTOR	1
2402-GV	IBRACKET SUB-ASSY, TERMINAL	1
2402-GW	ICOVER	1
2402-GX	IWIRING	1
2402-GY	IHARNESS	1
2402-GZ	IGASKET	1

G236-005E

FIG. 2403
CONTACTOR ASSY

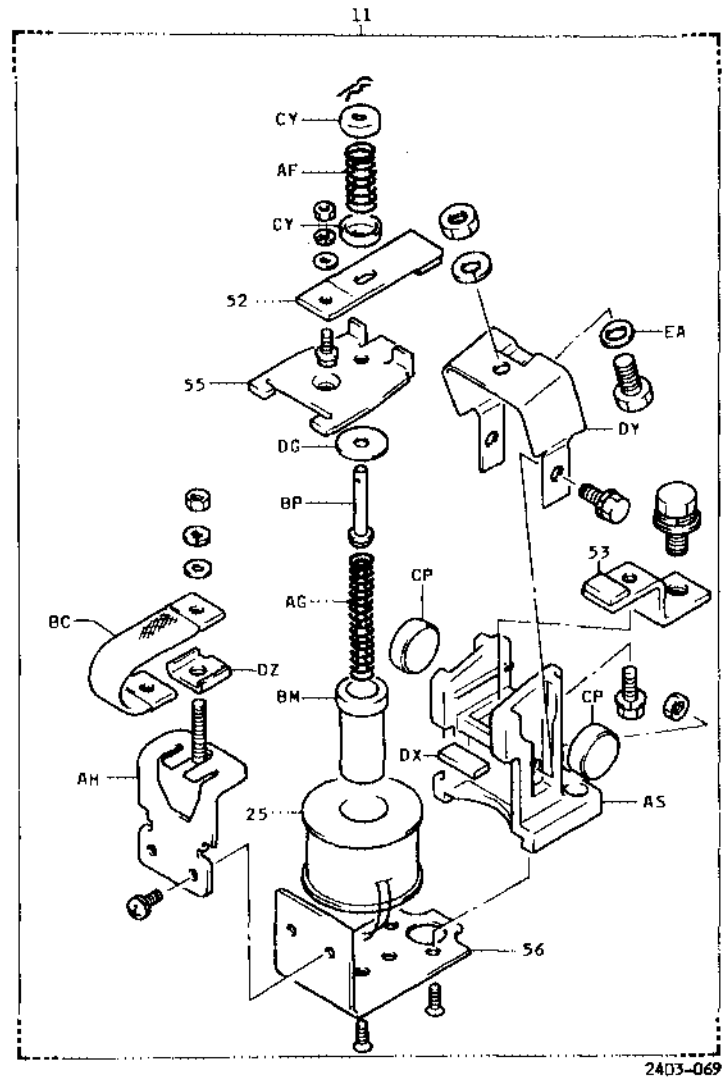 
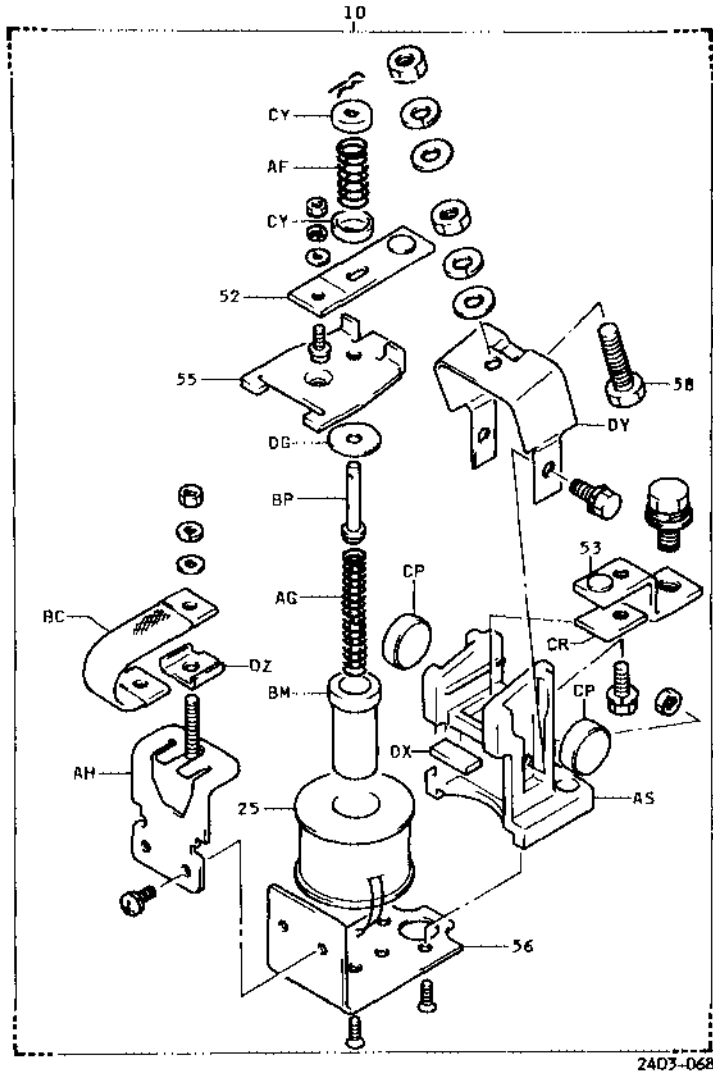 
2403

MAIN

91/10

(MF, MR)

(MG, MS, MP, MW)



G236-001


FIG. 2403
CONTACTOR ASSY

2403

MAIN

91/10

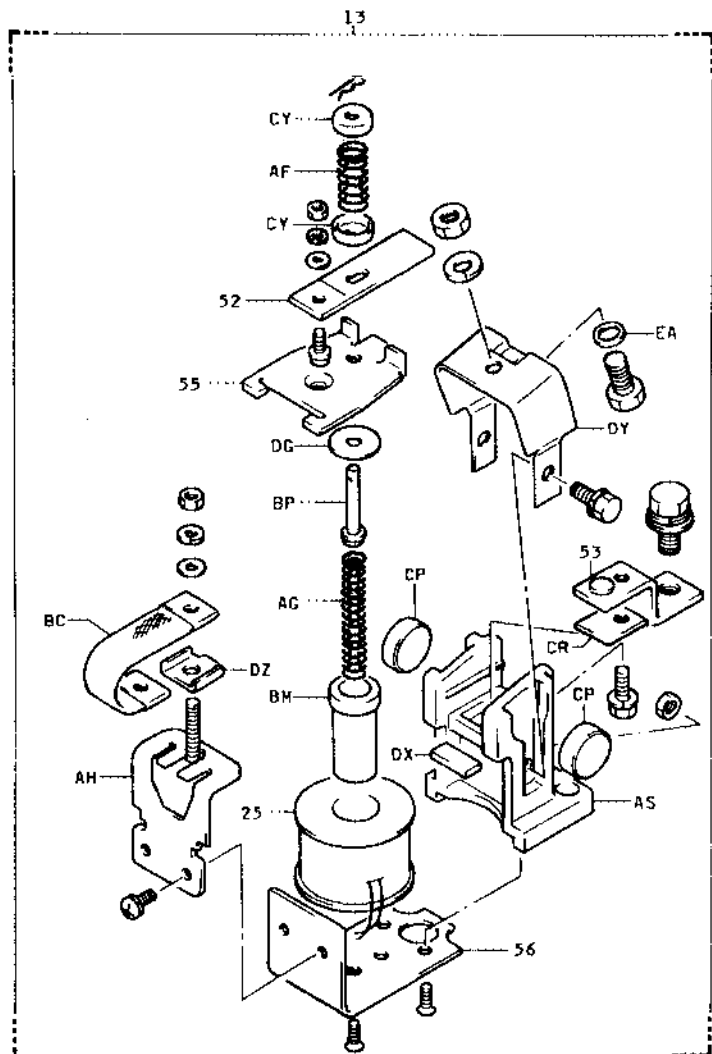 (P/5)



2403-070

PART NAME CODE	PART NAME	QTY
2403-10	CONTACTOR ASSY, DRIVE	2
2403-11	CONTACTOR ASSY, SHORT	4
2403-13	CONTACTOR ASSY, POWER STEERING	1
2403-25	COIL SUB-ASSY	1-4
2403-52	CONTACT, MOVING	1-4
2403-53	CONTACT, STATIONARY	1-4
2403-55	ARMATURE	1-4
2403-56	FRAME	1-4
2403-58	CONTACT, B	2
2403-AF	SPRING, NO.1	1-4
2403-AG	SPRING, NO.2	1-4
2403-AH	TERMINAL	1-4
2403-AS	BASE	1-4
2403-BC	WIRING	1-4
2403-BM	CORE	1-4
2403-BP	PIN	1-4
2403-CP	MAGNET	1-4
2403-CR	SPACER	1-2
2403-CY	HOLDER	2-8
2403-DG	SHEET	1-4
2403-DX	PACKING	1-4
2403-DY	YOKE	1-4
2403-DZ	WASHER, LOCK	1-4
2403-EA	SPACER	2-4
2403-EA	SPACER	2

G236-002E

FIG. 2501
BATTERY

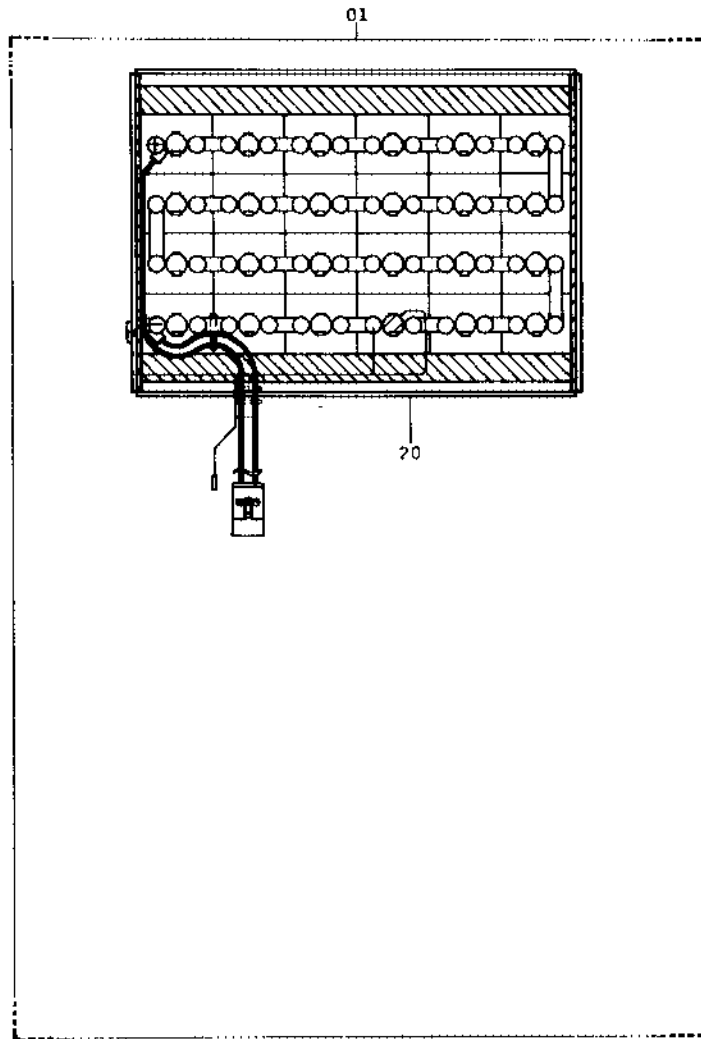 
2501

MAIN


91/09

(G.S.)

(YUASA)



2501-171

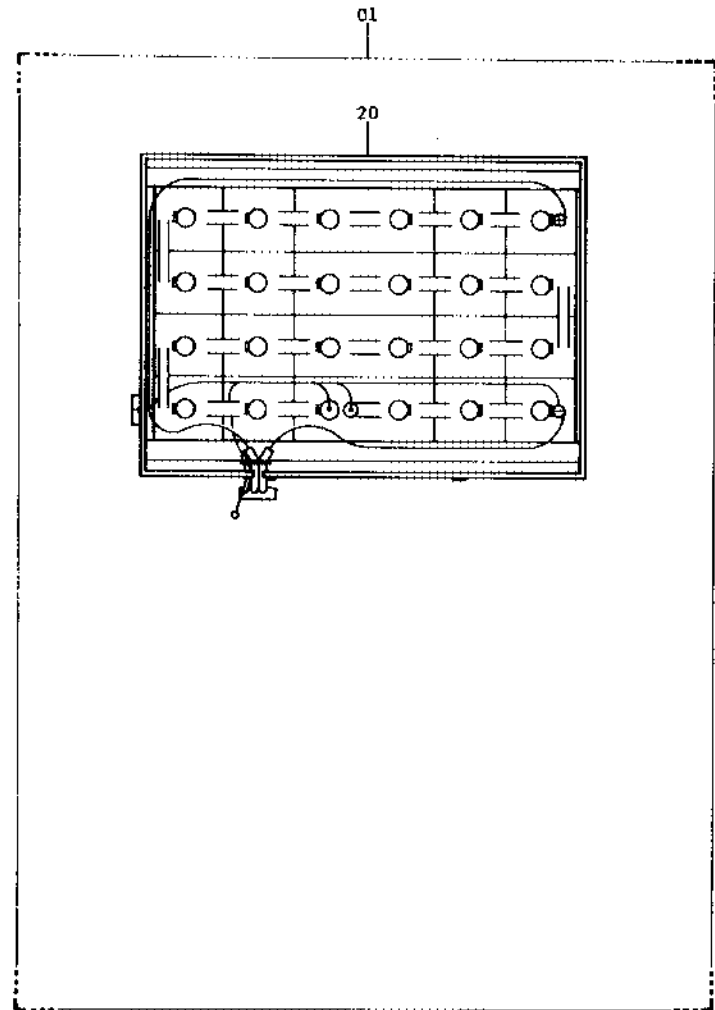 

2501-172

G236-001

FIG. 2501
BATTERY

2501

MAIN

91/09

PART NAME CODE	PART NAME	QTY
2501-01	BATTERY ASSY. W/CASE	1
2501-20	CASE SUB-ASSY. BATTERY	1

G236-002E

FIG. 2512
BATTERY SEPARATE CHARGER

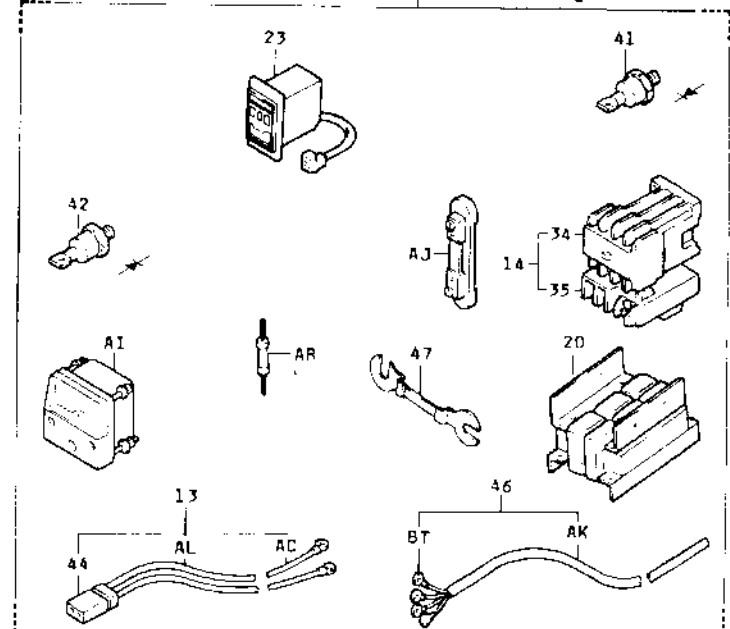 
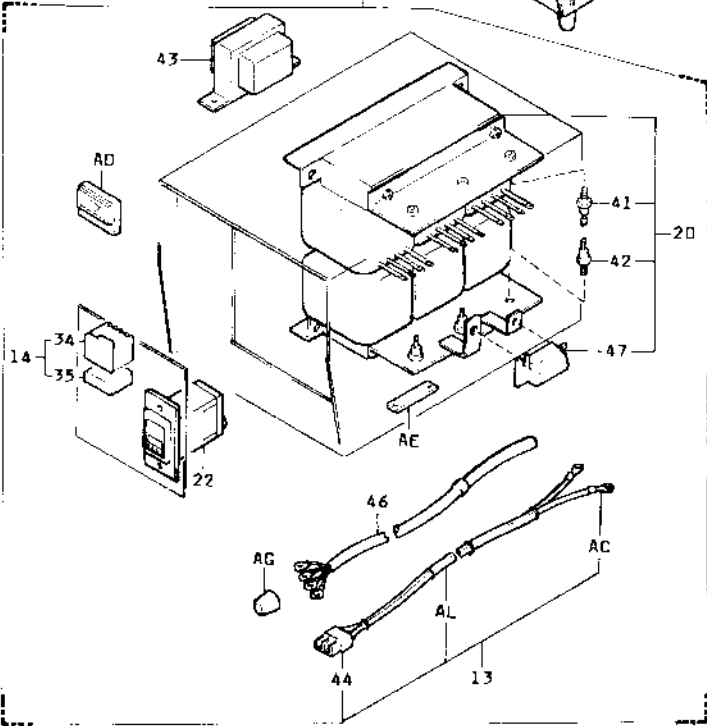 
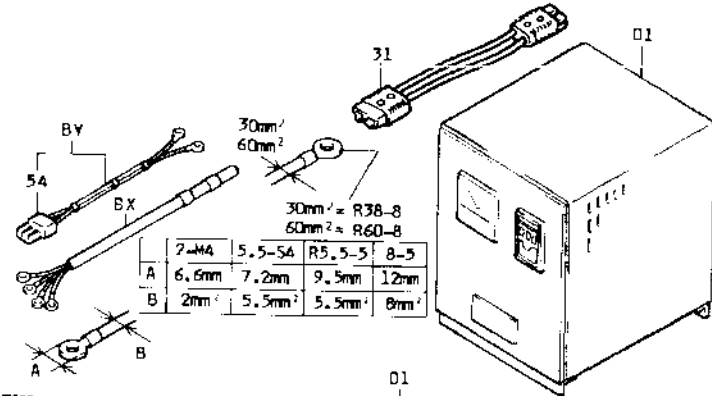 
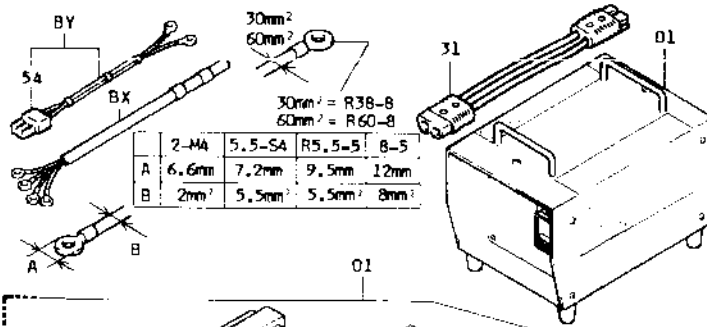 
2512

MAIN

91/09

(OFF-TRUCK TYPE..G.S)

(OFF-TRUCK TYPE..YUASA)



G236-001

FIG. 2512
BATTERY SEPARATE CHARGER

2512

MAIN

91/09

PART NAME CODE	PART NAME	QTY
2512-01	CHARGER ASSY, BATTERY SEPARATE	1
2512-13	CABLE ASSY, CHARGER (DC)	1
2512-14	SWITCH ASSY, MAGNET	1
2512-20	TRANSFORMER SUB-ASSY	1
2512-22	TIMER ASSY	1
2512-23	BMT ASSY	1
2512-31	ADAPTOR SUB-ASSY, CHARGER PLUG	1
2512-34	SWITCH SUB-ASSY, MAGNET	1
2512-35	RELAY SUB-ASSY, THERMAL	1
2512-41	ELEMENT, SILICON, FORWARD	3
2512-42	ELEMENT, SILICON, REVERSE	3
2512-43	SUB-TRANSFORMER, CHARGER	1
2512-44	PLUG	1
2512-46	CABLE (AC)	1
2512-47	FUSE	1
2512-54	PLUG	1
2512-AC	TERMINAL	2
2512-AD	METER ASSY, AMPERE	1
2512-AE	SHUNT	1
2512-AG	RUBBER	4
2512-AI	AMMETER	1
2512-AJ	SHUNT	1
2512-AK	CABLE	1
2512-AL	CABLE	2
2512-AR	RESISTOR	1
2512-BT	TERMINAL	1- 3


G236-002E

FIG. 2611
ACCELERATOR

2611

MAIN

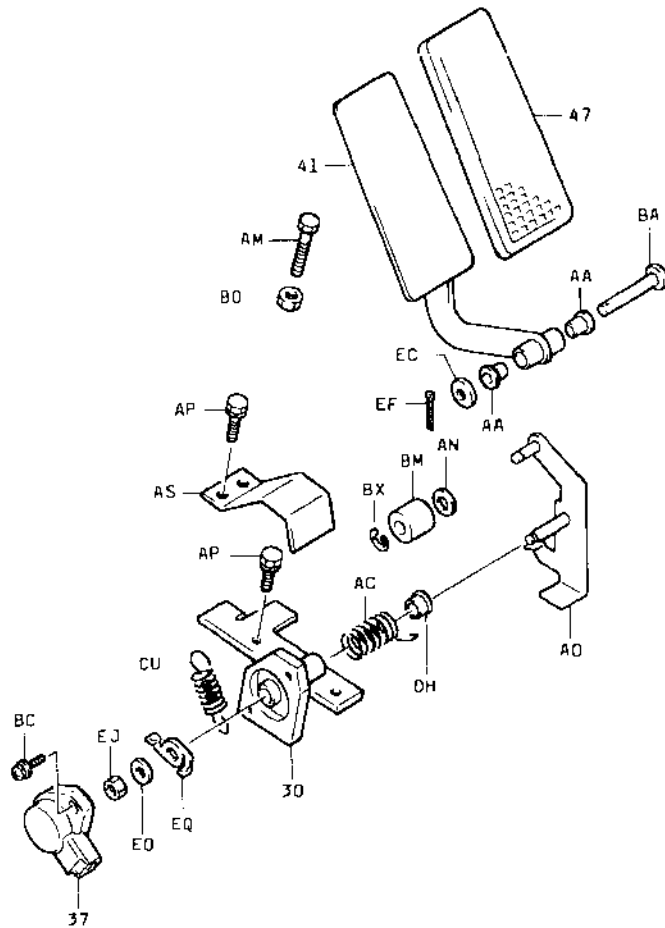 91/09



PART NAME CODE	PART NAME	QTY
2611-30	BRACKET SUB-ASSY, ACCELERATOR BOX	1
2611-37	SENSOR ASSY	1
2611-41	PEDAL, ACCELERATOR	1
2611-47	PAD, PEDAL	1
2611-AA	BUSHING	2
2611-AC	SPRING, ACCELERATOR	1
2611-AM	BOLT	1
2611-AN	WASHER, SPRING	1
2611-AO	ARM SUB-ASSY	1
2611-AP	BOLT	4
2611-AS	COVER	1
2611-BA	PIN	1
2611-BC	SCREW	2
2611-BM	ROLLER, ACCELERATOR LINK	1
2611-BO	NUT	1
2611-BX	RING, SNAP	1
2611-CU	SPRING, COIL REAR	1
2611-DH	BUSHING, ACCELERATOR ARM	2
2611-EC	WASHER, PLATE	1
2611-ED	WASHER	1
2611-EF	PIN, COTTER	1
2611-EJ	NUT	1
2611-EQ	LEVER	1

2611-069


G236-001E

FIG. 3305
GEAR CASE & GEAR

3305

MAIN

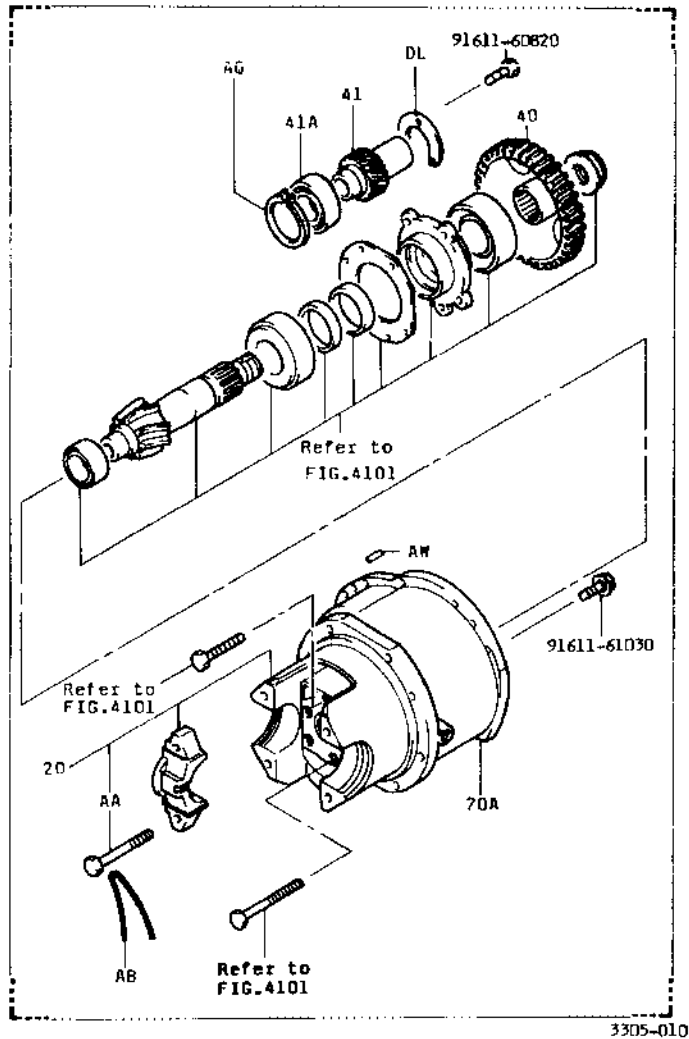 91/09



PART NAME	PART NAME	QTY
CODE		
3305-20	CASE SUB-ASSY, GEAR	1
3305-20A	GASKET, GEAR CASE	1
3305-40	GEAR, OUTPUT	1
3305-41	GEAR, DRIVE	1
3305-41A	BEARING (FOR DRIVE GEAR)	1
3305-AA	BOLT	4
3305-AB	WIRE	2
3305-AQ	RING, SHAFT SNAP	1
3305-AW	PIN, STRAIGHT	2
3305-DL	PLATE, COVER	1


G236-001E

FIG. 3310
CHANGE LEVER

3310

MAIN

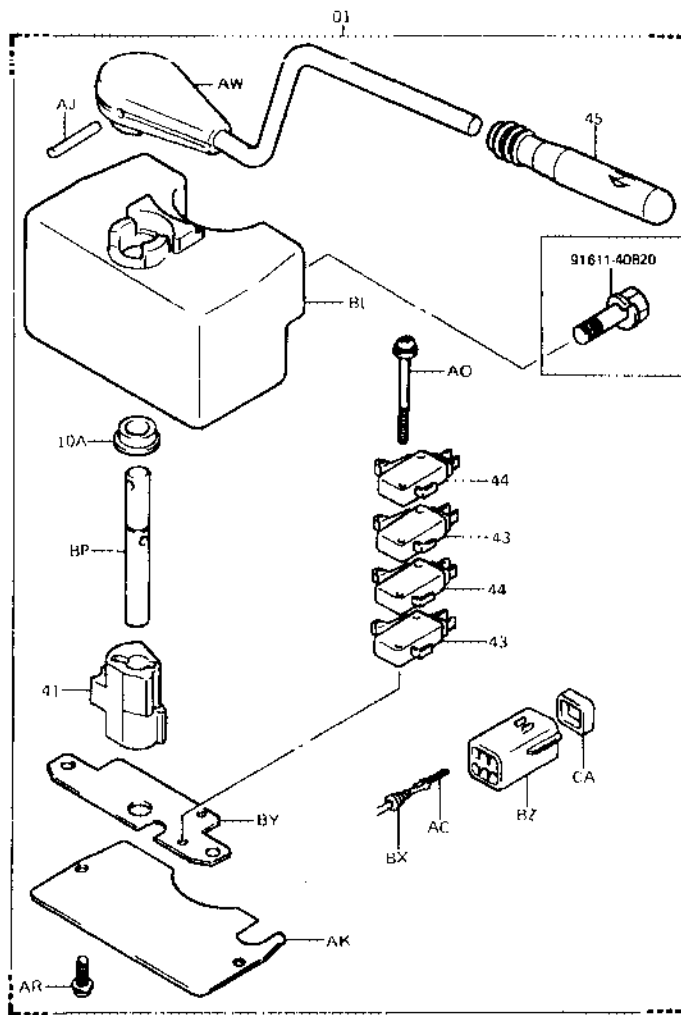 91/09



3310-024

PART NAME CODE	PART NAME	QTY
3310-01	SWITCH ASSY, DIRECTION	1
3310-10A	BUSHING, NO.1 (FOR DIRECTION SWITCH SHAFT)	1
3310-41	CAM	1
3310-43	SWITCH, MICRO, NO.1	2
3310-44	SWITCH, MICRO, NO.2	2
3310-45	KNOB	1
3310-AC	TAB	6
3310-AJ	PIN, SPRING	1
3310-AK	PLATE	1
3310-AD	SCREW	2
3310-AR	SCREW	4
3310-AW	LEVER SUB-ASSY	1
3310-BL	CASE, DIRECTION SWITCH	1
3310-BP	SHAFT	1
3310-BX	CAP	6
3310-BY	BASE	1
3310-BZ	CONNECTOR	1
3310-CA	CONNECTOR	1

G236-001E

FIG. 4101
DIFFERENTIAL

4101

MAIN

91/09



PART NAME CODE	PART NAME	QTY
4101-02	CASE ASSY, DIFFERENTIAL	1
4101-10	RING GEAR & PINION SET, DIFFERENTIAL	1
4101-10A	BEARING, DRIVE PINION	2
4101-10B	BEARING, DRIVE PINION PILOT	1
4101-10C	NUT, LOCK	1
4101-10D	SHIM, BEARING PRELOAD ADJUST	99
4101-20	CASE SUB-ASSY, DIFFERENTIAL	1
4101-20A	NUT, ADJUSTING	2
4101-20B	BEARING, DIFFERENTIAL CASE	2
4101-40	HOUSING, DIFFERENTIAL	1
4101-40B	RING, O (FOR DIFFERENTIAL HOUSING)	1
4101-40C	PLUG, BREATHER (FOR DIFFERENTIAL HOUSING)	1
4101-46	GEAR, SIDE	2
4101-46A	WASHER, SIDE GEAR THRUST	2
4101-47	SPIDER	1
4101-48	PINION	4
4101-48A	WASHER, PINION THRUST	4
4101-49	PLUG, DRAIN	1
4101-49A	GASKET, DRAIN PLUG	1
4101-50	RETAINER, DRIVE PINION BEARING	1
4101-50D	SHIM, DIFFERENTIAL DRIVE PINION BEARING	99
4101-54	CAP, RING GEAR THRUST SCREW	1
4101-55	BOLT, RING GEAR SET	12
4101-AB	BOLT	16
4101-AC	SCREW, RING GEAR THRUST	1
4101-AD	NUT	1
4101-AF	LOCK, ADJUSTING	2
4101-AG	PLUG, W/HEAD STRAIGHT SCREW	1
4101-AH	GASKET	1
4101-AK	BOLT	2
4101-AL	BOLT	4
4101-AD	SPACER, BEARING	1

G236-002E

FIG. 4201
FRONT AXLE SHAFT

4201

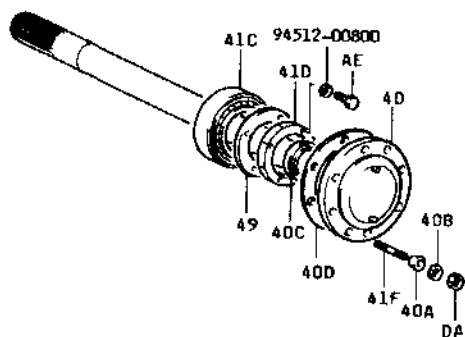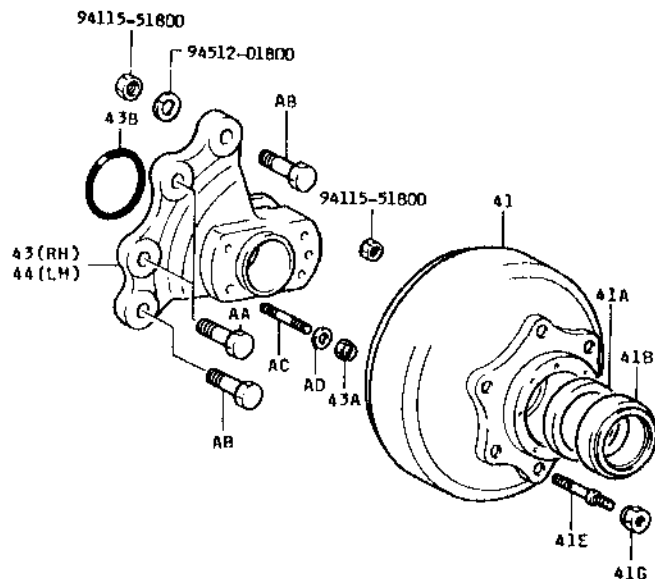  MAIN 91/09



4201-114

PART NAME CODE	PART NAME	QTY
4201-40	SHAFT, FRONT AXLE	2
4201-40A	WASHER, CORR	16
4201-40B	WASHER, SPRING (FOR FRONT AXLE SHAFT)	16
4201-40C	SEAL, OIL (FOR FRONT AXLE SHAFT)	2
4201-40D	GASKET, FRONT AXLE SHAFT	2
4201-41	HUB, FRONT AXLE	2
4201-41A	SEAL, OIL (FOR FRONT AXLE HUB)	2
4201-41B	BEARING, NO.1 (FOR FRONT AXLE HUB)	2
4201-41C	BEARING, NO.2 (FOR FRONT AXLE HUB)	2
4201-41D	NUT, BEARING LOCK	2
4201-41E	BOLT, HUB	12
4201-41F	BOLT, STUD (FOR FRONT AXLE SHAFT)	16
4201-41G	NUT, HUB	12
4201-43	BRACKET, FRONT AXLE, RH	1
4201-43A	NUT, BRAKE SET SELF	16
4201-43B	RING, O (FOR FRONT AXLE BRACKET)	2
4201-44	BRACKET, FRONT AXLE, LH	1
4201-49	PLATE, LOCK NUT	2
4201-AA	BOLT	4
4201-AB	BOLT, BRACKET SET	4
4201-AC	BOLT, STUD BRAKE SET	16
4201-AD	WASHER, CO SPRING	16
4201-AE	BOLT	2
4201-DA	NUT	16


G236-001E

FIG. 4301
REAR AXLE & TIE-ROD

4301

MAIN

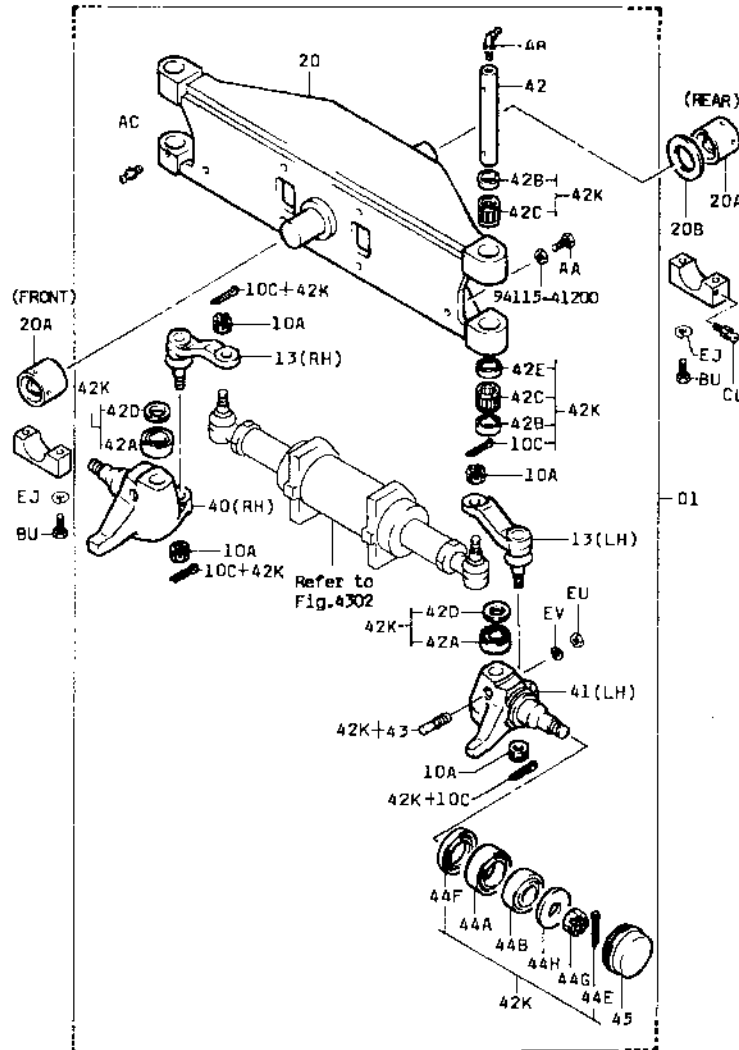 91/09



4301-077

PART NAME CODE	PART NAME	QTY
4301-01	AXLE ASSY, RR	1
4301-10A	NUT, CASTLE (FOR TIE-ROD END)	4
4301-10C	PIN, COTTER (FOR TIE-ROD END)	4
4301-13	TIE-ROD ASSY	1
4301-20	BEAM SUB-ASSY, REAR AXLE	1
4301-20A	BUSHING, REAR AXLE BEAM	1
4301-20B	SHIM, REAR AXLE BEAM	99
4301-40	KNUCKLE, STEERING, RH	1
4301-41	KNUCKLE, STEERING, LH	1
4301-42	PIN, STEERING KNUCKLE KING	2
4301-42A	BEARING, STEERING KNUCKLE THRUST	2
4301-42B	SEAL, OIL, NO.1	4
4301-42C	BEARING, NEEDLE	4
4301-42D	SHIM, STEERING KNUCKLE	99
4301-42E	SEAL, OIL, NO.2	2
4301-42K	SEAL KIT, KING PIN	2
4301-43	PIN, KING PIN LOCK	2
4301-44A	BEARING, INNER	2
4301-44B	BEARING, OUTER	2
4301-44E	PIN, REAR AXLE COTTER	2
4301-44F	SEAL, OIL (FOR REAR AXLE HUB)	2
4301-44G	NUT, CASTLE (FOR REAR AXLE HUB)	2
4301-44H	WASHER, CLAW (FOR REAR AXLE HUB)	2
4301-45	CAP, REAR AXLE HUB	2
4301-AA	BOLT	2
4301-AB	FITTING, GREASE	2
4301-AC	FITTING, GREASE	2
4301-BU	BDLT	4
4301-CL	FITTING, GREASE	2
4301-EJ	WASHER, SPRING	4
4301-EU	NUT	2
4301-EV	WASHER, SPRING	2


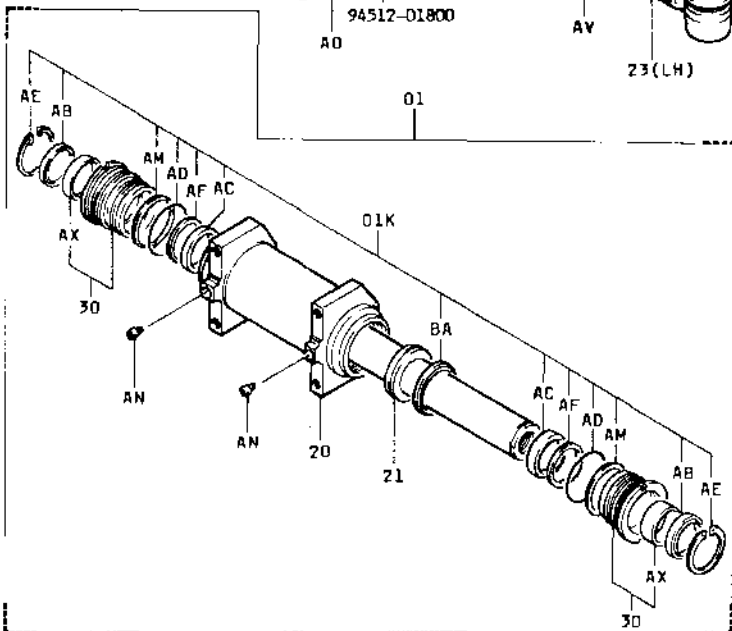 
G236-001E

FIG-4302
REAR AXLE CYLINDER

4302

MAIN

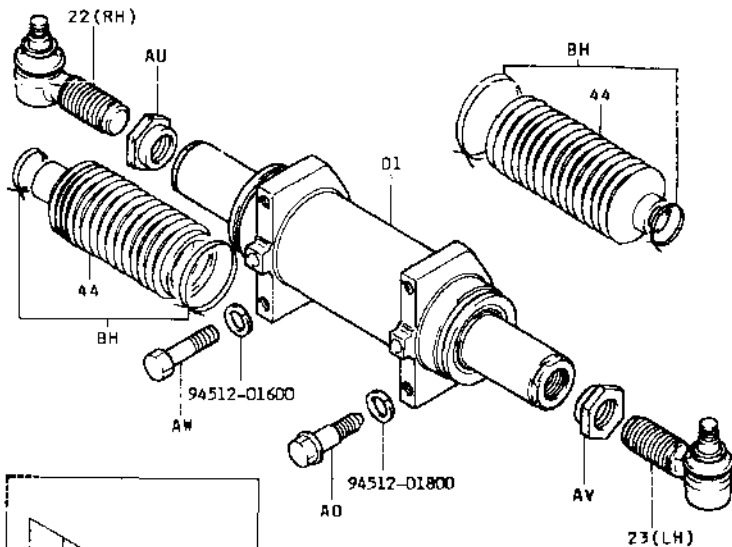 91/09



4302-0068

PART NAME	PART NAME	QTY
CODE		
4302-01	CYLINDER ASSY, REAR AXLE	1
4302-01K	CYLINDER O/H KIT, REAR AXLE	1
4302-20	CYLINDER SUB-ASSY, REAR AXLE	1
4302-21	ROD SUB-ASSY, REAR AXLE CYLINDER	1
4302-22	END SUB-ASSY, REAR AXLE TOP, RH	1
4302-23	END SUB-ASSY, REAR AXLE TOP, LH	1
4302-30	GUIDE SUB-ASSY, CYLINDER ROD	2
4302-44	BOOT	2
4302-AB	SEAL, DUST	2
4302-AC	PACKING, U	2
4302-AD	RING, O	2
4302-AE	RING, SNAP	2
4302-AF	RING, BACK UP	2
4302-AM	RING, BACK UP	2
4302-AN	SEAT	2
4302-AD	BOLT	2
4302-AU	NUT, LOCK	1
4302-AV	NUT, LOCK	1
4302-AW	BOLT	2
4302-AX	BUSHING	2
4302-BA	SEAL, RING	1
4302-BH	WIRE, CYLINDER BOOT	2


G236-001E

FIG. 4406
FRONT WHEEL & TIRE

4406

MAIN

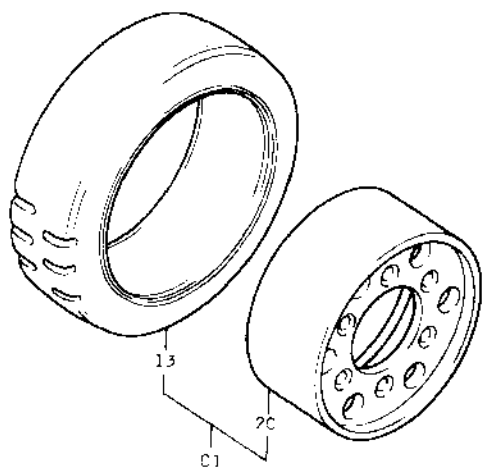 91/09



4406-006

PART NAME CODE	PART NAME	QTY
4406-01	WHEEL ASSY	2
4406-13	TIRE ASSY	2
4406-20	WHEEL SUB-ASSY: DISC	2


G236-001E

FIG. 4407
REAR WHEEL & TIRE

4407

MAIN

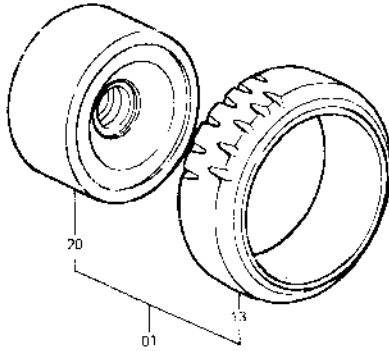 91/09



PART NAME	PART NAME	QTY
CODE		
4407-01	WHEEL ASSY	2
4407-13	TIRE ASSY	2
4407-20	WHEEL SUB-ASSY: DISC	2

4407-001

G236-001E



FIG. 4501
STEERING WHEEL

4501


MAIN

92/07

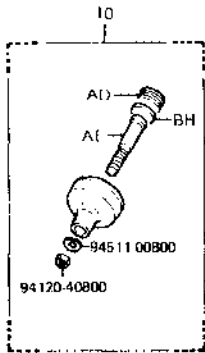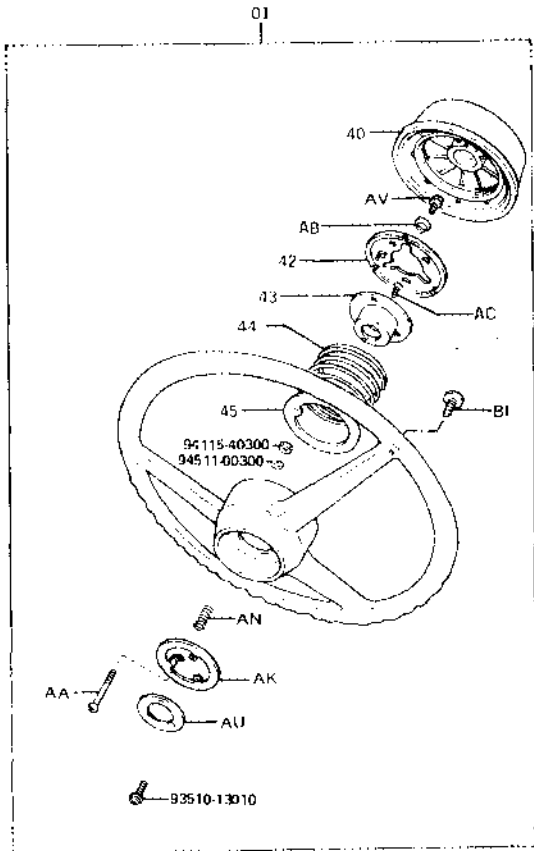  (U.S.A.)



4501-033B

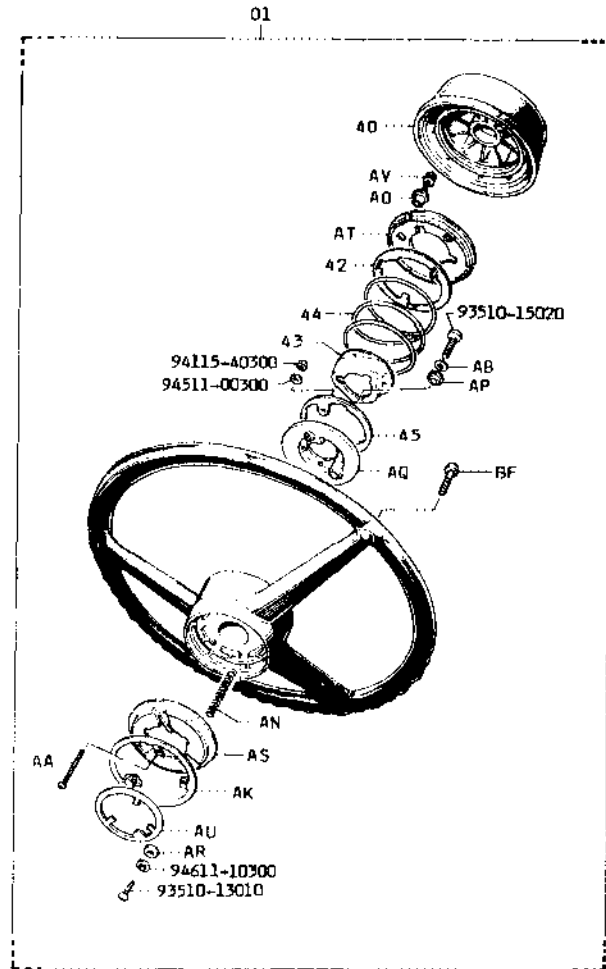 

4501-016A

G236-001

FIG. 4501
STEERING WHEEL

4501

MAIN

92/07

PART NAME CODE	PART NAME	QTY
4501-01	WHEEL ASSY, STEERING	1
4501-10	KNOB ASSY, STEERING WHEEL	1
4501-40	BUTTON, HORN	1
4501-42	PLATE, HORN CONTACT	1
4501-43	SEAT, HORN CONTACT	1
4501-44	SPRING, HORN	1
4501-45	PLATE, LEAD	1
4501-AA	SCREW	1
4501-AB	WASHER	3
4501-AC	SCREW	3
4501-AD	CAP, STEERING WHEEL	1
4501-AE	BOLT, STEERING WHEEL KNOB SET	1
4501-AK	RING, HORN CONTACT NO.1	1
4501-AN	SPRING, LEAD	1
4501-AD	SPACER, NO.3	3
4501-AP	SPACER, NO.5	3
4501-AQ	SPACER, NO.5	1
4501-AR	SPACER, NO.4	2
4501-AS	SPACER, NO.1	1
4501-AT	PLATE, HORN BUTTON SET	1
4501-AU	RING, HORN CONTACT NO.2	1
4501-AV	SCREW	3
4501-BF	CAP	1
4501-BH	PACKING	1

G236-002E


006

FIG. 4502
STEERING POST

4502

MAIN

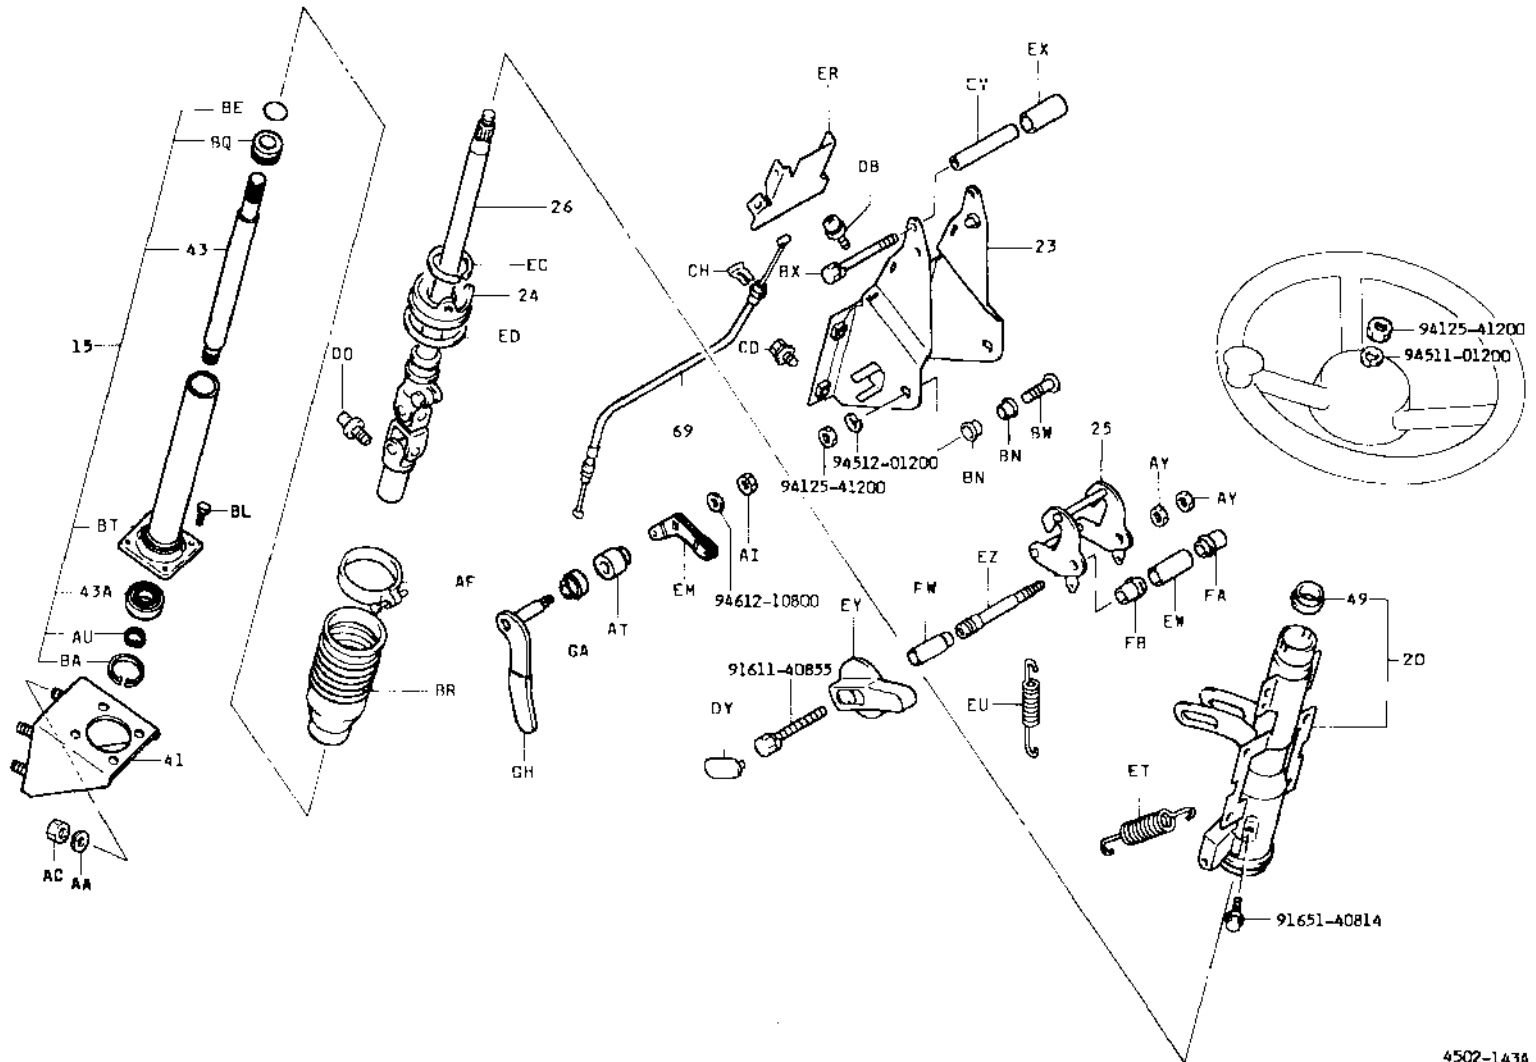 92/07



4502-143A

G236-001


FIG. 4502
STEERING POST

4502

MAIN

92/07

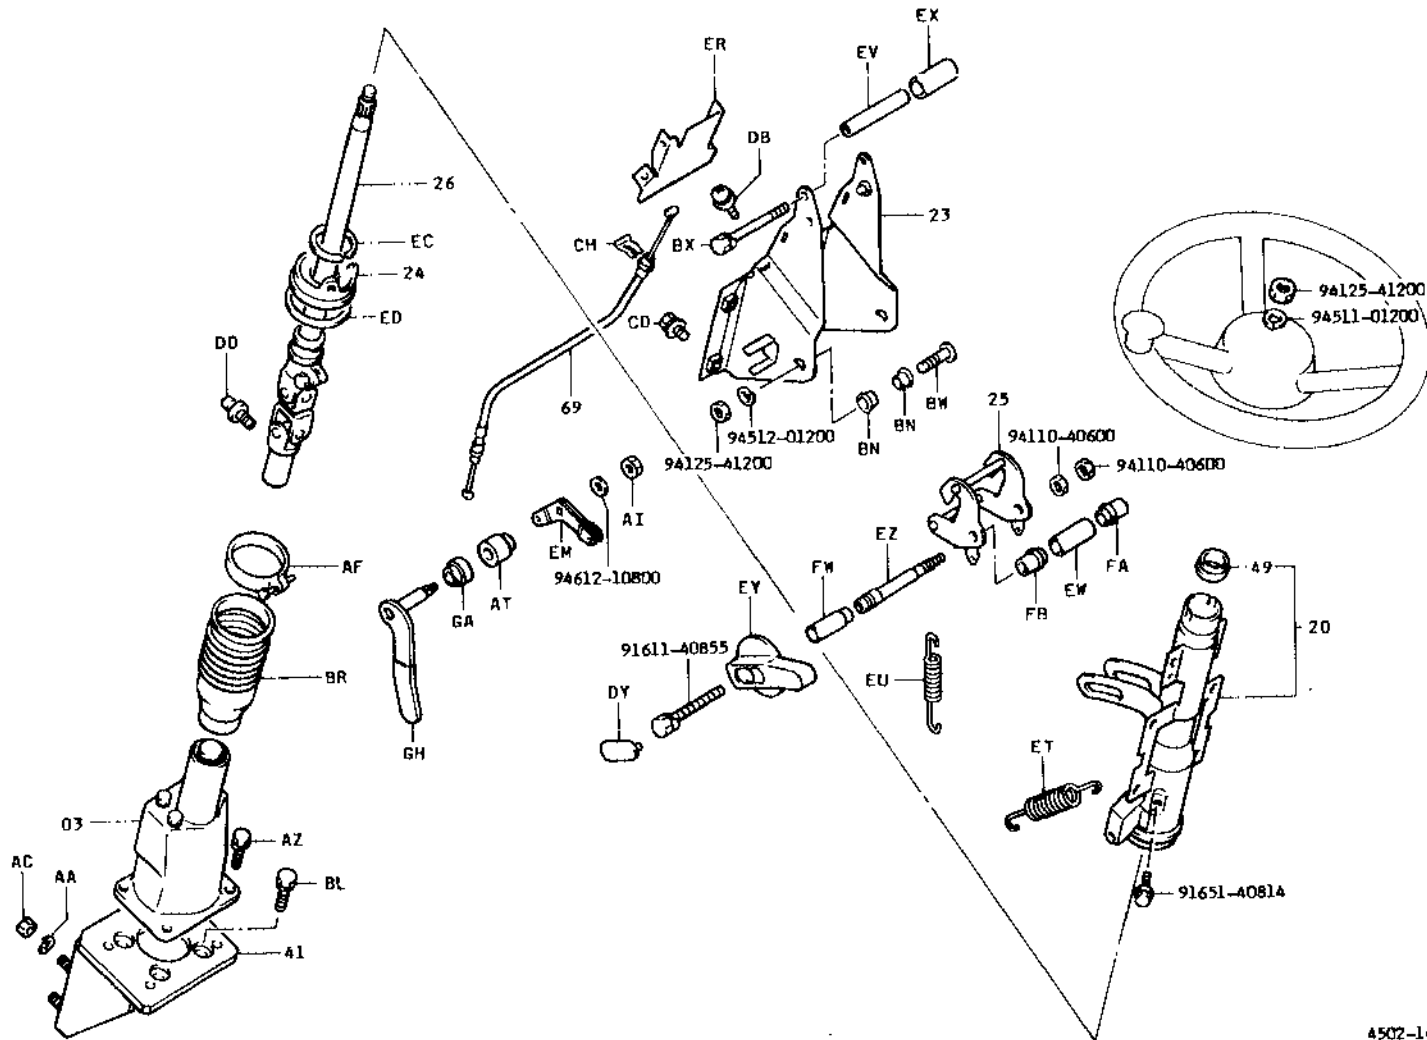 (EHPS)



4502-144

G236-002

FIG. 4502
STEERING POST

4502

MAIN

92/07

PART NAME CODE	PART NAME	QTY
4502-03	SENSOR ASSY, TORQUE	1
4502-15	POST ASSY, STEERING	1
4502-20	JACKET SUB-ASSY, MAST	1
4502-23	BRACKET SUB-ASSY, TILT STEERING	1
4502-24	STOPPER SUB-ASSY, STEERING SHAFT	1
4502-25	STOPPER SUB-ASSY, STEERING	1
4502-26	SHAFT SUB-ASSY, TILT STEERING	1
4502-41	BRACKET, STEERING	1
4502-43	SHAFT, STEERING MAIN	1
4502-43A	BEARING (FOR STEERING MAIN SHAFT)	1
4502-49	GROMMET, STEERING COLUMN (INSULATOR)	1
4502-69	WIRE, TILT STEERING	1
4502-AA	WASHER, SPRING	4
4502-AC	NUT	4
4502-AF	CLAMP	1
4502-AI	NUT	1
4502-AT	COLLAR	1
4502-AU	RING, SNAP	1
4502-AY	NUT, LOCK	2
4502-AZ	BOLT	4
4502-BA	RING, SNAP	1
4502-BE	RING, O	1
4502-BL	BOLT, W/WASHER	4
4502-BN	BUSHING	4
4502-BQ	BUSHING	1
4502-BR	BOOT, MAST JACKET	1
4502-BT	JACKET	1
4502-BW	BOLT	2
4502-BX	BOLT	1
4502-CD	BOLT	4
4502-CH	CLIP	1
4502-DB	SCREW	4
4502-DO	FITTING, GREASE	1
4502-DY	CAP	1
4502-EC	RING	1
4502-ED	RING	1
4502-EM	HOOK	1
4502-ER	COVER SUB-ASSY, STEERING BRACKET	1
4502-ET	SPRING, TENSION	1
4502-EU	SPRING, TENSION	1
4502-EV	PIPE	1
4502-EW	COLLAR, TILT LOCK	1
4502-EX	HOSE	1
4502-EY	LEVER SUB-ASSY, TILT LOCK	1
4502-EZ	BOLT, TILT LOCK	1
4502-FA	NUT, ADJUSTING, RH	1
4502-FB	NUT, ADJUSTING, LH	1
4502-FW	PIPE	1
4502-GA	COLLAR	1
4502-GH	LEVER SUB-ASSY, TILT LOCK	1

G236-003E


0000

FIG. 4503
HYDROSTATIC STEERING VALVE

4503

MAIN

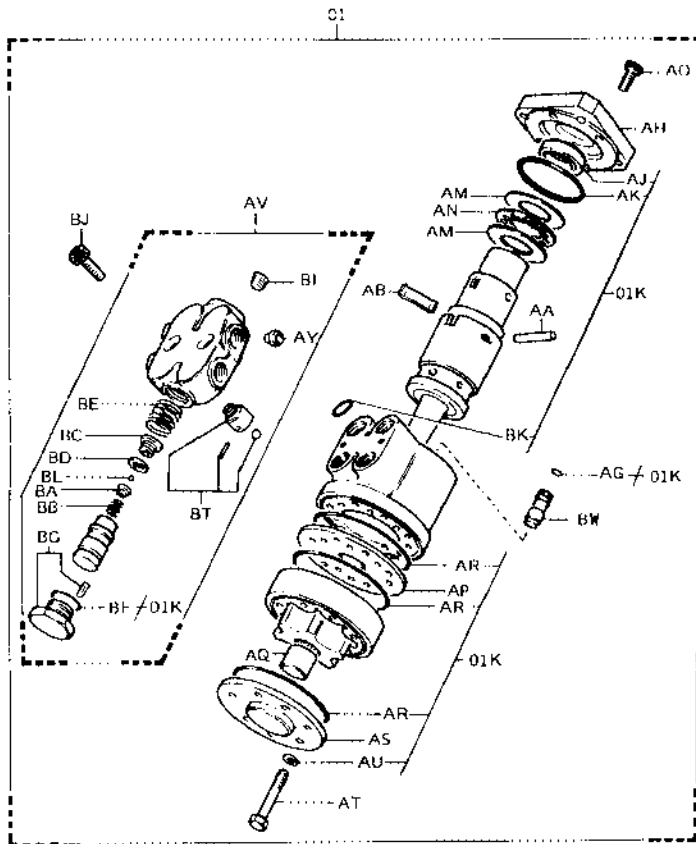 91/09



4503-015

PART NAME	PART NAME	QTY
CODE		
4503-01	VALVE ASSY, HYDROSTATIC STEERING	1
4503-01K	VALVE O/H KIT, HYDROSTATIC STEERING	1
4503-AA	FIN, STRAIGHT	1
4503-AB	SPRING, CENTERING	6
4503-AQ	RING, O	1
4503-AH	PLATE, MOUNTING	1
4503-AJ	PACKING, Y	1
4503-AK	RING, O	1
4503-AM	RACE, SIDE	2
4503-AN	BEARING, NEEDLE	1
4503-AD	BOLT, SOCKET	4
4503-AP	PLATE, SIDE	1
4503-AQ	SPACER	1
4503-AR	RING, O	3
4503-AS	CAP, END	1
4503-AT	BOLT	7
4503-AU	GASKET	7
4503-AV	VALVE ASSY, RELIEF	1
4503-AY	NIPPLE	4
4503-BA	RETAINER	1
4503-BB	SPRING	1
4503-BC	VALVE	1
4503-BD	SHIM	99
4503-BE	SPRING	1
4503-BF	RING, O	1
4503-BG	PLUG	1
4503-BI	PLUG	1
4503-BJ	BOLT, SOCKET	2
4503-BK	RING, O	4
4503-BL	BALL, STEEL	1
4503-BT	VALVE ASSY, CHECK	1
4503-BW	VALVE ASSY, CHECK	1

G234-001E

FIG. 4507
DRAG LINK & STEERING PIPING

4507

MAIN

91/09

PART NAME CODE	PART NAME	QTY
4507-30	PIPE SUB-ASSY, NO.1 (STEERING TO CYLINDER)	1
4507-32	PIPE SUB-ASSY (PUMP TO STEERING)	1
4507-38	PIPE SUB-ASSY (VALVE TO STEERING)	1
4507-43	HOSE, POWER CYLINDER, NO.2	2
4507-45	HOSE, POWER STEERING PUMP SUCTION	1
4507-46	HOSE, HIGH PRESSURE (PUMP TO STEERING)	1
4507-55	HOSE, LOW PRESSURE	1
4507-61	PIPE SUB-ASSY, SUCTION	1
4507-AB	CLAMP, PIPE	2
4507-AS	FITTING	1
4507-AT	FITTING	1
4507-AU	RING, O	2
4507-AV	PIPE	1
4507-BB	CLAMP	4
4507-BJ	CLAMP	1
4507-BP	RUBBER, CUSHION	1
4507-DZ	PIPE	1
4507-JQ	RUBBER, CUSHION	1
4507-KN	GUARD SUB-ASSY, HOSE	1


G236-002E

FIG. 4510
STEERING OIL PUMP

4510

MAIN

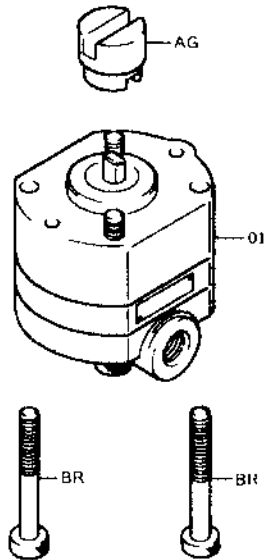 91/09



PART NAME CODE	PART NAME	QTY
4510-01	PUMP ASSY, POWER STEERING	1
4510-AG	JOINT, OLDHAM	1
4510-BR	SCREW	2

4510-018


G236-001E

FIG. 4601
PARKING BRAKE

4601

MAIN

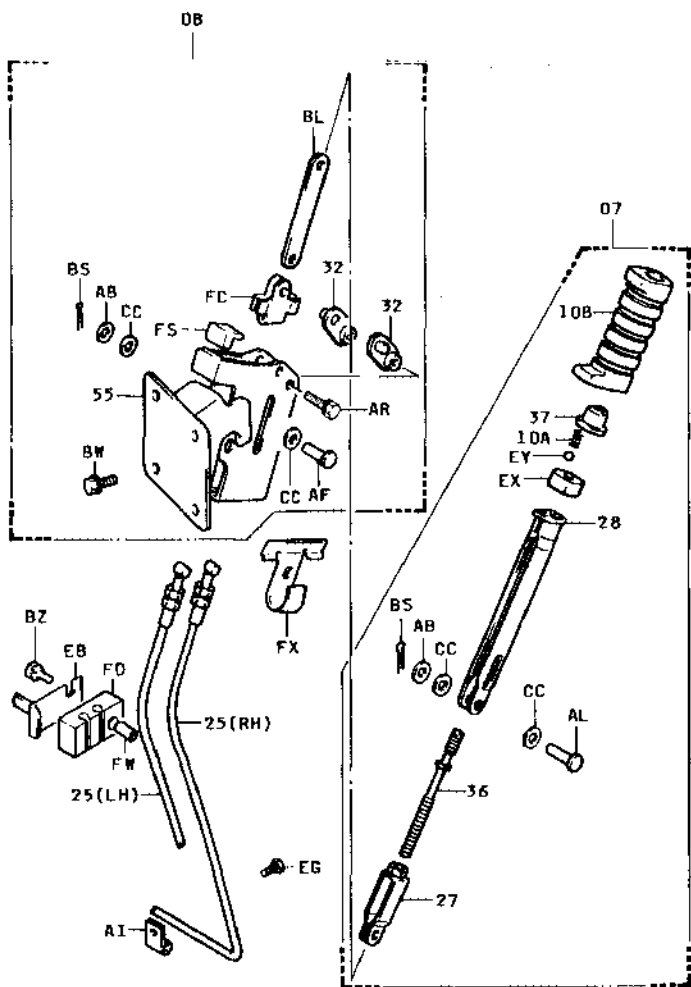 91/09



4601-102

PART NAME CODE	PART NAME	QTY
4601-07	LEVER SET, PARKING BRAKE	1
4601-08	BRACKET SET, PARKING BRAKE	1
4601-10A	SPRING, COMPRESSION	1
4601-10B	KNOB SUB-ASSY, PARKING BRAKE	1
4601-25	CABLE SUB-ASSY, PARKING BRAKE, NO.2	1
4601-27	CLEVIS SUB-ASSY	1
4601-28	LEVER SUB-ASSY, PARKING BRAKE	1
4601-32	LINK SUB-ASSY, PARKING BRAKE, NO.1	2
4601-36	ROD SUB-ASSY, PARKING BRAKE	1
4601-37	KNOB SUB-ASSY, PARKING BRAKE RELEASE ROD	1
4601-55	BRACKET SUB-ASSY, PARKING BRAKE	1
4601-AB	WASHER, PLATE	2
4601-AF	PIN, W/HOLE	1
4601-AI	CLAMP	1
4601-AL	PIN, W/HOLE	1
4601-AR	IBOLT	1
4601-BL	PLATE, PARKING BRAKE	1
4601-BS	IPIN, COTTER	2
4601-BW	IBOLT	4
4601-BZ	IBOLT	2
4601-CC	WASHER	4
4601-EB	CLAMP, BRAKE CABLE	2
4601-EG	IBOLT	1
4601-EX	KNOB	1
4601-EY	BALL	1
4601-FC	HOOK	1
4601-FD	RUBBER, PARKING BRAKE	2
4601-FS	STOPPER	1
4601-FW	PIPE	2
4601-FX	STOPPER	1

G236-001E


FIG. 4602
DEAD-MAN BRAKE

4602

MAIN

92/02

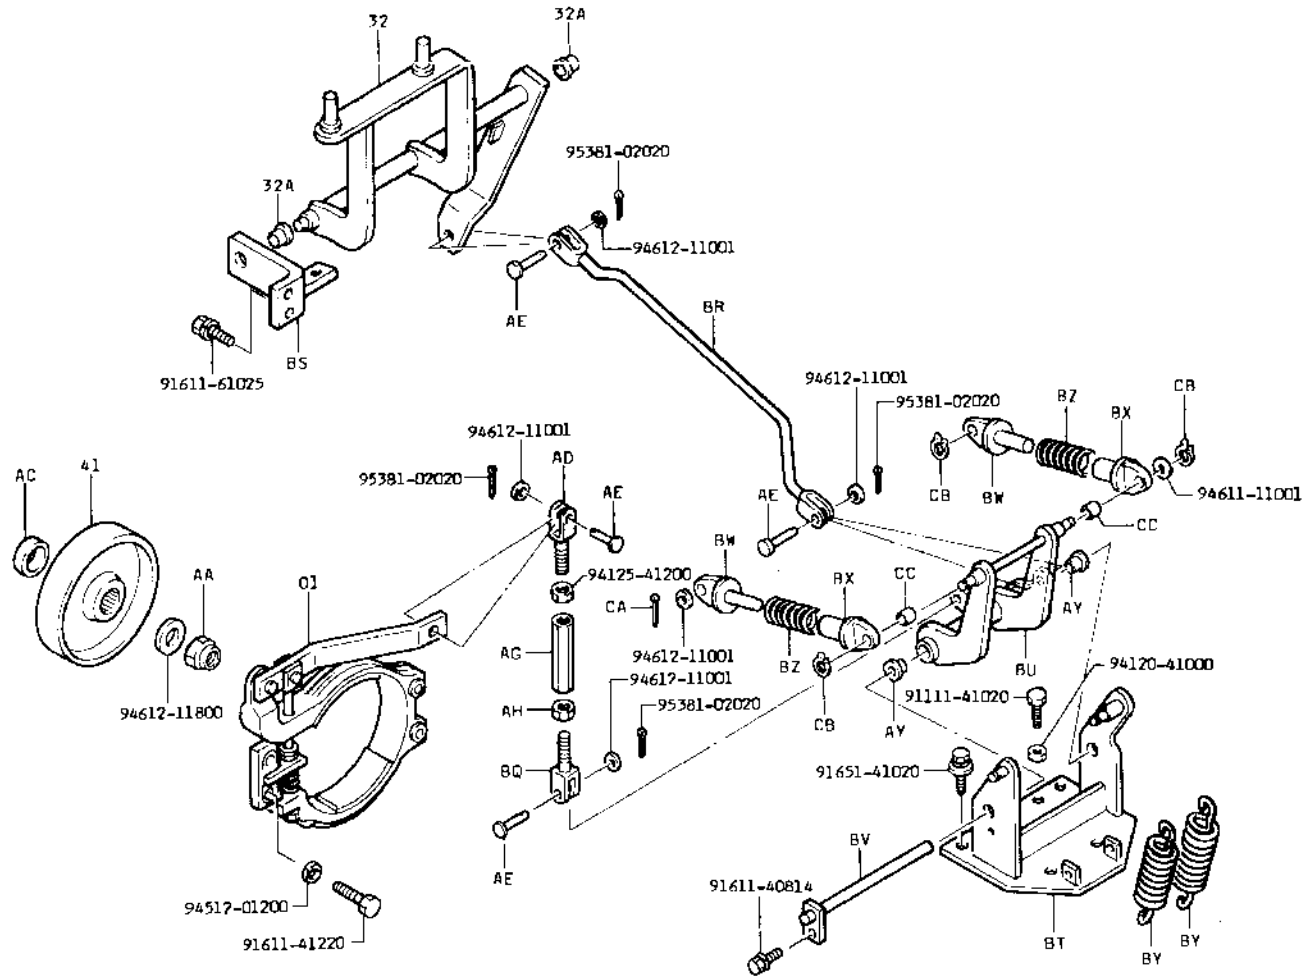 (DEAD-MAN) (1/2)



4602-007A

G236-001


FIG. 4602
DEAD-MAN BRAKE

4602

MAIN

92/02

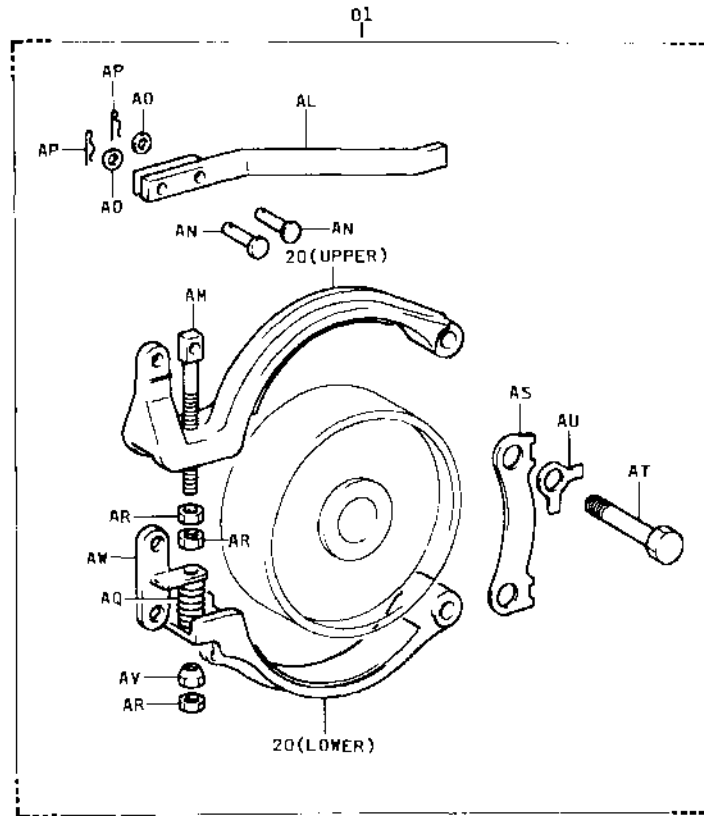 (DEAD-MAN) 12/21



PART NAME	PART NAME	QTY
CODE		
4602-01	IBRAKE ASSY, DEAD-MAN	1
4602-20	ISHOE SUB-ASSY, BRAKE	1
4602-32	ILINK SUB-ASSY, DEAD-MAN BRAKE	1
4602-32A	IBUSHING (FOR BRAKE LINK)	2
4602-41	IDRUM, DEAD-MAN BRAKE	1
4602-AA	INUT, SELF LOCK	1
4602-AC	ICOLLAR	1
4602-AD	IROD SUB-ASSY, DEAD-MAN BRAKE	1
4602-AE	IPIN, W/HOLE	4
4602-AH	INUT	1
4602-AL	ILEVER ASSY, BRAKE	1
4602-AM	ISTRUT	1
4602-AN	IPIN, BRAKE LEVER	2
4602-AD	IWASHER, PLATE	2
4602-AP	IPIN, SNAP	2
4602-AQ	ISPRING, SHOE RETURN	1
4602-AR	INUT	3
4602-A5	IPLATE, GUIDE	1
4602-AT	ISTUD	2
4602-AU	IWASHER, LOCK	2
4602-AV	INUT, STRUT	1
4602-AW	IBRACKET	1
4602-AY	IBUSHING	2
4602-BQ	IROD SUB-ASSY, DEAD-MAN BRAKE	1
4602-BR	IROD SUB-ASSY, DEAD-MAN BRAKE	1
4602-B5	IBRACKET SUB-ASSY, LINK	1
4602-BT	IBRACKET SUB-ASSY, DEAD-MAN BRAKE	1
4602-BU	ILINK SUB-ASSY, DEAD-MAN BRAKE	1
4602-BV	IPIN SUB-ASSY, BRAKE LINK	1
4602-BW	IBRACKET SUB-ASSY, SPRING	2
4602-BX	IBRACKET SUB-ASSY, SPRING	2
4602-BY	ISPRING, TENSION	2
4602-BZ	ISPRING, COMPRESSION	2
4602-CA	IPIN, CUTTER	1
4602-CB	IRING, SHAFT SNAP	3
4602-CC	IBUSHING	4

4602-008

G236-002E



FIG. 4701
BRAKE PEDAL

4701

MAIN

91/09

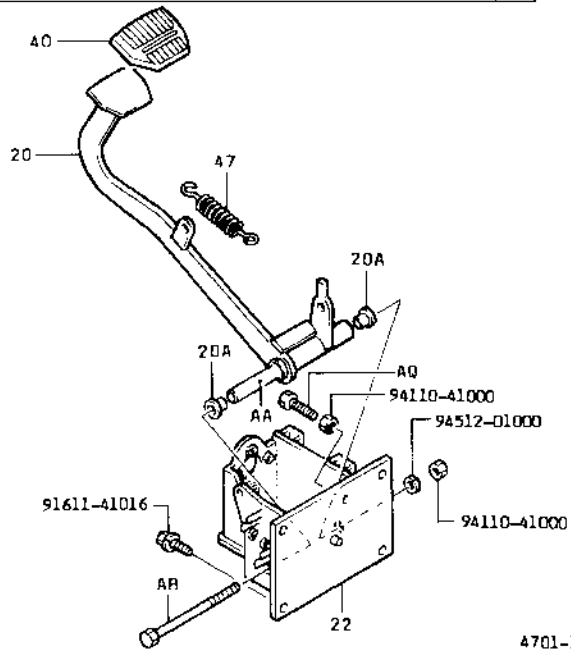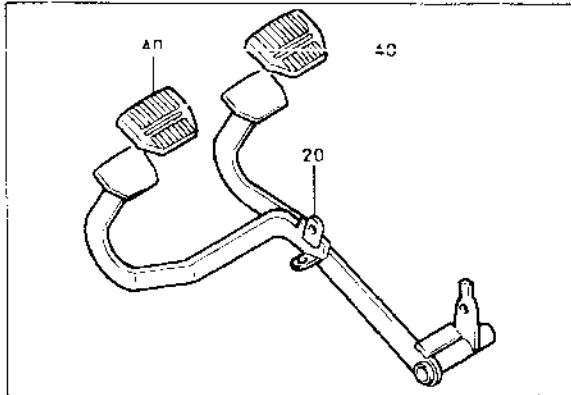  (2-PEDAL)





PART NAME	PART NAME	QTY
4701-20	PEDAL SUB-ASSY, BRAKE	1
4701-20A	BUSHING (FOR BRAKE PEDAL)	2
4701-22	BRACKET SUB-ASSY, BRAKE PEDAL	1
4701-40	PAD, PEDAL	1- 2
4701-47	SPRING, TENSION (FOR PEDAL RETURN)	1
4701-AA	SPACER	1
4701-AB	BOLT	1
4701-AQ	BOLT	1

G236-001E


FIG. 4702
BRAKE MASTER CYLINDER

4702

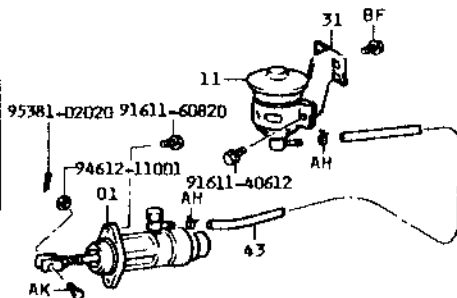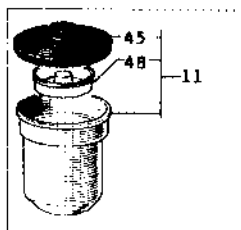  MAIN 91/09



01

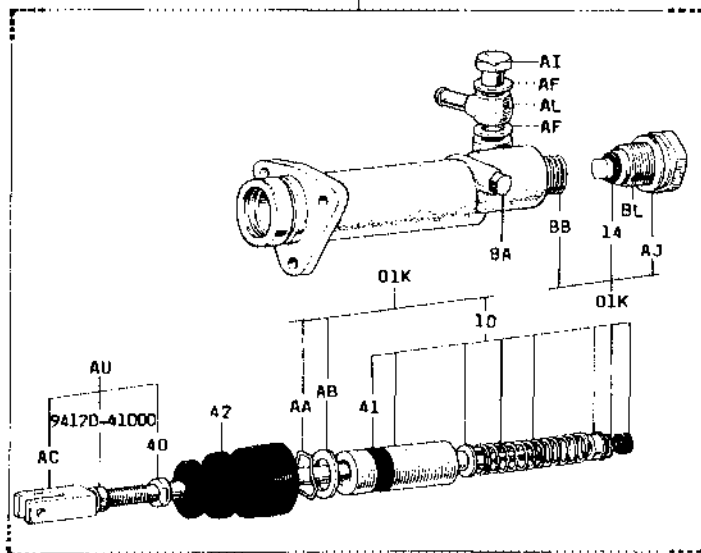 

4702-066

PART NAME CODE	PART NAME	QTY
4702-01	CYLINDER ASSY, MASTER	1
4702-01K	CYLINDER O/H KIT, MASTER	1
4702-10	PISTON SUB-ASSY, MASTER CYLINDER	1
4702-11	RESERVOIR SET, MASTER CYLINDER	1
4702-14	VALVE ASSY	1
4702-31	BRACKET SUB-ASSY, RESERVOIR	1
4702-40	ROD, PUSH	1
4702-41	CUP, CYLINDER	1
4702-42	BOOT	1
4702-43	HOSE, RESERVOIR	1
4702-45	CAP, RESERVOIR	1
4702-48	STRAINER	1
4702-AA	RING, HOLE SNAP	1
4702-AB	PLATE, PISTON STOP	1
4702-AC	CLEVIS, PUSH ROD	1
4702-AF	GASKET	2
4702-AH	CLIP	2
4702-AI	BOLT, UNION	1
4702-AJ	GASKET	1
4702-AK	PIN	1
4702-AL	UNION	1
4702-AU	ROD SUB-ASSY, MASTER CYLINDER PUSH	1
4702-BA	PLUG	1
4702-BB	SPRING, COMPRESSION	1
4702-BF	BOLT	2
4702-BL	PLUG	1


G236-001E

FIG. 4714
BRAKE PIPE

4714

MAIN

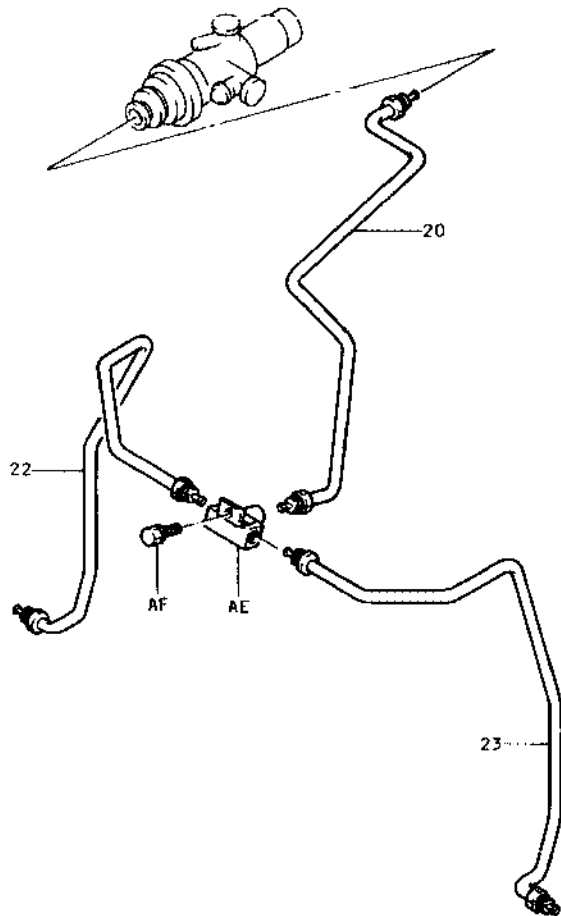 91/09



4714-138


PART NAME CODE	PART NAME	QTY
4714-20	PIPE SUB-ASSY, BRAKE, MAIN NO.1	1
4714-22	PIPE SUB-ASSY, BRAKE, RH NO.1	1
4714-23	PIPE SUB-ASSY, BRAKE, LH NO.1	1
4714-AE	3-WAY SUB-ASSY	1
4714-AF	BOLT	1
4714-AQ	CLAMP	2

G236-001E

FIG. 4715
DRUM BRAKE

4715

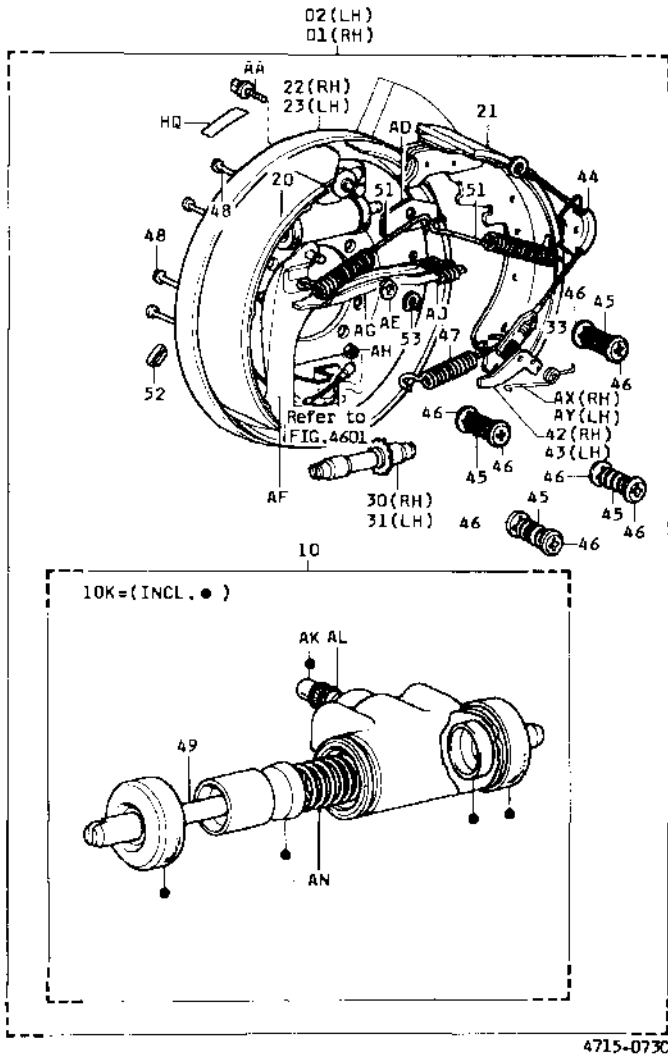 MAIN 91/09



PART NAME CODE	PART NAME	QTY
4715-01	BRAKE ASSY, RH	1
4715-02	BRAKE ASSY, LH	1
4715-10	CYLINDER ASSY, WHEEL	2
4715-10K	CYLINDER O/H KIT, WHEEL	2
4715-20	SHOE SUB-ASSY (FOR FRONT OR UPPER)	2
4715-21	SHOE SUB-ASSY (FOR REAR OR LOWER)	1
4715-22	PLATE SUB-ASSY, BACKING, RH	1
4715-23	PLATE SUB-ASSY, BACKING, LH	1
4715-30	SCREW SUB-ASSY, ADJUSTING, RH	1
4715-31	SCREW SUB-ASSY, ADJUSTING, LH	1
4715-33	CABLE & FITTING SUB-ASSY	2
4715-42	LEVER, AUTOMATIC ADJUSTMENT, RH	1
4715-43	LEVER, AUTOMATIC ADJUSTMENT, LH	1
4715-44	GUIDE, CABLE	2
4715-45	SPRING, SHOE HOLD DOWN	4
4715-46	CUP, SHOE HOLD DOWN	8
4715-47	SPRING, ADJUSTER	2
4715-48	PIN, SHOE HOLD DOWN	4
4715-49	ROD, PUSH	4
4715-51	SPRING, ANCHOR TO SHOE	2
4715-52	COVER, ADJUSTING HOLE	2
4715-53	RING, PARKING LEVER RETAINING	2
4715-AA	BOLT & WASHER SET	4
4715-AD	PLATE, SHOE GUIDE	2
4715-AE	WASHER, SPRING	2
4715-AF	LEVER SUB-ASSY, PARKING	1
4715-AG	STRUT, LEVER	1
4715-AH	RING, SNAP	2
4715-AJ	SPRING, STRUT TO SHOE	2
4715-AK	CAP, BLEEDER SCREW	2
4715-AL	SCREW, BLEEDER	2
4715-AN	SPRING, WHEEL CYLINDER	1
4715-AX	SPRING, LEVER RETURN, RH	1
4715-AY	SPRING, LEVER RETURN, LH	1
4715-HQ	PLATE, INDICATOR	2


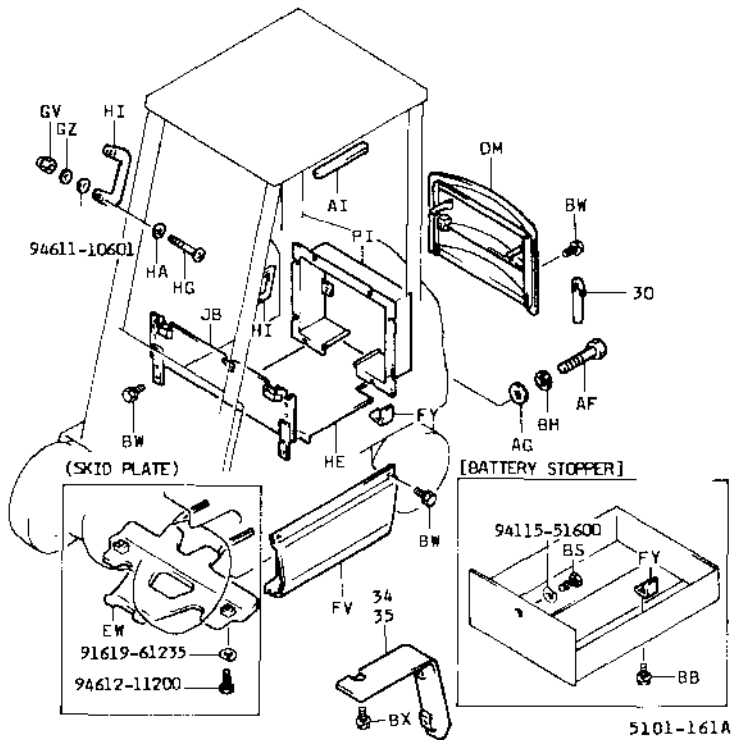 
G236-001E

FIG. 5101
FRAME & WEIGHT

5101

MAIN

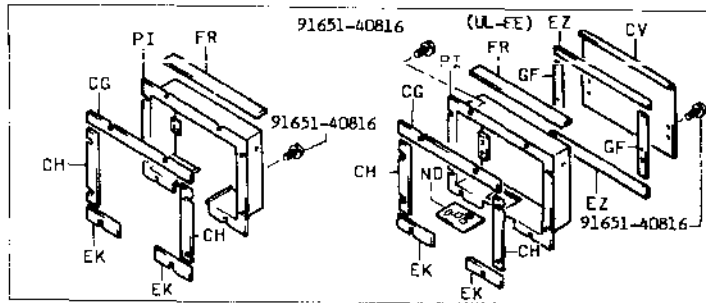 91/09




PART NAME	PART NAME	QTY
CODE		
5101-30	DRAWBAR SUB-ASSY	1
5101-34	GUARD SUB-ASSY, MUD, RH	1
5101-35	GUARD SUB-ASSY, MUD, LH	1
5101-AF	BOLT, HEXAGON	2
5101-AG	WASHER, PLATE	2
5101-AI	SPONGE	1
5101-BB	BOLT	2
5101-BH	WASHER, SPRING	2
5101-BS	BOLT	1
5101-BW	BOLT	10
5101-BX	BOLT	6
5101-CG	RUBBER	1
5101-CH	RUBBER	2
5101-CV	PLATE	1
5101-DM	COVER SUB-ASSY, REAR	1
5101-EK	RUBBER	2
5101-EW	PLATE SUB-ASSY, SKID	1
5101-EZ	RUBBER	2
5101-FR	SPONGE	1
5101-FV	COVER SUB-ASSY, SIDE FRAME	1
5101-FY	STOPPER	1
5101-GF	RUBBER	2
5101-GV	NUT	2
5101-GZ	WASHER, SPRING	2
5101-HA	WASHER, PLATE	2
5101-HE	COVER SUB-ASSY, LOWER	1
5101-HG	SCREW	2
5101-HI	GRIP	1
5101-JB	PLATE SUB-ASSY	1
5101-ND	RUBBER	1
5101-PI	CASE	1

G236-001E

FIG. 5201
HOOD & HINGE

5201

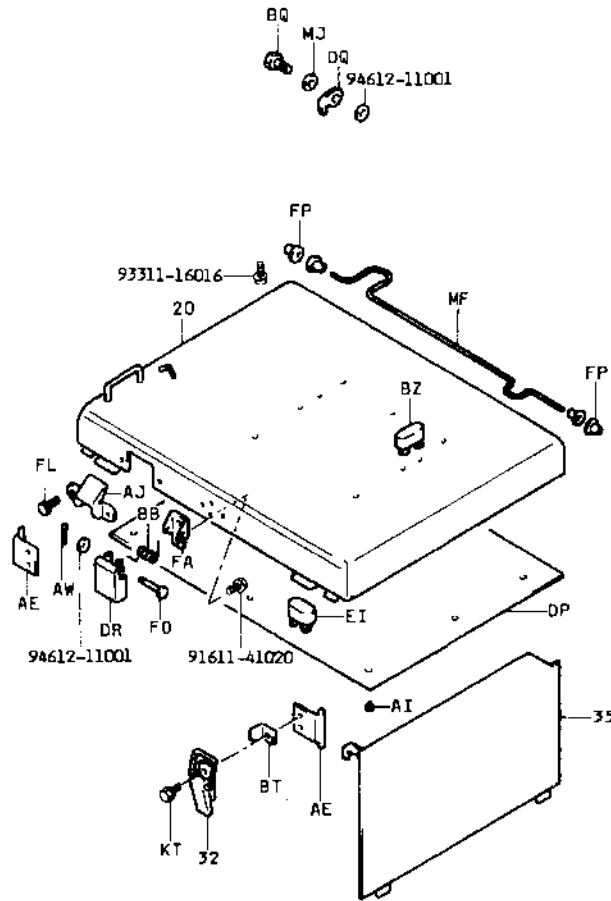 MAIN 91/09



5201-133A

PART NAME CODE	PART NAME	QTY
5201-20	HOOD SUB-ASSY, ENGINE (OR BATTERY)	1
5201-32	CATCH SUB-ASSY (FOR HOOD)	2
5201-35	HOOD SUB-ASSY, SIDE	1
5201-AE	HOOK, HOOD LOCK	2
5201-AI	CLIP	9-13
5201-AJ	COVER	1
5201-AW	PIN, SNAP	1
5201-BB	SPRING	1
5201-BQ	BOLT	1
5201-BT	HOOK	1
5201-BZ	CUSHION	4
5201-DP	SHEET	1
5201-DQ	HOOK	1
5201-DR	HOOK SUB-ASSY	1
5201-EI	CUSHION	2
5201-FA	BRACKET SUB-ASSY	1
5201-FL	BOLT, W/WASHER	2
5201-FD	PIN	1
5201-FP	BUSHING	4
5201-KT	BOLT	4
5201-MF	BAR	1
5201-MJ	COLLAR	1

G236-001E




FIG. 5301
INSTRUMENT PANEL & FLOOR

5301

MAIN

91/09

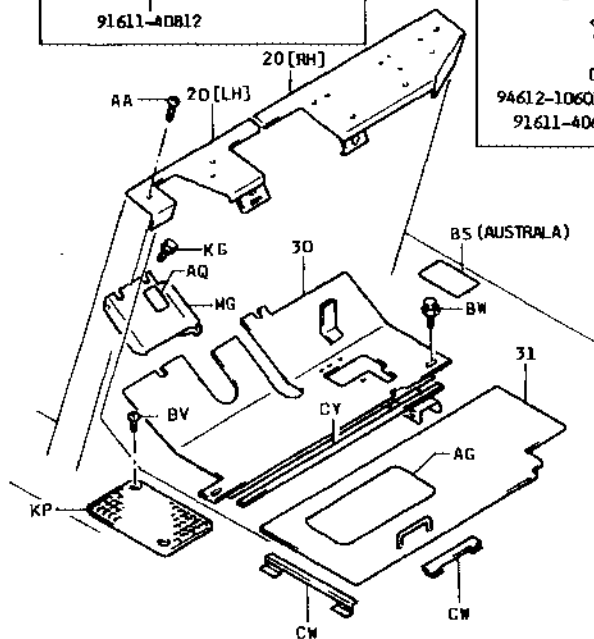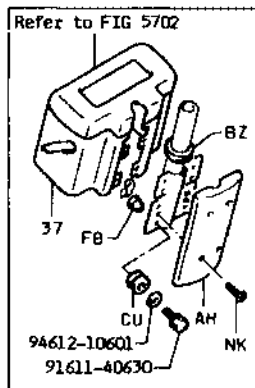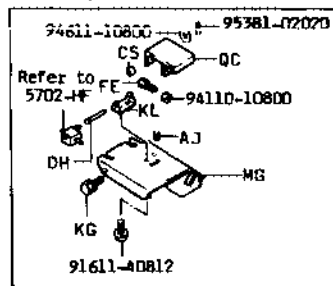   (EC SPEC)



PART NAME	PART NAME	QTY
CODE		
5301-20	PANEL SUB-ASSY, INSTRUMENT	1
5301-30	TOE-BOARD SUB-ASSY, NO.1	1
5301-31	TOE-BOARD SUB-ASSY, NO.2	1
5301-37	COVER ASSY, METER CASE	1
5301-AA	SCREW	4
5301-AG	SAFETY WALK	1
5301-AH	COVER	1
5301-AJ	SPRING	1
5301-AQ	SAFETY WALK	1
5301-B5	SAFETY WALK	1
5301-BV	BOLT	2
5301-BW	BOLT	4
5301-BZ	GROMMET	1
5301-C5	BUSHING	1
5301-CU	RUBBER	4
5301-CW	RUBBER	3
5301-CY	RUBBER	1
5301-DH	PIN	1
5301-FB	SPACER	4
5301-FE	BOLT	1
5301-KG	BOLT	2
5301-KL	BRACKET	1
5301-KP	MAT SUB-ASSY, STEP	1
5301-MG	COVER SUB-ASSY	1
5301-NK	SCREW	4
5301-QC	PEDAL SUB-ASSY	1

5301-171B

G236-001E


FIG. 5308
DRIVER SEAT

5308



MAIN

92/02

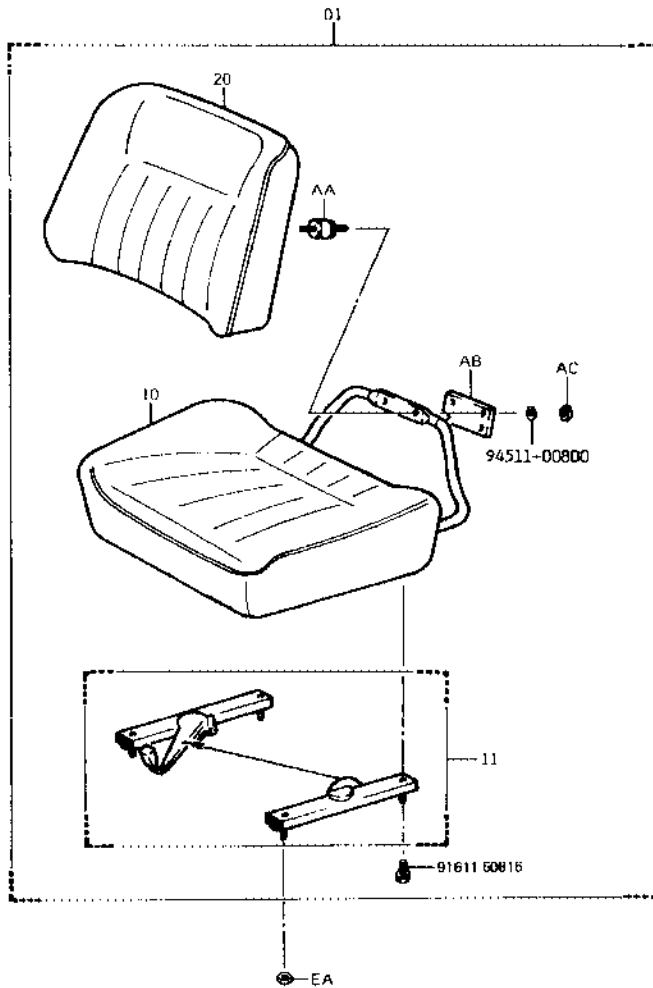 (ORS. U.S.A.)



5308-098A

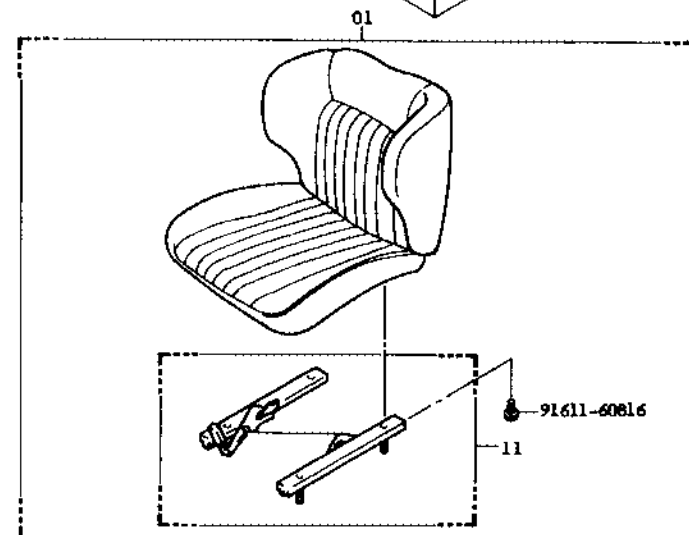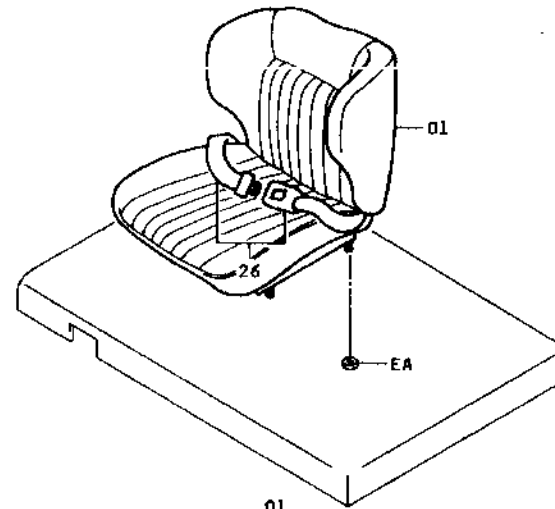  

5308-142

G236-001



FIG. 5308
DRIVER SEAT

5308

MAIN

92/02

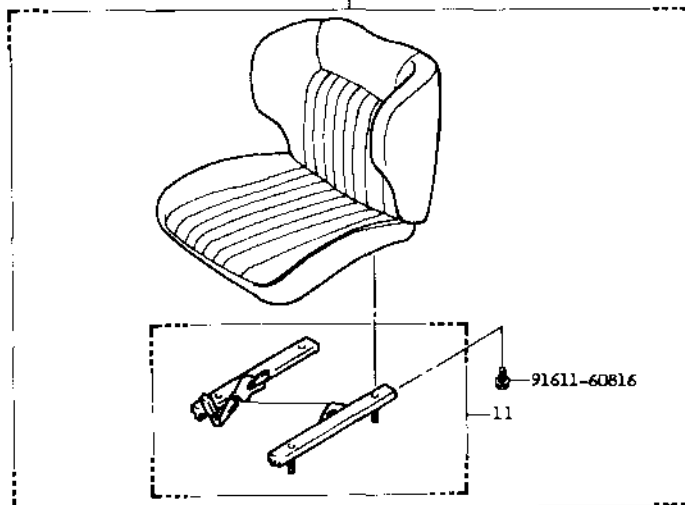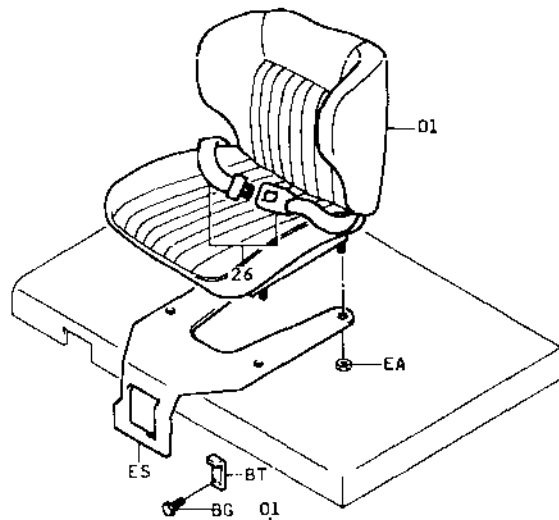  (ORS., DEAD-MAN)



5308-141

PART NAME CODE	PART NAME	QTY
5308-01	SEAT ASSY	1
5308-10	CUSHION ASSY	1
5308-11	TRACK ASSY	1
5308-20	SEAT SUB-ASSY, BACK	1
5308-26	BELT ASSY, SEAT	1
5308-AA	RUBBER, VIBRATION ISOLATOR	2
5308-AB	BRACKET, NUMBER PLATE	1
5308-AC	NUT, CAP	2
5308-BG	BOLT	2
5308-BT	STOPPER	1
5308-EA	NUT	4
5308-ES	BRACKET SUB-ASSY, SEAT	1


G236-002E

FIG. 5401
HEAD GUARD & ACCESSORY

5401

MAIN

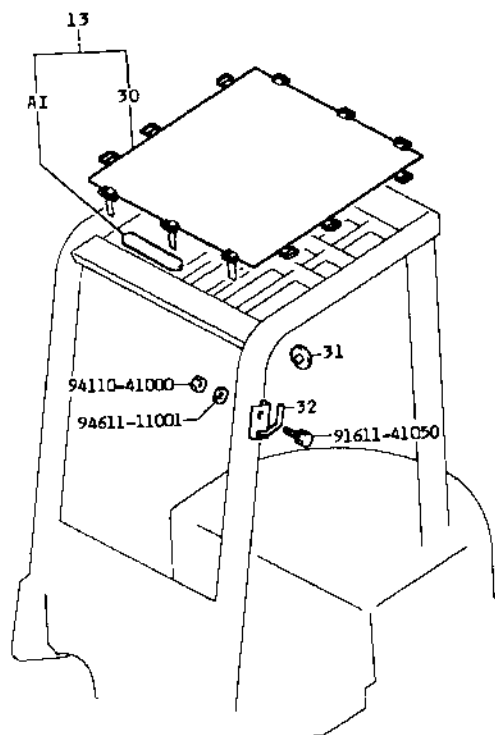 91/09



PART NAME CODE	PART NAME	QTY
5401-13	SHEET ASSY	1
5401-30	SHEET SUB-ASSY, HEAD GUARD	1
5401-31	MIRROR SUB-ASSY, BACK	2
5401-32	BRACKET SUB-ASSY, BACK MIRROR	1
5401-A1	CUSHION, SHEET	2

5401-151


G236-001E

FIG. 5405
INDICATOR PLATE

5405

MAIN

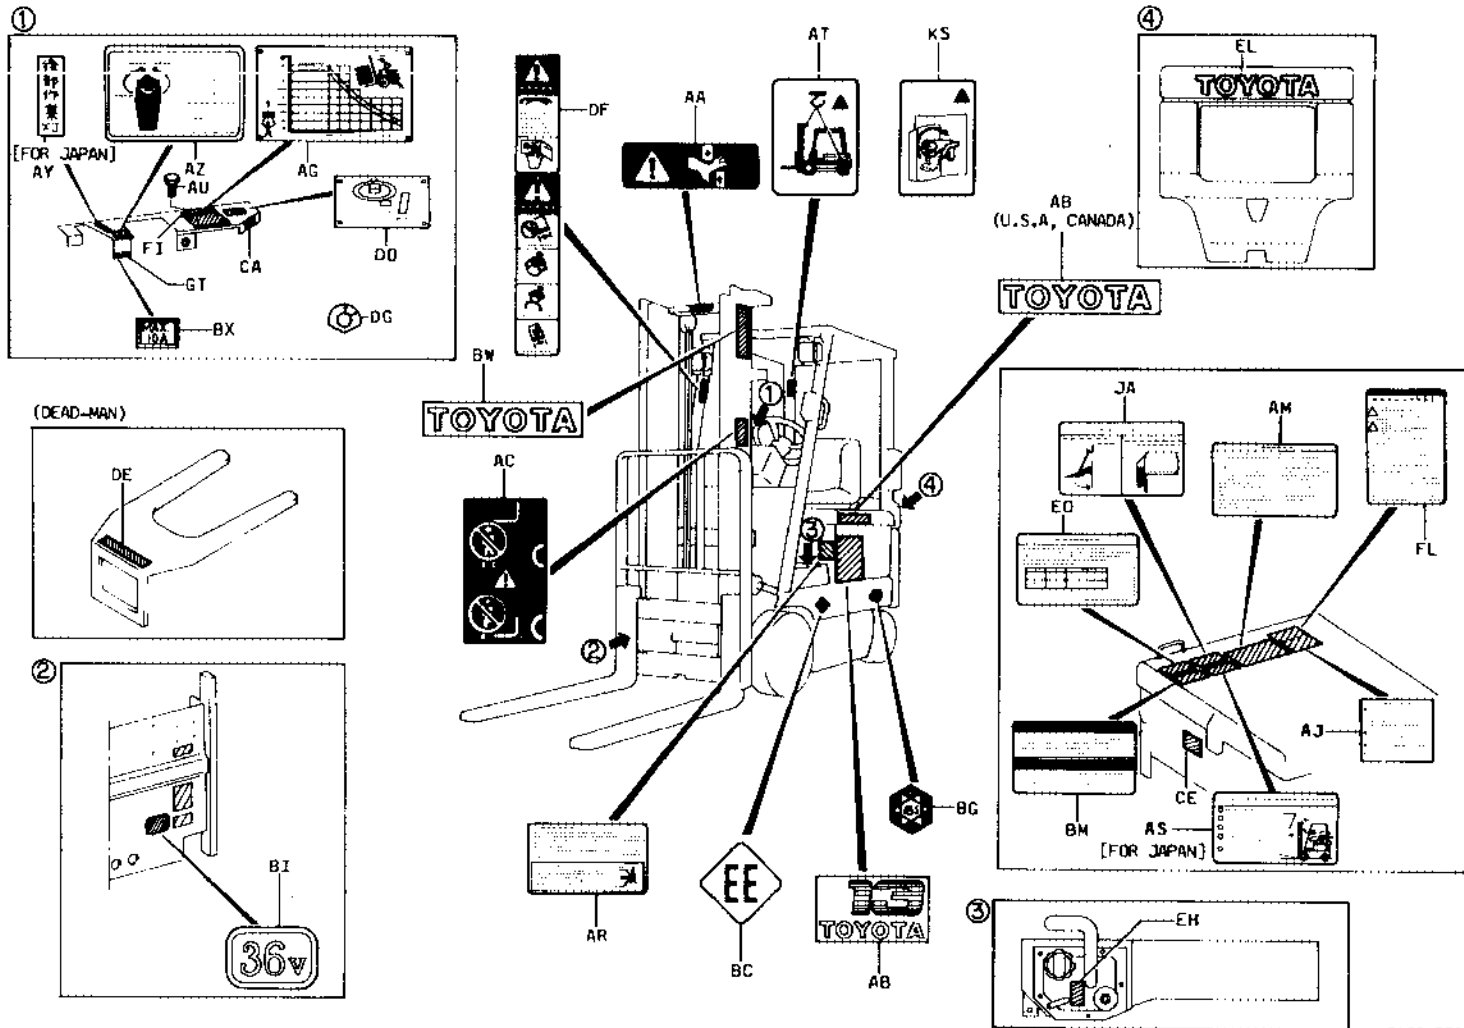 92/07



5405-352C

G236-001

FIG-5405
INDICATOR PLATE

5405


MAIN

92/07

PART NAME CODE	PART NAME	QTY
5405-AA	PLATE, CAUTION	2- 3
5405-AB	MARK, TOYOTA	2
5405-AC	PLATE, CAUTION	2
5405-AG	PLATE, LOAD INDICATOR	1
5405-AM	PLATE, SERVICE INDICATOR	1
5405-AR	PLATE, CAUTION	1
5405-AS	PLATE, INDICATOR	1
5405-AT	PLATE, CAUTION	1
5405-AU	RIVET	4
5405-AZ	PLATE, CAUTION	1
5405-BC	MARK, UL	2
5405-BG	PLATE, TEMPERATURE	2
5405-BI	PLATE, VOLTAGE	1
5405-BM	PLATE, SAFETY DRIVE CHART	1
5405-BW	MARK, SYMBOL	2
5405-BX	PLATE, INDICATOR	1
5405-CA	PLATE, CAUTION	1
5405-CE	PLATE, CAUTION	1
5405-DE	PLATE, INDICATOR	1
5405-DF	PLATE, INDICATOR	1
5405-DG	PLATE, CAUTION	1
5405-DO	PLATE, INDICATOR	1
5405-EH	PLATE, OIL INDICATOR	1
5405-EL	MARK, TOYOTA	1- 2
5405-EO	PLATE, BATTERY CAPACITY	1
5405-FI	PLATE, CAUTION	1
5405-FL	PLATE, BATTERY CAUTION	1
5405-GT	PLATE, FUSE INDICATOR	1
5405-JA	INDICATOR	1
5405-KS	PLATE, HOOD STAY CAUTION	1

G236-002E

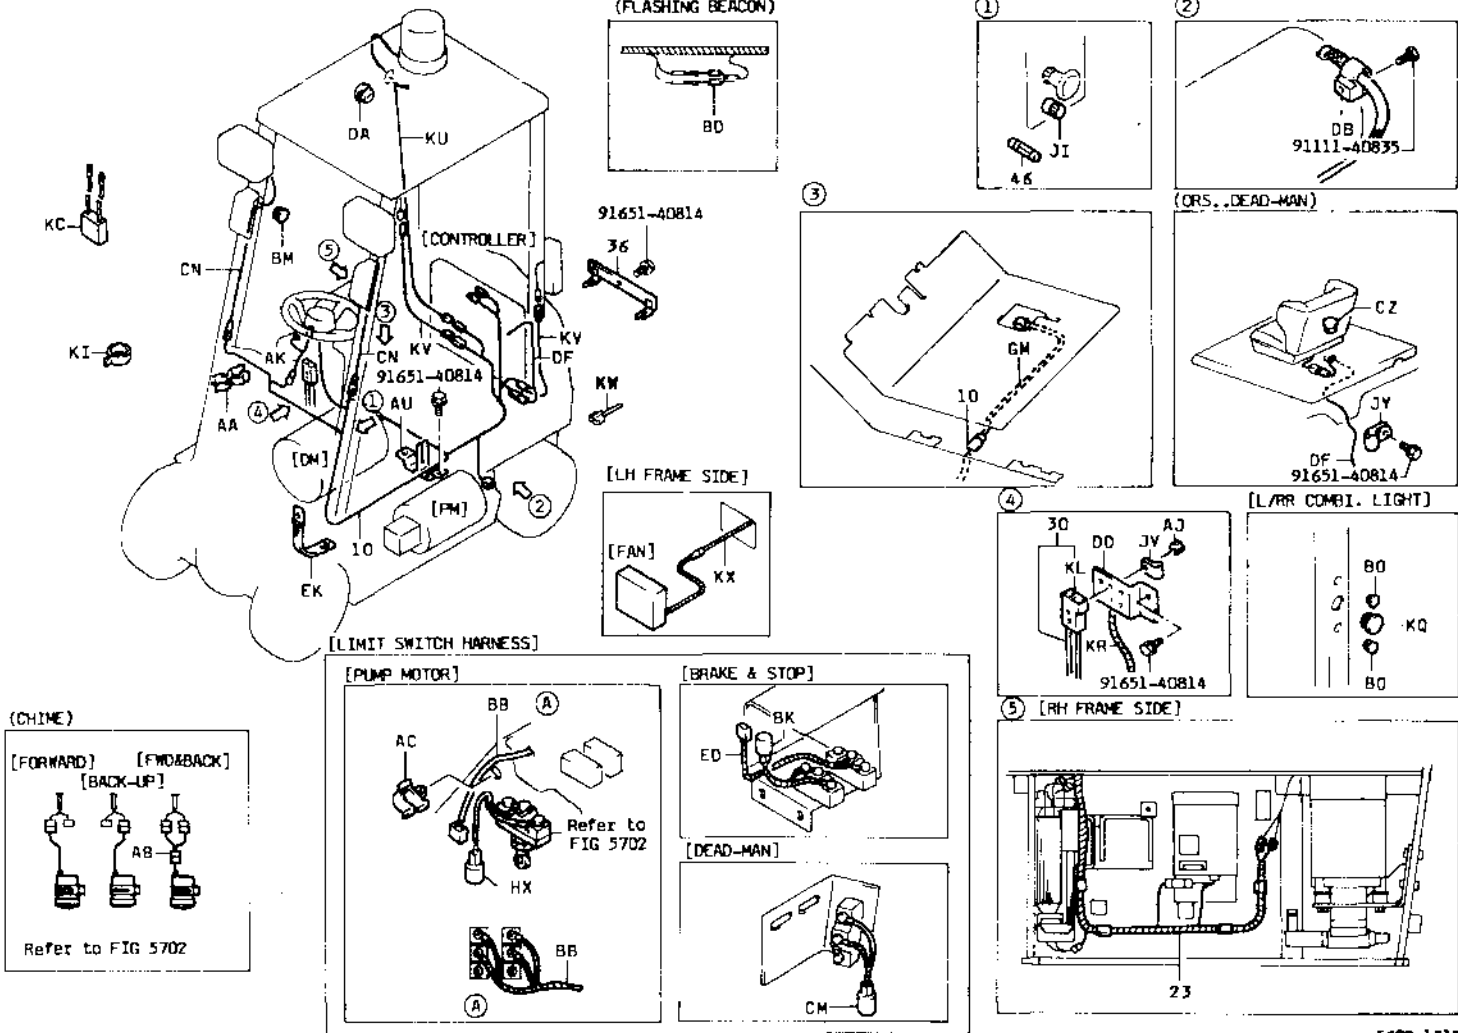 (1/2)





5602-151B


G236-001

(2/2)


P/N CODE	MARK
77	P4 - A
78	P5 - B
79	P6 - E
80	P7 - F
BP	P12 - A
CD	P13 - F
CV	N1 - F
27	PF - P1
28	N1 - N1
29	P1 - PF

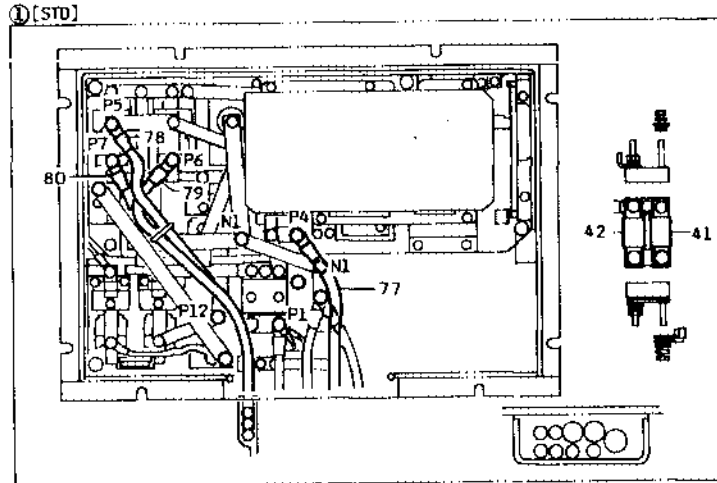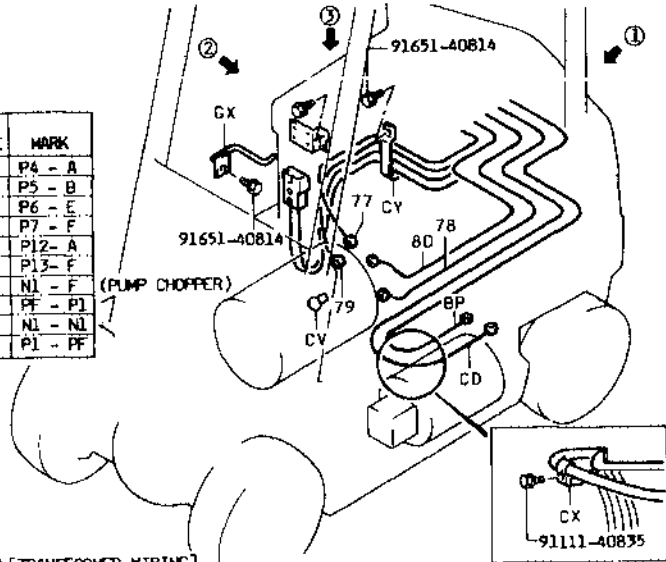  

③ [TRANSFORMER WIRING]

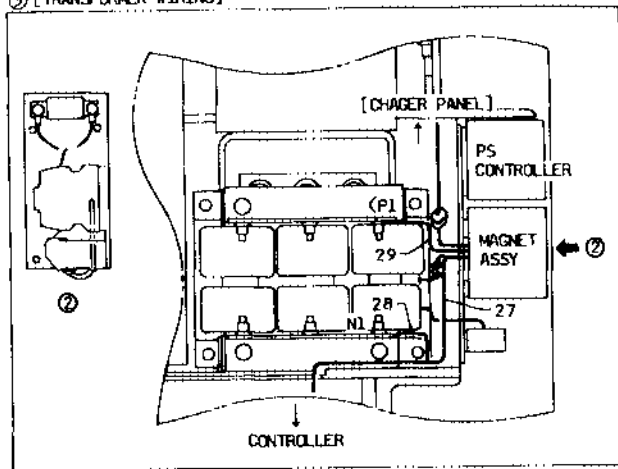 

① [PUMP CHOPPER]

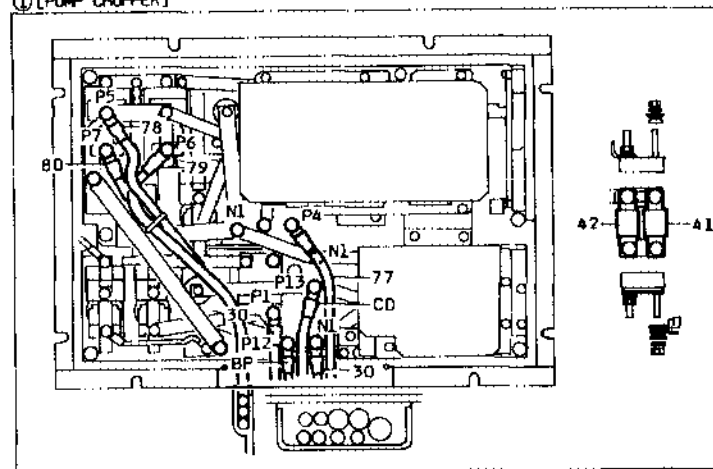 

5602-150A

G236-002

FIG-5602
WIRING & CLAMP

5602

MAIN

92/07

PART NAME CODE	PART NAME	QTY
5602-10	HARNESS ASSY, WIRING	1
5602-23	WIRING SUB-ASSY, POWER STEERING	1
5602-30	CONNECTOR SUB-ASSY	1
5602-36	CLAMP SUB-ASSY, CABLE	1- 2
5602-41	FUSE (F1)	1
5602-42	FUSE (F2)	1
5602-46	FUSE	2
5602-77	WIRING SUB-ASSY, DRIVE MOTOR	1
5602-78	WIRING SUB-ASSY, DRIVE MOTOR	1
5602-79	WIRING SUB-ASSY, DRIVE MOTOR	1
5602-80	WIRING SUB-ASSY, DRIVE MOTOR	1
5602-AB	HARNESS, CHIME	1
5602-AC	CLAMP	1
5602-AJ	NUT	2
5602-AK	HARNESS SUB-ASSY	1
5602-AU	CLAMP	2
5602-BB	HARNESS, LIMIT SWITCH	1
5602-BD	HARNESS, DODGE ROTARY LAMP	1
5602-BK	HARNESS, BRAKE SWITCH	1
5602-BM	GROMMET	2
5602-BO	PLUG	4
5602-BP	WIRING SUB-ASSY, PUMP MOTOR	1
5602-CD	WIRING SUB-ASSY, PUMP MOTOR	1
5602-CH	HARNESS	1
5602-CN	HARNESS SUB-ASSY	2
5602-CV	CAP	6
5602-CX	CLAMP	1
5602-CY	CLAMP	1
5602-CZ	GROMMET	1
5602-DA	GROMMET	1
5602-DB	CLAMP	2
5602-DD	BRACKET, CONNECTOR	1
5602-DF	HARNESS, DEAD-MAN SWITCH	1
5602-EO	HARNESS	1
5602-EK	WIRE, EARTH	1
5602-GM	HARNESS	1
5602-GX	GUIDE SUB-ASSY, CABLE	1
5602-HX	HARNESS, PUMP CHOPPER	1
5602-JI	HOLDER, FUSE	1
5602-JY	CLAMP	1
5602-KC	ABSORBER	1
5602-KI	CLAMP	2
5602-KL	CONNECTOR	1
5602-KQ	PLUG	2
5602-KU	HARNESS	1
5602-KV	HARNESS	2
5602-KW	HARNESS	1
5602-KX	HARNESS	1


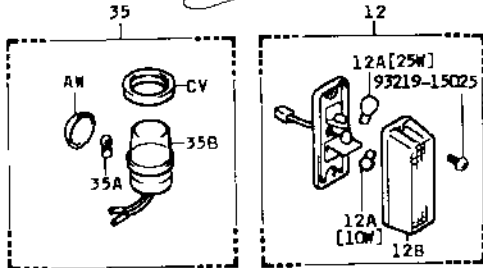 
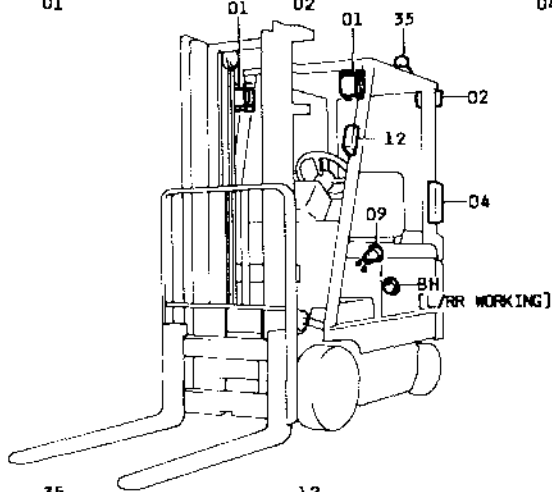 
G236-003E

FIG. 5611
LAMP

5611

MAIN

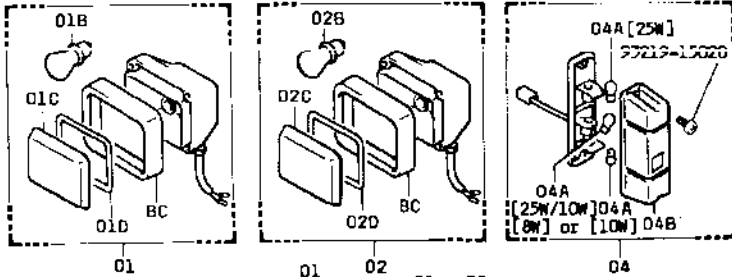 91/09



5611-128

PART NAME CODE	PART NAME	QTY
5611-01	LAMP ASSY, HEAD	Z
5611-01B	BULB (FOR HEAD LAMP)	Z
5611-01C	LENS (FOR HEAD LAMP)	Z
5611-01D	GASKET (FOR HEAD LAMP)	Z
5611-04	LAMP ASSY, REAR COMBINATION	Z
5611-04A	BULB (FOR REAR COMBINATION LAMP)	Z
5611-04B	LENS (FOR REAR COMBINATION LAMP)	Z
5611-12	LAMP ASSY, FRONT COMBINATION	Z
5611-12A	BULB (FOR FRONT COMBINATION)	Z
5611-12B	LENS (FOR FRONT COMBINATION)	Z
5611-35	LAMP ASSY, ROTARY	1
5611-35A	BULB (FOR ROTARY LAMP)	1
5611-35B	LENS (FOR ROTARY LAMP)	1
5611-AW	REFLECTOR	1
5611-BC	RIM	1-2
5611-CV	FLANGE	1


G236-001E

FIG. 5612
LAMP BRACKET

5612

MAIN

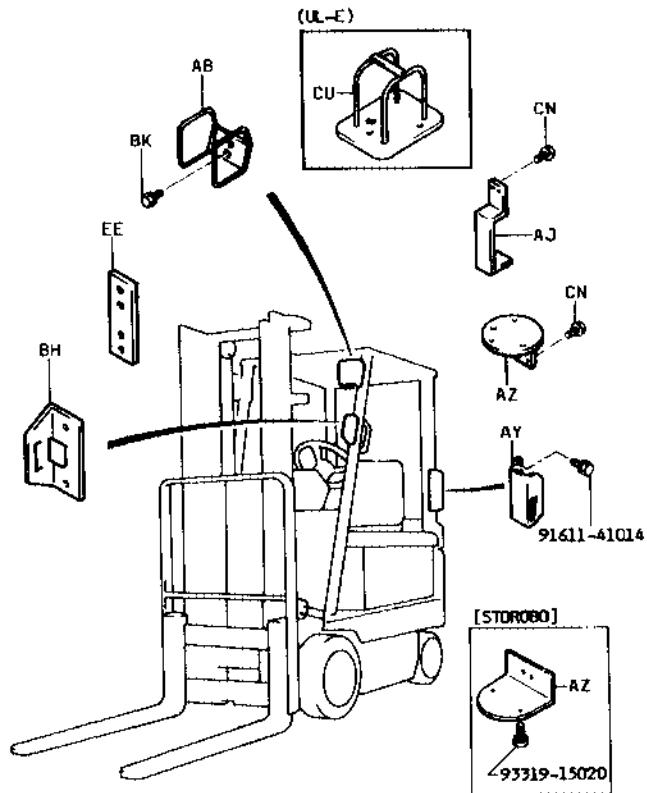 91/09




5612-145A



PART NAME CODE	PART NAME	QTY
5612-AB	BRACKET SUB-ASSY, HEAD LAMP	1
5612-AY	GUARD SUB-ASSY, LAMP	1
5612-AZ	BRACKET SUB-ASSY, AUXILIARY LAMP	1
5612-BH	COVER	2
5612-BK	BOLT	4- 8
5612-CN	BOLT	2
5612-CU	BRACKET	1
5612-EE	PLATE	2

G236-001E


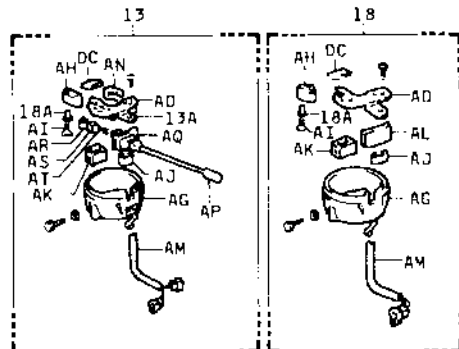 
11/21




[SPEED CONTROL SWITCH]

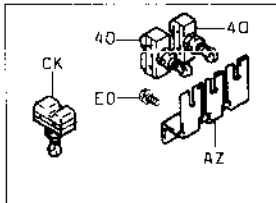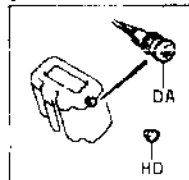  


(EC SPEC.)

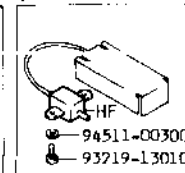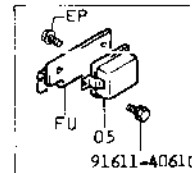  


[PARKING SWITCH]

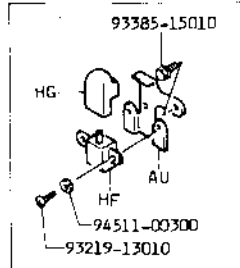 


94611-10501
93381-15014

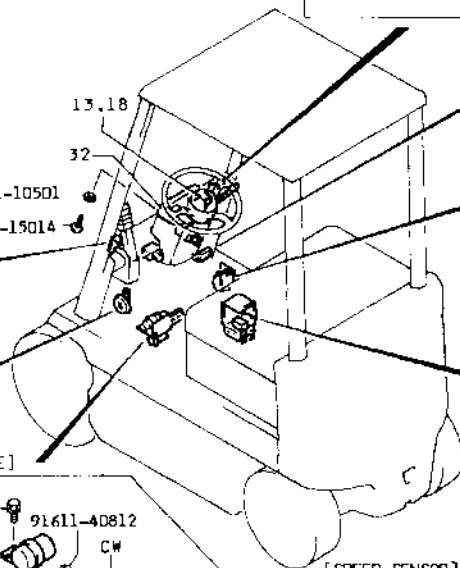 


[DEAD-MAN SWITCH]

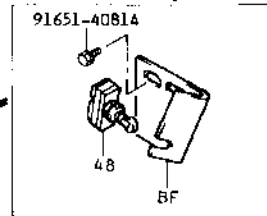 


[BRAKE, STOP SWITCH]

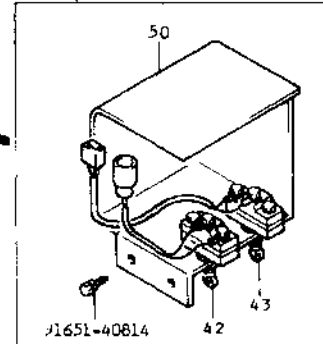 



[HORN]

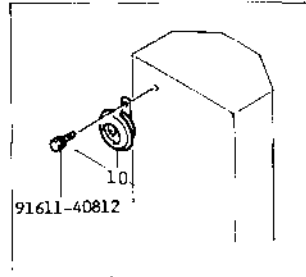 

[BUZZER, CHIME]

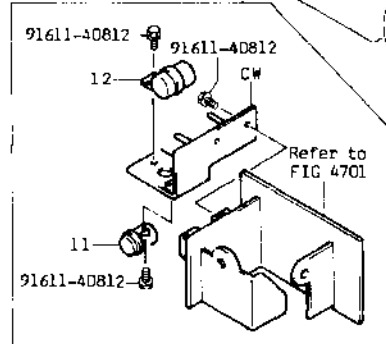 

[SPEED SENSOR]

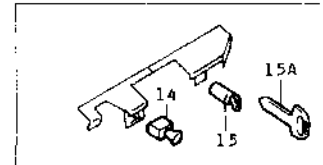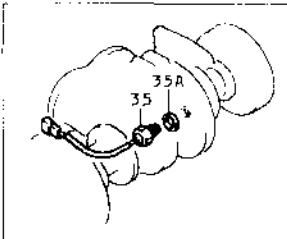  

5702-076A

G236-001


FIG. 5702
METER & SWITCH

5702

MAIN

92/07

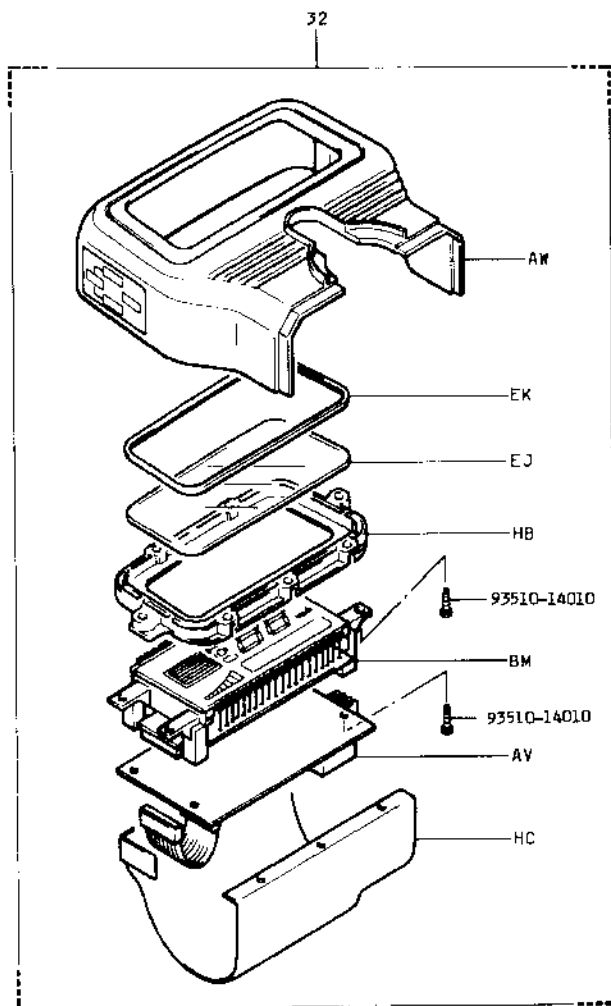 (2/2)



5702-068

PART NAME	PART NAME	QTY
5702-05	RELAY ASSY, FLASHER	1
5702-10	HORN ASSY	1
5702-12	CHIME ASSY, BACK	1
5702-13	SWITCH ASSY, TURN SIGNAL	1
5702-13A	SWITCH SUB-ASSY, MICRO	2
5702-14	SWITCH ASSY, LIGHT CONTROL	1
5702-15	SWITCH ASSY, STARTER	1
5702-15A	KEY, CUT	1
5702-18	SWITCH ASSY, HORN	1
5702-18A	CONTACT, HORN	1
5702-32	METER ASSY, COMBINATION	1
5702-35	SENSOR ASSY, PICK UP	1
5702-35A	GASKET	99
5702-40	SWITCH ASSY, LIMIT (FOR PUMP MOTOR)	2-4
5702-42	SWITCH ASSY, LIMIT (FOR BRAKE)	1
5702-43	SWITCH ASSY, LIMIT (FOR STOP LAMP)	1
5702-48	SWITCH ASSY, LIMIT (FOR DEAD-MAN)	1
5702-50	BRACKET, BRAKE SWITCH	1
5702-AG	BODY, SWITCH	1
5702-AH	HOLDER, HORN POINT	1
5702-AI	SPRING, HORN CONTACT	1
5702-AJ	COVER	1
5702-AK	BLOCK, LOCKING	1
5702-AL	COVER, RUBBER	1
5702-AM	HARNES ASSY	1
5702-AN	ACTUATOR	2
5702-AO	PLATE, SWITCH	1
5702-AP	LEVER, SIGNAL	1
5702-AQ	BELLOWS	1
5702-AR	ROLLER	1
5702-AS	HOLDER, ROLLER	1
5702-AT	SPRING	1
5702-AU	BRACKET, PARKING BRAKE	1
5702-AV	BOARD ASSY, METER COMBINATION	1
5702-AW	CASE, METER	1
5702-AZ	BRACKET, LIMIT SWITCH	1
5702-BF	BRACKET, DEAD MAN SWITCH	1
5702-BM	PANEL ASSY	1
5702-CK	SWITCH ASSY, LIMIT	1
5702-CW	BRACKET SUB-ASSY, BACK BUZZER	1
5702-DA	SWITCH ASSY	1
5702-DC	VARIATOR	1
5702-EJ	GLASS, WINDOW	1
5702-EK	RUBBER, SEAL	1
5702-ED	BOLT, W/WASHER	2
5702-EP	BOLT	2
5702-FU	BRACKET	1
5702-HB	PLATE, WINDOW	1
5702-HC	SHEET, COVER	1
5702-HD	CAP	1
5702-HF	SWITCH ASSY	1-2
5702-HG	BOOT	1
5702-HG	BOOT	1

G236-002E

MEMO


FIG. 6101
MAST

6101

FSV

91/09

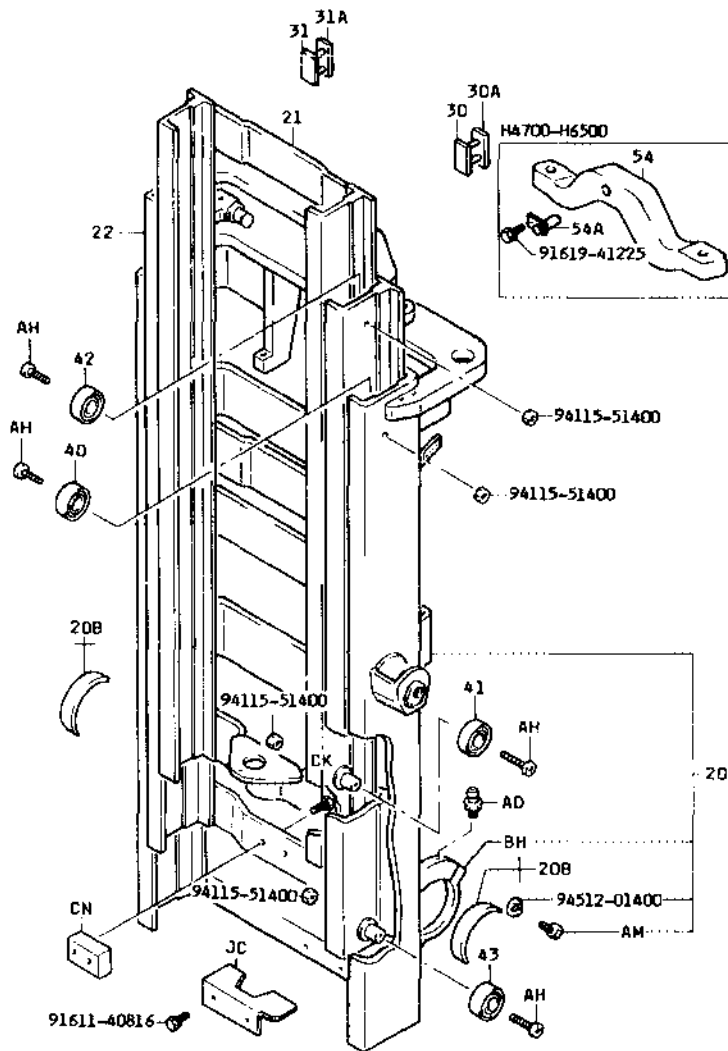 FSV



6101-280C

PART NAME CODE	PART NAME	QTY
6101-20	MAST SUB-ASSY, OUTER	1
6101-20B	BUSHING, MAST SUPPORT	1
6101-21	MAST SUB-ASSY, INNER	1
6101-22	MAST SUB-ASSY, MIDDLE	1
6101-30	STRIP SUB-ASSY, OUTER MAST	2
6101-30A	SHIM, OUTER MAST STRIP	99
6101-31	STRIP SUB-ASSY, MIDDLE MAST	2
6101-31A	SHIM, MIDDLE MAST STRIP	99
6101-40	ROLLER, LIFT (FOR OUTER MAST)	2
6101-41	ROLLER, LIFT (FOR INNER MAST)	2
6101-42	ROLLER, LIFT (FOR MIDDLE MAST UPPER)	2
6101-43	ROLLER, LIFT (FOR MIDDLE MAST LOWER)	2
6101-54	BEAM, EQUALIZER	1
6101-54A	PIN SUB-ASSY, EQUALIZER	1
6101-AD	FITTING, GREASE	2
6101-AH	BOLT	8
6101-AM	BOLT	4
6101-BH	CAP, MAST SUPPORT	2
6101-CK	BOLT	2
6101-CN	PLATE, STOPPER	1
6101-JC	GUIDE, HOSE	1

G236-001E


FIG. 6301
LIFT BRACKET & FORK

6301


FSV

91/09

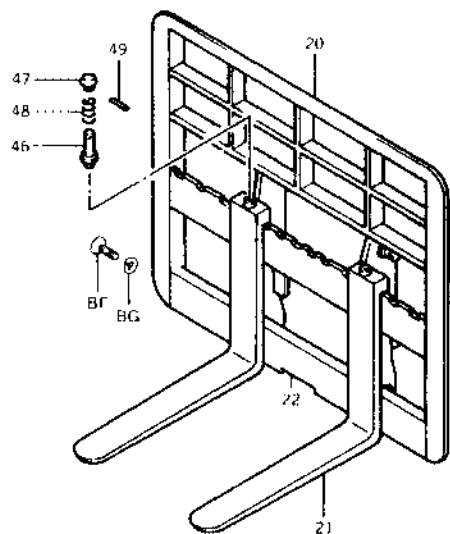 
FSV




(L/BACK REST)

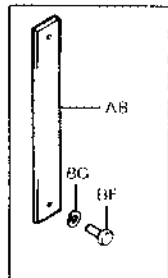 


FSV

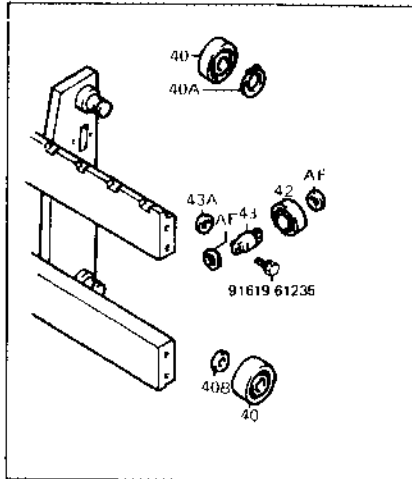 

FV

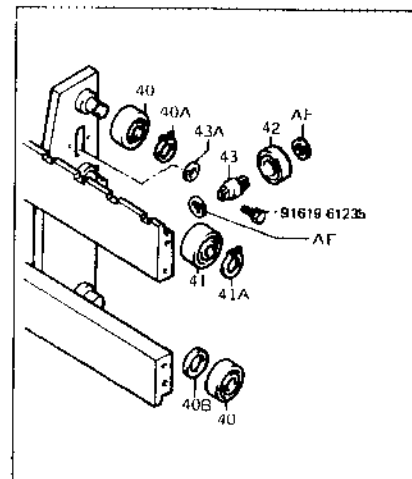 

V

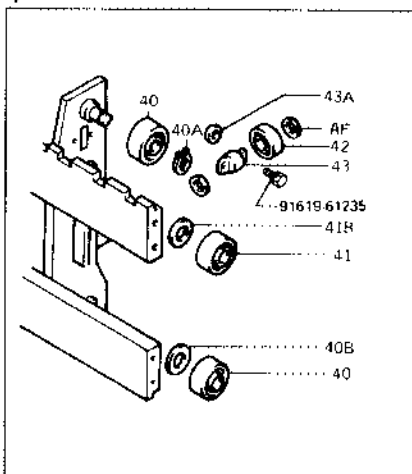 

6301-224

G236-001

FIG. 6301
LIFT BRACKET & FORK

6301

FSV

91/09

PART NAME CODE	PART NAME	QTY
6301-20	BACKREST SUB-ASSY	1
6301-21	FORK SUB-ASSY	2
6301-22	BRACKET SUB-ASSY, LIFT	1
6301-40	ROLLER, LIFT (UPPER, LOWER)	4
6301-40A	RING, SHAFT SNAP (UPPER, LOWER)	2
6301-40B	SHIM, LIFT ROLLER	99
6301-42	ROLLER, SIDE	2
6301-43	SHAFT, SIDE ROLLER	2
6301-43A	SHIM (FOR SIDE ROLLER SHAFT)	99
6301-46	PIN, FORK STOPPER	2
6301-47	KNDS, FORK STOPPER PIN	2
6301-48	SPRING, FORK STOPPER PIN	2
6301-49	PIN, SPRING (FOR FORK STOPPER PIN)	2
6301-AB	PLATE, SIDE	2
6301-AF	PLATE	4
6301-BF	BOLT	4- 8
6301-BG	WASHER	4- 8

G236-002E


FIG. 6302
CHAIN & CHAIN WHEEL

6302

FSV

91/09

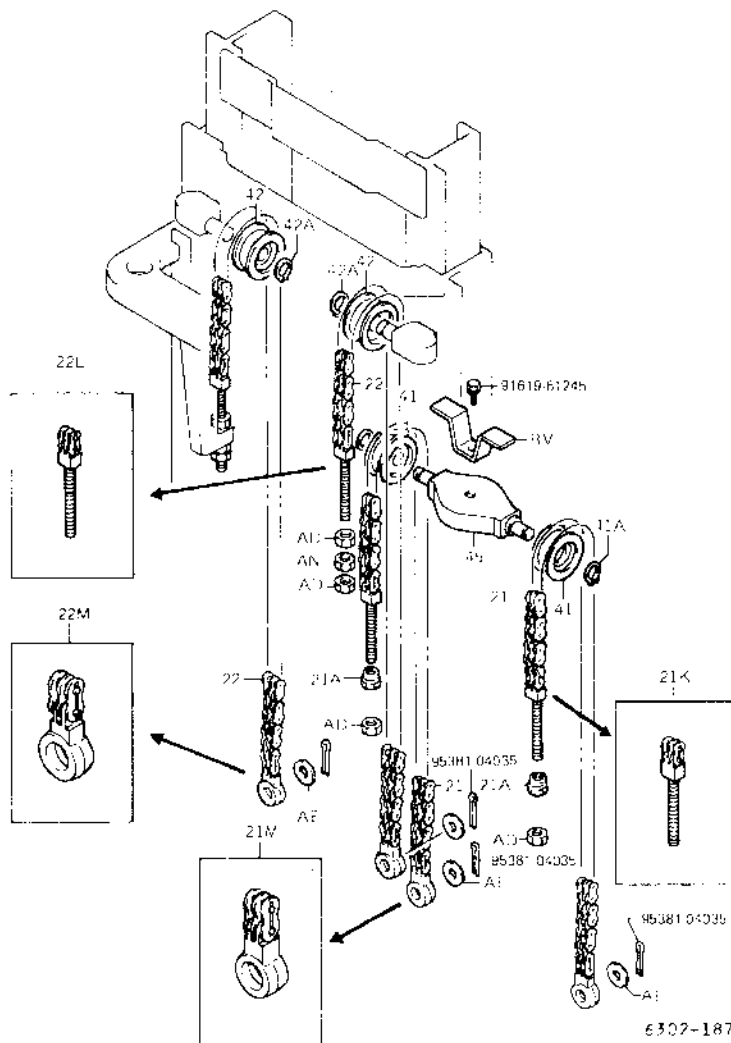 FSV



PART NAME	PART NAME	QTY
CODE		
6302-21	CHAIN SUB-ASSY (FRONT)	2
6302-21A	NUT, CHAIN ADJUST (FRONT)	2
6302-21K	BOLT KIT, CHAIN ANCHOR, NO-1 (FRONT)	2
6302-21M	BOLT KIT, CHAIN EYE (FRONT)	2
6302-22	CHAIN SUB-ASSY (REAR)	2
6302-22L	BOLT KIT, CHAIN ANCHOR, NO-2 (REAR)	2
6302-22M	BOLT KIT, CHAIN EYE	2
6302-41	WHEEL, CHAIN (FRONT)	2
6302-41A	RING, SHAFT SNAP (FOR FRONT CHAIN WHEEL)	2
6302-42	WHEEL, CHAIN (REAR)	2
6302-42A	RING, SHAFT SNAP (FOR CHAIN WHEEL)	2
6302-45	SUPPORT, CHAIN WHEEL	1
6302-AD	NUT, HEXAGON	6
6302-AE	WASHER, CHAIN SPECIAL	4
6302-AN	NUT, HEXAGON	2
6302-BV	STOPPER, CHAIN	1

G236-001E


FIG. 6502
FRONT LIFT CYLINDER

6502

FSV

91/09

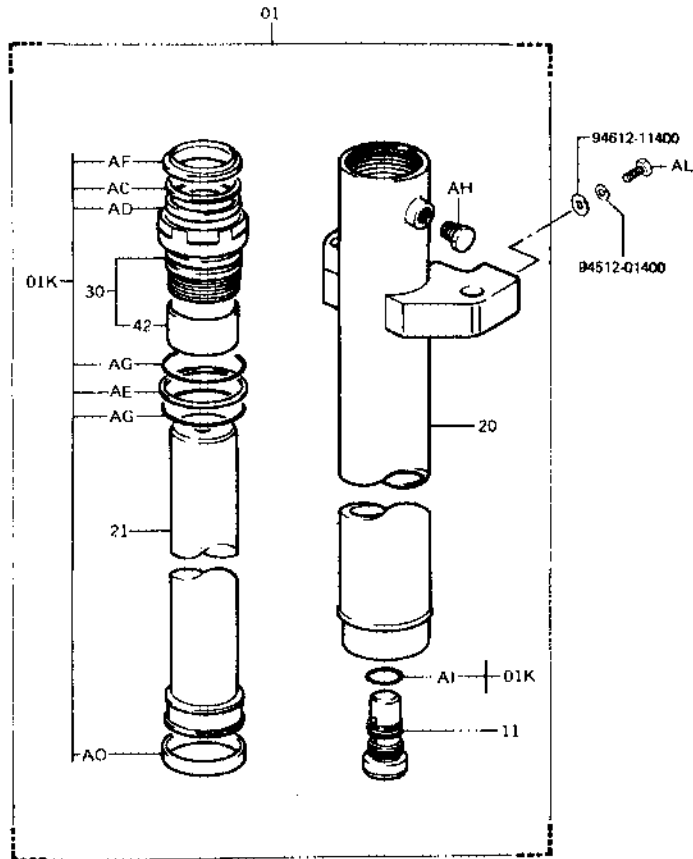 FSV



PART NAME	PART NAME	QTY
CODE		
6502-01	CYLINDER ASSY, LIFT	1
6502-01K	CYLINDER D/H KIT, LIFT	1
6502-11	VALVE ASSY, SAFETY DOWN	1
6502-20	CYLINDER SUB-ASSY, LIFT	1
6502-21	ROD SUB-ASSY, LIFT CYLINDER	1
6502-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD	1
6502-42	SLEEVE, LIFT CYLINDER ROD GUIDE	1
6502-AC	RING, BACK UP	1
6502-AD	PACKING, U	1
6502-AE	RING, BACK UP	1
6502-AF	SEAL, DUST	1
6502-AG	RING, □	2
6502-AH	PLUG	1
6502-AI	RING, □	1
6502-AL	BOLT	2
6502-AD	RING, WEAR	1

6502-038A

G236-001E


FIG. 6503
REAR LIFT CYLINDER

6503

FSV



91/09

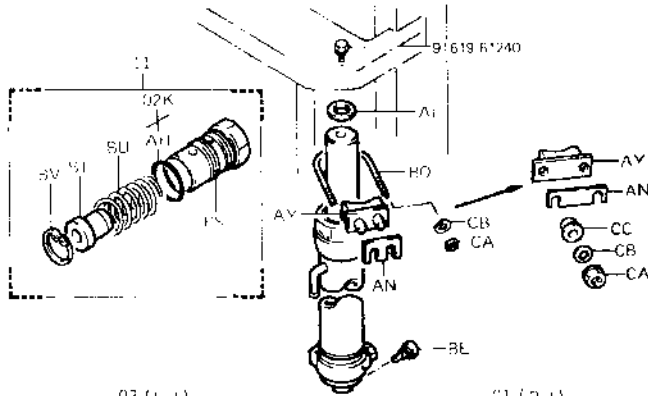 FSV



02 (LH)

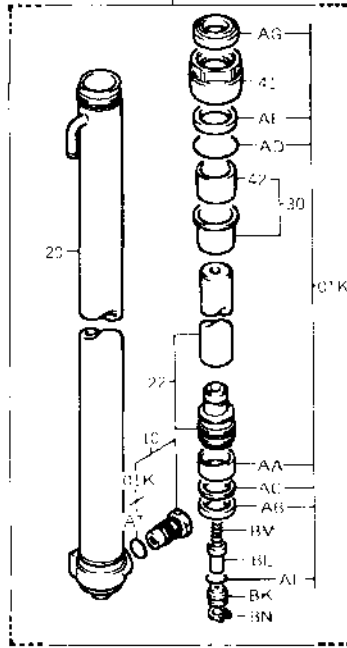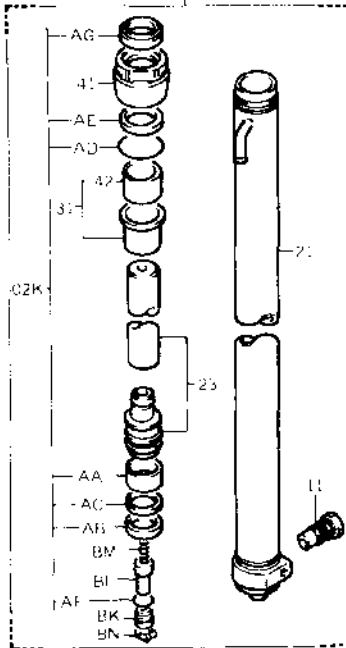  01 (RH)



6503-041A

PART NAME	PART NAME	QTY
CODE		
6503-01	CYLINDER ASSY, LIFT, RH	1
6503-01K	CYLINDER O/H KIT, LIFT, RH	1
6503-02	CYLINDER ASSY, LIFT, LH	1
6503-02K	CYLINDER O/H KIT, LIFT, LH	1
6503-10	VALVE ASSY, FLOW REGULATOR	1
6503-11	VALVE ASSY, SAFETY DOWN	1
6503-20	CYLINDER SUB-ASSY, LIFT, RH	1
6503-21	CYLINDER SUB-ASSY, LIFT, LH	1
6503-22	ROD SUB-ASSY, LIFT CYLINDER, RH	1
6503-23	ROD SUB-ASSY, LIFT CYLINDER, LH	1
6503-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD, RH	1
6503-31	GUIDE SUB-ASSY, LIFT CYLINDER ROD, LH	1
6503-41	COVER, LIFT CYLINDER	2
6503-42	SLEEVE, LIFT CYLINDER ROD GUIDE	2
6503-AA	RING, WEAR	2
6503-AB	PACKING, U	2
6503-AC	RING, BACK UP	2
6503-AD	RING, D	2
6503-AE	PACKING, U	2
6503-AF	RING, D	2
6503-AG	SEAL, DUST	2
6503-AH	RING, D	1
6503-AI	SHIM	99
6503-AN	SHIM	99
6503-AT	RING, D	1
6503-AY	RUBBER	2
6503-BE	BOLT, STOPPER	2
6503-BK	COLLAR	2
6503-BL	PLUNGER, PISTON	2
6503-BM	SPRING	2
6503-BN	RING, SNAP	2
6503-BO	BOLT, U	2
6503-BS	BODY	1
6503-BT	PISTON	1
6503-BU	SPRING	1
6503-BV	RING, SNAP	1
6503-CA	NUT	4
6503-CB	WASHER	4
6503-CC	BUSHING	4

G236-001E


FIG. 6511
TILT CYLINDER

6511

FSV

91/09

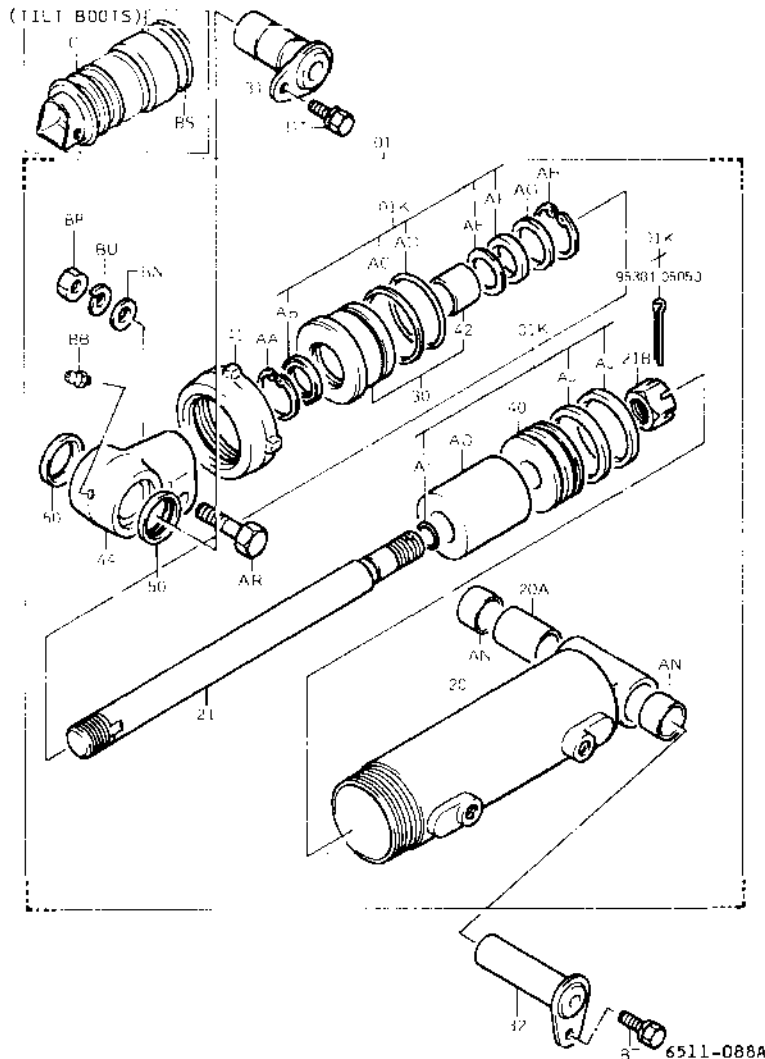 FSV



PART NAME	PART NAME	QTY
CODE		
6511-01	CYLINDER ASSY, TILT	2
6511-01K	CYLINDER O/H KIT, TILT	2
6511-20	CYLINDER SUB-ASSY, TILT	2
6511-20A	BUSHING, PIN (FOR CYLINDER)	2
6511-21	ROD SUB-ASSY, TILT CYLINDER PISTON	2
6511-21B	NUT, CASTLE	2
6511-30	GUIDE SUB-ASSY, TILT CYLINDER ROD	2
6511-31	PIN SUB-ASSY, TILT CYLINDER, FR	2
6511-32	PIN SUB-ASSY, TILT CYLINDER, RR	2
6511-40	PISTON, TILT CYLINDER	2
6511-41	COVER, TILT CYLINDER	2
6511-42	SLEEVE, TILT CYLINDER ROD GUIDE	2
6511-44	JOINT, PISTON ROD	2
6511-50	SEAL, GREASE	4
6511-AA	RING, HOLE SNAP	2
6511-AB	SEAL, DUST	2
6511-AC	RING, BACK UP	2
6511-AD	RING, O	2
6511-AE	RING, BACK UP	2
6511-AF	PACKING, U	2
6511-AG	PLATE, STOPPER	2
6511-AH	RING, HOLE SNAP	2
6511-AI	RING, O	2
6511-AJ	PACKING, U	4
6511-AN	COLLAR	4
6511-AD	SPACER, TILT CONTROL	2
6511-AR	BOLT	2
6511-BB	FITTING, GREASE	2
6511-BN	WASHER, PLATE	2
6511-BP	NUT	2
6511-BS	WIRE, CYLINDER BOOT	2
6511-BT	BOLT	4
6511-BU	WASHER	2
6511-CI	BOOT, CYLINDER	2
6511-CL	BOLT	2

G236-001E


FIG. 6701
OIL PUMP

6701

FSV

91/09

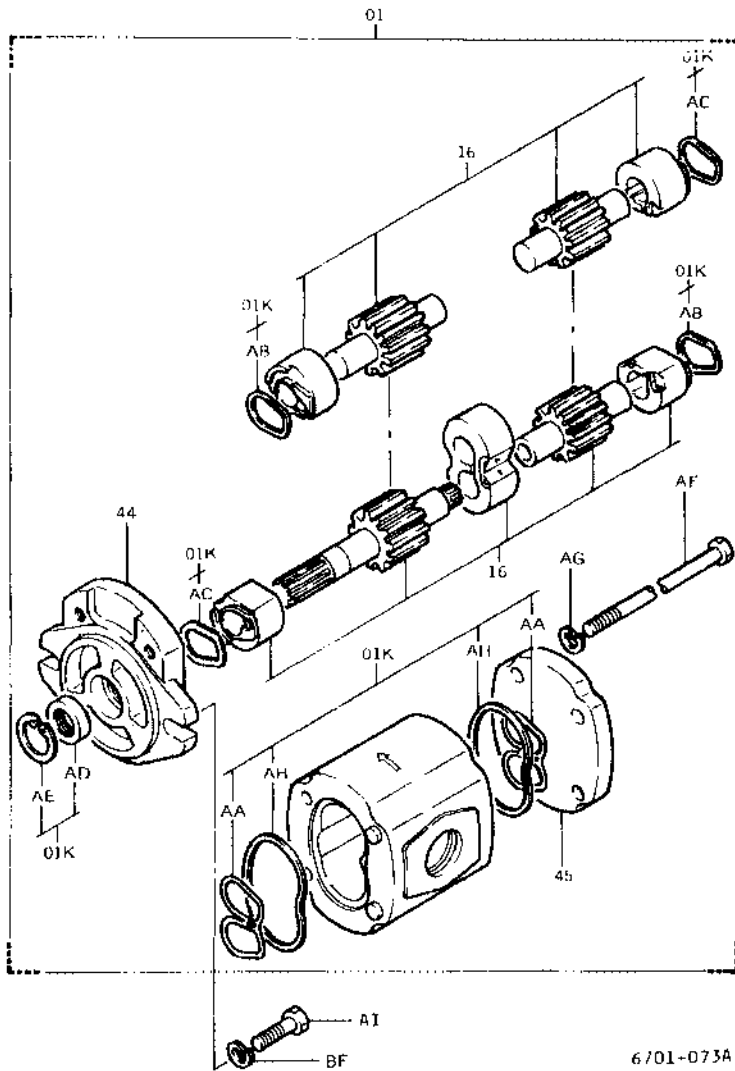 FSV



PART NAME	PART NAME	QTY
CODE		
6701-01	PUMP ASSY, OIL	1
6701-01K	PUMP O/H KIT, OIL	1
6701-16	GEAR & BUSHING SET	1
6701-44	FLANGE, MOUNTING	1
6701-45	COVER	1
6701-AA	SEAL, BUSHING	2
6701-AB	RING, BACKING, RH	2
6701-AC	RING, BACKING, LH	2
6701-AD	SEAL, OIL	1
6701-AE	RING, SNAP	1
6701-AF	BOLT	4
6701-AG	WASHER, SPRING	4
6701-AH	SEAL, BODY	2
6701-AI	BOLT	2
6701-BF	WASHER	2

G236-001E


FIG. 6705
CONTROL VALVE

6705

FSV

91/09

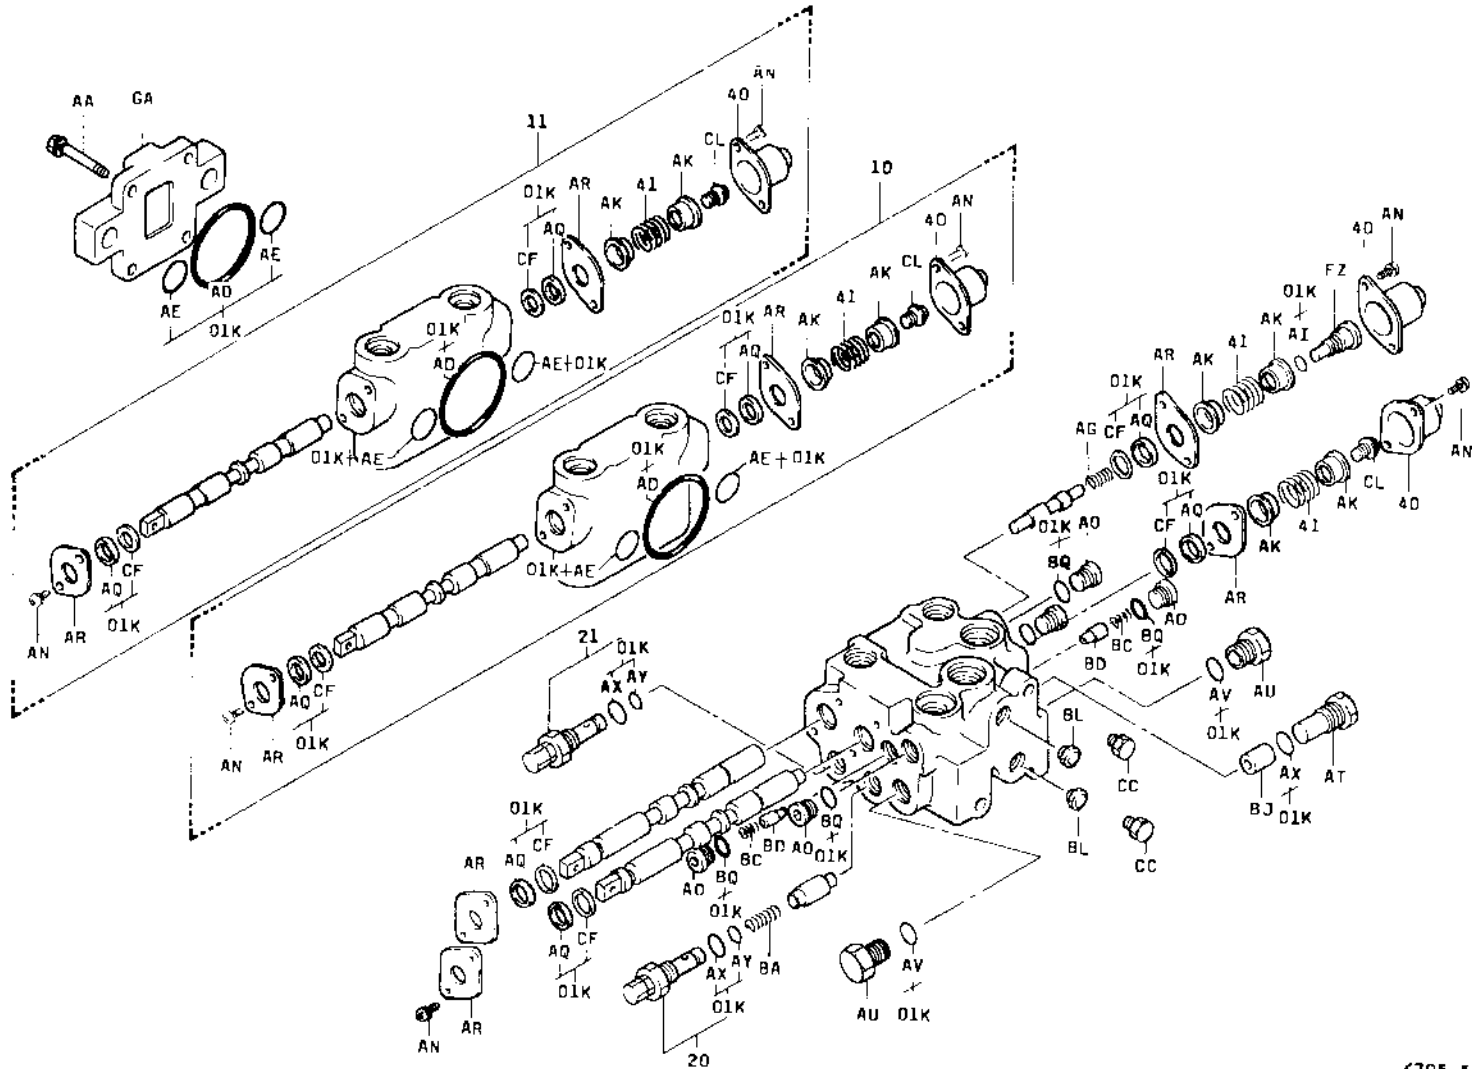 FSV (4-WAY) 11/21



6705-516

G236-003

FIG. 6705
DIL CONTROL VALVE

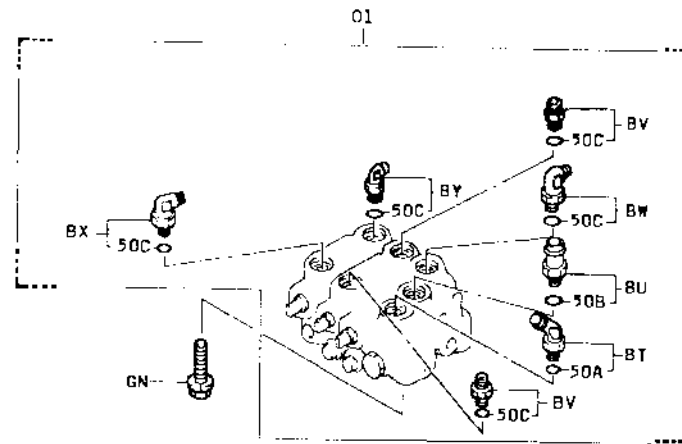 
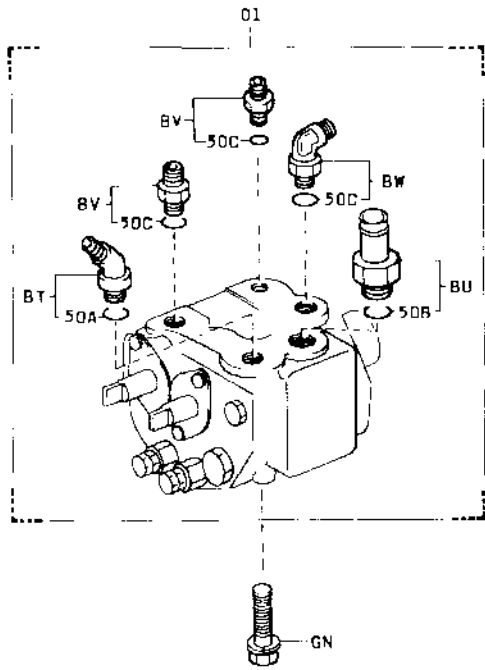 
6705

FSV

91/09

FSV (2-WAY) (2/2)

FSV (3-WAY) (2/2)



6705-518

6705-517

G236-004


FIG. 6705
OIL CONTROL VALVE

6705

FSV

91/09

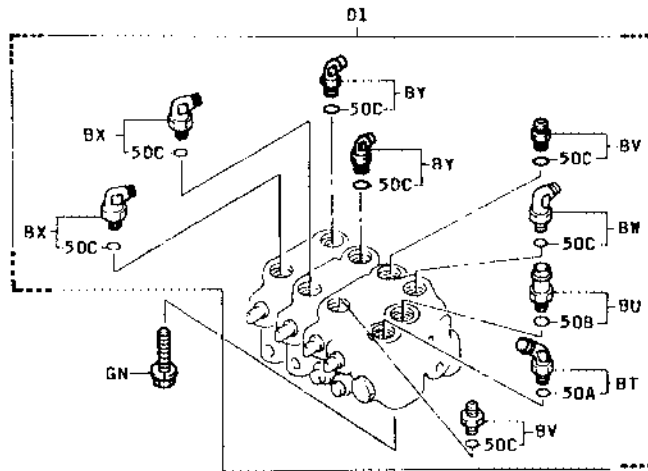 FSV (4-WAY) (2/2)




6705-519

PART CODE	PART NAME	QTY
6705-01	VALVE ASSY, OIL CONTROL	1
6705-01K	VALVE O/H KIT, OIL CONTROL	1
6705-10	VALVE ASSY, PLUNGER SECTION, NO.1	1
6705-11	VALVE ASSY, PLUNGER SECTION, NO.2	1
6705-20	VALVE SET, PILOT RELIEF, NO.1	1
6705-21	VALVE SET, PILOT RELIEF, NO.2	1
6705-40	COVER, SPRING	2
6705-41	SPRING, COMPRESSION (FOR SPOOL RETURN)	2
6705-50A	RING, O, NO.1 (FOR VALVE FITTING)	1
6705-50B	RING, O, NO.2 (FOR VALVE FITTING)	1
6705-50C	RING, O, NO.3 (FOR VALVE FITTING)	3
6705-AA	BOLT	4
6705-AD	RING, O	1
6705-AE	RING, O	2
6705-AG	SPRING	1
6705-AJ	RING, O	1
6705-AK	HOLDER, SPRING	4
6705-AN	SCREW	8
6705-AD	PLUG	5
6705-AQ	RING, BACK UP	4
6705-AR	HOLDER, SEAL	4
6705-AT	STOPPER	1
6705-AU	STOPPER	2
6705-AV	RING, O	2
6705-AX	RING, O	3
6705-AY	RING, O	2
6705-BA	SPRING, COMPRESSION	1
6705-BC	SPRING, COMPRESSION	2
6705-BD	PLUNGER, CHECK	2
6705-BJ	SEAT, VALVE	1
6705-BL	SEAT, INSERT	2
6705-BQ	RING, O	5
6705-BT	FITTING	1
6705-BU	FITTING	1
6705-BV	FITTING	2
6705-BW	FITTING	1
6705-BX	FITTING	1
6705-BY	FITTING	1
6705-CC	PLUG	2
6705-CF	SEAL	4
6705-CL	BOLT	1
6705-FZ	END, SPOOL	1
6705-GA	HOUSING, OUTLET	1
6705-GN	BOLT, W/WASHER	4


G236-005E

FSV (2-WAY)

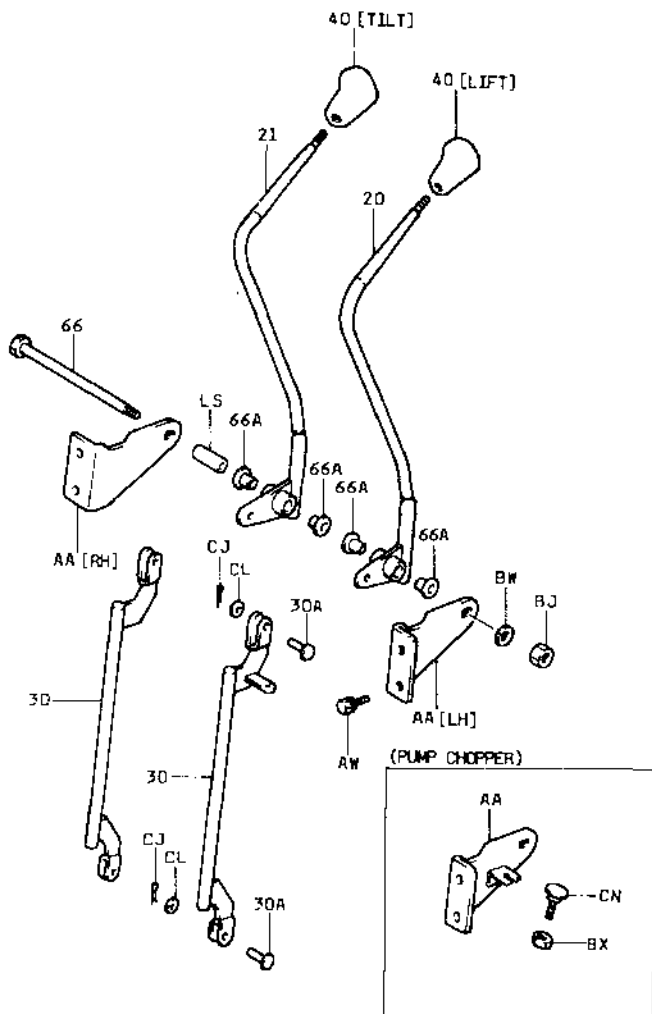 FSV (3-WAY)



6709-204

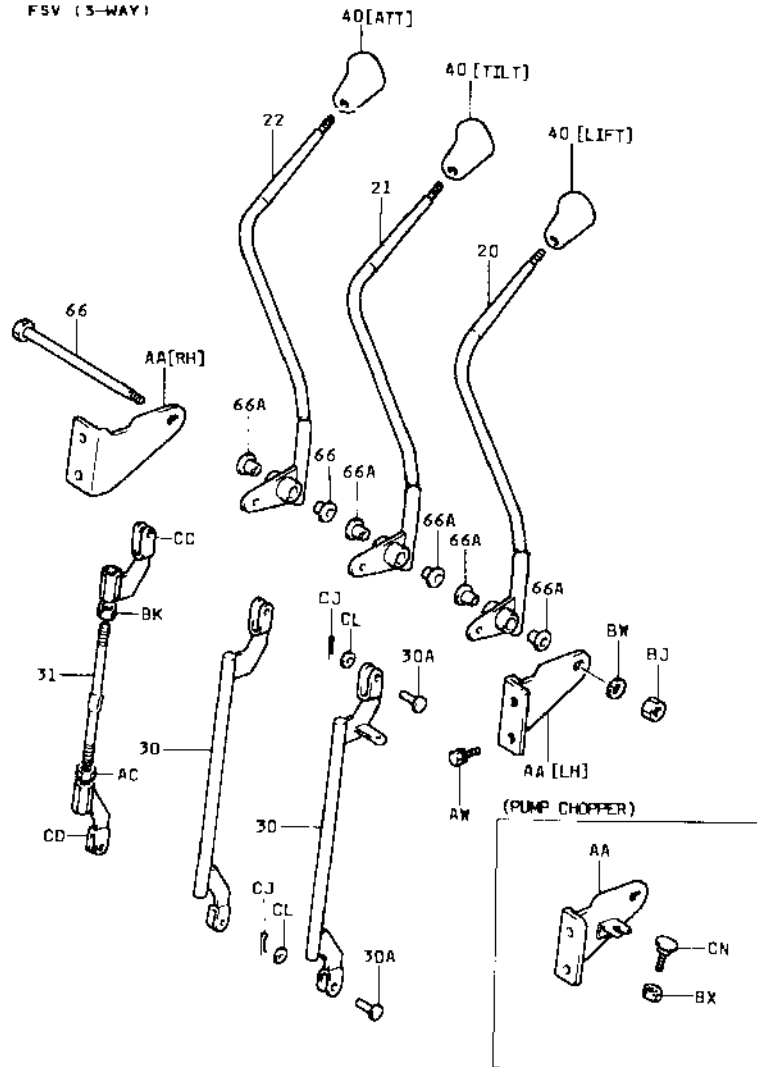 

6709-205

G236-001


FIG. 6709
OIL CONTROL VALVE LINK

6709

FSV

91/09

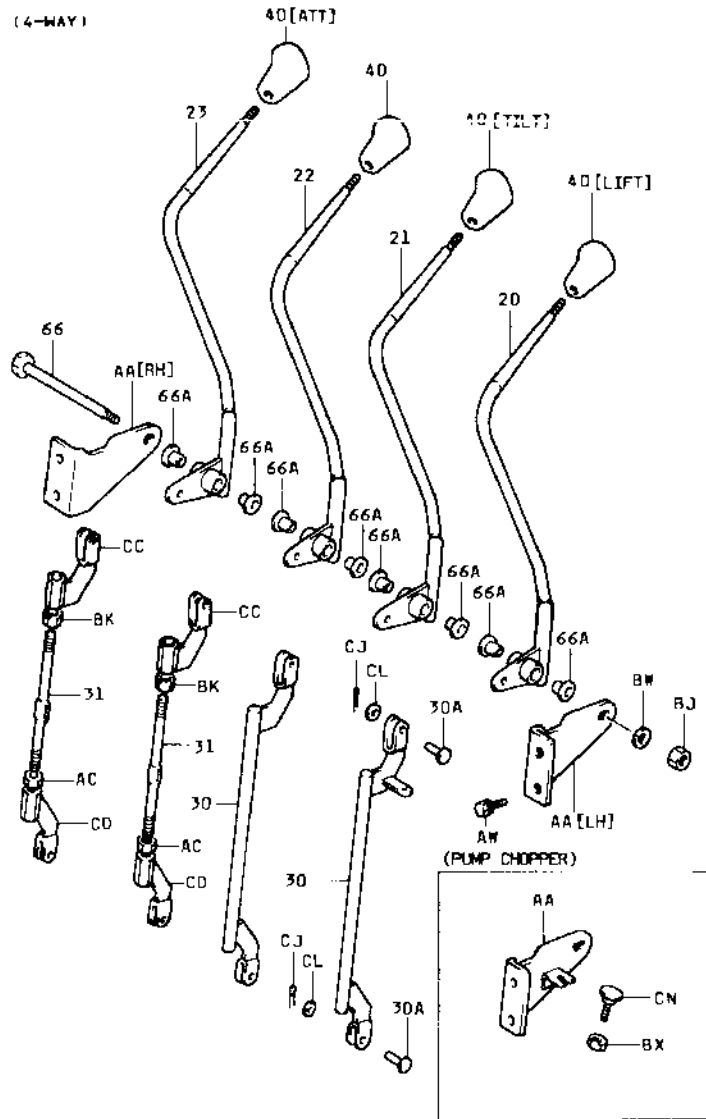 
FSV (4-WAY)



6709-206

PART NAME CODE	PART NAME	QTY
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2	1
6709-22	LEVER SUB-ASSY, CONTROL VALVE, NO.3	1
6709-23	LEVER SUB-ASSY, CONTROL VALVE, NO.4	1
6709-30	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.1	1-2
6709-30A	PIN (FOR CONTROL VALVE LEVER ROD)	4
6709-31	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.2	1
6709-40	KNOB, OIL CONTROL VALVE LEVER	1
6709-66	BOLT (FOR VALVE LEVER)	1
6709-66A	BUSHING	4
6709-AA	BRACKET SUB-ASSY	1
6709-AC	NUT	1
6709-AW	BOLT	4
6709-BJ	NUT	1
6709-BK	NUT	1
6709-BW	WASHER, SPRING	1
6709-BX	NUT	1
6709-CC	CLEVIS, NO.1	1
6709-CD	CLEVIS, NO.2	1
6709-CJ	PIN	2
6709-CL	WASHER, PLATE	4
6709-CN	BOLT	1
6709-LS	PIPE	1

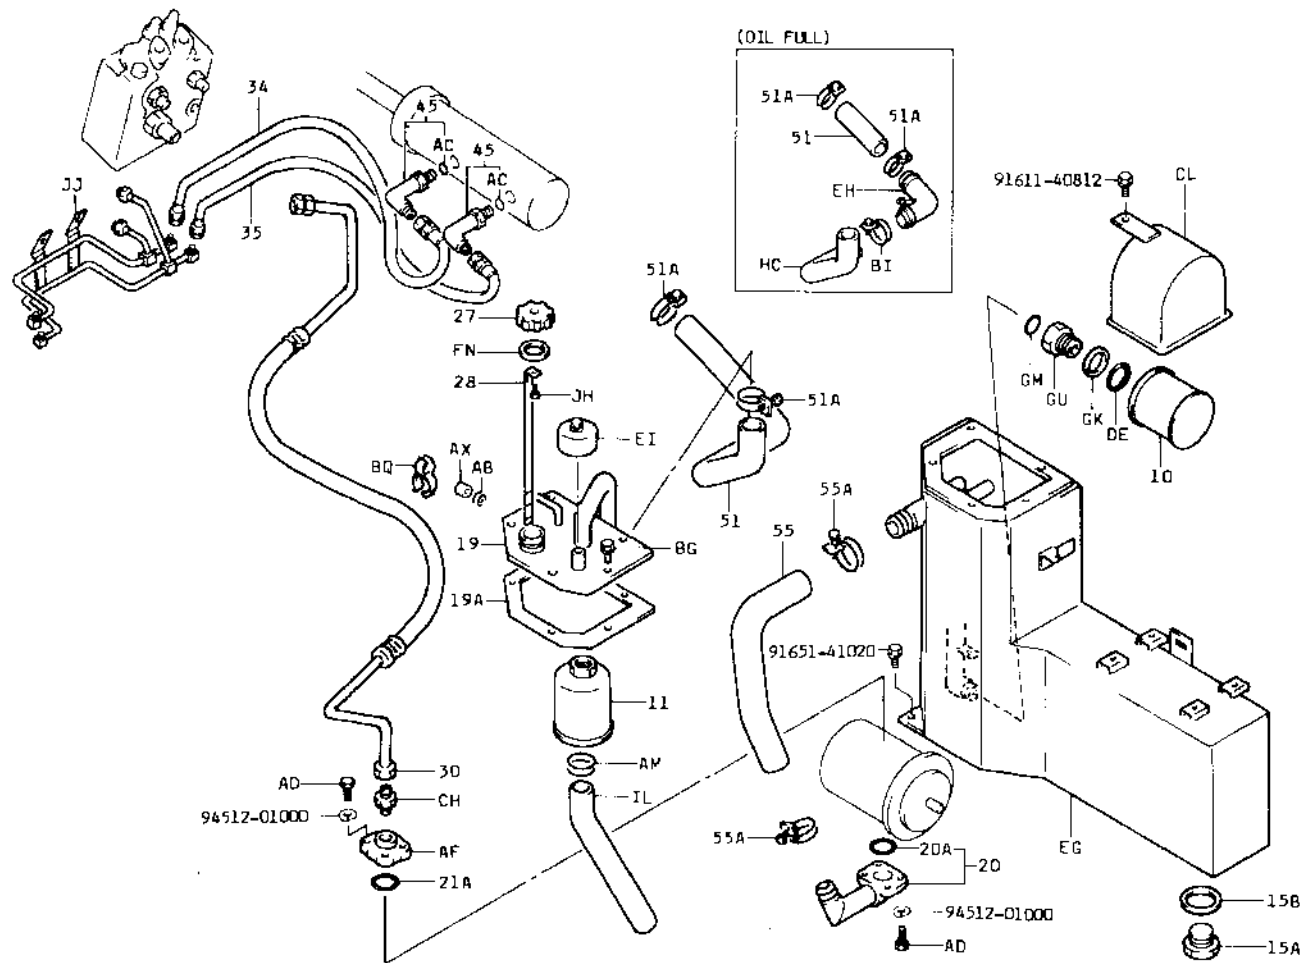 G236-002E



6801-255

G236-001

FIG. 6801
BODY PIPING

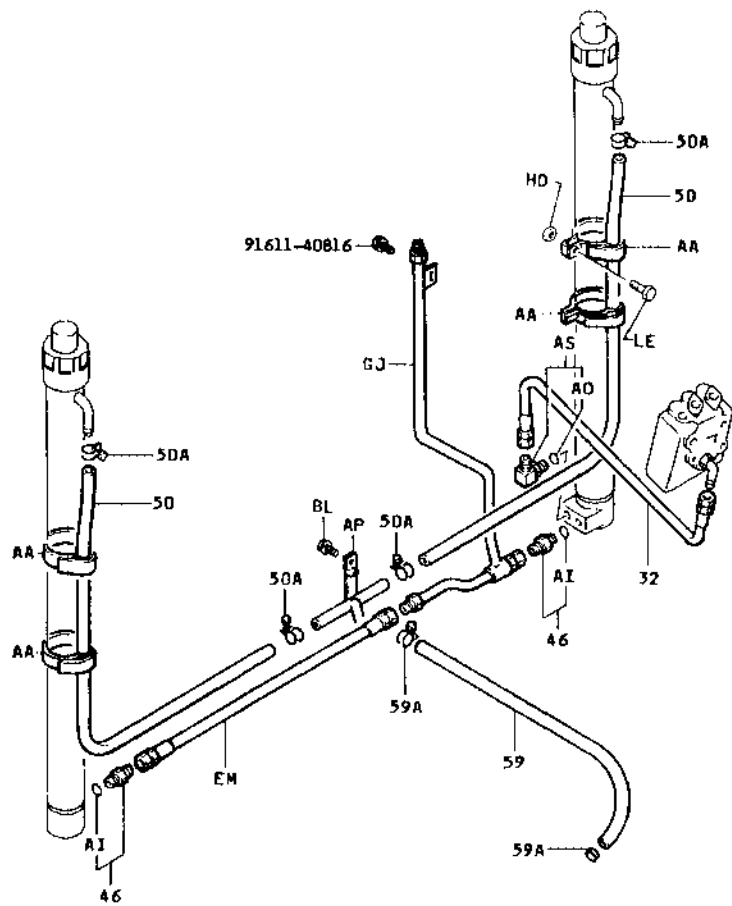 
6801

FSV


91/09

FSV "H3850-H4500" (2/2)

FSV "H4700-H6500" (2/2)



6801-256

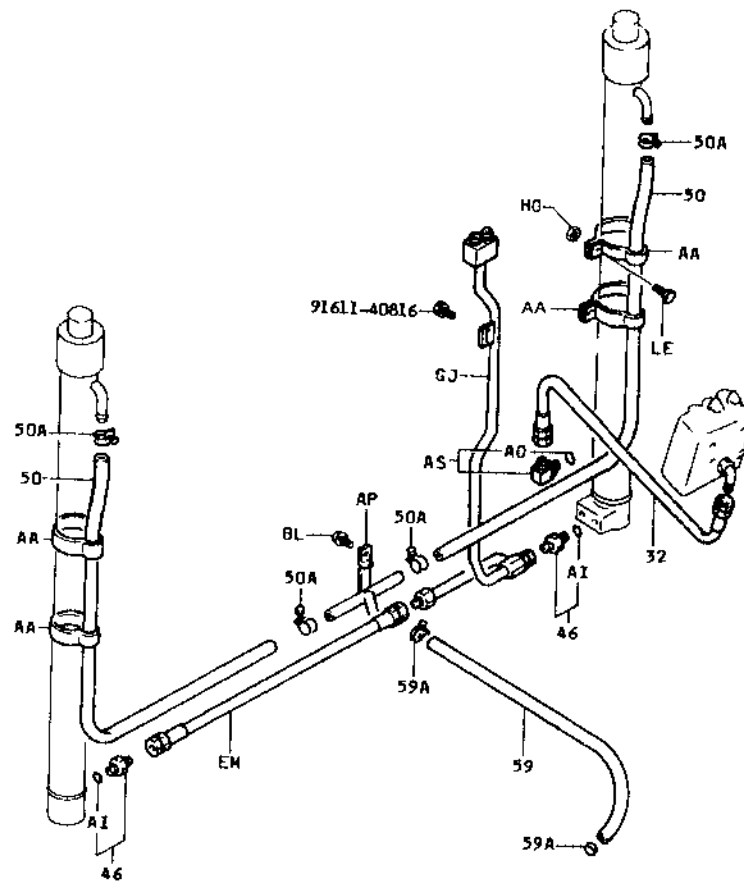 

6801-257

G236-002

FIG. 6801
BODY PIPING

6801

FSV

91/09

PART NAME	PART NAME	QTY
CODE		
6801-10	FILTER ASSY, SUCTION	1
6801-11	FILTER ASSY, RETURN	1
6801-15A	PLUG (FOR OIL TANK DRAIN)	1
6801-15B	GASKET (FOR OIL TANK DRAIN PLUG)	1
6801-19	COVER ASSY, OIL TANK	1
6801-19A	PACKING SUB-ASSY	1
6801-20	PIPE SUB-ASSY (PUMP INLET)	1
6801-20A	RING, O (FOR OIL PUMP INLET)	1
6801-21A	RING, O (FOR OIL PUMP OUTLET)	1
6801-27	CAP SUB-ASSY, OIL TANK	1
6801-28	GAGE SUB-ASSY, OIL LEVEL	1
6801-30	HOSE, HIGH PRESSURE, NO.1 (PUMP TO VALVE)	1
6801-32	HOSE, HIGH PRESSURE, NO.1 (VALVE TO LIFT)	1
6801-34	HOSE, HIGH PRESSURE, NO.1 (TILT FRONT)	2
6801-35	HOSE, HIGH PRESSURE, NO.1 (TILT REAR)	2
6801-45	FITTING (FOR TILT CYLINDER)	4
6801-46	FITTING (FOR LIFT CYLINDER)	1
6801-50	HOSE, LOW PRESSURE, NO.1 (LIFT TO TANK)	2
6801-50A	CLAMP (FOR LIFT TO TANK NO.1 HOSE)	4
6801-51	HOSE, LOW PRESSURE, NO.1 (VALVE TO TANK)	1
6801-51A	CLAMP (FOR VALVE TO TANK NO.1 HOSE)	2
6801-55	HOSE, LOW PRESSURE (TANK TO PUMP)	1
6801-55A	CLAMP (FOR TANK TO PUMP HOSE)	2
6801-59	HOSE, LOW PRESSURE, NO.2 (LIFT TO TANK)	1
6801-59A	CLAMP (FOR LIFT TO TANK NO.2 HOSE)	2
6801-AA	BAND, LIFT CYLINDER OVERFLOW HOSE	4
6801-AC	RING, O	4
6801-AD	BOLT	8
6801-AF	FLANGE, SPLIT	1
6801-AI	RING, O	1
6801-AM	CLAMP, HOSE	1
6801-AD	RING, O	1
6801-AP	PIPE	1
6801-AS	FITTING	1
6801-BQ	BOLT	3
6801-BI	CLAMP, HOSE	2
6801-BL	BOLT	2
6801-BQ	CLAMP	1
6801-CH	FITTING	1
6801-CL	COVER, OIL FILTER	1
6801-DE	SPACER	1
6801-EG	TANK SUB-ASSY, OIL	1
6801-EH	PIPE SUB-ASSY	1
6801-EJ	BREATHER ASSY, AIR	1
6801-EM	HOSE, HIGH PRESSURE	1
6801-FN	PACKING, OIL TANK CAP	1
6801-GJ	PIPE SUB-ASSY	1
6801-QK	PACKING	1
6801-QM	RING, O	1
6801-GU	BOSS	1
6801-HC	HOSE, LOW PRESSURE	1
6801-HD	NUT	4
6801-IL	HOSE	1
6801-JH	SCREW	1
6801-JJ	PIPE SUB-ASSY (TILT CYLINDER)	1
6801-LE	BOLT	4

G236-003E

FIG. 6802
MAST PIPING

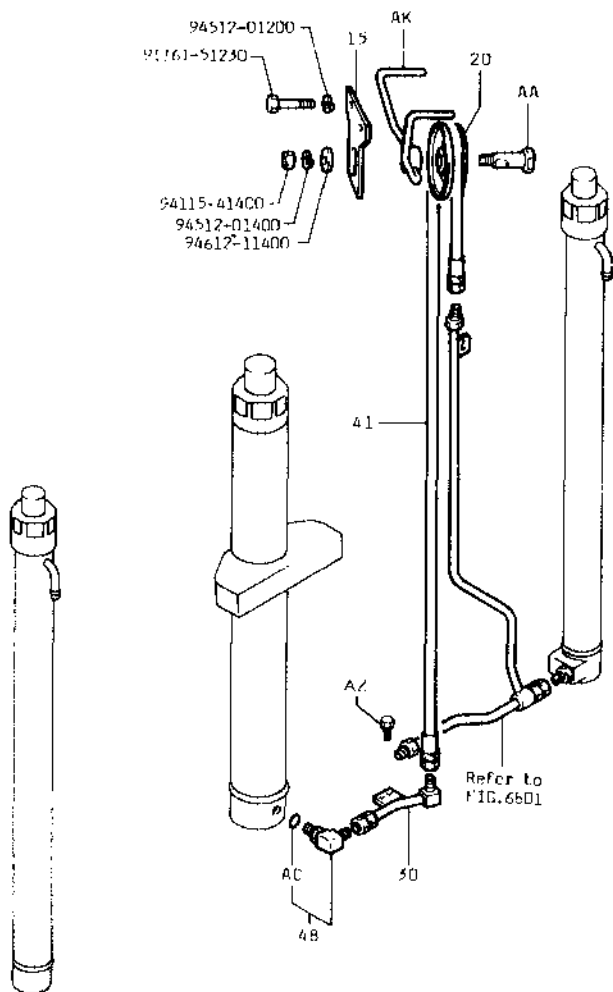 
6802

FSV


91/09

FSV "H3850-H4700"

FSV "H5000-H6500"



6802-230B

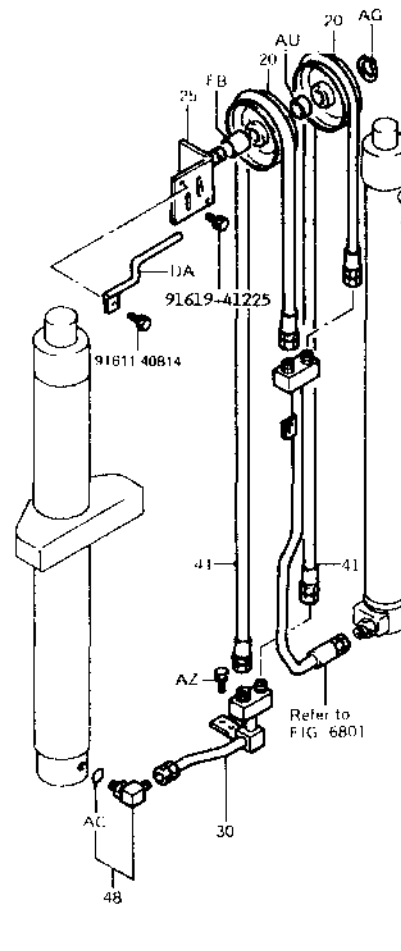 

6802-253B

G236-001

FIG:6802
MAST PIPING

6802

FSV

91/09

PART NAME CODE	PART NAME	QTY
6802-15	BRACKET ASSY, HOSE PULLEY	1
6802-20	PULLEY SUB-ASSY, HOSE GUIDE, NO.1	1- 2
6802-25	BRACKET SUB-ASSY, GUIDE PULLEY	1
6802-30	PIPE SUB-ASSY, NO.1 (FRONT LIFT)	1
6802-41	HOSE, HIGH PRESSURE, NO.1 (FRONT LIFT)	1- 2
6802-48	FITTING (FOR FRONT LIFT CYLINDER)	1
6802-AA	PIN, HOSE GUIDE PULLEY	1
6802-AC	RING, O	1
6802-AG	RING, SHAFT SNAP	1
6802-AK	GUIDE SUB-ASSY, HOSE	1
6802-AU	SPACER	1
6802-AZ	BOLT	2
6802-DA	STOPPER SUB-ASSY	1
6802-FB	SPACER	1

G236-002E


FIG. 6101
MAST

6101

FV

91/09

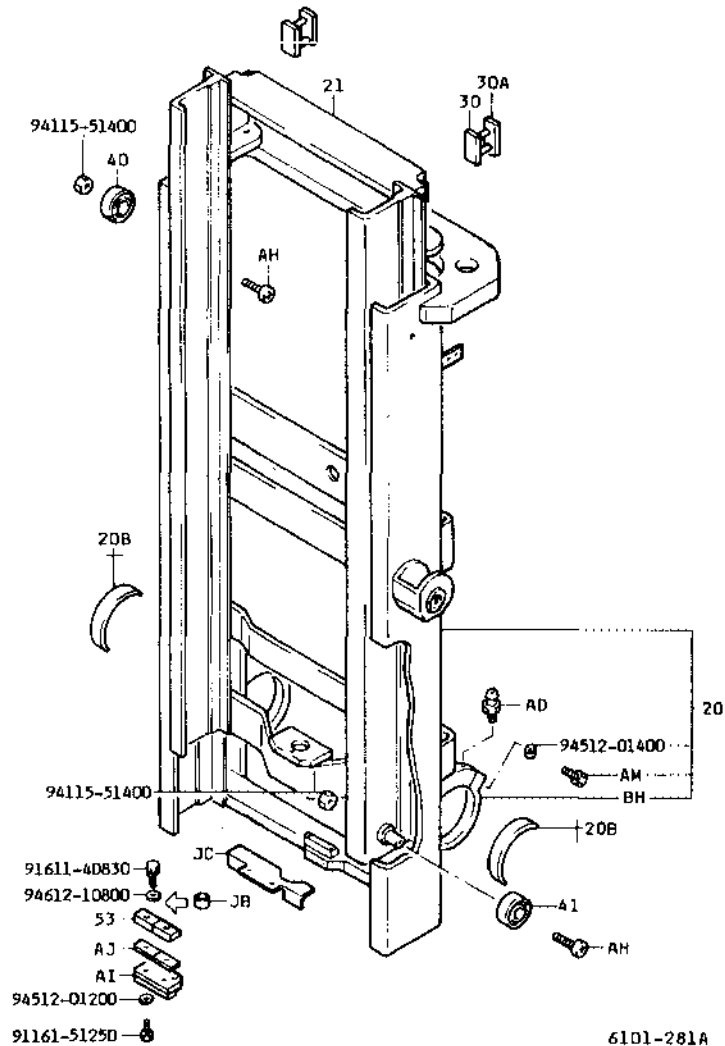 FV




6101-281A


PART NAME CODE	PART NAME	QTY
6101-20	MAST SUB-ASSY, OUTER	1
6101-20B	BUSHING, MAST SUPPORT	1
6101-21	MAST SUB-ASSY, INNER	1
6101-30	STRIP SUB-ASSY, OUTER MAST	2
6101-30A	SHIM, OUTER MAST STRIP	99
6101-40	ROLLER, LIFT (FOR OUTER MAST)	2
6101-41	ROLLER, LIFT (FOR INNER MAST)	2
6101-53	CUSHION, MAST (FOR INNER MAST)	2
6101-AD	FITTING, GREASE	2
6101-AH	BOLT	4
6101-AJ	STOPPER	1
6101-AJ	SHIM, STOPPER	99
6101-AM	BOLT	4
6101-BH	CAP, MAST SUPPORT	2
6101-JB	COLLAR	2
6101-JC	GUIDE, HOSE	1

G236-001E

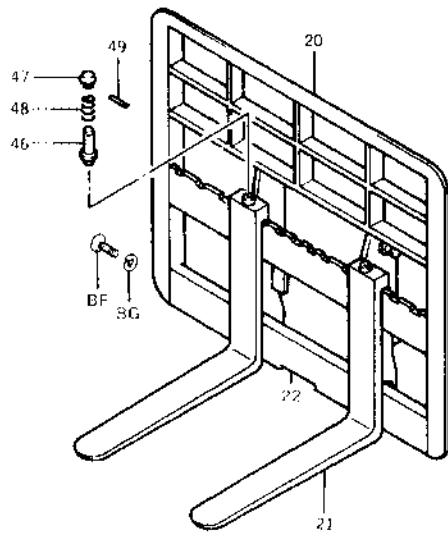 
FV



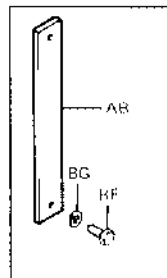 
(L. BACK REST)




FSV

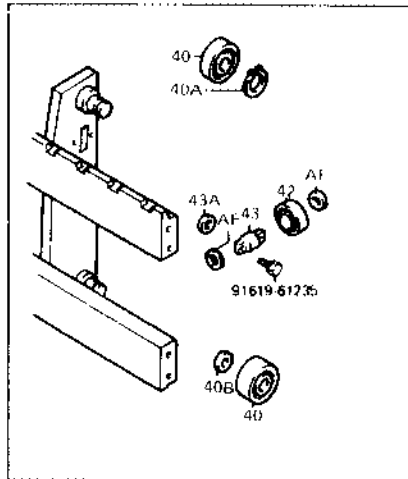 

FV

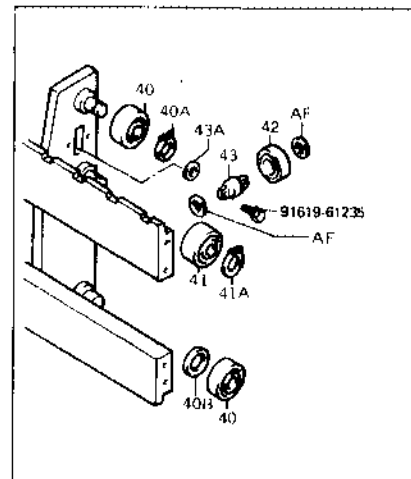 

V

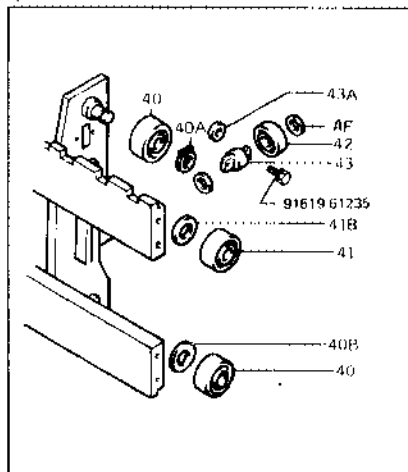 

6301-224

G236-001

FIG. 6301
LIFT BRACKET & FORK

6301

FV

91/09

PART NAME CODE	PART NAME	QTY
6301-20	BACKREST SUB-ASSY	1
6301-21	FORK SUB-ASSY	2
6301-22	BRACKET SUB-ASSY, LIFT	1
6301-40	ROLLER, LIFT (UPPER, LOWER)	4
6301-40A	RING, SHAFT SNAP (UPPER, LOWER)	2
6301-40B	SHIM, LIFT ROLLER	99
6301-41	ROLLER, LIFT (CENTER)	2
6301-41A	RING, SHAFT SNAP (CENTER)	2
6301-42	ROLLER, SIDE	2
6301-43	SHAFT, SIDE ROLLER	2
6301-43A	SHIM (FOR SIDE ROLLER SHAFT)	99
6301-44	PIN, FORK STOPPER	2
6301-47	KNOB, FORK STOPPER PIN	2
6301-48	SPRING, FORK STOPPER PIN	2
6301-49	PIN, SPRING (FOR FORK STOPPER PIN)	2
6301-AB	PLATE, SIDE	2
6301-AF	PLATE	4
6301-BF	BOLT	4- 8
6301-BG	WASHER	4- 8

G236-002E


FIG. 6302
CHAIN & CHAIN WHEEL

6302

FV

91/09

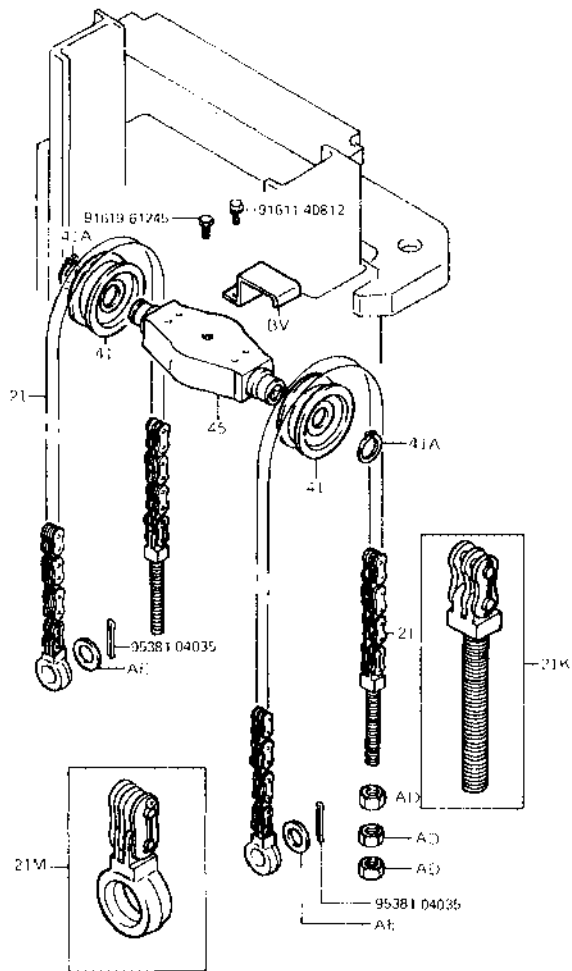 FV



PART NAME CODE	PART NAME	QTY
6302-21	CHAIN SUB-ASSY (FRONT)	2
6302-21K	BOLT KIT, CHAIN ANCHQR, NO.1 (FRONT)	2
6302-21M	BOLT KIT, CHAIN EYE (FRONT)	2
6302-41	WHEEL, CHAIN (FRONT)	2
6302-41A	RING, SHAFT SNAP (FOR FRONT CHAIN WHEEL)	2
6302-45	SUPPORT, CHAIN WHEEL	1
6302-AD	NUT, HEXAGON	6
6302-AE	WASHER, CHAIN SPECIAL	2
6302-BV	STOPPER, CHAIN	2

6302-188

G236-001E


FIG. 6502
FRONT LIFT CYLINDER

6502

FV

91/09

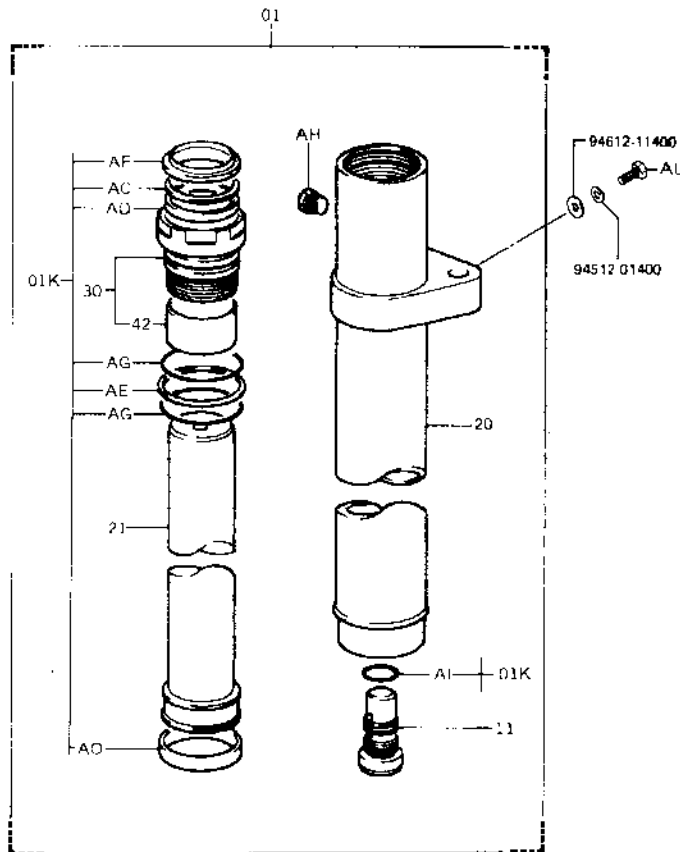 FV



PART NAME	PART NAME	QTY
CODE		
6502-01	CYLINDER ASSY, LIFT	1
6502-01K	CYLINDER O/H KIT, LIFT	1
6502-11	VALVE ASSY, SAFETY DOWN	1
6502-20	CYLINDER SUB-ASSY, LIFT	1
6502-21	ROD SUB-ASSY, LIFT CYLINDER	1
6502-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD	1
6502-42	SLEEVE, LIFT CYLINDER ROD GUIDE	1
6502-AC	RING, BACK UP	1
6502-AD	PACKING, U	1
6502-AE	RING, BACK UP	1
6502-AF	SEAL, DUST	1
6502-AG	RING, O	2
6502-AH	PLUG	1
6502-AI	RING, O	1
6502-AL	BOLT	2
6502-AO	RING, WEAR	1

6502-039A

G236-001E


FIG. 6503
REAR LIFT CYLINDER

6503

FV



91/09

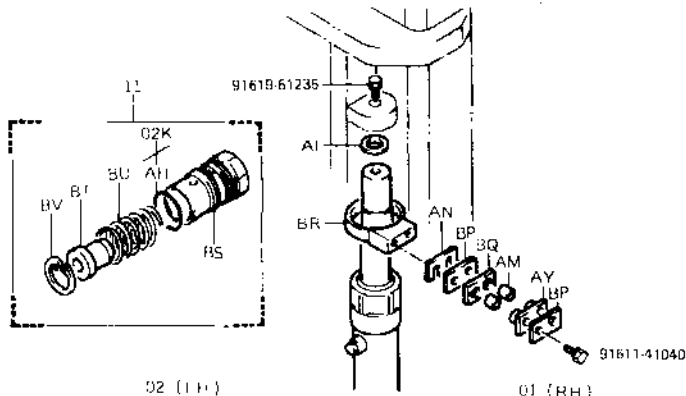 FV



02 (LH)

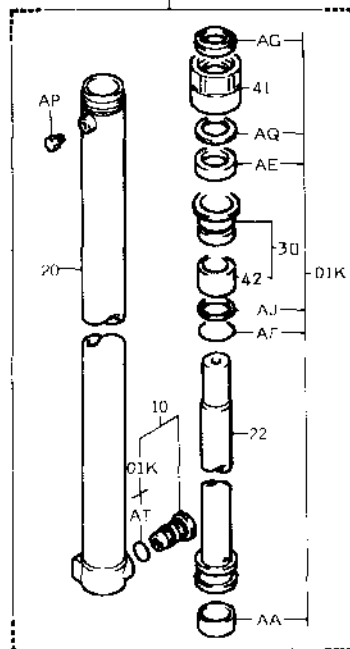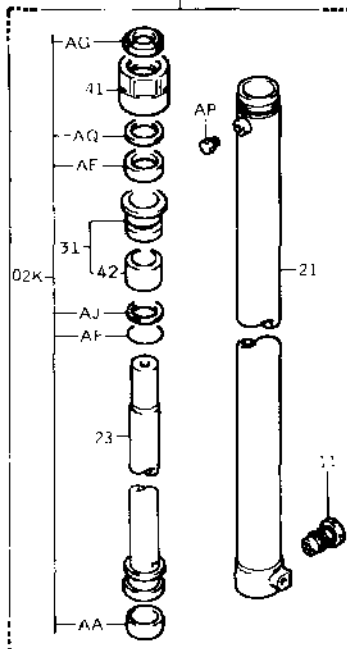  01 (RH)



6503-056

PART NAME CODE	PART NAME	QTY
6503-01	CYLINDER ASSY, LIFT, RH	1
6503-01K	CYLINDER O/H KIT, LIFT, RH	1
6503-02	CYLINDER ASSY, LIFT, LH	1
6503-02K	CYLINDER O/H KIT, LIFT, LH	1
6503-10	VALVE ASSY, FLDW REGULATOR	1
6503-11	VALVE ASSY, SAFETY DOWN	1
6503-20	CYLINDER SUB-ASSY, LIFT, RH	1
6503-21	CYLINDER SUB-ASSY, LIFT, LH	1
6503-22	ROD SUB-ASSY, LIFT CYLINDER, RH	1
6503-23	ROD SUB-ASSY, LIFT CYLINDER, LH	1
6503-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD, RH	1
6503-31	GUIDE SUB-ASSY, LIFT CYLINDER ROD, LH	1
6503-41	COVER, LIFT CYLINDER	2
6503-42	SLEEVE, LIFT CYLINDER ROD GUIDE	2
6503-AA	RING, WEAR	2
6503-AE	PACKING, U	2
6503-AF	RING, O	2
6503-AG	SEAL, DUST	2
6503-AH	RING, D	1
6503-AI	SHIM	99
6503-AJ	RING, BACK UP	2
6503-AM	SPACER	4
6503-AN	SHIM	99
6503-AP	PLUG	2
6503-AQ	RING, BACK UP	2
6503-AT	RING, O	1
6503-AY	RUBBER	2
6503-BP	PLATE	4
6503-BQ	RUBBER	2
6503-BR	SUPPORT SUB-ASSY	1
6503-BS	BODY	1
6503-BT	PISTON	1
6503-BU	SPRING	1
6503-BV	RING, SNAP	1

G236-001E


FIG. 6511
TILT CYLINDER

6511

FV

91/09

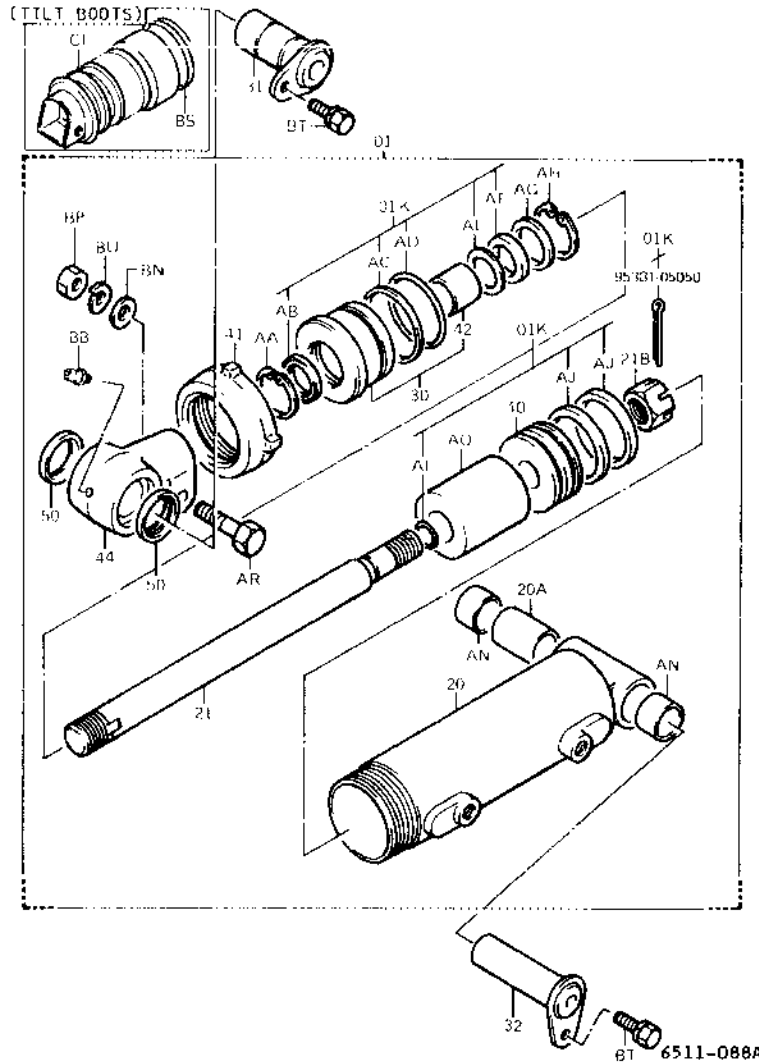 FV



PART NAME CODE	PART NAME	QTY
6511-01	CYLINDER ASSY, TILT	2
6511-01K	CYLINDER O/H KIT, TILT	2
6511-20	CYLINDER SUB-ASSY, TILT	2
6511-20A	BUSHING, PIN (FOR CYLINDER)	2
6511-21	ROD SUB-ASSY, TILT CYLINDER PISTON	2
6511-21B	NUT, CASTLE	2
6511-30	GUIDE SUB-ASSY, TILT CYLINDER ROD	2
6511-31	PIN SUB-ASSY, TILT CYLINDER, FR	2
6511-32	PIN SUB-ASSY, TILT CYLINDER, RR	2
6511-40	PISTON, TILT CYLINDER	2
6511-41	COVER, TILT CYLINDER	2
6511-42	SLEEVE, TILT CYLINDER ROD GUIDE	2
6511-44	JOINT, PISTON ROD	2
6511-50	SEAL, GREASE	4
6511-AA	RING, HOLE SNAP	2
6511-AB	SEAL, DUST	2
6511-AC	RING, BACK UP	2
6511-AD	RING, O	2
6511-AE	RING, BACK UP	2
6511-AF	PACKING, U	2
6511-AG	PLATE, STOPPER	2
6511-AH	RING, HOLE SNAP	2
6511-AJ	RING, O	2
6511-AJ	PACKING, U	4
6511-AN	COLLAR	4
6511-AD	SPACER, TILT CONTROL	2
6511-AR	BOLT	2
6511-BB	FITTING, GREASE	2
6511-BN	WASHER, PLATE	2
6511-BP	NUT	2
6511-BS	WIRE, CYLINDER BOOT	2
6511-BT	BOLT	4
6511-BU	WASHER	2
6511-CJ	BOOT, CYLINDER	2
6511-CL	BOLT	2

G236-001E


FIG-6701
OIL PUMP

6701

FV

91/09

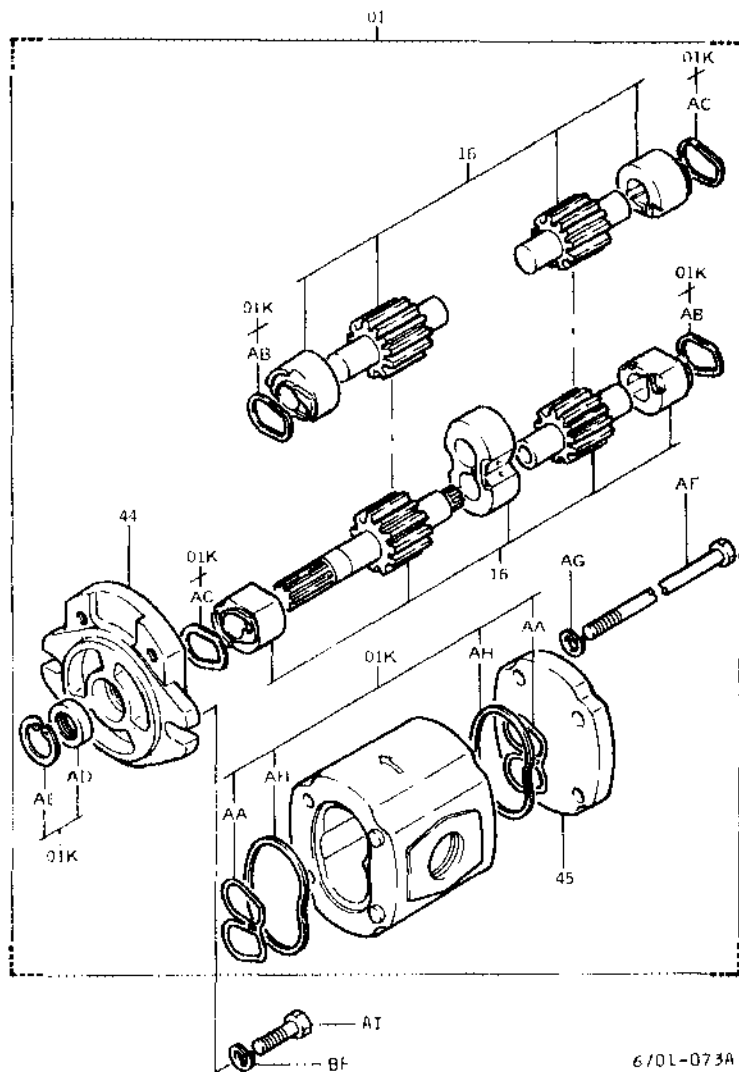 FV



6701-073A

PART NAME CODE	PART NAME	QTY
6701-01	PUMP ASSY, OIL	1
6701-01K	PUMP O/H KIT, OIL	1
6701-16	GEAR & BUSHING SET	1
6701-44	FLANGE, MOUNTING	1
6701-45	COVER	1
6701-AA	SEAL, BUSHING	2
6701-AB	RING, BACKING, RH	2
6701-AC	RING, BACKING, LH	2
6701-AD	SEAL, OIL	1
6701-AE	RING, SNAP	1
6701-AF	BOLT	4
6701-AG	WASHER, SPRING	4
6701-AH	SEAL, BODY	2
6701-AI	BOLT	2
6701-BF	WASHER	2

G236-001E


FIG. 6705
6705 CONTROL VALVE

6705

FV

91/09

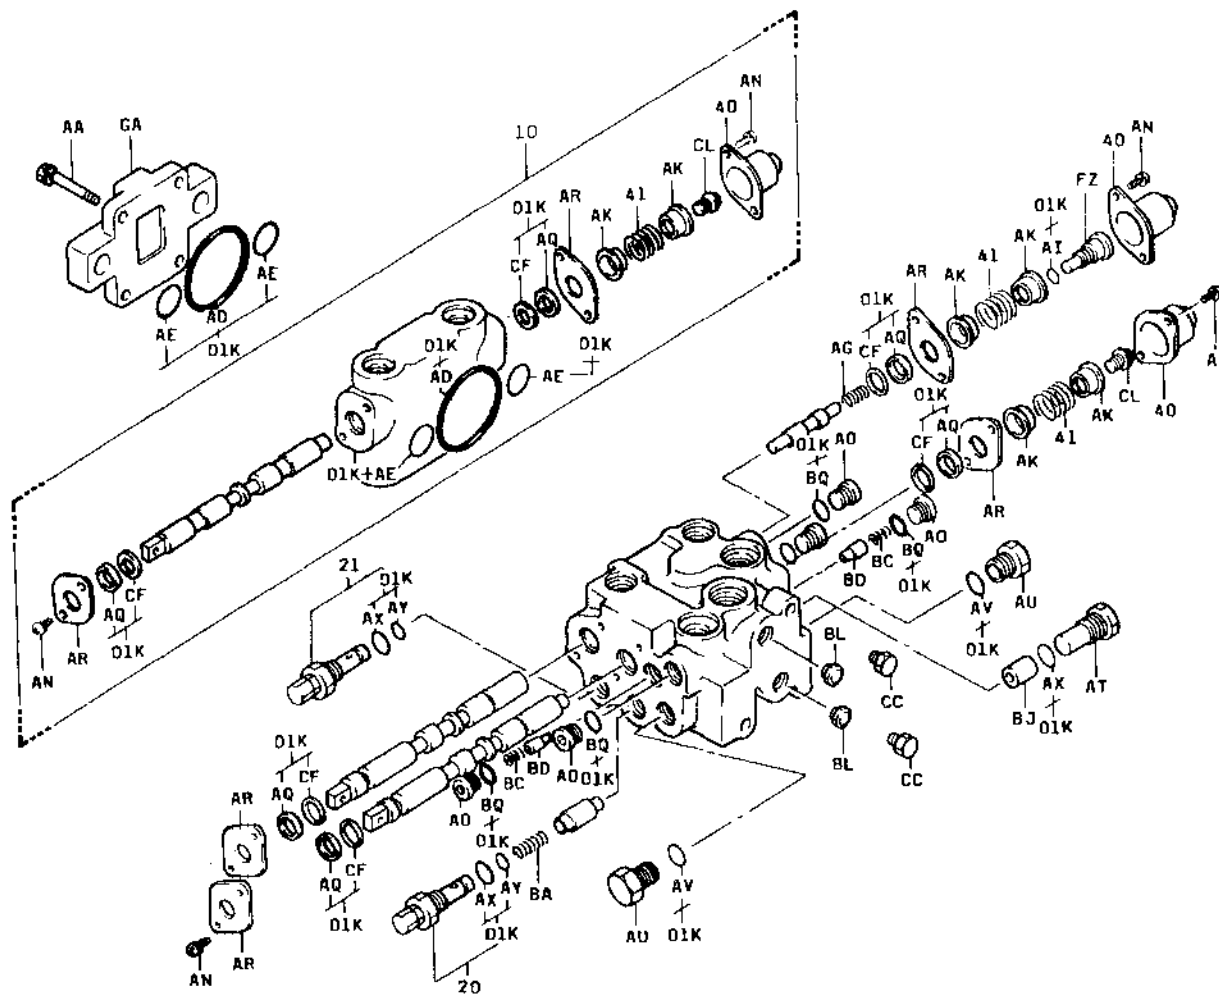 FV (3-WAY) (1/2)





6705-315

G236-002

6705 515 0201

FV (2-WAY) (2/2)

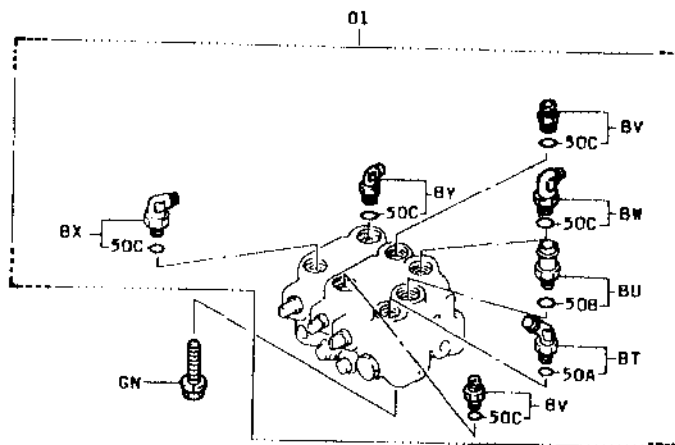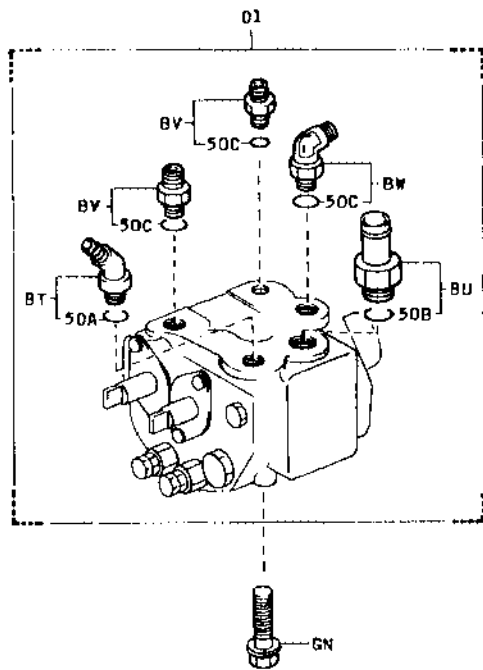  FV (3-WAY) (2/2)



6705-518

6705-517

G236-004


FIG. 6705
OIL CONTROL VALVE

6705

FV

91/09

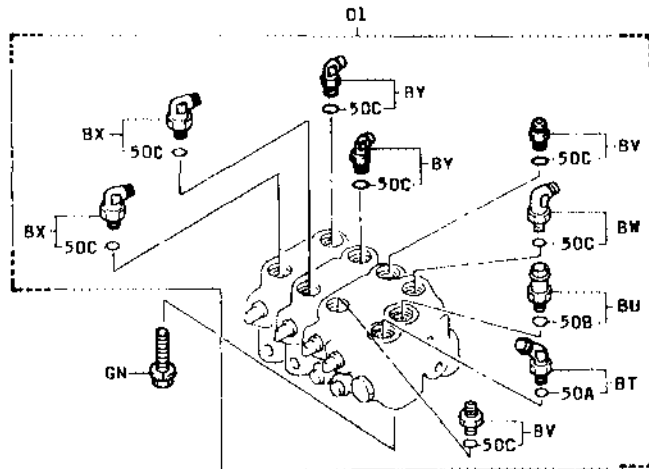 FV (4-WAY) (2/2)



PART NAME CODE	PART NAME	QTY
6705-01	VALVE ASSY, OIL CONTROL	1
6705-01K	VALVE O/H KIT, OIL CONTROL	1
6705-10	VALVE ASSY, PLUNGER SECTION, NO.1	1
6705-11	VALVE ASSY, PLUNGER SECTION, NO.2	1
6705-20	VALVE SET, PILOT RELIEF, NO.1	1
6705-21	VALVE SET, PILOT RELIEF, NO.2	1
6705-40	COVER, SPRING	2
6705-41	SPRING, COMPRESSION (FOR SPOOL RETURN)	2
6705-50A	RING, O, NO.1 (FOR VALVE FITTING)	1
6705-50B	RING, O, NO.2 (FOR VALVE FITTING)	1
6705-50C	RING, O, NO.3 (FOR VALVE FITTING)	3
6705-AA	BOLT	4
6705-AD	RING, O	1
6705-AE	RING, O	2
6705-AG	SPRING	1
6705-AI	RING, O	1
6705-AK	HOLDER, SPRING	4
6705-AN	SCREW	8
6705-AD	PLUG	5
6705-AQ	RING, BACK UP	4
6705-AR	HOLDER, SEAL	4
6705-AT	STOPPER	1
6705-AU	STOPPER	2
6705-AV	RING, O	2
6705-AX	RING, O	3
6705-AY	RING, O	2
6705-BA	SPRING, COMPRESSION	1
6705-BC	SPRING, COMPRESSION	2
6705-BD	PLUNGER, CHECK	2
6705-BJ	SEAT, VALVE	1
6705-BL	SEAT, INSERT	2
6705-BQ	RING, O	5
6705-BT	FITTING	1
6705-BU	FITTING	1
6705-BV	FITTING	2
6705-BW	FITTING	1
6705-BX	FITTING	1
6705-BY	FITTING	1
6705-CC	PLUG	2
6705-CF	SEAL	4
6705-CL	BOLT	1
6705-FZ	END, SPOOL	1
6705-GA	HOUSING, OUTLET	1
6705-GN	BOLT, W/WASHER	4

6705-519

G236-005E

FIG-6709
DIL CONTROL VALVE LINK

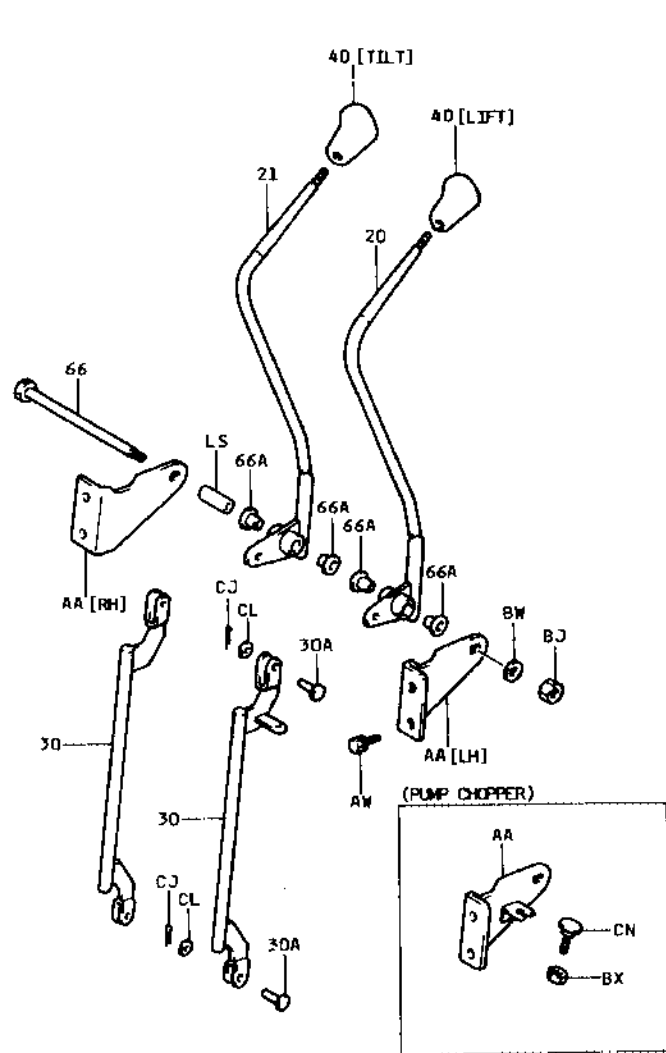 
6709

FV

91/09


FV (2-WAY)

FV (3-WAY)



6709-204

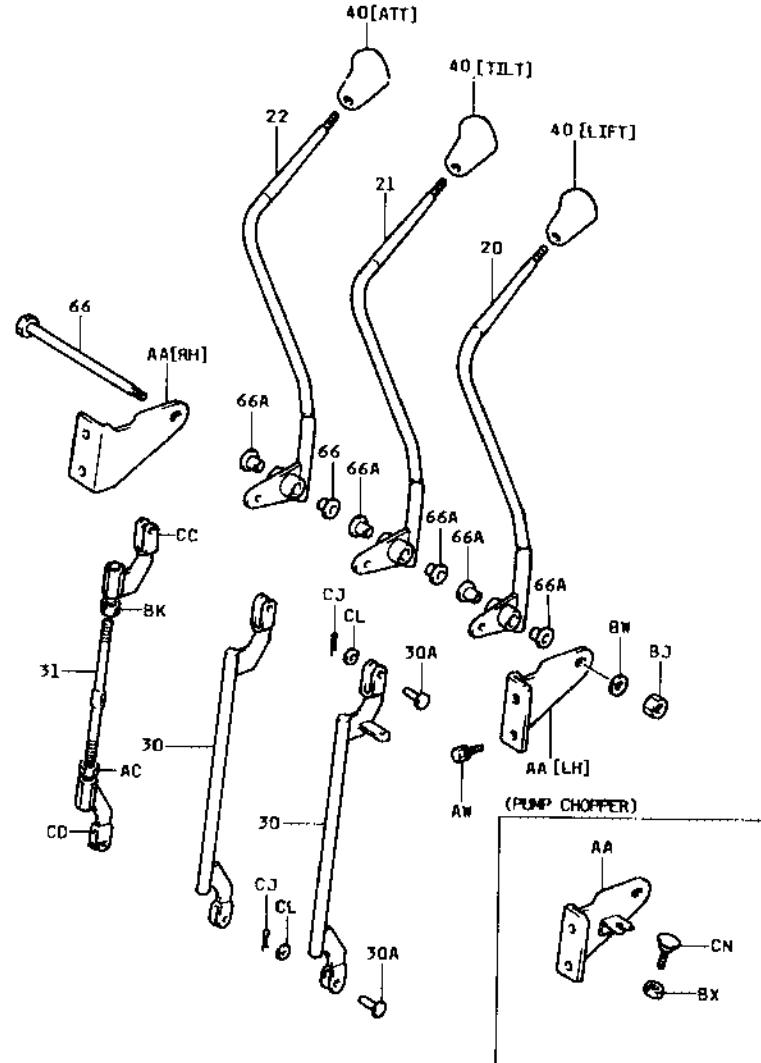 6709 204



6709-205
G236-001

6709 205 0205


FIG-6709
OIL CONTROL VALVE LINK

6709

FV

91/09

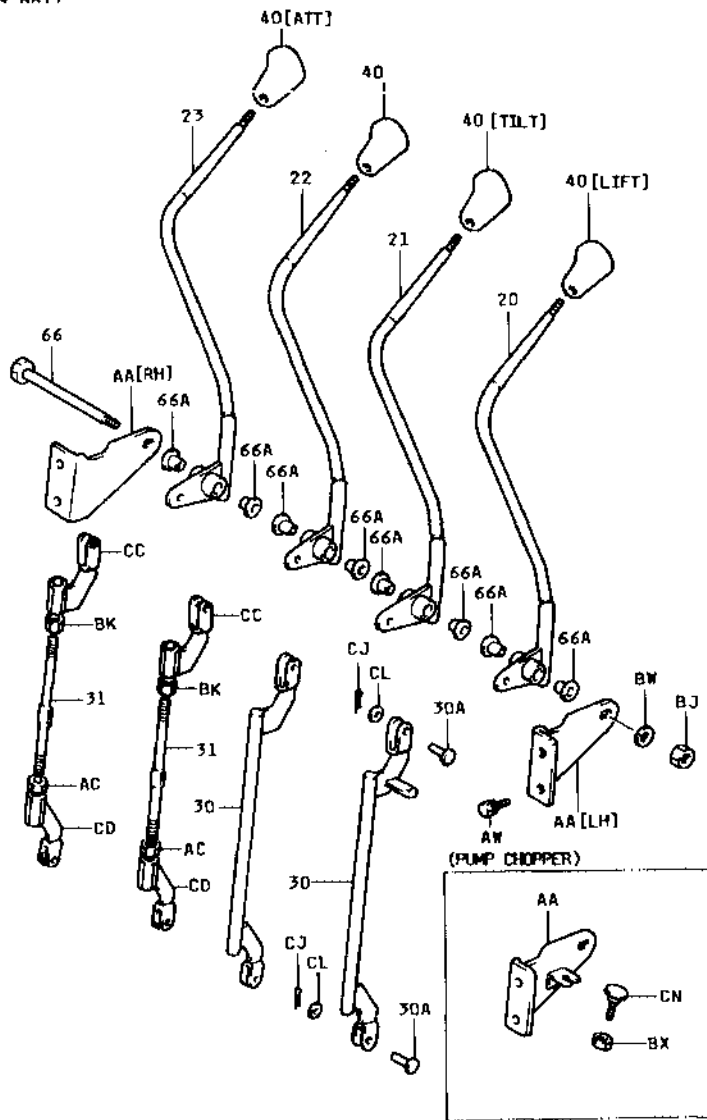 FV (4-WAY)



PART NAME	PART NAME	QTY
CODE		
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2	1
6709-22	LEVER SUB-ASSY, CONTROL VALVE, NO.3	1
6709-23	LEVER SUB-ASSY, CONTROL VALVE, NO.4	1
6709-30	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.1	1-2
6709-30A	PI (FOR CONTROL VALVE LEVER ROD)	4
6709-31	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.2	1
6709-40	KNOB, OIL CONTROL VALVE LEVER	1
6709-66	BOLT (FOR VALVE LEVER)	1
6709-66A	BUSHING	4
6709-AA	BRACKET SUB-ASSY	1
6709-AC	NUT	1
6709-AW	BOLT	4
6709-BJ	NUT	1
6709-BK	NUT	1
6709-BW	WASHER, SPRING	1
6709-BX	NUT	1
6709-CC	CLEVIS, NO.1	1
6709-CD	CLEVIS, NO.2	1
6709-CJ	PI (FOR CONTROL VALVE LEVER ROD)	2
6709-CL	WASHER, PLATE	4
6709-CN	BOLT	1
6709-LS	PIPE	1

6709-206

G236-002E


FIG. 6801
BODY PIPING

6801

FV

91/09

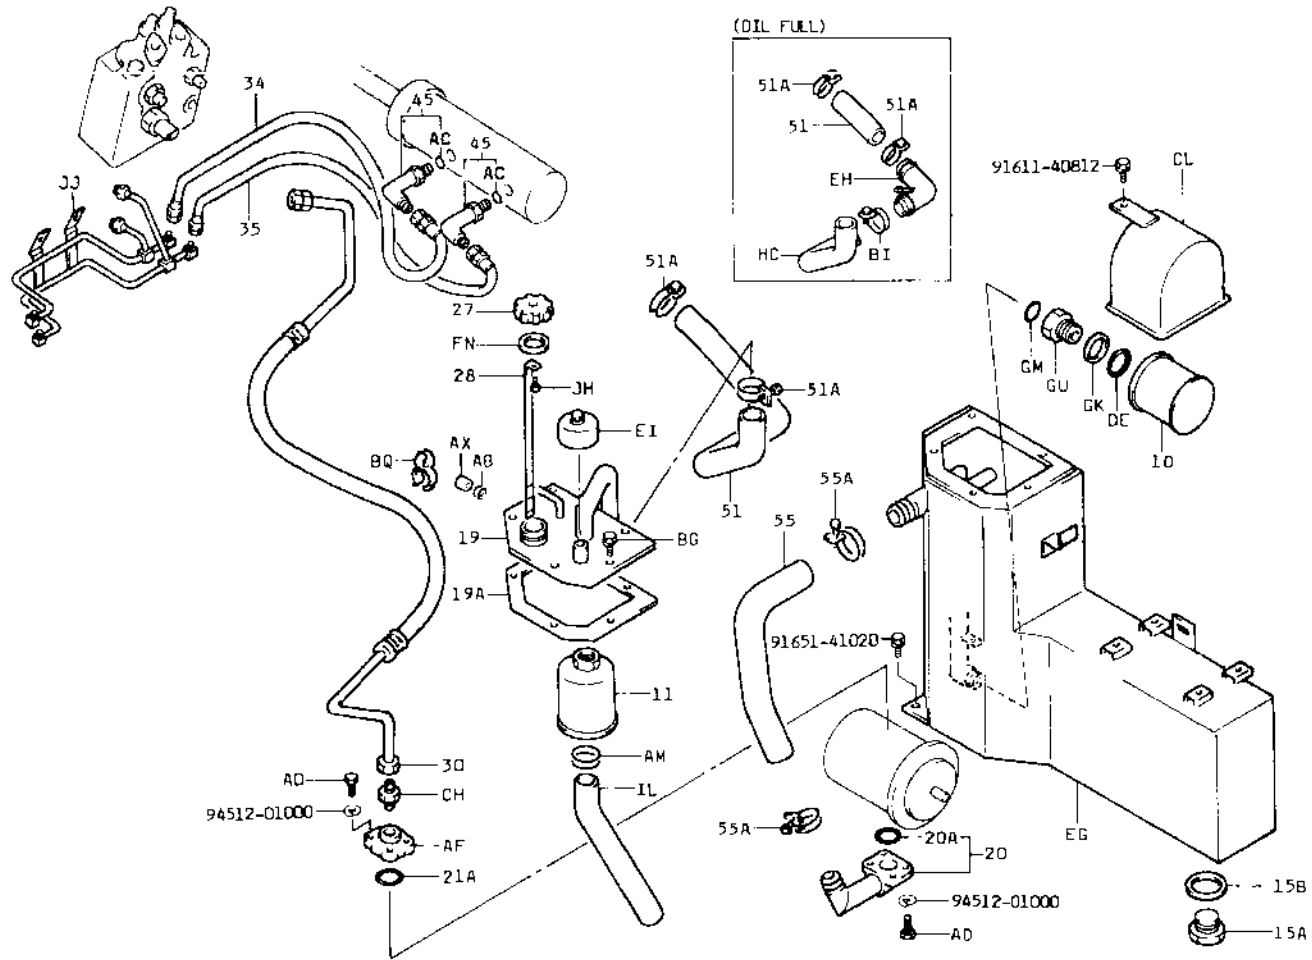 FV 11/21



6801-255

G236-001


FIG. 6801
BODY PIPING

6801

FV

91/09

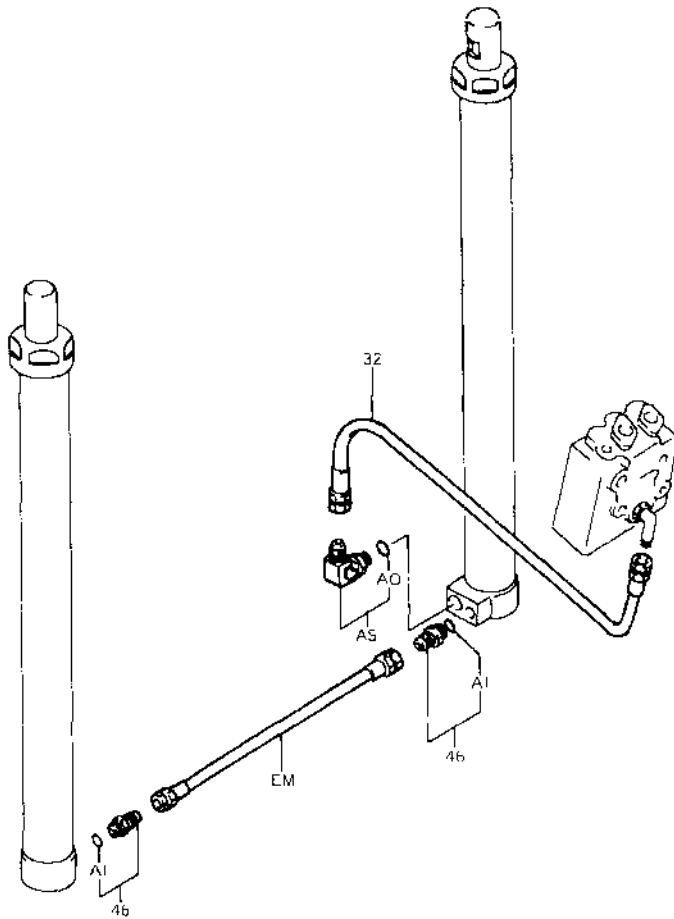 FV (2/2)



PART NAME CODE	PART NAME	QTY
6801-10	FILTER ASSY, SUCTION	1
6801-11	FILTER ASSY, RETURN	1
6801-15A	PLUG (PUM OIL TANK DRAIN)	1
6801-15B	GASKET (FDR OIL TANK DRAIN PLUG)	1
6801-19	COVER ASSY, OIL TANK	1
6801-19A	PACKING SUB-ASSY	1
6801-20	PIPE SUB-ASSY (PUMP INLET)	1
6801-20A	RING, O (FOR OIL PUMP INLET)	1
6801-21A	RING, O (FOR OIL PUMP OUTLET)	1
6801-27	CAP SUB-ASSY, OIL TANK	1
6801-28	GAGE SUB-ASSY, OIL LEVEL	1
6801-30	HOSE, HIGH PRESSURE, NO.1 (PUMP TO VALVE)	1
6801-32	HOSE, HIGH PRESSURE, NO.1 (VALVE TO LIFT)	1
6801-34	HOSE, HIGH PRESSURE, NO.1 (TILT FRONT)	2
6801-35	HOSE, HIGH PRESSURE, NO.1 (TILT REAR)	2
6801-45	FITTING (FOR TILT CYLINDER)	4
6801-46	FITTING (FOR LIFT CYLINDER)	1
6801-51	HOSE, LOW PRESSURE, NO.1 (VALVE TO TANK)	1
6801-51A	CLAMP (FOR VALVE TO TANK NO.1 HOSE)	2
6801-55	HOSE, LOW PRESSURE (TANK TO PUMP)	1
6801-55A	CLAMP (FOR TANK TO PUMP HOSE)	2
6801-AC	RING, O	4
6801-AD	BOLT	8
6801-AF	FLANGE, SPLIT	1
6801-AI	RING, O	2
6801-AM	CLAMP, HOSE	1
6801-AD	RING, O	1
6801-AS	FITTING	1
6801-AX	CAP, OIL TANK OVERFLOW PIPE	1
6801-BG	BOLT	5
6801-BL	BOLT	2
6801-CH	FITTING	1
6801-CL	COVER, OIL FILTER	1
6801-DE	SPACER	1
6801-EG	TANK SUB-ASSY, OIL	1
6801-EI	BREATHER ASSY, AIR	1
6801-EM	HOSE, HIGH PRESSURE	1
6801-FN	PACKING, OIL TANK CAP	1
6801-GK	PACKING	1
6801-GM	RING, O	1
6801-GU	BOSS	1
6801-IL	HOSE	1
6801-JH	SCREW	1
6801-JJ	PIPE SUB-ASSY (TILT CYLINDER)	1

6801 098

G236-002E


FIG. 6802
FAST PIPING

6802

FV

91/09

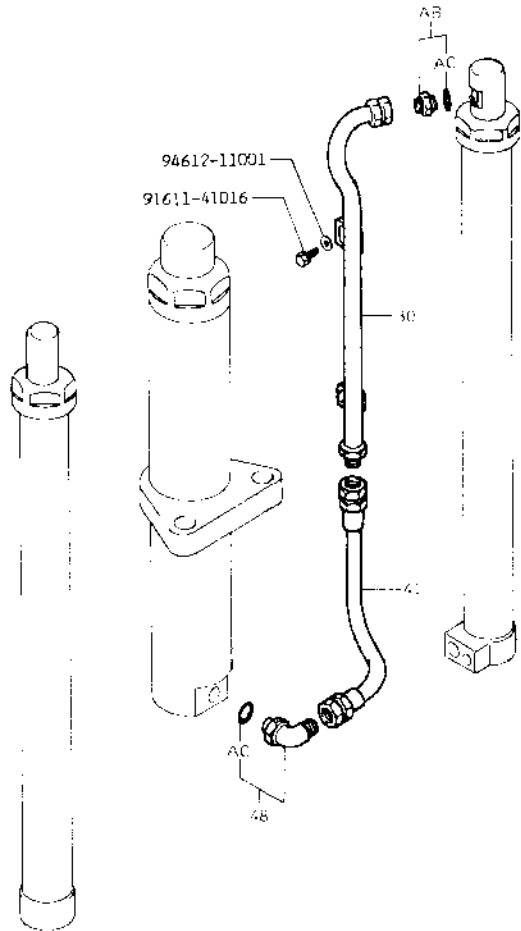 FV



PART NAME CODE	PART NAME	QTY
6802-30	PIPE SUB-ASSY, NO.1 (FRONT LIFT)	1
6802-41	HOSE, HIGH PRESSURE, NO.1 (FRONT LIFT)	1
6802-48	FITTING (FOR FRONT LIFT CYLINDER)	1
6802-AB	FITTING	1
6802-AC	RING, O	2

6802-232

G236-001E


FIG. 6101
MAST

6101

V

91/09

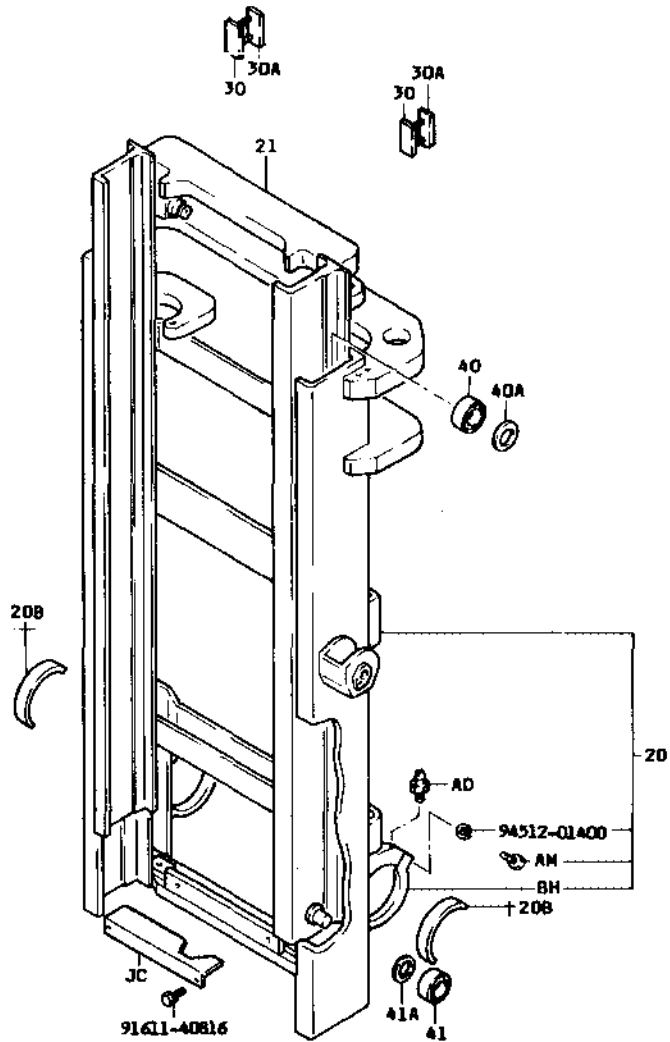 V




PART NAME CODE	PART NAME	QTY
6101-20	MAST SUB-ASSY, OUTER	1
6101-20B	BUSHING, MAST SUPPORT	1
6101-21	MAST SUB-ASSY, INNER	1
6101-30	STRIP SUB-ASSY, OUTER MAST	2
6101-30A	SHIM, OUTER MAST STRIP	99
6101-40	ROLLER, LIFT (FOR OUTER MAST)	2
6101-40A	SHIM, LIFT ROLLER (FOR OUTER MAST)	99
6101-41	ROLLER, LIFT (FOR INNER MAST)	2
6101-41A	SHIM, LIFT ROLLER (FOR INNER MAST)	99
6101-AD	FITTING, GREASE	2
6101-AM	BOLT	4
6101-BH	CAP, MAST SUPPORT	2
6101-JC	GUIDE, HOSE	1


6101-282A

G236-001E

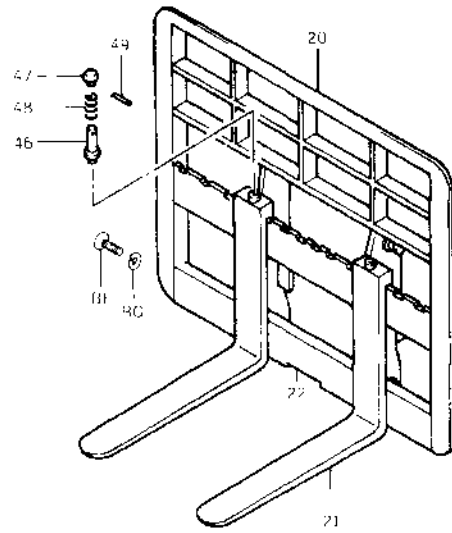 
V




(/BACK REST)

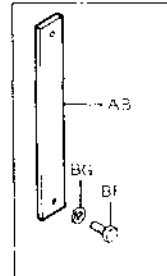 


FSV

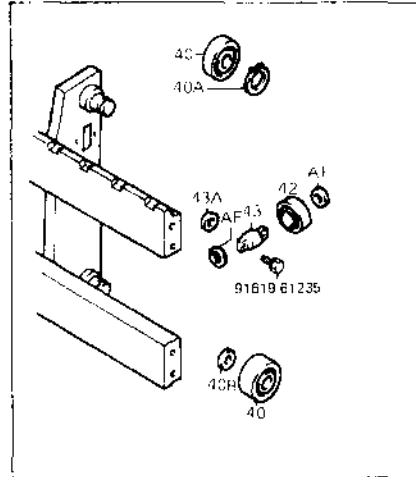 

FV

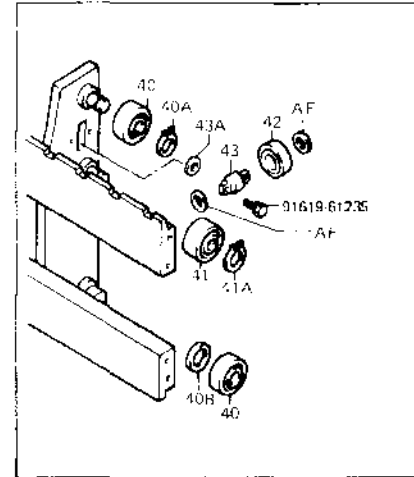 

V

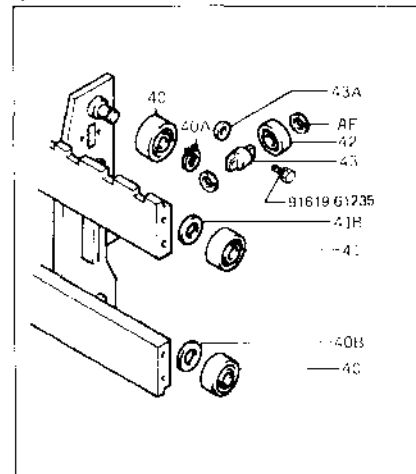 

6301-224

G236-001

FIG. 6301
LIFT BRACKET & FORK

6301

V

91/09

PART NAME CODE	PART NAME	QTY
6301-20	BACKREST SUB-ASSY	1
6301-21	FORK SUB-ASSY	2
6301-22	BRACKET SUB-ASSY, LIFT	1
6301-40	ROLLER, LIFT (UPPER, LOWER)	4
6301-40A	RING, SHAFT SNAP (UPPER, LOWER)	2
6301-40B	SHIM, LIFT ROLLER	99
6301-41	ROLLER, LIFT (CENTER)	2
6301-41B	SHIM (CENTER)	99
6301-42	ROLLER, SIDE	2
6301-43	SHAFT, SIDE ROLLER	2
6301-43A	SHIM (FOR SIDE ROLLER SHAFT)	99
6301-46	PIN, FORK STOPPER	2
6301-47	KNOB, FORK STOPPER PIN	2
6301-48	SPRING, FORK STOPPER PIN	2
6301-49	PIN, SPRING (FOR FORK STOPPER PIN)	4
6301-AF	PLATE	4
6301-BF	BOLT	8
6301-BG	WASHER	8

G236-002E


FIG. 6302
CHAIN & CHAIN WHEEL

6302

V

91/09

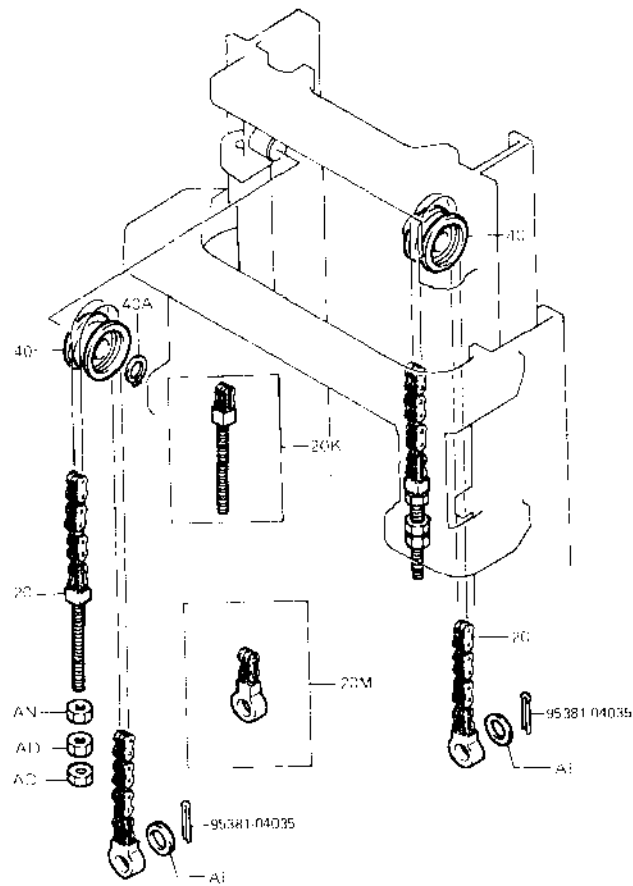 V



6302-1B9

PART NAME CODE	PART NAME	QTY
6302-20	CHAIN SUB-ASSY	2
6302-20K	BOLT KIT, CHAIN ANCHOR, NO.1	2
6302-20M	BOLT KIT, CHAIN EYE	2
6302-40	WHEEL, CHAIN	2
6302-40A	RING, SHAFT SNAP (FOR CHAIN WHEEL)	2
6302-AD	NUT, HEXAGON	4
6302-AE	WASHER, CHAIN SPECIAL	2
6302-AN	NUT, HEXAGON	2

G236-001E




FIG. 6501
LIFT CYLINDER

6501

V

91/09

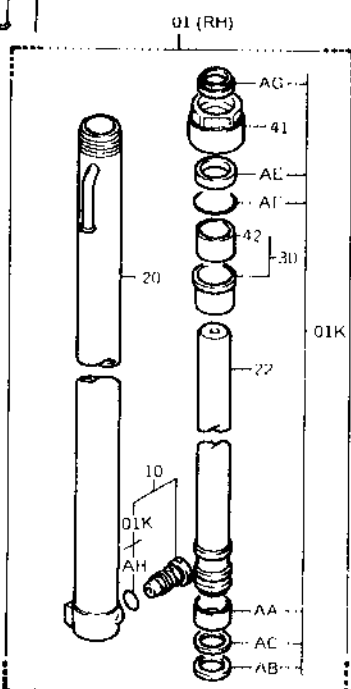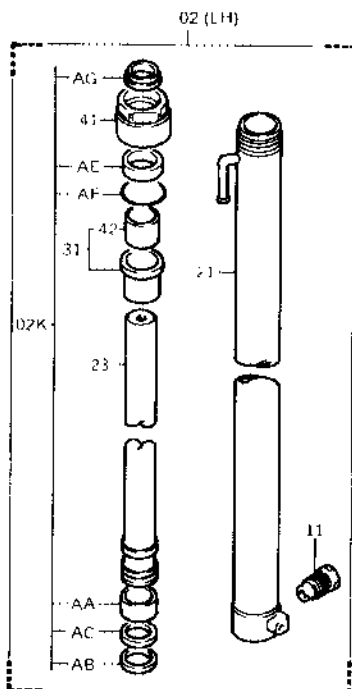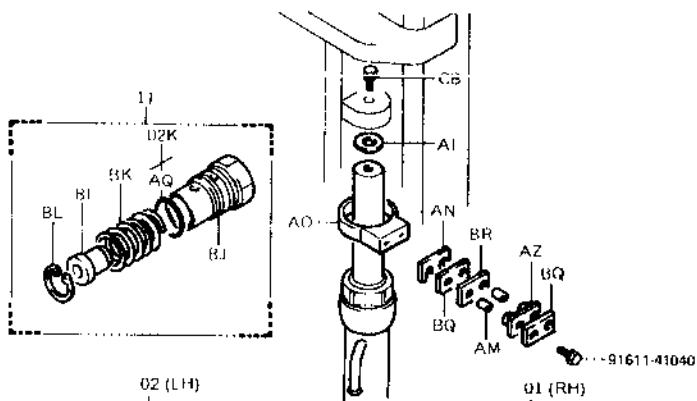   V



PART CODE	PART NAME	QTY
6501-01	CYLINDER ASSY, LIFT, RH	1
6501-01K	CYLINDER O/H KIT, LIFT, RH	1
6501-02	CYLINDER ASSY, LIFT, LH	1
6501-02K	CYLINDER O/H KIT, LIFT, LH	1
6501-10	VALVE ASSY, FLOW REGULATOR	1
6501-11	VALVE ASSY, SAFETY DOWN	1
6501-20	CYLINDER SUB-ASSY, LIFT, RH	1
6501-21	CYLINDER SUB-ASSY, LIFT, LH	1
6501-22	ROD SUB-ASSY, LIFT CYLINDER, RH	1
6501-23	ROD SUB-ASSY, LIFT CYLINDER, LH	1
6501-30	GUIDE SUB-ASSY, LIFT CYLINDER ROD, RH	1
6501-31	GUIDE SUB-ASSY, LIFT CYLINDER ROD, LH	1
6501-41	COVER, LIFT CYLINDER	2
6501-42	SLEEVE, LIFT CYLINDER ROD GUIDE	2
6501-AA	RING, WEAR	2
6501-AB	PACKING, U	2
6501-AC	RING, BACK UP	2
6501-AE	PACKING, U	2
6501-AF	RING, O	2
6501-AG	SEAL, DUST	2
6501-AH	RING, O	1
6501-AI	SHIM	99
6501-AM	SPACER	4
6501-AN	SHIM	99
6501-AO	SUPPORT, LIFT CYLINDER	1
6501-AQ	RING, O	1
6501-AZ	RUBBER	2
6501-BI	PISTON	1
6501-BJ	BODY	1
6501-BK	SPRING	1
6501-BL	RING, SNAP	1
6501-BQ	PLATE	4
6501-BR	RUBBER	2
6501-CB	BOLT	2

6501-038C

G236-001E


FIG. 6511
TILT CYLINDER

6511

V

91/09

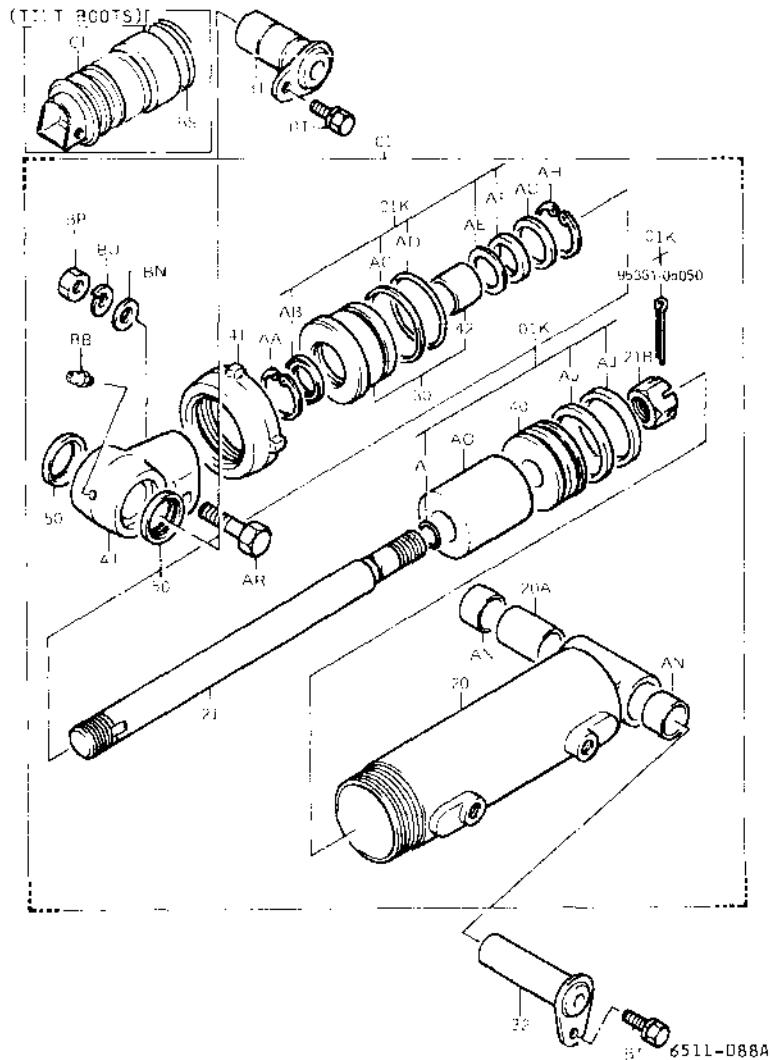 V



PART NAME	PART NAME	QTY
CODE		
6511-01	CYLINDER ASSY, TILT	2
6511-01K	CYLINDER O/H KIT, TILT	2
6511-20	CYLINDER SUB-ASSY, TILT	2
6511-20A	BUSHING, PIN (FOR CYLINDER)	2
6511-21	ROD SUB-ASSY, TILT CYLINDER PISTON	2
6511-21B	NUT, CASTLE	2
6511-30	GUIDE SUB-ASSY, TILT CYLINDER ROD	2
6511-31	PIN SUB-ASSY, TILT CYLINDER, FR	2
6511-32	PIN SUB-ASSY, TILT CYLINDER, RR	2
6511-40	PISTON, TILT CYLINDER	2
6511-41	COVER, TILT CYLINDER	2
6511-42	SLEEVE, TILT CYLINDER ROD GUIDE	2
6511-44	JOINT, PISTON ROD	2
6511-50	SEAL, GREASE	4
6511-AA	RING, HOLE SNAP	2
6511-AB	SEAL, DUST	2
6511-AC	RING, BACK UP	2
6511-AD	RING, O	2
6511-AE	RING, BACK UP	2
6511-AF	PACKING, U	2
6511-AG	PLATE, STOPPER	2
6511-AH	RING, HOLE SNAP	2
6511-AI	RING, O	2
6511-AJ	PACKING, U	4
6511-AN	COLLAR	4
6511-AO	SPACER, TILT CONTROL	2
6511-AR	BOLT	2
6511-BB	FITTING, GREASE	2
6511-BN	WASHER, PLATE	2
6511-BP	NUT	2
6511-BS	WIRE, CYLINDER BODY	2
6511-BT	BOLT	4
6511-BU	WASHER	2
6511-CI	BOOT, CYLINDER	2
6511-CL	BOLT	2

G236-001E


FIG. 6701
OIL PUMP

6701

V

91/09

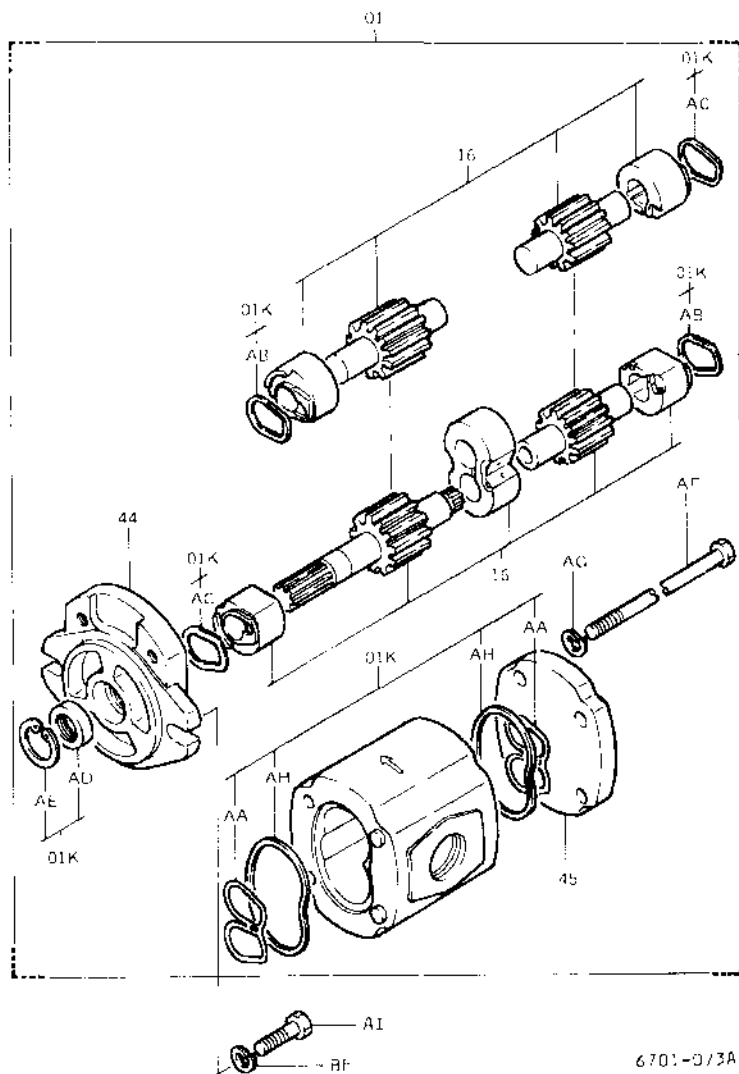 V



PART NAME CODE	PART NAME	QTY
6701-01	PUMP ASSY, OIL	1
6701-01K	PUMP O/H KIT, OIL	1
6701-16	GEAR & BUSHING SET	1
6701-44	FLANGE, MOUNTING	1
6701-45	COVER	1
6701-AA	SEAL, BUSHING	2
6701-AB	RING, BACKING, RH	2
6701-AC	RING, BACKING, LH	2
6701-AD	SEAL, OIL	1
6701-AE	RING, SNAP	1
6701-AF	BOLT	4
6701-AG	WASHER, SPRING	4
6701-AH	SEAL, BODY	2
6701-AI	BOLT	2
6701-BF	WASHER	2

G236-001E


FIG-6705
OIL CONTROL VALVE

6705

V

91/09

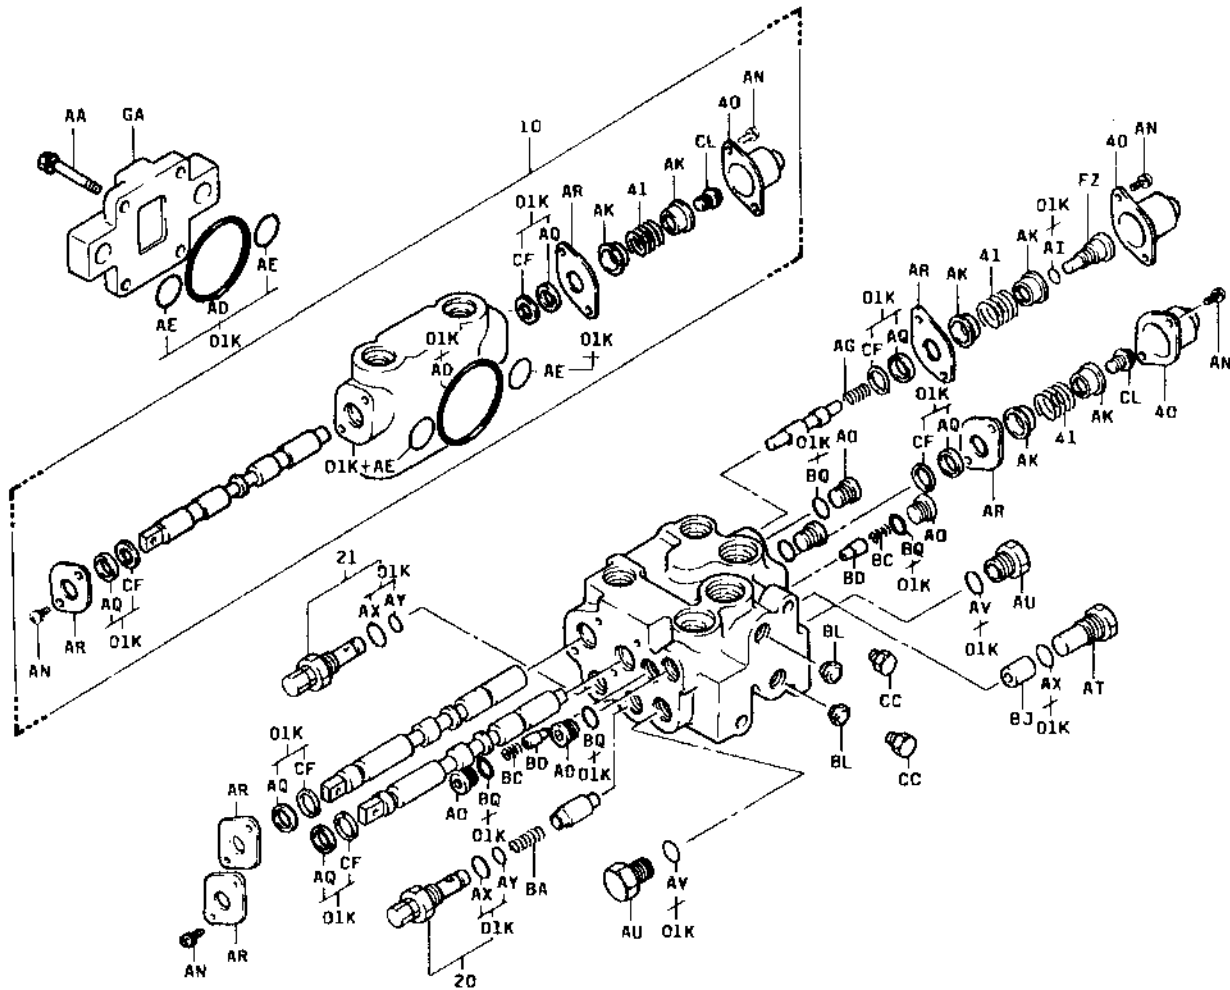 
V (3-WAY) (1/2)



6705-515

G236-002

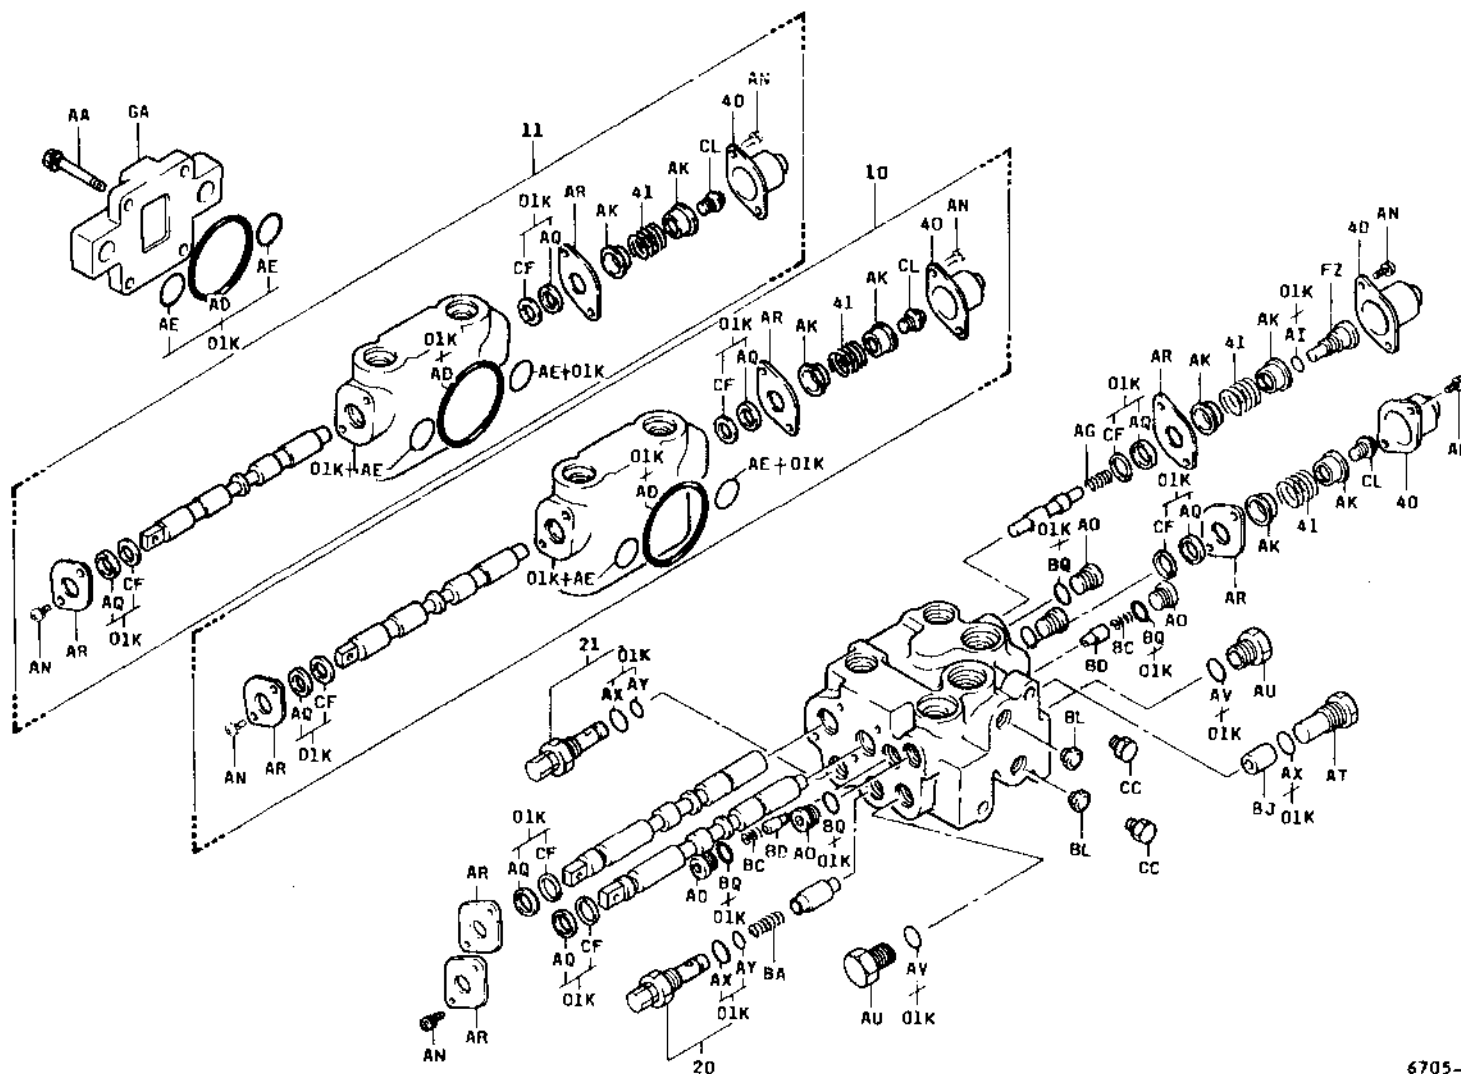 V (4-WAY) (1/2)



6705-516

G236-003

FIG. 6705
DIE CONTROL VALVE

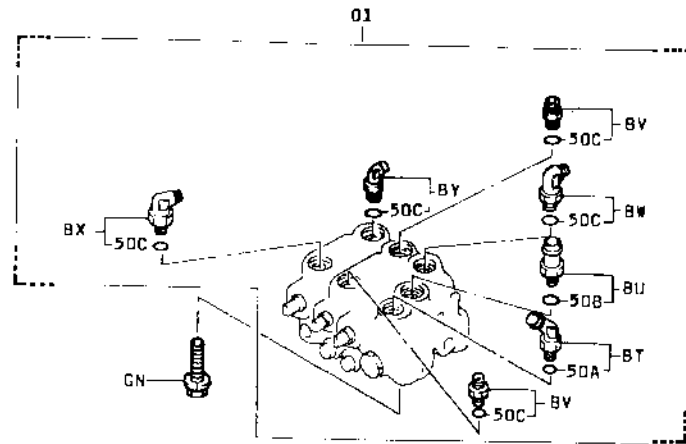 
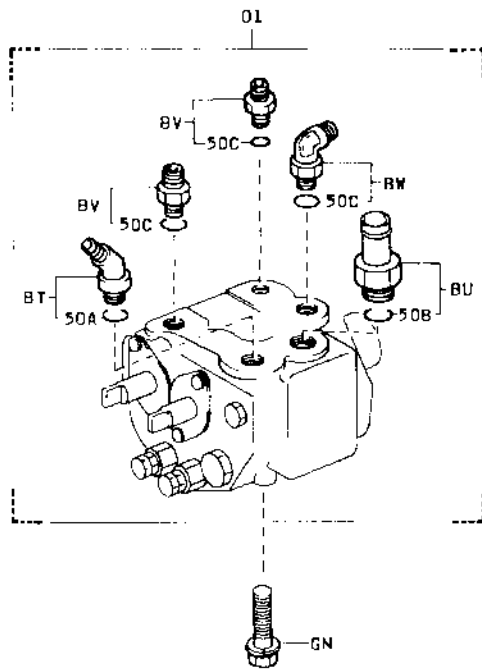 
6705

V

91/09

V (2-WAY) (2/2)

V (3-WAY) (2/2)



6705-518

6705-517

G236-004


FIG. 6705
DIL CONTROL VALVE

6705

V

91/09

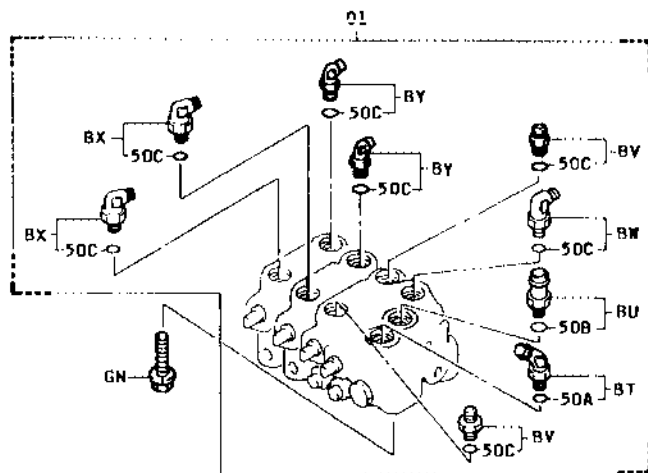 V (4-WAY) 12/21




6705-519

PART NAME CODE	PART NAME	QTY
6705-01	VALVE ASSY, DIL CONTROL	1
6705-01K	VALVE O/H KIT, DIL CONTROL	1
6705-10	VALVE ASSY, PLUNGER SECTION, NO.1	1
6705-11	VALVE ASSY, PLUNGER SECTION, NO.2	1
6705-20	VALVE SET, PILOT RELIEF, NO-1	1
6705-21	VALVE SET, PILOT RELIEF, NO-2	1
6705-40	COVER, SPRING	2
6705-41	SPRING, COMPRESSION (FOR SPOOL RETURN)	2
6705-50A	RING, O, NO.1 (FOR VALVE FITTING)	1
6705-50B	RING, O, NO.2 (FOR VALVE FITTING)	1
6705-50C	RING, O, NO.3 (FOR VALVE FITTING)	3
6705-AA	BOLT	4
6705-AD	RING, O	1
6705-AE	RING, O	2
6705-AG	SPRING	1
6705-AI	RING, O	1
6705-AK	HOLDER, SPRING	4
6705-AN	SCREW	8
6705-AO	PLUG	5
6705-AQ	RING, BACK UP	4
6705-AR	HOLDER, SEAL	4
6705-AT	STOPPER	1
6705-AU	STOPPER	2
6705-AV	RING, O	2
6705-AX	RING, O	3
6705-AY	RING, O	2
6705-BA	SPRING, COMPRESSION	1
6705-BC	SPRING, COMPRESSION	2
6705-BD	PLUNGER, CHECK	2
6705-BJ	SEAT, VALVE	1
6705-BL	SEAT, INSERT	2
6705-BQ	RING, O	5
6705-BT	FITTING	1
6705-BU	FITTING	1
6705-BV	FITTING	2
6705-BW	FITTING	1
6705-BX	FITTING	1
6705-BY	FITTING	1
6705-CF	PLUG	2
6705-CF	SEAL	4
6705-CL	BOLT	1
6705-FZ	END, SPOOL	1
6705-GA	HOUSING, OUTLET	1
6705-GN	BOLT, W/WASHER	4


G236-005E

V (2-WAY)

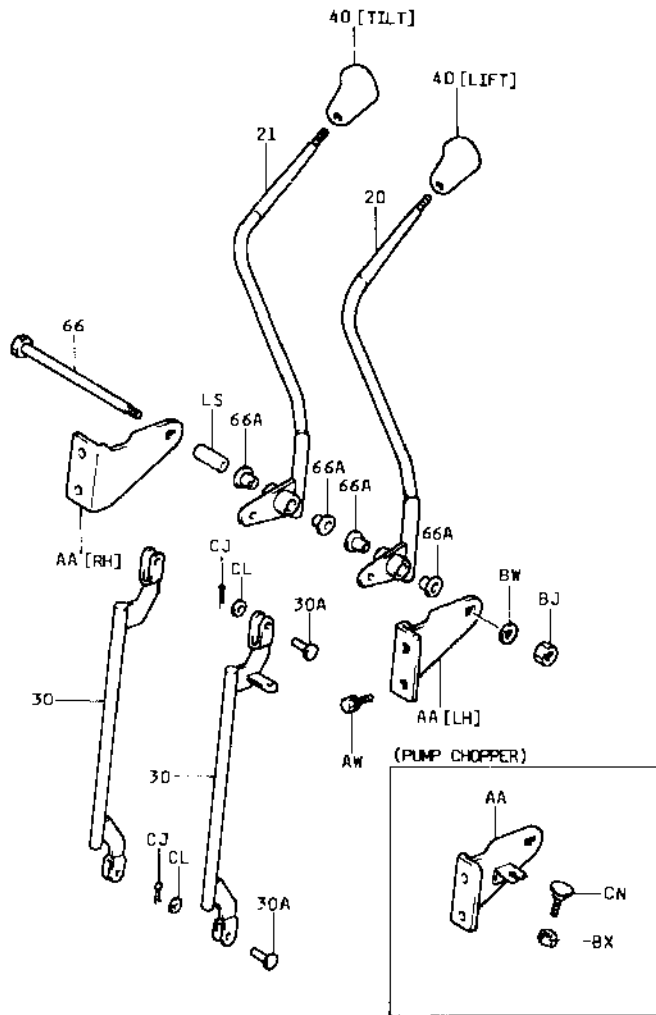 V (3-WAY)



6709-204

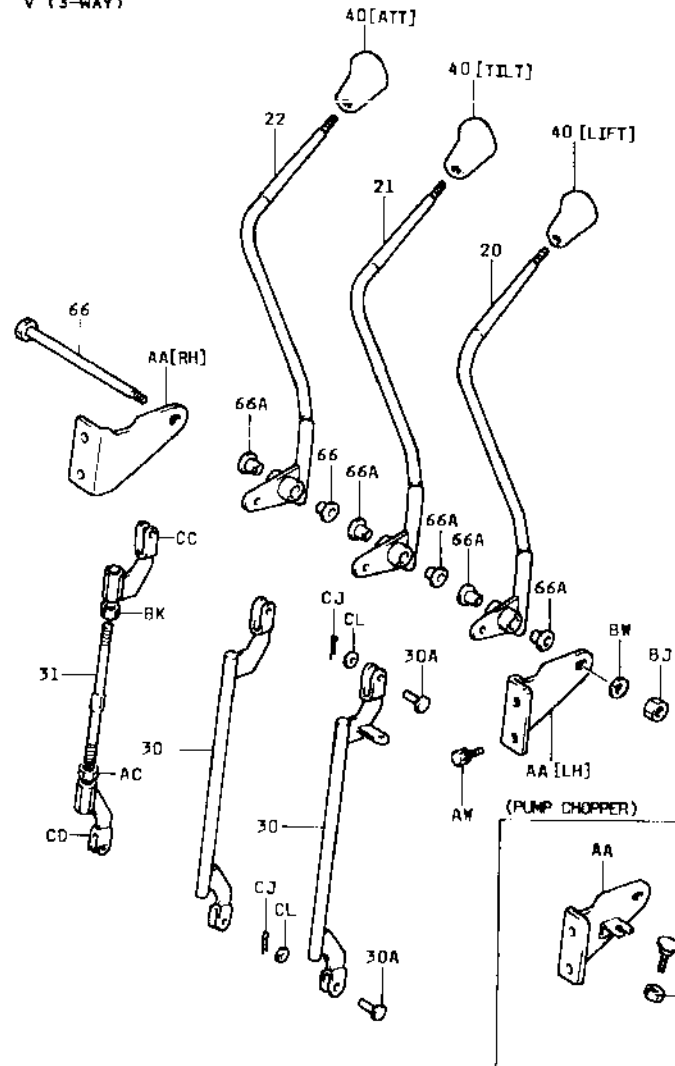 

6709-205

G236-001


FIG-6709
DIL CONTROL VALVE LINK

6709

V

91/09

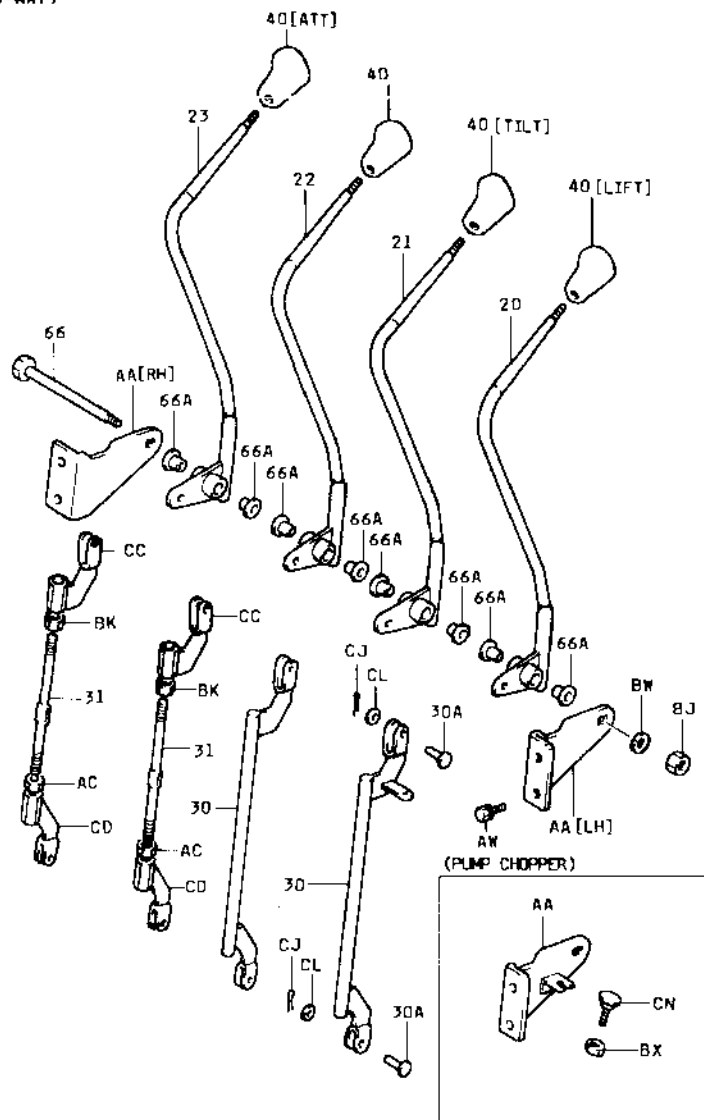 V (4-WAY)



PART NAME	PART NAME	QTY
CODE		
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2	1
6709-22	LEVER SUB-ASSY, CONTROL VALVE, NO.3	1
6709-23	LEVER SUB-ASSY, CONTROL VALVE, NO.4	1
6709-30	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.1	1-2
6709-30A	PIN (FOR CONTROL VALVE LEVER ROD)	4
6709-31	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.2	1
6709-40	KNOB, DIL CONTROL VALVE LEVER	1
6709-66	BOLT (FOR VALVE LEVER)	1
6709-66A	BUSHING	4
6709-AA	BRACKET SUB-ASSY	1
6709-AC	NUT	1
6709-AW	BOLT	4
6709-BJ	NUT	1
6709-BK	NUT	1
6709-BW	WASHER, SPRING	1
6709-BX	NUT	1
6709-CC	CLEVIS, NO.1	1
6709-CD	CLEVIS, NO.2	1
6709-CJ	PIN	2
6709-CL	WASHER, PLATE	4
6709-CN	BOLT	1
6709-LS	PIPE	1

6709-206

G236-002E


FIG. 6801
BODY PIPING

6801

V

91/09

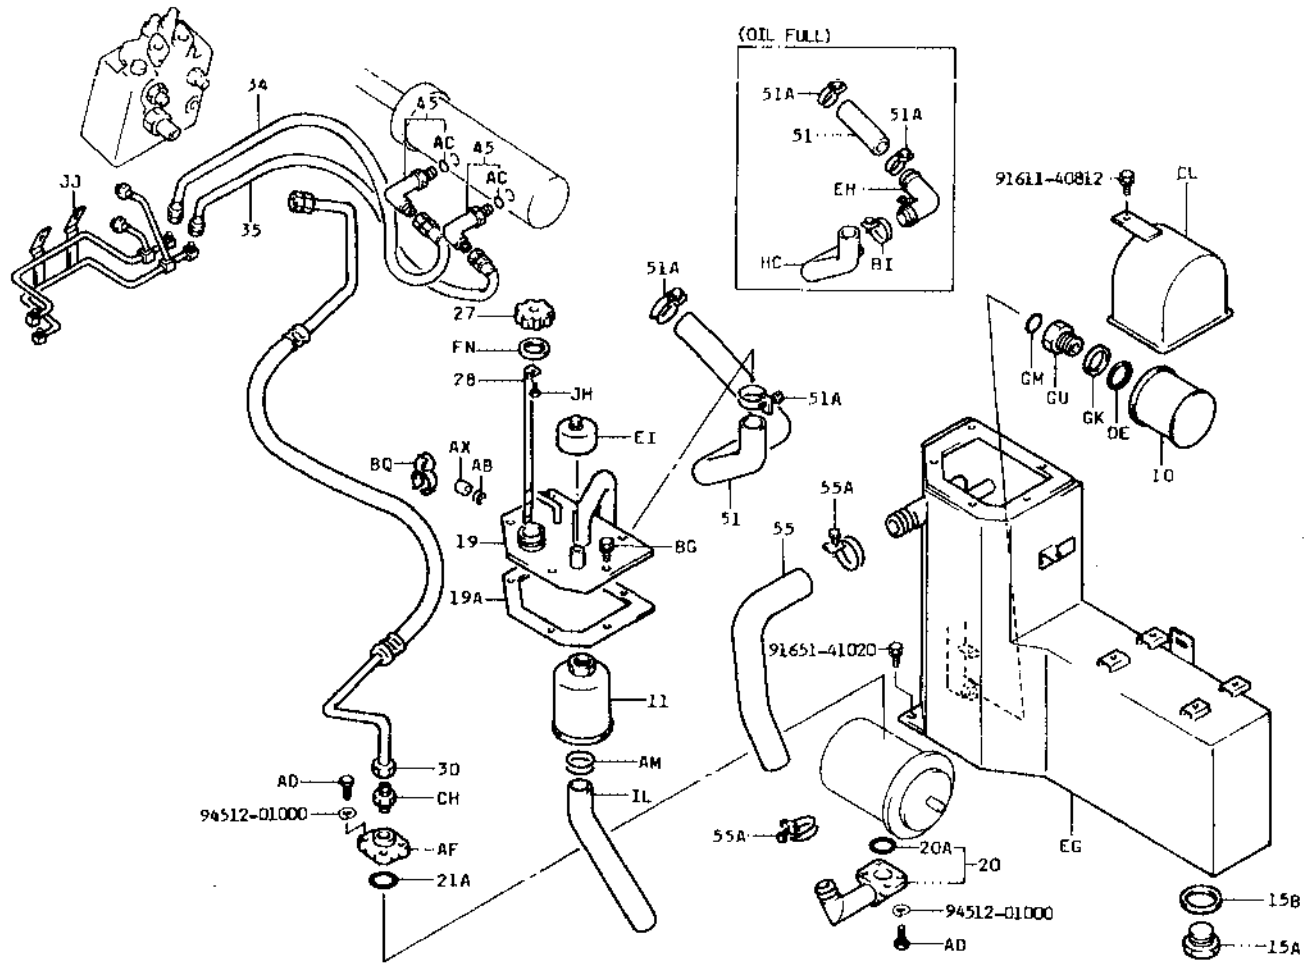 V 11/21



6801 - 255

G236-001


FIG. 6801
BODY PIPING

6801

V

91/09

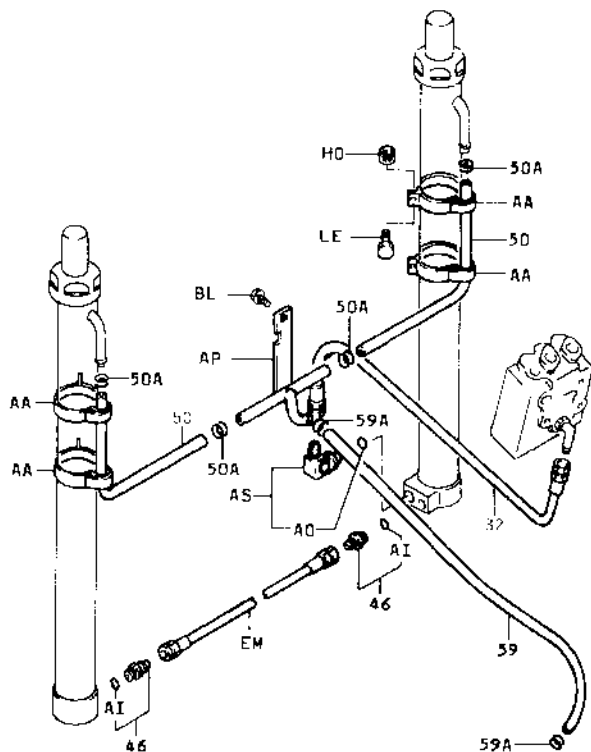 V (2/2)



6801-258

PART NAME CODE	PART NAME	QTY
6801-10	FILTER ASSY, SUCTION	1
6801-11	FILTER ASSY, RETURN	1
6801-15A	PLUG (FOR OIL TANK DRAIN)	1
6801-15B	GASKET (FOR OIL TANK DRAIN PLUG)	1
6801-19	COVER ASSY, OIL TANK	1
6801-19A	PACKING SUB-ASSY	1
6801-20	PIPE SUB-ASSY (PUMP INLET)	1
6801-20A	RING, O (FOR OIL PUMP INLET)	1
6801-21A	RING, O (FOR OIL PUMP OUTLET)	1
6801-27	CAP SUB-ASSY, OIL TANK	1
6801-28	GAGE SUB-ASSY, OIL LEVEL	1
6801-30	HOSE, HIGH PRESSURE, NO.1 (PUMP TO VALVE)	1
6801-32	HOSE, HIGH PRESSURE, NO.1 (VALVE TO LIFT)	1
6801-34	HOSE, HIGH PRESSURE, NO.1 (TILT FRONT)	2
6801-35	HOSE, HIGH PRESSURE, NO.1 (TILT REAR)	2
6801-45	FITTING (FOR TILT CYLINDER)	4
6801-46	FITTING (FOR LIFT CYLINDER)	1
6801-50	HOSE, LOW PRESSURE, NO.1 (LIFT TO TANK)	2
6801-50A	CLAMP (FOR LIFT TO TANK NO.1 HOSE)	4
6801-51	HOSE, LOW PRESSURE, NO.1 (VALVE TO TANK)	1
6801-51A	CLAMP (FOR VALVE TO TANK NO.1 HOSE)	2
6801-55	HOSE, LOW PRESSURE (TANK TO PUMP)	1
6801-55A	CLAMP (FOR TANK TO PUMP HOSE)	2
6801-59	HOSE, LOW PRESSURE, NO.2 (LIFT TO TANK)	1
6801-59A	CLAMP (FOR LIFT TO TANK NO.2 HOSE)	2
6801-AA	BAND, LIFT CYLINDER OVERFLOW HOSE	4
6801-AC	RING, O	4
6801-AD	BOLT	8
6801-AF	FLANGE, SPLIT	1
6801-AI	RING, O	2
6801-AM	CLAMP, HOSE	1
6801-AD	RING, O	1
6801-AP	PIPE	1
6801-AS	FITTING	1
6801-BG	BOLT	5
6801-BI	CLAMP, HOSE	2
6801-BL	BOLT	2
6801-BQ	CLAMP	1
6801-CH	FITTING	1
6801-CL	COVER, OIL FILTER	1
6801-DE	SPACER	1
6801-EG	TANK SUB-ASSY, OIL	1
6801-EH	PIPE SUB-ASSY	1
6801-EI	BREATHER ASSY, AIR	1
6801-EM	HOSE, HIGH PRESSURE	1
6801-FN	PACKING, OIL TANK CAP	1
6801-GK	PACKING	1
6801-GM	RING, O	1
6801-GV	BOSS	1
6801-HC	HOSE, LOW PRESSURE	1
6801-HO	NUT	4
6801-IL	HOSE	1
6801-JH	SCREW	1
6801-JJ	PIPE SUB-ASSY (TILT CYLINDER)	1
6801-LE	BOLT	4

G236-00ZE

MEMO

MEMO