

PARTS LIST No. B28713 00304E

PARTS LIST

MODEL **DCA-35SPK**

Denyo Co., Ltd.

SERIAL No. 3794356~

HOW TO USE THE PARTS LIST

1. This parts list covers the parts for Engine-Driven AC Generator Model DCA-35SPK.
2. When placing orders, specify the following details:
 - 1) Model Number and Serial Number.
 - 2) Parts Number and Parts Name.
 - 3) Quantity required.
3. The parts listed with a serial number are new parts.
Please place an order with us after confirmation of serial number for machine at your side.
4. The sequence of this parts list is by machine structure. Each group of parts has an illustration on the first page of the parts list. Parts can be identified on the parts list, using the key number on the illustration. These key number, on the illustration, are also shown on the left-hand column in the parts list.
5. The parts number are shown as 10 digits and alphabet. The parts number of the parts makers are shown in the remark column.
6. The parts marked with an asterisk and the parts not listed are not available as a single part, and orders must be placed for them as an assembly.
7. This parts list uses the following abbreviations and symbols:

All	:Some parts differ from unit to unit	p.	:Page
Ass'y	:Assembly	Re.	:Rear
Fr.	:Front	R. H.	:Right
L. H.	:Left	STD	:Standard
No.	:Number	→	:Indication of the page where the modified or additional parts are listed.
O. P.	:Optional Parts		

Each symbol [A] [B] [C] listed in a part of Q'ty shows the appropriate parts number for the unit you purchased. The meaning of the symbol [A] [B] [C] is listed on the first top place of each assembly group.

 
Please check the specification of the unit such as frequency, voltage, model No. etc. before placing orders.

8. Left (L.H.) and Right (R.H.) used in this parts list show the direction when you look at the engine from the generator side.
9. For the engine parts not listed in this parts list, refer to "KUBOTA Corporation V3300 Diesel Engine Parts Catalogue."


I N D E X

N a m e	Page
Engine Generator Set.....	1 – 1
Generator Ass'y.....	2 – 1
Control Panel Ass'y.....	3 – 1
Output Terminal Ass'y.....	4 – 1
Engine & Radiator Ass'y.....	5 – 1
Battery & Muffler Ass'y.....	6 – 1
Fuel Tank Ass'y.....	7 – 1
Bonnet Ass'y (Part1).....	8 – 1
Bonnet Ass'y (Part2).....	9 – 1
Name Plate Ass'y.....	1 0 – 1

Engine Generator Set

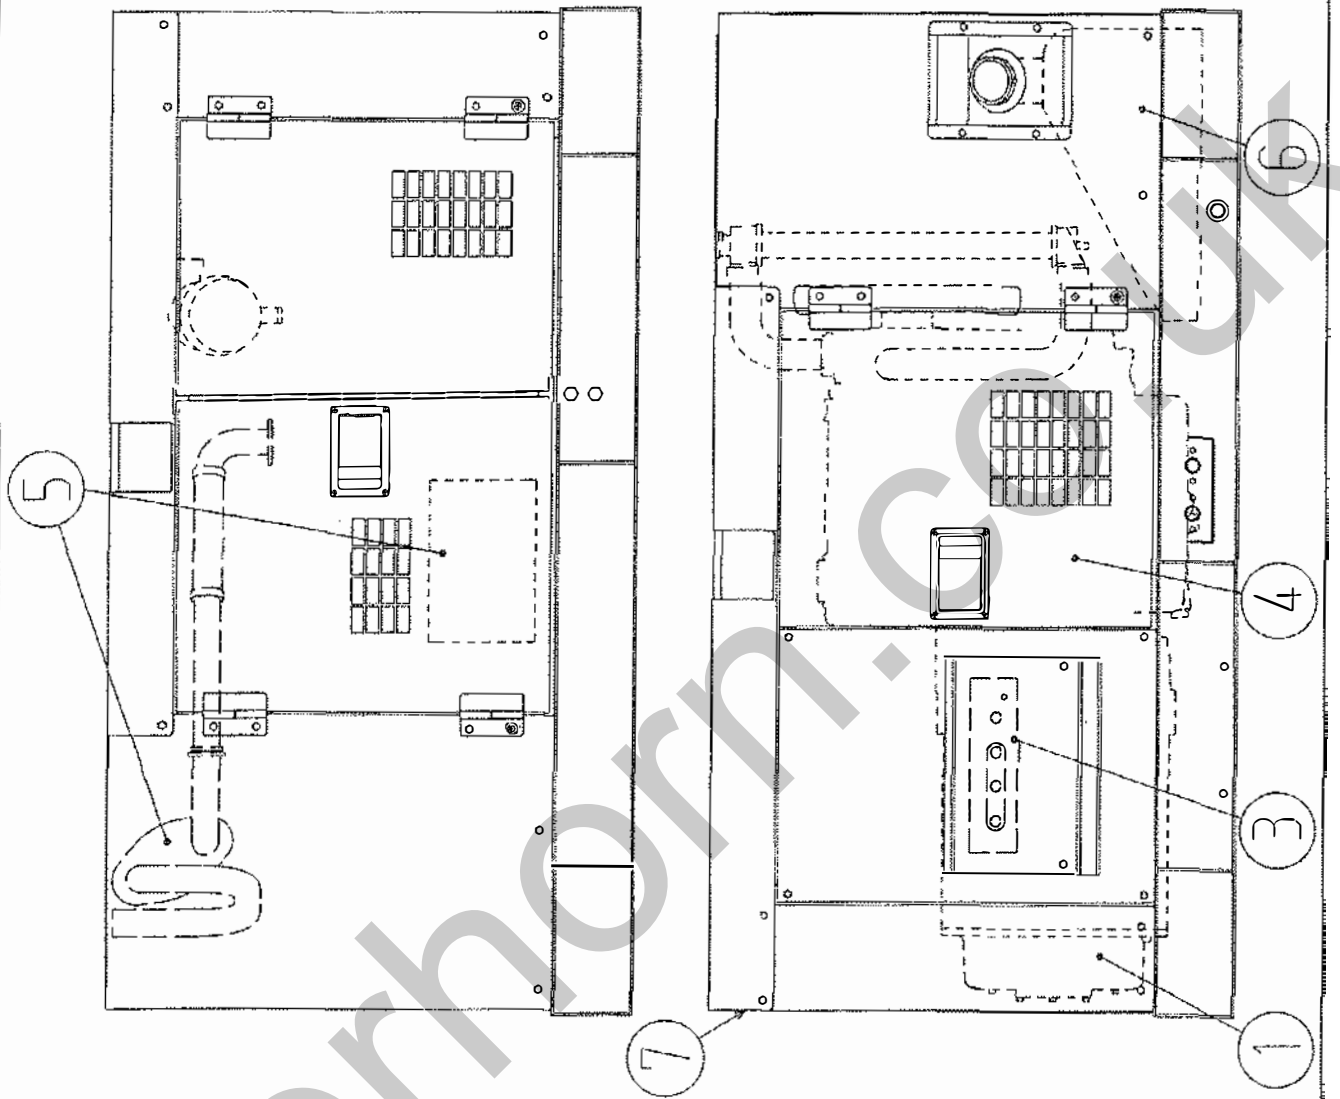


VIEW - Y

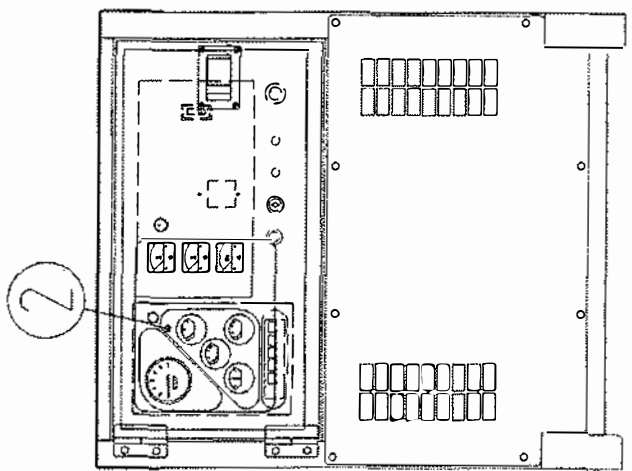 

Y ↗

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1		Generator Ass'y	Refer to p.2-1						
2		Control Box Ass'y	Refer to p.3-1						
3		Output Terminal Ass'y	Refer to p.4-1						
4		Engine & Radiator Ass'y	Refer to p.5-1						
5		Battery & Muffler Ass'y	Refer to p.6-1						
6		Fuel Tank Ass'y	Refer to p.7-1						
7		Bonnet Ass'y(Part1)	Refer to p.8-1						
		Bonnet Ass'y(Part2)	Refer to p.9-1						
8		Name Plate Ass'y	Refer to p.10-1						
	B 28140 01403	Generator Connection Diagram							
	B 28141 00903	Engine Wiring Diagram							
	B 28443 01004	Instrucion Manual							

 
Generator Ass'y

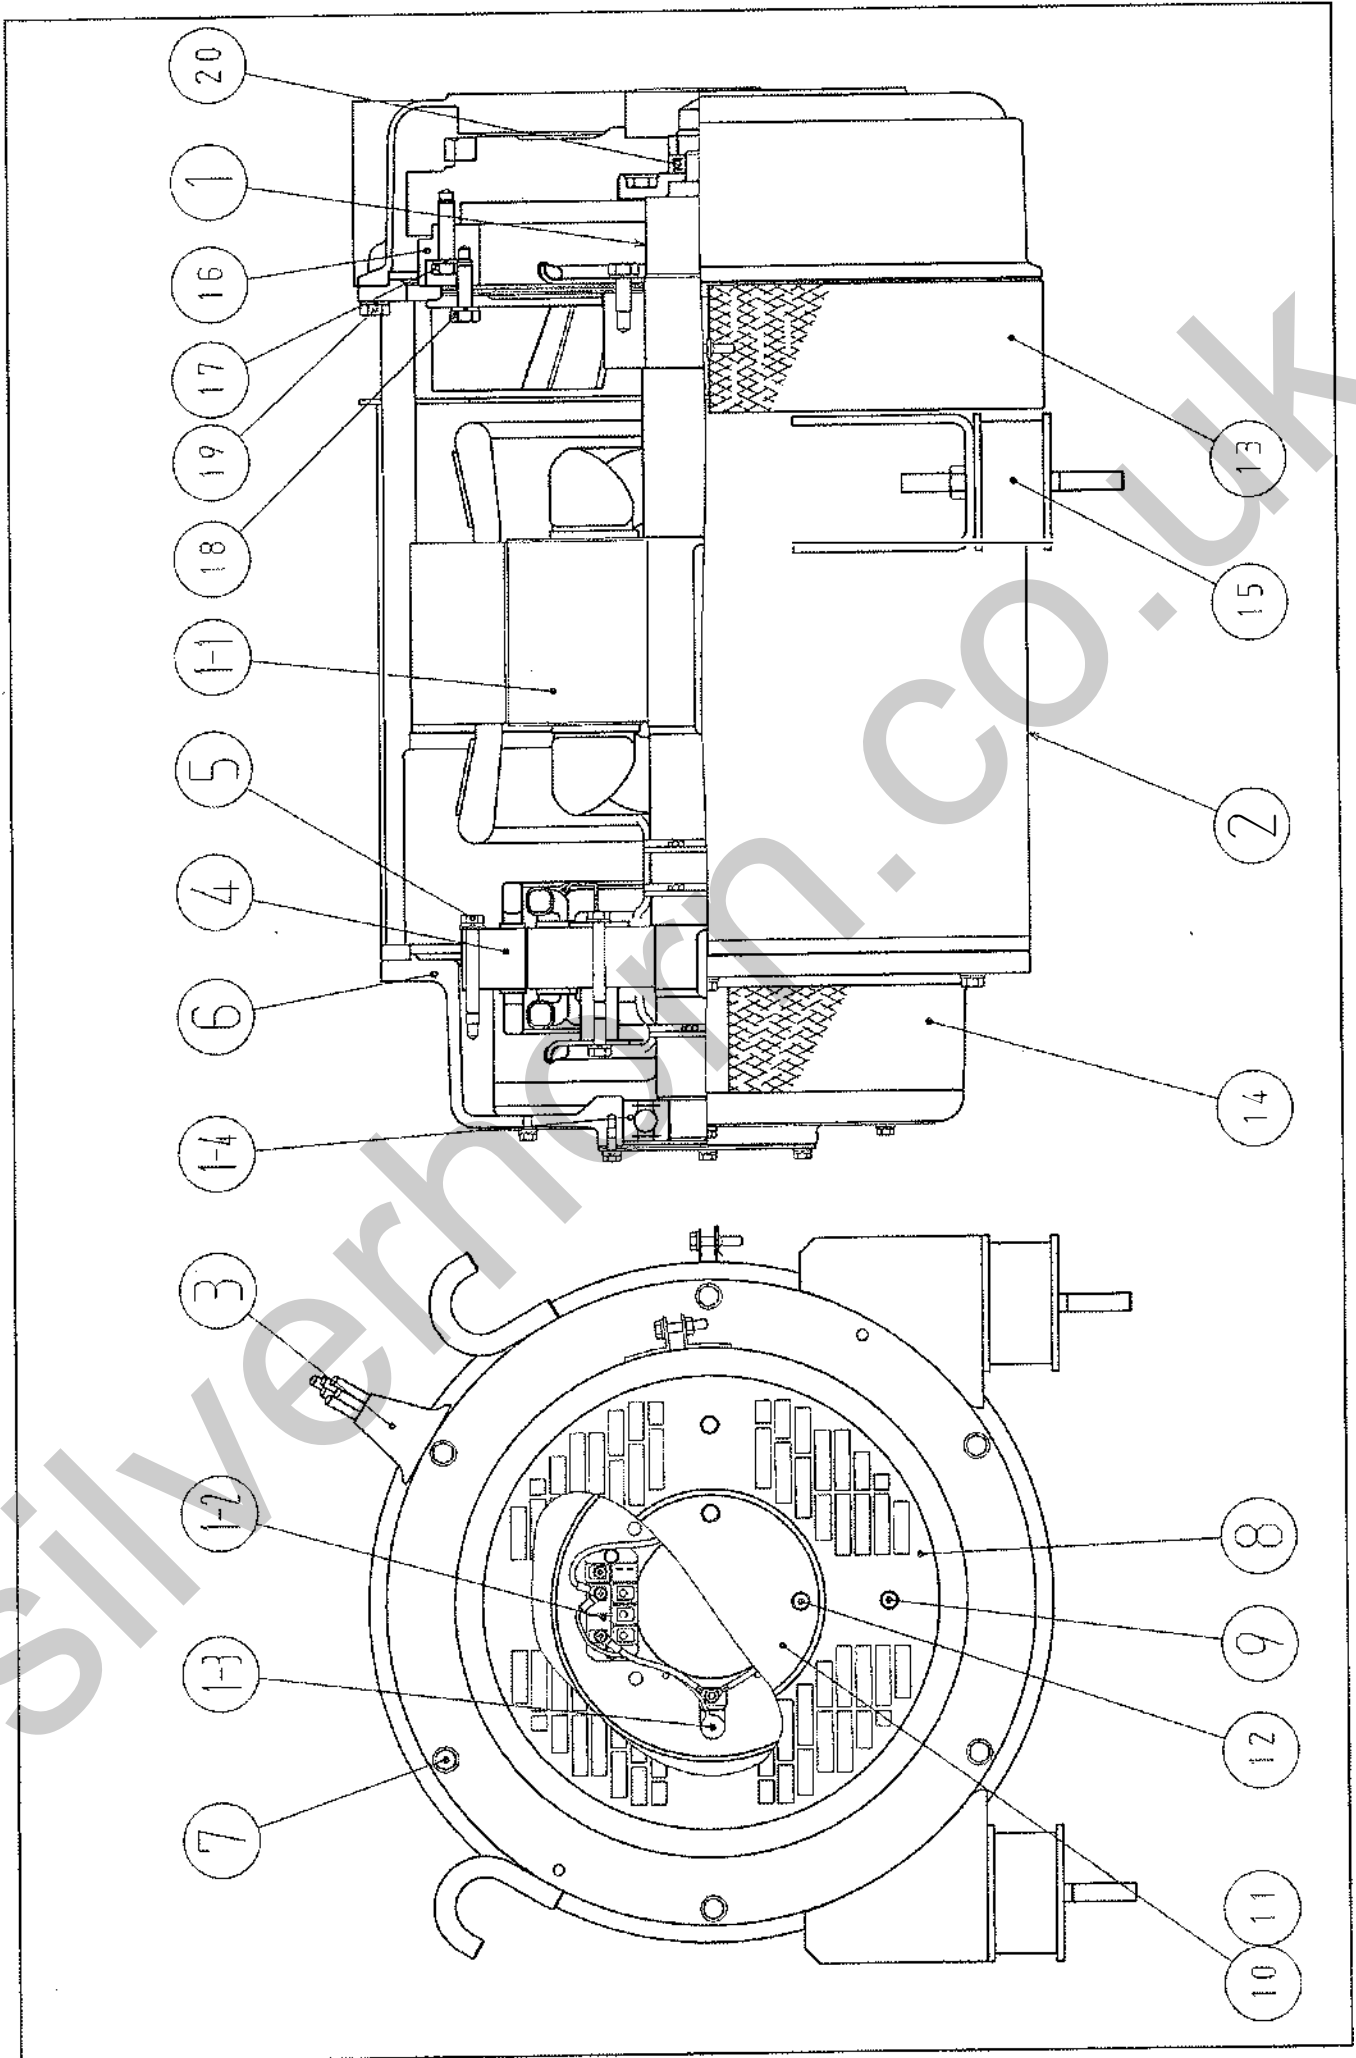


Key No.	Parts No.	Parts Name	Remarks	Q' ty				Symbol	Serial No.
				All	A	B	C		
1	B 21102 00002	Rotor Ass'y		1					
1- 1	83810 40003	Field Ass'y		(1)					
1- 2	06018 21349	Rectifier		(2)					
1- 3	06018 22601	Surge Absorber		(1)					
1- 4	00719 06310	Bearing	6310 DDU C3	(1)					
2	83813 40003	Stator Ass'y		1					
3	08450 41904	Grommet		1					
4	80413 50013	Field Ass'y, exciter		1					
5	00103 08065	Hex. Head Bolt		4					
	00426 08000	Spring Washer		4					
	00412 08000	Plain Washer		4					
6	80413 15202	End Bracket		1					
7	00171 08030	Hex. Head Bolt		6					
8	80413 31014	Cover, end bracket		1					
9	00169 06016	Hex. Head Bolt		4					
10	80413 10024	Cover, bearing		1					
11	80413 12014	Gasket, bearing		1					
12	00169 06016	Hex. Head Bolt		4					
13	80513 32014	Cover, fan		1					
	03404 06040	Hex. Head Bolt		1					
	00412 06000	Plain Washer		1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
14	80013 33003	Cover, end bracket		1					
	03404 06040	Hex. Head Bolt		1					
	00412 06000	Plain Washer		1					
15	06050 00010	Rubber Suspension	EA-1011	2					
	02070 12000	Hex. Nut		2					
16	M 11654 00003	Coupling Ring		1					
17	00128 10045	Hex. Head Bolt		8					
18	00128 10030	Hex. Head Bolt		8					
19	00128 10025	Hex. Head Bolt		6					
20	00705 06303	Bearing	6303ZZ	1					

 Control Panel Ass'y

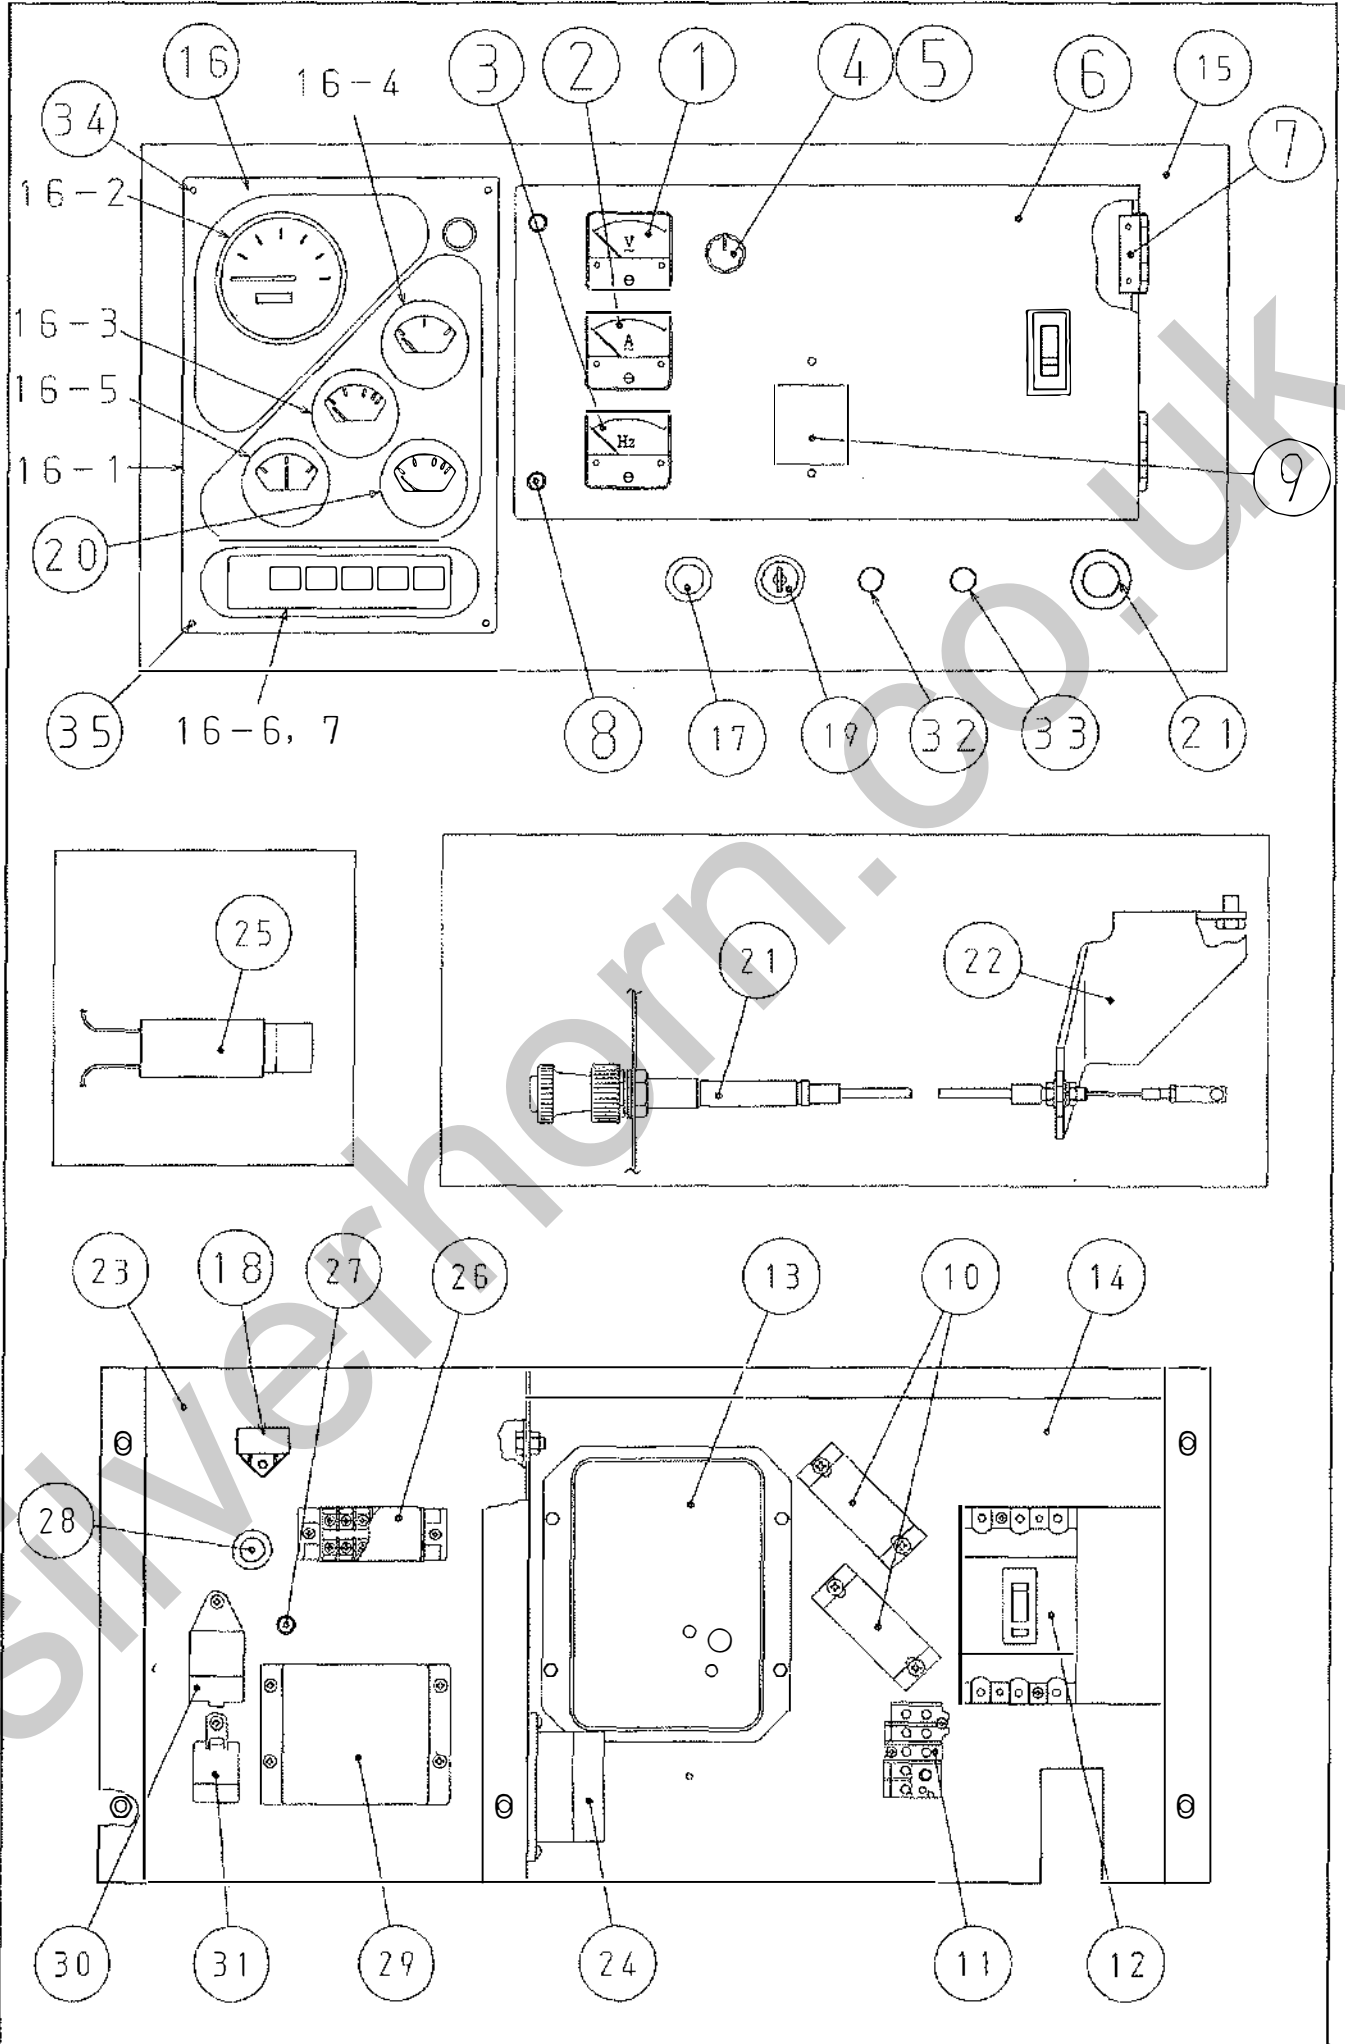

Control Panel Ass'y

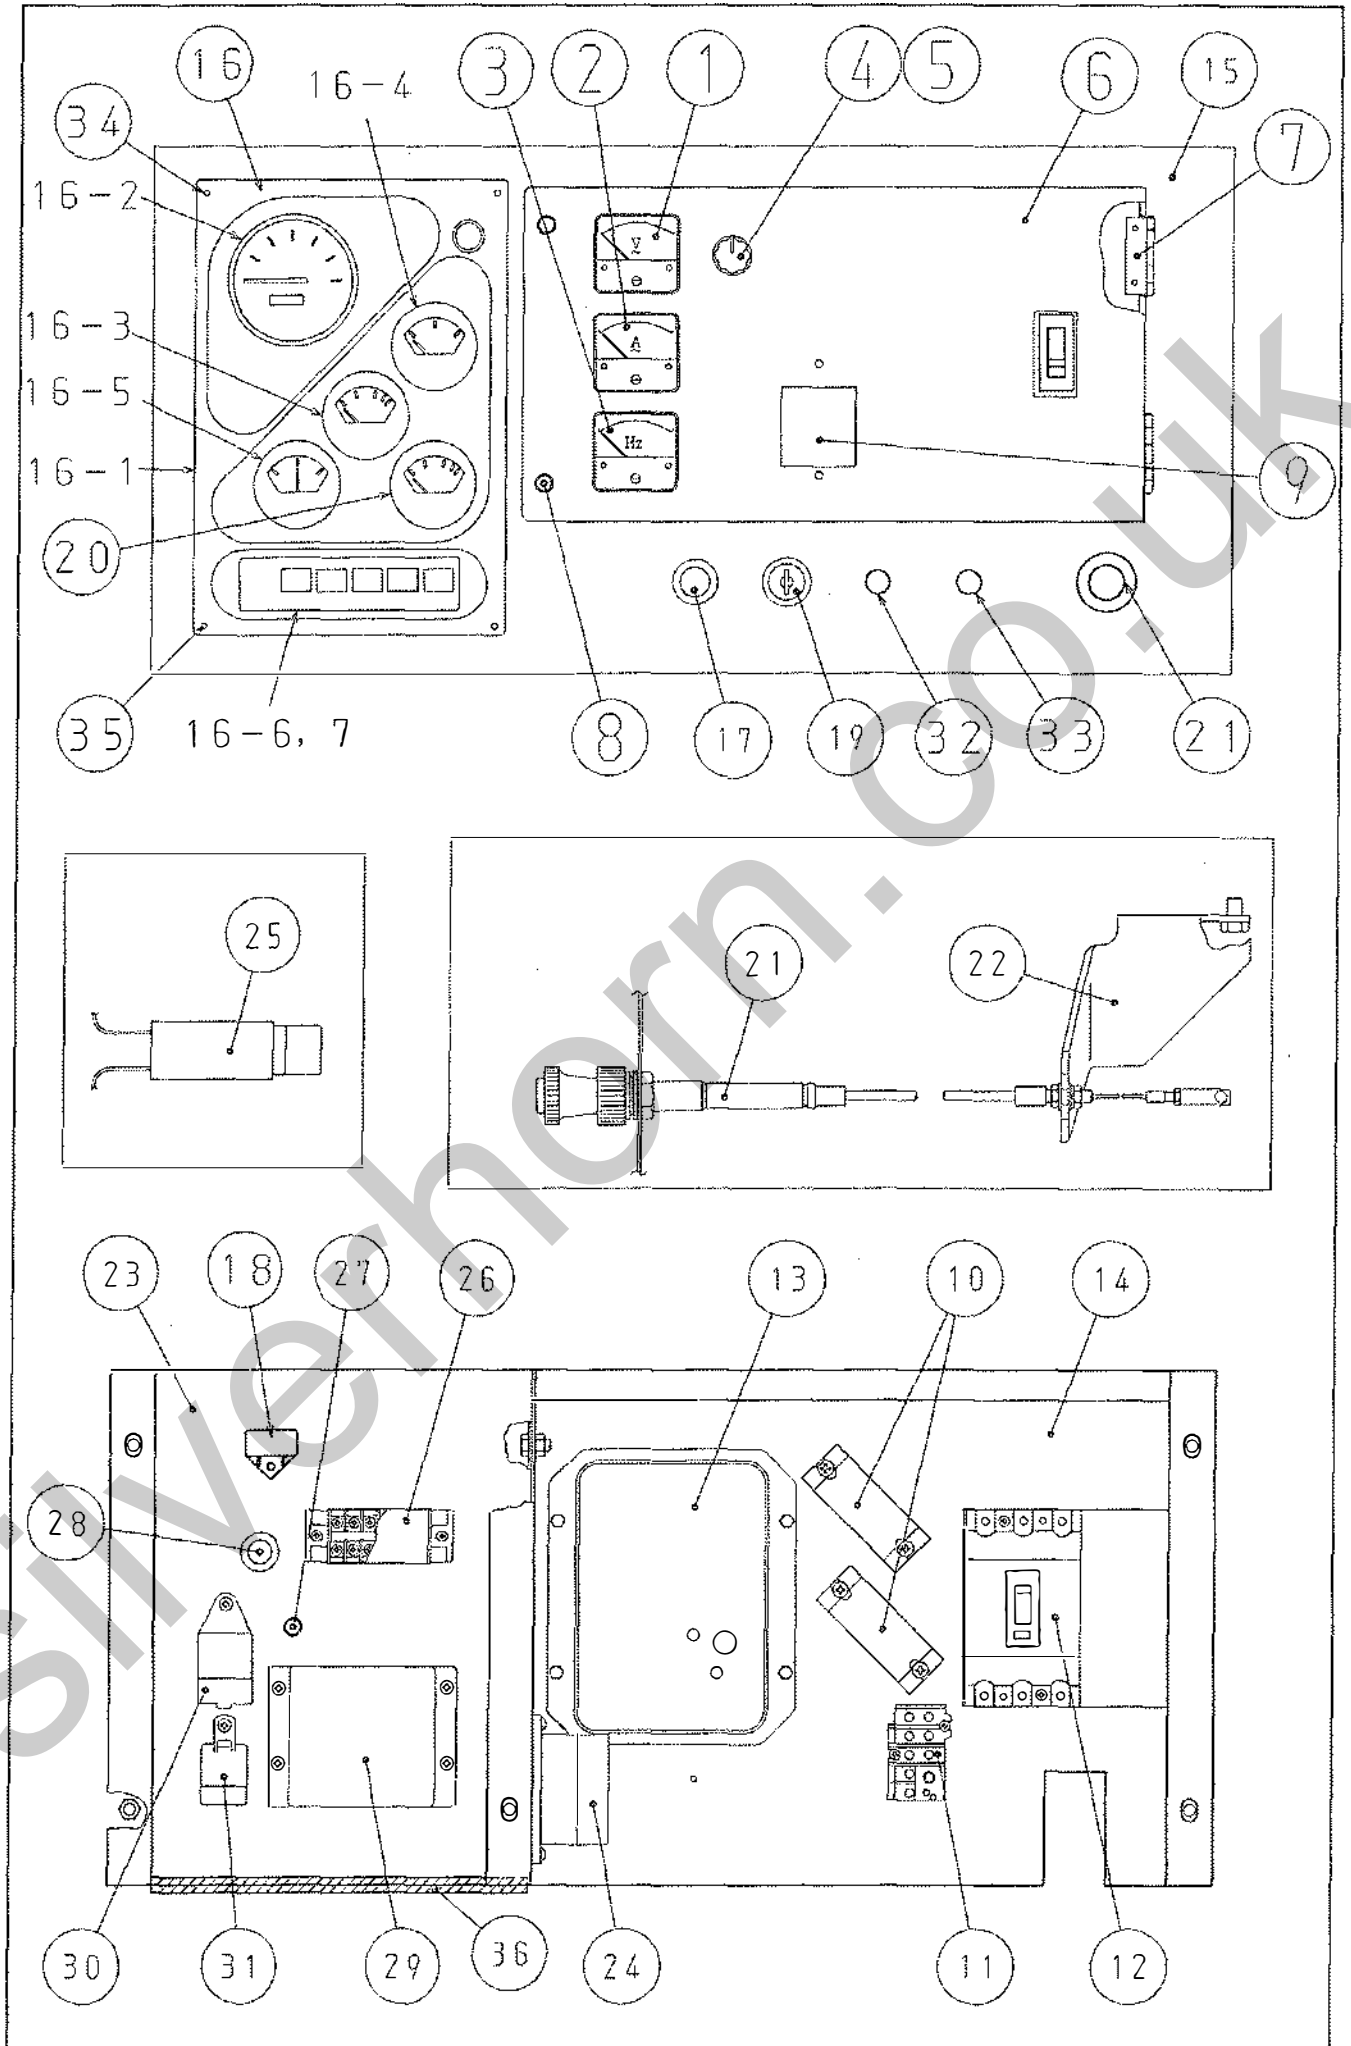 




Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	06018 00285	AC, Voltmeter	SCF 5 0~600V	1					
2	06018 05745	AC, Ammeter	ACF-5 0-75/5A	1					
3	06018 00408	Frequency Meter	FCF-5 45~65Hz 220V	1					
4	06018 40073	Voltage Regulator	RA20A 2SE 1028J 2W 1K Ω	1				VR	
5	06018 40121	Knob	25N	1					
6	M 13531 00003	Control Panel		1					
7	06050 10017	Hinge	B-1100-4	2					
	00271 03010	Machine Screw		8					
	02070 03000	Hex. Nut		4					
8	B 92211 00004	Set Screw		2					
	00802 00005	E Ring		2					
	00400 06000	Spring Washer		2					
	00412 06000	Plain Washer		2					
9	08418 05804	Cover		1					
	00271 04010	Machine Screw		2					
10	06018 01123	Current Transfomer	COG-3 150/5A	2				CT	
	00271 06016	Machine Screw		4					
11	06018 20891	Over Current Relay	TH-N20HZ 3.6A	1				OC	
	00271 04016	Machine Screw		2					
12	06018 06404	Circuit Breaker	EA53B 3P 50A SHTAC 200V	1				CB	~3799316
	06018 06460	Circuit Breaker	EA53C 3P 50A SHTAC 200V 3-2	1				CB	3799317~

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	00210 04055	Machine Screw		(2)					
13	06018 20625	Automatic Voltage Regulator	NTA-5A-2T	1				AVR	
	00271 05016	Machine Screw		4					
14	M 12150 00303	Control Box		1				~3799316	
	M 12150 00313	Control Box		1				3799317~	
	00169 08020	Hex. Head Bolt		4					
15	M 12250 00213	Operating Panel		1					
	00218 06015	Machine Screw		10					
16	06021 20559	Meter Panel Ass'y	257310-4781	1					
	06021 20700	Wiring Harness		(1)					
16-1	06021 29033	Meter Panel	057776-4490	(1)					
16-2	06021 20065	Tachometer	100569-3280	(1)					
	06021 20109	Cable, tachometer	KUBOTA 68731-53221	1					
16-3	06021 22035	Oil Pressure Gauge	100576-0301	(1)					
16-4	06021 23085	Water Temp Gauge	100575-2201	(1)					
16-5	06021 21060	Charging Ammeter	100573-0330	(1)					
16-6	06021 15030	Indicator Ass'y	055900-4020	(1)					
16-7	06021 29031	Machine Screw		(2)					
17	06018 50265	Grommet	C-30-SG-26A	1					
18	06022 01911	Unit, battery Sensor		1					
19	06021 00025	Starter Switch	KUBOTA 66446-55261	1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
20	06021 25056	Fuel Gauge	GP-0819	1					
21	83221 45103	Throttle Cable		1					
22	M 13562 00304	Throttle Cable Bracket		1					
	00124 10025	Hex. Head Bolt		2					
23	M 13536 00004	Set Panel (Electric Parts)		1					
	00169 08020	Hex. Head Bolt		4					
24	87018 99004	Fuse Box Ass'y	FB6PS	1					
	06018 02242	Fuse Box (with Harness)		(1)					
	06018 06642	Fuse	5A	(4)					
	06018 06643	Fuse	15A	(2)					
	06018 06644	Fuse	30A	(2)					
	00271 05020	Machine Screw		4					
	87006 25004	Decal:Fuse Box	S-4635	1					
25	06018 06640	Fuse	65A	1					
26	06018 15062	Terminal Board		1					
	00271 04020	Machine Screw		2					
	00271 05020	Machine Screw		4					
	00271 05016	Machine Screw		2					
27	00169 06020	Hex. Head Bolt		1					
	00405 06000	Toothed Washer		1					
28	06018 50239	Grommet	C-30-BW-14-2	1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
29	06022 00467	Emergency Unit	KUBOTA 17462-60601	1					
	00271 05020	Machine Screw		2					
30	06022 01273	Timer	KUBOTA 15694-65992	1					
	00271 05016	Machine Screw		1					
31	06022 02562	Relay	KUBOTA 66446-55261	1					
	00271 05016	Machine Screw		1					
32	06021 03092	Preheat Lamp		1					
	06018 10245	Bulb		(1)					
33	06021 03092	Charging Lamp		1					
	06018 10245	Bulb		(1)					
34	00218 06020	Machine Screw		2					
35	00218 06050	Machine Screw		2					
36	02269 00250	Seal Rubber		1					
37	06021 20109	Cable, tachometer	KUBOTA 56713-41412	1					

   Output Terminal Ass'y

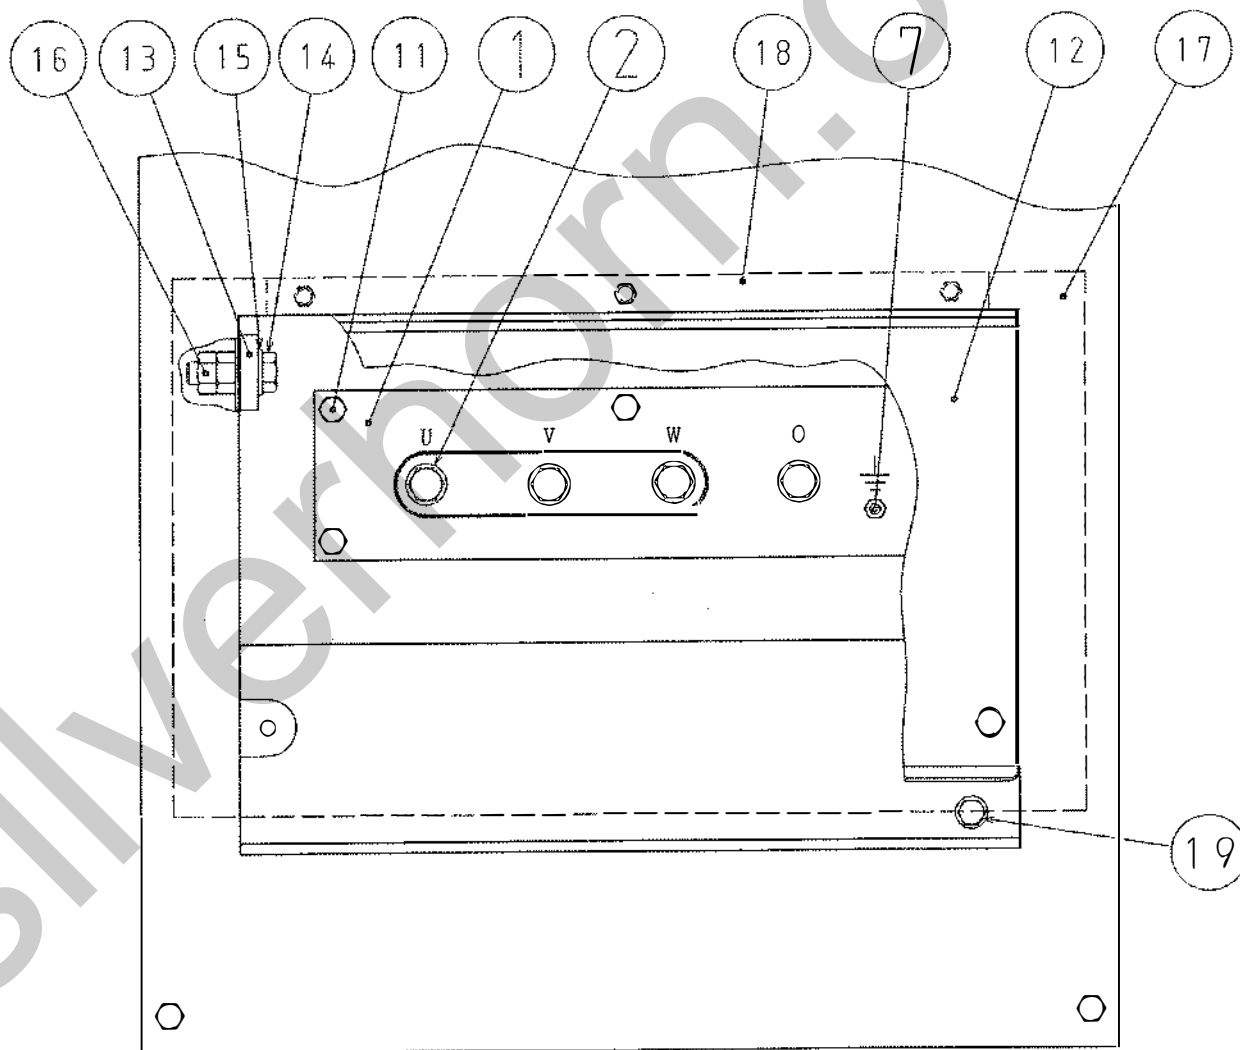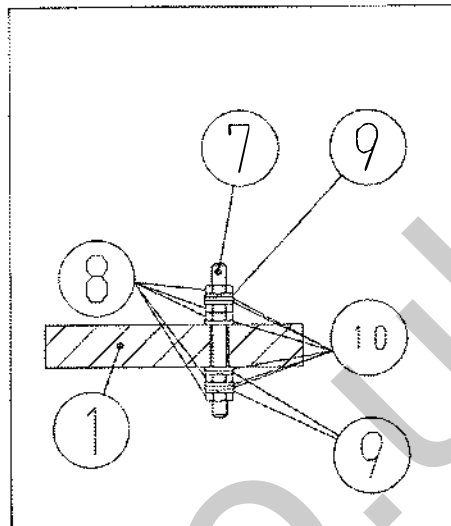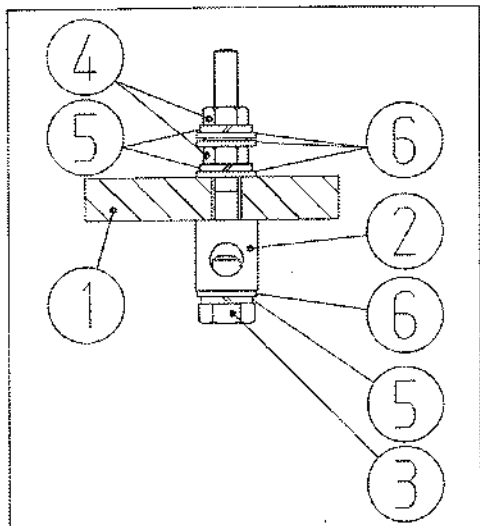


Key No.	Parts No.	Parts Name	Remarks	Q' ty				Symbol	Serial No.
				All	A	B	C		
1	80618 60103	3-Phase Output Terminal Panel		1					
2	08403 12804	Output Terminal Bolt		4					
3	08018 31804	Tie Bolt		4					
4	00393 10000	Hex.Nut		8					
5	00400 10000	Spring Washer		12					
6	00414 10000	Plain Washer		16					
7	08018 32304	Terminal Screw		1					
8	00393 06000	Hex. Nut		5					
9	00400 06000	Spring Washer		3					
10	00414 06000	Plain Washer		6					
11	00169 08030	Hex. Head Bolt		5					
12	M 12381 00303	Output Terminal Cover		1					
13	M 93102 00004	Door Stay Rubber		2					
14	00101 12045	Hex. Head Bolt		2					
15	00412 12000	Plain Washer		2					
16	00300 12000	Hex.Nut		2					
17	M 14856 00004	Isolation Sheet		1					
	06050 11410	Brind Rivets		4					
18	M 14557 00004	Sheet Clamper		1					
	02070 06000	Hex.Nut		3					
19	00171 08025	Hex. Head Bolt		1					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	00405 08000	Toothed Washer		1					

Silverhorn.CO.UK

 Engine and Radiator Ass'y

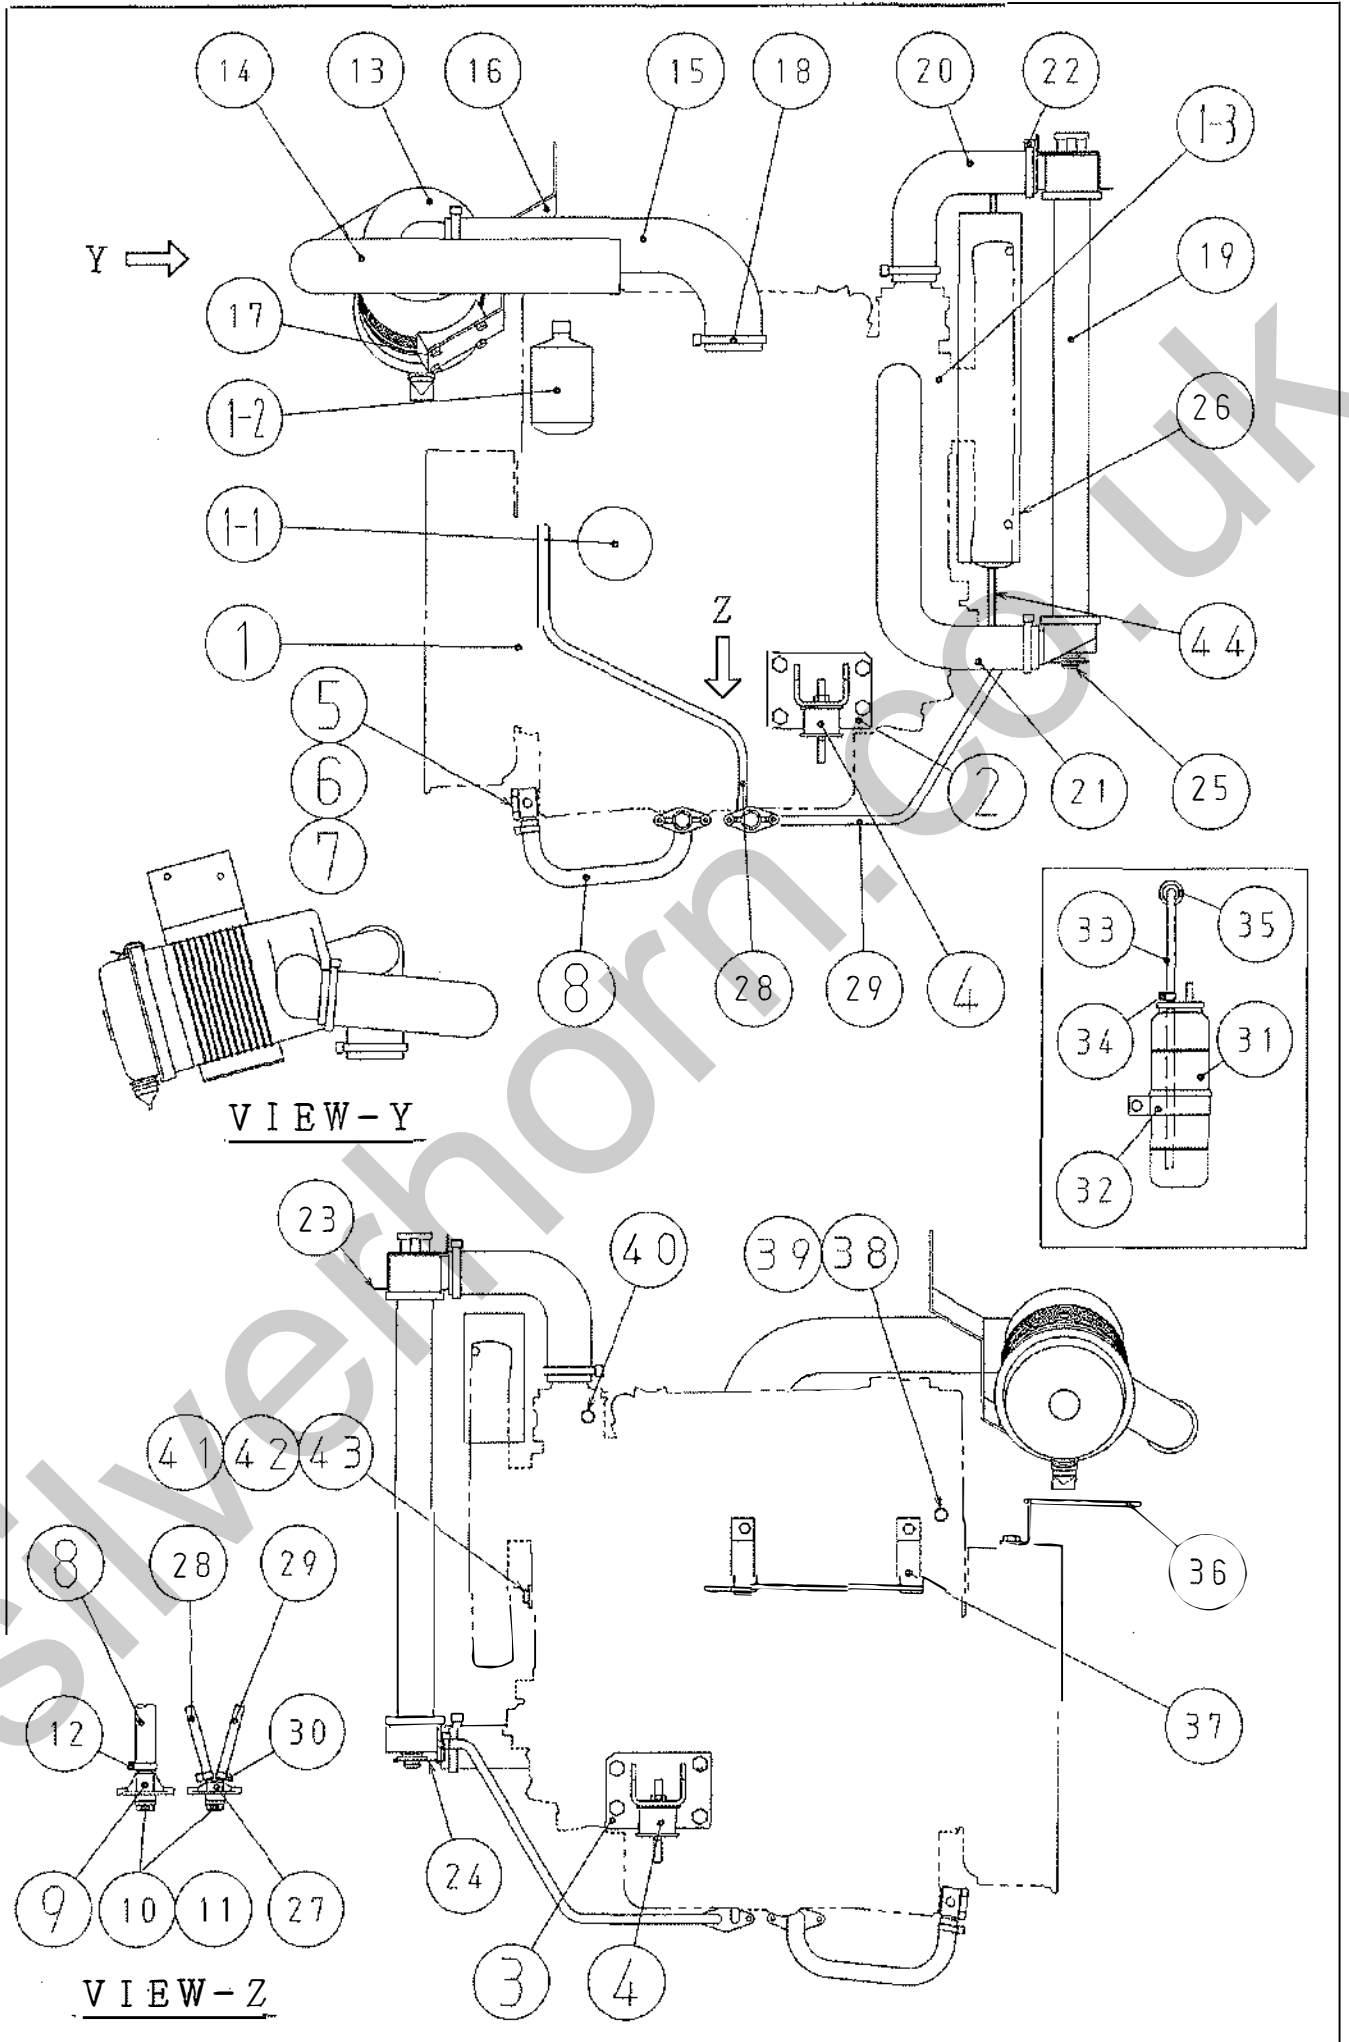

Engine and Radiator Ass'y

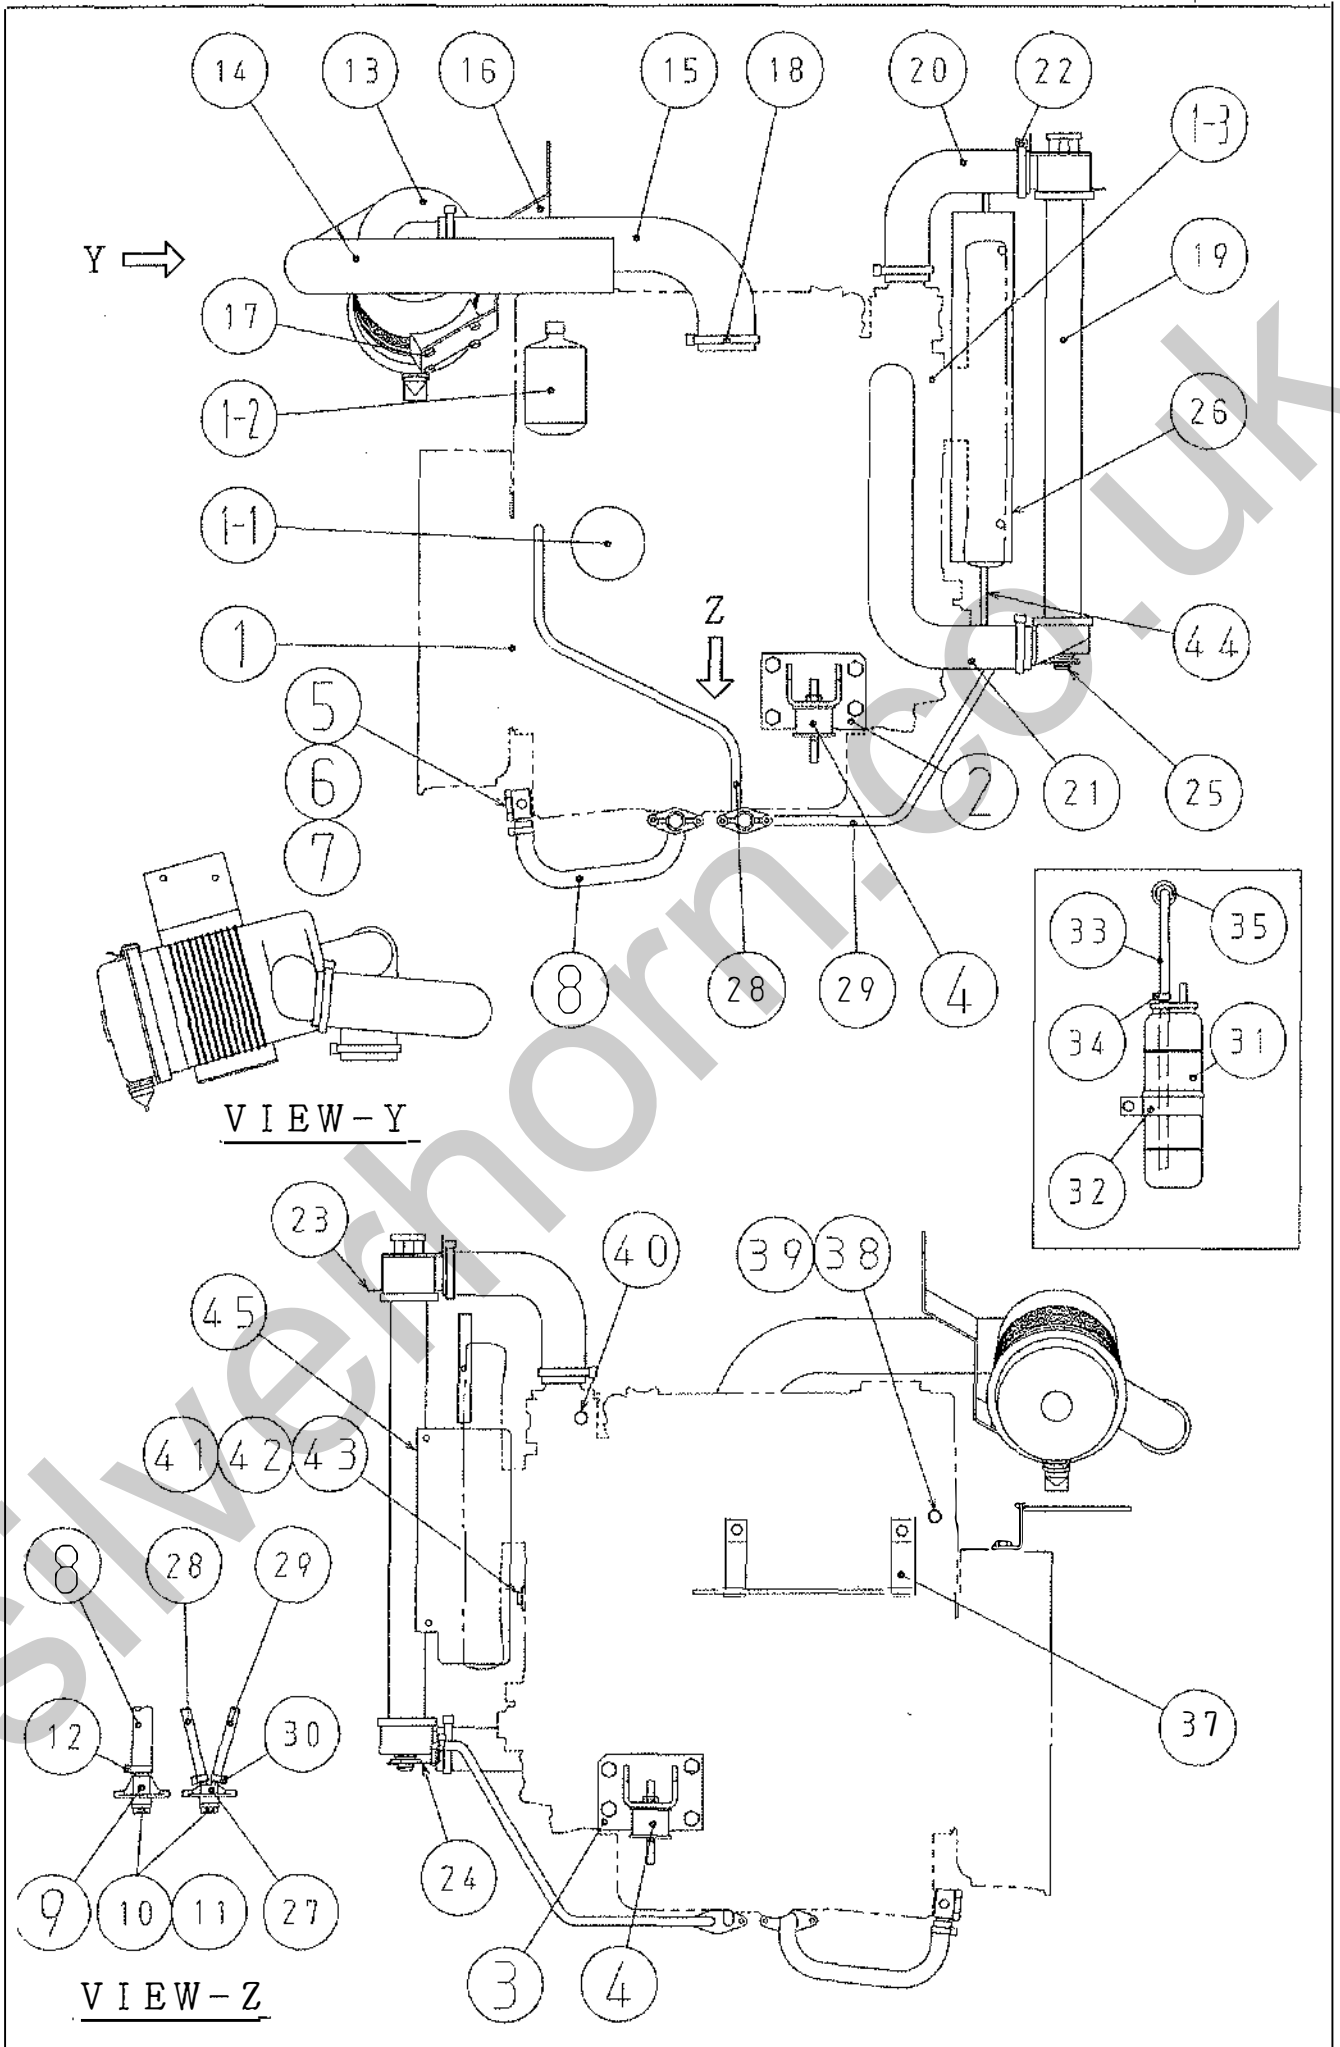 

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	B 29252 00104	Engine	KUBOTA V3300	1					
1-1	06020 41272	Cartridge, oil filter	KUBOTA 10020-32430	(1)					
1-2	06020 42552	Cartridge, fuel filter	KUBOTA 16631-43560	(1)					
1-3	06020 11440	Fan belt	KUBOTA 16517-97011	(1)					
2	M 13052 00004	Engine Foot (R)		1					
3	M 13052 00104	Engine Foot (L)		1					
	00124 12025	Hex. Head Bolt		8					
4	77254 19004	Rubber Suspension		2					
	02070 10000	Hex. Nut		2					
5	08050 10004	Oil Drain Joint (A)		1					
6	08420 00204	Oil Drain Joint Bolt		1					
7	06020 21194	Seal Washer	SW-24	1					
8	02657 00420	Oil Drain Hose		1					
9	15020 25103	Oil Drain Joint (B)		1					
	00169 06020	Hex. Head Bolt		2					
10	08020 11104	Drain Bolt		1					
11	01500 00018	O-Ring		1					
12	06055 15132	Hose Band	HS-8	2					
13	06020 46207	Air Cleaner	113A8-0000A1	1					
	06020 46336	Element, air cleaner	11307-3000	(1)					
	06200 40655	Dust Sensor	11304-6000	(1)					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
14	M 13751 00003	Air Cleaner Hose(In)		1					
15	M 13751 00103	Air Cleaner Hose(Out)		1					
16	M 13752 00104	Air Cleaner Bracket		1					
	00169 08020	Hex. Head Bolt		2					
17	00171 08016	Hex. Head Bolt		4					
18	06055 15002	Hose Band	$\phi 75$	3					
19	06020 12773	Radiator	2951-298-0000	1					
20	M 13125 00003	Radiator Hose(Upper)		1					
21	M 13125 00103	Radiator Hose(Lower)		1					
22	06055 15139	Hose Band	HS-32	4					
23	M 13122 00004	Radiator Bracket(Upper)		1					
24	M 13122 00104	Radiator Bracket(Lower)		1					
25	B 13126 00004	Mount Rubber		2					
	00169 08020	Hex. Head Bolt		3					
26	M 13123 00003	Fan Guard		1					
	00169 08020	Hex. Head Bolt		3					
27	16220 14103	Drain Joint	ZDC-12	1					
	00169 06020	Hex. Head Bolt		2					
28	01999 00700	Drain Hose		1					
29	01999 01000	Drain Hose		1					
30	06055 15094	Clip	$\phi 12$	4					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
31	08020 81304	Reserve Tank Ass'y		1					
	08020 81104	Reserve Tank Cap		(1)					
	08020 81403	Reserve Tank		(1)					
	01991 00215	Hose		(1)					
32	M 13181 00004	Reserve Tank Bracket		1					
	00169 08020	Hex. Head Bolt		1					
33	01999 00550	Over Flow Hose		1					
34	06055 15094	Clip	φ 12	2					
35	06018 50239	Grommet	C-30-BW-14-2	1					
36	M 13593 00004	Harness Clamper		1					
	00124 12025	Hex. Head Bolt		2					
37	M 13593 00104	Harness Clamper (Left Side)		1					
	00123 08016	Hex. Head Bolt		2					
38	06021 22250	Unit, oil Pressure	071600-0750	1					
39	06021 22282	Adapter	KUBOTA 15628-36112	1					
40	06021 23250	Unit, Water temperature	071500-0331	1					
41	06021 20451	Unit, rotation	KUBOTA 17203-83301	1					
42	06023 20158	Gasket	KUBOTA 16264-88130	1					
43	06021 20452	Bolt	KUBOTA 1C011-91020	2					
44	M 13113 00004	Fan Shroud		1					
	00169 08020	Hex. Head Bolt		4					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
45	B 23112 00004	Fan Guard		1					3799317~
	00169 08020	Hex. Head Bolt		2					

Silverhorn.CO.UK

 Battery and Muffler Ass'y

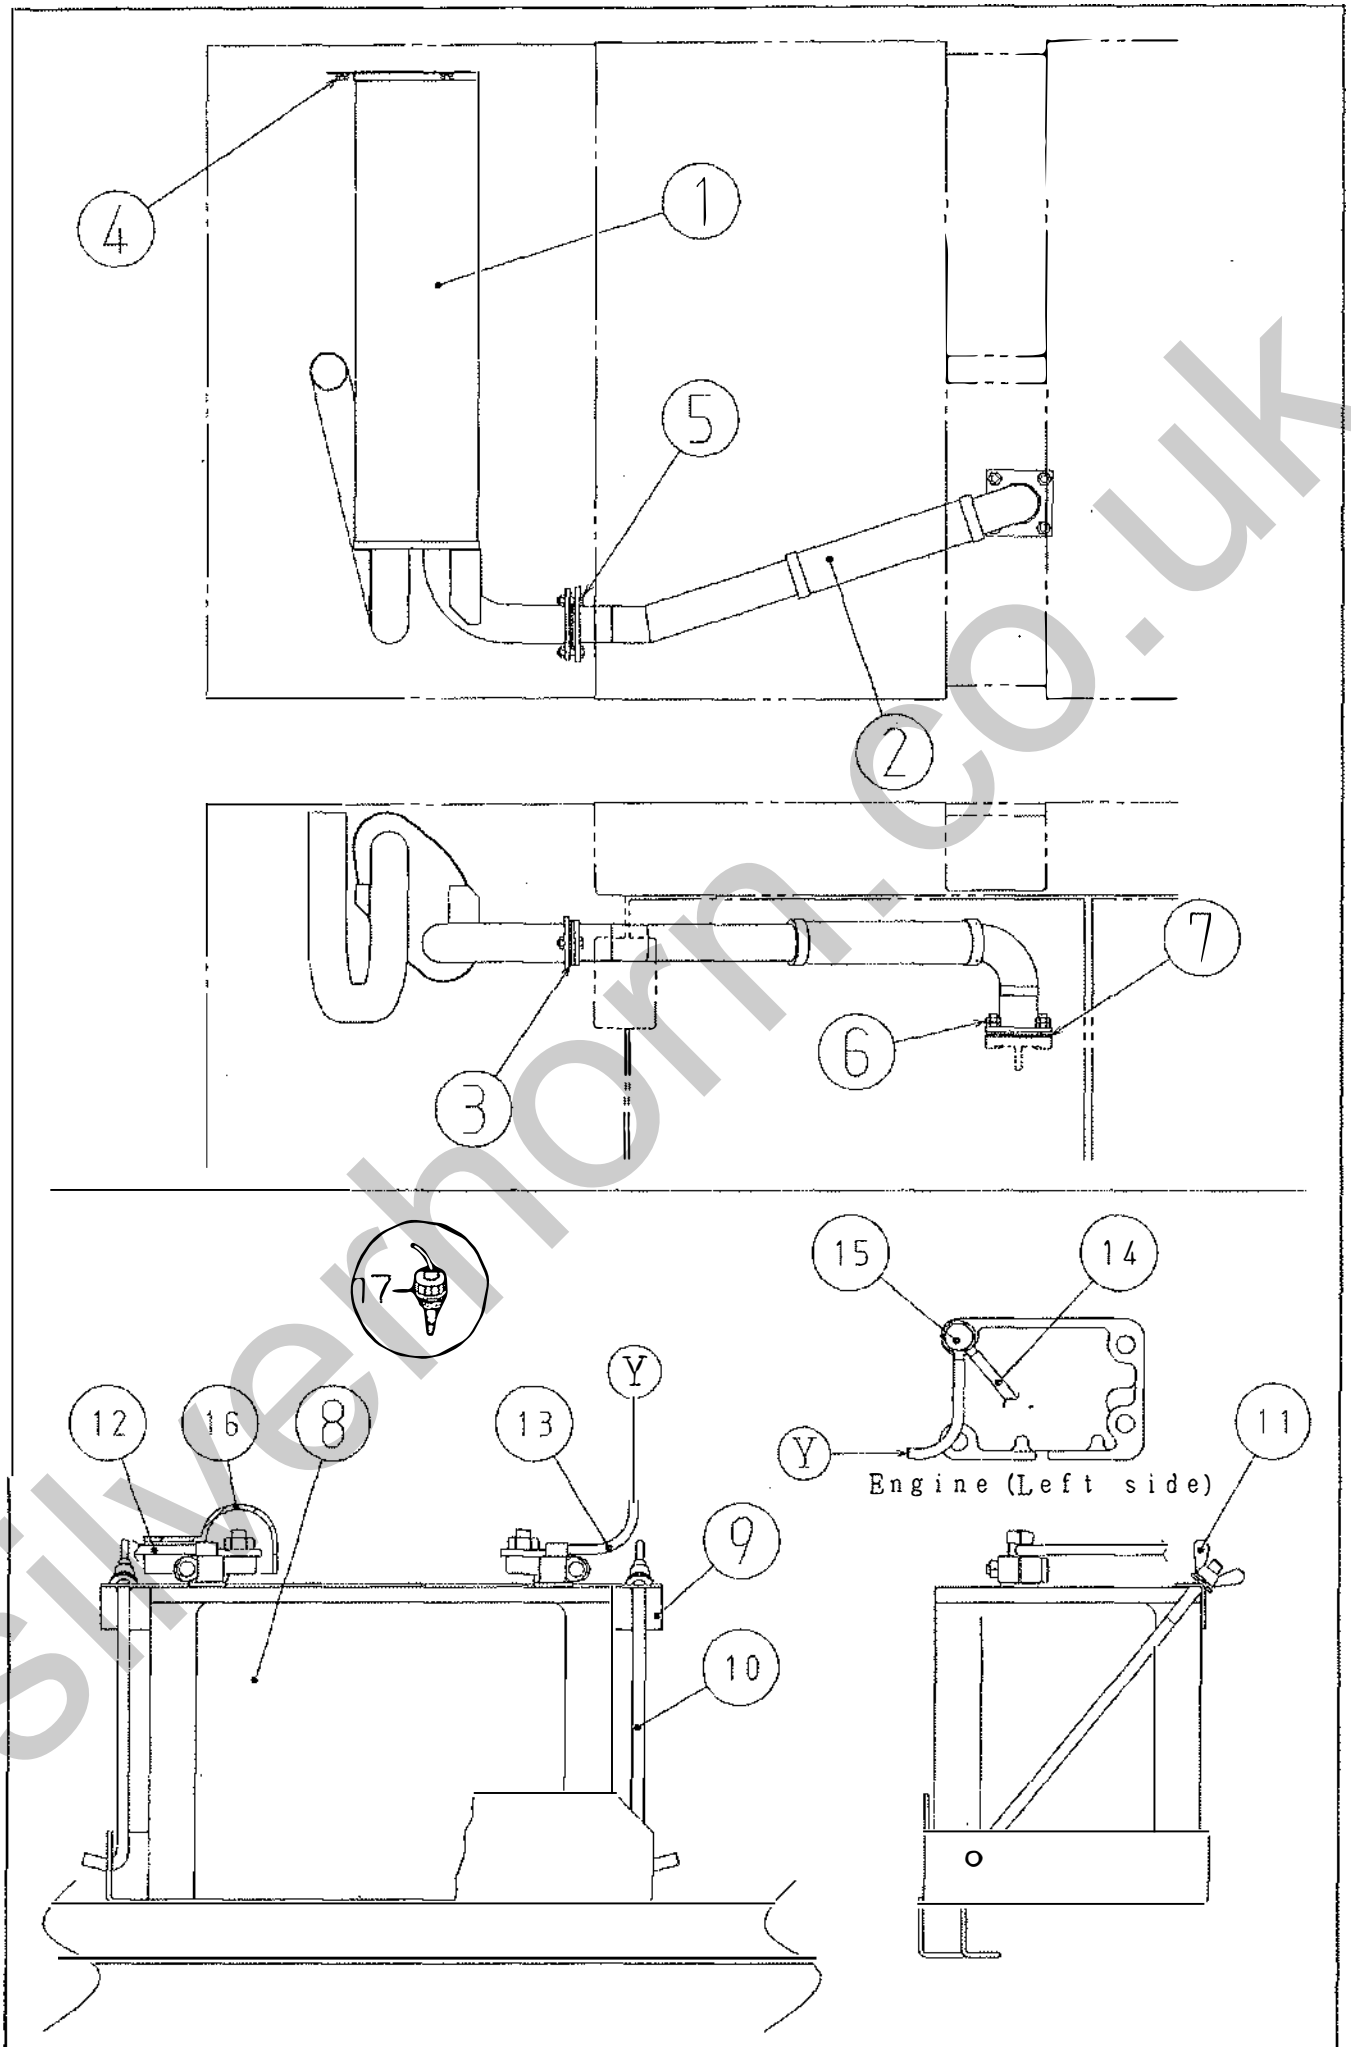


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	M 13321 00003	Muffler (A)		1					
2	M 13350 00003	Exhaust Pipe		1					
3	15023 36004	Gasket		1					
4	00169 08020	Hex.Head Bolt		4					
5	00169 08035	Hex. Head Bolt		2					
6	00304 10000	Hex. Nut		8					
7	06023 20157	Gasket	KUBOTA 19258-12231	1					
8	01683 09531	Battery	95D31R	1					
9	M 14856 00104	Battery Band		1					
10	M 14856 00204	Battery Bolt		2					
11	00378 08000	Wing Nut		2					
	00400 08000	Spring Washer		2					
	00412 08000	Plain Washer		2					
12	M 13482 00004	Battery Cable(+)		1					
13	M 13482 00104	Battery Cable(-)		1					
14	M 13480 00004	Earth Cable		1					
15	00107 12025	Hex. Head Bolt		1					
	00400 12000	Spring Washer		1					
	00412 12000	Plain Washer		1					
	00405 12000	Toothed Washer		1					
16	08450 40414	Terminal Cap (Red)		1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
17	06022 20207	Battery Sensor	AISP-54B	1					

Silverhorn.CO.UK

 
Fuel Tank Ass'y

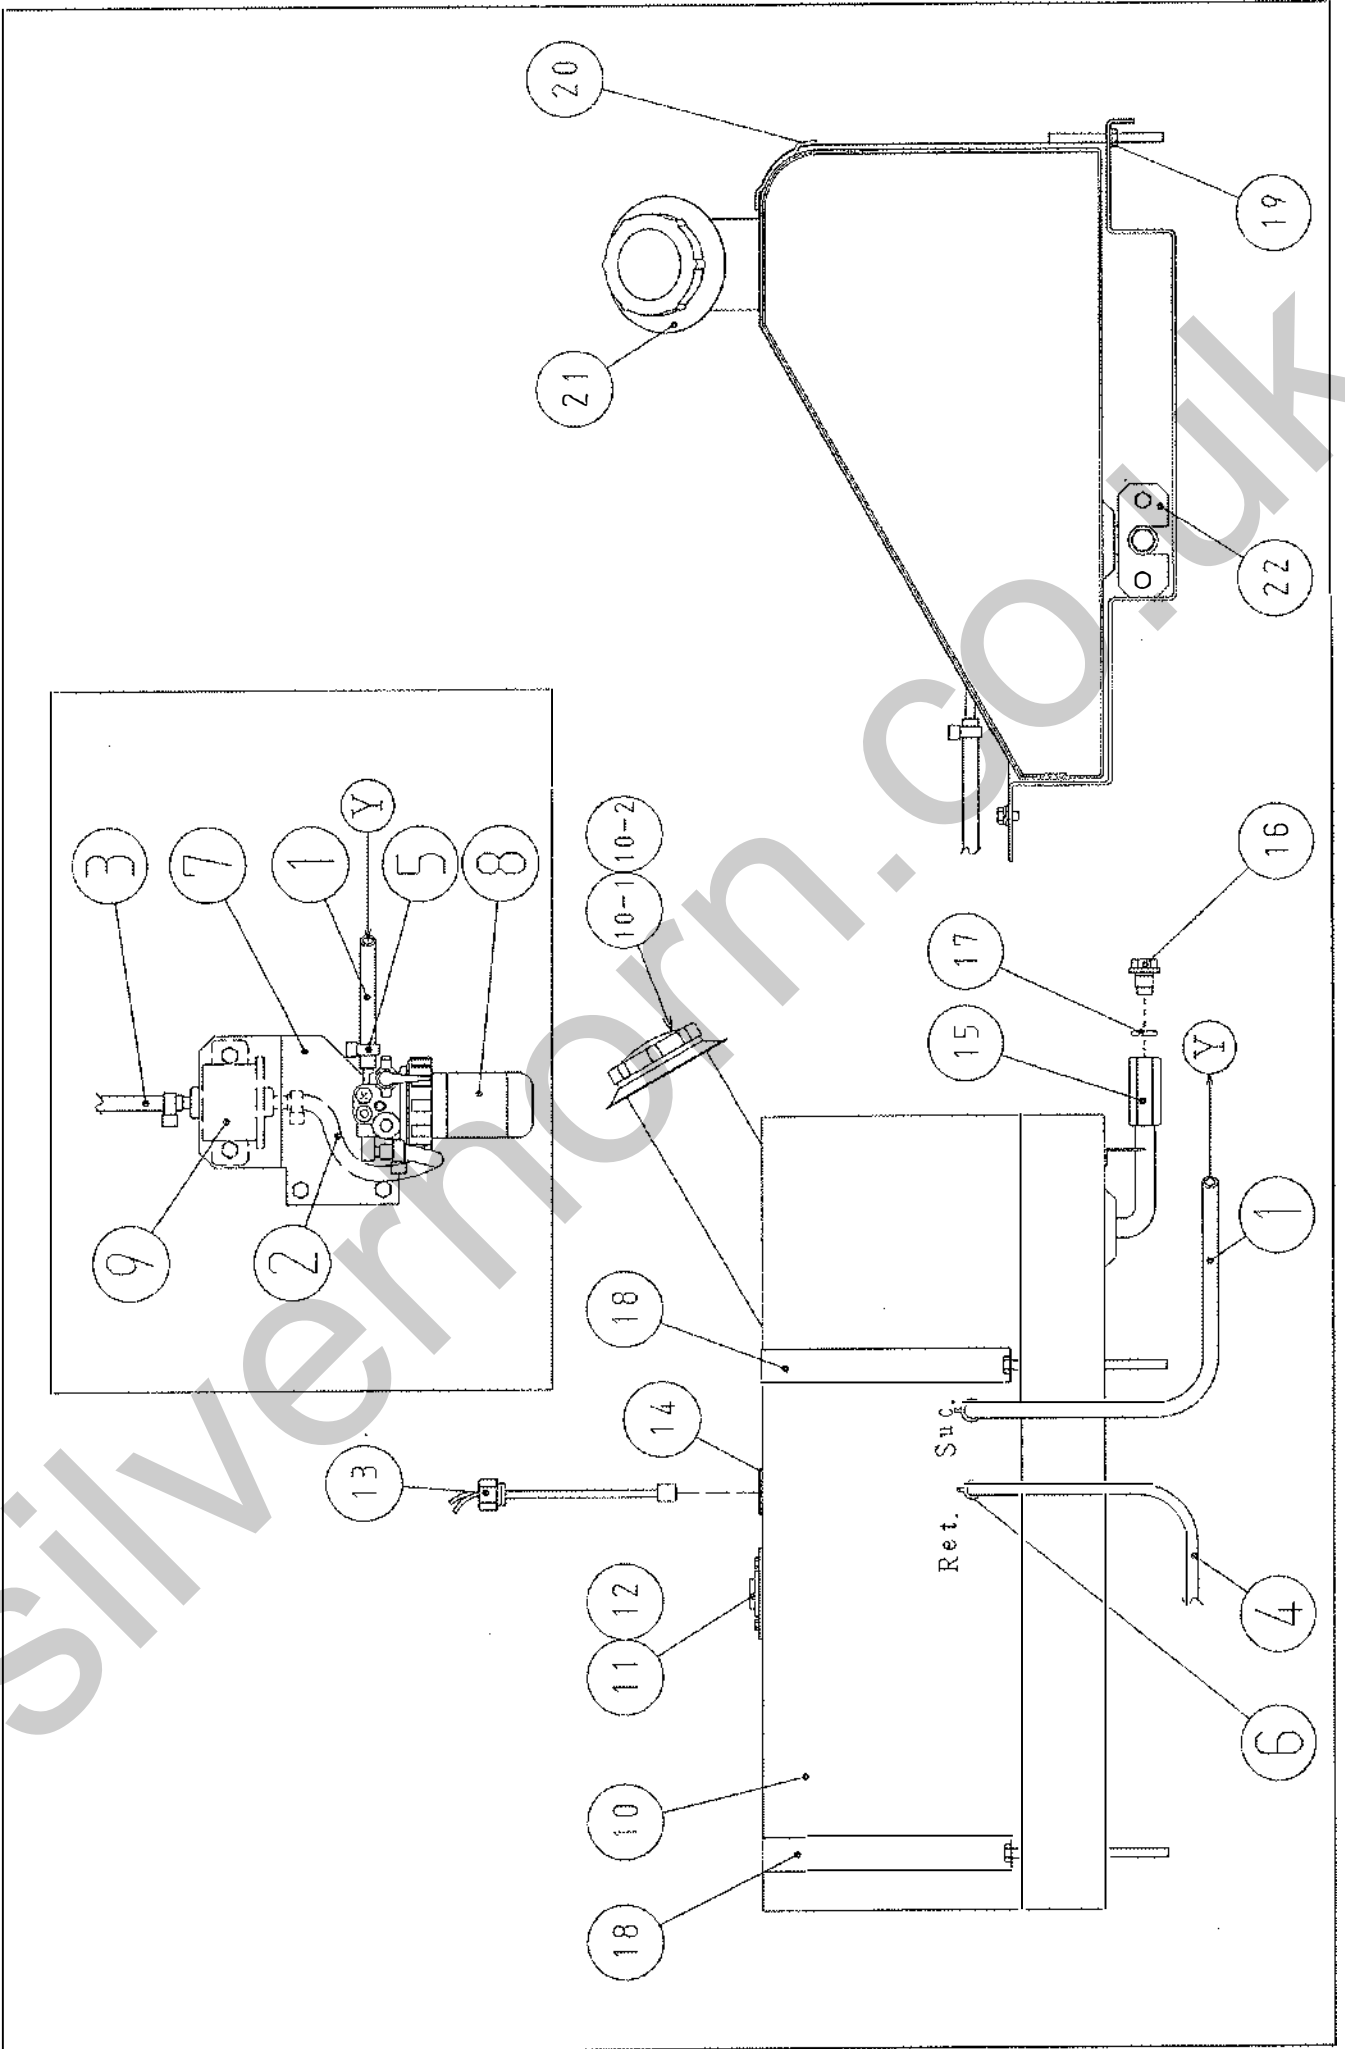

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	01999 00850	Suction Hose(A)		1					
2	01999 00420	Suction Hose(B)		1					
3	01999 00260	Suction Hose(C)		1					
4	01997 01100	Return Hose		1					
5	06055 15094	Hose Cl ip		6					
6	06055 15103	Hose Cl ip		2					
7	M 14855 00004	Pump Bracket		1					
	00169 06020	Hex. Head Bolt		4					
8	06020 42255	Water Separator	KUBOTA RB101-51261	1					
	06020 42750	Element, Water Separator	KUBOTA RB101-51281	(1)					
	00169 08065	Hex. Head Bolt		1					
9	06020 23154	Feed Pump	KUBOTA RC601-51351	1					
	00169 06016	Hex. Head Bolt		2					
10	B 23640 00403	Fuel Tank		1					
10-1		Cap, fuel tank		(1)					
10-2		Strainer		(1)					
11	B 49253 00004	Fuel Sender	F-261F	1					
12	E 19243 00184	Gasket	#4565	1					
	00229 05015	Machine Screw		5					
13	06055 03022	Fuel Sensor	FF-2	1					~3797671
	06055 03001	Fuel Sensor	FF-3	1					3797672~

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
14	08021 20604	Gasket		1					
15	08450 47504	Drain Joint		1					
16	08020 11104	Plug		1					
17	01500 00018	O-Ring		1					
18	M 13652 00004	Fuel Tank Band		2					
	00169 08020	Hex. Head Bolt		2					
19	02073 08000	Hex. Nut		2					
20	08050 03414	Pad, tank band		4					
21	B 08450 39604	Rubber Seal		1					
22	B 33677 00304	Lock Plate		1					
	00169 06020	Hex. Head Bolt		2				~3799316	
	00169 08020	Hex. Head Bolt		2				3799317~	

 Bonnet Ass'y (Part 1)

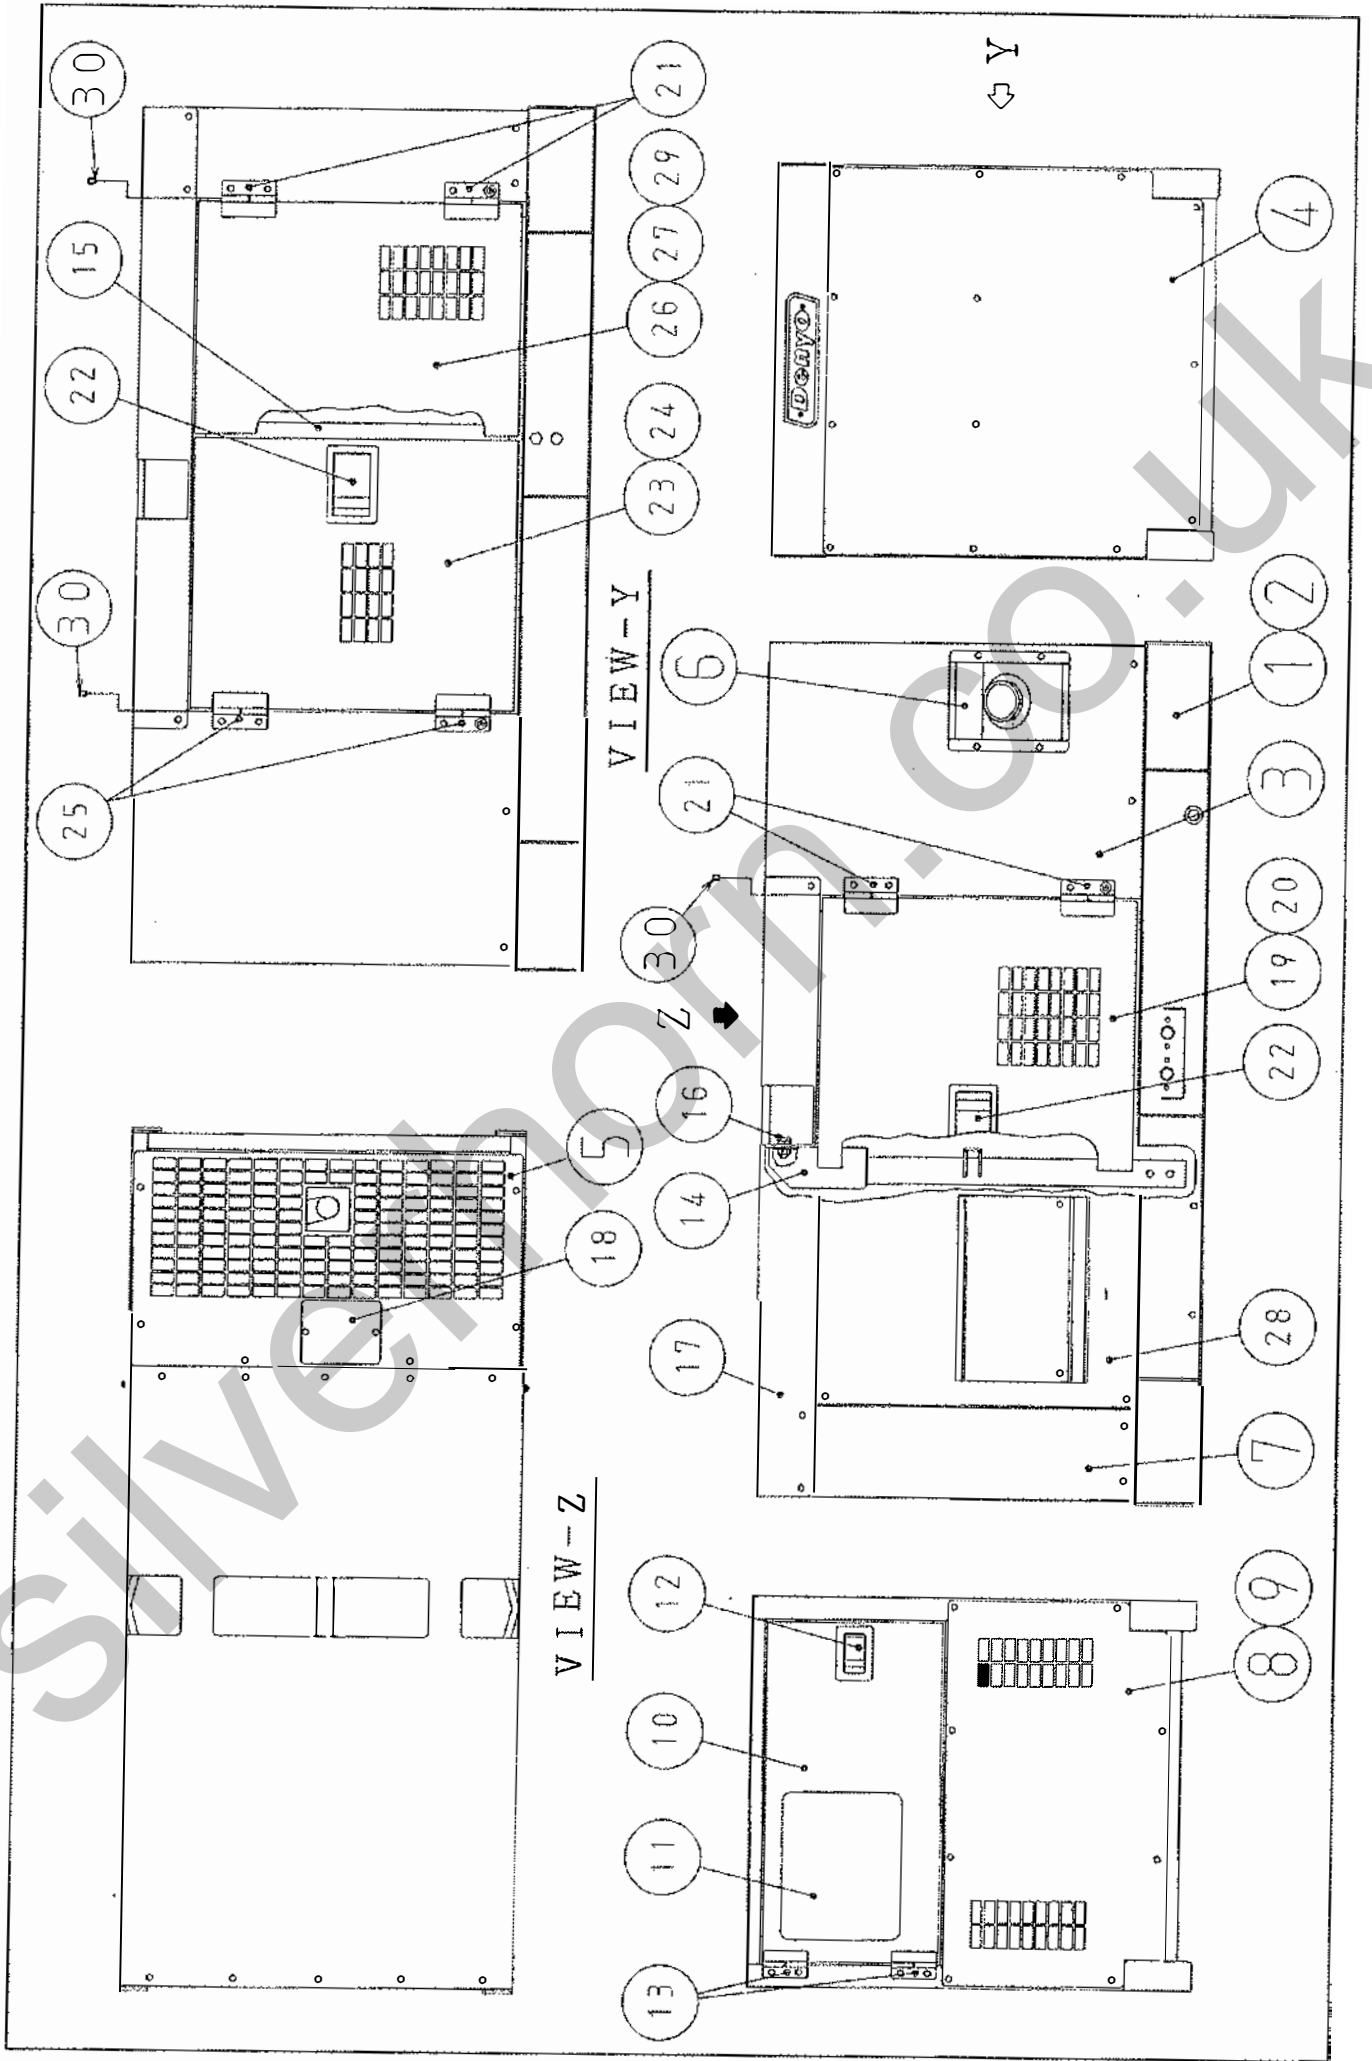


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	M 14150 00402	Base		1					
2	M 14151 00104	Base Panel		1					
	00169 08020	Hex. Head Bolt		8					
3	M 14250 00112	Front Frame		1				~3799316	
	B 24240 01102	Front Frame		1				3799317~	
	M 14951 00203	Lining		1					
	00169 08020	Hex. Head Bolt		4					
4	M 14252 00504	Cover, front frame		1					
	M 14951 00304	Lining		1					
	00169 08020	Hex. Head Bolt		13					
5	M 14252 00603	Front Frame Over Cover		1					
	00169 08020	Hex. Head Bolt		6					
6	08450 39703	Filler Bracket		1					
	00169 08020	Hex. Head Bolt		4					
7	M 14450 00602	Rear Frame		1				~3797671	
	B 24440 00402	Rear Frame		1				3797672~	
	00169 08020	Hex. Head Bolt		4					
8	M 14453 00003	Rear Cover		1				~3799316	
	B 24443 00803	Rear Cover		1				3799317~	
	00169 08020	Hex. Head Bolt		8					
9	M 14458 00003	Rear Cover Duct		1				~3799316	


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	B 24448 00003	Rear Cover Duct		1					3799317~
	M 14953 00204	Lining		1					
	02070 06000	Hex. Nut		8					
10	M 14452 00203	Rear Door		1					
	00169 06020	Hex. Head Bolt		4					
11	M 14456 00004	Window Plate		1					
	02073 06000	Hex. Nut		8					
	00412 06000	Plain Washer		8					
12	06050 10230	Door Handle Ass'y		1					
	00218 06015	Machine Screw		4					
	06018 50530	Cylinder Lock		1					
	06018 50531	Key		1					
13	08050 19004	Hinge (Male (L))		2					
	D 91160 00004	Washer, hinge		2					
	00169 06020	Hex. Head Bolt		4					
14	M 14353 00203	Center Frame (R)		1					~3797671
	B 24343 00503	Hanger		1					3797672~
15	M 14353 00303	Center Frame (L)		1					~3797671
	B 24343 00603	Hanger		1					3797672~
16	00101 16045	Hex. Head Bolt		8					
	00400 16000	Spring Washer		8					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	00412 16000	Plain Washer		8					
17	M 14650 00202	Roof Panel		1				~3799316	
	B 24640 00202	Roof Panel		1				3799317~	
	M 14955 00104	Lining		1					
	00169 08020	Hex. Head Bolt		16					
18	84520 23004	Radiator Cap Cover		1					
	00169 08020	Hex. Head Bolt		2					
19	M 14550 00403	Front Side Door (R)		1					
	M 14954 00304	Lining		1					
20	M 14553 00104	Front Duct (R)		1					
	02070 06000	Hex. Nut		7					
21	08450 47204	Hinge(Male (R))		1					
	08450 45004	Washer, hinge		1					
	00169 08020	Hex. Head Bolt		3					
	00210 08025	Machine Screw		1					
22	06050 10225	Door Handle Ass'y		2					
	00218 06015	Machine Screw		4					
	06018 50530	Cylinder Lock		1					
	06018 50531	Key		1					
23	M 14550 00503	Front Side Door (L)		1					
	M 14954 00404	Lining		1					


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
24	M 14553 00204	Front Duct (L)		1					
	02070 06000	Hex. Nut		5					
25	08450 47104	Hinge(Male (L))		1					
	08450 45004	Washer, hinge		1					
	00169 08020	Hex. Head Bolt		3					
	00210 08025	Machine Screw		1					
26	M 14550 00603	Rear Side Door(L)		1					
	M 14954 00504	Lining		1					
27	M 14553 00304	Rear Duct(L)		1					
	02070 06000	Hex. Nut		10					
28	M 14552 00603	Rear Splasher Panel (R)		1					
	M 14954 00604	Lining		1					
	00169 08055	Hex. Head Bolt		4					
29	M 14557 00104	Door Pocket		1					
	00169 06015	Hex. Head Bolt		2					
30	08450 31504	Cap		6					

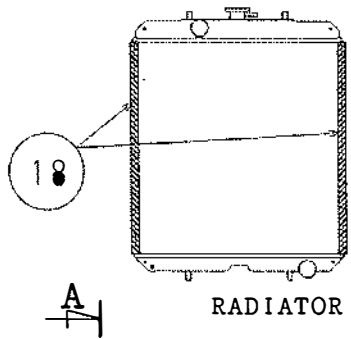 


RADIATOR

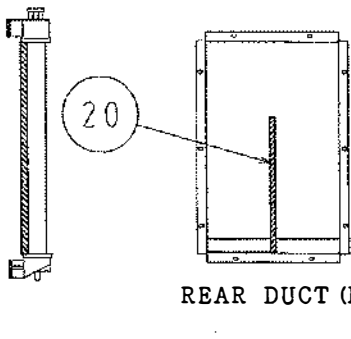 


REAR DUCT (L)

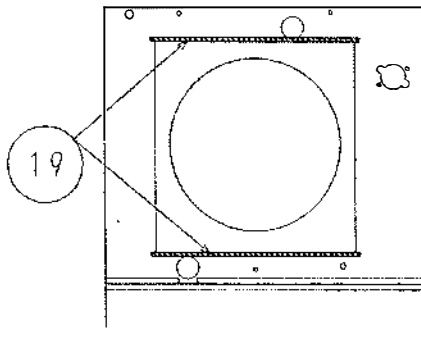 


'A-A' CROSS SECTION

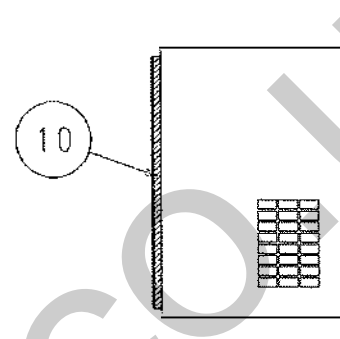 

REAR SIDE DOOR (L)

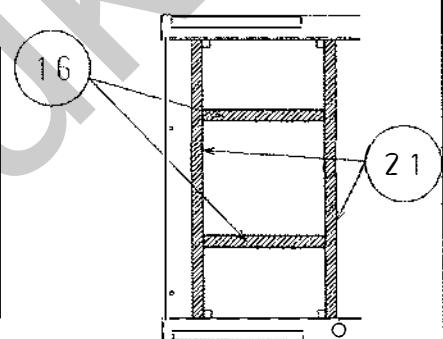 

BASE (FRONT SIDE)

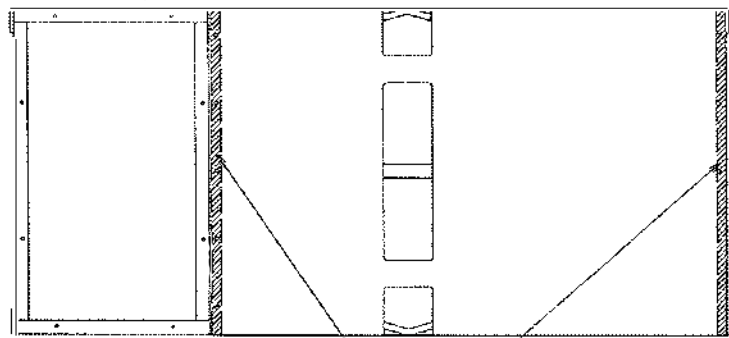 


'B-B' CROSS SECTION




'E-E' CROSS SECTION



 
'D-D' CROSS SECTION




DOOR HANDLE (SIDE DOOR)

 




DOOR HANDLE (REAR DOOR)

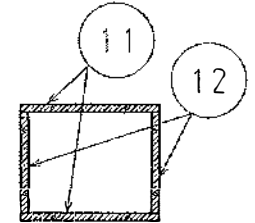 

WINDOW PLATE








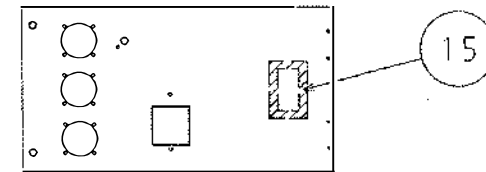 


OPERATING PANEL

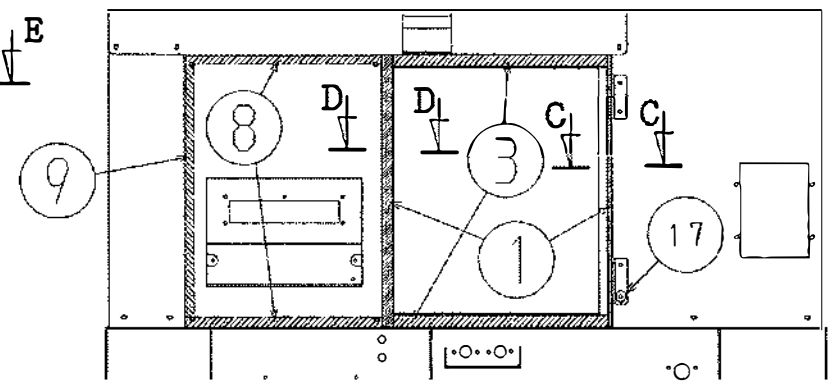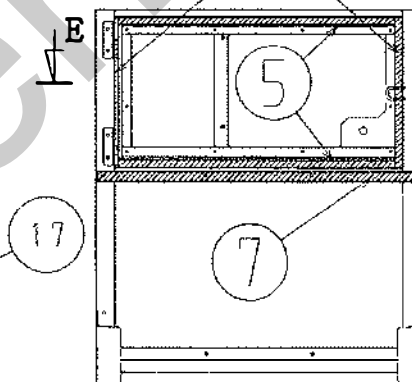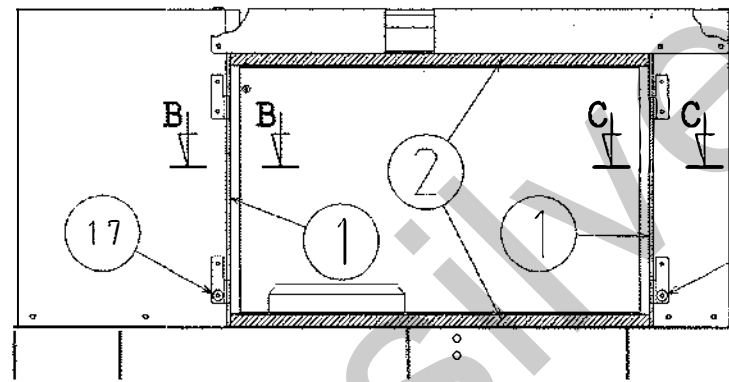   

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	02289 00720	Hollow Seal Rubber		4					
2	00289 01105	Hollow Seal Rubber		2					
3	02289 00565	Hollow Seal Rubber		2					
4	02288 00405	Hollow Seal Rubber		2					
5	02288 00730	Hollow Seal Rubber		2					
6	02292 00860	Poron L-32		2					
7	02292 00850	Poron L-32		1					
8	02292 00520	Poron L-32		2					
9	02292 00670	Poron L-32		1					
10	02227 00660	Seal Rubber		1					
11	02281 00365	Nor-Seal		2					
12	02281 00265	Nor-Seal		2					
13	C 93125 00004	Door Handle Seal Rubber		2					
14	D 93125 00104	Door Handle Seal Rubber		1					
15	B 04924 00104	Seal Rubber		1					
16	02223 00320	Reston		2					
17	06018 50097	Rubber Foot		3					
18	02203 00550	Trim Seal		2					
19	02209 00550	Seal Rubber		2					
20	02216 00350	Seal Rubber		1					
21	02223 00730	Reston		2					

        10-1

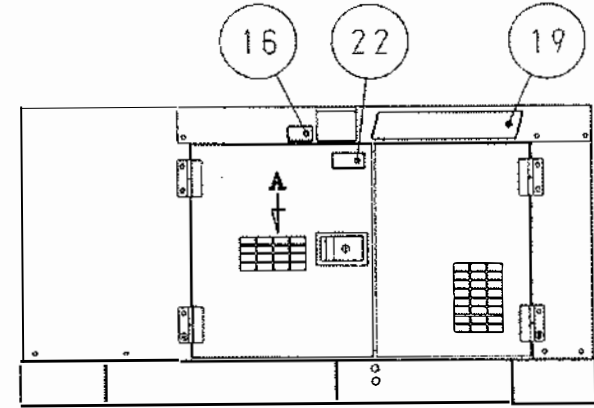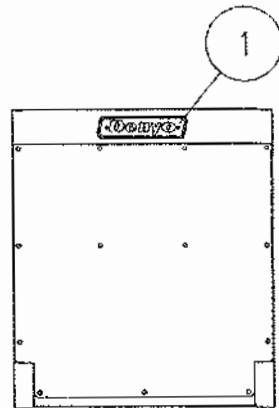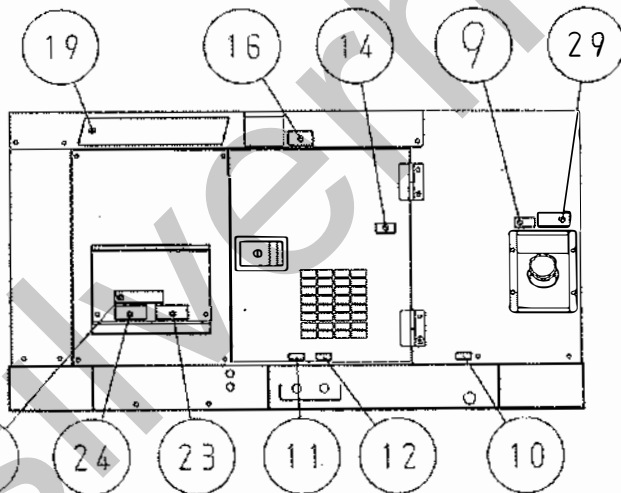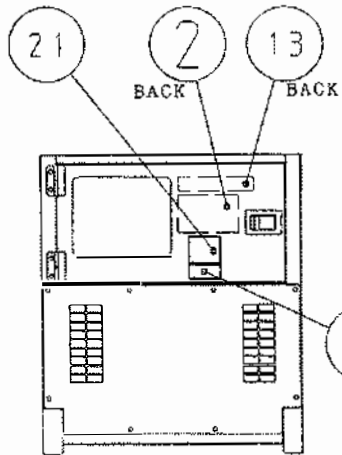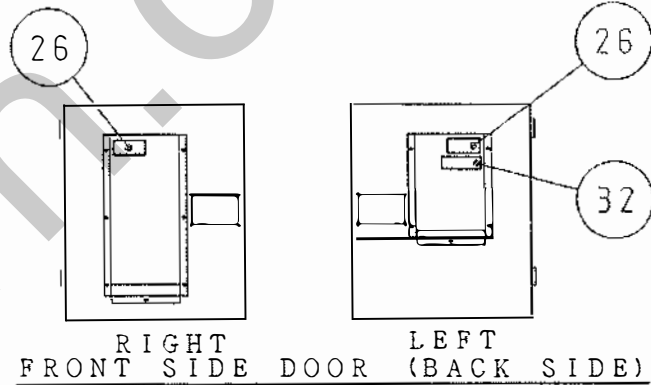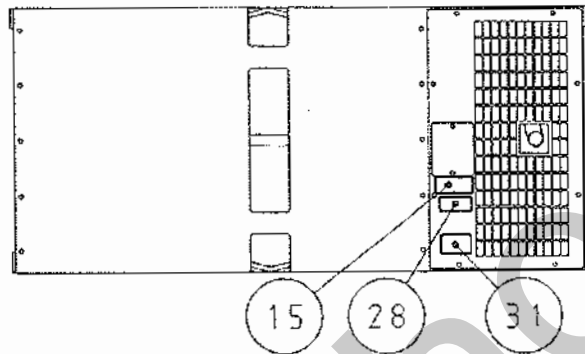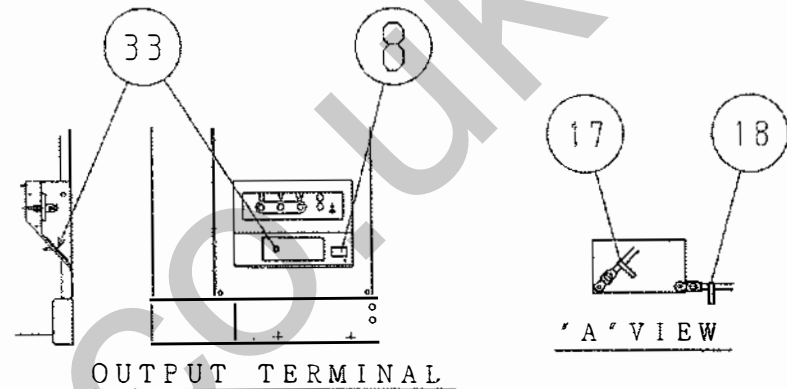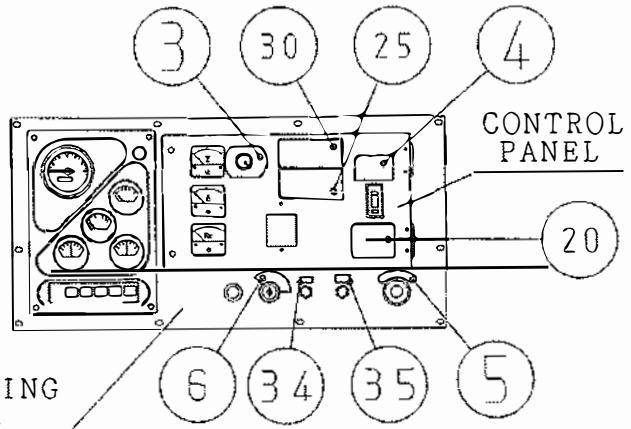

Name Plate Ass'y

Key No.	Parts No.	Parts Name	Remarks	Q'ty				記号	実施号機
				All	A	B	C	Symbol	Serial No.
1	08005 18103	Emblem		1					
2	83206 09102	Decal:Operating Insutructions	S-4459	1					
3	76106 23504	Decal:Voltage Regulator	S-3170	1					
4	08006 64504	Decal:Circuit Breaker	S-1307	1					
5	08006 81004	Decal:High-Low	S-873	1					
6	83206 15004	Decal:Starter Switch	S-4323	1					
7	08006 66304	Decal:3-Phase Output Terminal	S-936B	1					
8	08006 28504	Decal:Bonnet Earth	S-1123	1					
9	08006 80204	Decal:Diesel Fuel	S-892A	1					
10	78106 43504	Decal:Fuel Drain	S-2978	1					
11	08006 42504	Decal:Oil Drain	S-2673	1					
12	08006 41504	Decal:Water Drain	S-2672	1					
13	M 08006 13403	Decal:Daily Check Water and Oil	S-829A	1					
14	08006 89104	Decal:Cooling Water	S-891	1					
15	08006 89204	Decal:Water	S-961	1					
16	08006 28404	Decal:Support Hook	S-619A	2					
17	08006 89404	Decal:(+) Battery	S-2090	1					
18	08006 89504	Decal:(-) Battery	S-2091	1					
19	08406 43902	Model Name	S-3917	2					
20	M 08406 29904	Over Current Relay	S-3304	1					
21	B 95211 00404	Decal:General Cautions	B9211 0040	1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				記号	実施号機
				All	A	B	C	Symbol	Serial No.
22	B 95040 00304	Decal:Caution High Temp	B9040 0030	1					
23	B 95111 00404	Decal:Warning:Electrical Leakage	B9111 0040	1					
24	B 95311 00504	Decal:Warning:Output Voltage	B9311 0050	1					
25	B 95311 00604	Decal:Warning:Electrical Shock	B9311 0060	1					
26	B 95040 00404	Decal:Warning Rotating Part	B9040 0040	2					
27	M 95042 00004	Decal:Warning:Exhaust Gas	B9042 0000	1					
28	B 95041 00104	Decal:Warning:Radiator Cap	B9041 0010	1					
29	B 95045 00004	Decal:Warning:Fire Accident	M9045 0000	1					
30	B 95111 00304	Decal:Warning:Interior Wiring	B9111 0030	1					
31	08006 41004	Decal:Caution Against Exhaust Gas	S-842A	1					
32	87006 11524	Decal:Caution Oil Level Gauge	S-4926B	1					
33	M 08406 28804	Decal:Danger:High Voltage	S-3290	1					
34	08406 55204	Decal:Preheat Indicator	S-450B	1					
35	B 95010 00004	Decal:Insufficient Charge Alarm	B9010 0000	1					