

PARTS LIST No. D58742 00004

**PARTS LIST**  
**PARTS LIST**

MODEL **DCW-450S**

**Denyo Co., Ltd.**

SERIAL No. 3771823~

## HOW TO USE THE PARTS LIST

1. This parts list covers the parts for Engine Welder Model DCW-450S.
2. When placing orders, specify the following details;
  - 1) Model Number and Serial Number.
  - 2) Parts Number and Parts Name.
  - 3) Quantity required.
3. The parts listed with a serial number are new parts.  
Please place an order with us after confirmation of serial number for machine at your side.
4. The sequence of this parts list is by machine structure. Each group of parts has an illustration or the first page of the parts list. Parts can be identified on the parts list, using the key number on the illustration. These key number, on the illustration, are also shown on the left-hand column in the parts list.
5. The parts number are shown as 10 digits and alphabet. The parts number of the parts makers are shown in the remark column.
6. The parts marked with an asterisk and the parts not listed are not available as a single part, and orders must be placed for them as an assembly.
7. This parts list uses the following abbreviations and symbols:

All	:Some parts differ from unit to unit	p.	:Page
Ass'y	:Assembly	Re.	:Rear
Fr.	:Front	R. H.	:Right
L. H.	:Left	STD	:Standard
No.	:Number	→	:Indication of the page where the modified or additional parts are listed.
O. P.	:Optional Parts		


Each symbol 「A」 「B」 「C」 listed in a part of Q'ty shows the appropriate parts number for the unit you purchased. The meaning of the symbol 「A」 「B」 「C」 is listed on the first top place of each assembly group.



Please check the specification of the unit such as frequency, voltage, model No. etc. before placing orders.

8. Left (L. H.) and Right (R. H.) used in this parts list show the direction when you look at the engine from the generator side.
9. For the engine parts not listed in this parts list, refer to "KUBOTA Corporation V2203 Diesel Engine Parts Catalogue".


I N D E X

N a m e	Page
Engine Welder Set.....	1 - 1
Generator Ass'y.....	2 - 1
Control Panel Ass'y.....	3 - 1
Welder Unit Ass'y.....	4 - 1
Output Terminal Ass'y.....	5 - 1
Engine & Radiator Ass'y.....	6 - 1
Battery Ass'y.....	7 - 1
Muffler Ass'y.....	8 - 1
Fuel Tank Ass'y.....	9 - 1
Bonnet Ass'y (Part 1).....	1 0 - 1
Bonnet Ass'y (Part 2).....	1 1 - 1
Name Plate Ass'y.....	1 2 - 1

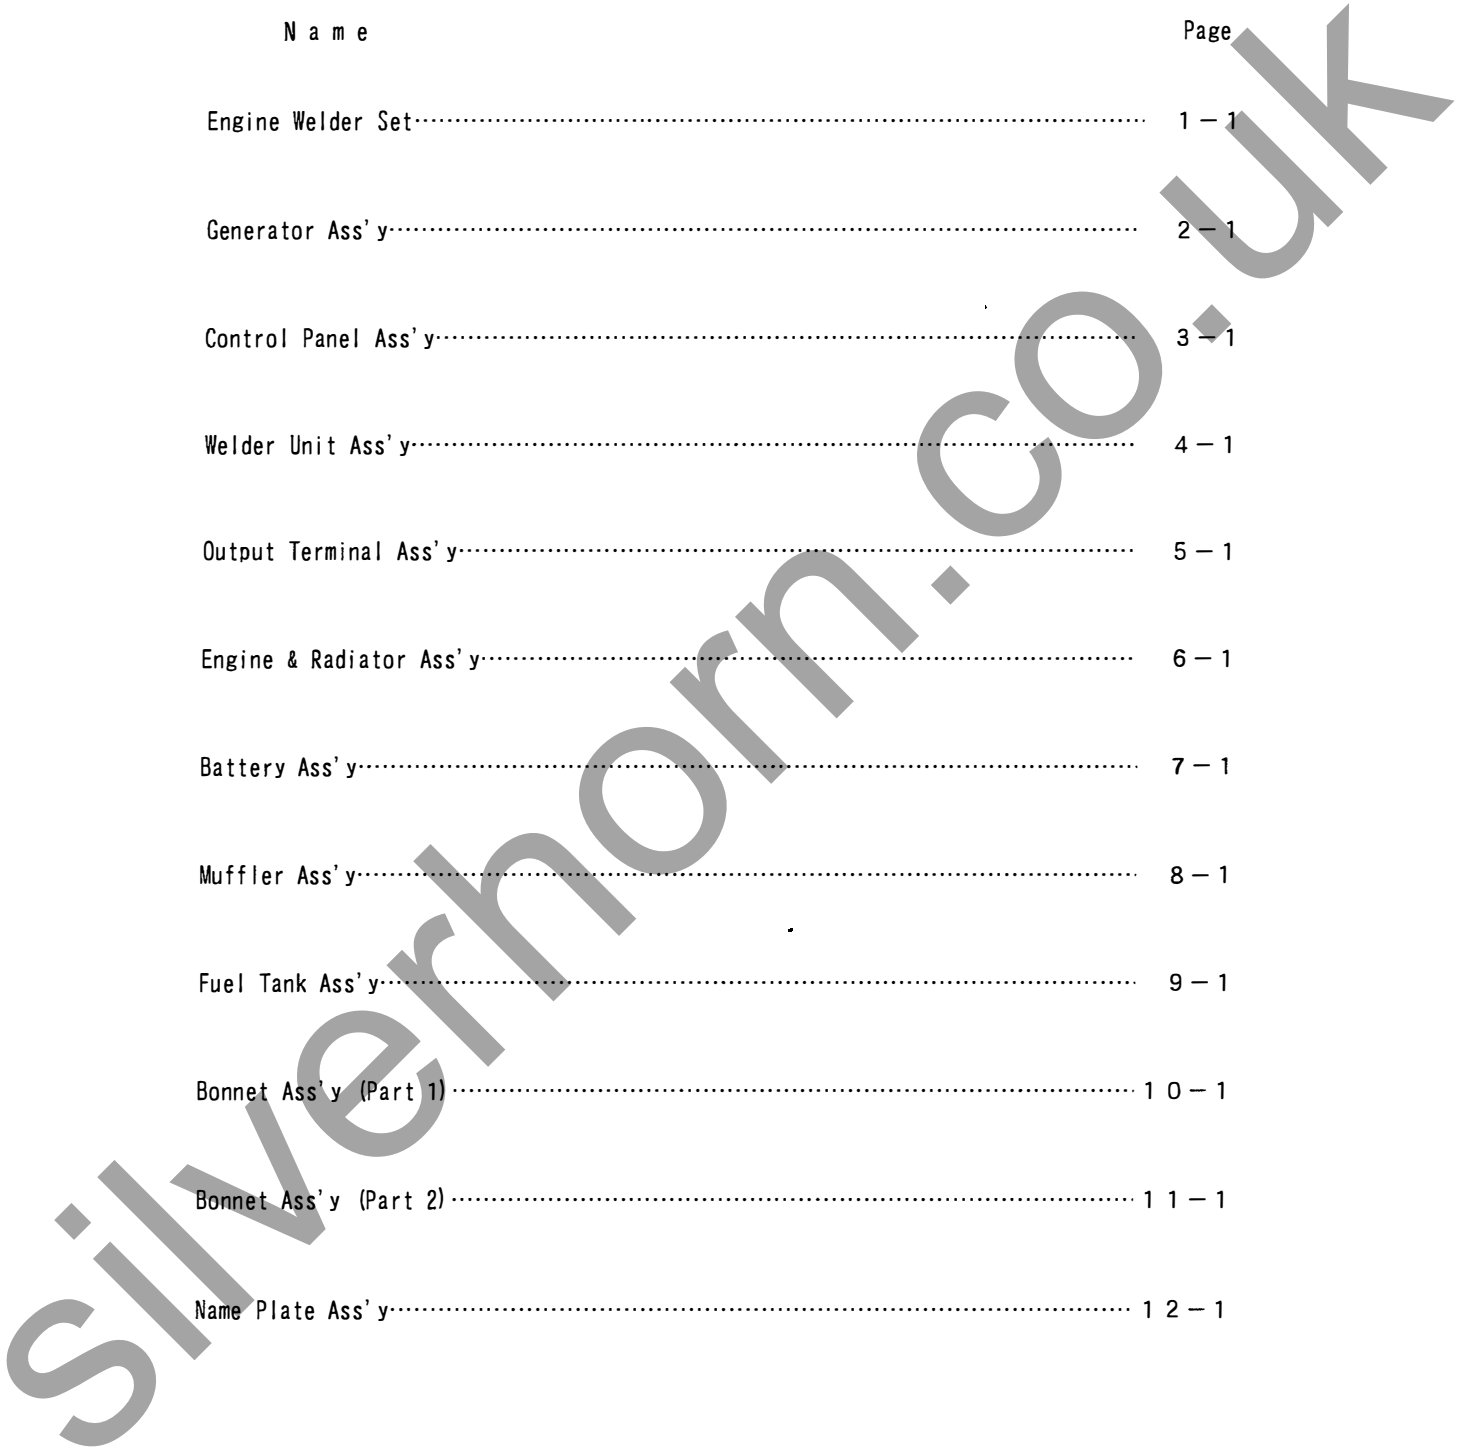

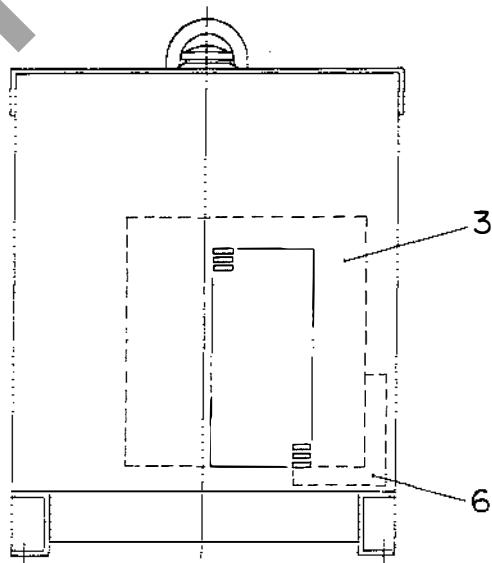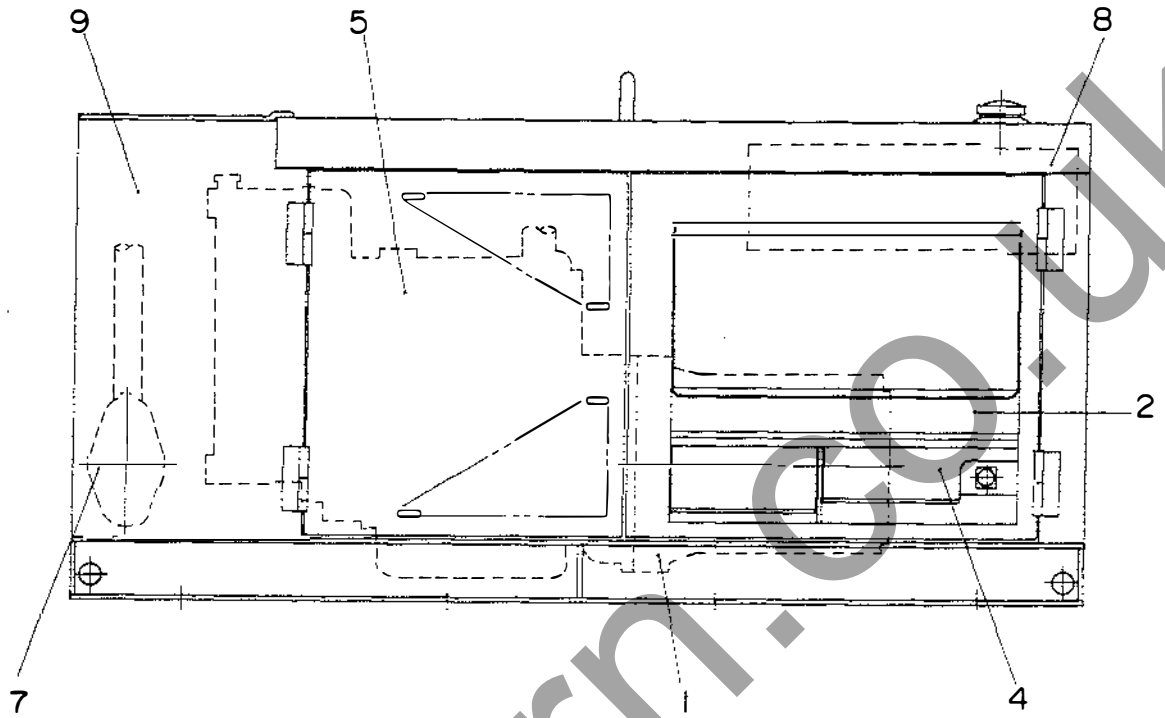





Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1		Generator Ass'y	Refer to p. 2-1						
2		Control Panel Ass'y	Refer to p. 3-1						
3		Welder Unit Ass'y	Refer to p. 4-1						
4		Output Terminal Ass'y	Refer to p. 5-1						
5		Engine & Radiator Ass'y	Refer to p. 6-1						
6		Battery Ass'y	Refer to p. 7-1						
7		Muffler Ass'y	Refer to p. 8-1						
8		Fuel Tank Ass'y	Refer to p. 9-1						
9		Bonnet Ass'y (Part 1)	Refer to p. 10-1						
		Bonnet Ass'y (Part 2)	Refer to p. 11-1						
		Name Plate Ass'y	Refer to p. 12-1						
	D 58140 00803	Generator Connection Diagram							
	D 58141 00203	Engine Wiring Diagram							
	D 58443 00404	Instruction Manual							

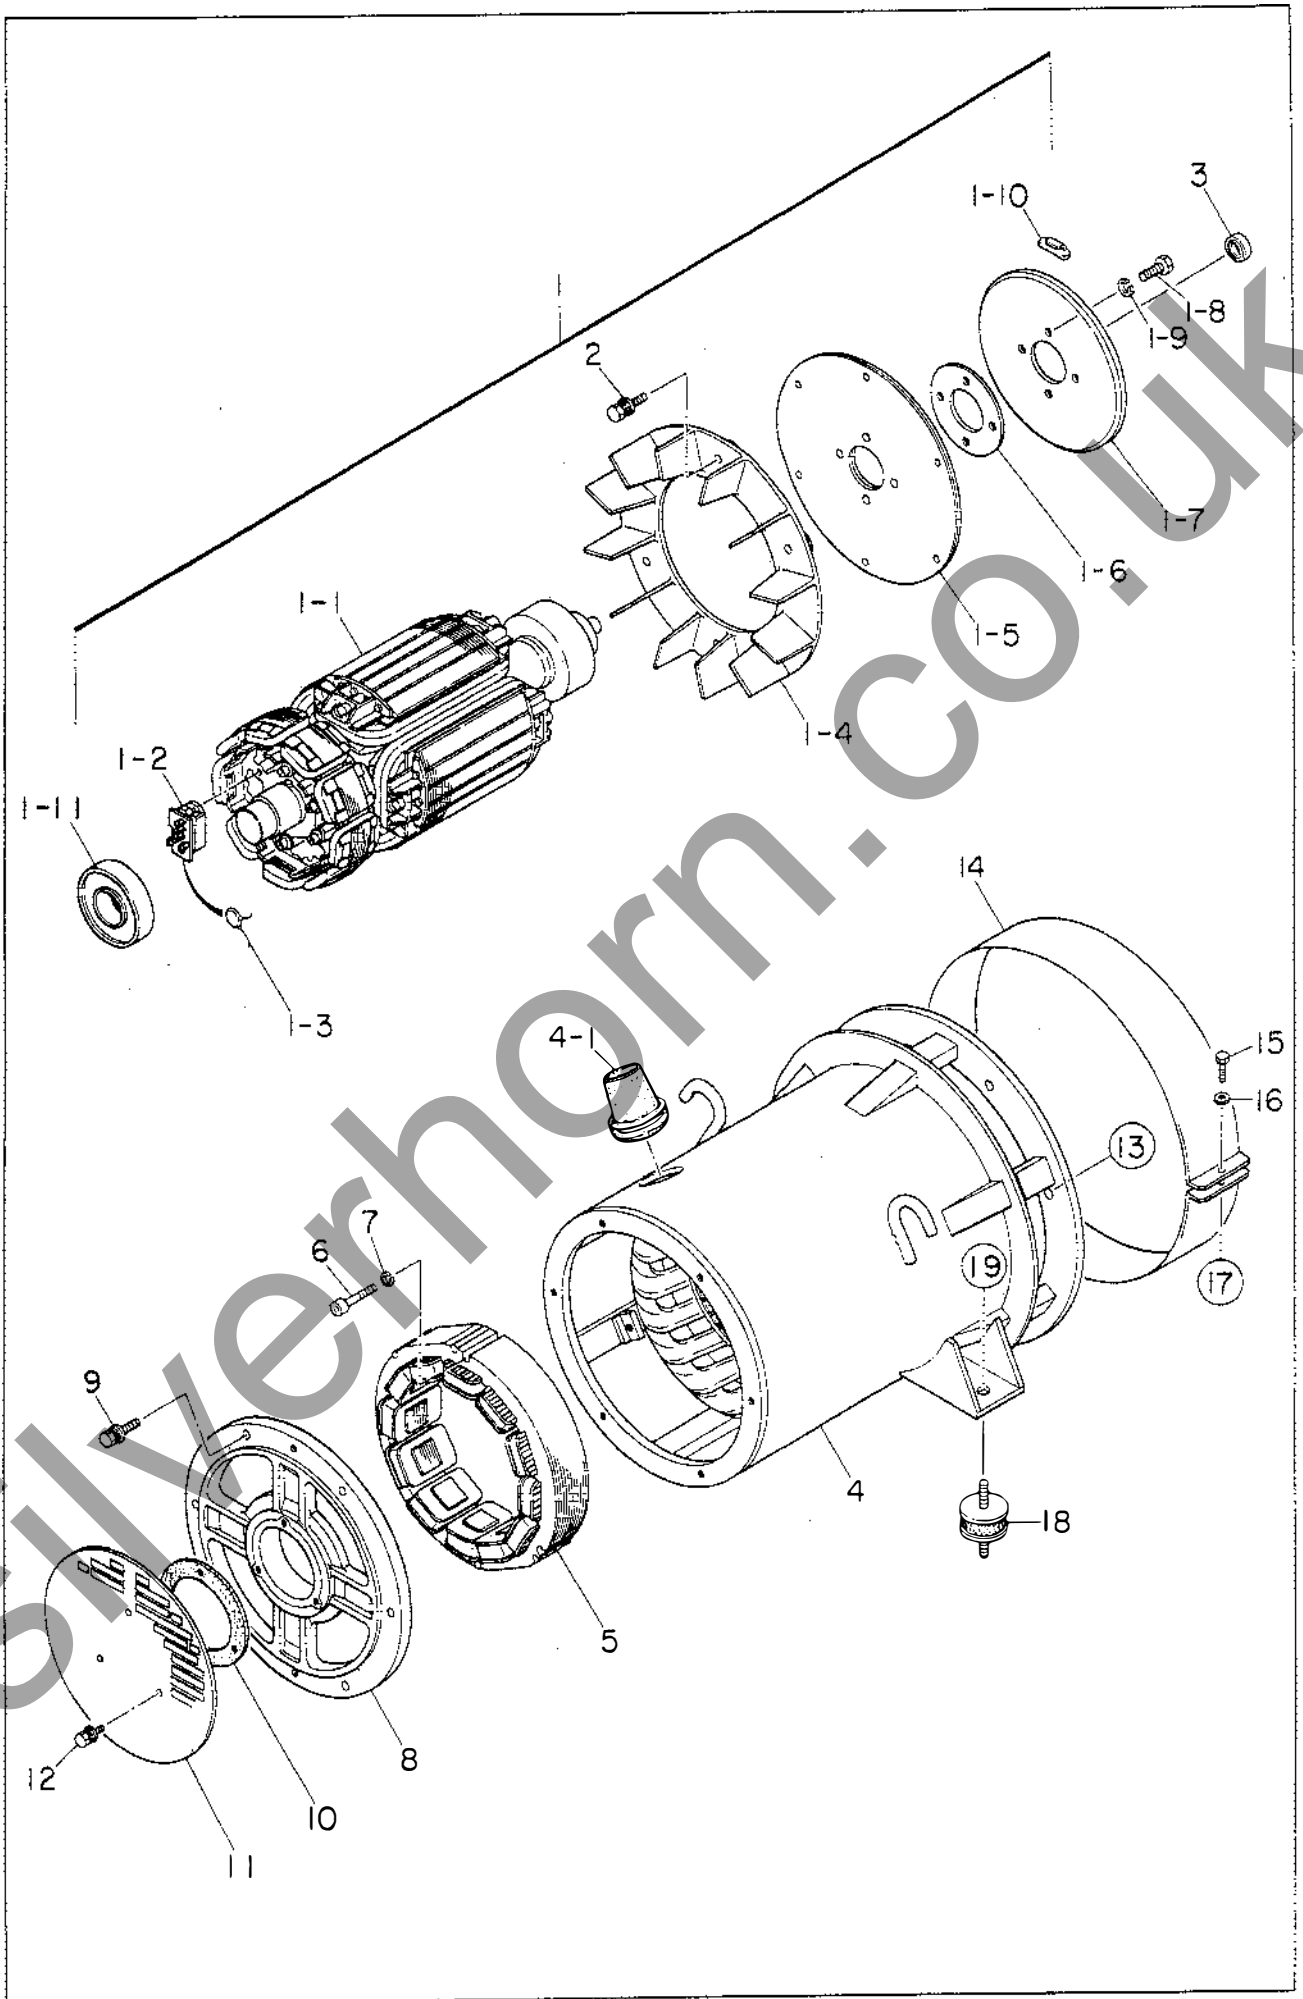

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	B 11102 00002	Rotor Ass'y		1					
*1- 1		Field Ass'y		(1)					
1- 2	79610 25004	Rectifier		(1)					
1- 3	06018 22630	Surge Absorber	TNR23G471K	(1)					
1- 4	80010 70003	Fan		(1)					
1- 5	83516 11004	Coupling Disk		(2)					
1- 6	83516 12004	Washer, coupling hub		(1)					
1- 7	83516 15003	Balancing Plate	Please purchase a set of 1-10 at the same time.	(1)					
1- 8	00103 10025	Hex. Head Bolt		(4)					
1- 9	00426 10000	Spring Washer		(4)					
1-10	06010 00209	Balancing Weight Kit		(1)					
1-11	00719 06308	Bearing	6308DDU C3	(1)					
2	00123 08035	Hex. Head Bolt	S=22	6					
3	00705 06903	Bearing	6903ZZ	1					
4	B 11301 00803	Stator Ass'y		1					
4- 1	08450 41904	Grommet		(1)					
5	B 11380 00103	Field Ass'y exciter		1					
6	00160 08045	Hex. Socket Head Cap Screw	S=22	3					
7	00425 08000	Spring Washer		3					
8	83513 15003	End Bracket		1					
9	00171 08035	Head. Head Bolt		6					
10	83513 12004	Packing		1					
11	83513 31004	Cover, suction		1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
12	00171 06016	Hex. Head Bolt		3					
13	00123 10030	Hex. Head Bolt	S=26	6					
14	B 01554 00204	Cover. fan		1					
15	03404 06040	Hex. Head Bolt		1					
16	00412 06000	Plain Washer		1					
17	06008 15000	Nut	USN-6001	1					
18	76054 19004	Rubber Suspension		2					
19	02070 10000	Hex. Nut		2					




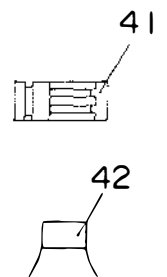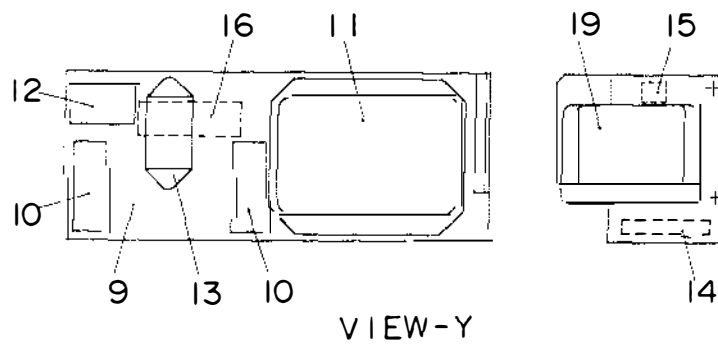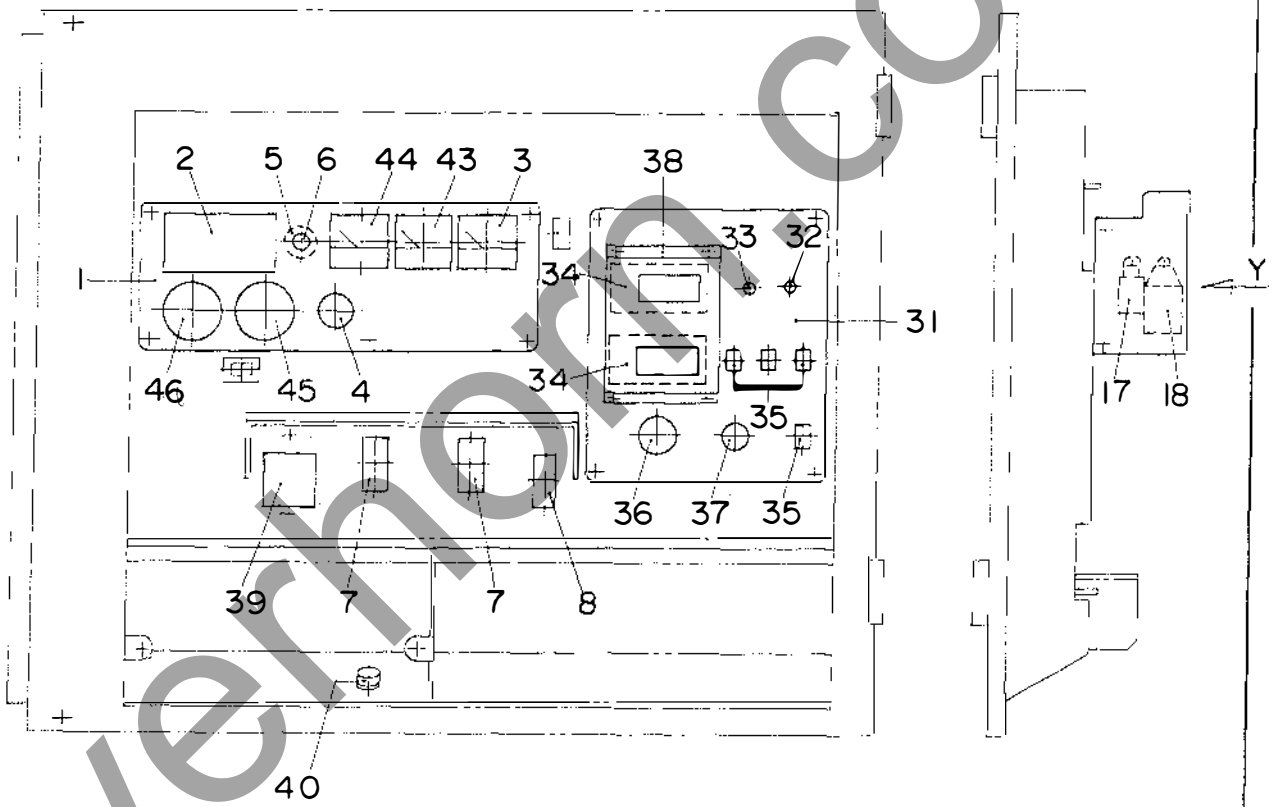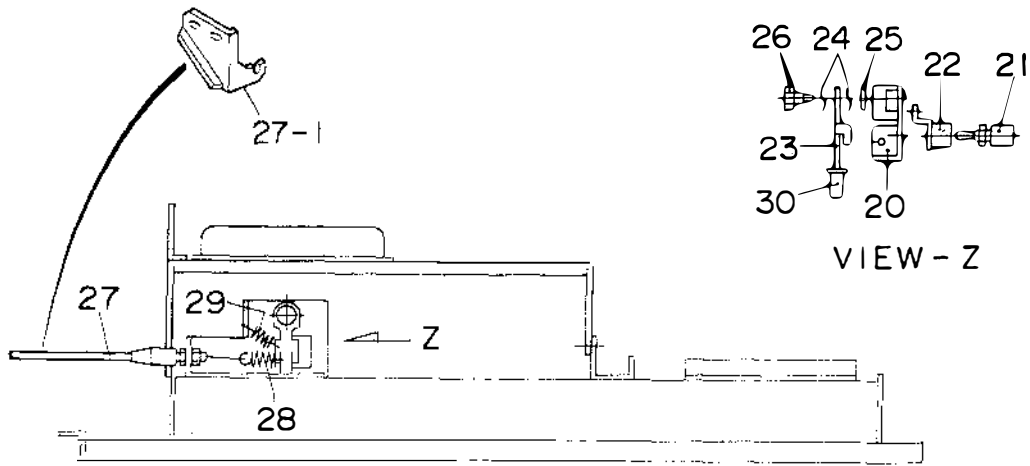


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 52240 00503	Control Panel	A=STD B=O. P.		1				
	D 52240 00203	Control Panel				1			
2	06021 15042	Engine Monitor	MT-15	1					
	D 43537 00004	Cover, connector		1					
3	06018 06885	AC Voltmeter	TRR-55 0~600V	1				V	
4	06021 00025	Starter Switch	KUBOTA 15248-63592	1					
5	06018 40085	Rheostat	RV20N20SB 1k $\Omega$	1				VR	
	08018 83003	Insulator		1					
6	06018 50350	Grommet	C30-SG-12A	1					
7	06018 70153	Circuit Breaker	MB50-CW 3P 32A	2				CB1, 2	
8	06018 07455	Circuit Breaker	KM-51B 15A	1				CB3	
	30118 16004	Bracket, circuit breaker		1					
9	D 52615 00403	Bracket, electric parts		1					
10	06018 01122	Current Transformer	COC-3 100/5A	2				CT1, 3	
11	06018 20660	Automatic Voltage Regulator	AN-5-203	1				AVR	
12	06018 20891	Over Current Relay	TH-N20HZ 3.6A C02621 00004	1				OC	
13	87018 99004	Fuse Box	FB-6PS	1					
	06018 06642	Fuse	5A	(4)					
	06018 06643	Fuse	15A	(2)					
	06018 06644	Fuse	30A	(2)					
14	06018 42304	Resistor	GG20W 50 $\Omega$	1				R	
15	06018 20038	Rectifier	S15VB60	1				Re	

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
16	06018 15062	Terminal Board	KT-20 6P	1					
17	06018 23707	Relay	ACA12135, 1a	1					
18	06022 01273	Timer	KUBOTA 15694-65992	1					
19	06022 00467	Emergency Unit	KUBOTA 17462-60601	1					
20	D 53552 00003	Bracket, throttle lever		1					
21	06019 30794	Power Switch	ET215K12	1					
22	16621 41004	Bracket, power switch		1					
23	D 53551 00004	Throttle Lever		1					
24	00450 10000	Wave Washer		2					
25	00412 10000	Plain Washer		1					
26	10021 46004	Lever Pin		1					
27	D 53554 00003	Throttle Cable		1					
27- 1	D 53552 00104	Bracket, throttle cable		1					
28	D 53556 00104	Spring		1					
29	D 53556 00004	Spring		1					
30	10021 42104	Rubber Cap		1					
31	06018 26560	Control Panel	VR-450	1					
32	06018 26561	LED Lamp	4600-375 DUL-8HJ G/C	1					
33	06018 26562	LED Lamp	4600-376 DUL-8HJ O/C	1					
34	06018 26563	Digital Meter	K5579B00	2					
35	06018 26564	Change-Over Switch	4254-118 DS-850K-F1-00	4					
36	06018 26566	Rheostat	4501-039 RV24YN20SB 5k $\Omega$	1					
	06018 26567	Knob (L)	4735-007 K-2195 (L)	1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
37	06018 26566	Rheostat	4501-039 RV24YN20SB 5k $\Omega$	1					
	06018 26568	Knob (S)	4735-008 K-2195 (S)	1					
38	D 52242 00004	Cover, meter		1					
39	08418 05804	Cover			1				
40	00171 08020	Hex. Head Bolt			1				
	02070 08000	Hex. Nut			1				
41	06018 06640	Fuse	65A	1					
42	06018 26187	Condenser	ECQV1H105JL DC50V, 1 $\mu$ F	1					
43	06018 06973	AC Ammeter	TRS-55H 0~50/5A			1			
44	06018 07621	Frequency Meter	TRC-55F			1			
45	06021 23085	Water Temperature Gauge	100575-2201			1			
	06021 23251	Unit, water temperature	071500-1840			1			
	06033 06840	Bushing	NB-1043			1			
46	06021 22035	Oil Pressure Gauge	100576-0301			1			
	06021 22250	Unit, oil pressure	071600-0750			1			

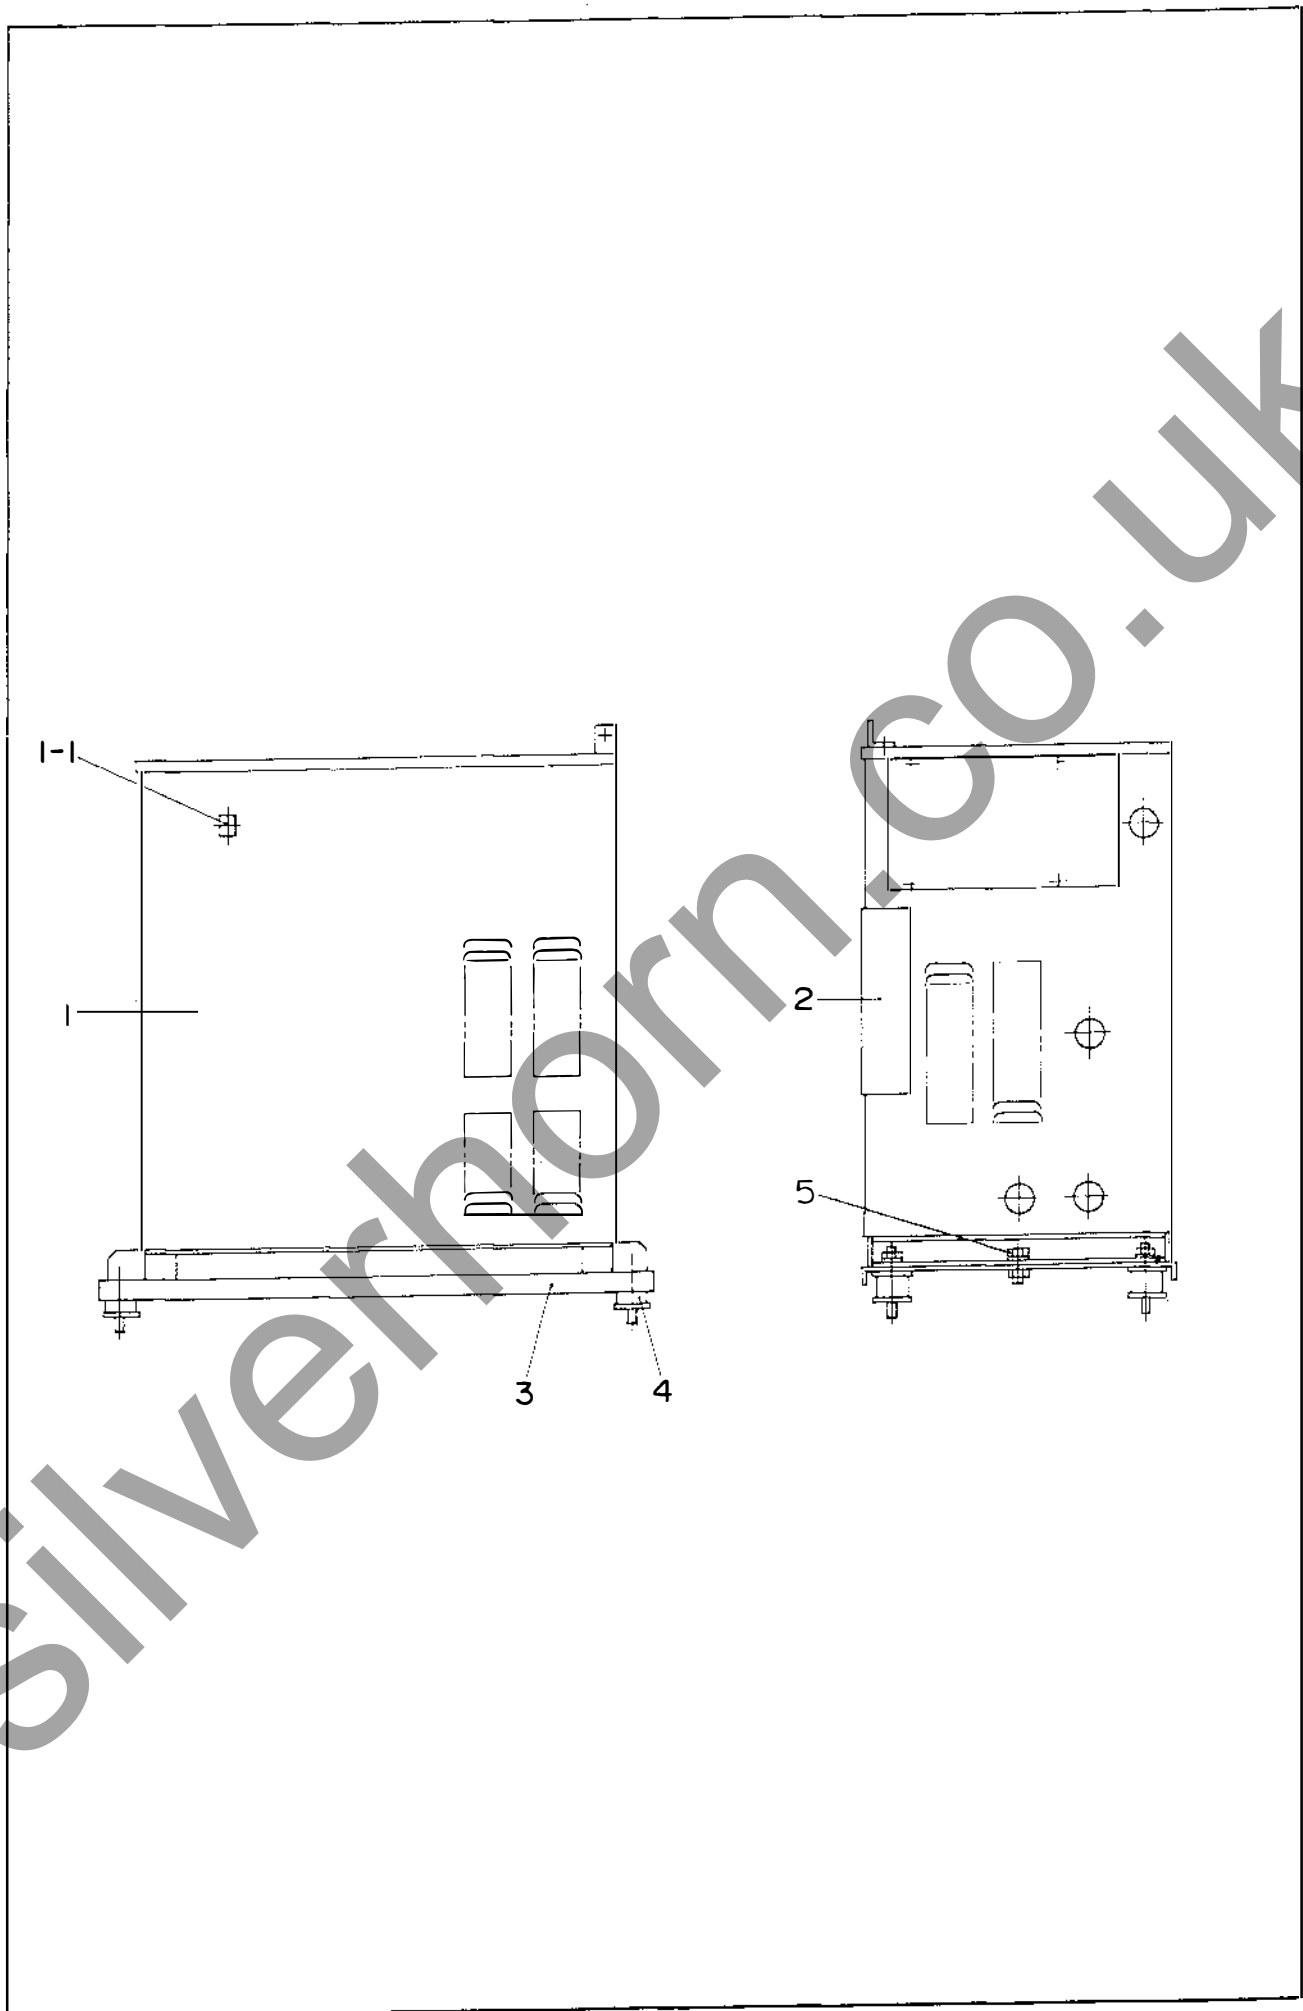


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 99248 00044	Control Unit	VR-450	1					
1- 1	06018 26565	Change-Over Switch	4254-122 DS-850A-F1-00	(1)					
	06018 26550	Unit, control	P30015P00	(1)					
	06018 26551	Unit, power	P6930F00	(1)					
	06018 26552	Unit, driver	P10330V00	(1)					
	06018 26553	Unit, inverter	P30015M00	(1)					
	06018 26554	Unit, filter	P6593X00	(1)					
	06018 26555	Unit, P. W. M	P30015W00	(1)					
	06018 26556	DR. SCR Module	4531-716 DFA100BA160	(1)					
	06018 26557	High Speed DR Module	4531-308 DBA200UA60	(5)					
	06018 26558	IGBT Module	4534-528 CM200DY-12NF	(4)					
2	06018 15733	Terminal Board	KT-30-10P	1					
	D 95210 00404	Seal, terminal board		1					
3	D 52142 00004	Plate, control unit		1					
4	79254 19514	Rubber Suspension		4					
	00387 08000	Hex. Nut		4					
5	00171 08020	Hex. Head Bolt		2					

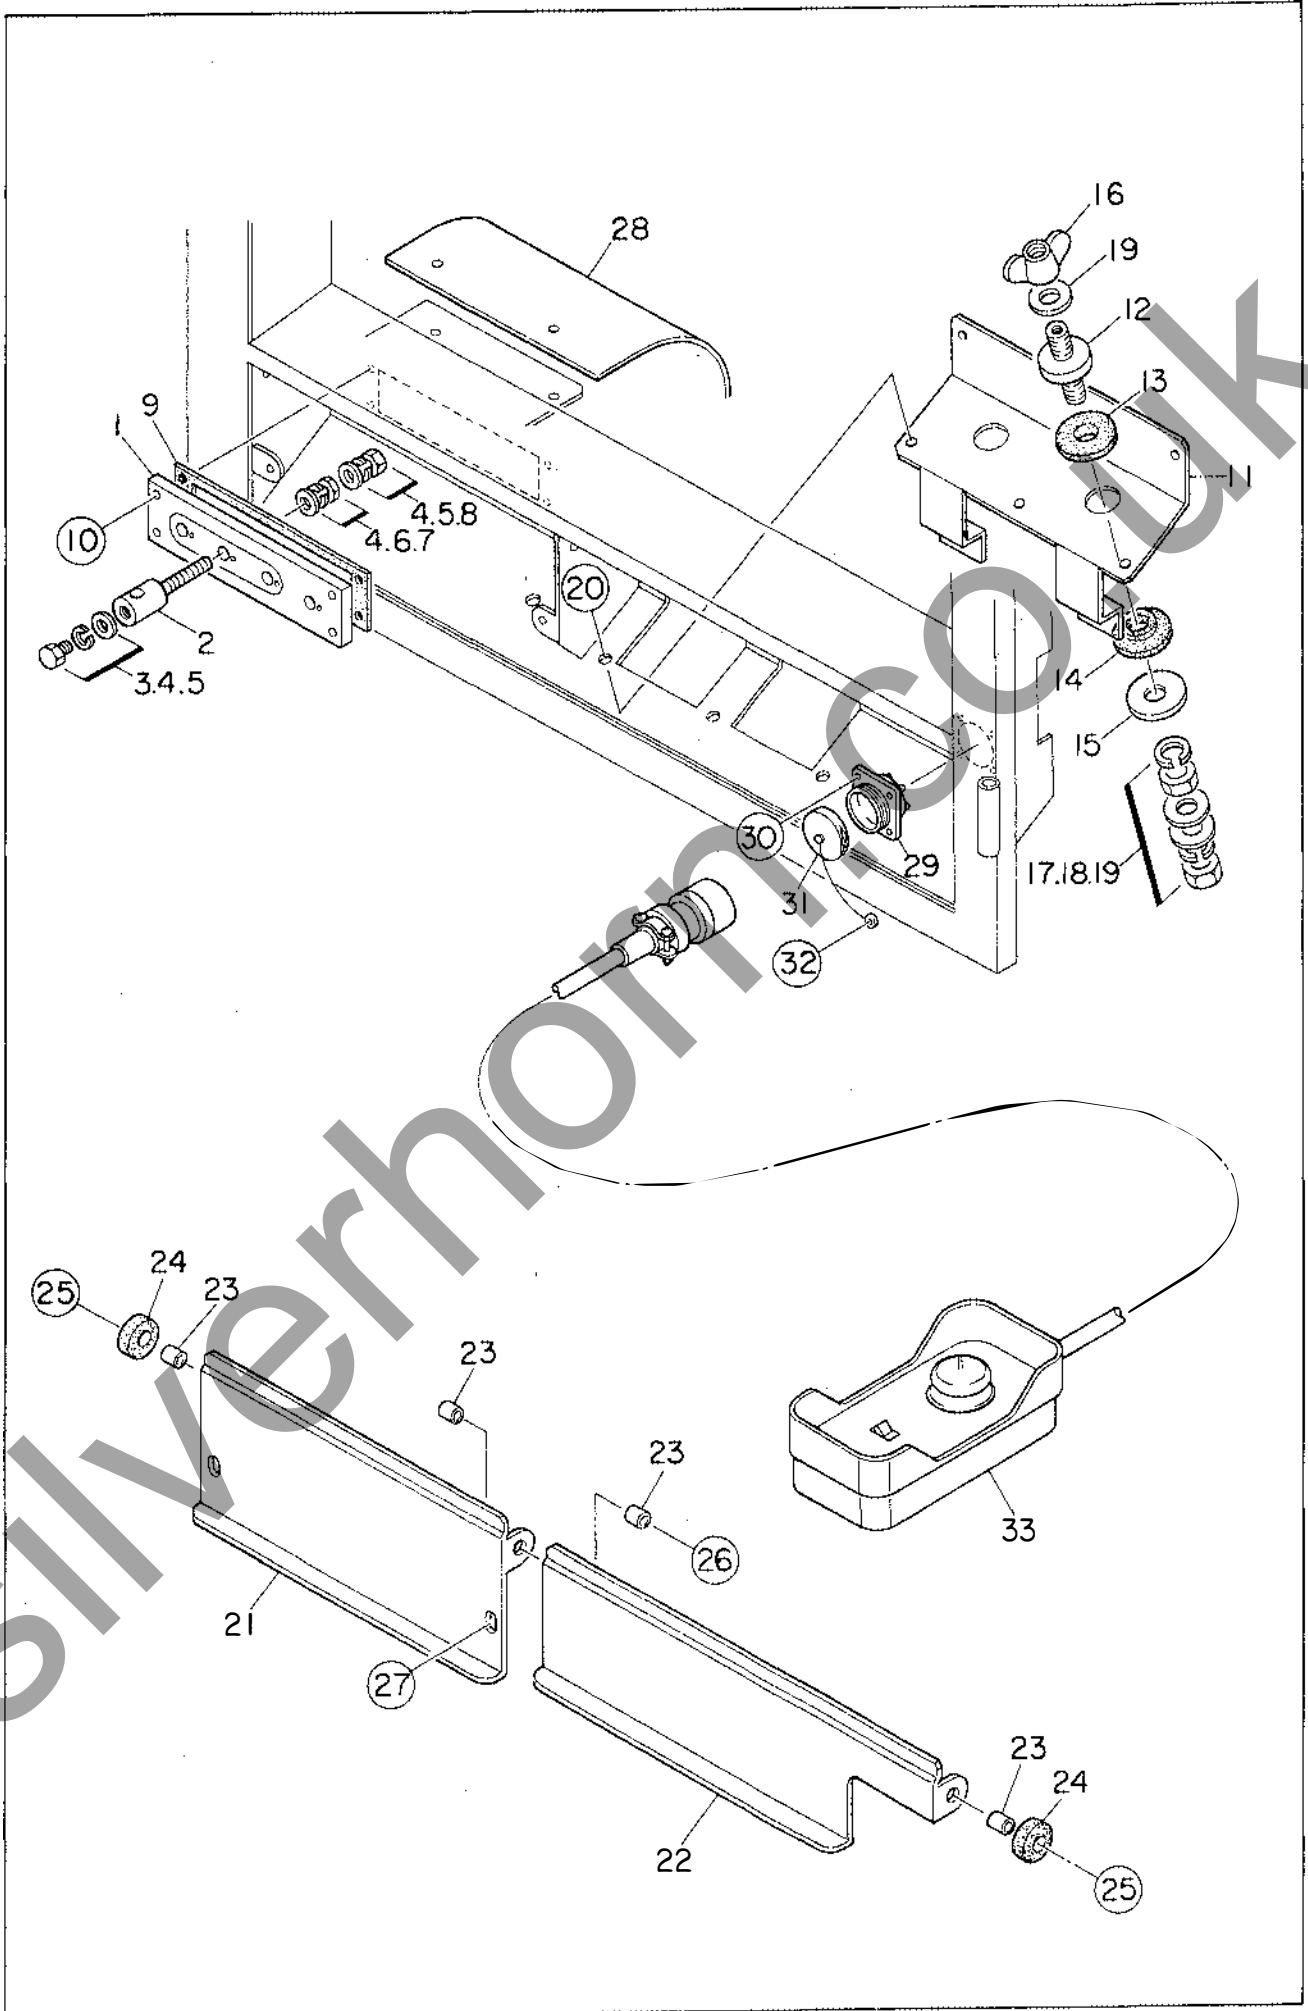

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
		A=O. P.							
1	87018 60004	Set Board, output terminal		1					
2	78118 61004	Output Terminal		4					
3	08018 30604	Hex. Head Bolt		4					
4	00400 08000	Spring Washer		12					
5	00414 08000	Plain Washer		8					
6	00412 08000	Plain Washer		4					
7	00395 08000	Hex. Nut		4					
8	00300 08000	Hex. Nut		4					
9	87018 64004	Rubber Seal		1					
10	00171 06025	Hex. Head Bolt		4					
11	D 52318 00003	Bracket, output terminal		1					
12	08018 88204	Output Terminal, welding		2					
13	08018 40104	Insulator Washer		2					
14	08018 40004	Insulator Washer		2					
15	08018 41204	Set Washer, output terminal		2					
16	08018 84004	Wing Nut		2					
17	00395 12000	Hex. Nut		4					
18	00422 12000	Spring Washer		4					
19	00414 12000	Plain Washer		6					
20	00171 06020	Hex. Head Bolt		6					
21	D 52371 00303	Cover, output terminal		1					
	D 52374 00304	Rubber Sheet		1					




Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
22	D 52371 00203	Cover, output terminal		1					
	D 52374 00204	Rubber Sheet		1					
23	08218 00014	Collar		4					
24	08050 88004	Stay Rubber		2					
25	00171 06020	Hex. Head Bolt		2					
26	00171 06025	Hex. Head Bolt		1					
	00387 06000	Hex. Nut		1					
27	00171 06016	Hex. Head Bolt		2					
28	D 52374 00404	Flexible Cover		1					
29	06018 12931	Receptacle	MS3102A20-27SX	1					
30	00211 03010	Machine Screw		4					
	00387 03000	Hex. Nut		4					
31	06018 11431	Cap	MS25043-20DA	1					
32	00271 03010	Machine Screw		1					
33	06018 28665	Remote Control Box	K5566B		1				
	06018 28666	Charge-Over Switch	4254-118 DS-850K-F1-00		(1)				
	06018 28667	Rheostat	4254-112 RV24YN20SB 5K $\Omega$		(1)				
	06018 28668	Knob	4735-007 K-2195 (L)		(1)				
	06018 28669	Plug	4731-083 MS3106B20-27PX		(1)				

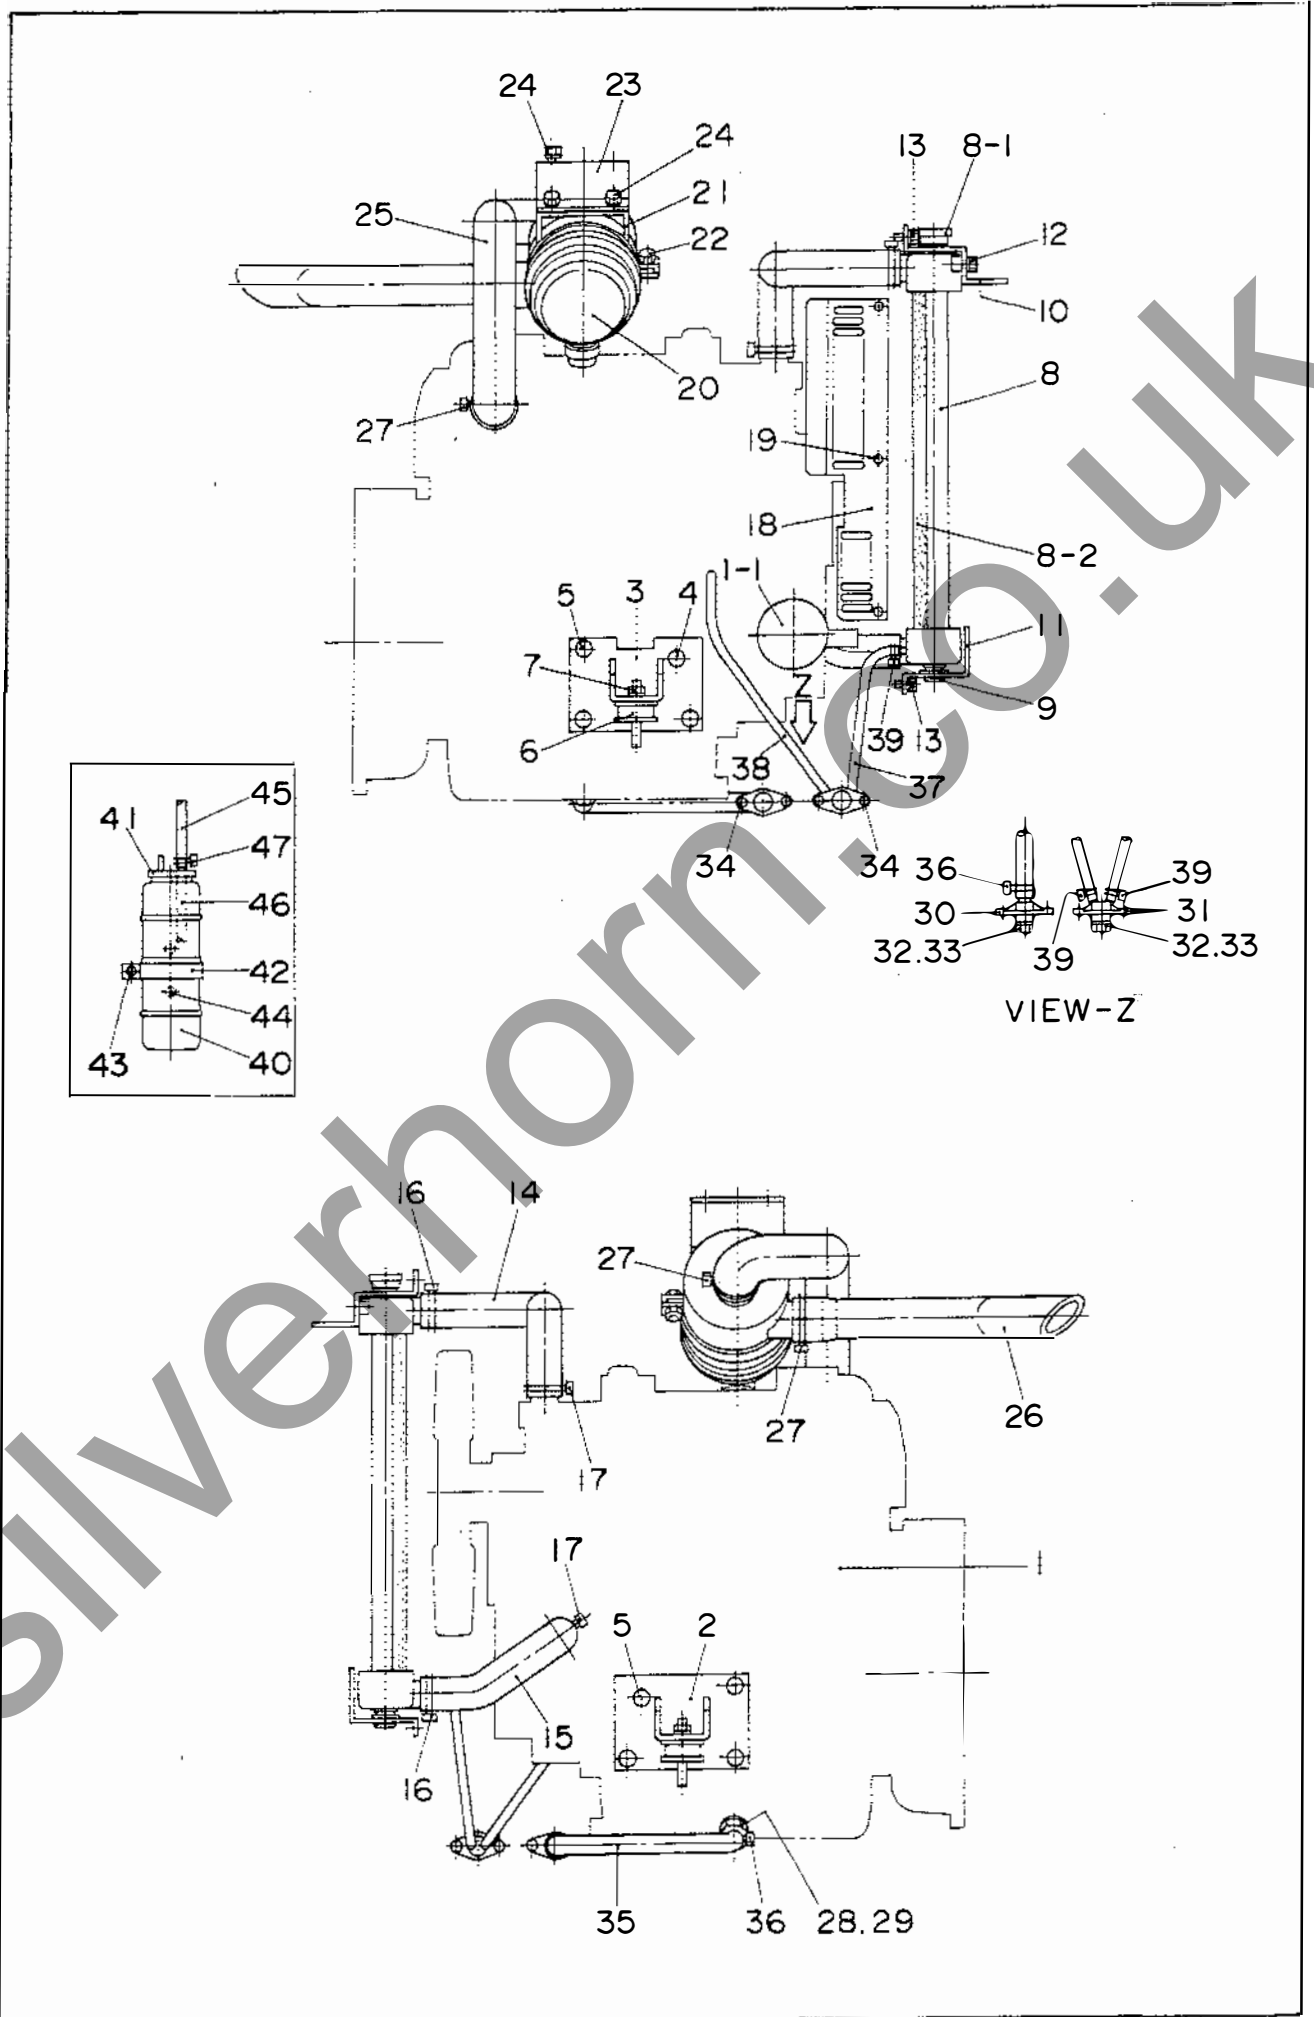


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 59242 00034	Engine	KUBOTA V2203	1					
1- 1	06020 41173	Cartridge, oil filter	KUBOTA 17321-32432	(1)					
2	83251 12114	Engine Foot		1					
3	83251 12014	Engine Foot		1					
4	00124 10025	Hex. Head Bolt		1					
5	00124 12025	Hex. Head Bolt		7					
6	06050 00066	Rubber Suspension	KA-50NL	2					
7	02070 10000	Hex. Nut		2					
8	06020 12788	Radiator	2951-312-0000	1					
8- 1	06020 11079	Cap, radiator	6713-092-0901	(1)					
8- 2	02203 00450	Rubber Seal		2					
9	B 13126 00004	Rubber Mount		2					
10	B 13121 00623	Bracket, radiator		1					
11	B 13121 00923	Bracket, radiator		1					
12	00171 08035	Hex. Head Bolt		2					
13	00171 08020	Hex. Head Bolt		5					
14	D 53115 00003	Radiator Hose		1					
15	D 53115 00103	Radiator Hose		1					
16	06055 15069	Hose Band	HS-24	2					
17	06055 15126	Hose Band	φ 44	2					
18	D 53112 00003	Fan Guard		1					
19	00171 06016	Hex. Head Bolt		3					
20	06020 46531	Air Cleaner	EPG05-8505	1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
	06020 46611	Element, air cleaner	P82-1575	(1)					
21	B 13752 00003	Bracket, air cleaner		1					
22	00171 08035	Hex. Head Bolt		1					
	02070 08000	Hex. Nut		1					
23	D 53742 00004	Bracket, air cleaner		1					
24	00171 08020	Hex. Head Bolt		4					
25	83220 36103	Hose, air cleaner		1					
26	D 63751 00724	Hose, air cleaner		1					
27	06055 15026	Hose Band	φ 65	3					
28	15020 25004	Drain Joint		1					
29	06020 21193	Packing	SW-16	1					
30	15020 25103	Drain Joint, oil		1					
31	16220 14103	Drain Joint, water		1					
32	08020 11104	Plug		2					
33	01500 00018	O Ring	A P-18	2					
34	00171 06016	Hex. Head Bolt		4					
35	02657 00500	Drain Hose		1					
36	06055 15073	Hose Band	HS-10	2					
37	01999 00420	Drain Hose		1					
38	01999 00550	Drain Hose		1					
39	06055 15094	Hose Band	φ 12	4					
40	08020 81403	Reserve Tank		1					
41	08020 81104	Cap, reserve tank		1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
42	87020 82004	Bracket. reserve tank		1					
43	00171 06025	Hex. Head Bolt		1					
44	00171 06016	Hex. Head Bolt		2					
45	01999 00730	Hose		1					
46	01991 00215	Hose		1					
47	06055 15094	Hose Band		2					

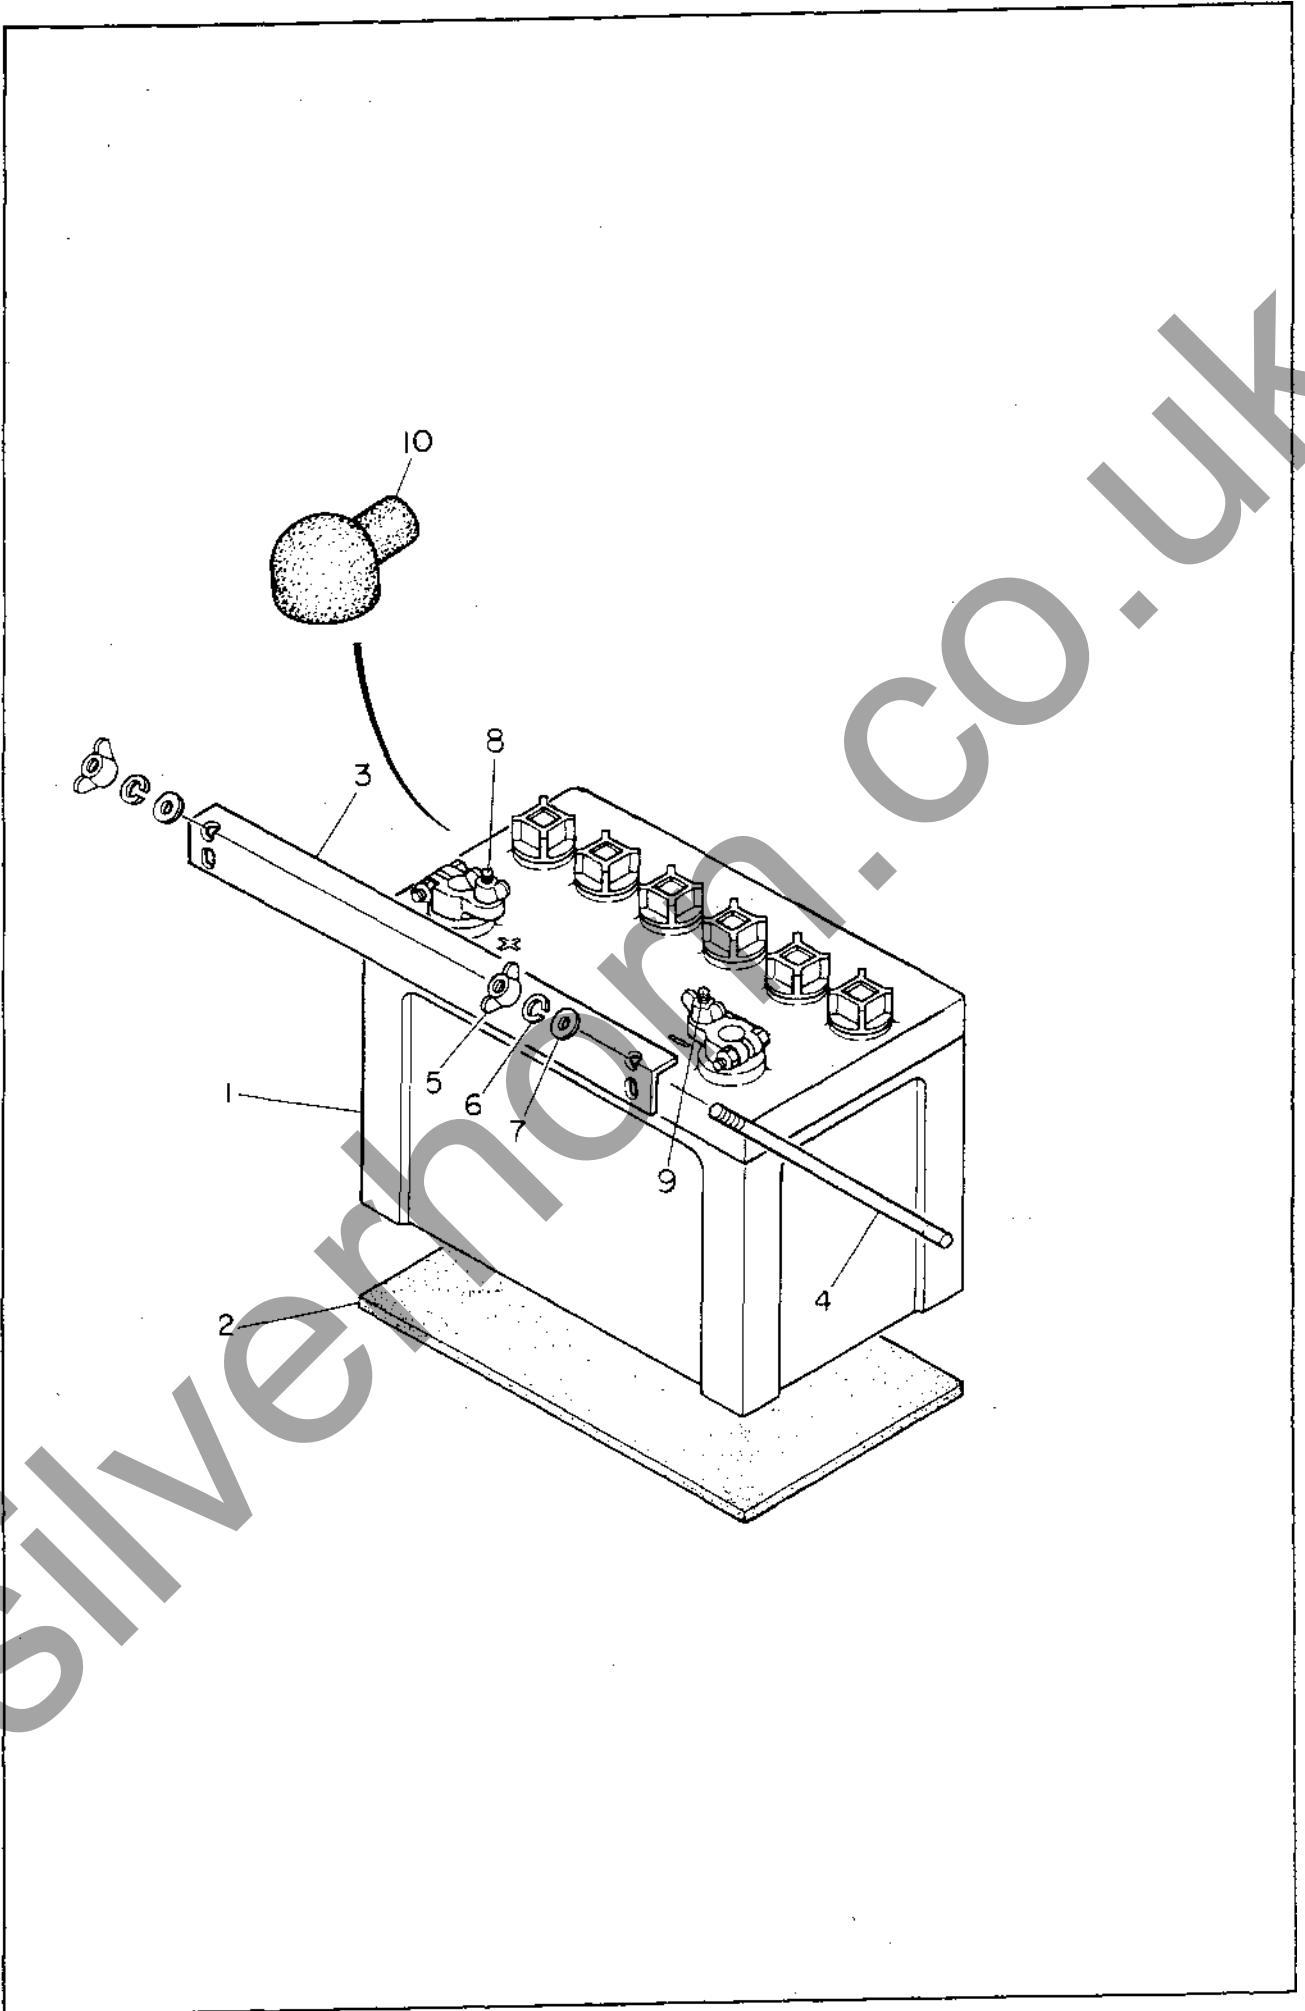


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	01683 08026	Battery	80D26R	1					
2	33122 51104	Battery Sheet		1					
3	B 13452 00114	Battery Band		1					
4	08050 02904	Battery Bolt		2					
5	00378 08000	Wing Nut		2					
6	00400 08000	Spring Washer		2					
7	00412 08000	Plain Washer		2					
8	06022 20310	Terminal Ass'y	No. 9P	1					
9	06022 20311	Terminal Ass'y	No. 9N	1					
10	08450 40414	Terminal Cap		1					

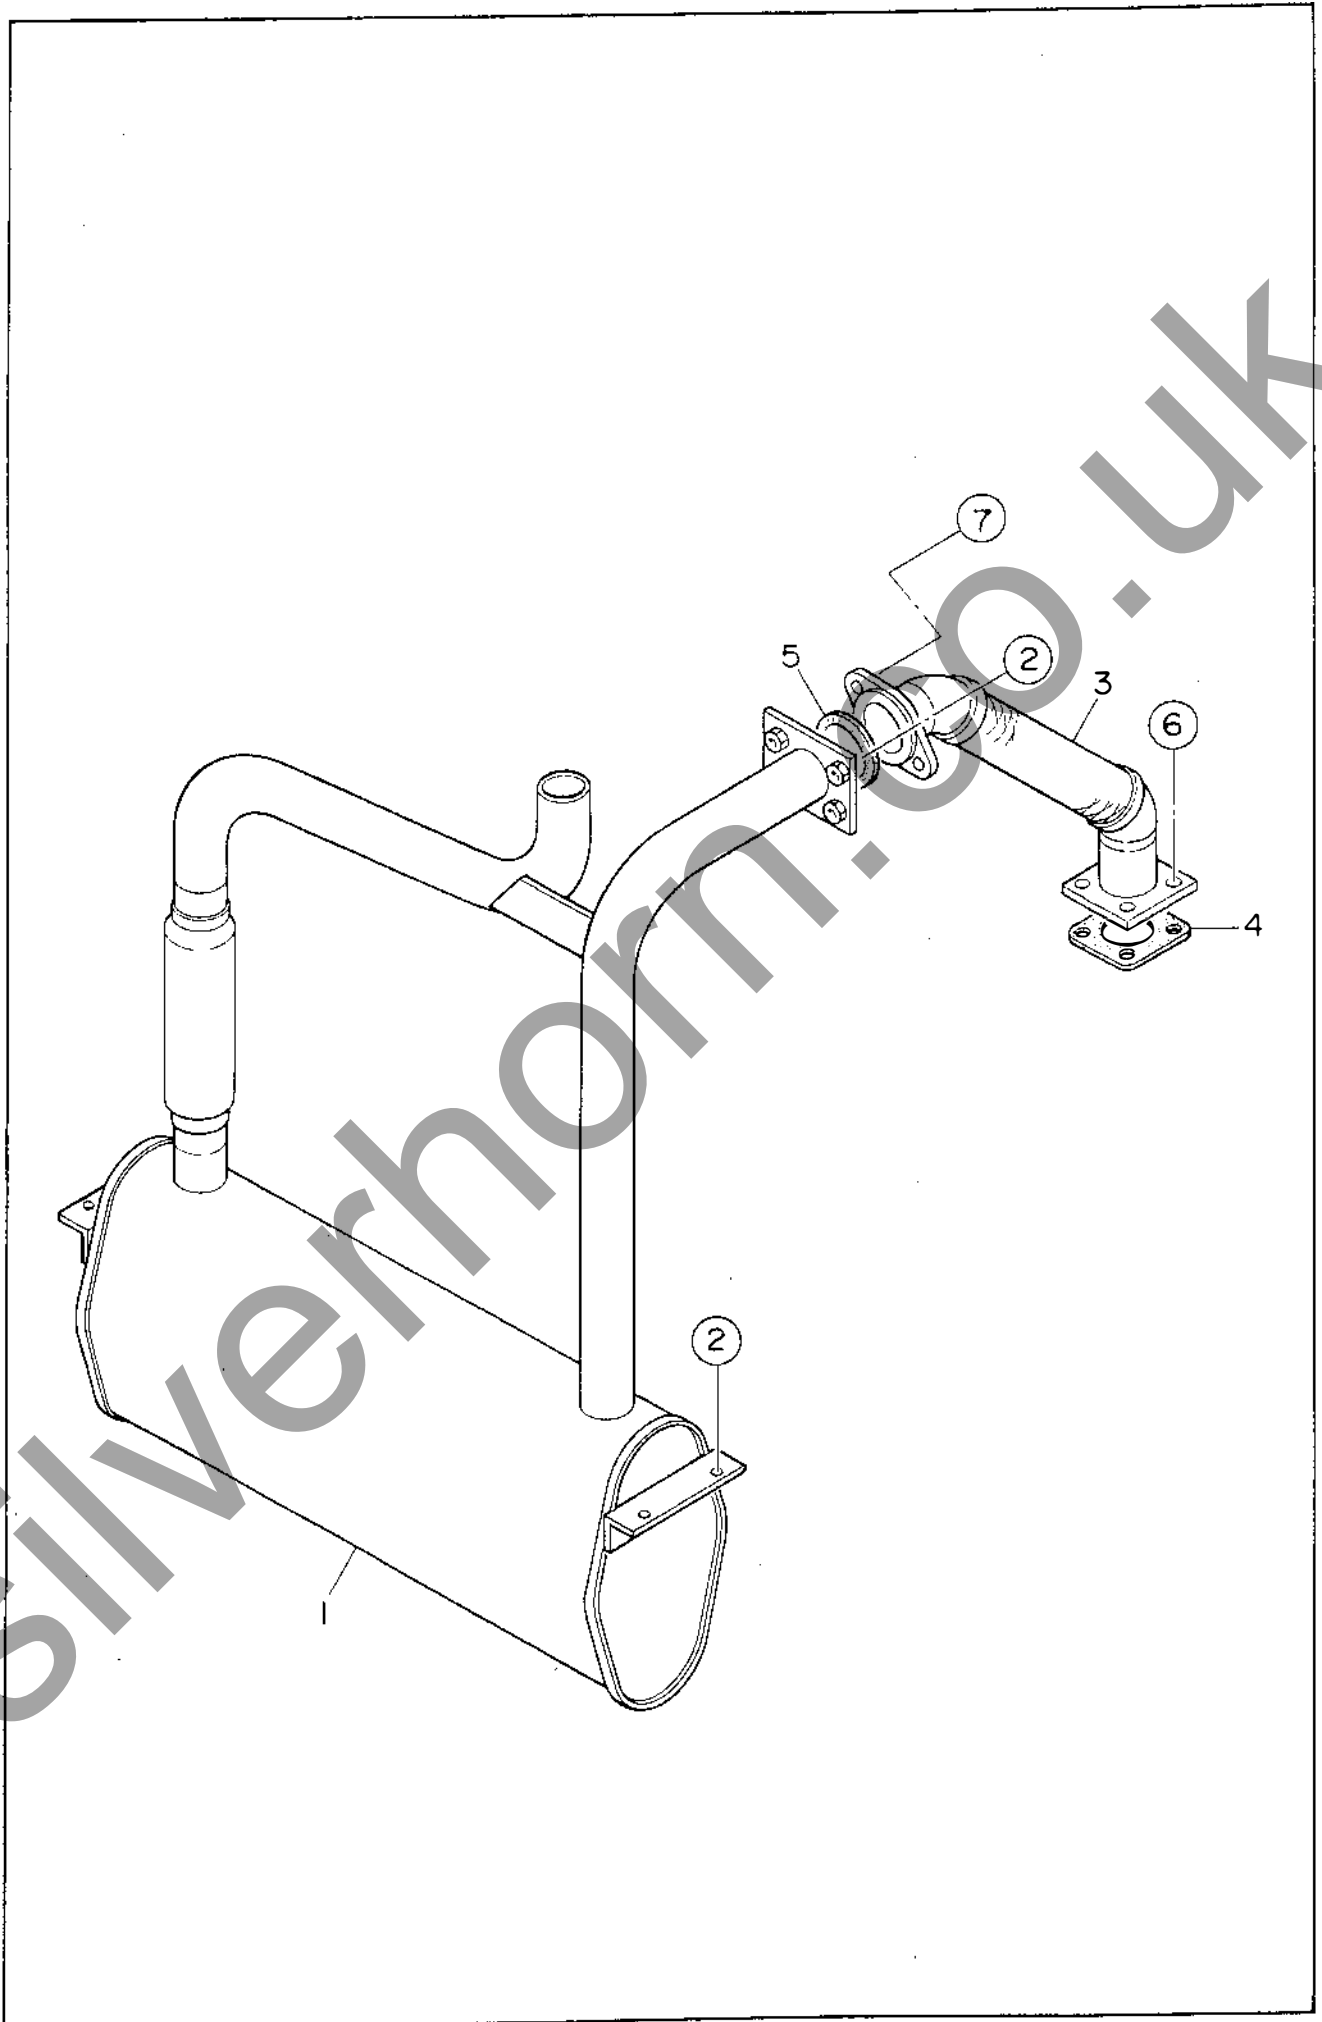




Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 53311 00003	Muffler		1					
2	00171 08020	Hex. Head Bolt		6					
3	D 53340 00003	Exhaust Pipe		1					
4	06023 20154	Gasket	KUBOTA 17326-12231	1					
5	D 93040 00004	Gasket		1					
6	02070 08000	Hex. Nut		4					
7	00171 08030	Hex. Head Bolt		2					

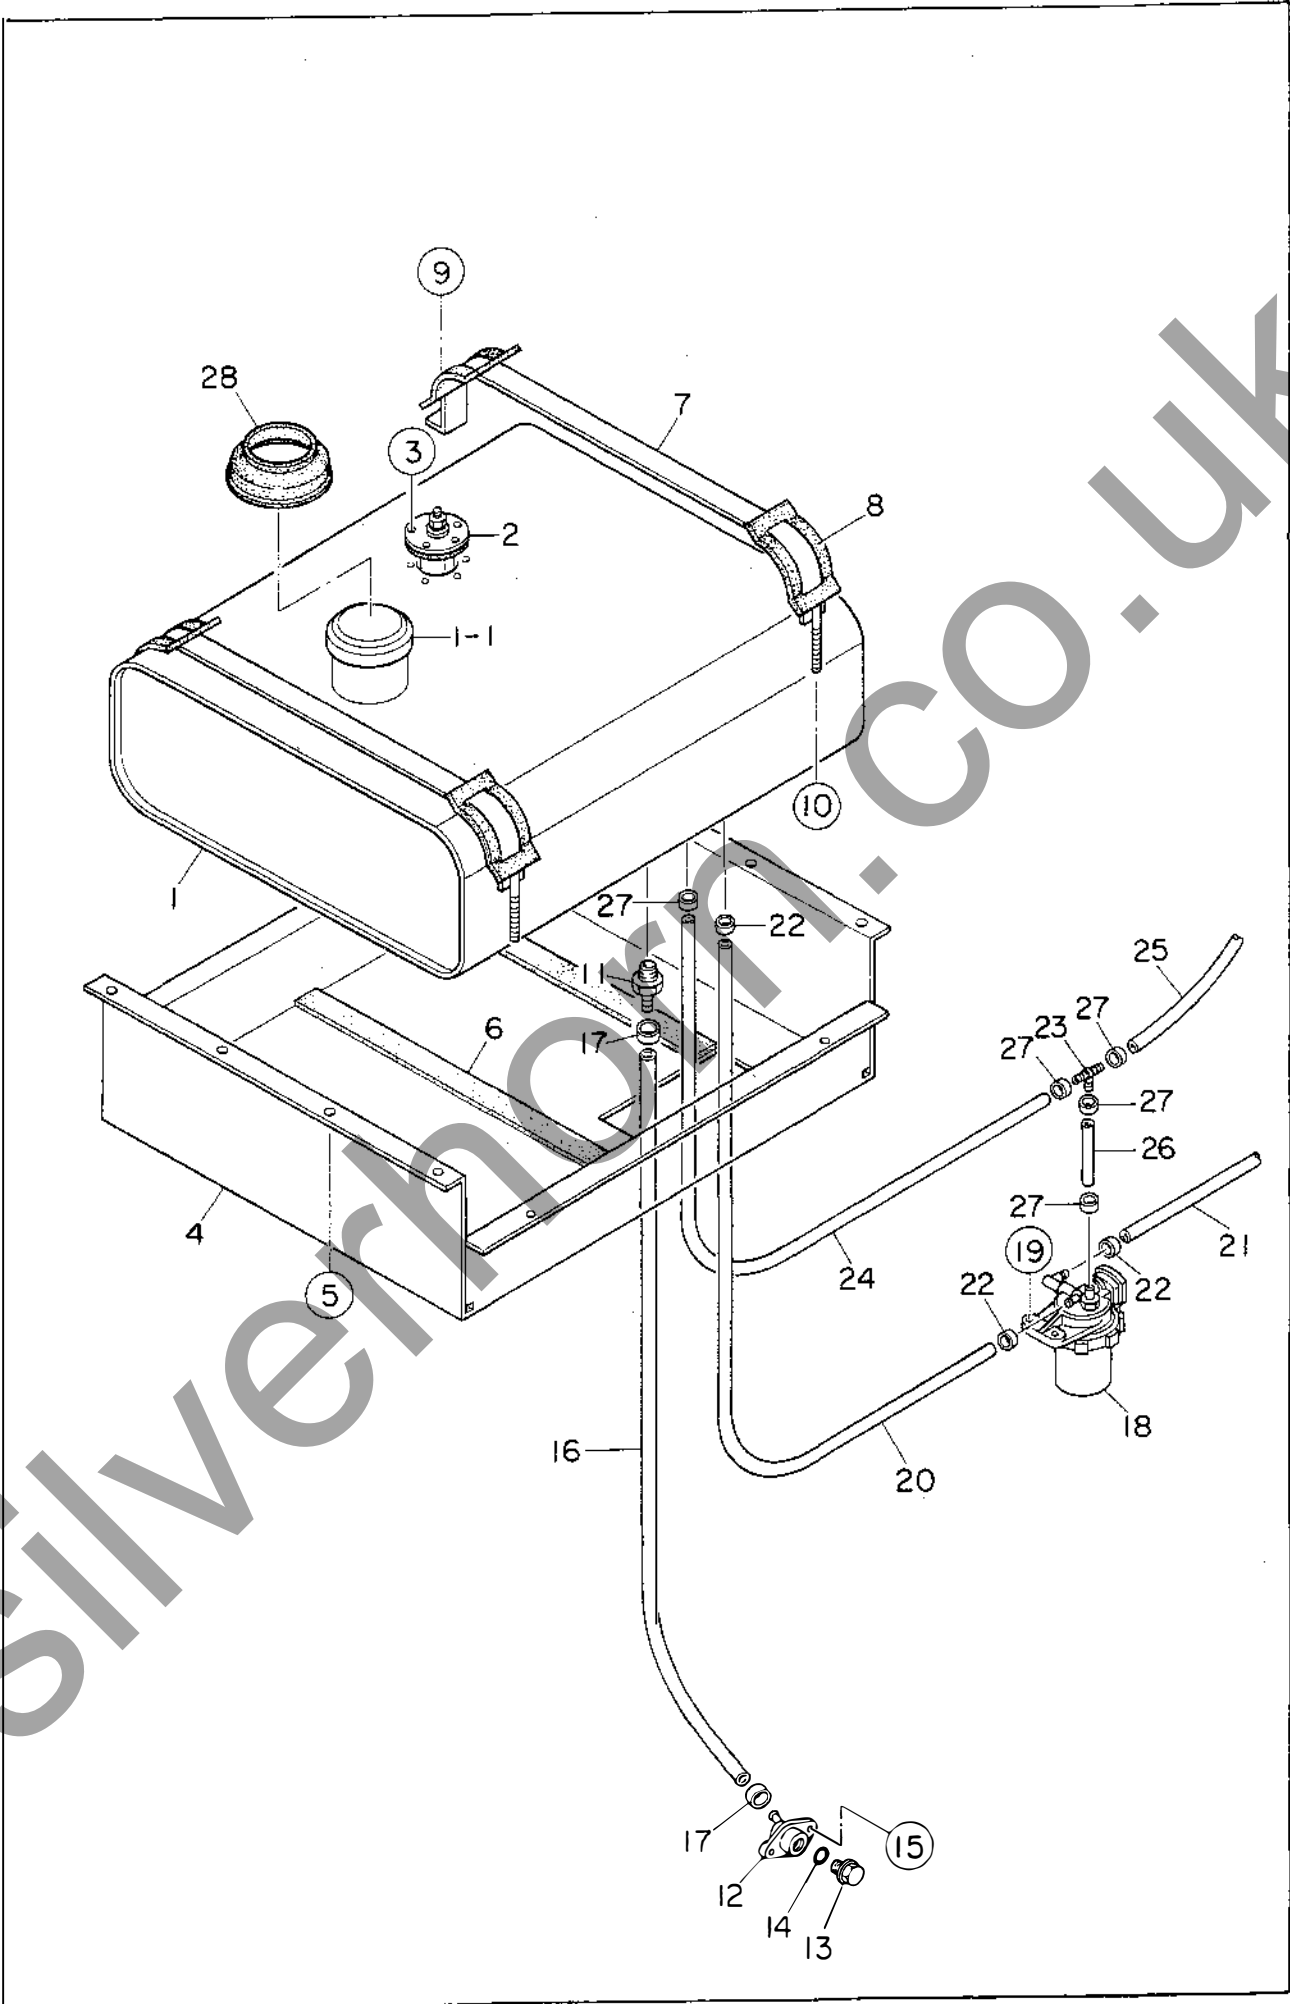

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 53640 00103	Fuel Tank		1					
1- 1	A 99248 00024	Cap, fuel tank		(1)					
2	06055 01081	Sender, fuel gauge	F-286S	1					
	E 19243 00184	Gasket	#4565	(1)					
3	00229 05015	Machine Screw		5					
4	D 53643 00003	Bracket, fuel tank		1					
5	00171 08020	Hex. Head Bolt		8					
6	02221 00550	Tank Sheet		3					
7	D 53642 00004	Tank Band		2					
8	08050 03414	Pad, tank band		4					
9	00171 08020	Hex. Head Bolt		2					
10	00379 08000	Hex. Nut		2					
11	06020 22752	Hose Joint		1					
12	78120 14003	Drain Joint		1					
13	08020 11104	Plug		1					
14	01500 00018	O Ring	A P-18	1					
15	00171 06020	Hex. Hed Bolt		2					
16	01999 00800	Drain Hose		1					
17	06055 15094	Hose Band		2					
18	06020 42077	Fuel Filter	KUBOTA 17076-43014	1					
	06020 42174	Element, fuel filter	KUBOTA 15521-43161	(1)					
19	00171 08030	Hex. Hed Bolt	15521-43161	2					
20	06055 13131	Suction Hose	KUBOTA 09661-80650	1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
21	06055 13157	Suction Hose	KUBOTA 09661-80320	1					
22	06055 15179	Hose Band	KUBOTA 14301-42753	4					
23	06033 06695	T Joint	KUBOTA 15101-42572	1					
24	06055 14059	Return Hose	KUBOTA 09661-40600	1					
25	06055 14101	Return Hose	KUBOTA 09661-40320	1					
26	06055 14015	Return Hose	KUBOTA 09661-40080	1					
27	06055 15072	Hose Band	KUBOTA 14971-42751	6					
28	B 93124 00004	Rubber Seal	14971-42751	1					

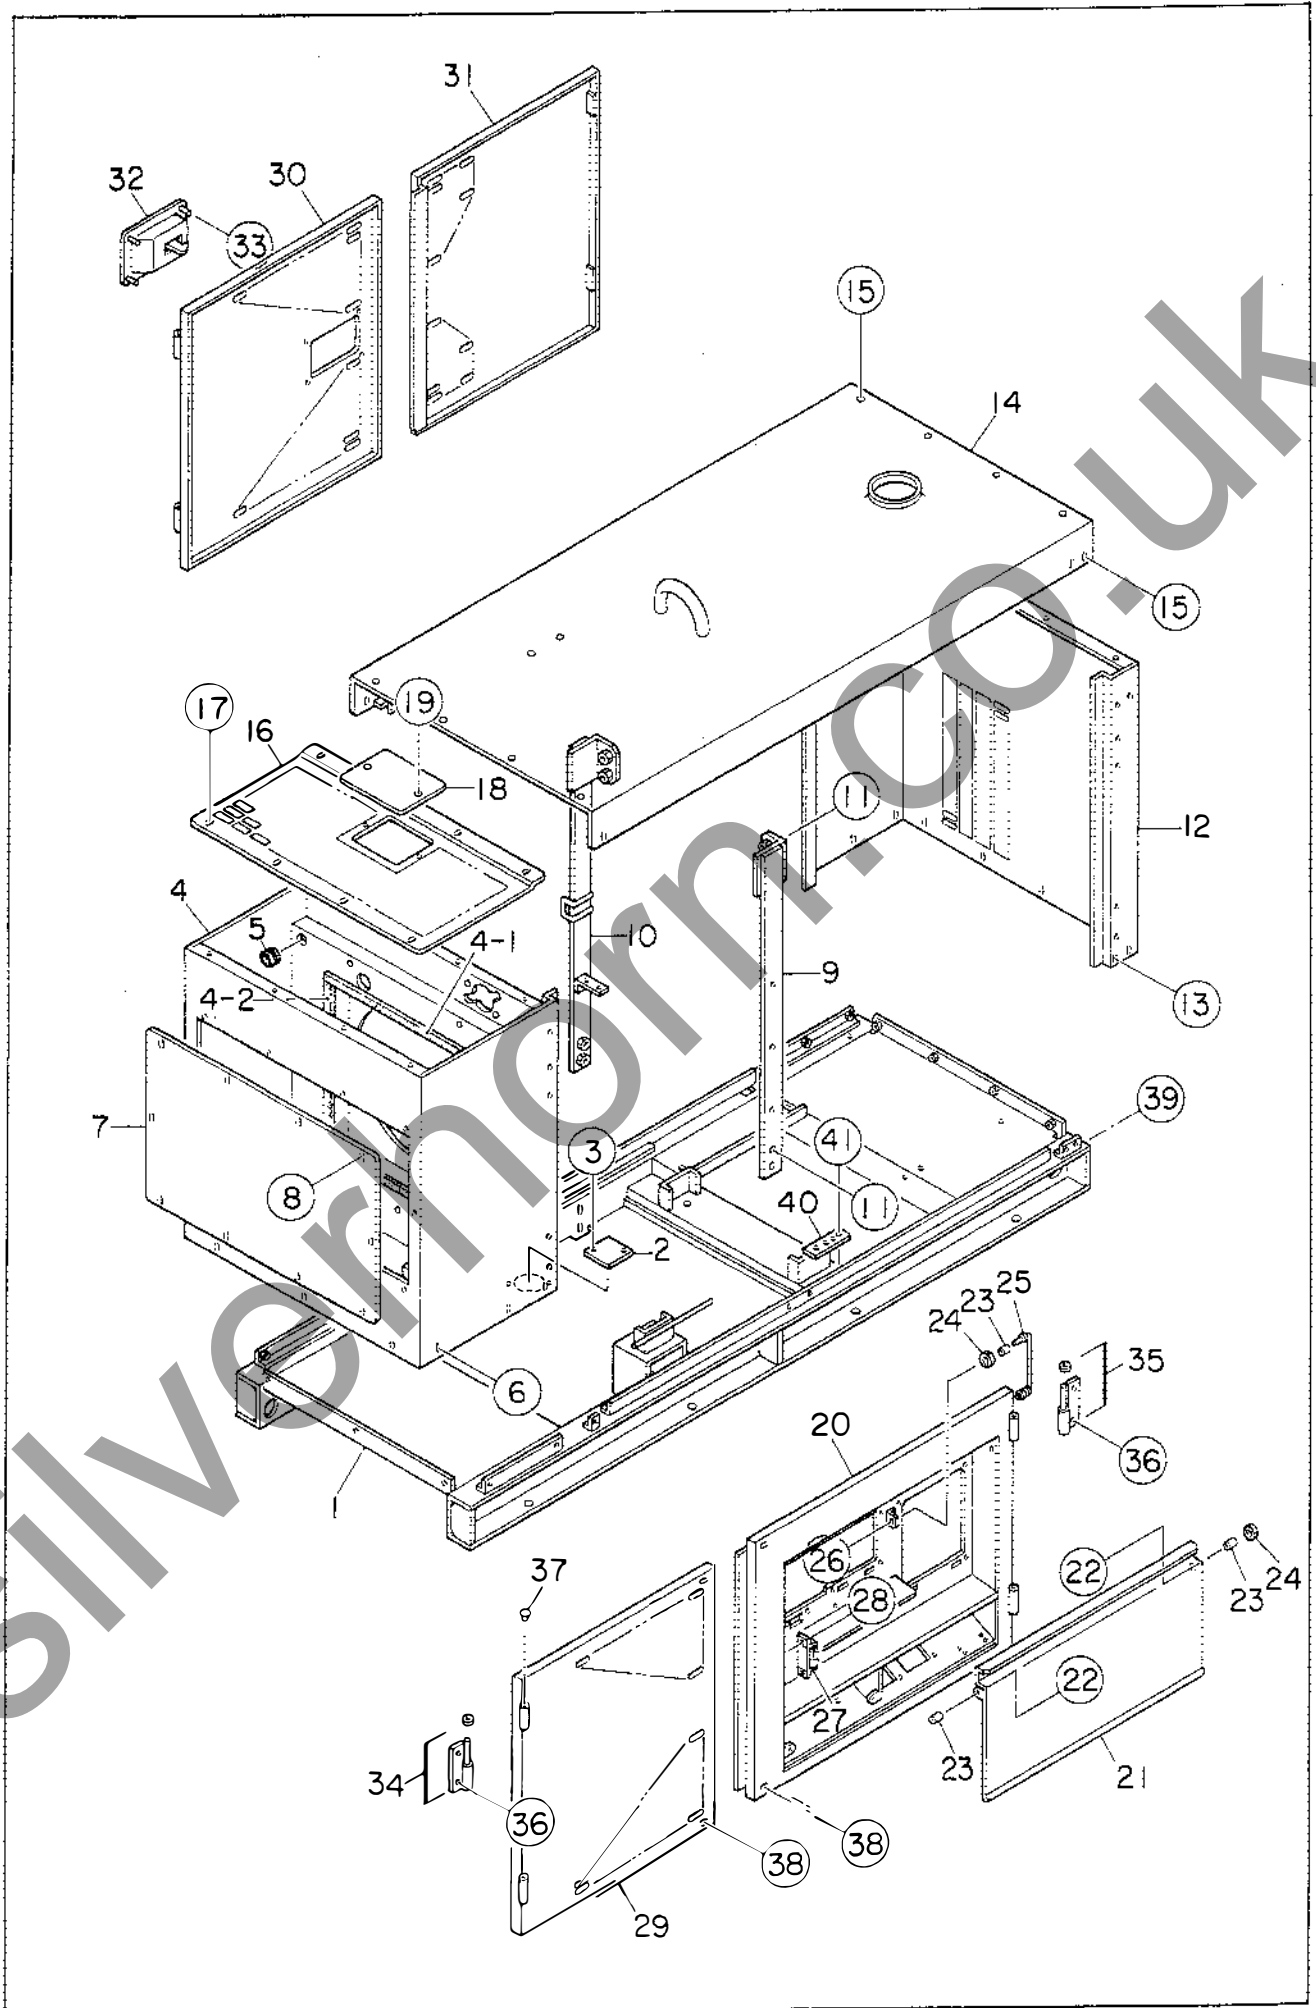


Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	D 54140 00102	Base		1					
2	D 34148 00104	Cover		1					
3	00171 06016	Hex. Head Bolt		2					
4	D 54240 00102	Front Frame		1					
4- 1	D 54941 00204	Seal Rubber	(2-A)	(2)					
4- 2	D 54941 00204	Seal Rubber	(2-B)	(2)					
5	06018 50239	Grommet	C-30-BW-14-2	1					
6	00171 08020	Hex. Head Bolt		9					
7	D 54242 00103	Cover, front frame		1					
8	00171 08020	Hex. Head Bolt		10					
9	D 54343 00203	Hanger		1					
10	D 54343 00103	Hanger		1					
11	00101 14035	Hex. Head Bolt		8					
	00400 14000	Spring Washer		8					
	00412 14000	Plain Washer		8					
12	D 54440 00503	Rear Frame		1					
13	00171 08020	Hex. Head Bolt		9					
14	D 54640 00102	Roof Panel		1					
15	00171 08020	Hex. Head Bolt		11					
16	D 54242 00203	Cover, front frame		1					
17	00171 08020	Hex. Head Bolt		8					
18	84520 23004	Cover		1					
19	00171 08020	Hex. Head Bolt		2					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
20	D 54242 00102	Splasher Panel		1					
21	D 52242 00103	Cover, control panel		1					
22	00171 06020	Hex. Head Bolt		2					
23	08218 00014	Collar		3					
24	08050 88004	Stay Rubber		2					
25	D 52242 00304	Cover Stay		1					
26	02070 06000	Hex. Nut		1					
27	06050 10422	Catches	C-73	1					
28	00271 03015	Machine Screw		2					
29	D 54540 00303	Side Door		1					
30	D 54540 00403	Side Door		1					
31	D 54540 00203	Side Door		1					
32	06050 10239	Door Handle	A-838-A-1D	1					
	06018 50519	Key	R200	(1)					
33	02070 06000	Hex Nut		4					
34	08450 47104	Hinge		4					
	08450 45004	Washer		4					
35	08450 47204	Hinge		4					
	08450 45004	Washer		4					
36	00171 08020	Hex. Head Bolt		16					
37	08450 31504	Cap		8					
38	00101 08035	Hex. Head Bolt		4					
	00400 08000	Spring Washer		4					


Key No.	Parts No.	Parts Name	Remarks	Q' ty				Symbol	Serial No.
				All	A	B	C		
	00412 08000	Plain Washer		4					
39	00192 08020	Hex. Head Bolt		1					
40	B 12628 00004	Plate		1					
41	00192 06020	Hex. Head Bolt		4					

Silverhorn.CO.UK



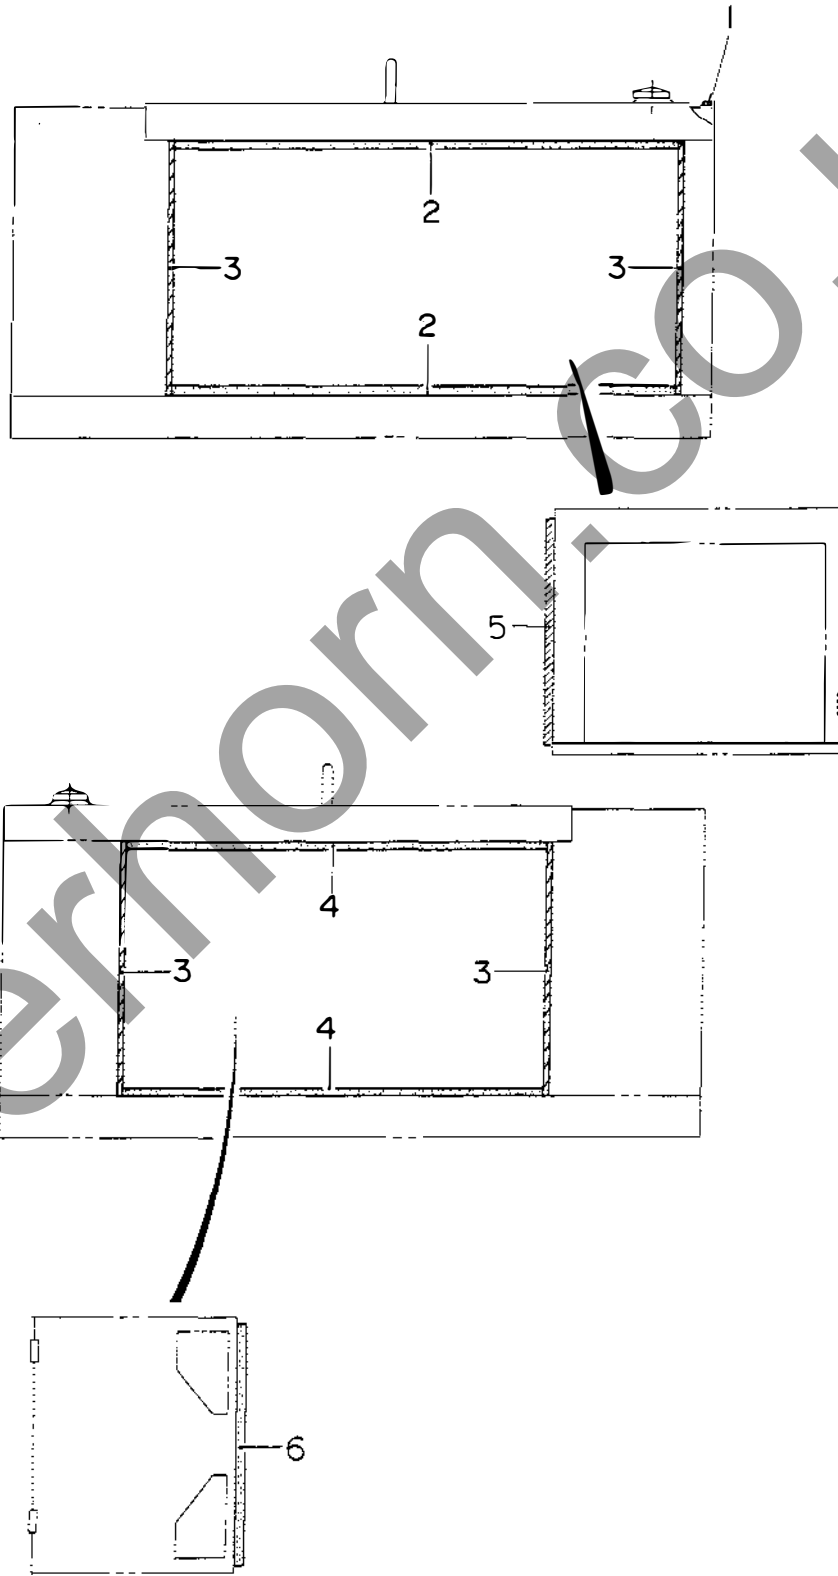

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
1	03149 00720	Seal Rubber		1					
2	03149 01380	Seal Rubber		2					
3	02294 00695	Seal Rubber		4					
4	02294 01150	Seal Rubber		2					
5	02294 00650	Seal Rubber		1					
6	03149 00650	Seal Rubber		1					

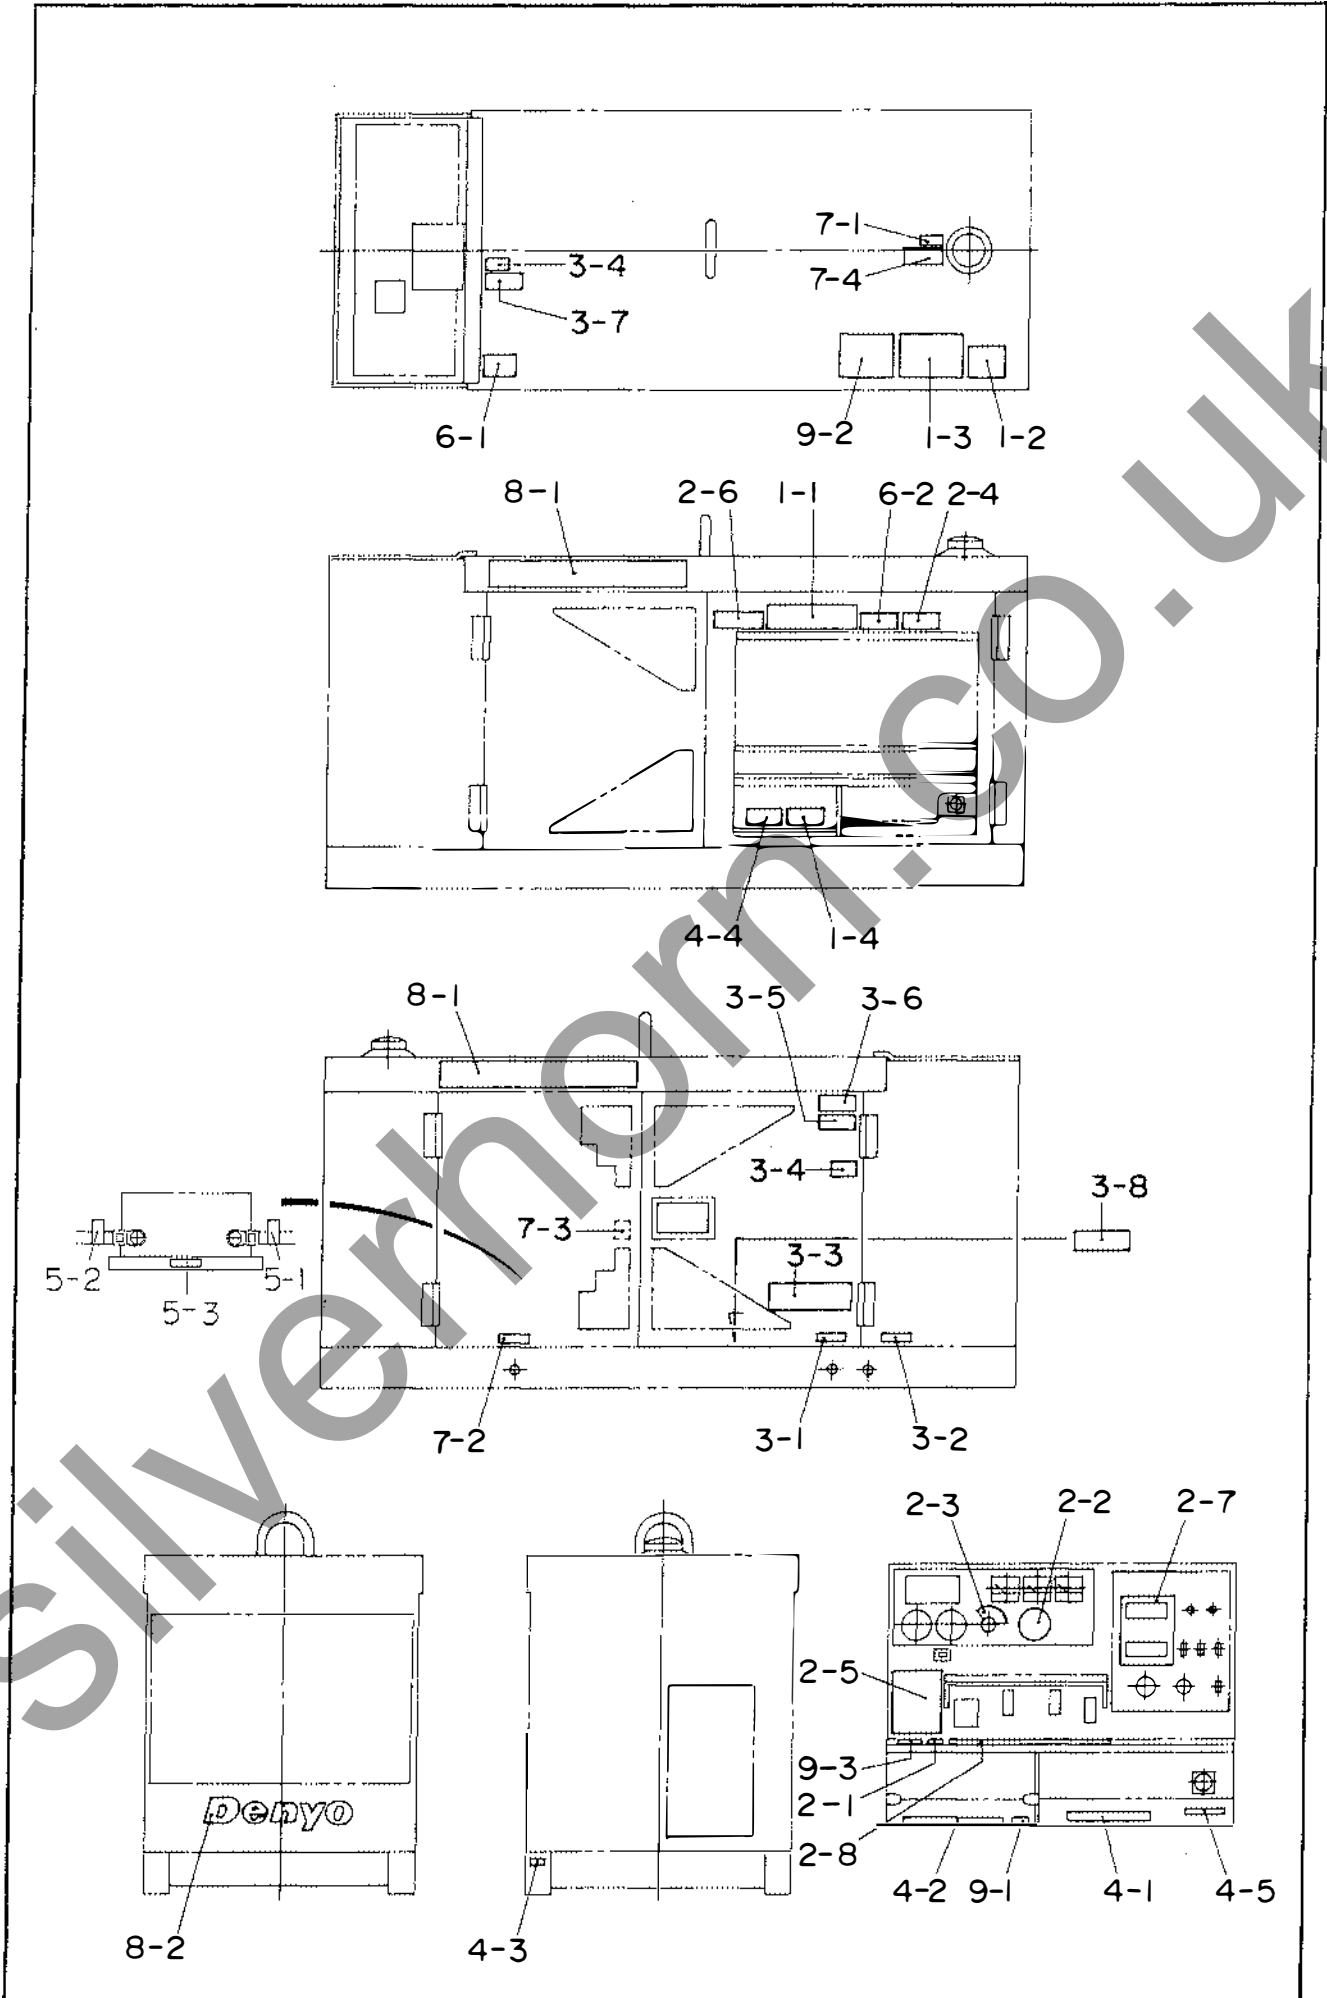

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
		A=0. P							
1- 1	D 55311 01803	Decal;Specification	D5311 0180	1					
1- 2	B 95211 00404	Decal;General Cautions	B9211 0040	1					
1- 3	78106 16013	Decal;Operating Procedures	S-4162B	1					
1- 4	B 95111 00304	Decal;Warning	B9111 0030	1					
		Control Panel Group							
2- 1	10106 40004	Decal;50Hz	S-1418	1					
2- 2	78106 34004	Decal;Auto. Air Extraction Device	S-4123	1					
2- 3	75606 15004	Decal;Starter Switch	S-4547	1					
2- 4	B 95311 00604	Decal;Warning Electric Shock Hazard	B9311 0060	1					
2- 5	D 55212 00103	Decal;Output Selector	D5212 0010	1					
2- 6	D 55212 00204	Decal;Opening Panel	D5212 0020	1					
2- 7	D 55212 00303	Decal;Meter Cover	D5212 0030	1					
2- 8	D 55510 01403	Decal;Circuit Breaker	D5510 0140	1					
		Engine & Radiator Group							
3- 1	16306 45004	Decal;Oil Drain	S-1403	1					
3- 2	16306 47004	Decal;Coolant Drain	S-1404	1					
3- 3	13206 10603	Decal;Water · Oil Check And Fill	Daily S-1760	1					
3- 4	78106 80204	Decal;Cooling Water	S-3061	2					
3- 5	B 95040 00304	Decal;Caution Hot Parts	B9040 0030	1					
3- 6	B 95040 00404	Decal;Warning Moving Parts	B9040 0040	1					
3- 7	B 95041 00104	Decal;Warning Hot Coolant	B9041 0010	1					
3- 8	B 95050 00304	Decal;Caution Oil Level	B9050 0030	1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
		Output Terminal Group							
4- 1	08006 90804	Decal;Welding Output Terminal	S-1238A	1					
4- 2	08006 53104	Decal;3-Phase Output Terminal	S-1429	1					
4- 3	08406 23704	Decal;Ground	S-2954	1					
4- 4	B 95311 00504	Decal;Warning Electric Shock Hazard	B9311 0050	1					
4- 5	D 55510 01504	Decal;Remote & Feeder Connector	D5510 0150	1					
		Battery Group							
5- 1	08006 89504	Decal;-	S-2091	1					
5- 2	08006 89404	Decal;+	S-2090	1					
5- 3	0820650604A	Decal;Danger Explosive Gases		1					
		Muffler Group							
6- 1	87006 11804	Decal;Dangerous Gas	S-4984	1					
6- 2	B 95042 00004	Decal;Warning Engine Exhaust	B9042 0000	1					
		Fuel Tank Group							
7- 1	13206 20904	Decal;Diesel Fuel	S-1756	1					
7- 2	78106 80104	Decal;Fuel Drain	S-3060	1					
7- 3	85206 35004	Decal;Fuel Cock	S-5069	1					
7- 4	B 95045 00004	Decal;Warning Diesel Fuel	B9045 0000	1					
		Bonnet Group							
8- 1	D 55610 00103	Decal;DCW-450S		2					
8- 2	E 95112 01203	Decal;Denyo		1					
		Earth Leakage Relay Group							
9- 1	08406 23604	Decal;Ground	S-2953	1					

Key No.	Parts No.	Parts Name	Remarks	Q'ty				Symbol	Serial No.
				All	A	B	C		
9- 2	08406 23803	Decal;Caution for the Handling of E. L. R	S-2955A		1				
9- 3	B 95111 00404	Decal;Warning Electric Shock Hazard	B9111 0040		1				

Silverhorn.CO.UK