

Form No.
50960088
Revision A
September
2014


TD 3.6 L4

Deutz Engine

Telescopic Handlers

Gehl RS6-34 (Tier IV)

 Manitou MT6034 T (Tier IV)

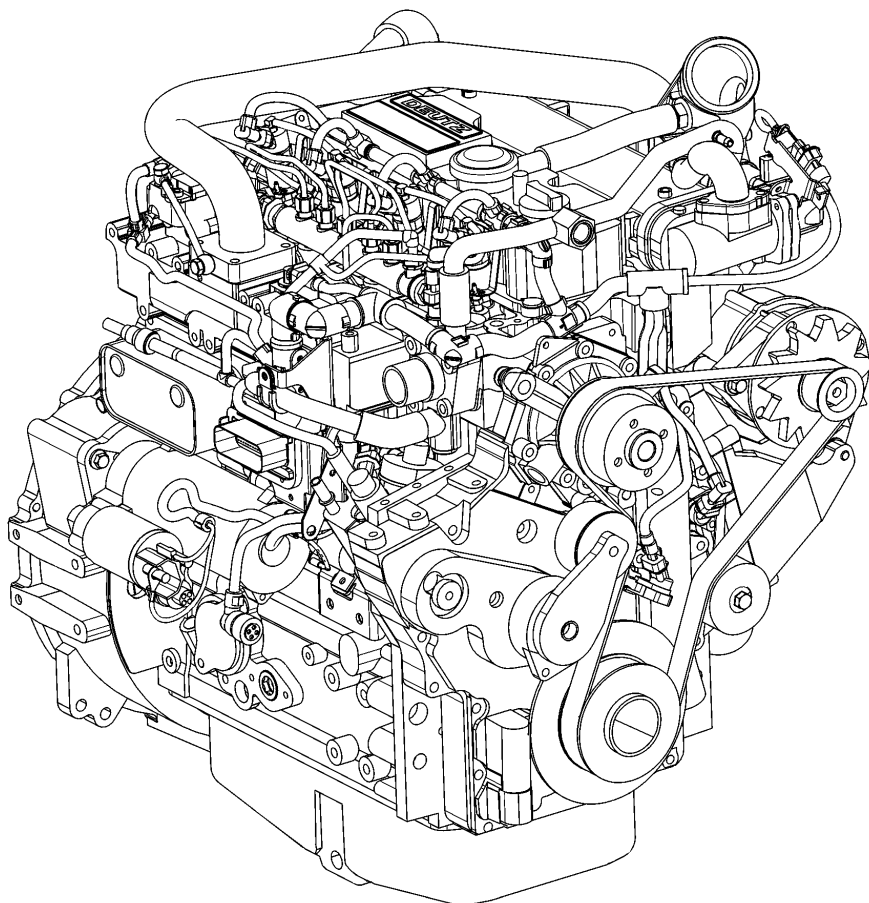

Parts Manual

Introduction

Deutz TD 3.6 L4

The Table of Contents pages list the page locations of the various component groups on the engine.

Manitou Americas, Inc. reserves the right to make changes or improvements in the design or construction of any part of the unit without incurring the obligation to install such changes on any unit previously delivered.

When ordering service parts, specify the part number, full description, quantity required, and the engine model and serial number.


Model and serial number for this engine are stamped on the engine identification plate located on the top of the valve cover.

NOTE: The engine manufacturer occasionally makes changes to engine components; therefore, it is important to always provide the factory parts department with the model and serial number of the engine when ordering parts. This is especially important when the part number in this parts manual is listed as **CFPD** (Call Factory Parts Department) or **TBD** (To Be Determined).


The following icons shown on various pages provide important information or identify where additional information can be found.



Identifies where additional information can be found.

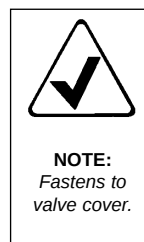

Identifies missing, hidden parts, or adds informational comments.

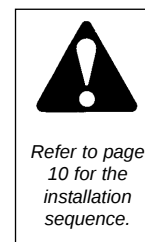

Alerts and directs user to investigate more information.



Informs user of specific parts details for ordering.




Identifies the correct torque of the bolt, nut, fitting, or other hardware. When a value is not present, refer to the engine shop manual for correct torque values and procedures.

Model


Serial Number




Engine Identification Plate
(Located on top of the valve cover)

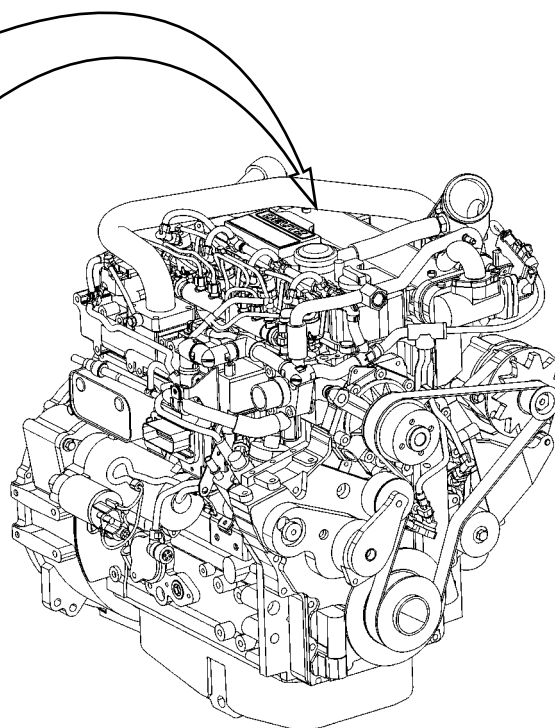

Component Locations	2
Engine Block, Oil Pan, Plugs, and Gasket Set	4
Oil Pickup Lines	6
Oil Cooler, Oil Filter, and Oil Pressure Sensor	7
Connecting Rod	8
Piston	9
Crankshaft, Pulley, and Sensor	10
Camshaft, Lifters, Rocker Arms, and Sensor	11
Cylinder Head and Valve Cover	12
Flywheel Housing, Starter, and Starter Relay	14
Flywheel and Starter Ring	16
Oil Pump and Timing Gear Cover	18
Fuel Injector Pressure Pump	20
Fuel Rail and High-Pressure Fuel Lines	22
Fuel Return Lines	23
Fuel Injector	24
Glow Plug	25
Turbocharger	26
Turbocharger Oil Lines	27
Turbocharger Hose and Crankcase Breather Tube	28
Turbocharger Exhaust	29
Exhaust Manifold Group	30
Diesel Oxidation Catalyst (DOC) Group	31
Air Intake Manifold	32
Air Intake Sensors	33
Air Intake Tube Group	34
EGR Valve and EGR Cooler Group	36
Water Pump Group	38
Thermostat Housing Group	40
Alternator Group	42
Fan Belt and Tensioner	44
Engine Wire Harnesses	46
Harness Connectors	48
ECU (Electronic Control Unit)	49
Numeric Index	50
Subject Index	52
Torque Specifications	56

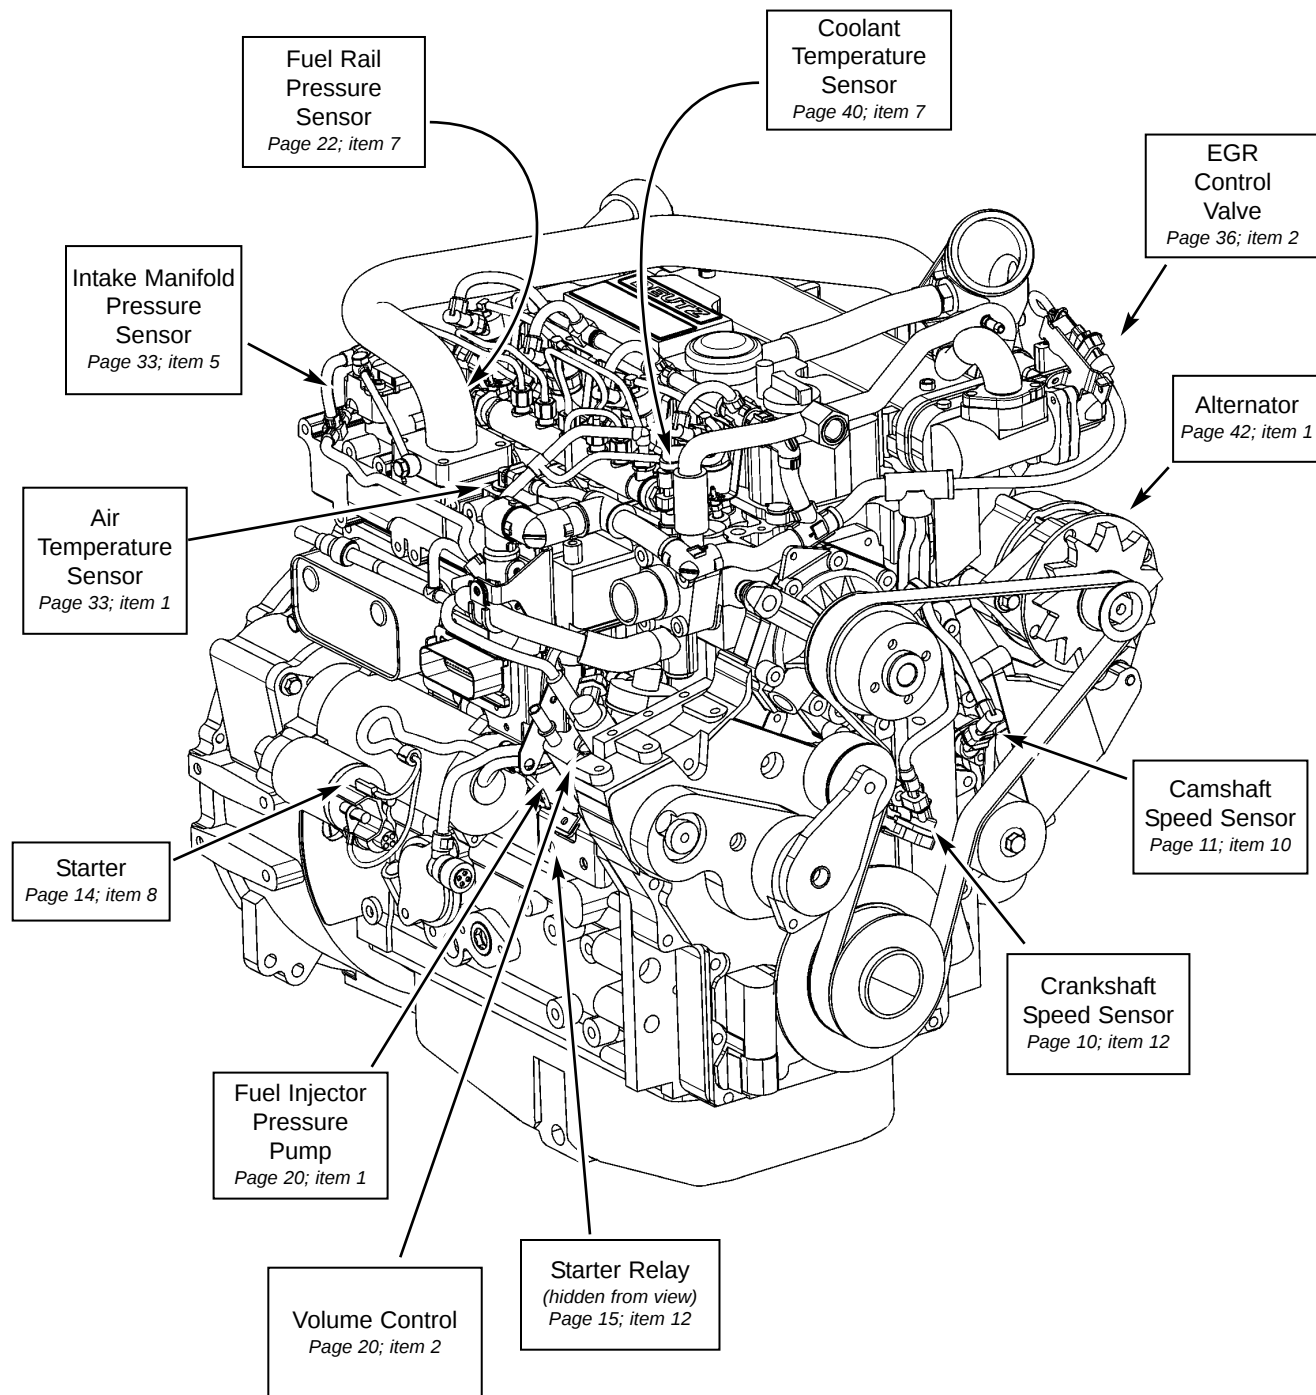 


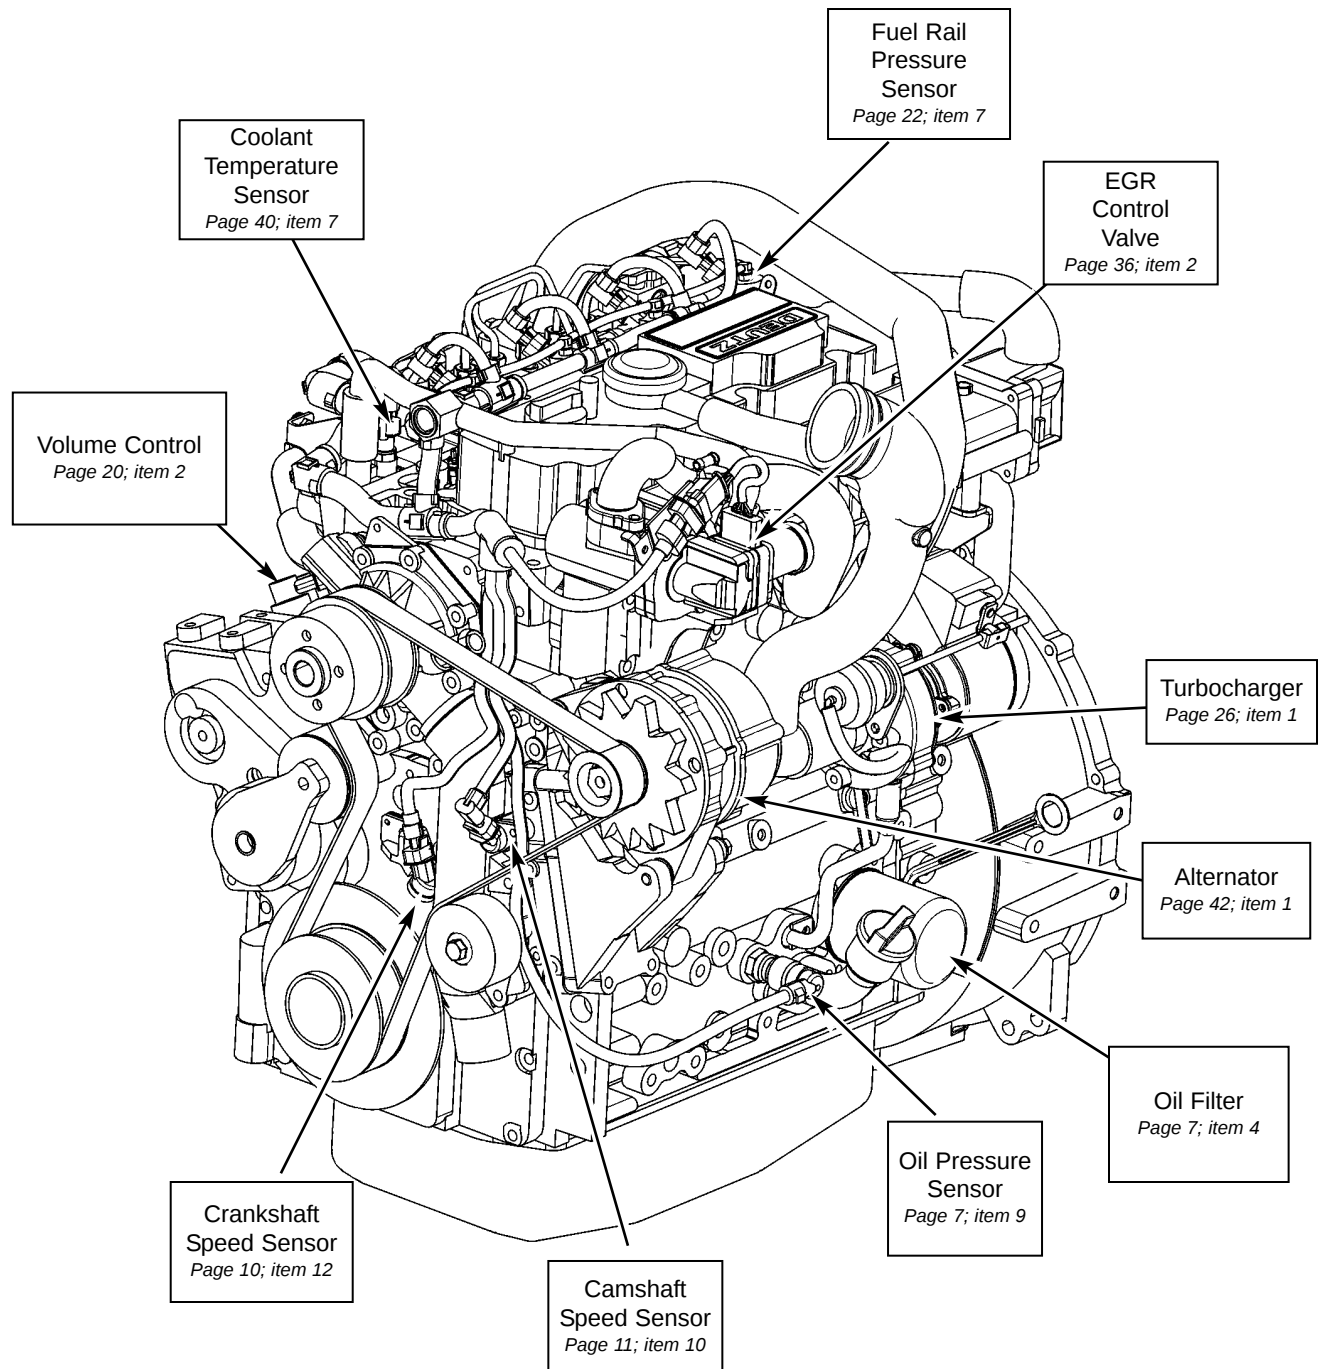 

Engine

Deutz TD 3.6 L4

 Engine Block, Oil Pan, Plugs, and Gasket Set


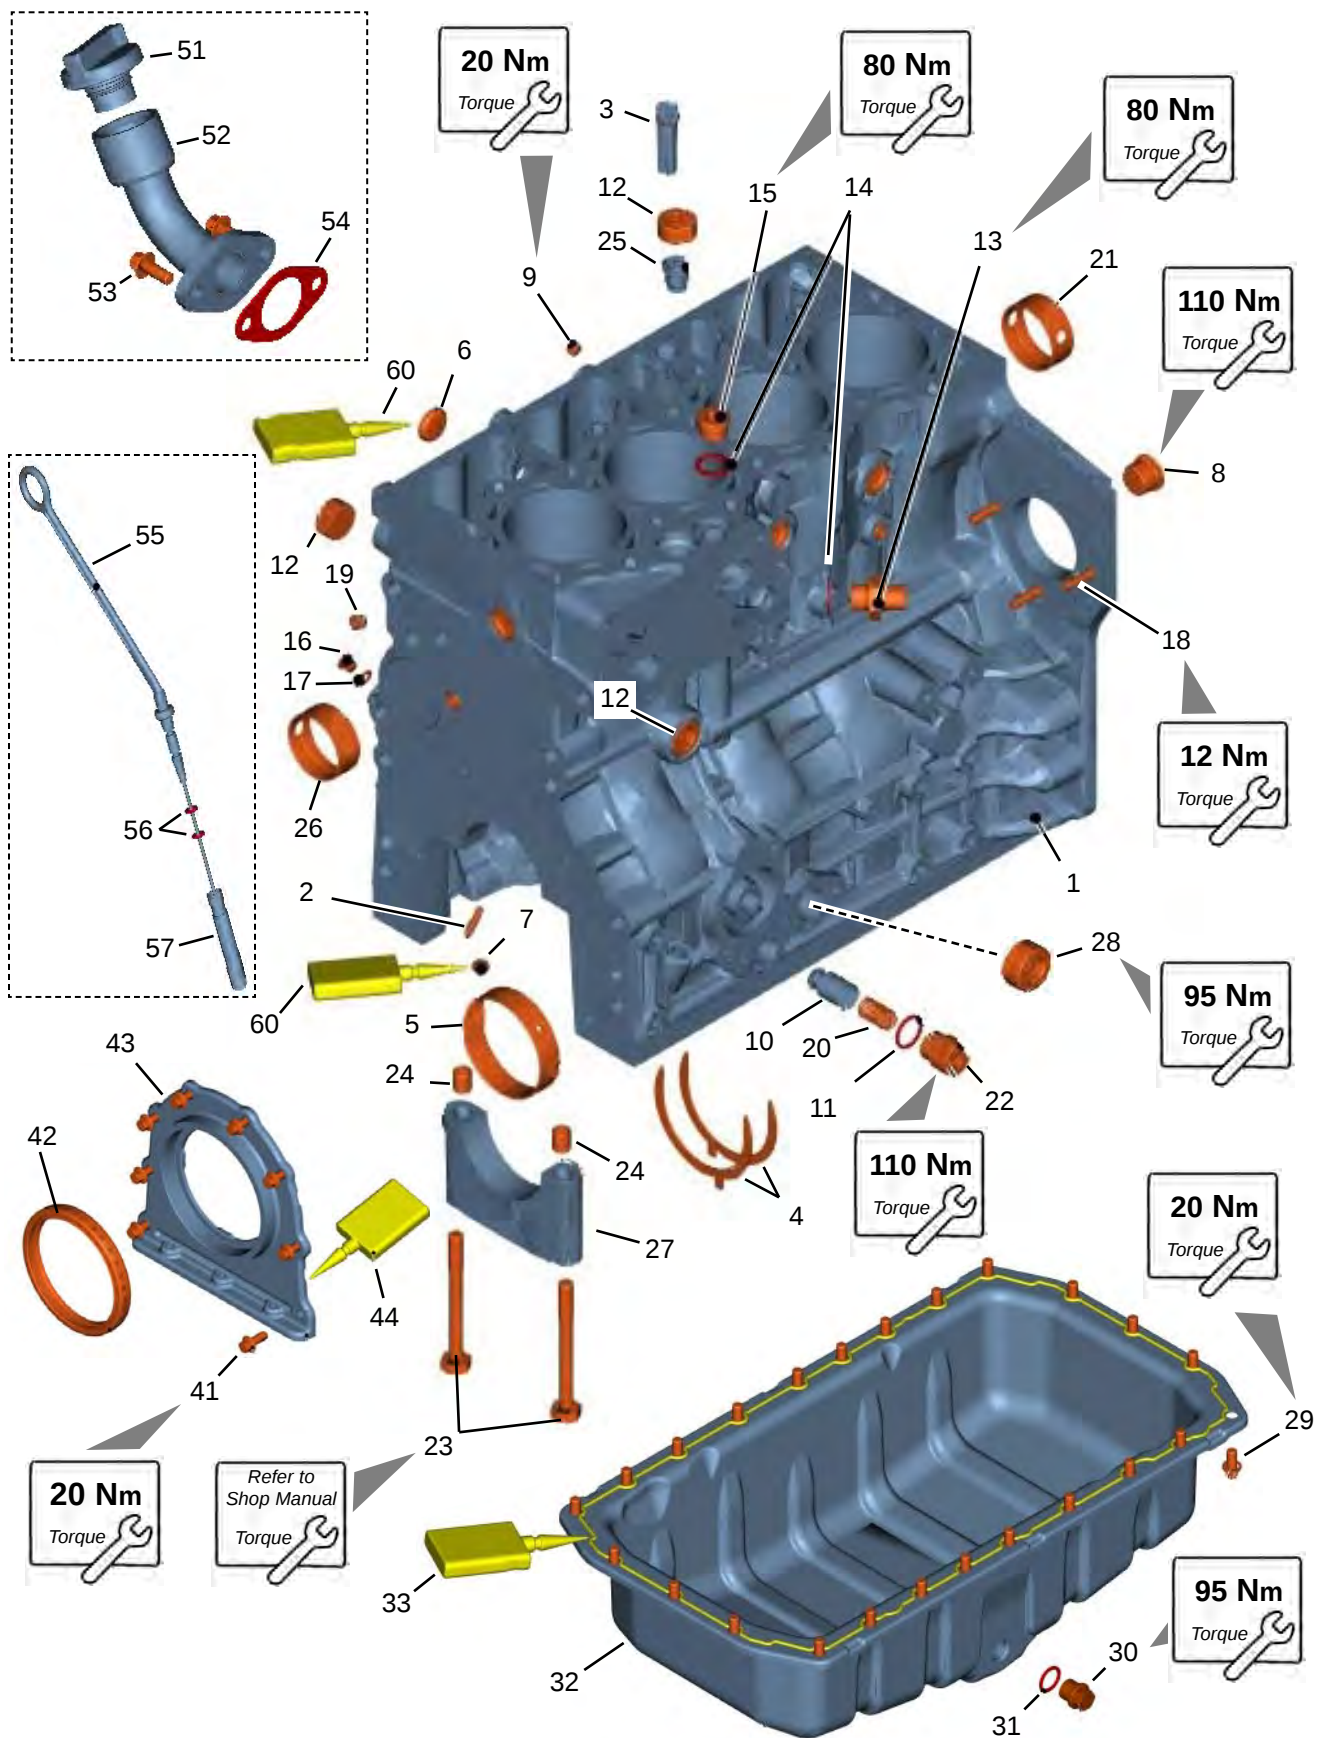


Engine Block, Oil Pan, Plugs, and Gasket Set

Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220780	ENGINE BLOCK ASSEMBLY 1 (includes items 6-27)	1	23	50220332	BOLT, MAIN BEARING CAP 10	10
02	133417	PISTON COOLING NOZZLE 8	8	24	50220333	ALIGNMENT BUSHING 10	10
03	50220323	VALVE 1	1	25	50220562	BY-PASS 1	1
04		BEARING, THRUST 1	1	26	TBD	CAM BEARING/BUSHING 4	4
	50220324	Standard		27	NSS	MAIN BEARING CAP 5 (included with item 1)	5
	50220334	Oversize — 2,53 mm		28	133537	PLUG 1	1
05		BEARING, MAIN 5	5	29	187234	BOLT, TORX HEAD 24	24
	50220325	Standard		30	133149	PLUG, OIL PAN DRAIN 1	1
	50220335	Undersize — 84,75 mm		31	105407	SEAL 1	1
	50220336	Undersize — 84,50 mm		32	50220340	OIL PAN 1	1
06	187262	PLUG 5	5	33	50220560	SEALANT 1	1
07	50220326	PLUG 1	1	41	105289	BOLT 8	8
08	50220327	PLUG 1	1	42	133387	REAR MAIN SEAL 1	1
09	133539	PLUG (M10-1.0 mm) 2	2	43	50220315	REAR MAIN SEAL HOUSING 1 (includes item 42)	1
10	133414	VALVE 1	1	44	133103	SEALANT 1	1
11	133139	SEALING RING 1	1	51	133444	FILLER CAP 1	1
12	133537	PLUG 3	3	52	50220776	OIL FILLER TUBE 1	1
13	50220328	HOSE CONNECTOR 1	1	53	105289	BOLT (torque 30Nm) 2	2
14	50220329	SEALING RING 2	2	54	50220777	GASKET 1	1
15	187276	PLUG (M22-1.5 mm) 1	1	55	50220774	DIPSTICK, ENGINE OIL LEVEL . . 1 (includes item #56)	1
16	133147	PLUG (M10-1.0 mm) 2	2	56	50220775	O-RING (included w/#57) 2	2
17	133132	SEALING RING 2	2	57	50220773	GUIDE TUBE, DIPSTICK 1	1
18	187115	STUD 3	3	60	50220561	SAFETY LOCK AGENT 1	1
19	133536	PLUG (M14-1.5 mm) 6	6	70	50220559	GASKET SET, TD3.6 L4 ENGINE. . 1	1
20	50220330	COMPRESSION SPRING 1	1				
21	133405	BUSHING 1	1				
22	50220331	ADAPTER 1	1				



  
NOTE: At the time of publication of this parts manual, the engine OEM was unable to provide availability or pricing for the cam bushings/bearings (item 26). Please contact the Factory Parts Department for more information.

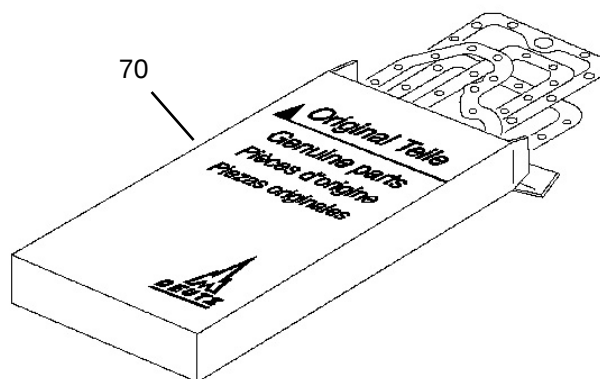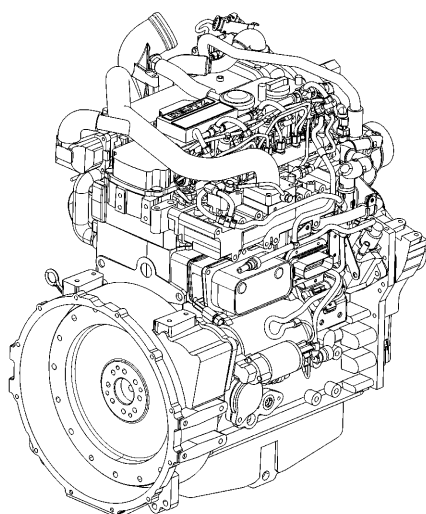


Engine

Oil Pickup Lines

 
Deutz TD 3.6 L4

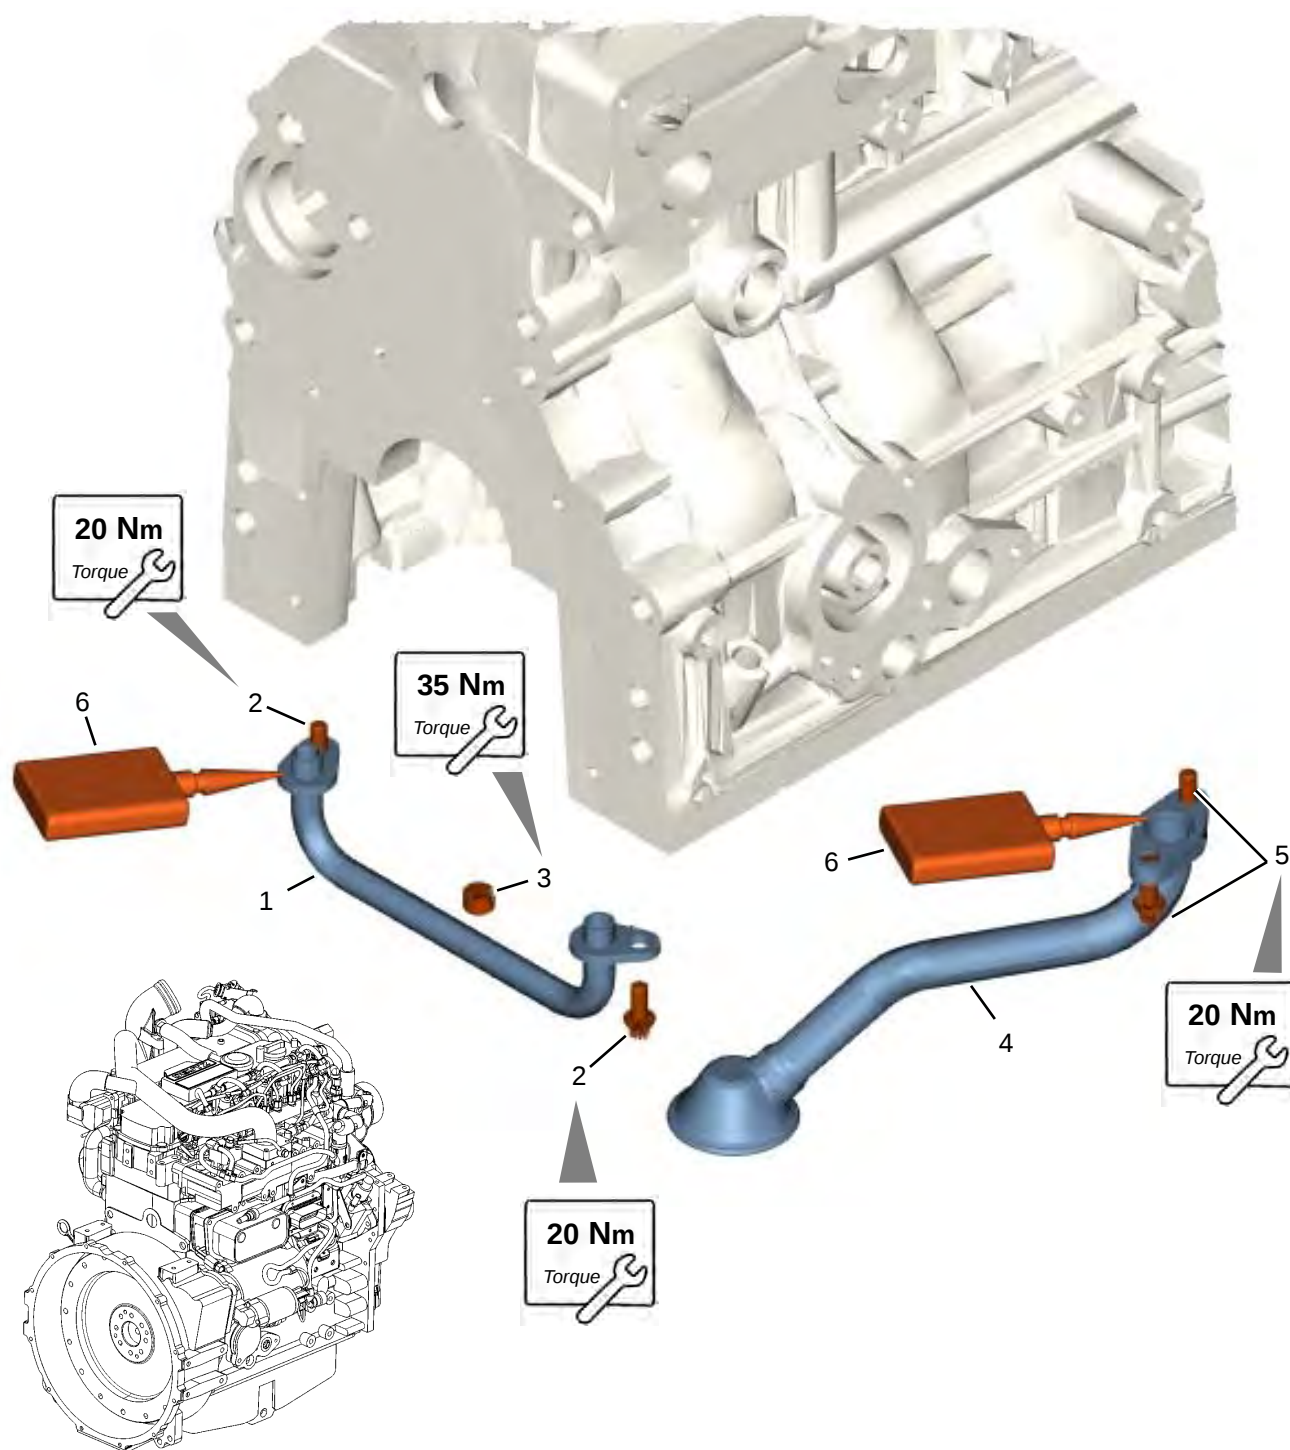

Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220406	TRANSFER PIPE, OIL	1	04	50220407	OIL SUCTION PIPE	1
02	187233	BOLT, TORX-HEAD.....	2	05	50220270	BOLT, TORX-HEAD.....	2
03	133538	PLUG.....	1	06	50220561	SEALANT	1

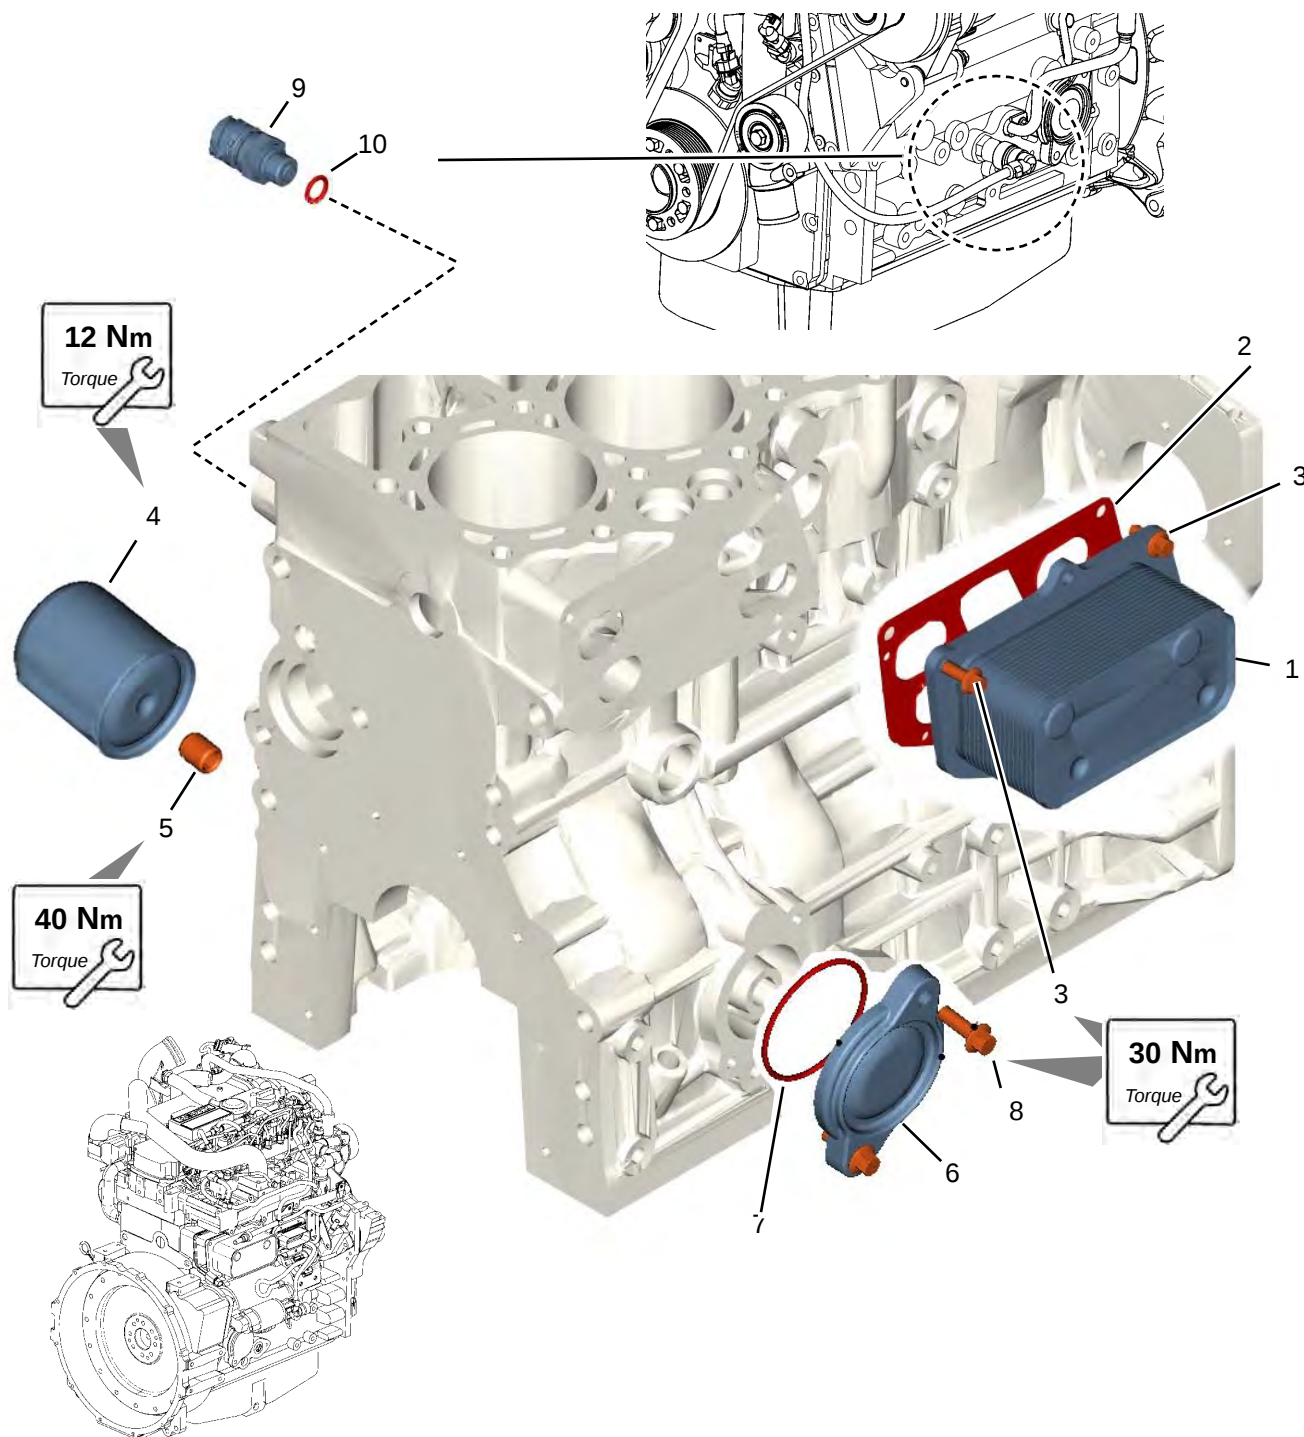 


Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220401	OIL COOLER.....	1	07	50220405	O-RING	1
02	50220402	GASKET, OIL COOLER	1	08	105905	BOLT	2
03	105289	BOLT	4	09	50220553	SENSOR, OIL PRESSURE.....	1
04	132023	FILTER, ENGINE OIL	1			(includes item 10)	
05	133326	THREADED ADAPTER.....	1	10	50220554	O-RING SEAL	1
06	50220404	PLATE/COVER	1				

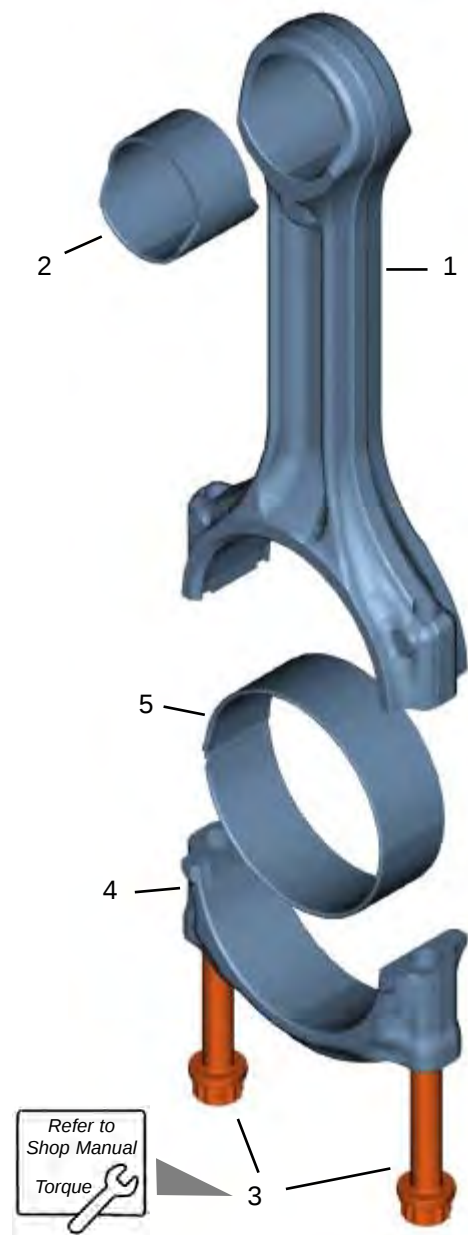 

Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220351	CONNECTING ROD ASSEMBLY . . . 1 (includes items 2-4)		05		ROD BEARING 1	
02	50220352	BUSHING, WRIST PIN 1			50220354	Standard — 68,0 mm	
03	50220353	BOLT, CONNECTING ROD. 2			50220355	1st undersize — 67,75 mm	
04	NSS	CONNECTING ROD CAP. 1 (included with item 1)			50220356	2nd undersize — 67,50 mm	



 NOTE: Quantities are for one connecting rod; the engine uses four connecting rods.

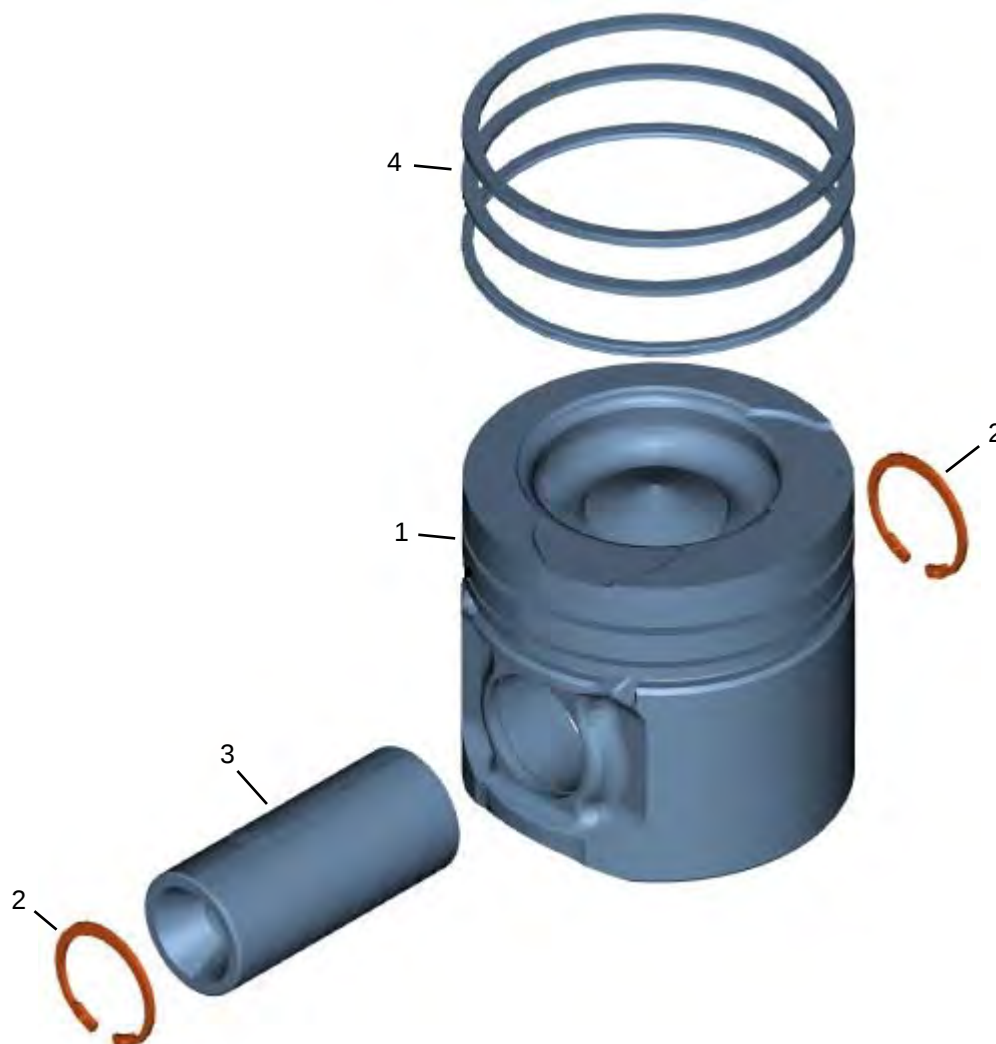

Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220357	PISTON ASSEMBLY 1		03	50220359	WRIST PIN 1	
02	50220358	SNAP RING, WRIST PIN. 2		04	50220360	PISTON RING SET (<i>one piston</i>) . . . 1	

 


NOTE: Quantities are for one piston; the engine uses four pistons.


Engine

Crankshaft, Pulley, and Sensor

Deutz TD 3.6 L4

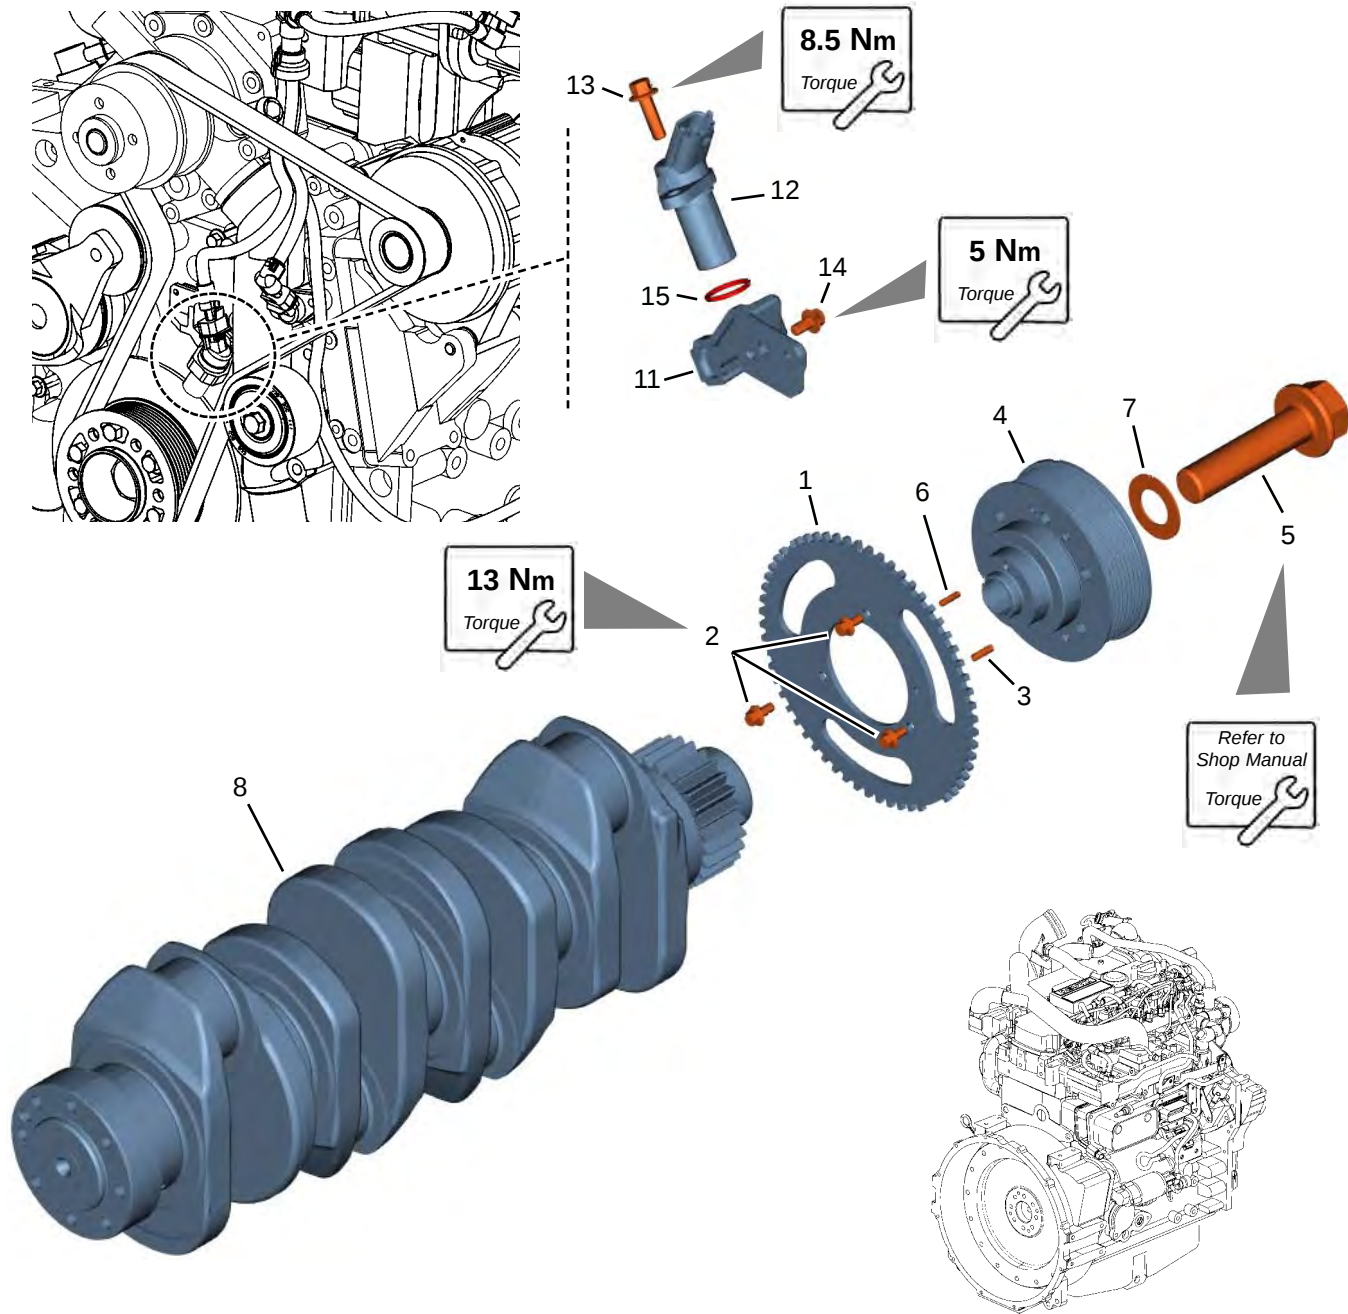

Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220344	GEAR, ENGINE SPEED	1	08	50220343	CRANKSHAFT	1
02	50220345	BOLT	3	11	50220376	BRACKET, ENGINE SPEED	1
03	50220346	PIN, ALIGNMENT	1	12	50220552	SENSOR, ENGINE SPEED	1
04	50220347	PULLEY, CRANKSHAFT	1	13	50220378	BOLT (Torque 8,5 Nm)	1
05	50220348	BOLT, CRANKSHAFT PULLEY	1	14	50220379	BOLT (Torque 5 Nm)	1
06	50220349	PIN, ALIGNMENT	1	15	50220563	O-RING	1
07	50220350	WASHER, FLAT	1				

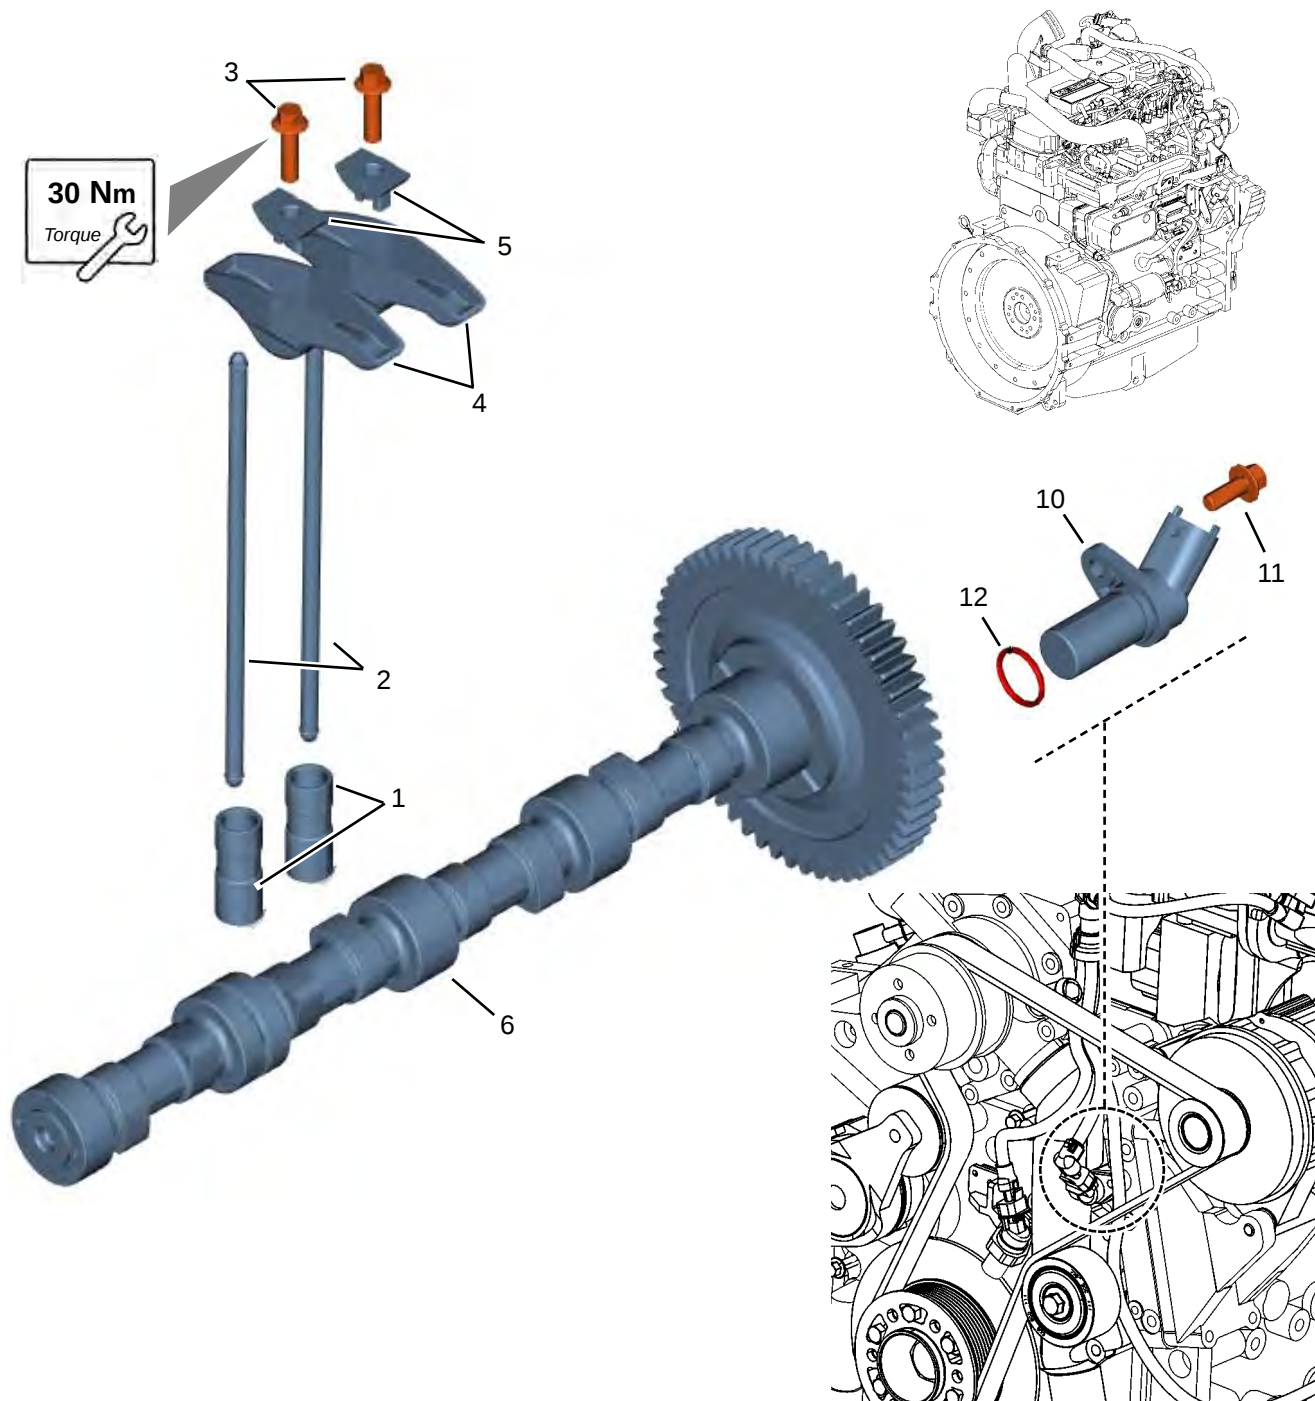 


Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	105325	VALVE LIFTER, HYDRAULIC	8	10	50220552	SENSOR, ENGINE SPEED 1 (includes item 3)	
02	50220392	PUSHROD, VALVE LIFTER	8	11	187227	BOLT	1
03	105303	BOLT	8	12	50220563	O-RING	1
04	50220393	ROCKER ARM	8				
05	50220394	ROCKER ARM BEARING	8				
06	50220778	CAMSHAFT	1				


Engine

Cylinder Head and Valve Cover

 Deutz TD 3.6 L4

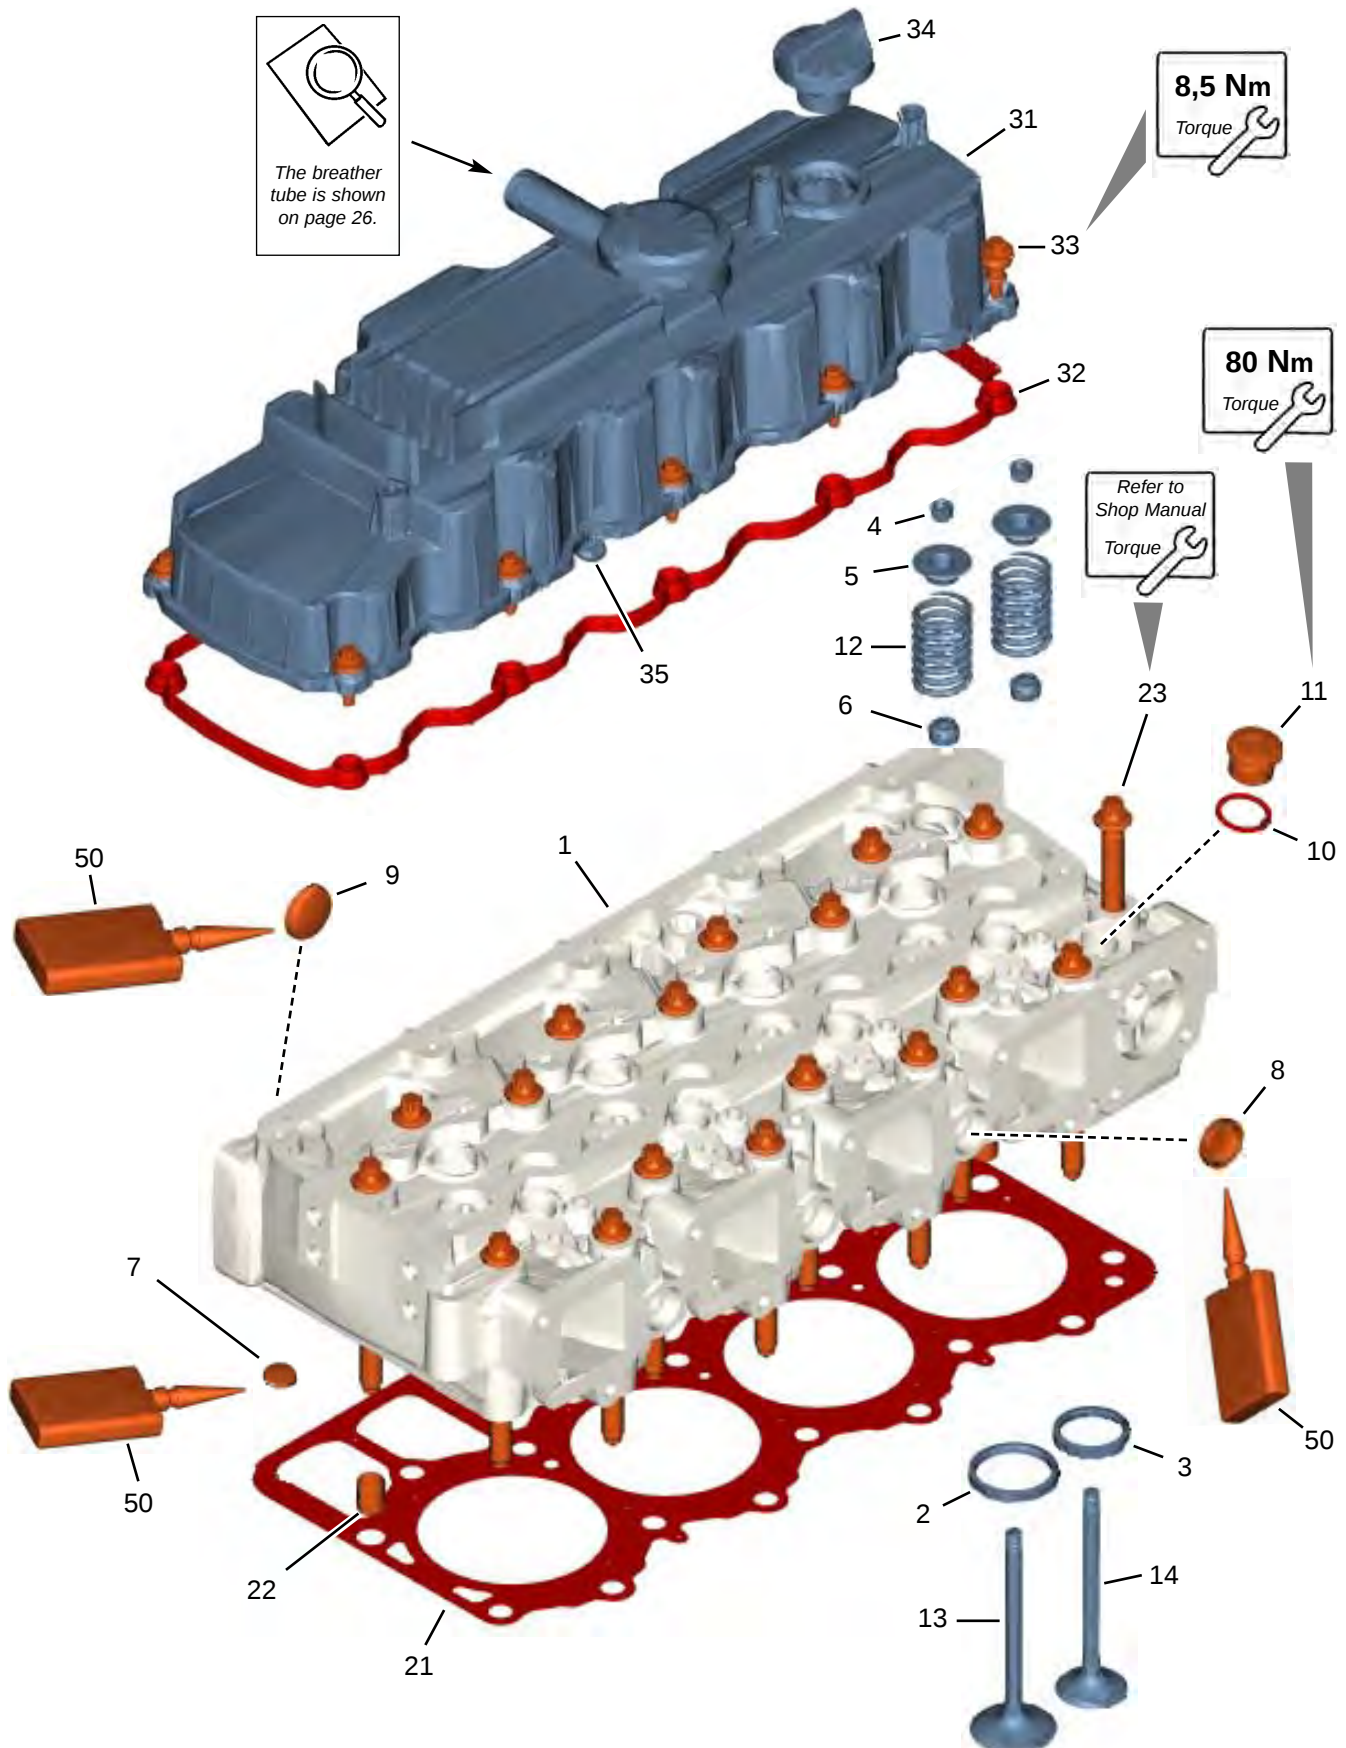


Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220779	CYLINDER HEAD 1 (includes items 2-14)	1	12	50220367	VALVE SPRING 8	8
02	50220364	VALVE SEAT, INTAKE 4	4	13	50220368	INTAKE VALVE 4	4
03	50220365	VALVE SEAT, EXHAUST 4	4	14	50220369	EXHAUST VALVE 4	4
04	133322	VALVE KEEPER 16	16	21	50220361	GASKET, CYLINDER HEAD 1	1
05	187148	VALVE SPRING CAP 8	8	22	50220333	BUSHING, ALIGNMENT 2	2
06	133352	VALVE SEAL 8	8	23	50220362	CYLINDER HEAD BOLT 18	18
07	133166	PLUG 5	5	31	50220370	VALVE COVER 1 (includes items 32-34)	1
08	50220366	PLUG 8	8	32	50220371	GASKET, VALVE COVER 1	1
09	187262	PLUG 4	4	33	50220372	BOLT 10	10
10	133138	SEALING RING (22x27 mm) 1	1	34	133444	CAP, OIL FILL 1	1
11	187276	PLUG (M22-1.5) 1	1	35	50220373	PLUG 1	1
				50	105307	SAFETY LOCK AGENT AR	AR

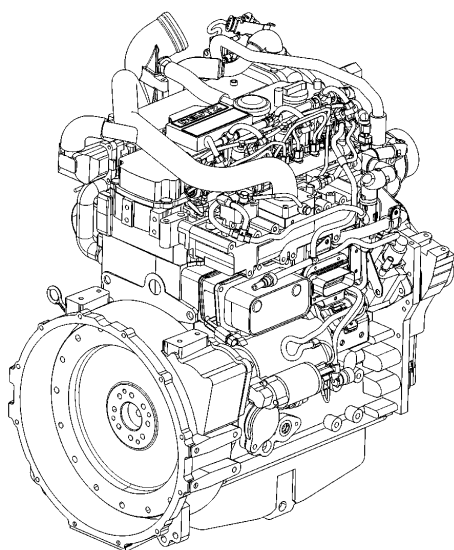 

Engine

Flywheel Housing, Starter, and Starter Relay

 Deutz TD 3.6 L4

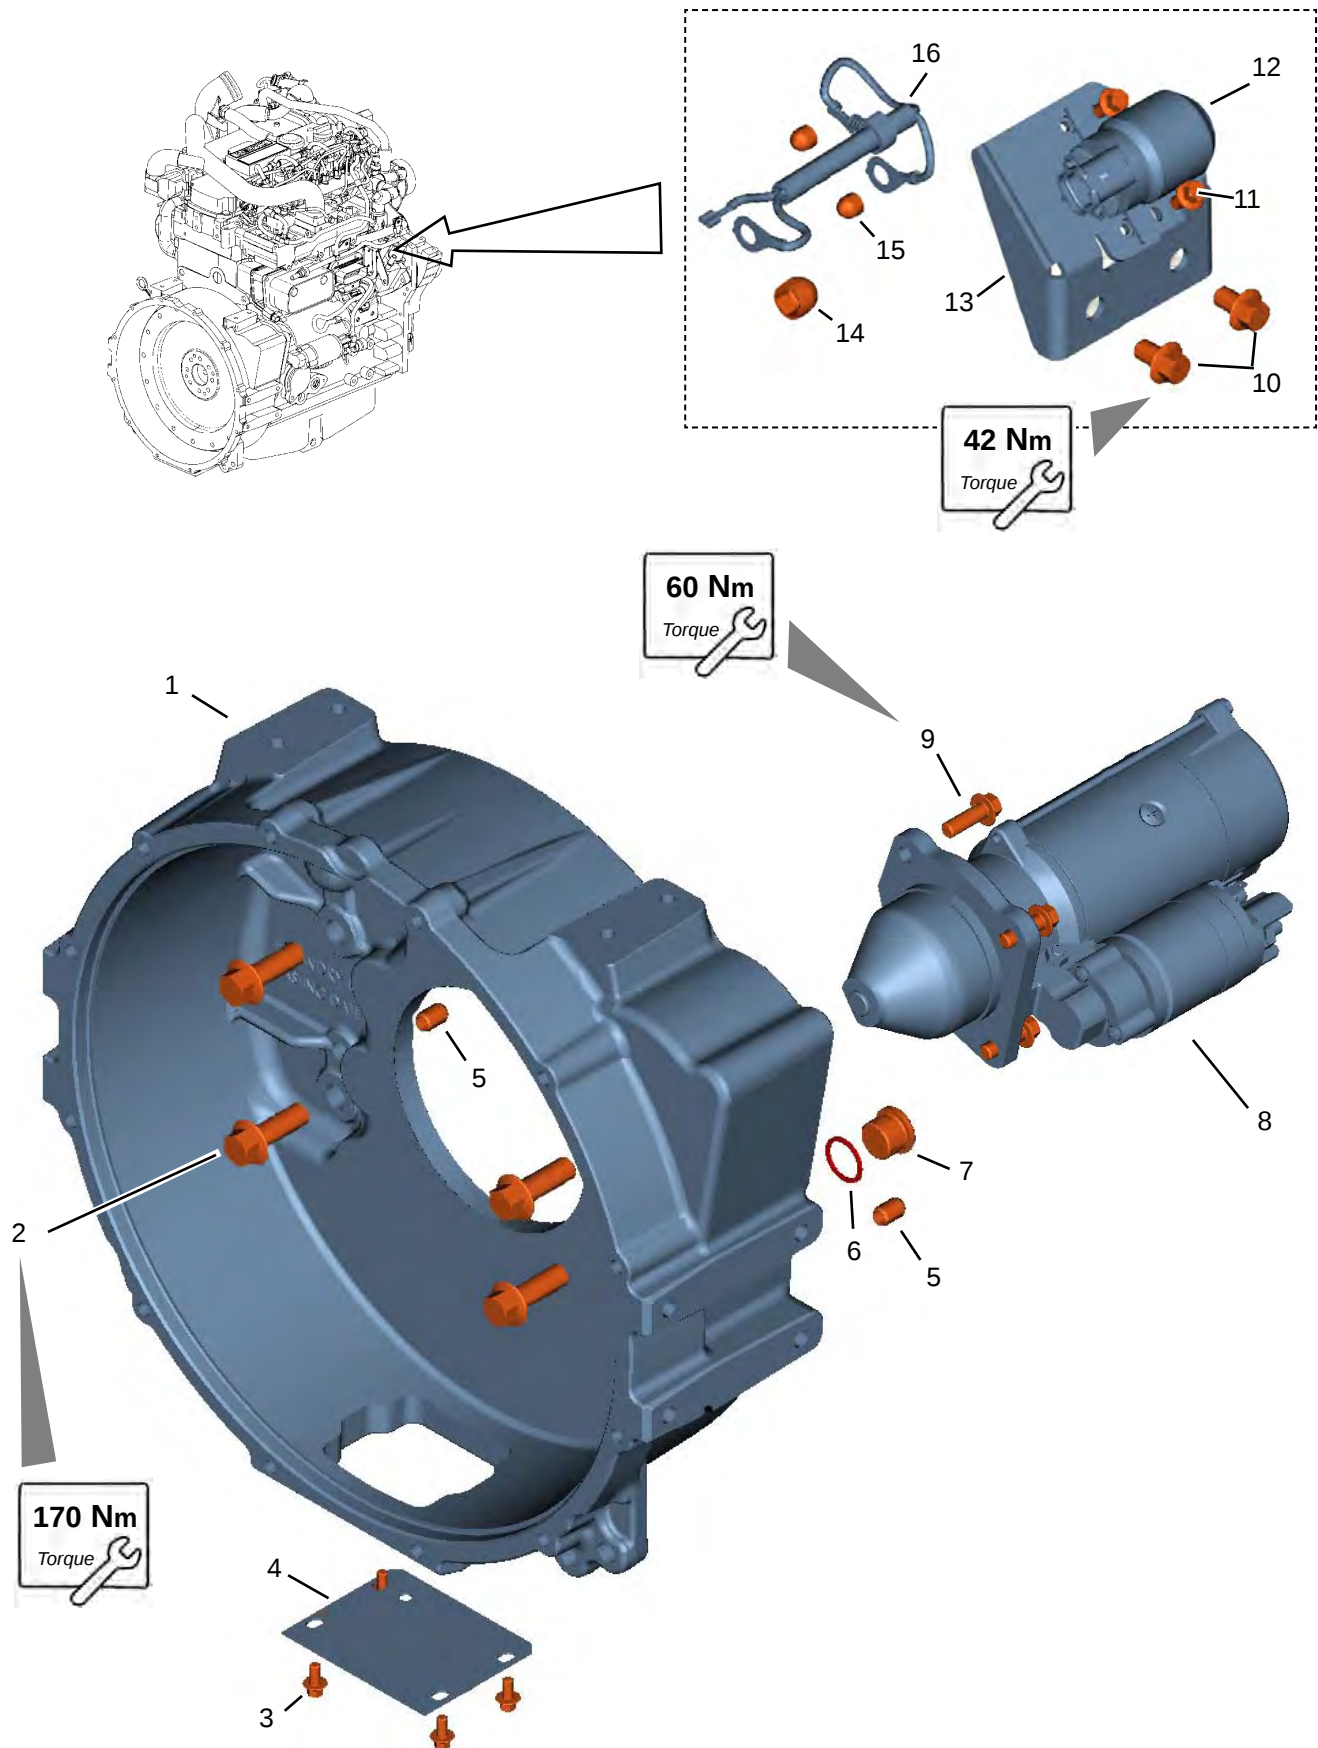


Flywheel Housing, Starter, and Starter Relay

Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220781	FLYWHEEL HOUSING	1	09	105910	BOLT	3
02	50220556	BOLT	6	10	105298	BOLT	2
03	50220345	BOLT	4	11	50220345	BOLT	2
04	50220872	COVER PLATE	1	12	50220639	RELAY, STARTER.....	1
05	133329	BUSHING, ALIGNMENT	2	13	50220638	BRACKET, STARTER RELAY.....	1
06	133138	SEALING RING	1	14	50220642	PROTECTING CAP.....	1
07	187276	SCREW PLUG	1	15	50220641	PROTECTING CAP.....	2
08	TBD	STARTER	1	16	50220640	HARNESS, STARTER RELAY	1




 NOTE: At the time of publication of this parts manual, the OEM for the starter was unable to provide availability or pricing. Please contact the Factory Parts Department for more information.

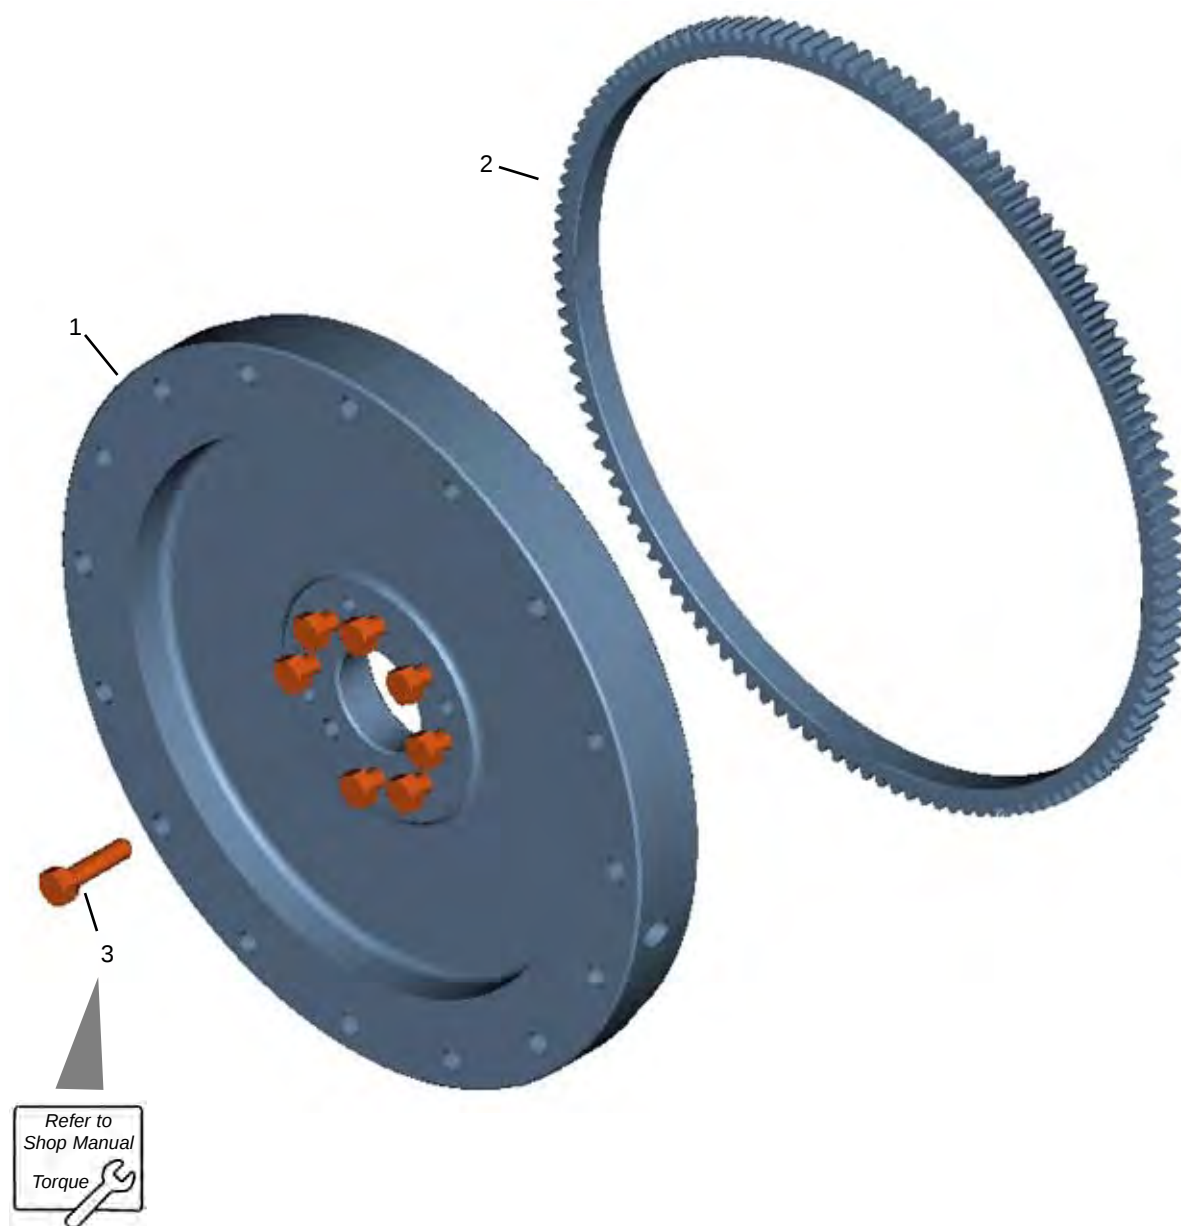


Item No.	Part No.	Description	Qty. Req.
01	50220783	FLYWHEEL 1 <i>(includes item 2)</i>	
02	50220784	STARTER RING 1 <i>(included with item 1)</i>	
03	133335	BOLT 8	

 
Oil Pump and Timing Gear Cover

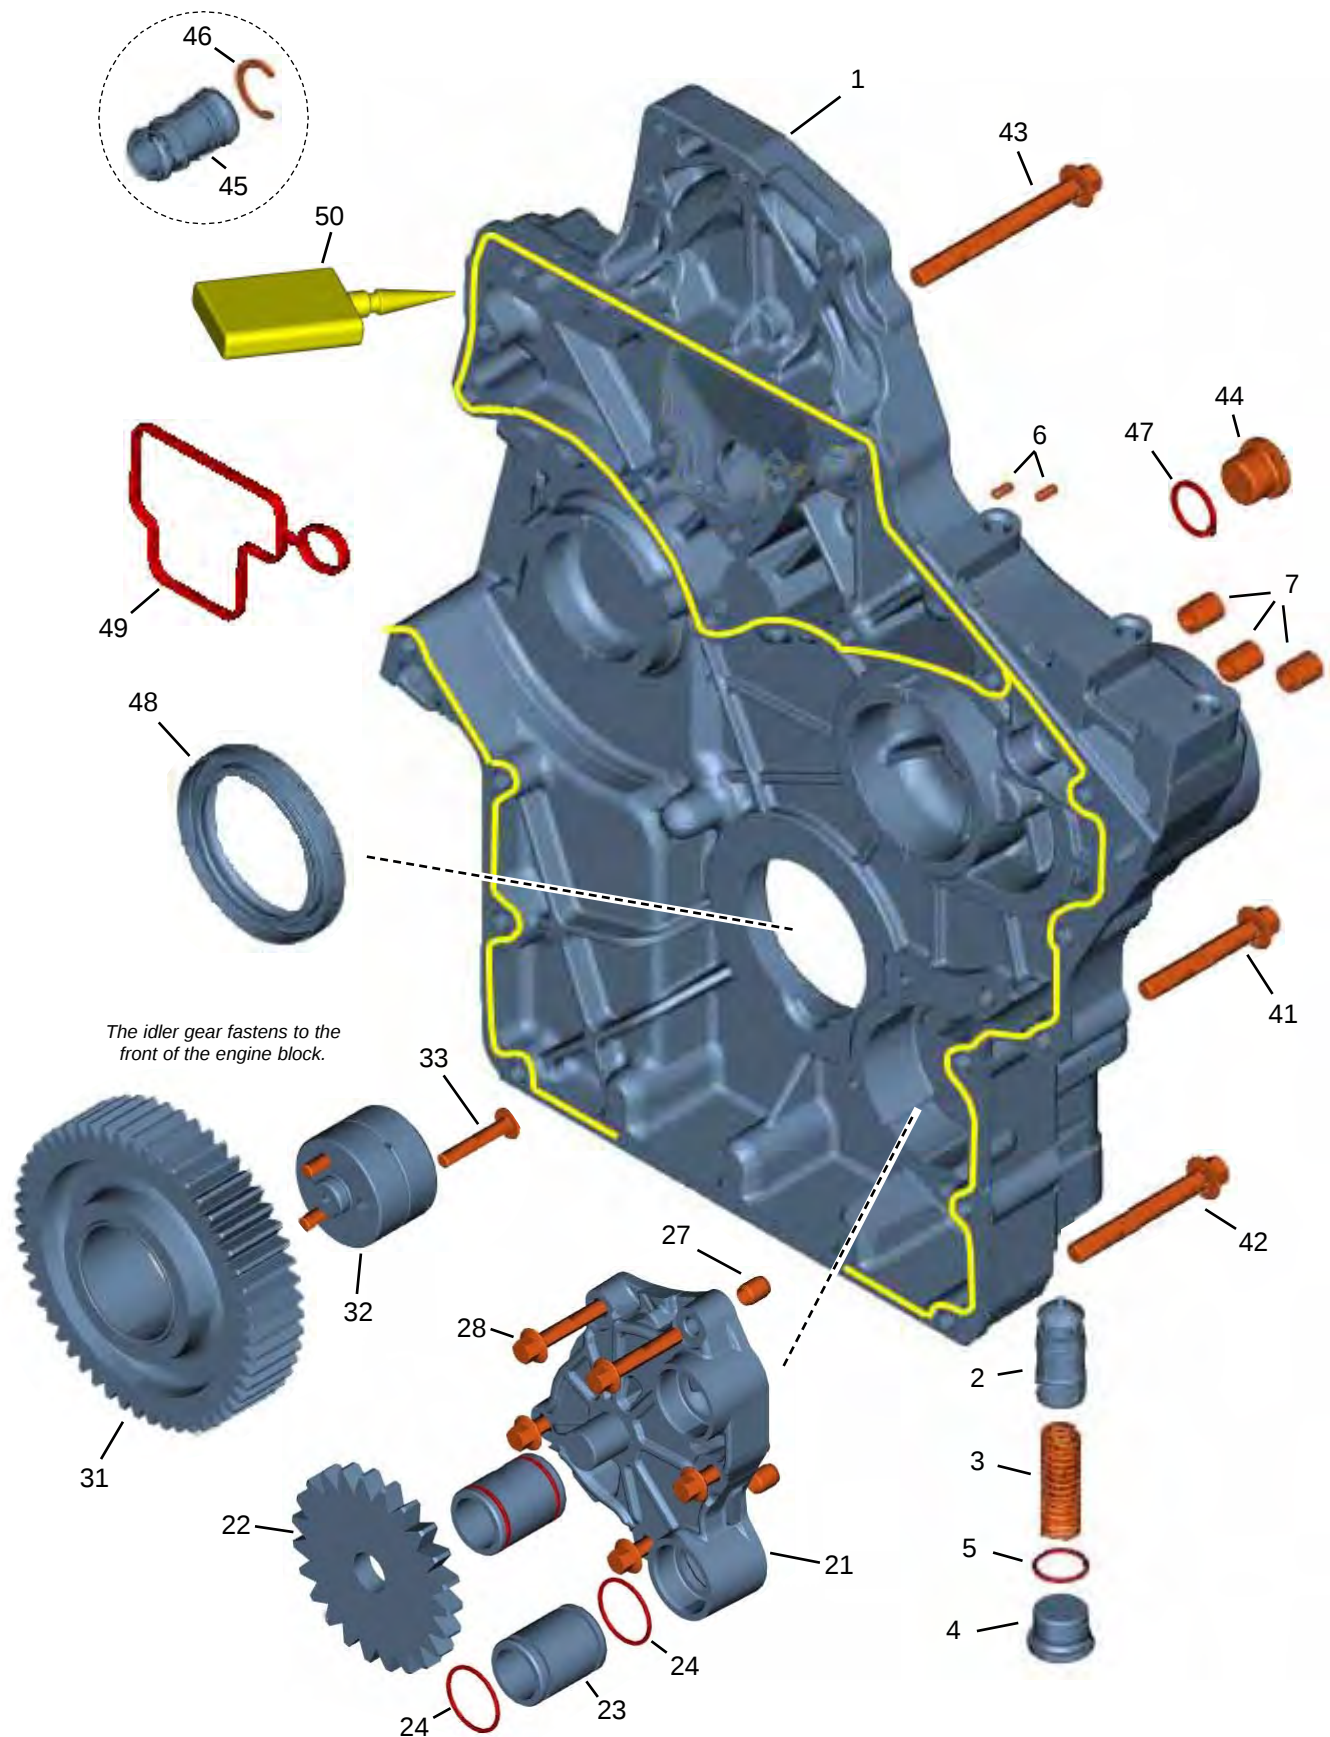

Oil Pump and Timing Gear Cover

Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220785	COVER, TIMING GEAR	1	31	50220374	GEAR, IDLER	1
02	50220385	VALVE PLUNGER	1	32	50220375	SHAFT	1
03	50220386	VALVE SPRING	1	33	105896	BOLT (Torque 30 Nm)	3
04	50220387	SPRING CAP (Torque 60 Nm)	1	41	50220380	BOLT (Torque 30 Nm)	10
05	50220388	O-RING	1	42	105292	BOLT (Torque 30 Nm)	7
06	50220389	PIN, ALIGNMENT	2	43	50220381	BOLT (Torque 30 Nm)	5
07	50220390	THREADED INSERT	3	44	133151	PLUG (Torque 55 Nm)	1
21	50220395	OIL PUMP	1	45	50220382	CONNECTOR, COOLANT PORT ..	1
		(includes items 22-24)		46	50220383	RETAINER, COOLANT CONN....	1
22	50220396	GEAR, OIL PUMP	1	47	133136	SEALING RING (18x20 mm)	1
23	50220397	ADAPTER TUBE	2	48	133388	SEAL, CRANKSHAFT	1
24	50220398	O-RING	4	49	50220786	PROFILE WASHER	1
27	50220399	DOWEL BUSHING	2	50	133103	SEALANT	1
28	50220400	BOLT (Torque 8,5 Nm)	5				

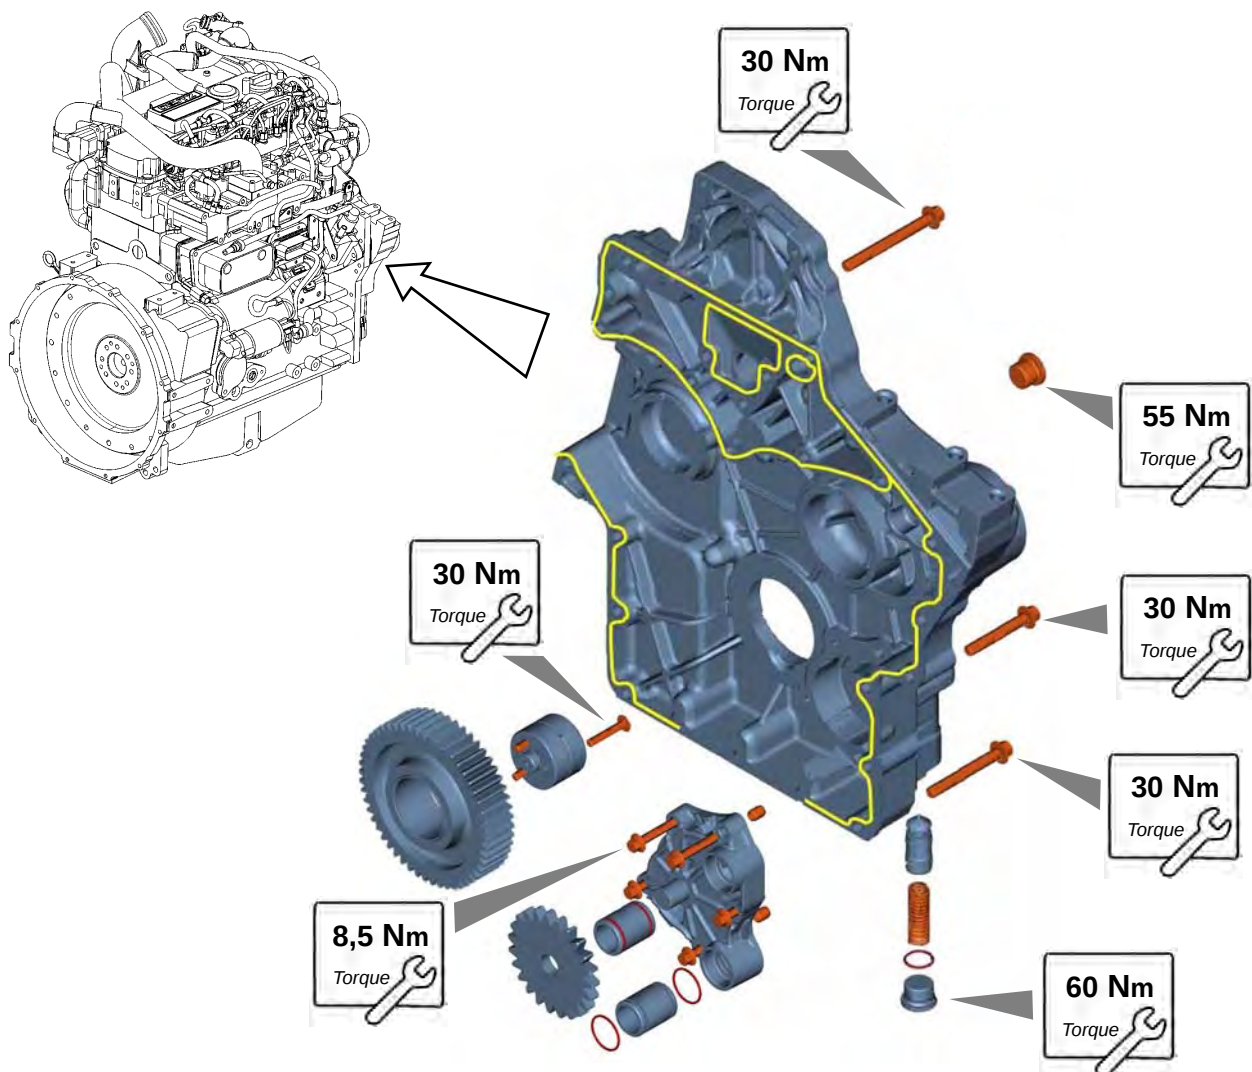 


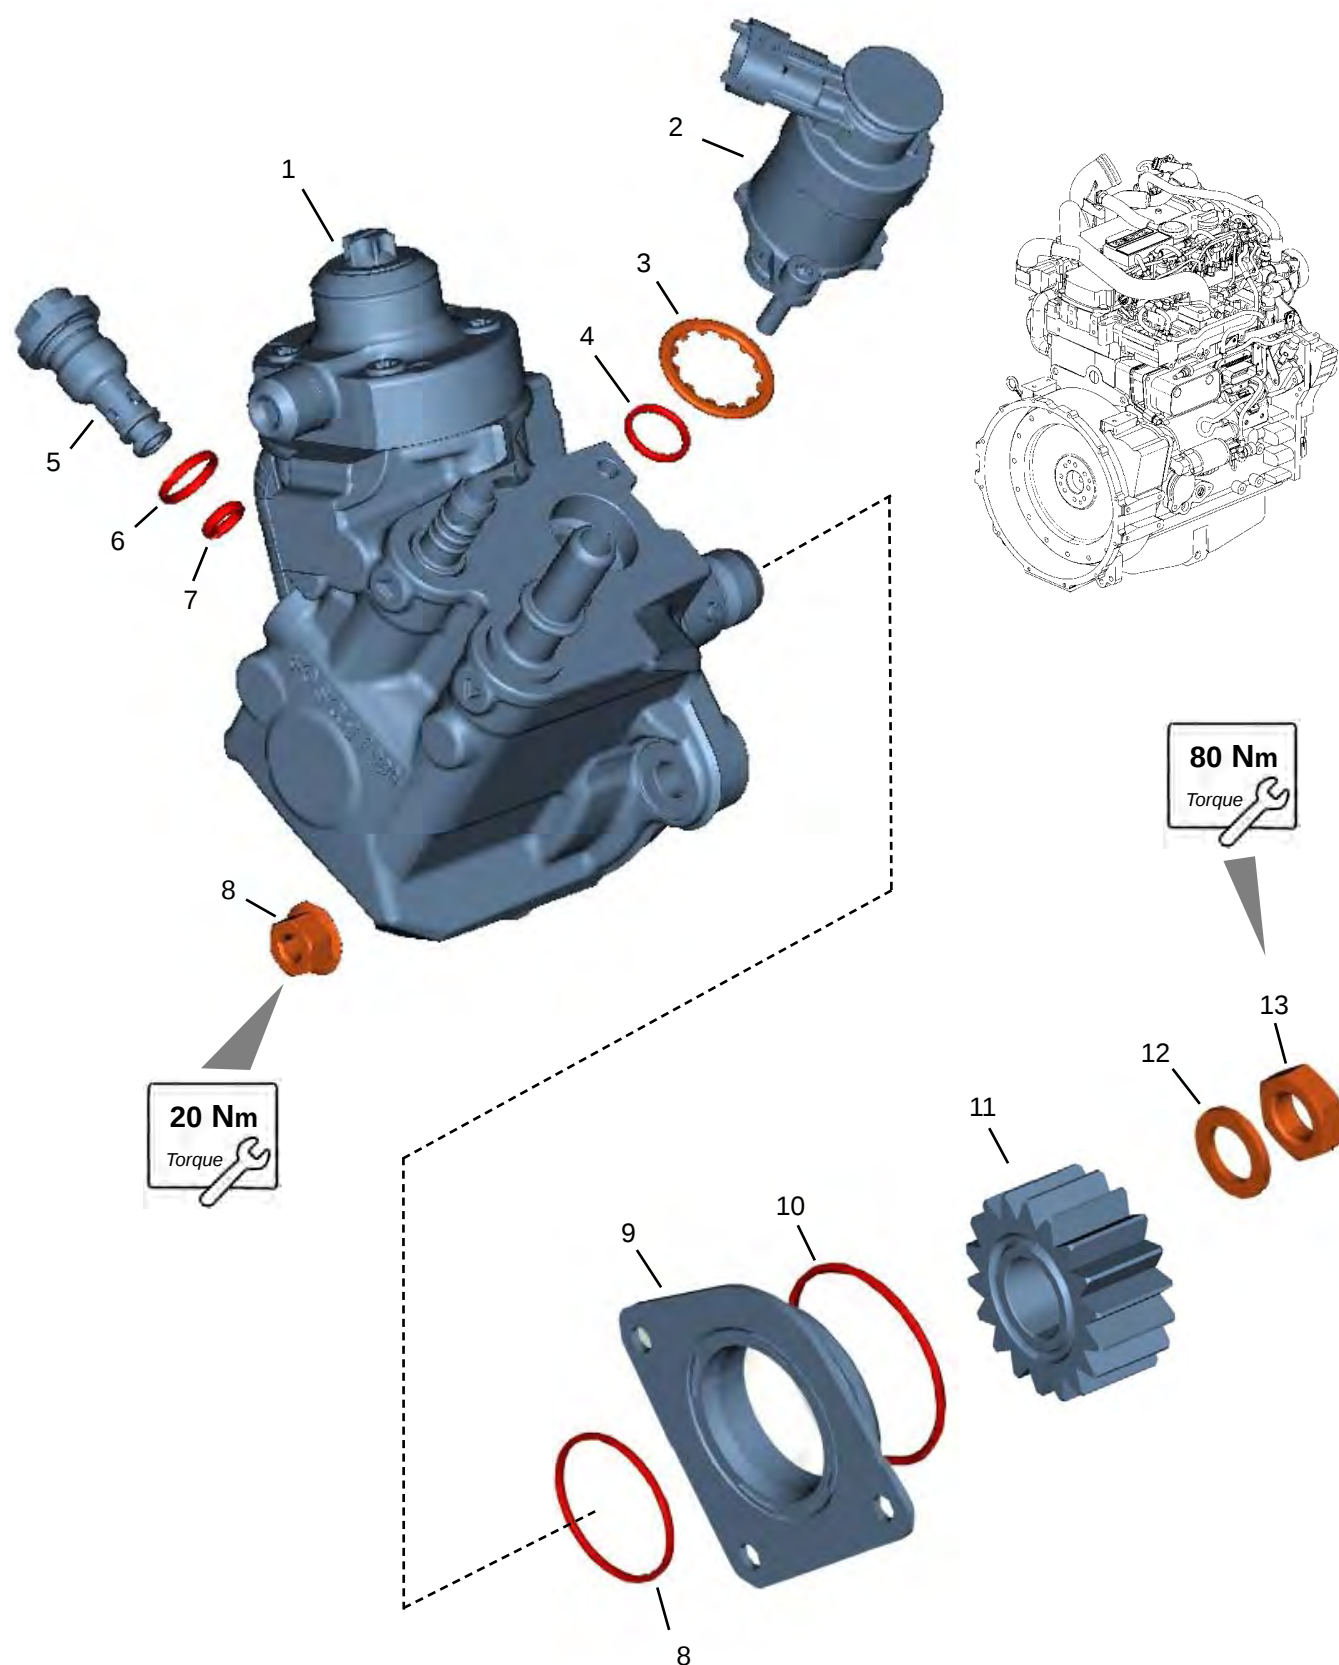 


Fuel Injector Pressure Pump

Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50288228	HIGH PRESSURE PUMP	1	07	50220788	O-RING	1
		<i>(includes items 2-7)</i>		08	50220419	O-RING SEAL	1
02	50220790	VOLUME CONTROL VALVE	1	09	50220415	SPACER/ADAPTER	1
		<i>(includes items 3-4)</i>		10	50220417	O-RING SEAL	1
03	50220792	GASKET	1	11	50220420	GEAR, FUEL INJ. PUMP DRIVE . .	1
04	50220791	O-RING	1	12	50220416	WASHER	1
05	50220787	OVER-FLOW VALVE	1	13	50220418	NUT, INJECTION PUMP	1
		<i>(includes items 6-7)</i>					
06	50220789	O-RING	1				

 
Fuel Rail and High-Pressure Fuel Lines

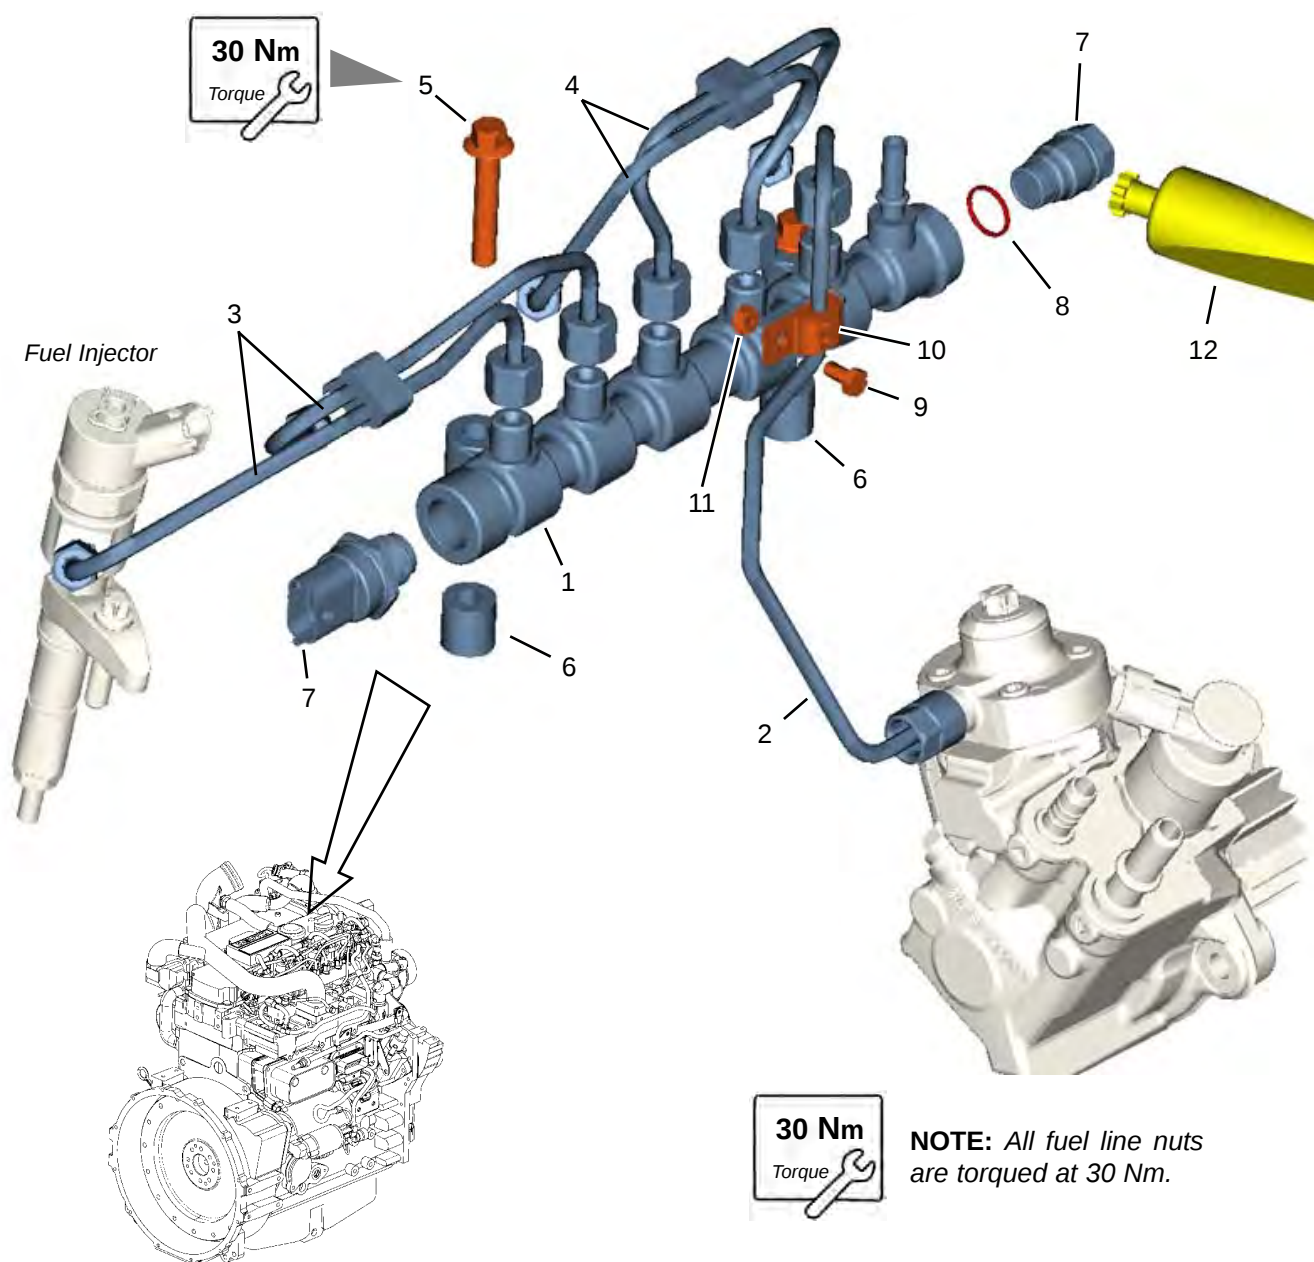

Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220426	FUEL RAIL. 1 (includes item 7 and 8)	1	07	50220565	RAIL PRESSURE SENSOR KIT. . . 1 (includes item 8)	1
02	50220427	FUEL LINE ASSEMBLY. 1 (includes items 9-11)	1	08	50220793	O-RING 1	1
03	50220428	FUEL LINE ASSEMBLY. 1 (used with cylinders 3 and 4)	1	09	NSS	BOLT (included with item 2) 1	1
04	50220429	FUEL LINE, HIGH-PRESSURE . . . 1 (used with cylinders 1 and 2)	1	10	NSS	PIPE CLAMP (included with item 2) 1	1
05	50220430	BOLT, TORX-HEAD. 2	2	11	NSS	NUT (included with item 2) 1	1
06	50220431	SPACER, FUEL RAIL 2	2	12	50220569	MULTI-PURPOSE GREASE AR	AR

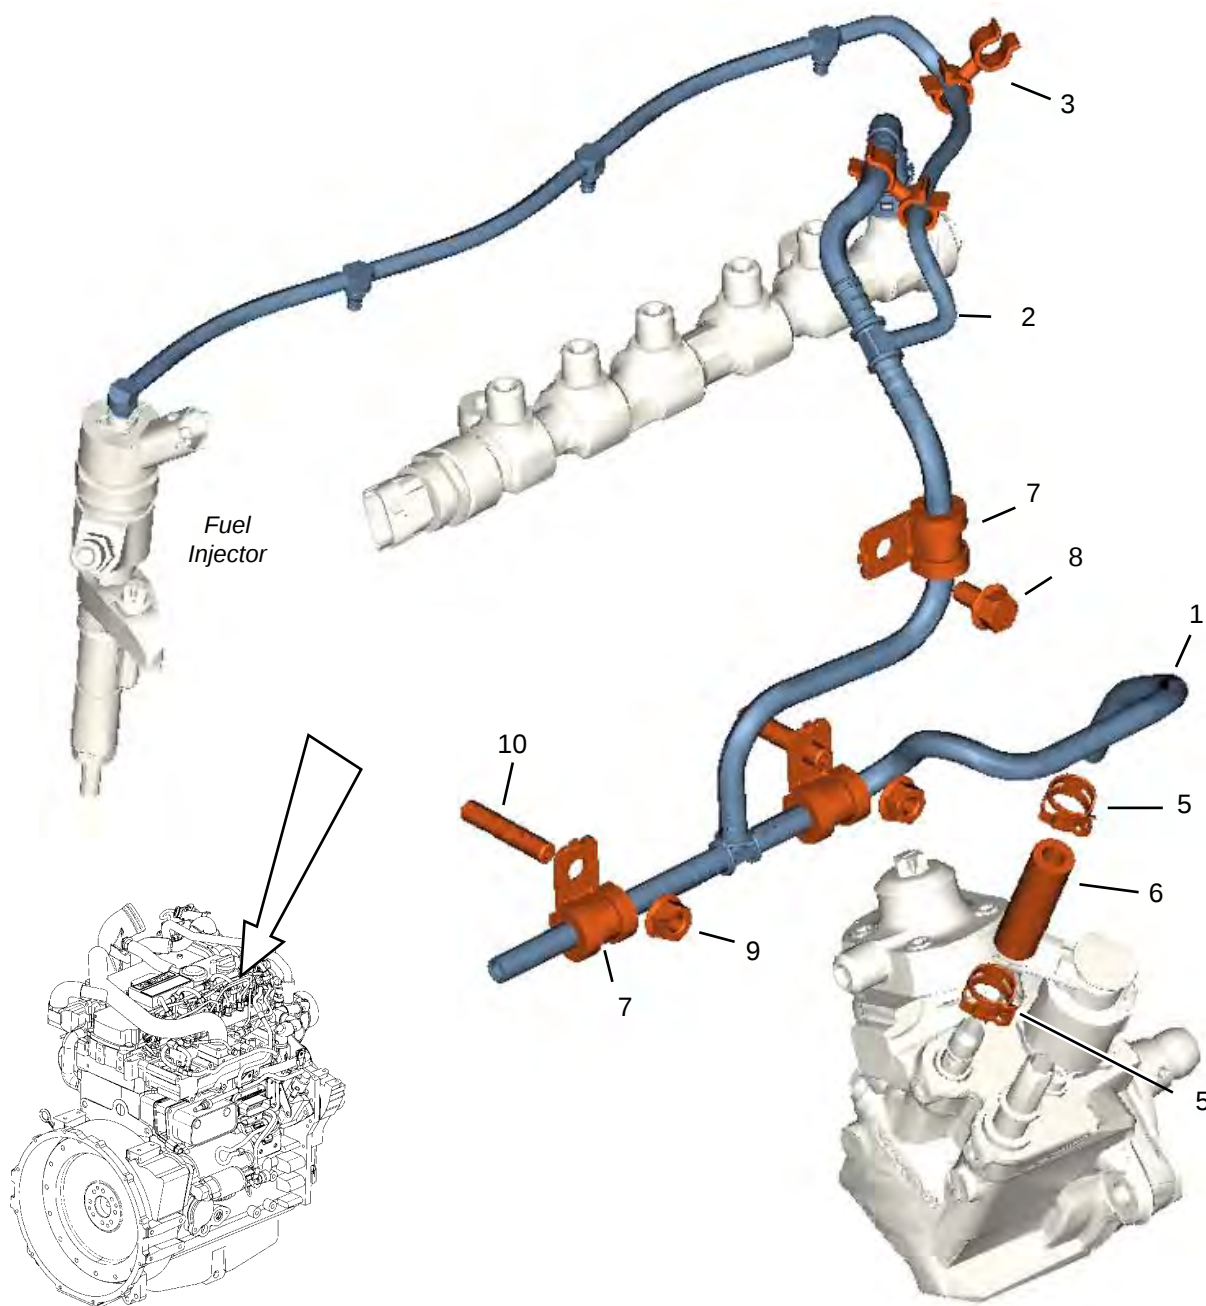 


Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01 ^a	50220432	FUEL LINE ASSEMBLY..... 1 (includes items 5-7)		06	50220436	HOSE ASSEMBLY	1
02	50220794	FUEL RETURN LINE	1	07	50220437	PIPE CLAMP	3
03	50220434	HOSE RETAINER	2	08	50220795	BOLT	1
05	50220435	CLAMP, SPRING BAND	2	09	105646	NUT	2
				10	50220796	STUD.....	2

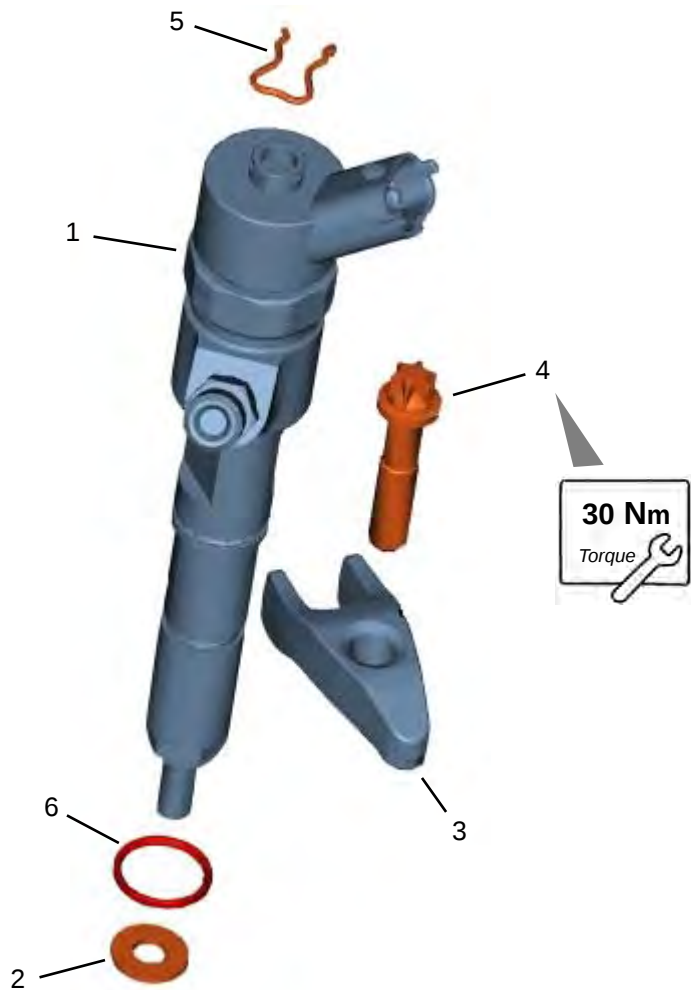 

Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220421	FUEL INJECTOR.	4	04	50220424	BOLT, FUEL INJECTOR	4
		(includes items 2 and 5)		05	50220425	RETAINING CLIP	4
02	50220422	SEAL, FUEL INJECTOR.	4	06	50220564	O-RING	4
03	50220423	CLAMP, FUEL INJECTOR.	4				



 
NOTE: The engine uses four injectors; the quantities shown are for all four injectors.

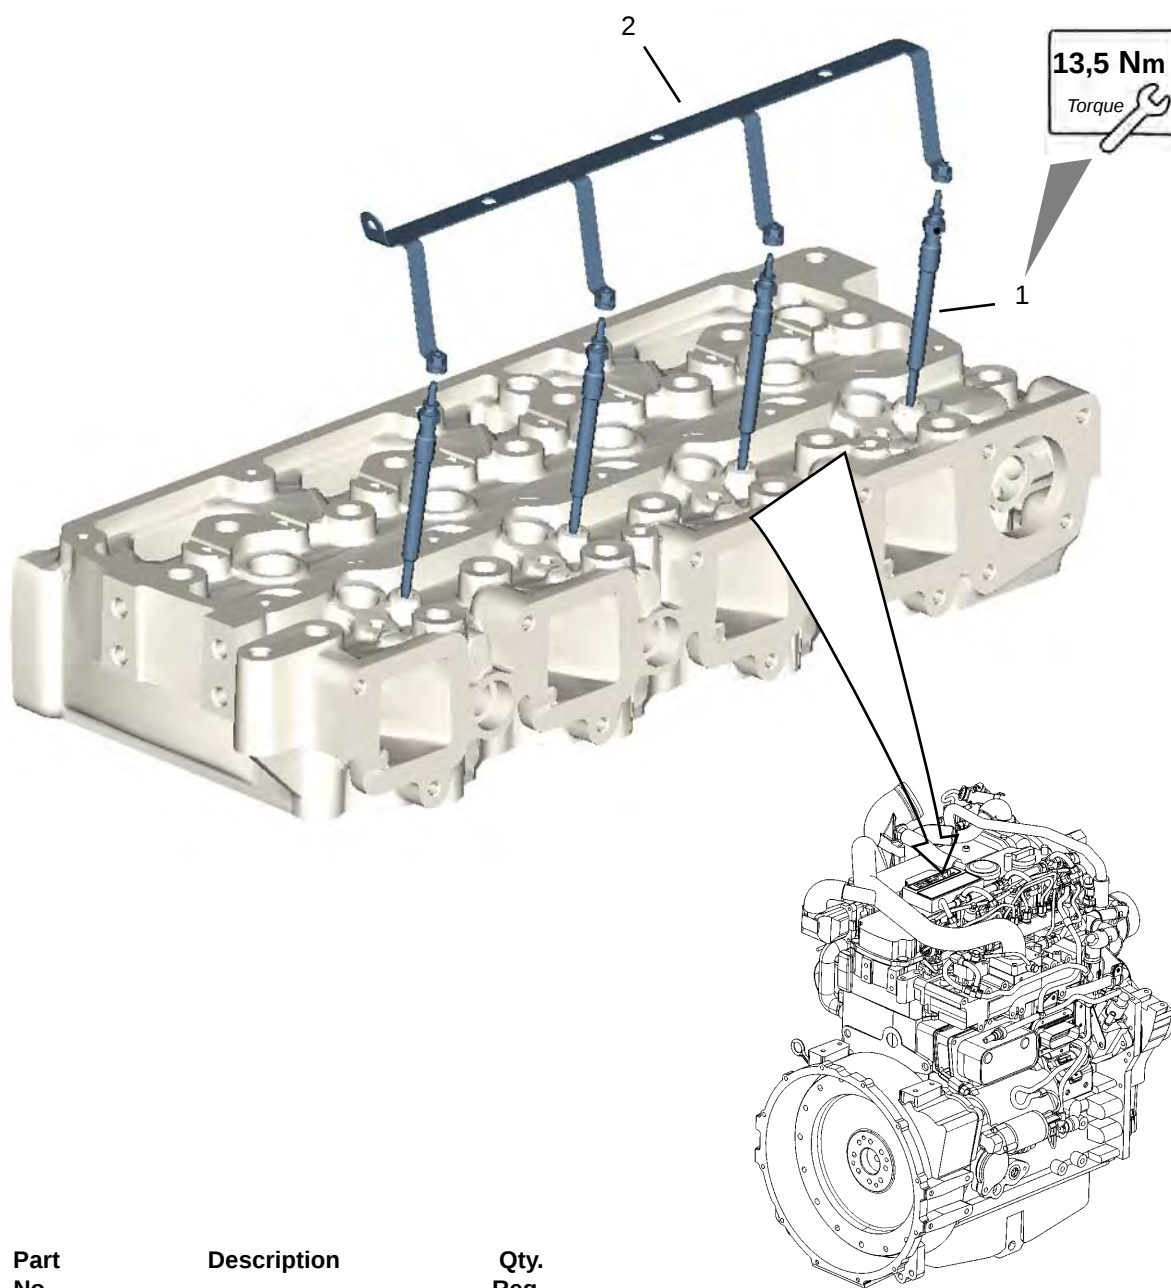

Item No.	Part No.	Description	Qty. Req.
01	50220557	GLOW PLUG	4
02	50220558	CONNECTING RAIL	1



 
NOTE: The engine uses four glow plugs;
the quantities shown are for all four.

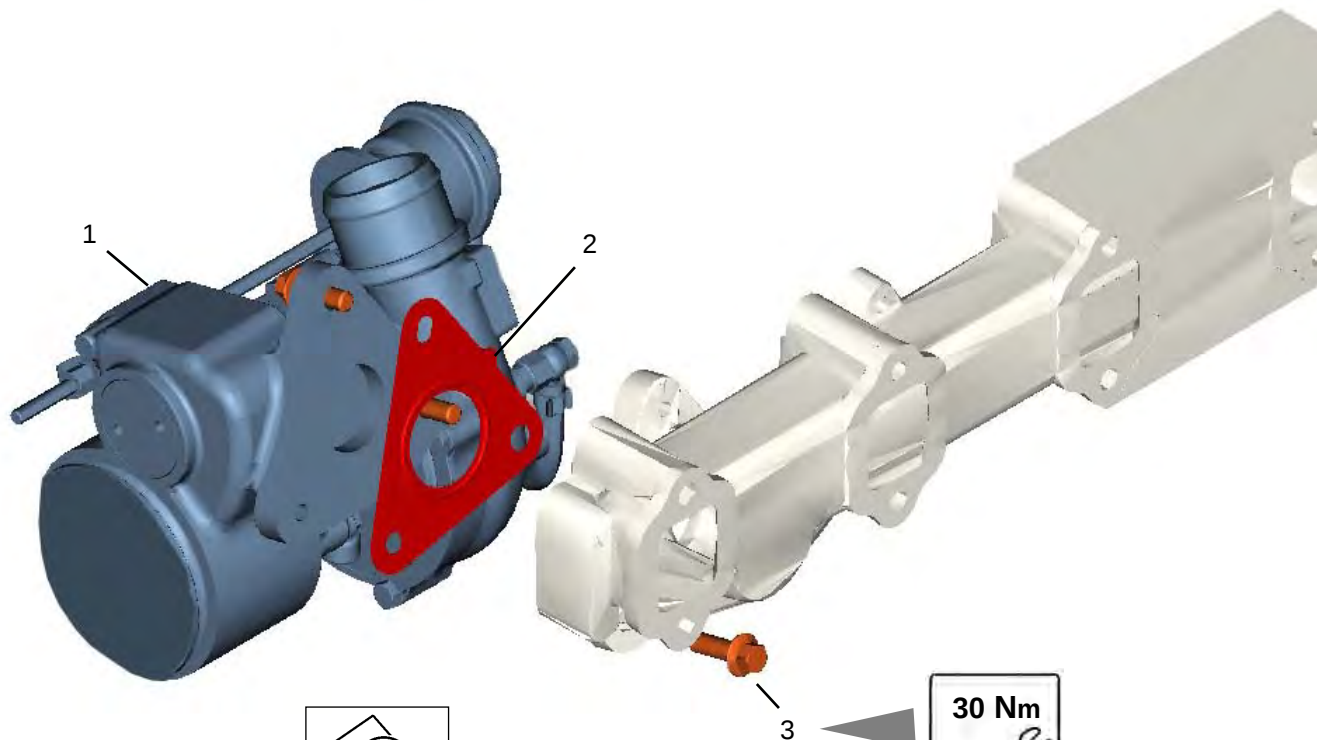


*Turbocharger
rubber hose
adapter is on
page 26.*

30 Nm
Torque


Item No.	Part No.	Description	Qty. Req.
01	50220797	TURBOCHARGER	1
02	50220503	GASKET, TURBOCHARAGER	1
03	50220487	BOLT	3

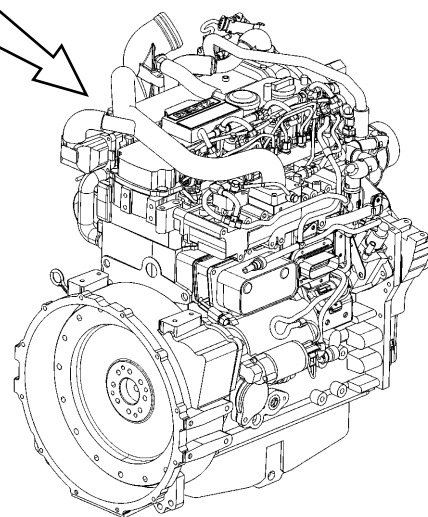 

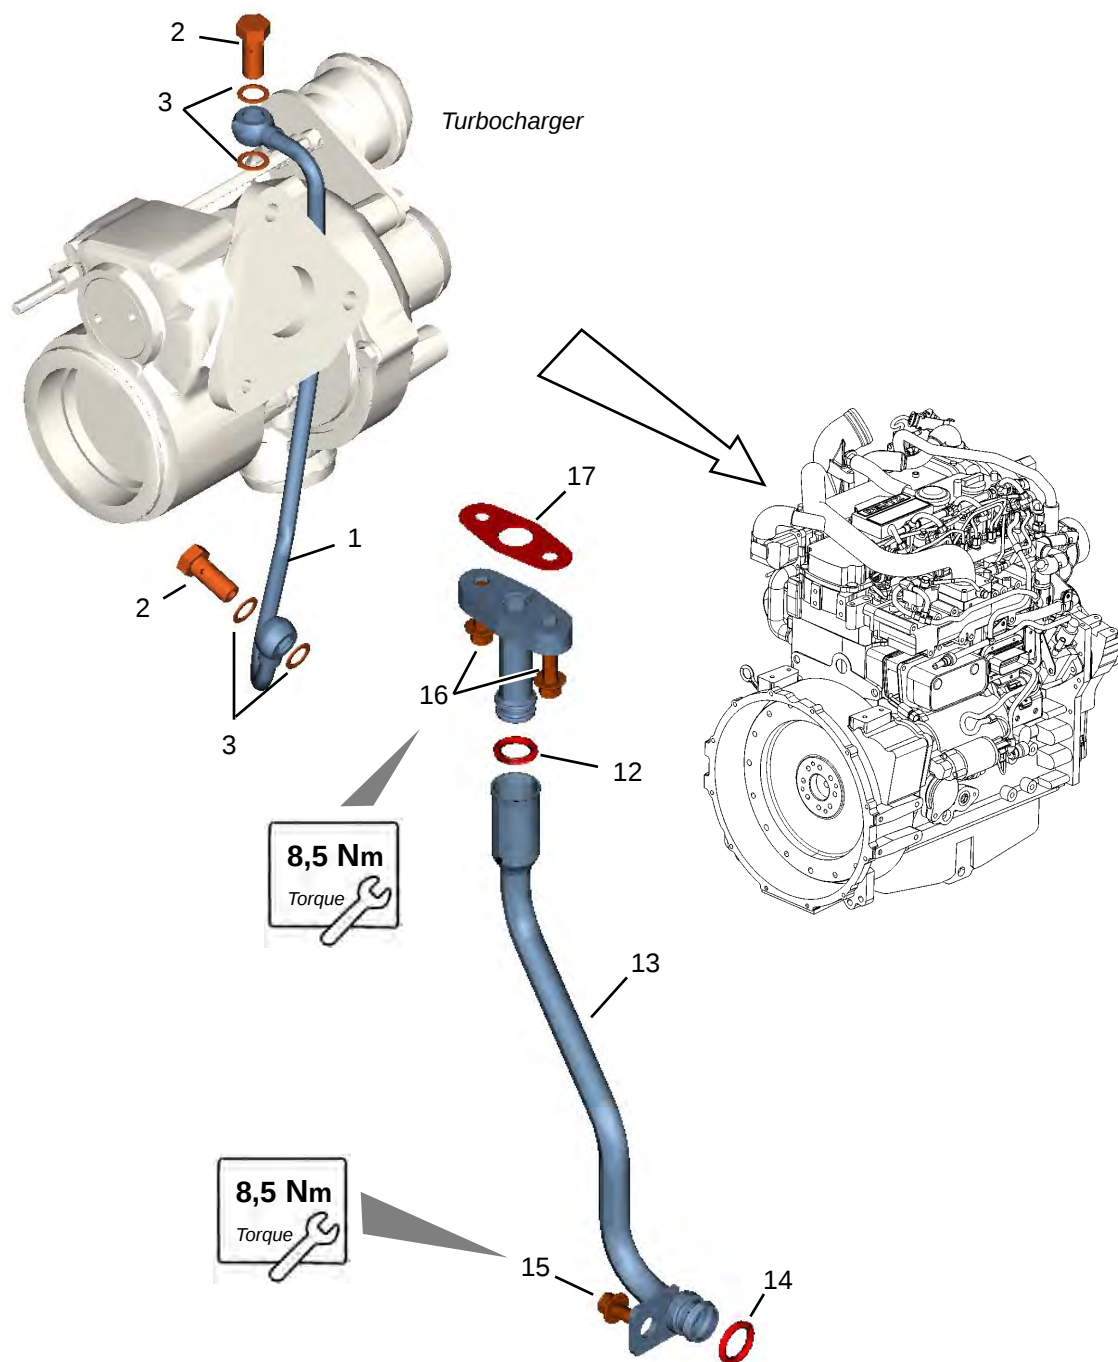 


Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220798	OIL LINE, PRESSURE	1	13	50220806	OIL LINE, RETURN.	1
		(includes items 2-3)				(includes items 14)	
02	50220409	BOLT, HOLLOW	2	14	187222	O-RING	1
03	105483	SEALING RING.	4	15	133232	BOLT	1
11	50220410	FLANGE	1	16	133162	BOLT	2
12	50220411	O-RING SEAL	1	17	50220413	GASKET, FLANGE	1

 
Turbocharger Hose and Crankcase Breather Tube

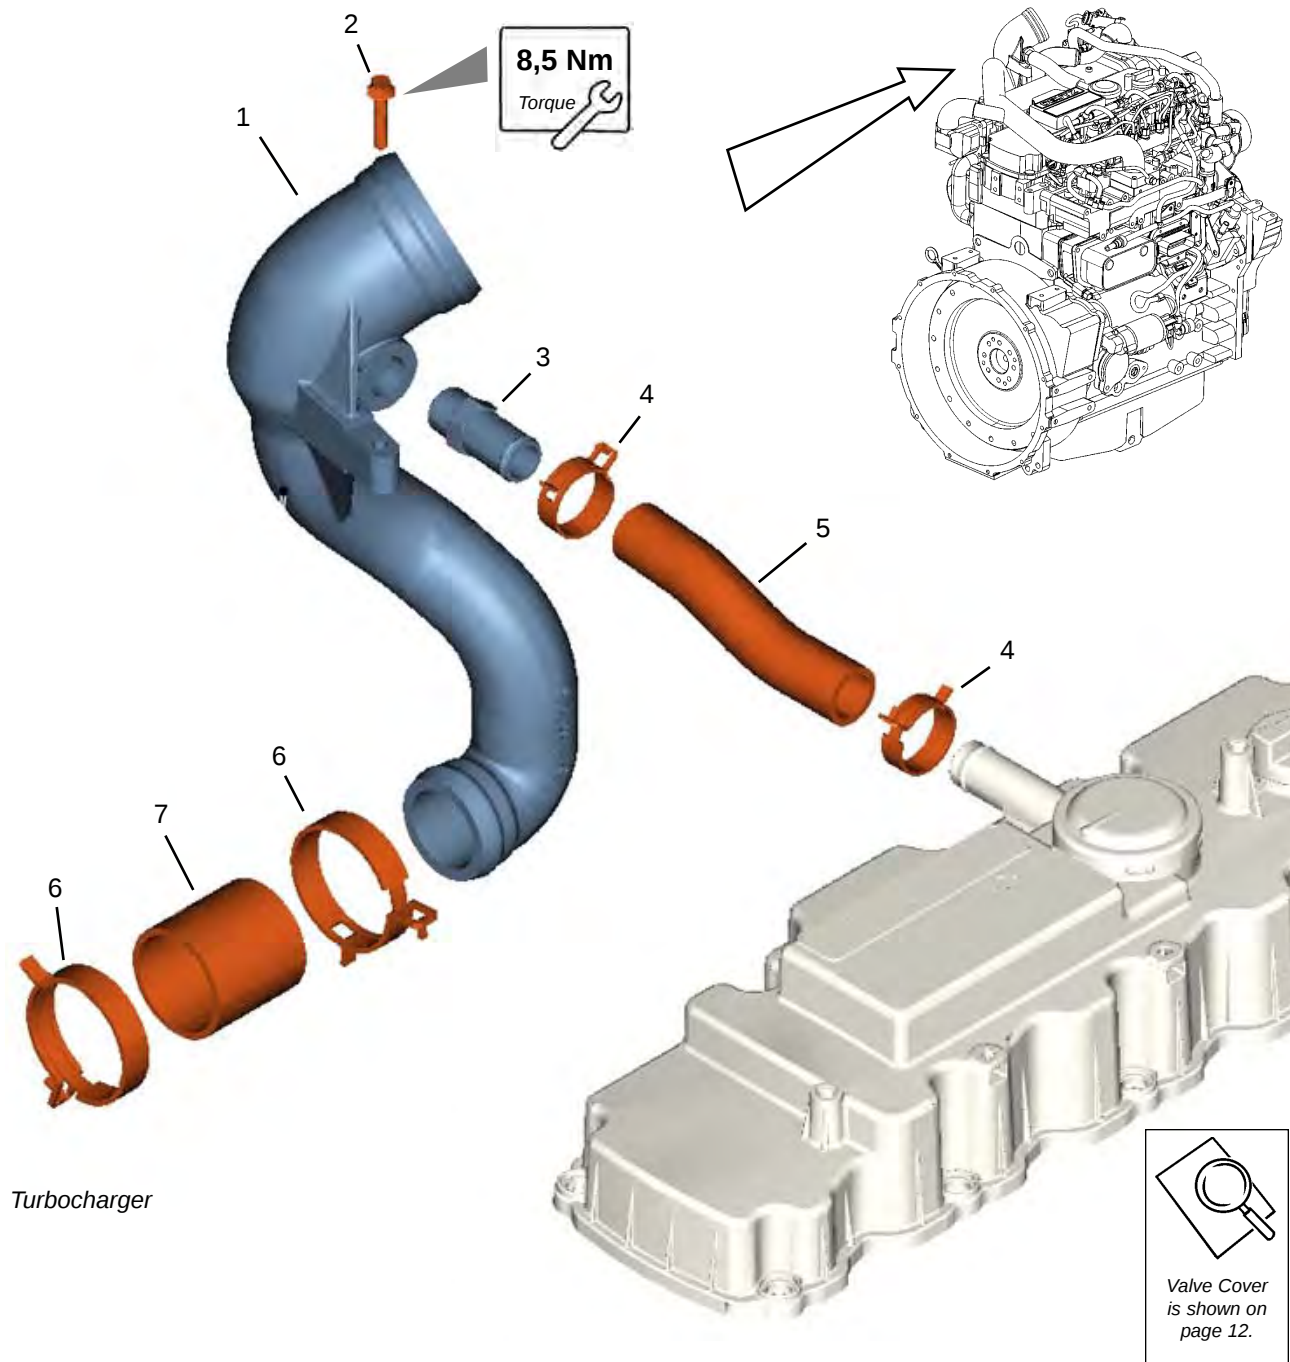


Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220767	INTAKE ELBOW	1	05	50220771	HOSE.	1
02	50220769	BOLT	1	06	50220318	SPRING CLAMP	2
03	50220770	HOSE NIPPLE.	1	07	50220768	HOSE.	1
04	133214	SPRING CLAMP	2				

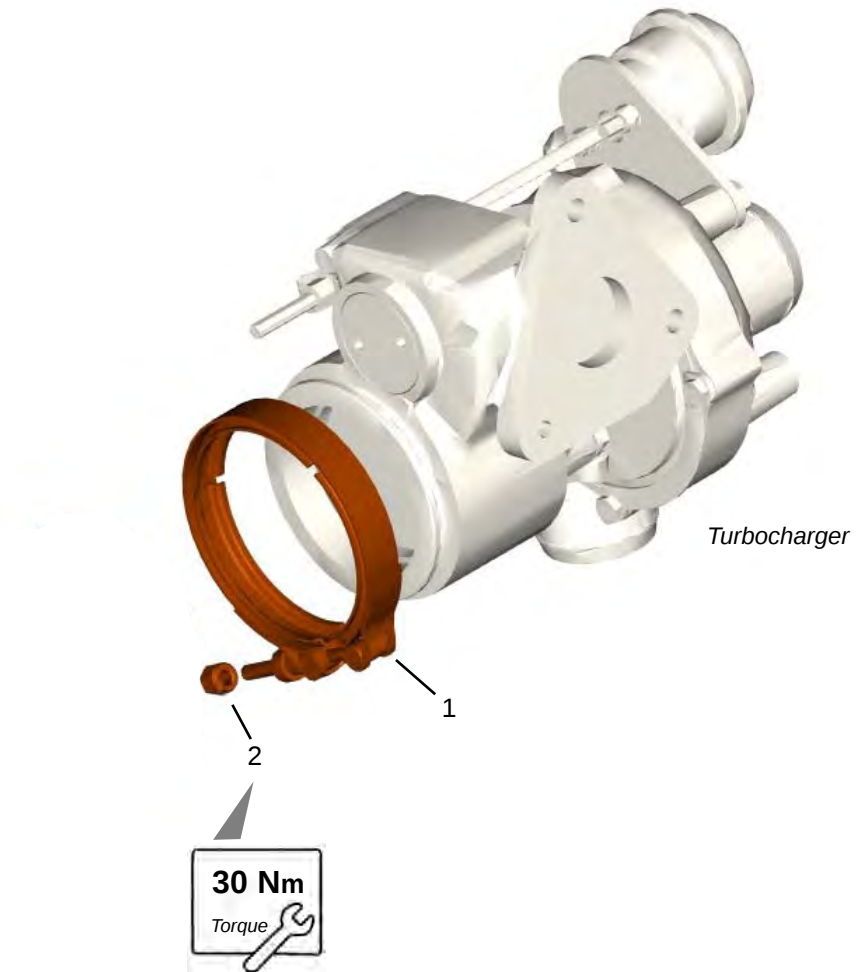 

Item No.	Part No.	Description	Qty. Req.
01	50220500	CLAMP, T-BOLT	1
02	50220501	NUT	1

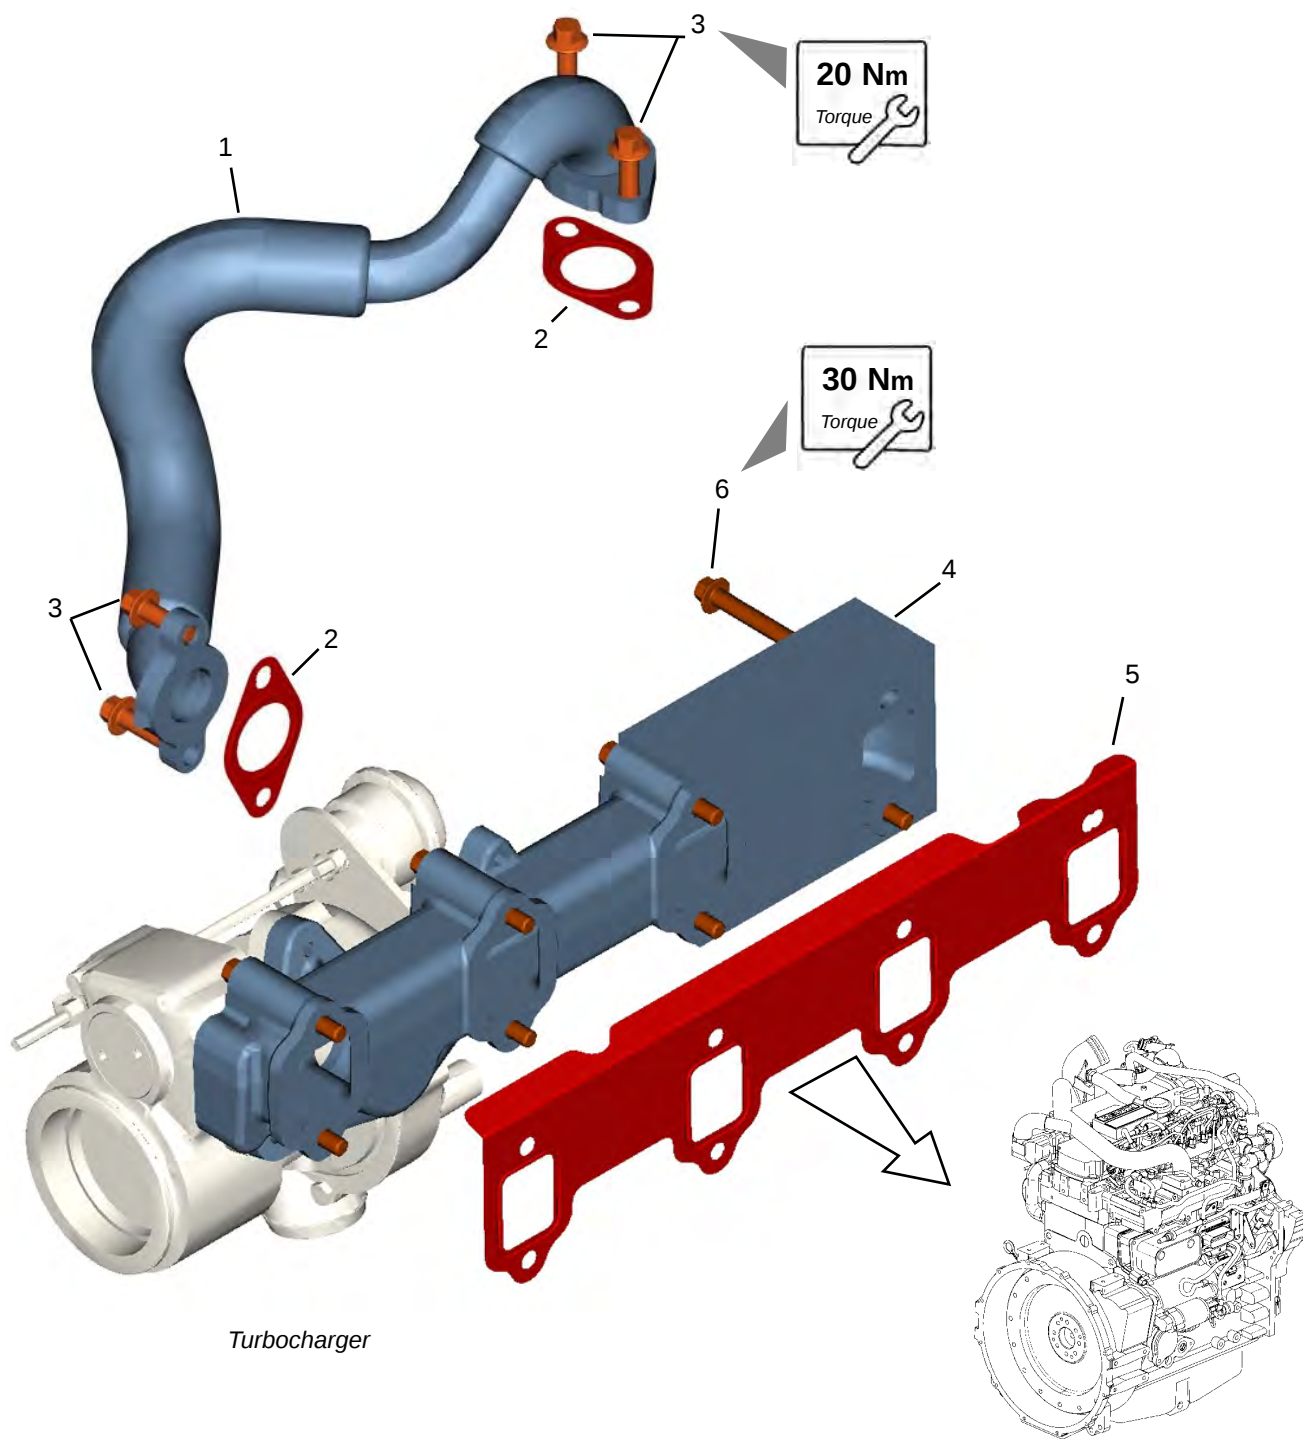 

Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220801	COMPENSATOR TUBE	1	04	50220800	EXHAUST MANIFOLD	1
02	50220486	GASKET, COMPENSATOR TUBE .	2	05	50220483	GASKET, EXHAUST MANIFOLD .	1
03	50220487	BOLT	4	06	50220484	BOLT	8

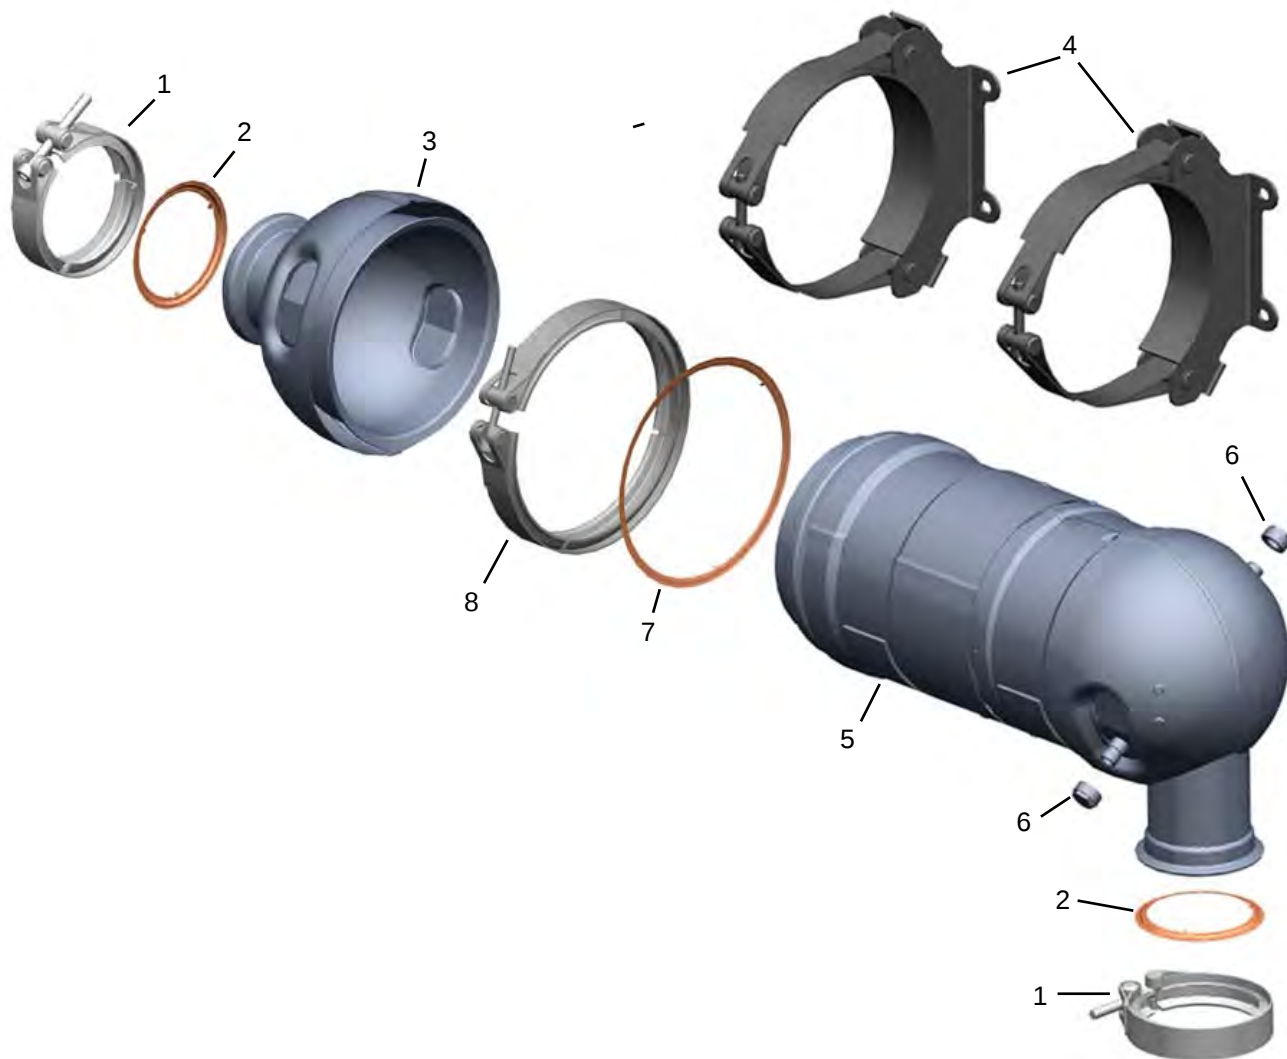 


Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220574	CLAMP, EXHAUST	2	06	50220573	LOCK, CAP	2
02	50220575	GASKET, EXHAUST	2	07	50220572	GASKET	1
03	50220799	OUTLET, DOC	1	08	50220571	CLAMP, DOC	1
04	50302200	BRACKET, DOC	2				
05	50302554	INLET, DOC	1				
		(includes items 6-8)					


Engine

Air Intake Manifold

 
Deutz TD 3.6 L4

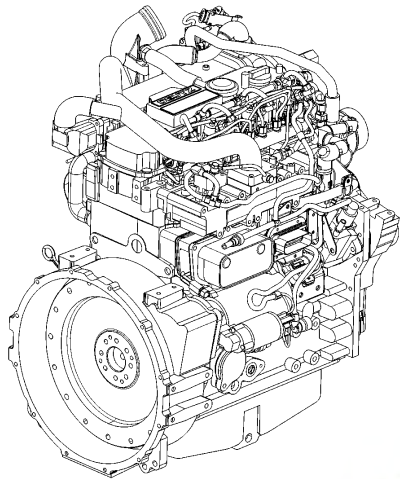


Cylinder Head

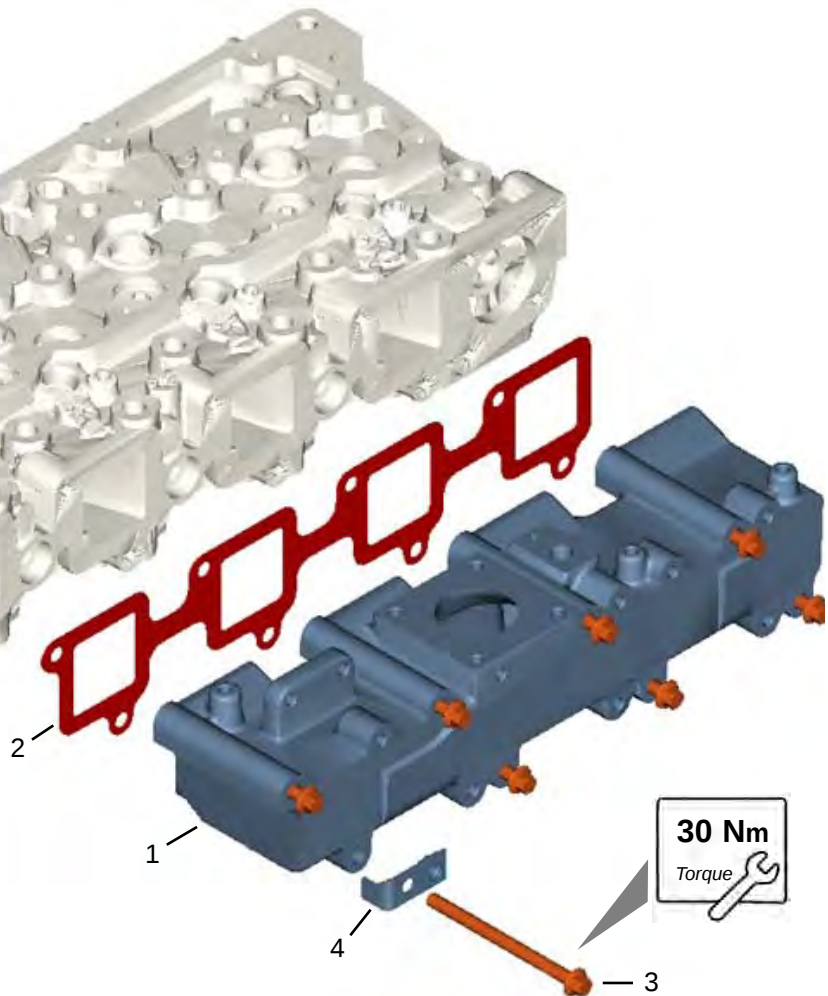 

Item No.	Part No.	Description	Qty. Req.
01	50220438	AIR INTAKE MANIFOLD	1
02	50220439	GASKET, AIR INTAKE MANIFOLD .	1
03	50220440	BOLT	8
04	50220802	RETAINING PLATE	1

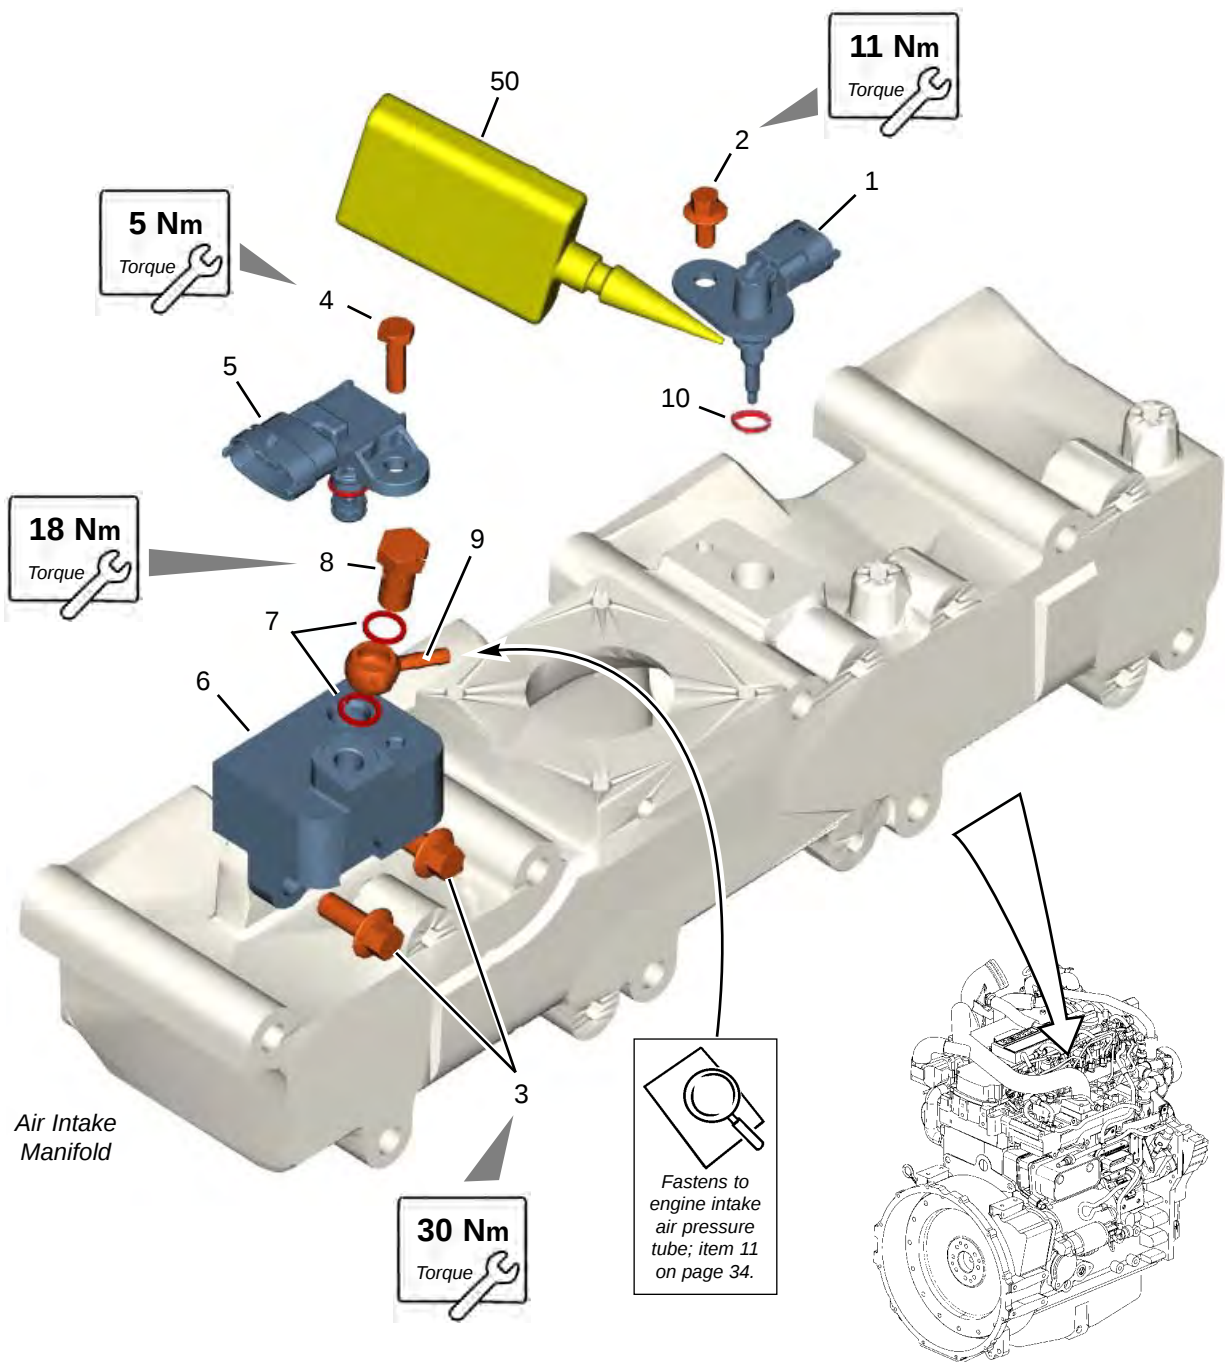 


Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220441	SENSOR, TEMPERATURE.....	1	07	187282	SEALING RING.....	2
02	50220345	BOLT.....	1	08	50220445	BOLT, HOLLOW.....	1
03	105289	BOLT, TORX-HEAD.....	2	09	50220446	HOSE FITTING.....	1
04	50220442	BOLT.....	1	10	50220803	O-RING (included w/ item 1).....	1
05	50220443	SENSOR, PRESSURE.....	1	50	194281	SEALANT, SENSOR.....	1
06	50220444	PRESSURE SENSOR ASSEMBLY. 1 (includes items 7-9)	1				

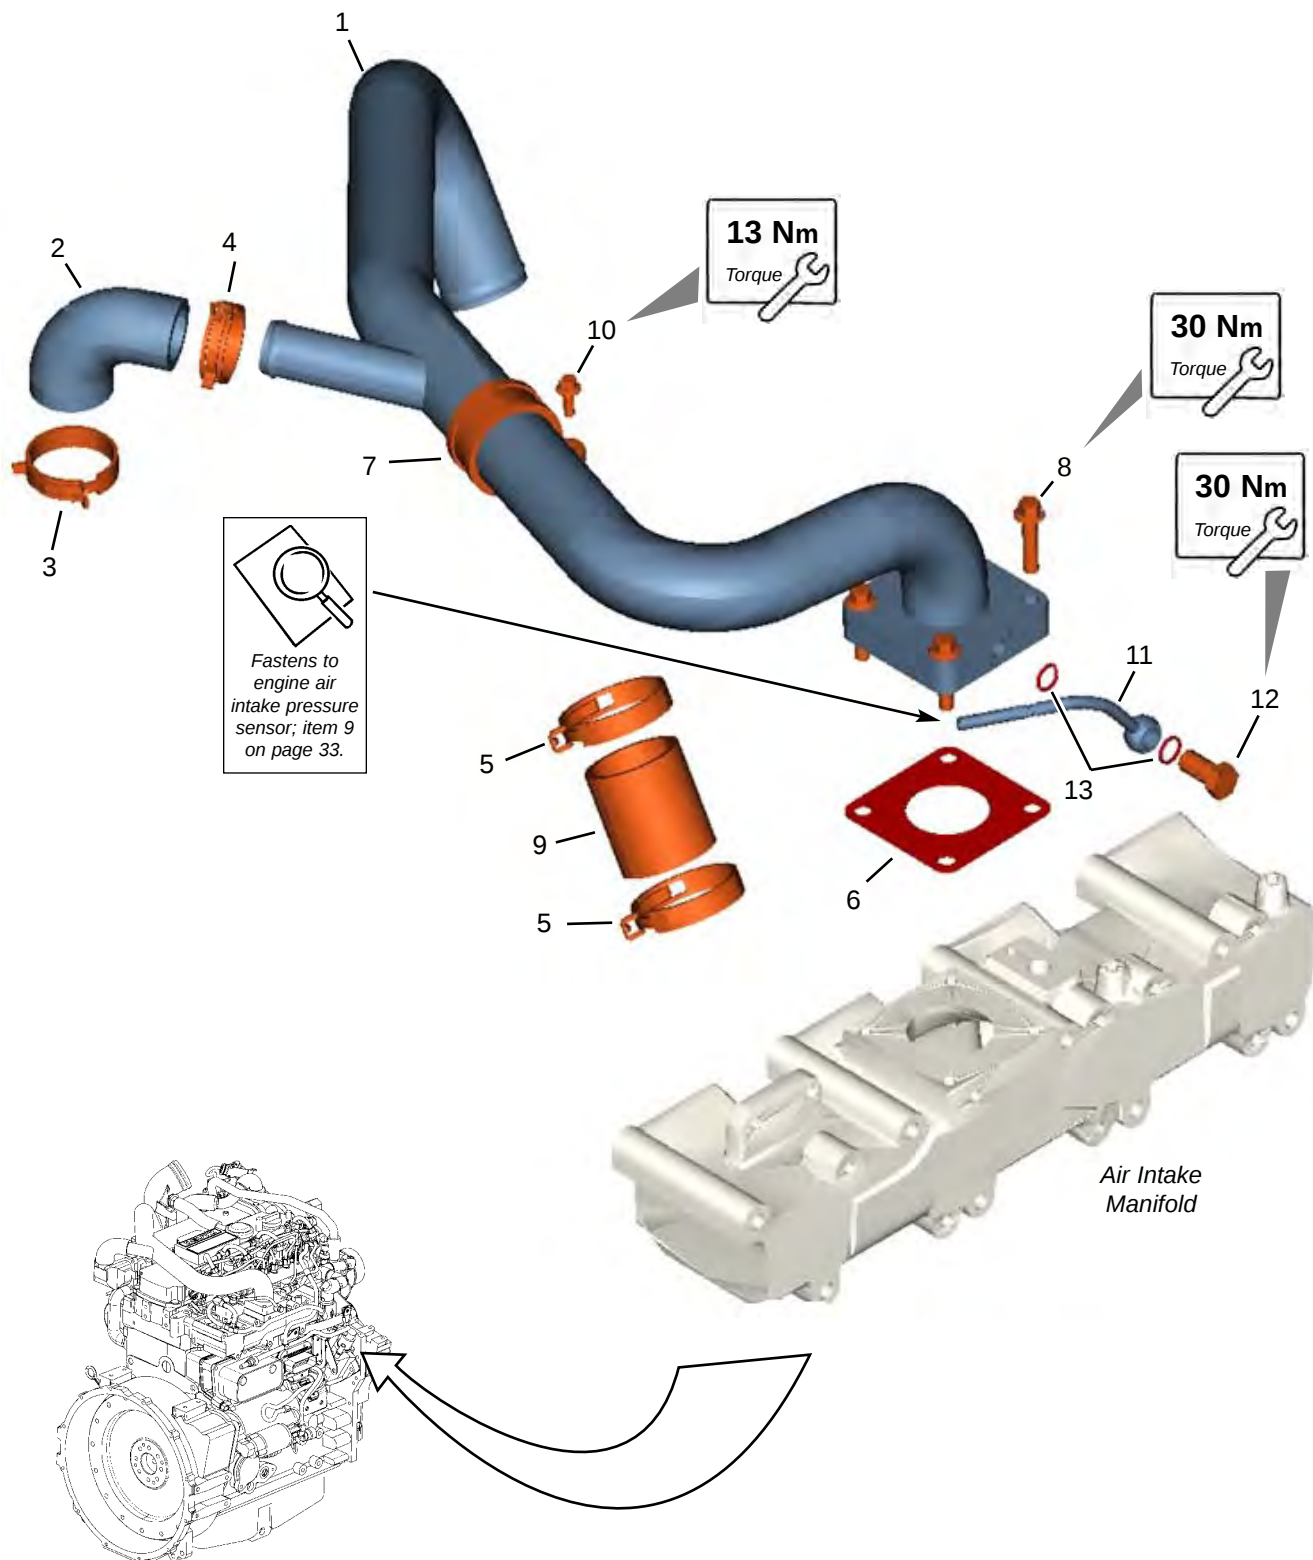 

Deutz TD 3.6 L4

Engine *Air Intake Tube Group*

Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220804	AIR INTAKE TUBE	1	08	50220453	BOLT	4
02	50220448	HOSE, RUBBER 90°	1	09	50220447	HOSE, RUBBER	1
03	105437	CLAMP, SPRING	1	10	187227	BOLT	1
04	50220449	CLAMP, SPRING	1	11	50220455	AIR PRESSURE TUBE ASSY,	1
05	50220450	CLAMP, SPRING	2			<i>(includes items 12 and 13)</i>	
06	50220451	GASKET, AIR INTAKE TUBE	1	12	133141	BOLT, HOLLOW	1
07	50220452	PIPE CLAMP	1	13	133133	SEALING RING	2

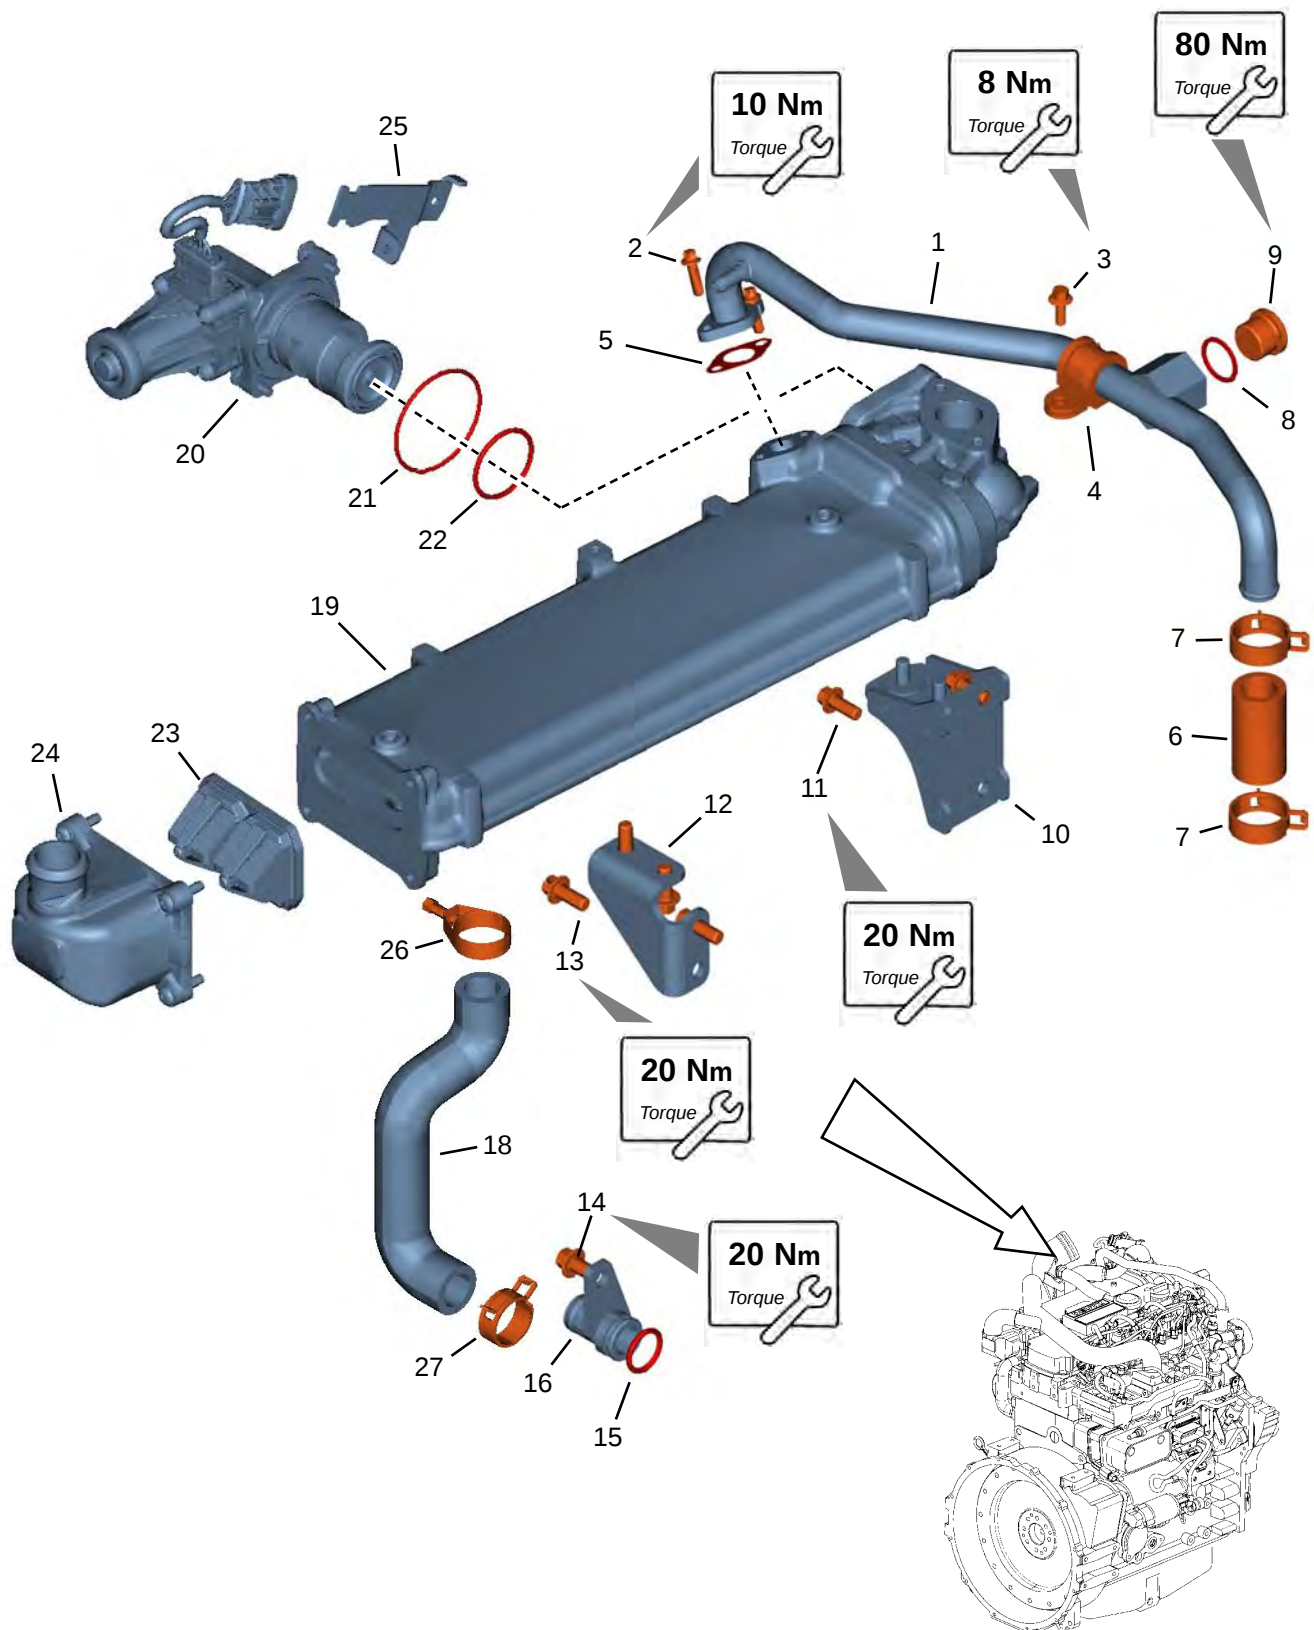 


Deutz TD 3.6 L4

Engine

EGR Valve and EGR Cooler Group


Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220494	COOLANT TUBE, EGR.....	1	16	50220479	HOSE CONNECTOR	1
02	50220495	BOLT, TORX-HEAD.....	2	18	50220498	HOSE, EGR COOLER	1
03	187227	BOLT	1	19	50220477	EGR COOLER.....	1
04	50220473	PIPE CLAMP	1			(includes items 20-25)	
05	50220496	GASKET, EGR COOLANT TUBE ..	1	20	50220403	EGR CONTROL VALVE	1
06	50220497	HOSE, RUBBER	1			(includes items 21 and 22)	
07	50220318	CLAMP, SPRING.....	2	21	NSS	O-RING	1
08	133138	SEALING RING 22x27mm	1	22	NSS	O-RING	1
09	187276	PLUG (M22-1.5)	1	23	50220742	SHUTTLE VALVE	1
10	50220488	EGR BRACKET ASSEMBLY.....	1	24	NSS	END CAP (included with item 19) ..	1
11	50220478	BOLT	2	25	NSS	BRACKET (included with item 19) .	1
12	50220493	EGR BRACKET.....	1	26	50220744	HOSE CLAMP	1
13	50220478	BOLT	4	27	50220743	SPRING CLAMP	1
14	50220481	BOLT	1				
15	50220480	O-RING SEAL	1				

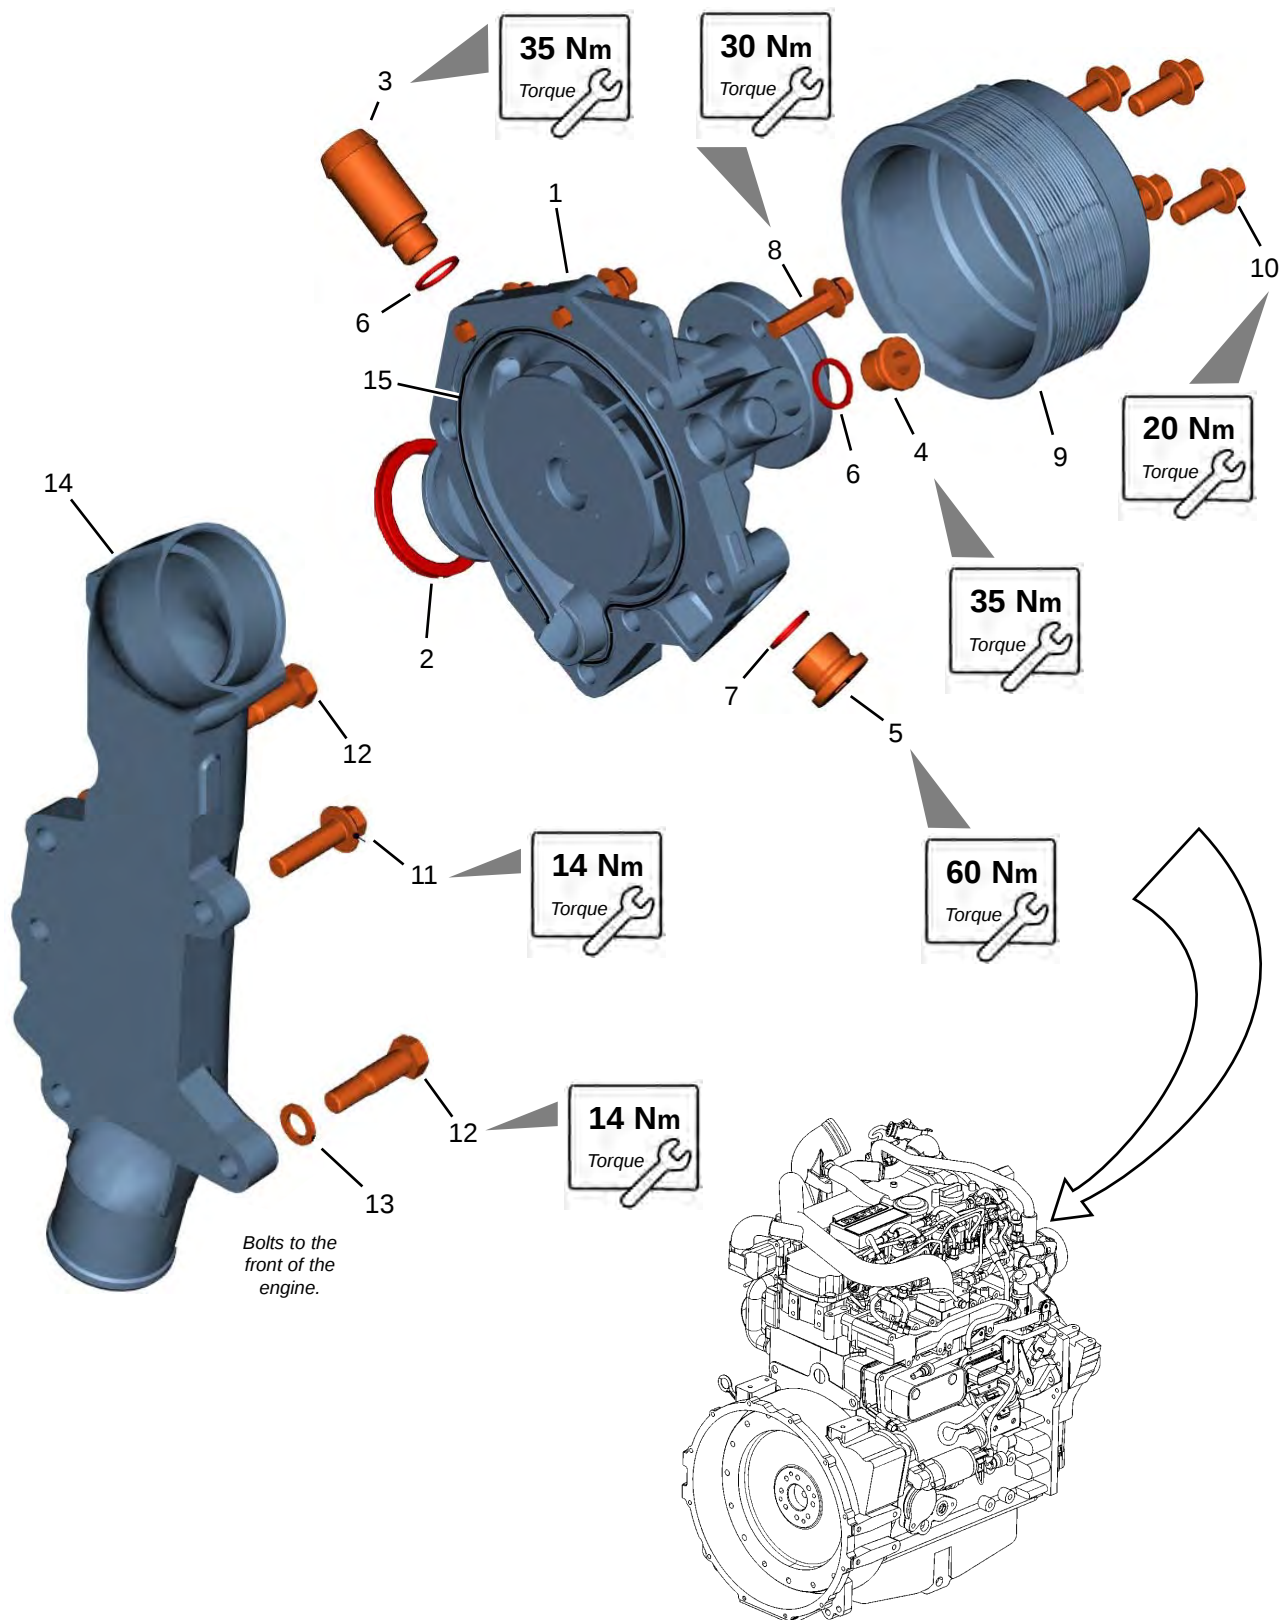 

Deutz TD 3.6 L4

Engine Water Pump Group

Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220458	WATER PUMP.....	1	09	50220463	PULLEY, FAN	1
02	50220459	SEAL	1	10	105289	BOLT	4
03	50220460	HOSE CONNECTOR	1	11	105303	BOLT	1
04	50220461	PLUG	1	12	50220475	BOLT	2
05	133168	PUG	2	13	50220476	SHIM/WASHER	2
06	133135	O-RING SEAL	1	14	50220474	MANIFOLD, COOLANT	1
07	50220462	O-RING SEAL	1	15	NSS	SILICON O-RING SEAL	1
08	105303	BOLT	3			<i>(included with item 1)</i>	

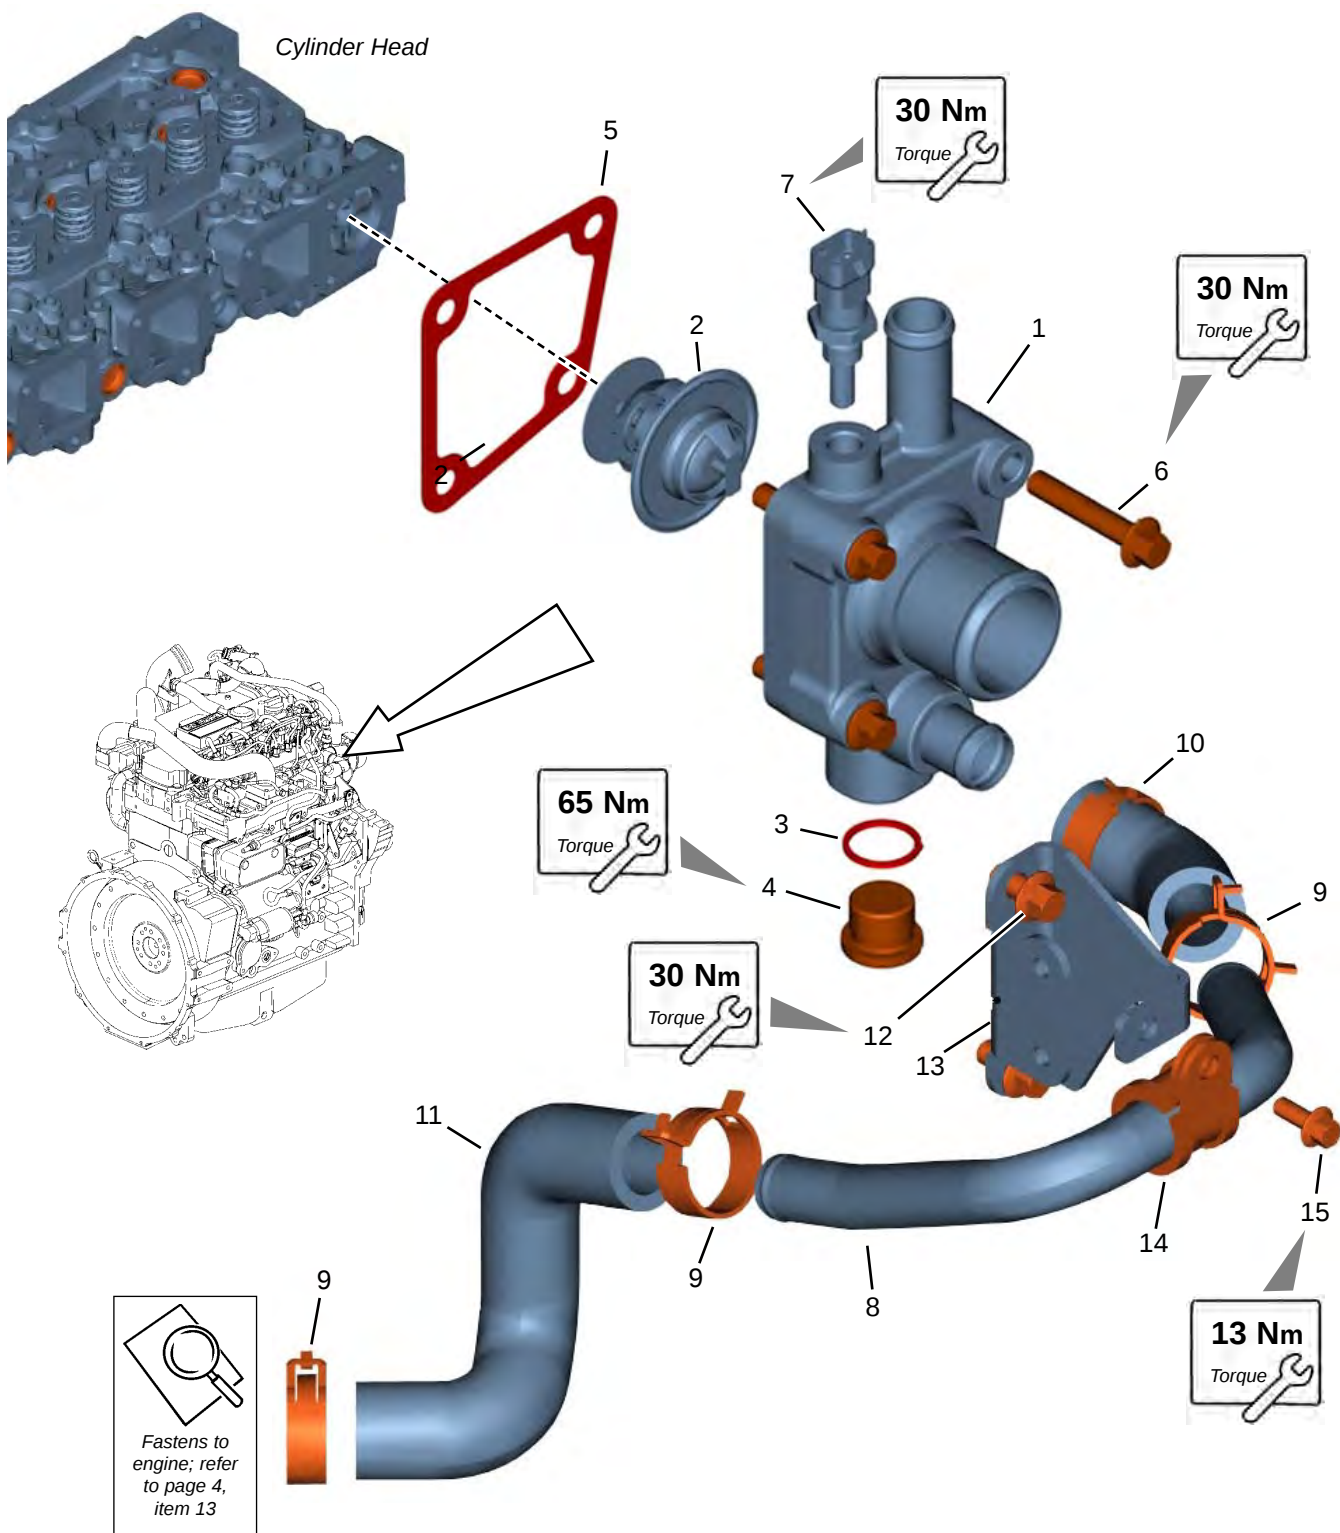 


Deutz TD 3.6 L4

Engine

Thermostat Housing Group


Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220464	THERMOSTAT HOUSING ASY. . . . 1 (includes items 2-4)		08	50220468	TUBE, COOLANT 1	
02	243440	THERMOSTAT 1		09	50220318	CLAMP, SPRING 4	
03	50220462	O-RING SEAL 1		10	50220469	MANIFOLD, COOLANT 1	
04	50220465	PLUG 1		11	50220470	HOSE, COOLANT 1	
05	50220466	GASKET, THERMOSTAT 1		12	50220471	BOLT 2	
06	105896	BOLT 4		13	50220472	BRACKET, SUPPORT 1	
07	50220467	TEMPERATURE SENDER 1		14	50220473	PIPE CLAMP 1	
				15	187227	BOLT 1	

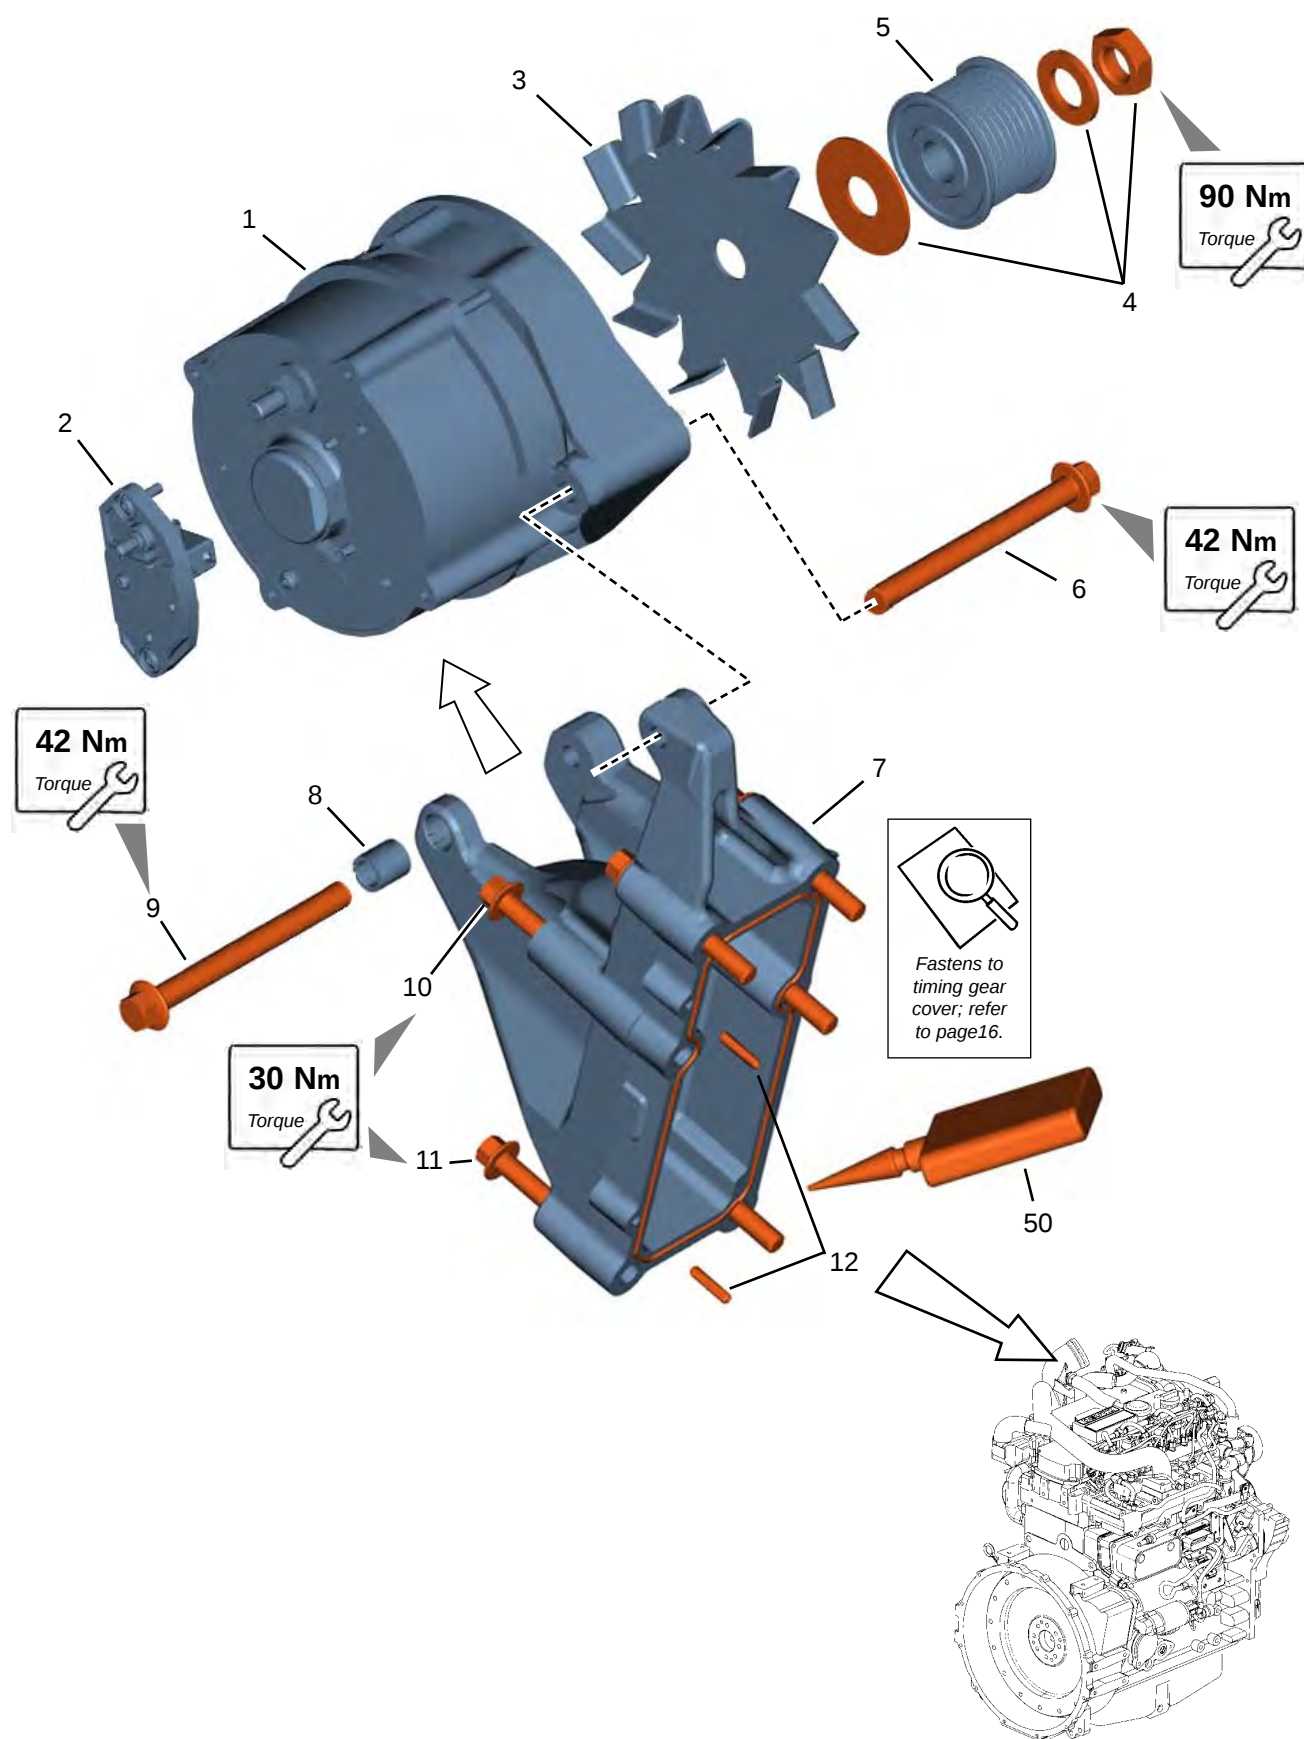 


Deutz TD 3.6 L4

Engine Alternator Group

Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220515	ALTERNATOR	1	07	50220504	MOUNT, ALTERNATOR	1
		(includes items 1-5)		08	50220507	BUSHING	1
02	50220516	REGULATOR, ALTERNATOR	1	09	50220513	BOLT	1
03	133184	FAN, ALTERNATOR	1	10	50220508	BOLT	1
04	50220577	NUT AND WASHERS	1	11	50220506	BOLT	5
05	50220519	PULLEY, ALTERNATOR	1	12	50220505	PIN, ALIGNMENT	2
06	50220805	BOLT	1	50	133104	SEALANT	1

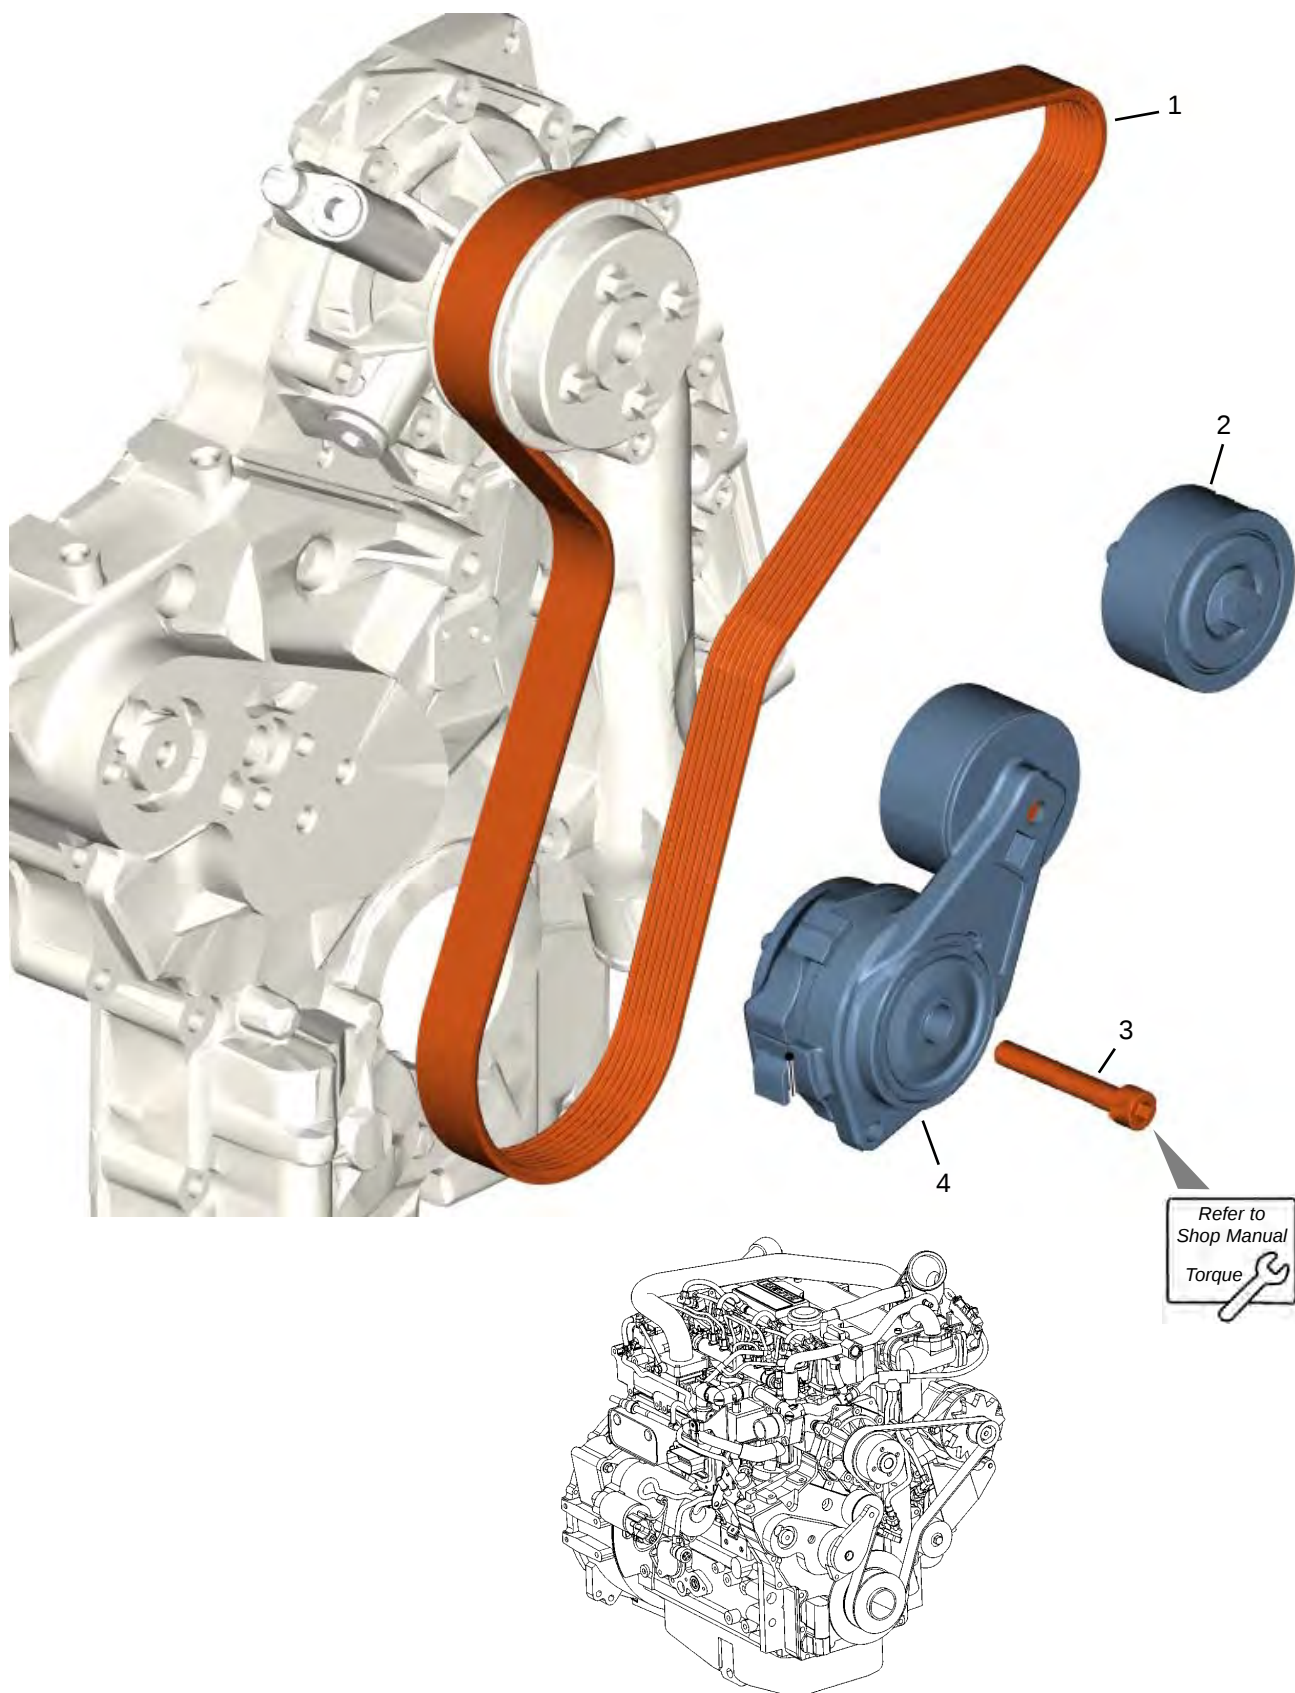 


Item No.	Part No.	Description	Qty. Req.
01	50220511	V-RIBBED BELT	1
02	50220510	IDLER, BELT	1
03	50220512	BOLT, SOCKET-HEAD	1
04	50220509	BELT TENSIONER	1

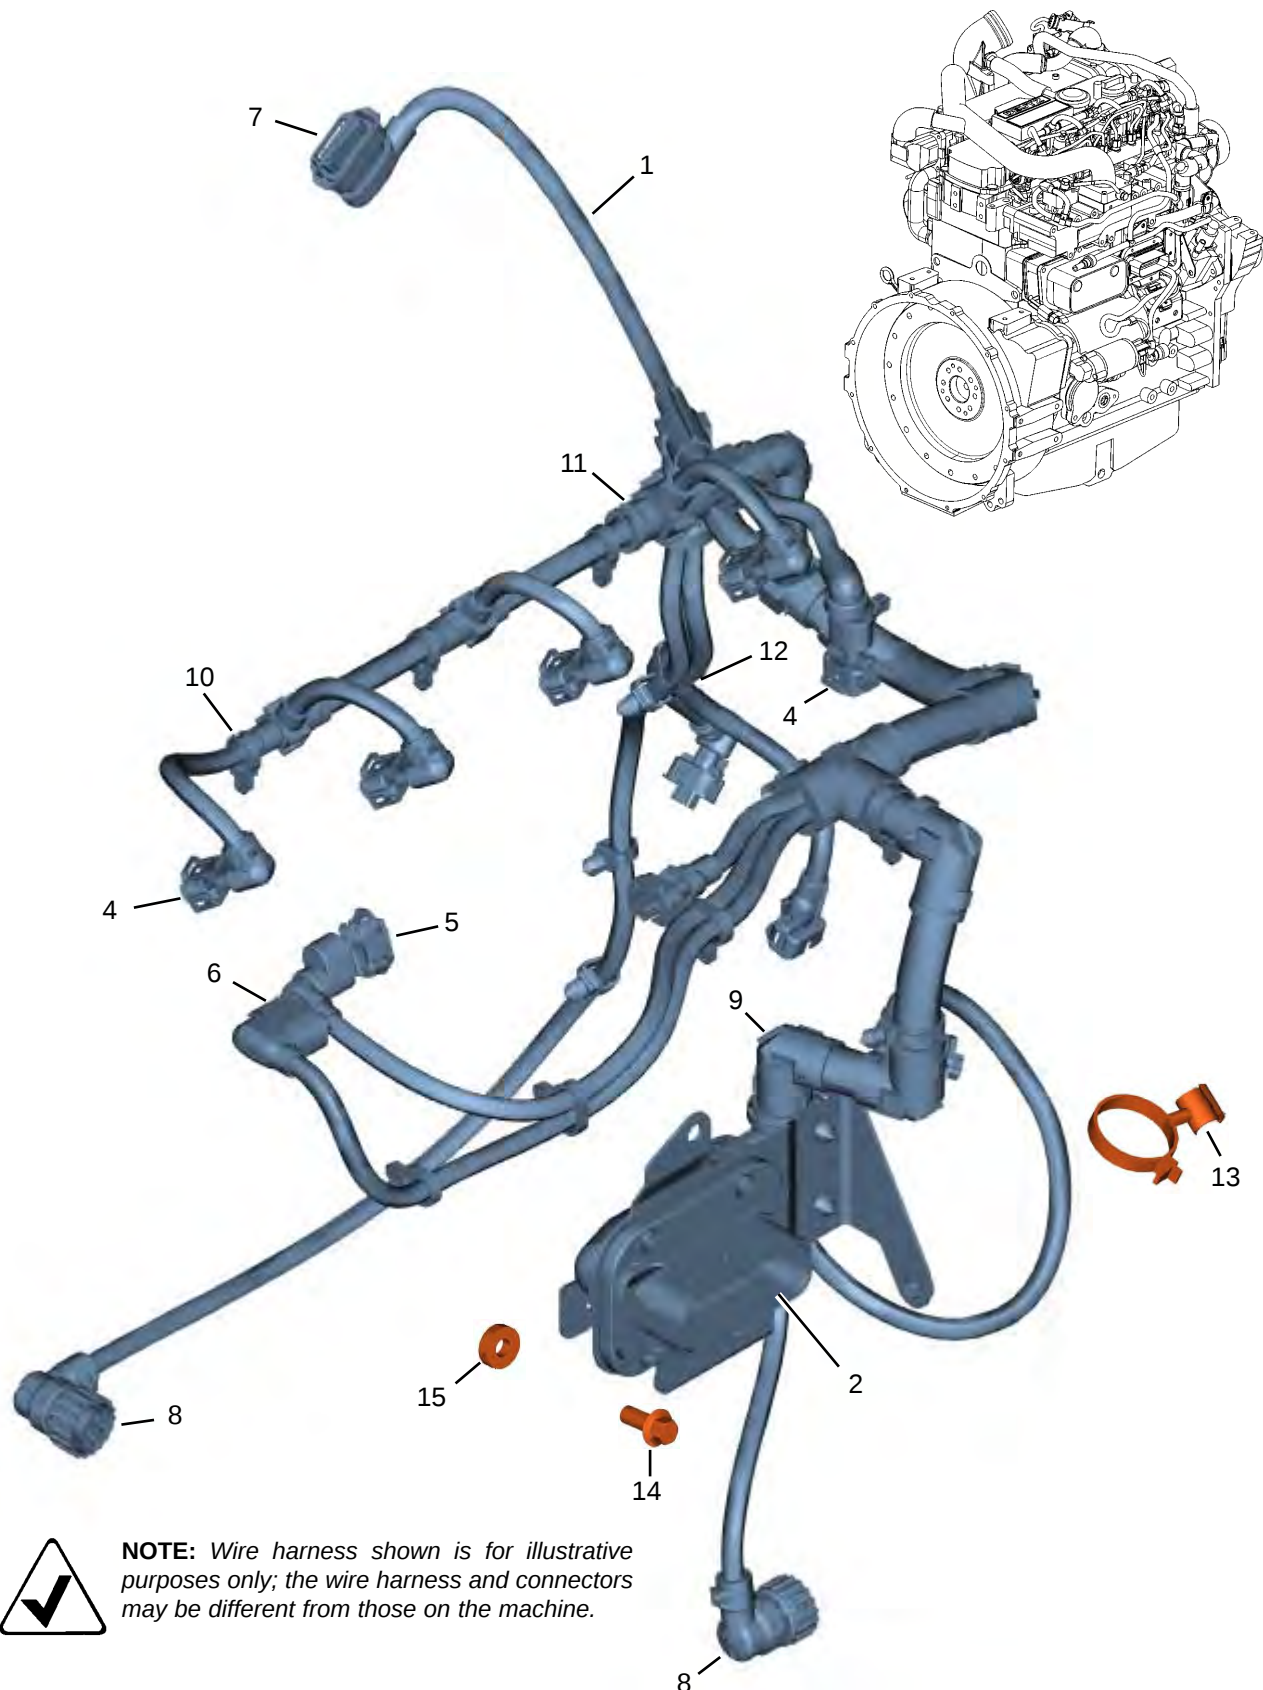 


Deutz TD 3.6 L4

Engine Engine Wire Harnesses

Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
01	50220545	ENGINE WIRE HARNESS	1	09	50220535	CLAMPING BAND	2
02	50220527	CONNECTOR, INTERFACE	1	10	50220550	CLAMPING BAND	13
03	50220546	CONNECTOR, COOLANT TEMP. . . .	4	11	50220551	CLAMPING BAND	1
04	50220543	CONNECTOR, INJECTORS	5	12	187173	CLAMPING BAND	1
05	50220547	CONNECTOR, RAIL PRES.	1	13	50220534	CLAMPING BAND	1
06	50220548	CONNECTOR, BOOST PRES.	1	14	105289	BOLT	1
07	50220549	CONNECTOR, EGR VALVE	1	15	50220536	SPACER	1
08	50220530	CONNECTOR, OIL PRES.	2				

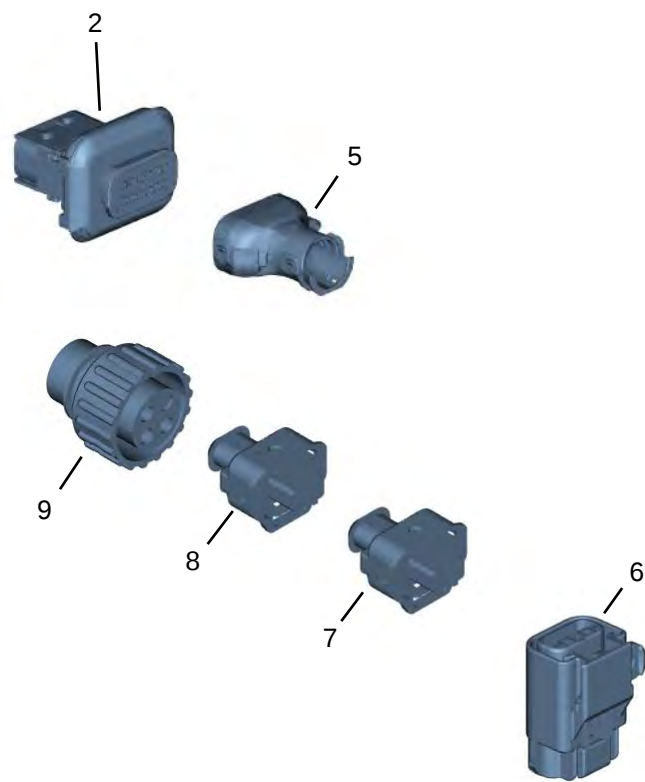 

Item No.	Part No.	Description	Qty. Req.	Item No.	Part No.	Description	Qty. Req.
02	50220537	PLUG-IN CONNECTOR 1 (12 pins)		07	50220543	PLUG-IN CONNECTOR 1	
05	50220540	ADAPTER 1		08	50220544	PLUG-IN CONNECTOR 1	
06	50220541	PLUG-IN CONNECTOR 1		09	50220542	PLUG-IN CONNECTOR 1	

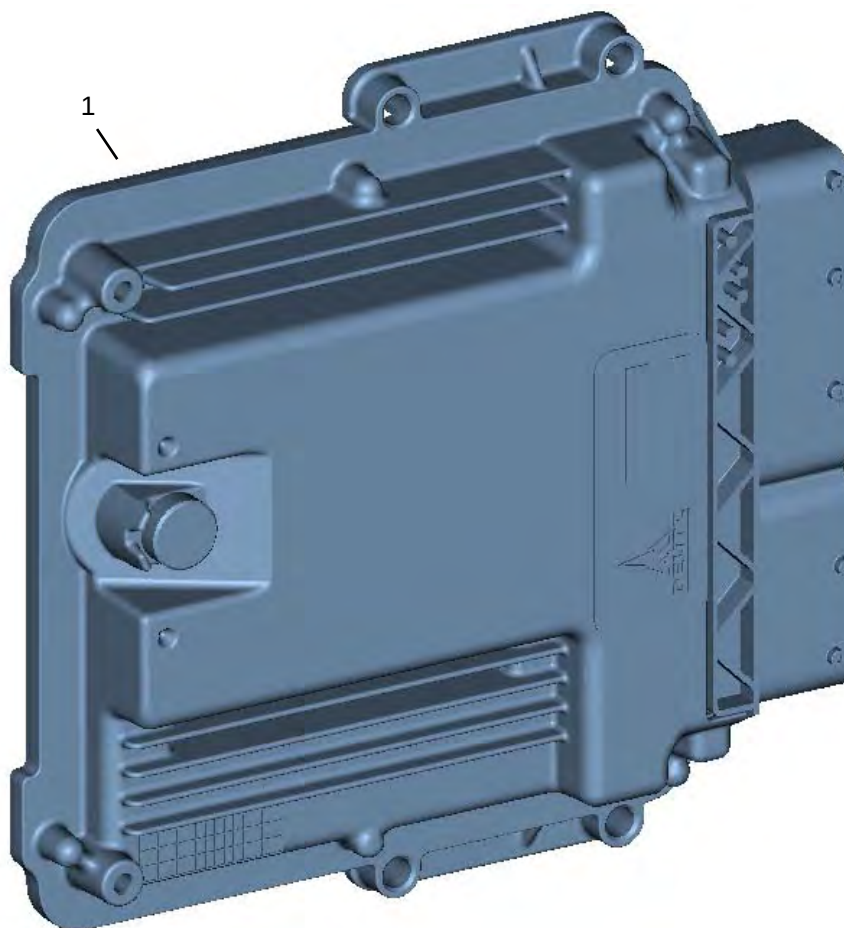 

Item No.	Part No.	Description	Qty. Req.
01	50220456	ENGINE CONTROL UNIT (ECU) . . 1	



NOTE: This is a special order item that requires programming. Please provide the engine model and serial number when placing the order for this part. Be aware that because of the programming requirements there will be a delay in obtaining this part.

Numerical Index

Deutz TD 3.6 L4

Part No.	Page No.	Item No.	Part No.	Page No.	Item No.	Part No.	Page No.	Item No.	Part No.	Page No.	Item No.
105289	05	41	133352	13	06	50220331	05	22	50220380	19	41
105289	05	53	133387	05	42	50220332	05	23	50220381	19	43
105289	07	03	133388	19	48	50220333	05	24	50220382	19	45
105289	33	03	133405	05	21	50220333	13	22	50220383	19	46
105289	39	10	133414	05	10	50220334	05	04	50220385	19	02
105289	47	14	133417	05	02	50220335	05	05	50220386	19	03
105292	19	42	133444	05	51	50220336	05	05	50220387	19	04
105298	15	10	133444	13	34	50220340	05	32	50220388	19	05
105303	11	03	133536	05	19	50220343	10	08	50220389	19	06
105303	39	08	133537	05	12	50220344	10	01	50220390	19	07
105303	39	11	133537	05	28	50220345	10	02	50220392	11	02
105307	13	50	133538	06	03	50220345	15	03	50220393	11	04
105325	11	01	133539	05	09	50220345	15	11	50220394	11	05
105407	05	31	187115	05	18	50220345	33	02	50220395	19	21
105437	35	03	187148	13	05	50220346	10	03	50220396	19	22
105483	27	03	187173	47	12	50220347	10	04	50220397	19	23
105646	23	09	187222	27	14	50220348	10	05	50220398	19	24
105896	19	33	187227	11	11	50220349	10	06	50220399	19	27
105896	41	06	187227	35	10	50220350	10	07	50220400	19	28
105905	07	08	187227	37	03	50220351	08	01	50220401	07	01
105910	15	09	187227	41	15	50220352	08	02	50220402	07	02
132023	07	04	187233	06	02	50220353	08	03	50220403	37	20
133103	05	44	187234	05	29	50220354	08	05	50220404	07	06
133103	19	50	187262	05	06	50220355	08	05	50220405	07	07
133104	43	50	187262	13	09	50220356	08	05	50220406	06	01
133132	05	17	187276	05	15	50220357	09	01	50220407	06	04
133133	35	13	187276	13	11	50220358	09	02	50220409	27	02
133135	39	06	187276	15	07	50220359	09	03	50220410	27	11
133136	19	47	187276	37	09	50220360	09	04	50220411	27	12
133138	13	10	187276	39	05	50220361	13	21	50220413	27	17
133138	15	06	187282	33	07	50220362	13	23	50220415	21	09
133138	37	08	194281	33	50	50220364	13	02	50220416	21	12
133139	05	11	243440	41	02	50220365	13	03	50220417	21	10
133141	35	12	50220270	06	05	50220366	13	08	50220418	21	13
133147	05	16	50220315	05	43	50220367	13	12	50220419	21	08
133149	05	30	50220318	28	06	50220368	13	13	50220420	21	11
133151	19	44	50220318	37	07	50220369	13	14	50220421	24	01
133162	27	16	50220318	41	09	50220370	13	31	50220422	24	02
133166	13	07	50220323	05	03	50220371	13	32	50220423	24	03
133184	43	03	50220324	05	04	50220372	13	33	50220424	24	04
133214	28	04	50220325	05	05	50220373	13	35	50220425	24	05
133232	27	15	50220326	05	07	50220374	19	31	50220426	22	01
133322	13	04	50220327	05	08	50220375	19	32	50220427	22	02
133326	07	05	50220328	05	13	50220376	10	11	50220428	22	03
133329	15	05	50220329	05	14	50220378	10	13	50220429	22	04
133335	17	03	50220330	05	20	50220379	10	14	50220430	22	05

Part No.	Page No.	Item No.	Part No.	Page No.	Item No.	Part No.	Page No.	Item No.	Part No.	Page No.	Item No.
50220431	22	06	50220478	37	11	50220546	47	03	50220777	05	54
50220432	23	01	50220478	37	13	50220547	47	05	50220778	11	06
50220434	23	03	50220479	37	16	50220548	47	06	50220779	13	01
50220435	23	05	50220480	37	15	50220549	47	07	50220780	05	01
50220436	23	06	50220481	37	14	50220550	47	10	50220781	15	01
50220437	23	07	50220483	30	05	50220551	47	11	50220783	17	01
50220438	32	01	50220484	30	06	50220552	10	12	50220784	17	02
50220439	32	02	50220486	30	02	50220552	11	10	50220785	19	01
50220440	32	03	50220487	26	03	50220553	07	09	50220786	19	49
50220441	33	01	50220487	30	03	50220554	07	10	50220787	21	05
50220442	33	04	50220488	37	10	50220556	15	02	50220788	21	07
50220443	33	05	50220493	37	12	50220557	25	01	50220789	21	06
50220444	33	06	50220494	37	01	50220558	25	02	50220790	21	02
50220445	33	08	50220495	37	02	50220559	05	70	50220791	21	04
50220446	33	09	50220496	37	05	50220560	05	33	50220792	21	03
50220447	35	09	50220497	37	06	50220561	05	60	50220793	22	08
50220448	35	02	50220498	37	18	50220561	06	06	50220794	23	02
50220449	35	04	50220500	29	01	50220562	05	25	50220795	23	08
50220450	35	05	50220501	29	02	50220563	10	15	50220796	23	10
50220451	35	06	50220503	26	02	50220563	11	12	50220797	26	01
50220452	35	07	50220504	43	07	50220564	24	06	50220798	27	01
50220453	35	08	50220505	43	12	50220565	22	07	50220799	31	03
50220455	35	11	50220506	43	11	50220569	22	12	50220800	30	04
50220456	49	01	50220507	43	08	50220571	31	08	50220801	30	01
50220458	39	01	50220508	43	10	50220572	31	07	50220802	32	04
50220459	39	02	50220509	45	04	50220573	31	06	50220803	33	10
50220460	39	03	50220510	45	02	50220574	31	01	50220804	35	01
50220461	39	04	50220511	45	01	50220575	31	02	50220805	43	06
50220462	39	07	50220512	45	03	50220577	43	04	50220806	27	13
50220462	41	03	50220513	43	09	50220638	15	13	50220872	15	04
50220463	39	09	50220515	43	01	50220639	15	12	50288228	21	01
50220464	41	01	50220516	43	02	50220640	15	16	50302200	31	04
50220465	41	04	50220519	43	05	50220641	15	15	50302554	31	05
50220466	41	05	50220527	47	02	50220642	15	14			
50220467	41	07	50220530	47	08	50220742	37	23			
50220468	41	08	50220534	47	13	50220743	37	27			
50220469	41	10	50220535	47	09	50220744	37	26			
50220470	41	11	50220536	47	15	50220767	28	01			
50220471	41	12	50220537	48	02	50220768	28	07			
50220472	41	13	50220540	48	05	50220769	28	02			
50220473	37	04	50220541	48	06	50220770	28	03			
50220473	41	14	50220542	48	09	50220771	28	05			
50220474	39	14	50220543	47	04	50220773	05	57			
50220475	39	12	50220543	48	07	50220774	05	55			
50220476	39	13	50220544	48	08	50220775	05	56			
50220477	37	19	50220545	47	01	50220776	05	52			

A

Air Intake Manifold	32
Air Intake Tube	35
Air Pressure Tube Assembly	35
Alternator	43

B

Belt Tensioner	45
Belt, Serpentine	45
Bracket, DOC	31
Bracket, Engine Speed	10
Bracket, Starter Relay	15
By-Pass Plug	05

C

Camshaft	11
Cap, Oil Fill	13
Clamp, Doc	31
Clamp, Exhaust	31
Clamp, Fuel Injector	24
Compensator Tube	30
Compression Spring	05
Connecting Rail	25
Connecting Rod Assembly	08
Connector	19, 47
Coolant Tube, EGR	37
Cover Plate, Flywheel Housing	15
Cover, Timing Gear	19
Crankshaft	10
Cylinder Head	13

D

Dipstick, Engine Oil Level	05
----------------------------------	----

E

EGR Bracket	37
EGR Control Valve	37
EGR Cooler	37
Engine Block Assembly	05
Engine Control Unit (ECU)	49
Engine Wire Harness	47
Exhaust Manifold	30
Exhaust Valve	13

F

Fan, Alternator	43
Filler Cap, Engine Oil	05
Filter, Engine Oil	07
Flywheel	17
Flywheel Housing	15
Fuel Injector	24
Fuel Line Assembly	22, 23
Fuel Rail	22
Fuel Return Line	23

G

Gasket Set, Td3.6 L4 Engine	05
Gasket, Air Intake Manifold	32
Gasket, Air Intake Tube	35
Gasket, Compensator Tube	30
Gasket, Cylinder Head	13
Gasket, EGR Coolant Tube	37
Gasket, Exhaust	31
Gasket, Exhaust Manifold	30
Gasket, Flange	27
Gasket, Oil Cooler	07
Gasket, Thermostat	41
Gasket, Turbocharager	26
Gasket, Valve Cover	13
Gear, Engine Speed	10
Gear, Fuel Injection Pump Drive	21
Gear, Idler	19
Gear, Oil Pump	19
Glow Plug	25
Guide Tube, Dipstick	05

H

High Pressure Pump	21
Hose, Coolant	41
Hose, EGR Cooler	37
Hose, Rubber	35, 37

I

Idler, Belt	45
Inlet, Doc	31
Intake Elbow	28
Intake Valve	13

M

Manifold, Coolant	39, 41
Mount, Alternator	43

O

Oil Cooler	07
Oil Filler Tube	05
Oil Line, Pressure	27
Oil Line, Return	27
Oil Pan	05
Oil Pump	19
Oil Suction Pipe	06
Outlet, Doc	31
Over-Flow Valve	21

P

Piston Assembly	09
Piston Cooling Nozzle	05
Pressure Sensor Assembly	33
Pulley, Alternator	43
Pulley, Crankshaft	10
Pulley, Fan	39
Pushrod, Valve Lifter	11

R

Rail Pressure Sensor Kit	22
Rear Main Seal	05
Regulator, Alternator	43
Relay, Starter	15
Rocker Arm	11

S

Seal, Crankshaft	19
Seal, Fuel Injector	24
Sensor, Engine Speed	10, 11
Sensor, Oil Pressure	07
Sensor, Pressure	33
Sensor, Temperature	33
Starter	15
Starter Ring	17

T

Temperature Sender	41
Thermostat	41
Transfer Pipe, Oil	06
Tube, Coolant	41
Turbocharger	26

V

Valve Cover	13
Valve Lifter, Hydraulic	11
Volume Control Valve	21

W

Water Pump	39
Wire Harness, Starter Relay	15
Wrist Pin	09

Use these torque values when tightening hardware—excluding: lock nuts, thread-forming, self-tapping, and metal screws—unless otherwise specified.

Grade 8.8		Grade 10.9		Grade 12.9	
-----------	---	------------	---	------------	---

Metric Coarse-Pitch Thread	All torque values are in Foot-Pounds and Newton Meters (Nm).				
	DIN 912, DIN 931, DIN 933, etc...			DIN 7984	
	8.8	10.9	12.9	8.8	10.9
M5	4.1 (5.5)	6 (8)	7 (10)	4 (5)	5 (7)
M6	7 (10)	10 (14)	13 (17)	6.3 (8.5)	9 (12)
M8	18 (25)	26 (35)	31 (42)	15 (20)	22 (30)
M10	33 (45)	48 (65)	59 (80)	30 (40)	44 (59)
M12	64 (87)	81 (110)	108 (147)	51 (69)	74 (100)
M14	100 (135)	133 (180)	170 (230)	81 (110)	118 (160)
M16	155 (210)	203 (275)	258 (350)	125 (170)	184 (250)
M18	207 (280)	302 (410)	354 (480)	181 (245)	254 (345)
M20	302 (410)	420 (570)	509 (690)	251 (340)	361 (490)
M22	406 (550)	575 (780)	686 (930)	339 (460)	487 (660)
M24	524 (710)	738 (1000)	878 (1190)	435 (590)	620 (840)
M27	767 (1040)	1092 (1480)	1305 (1770)	642 (870)	922 (1250)
M30	1047 (1420)	1482 (2010)	1770 (2400)	885 (1200)	1254 (1700)

Metric Fine-Pitch Thread	All torque values are in Foot-Pounds and Newton Meters (Nm).				
	DIN 912, DIN 931, DIN 933, etc...			DIN 7984	
	8.8	10.9	12.9	8.8	10.9
M8X1.0	18 (25)	27 (37)	32 (43)	16 (22)	24 (32)
M10X1.0	37 (50)	55 (75)	65 (88)	32 (43)	48 (65)
M10X1.25	36 (49)	52 (71)	61 (83)	31 (42)	46 (62)
M12X1.25	64 (87)	96 (130)	111 (150)	55 (75)	81 (110)
M12X1.5	61 (83)	92 (125)	107 (145)	53 (72)	77 (105)
M14X1.5	100 (135)	148 (200)	173 (235)	89 (120)	129 (175)
M16X1.5	155 (210)	229 (310)	266 (360)	133 (180)	195 (265)
M18X1.5	232 (315)	332 (450)	391 (530)	199 (270)	284 (385)
M20X1.5	325 (440)	465 (630)	538 (730)	277 (375)	391 (530)
M22X1.5	435 (590)	620 (840)	723 (980)	369 (500)	524 (710)
M24X2.0	546 (740)	789 (1070)	922 (1250)	465 (630)	664 (900)
M27X2.0	811 (1100)	1143 (1550)	1328 (1800)	679 (920)	959 (1300)
M30X2.0	1106 (1500)	1586 (2150)	1844 (2500)	959 (1300)	1364 (1850)

Use these torque values when tightening hardware—excluding: lock nuts, thread-forming, self-tapping, and metal screws—unless otherwise specified.

NOTE: All torque values are in foot-pounds (lb.-ft.), except those marked with asterisks (*), which are in inch-pounds (lb.-in.). To convert lb.-ft. to Newton Meter (Nm)—metric—torque values, multiply the lb.-ft. value by 1.355, or for inch pounds, multiply the lb.-in. value by 0.113.

Unified National Thread	Grade 2 		Grade 5 		Grade 8 	
	Dry	Oiled	Dry	Oiled	Dry	Oiled
8-32	19*	14*	30*	22*	41*	31*
8-36	20*	15*	31*	23*	43*	32*
10-24	27*	21*	43*	32*	60*	45*
10-32	31*	23*	49*	36*	68*	51*
1/4-20	66*	50*	9	75*	12	9
1/4-28	76*	56*	10	86*	14	10
5/16-18	11	9	17	13	25	18
5/16-24	12	9	19	14	25	20
3/8-16	20	15	30	23	45	35
3/8-24	23	17	35	25	50	35
7/16-14	32	24	50	35	70	55
7/16-20	36	27	55	40	80	60
1/2-13	35	35	75	55	110	80
1/2-20	40	40	90	65	120	90
9/16-12	55	55	110	80	150	110
9/16-18	60	60	120	90	170	130
5/8-11	75	75	150	110	220	170
5/8-18	85	85	180	130	240	180
3/4-10	130	130	260	200	380	280
3/4-16	150	150	300	220	420	320
7/8-9	125	125	430	320	600	460
7/8-14	140	140	470	630	660	500
1-8	190	190	640	480	900	680
1-14	210	210	710	530	1000	740

* Value shown is in pound-force inch (lb.-in.)—inch pounds.

GEHL®

www.gehl.com



www.us.manitou.com

Manitou Americas, Inc.
One Gehl Way
P. O. Box 179
West Bend, WI 53095-0179 U.S.A