

ISUZU DIESEL ENGINE

3LD1
Diesel engine

PARTS CATALOG

 
ISUZU LIMITED JAPAN

INDEX

Group	Section	Description
0	05A	ENGINE GASKET KIT
0	10A	CYLINDER HEAD COVER
0	11A	CYLINDER HEAD
0	12A	CYLINDER BLOCK
0	13A	OIL PAN AND LEVEL GAUGE
0	14A	CAMSHAFT AND VALVE
0	15A	CRANKSHAFT PISTON AND FL
0	20A	TIMING GEAR CASE AND FLY
0	22A	ENGINE MOUNTING
0	25A	INLET MANIFOLD
0	27A	EXHAUST MANIFOLD
0	28A	VENTILATION SYSTEM
0	30A	WATER PUMP AND CORROSION
0	31A	THERMOSTAT AND HOUSING
0	32A	WATER PIPING ENGINE
0	33A	FAN AND FAN BELT
0	40A	FUEL INJECTION SYSTEM
0	41A	FUEL FILTER AND BRACKET
0	42A	FUEL PUMP AND PIPE
0	50A	OIL COOLER AND OIL FILTE
0	51A	OIL PUMP AND OIL STRAINE
0	52A	OIL AND VACUUM PIPING E
0	60A	ENGINE ELECTRICAL CONTRO
0	61A	BATTERY AND ENGINE ELECT
0	65A	STARTER
0	66A	GENERATOR
0	80A	INJECTION PUMP
0	89A	TIMING CHAIN CASE
8	10A	WIRING HARNESS AND FUSE
8	15A	FIXING PARTS WIRING HAR
8	21A	METER ASM
8	25A	SWITCH AND RELAY INSTRU
8	26A	ELECTRICAL CONTROL AND O

0-05A ENGINE GASKET KIT

ENGINE GASKET KIT

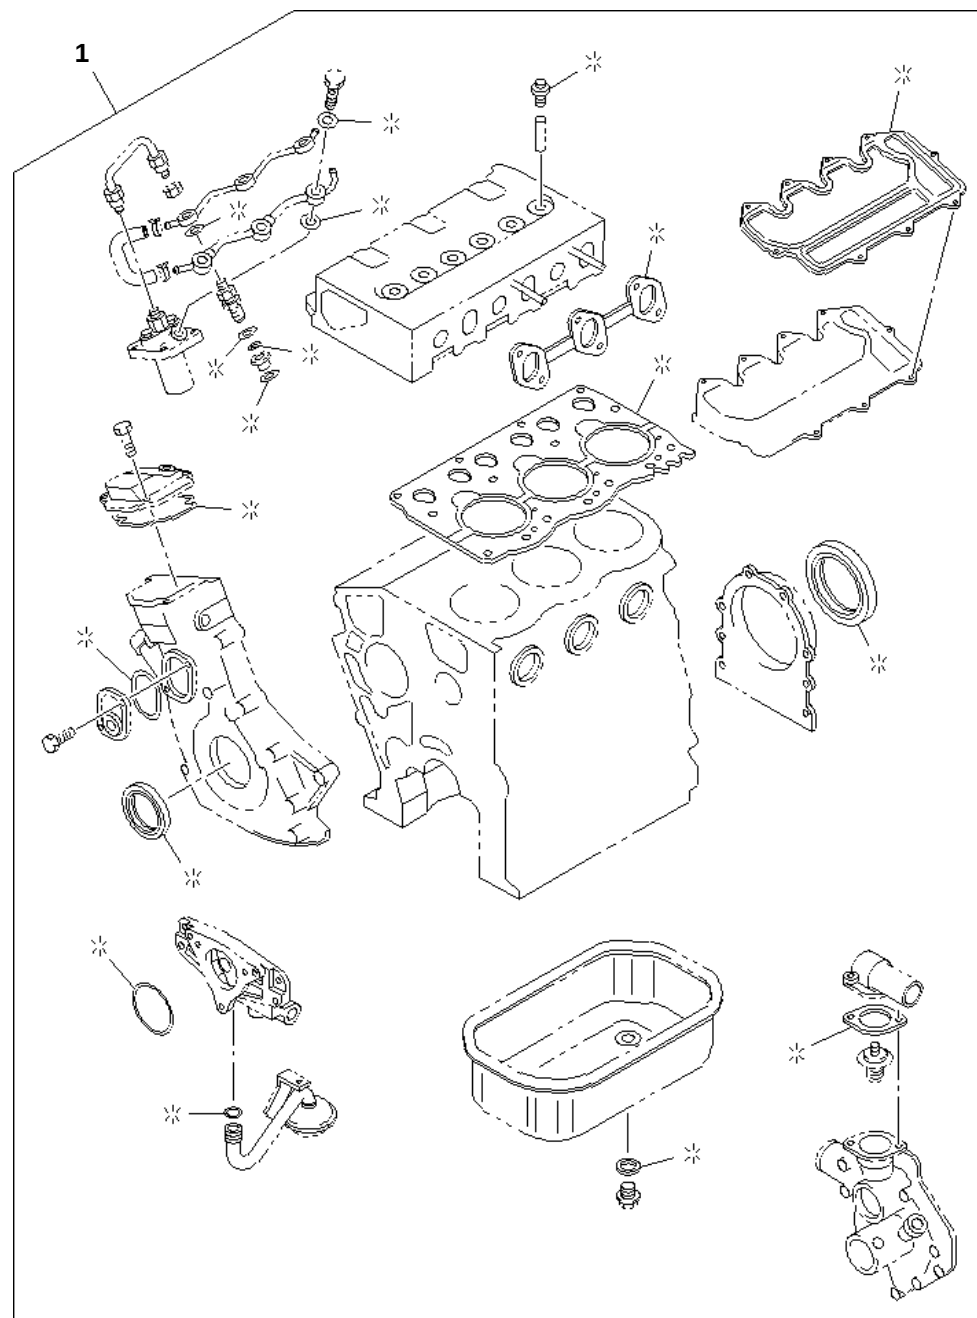

005A0150793


50793 3LD1/3LD2 1992-

0-05A ENGINE GASKET KIT

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
1	GASKET SET; ENG OVERHAUL 5-87811-545-2 5-87814-071-0		1 1		ABCDE ABCDE	FGHIJ FGHIJ	KL O KLMNO	PQRST PQRST	UVWXY UVWXY	ZABCD ZABCD	EFGHI EFGHI	JKLMN JKLMN	OPQRS OPQRS	TUVWX TUVWX	9204-9909 9910-	C

0-10A CYLINDER HEAD COVER

 CYLINDER HEAD COVER

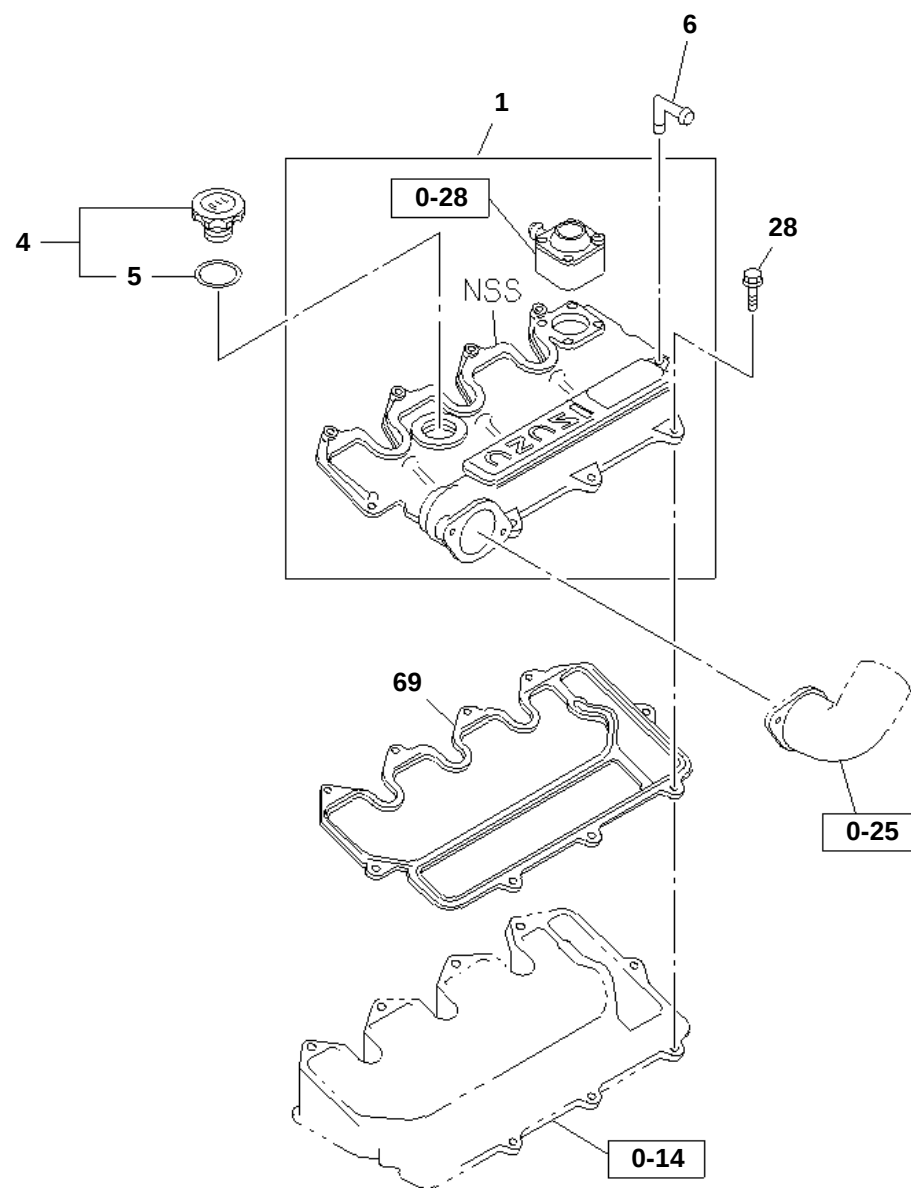

010A0150793


50793 3LD1/3LD2 1992-

0-10A CYLINDER HEAD COVER

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
1	COVER; CYL HD 8-97070-462-4 8-97070-462-4 8-97230-885-0 8-97070-462-4 8-97223-745-0 8-97070-462-4 8-97136-000-1 8-97182-395-1		1 1 1 1 1 1 1 1	ID=32 OD=40	ABCDE	IJ FGH FGH	KLMNO	PQRST	UVW	ZA D	F H	KLMN	OPQRS	TU X	9204- 9204-9905 9906- 9204-9912	C
4	CAP; OIL FILLER 8-94133-207-5		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
5	GASKET; OIL FILLER 8-94123-623-1		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
6	PIPE; PCV HOSE 8-94386-233-0 8-94386-233-0		1 1		ABCDE	FGHIJ	KLMNO	PQRST	UV XY	BC	E G			W V	9204- 0001-	
28	BOLT; HD COVER 0-2808-0620-0		9		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
69	GASKET; HD TO COVER 8-97071-699-1		1	M6X20 FLANGE ALSO INCLUDED IN GASKET SET(ENGINE)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
0-14	Move to 0-14 Move to 0-14 Move to 0-14															
0-25	Move to 0-25 Move to 0-25 Move to 0-25															
0-28	Move to 0-28 Move to 0-28 Move to 0-28															

0-11A CYLINDER HEAD

 CYLINDER HEAD

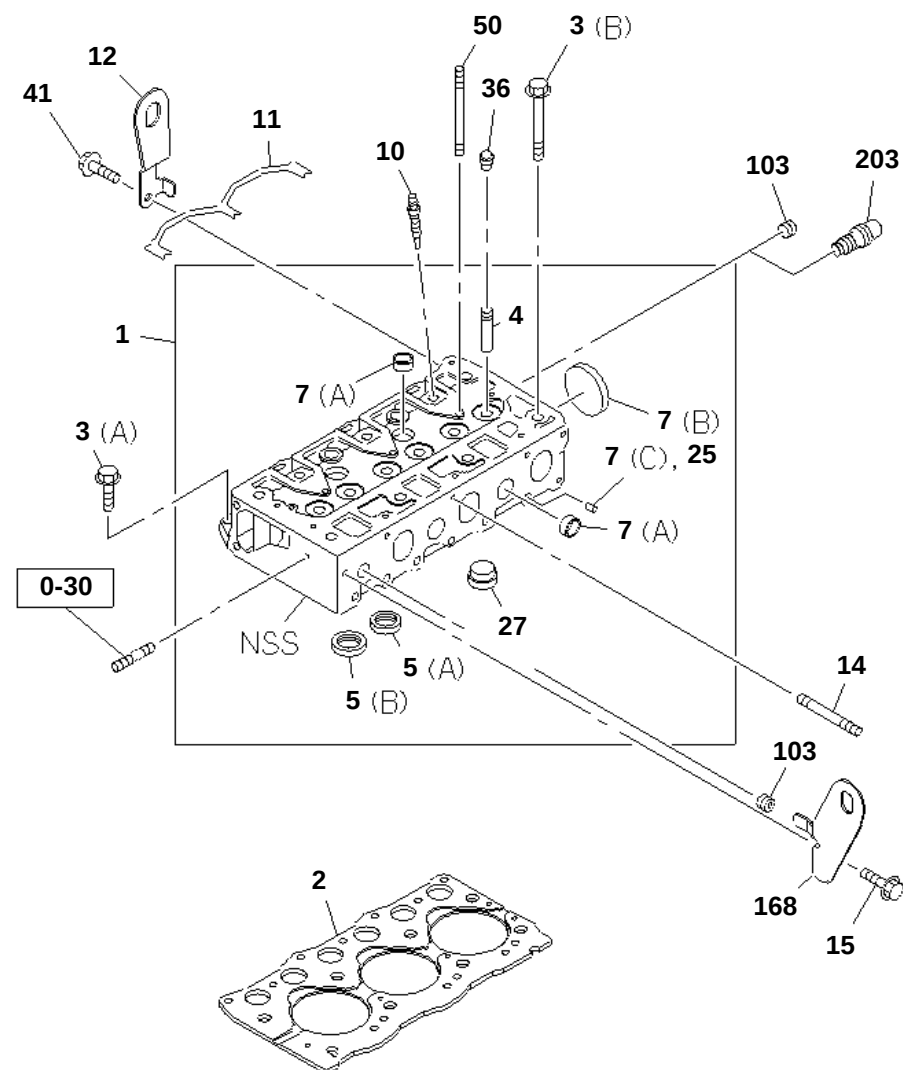

011A0150793

50793 3LD1/3LD2 1992-

0-11A CYLINDER HEAD


KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
1	HEAD ASM; CYL 8-97044-858-5 8-97102-512-0 8-97102-512-0 8-97163-401-4		1 1 1 1	ALSO INCLUDED IN GASKET SET(ENGINE)			O O		U WXY U WXY V	ZABCD ZABCD	EFGHI EFGHI	JKLMN JKLMN	OPQR OPQR		9204-9606 9607-9610 9204-9610	C C C
2	GASKET; CYL HD 8-97045-393-2		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9611-	
3	BOLT; CYL HD TO BLOCK 8-94463-784-0		4		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
	8-97036-959-1		8		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
4	GUIDE; VLV 8-97031-749-0		6		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
5	SEAT; VLV INSERT 8-97045-391-2		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
	8-97045-392-0		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
7	CUP; SEALING,CYL HEAD 1-09600-011-2		4		ABCDE	FGHIJ	O	PQRS	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9804	C
	8-97209-609-0		4		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9805-	
	1-09600-005-1		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-0301	
	8-97351-451-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0302-	
	8-97233-429-0		4		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0002-	
10	PLUG; GLOW 8-97063-614-0 8-97106-549-4 8-97166-332-2 8-97126-257-0 8-97232-935-0		3 3 3 3 3		ABCDE	FGHI J	KLMNO	PQRST	WXY UVWXY	ZABCD ZABCD	EFGHI EFGHI	JKLMN JKLMN	OPQRS OPQRS	T VWX T VWX U U	9204-9309 9310- 9204- 9204-9907 9908-	C C
11	CONNECTOR; GLOW PLUG 8-97045-417-1 8-97187-733-0 8-97210-144-0 8-97179-537-0		1 1 1 1		ABCDE	FGHI J J	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	T VWX U	9204- 9204-9804 9805- 9204-	C
12	HANGER; ENG,RR															

0-11A CYLINDER HEAD

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
12	8-97070-112-1		1						WXY						9204-9208	C
	8-97085-390-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9209-	
14	STUD; EXH MANIF															
	5-09300-065-0		2	M8X79 L=92	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
15	BOLT; HANGER,FRT															
	0-2808-0816-0		1	M8X16 FLANGE	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
25	PLUG; CYL HD															
	5-11119-009-0		4	D=8 TAPER 1/24	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-0001	
27	PLUG; HOT															
	8-97061-022-1		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
36	SEAL; OIL,VLV GUIDE															
	8-94110-559-1		6	ALSO INCLUDED IN GASKET SET(ENGINE)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
41	BOLT; ENG HANGER															
	0-2808-0816-0		1	M8X16 FLANGE	ABCDE	FGHIJ	KLM O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
50	STUD; ROCKER SHAFT BRKT															
	9-0411-0645-0		5													
	8-97094-641-1		5	M6X45 L=53	ABCDE	FGHIJ	KLMNO	PQRST	WXY UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9302 9303-	C
103	PLUG; HD															
	5-09605-005-0		2	PT 3/8	ABCD		O		U WXY	ZABCD	EFG I	JK			9204-9511	
	5-09605-005-0		1	PT 3/8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9512-	
168	HANGER; ENG,FRT															
	8-97070-113-0		1						WXY						9204-9208	C
	8-97085-389-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9209-	
0-30	Move to 0-30															
	Move to 0-30															
	Move to 0-30															

0-12A CYLINDER BLOCK

 CYLINDER BLOCK

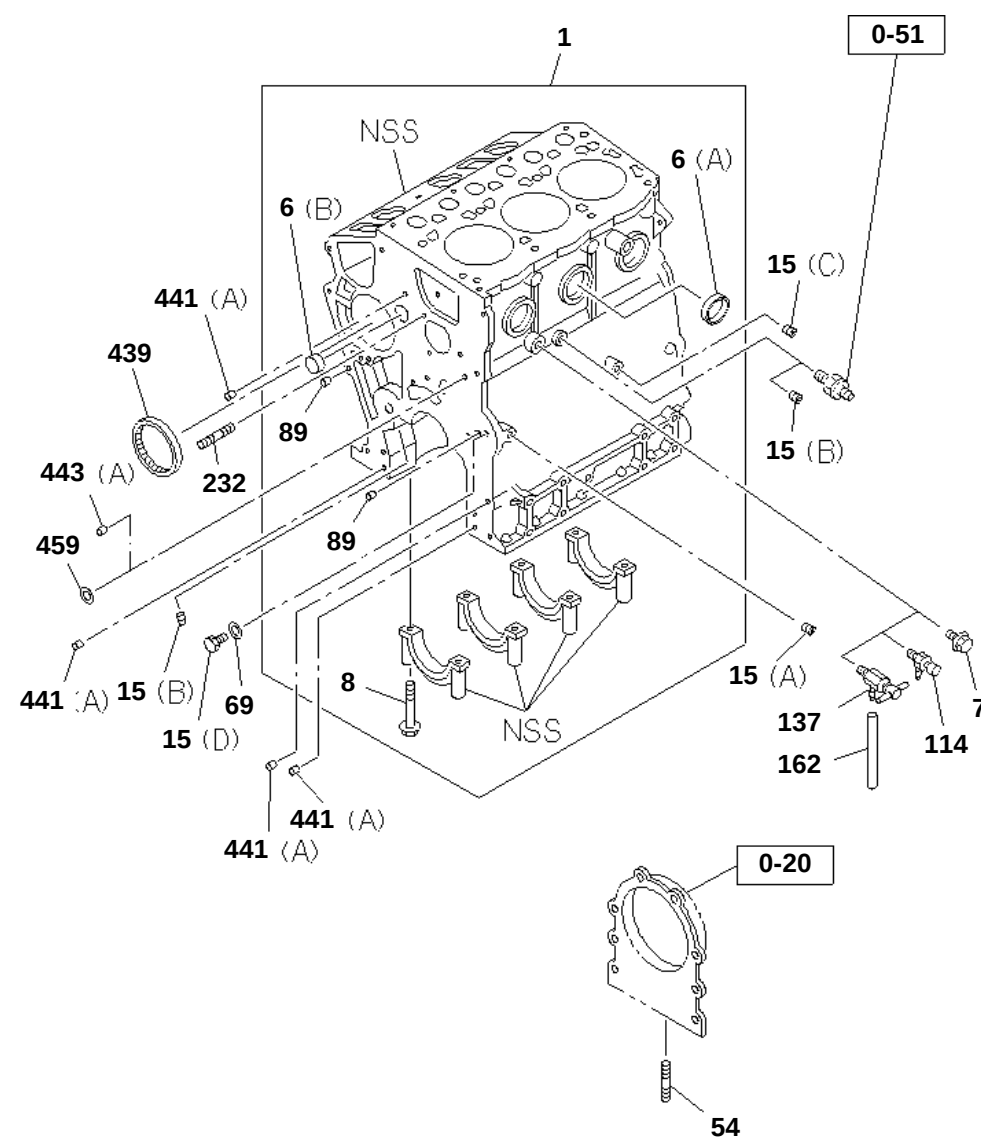


012A0150793

50793 3LD1/3LD2 1992-

0-12A CYLINDER BLOCK

 CYLINDER BLOCK

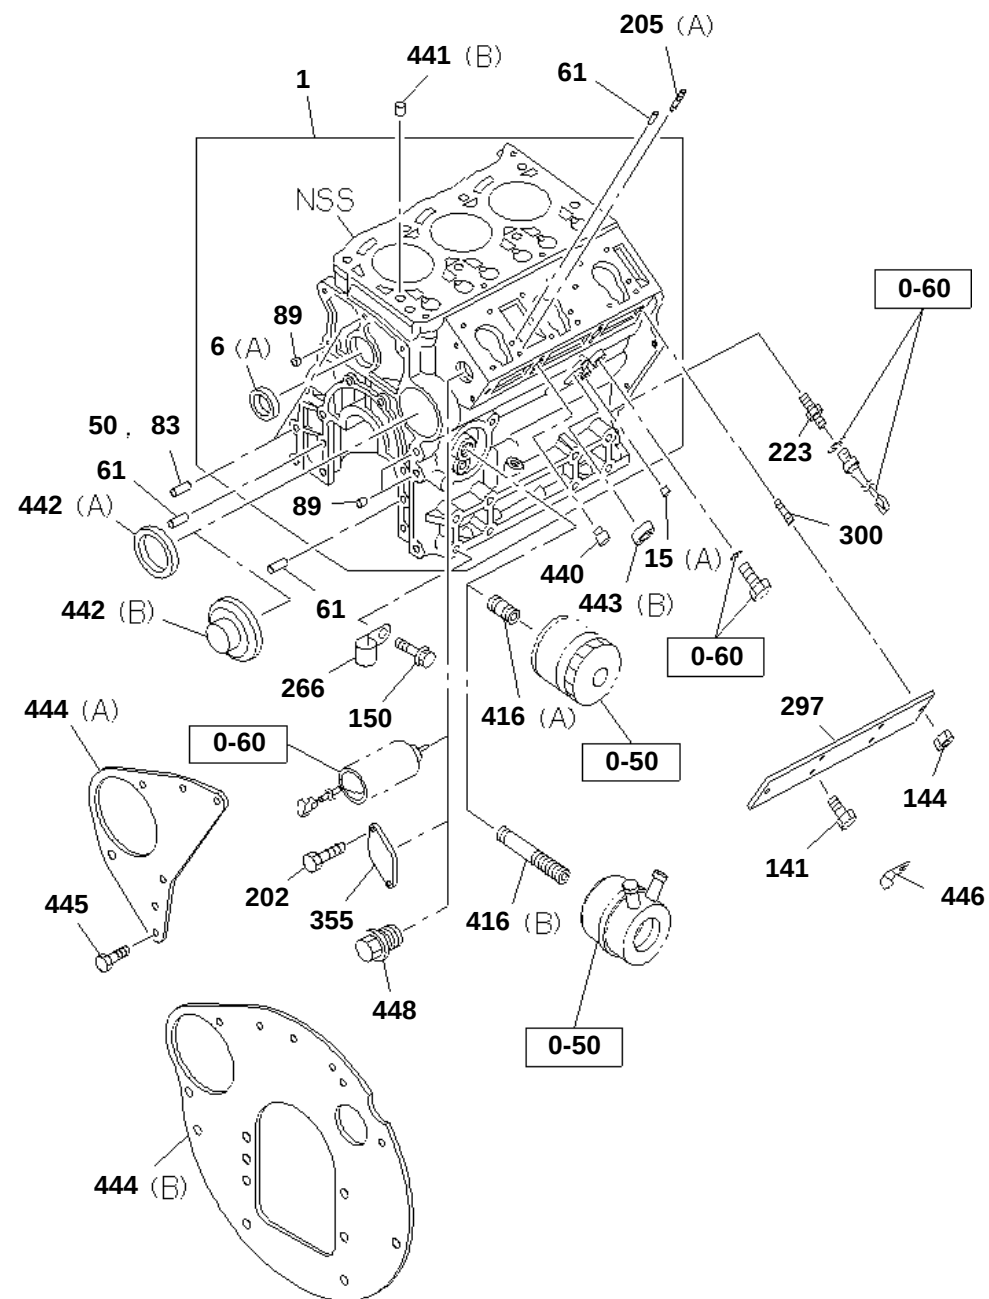


012A0250793

50793 3LD1/3LD2 1992-

0-12A CYLINDER BLOCK

 CYLINDER BLOCK

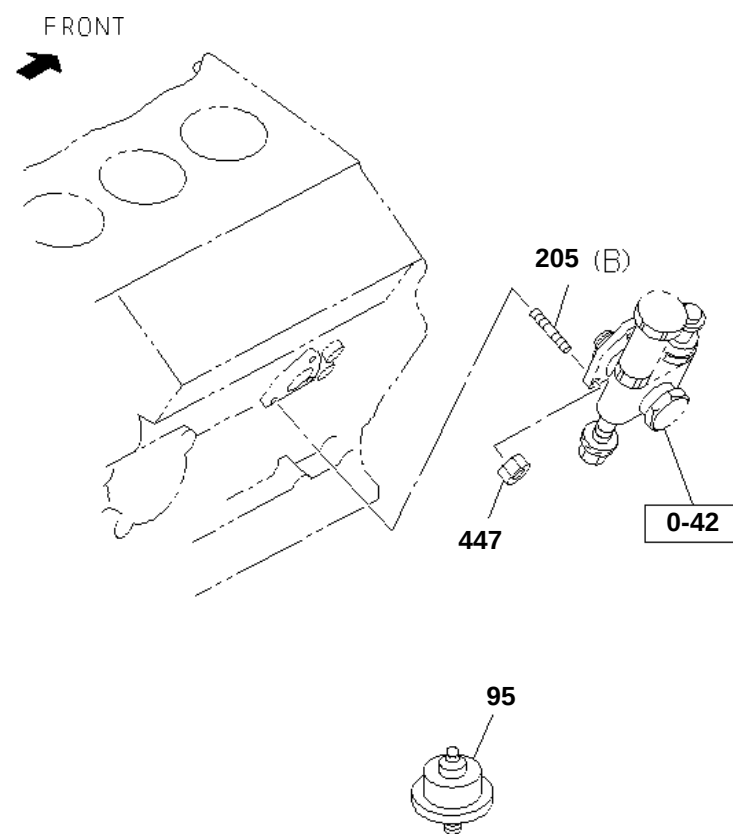

012A0350793

50793 3LD1/3LD2 1992-

0-12A CYLINDER BLOCK

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
1	BLOCK ASM; CYL		1		ABCD										9204-9503	C
	8-97106-200-3		1		ABCD	G									9504-9703	
	8-97129-074-1		1		ABCD	GHI	K N								9704-0009	
	8-97169-153-0		1		ABCD	GHI	K N								0010-	
	8-97231-538-5		1												9204-9311	
	8-97036-399-5		1				O		WXY	ZABCD	E				9312-9503	
	8-97106-198-3		1				O		U WXY	ZABCD	EFGHI	JK			9504-9609	
	8-97129-073-0		1			F	O		U WXY	ZABCD	EFGHI	JKLMN	OPQR		9610-9703	
	8-97164-202-0		1		E	F	O	Q	U WXY	ZABCD	EFGHI	JKLMN	OPQRS		9704-0009	
	8-97169-161-1		1		E	F J	L O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0010-	
	8-97231-539-5		1		E	F J	LM O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
6	CUP; SEALING															A
	8-94229-853-0		4	(A) D=35	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
	1-09600-011-2		1	(B) OD=22	ABCDE	FGHIJ	O	PQRS	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9804	
	8-97209-609-0		1	(B) OD=22	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9805-	
7	PLUG; WATER DRAIN															
	9-09664-001-0		1	PT 1/4	A		O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
8	BOLT; BRG CAP															
	8-94167-470-1		8		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
15	PLUG; OIL GALLERY															
	1-09605-050-0		1	(A) PT 1/8	ABCDE	FGH J	LMNO	P RST	UVWXY	ABCD	EFGH	KL	O QRS	TUVWX	9204-	
	1-09605-004-0		1	(B) PT 1/8	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9711-9905	
	9-0920-4510-0		1	(B) M10	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9906-	
	1-09605-019-0		1	(C) PT 1/4	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
	8-94399-421-0		1	(D) M8X6					WXY						9204-9206	
50	PIN; STRAIGHT,RR PLATE															
	9-0816-0816-0		2								I	J		W	9204-	
54	STUD; OIL PAN TO BLOCK															
	9-0411-0616-0		2	M6X16 L=25	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
61	PIN; STRAIGHT															
	9-0816-0616-0		5	OD=6 L=16	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9703	
	9-0816-0616-0		2	OD=6 L=16	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9704-0102	
	9-09878-532-0		3	OD=6 L=24	ABCDE	FGHIJ	KL NO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9704-0102	
	9-0816-0616-0		5	OD=6 L=16	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0103-	

0-12A CYLINDER BLOCK

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
69	GASKET; PLUG,OIL GALLERY,C/BL 9-0957-1408-0		1						WXY						9204-9206	
83	PIN; FLYWHEEL HSG 9-0816-0816-0		2		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGH	JKLMN	OPQRS	TUV X	9204-	
89	CUP; SEALING,OIL GALLERY 5-09600-013-0 5-09600-013-0		6 4	OD=12.3 OD=12.3	ABCD E	GHI F J	K N LM O	PQRST PQRST	UVWXY UVWXY	ZABCD ZABCD	EFGHI EFGHI	JKLMN JKLMN	OPQRS OPQRS	TUVWX TUVWX	9204- 9204-	
95	UNIT; OIL PRESSURE 9-83140-310-0 9-83140-091-0		1 1			I	K								9204- 9204-	
114	NIPPLE; WATER DRAIN 8-94221-562-0 5-13721-028-1		1 1		B CD		LMN								9204- 9204-	
137	COCK; DRAIN,WATER 8-94429-421-0 8-94342-414-0		1 1		E ABCDE	FG FGHIJ	KLMN								9204-9701 9702-	C
141	BOLT; COVER 0-2808-0614-0 0-2808-0614-0 0-2808-0620-0 0-2808-0616-0 0-2808-0614-0 0-2808-0614-0		4 3 1 4 4 2	M6X14 FLANGE M6X14 FLANGE M6X20 FLANGE M6X16 FLANGE M6X14 FLANGE M6X14 FLANGE	ABCD E E	FGHIJ FGHIJ	KLMN O O	PQRST PQRST	UV UV W WXY WXY	ZABCD ZABCD	EFGHI EFGHI	JKLMN JKLMN	OPQRS OPQRS	TUVWX TUVWX	9207- 9204- 9204- 9204-9206 9207-9810 9811-	C
144	NUT; COVER FIX 0-9115-0206-0 8-97137-836-0		2 2		ABCDE ABCDE	FGHIJ FGHIJ	KLMNO KLMNO	PQRST PQRST	UVWXY UVWXY	ZABCD ZABCD	EFGHI EFGHI	JKLMN JKLMN	OPQRS OPQRS	TUVWX TUVWX	9204-0104 0105-	
150	BOLT; CLIP 0-2818-1012-0		1		ABCDE	FGHIJ	KLMN								9906-	
162	HOSE; WATER DRAIN,C/BL 9-09914-909-0 9-09914-909-0 9-09914-909-0 9-09914-909-0		1 1 1 1	L=520 S.B L=10000 L=700 S.B L=10000 L=800 S.B L=10000 L=700 S.B L=10000	E	F IJ G G H	K								9204- 9204-9701 9702- 9204-	
202	BOLT; COVER PLATE 0-2808-0612-0		2						W						9204-9311	
205	STUD; PUMP HOLE 9-0411-0820-0 1-09305-005-0 9-0411-0616-0		6 6 3	(A) M8X20 L=32 (A) M8X36 (B) M6X16 L=25	ABCDE	FGHIJ IJ	KLMNO K	PQRST	UVWXY WXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9206 9207- 9204-	C

0-12A CYLINDER BLOCK


KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
223	CONNECTOR; OIL PRESSURE 8-97134-518-0		1					Q		Z	I	J MN	P		9204-	
232	STUD; WATER PUMP 9-0411-0840-0		1	M8X40 L=52	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-0005	
	8-97262-145-1		1	M8X40 L=52	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0006-	
266	CLIP; HOSE 1-09701-138-1		1	ID=13 L=20	ABCDE	FGHIJ	KLMN								9906-	
297	COVER; CYL BLOCK 8-97075-803-0		1						WXY	ZA					9204-9311	
	8-97106-204-2		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9312-	
300	STUD; COVER 9-0411-0616-0		2	M6X16 L=25	ABCD				WXY	ZABCD	E				9204-9406	
	8-94343-896-0		1	M6X19 L=27	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9407-0005	
	8-97262-148-1		1	M6X19 L=27	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0006-	
	9-0411-0616-0		1	M6X16 L=25	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9407-0005	
	8-97262-147-1		1	M6X16 L=25	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0006-	
355	PLATE; HOLE COVER,C/BL 8-97024-358-0		1		A				W						9204-9311	
416	STUD; OIL FILTER 8-94325-595-0		1	(A)	A E	F J	LM O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
	8-97102-550-1		1	(B)	BCD	GHI	K N								9204-	
439	BEARING; NEEDLE 8-97047-056-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
440	PIN; CONT LINK 8-97039-495-3		2		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
441	DOWEL; CYL BLOCK 9-11229-058-1		4	(A) OD=11 L=8	ABCDE	FGHIJ	KLMNO	P RST	UVWXY	ABCD	EFGH	K	O Q S	TUVWX	9204-	
	9-11229-058-1		2	(A) OD=11 L=8				Q		Z	I	J LMN	P R		9204-	
	8-94200-819-0		2	(B) D=15.25	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
442	PLUG; THRUST 8-97080-560-0		1	(A)					WXY						9204-9207	C
	8-97047-142-1		1	(B)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9208-	
443	CAP; SEALING 5-09600-013-0		1	(A) OD=12.3	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
	1-09600-012-2		1	(B) OD=32	ABCDE	FGH	LMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
444	PLATE; C/BL 8-97200-287-1		1	(A)							I	J			9204-	

0-12A CYLINDER BLOCK

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDDDE AAAAA 11110 01231 U A	EEEEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
444	8-97122-285-1		1	(A)										W	9204-0108	
	8-97200-287-1		1	(A)										W	0109-	
445	BOLT; PLATE		3								I	J		W	9204-	
446	0-2818-1020-0															
446	CLIP; LEAD WIRE															
447	9-0952-4622-0		1	ID=7 L=16	E		O	PQRST	UV						9204-	
447	NUT; FUEL PUMP HOLE															
	0-9115-0106-0		3	M6 FLANGE		IJ	K									9204-0104
	8-97137-836-0		3	M6 W/LK WASHER		IJ	K									0105-
448	PLUG; C/BL															
	8-97102-451-0		1	M25X9.5	ABCDE	FGH J	L O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	PQRS	T VWX	9204-9812	
0-20	Move to 0-20															
	Move to 0-20															
	Move to 0-20															
0-51	Move to 0-51															
	Move to 0-51															
	Move to 0-51															
0-50	Move to 0-50															
	Move to 0-50															
	Move to 0-50															
0-60	Move to 0-60															
	Move to 0-60															
	Move to 0-60															
0-42	Move to 0-42															
	Move to 0-42															
	Move to 0-42															

0-13A OIL PAN AND LEVEL GAUGE

 OIL PAN AND LEVEL GAUGE

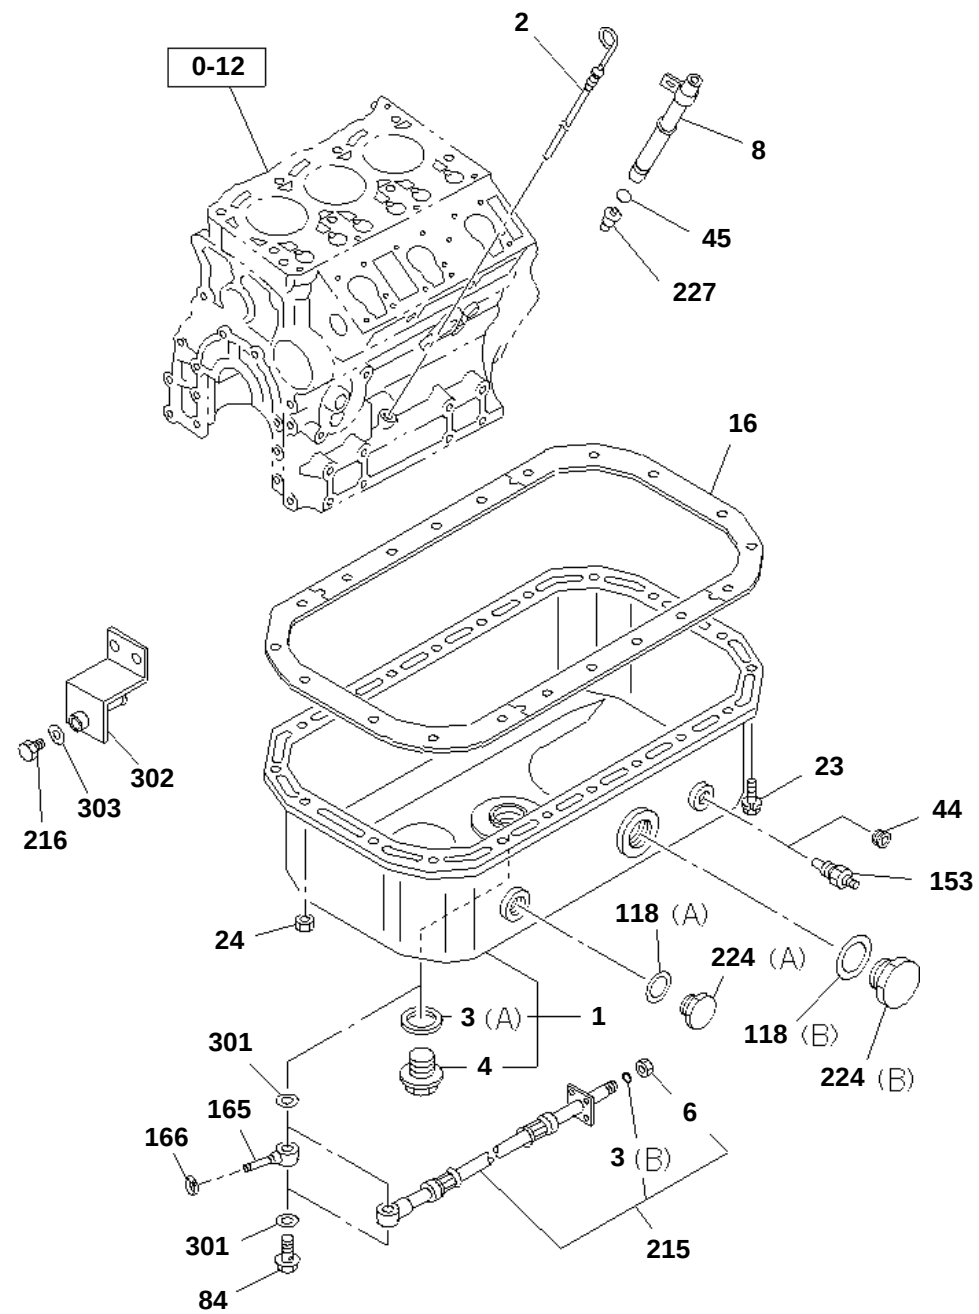

013A0150793

50793 3LD1/3LD2 1992-

0-13A OIL PAN AND LEVEL GAUGE


KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
1	PAN ASM; OIL 8-97087-691-3 8-97174-684-1 8-97045-398-3 8-97101-524-1 8-97045-398-3		1 1 1 1 1		ABCDE	FGH IJ	LMN K O	PQRST	UVWXY	ZABC D D	EFGHI	JKLMN	OPQRS	TUVWX	9204- 9702- 9204- 9204-0003 0004-	
2	GAUGE; OIL LEVEL 8-97087-728-3 8-97107-871-0 8-97096-714-0 8-94405-065-0 8-97096-714-0 8-97207-064-0		1 1 1 1 1 1		ABCDE	FGHIJ	KLMN O	PQRS T	UV WXY	D ZABC	EFGHI	KLM J N N	R O Q S P P	T UVWX	9204- 9405- 9204- 9204- 9204-9807 9808-	
3	GASKET; DRAIN PLUG 1-09623-057-0		1	ALSO INCLUDED IN GASKET SET(ENGINE) (A)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
4	PLUG; DRAIN,OIL 9-09662-012-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
8	TUBE; GUIDE,OIL LEVEL GAUGE 8-97096-700-0		1					T		D		KLMN	P R	T	9204-	
16	GASKET; OIL PAN TO C/BL 8-97314-913-0		1	ALSO INCLUDED IN GASKET SET(ENGINE)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0111-	
23	BOLT; OIL PAN 0-2808-0616-0 0-2808-0614-0 8-97135-141-0		18 18 18	M6X16 FLANGE M6X14 FLANGE M6X13 W/WASHER	ABCDE ABCDE ABCDE	FGHIJ FGHIJ FGHIJ	O KLMNO	PQRS PQRST	WXY UVWXY UVWXY	ZABCD ZABCD ZABCD	EFGHI EFGHI EFGHI	JKLMN JKLMN JKLMN	OPQRS OPQRS OPQRS	TUVWX TUVWX TUVWX	9204-9206 9207-9805 9806-	C A
24	NUT; OIL PAN 0-9115-0206-0 8-97137-836-0		2 2		ABCDE ABCDE	FGHIJ FGHIJ	O KLMNO	PQRS PQRST	UVWXY UVWXY	ZABCD ZABCD	EFGHI EFGHI	JKLMN JKLMN	OPQRS OPQRS	TUVWX TUVWX	9204-9805 9806-	A
44	PLUG 1-09605-050-0		1	PT 1/8		J									9204-	
45	GASKET; GUIDE TUBE 5-09623-002-0		1					T		D		KLMN	P R	T	9204-	
84	BOLT; JOINT 5-89090-104-0		1							D		N	P		9204-	
118	GASKET; PLUG,OIL HTR 9-0957-1416-0 9-0957-1424-0		1 1	(A) ID=16.2 OD=24 (B) ID=24.5 OD=32		IJ IJ	K K								9204- 9204-	
153	THERMOMETER UNIT; OIL 8-97142-411-0		1			I	K								9204-	
165	JOINT; OIL DRAIN															

0-13A OIL PAN AND LEVEL GAUGE

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
165	8-94151-891-1		1							D		N	P		9204-	
166	CLIP; RUBBER HOSE															
	1-09707-131-0		1							D		N	P		9204-	
224	PLUG; OIL PAN HTR															
	9-09661-005-0		1	(A)		IJ	K								9204-	
	9-9920-2324-0		1	(B)		IJ	K								9204-	
227	NIPPLE; GUIDE TUBE															
	8-94455-894-0		1					T		D		KLMN	P R	T	9204-0302	
	8-97363-253-0		1							D		KLMN	P R	T	0303-	
301	GASKET; JOINT															
	9-0957-1420-0		2	ID=20.5 OD=28.0						D		L N	P		9204-	
0-12	Move to 0-12															
	Move to 0-12															
	Move to 0-12															

0-14A CAMSHAFT AND VALVE

 CAMSHAFT AND VALVE

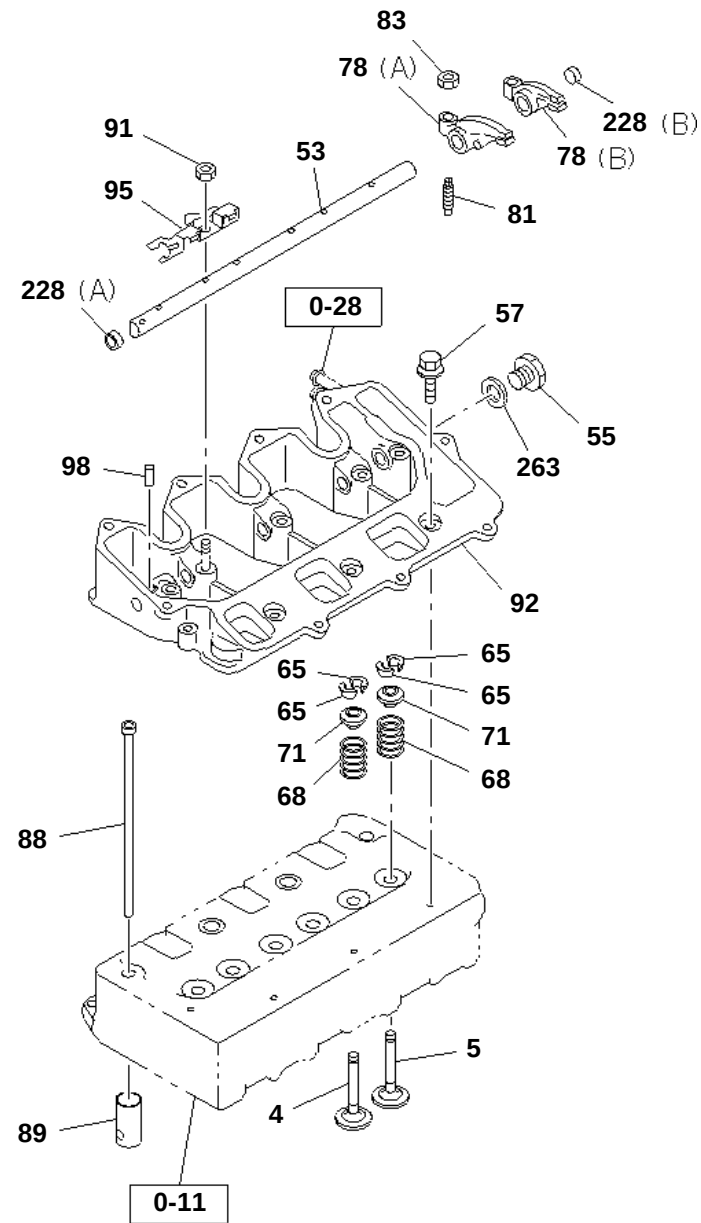


014A0150793

50793 3LD1/3LD2 1992-

0-14A CAMSHAFT AND VALVE

 CAMSHAFT AND VALVE

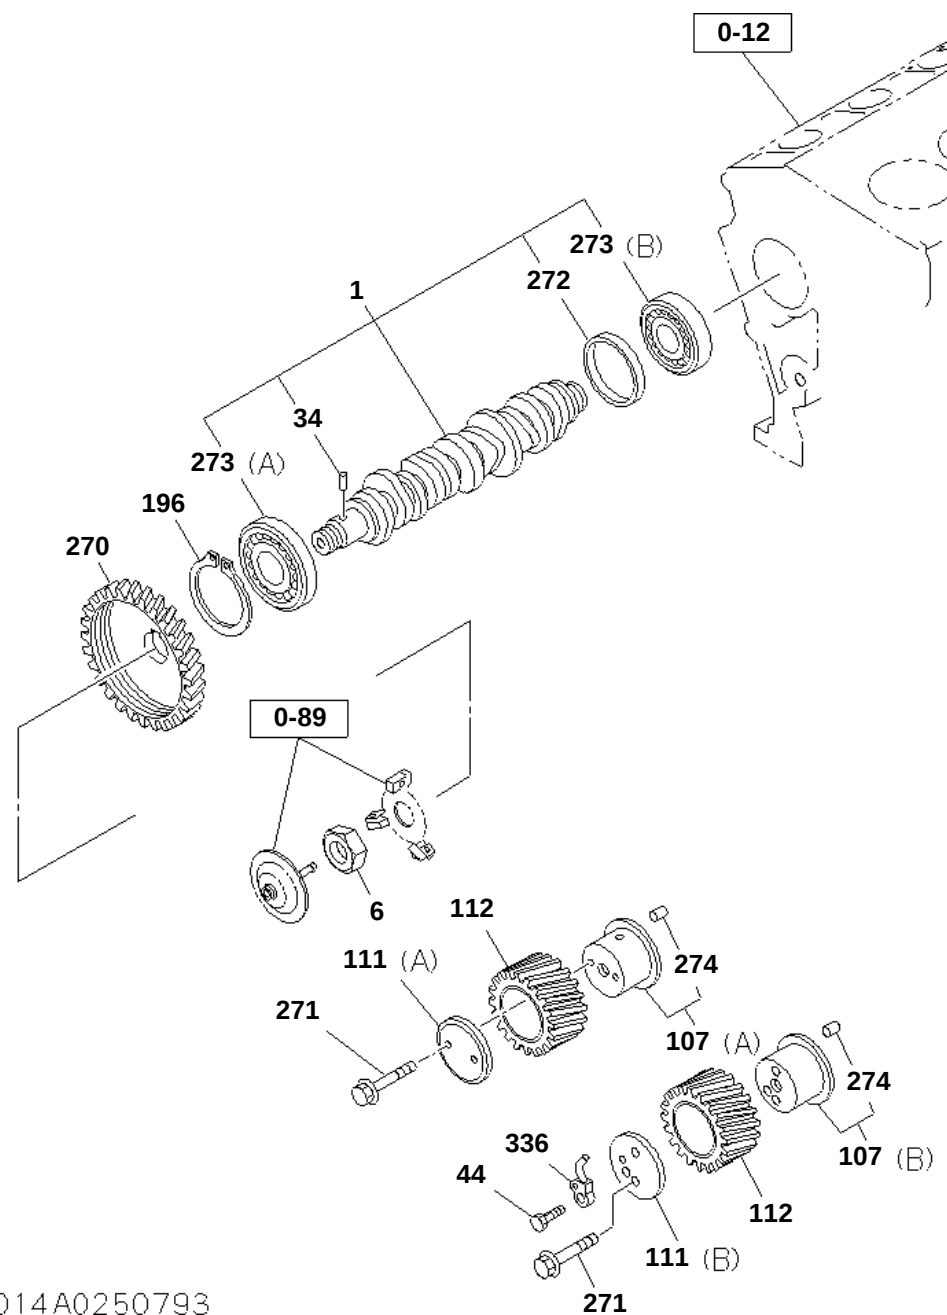

014A0250793

50793 3LD1/3LD2 1992-

0-14A CAMSHAFT AND VALVE

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDDDE AAAAA 11110 01231 U A	EEEEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
1	CAMSHAFT 8-97062-141-2		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	C
4	VALVE; INL 8-97045-409-1 8-97084-894-0 8-97102-123-1		3 3 3						W WXY	ZABC	EFGHI	JKLMN	OPQRS	TUVWX	9204-9206 9207-9306 9307-	
5	VALVE; EXH 8-97045-410-3		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
6	NUT; CM/SHF GEAR 5-09400-053-0 8-97303-225-0		1 1		ABCDE ABCDE	FGHIJ FGHIJ	KLMNO KLMNO	PQRST PQRST	UVWXY UVWXY	ZABCD ZABCD	EFGHI EFGHI	JKLMN JKLMN	OPQRS OPQRS	TUVWX TUVWX	9204-0209 0210-	
34	PIN; CM/SHF 9-09878-626-0		1	OD=5 L=6	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	A
44	BOLT 9-09906-205-1		1	M10X24	E										0104-0306	
53	SHAFT; ROCKER ARM 8-97070-465-1		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
55	PLUG; ROCKER SHAFT END 9-9920-2314-0		1	M14X9	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
57	BOLT; ROCKER ARM BRKT 0-2808-0625-0 0-2868-0616-0		4 4	M6X25 FLANGE M6X16 FLANGE	ABCDE ABCDE	FGHIJ FGHIJ	KLMNO KLMNO	PQRST PQRST	UVWXY UVWXY	ZABCD ZABCD	EFGHI EFGHI	JKLMN JKLMN	OPQRS OPQRS	TUVWX TUVWX	9204- 9611-	A
65	COLLAR; SPLIT 8-94239-501-0		12		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
68	SPRING; VLV 8-97034-629-1		6		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
71	SEAT; SPR 8-94251-031-1		6		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
78	ARM; ROCKER 8-97066-876-1		3	(A) INLET	ABCD		O		U WXY	ZABCD	EFG				9204-9506	A
	8-97116-448-0		3	(A) INLET	ABCDE	FGHIJ	O	PQRS	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9507-9807	
	8-97212-518-0		3	(A) INLET	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9808-	
	8-97066-878-1		3	(B) EXHUST	ABCD		O		U WXY	ZABCD	EFG				9204-9506	
	8-97116-450-0		3	(B) EXHUST	ABCDE	FGHIJ	O	PQRS	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9507-9807	A
	8-97212-520-0		3	(B) EXHUST	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9808-	
81	SCREW; ADJ,ROCKER ARM															

0-14A CAMSHAFT AND VALVE


KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE ABCDE	FGHIJ FGHIJ	KLMNO KLMNO	PQRST PQRST	UVWXY UVWXY	ZABCD ZABCD	EFGHI EFGHI	JKLMN JKLMN	OPQRS OPQRS	TUVWX TUVWX		
81	8-97010-485-0		6		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
83	NUT; ADJ SCREW,LK 9-0911-1506-0		6		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
88	ROD; PUSH 8-97069-575-3		6		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
89	TAPPET; VLV 8-97034-630-1 8-97124-369-0		6 6		ABCD ABCDE		O KLMNO		U WXY UVWXY	ZABCD ZABCD	EFGHI EFGHI	JK JKLMN			9204-9508 9509-	A
91	NUT; ROCKER SHAFT 0-9115-0206-0 8-97137-836-0		5 5		ABCDE ABCDE	FGHIJ FGHIJ	KLMNO KLMNO	PQRST PQRST	UVWXY UVWXY	ZABCD ZABCD	EFGHI EFGHI	JKLMN JKLMN	OPQRS OPQRS	TUVWX TUVWX	9204-0104 0105-	A
92	BRACKET; ROCKER ARM 8-97070-461-7 8-97102-549-1 8-97131-360-0 8-97163-416-5		1 1 1 1				O		U WXY	ZABCD	FGH E I	JK			9204-9508 9204-9508 9509-9610 9611-	C C C
95	SPRING; ROCKER SHAFT 8-97070-698-2		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
98	PIN; SHAFT SET 9-0816-0516-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
107	SHAFT; IDLE GEAR 8-97072-829-0 8-97129-780-1 8-97129-780-1 8-97310-122-1 8-97129-780-1 8-97143-223-0 8-97147-499-0		1 (A) 1 (A) 1 (A) 1 (B) 1 (A) 1 (A) 1 (A)		ABCD ABCD E E E	FGHIJ	O KLMNO	PQRST	U WXY UVWXY	ZABCD ZABCD	EFG I EFGHI	JK JKLM			9204-9509 9510- 9510-0103 0104-0306 0307- 9204-9603 9604-	C
111	COLLAR; THRUST,IDLE GEAR 5-12535-005-1 5-12535-005-1 8-97310-177-1 5-12535-005-1		1 (A) 1 (A) 1 (B) 1 (A)		ABCD E E E	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204- 9204-0103 0104-0306 0307-	
112	GEAR; IDLE 8-97037-594-0 8-97129-782-0 8-97037-594-0 8-97231-213-0		1 1 1 1		ABCD ABCDE	FGHIJ	O KLMNO	P RST Q	U WXY UVWXY	ABCD ABCD Z	EFGH EFGH I	K K J L M N			9204-9509 9510- 9204- 9604-	
196	RING; SNAP 9-0918-0162-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
228	CUP; SEALING,CAMSHAFT															

0-14A CAMSHAFT AND VALVE

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
228	9-11129-083-0		1	(A) OD=12	ABCDE	FGHIJ	KL NO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
	8-97039-526-0		1	(B) OD=8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-0107	A
	8-97233-429-0		1	(B) OD=8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0108-	
263	GASKET; CAM END 9-0957-1414-0		1	ID=14.2 OD=20.0	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
270	GEAR; INJ PUMP & VLV 8-97034-590-0		1		ABCD	FGHIJ	KLMNO	PQRST	WXY UVWXY	ZABCD ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9309	C
	8-97102-288-2		1		ABCD	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9310-0105	C
	8-97307-404-4		1		E										0106-	
	8-97102-288-2		1		E										9204-0306	
	8-97307-404-4		1												0307-	
271	BOLT; COLLAR 0-2809-0860-0		2	M8X60 FLANGE	ABCD		O		U WXY	ABCD	EFG	K			9204-9509	
	0-2809-0845-0		2	M8X45 FLANGE	ABCDE	FGHIJ	KLMNO	P RST	UVWXY	ABCD	EFGH	K			9510-	
	0-2809-0860-0		2	M8X60 FLANGE				Q		Z	I	J LMN	O Q S P R	TUVWX	9510-	
272	RING; CAMSHAFT 8-97062-048-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
273	BEARING; CAMSHAFT 9-00090-610-0		1	(A)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
	9-00090-657-0		1	(B)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
274	PIN; IDLE SHAFT 9-0816-0510-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
336	PIPE; OIL,JET 8-97310-125-1		1		E										0104-0306	
0-11	Move to 0-11 Move to 0-11 Move to 0-11															
0-28	Move to 0-28 Move to 0-28 Move to 0-28															
0-12	Move to 0-12 Move to 0-12 Move to 0-12															
0-89	Move to 0-89 Move to 0-89 Move to 0-89															

0-15A CRANKSHAFT,PISTON AND FLYWHEEL

 CRANKSHAFT,PISTON AND FLYWHEEL

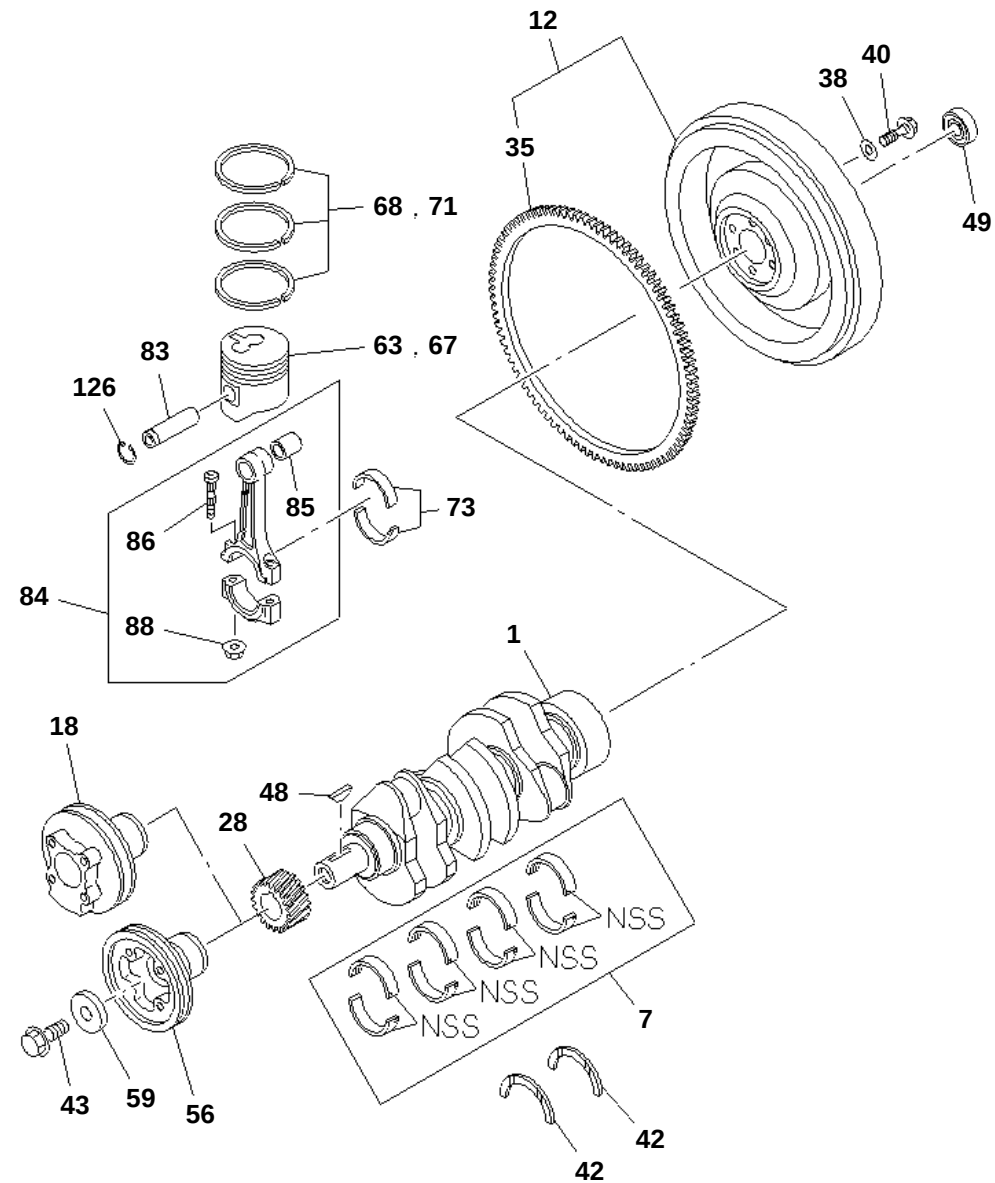

015A0150793

50793 3LD1/3LD2 1992-

0-15A CRANKSHAFT,PISTON AND FLYWHEEL


KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
1	CRANKSHAFT 8-97044-777-4		1		ABCDE	FGHIJ	KLMNO	P ST QR	UVWXY	ZABCD	EFGH I	JKLMN J	OPQRS	TUV X W	9204- 9204-	A
7	METAL KIT; CRANKSHAFT,STANDARD 8-97047-021-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
12	FLYWHEEL 8-97091-412-3		1		A		N								9204-	
	8-97091-412-3		1		B										9204-0005	
	8-97164-531-0		1		B										0006-	
	8-97107-894-0		1		CD										9204-	
	8-97164-531-0		1		E	IJ	KLM	P RT	V						9609-	
	8-97091-411-1		1			F	O		U						9204-9608	
	8-97164-531-0		1			F	O		U						9609-	
	8-97160-689-0		1			GH									9204-0208	
	8-97091-412-3		1			GH									0209-	
	8-97078-369-1		1					Q	WXY	ZABCD	E GH	JKLMN	OPQRS	TUV X	9204-	
	8-97201-637-0		1					S			F I	J		W	9204-	
	8-97091-412-3		1												9204-	
18	PULLEY; CR/SHF 8-97180-694-1		1	1-GROOVE										V	9204-9910	
	8-97229-457-1		1	1-GROOVE										V	9911-	
28	GEAR; CR/SHF 8-97034-592-1		1	Z=37	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-0202	
	8-97328-612-0		1	Z=37	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0203-	
35	GEAR; RING 8-94419-602-1		1	Z=108	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
38	WASHER; FLYWHEEL 8-97023-268-0		6		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
40	BOLT; FLYWHEEL 8-94133-328-1		6		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
42	WASHER; THRUST,CR/SHF 5-11599-003-1		2		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
43	BOLT; CR/SHF PULLEY 8-94386-079-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
48	KEY; WOODRUFF,CR/SHF 8-94201-641-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
49	BEARING; PILOT 9-00090-679-0		1					S							9204-	
56	PULLEY; CR/SHF DAMPER 8-97078-474-0		1	1-GROOVE	A				W				O		9204-0009	
	8-97226-831-0		1	1-GROOVE	A				W				O		0010-	
	8-97078-474-0		1	1-GROOVE	BCDE	IJ	KL		XY	ZABCD	E GHI	JK MN	P RS	TU WX	9204-9910	

0-15A CRANKSHAFT,PISTON AND FLYWHEEL

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE BCDE	FGHIJ IJ FGH FGH	KLMNO KL	PQRST PQRS T T	UVWXY XY UV UV	ZABCD ZABCD	EFGHI E GHI	JKLMN JK MN	OPQRS P RS	TUVWX TU WX		
56	8-97226-831-0		1	1-GROOVE											9911-	C
	8-97078-474-0		1	1-GROOVE											9204-0003	
	8-97226-831-0		1	1-GROOVE											0004-	
	8-97226-831-0		1	1-GROOVE			MN								9204-	
	8-97078-474-0		1	1-GROOVE			O	PQRS	UV						9204-0105	
	8-97226-831-0		1	1-GROOVE			O	PQRS	UV						0106-	
	8-97078-474-0		1	1-GROOVE				T							9204-0103	
	8-97226-831-0		1	1-GROOVE				T							0104-	
	8-97078-474-0		1	1-GROOVE							F	L			9204-0206	
	8-97226-831-0		1	1-GROOVE							F				0207-	
	8-97078-474-0		1	1-GROOVE									Q		9204-9911	
	8-97226-831-0		1	1-GROOVE									Q		9912-0206	
	8-97307-351-0		1	1-GROOVE									Q		0207-	
59	WASHER; CR/SHF PULLEY															C
	8-94134-792-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
63	PISTON															
	8-97176-887-0		3	GRADE=NON	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
67	PISTON; O/S=0.25															
	8-97087-106-0		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
68	RING SET; PISTON,STANDARD															
	8-97047-022-0		3		ABCD				WXY	ZABCD	EFGHI	JK			9204-9309	
	8-97113-503-0		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9310-	
71	RING SET; PISTON,O/S=0.25															
	8-97141-205-0		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
73	METAL SET; CONN ROD,STANDARD															
	8-94156-084-0		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
83	PIN; PISTON															C
	5-12211-021-0		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
84	ROD ASM; CONN															
	8-97047-024-1		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-0104	
	8-97310-351-0		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0105-	
85	BUSHING; CONNROD															
	5-12251-007-1		3		ABCDE	FGHIJ	KLM O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-0006	
	8-97219-191-0		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0007-0104	
	8-97310-352-0		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0105-	
86	BOLT; CONNROD															
	8-94216-206-4		6		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
88	NUT; CONNROD															
	8-94224-236-2		6		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
126	RING; SNAP,PISTON PIN															
	8-94114-049-1		6	T=1.7 OD=27.8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	

0-20A TIMING GEAR CASE AND FLYWHEEL HOUSING

 
TIMING GEAR CASE AND FLYWHEEL HOUSING

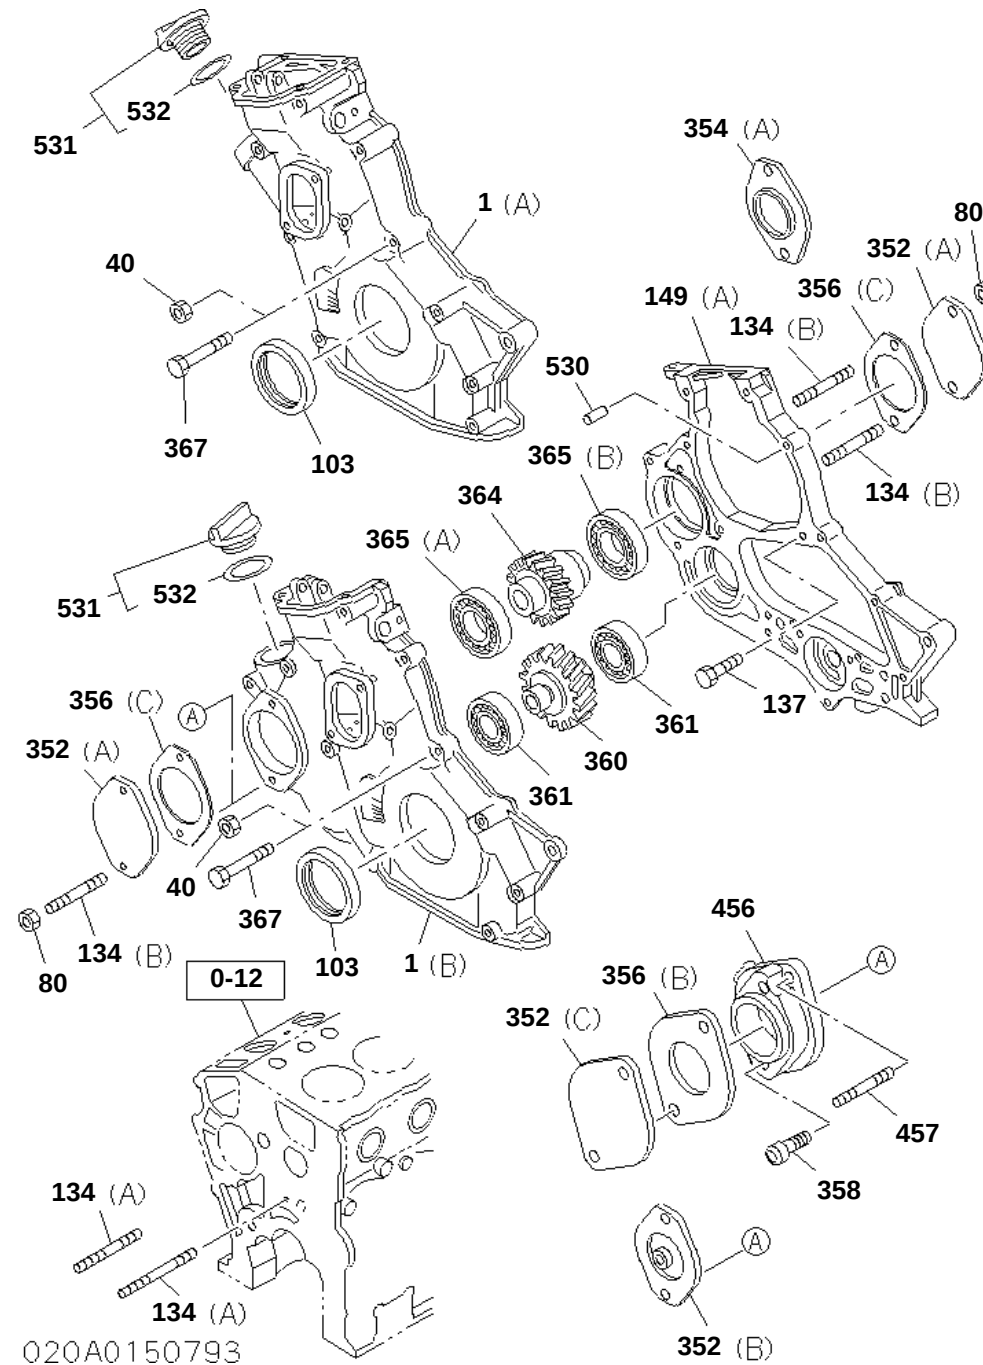

50793 3LD1/3LD2 1992-

0-20A TIMING GEAR CASE AND FLYWHEEL HOUSING

 TIMING GEAR CASE AND FLYWHEEL HOUSING

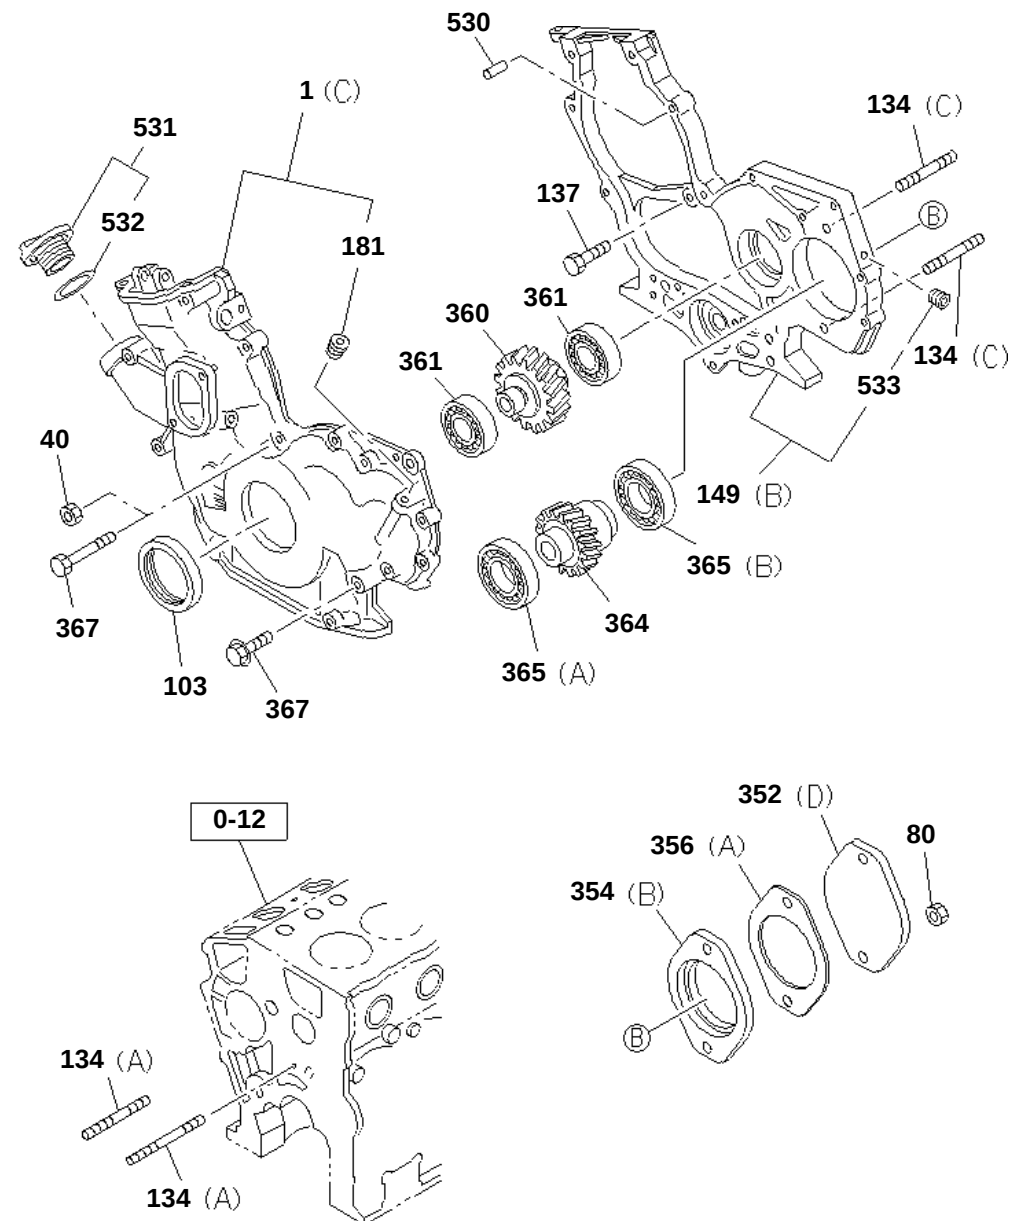


020A0250793

50793 3LD1/3LD2 1992-

0-20A TIMING GEAR CASE AND FLYWHEEL HOUSING

 TIMING GEAR CASE AND FLYWHEEL HOUSING

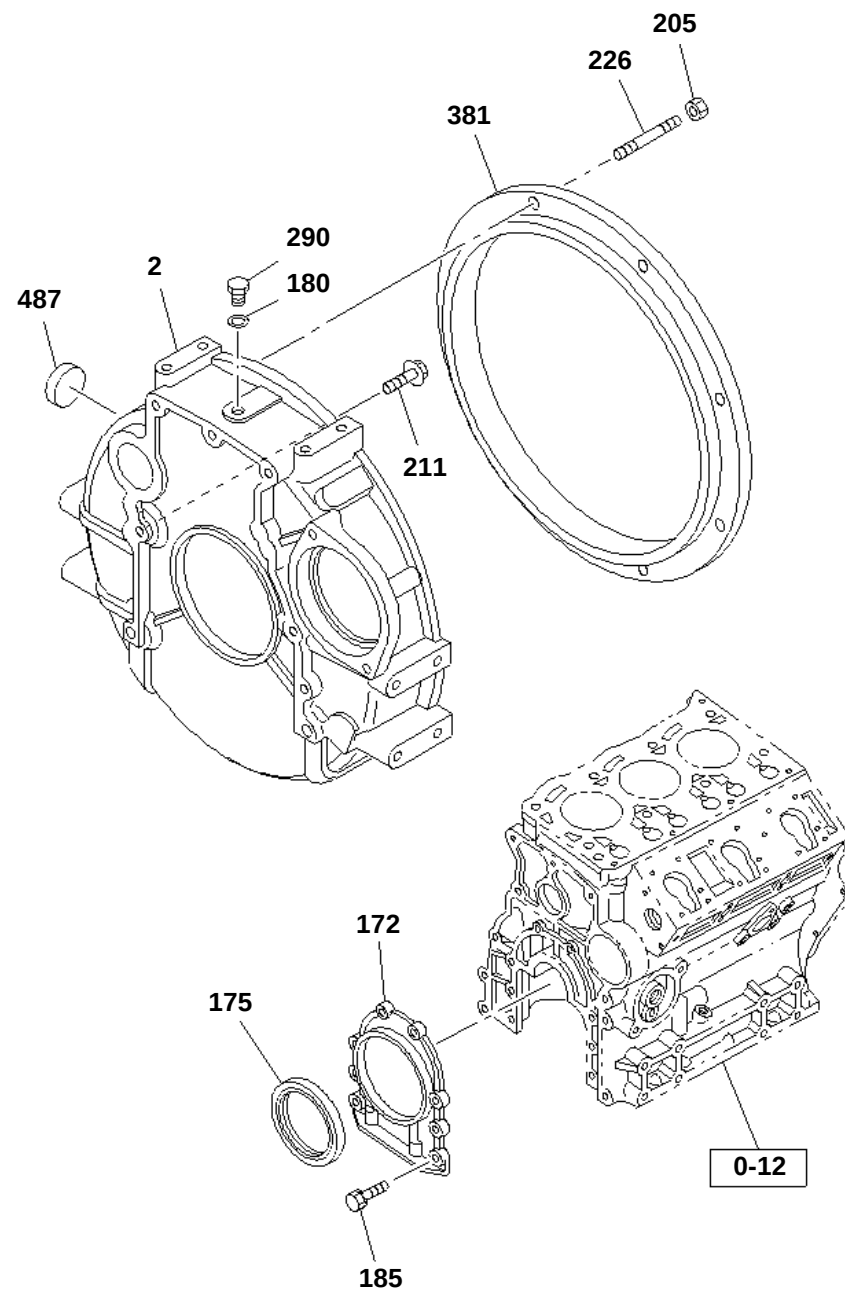

020A0350793

50793 3LD1/3LD2 1992-

0-20A TIMING GEAR CASE AND FLYWHEEL HOUSING

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
1	CASE; TIMING GEAR															
	8-97070-002-5		1	(A)					WXY						9204-9209	C
	8-97085-133-1		1	(A)	ABCDE	FGHIJ	KL O	P RST	UVWXY	ABCD	EFGH	K	O Q S	TUVWX	9210-9903	
	8-97226-845-4		1	(A)	ABCDE	FGHIJ	KLM O	P RST	UVWXY	ABCD	EFGH	K	O Q S	TUVWX	9904-0010	C
	8-97303-411-1		1	(A)	ABCDE	FGHIJ	KLMNO	P RST	UVWXY	ABCD	EFGH	K	O Q S	TUVWX	0011-	
	8-97085-134-3		1	(B)				Q		Z	I	J LMN	P R		9204-9910	
	8-97228-175-2		1	(B)				Q		Z	I	J LMN	P R		9911-0010	C
	8-97303-412-1		1	(B)				Q		Z	I	J LMN	P R		0011-	
2	HOUSING; FLYWHEEL															
	8-97047-023-4		1		ABCD	GHIJ	KLMN	Q S	WXY	ZABCD	EFGH	KLMN	OPQRS	TUV X	9204-	
	8-97047-023-4		1		E										9204-0306	
	8-97264-961-0		1		E										0307-	
	8-97047-023-4		1			F			U						9204-9612	
	8-97171-838-1		1			F			U						9701-0203	
	8-97264-961-0		1			F			U						0204-	
	8-97047-023-4		1				O	P	V						9204-9612	
	8-97171-838-1		1				O	P T	V						9701-0008	
	8-97264-961-0		1				O	P T	V						0009-	
	8-97171-838-1		1					R							9204-	
40	NUT; GEAR CASE															
	0-9115-0208-0		2		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
80	NUT; COVER															
	0-9115-0210-0		4					Q		Z	I	J LMN	P R		9204-	
103	SEAL; OIL,CR/SHF,FRT															
	5-09625-079-0		1	ALSO INCLUDED IN GASKET SET(ENGINE)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
134	STUD; TIMING GEAR CASE															
	9-0411-0860-0		1	(A)	ABCDE	FGHIJ	KLMNO	P RST	UVWXY	ABCD	EFGH	K	O Q S	TUVWX	9204-	
				M8X60 L=72												
	9-0411-0850-0		1	(A)	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-0005	
				M8X50 L=62												
	8-97262-146-1		1	(A)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0006-	
				M8X50 L=62												
	5-09300-065-0		1	(A)				Q		Z	I	J LMN	P R		9204-	
				M8X79 L=92												
	9-0441-1045-0		1	(B)				Q		Z	I	J LMN	P R		9204-	
				M10X45 L=60												
	9-0441-1025-0		3	(B)				Q		Z	I	J MN	P		9204-	
				M10X25 L=40												
	9-0441-1025-0		1	(B)								L	R		9204-	
				M10X25 L=40												
	8-94126-210-0		2	(B)								L	R		9204-	
				M10X36 L=48												

0-20A TIMING GEAR CASE AND FLYWHEEL HOUSING


KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
137	BOLT; FRT PLATE 0-2808-0830-0		3	M8X30 FLANGE				Q		Z	I	J LMN	P R		9204-	A
149	PLATE; FRT,C/BL 8-97085-135-2		1	(A)				Q		Z	I	J LMN	P R		9204-	
172	RETAINER; CR/SHF 8-97044-786-3		1	ALSO INCLUDED IN GASKET SET(ENGINE)	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-0009	
	8-97231-030-2		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0010-	
175	SEAL; OIL,CR/SHF,RR 5-09625-094-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
180	GASKET; PLUG 9-0957-1420-0		1		E										0307-	
	9-0957-1420-0		1			F									9204-	
	9-0957-1420-0		1				O	P T	V						0009-0209	
185	BOLT; RET TO C/BL 0-2808-0620-0		6	M6X20 FLANGE	ABCDE	FGHIJ	KLM O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-0009	
	0-2808-0620-0		8	M6X20 FLANGE	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0010-	
205	NUT; HSG 0-9115-0210-0		2		E										0307-	
	0-9115-0210-0		2			F	O	P R T	UV						9204-	
	0-9125-0210-0		2					S							9204-	
211	BOLT; HSG 0-2818-1025-0		4	M10X25 FLANGE	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGH	JKLMN	OPQRS	TUV X	9204-	
226	STUD; HSG 8-94127-703-0		2	M10 L=126	ABCDE	GHIJ	KLMN	Q S	WXY	ZABCD	EFGH	JKLMN	OPQ S	TUV X	9204-0306	
	8-94127-703-0		2	M10 L=126	ABCD	GHIJ	KLMN	Q S	WXY	ZABCD	EFGH	JKLMN	OPQ S	TUV X	0307-	
	1-09302-107-0		2	M10X130 L=145	E										0307-	
	1-09302-107-0		2	M10X130 L=145		F	O	P RST	UV						9204-	
290	PLUG; SENSOR HOLE 1-09605-080-0		1		E										0307-	
	1-09605-080-0		1			F									9204-	
	1-09605-080-0		1				O	P T	V						0009-0209	
352	COVER; HYDRAULIC PUMP 5-11321-157-0		2	(A)				Q		Z		LM	R		9204-	9502-9507 9508- 9204- 9204-0309 0310-
	8-97037-593-3		2	(A)						Z	I	J				
	8-97134-506-0		1	(B)				Q		Z	I	J M				
	5-11321-157-0		1	(A)								N	P			
	8-94471-279-0		1	(C)								N	P			
	5-11321-036-0		2	(C)								N	P			
354	SPACER; HYDRAULIC PUMP 8-97061-024-0		1	(A)								L	R		9204-	
356	GASKET; COVER 8-94381-189-0		2	(C)				Q		Z	I	J LM	R		9204-	

0-20A TIMING GEAR CASE AND FLYWHEEL HOUSING

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
356	8-94471-278-1		1	(B)								N	P		9204-	
	8-94381-189-0		1	(C)								N	P		9204-	
358	BOLT; ADAPTER		2									N	P		9204-	
360	GEAR; IDLE,PTO		1					Q		Z	I	J LMN	P R		9204-	
361	BEARING; IDLE GEAR		2					Q		Z	I	J LMN	P R		9204-	
364	GEAR; PTO		1					Q		Z	I	J LM	R		9204-	
	8-97034-583-2		1									N	P		9204-9905	
	8-97143-221-0		1									N	P		9906-	
	8-97231-210-0		1													
365	BEARING; GEAR		1	(A)				Q		Z	I	J LM	R		9204-	
	9-00006-007-0		1	(A)								N	P		9204-	
	8-94477-837-0		1	(A)				Q		Z	I	J LMN	P R		9204-	
	9-00006-006-0		1	(B)											9204-	
367	BOLT; GEAR CASE		2		M8X80 FLANGE	ABCDE	FGHIJ	KLMNO	P RST	UVWXY	ABCD	EFGH	K	O Q S	TUVWX	9204-
	0-2808-0880-0		5		M8X80 FLANGE			Q		Z	I	J LMN	P R		9204-	
	0-2808-0860-0		6		M8X60 FLANGE	ABCD									9204-9204	
	0-2809-0860-0		6		M8X60 FLANGE	ABCDE	FGHIJ	KLMNO	P RST	UVWXY	ABCD	EFGH	K	O Q S	TUVWX	9205-
	0-2809-0860-0		4		M8X60 FLANGE			Q		Z	I	J LMN	P R		9204-	
	9-0582-0614-0		1		M6X14			Q		Z	I	J LMN	P R		9204-	
381	SPACER; FLYWHEEL HSG		1													
	8-97090-654-1		1			F	O		U						9204-9612	
456	ADAPTER; PTO		1									N	P		9204-	
457	STUD; ADAPTER		2		M10X36 L=48							N	P		9204-	
487	COVER; HOLE		1													
	8-97220-740-0		1			F									0204-0208	
	8-97220-740-0		1				O	P T	V						0210-	
	8-97220-740-0		1						U						9204-	
530	DOWEL; TIMING CASE		1					Q		Z	I	J LMN	P R		9204-	
531	CAP; OIL FILLER		1													
	8-94425-685-2		1			ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
532	GASKET; CAP		1			ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
	8-94123-623-1		1	ID=32 OD=40		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
0-12	Move to 0-12															
	Move to 0-12															
	Move to 0-12															

0-22A ENGINE MOUNTING

 ENGINE MOUNTING

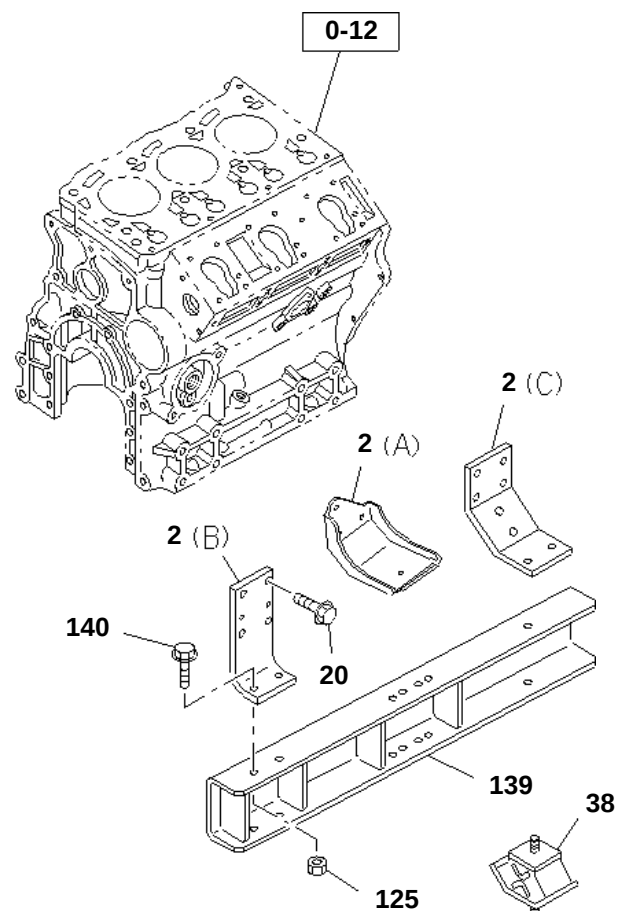

022A0150793


50793 3LD1/3LD2 1992-

0-22A ENGINE MOUNTING

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
2	FOOT; ENG 8-97109-982-1		2	(B)			O	PQRST	UV						9204-	
	8-97109-979-0		2	(C)			O	PQRST	UV						9204-	
20	BOLT; ENG FOOT 0-2808-1025-0		16	M10X25 FLANGE			O		U						9204-9507	
	0-2819-1035-0		8	M10X35			O	P RST	UV						9508-	
	0-2818-1025-0		8	M10X25 FLANGE			O	P RST	UV						9508-	
	0-2818-1025-0		16	M10X25 FLANGE				Q							9204-	
125	NUT; ENG FOOT 0-9115-0212-0		8				O	PQRS	UV						9204-	
139	FRAME; STEEL 8-97109-927-0		2				O	PQRS	UV						9204-	
140	BOLT; FRAME TO ENG FOOT 0-2808-1230-0		8				O	PQRS	UV						9204-	
0-12	Move to 0-12															
	Move to 0-12															
	Move to 0-12															

0-25A INLET MANIFOLD

 INLET MANIFOLD

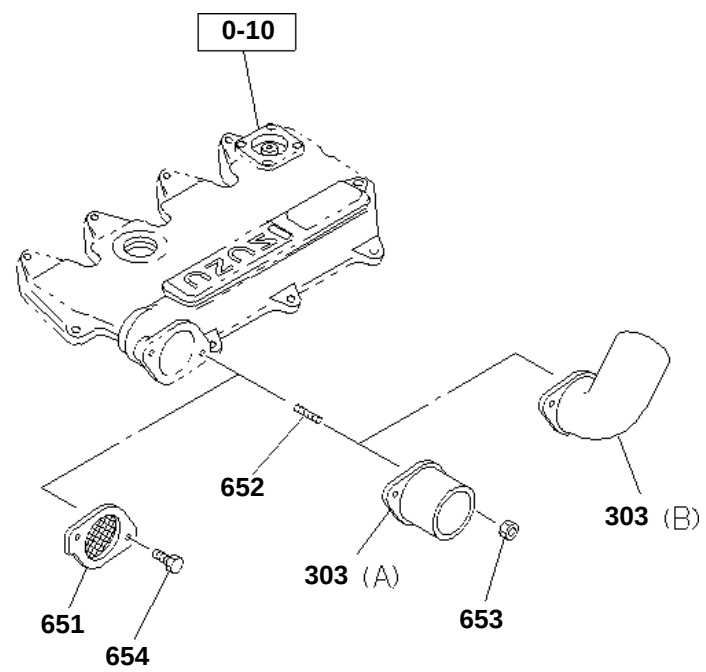

025A0150793


50793 3LD1/3LD2 1992-

0-25A INLET MANIFOLD

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
303	PIPE; AIR 8-97034-614-0 8-97041-721-1 8-97041-721-1 8-97034-614-0		1 1 1 1	(A) (B) (B) (A)	A CD B E E	F GH J	LMN O	PQRST	W UV XY	Z ABCD	I EFGH	JKL N M	P O QRS	VW TU X	9204- 9204- 9204-0306 0307-	
651	FILTER; AIR 8-97145-332-1		1			I	K								9204-	
652	STUD; DUCT,AIR INLET 9-0411-0616-0		2	M6X16 L=25	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
653	NUT; DUCT,AIR INLET 0-9115-0206-0 8-97137-836-0		2 2		ABCDE ABCDE	FGH J FGHIJ	LMNO KLMNO	PQRST PQRST	UVWXY UVWXY	ZABCD ZABCD	EFGHI EFGHI	JKLMN JKLMN	OPQRS OPQRS	TUVWX TUVWX	9204-0104 0105-	
654	BOLT; FILTER 0-2808-0610-0		2			I	K								9204-	
0-10	Move to 0-10 Move to 0-10 Move to 0-10															

0-27A EXHAUST MANIFOLD

 EXHAUST MANIFOLD

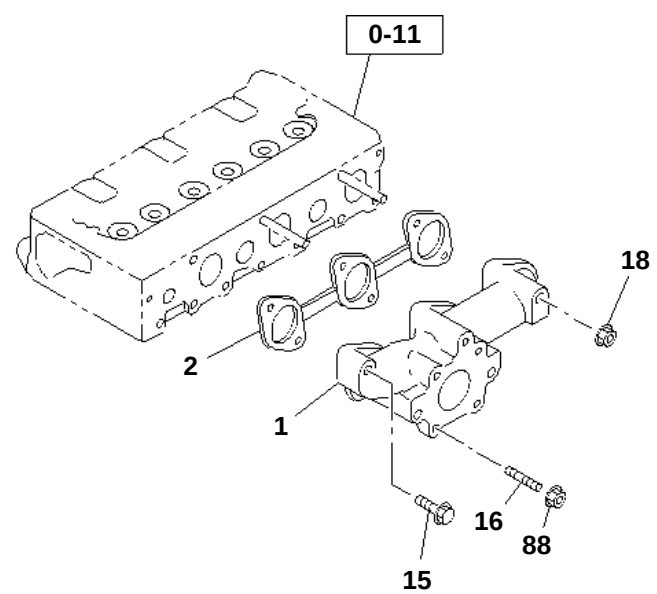

027A0150793


50793 3LD1/3LD2 1992-

0-27A EXHAUST MANIFOLD

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
1	MANIFOLD; EXHAUST 8-97045-403-2		1	ALSO INCLUDED IN GASKET SET(ENGINE)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
2	GASKET; EXH MANIF TO HD 8-97047-054-1		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
15	BOLT; EXH MANIF 0-2808-0840-0		2		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
	0-2808-0870-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
	8-94458-474-1		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
16	STUD; EXH PIPE TO MANIF 9-0411-0820-0		4	M8X20 L=32	ABCD	FGHI	KLMN		WXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
	9-0411-0828-0		4	M8X28 L=40	E										9204-0306	
	9-0411-0820-0		4	M8X20 L=32	E										0307-	
	9-0411-0828-0		4	M8X28 L=40		J	O	PQRST	UV						9204-	
18	NUT; EXH MANIF 0-9115-0208-0		2		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
0-11	Move to 0-11 Move to 0-11 Move to 0-11															

0-28A VENTILATION SYSTEM

 VENTILATION SYSTEM

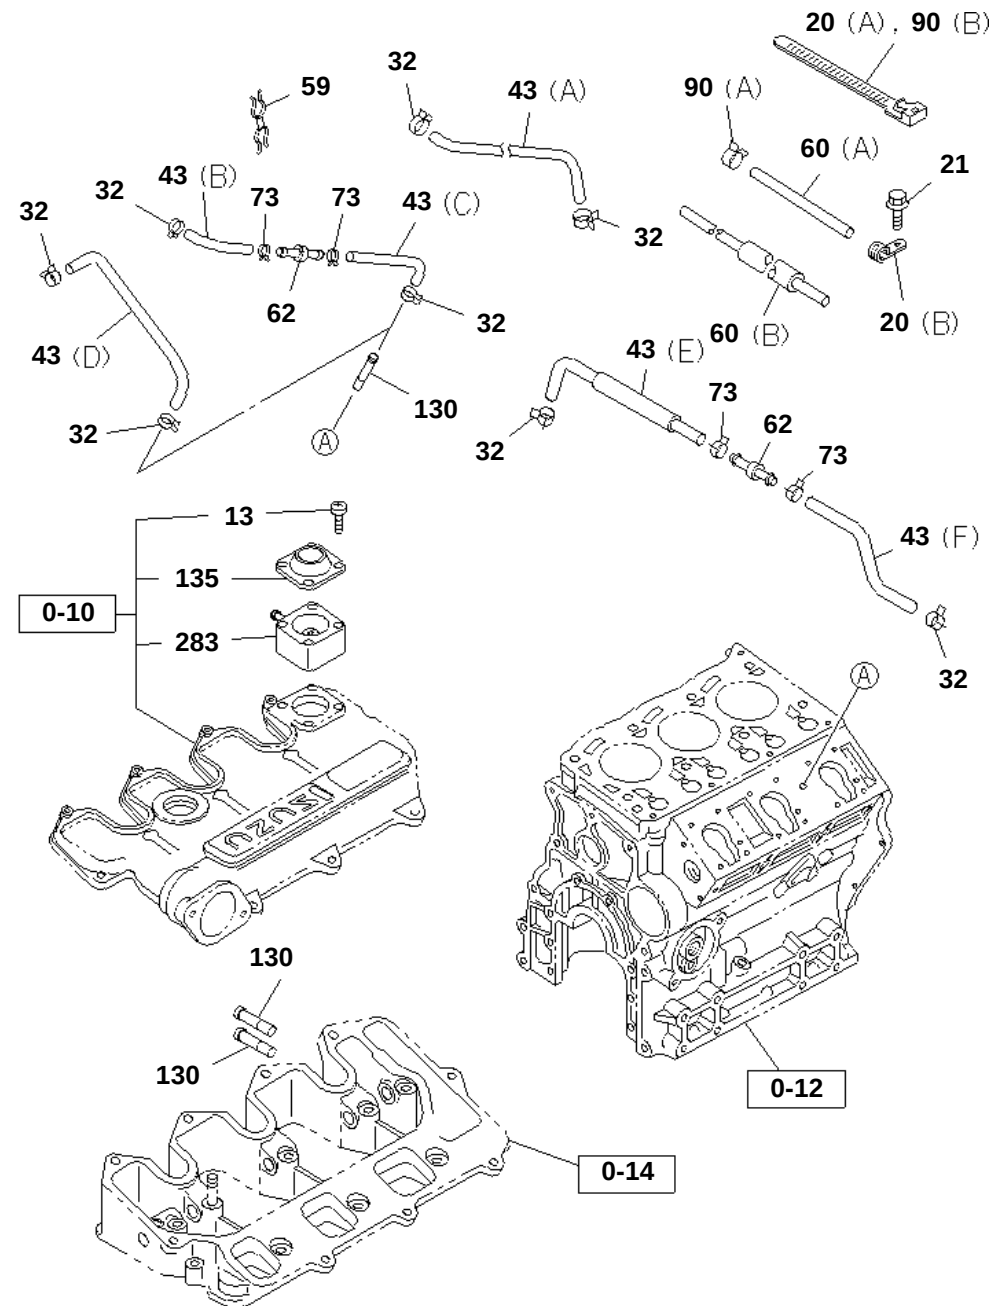

028A0150793

50793 3LD1/3LD2 1992-

0-28A VENTILATION SYSTEM


KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
13	SCREW; VENTILATOR TO HD COVER		4		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGH	JKLMN	OPQRS	TUVWX	9204-	9204-9507 9508-
	9-0391-0410-0		4								I	J				
	9-0391-0410-0		4								I	J				
20	CLIP; PCV HOSE		1	(A) L=140	E											0104-0306
	5-09707-031-1		1	(B)												
	9-09916-893-1		1	(B)					XY	BC	E G	J		V	9204-	0001-
	1-09701-138-1		1	(B)										W	9204-	
	1-09701-138-1		1	(B)												
21	BOLT; CLIP		1													
	0-2808-0610-0		1													
	0-2818-1012-0		1						XY	BC	E G	J		V	9204-	0001-
	0-2818-1012-0		1											W	9204-	
32	CLIP; VENT HOSE		4		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
43	HOSE; PCV		1	(A)	ABCD	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9310-	
	8-97102-517-1		1	(B)	ABCD	FGHIJ	KLMNO	PQRST	UVW	ZA CD	F H	JKLMN	OPQRS	TU X	9310-	
	8-97102-519-1		1	(C)	ABCD	FGHIJ	KLMNO	PQRST	UVW	ZA CD	F H	JKLMN	OPQRS	TU X	9310-	
	8-97102-518-1		1	(A)	E											9310-0103
	8-97102-517-1		1	(A)	E											0307-
	8-97102-518-1		1	(C)	E											9310-0103
	8-97102-518-1		1	(C)	E											0307-
	8-97102-519-1		1	(B)	E											9310-0103
	8-97102-519-1		1	(B)	E											0307-
	8-97314-457-0		1	(F)	E											0104-0306
	8-97231-649-0		1	(E)	E											0104-0306
	8-97083-591-2		1	(D)	E											0104-0306
	8-97083-591-2		1	(D)					XY	B	E G			V	0001-	
	8-97102-519-1		1	(B)					XY	B	E G			V	9204-9912	
	8-97102-518-1		1	(C)					XY	B	E G			V	9204-9912	
	8-97083-591-2		1	(D)							I	J		W	9204-	
59	CLIP; HOSE		1		ABCD	FGHIJ	KLMNO	PQRST	UVW	ZA D	H	JKLMN	OPQRS	TU X	9204-	
	8-94127-144-0		1		E											9204-0103
	8-94127-144-0		1		E											0307-
	8-94127-144-0		1						XY	BC	EFG			V	9204-9912	
60	HOSE; RUBBER,PCV		1	(A) L=600	ABCDE	FGHIJ	KLMN									0001-
	0-0270-9600-0															

0-28A VENTILATION SYSTEM

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE ABCDE	FGHIJ FGHIJ	KLMNO KLMN	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
60	8-97138-785-0		1	(B) L=910	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0001-	
	8-97136-002-0		1	(A) L=680							I	J			9204-	
	0-0270-9600-0		1	(A) L=600										W	9204-	
	8-97244-767-0		1	(B) L=760							E				0001-	
	8-97138-785-0		1	(B) L=910					XY	BC	G			V	0001-	
62	VALVE; CHECK,PCV 8-94249-317-1		1		ABCDE	FGHIJ	KLMNO	PQRST	UVW XY	ZA D BC	EF H G	JKLMN	OPQRS	TU X V	9204-	
	8-94249-317-1		1												9204-9912	
73	CLIP; CHECK VLV 8-94238-610-0		2		ABCDE	FG I	O	QR	U WXY	ZABCD	EFG I	JKLMN	PQRS	TUV	9204-9710	
	1-09707-087-0		2		ABCDE	FGHIJ	KLMNO	PQRST	UVW XY	ZA D BC	F H G	JKLMN	OPQRS	TU X V	9711-	
	1-09707-087-0		2												9711-9912	
90	CLIP; RUBBER HOSE 5-09707-004-1		1	(A) ID=14					XY	BC	E G			V	0001-	
	5-09707-004-1		1	(A) ID=14							I	J		W	9204-	
	5-09707-031-1		1	(B) L=140					XY						0001-	
	5-09707-031-1		1	(B) L=140						BC	E G			V	0008-	
130	PIPE; PCV 5-11179-052-0		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
135	VENTILATOR ASM 8-94329-549-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9912	
	8-94329-549-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0001-	
283	HOUSING; PCV,CLY HD COVER 8-97085-347-0		1								I	J			9508-	
0-10	Move to 0-10															
	Move to 0-10															
	Move to 0-10															
0-12	Move to 0-12															
	Move to 0-12															
	Move to 0-12															
0-14	Move to 0-14															
	Move to 0-14															
	Move to 0-14															

0-30A WATER PUMP AND CORROSION RESISTOR

 WATER PUMP AND CORROSION RESISTOR

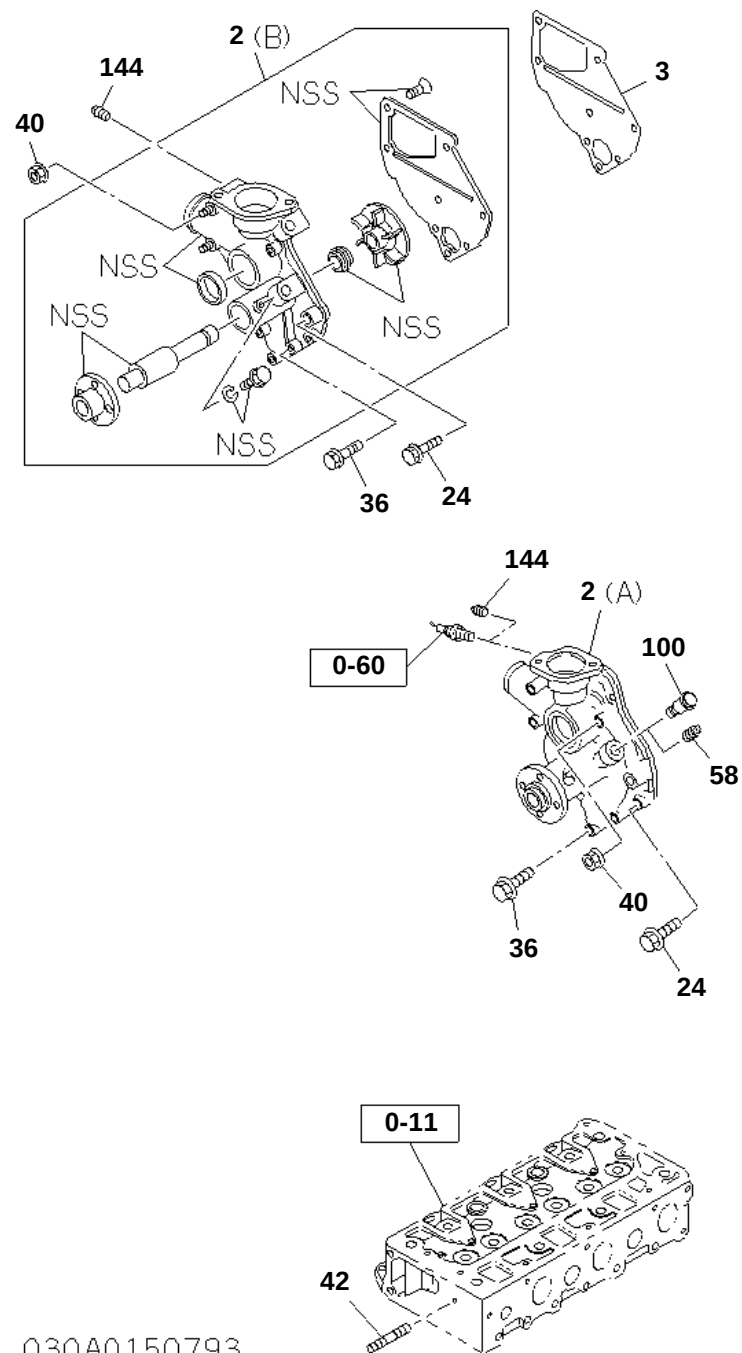

030A0150793


50793 3LD1/3LD2 1992-

0-30A WATER PUMP AND CORROSION RESISTOR

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
2	PUMP ASM; WATER 8-97045-402-1		1	(A)	ABCD		O		U WXY	ZABCD	EFG				9204-9503	A
	8-97126-189-0		1	(A)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9504-0206	
	8-97254-148-3		1	(B)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0207-	
3	GASKET; PUMP TO C/BL 8-97289-543-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0207-	
24	BOLT; WATER PUMP 0-2808-0845-0		1	M8X45 FLANGE	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
36	BOLT; WATER PUMP TO C/BL 0-2809-0860-0		2	M8X60 FLANGE	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
	0-2808-0840-0		2	M8X40 FLANGE	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
40	NUT; WATER PUMP 0-9115-0208-0		2		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
42	STUD; WATER PUMP 9-0411-0840-0		1	M8X40 L=52	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-0009	
	9-0411-0845-0		1	M8X45 L=57	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0010-	
58	PLUG; HTR 5-09605-005-0		1	PT 3/8	ABCDE	FGHIJ	KL NO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9905	9204- 9204- 9204- 9204-
	5-09605-005-0		1	PT 3/8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9906-	
143	UNIT; THERMOMETER 8-97142-411-0		1			I	K								9204-	
	8-97078-592-0		1		A				WXY	ZABC	E GH	L N	OPQRS	V X	9204-	
	8-97106-214-0		1							D					9204-	
144	PLUG; THERMOMETER 1-09605-050-0		1	PT 1/8	BCDE	FGH J	LMNO	PQRST	UV		F I	JK M		TU W	9204-	
0-11	Move to 0-11															
	Move to 0-11															
	Move to 0-11															
0-60	Move to 0-60															
	Move to 0-60															
	Move to 0-60															

0-31A THERMOSTAT AND HOUSING

 THERMOSTAT AND HOUSING

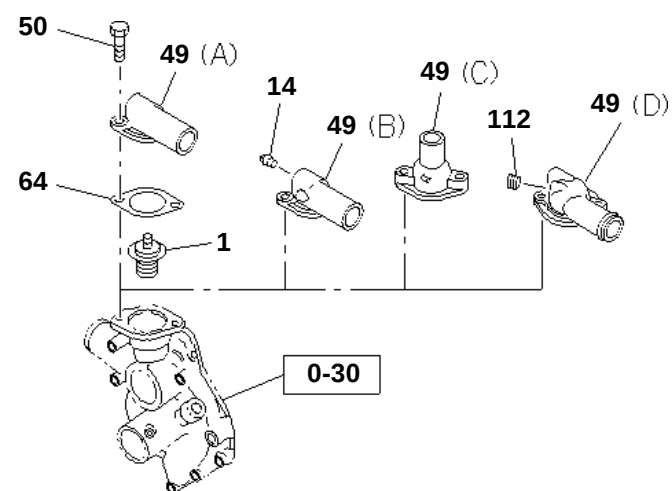

031A0150793


50793 3LD1/3LD2 1992-

0-31A THERMOSTAT AND HOUSING

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
1	THERMOSTAT 8-94325-513-1 8-97160-654-0 8-97211-209-0		1 1 1	76.5ЯC 76.5ЯC 82.0ЯC	ABCDE ABCDE ABCDE	FG FGHIJ FGHIJ	O KLMNO KLMNO	PQ PQRST PQRST	UVWXY UVWXY UVWXY	ZABCD ZABCD ZABCD	EFG I EFGHI EFGHI	JKLMN JKLMN JKLMN	PQRS OPQRS OPQRS	TUVWX TUVWX TUVWX	9204-9612 9701-0206 0207-	C
14	PLUG; SW 5-09605-005-0		1	PT 3/8	ABCDE	FGHIJ	KLMNO	PQ ST	UVWXY	ZABCD	E GH	LMN	OP RS	V X	9204-	
49	PIPE; WATER OUTLET 8-97042-780-1 8-97104-750-0 8-97095-841-1 8-97169-015-1 8-97258-479-2		1 1 1 1 1	(A) (B) (C) (C) (D)	A AB E CD CD AB E	F IJ GH GH F IJ	KLMNO KLMNO KLMNO	PQRST PQRST PQ ST	WXY UVWXY UVWX	ZABC ZABC ZA	EFGHI EFGHI F H	JKLMN JKLMN K	OPQRS OPQRS OPQ S	TUVWX TUVWX UVWX	9204-9310 9311-0206 9204-0206 0207- 0207-	
50	BOLT; OUTLET PIPE 0-2808-0820-0 0-2808-0845-0 0-2808-0840-0 0-2868-0825-0		1 1 1 2	M8X20 FLANGE M8X45 FLANGE M8X40 FLANGE M8X25 FLANGE	ABCDE AB E ABCDE	FGHIJ F IJ FGHIJ	KLMNO KLMNO KLMNO	PQRST PQRST PQ ST	UVWXY WXY UVWXY	ZABCD ZABC ZABCD	EFGHI EFGHI EFGHI	JKLMN JKLMN JKLMN	OPQRS OPQRS OPQRS	TUVWX TUVWX TUVWX	9204-0206 9204-9208 9209-0206 0207-	C
64	GASKET; OUTLET PIPE TO HSG 8-94325-956-1 8-97264-690-1		1 1	ALSO INCLUDED IN GASKET SET(ENGINE)	ABCDE ABCDE	FGHIJ FGHIJ	KLMNO KLMNO	PQRST PQ ST	UVWXY UVWXY	ZABCD ZABCD	EFGHI EFGHI	JKLMN JKLMN	OPQRS OPQRS	TUVWX TUVWX	9204-0206 0207-	
112	PLUG 1-09605-050-0		1				O	PQ ST	UVWX	ZA	F H	K	OPQ S	UVWX	0207-	
0-30	Move to 0-30 Move to 0-30 Move to 0-30															

0-32A WATER PIPING; ENGINE

 WATER PIPING; ENGINE

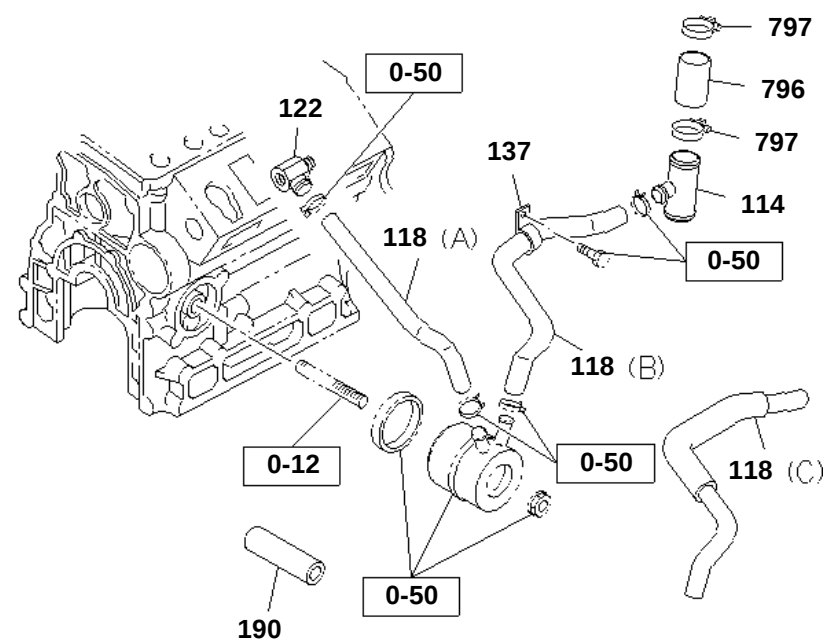

032A0150793


50793 3LD1/3LD2 1992-

0-32A WATER PIPING; ENGINE

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
114	JOINT; WATER PIPE 8-97102-308-0		1		BCD	GHI	K N								9204-	
118	HOSE; RUBBER,OIL COOLER TO CONNECTOR 8-97102-148-1 8-97102-149-1 8-97173-440-0		1 1 1	(A) (B) (C)	BCD BCD BCD	GHI G GHI	K N K N								9204- 9204-9611 9612-	
122	CONNECTOR; OIL COOLER 8-94241-962-0		1		BCD	GHI	K N								9204-	
137	CLIP; HOSE,OIL COOLER 1-09701-041-1		1	ID=25 L=60	BCD	GHI	K N								9204-	
796	HOSE; RIBBER,CONNECTOR TO WATER PUMP 8-97102-879-0 0-0353-3055-0		1 1		BCD BCD	GHI GHI	K N K N								9204-0202 0203-	A
797	CLIP; JOINT 9-09915-281-1		2	ID=45	BCD	GHI	K N								9204-	
0-12	Move to 0-12 Move to 0-12 Move to 0-12															
0-50	Move to 0-50 Move to 0-50 Move to 0-50															

0-33A FAN AND FAN BELT

 FAN AND FAN BELT

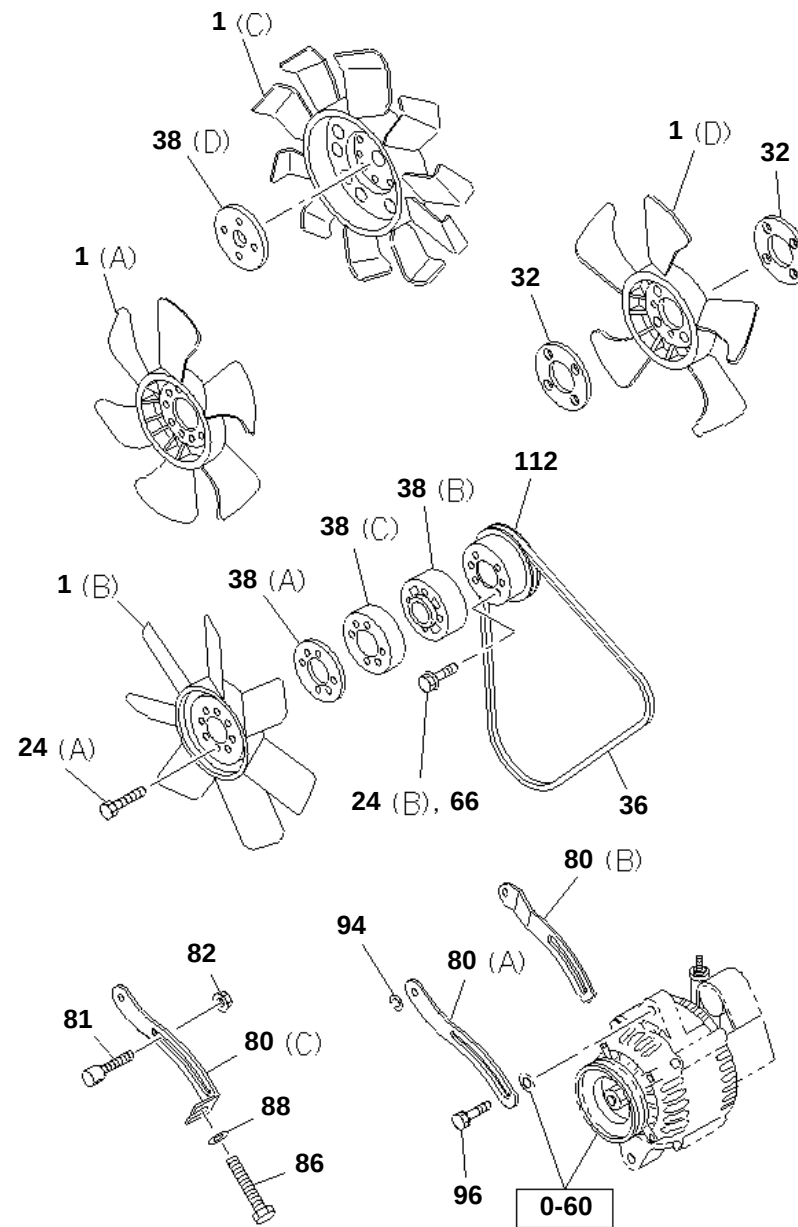

033A0150793

50793 3LD1/3LD2 1992-

0-33A FAN AND FAN BELT

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
1	FAN; COOLING 8-97070-075-0		1	(B) D=320-7-SUCT-PP	A				W						9204-	
	8-94470-553-1		1	(A) D=380-6-BLOW-PP	B		K		UV			K			9204-0403	
	8-97022-810-1		1	(A) D=380-6-BLOW-PP	B		K		UV			K			0404-	
	8-97096-709-1		1	(A) D=330-6-BLOW-PP	CD								R	V	9204-	
	8-97096-711-1		1	(A) D=350-6-BLOW-PP	E										9204-0306	
	8-97022-810-1		1	(A) D=380-6-BLOW-PP	E										0307-	
	8-97022-810-1		1	(A) D=380-6-BLOW-PP		FGHI								U X	9204-	
	8-97096-711-1		1	(A) D=350-6-BLOW-PP		J				D		N	P		9204-	
	8-97210-145-1		1	(D) D=310-5-BLOW-PP			LMN								9204-	
	8-94450-726-1		1	(B) D=380-7-SUCT-PP			O	PQRST		ZA	FGH		S	T W	9204-	
	8-97039-651-1		1	(B) D=360-7-SUCT-PP					XY	BC	E	LM			9204-	
	8-97039-651-1		1	(B) D=360-7-SUCT-PP							I	J			9204-9206	
	8-97096-711-1		1	(A) D=350-6-BLOW-PP							I	J			9207-	
	8-97180-877-2		1	(C) D=380-10-SUCT-PP									O Q		9204-	
24	BOLT; FAN 0-2808-0820-0		4	(A) M8X20 FLANGE	ABCDE	FGHIJ	KLMN		W		I	J			9204-	
	0-2808-0870-0		4	(A) M8X45 FLANGE	A CDE	G J	M					N	P		9204-	
	0-2808-0845-0		4	(A) M8X45 FLANGE	B	F HI	KL N								9204-0004	
	0-2808-0870-0		4	(A) M8X45 FLANGE	B	F HI	KL N								0005-	
	0-2808-0850-0		4	(A) M8X50 FLANGE	CD	G J	O	PQRST	UV					WX	9204-	
	0-2808-0850-0		4	(A) M8X50 FLANGE	E										9204-0306	

0-33A FAN AND FAN BELT

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
24	0-2808-0845-0		2	(A) M8X45 FLANGE	E										0307-	
	0-2808-0845-0		4	(A) M8X45 FLANGE					XY	ZABCD	EFGH	K	O Q S	TUV	9204-	
	0-2808-0860-0		4	(A) M8X60 FLANGE								LM			9204-	
	0-2808-0880-0		4	(A) M8X80 FLANGE									R		9204-	
	0-2080-0612-0		2	(B) M6X12	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
32	ADAPTER; FAN TO PULLEY		2				LMN								9204-	
36	BELT; COOLING FAN															
	8-97068-798-0		1	L=836	ABCDE		O		U						9204-9604	
	8-97160-437-0		1	L=826	ABCDE	F HIJ	KL O	PQRS	UV						9605-9907	C
	8-97216-128-0		1	L=815	A										9908-0009	
	8-97224-999-0		1	L=840	A				W						0010-	
	8-97216-128-0		1	L=815	BCDE	F HIJ	KL								9908-9909	
	8-97224-999-0		1	L=840	BCDE	F HIJ	KLMN								9910-	
	8-97160-437-0		1	L=826		G									9204-9608	
	8-97160-438-0		1	L=851		G									9609-9907	
	8-97216-129-0		1	L=840		G									9908-0003	
	8-97230-940-0		1	L=860		G									0004-	
	8-97216-128-0		1	L=815			O	PQRS	UV						9908-0105	
	8-97224-999-0		1	L=840			O	PQRS	UV						0106-	
	8-97176-067-0		1	L=836				T							9612-9907	A
	8-97211-317-0		1	L=825				T							9908-0103	
	8-97224-999-0		1	L=840				T							0104-	
	8-97068-798-0		1	L=836					WXY	ZABC	EFG	LMN		X	9204-9606	
	8-97176-067-0		1	L=836					WXY	ZABC	EFGH	LMN	P RS	X	9607-9907	
	8-97211-317-0		1	L=825					W						9908-0009	
	8-97211-317-0		1	L=825					XY	ZABC	E GH	LMN	P RS	X	9908-9910	
	8-97224-999-0		1	L=840					XY	ZABC	E GH	LMN	P RS	X	9911-	
	8-97083-314-0		1	L=851						D					9204-9611	A
	8-97160-438-0		1	L=851						D			O		9612-9907	C
	8-97216-129-0		1	L=840						D					9908-9911	
	8-97230-940-0		1	L=860						D					9912-	
	8-97211-317-0		1	L=825							F				9908-0208	
	8-97224-999-0		1	L=840							F		Q		0209-	
	8-97068-798-0		1	L=836							I	JK			9204-9611	
	8-97160-437-0		1	L=826							I	JK		T W	9612-9907	C
	8-97216-128-0		1	L=815							I	JK		T W	9908-9911	

0-33A FAN AND FAN BELT


KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
36	8-97224-999-0		1	L=840							I	JK		T W	9912-9908-0009	
	8-97216-129-0		1	L=840									O		0010-9204-9802	A
	8-97230-940-0		1	L=860									O		9803-9907	C
	8-97176-067-0		1	L=836									Q		9908-9910	
	8-97160-438-0		1	L=851									Q		9912-0208	
	8-97216-129-0		1	L=840									Q		9204-9805	
	8-97230-940-0		1	L=860										U	9806-9907	C
	8-97176-067-0		1	L=836										U	9908-9911	
	8-97164-800-0		1	L=861										U	9912-9612-9907	C
	8-97216-131-0		1	L=850										V	9908-9910	
	8-97245-720-0		1	L=880										V	9911-9911-	
	8-97160-438-0		1	L=851										V		
	8-97216-129-0		1	L=840										V		
	8-97230-939-0		1	L=866										V		
38	SPACER; FAN															
	8-97063-400-3		1	(A)	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9204-	
	9-89136-423-0		1	(C)	B	F H	L			A	GH	L N	OPQ S	UV	9204-9204-	
	9-13642-078-0		1	(B)	CD	G J	O	PQRST	UV			MN	P	WX	9204-0306	
	9-13642-078-0		1	(B)	E										0307-9204-	
	9-89136-423-0		1	(C)	E										0005-0005-	
	9-13642-077-0		1	(B)		I	K		XY	Z BCD	EF I	JKL		T	9706-9204-	
	8-97063-400-3		1	(A)			MN									
	9-89136-423-0		1	(C)			MN						O Q			
	8-97181-616-1		1	(D)									R			
	9-13642-078-0		2	(B)												
80	PLATE; ADJ															
	5-13674-104-1		1	(B)	A	I									9310-0009	
	8-97231-579-0		1	(C)	A	I									0010-9310-9910	
	5-13674-104-1		1	(B)	BCD	GH J					I	JK		T W	9911-9310-	
	8-97231-579-0		1	(C)	BCD	GH J					I	JK		T W	9204-0105	
	5-13674-104-1		1	(B)	E	F	KLM								0106-9204-0103	
	8-97231-579-0		1	(C)			N								0104-9204-0009	
	5-13674-104-1		1	(B)			O	PQRS	UV						0010-9204-9910	
	8-97231-579-0		1	(C)			O	PQRS	UV						9911-9204-	
	8-97040-584-0		1	(A)				T							9204-9805	
	8-97222-486-0		1	(C)				T								
	8-97040-584-0		1	(A)					W				O			
	8-97222-486-0		1	(C)					W				O			
	8-97040-584-0		1	(A)					XY	ZABCD	E GH	MN	PQRS	V X		
	8-97222-486-0		1	(C)					XY	ZABCD	E GH	MN	PQRS	V X		
	8-97040-584-0		1	(A)								L				
	8-97040-584-0		1	(A)										U		

0-33A FAN AND FAN BELT

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
80	8-94327-313-1		1	(A)										U	9806-	
81	PIECE; SLIDING		1		ABCD	GHIJ	N		XY	ZABCD	E GHI	JK MN	PQRS	T VWX	9906-0004	A
	8-97086-228-1		1		ABCD	GHIJ	NO	PQRST	UVWXY	ZABCD	E GHI	JK MN	OPQRS	T VWX	0005-	
82	8-97257-223-0		1													
	NUT; ADJ PLATE		1	M8 FLANGE	ABCD	GHIJ	NO	PQRST	UVWXY	ZABCD	E GHI	JK MN	OPQRS	T VWX	0106-	
86	0-9115-0208-0		1													
	BOLT; ADJ		1		ABCD	GHIJ	N		WXY	ZABCD	E GHI	JK MN	OPQRS	T VWX	9204-0010	
	8-94388-178-0		1		ABCD	GHIJ	NO	PQRST	UVWXY	ZABCD	E GHI	JK MN	OPQRS	T VWX	0011-	
88	8-97172-720-1		1													
	WASHER; PL,ADJ PLATE		1		ABCD	GHIJ	N		WXY	ZABCD	E GHI	JK MN	OPQRS	T VWX	9204-0101	
	9-0916-0508-0		1		ABCD	GHIJ	NO	PQRST	UVWXY	ZABCD	E GHI	JK MN	OPQRS	T VWX	0102-	
	9-0916-4708-0		1													
94	WASHER; LK,ADJ PLATE		1		ABCD	GHIJ	NO	PQRST	UVWXY	ZABCD	E GHI	JK MN	OPQRS	T VWX	9204-	
	9-0915-0508-0		1													
96	BOLT; ADJ PLATE		1													
	0-2808-0820-0		1	M8X20 FLANGE	AB	I			W				O		9204-0009	
	0-2808-0820-0		1	M8X20 FLANGE	CD	GH J			XY	ZABCD	E G I	JK MN	PQRS	T VWX	9204-9910	
	0-2808-0820-0		1	M8X20 FLANGE	E	F	KL				H			U	9204-0404	
	0-2808-0830-0		1	M8X30 FLANGE	E	F	KL				H			U	0405-	
	0-2808-0820-0		1	M8X30 FLANGE			M O	PQRS	UV		F	L			9204-	
	0-2868-0840-0		1	M8X40 FLANGE				T							9204-0103	
112	PULLEY; FAN CENTER		1													
	8-97038-403-0		1	1-GROOVE	A				W						9204-0009	
	8-97226-855-0		1	1-GROOVE	A				W						0010-	
	8-97038-403-0		1	1-GROOVE	BCDE	F HIJ	KL		XY	ZABC	E GH	K MN	P RS	TUVWX	9204-9910	
	8-97226-855-0		1	1-GROOVE	BCDE	F HIJ	KL		XY	ZABC	E GH	K MN	P RS	TU WX	9911-	
	8-97074-712-0		1	1-GROOVE		G									9204-0003	
	8-97226-857-0		1	1-GROOVE		G									0004-	
	8-97226-855-0		1	1-GROOVE			MN								9911-	
	8-97038-403-0		1	1-GROOVE			O					L			9204-	
	8-97038-403-0		1	1-GROOVE				R							9204-0105	
	8-97226-855-0		1	1-GROOVE				PQ ST	UV						0106-	
	8-97074-712-0		1	1-GROOVE				PQ ST	UV						9204-9911	
	8-97226-857-0		1	1-GROOVE						D	I	J	O Q		9912-	
	8-97038-403-0		1	1-GROOVE						D	I	J	O		9204-0208	
	8-97226-855-0		1	1-GROOVE							F				0209-	
	8-97226-857-0		1	1-GROOVE							F		Q		9912-0208	
	8-97226-856-0		1	1-GROOVE									Q		0209-	
	8-97227-689-0		1	1-GROOVE										V	9911-	
0-60	Move to 0-60															
	Move to 0-60															
	Move to 0-60															

0-40A FUEL INJECTION SYSTEM

 FUEL INJECTION SYSTEM

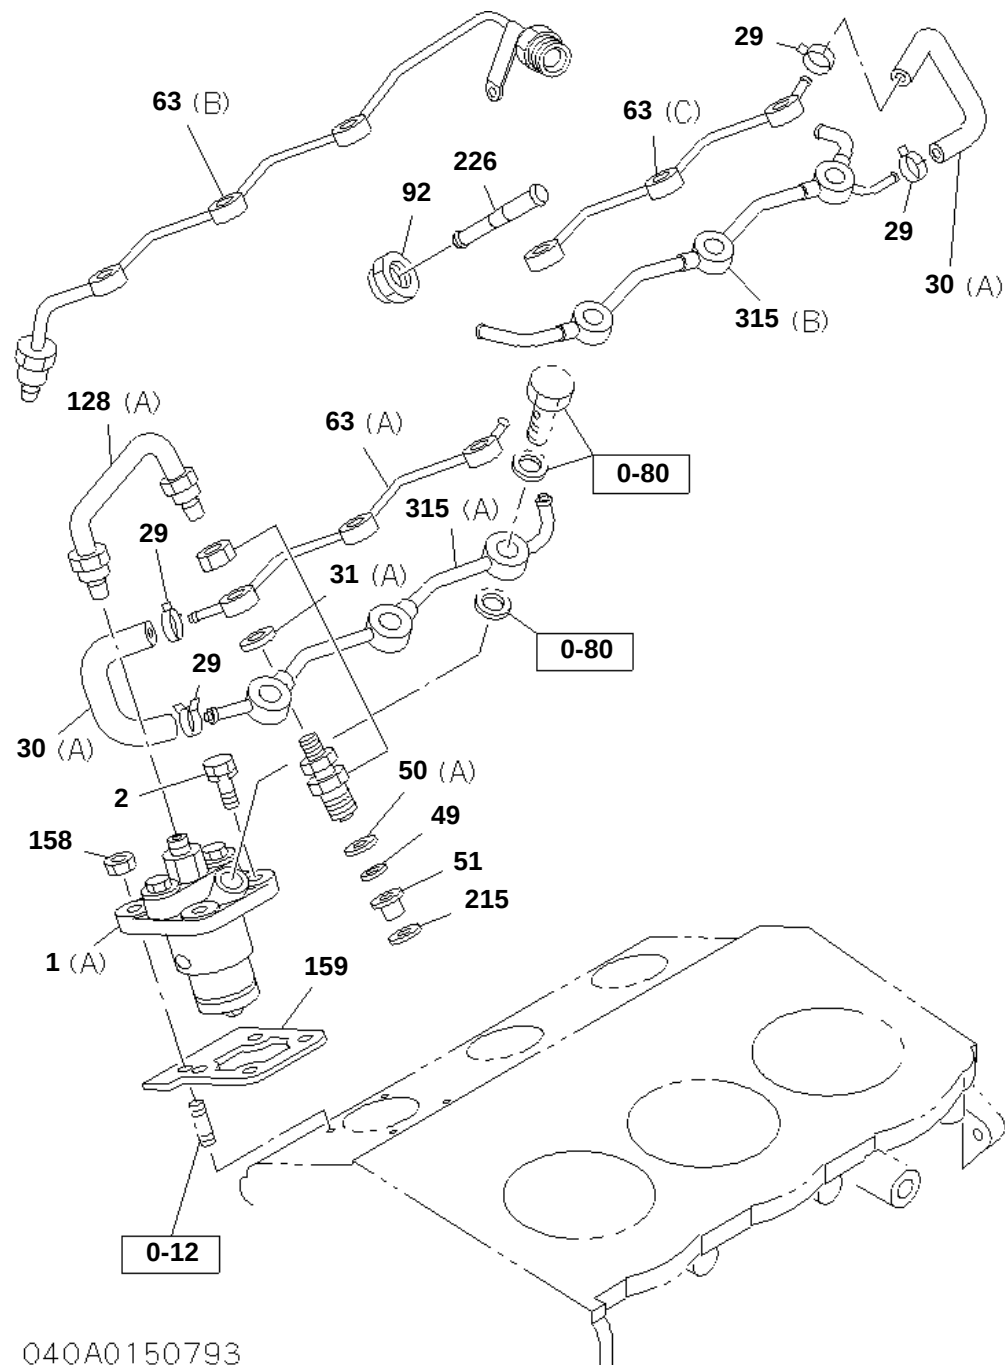


040A0150793

50793 3LD1/3LD2 1992-

0-40A FUEL INJECTION SYSTEM

 
FUEL INJECTION SYSTEM

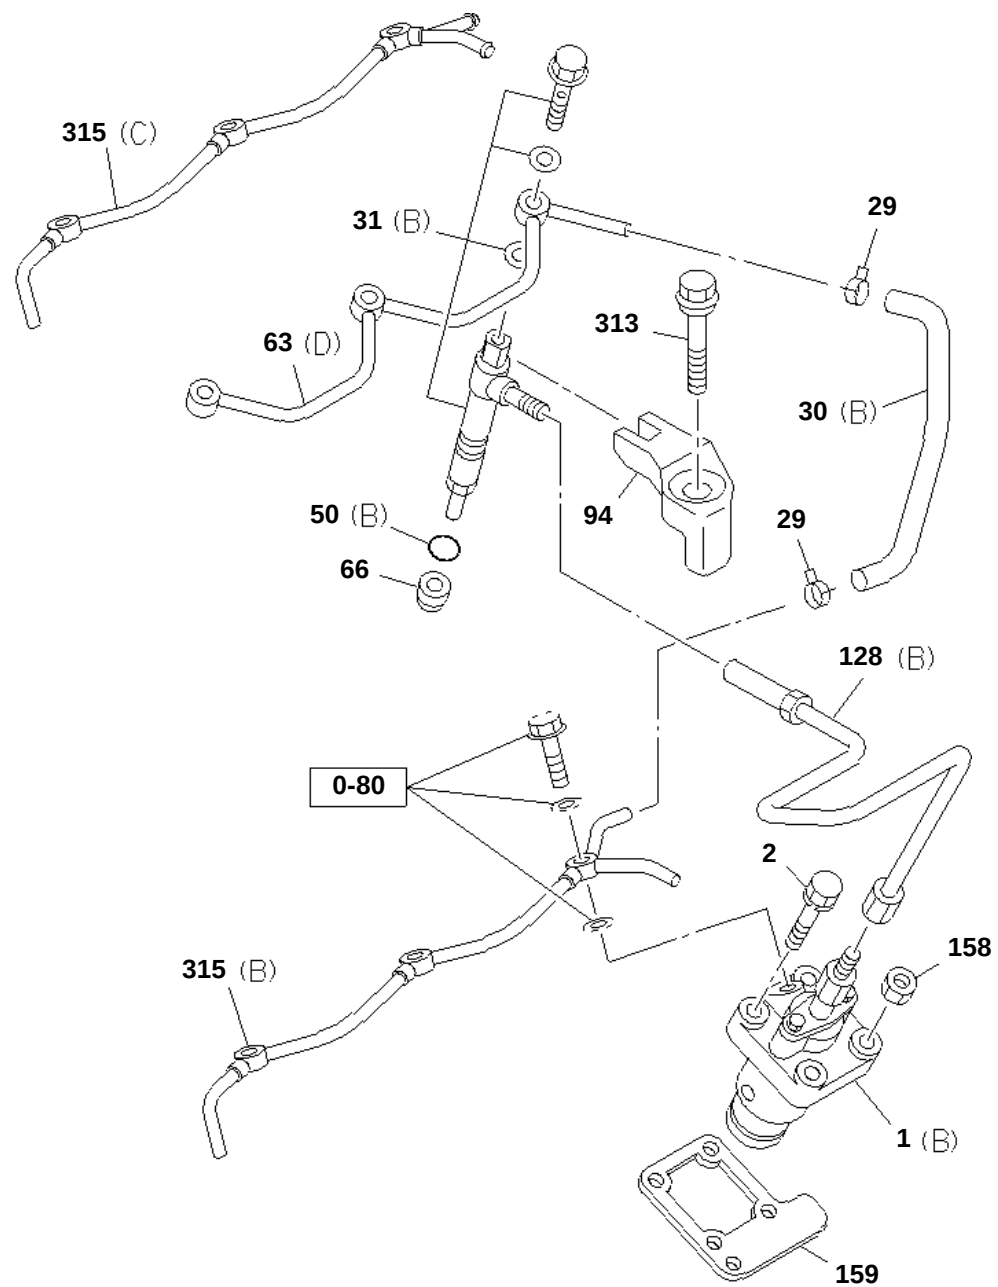

040A0250793

50793 3LD1/3LD2 1992-

 0-40A FUEL INJECTION SYSTEM FUEL INJECTION SYSTEM

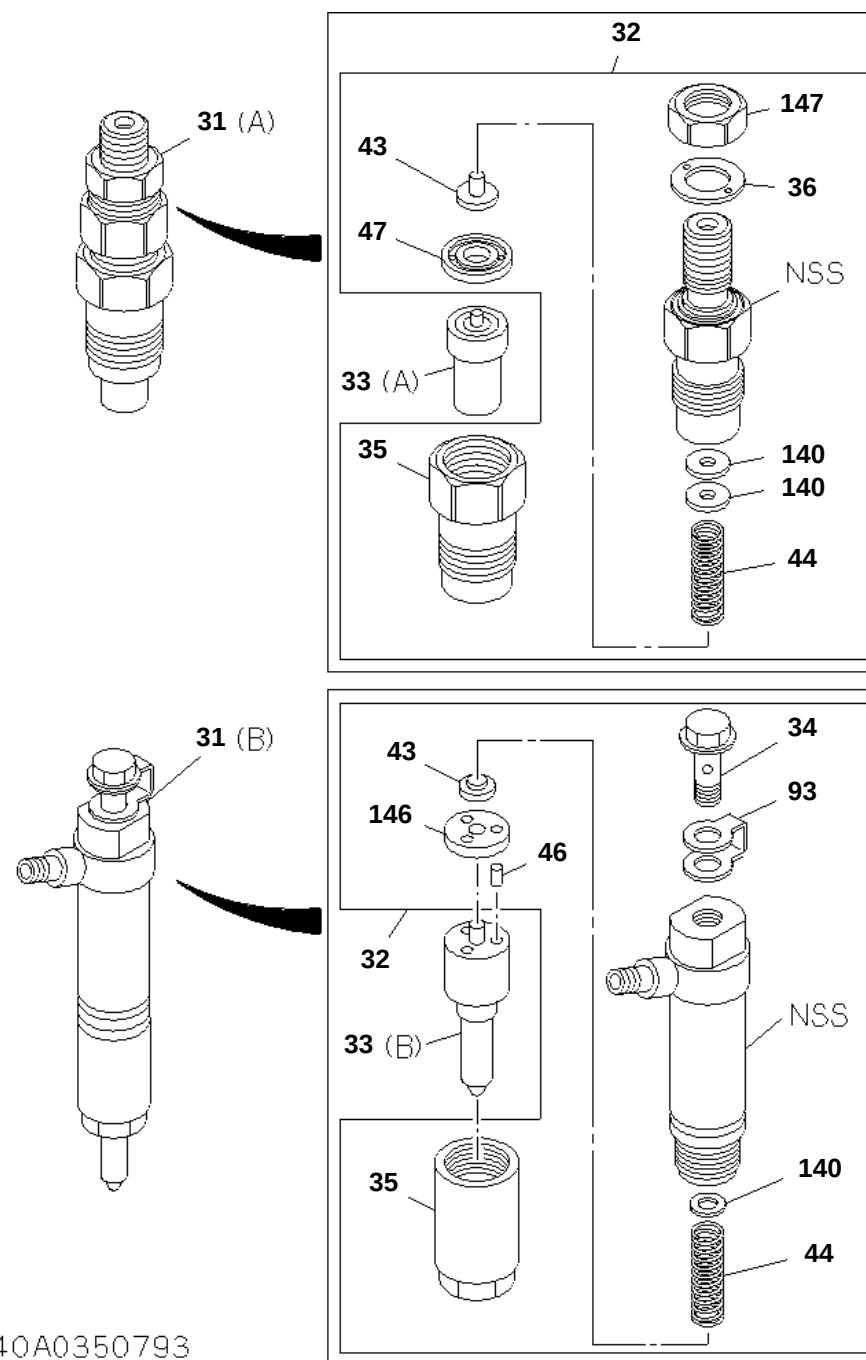

040A0350793

50793 3LD1/3LD2 1992-

0-40A FUEL INJECTION SYSTEM

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1									
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
1	PUMP ASM; INJ 8-97034-591-6 8-97115-687-2 8-97182-963-1 8-97147-580-1		3 (A) 3 (A) 3 (A) 3 (A)	SEE FIG-NO 0-80 - 0-85 FOR COMPONENT.	ABCD E	GH F J I	NO LM K	PQRST	WXY UV	ZABCD	EFGH	JKLMN	OPQRS	TUVWX
2	BOLT; INJ PUMP 0-2808-0820-0		6	M8X20 FLANGE	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
29	CLIP; HOSE,LEAK OFF PIPE 5-09707-005-1		2		ABCDE	FGH	LMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
30	HOSE; RUBBER,FUEL LEAK 8-97046-794-1		1 (A)		ABCDE	FGH	LMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
31	NOZZLE ASM; INJ 8-97079-976-1		3 (A)		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
32	HOLDER ASM; NOZZLE 8-97090-842-1		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
33	NOZZLE; INJ 8-94130-532-0		3 (A)		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
35	NUT; NOZZLE RET,NOZZLE HOLDER 8-97084-617-0 8-97130-581-0		3 3		ABCDE ABCDE	FGHIJ FGHIJ	KLMNO KLMNO	PQRST PQRST	UVWXY UVWXY	ZABCD ZABCD	EFGHI EFGHI	JKLMN JKLMN	OPQRS OPQRS	TUVWX TUVWX
36	GASKET; RETURN PIPE,NOZZLE HOLDER 8-94104-993-0		3	ALSO INCLUDED IN GASKET SET(ENGINE)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
43	SEAT; NOZZLE SPRING,NOZZLE HOLDER 8-94128-963-1		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
44	SPRING; NOZZLE,NOZZLE HOLDER 8-94128-964-0		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
47	SPACER; NOZZLE SPRING,NOZZLE HOLDER 8-97083-358-0		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
49	WASHER; CORRUGATED,NOZZLE 8-94106-040-3		3	ALSO INCLUDED IN GASKET SET(ENGINE)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
50	GASKET; NOZZLE HOLDER 8-94257-592-0		3 (A)	ALSO INCLUDED IN GASKET SET(ENGINE)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
51	SHIELD; HEAT,INJ NOZZLE 8-94106-055-1		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
63	PIPE; FUEL,NOZZLE LEAK OFF 8-97045-408-1 8-97161-252-0		1 (A) 1 (B)		ABCDE	FGH IJ	LMNO K	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
92	NUT; PIPE 9-9921-6112-0		1			J								
128	PIPE ASM; INJ 8-97102-137-1 8-97109-468-1		3 (A) 3 (A)		ABCD E	GHI F J	K N LM		UV					


0-40A FUEL INJECTION SYSTEM

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1									
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
128	8-97045-406-2		3	(A)			O	PQRST	WXY	ZABCD	EFGH	JKLMN	OPQRS	TUVWX
	8-97045-406-2		3	(A)							I			
	8-97102-137-1		3	(A)							I			
140	SHIM; NOZZLE SPRING,NOZZLE HOLDER													
	8-94176-962-0	AR		T=0.10	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-94176-963-0	AR		T=0.20	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-94176-964-0	AR		T=0.30	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-94176-965-0	AR		T=0.40	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-94176-966-0	AR		T=0.50	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-94176-967-0	AR		T=0.52	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-94176-968-0	AR		T=0.54	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-94176-969-0	AR		T=0.56	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-94176-970-0	AR		T=0.58	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-94176-971-0	AR		T=0.80	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
147	NUT; RETURN CONNECTOR,NOZZLE HOLDER													
	8-94129-006-0		3		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
158	NUT; INJ PUMP													
	0-9115-0208-0		6		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
159	SHIM; INJ PUMP													
	8-97034-615-2	AR		T=0.2	ABCD		O		U WXY	ZABCD	EFGHI	JK		
	8-97126-356-0	AR		T=0.2	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-97227-282-1	AR		T=0.2	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-97034-616-2	AR		T=0.3	ABCD		O		U WXY	ZABCD	EFGHI	JK		
	8-97126-357-0	AR		T=0.3	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-97227-283-1	AR		T=0.3	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-97034-617-2	AR		T=0.4	ABCD		O		U WXY	ZABCD	EFGHI	JK		
	8-97126-358-0	AR		T=0.4	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-97227-284-1	AR		T=0.4	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-97034-618-2	AR		T=0.5	ABCD		O		U WXY	ZABCD	EFGHI	JK		
	8-97126-359-0	AR		T=0.5	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-97227-285-1	AR		T=0.5	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-97034-619-2	AR		T=0.6	ABCD		O		U WXY	ZABCD	EFGHI	JK		
	8-97126-360-0	AR		T=0.6	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-97227-286-1	AR		T=0.6	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-97034-620-2	AR		T=0.7	ABCD		O		U WXY	ZABCD	EFGHI	JK		
	8-97126-361-0	AR		T=0.7	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-97227-287-1	AR		T=0.7	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-97034-621-2	AR		T=0.8	ABCD		O		U WXY	ZABCD	EFGHI	JK		
	8-97126-362-0	AR		T=0.8	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-97227-288-1	AR		T=0.8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-97034-622-2	AR		T=1.0	ABCD		O		U WXY	ZABCD	EFGHI	JK		
	8-97126-363-0	AR		T=1.0	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX

0-40A FUEL INJECTION SYSTEM

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1									
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDDE AAAAA 11110 01231 U A	EEEEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
159	8-97227-289-1		AR	T=1.0	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-97034-623-2		AR	T=1.2	ABCD		O		U WXY	ZABCD	EFGHI	JK		
	8-97126-364-0		AR	T=1.2	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
	8-97227-290-1		AR	T=1.2	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
215	GASKET; HEAT SHIELD			ALSO INCLUDED IN GASKET SET(ENGINE)										
	8-94257-593-0		3	ID=14.2 OD=17.3	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
226	PIPE; FUEL													
	8-97187-732-0		1			J								
315	PIPE; FUEL,SUCTION													
	8-97045-407-1		1	(A)				WXY	ZA					
	8-97096-403-0		1	(A)	ABCDE	FGH	LMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX
0-12	Move to 0-12													
	Move to 0-12													
	Move to 0-12													
0-80	Move to 0-80													

 FUEL FILTER AND BRACKET



50793 3LD1/3LD2 1992-

0-41A FUEL FILTER AND BRACKET


KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
1	FILTER ASM; FUEL 8-97104-189-2 8-97167-811-1 8-97014-204-1 8-97167-811-1 8-97081-646-3 8-97014-204-1 8-97210-837-1 8-97077-932-4 8-97231-535-0 8-97077-932-4 8-94250-176-1 8-97014-204-1 8-94401-083-3 8-94250-176-1		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	(C) (A) (A) (A) (C) (A) (C) (C) (C) (C) (B) (A) (C) (B)	BCD E	F F GH IJ	N K O LM	PQRST	UV X X Y	Z BCD A A	I H EFG	J L N K M	P O R Q Q S	W T V X U 9204- 9204- 9204-9702 9703- 9204- 9204- 9204-0004 0005- 9204- 9204-9705 9706- 9204- 9204-		
2	ELEMENT KIT; FUEL FILTER 8-97071-348-0 8-94394-079-2 8-94132-947-1 8-94394-079-2 8-94132-947-1 8-97172-549-1 8-97048-847-0 8-97240-025-0 8-97048-847-0		1 1 1 1 1 1 1 1 1 1	(A) (B) (B) (B) (B) (B) (A) (A) (A)	BCD E	GH F F IJ IJ	LMN K O K O	PQRST PQRST	UV UV X X Y	A A Z BCD	H H EFG	J LMN	P O Q O Q R	U W T V X	9204- 9204- 9204-9702 9703- 9204-0212 0301- 9204-0004 0005- 9204-	A
6	GASKET; FUEL FILTER 8-97308-988-0 8-97308-988-0		2 2		BCDE	FGHIJ	KLMN		Y X	Z BCD	EFGHI	JK	R	T VWX	9204- 9204-0004	
8	COVER; FUEL FILTER 8-94132-948-0 8-94396-670-0 8-94132-948-0 8-94396-670-0 8-94132-948-0 8-94132-948-0		1 1 1 1 1 1		E E	F F IJ	K O K O	PQRST	UV	A H			O Q		9204-9608 9609- 9204-9703 9704- 9204- 9706-	
11	GASKET; CASE TO BODY,FUEL FILTER 8-94155-183-0 8-94155-183-0 8-97240-024-0		1 1 1		BCD	GH	LMN		Y X X	Z BCD	EFG I	JKLMN	P R	TUVWX	9204- 9204-0004 0005-	
42	BOLT; FUEL FILTER 0-2808-1030-0		2	M10X30 FLANGE	E	IJ	K O	PQRST	UV	A	H		O Q		9204-	
43	BOLT; BRKT															

0-41A FUEL FILTER AND BRACKET

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
43	0-2818-1020-0		2	M10X20 FLANGE	E	IJ	K O	PQRST	UV	A	H		O Q		9204-	
46	BRACKET				E		O	PQRST	UV	A	H		O Q		9204-	
	8-97111-552-0		1			IJ	K								9704-	
56	PLUG; FUEL FILTER															
	9-9920-2314-0		1		E	F IJ	K O	PQRST	UV	A	H		O Q		9405-	
66	GASKET; PLUG,FUEL FILTER															
	9-0957-2014-0		1		E	IJ	K O	PQRST	UV	A	H		O Q		9405-	
105	CASE; FUEL FILTER															
	8-97042-194-0		1		BCD	GH	LMN				I	J LMN	P	U W	9204-	
	8-94360-255-0		1						X						9204-0004	
	8-97240-022-0		1						X						0005-	
	8-94360-255-0		1						Y	Z BCD	EFG	K	R	T V X	9204-	
1-40	Move to 1-40															
	Move to 1-40															
	Move to 1-40															

0-42A FUEL PUMP AND PIPE

 FUEL PUMP AND PIPE

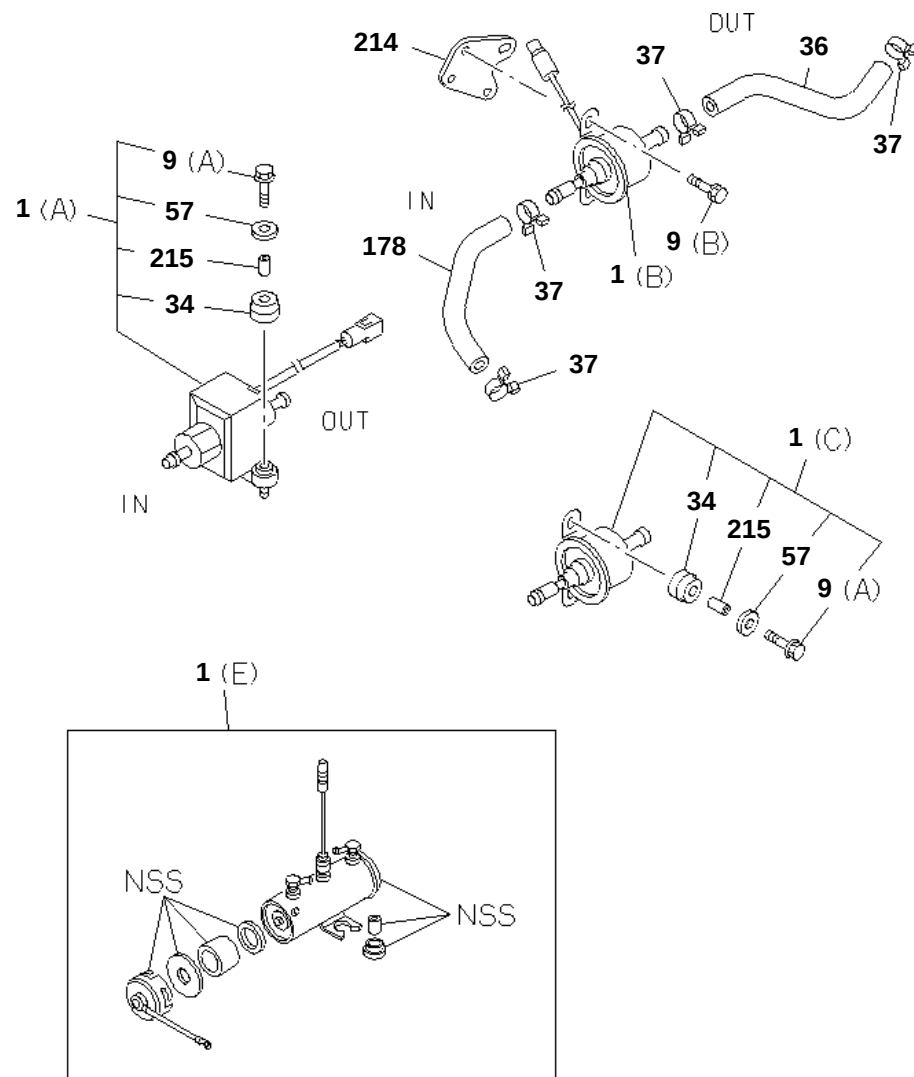


042A0150793

50793 3LD1/3LD2 1992-

0-42A FUEL PUMP AND PIPE

 FUEL PUMP AND PIPE

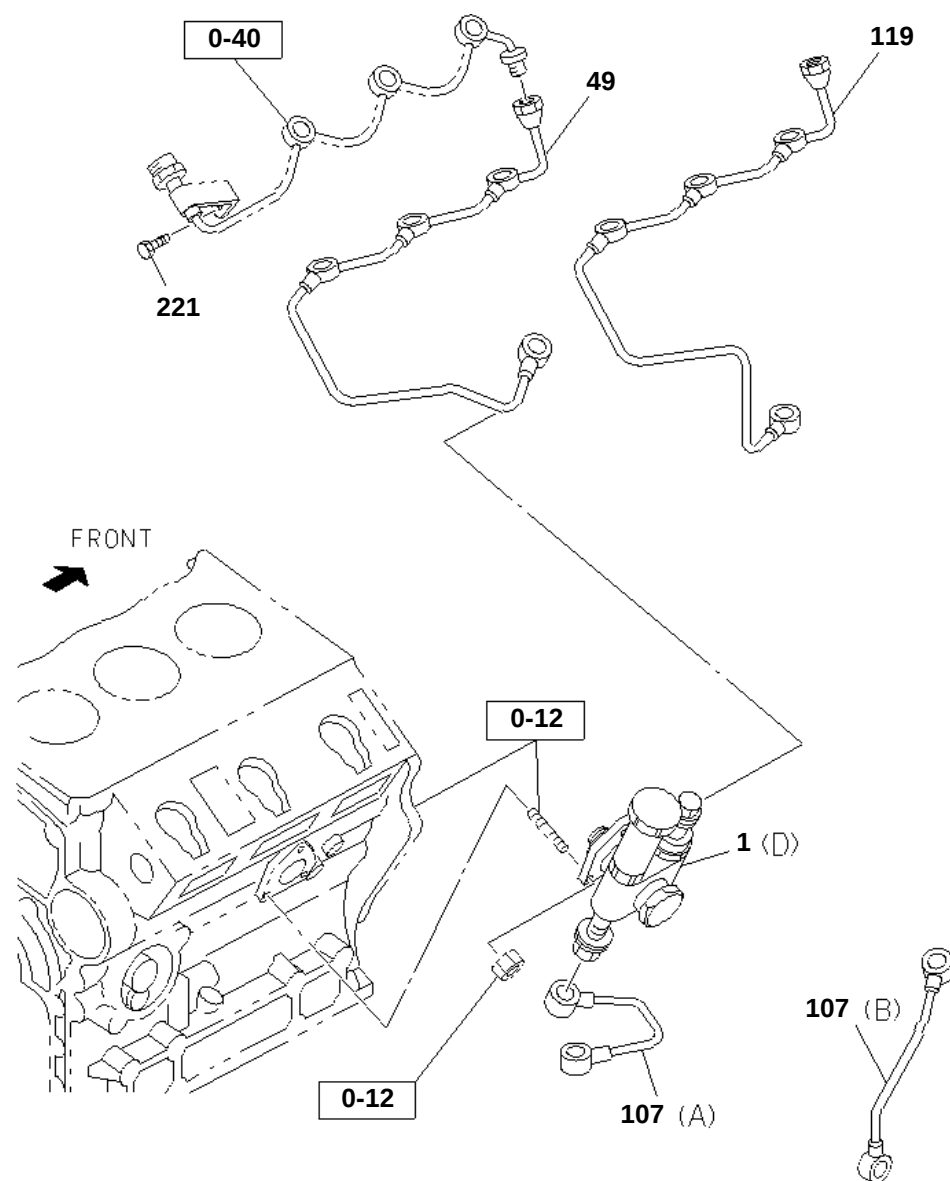

042A0250793

50793 3LD1/3LD2 1992-

0-42A FUEL PUMP AND PIPE


KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
1	PUMP ASM; FUEL 8-94241-179-2 8-97036-824-1 8-97149-182-0 5-15750-057-0 8-97183-013-0 8-94241-179-2 8-97149-182-0 8-94241-179-2 8-97149-182-0 8-94241-179-2 8-97149-182-0 8-94425-751-1		1 1 1 1 1 1 1 1 1 1 1 1 1	(A) (B) (C) (D) (B) (A) (C) (A) (C) (A) (C) (A)	BCD E		LMN K O	Q P RST	 UV XY XY	Z BCD BCD A A	F I E G E G H H	JKLMN	OP RS Q Q	W T V X U	9204- 9204- 9204- 9204- 9204-9603 9604- 9204-9910 9911- 9204-0006 0007- 9204-	C
9	BOLT; FUEL PUMP 9-0191-0628-0 0-2808-0612-0 0-2808-0614-0 8-97011-604-0		2 2 2 2	(A) (B) (B) (A)	BCD E E	FGH	LMN O O	PQRST PQRST	XY UV UV	ZABCD	EFGHI	JKLMN	OPQRS	T VWX U	9204- 9407-0209 0210- 9204-	
34	RUBBER; MTG,FUEL PUMP BRKT 8-94233-655-0		2		BCD	FGH	LMN		XY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
36	HOSE; FUEL PUMP TO CARB 8-97111-571-2		1		E		O	PQRST	UV						9407-	
37	CLIP; FUEL HOSE 5-09707-004-1		4	ID=14	E		O	PQRST	UV						9407-	
57	WASHER; PL,PUMP BRKT 8-94233-657-0		2		BCD	FGH	LMN		XY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
107	PIPE; FUEL,FEED PUMP TO FUEL FILTER 8-97174-687-0		1	(B)		IJ	K								9702-	
119	PIPE; FUEL,FUEL FILTER TO INJ PUMP 8-97174-689-0		1			IJ	K								9702-	
178	HOSE; RUBBER 8-97111-570-2		1		E		O	PQRST	UV						9407-	
214	BRACKET; FUEL PUMP 8-97111-553-1 8-97376-746-0		1 1		E E		O O	PQRST PQRST	UV UV						9407-0401 0402-	C
215	COLLAR; MIG FUEL PUMP 8-94238-907-0		2		BCD	FGH	LMN		XY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
221	BOLT; FUEL PIPE 0-2808-0812-0		1			IJ	K								9204-	
0-12	Move to 0-12 Move to 0-12 Move to 0-12															

0-42A FUEL PUMP AND PIPE

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
0-40	Move to 0-40 Move to 0-40 Move to 0-40															

0-50A OIL COOLER AND OIL FILTER

 OIL COOLER AND OIL FILTER

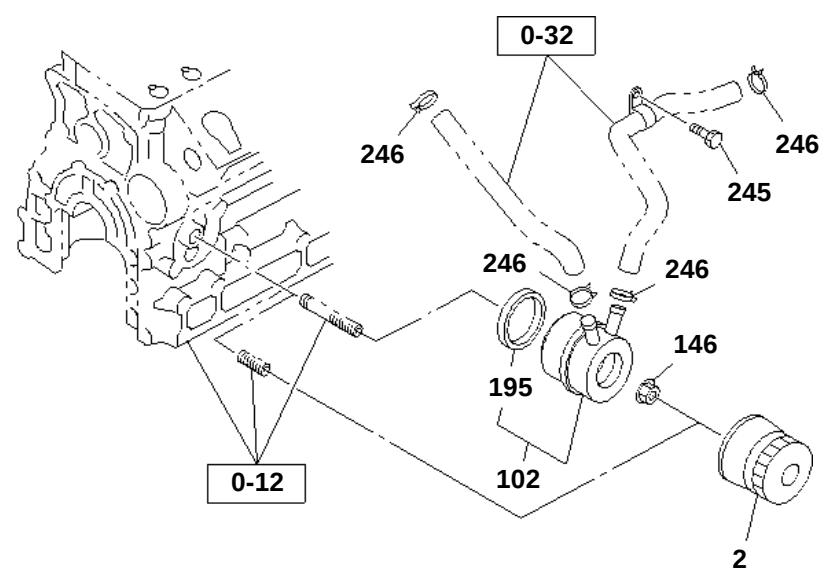

050A0150793


50793 3LD1/3LD2 1992-

0-50A OIL COOLER AND OIL FILTER

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
2	ELEMENT; OIL FILTER 8-94456-741-2		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	C
102	COOLER ASM; OIL 8-97102-320-0		1		BCD	GHI	K N								9204-	
146	NUT; STUD,OIL COOLER 8-94368-501-0		1		BCD	GHI	K N								9204-	
195	GASKET; OIL COOLER 8-94370-828-0		1		BCD	GHI	K N								9204-	
245	BOLT; CLIP,OIL COOLER HOSE 0-5004-0816-0		1		BCD	G									9204-9611	
	0-2808-0816-0		1		BCD	GHI	K N								9612-	
246	CLIP; OIL COOLER HOSE 8-94466-382-0		4		BCD	GHI	K N								9204-	
0-12	Move to 0-12															
	Move to 0-12															
	Move to 0-12															
0-32	Move to 0-32															
	Move to 0-32															

0-51A OIL PUMP AND OIL STRAINER

 OIL PUMP AND OIL STRAINER

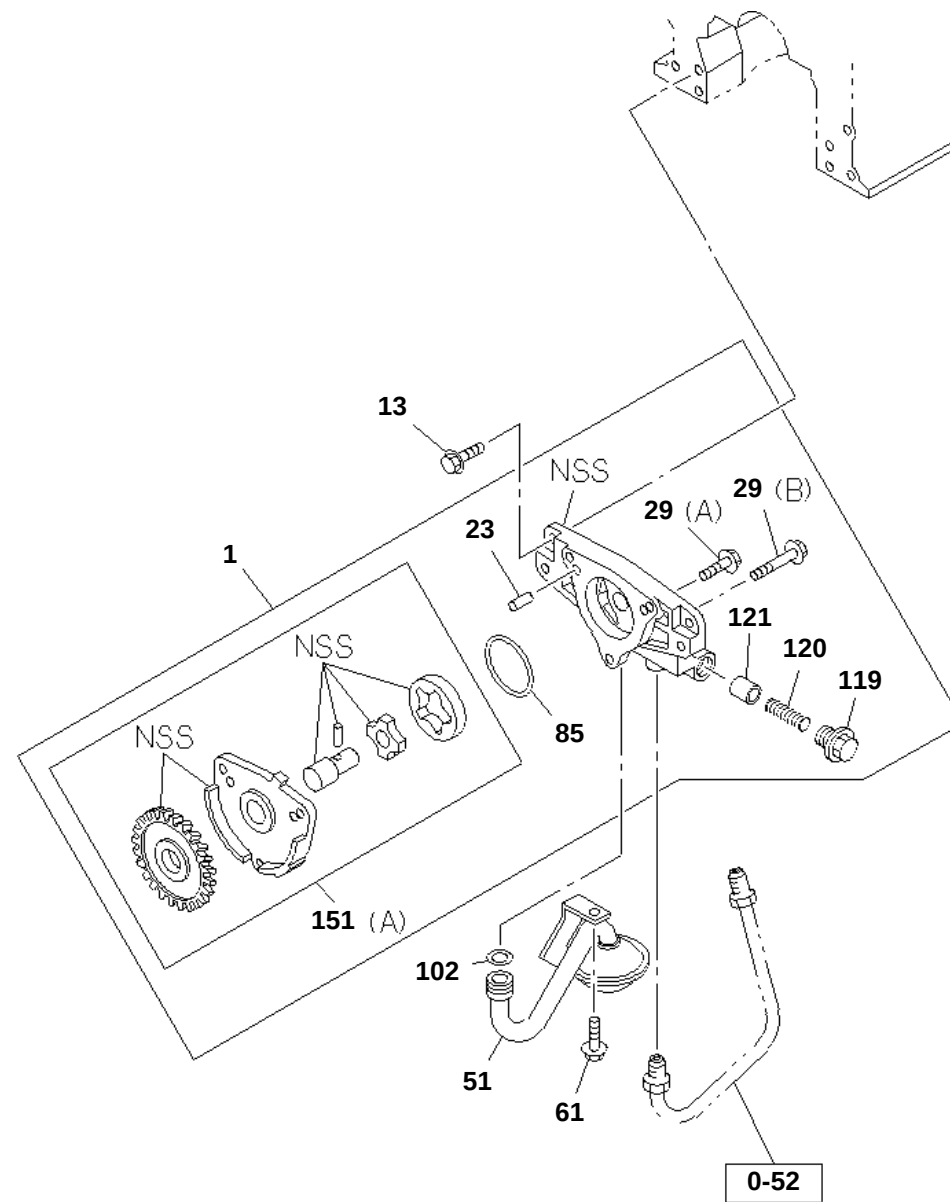


051A0150793

50793 3LD1/3LD2 1992-

0-51A OIL PUMP AND OIL STRAINER

 OIL PUMP AND OIL STRAINER

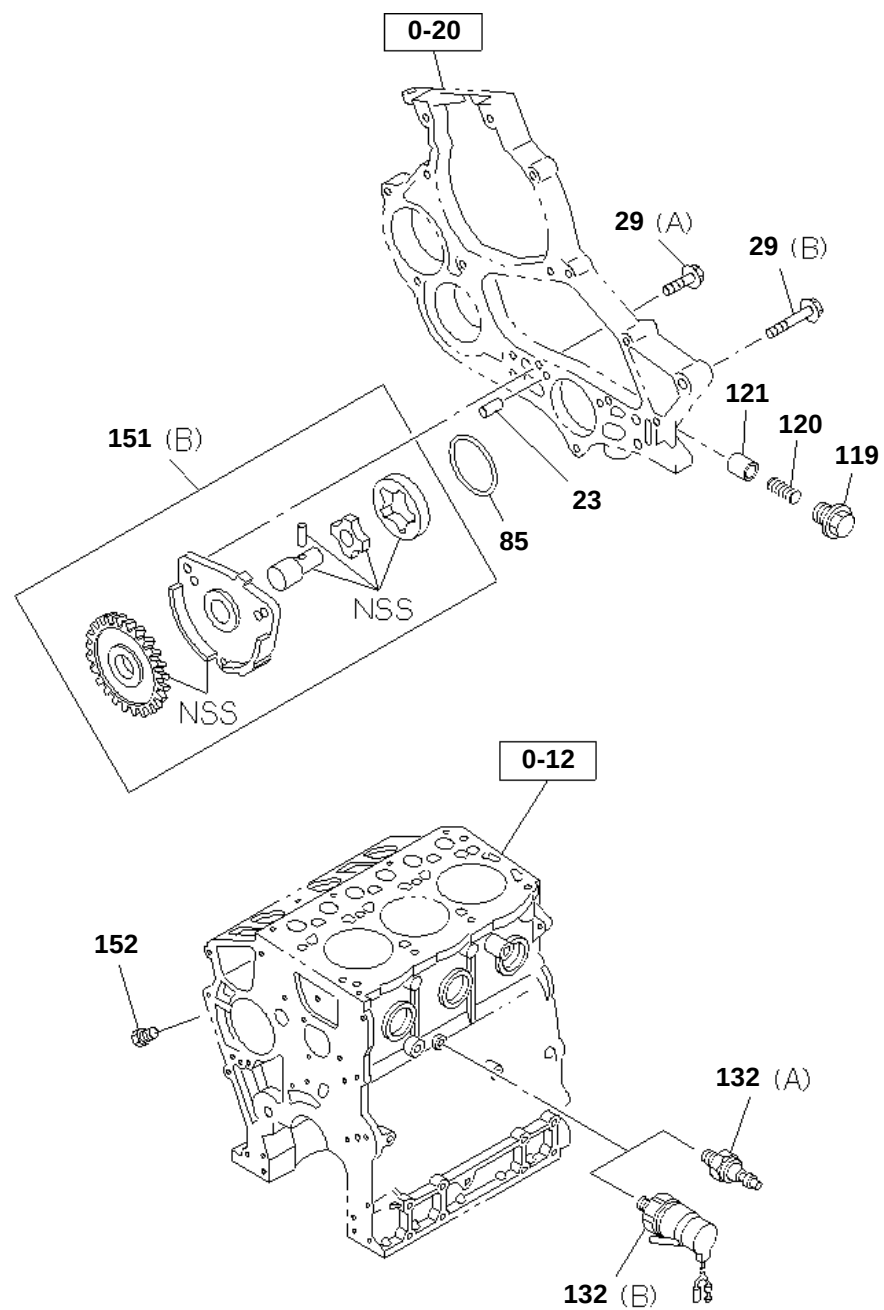

051A0250793

50793 3LD1/3LD2 1992-

0-51A OIL PUMP AND OIL STRAINER


KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
1	PUMP ASM; OIL 8-97048-809-5		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ABCD	EFGH	K	O Q S	TUVWX	9204-	
13	BOLT; OIL PUMP TO C/BL 0-2808-0830-0		4	M8X30 FLANGE	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ABCD	EFGH	K	O Q S	TUVWX	9204-	
23	PIN; BODY,OIL PUMP 9-0816-0616-0		2		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
29	BOLT; OIL PUMP 0-2808-0630-0		2	(A)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
	0-2808-0650-0		1	(B)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
51	STRAINER & PIPE ASM; OIL 8-97087-694-0		1		ABCDE	FGHIJ	KLMN								9204-	
	8-97045-399-1		1				O	Q	U WXY	ZABC	EFGHI	JKLMN	OPQRS		9204-9703	C
	8-97179-733-0		1				O	PQRST	UVWXY	ZABC	EFGHI	JKLMN	OPQRS	TUVWX	9704-	
	8-97101-526-1		1							D					9204-0003	
	8-97179-733-0		1							D					0004-	
61	BOLT; OIL STRAINER 0-2808-0816-0		1	M8X16 FLANGE	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
85	GASKET; OIL PUMP 9-0956-1260-0		1	ALSO INCLUDED IN GASKET SET(ENGINE)					WXY	ZABCD	E				9204-9401	C
	8-97109-679-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9402-	
102	GASKET; STRAINER 1-09623-496-0		1	ALSO INCLUDED IN GASKET SET(ENGINE)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
119	PLUG; RELIEF VLV 8-94104-615-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UV						9204-	
	8-94244-655-0		1						WXY	ZABCD	EFG				9204-9411	
	8-94104-615-0		1						WXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9412-	
120	SPRING; RELIEF VLV 8-94114-512-0		1		ABCD		O		U WXY	ZABCD	EFG				9204-9411	
	8-97113-332-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9412-	
121	VALVE; RELIEF,OIL PUMP 8-94235-567-1		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
132	SWITCH; OIL PRESSURE 1-82410-008-2		1	(A)	A			QRS	WXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
	5-82410-036-2		1	(B)	BCD	F H	N								9204-	
	9-82720-069-0		1	(B)	E										9204-0306	
	5-82410-036-2		1	(B)	E										0307-	
	9-82720-069-0		1	(B)		G I	KLM	P	UV						9204-	
	5-82410-016-1		1	(A)		J									9611-	
	1-82410-008-2		1	(A)			O	T							9204-9807	
	9-82720-069-0		1	(B)			O	T							9808-	

0-51A OIL PUMP AND OIL STRAINER

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
151	PUMP SUB ASM; OIL 8-97044-813-3		1	(A) ROTOR T=15	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
0-52	Move to 0-52															
	Move to 0-52															
	Move to 0-52															
0-12	Move to 0-12															
	Move to 0-12															
	Move to 0-12															
0-20	Move to 0-20															
	Move to 0-20															
	Move to 0-20															

0-52A OIL AND VACUUM PIPING; ENGINE

 OIL AND VACUUM PIPING; ENGINE

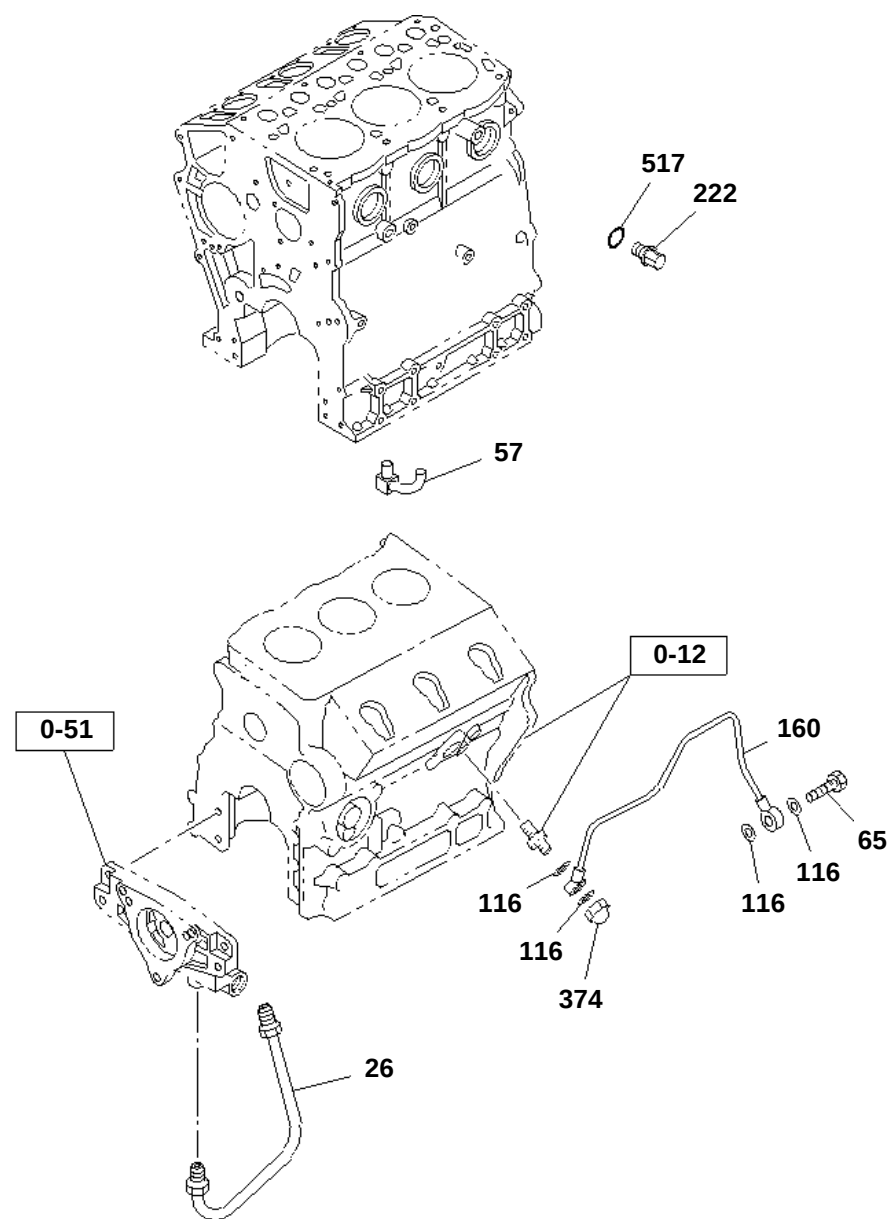


052A0150793

50793 3LD1/3LD2 1992-

0-52A OIL AND VACUUM PIPING; ENGINE

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
26	PIPE; OIL,PUMP TO C/BL 8-97045-400-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
57	PIPE; OIL,OIL JET 8-97102-307-1		3		ABCD	GHI	K N								9204-	
65	BOLT; JOINT,OIL PIPE 1-09675-037-1		1	M8X18 FLANGE				Q		Z	I	J MN	P		9204-	
116	GASKET; CAP NUT,OIL PIPE 9-0957-1408-0		4	ID=8.2 OD=14.0 T=1.0				Q		Z	I	J MN	P		9204-	
160	PIPE; OIL,PARTIAL FILTER FEED 8-97135-456-1		1					Q		Z	I	J M			9204-9709	
	8-97172-826-0		1					Q		Z	I	J M			9710-	
	8-97143-220-1		1									N	P		9204-9702	
	8-97172-827-0		1									N	P		9703-	
222	VALVE ASM; CHECK 8-94170-975-2		1		ABCD	GHI	K N								9204-	
374	NUT; CAP,CONNECTOR 1-09984-105-0		1					Q		Z	I	J MN	P		9204-	
517	GASKET; CHECK VLV 9-0957-1416-0		1		ABCD	GHI	K N								9204-	
0-12	Move to 0-12															
	Move to 0-12															
	Move to 0-12															
0-51	Move to 0-51															
	Move to 0-51															
	Move to 0-51															

 
ENGINE ELECTRICAL CONTROL PARTS



50793 3LD1/3LD2 1992-

0-60A ENGINE ELECTRICAL CONTROL PARTS

 ENGINE ELECTRICAL CONTROL PARTS

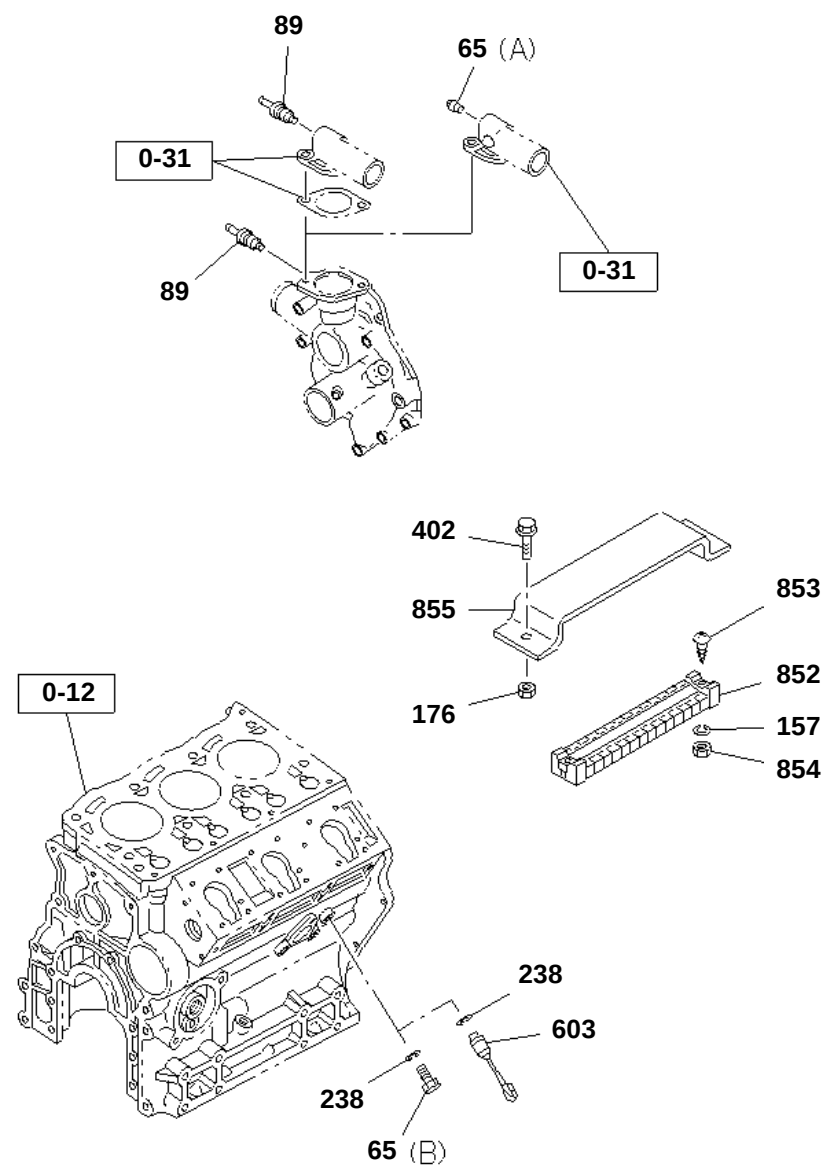

060A0250793

50793 3LD1/3LD2 1992-

0-60A ENGINE ELECTRICAL CONTROL PARTS

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
1	STARTER ASM			SEE FIG-NO 0-65 FOR COMPONENT.												
	8-97048-966-3		1	12V-1.2KW(DENSO)	A CDE	F I	KLMNO	PQRST	UVW	ZA	F H	KL	O Q S	T WX	9204-	
	8-97048-967-3		1	12V-1.4KW(DENSO)	B	GH				D					9204-	
	8-94370-583-1		1	24V-3.0KW(NIKKO)		J									9204-	
	8-97137-478-1		1	24V-3KW(MITSUBISHI)		J									9906-	
	8-97048-966-3		1	12V-1.2KW(DENSO)					XY	BC	E G			V	9204-9709	C
	8-97048-967-3		1	12V-1.4KW(DENSO)					XY	BC	E G			V	9710-	
	8-97135-343-2		1	12V-1.8KW(DENSO)							I	J			9703-9911	
	8-97112-865-2		1	12V-2.0KW(DENSO)							I	J			9912-	
	8-97048-966-3		1	12V-1.2KW(DENSO)								M			9204-0005	
	8-97112-865-2		1	12V-2.0KW(DENSO)								M			0006-	
	8-97112-865-2		1	12V-2.0KW(DENSO)								N	P		9604-	
	8-97048-967-3		1	12V-1.4KW(DENSO)									R		9710-9907	
	8-97112-865-2		1	12V-2.0KW(DENSO)									R		9908-	
	8-97107-594-2		1	24V-1.0KW(DENSO)										U	9204-	
2	GENERATOR ASM			SEE FIG-NO 0-66 FOR COMPONENT.												
	8-97048-970-1		1	12V-35A(DENSO)	A										9204-0009	
	8-97226-840-4		1	12V-20A(HITACHI)	A										0010-	
	8-97048-970-1		1	12V-20A(HITACHI)	BCD	IJ					I	J		T W	9204-9910	
	8-97226-840-4		1	12V-20A(HITACHI)	BCD	IJ					I	J		T W	9911-	
	8-97048-970-1		1	12V-35A(DENSO)	E	F	KL								9204-0002	
	8-97248-298-3		1	12V-20A(HITACHI)	E	F	KL								0003-0404	
	8-97226-840-4		1	12V-20A(HITACHI)	E	F	KL								0405-	
	8-97048-970-1		1	12V-35A(DENSO)		GH									9204-0003	
	8-97226-840-4		1	12V-20A(HITACHI)		GH									0004-	
	8-97248-298-3		1	12V-20A(HITACHI)			M								0003-	
	8-97226-840-4		1	12V-20A(HITACHI)			N								0007-	
	8-97048-970-1		1	12V-35A(DENSO)			O	PQRS	UV						9204-0105	
	8-97226-840-4		1	12V-20A(HITACHI)			O	PQRS	UV						0106-	
	8-97048-968-1		1	12V-35A(DENSO)				T							9204-0103	
	8-97225-117-0		1	12V-35A(DENSO)				T							0104-	
	8-97048-968-1		1	12V-35A(DENSO)					W				O		9204-0009	
	8-97225-117-0		1	12V-35A(DENSO)					W				O		0010-	
	8-97048-968-1		1	12V-35A(DENSO)					XY	ZABCD	EFG	LM	QRS	V X	9204-9910	
	8-97225-117-0		1	12V-35A(DENSO)					XY	ZABCD	EFG	M	QRS	V X	9911-	
	8-97048-968-1		1	12V-35A(DENSO)							H				9204-9910	
	8-97225-117-0		1	12V-35A(DENSO)							H				0010-0104	
	8-97305-204-0		1	12V-35A(DENSO)							H				0105-0404	
	8-97225-117-0		1	12V-35A(DENSO)							H				0405-	
	8-97048-968-1		1	12V-35A(DENSO)								K			9204-9306	
	8-97048-970-1		1	12V-20A(HITACHI)								K			9307-9910	
	8-97226-840-4		1	12V-20A(HITACHI)								K			9911-	

0-60A ENGINE ELECTRICAL CONTROL PARTS

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
2	8-97125-426-0		1	12V-60A(DENSO)								N	P		9204-9910	
	8-97231-501-0		1	12V-60A(DENSO)								N	P		9911-	
	8-97112-676-0		1	24V-20A(DENSO)										U	9204-9805	
	8-97180-004-0		1	24V-15A(HITACHI)										U	9806-9911	
	8-97233-411-0		1	24V-15A(HITACHI)										U	9912-	
4	BOLT; STARTER															
	0-2818-1230-0		2	M12X30 FLANGE	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGH	JKLMN	OPQRS	TUV X	9204-	
	0-2868-1235-0		2								I	J		W	9204-9712	
	0-2868-1240-0		2								I	J		W	9801-	
7	NUT; STARTER															
	9-0911-1408-0		1	(A)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
	0-9115-0112-0		1	(B)	ABCDE	FGHIJ	KLMN				I	J		W	9204-	
9	STUD; STARTER															
	9-9441-1233-0		1	M12X33 L=51	ABCDE	FGHIJ	KLMN								0009-	
10	RELAY; STARTER															
	9-82790-201-0		2				K								9204-	
16	BOLT; GEN															
	0-2808-1070-0		1	M10X70 FLANGE	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	Z BCD	EFG I	JKLMN	P R	T VWX	9204-	
	0-2808-1060-0		1	M10X60 FLANGE						A	H		O Q S		9204-	
	0-2808-1070-0		1	M10X70 FLANGE										U	9204-9805	
	0-2808-6013-0		1	M10X130										U	9806-	
19	BRACKET; GEN															
	8-97185-418-0		1											U	9204-	
21	BRACKET; GEN															
	8-97378-857-0		1	(B)	E	F	KL				H				0405-	
23	NUT; GEN															
	0-9115-0210-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
24	BOLT; GEN BRKT															
	0-2878-1020-0		1	M10X20 FLANGE										U	9204-	
46	RELAY; GLOW PLUG															
	8-94248-161-0		1		BCDE	GH	LMN		XY	ZABCD	EFGHI	J LM	O QRS	T VW	9204-	
	8-94258-014-0		1											U	9204-	
65	PLUG; SENSOR HOLE															
	5-09604-016-0		1	(B)	A E	F	KLM O	PQRST	UVWXY	ZABCD	E GHI	JK	O Q S	UV	9204-	
	1-09605-050-0		1	(A) PT 1/8	A	F IJ	K O	PQRST	UVW			K N	P R	X	9204-	
89	SWITCH; OVER HEAT WARNING															
	8-94167-940-0		1		B										9204-9802	C
	8-97204-550-1		1		B										9803-	
	8-94167-941-0		1		CD										9204-0101	
	8-94132-331-0		1		E										9204-0306	
	8-97302-203-0		1		E										0307-	

0-60A ENGINE ELECTRICAL CONTROL PARTS


KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
89	8-94167-941-0		1			F H	N								9204-0010	
	8-97302-203-0		1			F H	N								0011-	
	8-94132-331-0		1			G IJ	KLM O	PQRST	UV						9204-	
	5-82450-020-0		1								F	K			9204-	
	8-97125-600-1		1								I	J	Q	TU W	9204-	
	5-82450-020-0		1								I	J			9204-9804	A
	8-94132-331-0		1												9805-	
108	SWITCH; THERMO														9204-	
	1-82450-018-0		1			I										
177	SOLENOID ASM; ENG STOP															
	8-97070-130-3		1		BCDE	FGH	L O	QRS	UV XY	ZABCD	EFGHI	JKLM	O QRS	T VW	9204-9807	C
	8-97183-014-1		1		BCDE	FGH	LMNO	PQRST	UV XY	ZABCD	EFGHI	JKLM	O QRS	T VWX	9808-0205	C
	8-97329-568-0		1		BCDE	FGH	LMNO	PQRST	UV XY	ZABCD	EFGHI	JKLMN	OPQRS	T VWX	0206-	
	8-97130-023-0		1			I									9204-9806	A
	8-97209-114-1		1			I	K								9807-	
	8-97115-289-0		1									N	P		9204-9707	
	8-97070-130-3		1									N	P		9708-9812	C
	8-97183-014-1		1									N	P		9901-0205	
	8-97124-117-1		1											U	9204-9806	C
	8-97209-115-2		1											U	9807-	
238	GASKET; PICKUP															
	9-0957-1414-0		1	ID=14.2 OD=20.0					WXY	ZA		N	P		9204-9402	C
	9-0957-2014-0		1	ID=14.2 OD=23.0	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9403-	
251	SPACER; GEN															
	8-94367-309-0		1					T							9204-	
	8-94174-537-0		1	ID=8 OD=18 T=3								N	P		9204-	
	9-0916-0610-0		1	ID=10 T=2.0										U	9806-	
289	GUARD; HEAT,GEN															
	8-97102-666-0		1		B E		K								9204-	
	8-97102-666-0		1			IJ									9204-9910	
	8-97250-361-0		1			IJ									9911-	
	8-97102-666-0		1				O	PQRS	UV						9204-0105	
	8-97250-361-0		1				O	PQ S	UV						0106-	
	8-97175-988-0		1					T							9204-	
292	WASHER; LK,STARTER															
	9-0915-0508-0		1	ID=8.2	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9306-	
293	CABLE; STARTER EARTH															
	9-82931-511-0		1	(A)	E	IJ	K		XY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-0302	
	8-97180-556-0		1	(B)	E	IJ	K		XY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0303-	
578	RELAY; CHARGE WARNING															
	8-94232-225-0		1			FGH									9204-	
603	SENSOR; TACHO															

0-60A ENGINE ELECTRICAL CONTROL PARTS

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
603	8-94126-822-0		1		BCD	GHIJ	N	T			F	LMN	P R	T WX	9204-	
613	CONTROL UNIT; ENG		1		BCD										9204-9406	C
	8-97091-290-1		1		BCD										9407-9605	C
	8-97116-314-0		1		BCD										9606-0002	
	8-97146-105-0		1		BCD		N								0003-	
657	TIMER; GLOW PLUG		1		E	GH	LM		XY	ZABCD	EFGHI	J L	O QRS	T V U W	9204- 9204- 9805-	
	8-97040-501-0		1									M				
	8-97073-643-0		1													
	8-97105-790-0		1													
690	CONNECTOR		1	(A)				T							0104-	
729	SENSOR; QOS THERMO		1		CDE	GH	LMN		XY	ZABCD	EFGHI	J LM	O QRS	TUVW	9204-	
	8-97063-301-0		1		B										9204-9908	
	8-97063-301-0		1													
842	TIMER ASM		1		E	FGH	L								9204-	
	8-97111-962-1															
0-33	Move to 0-33															
	Move to 0-33															
	Move to 0-33															
0-12	Move to 0-12															
	Move to 0-12															
	Move to 0-12															
0-31	Move to 0-31															
	Move to 0-31															
	Move to 0-31															

0-61A BATTERY AND ENGINE ELECTRICAL PARTS

 BATTERY AND ENGINE ELECTRICAL PARTS

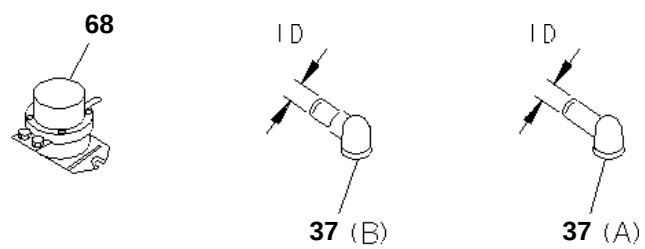

061A0150793


50793 3LD1/3LD2 1992-

0-61A BATTERY AND ENGINE ELECTRICAL PARTS

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
37	CAP; TERMINAL,BATTERY CABLE 9-82951-325-0		1	(A) ID=11.5								N	P		9204-	
	9-82951-332-0		1	(B) ID=11.0								N	P		9204-	
68	RELAY; BATTERY 8-97026-160-0		1									M			9204-	

0-65A STARTER

 
STARTER

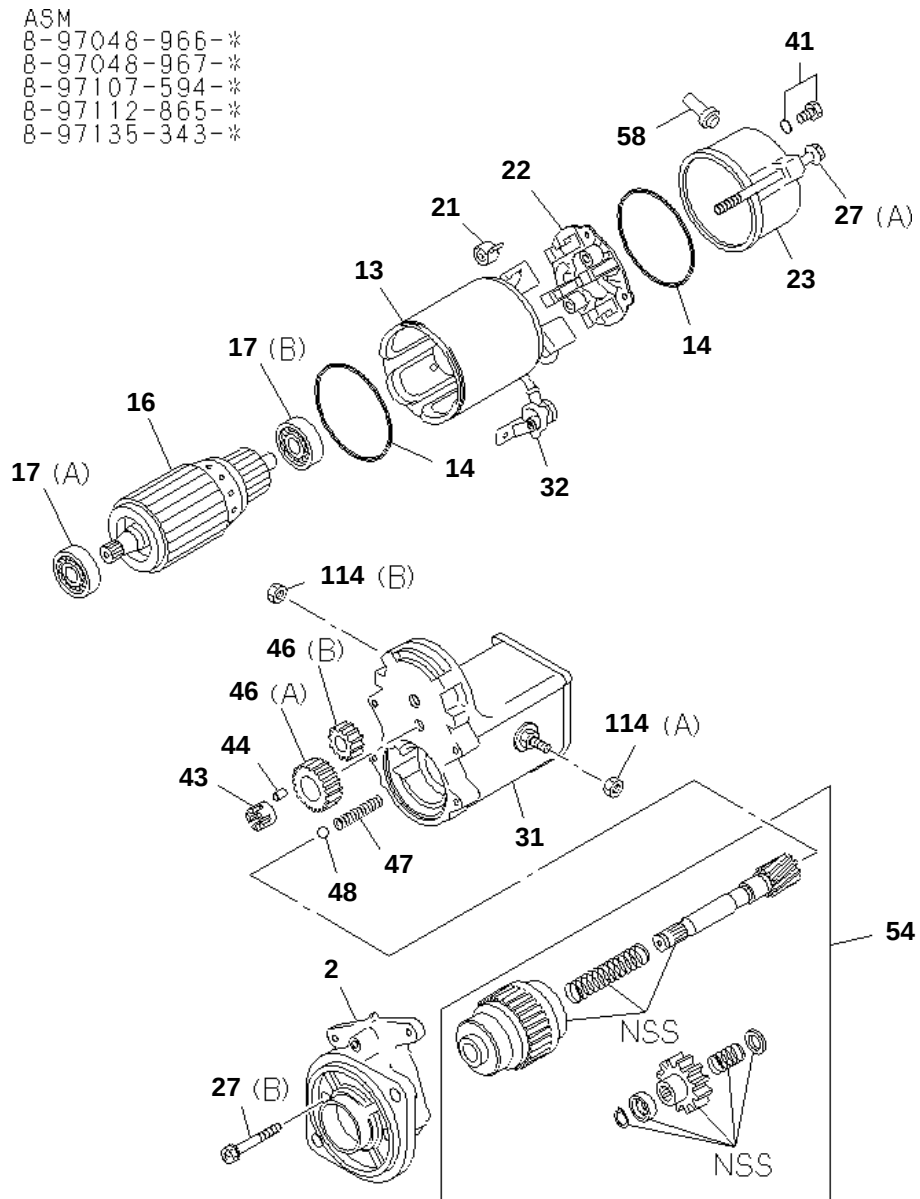

065A0150793

50793 3LD1/3LD2 1992-

 
0-65A STARTER

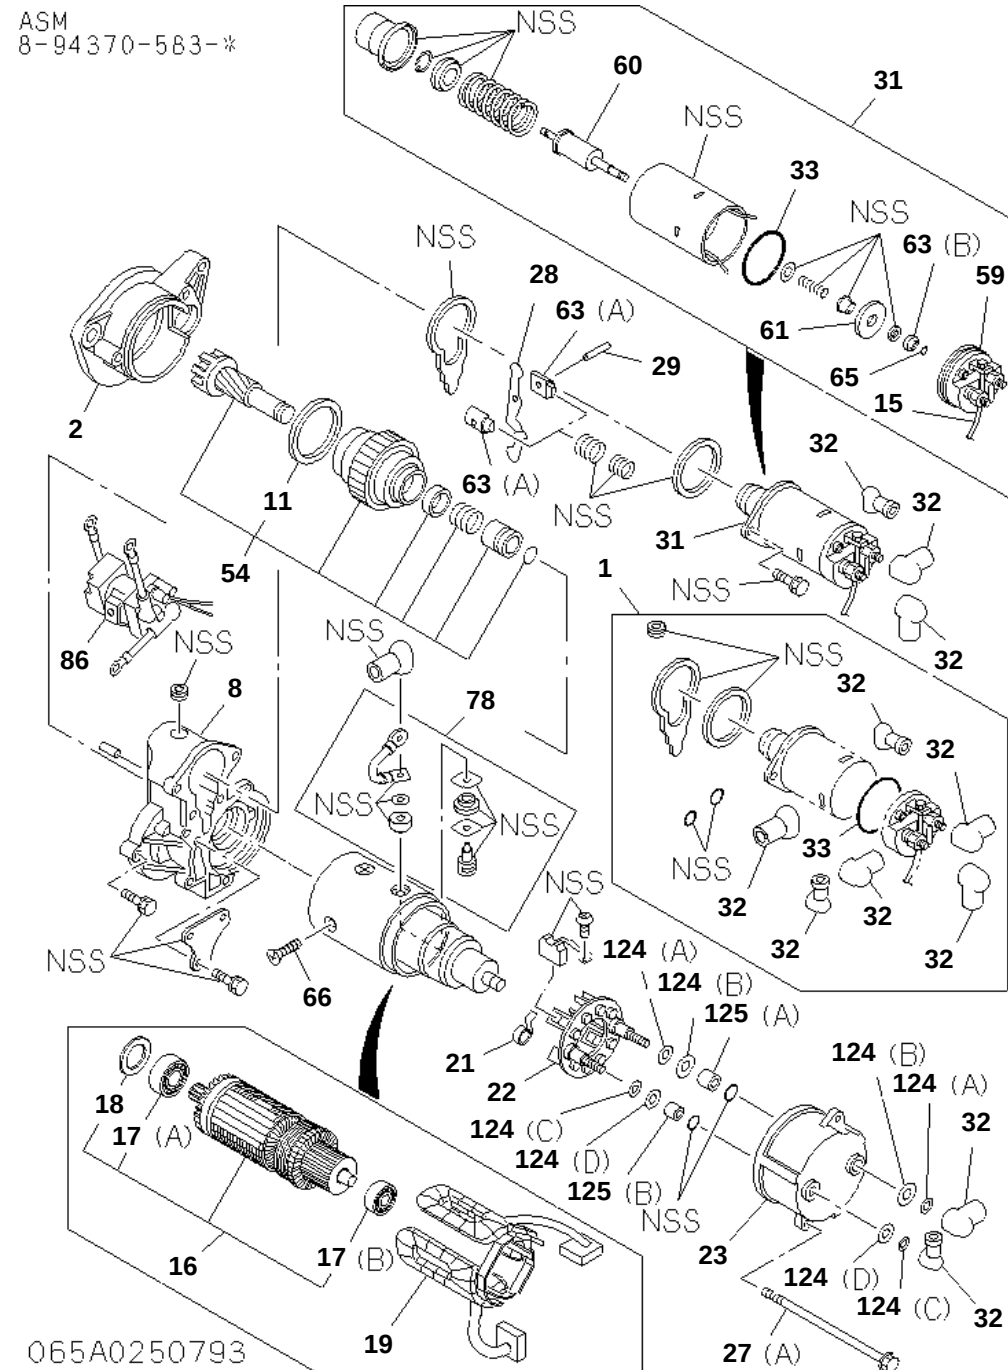

50793 3LD1/3LD2 1992-

0-65A STARTER

 STARTER

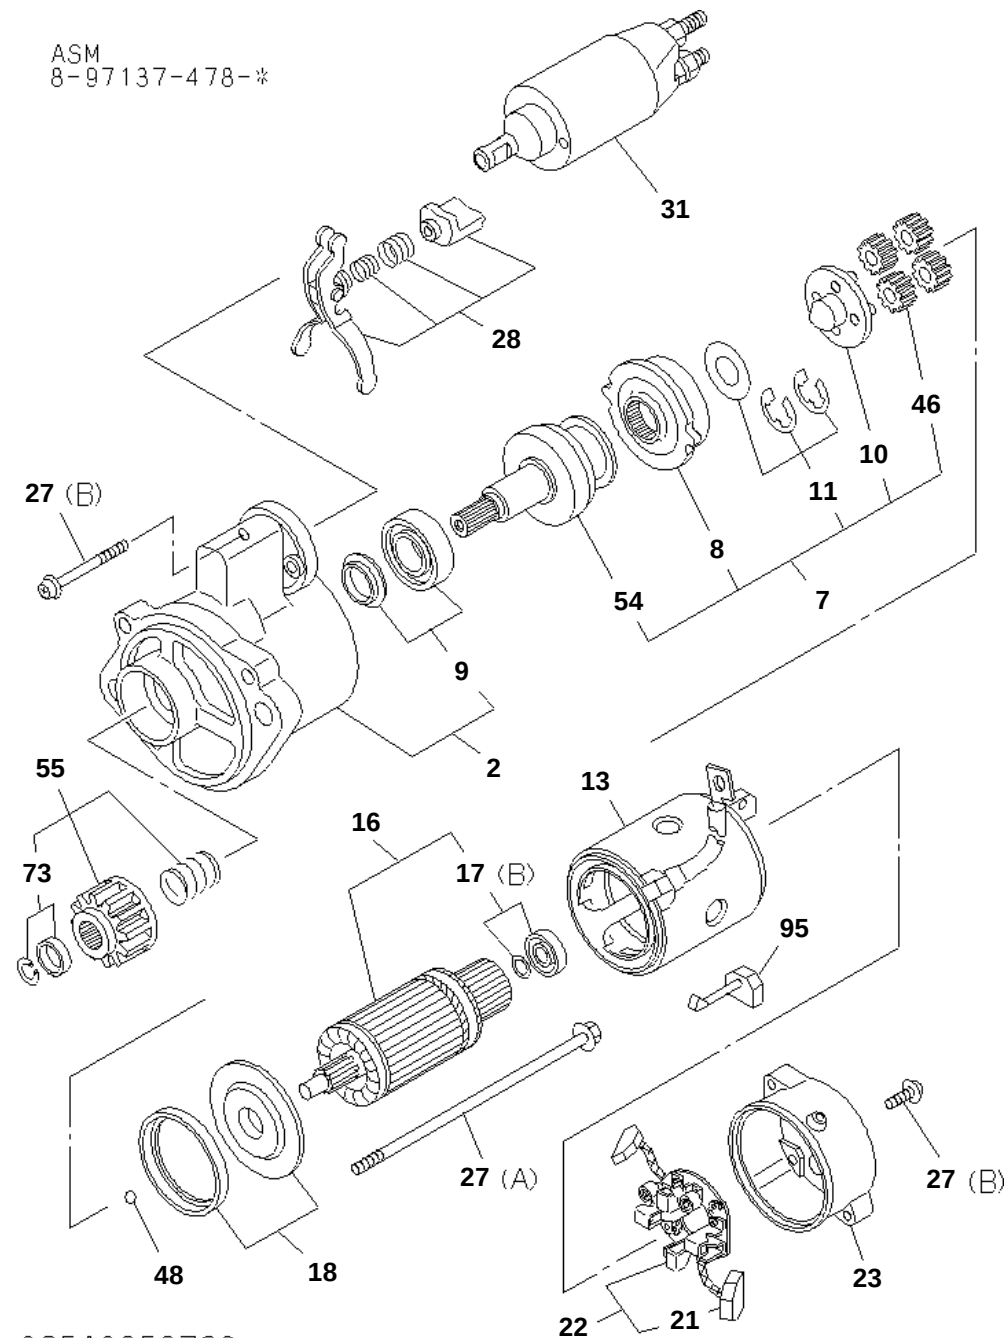

50793 3LD1/3LD2 1992-

0-65A STARTER

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	88888	88										APPLIED DATE	I T C
					99999	99											
					47777	77											
					30011	11											
					74401	33											
					08872	57											
					59958	34											
					86696	47											
					36745	38											
					13322	21											
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX			
1	SEAL KIT; STARTER 8-94340-501-0		1		A											9204-	
2	CASE; PINION,STARTER 8-94340-469-0		1		A											9204-	
	8-97078-652-0		1		BC											9204-	
	8-97078-648-0		1		D											9204-	
	8-97112-871-0		1		E	F										9204-	
	8-97210-916-0		1			G										9906-	
7	CLUTCH ASM; PINION,STARTER 8-97116-482-0		1			G										9906-	
8	BRACKET; CENTER STARTER 8-94340-475-0		1		A											9204-	
	8-97116-485-0		1			G										9906-	
9	BEARING; GEAR SHAFT STARTER 8-97116-481-0		1			G										9906-	
10	SHAFT; GEAR STARTER 8-97116-483-0		1			G										9906-	
11	WASHER; GEAR SHAFT STARTER 8-94340-468-0		1		A											9204-	
	8-97116-484-0		1			G										9204-	
13	YOKE; STARTER 8-94377-260-0		1		B											9204-9506	
	8-97125-855-0		1		B											9507-	
	8-94377-254-0		1		C											9204-9506	
	8-97130-258-0		1		C											9507-	
	8-97112-734-0		1		D											9204-	
	8-97135-497-0		1		E											9204-	
	8-97136-909-0		1			F										9204-	
	8-97210-918-0		1			G										9906-	
14	GASKET; YOKE,STARTER 8-94170-214-0		2		BC E	F										9204-	
15	WIRE; LEAD STARTER 8-94340-487-0		1		A											9204-	
16	ARMATURE; STARTER 8-94340-478-0		1		A											9204-	
	8-94377-259-0		1		B											9204-	
	8-94377-253-0		1		C											9204-	
	8-97112-735-0		1		D											9204-	
	8-97112-869-0		1		E											9204-	

0-65A STARTER

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	88888 99999 47777 30011 74401 08872 59958 86696 36745 13322	88 99 77 11 33 57 34 47 38 21									APPLIED DATE	I T C
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
16	8-97136-908-0		1			F									9204-	
	8-97231-280-0		1			G									9906-	
17	BEARING; ARMATURE,STARTER															
	8-94340-476-0		1 (A)		A										9204-	
	8-94377-240-0		1 (A)		BC E	F									9204-	
	8-97112-739-0		1 (A)		D										9204-	
	8-94340-477-0		1 (B)		A										9204-	
	8-94377-241-0		1 (B)		BC										9204-	
	5-09800-040-0		1 (B)		D										9204-	
	8-97112-954-0		1 (B)		E	F									9204-	
	1-81129-837-0		1 (B)			G									9906-	
18	WASHER; THRUST,ARMATURE,STARTER															
	9-82125-213-0		1		A										9204-	
	8-97116-489-0		1			G									9906-	
19	COIL; FIELD,STARTER															
	8-94340-479-0		1		A										9204-	
21	SPRING; BRUSH HOLDER STARTER															
	1-81117-015-0		4		A										9204-	
	5-81177-007-0		4		BCD										9204-	
	8-97112-880-0		4		E	F									9204-	
	8-97116-516-0		4			G									9906-	
22	HOLDER; BRUSH STARTER															
	8-94340-489-0		1		A										9204-	
	8-94377-258-0		1		B										9204-	
	8-94377-249-0		1		C										9204-	
	8-97112-737-0		1		D										9204-	
	8-97112-873-0		1		E	F									9204-	
	8-97116-511-0		1			G									9906-	
23	COVER; RR COVER STARTER															
	8-94340-497-0		1		A										9204-	
	8-97078-650-0		1		B										9204-	
	8-97088-072-0		1		C										9204-	
	8-97112-738-0		1		D										9204-	
	8-97112-875-0		1		E	F									9204-	
	8-97210-917-0		1			G									9906-	
27	BOLT; THROUGH,STARTER															
	8-94340-499-0		2 (A)		A										9204-	
	8-94381-944-0		2 (A)		B										9204-	
	8-97041-422-0		2 (A)		C										9204-	

0-65A STARTER

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	88888 99999 47777 30011 74401 08872 59958 86696 36745 13322	88 99 77 11 33 57 34 47 38 21									APPLIED DATE	I T C
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
27	5-81129-183-0 8-97112-957-0 8-97136-910-0 8-97116-514-0 8-94377-243-0 5-81129-182-0 8-97112-881-0 8-97116-495-0		2 2 2 1 2 2 2 1	(A) (A) (A) (A) (B) (B) (B) (B)	D E BC D E	 F G F G									9204- 9204- 9204- 9906- 9204- 9204- 9204- 9906-	
28	LEVER; SHIFT,STARTER 8-94340-472-0 8-97116-492-0		1 1		A	G									9204- 9906-	
29	PIN; SHIFT LEVER STARTER 8-94340-471-0		1		A										9204-	
31	SWITCH; ENGAGE STARTER 8-94340-488-0 8-97078-651-0 8-97130-257-0 8-97112-736-0 8-97112-872-0 8-97116-494-0		1 1 1 1 1 1		A BC BC D E	 F G									9204- 9204-9506 9507- 9204- 9204- 9906-	
32	COVER; RUBBER,STARTER 5-81119-029-0 8-97088-073-0 8-94340-500-0		1 1 1		B CD A	F									9204- 9204- 9204-	
33	GASKET; ENNGAGE SW STARTER 8-94340-486-0		1		A										9204-	
41	SCREW; RR COVER,STARTER 8-94170-216-0 8-97125-853-0 5-81129-181-0 8-97142-903-0 8-97112-883-0		2 2 2 2 2		BC BC D E	 F F									9204-9506 9507- 9204- 9204- 9204-9607	
43	RETAINER; PINION STARTER 8-94377-246-0 5-81129-100-0		1 1		BC E D	F									9204- 9204-	
44	ROLLER; PINION STARTER 5-81129-099-0		5		BCDE	F									9204-	
46	GEAR; CLU STARTER 8-97078-649-0		1	(A)	BC E	F									9204-	


0-65A STARTER

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	88888 99999 47777 30011 74401 08872 59958 86696 36745 13322	88 99 77 11 33 57 34 47 38 21									APPLIED DATE	I T C
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
46	5-81123-011-0		1	(A)	D										9204-	
	8-97112-879-0		1	(B)	E	F									9204-	
	8-97116-490-0		4			G									9906-	
47	SPRING; PINION STARTER															
	8-94377-245-0		1		BC E	F									9204-	
	5-81129-096-0		1		D										9204-	
48	BALL; PINION,STARTER															
	5-81129-092-0		1		BCDE	F									9204-	
	8-97116-515-0		1			G									9906-	
54	CLUTCH; PINION,STARTER															
	8-94335-629-0		1		A										9204-	
	8-97078-653-0		1		BC										9204-	
	5-81124-003-1		1		D										9204-	
	8-97112-870-0		1		E	F									9204-	
	8-97116-488-0		1			G									9906-	
55	PINION; CLU,STARTER															
	8-97137-606-0		1			G									9906-	
58	PIPE; DRAIN RR COVER STARTER															
	8-94377-239-0		1		BC E	F									9204-	
59	TERMINAL; ENGAGE SW STARTER															
	8-94340-485-0		1		A										9204-	
60	PLUNGER; ENGAE SW STARTER															
	8-94340-481-0		1		A										9204-	
61	CONTACT; ENGAGE SW STARTER															
	8-94340-482-0		1		A										9204-	
63	HOLDER; ENGAGE SW STARTER															
	8-94340-470-0		2	(A)	A										9204-	
	8-94340-483-0		1	(B)	A										9204-	
65	RINNG; CLIP ENGAGE SW STARTER															
	8-94340-484-0		1		A										9204-	
66	SCREW; ENGAGE SW STARTER															
	5-81129-199-0		4		A										9204-	
73	STOPPER SET; PINION															
	8-94475-688-0		1			G									9906-	
78	TERMINAL; LEAD WIRE STARTER															
	8-94340-480-0		1		A										9204-	
86	RELAY; STARTER															
	8-94370-656-2		1		A										9204-	
95	BRUSH ASM; STARTER															

0-65A STARTER

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	88888	88									APPLIED DATE	I T C
					99999	99										
					47777	77										
					30011	11										
					74401	33										
					08872	57										
					59958	34										
					86696	47										
					36745	38										
					13322	21										
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
95	8-97116-510-0		2			G									9204-	
114	NUT; TERMINAL															
	8-94109-763-0		1 (A)		BC E	F									9204-	
	5-09400-042-0		1 (A)		D										9204-	
	8-94377-238-0		1 (B)		BCDE	F									9204-	
124	WASHER; STARTER															
	8-94340-490-0		2 (A)		A										9204-	
	8-94340-491-0		2 (B)		A										9204-	
	8-94340-494-0		2 (C)		A										9204-	
	1-81229-182-0		2 (D)		A										9204-	
125	TUBE; STARTER															
	8-94340-492-0		1 (A)		A										9204-	
	8-94340-495-0		1 (B)		A										9204-	

 
8-97048-968-*
8-97112-676-*
8-97125-426-*
8-97225-117-*
8-97231-501-*
8-97233-412-*
8-97305-204-*



0-66A GENERATOR

GENERATOR

 ASM
8-97048-970-※
8-97226-840-※
8-97248-298-※

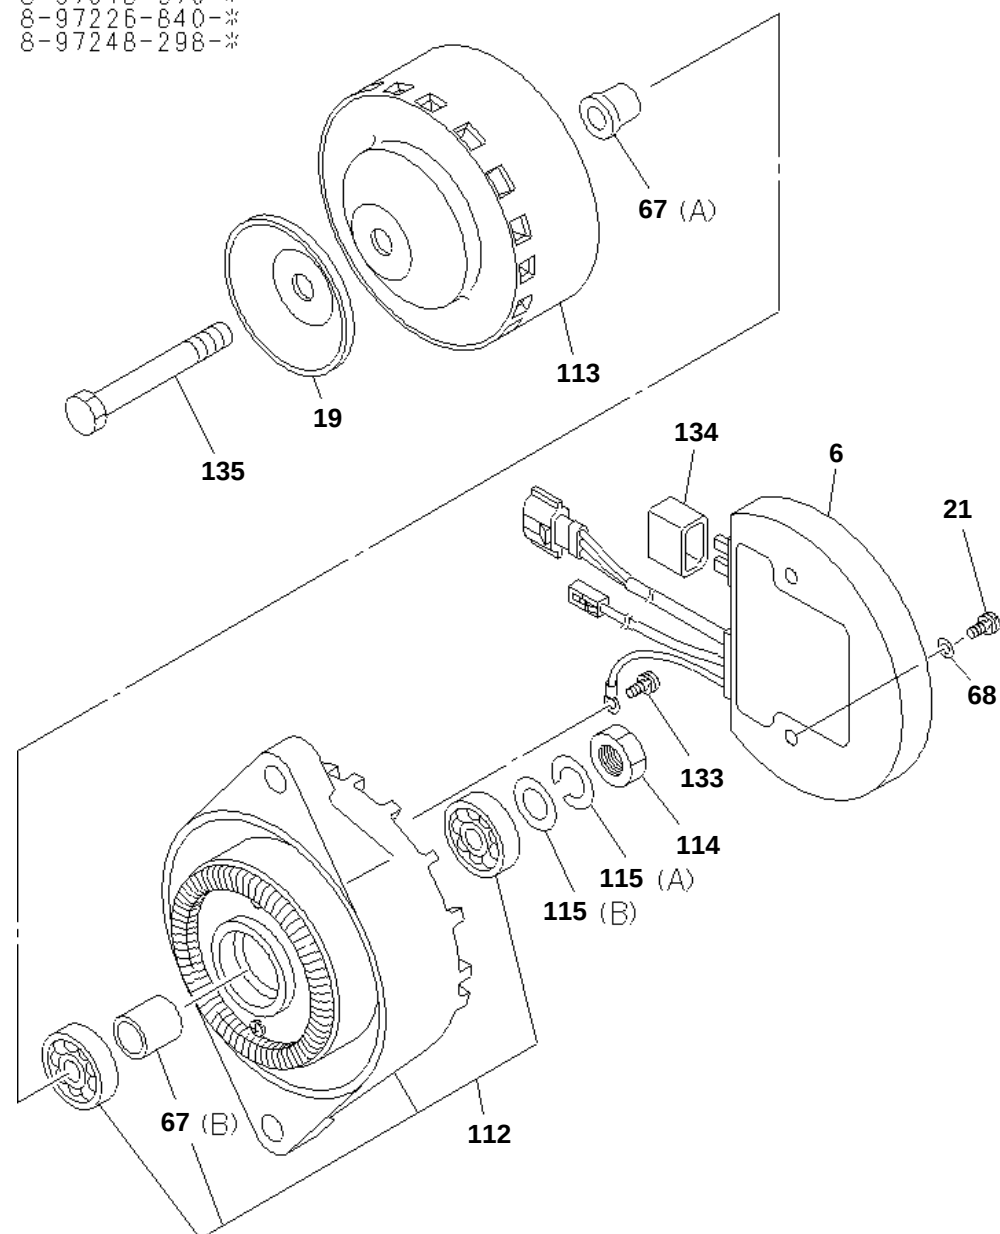


066A0250793

50793 3LD1/3LD2 1992-

0-66A GENERATOR

GENERATOR

 ASM
B-97180-004-※
B-97233-411-※

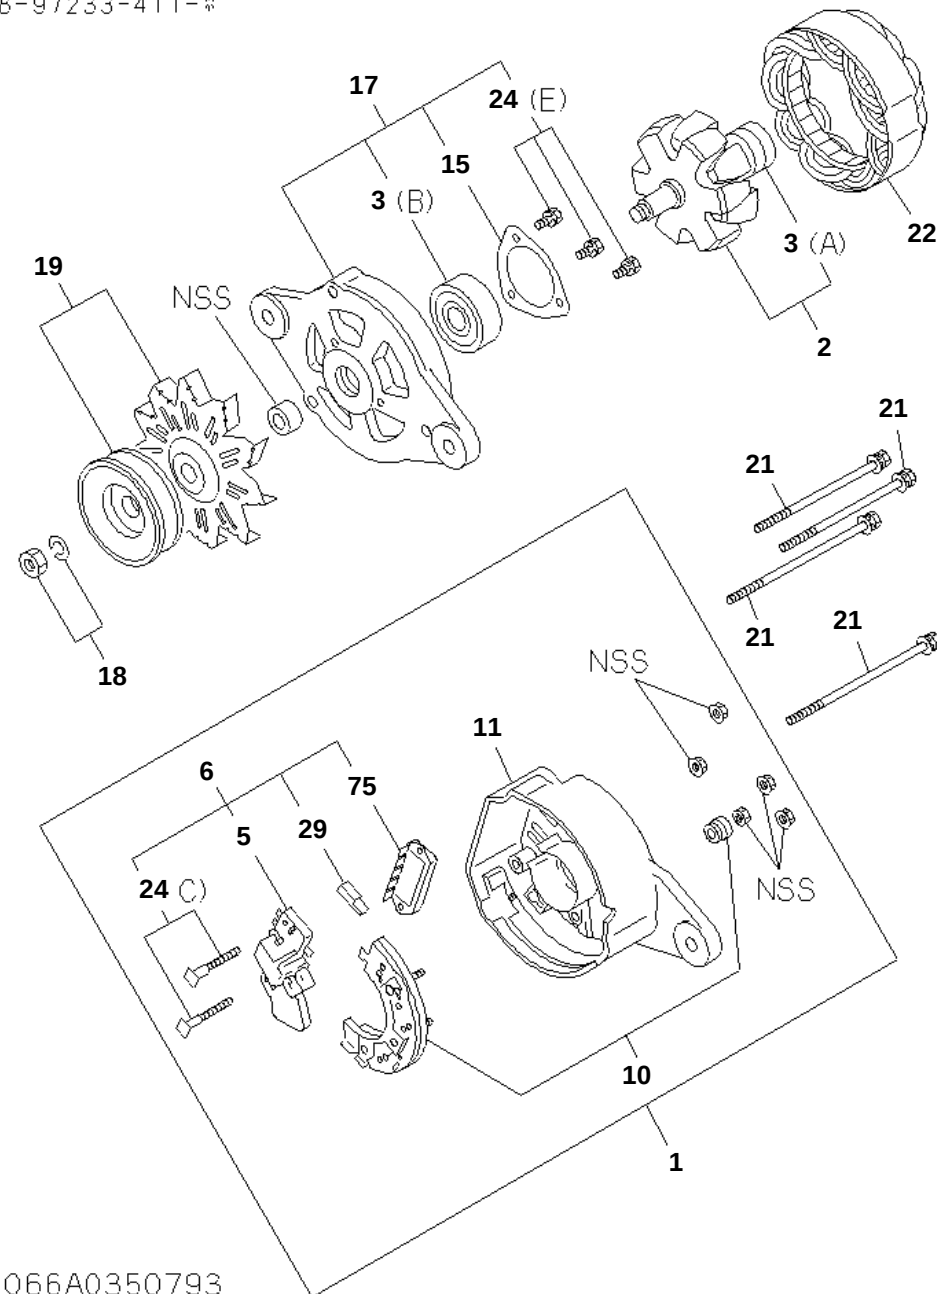

066A0350793

50793 3LD1/3LD2 1992-

0-66A GENERATOR

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	88888	88888	88								APPLIED DATE	I T C
					99999	99999	99									
					77777	77777	77									
					00111	22222	23									
					44128	22333	40									
					88250	56133	85									
					99640	18544	22									
					67720	14011	90									
					80664	70112	84									
					11000	04001	30									
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
1	COVER ASM; RR,GEN															
	8-97072-841-0		1		A C	F J	L								9204-	
	8-97127-196-0		1		D	H									9204-	
	8-97189-169-0		1		E	I									9204-	
2	ROTOR; GEN															
	8-97072-840-0		1		A	F	L								9204-	
	8-97114-742-0		1		C	J									9204-	
	8-97127-195-0		1		D	H									9204-	
	8-94453-249-0		1		E	I									9204-	
3	BEARING; ROTOR,GEN															
	8-97072-838-0		1	(A)	A C D	F H J	L								9204-	
	8-94333-521-0		1	(A)	E	I									9204-	
	8-94135-753-0		1	(B)	A C D	F H J	L								9204-	
	8-97062-654-0		1	(B)	E	I									9204-	
5	HOLDER; BRUSH,GEN															
	8-94159-781-0		1		A C										9204-	
	8-97040-494-0		1		D	F H J	L								9204-	
	8-94453-254-0		1		E	I									9204-	
6	REGULATOR ASM; VOLTAGE,GEN															
	8-94455-160-0		1		A D	F H	L								9204-	
	8-97105-960-0		1		B		K								9204-	
	8-97114-743-0		1		C	J									9204-	
	8-94453-253-0		1		E	I									9204-	
	8-97105-960-0		1			G									9204-0411	
	8-97386-322-0		1			G									0412-	
9	COVER; FELT WASHER,ROTOR,GEN															
	8-94123-051-0		1		A C D	F H J	L								9204-	
10	RECTIFIER; GEN															
	8-97072-842-0		1		A C	F J	L								9204-	
	8-97046-338-0		1		D	H									9204-	
	8-94453-255-0		1		E	I									9204-	
11	COVER; RR,GEN															
	8-97189-170-0		1		E	I									9204-	
15	RETAINER; ROTOR,GEN															
	8-94455-154-0		1		A C D	F H J	L								9204-	
	8-94223-974-0		1		E	I									9204-	
17	COVER ASM; FRT,GEN															
	8-97075-965-0		1		A		L								9204-	
	8-97114-741-0		1		C	J									9204-	

0-66A GENERATOR

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	88888	88888	88								APPLIED DATE	I T C
					99999	99999	99									
					77777	77777	77									
					00111	22222	23									
					44128	22333	40									
					88250	56133	85									
					99640	18544	22									
					67720	14011	90									
					80664	70112	84									
					11000	04001	30									
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
17	8-97127-194-0		1		D										9204-	
	8-97189-171-0		1		E										9204-	
	8-97226-907-0		1			F									9204-	
	8-97241-549-0		1			H									9911-	
	8-97308-918-0		1			I									9204-9911	
	8-97189-171-0		1			I									9912-	
18	NUT; PULLEY,GEN															
	8-97072-835-0		1		A CD	F H J	L								9204-	
	8-94156-601-0		1		E	I									9204-	
19	PULLEY; GEN															
	8-97072-834-0		1		A CD										9204-	
	8-97262-057-0		1		B										9204-	
	8-97130-728-0		1		E										9204-	
	8-97225-334-0		1			F H J	L								9204-	
	8-97229-789-0		1			G	K								9204-	
	8-97308-921-0		1			I									9204-9911	
	8-97262-704-0		1			I									9912-	
21	BOLT; THROUGH,GEN															
	8-94455-164-0		2		A CD	F H J	L								9204-	
	9-0391-0620-0		2		B	G	K								9204-	
	8-94116-435-0		4		E	I									9204-	
22	STATOR; GEN															
	8-94453-250-0		1		E	I									9204-	
24	SCREW; RECTIFIER,GEN															
	8-94123-061-0		2 (A)		A CD	F H J	L								9204-	
	8-94455-162-0		1 (B)		A CD	F H J	L								9204-	
	5-81229-166-0		2 (C)		E	I									9204-	
	8-94455-161-0		6 (D)		A CD	F H J	L								9204-	
	8-94233-653-0		1 (E)		E	I									9204-	
25	BUSHING; INSULATION TERMINAL															
	8-94455-166-0		1		A CD	F H J	L								9204-	
27	NUT; RECTIFIER,GEN															
	8-94123-064-0		2 (A)		A CD	F H J	L								9204-	
	8-94206-186-0		1 (B)		A CD	F H J	L								9204-	
29	BRUSH; GEN															
	8-94123-056-0		2		A CD	F H J	L								9204-	
	5-81215-040-0		2		E	I									9912-	
30	SPRING; BRUSH,GEN															
	8-94123-057-0		2		A CD	F H J	L								9204-	

0-66A GENERATOR


KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	88888	88888	88								APPLIED DATE	I T C										
					99999	99999	99										77777	77777	77	00111	22222	23	44128	22333	40	88250
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX												
36	SCREW; FRT COVER 8-97072-839-0		4		A CD	F H J	L								9204-											
39	COVER; END,RR COVER,GEN 8-97072-843-0		1		A C	F J	L								9204-											
	8-94455-165-0		1		D	H									9204-											
43	SCREW; RR END COVER 8-94455-163-0		3		A CD	F H J	L								9204-											
54	BOLT; RECTIFIER,GEN 8-94455-156-0		2		A CD	F H J	L								9204-											
67	COLLAR; SPACE,GEN 8-97229-783-0		1	(A)	B	G	K								9204-											
	8-97229-784-0		1	(B)	B	G	K								9204-											
68	WASHER; THROUGH BOLT,GEN 9-0916-0506-0		2		B										9204-9708											
75	REGULATOR; VOLTAGE,GEN 5-81251-016-0		1		E	I									9204-											
85	SPACER; PULLEY,GEN 8-97072-836-0		1		A CD	F H J	L								9204-											
112	PLATE ASM; GEN 8-97105-914-0		1		B										9204-9708											
	8-97262-055-0		1		B										9709-											
	8-97229-779-0		1			G									9204-											
	8-97262-720-0		1				K								9204-											
113	FLYWHEEL ASM; GEN 8-97105-916-0		1		B										9204-9708											
	8-97262-056-0		1		B										9709-											
	8-97229-785-0		1			G	K								9204-											
114	NUT; FLYWHEEL,GEN 5-81229-186-0		1		B	G	K								9204-											
115	WASHER; FLYWHEEL,GEN 5-81229-187-0		1	(A)	B	G	K								9204-											
	5-81229-188-0		1	(B)	B	G	K								9204-											
133	SCREW; TERMINAL,GENERATOR 9-0391-0410-0		1		B										9204-											
	9-0391-0410-0		1			G	K								9204-0306											
	8-97369-335-0		1			G	K								0307-											
134	COVER; TERMINAL,GENERATOR 8-97229-788-0		1		B	G	K								9204-											
135	SHAFT; GENERATOR																									

0-66A GENERATOR

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	88888	88888	88									APPLIED DATE	I T C
					99999	99999	99										
					77777	77777	77										
					00111	22222	23										
					44128	22333	40										
					88250	56133	85										
					99640	18544	22										
					67720	14011	90										
					80664	70112	84										
					11000	04001	30										
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX			
135	8-97229-791-0		1		B	G	K									9204-	

0-80A INJECTION PUMP

 INJECTION PUMP

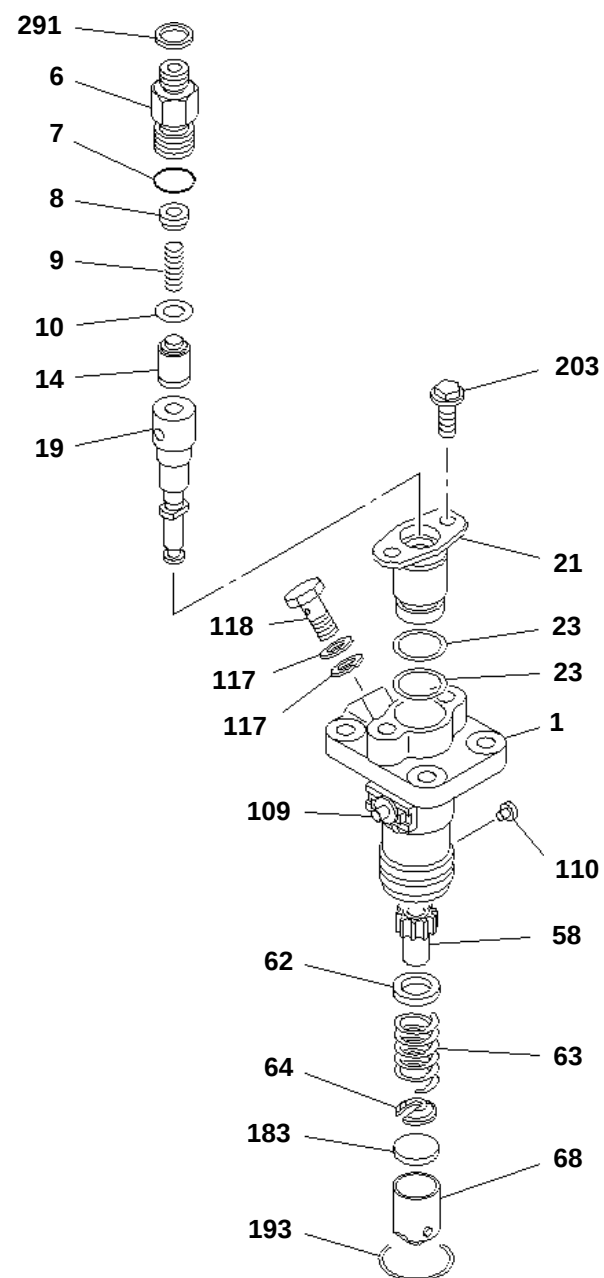

080A0150793

50793 3LD1/3LD2 1992-

0-80A INJECTION PUMP

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	88888 99999 77777 01112 31482 45729 56593 98866 17038 62112	8 9 7 3 1 4 8 9 5 2									APPLIE DATE
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
1	HOUSING; PUMP,FUEL INJ 8-97253-151-0		3		E	F									9906-
6	HOLDER; DELIVERY VLV,INJ PUMP 8-94132-746-1		3		ABCD										9204-
	8-94176-884-0		3		E										9906-
	8-97233-089-0		3			F									0105-
7	GASKET; HOLDER,DELIVERY VLV 8-94128-915-0		3		ABCD										9204-
	8-97253-153-0		3		E	F									9204-
8	STOPPER; DELIVERY VLV,INJ PUMP 8-97083-347-0		3		ABCD										9204-
	8-94128-914-1		3		E										9906-
9	SPRING; DELIVERY VLV 8-94128-911-0		3		ABCD										9204-
	8-94368-934-0		3		E	F									9906-
10	GASKET; DELIVERY VLV,INJ PUMP 8-94128-912-0		3		ABCDE	F									9204-
14	VALVE; DELIVERY,INJ PUMP 8-97083-346-0		3		ABCD										9204-
	8-97223-450-0		3		E										9906-
	8-97322-338-0		3			F									0105-
19	PLUNGER ASM; INJ PUMP 8-97083-345-0		3		A										9204-950
	8-97138-649-0		3		A D										9503-
	8-97130-580-0		3		B										9204-
	8-97170-868-0		3		C										9204-
	8-97253-152-0		3		E										9906-001
	8-97306-064-0		3		E										0011-
	8-97328-375-0		3			F									0105-
21	FLANGE; PLUNGER 8-97083-348-0		3		ABCDE	F									9204-
23	GASKET; PLUNGER,BARREL SIDE 8-94379-692-0		6		ABCD										9204-
	8-97253-154-0		6		E	F									9906-
58	SLEEVE; CONT,INJ PUMP 8-94128-923-0		3		ABCDE										9204-
	8-97324-517-0		3			F									0105-
62	SEAT; PLUNGER SPRING,INJ PUMP 8-94128-920-0		3		ABCDE	F									9204-

50793 3LD1/3LD2 1992-

0-80A INJECTION PUMP

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	88888 99999 77777 01112 31482 45729 56593 98866 17038 62112	8 9 7 3 1 4 8 9 5 2									APPLIE DATE
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
63	SPRING; PLUNGER,INJ PUMP 8-94128-919-0		3		ABCDE	F									9204-
64	SEAT; PLUNGER SPRING LWR,INJ PUMP 8-94128-921-0		3		ABCDE	F									9204-
68	TAPPET; CM/SHF,INJ PUMP 8-94128-916-0		3		ABCD										9204-
	8-97223-449-0		3		E	F									9906-
109	RACK; CONT,INJ PUMP 8-97083-355-3		3		ABCDE	F									9204-
110	PIN; CONT RACK,INJ PUMP 8-97083-349-0		3		ABCDE	F									9204-
117	GASKET; EYE BOLT,INJ PUMP 8-94144-588-0		6	ALSO INCLUDED IN GASKET SET(ENGINE)	ABCD										9204-
	1-15639-008-0		6		E	F									9204-
118	BOLT; EYE,FUEL INL,INJ PUMP 8-94379-688-0		3		ABCDE	F									9204-
183	SHIM; TAPPET,INJ PUMP 8-94128-931-0	AR	T=2.60		ABCDE	F									9204-
	8-94128-932-0	AR	T=2.65		ABCDE	F									9204-
	8-94128-933-0	AR	T=2.70		ABCDE	F									9204-
	8-94128-934-0	AR	T=2.75		ABCDE	F									9204-
	8-94128-935-0	AR	T=2.80		ABCDE	F									9204-
	8-94128-936-0	AR	T=2.85		ABCDE	F									9204-
	8-94128-937-0	AR	T=2.90		ABCDE	F									9204-
	8-94128-938-0	AR	T=2.95		ABCDE	F									9204-
	8-94128-939-0	AR	T=3.00		ABCDE	F									9204-
	8-94128-940-0	AR	T=3.05		ABCDE	F									9204-
	8-94128-941-0	AR	T=3.10		ABCDE	F									9204-
	8-94128-942-0	AR	T=3.15		ABCDE	F									9204-
	8-94128-943-0	AR	T=3.20		ABCDE	F									9204-
	8-94128-944-0	AR	T=3.25		ABCDE	F									9204-
	8-94128-945-0	AR	T=3.30		ABCDE	F									9204-
	8-94128-946-0	AR	T=3.35		ABCDE	F									9204-
	8-94128-947-0	AR	T=3.40		ABCDE	F									9204-
	8-94128-948-0	AR	T=3.45		ABCDE	F									9204-
	8-94128-949-0	AR	T=3.50		ABCDE	F									9204-
	8-94128-950-0	AR	T=3.55		ABCDE	F									9204-
	8-94128-951-0	AR	T=3.60		ABCDE	F									9204-
	8-94128-952-0	AR	T=3.65		ABCDE	F									9204-

0-80A INJECTION PUMP


KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	88888	8									APPLIEI DATE
					99999	9									
					77777	7									
					01112	3									
					31482	1									
					45729	4									
					56593	8									
					98866	9									
					17038	5									
					62112	2									
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
183	8-94128-953-0		AR	T=3.70	ABCDE	F									9204-
	8-94128-954-0		AR	T=3.75	ABCDE	F									9204-
	8-94128-955-0		AR	T=3.80	ABCDE	F									9204-
	8-94128-956-0		AR	T=3.85	ABCDE	F									9204-
	8-94128-957-0		AR	T=3.90	ABCDE	F									9204-
	8-94128-958-0		AR	T=3.95	ABCDE	F									9204-
	8-94128-959-0		AR	T=4.00	ABCDE	F									9204-
	8-94128-960-0		AR	T=4.05	ABCDE	F									9204-
	8-94128-961-0		AR	T=4.10	ABCDE	F									9204-
	8-97225-955-0		AR	T=2.62	ABCDE	F									9812-
	8-97225-956-0		AR	T=2.67	ABCDE	F									9812-
	8-97225-957-0		AR	T=2.72	ABCDE	F									9812-
	8-97225-958-0		AR	T=2.77	ABCDE	F									9812-
	8-97225-959-0		AR	T=2.82	ABCDE	F									9812-
	8-97225-960-0		AR	T=2.87	ABCDE	F									9812-
	8-97225-961-0		AR	T=2.92	ABCDE	F									9812-
	8-97225-962-0		AR	T=2.97	ABCDE	F									9812-
	8-97225-964-0		AR	T=3.02	ABCDE	F									9812-
	8-97225-965-0		AR	T=3.07	ABCDE	F									9812-
	8-97225-966-0		AR	T=3.12	ABCDE	F									9812-
	8-97225-967-0		AR	T=3.17	ABCDE	F									9812-
	8-97225-968-0		AR	T=3.22	ABCDE	F									9812-
	8-97225-969-0		AR	T=3.27	ABCDE	F									9812-
	8-97225-970-0		AR	T=3.32	ABCDE	F									9812-
	8-97225-971-0		AR	T=3.37	ABCDE	F									9812-
	8-97225-972-0		AR	T=3.42	ABCDE	F									9812-
	8-97225-973-0		AR	T=3.47	ABCDE	F									9812-
	8-97225-974-0		AR	T=3.52	ABCDE	F									9812-
	8-97225-976-0		AR	T=3.57	ABCDE	F									9812-
	8-97225-977-0		AR	T=3.62	ABCDE	F									9812-
	8-97225-978-0		AR	T=3.67	ABCDE	F									9812-
	8-97225-979-0		AR	T=3.72	ABCDE	F									9812-
	8-97225-980-0		AR	T=3.77	ABCDE	F									9812-
	8-97225-981-0		AR	T=3.82	ABCDE	F									9812-
	8-97225-982-0		AR	T=3.87	ABCDE	F									9812-
	8-97225-983-0		AR	T=3.92	ABCDE	F									9812-
	8-97225-984-0		AR	T=3.97	ABCDE	F									9812-
	8-97225-985-0		AR	T=4.02	ABCDE	F									9812-
	8-97225-986-0		AR	T=4.07	ABCDE	F									9812-

0-80A INJECTION PUMP

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	88888	8									APPLIE DATE
					99999	9									
					77777	7									
					01112	3									
					31482	1									
					45729	4									
					56593	8									
					98866	9									
					17038	5									
					62112	2									
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
193	RING; SNAP 8-97083-350-0		3		ABCDE	F									9204-
203	BOLT; FUEL INL 8-94379-691-0		6		ABCDE	F									9204-
291	RING; DELIVERY VLV 8-97170-869-0		3		C										9204-

0-89A TIMING CHAIN CASE

 
TIMING CHAIN CASE

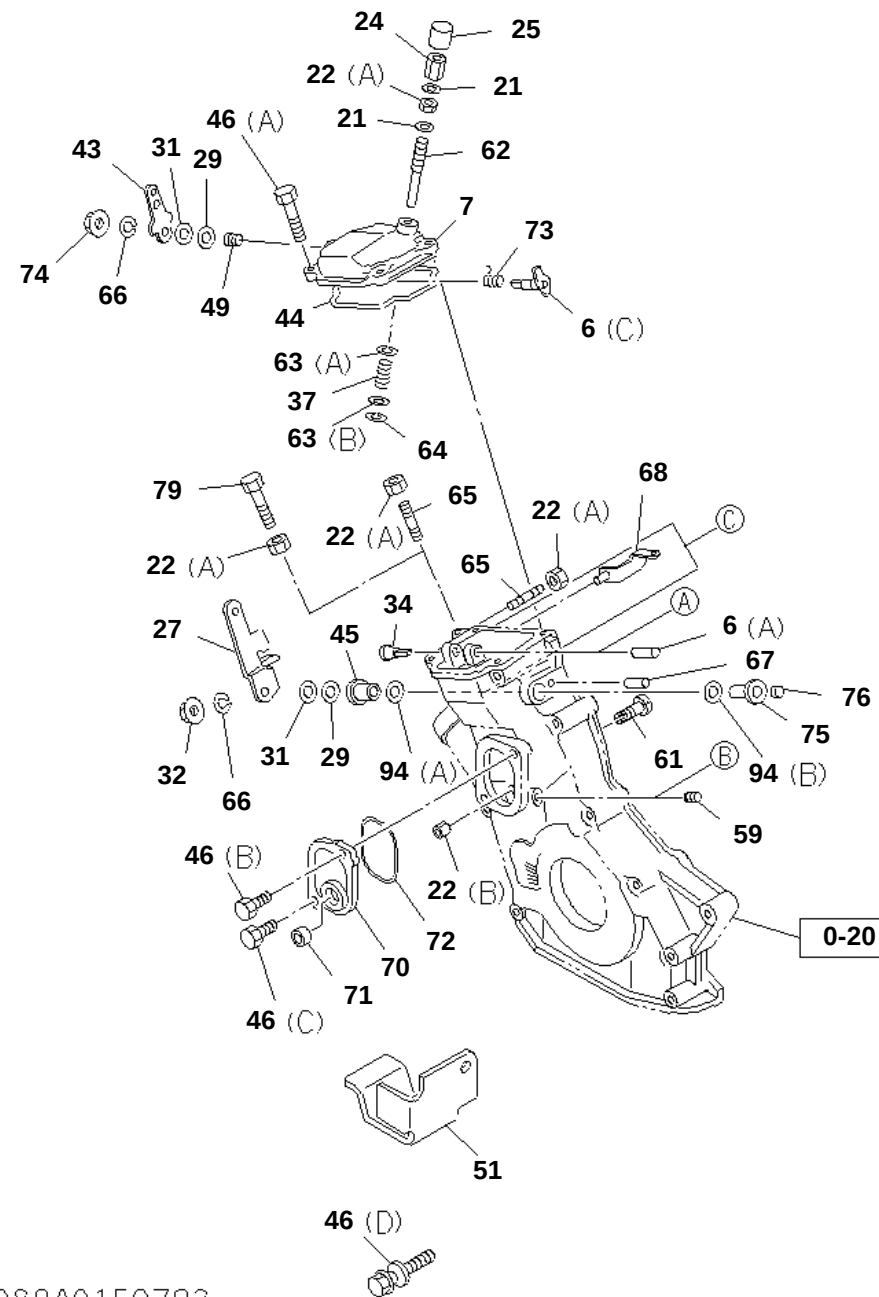

089A0150793

50793 3LD1/3LD2 1992-

 TIMING CHAIN CASE

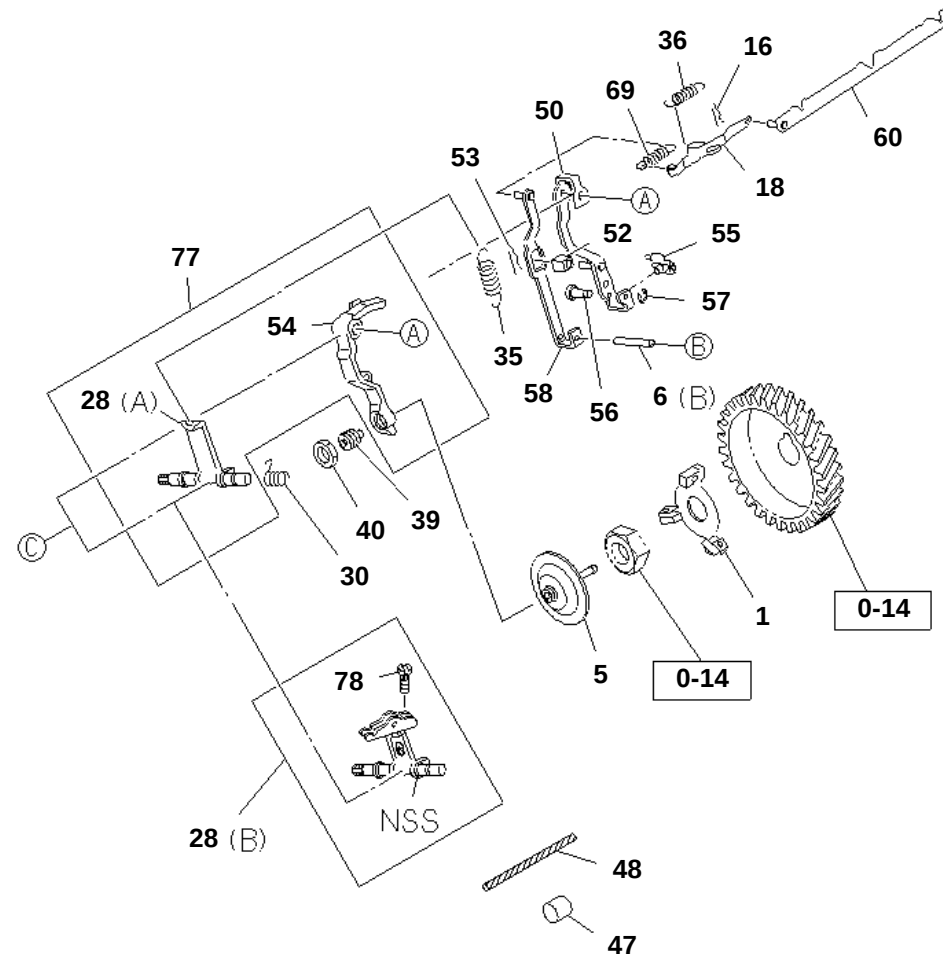

089A0250793

50793 3LD1/3LD2 1992-

0-89A TIMING CHAIN CASE

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPL DATE
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDDDE AAAAA 11110 01231 U A	EEEEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567	
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
1	FLYWEIGHT														
	8-97045-617-5		1		ABCD	GHI	K O	PQRST	WXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9
	8-97247-901-1		1		ABCD	GHI	K NO	PQRST	WXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0001-0
	8-97309-550-0		1		ABCD	GHI	K NO	PQRST	WXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0102-0
	8-97318-372-0		1		ABCD	GHI	K NO	PQRST	WXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0106-0
	8-97363-269-0		1		ABCD	GHI	K NO	PQRST	WXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0212-0
	8-97116-103-0		1		E	F J	L		UV						9204-9
	8-97215-358-1		1		E										9901-0
	8-97210-787-1		1		E										0003-0
	8-97309-671-0		1		E										0102-0
	8-97310-452-1		1		E										0307-0
	8-97215-358-1		1			F J	L		UV						9901-0
	8-97307-415-0		1			F J	L		UV						0102-0
	8-97310-452-1		1			F J	LM		UV						0106-0
5	SLEEVE; FLYWEIGHT														
	8-97062-277-2		1						W						9204-9
	8-97084-977-1		1		ABCD		O		U WXY	ZABCD	EFGHI	JK			9206-9
	8-97147-489-3		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9604-9
6	SHAFT; LEVER														
	9-0816-0850-0		1 (A)		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9
	9-0816-0545-0		1 (B)		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9
	8-97016-446-0		1 (C)		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9
7	COVER; GOV SHAFT														
	8-97102-514-1		1		ABCD	G	O	Q							9204-9
	8-97106-274-0		1		E	F			U						9204-9
	8-97034-636-2		1						WXY	ABC	FG				9204-9
	8-97102-514-1		1						WXY	ZABCD	EFGHI	JKLMN	OPQRS		9607-9
	8-97161-745-1		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9702-9
16	PIN; LEVER TO LINK PLATE														
	1-09747-002-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9
18	PLATE; LINK,LEVER TO PUMP														
	8-97034-639-3		1		ABCD		O		U WXY	ZABCD	EFGHI	JKLMN			9204-9
	8-97148-550-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9607-9
21	GASKET; SCREW														
	5-09503-132-1		2		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9
22	NUT; SCREW														
	9-0911-1406-0		3 (A)		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9
	9-0911-0406-0		1 (B)		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9
24	NUT; CAP,SCREW														
	5-09400-048-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9
25	CAP; IDLE SET														
	5-15669-002-1		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-9

0-89A TIMING CHAIN CASE

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPL DAT
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567	
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
27	LEVER; CONT 8-97049-328-1		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
28	LEVER; MAIN SPR 8-97034-642-4 8-97034-642-4 8-97160-572-1 8-97160-572-1		1 (A) 1 (A) 1 (B) 1 (B)		A C B D B D E	GH	NO	PQRST	WXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204- 9204- 0312- 9204-
29	GASKET; SHAFT,CONT 1-09623-055-0		2	ID=9.8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
30	SPRING; RETURN,CONT 8-97016-940-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
31	WASHER; THRUST,LEVER 5-09503-135-0		2		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
32	NUT; LEVER TO SHAFT 0-9115-0208-0 9-0911-0508-0		1 1		ABCDE	FGHIJ	KLMNO	PQRST	WXY UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204- 9207-
34	EYE; START SPR 5-15729-239-2		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
35	SPRING; MAIN,LEVER 8-97076-904-0 8-97069-890-1 8-97109-759-0 8-97148-557-0 8-97109-759-0 8-97109-759-0 8-97076-905-0 8-97131-473-0 8-97069-891-1 8-97076-903-0 8-97076-640-1 8-97167-974-0		1 1 1 1 1 1 1 1 1 1 1 1 1		AB D C E E E	GHI	N O	PQRST			F I	J		W	9204- 9204- 9204- 0003- 0307- 9204- 9204- 9204- 9204- 9204- 9204- 9204- 9703-
36	SPRING; START 8-97084-325-1 8-97149-603-1 8-97034-643-3 8-97034-643-3		1 1 1 1		ABCD E E	GH	N		WXY	ABCD	EFGH	JKLMN	OPQRS	TUV X	9204- 9204- 0307- 9204-
37	SPRING; IDLE 8-97082-114-1 8-97137-564-2 8-97016-936-1 8-97171-243-0 8-97016-936-2		1 1 1 1 1		ABCD ABCD E E E	GHI GHI	K N K N			A A			Q S Q S		9204- 9911- 9407- 0003- 0307-

0-89A TIMING CHAIN CASE

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPL DATE		
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567			
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX			
37	8-97016-936-2		1	ALSO INCLUDED IN GASKET SET(ENGINE)		F J	LM		UV	BC	E G			T V X	9204-		
	8-97082-114-1		1				O	PQRST	W	Z D	F H	JKLM	O R	U W	9204-		
	8-97082-114-1		1						XY						9204-		
	8-97016-936-2		1						XY						9610-		
	8-97137-564-2		1								I	N	P		9204-		
39	ANGLEICH KIT																
	8-97102-125-0		1		ABCD	GH	N									9204-	
	8-97109-034-0		1			I	K									9204-	
	8-97109-682-0		1				O	PQRST								9204-	
	8-97073-241-1		1						WXY	Z BCD	G	KL N	OPQR	TUV X	9204-		
	8-97094-471-0		1							A	H		S			9204-	
	8-97105-686-0		1								E					9204-	
	8-97109-682-0		1								F					9204-	
	8-97191-807-0		1								I					9204-	
	8-97136-184-0		1									J			W	9204-	
	8-97091-889-0		1									M				9204-	
40	NUT; HOLDER																
	8-94130-438-0		1		ABCD	GHI	K NO	PQRST	WXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-		
43	LEVER; FUEL CUT																
	8-97016-449-2		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-		
	8-97303-454-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0103-		
44	GASKET; COVER				ALSO INCLUDED IN GASKET SET(ENGINE)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
	8-97064-688-1		1			ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
45	BUSHING; GEAR CASE TO CONT LEVER																
	8-94369-545-0		1		ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-		
	8-97262-883-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0011-		
46	BOLT; COVER																
	0-2808-0620-0		4		(A)	ABCDE	FGHIJ	KL NO	PQRST	UVW Y	Z BCD	EFG I	JKLMN	OP R	TUVWX	9204-	
	0-2808-0620-0		3		(A)			M		X	A	H		Q S		9204-	
	0-2808-0614-0		1		(B)	ABCDE	FG IJ	KLMN	QRS	U W Y	Z BCD	EFG I	JKLMN	OP R	TUVWX	9204-	
	8-97072-830-0		1		(C)	ABCDE	FG IJ	KLMN	QRS	U W Y	Z BCD	EFG I	JKLMN	OP R	TUVWX	9204-	
	8-97132-291-2		2		(D)		H	M O	P T	V X	A	H		Q S		9204-	
	8-97132-292-2		1		(D)		H	O	P T	V X	A	H		Q S		9204-	
					M6X22												
47	SEAL; LEAD																
	1-15739-002-0		1			ABCDE	FG IJ	KL N	QRS	U						9204-	
	1-15739-002-0		2							W Y	Z BCD	EFG I	JKLMN	OP R	TUVWX	9204-	

0-89A TIMING CHAIN CASE

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1											APPL DAT
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDDDE AAAAA 11110 01231 U A	EEEEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE ABCDE	FGHIJ FG IJ	KLMNO KL N	PQRST QRS	UVWXY U W Y	ZABCD Z BCD	EFGHI EFG I	JKLMN JKLMN	OPQRS OP R	TUVWX TUVWX		
47	1-15739-008-0		1	PT 1/4	ABCDE ABCDE	FGHIJ FG IJ	KLMNO KL N	PQRST QRS	UVWXY U W Y	ZABCD Z BCD	EFGHI EFG I	JKLMN JKLMN	OPQRS OP R	TUVWX TUVWX	0409- 0409-	
48	1-15739-008-0		2													
48	WIRE; LEAD SEAL															
	9-81325-446-0		1		ABCDE	FG IJ	KL N	QRS	U W Y	Z BCD	EFG I	JKLMN	OP R	TUVWX	9204- 9204-	
	9-81325-446-0		2													
49	PLUG; COVER,GEN															
	1-09605-019-0		1			ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
50	LEVER; GUIDE															
	8-97034-594-5		1			ABCDE	FGHIJ	KL NO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-(
	8-97303-577-2		1			ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0010-
51	COVER; ADJ															
	8-97125-974-0		1			H	M O	P T	V X	A	H		Q S		9204-(	
	8-97358-000-0		1			H	M O	P T	V X	A	H		Q S		0212-	
52	PIECE; GUIDE															
	8-97071-806-2		1		ABCD		O		U WXY	ZABCD	E				9204-(	
	8-97112-265-0		1		ABCDE	FGHIJ	KL NO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9405-(	
	8-97303-583-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0011-	
53	PIN; GUIDE LEVER															
	1-09747-002-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
54	LEVER; TENSION,GOV															
	8-97034-637-6		1		A C	GH	NO	PQRST	WXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-(	
	8-97034-637-6		1		B D										9204-(	
	8-97160-574-3		1		B D										0312-	
	8-97160-574-3		1		E	F IJ	KLM		V U U						9204-(	
	8-97105-910-0		1												9204-(	
	8-97160-574-3		1												9607-	
55	SHIFTER; GOV															
	8-97034-638-3		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
56	SHAFT; SHIFTER															
	9-08213-625-0		1		ABCDE	FGHIJ	KL NO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-(	
	8-97303-667-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0011-	
57	RING; SNAP,SHAFT															
	9-0918-5404-0		1	ID=4	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
58	LEVER; FLOATING															
	8-97062-422-2		1		ABCDE		O		U WXY	ZABCD	EFGHI	JKLMN			9204-(	
	8-97148-548-0		1		ABCDE	FGHIJ	KL NO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9607-(	
	8-97303-580-2		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0011-	
59	PLUG; SHAFT,FLOATING LEVER															
	1-09605-050-0		1	PT 1/8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-	
60	LINK; CONT,INJ PUMP															
	8-97073-242-3		1		AB				WXY	ZA					9204-(	
	8-97106-207-1		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9312-	

0-89A TIMING CHAIN CASE

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPL DAT
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567	
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
61	SCREW; SET,FULL LOAD 8-97039-584-1		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
62	SCREW; SET,IDLE SPR 8-97016-441-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
63	WASHER; IDLE SPR 9-0916-0504-0		1	(A) ID=4	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
	9-0916-0704-0		1	(B) ID=4	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
64	RING; SNAP,SET SCREW 9-0918-5403-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
65	SCREW; CONT SET SPEED 8-94317-638-1		2	L=38	ABCDE	FGHIJ	KLMNO	PQRST	UV Y	BC	E G I	J LMN	P R		9204-
	8-94317-638-1		2	L=38					WX	ZA D	F H	K	O Q S	TUVWX	9204-
	8-94317-638-1		1	L=38					WX	ZA D	F H	K	O Q S	UVWX	0109-
	5-09120-015-1		1	L=28								N	P	T	9204-
66	WASHER; LK 9-0915-0508-0		2	ID=8.2	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9207-
67	PIN; SPR,CONT 9-0816-0436-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
68	BRACKET; START SPR 8-97047-052-1		1					Q		Z	I	J LMN	P R		9204-
69	SPRING; SET 8-97083-714-1		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
70	COVER; ANGLEICH 8-97039-264-4		1		ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
	8-97226-841-1		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9911-
	8-97307-467-1		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0105-
71	CUP; SEALING 5-11129-006-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
72	GASKET; COVER,ANGLEICH 9-0956-1253-0		1	ALSO INCLUDED IN GASKET SET(ENGINE)	ABCDE	FGHIJ	KL O	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
	8-97226-842-1		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9911-
73	SPRING; FUEL CUT 8-97039-546-1		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
74	NUT; SHAFT 9-0911-0508-0		1	M8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
75	BUSHING; LEVER,MAIN SPR 8-97038-802-1		1		ABCDE	FGHIJ	KL NO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
	8-97262-817-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0011-
76	CUP; SEALING,BUSHING 8-94454-615-0		1		ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-


50793 3LD1/3LD2 1992-

0-89A TIMING CHAIN CASE

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPL DAT
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567	
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
77	LEVER KIT; GOV 8-97093-549-4		1		A C	GH	NO	PQRST	WXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	9204-
	8-97093-549-4		1		B D										9301-
78	ADJUSTER; GOV 8-97105-909-0		1		E	F IJ	KLM		UV						9204-
79	BOLT; CONT SET SPEED 0-2080-0655-0		1			I	K								9711-
94	GASKET; BUSH 9-0956-5114-0		1	(A)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0011-
	9-0956-5116-0		1	(B)	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	0011-
0-20	Move to 0-20														
	Move to 0-20														
	Move to 0-20														
0-14	Move to 0-14														
	Move to 0-14														
	Move to 0-14														

8-10A WIRING HARNESS AND FUSE

 WIRING HARNESS AND FUSE

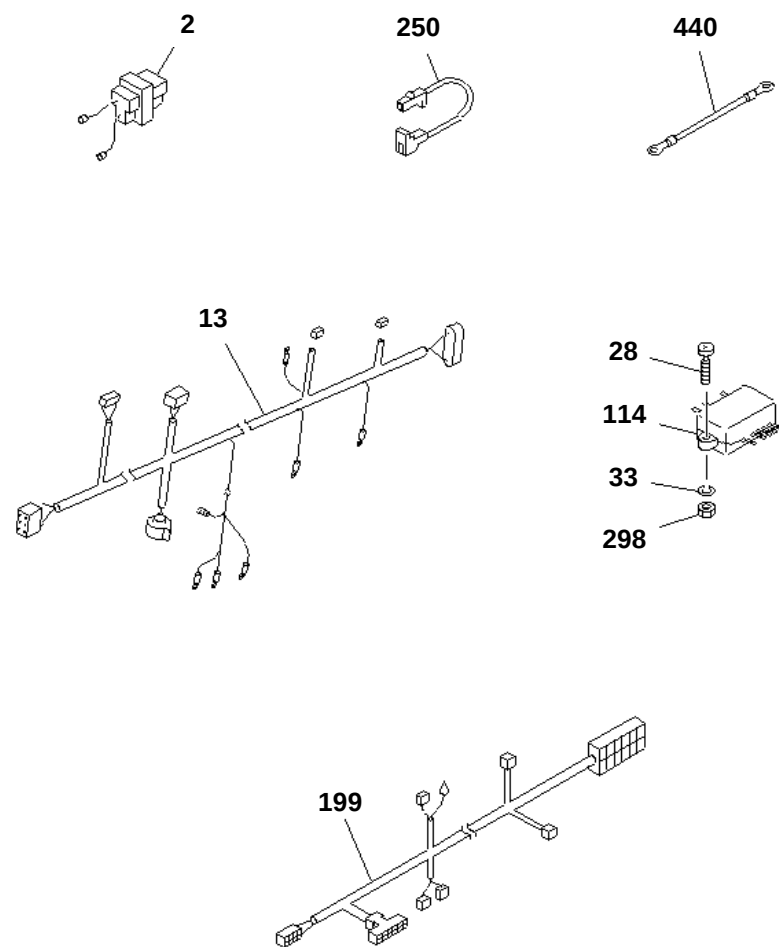

810A0150793


50793 3LD1/3LD2 1992-

8-10A WIRING HARNESS AND FUSE

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
2	DIODE; CABLE HARNESS		1									M			9204-	
13	HARNESS; ENG		1				O	PQRST	UV						9204-	
199	HARNESS; STARTER		1					T	U						9906-	
250	WIRE; FUSIBLE LINK		1				L					K			9204-	

8-15A FIXING PARTS; WIRING HARNESS

 FIXING PARTS; WIRING HARNESS

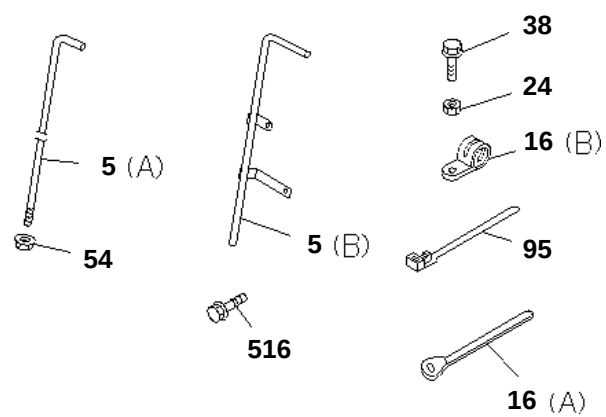

815A0150793



50793 3LD1/3LD2 1992-

8-15A FIXING PARTS; WIRING HARNESS

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
16	CLIP; HARNESS 8-94167-739-1		2	(B)			O	PQRST	UV						9204-	A
38	BOLT; CLIP,HARNESS 0-2808-1016-0		2	M10X16 FLANGE			O		U						9204-9404	
	0-2818-1018-0		2	M10X18 FLANGE			O	PQRST	UV						9405-	
95	CLIP; CABLE 5-09707-036-1		1				O	PQRST	UV						9204-	

8-21A METER ASM

  METER ASM

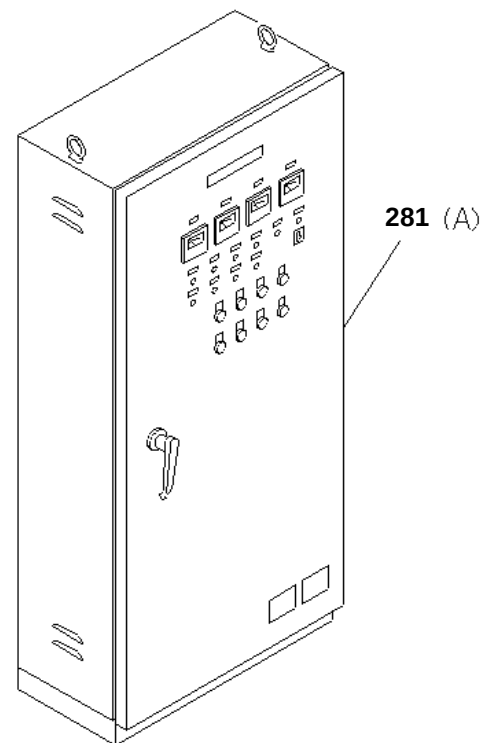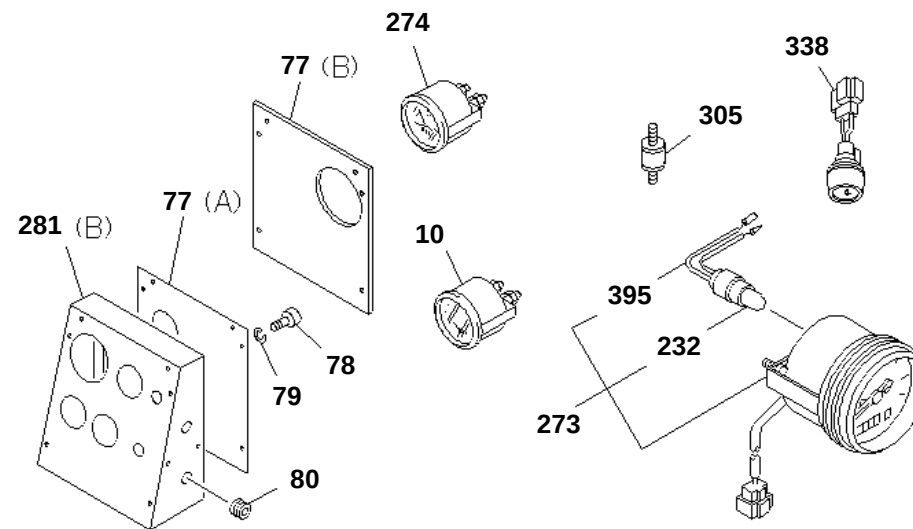

821A0150793



50793 3LD1/3LD2 1992-

8-21A METER ASM

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
10	METER; THERMO 9-83150-204-0		1			I	K								9204-	
232	BULB; TACHOMETER 8-97232-185-0		1			I					F	LMN	P	X	9204-	
273	METER ASM; TACHO 8-94425-749-1		1			I					F	LMN	P	X	9204-9908	C
	8-97238-628-0		1			I					F	LMN	P	X	9909-	
	8-97238-627-0		1					T							0104-	
274	METER; OIL PRESSURE 9-83140-187-0		1			I	K								9204-9906	
	1-83140-055-1		1			I	K								9907-	
338	INDICATOR; GLOW 5-82250-008-2		1		E		L				F I	J M			9204-	
395	HARNESS; TACHOMETER 8-97232-197-0		1			I					F	LMN	P	X	9204-	

8-25A SWITCH AND RELAY; INSTRUMENT PANEL

  SWITCH AND RELAY; INSTRUMENT PANEL

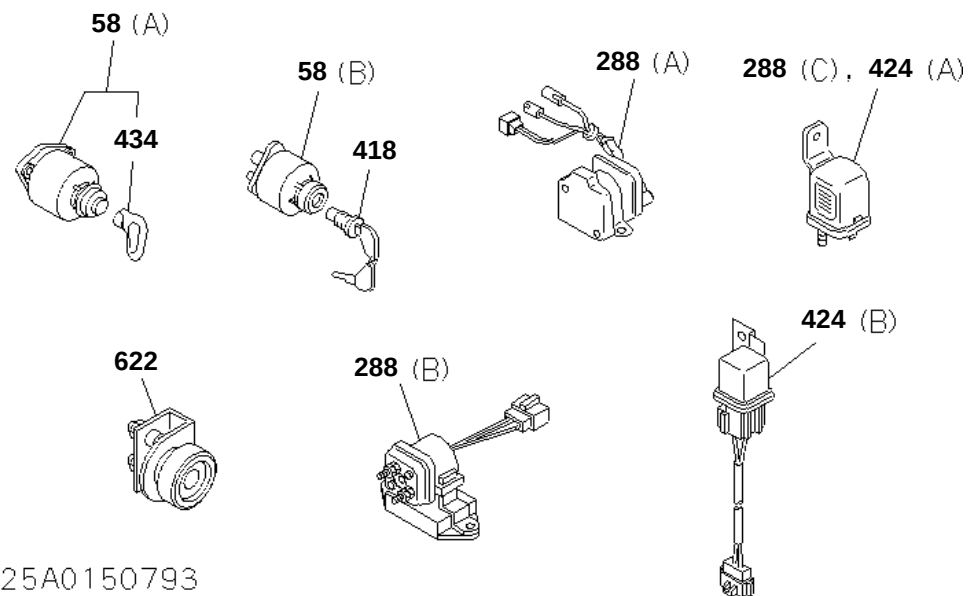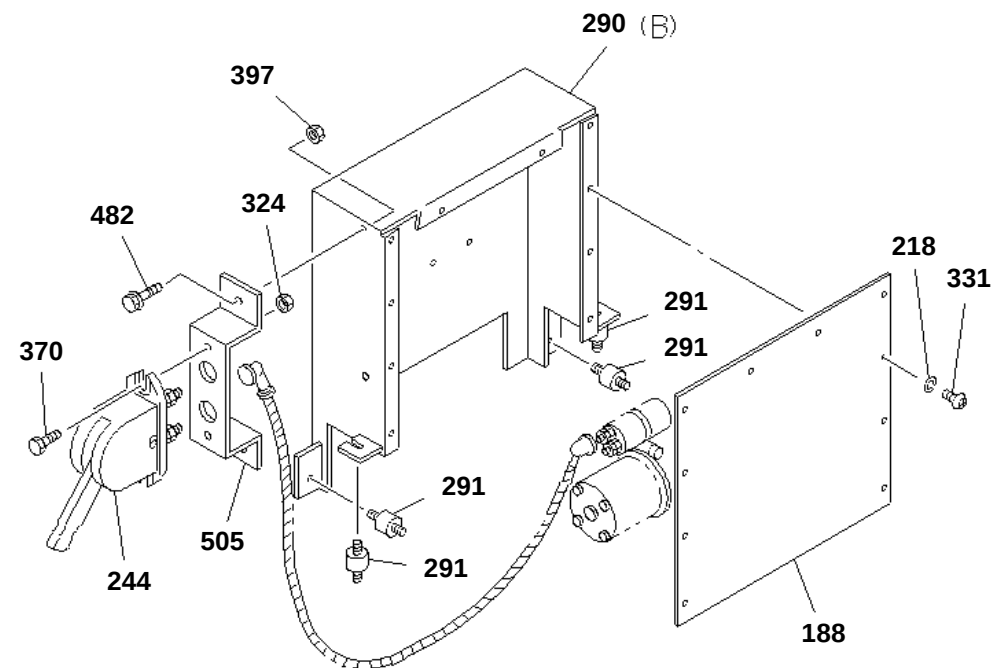


825A0150793

50793 3LD1/3LD2 1992-

8-25A SWITCH AND RELAY; INSTRUMENT PANEL

 SWITCH AND RELAY; INSTRUMENT PANEL

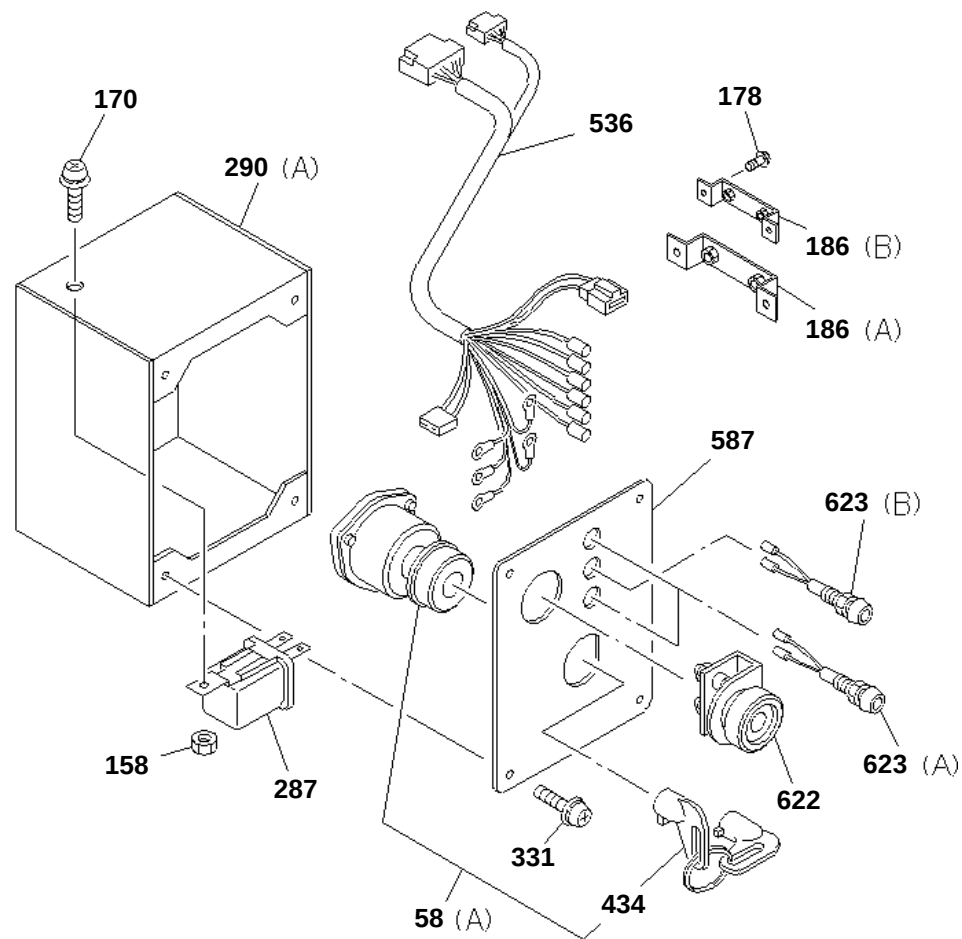

825A0250793

50793 3LD1/3LD2 1992-

8-25A SWITCH AND RELAY; INSTRUMENT PANEL


KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
58	SWITCH; IGNITION		1 (A)		BCDE	GH F	N LM O O	PQRS PQRST	V U U	Z Z	F	M		W X	9204-	C
	8-97044-418-0		1 (A)												9204-	
	8-94402-500-0		1 (A)												9204-9610	
	1-82310-006-0		1 (A)												9611-	
	8-94402-500-0		1 (A)													
158	NUT; RELAY		1													
	9-0911-0406-0		2												9204-0103	
	9-0911-0406-0		2												0104-	
170	SCREW; RELAY		1													
	9-0392-0612-0		2												9204-	
	9-0392-0612-0		2												9204-9807	
	9-0392-0612-0		2												9204-	
	9-0349-4614-0		1												0111-	
178	SCREW; BRKT		4													
	8-94419-964-0		4												9204-	
186	BRACKET; RELAY BOX		1 (A)													
	8-94410-134-0		1 (B)												9204-	
	8-97110-858-1		1												9204-	
244	SWITCH; BATTERY		1			J	K							U		
	1-82320-001-0		1												9204-	
287	RELAY ASM		2													
	5-82550-029-0		1 (B)												9204-	
	8-97115-234-1		1 (A)												9204-	
	8-97040-416-0		1												9204-9205	
290	BOX ASM; RELAY		1 (A)													
	8-97110-855-0		1 (A)												9204-0110	
	8-97327-602-0		1 (A)												0111-	
	8-94410-138-1		1 (A)												9204-0110	
	8-97327-601-0		1 (A)												0111-	
331	SCREW		4													
	9-0392-0510-0		4												9204-0205	
	9-0392-0512-0		4												9204-0205	
	9-9708-6510-0		4												0206-	
424	RELAY		3 (A)		BCD BCD E	F G H	MNO	QRS	XY	ZABCD	EFGHI	JKLM	O QRS	T V X	9204-9501	
	5-82550-029-0		2 (A)												9502-9905	
	5-82550-029-0		1 (A)												9204-	
	5-82550-029-0		3 (A)												9204-	
	5-82550-029-0		4 (A)												9204-9608	
	5-82550-029-0		4 (A)												9204-	
	5-82550-029-0		2 (A)												9501-	
	5-82550-029-0		2 (A)													

8-25A SWITCH AND RELAY; INSTRUMENT PANEL

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDE AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
434	KEY; STARTER SW 1-82316-007-0 8-94402-498-0 1-82316-007-0 8-94402-498-0		1 1 1 1		BCDE	GH F	N L O O	QRST	V U U	Z Z	F	M		W X	9204- 9204- 9204-9610 9611-	
536	HARNESS; SW 8-97107-695-2 8-97110-860-2		1 1				O	PQRS T	UV						9204- 9204-	
587	PANEL; SW 8-97110-856-3 8-97110-857-1 8-97327-600-1		1 1 1				O	PQRST	UV UV						9204- 9204-0110 0111-	
622	RESISTANCE; CONTROL 1-81402-007-0 8-94173-949-0		1 1			F I J		P T	UV				R	X	9204- 9204-	
623	LAMP ASM; PILOT 8-94131-523-0 8-94131-723-0		2 1	(A) RED (B) AMBER			O O	PQRST PQRST	UV UV						9204- 9204-	

8-26A ELECTRICAL CONTROL AND OTHER PARTS

 ELECTRICAL CONTROL AND OTHER PARTS

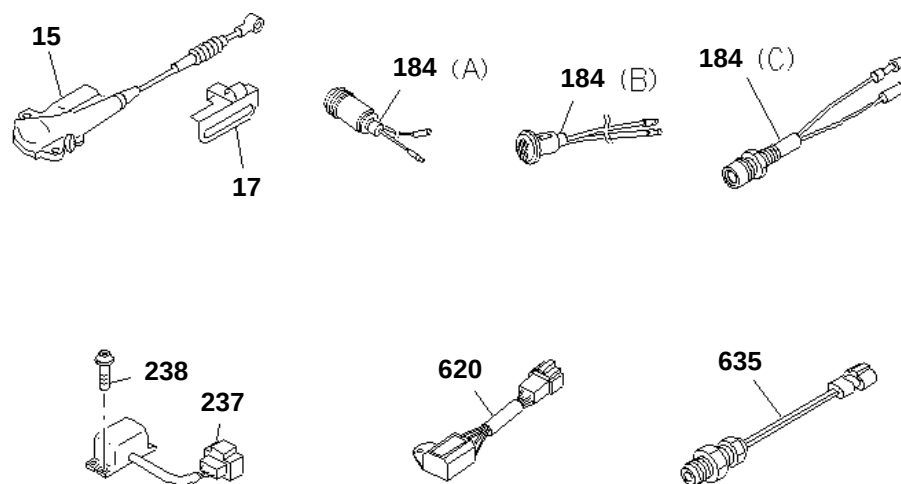

826A0150793

50793 3LD1/3LD2 1992-

8-26A ELECTRICAL CONTROL AND OTHER PARTS

KEY	PART NAME PART NUMBER	L / R	Qty	REMARKS	3LD1										APPLIED DATE	I T C
					DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	DDDD AAAAA 11110 01231 U A	EEEE AAAAA 00000 23456 UUUUU AAAAA	GGPPP AAAAA 00 00 12 12 UU AA	PPPPP AAAAA 00000 34567	PPPPP AAAAA 00111 89012	PPPPP AAAAA 11111 34567	PPPPP AAAAA 11222 89012	PPPPP AAAAA 22222 34567		
					ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX		
15	ACTUATOR; ENG STOP 1-82840-136-1		1			J									9204-	
17	CLIP; ACTUATOR TO HARNESS 8-94154-861-0		1			J									9204-	
184	LAMP ASM; PILOT,RED 8-94131-523-0		2	(C) RED				T	UV						9112-	
	8-94131-723-0		1	(C) AMBER				T	UV						9112-	
237	TIMER ASM 8-97111-962-1		1					T	UV						9204-	
238	SCREW; TIMER 9-0391-0614-0		2					T	UV						9204-	
620	SAFETY UNIT 8-97068-778-1 8-97068-778-1 8-97231-490-0		1 1 1						XY	ZABCD	EFGH	LM	O QRS	X V V	9204- 9204-9906 9907-	