AUSA

ISUZU

PARTS CATALOG

4LB1 - 4LC1
4LE1 - 4LE2

ISUZU

DIESEL ENGINE

4 L B 1
4 L C 1
4 L E 1
4 L E 2

GENUINE PARTS CATALOG

ISUZU MOTORS LIMITED

パーツカタログのご使用について/How to use Parts Catarlog

1．このパーツカタログには、収録型式一覧表に記載されているエンジン型式の補修用部品を収録してあります。
2．このパーツカタログには、2001年11月現在の品番情報を収録してあります。
3．いすゞエンジンの整備には「いすゞ純正部品」をご使用ください。

1.This parts catalog contains the service parts information for the engine models listed on the "Engine Models Table".
2.This parts catalog contains the service parts information as of November,2001. The part numbers are subject to change without notice.
3.In order to maintain the high quality of Isuzu engines, use of Genuine Isuzu Parts is recommended wherever and whenever service, maintenance or repairs are required.

目　次／Contents


1 品番検索の手順 …… How to search for the Part Number …… P-2
2 エンジン外観 …… Engine Models (Photograph) …… P-4
3 収録型式一覧表 …… Engine Models Table …… P-5
4 ＩＤプレートの見方 …… How to refer to ID Plate …… P-13
5 パーツカタログの見方 …… How to refer to the Parts Catalog …… P-14
6 略語表 …… Abbreviation List …… P-20
部品名称順索引 …… Alphabetical Index …… P-1 ～ P-13
ＦＩＧ　ＮＯ．索引 …… Fig No. Index …… P-1 ～ P-3
イラスト索引 …… Illustration Index …… P-1 ～ P-18
イラスト・テキスト編 …… Illustration and Text …… P-1 ～ P-258
部品番号順索引 …… Numerical Index …… P-1 ～ P-13

1 品番検索の手順

エンジンの型式名称・完成年月の確認


◎ＩＤプレートから

（取付場所は4 ＩＤプレートの見方を参照）

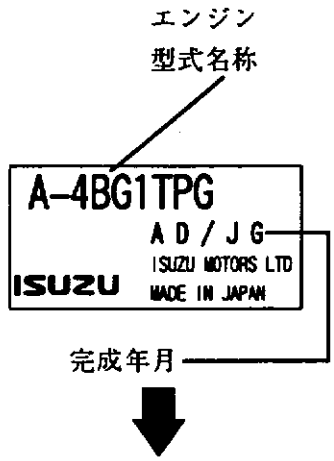

（形式名称、完成年月）

部品の確認

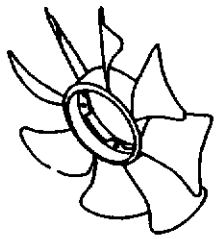


・部品の特徴
・取付け位置


（部品名称）

パーツカタログ


イラスト

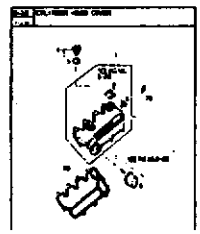


テキスト

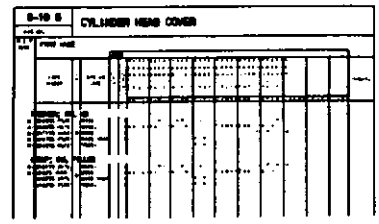


イラスト索引

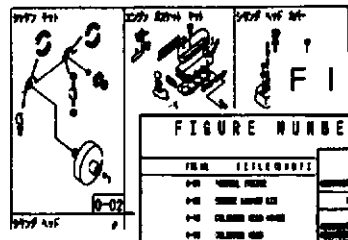

ＦＩＧ索引

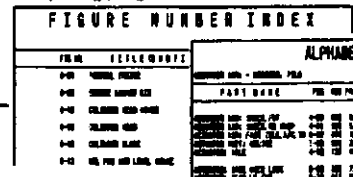


品名索引

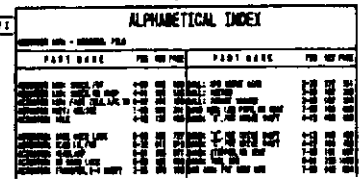


1 How to search for the Part Number

◎ ID Plate information
(Installation:Refer to "4 How to refer to ID Plate")

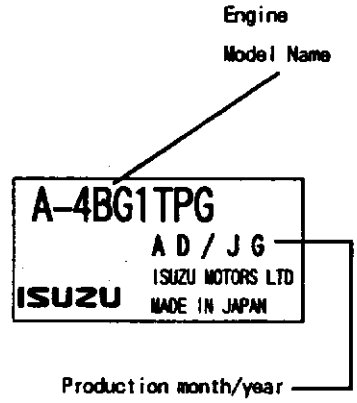

(Engine Model Name, Production Month/Year)

Check the Part

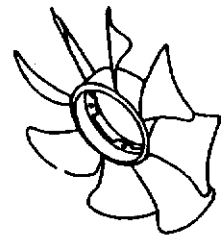


・Type of Part
・Place where the part is installed

(Part Name)

Catalog

Illustration

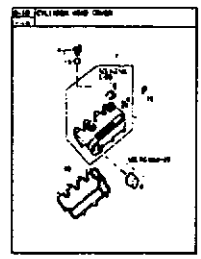

Text

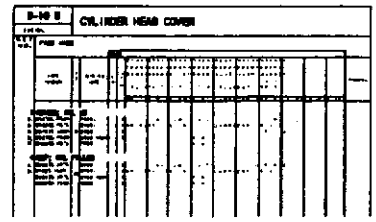


Illustration Index



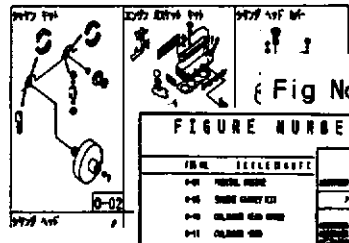


Fig No. Index

FIGURE NUMBER Alphabetical Index

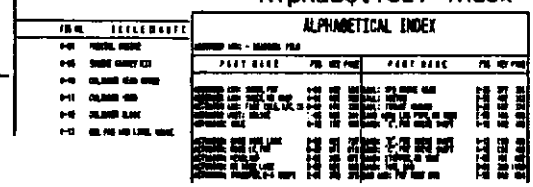

2 エンジン外観／Engine Models [Photograph]

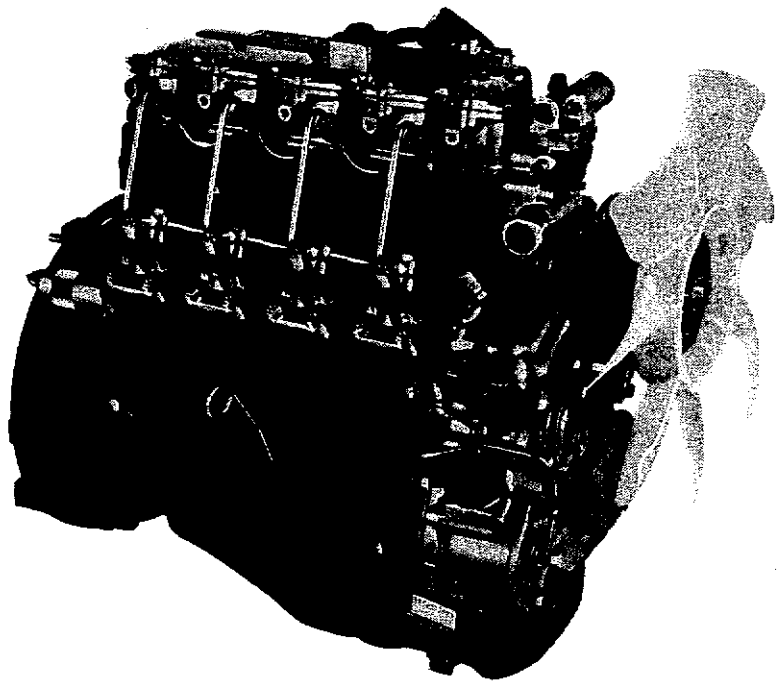

4LB1／4LC1／4LE1／4LE2

3 収録型式一覧表

△：生産終了

4LE1 →

エンジン型式		4LB1										4LC1														
		PA01	PA02	PA03	PA04	PA05	PA06	PA07	TPA	TPA01	TPA02	PA	PA01	PA02	PA03（UG）	PA04	PV01	PV02	PV03	PW01	PW02	PW03	PW04	PW05	CA	CA01
年別	1994－	○							○	○		○	○				○			○						
	1995－		○								○			○							○					
	1996－			○	○													○							○	○
	1997－					○									○											
	1998－						○	○								○						○				
	2000－																		○				○	○		
納入先	輸出用標準																○			○						
	一般動力用標準								○			○														
	TCM	○								○																
	石川島建機												○			○										
	小松フォークリフト		○								○															
	豊和工業													○												
	AIM																	○			○	○				
	酒井重工			○			○																			
	川崎重工				○																					
	関東鉄工					○																				
	イワフジ														○											
	及川自動車							○																		
	HM1																		○				○	○		
	デンヨー																									○
用途		フォークリフトFD10～FD18	フォークリフトFD10L～FD18L	振動ローラーSW／TW500	振動ローラーKV4A	振動ローラー	振動ローラー			フォークリフトFD20～FD25	フォークリフトFD20L～FD25L		ミニバックホー40UJ	スイーバーHF80H	ロギングトラクタT-30A	ミニショベル	発電機用	発電機用	発電機用	一般動力用	一般動力用	一般動力用（ギヤーケースPTO付）	一般動力用	一般動力用		コンプレッサーDPS180SPB2
IDプレート		4LB1										4LC1														

4LE1 →

エンジン型式		4LE1																								
		DA	DA01	DA02	DA03	DA04	DA05	DA06	DA07	DA08	DA09	PA	PA01	PA02	PA03	PA04	PA05	PA07	PA08	PA09	PA10	PA11	PA12	PA13	PA14	PA15
年別	1995－	○	○	○								○	○	○												
	1996－				○	○									○	○	○									
	1997－																	○	○	○	○					
	1998－						○	○	○													○	○	○	○	○
	1999－																									
	2000－									○	○															
納入先	石川島建機													○												
	日立建機												○					○	○				○	○	○	
	長野工業														○											
	住友建機															○	○									
	日本車両				○			○			○															
	新ダイワ工業					○			○																	
	デンヨー		○																							
	北越工業			○			○																			
	ボーデンハイマー																					○				○
	大洋電機									○																
	アイチコーポレーション																			○						
	ゼクセルコールドシステムズ																				○					
用途			発電機DCA25SPIC・DCA25SBI	発電機SDG25S-3A2	発電機NES25SI	発電機DG250MI	発電機SDG25S-3A4	発電機NES25SIA	発電機DG250MI	発電機川	発電機		ミニショベルEX58MU	ミニバックホー45UJ	ミニバックホーNS45／クレーンC29	油圧ショベルSH65U	油圧ショベルSH55U	ミニショベルEX40U	ミニショベルEX55U	高所作業車SR12A／SP12	バスクーラー	振動ローラー	ミニショベルEX55UR	ミニショベルEX55UR	ミニショベルEX50U	アスファルトフィニッシャー
IDプレート			4LE1																							

エンジン型式		4LE1																								
		PA16	PA17	PA18	PA19	PA20	PA21	PA22	PA23	PA24	PA25	PA26	PV01	PV02	PV03	PV04	PV05	PV06	PV07	PW01	PW02	PW03	PW04	PW05	PW06	PW07
年別	1995－												○							○						
	1996－													○							○	○				
	1997－														○								○	○	○	
	1998－	○	○	○												○										○
	1999－				○	○											○	○								
	2000－						○	○	○	○	○	○							○							
納入先	AIMI												○							○		○				
	住友建機	○	○																							
	テーラーパワー														○											
	サリバン																						○	○		
	パワーテックS／E																									
	酒井重工													○												
	ボーデンハイマー			○																						
	ゼクセル															○										
	日立建機				○						○	○														
	日本除雪機																									
	RUGGERINI					○																				
	初田拡散機						○											○								
	共栄社							○																		
	新潟鉄工所								○																	
	成川白動車									○																
	HMI																		○							
	AUSA																				○					
	HALLA																								○	
	シュワルツ																									○
用途		ミニショベルSH55U	ミニショベルSH65U	アスファルトフィニッシャー	ミニショベルEX50UNA	除雪機	スイーパー	芝刈機	アスファルトフィニッシャー	林内作業車	ミニショベルEX40UIEN	ミニショベルEX50UIEN	発電機用	RV発電機	発電機	発電機（標準）		発電機	発電機用	一般動力用	フォークリフトCVH20／CH22・ダンバー350AM／AMG	一般動力用	コンプレッサー	コンプレッサー	フォークリフトHDF20～30	スイーパー用（標準）
IDプレート		4LE1																								

エンジン型式	4LE1								4LE2														
	PW08	PW09	PW10	PW11	PW12	PW13	PW14	PW17	CA	CA01	CA02	CA03	CA04	DA01	DA02	PA	PA01	PA02	PA03	PW01	PW02	PW03	PW05	PW07	PW09
年別 1998－	○																								
1999－		○	○	○	○	○	○		○							○	○								
2000－								○		○										○	○	○			
2001－											○	○	○	○	○			○	○				○	○	○
納入先 石川島建機																	○								
北越工業										○	○		○												
サリバン																									○
シュワルツ	○																								
TIMECONDN				○																					
JLG					○																				
PICCININI						○																			
PC							○																		
GREENMECH								○																	
AIMI																				○	○	○			○
デンヨー												○		○	○										
AUSA																								○	
日立建機																		○	○						
FIVESTAR																							○		
用途	スイーバー用（標準）	一般動力用	油圧ショベル			スキッドステアローダ		ウッドチッパー		コンプレッサーPDS175S	コンプレッサーPDS185SI6B1	コンプレッサー	コンプレッサー	発電機DCA-25ESI	発電機DCA-25USI		ミニバックホー	ミニショベルZX40U／50U	ミニショベルZX55UR	一般動力用	一般動力用	一般動力用	道路清掃車	フォークリフト	コンプレッサー
IDプレート	4LE1								4LE2												4LE2				

AA－4LE2

4LE2

CC－4LE2

3 Engine Models Table

△ ; DISCONTINUED

4 L E 1 →

	ENGINE TYPE	4 L B 1										4 L C 1																
		PA01	PA02	PA03	PA04	PA05	PA06	PA07	TPA	TPA01	TPA02	PA	PA01	PA02	PA03(UG)	PA04	PV01	PV02	PV03	PW01	PW02	PW03	PW04	PW05	CA	CA01
YEAR	1994 –	○							○	○		○	○				○			○						
	1995 –		○								○			○							○					
	1996 –			○	○													○							○	○
	1997 –					○									○											
	1998 –						○	○								○						○				
	2000 –																		○				○	○		
CUSTOMERS	EXPORT STD																○			○						
	GENERAL POWER STD								○			○														
	TCM	○								○																
	IHI												○			○										
	KOMATSU FORK LIFT		○								○															
	HOWA													○												
	AIMI																	○			○	○				
	SAKAI HEAVY INDUSTRY			○			○																			
	KAWASAKI HEAVY INDUSTRY				○																					
	KANTO					○																				
	IWAFUJI														○											
	OIKAWA MOTORS							○																		
	HMI																		○				○	○		
	DENYO																									○
APPLICATION		FORK LIFT FD10~FD18	FORK LIFT FD10L~FD18L	VIBRATION ROAD ROLLER SW/TW500	VIBRATION ROAD ROLLER KV4A	VIBRATION ROAD ROLLER	VIBRATION ROAD ROLLER			FORK LIFT FD20~25	FORK LIFT FD20L~25L		MINI BACKHOE 40UJ	SWEEPER HP80H	FARM TRACTOR T-30A	MINI SHOVEL	FOR ENGINE GENERATOR	FOR ENGINE GENERATOR	FOR ENGINE GENERATOR	FOR GENERAL POWER	FOR GENERAL POWER	FOR GENERAL POWER (AIMI STD WITH GEAR CASE PTO)	FOR GENERAL POWER	FOR GENERAL POWER		COMPRESSOR DPS180SPB2
ID PLATE		4 L B 1										4 L C 1														

4 L E 1 ←

ENGINE TYPE		4 L E 1																								
		DA	DA01	DA02	DA03	DA04	DA05	DA06	DA07	DA08	DA09	PA	PA01	PA02	PA03	PA04	PA05	PA07	PA08	PA09	PA10	PA11	PA12	PA13	PA14	PA15
YEAR	1995–	○	○	○								○	○	○												
	1996–				○	○									○	○	○									
	1997–																	○	○	○	○					
	1998–						○	○	○													○	○	○	○	○
	1999–																									
	2000–									○	○															
CUSTOMERS	IHI													○												
	HITACHI Construction Machinery												○					○	○				○	○	○	
	NAGANO KOGYO														○											
	SUMITOMO Construction Machinery															○	○									
	NIPPON SYARYO				○			○			○															
	SHIN DAIWA					○			○																	
	DENYO		○																							
	HOKUETSU INDUSTRIES			○			○																			
	BODENHEIMER																					○				
	TAIYOU DENKI									○																
	AICHI CORPORATION																			○						
	ZEXEL COLD SYSTEMS																				○					
APPLICATION		ENGINE GENERATOR DCA25SPIC/DCA25SBI	ENGINE GENERATOR SDG25S-3A2	ENGINE GENERATOR NES25SI	ENGINE GENERATOR DG250MI	ENGINE GENERATOR SDG25S-3A4	ENGINE GENERATOR NES25S1A	ENGINE GENERATOR DG250MI	FOR ENGINE GENERATOR	GENERATOR		MINI SHOVEL EX58MU	MINI BACKHOE 45UJ	MINI BACKHOE NC45/ CRANE C29	POWER SHOVEL SH65U	POWER SHOVEL SH55U	MINI SHOVEL EX40U	MINI SHOVEL EX55U	SKY MASTER SR12A/SP12A	AIR CONDITINER(FOR BUS)	VIBRATION ROAD ROLLER	MINI EXCAVATOR(EX55UR)	MINI EXCAVATOR(EX55UR)	MINI EXCAVATOR(EX50U)	ASPHALT FINISHER
ID PLATE		4 L E 1																								

	ENGINE TYPE	4LE1																								
		PA16	PA17	PA18	PA19	PA20	PA21	PA22	PA23	PA24	PA25	PA26	PV01	PV02	PV03	PV04	PV05	PV06	PV07	PW01	PW02	PW03	PW01	PW05	PW06	PW07
YEAR	1995–												○							○						
	1996–													○							○	○				
	1997–														○								○	○	○	
	1998–	○	○	○												○										○
	1999–				○	○											○	○								
	2000–						○	○	○	○	○	○							○							
CUSTOMERS	AIMI												○							○		○				
	SUMITOMO Construction Machinery	○	○																							
	AUSA																				○					
	TAYLOR POWER														○											
	SULLIVAN																						○	○		
	POWER TECH S/E																									
	SAKAI HEAVY INDUSTRIES													○												
	BODENHEIMER			○																						
	ZEXEL															○										
	HITACHI				○						○	○														
	NIHON JOSETU																									
	RUGGERINI					○																				
	HATSUTA KAKUSANKI Co.,Ltd.						○											○								
	KYOUEISYA							○																		
	NIIGATA								○																	
	OIKAWA MOTORS									○																
	HMI																		○							
	HALLA																								○	
	SCHWARZE																									○
	APPLICATION	MINI SHOVEL SH55U	MINI SHOVEL SH65U	ASPHALT FINISHER	MINI EXCAVATOR(EX50UNA)	SNOW PLOW	SWEEPER	LAWN MOWER	ASPHALT FINISHER	LOGGING TRACTOR	MINI EXCAVATOR(EX40U-EN)	MINI EXCAVATOR(EX50U-EN)	FOR ENGINE GENERATOR	RV GENSET	GENERATOR	UNDERSLUNG GENESET		GENERATOR	FOR ENGINE GENERATOR	FOR GENERAL POWER	FORK LIFT CVH20/CH22・DUMPER350AM/AMG	FOR GENERAL POWER	COMPRESSOR	COMPRESSOR	FORK LIFT HDF20~30	SWEEPER
	ID PLATE	4LE1																								


	ENGINE TYPE	4 L E 1								4 L E 2																
		PW08	PW09	PW10	PW11	PW12	PW13	PW14	PW17	CA	CA01	CA02	CA03	CA04	DA01	DA02	PA	PA01	PA02	PA03	PW01	PW02	PW03	PW05	PW07	PW09
YEAR	1998 –	○																								
	1999 –		○	○	○	○	○	○		○							○	○								
	2000 –								○		○										○	○	○			
	2001 –											○	○	○	○	○			○	○				○	○	○
CUSTOMERS	IHI																	○								
	HOKUETSU INDUSTRIES										○	○		○												
	SULLIVAN																									○
	SCHWARZE	○																								
	TIME CONDN				○																					
	JLG					○																				
	PICCINI						○																			
	PCI							○																		
	GREEN MECH								○																	
	AIMI																				○	○	○			○
	DENYO Co., Ltd.												○		○	○										
	AUSA																								○	
	HITACHI CONSTRUCTION MACHINERY																		○	○						
	FIVE STAR																							○		
	APPLICATION	SWEEPER	FOR GENERAL POWER	EXCAVATOR			SKID STEER LOADER		WOOD TIPER	COMPRESSOR PDS175S	COMPRESSOR(PDS185S-6B1)	COMPRESSOR	COMPRESSOR	GENERATOR DCA-25ES1	GENERATOR DCA-25US1		MINI BACKHOE	FOR GENERAL POWER (STD)	MINI BACKHOE ZX40U/ZX50U	MINI BACKHOE ZX55UR	FOR GENERAL POWER (REAR PLATE)	FOR GENERAL POWER (REAR PLATE)		STREET SWEEPER	FORK LIFT	COMPRESSOR
	ID PLATE	4 L E 1								4 L E 2											4 L E 2					

AA – 4 L E 2

4 L E 2

CC – 4 L E 2

4 ＩＤプレートの見方／How to refer to ID Plate

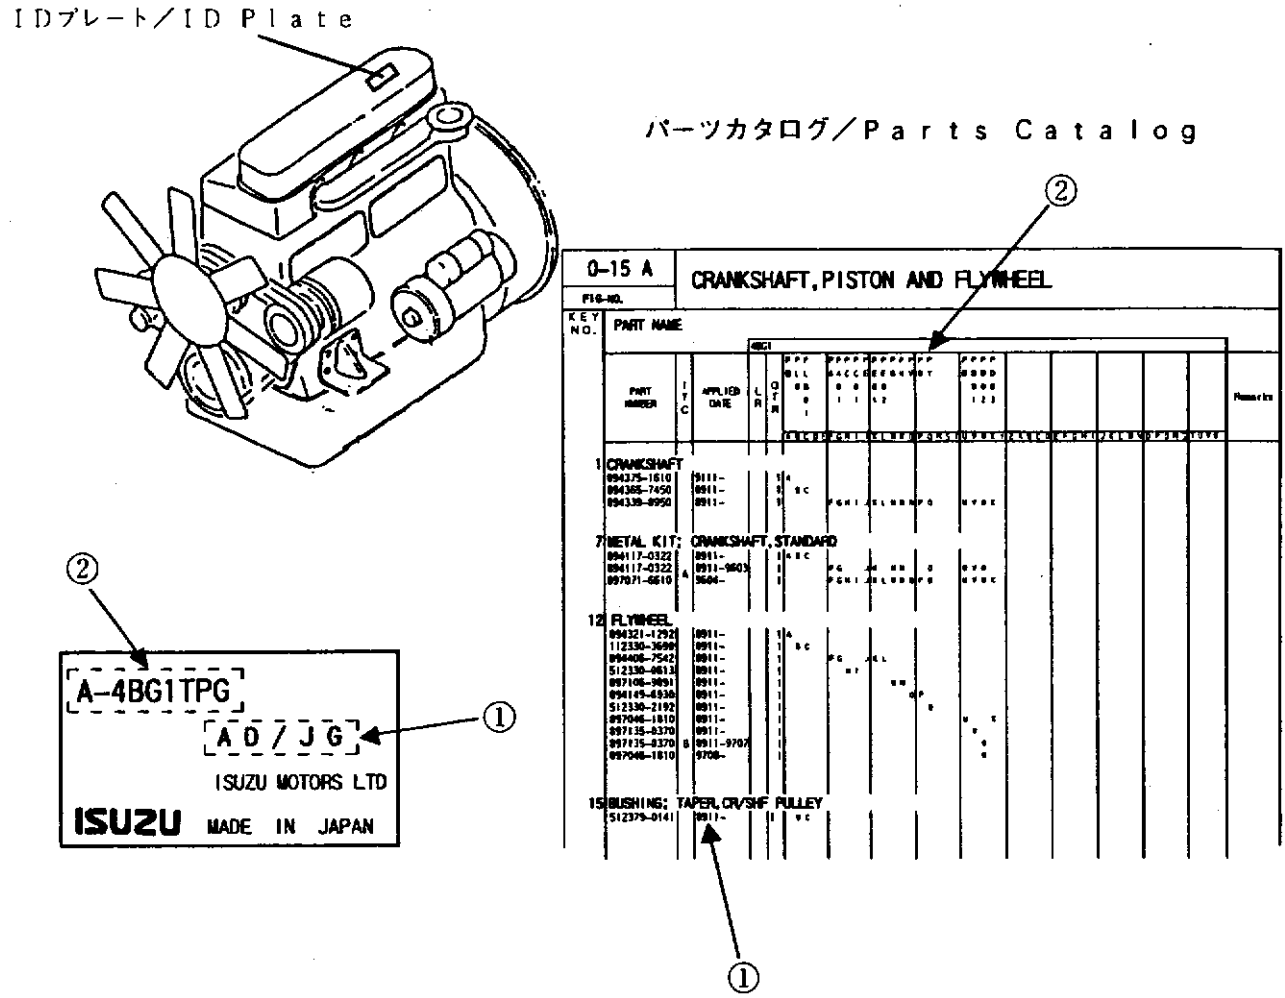

① **完成年月：** ＩＤプレートはアルファベット、パーツカタログ上は西暦で表示してあります。
（例）ＡＤ／ＪＧ → ０３月／９６年

② **エンジン型式名称：** 個別の型式名称が表示されます。
（例１）Ａ－４ＢＧ１ＴＰＧ→ＴＰＧ
（例２）ＵＦ４ＢＧ１ＴＰＧ→ＴＰＧ（ＵＦ）

① **Applied Date:** Indicated in alphabetical characters on the ID Plate.
(A=0, B=1, C=2, D=3, etc.).


For example:

March '96 A D / J G (Month/Year)
0 3 / 9 6

② **Engine Model Name:** Individual model names is indicated.
For example 1: A-4BG1TPG → TPG
For example 2: UF4BG1TPG → TPG(UF)

5 パーツカタログの見方

1．イラストの見方

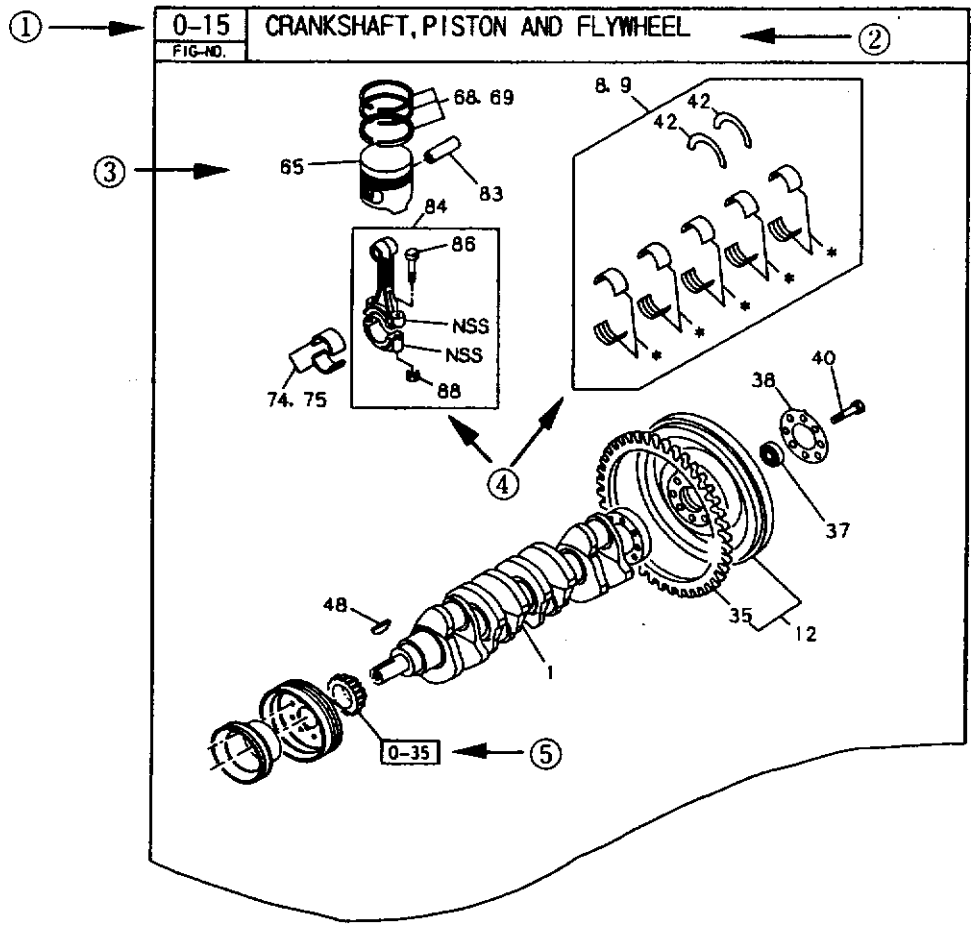

① ＦＩＧ　ＮＯ.

装置別に分類したイラストの番号で、それぞれのイラストにつけられています。

・ＦＩＧ　ＮＯ. の１～３桁は、装置別の分類コードを示します。

・装置種類別にＦＩＧ　ＮＯ. を分類した場合、４桁目にアルファベットで表示します。

例）　０－１０Ａ

② イラストのタイトル

それぞれのイラストの収録される部品の総称、又は代表を表示します。

イラストを複数に分割した場合、区別する為に、２行目に、エンジン型式、ミッション型式、装置名称等で表示されます。

③ ＫＥＹ　ＮＯ.

イラストの部品と、テキストの部品を結び付ける役目をします。なお、NSS と表示がある部品は、非売品です。

④ 親・子の表示

部品の親（アセンブリ）と子（その構成部品）の関係を表現するもので、イラスト上でのみ表現されます。

（例１）　KEY NO.84 は 85, 86, 及び KEY NO. なし（コンロット、キャップは単品非補給）を含むことを示しています。


（例２）　KEY NO.7 は 42、及び KEY NO. なし（単品非補給、キットの内容品）を含むことを示しています。

⑤ SEE　FIG の表示

関連部品が別のＦＩＧのイラストに記載される場合、記載されるＦＩＧ　ＮＯ. を枠線で囲い表示します。

5 How to refer to the Parts Catalog

1. How to interpret the Illustration

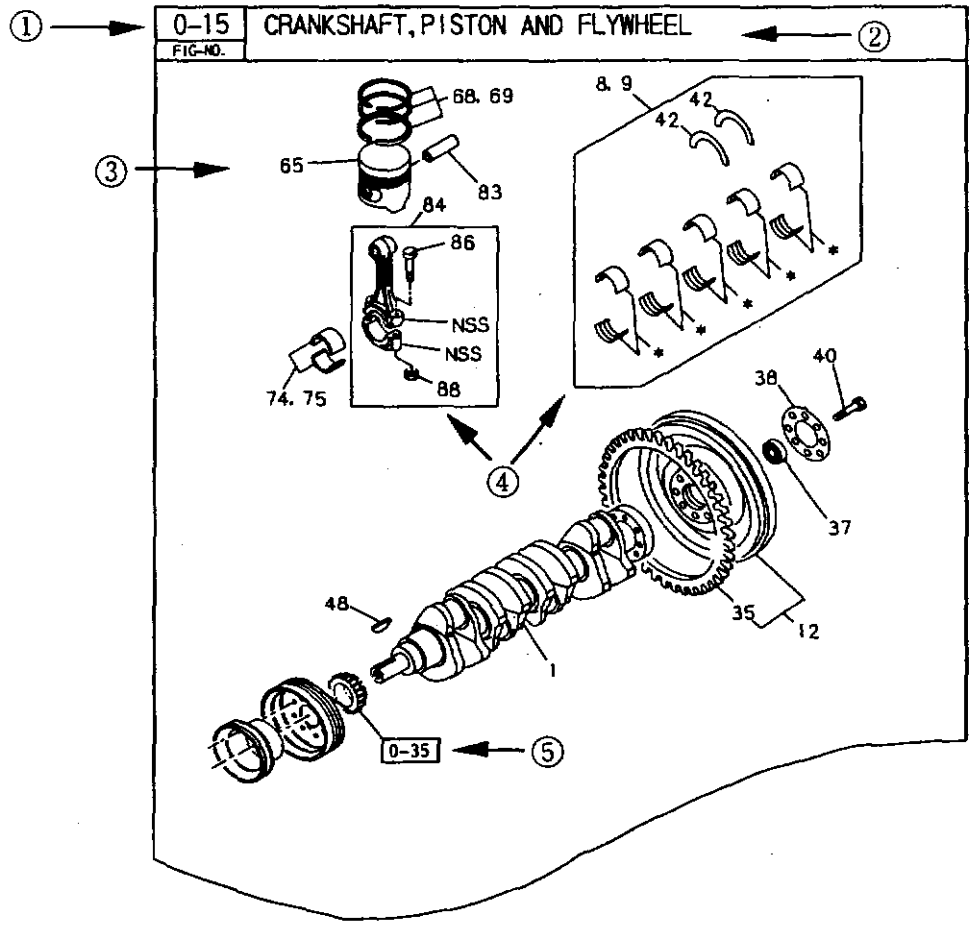

① FIG NO.

A 3-digit (X-XX) Figure Number has been assigned to every section/illustration of the catalog.
The first digit of the Figure Number identifies the primary catalog section.
And the second and third digits identify the subsections.
EXAMPLE: 0-15 = Engine (0); Crankshaft, Piston and Flywheel (15).
If the chapter contains more than one section , each section is identified with an alphabetical character.
EXAMPLE: 0-15A, 0-15B, 0-15C, etc.

② ILLUSTRATION TITLE

The first line of the title contains a generic name(s) for the item(s) illustrated.
The second line of the title identifies the specific application; i.e. engine model, type of transmission, etc.

③ KEY NUMBER

The Key Number connects the illustrated part to the appropriate text.
Items identified with a "NSS" (Not Serviced Separately) are not available individually, however, they may be available as part of an assembly.

④ ASSEMBLIES, KITS, SETS AND THEIR COMPONENTS


Assemblies, Kits and/or Sets are shown within a frame/box. Also shown within the frame/box are any components included with the assembly, Kit or Set.

EXAMPLE: Key No. 84 includes Key nos. 85,86 and the connecting Rod and Cap which are not supplied individually.
EXAMPLE: Key No. 7 includes Key no. 42 and those items identified with no key number.
Items identified with no key number may only be available in an assembly, Kit or Set.


2. テキストの見方

テキストには一般部品のテキストと特定品目の内容部品のテキストがあります。

（一般部品）

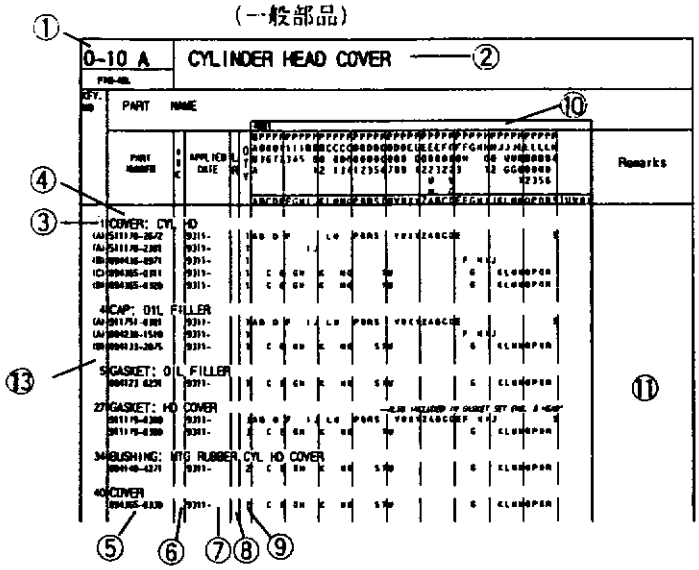

（特定品目の内容部品）

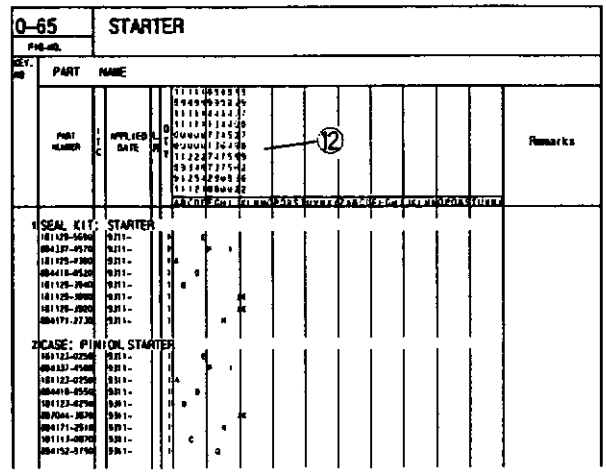

《特定品目一覧表》

品　目	内容品	親品番の		品　目	内容品	親品番の	
	FIG NO.	FIG NO.	KEY NO.		FIG NO.	FIG NO.	KEY NO.
TURBOCHARGER	037	036	1	BOOST COMPENSATOR	082	040	1
STARTER	065	060	1	ANEROID COMPENSATOR	083	040	1
GENERATOR	066	060	2	FEED PUMP	084	040	1
INJECTION PUMP	080	040	1	AUTO TIMER	085	040	1
GOVERNOR	081	040	1	POWER STEERING OIL PUMP	442	436	1

① FIG NO.

イラストの見方の項参照

同一FIG内でモデル（ASM）数が50を越える場合、50モデル（ASM）毎に改頁し4桁目にアルファベットをつけて区別します。この場合、イラストは共通のものを使います。

（例　0－10A、0－10B）

② タイトル

イラストの見方の項参照

③ KEY NO.

イラストの部品と、テキストの部品を結び付ける役目をします。尚、並びは若い番号順に記載されます。FIG NO. とKEY NO. を組み合わせると品目が特定されます。

例えば、『FIG NO＝0-10 KEY NO＝1』はCOVER;HEADを意味し、これは全てのパーツカタログに共通です。従って、KEY NO. は必ずしも連続しません。

④ 部品名称

部品の名称を表わします。表示の並びは呼び名が先で、次に取り付け位置等を示す補足説明を表示しています。

（例）COVER　；　CYLINDER HEAD

呼び名　　取り付け位置

尚、補足説明以降に略語を使う場合がありますが、その際は後述の『略語表』を参照ください。


⑤ SEE FIG NO.

Items shown as a point of reference are not identified with a Key Number. These items are shown because of the way they fit within the illustration. They are described in more detail in another section of the Catalog.
The applicable catalog section is shown next to the illustration.


2. How to interpret the Text

There are two different styles of text. One is used to identify general parts and the other identifies the components of a particular assembly.

(General Parts)

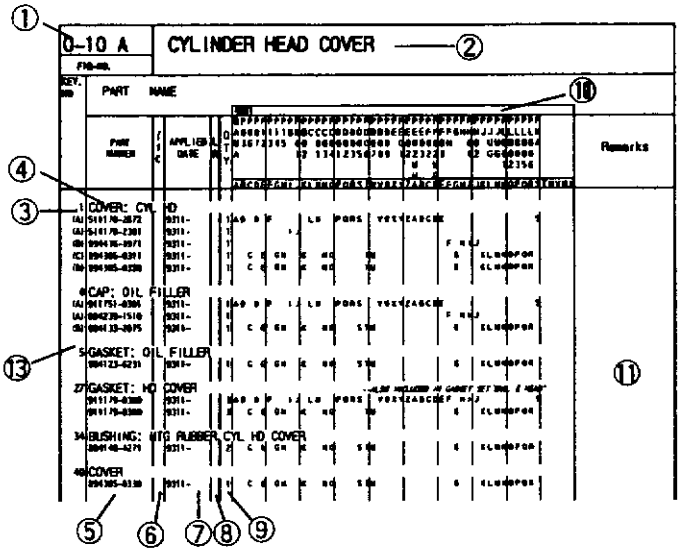

(Component parts for a particular ASM)

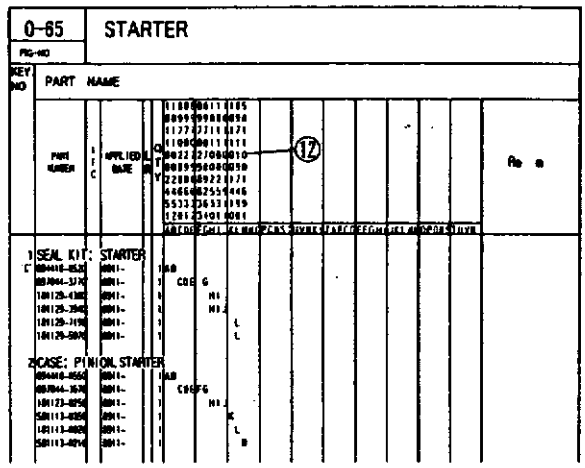

〈List of the particular assembly〉

DESCRIPTION	COMPONENTS	ASSEMBLY PART		DESCRIPTION	COMPONENTS	ASSEMBLY PART	
	FIG NO.	FIG NO.	KEY NO.		FIG NO.	FIG NO.	KEY NO.
TURBOCHARGER	037	036	1	BOOST COMPENSATOR	082	040	1
STARTER	065	060	1	ANEROID COMPENSATOR	083	040	1
GENERATOR	066	060	2	FEED PUMP	084	040	1
INJECTION PUMP	080	040	1	AUTO TIMER	085	040	1
GOVERNOR	081	040	1	POWER STEERING OIL PUMP	442	436	1

①FIG NO.

Already explained on a previous page.
In the same Fig no., when more than 50 engine models or assembly part numbers exist, new texts with new Fig no. with alphabetical suffix as shown below is newly added. (Number of column is limited under 50 items) However, illustration is not newly added.
(Fig no. for text: 0-10A,0-10B ·····)

②TITLE

Already explained on a previous page.

③KEY NUMBER

The combination of the Figure Number and Key Number identifies a particular part.
For example, Figure Number 0-10 and Key Number 1 combines to identify "COVER; HEAD".
This combination of the Figure Number and Key Number (i.e. 0-10-1) will be used to identify the "COVER; HEAD" in all parts catalogs. Key Numbers, therefore, may not be listed consecutively.

⑤ 部品番号

それぞれの部品の該当番号が表示されます。部品の注文は全てこの番号でお受けします。

⑥ 互換性

次の行の品番と互換性がある場合に記号で表示します。特定品目の内容品の場合には、同じASM品番の中で、変更になった品番にのみ表示します。

A；新旧部品、どちらにも代替えできます。　（新 ⇄ 旧）

C；新部品は、旧部品に代替え使用できます。（新 → 旧）

⑦ 切換年月

該当部品の車両生産切り換え開始時期、又は終了時期を西暦年月で表示してあります。

⑧ 左、右

フライホイール側から見て左側を“L”、右側を“R”で表示します。

⑨ 数量

・ 一般部品は当該取付け位置でのエンジン1台当りの使用数を示しています。

・ 特定品目の内容部品はASM（アセンブリ）1個当たりの使用数を示しています。

尚、修理時に必要に応じて数を選択して使用する場合は"AR"と表示してあります。

⑩ 適用モデル

部品が適用される型式名称を表示します。

⑪ 特記事項

適用モデル、仕様条件だけでは部品の区別が出来ない場合、部品の特性（寸法、形状、色、材質）を表示します。

⑫ ASM部品番号

特定品目のASM（アセンブリ）番号が表示されます。

⑬ イラスト特記事項

部品の取付け位置を明示する為に、(A)、(B)、(C) ……と表示します。

④DESCRIPTION

The actual description of the part is listed first then the location of the part.

EXAMPLE: Cover: Cylinder Head
Name Location

⑤PART NUMBER

Used to identify a specific part.

⑥INTERCHANGEABILITY

Superseding part numbers are listed directly below the old part number.
An alphabetical character; i.e. "A" or "C", is used to indicate the type of interchangeability that exists between the old and new part number. If an alphabetical character is not shown then these part numbers are not interchangeable.

EXAMPLE:	Part No.	ITC	
(Old)	·-001-0	C	[001-0 is replaced by 002-0 with the
(New)	·-002-0		interchangeability of "C"]

"A" = Totally interchangeable. Either part number may be used.
"C" = The new part number will replace the old part number, however, the old part number will not replace the new part number.

⑦APPLICABLE PERIOD

Indicated by the year and month (i.e. 9202 = February 1992).

⑧SIDE

Indicated whether the item is installed on the left or right side of the engine as viewed from Flywheel.

⑨QUANTITY

The quantity of the part per that particular application for one engine is indicated.
As to the component of a particular Assembly, the quantity per one assembly is indicated. In those cases where the required quantity is unknown (i.e. shims), "AR" (As required) will be indicated.

⑩APPLICABLE MODEL

The engine model to which the item is applicable will be indicated.

⑪REMARKS

Any additional information pertaining to the characteristics of the item; i.e. size, shape, color, etc. will be listed in the Remarks Column.

⑫ASSEMBLY [ASM] PART NUMBER

Assembly part number will be indicated.

⑬ILLUSTRATION REMARKS

When two or more items are identified by the same Key Number, an alphabetical character(i.e. "A", "B", "C", etc) will be used to identify the part number to the applicable illustration.

6 略語表/Abbreviation List

略語 ABBREVIATIONS	語源 DEFINITION
A	AMPERE
ACCEL	ACCELRATOR
ACL	AIR CLEANER
ADJ	ADJUSTER
AL	ALUMINUM
A/R	AS REQUIRED
ASM	ASSEMBLY
AUTO	AUTOMATIC
B=	BREADTH
BRG	BEARING
BRK	BRAKE
BRKT	BRACKET
CAC	CHARGE AIR COOLER
C/BL	CYLINDER BLOCK
CLU	CLUTCH
CMPR	COMPRESSOR
COMB	COMBINATION
COMPL	COMPLETE
CONN	CONNECTING
CONT	CONTROL
CVR	COVER
CYL	CYLINDER
D=	DIAMETER
DC	DIRECT CURRENT
DIAPH	DIAPHRAGM
DIFF	DIFFERENTIAL
EGR	EXHAUST GAS RECIRCULATION
ENG	ENGINE
EXC	EXCEPT
EXH	EXHAUST
E#	ENGINE NUMBER
EXP	EXPORT
FIG NO.	FIGURE NUMBER
FLEX	FLEXIBLE
FRT	FRONT
FWD	FORWARD
G	GRAM
GEN	GENERATOR
GOV	GOVERNOR
GRD=	GRADE
G/RATIO	GEAR RATIO
H=	HEIGH
HD	HEAD
HEX	HEXAGON
HSG	HOUSING
ID=	INSIDE DIAMETER
IGN	IGNITION
INCL	INCLUDING
INJ	INJECTION
INL	INLET
ISC	IDLE SPEED CONTROL
JBK	JIDOSHA BUHIN KOGYO CO.
KG	KILOGRAM
KM/H	KILOMETER PER HOUR

略語 ABBREVIATIONS	語源 DEFINITION
KOYO	KOYO SEIKO CO.
KW	KILOWATT
L	LITER
L1=	LENGTH(VERTICAL)
L2=	LENGTH(SIDE)
L=	LENGTH
LH	LEFT HAND
LK	LOCK
LVR	LEVER
LWR	LOWER
MAN	MANUAL
MANIF	MANIFOLD
MTG	MOUNTING
M/T	MANUAL TRANSMISSION
MM	MILLIMETER
NACHI	FUJIKOSHI CO.
NGK	NIHON TOKUSHU TOGYO CO.
NO.	NUMBER
NOK	NOK CO.
NOS	NIHON OIL SEAL CO.
NPN	NO PART NUMBER
NPR	NIPPON PISTON RING CO.
NSG	NIPPON SHEET GLASS CO.
NSS	NOT SERVICED SEPARATELY
NSK	NIHON SEIKO CO.
NTN	TOYO BEARING CO.
OD	OUTSIDE DIAMETER
OPT	OPTION
OVSI	OVERSIZE
PCV	POSITIVE CRANK CASE VENTILATION
PL	PLAIN
PRE-CHAMBER	PRECOMBUSTION CHAMBER
PROP	PROPELLER
P/S	POWER STEERING
PTO	POWER TAKE OFF
QOS	QUICK ON START
QTY	QUANTITY
QUAD	QUADRANT
RAD	RADIATOR
REG	REGULATOR
RET	RETAINER
REV	REVERSE
RH	RIGHT HAND
RR	REAR
RWD	REARWARD
SPD	SPEED
SPR	SPRING
STD	STANDARD
SW	SWITCH
SYN	SYNCHRONIZER
T=	THICKNESS
TAP	TAPPING
TC	TURBOCHARGER

略語 ABBREVIATIONS	語源 DEFINITION	略語 ABBREVIATIONS	語源 DEFINITION
TICS	TIMING INJECTION CONTROL SYSTEM		
TEMP	TEMPERATURE		
TRANS	TRANSMISSION		
UNSI	UNDER SIZE		
UPR	UPPER		
V	VOLT		
VAC	VACUUM		
VLV	VALVE		
W	WATT		
W/	WITH		
WO/	WITHOUT		
Z=	TEETH		
ZN	ZINC		
&	AND		
"	INCH		
#	NUMBER		
1ST	FIRST		
2ND	SECOND		
3RD	THIRD		
4TH	FOURTH		
5TH	FIFTH		
6TH	SIXTH		
7TH	SEVENTH		
8TH	EIGHTH		
9TH	NINTH		

FIGURE NUMBER INDEX

F I G U R E N U M B E R I N D E X

FIG NO.	T I T L E (S U B T I T L E)	PAGE
005	ENGINE GASKET KIT	2
010	CYLINDER HEAD COVER	6
011	CYLINDER HEAD	10
012	CYLINDER BLOCK	16
013	OIL PAN AND LEVEL GAUGE	24
014	CAMSHAFT AND VALVE	30
015	CRANKSHAFT, PISTON AND FLYWHEEL	38
020	TIMING GEAR CASE AND FLYWHEEL HOUSING	46
022	ENGINE MOUNTING	58
025	INLET MANIFOLD	62
027	EXHAUST MANIFOLD	66
028	VENTILATION SYSTEM	70
030	WATER PUMP AND CORROSION RESISTOR	74
031	THERMOSTAT AND HOUSING	78
032	WATER PIPING: ENGINE	82
033	FAN AND FAN BELT	86
036	TURBOCHARGER SYSTEM	96
037	TURBOCHARGER	98
040	FUEL INJECTION SYSTEM	100
041	FUEL FILTER AND BRACKET	110
042	FUEL PUMP AND PIPE	116
050	OIL COOLER AND OIL FILTER	120
051	OIL PUMP AND OIL STRAINER	124
052	OIL AND VACUUM PIPING: ENGINE	130
060	ENGINE ELECTRICAL CONTROL PARTS	134
061	BATTERY AND BATTERY CABLE	142
065	STARTER	146
066	GENERATOR	154
080	INJECTION PUMP	162
089	TIMING CHAIN CASE	168
101	ACCELERATOR PEDAL AND CONTROL	184
110	RADIATOR	188
111	RADIATOR HOSE AND SUB TANK	192
130	AIR CLEANER	196

FIGURE NUMBER INDEX

FIG NO.	TITLE (SUBTITLE)	PAGE
131	AIR DUCT	204
140	FUEL TANK	208
145	WATER SEDIMENTER: FUEL	212
150	EXHAUST PIPE AND SILENCER	216
201	CLUTCH	224
203	CLUTCH PEDAL AND CONTROL	228
220	MANUAL TRANSMISSION ASM AND CASE	230
225	SPEEDOMETER DRIVEN GEAR	234
226	MANUAL TRANSMISSION GEAR	236
230	GEAR SHIFTER AND QUADRANT BOX	242
810	WIRING HARNESS AND FUSE	246
821	METER ASM	248
825	SWITCH AND RELAY: INSTRUMENT PANEL	252
826	ELECTRICAL CONTROL AND OTHER PARTS	256

ALPHABETICAL INDEX

ALPHABETICAL INDEX

ADAPTER; FAN T - BOLT; ENG HANG

PART NAME	FIG	KEY	PAGE
ADAPTER; FAN TO PULLEY	0-33A	032	88
	0-33B	032	92
ADAPTER; PRESS UNIT & SW	0-12A	096	19
	0-12B	096	21
ADAPTER; PTO	0-20A	456	52
ADJUSTER; GOV	0-89A	078	175
	0-89B	078	181
AMMETER	8-21A	276	249
ANGLEICH KIT	0-89A	039	173
	0-89B	039	178
	0-89B	039	179
ARM; ROCKER	0-14A	078	32
	0-14B	078	35
ARM; SHIFT, 4TH & 3RD	2-30A	099	243
ARM; SHIFT, LOW & 2ND	2-30A	031	243
ARM; SHIFT, REV & 5TH	2-30A	101	243
ARMATURE; STARTER	0-65	016	150
BAFFLE; ACL	1-30A	033	199
	1-30B	033	201
BALL; INTER LK	2-30A	028	243
BALL; PINION, STARTER	0-65	048	153
BAND; ACL	1-30A	057	199
	1-30A	139	200
	1-30B	139	202
BAND; EXHAUST SILENCER	1-50A	508	219
	1-50B	508	221
BEARING; ARMATURE, STARTER	0-65	017	150
	0-65	017	151
BEARING; CAMSHAFT	0-14A	273	34
	0-14B	273	37
BEARING; CLU RELEASE	2-01A	118	225
BEARING; COUNTER SHAFT, FRT	2-26A	084	238
BEARING; COUNTER SHAFT, RR	2-26A	109	238
BEARING; FAN DRIVE	0-33A	040	89
BEARING; GEAR	0-20A	365	52
	0-20B	365	56
BEARING; GEAR SHAFT STARTER	0-65	009	150
BEARING; IDLE GEAR	0-20A	361	52
	0-20B	361	55
	0-20B	361	56
BEARING; MAINSHAFT END	2-26A	393	239
BEARING; NEEDLE	0-12A	439	20
	0-12B	439	22
BEARING; NEEDLE, 2ND GEAR	2-26A	049	237
BEARING; NEEDLE, 3RD GEAR	2-26A	033	237
BEARING; NEEDLE, LOW GEAR	2-26A	313	239
BEARING; NEEDLE, MAINSHAFT	2-26A	396	239
	2-26A	396	240
BEARING; NEEDLE, REV GEAR	2-26A	314	239
BEARING; PILOT	0-15A	049	40
	0-15B	049	43
BEARING; ROTOR, GEN	0-66	003	158
BEARING; TOP GEAR SHAFT	2-26A	003	237
BELT; COOLING FAN	0-33A	036	88
	0-33A	036	89
BELT; COOLING FAN	0-33B	036	92
BLOCK ASM; CYL	0-12A	001	18
	0-12B	001	21
BLOCK; SHIFT FORK SHAFT	2-01A	024	225
BLOCK; SHIFT, 1ST & 2ND	2-30A	051	243
BLOCK; SHIFT, 3RD & 4TH	2-30A	102	243
BLOCK; SHIFT, CLU	2-01A	116	225
BLOCK; SHIFT, REV TO OD	2-30A	103	243
BODY ASM; OIL PUMP	0-51A	022	126
	0-51B	022	128
BOLT; ADAPTER	0-20A	358	52
BOLT; ADJ	0-33A	086	90
	0-33B	086	93
BOLT; ADJ PLATE	0-33A	096	90
	0-33B	096	93
BOLT; BRG CAP	0-12A	008	18
	0-12B	008	21
BOLT; BRKT	0-41A	043	111
	0-41B	043	113
	1-30A	063	200
	1-30B	063	201
	1-50A	044	218
	1-50B	044	220
	1-50A	045	218
	1-50B	045	220
	1-50A	116	218
	1-50A	116	219
	1-50B	116	220
	1-50B	116	221
BOLT; BRKT, INJ NOZZLE	0-40B	313	108
BOLT; CLIP, OIL COOLER HOSE	0-50A	245	121
	0-50B	245	122
BOLT; CLU COVER	2-01A	137	226
BOLT; CLU HSG TO FLYWHEEL HSG	2-25A	032	235
BOLT; CLU SHAFT	2-01A	025	225
BOLT; COLLAR	0-14A	271	34
	0-14B	271	37
BOLT; CONNROD	0-15A	086	41
	0-15B	086	43
	0-15B	086	44
BOLT; CONT SET SPEED	0-89B	079	181
BOLT; COUPLING DRIVER	2-20A	092	231
BOLT; COVER	0-12A	141	19
	0-12B	141	22
	0-13A	173	27
	0-89A	046	173
	0-89B	046	179
BOLT; COVER TO HSG	2-01A	017	225
BOLT; CR/SHF PULLEY	0-15A	043	40
	0-15B	043	43
BOLT; CYL HD TO BLOCK	0-11A	003	11
	0-11B	003	13
BOLT; DUCT	0-25B	323	64
BOLT; ENG FOOT	0-22B	020	60
BOLT; ENG HANGER	0-11B	041	14

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
BOLT: ENGAGE SW FIX, STARTER	0-65	085	153
BOLT: EXH MANIF	0-27A	015	67
	0-27B	015	68
BOLT; EYE	0-52A	233	132
BOLT: EYE NOZZLE HOLDER	0-40B	034	106
BOLT: EYE, FUEL INL, INJ PUMP	0-80	118	164
BOLT: EYE, JOINT	1-40A	330	209
	1-40B	330	210
BOLT: EYE, OIL PIPE, TURBOCHARGE	0-52A	068	132
BOLT: FAN	0-33A	024	88
	0-33B	024	92
BOLT: FLYWHEEL	0-15A	040	40
	0-15B	040	42
BOLT: FRT PLATE	0-20A	137	50
	0-20B	137	54
BOLT: FUEL FILTER	0-41A	005	111
	0-41B	005	113
	0-41A	042	111
	0-41B	042	113
BOLT: FUEL INL	0-80	203	165
BOLT: FUEL PUMP	0-42A	009	117
	0-42B	009	118
BOLT: GEAR CASE	0-20A	367	52
	0-20B	367	56
BOLT: GEN	0-60A	016	136
	0-60B	016	139
BOLT: GEN BRKT	0-60A	024	137
BOLT: HANGER	0-11A	041	12
BOLT: HANGER, FRT	0-11A	015	11
	0-11B	015	13
BOLT: HD COVER	0-10A	028	7
	0-10B	028	8
BOLT: HOLDER	0-15B	104	44
BOLT: HSG	0-20A	211	51
	0-20B	211	55
BOLT: IDLE PULLEY	0-33A	074	89
	0-33A	221	91
BOLT: INJ PUMP	0-40A	002	103
	0-40B	002	106
BOLT: INL PIPE	0-36A	092	97
BOLT: JOINT	0-13A	084	26
	0-13B	084	28
BOLT: JOINT, OIL PIPE	0-52A	065	132
	0-52B	065	133
BOLT: OIL JET	0-14A	044	32
	0-14B	044	35
BOLT: OIL PAN	0-13A	023	26
	0-13B	023	28
BOLT: OIL PIPE TO TURBOCHARGER	0-52A	020	132
BOLT: OIL PUMP	0-51A	029	126
	0-51B	029	128
BOLT: OIL PUMP TO C/BL	0-51A	013	126
	0-51B	013	128
BOLT: OIL STRAINER	0-51A	061	126
	0-51B	061	128
BOLT: OUTLET PIPE	0-31A	050	79
	0-31B	050	80
BOLT: PCV VLV	0-28A	070	71
BOLT: PLATE	0-12B	445	23
BOLT: PULLEY	0-33A	066	89
BOLT: QUAD BOX	2-30A	142	243
BOLT: RET TO C/BL	0-20A	185	51
	0-20B	185	55
BOLT: ROCKER ARM BRKT	0-14A	057	32
	0-14B	057	35
BOLT: RR COVER	2-20A	086	231
BOLT: SIDE COVER	2-20A	072	231
BOLT: SILENCER BRKT FIX	1-50A	103	218
	1-50B	103	220
BOLT: STARTER	0-60A	004	136
	0-60B	004	139
BOLT: THROUGH	0-66	110	160
BOLT: THROUGH, GEN	0-66	021	159
BOLT: THROUGH, STARTER	0-65	027	151
	0-65	027	152
BOLT: TRANS CASE TO HSG	2-25A	028	235
BOLT: WATER PIPE	0-50A	163	121
BOLT: WATER PUMP	0-30A	024	75
	0-30B	024	76
	0-30A	033	75
BOLT: WATER PUMP TO C/BL	0-30A	036	75
	0-30B	036	76
BOLT: WING, ACL	1-30A	028	199
	1-30B	028	201
BOX: QUAD, TRANS	2-30A	157	243
BOX: SW	8-25A	621	253
BRACKET	0-41A	046	111
	0-41B	046	113
BRACKET: ACL	1-30A	054	199
	1-30B	054	201
BRACKET: ADJ PLATE	0-33A	095	90
BRACKET: CENTER STARTER	0-65	008	150
BRACKET: ENG CONT CABLE	1-01A	040	185
	1-01A	064	185
	1-01B	064	186
BRACKET: EXH SILENCER	1-50A	114	218
	1-50B	114	220
BRACKET: FUEL PUMP	0-42A	214	117
	0-42B	214	118
BRACKET: GEN	0-60A	019	136
	0-60A	021	136
	0-60B	021	139
BRACKET: INJ NOZZLE	0-40B	094	107
BRACKET: RESERVE TANK	1-11A	023	193
	1-11B	023	194
BRACKET: ROCKER ARM	0-14A	092	33
	0-14B	092	36
BRACKET: START SPR	0-89A	068	175
	0-89B	068	180
BREATHER: RR COVER	2-20A	085	231

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
BRUSH: (-), STARTER	0-65	050	153
BRUSH: (+), STARTER	0-65	020	151
BRUSH: GEN	0-66	029	159
BUSHING: CLU HSG	2-03A	130	229
BUSHING: CONNROD	0-15A	085	41
	0-15B	085	43
BUSHING: DRIVEN GEAR, SPEEDOMET	2-25A	002	235
BUSHING: GEAR CASE TO CONT LEV	0-89A	045	173
	0-89B	045	179
BUSHING: INSULATION TERMINAL	0-66	025	159
BUSHING: LEVER, MAIN SPR	0-89A	075	175
	0-89B	075	181
CABLE: STARTER EARTH	0-60A	293	138
	0-60B	293	140
CAMSHAFT	0-14A	001	32
	0-14B	001	35
CAP	0-32A	790	83
CAP: ACL	1-30B	137	202
CAP: IDLE SET	0-89A	025	171
	0-89B	025	177
CAP: OIL FILLER	0-10A	004	7
	0-10B	004	8
	0-13B	277	29
	0-20A	531	52
	0-20B	531	56
	0-52B	277	133
CAP: RAD	1-10A	016	189
	1-10B	016	190
CAP: RUBBER	1-10A	479	189
CAP: SEALING	0-12A	443	20
	0-12B	443	23
CAP: SURGE TANK	1-11A	002	193
	1-11B	002	194
CAP: TERMINAL, AC GEN	0-61A	126	143
	0-61B	126	144
CAP: TERMINAL, STARTER	0-61A	152	143
	0-61B	152	144
CASE ASM: ACL	1-30A	020	199
	1-30B	020	201
CASE: BRG	0-33A	151	91
CASE: FUEL FILTER	0-41A	105	112
	0-41B	105	114
CASE: FUEL SEDIMENTER	1-45A	056	213
	1-45B	056	214
CASE: PINION, STARTER	0-65	002	150
CASE: TIMING GEAR	0-20A	001	50
	0-20B	001	54
CASE: TRANS	2-20A	435	232
CENTER: COOLING FAN	0-33A	108	90
CLAMP: ACL	1-30B	091	202
CLAMP: EXH PIPE	1-50A	022	218
	1-50B	022	220
CLAMP: WIRE, HOSE	1-10A	054	189
CLEANER ASM: AIR	1-30A	001	199
	1-30B	001	201
CLIP: ACTUATOR HOSE, TURBOCHARG	0-37	009	99
CLIP: AIR INL	0-25A	656	63
	0-25B	656	64
CLIP: CAP	0-32A	197	83
CLIP: CONN HOSE	1-31A	498	205
	1-31B	498	206
CLIP: CONN HOSE, TURBOCHARGER	0-36A	080	97
CLIP: FUEL HOSE	0-42A	037	117
	0-42B	037	118
CLIP: GUIDE TUBE	0-13A	015	26
CLIP: HARNESS	2-30A	158	244
CLIP: HOSE	0-12A	266	19
	0-40A	029	103
	0-40B	029	106
CLIP: HOSE, OIL COOLER	0-32A	137	83
	0-32B	137	84
CLIP: HOSE, RAD	1-11A	020	193
	1-11B	020	194
CLIP: JOINT	0-32A	797	83
	0-32B	797	84
CLIP: LEAD WIRE	0-12A	446	20
	0-12B	446	23
CLIP: LEAK OFF PIPE	0-40A	122	104
	0-40B	122	107
CLIP: OIL COOLER HOSE	0-50A	246	121
	0-50B	246	122
CLIP: RUBBER HOSE	0-13A	166	27
	0-13B	166	28
	0-28A	090	71
	0-28B	090	72
CLUTCH ASM: PINION, STARTER	0-65	007	150
CLUTCH: PINION, STARTER	0-65	054	153
COCK: DRAIN, WATER	0-12A	137	19
	0-12B	137	21
COLLAR: SPACE, GEN	0-66	067	160
COLLAR: SPLIT	0-14A	065	32
	0-14B	065	35
COLLAR: THRUST, IDLE GEAR	0-14A	111	33
	0-14B	111	36
CONNECTOR	0-60A	690	138
	0-60B	690	140
CONNECTOR: GLOW PLUG	0-11A	011	11
	0-11B	011	13
CONNECTOR: OIL COOLER	0-32A	122	83
	0-32B	122	84
CONNECTOR: OIL PRESSURE	0-12A	223	19
	0-12B	223	22
CONNECTOR: WATER	0-50A	380	121
CONTROL ASM: WASTE GATE, TURBOC	0-37	028	99
CONTROL UNIT: ENG	0-60A	613	138
	0-60B	613	140
COOLER ASM: OIL	0-50A	102	121
	0-50B	102	122
COVER ASM: FRT, GEN	0-66	017	158
	0-66	017	159

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
COVER ASM: RR, GEN	0-66	001	158
COVER SET: DUST ENGAGE SW STAR	0-65	051	153
COVER: ADJ	0-89A	051	174
	0-89B	051	179
COVER: ANGLEICH	0-89A	070	175
	0-89B	070	181
COVER: CYL BLOCK	0-12A	297	19
	0-12B	297	22
COVER: CYL HD	0-10A	001	7
	0-10B	001	8
COVER: END, RR COVER, GEN	0-66	039	159
	0-66	039	160
COVER: FELT WASHER, ROTOR, GEN	0-66	009	158
COVER: FUEL FILTER	0-41A	008	111
	0-41B	008	113
COVER: GOV SHAFT	0-89A	007	171
	0-89B	007	177
COVER: HYDRAULIC PUMP	0-20A	352	51
	0-20B	352	55
COVER: OIL PAN	0-13A	108	26
COVER: PLATE, CLU HSG	2-01A	016	225
COVER: RR COVER STARTER	0-65	023	151
COVER: RR GEN	0-66	011	158
COVER: RR, TRANS	2-20A	421	231
COVER: RUBBER, STARTER	0-65	032	152
COVER: SIDE, TRANS CASE	2-20A	071	231
COVER: TERMINAL, GENERATOR	0-66	134	160
CRANKSHAFT	0-15A	001	39
	0-15B	001	42
CUP: ACL	1-30A	090	200
	1-30B	090	202
CUP: INNER	0-41A	115	112
	0-41B	115	114
CUP: SEALING	0-12A	006	18
	0-12B	006	21
	0-89A	071	175
	0-89B	071	181
CUP: SEALING, BUSHING	0-89A	076	175
	0-89B	076	181
CUP: SEALING, CAMSHAFT	0-14A	228	34
	0-14B	228	36
CUP: SEALING, CYL HEAD	0-11A	007	11
	0-11B	007	13
CUP: SEALING, OIL GALLERY	0-12A	089	19
	0-12B	089	21
CUSHION: ACL	1-30A	047	199
	1-30B	047	201
DISC: CLUTCH	2-01A	001	225
DOWEL: CYL BLOCK	0-12A	441	20
	0-12B	441	22
DOWEL: TIMING CASE	0-20A	530	52
	0-20B	530	56
DRIVER: COUPLING	2-20A	091	231
ELEMENT KIT: FUEL FILTER	0-41A	002	111
	0-41B	002	113
ELEMENT: FUEL FILTER	1-45A	002	213
	1-45B	002	214
ELEMENT: OIL FILTER	0-50A	002	121
	0-50B	002	122
EYE: START SPR	0-89A	034	172
	0-89B	034	178
FAN: COOLING	0-33A	001	88
	0-33B	001	92
FILLER: OIL	0-52B	448	133
FILTER ASM: FUEL	0-41A	001	111
	0-41B	001	113
FILTER: ACL	1-30A	006	199
	1-30B	006	201
FILTER: ACL, OUTER	1-30B	027	201
FLANGE: PLUNGER	0-80	021	163
FLOAT: WATER SEDIMENTER	1-45B	038	214
FLYEHEEL ASM: GEN	0-66	113	160
FLYWEIGHT	0-89A	001	171
	0-89B	001	177
FLYWHEEL	0-15A	012	39
	0-15B	012	42
FOOT: ENG	0-22A	002	59
	0-22B	002	60
FORK: SHIFT, CLU	2-01A	057	225
GASKET SET: ENG OVERHAUL	0-05A	001	3
	0-05B	001	4
GASKET: BUSH	0-89A	094	176
	0-89B	094	181
GASKET: BUSHING	2-25A	003	235
GASKET: CAM END	0-14A	263	34
	0-14B	263	36
GASKET: CAP	0-20A	532	52
	0-20B	532	56
GASKET: CAP NUT, OIL PIPE	0-52A	116	132
	0-52B	116	133
GASKET: CAP, OIL FILLER	0-52B	541	133
GASKET: CASE TO BODY, FUEL FILT	0-41A	011	111
	0-41B	011	113
GASKET: CHECK VLV	0-52A	517	132
	0-52B	517	133
GASKET: COUPLING DRIVER	2-20A	093	231
GASKET: COVER	0-20A	356	51
	0-20A	356	52
	0-20B	356	55
	0-89A	044	173
	0-89B	044	179
GASKET: COVER TO BODY	1-30A	004	199
	1-30B	004	201
GASKET: COVER, ANGLEICH	0-89A	072	175
	0-89B	072	181
GASKET: CYL HD	0-11A	002	11
	0-11B	002	13
GASKET: DELIVERY VLV, INJ PUMP	0-80	010	163
GASKET: DRAIN PLUG	0-13A	003	26
	0-13B	003	28

ALPHABETICAL INDEX

GASKET; DRAIN - HEAD ASM; CYL

PART NAME	FIG	KEY	PAGE
GASKET; DRAIN PLUG	1-45B	035	214
	2-20A	050	231
GASKET; DRAIN PLUG & CONNECTOR	1-45A	009	213
	1-45B	009	214
GASKET; EXH MANIF TO HD	0-27A	002	67
	0-27B	002	68
GASKET; EXH PIPE	0-27A	172	67
	0-27B	172	68
	1-50A	084	218
	1-50B	084	220
GASKET; EYE BOLT, INJ PUMP	0-80	117	164
GASKET; EYE JOINT	1-40A	331	209
	1-40B	331	210
GASKET; FILLER PLUG	2-30A	184	244
GASKET; FUEL FILTER	0-41A	006	111
	0-41B	006	113
GASKET; GUIDE TUBE	0-13A	045	26
	0-13B	045	28
GASKET; HD TO COVER	0-10A	069	7
	0-10B	069	8
GASKET; HEAT SHIELD	0-40A	215	105
	0-40B	215	108
GASKET; HOLDER, DELIVERY VLV	0-80	007	163
GASKET; INJ NOZZLE	0-40B	066	107
GASKET; JOINT	0-13A	301	27
	0-13B	301	29
GASKET; JOINT BOLT	0-52A	087	132
	0-52B	087	133
GASKET; LEAK OFF PIPE	0-40B	093	107
GASKET; NOZZLE HOLDER	0-40A	050	104
	0-40B	050	107
GASKET; OIL COOLER	0-50A	091	121
	0-50B	091	122
GASKET; OIL FILLER	0-10A	005	7
	0-10B	005	8
GASKET; OIL GALLERY	0-12A	459	20
	0-12B	459	23
GASKET; OIL PAN TO C/BL	0-13A	016	26
	0-13B	016	28
GASKET; OIL PIPE, TURBOCHARGER	0-52A	070	132
GASKET; OIL PUMP	0-51A	085	126
	0-51B	085	128
GASKET; OUTLET PIPE TO HSG	0-31A	064	79
	0-31B	064	80
GASKET; PICKUP	0-60A	238	137
	0-60B	238	140
GASKET; PLUG	0-20A	180	51
	0-20B	180	55
	0-20A	242	51
GASKET; PLUG, FUEL FILTER	0-41A	066	112
	0-41B	066	113
GASKET; PLUNGER, BARREL SIDE	0-80	023	163
GASKET; PUMP TO COVER	0-30B	003	76
GASKET; QUAD BOX	2-30A	148	243
GASKET; RETURN PIPE, NOZZLE HOL	0-40A	036	103
GASKET; RETURN PIPE, NOZZLE HOL	0-40B	036	106
GASKET; RR COVER, STARTER	0-65	038	152
GASKET; SCREW	0-89A	021	171
	0-89B	021	177
GASKET; SHAFT, CONT	0-89A	029	172
	0-89B	029	178
GASKET; SIDE COVER TO TRANS CA	2-20A	073	231
GASKET; SILENCER TO EXH PIPE	1-50A	014	218
	1-50B	014	220
GASKET; STRAINER	0-51A	102	126
	0-51B	102	128
GASKET; TURBOCHARGER TO EXH DU	0-36A	009	97
GASKET; TURBOCHARGER TO EXH MA	0-36A	002	97
GASKET; UPR COVER, SEDIMENTER	1-45A	005	213
	1-45B	005	214
GAUGE; OIL LEVEL	0-13A	002	26
	0-13B	002	28
GEAR; 1ST, MAINSHAFT	2-26A	070	238
GEAR; 2ND, MAINSHAFT	2-26A	050	237
GEAR; 3RD, MAINSHAFT	2-26A	036	237
GEAR; 5TH, COUNTER	2-26A	097	238
GEAR; 5TH, MAINSHAFT	2-26A	013	237
GEAR; CLU STARTER	0-65	046	152
	0-65	046	153
GEAR; COUNTER	2-26A	398	240
GEAR; CR/SHF	0-15A	028	39
	0-15B	028	42
GEAR; DRIVEN, SPD	2-25A	001	235
GEAR; IDLE	0-14A	112	33
	0-14B	112	36
	0-14A	113	33
	0-14B	113	36
GEAR; INJ PUMP & VLV	0-14A	270	34
	0-14B	270	37
GEAR; PTO	0-20A	364	52
	0-20B	364	56
GEAR; REV IDLER	2-26A	135	238
GEAR; REV MAINSHAFT	2-26A	059	237
GEAR; RING	0-15A	035	39
	0-15B	035	42
GEAR; SPD DRIVE	2-26A	080	238
GENERATOR ASM	0-60A	002	136
	0-60B	002	139
GUARD; FAN	1-10A	406	189
GUIDE; FAN	1-10A	002	189
	1-10B	002	190
GUIDE; VLV	0-11A	004	11
	0-11B	004	13
HANGER; ENG, FRT	0-11A	168	12
	0-11B	168	14
HANGER; ENG, RR	0-11A	012	11
	0-11B	012	13
HARNESS; CABLE, OIL PRESSURE	8-10A	319	247
HARNESS; SW	8-25A	536	253
HEAD ASM; CYL	0-11A	001	11

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
HEAD ASM; CYL	0-11B	001	13
HOLDER ASM; NOZZLE	0-40A	032	103
	0-40B	032	106
HOLDER; BRG, FLYWHEEL	0-15B	103	44
HOLDER; BRUSH STARTER	0-65	022	151
HOLDER; BRUSH, GEN	0-66	005	158
HOLDER; DELIVERY VLV, INJ PUMP	0-80	006	163
HOSE; ACTUATOR TO BLOWER HSG, T	0-37	008	99
HOSE; CONN	1-31A	232	205
	1-31B	232	206
HOSE; DRAIN	1-45B	039	214
HOSE; FUEL FILTER	0-41A	077	112
	0-41B	077	114
HOSE; FUEL PUMP TO CARB	0-42A	036	117
	0-42B	036	118
HOSE; INL PIPE, TURBOCHARGER	0-36A	078	97
HOSE; RIBBER, CONNECTOR TO WATE	0-32A	796	83
	0-32B	796	84
HOSE; RUBBER	0-42A	178	117
	0-42B	178	118
HOSE; RUBBER, CONN	0-50A	536	121
HOSE; RUBBER, FUEL LEAK	0-40A	030	103
	0-40B	030	106
HOSE; RUBBER, OIL COOLER TO CON	0-32A	118	83
	0-32B	118	84
HOSE; RUBBER, PCV	0-28A	060	71
	0-28B	060	72
HOSE; RUBBER, WATER PIPE	0-32A	034	83
HOSE; WATER DRAIN, C/BL	0-12A	162	19
	0-12B	162	22
HOSE; WATER, RAD INL	1-11A	128	193
	1-11B	128	194
HOSE; WATER, RAD OUTLET	1-11A	055	193
	1-11B	055	194
HOUSING; BLOWER, TURBOCHARGER	0-37	007	99
HOUSING; BRG, TURBOCHARGER	0-37	003	99
HOUSING; CLU, W/BUSHING	2-01A	009	225
HOUSING; FLYWHEEL	0-20A	002	50
	0-20B	002	54
HOUSING; PCV, CLY HD COVER	0-28A	283	71
	0-28B	283	72
HOUSING; PUMP, FUEL INJ	0-80	001	163
HOUSING; TURBINE, TURBOCHARGER	0-37	001	99
INDICATOR; ACL	1-30A	089	200
	1-30B	089	202
INDICATOR; GLOW	8-21A	338	249
INSERT; SYN, 4TH & 3RD	2-26A	387	239
INSERT; SYN, LOW & 2ND	2-26A	405	240
INSERT; SYN, REV & 5TH	2-26A	063	237
INSULATOR; HEAT	1-30A	185	200
JOINT ASM; EYE, FUEL PIPE	1-40A	329	209
	1-40B	329	210
JOINT; ACL	1-30A	017	199
	1-30B	017	201
JOINT; OIL DRAIN	0-13A	165	27
JOINT; OIL DRAIN	0-13B	165	28
JOINT; WATER PIPE	0-32A	114	83
	0-32B	114	84
KEY; FEATHER, CLU SHAFT	2-01A	128	225
KEY; STARTER SW	8-25A	434	253
	8-25B	434	254
KEY; WOODRUFF, CR/SHF	0-15A	048	40
	0-15B	048	43
LAMP ASM; PILOT	8-25A	623	253
LEVER KIT; GOV	0-89A	077	175
	0-89B	077	181
LEVER; CONT	0-89A	027	171
	0-89B	027	178
LEVER; FLOATING	0-89A	058	174
	0-89B	058	180
LEVER; FUEL CUT	0-89A	043	173
	0-89B	043	179
LEVER; GUIDE	0-89A	050	174
	0-89B	050	179
LEVER; MAIN SPR	0-89A	028	171
	0-89A	028	172
	0-89B	028	178
LEVER; SELECT, EXTERNAL	2-30A	167	244
LEVER; SELECT, INTERNAL	2-30A	163	244
LEVER; SHIFT	2-30A	165	244
LEVER; SHIFT, INTERNAL	2-30A	130	243
LEVER; SHIFT, STARTER	0-65	028	152
LEVER; TENSION, GOV	0-89A	054	174
	0-89B	054	179
	0-89B	054	180
LINK; CONT, INJ PUMP	0-89A	060	174
	0-89B	060	180
MANIFOLD; EXHAUST	0-27A	001	67
	0-27B	001	68
METAL KIT; CRANKSHAFT, STANDARD	0-15A	007	39
	0-15B	007	42
METAL SET; CONN ROD, STANDARD	0-15A	073	40
	0-15B	073	43
METER ASM; TACHO	8-21A	273	249
	8-21B	273	250
METER; OIL PRESSURE	8-21A	274	249
METER; THERMO	8-21A	010	249
	8-21B	010	250
NIPPLE; GREASE	2-01A	020	225
NIPPLE; GUIDE TUBE	0-13A	227	27
	0-13B	227	28
NIPPLE; OIL PIPE	0-52A	031	132
NIPPLE; WATER DRAIN	0-12A	114	19
	0-12B	114	21
NOZZLE ASM; INJ	0-40A	031	103
	0-40B	031	106
NOZZLE; INJ	0-40A	033	103
	0-40B	033	106
NUT	2-01A	160	226
NUT; ADJ PLATE	0-33A	082	90

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
NUT; ADJ PLATE	0-33B	082	93
NUT; ADJ SCREW, LK	0-14A	083	33
	0-14B	083	35
NUT; ADJ SCREW, NOZZLE HOLDER	0-40A	040	103
	0-40B	040	106
NUT; BRKT	1-30A	224	200
	1-30B	224	202
	1-50A	052	218
	1-50B	052	220
NUT; BRKT TO ACL	1-30A	076	200
	1-30B	076	202
NUT; CAP, CONNECTOR	0-52A	374	132
	0-52B	374	133
NUT; CAP, SCREW	0-89A	024	171
	0-89B	024	177
NUT; CLU SHIFT FORK	2-01A	028	225
NUT; CM/SHF GEAR	0-14A	006	32
	0-14B	006	35
NUT; CONNROD	0-15A	088	41
	0-15B	088	44
NUT; COVER	0-20A	080	50
	0-20B	080	54
NUT; COVER FIX	0-12A	144	19
	0-12B	144	22
NUT; DUCT, AIR INLET	0-25A	653	63
	0-25B	653	64
NUT; EXH MANIF	0-27A	018	67
	0-27B	018	68
NUT; EXH PIPE	1-50A	036	218
	1-50B	036	220
NUT; EXH PIPE, TURBOCHARGER	0-36A	019	97
NUT; FLYEHEEL, GEN	0-66	114	160
NUT; GEAR CASE	0-20A	040	50
	0-20B	040	54
NUT; GEN	0-60A	023	136
	0-60B	023	139
NUT; HOLDER	0-89A	040	173
	0-89B	040	179
NUT; HSG	0-20A	205	51
	0-20B	205	55
NUT; INJ PUMP	0-40A	158	104
	0-40B	158	108
NUT; LEVER TO SHAFT	0-89A	032	172
	0-89B	032	178
NUT; MAINSHAFT	2-20A	095	231
NUT; NOZZLE RET, NOZZLE HOLDER	0-40A	035	103
	0-40B	035	106
NUT; OIL FILLER	0-52B	569	133
NUT; OIL PAN	0-13A	024	26
	0-13B	024	28
NUT; PULLEY, GEN	0-66	018	159
NUT; RECTIFIER, GEN	0-66	027	159
NUT; RELAY	8-25A	158	253
NUT; ROCKER SHAFT	0-14A	091	33
	0-14B	091	36
NUT; SCREW	0-89A	022	171
	0-89B	022	177
NUT; SHAFT	0-89A	074	175
	0-89B	074	181
NUT; STARTER	0-60A	007	136
	0-60B	007	139
NUT; STUD, OIL COOLER	0-50A	146	121
	0-50B	146	122
NUT; TERMINAL	0-65	114	153
NUT; TURBOCHARGER	0-36A	011	97
NUT; U-BOLT	1-50B	010	220
NUT; WATER PUMP	0-30A	040	75
	0-30B	040	76
NUT; WING, ELEMENT	1-30A	002	199
	1-30B	002	201
PAN ASM; OIL	0-13A	001	26
	0-13B	001	28
PANEL; SW	8-25A	587	253
PIECE; GUIDE	0-89A	052	174
	0-89B	052	179
PIECE; SLIDING	0-33A	081	90
	0-33B	081	93
PIN; BODY, OIL PUMP	0-51A	023	126
	0-51B	023	128
PIN; CM/SHF	0-14A	034	32
	0-14B	034	35
PIN; CONT LINK	0-12A	440	20
	0-12B	440	22
PIN; CONT RACK, INJ PUMP	0-80	110	164
PIN; COUNTER GEAR	2-26A	287	239
PIN; FLYWHEEL HSG	0-12A	083	18
	0-12B	083	21
	0-20A	240	51
	0-20B	240	55
PIN; GUIDE LEVER	0-89A	053	174
	0-89B	053	179
PIN; IDLE SHAFT	0-14A	274	34
	0-14B	274	37
PIN; INTER LK	2-30A	030	243
PIN; LEVER TO LINK PLATE	0-89A	016	171
	0-89B	016	177
PIN; NOZZLE SET, NOZZLE HOLDER	0-40B	046	107
PIN; PISTON	0-15A	083	40
	0-15A	083	41
	0-15B	083	43
PIN; REV SHAFT	2-26A	386	239
PIN; SHAFT SET	0-14A	098	33
	0-14B	098	36
PIN; SPR, CONT	0-89A	067	175
	0-89B	067	180
PIN; SPR, SELECT LEVER	2-30A	166	244
PIN; SPR, SHIFT ARM	2-30A	091	243
PIN; SPR, STOPPER	2-30A	176	244
PIN; STRAIGHT	0-12A	061	18
	0-12B	061	21

ALPHABETICAL INDEX

PIN; STRAIGHT - PULLEY; IDLE

PART NAME	FIG	KEY	PAGE
PIN; STRAIGHT	0-15A	130	41
	0-15B	130	44
	2-01A	140	226
PINION; CLU, STARTER	0-65	055	153
PIPE ASM; INJ	0-40A	128	104
	0-40B	128	107
PIPE ASM; OIL, TURBOCHARGER RET	0-52A	073	132
PIPE; AIR	0-25A	303	63
	0-25B	303	64
PIPE; AIR INL	0-25A	657	63
	0-25B	657	64
PIPE; DRAIN RR COVER STARTER	0-65	058	153
PIPE; EXH	0-36A	166	97
PIPE; EXH, SILENCER CONNECTOR	1-50A	465	219
PIPE; FUEL, NOZZLE LEAK OFF	0-40A	063	104
	0-40B	063	107
PIPE; FUEL, SUCTION	0-40A	315	105
	0-40B	315	108
PIPE; INL, TURBOCHARGER TO MANI	0-36A	090	97
PIPE; OIL JET	0-14A	336	34
PIPE; OIL, OIL JET	0-52A	057	132
	0-52B	057	133
PIPE; OIL, PARTIAL FILTER FEED	0-52A	160	132
	0-52B	160	133
PIPE; OIL, PUMP TO C/BL	0-52A	026	132
	0-52B	026	133
PIPE; OIL, TURBOCHARGER FEED	0-52A	063	132
PIPE; WATER OUTLET	0-31A	049	79
	0-31B	049	80
PIPE; WATER, OIL COOLER	0-50A	162	121
PIPE;OIL JET	0-14B	336	37
PISTON	0-15A	063	40
	0-15B	063	43
PISTON; O/S=0.25	0-15A	067	40
	0-15B	067	43
PLATE ASM; GEN	0-66	112	160
PLATE ASM; PRESSURE, CLU	2-01A	002	225
PLATE; ADJ	0-33A	080	89
	0-33A	080	90
	0-33B	080	93
PLATE; C/BL	0-12B	444	23
PLATE; CLUSTER GEAR	2-26A	182	239
PLATE; FRT, C/BL	0-20A	149	50
	0-20B	149	54
PLATE; LINK, LEVER TO PUMP	0-89A	018	171
	0-89B	018	177
PLATE; SEAL, TURBOCHARGER	0-37	044	99
PLATE; TAPPET	0-80	183	164
	0-80	183	165
PLUG	0-50A	149	121
	0-51A	152	126
	0-51A	152	127
	0-51B	152	128
PLUG; C/BL	0-12A	448	20
	0-12B	448	23
PLUG; COVER, GOV	0-89A	049	174
	0-89B	049	179
PLUG; CYL HD	0-11A	025	12
	0-11B	025	13
PLUG; DRAIN	1-45B	034	214
PLUG; DRAIN, OIL	0-13A	004	26
	0-13B	004	28
PLUG; FRT PLATE	0-20A	533	52
	0-20A	533	53
	0-20B	533	56
PLUG; FUEL FILTER	0-41A	056	111
	0-41B	056	113
PLUG; GEAR CASE	0-20A	181	51
	0-20B	181	55
PLUG; GLOW	0-11A	010	11
	0-11B	010	13
PLUG; HD	0-11A	103	12
	0-11B	103	14
PLUG; HOT	0-11A	027	12
	0-11B	027	13
PLUG; HTR	0-30A	058	75
	0-30B	058	76
PLUG; OIL DRAIN	2-20A	430	232
PLUG; OIL GALLERY	0-12A	015	18
	0-12B	015	21
PLUG; PLATE	2-30A	104	243
PLUG; RELIEF VLV	0-51A	119	126
	0-51B	119	128
PLUG; ROCKER SHAFT END	0-14A	055	32
	0-14B	055	35
PLUG; SCREW, OIL FILTER	2-30A	183	244
PLUG; SENSOR HOLE	0-20A	290	51
	0-60A	065	137
	0-60B	065	139
PLUG; SENSOR, FUEL FILTER	0-41B	007	113
PLUG; SENSOR, FUEL FILTER	0-41A	007	111
PLUG; SHAFT, FLOATING LEVER	0-89A	059	174
	0-89B	059	180
PLUG; SW	0-31A	014	79
	0-31B	014	80
PLUG; THERMOMETER	0-30A	144	75
	0-30B	144	76
PLUG; THRUST	0-12A	442	20
	0-12B	442	22
PLUG; WATER DRAIN	0-12A	007	18
	0-12B	007	21
PLUG;SENSOR HOLE	0-20B	290	55
PLUNGER ASM; INJ PUMP	0-80	019	163
PULLEY; CR/SHF	0-15A	018	39
	0-15B	018	42
PULLEY; FAN CENTER	0-33A	112	90
	0-33B	112	93
	0-33B	112	94
PULLEY; GEN	0-66	019	159
PULLEY; IDLE	0-33A	126	90

ALPHABETICAL INDEX

PULLEY; WATER - SEAL; LEAD

PART NAME	FIG	KEY	PAGE
PULLEY; WATER PUMP	0-30A	007	75
PUMP ASM; FUEL	0-42A	001	117
	0-42B	001	118
PUMP ASM; INJ	0-40A	001	103
	0-40B	001	106
PUMP ASM; OIL	0-51A	001	126
	0-51B	001	128
PUMP ASM; WATER	0-30A	002	75
	0-30B	002	76
PUMP SUB ASM; OIL	0-51A	151	126
	0-51B	151	128
RACK; CONT, INJ PUMP	0-80	109	164
RADIATOR ASM	1-10A	001	189
	1-10B	001	190
RECTIFIER; GEN	0-66	010	158
REGULATOR ASM; VOLTAGE, GEN	0-66	006	158
REGULATOR; VOLTAGE, GEN	0-66	075	160
RELAY	8-25A	424	253
	8-25B	424	254
RELAY ASM	8-25A	287	253
RELAY; BATTERY	0-61B	068	144
RELAY; CHARGE WARNING	0-60A	578	138
	0-60B	578	140
RELAY; GLOW PLUG	0-60A	046	137
	0-60B	046	139
RELAY; SAFETY	8-25A	288	253
	8-25B	288	254
REPAIR KIT; FUEL PUMP	0-42B	003	118
REPAIR KIT; TURBOCHARGER	0-37	010	99
RESISTANCE; CONTROL	8-25A	622	253
RESISTOR; CONT, GLOW PLUG	0-60A	038	137
	0-60B	038	139
RETAINER; BEARING, STARTER	0-65	045	152
RETAINER; CR/SHF	0-20A	172	50
	0-20A	172	51
	0-20B	172	54
	0-20B	172	55
RETAINER; PINION STARTER	0-65	043	152
RETAINER; ROTOR, GEN	0-66	015	158
RING SET; PISTON, O/S=0.25	0-15A	071	40
	0-15B	071	43
RING SET; PISTON, STANDARD	0-15A	068	40
	0-15B	068	43
RING; BLOCK, 4TH & 3RD	2-26A	035	237
RING; BLOCK, LOW & 2ND	2-26A	051	237
RING; BLOCK, SYN	2-26A	066	238
RING; BODY TO CASE	1-45B	036	214
RING; CAMSHAFT	0-14A	272	34
	0-14B	272	37
RING; DELIVERY VLV	0-80	291	165
	0-80	291	166
RING; SNAP	0-14A	196	33
	0-14B	196	36
	0-33A	041	89
	0-80	193	165
RING; SNAP, BRG TO TOP GEAR SHA	2-26A	004	237
RING; SNAP, CLU HUB	2-26A	172	238
	2-26A	177	238
	2-26A	390	239
RING; SNAP, CLUSTER GEAR	2-26A	180	238
	2-26A	180	239
	2-26A	185	239
	2-26A	186	239
RING; SNAP, OVERDRIVE GEAR	2-26A	173	238
RING; SNAP, PISTON PIN	0-15A	126	41
	0-15B	126	44
RING; SNAP, SET SCREW	0-89A	064	175
	0-89B	064	180
RING; SNAP, SHAFT	0-89A	057	174
	0-89B	057	180
ROD ASM; CONN	0-15A	084	41
	0-15B	084	43
ROD; PUSH	0-14A	088	33
	0-14B	088	36
ROD; PUSH, NOZZLE HOLDER	0-40A	045	103
	0-40B	045	107
ROD; SHIFT, LOW & 2ND	2-30A	033	243
ROD; SHIFT, REV & 5TH	2-30A	100	243
ROD; SHIFT, TOP & 3RD	2-30A	098	243
ROLLER; PINION STARTER	0-65	044	152
ROTOR; GEN	0-66	002	158
ROTOR; TURBOCHARGER	0-37	059	99
RUBBER; MTG, ENG	0-22A	038	59
	0-22B	038	60
SAFETY UNIT	8-26A	620	257
	8-26B	620	258
SCREW	8-25A	331	253
SCREW; ADJ, ROCKER ARM	0-14A	081	32
	0-14B	081	35
SCREW; CONT SET SPEED	0-89A	065	175
	0-89B	065	180
SCREW; FRT COVER	0-66	036	159
SCREW; PCV COVER	0-28A	143	71
	0-28B	143	72
SCREW; RECTIFIER, GEN	0-66	024	159
SCREW; REG	0-66	077	160
SCREW; RELAY	8-25A	227	253
SCREW; RR COVER, STARTER	0-65	041	152
SCREW; RR END COVER	0-66	043	160
SCREW; SET	0-89B	092	181
SCREW; SET, FULL LOAD	0-89A	061	174
	0-89B	061	180
SCREW; SET, IDLE SPR	0-89A	062	174
	0-89B	062	180
SCREW; SHIFT FORK	2-01A	130	226
SCREW; SPEEDOMETER BUSHING	2-20A	088	231
SCREW; TERMINAL, GENERATOR	0-66	133	160
SEAL; AIR INL	0-25A	655	63
	0-25B	655	64
SEAL; LEAD	0-89A	047	173

ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
SEAL; LEAD	0-89B	047	179
SEAL; OIL	2-01A	035	225
SEAL; OIL, CR/SHF, FRT	0-20A	103	50
	0-20B	103	54
SEAL; OIL, CR/SHF, RR	0-20A	175	51
	0-20B	175	55
SEAL; OIL, DRIVEN GEAR	2-25A	009	235
SEAL; OIL, QUAD BOX	2-30A	164	244
SEAL; OIL, RR COVER	2-20A	090	231
SEAL; OIL, VLV GUIDE	0-11A	036	12
	0-11B	036	13
SEAL; THROUGH BOLT STARTER	0-65	026	151
SEAT; NOZZLE SPRING NOZZLE HOL	0-40B	043	106
SEAT; PLUNGER SPRING LWR, INJ P	0-80	064	164
SEAT; PLUNGER SPRING, INJ PUMP	0-80	062	164
SEAT; SPR	0-14A	071	32
	0-14B	071	35
SEAT; VLV INSERT	0-11A	005	11
	0-11B	005	13
SEDIMENTER; FUEL	1-45A	001	213
	1-45B	001	214
SENSOR ASM; FUEL FILTER	0-41A	003	111
	0-41B	003	113
SENSOR; QOS THERMO	0-60A	729	138
	0-60B	729	140
SENSOR; TACHO	0-60A	603	138
	0-60B	603	140
SHAFT; CLU	2-01A	125	225
SHAFT; GEAR STARTER	0-65	010	150
SHAFT; GENERATOR	0-66	135	160
SHAFT; IDLE GEAR	0-14A	107	33
	0-14B	107	36
SHAFT; LEVER	0-89A	006	171
	0-89B	006	177
SHAFT; MAIN, TRANS	2-26A	082	238
SHAFT; REV	2-26A	132	238
SHAFT; ROCKER ARM	0-14A	053	32
	0-14B	053	35
SHAFT; SHIFTER	0-89A	056	174
	0-89B	056	180
SHAFT; TOP GEAR, TRANS	2-26A	001	237
SHIELD; HEAT, INJ NOZZLE	0-40A	051	104
	0-40B	051	107
SHIELD; RAD, TURBOCHARGER	0-37	088	99
SHIFTER; GOV	0-89A	055	174
	0-89B	055	180
SHIM; INJ PUMP	0-40A	159	104
	0-40A	159	105
	0-40B	159	108
SHIM; NOZZLE SPRING, NOZZLE HOL	0-40A	140	104
	0-40B	140	107
	0-40B	140	108
SILENCER ASM; EXH	1-50A	012	218
	1-50B	012	220
SILENCER; INTAKE	1-31A	503	205
SLEEVE; CONT, INJ PUMP	0-80	058	163
	0-80	058	164
SLEEVE; FLYWEIGHT	0-89A	005	171
	0-89B	005	177
SOLENOID ASM; ENG STOP	0-60A	177	137
	0-60B	177	140
SPACER; BRG TO DRIVE GEAR	2-26A	276	239
SPACER; CLIP	0-32A	190	83
	0-32B	190	84
SPACER; FAN	0-33A	038	89
	0-33B	038	92
	0-33B	038	93
SPACER; FLYWHEEL HSG	0-20A	381	52
	0-20B	381	56
SPACER; GEN	0-60A	251	137
	0-60B	251	140
SPACER; HYDRAULIC PUMP	0-20A	354	51
	0-20B	354	55
SPACER; NOZZLE SPRING, NOZZLE H	0-40A	047	103
	0-40B	047	107
SPACER; PULLEY, GEN	0-66	085	160
SPACER; WATER PUMP	0-30A	060	75
SPACER;NOZZLE	0-40B	146	108
SPRING; BRUSH HOLDER STARTER	0-65	021	151
SPRING; BRUSH, GEN	0-66	030	159
SPRING; CLUSTER GEAR	2-26A	184	239
SPRING; DELIVERY VLV	0-80	009	163
SPRING; FUEL CUT	0-89A	073	175
	0-89B	073	181
SPRING; IDLE	0-89A	037	172
	0-89A	037	173
	0-89B	037	178
SPRING; INSERT, 4TH & 3RD	2-26A	397	240
SPRING; INSERT, LOW & 2ND	2-26A	040	237
SPRING; INSERT, REV & 5TH	2-26A	062	237
SPRING; LOCK BALL	2-30A	108	243
SPRING; MAIN, LEVER	0-89A	035	172
	0-89B	035	178
SPRING; NOZZLE, NOZZLE HOLDER	0-40A	044	103
	0-40B	044	106
SPRING; PINION STARTER	0-65	047	153
SPRING; PLATE, CLUSTER GEAR	2-26A	183	239
SPRING; PLUNGER, INJ PUMP	0-80	063	164
SPRING; RELIEF VLV	0-51A	120	126
	0-51B	120	128
SPRING; RETURN, CONT	0-89A	030	172
	0-89B	030	178
SPRING; REV	2-30A	174	244
SPRING; ROCKER SHAFT	0-14A	095	33
	0-14B	095	36
SPRING; SET	0-89A	069	175
	0-89B	069	180
SPRING; SHIFT FORK	2-01A	119	225
SPRING; START	0-89A	036	172
	0-89B	036	178

ALPHABETICAL INDEX


SPRING; VLV - WASHER; PL,BRK

PART NAME	FIG	KEY	PAGE
SPRING; VLV	0-14A	068	32
	0-14B	068	35
STARTER ASM	0-60A	001	136
	0-60B	001	139
STATOR; GEN	0-66	022	159
STOPPER SET; PINION	0-65	073	153
STOPPER; DELIVERY VLV, INJ PUMP	0-80	008	163
STRAINER & PIPE ASM; OIL	0-51A	051	126
	0-51B	051	128
STUD; ADAPTER	0-20A	457	52
STUD; CASE TRANS	2-20A	067	231
STUD; COVER	0-12A	300	19
	0-12A	300	20
	0-12B	300	22
STUD; DUCT, AIR INLET	0-25A	652	63
	0-25B	652	64
STUD; EXH MANIF	0-11A	014	11
	0-11B	014	13
STUD; EXH PIPE	0-36A	013	97
	0-36A	066	97
STUD; EXH PIPE TO MANIF	0-27A	016	67
	0-27B	016	68
STUD; HSG	0-20A	226	51
	0-20B	226	55
STUD; OIL FILTER	0-12A	416	20
	0-12B	416	22
STUD; OIL PAN TO BLOCK	0-12A	054	18
	0-12B	054	21
STUD; PUMP HOLE	0-12A	205	19
	0-12B	205	22
STUD; ROCKER SHAFT BRKT	0-11A	050	12
	0-11B	050	14
STUD; STARTER	0-60B	009	139
STUD; TIMING GEAR CASE	0-20A	134	50
	0-20B	134	54
STUD; TURBOCHARGER	0-36A	012	97
STUD; WATER PUMP	0-12A	232	19
	0-12B	232	22
	0-30A	042	75
	0-30B	042	76
SUPPORT; WITH DRAW LEVER	2-20A	018	231
SWITCH; ENGAGE STARTER	0-65	031	152
SWITCH; IGNITION	8-25A	058	253
	8-25B	058	254
SWITCH; OIL PRESSURE	0-51A	132	126
	0-51B	132	128
SWITCH; OVER HEAT WARNING	0-60A	089	137
	0-60B	089	139
	0-60B	089	140
SWITCH; REV LAMP	2-30A	398	244
SYNCHRONIZER; 4TH & 3RD	2-26A	034	237
SYNCHRONIZER; LOW & 2ND	2-26A	038	237
SYNCHRONIZER; REV & 5TH	2-26A	061	237
TANK; SURGE, RAD	1-11A	001	193
	1-11B	001	194
TAPPET; CM/SHF, INJ PUMP	0-80	068	164
TAPPET; VLV	0-14A	089	33
	0-14B	089	36
THERMOSTAT	0-31A	001	79
	0-31B	001	80
TIMER ASM	0-60A	842	138
	0-60B	842	140
TIMER; GLOW PLUG	0-60A	657	138
	0-60B	657	140
TRANSMISSION ASM; MANUAL	2-20A	001	231
TUBE; GUIDE, OIL LEVEL GAUGE	0-13A	008	26
	0-13B	008	28
TURBOCHARGER ASM	0-36A	001	97
U-BOLT; EXH PIPE	1-50B	007	220
UNIT; OIL PRESSURE	0-12A	095	19
UNIT; THERMOMETER	0-30A	143	75
	0-30B	143	76
VALVE ASM; CHECK	0-52A	222	132
	0-52B	222	133
VALVE; DELIVERY, INJ PUMP	0-80	014	163
VALVE; EXH	0-14A	005	32
	0-14B	005	35
VALVE; INL	0-14A	004	32
	0-14B	004	35
VALVE; PCV	0-28A	133	71
	0-28B	133	72
VALVE; RELIEF, OIL PUMP	0-51A	121	126
	0-51B	121	128
VALVE; VACUATOR	1-30A	094	200
	1-30B	094	202
WASHER; CORRUGATED, NOZZLE	0-40A	049	103
	0-40B	049	107
WASHER; COUPLING DRIVER	2-20A	094	231
WASHER; CR/SHF PULLEY	0-15A	059	40
	0-15B	059	43
WASHER; FLYWHEEL	0-15A	038	39
	0-15B	038	42
WASHER; FLYWHEEL, GEN	0-66	115	160
WASHER; GEAR SHAFT STARTER	0-65	011	150
WASHER; IDLE SPR	0-89A	063	174
	0-89A	063	175
	0-89B	063	180
WASHER; LK	0-89A	066	175
	0-89B	066	180
WASHER; LK, ADJ PLATE	0-33A	094	90
	0-33B	094	93
WASHER; LK, COVER TO HSG	2-01A	018	225
WASHER; LK, SELECT LEVER	2-30A	168	244
WASHER; LK, STARTER	0-60A	292	138
	0-60B	292	140
WASHER; PL	0-15A	165	41
	0-15B	165	44
WASHER; PL, ADJ PLATE	0-33A	088	90
	0-33B	088	93
WASHER; PL, BRKT	1-30A	071	200


ALPHABETICAL INDEX

PART NAME	FIG	KEY	PAGE
WASHER: PL, BRKT	1-50A	055	218
	1-50B	055	220
WASHER: PL. BRKT	1-30B	071	201
WASHER: REV STOP SPRING	2-30A	180	244
WASHER: SEAL, WING NUT	1-30A	003	199
	1-30B	003	201
WASHER: THRUST, ARMATURE, STARTE	0-65	018	151
WASHER: THRUST, CR/SHF	0-15A	042	40
	0-15B	042	42
WASHER: THRUST, LEVER	0-89A	031	172
	0-89B	031	178
WASHER: THRUST, MAINSHAFT	2-26A	281	239
WASHER: THRUST, REV GEAR	2-26A	074	238
WIRE: FUSIBLE LINK	8-10A	250	247
WIRE: LEAD SEAL	0-89A	048	173
	0-89B	048	179
YOKE: STARTER	0-65	013	150


ILLUSTRATION INDEX

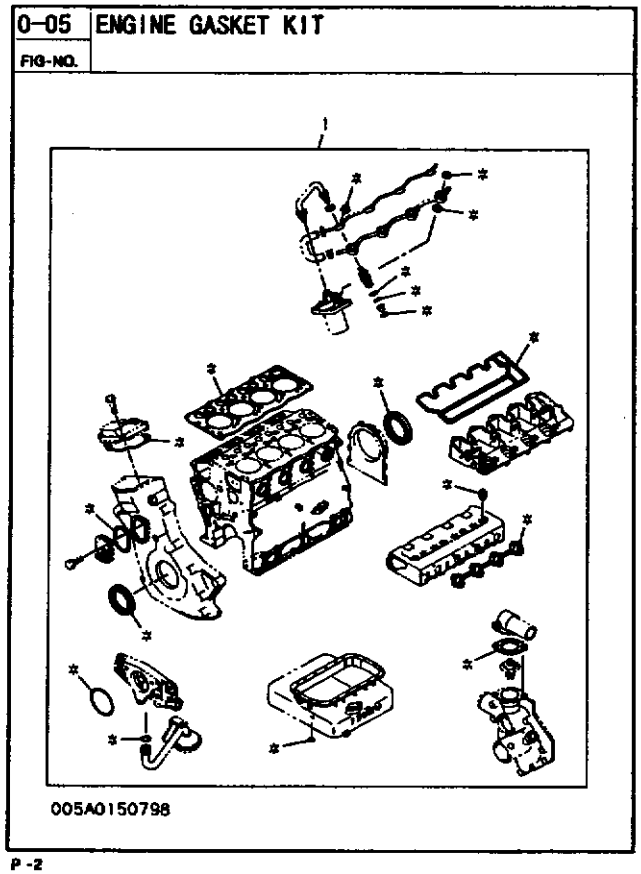


P-2

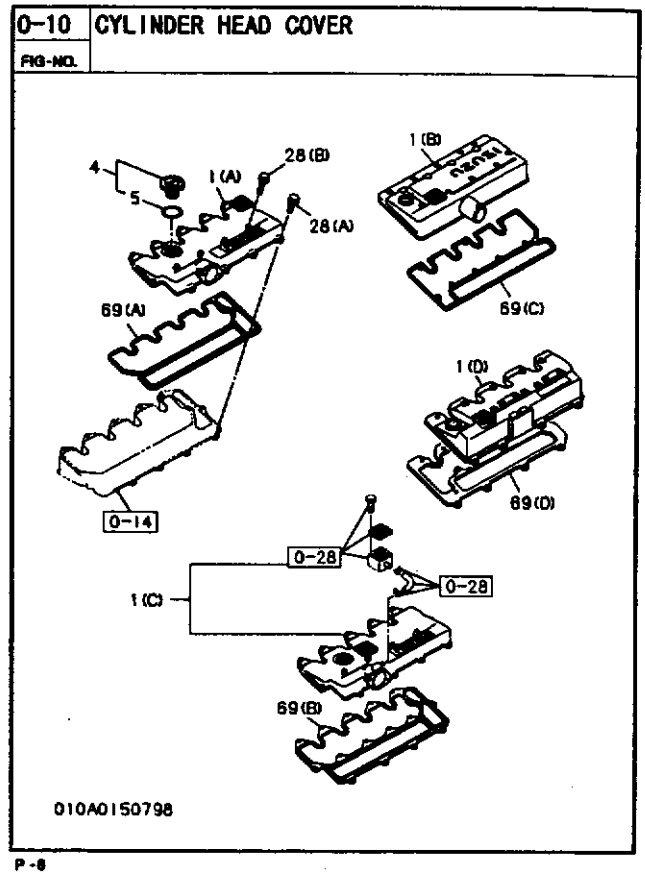

P-8

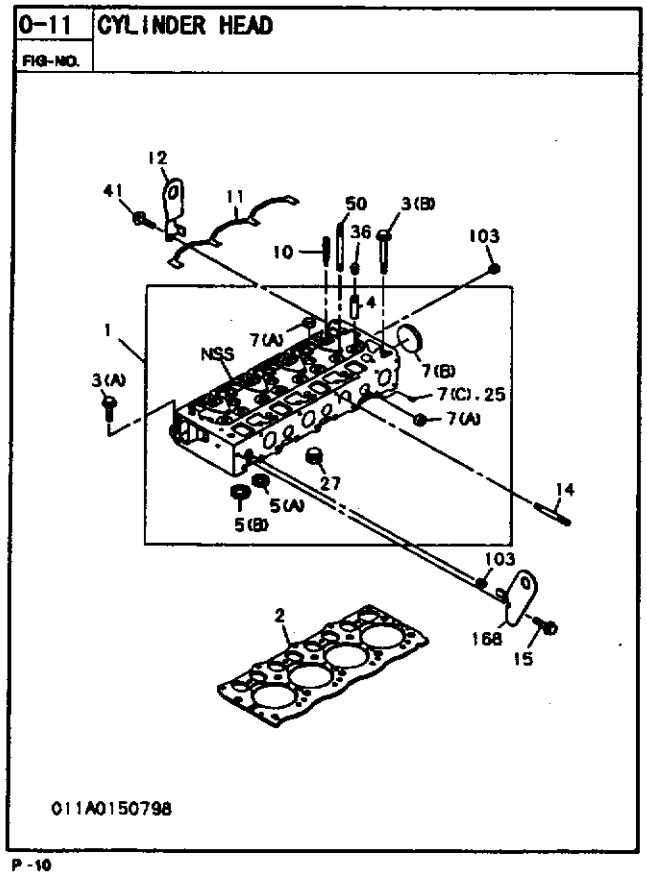


P-10

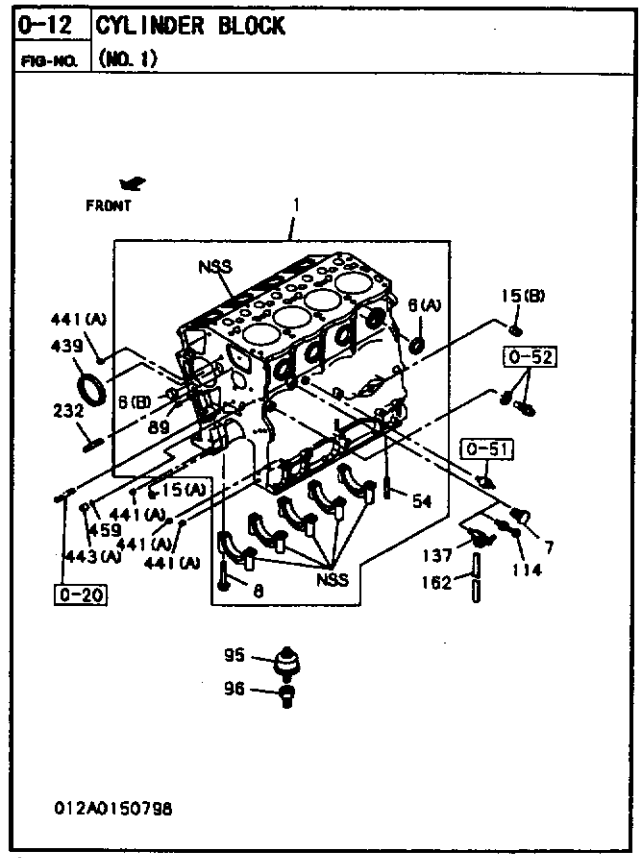

P-16


ILLUSTRATION INDEX

CYLINDER BLOCK (NO. 2) — 0-12 FIG-NO.

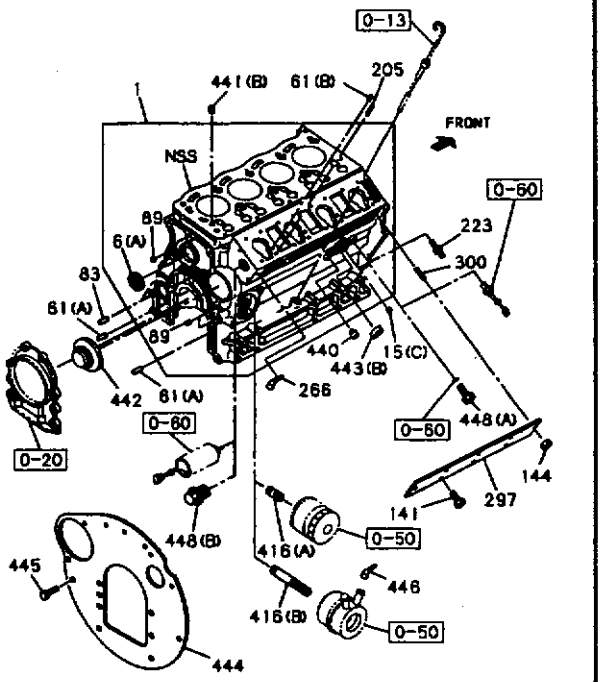


P-17

0-13 FIG-NO. OIL PAN AND LEVEL GAUGE (NO. 1)

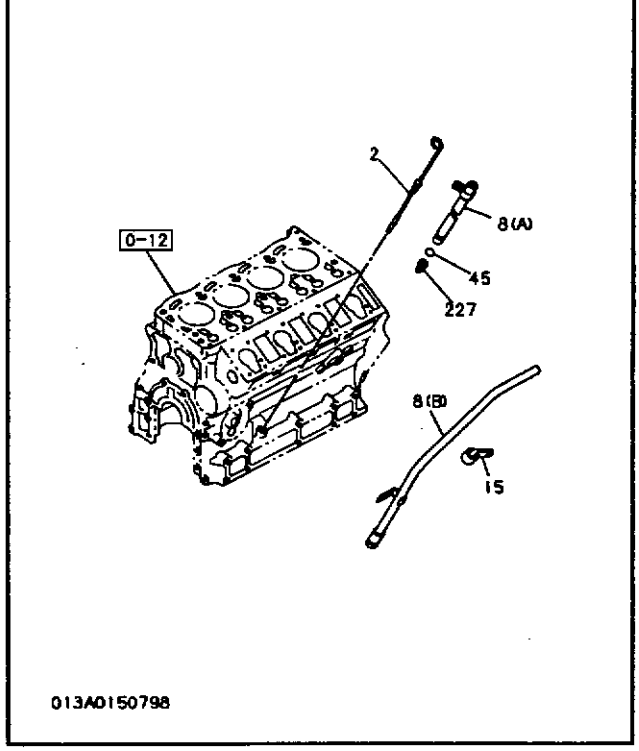


P-24

OIL PAN AND LEVEL GAUGE (NO. 2) — 0-13 FIG-NO.

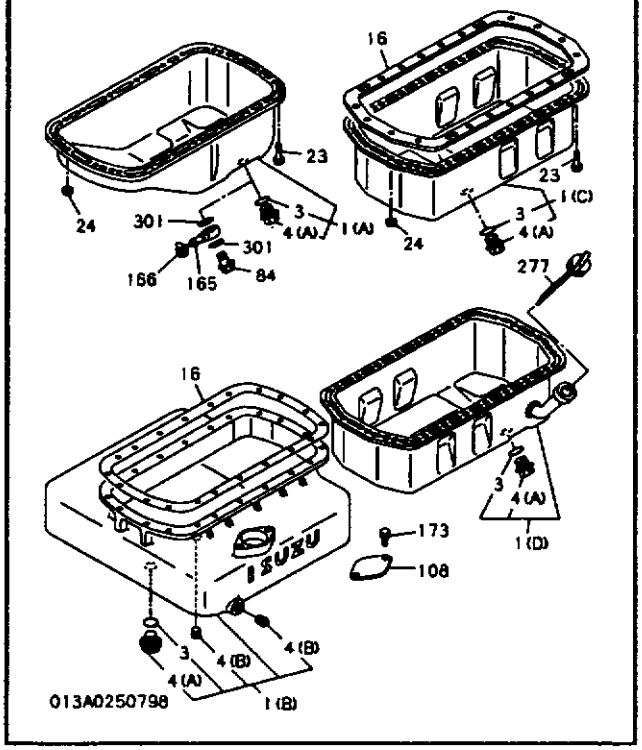

P-25


0-14 FIG-NO. CAMSHAFT AND VALVE (NO. 1)

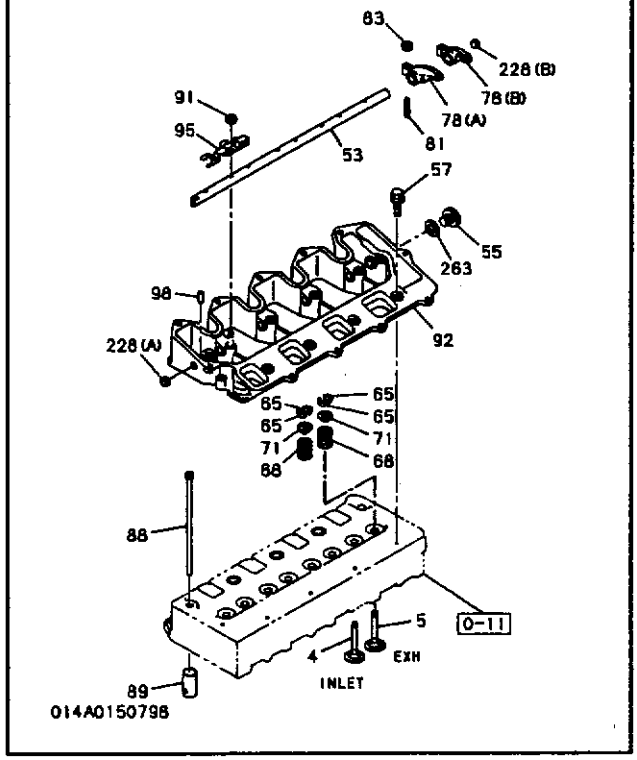

P-30


ILLUSTRATION INDEX

CAMSHAFT AND VALVE (NO. 2) — 0-14 FIG-NO.

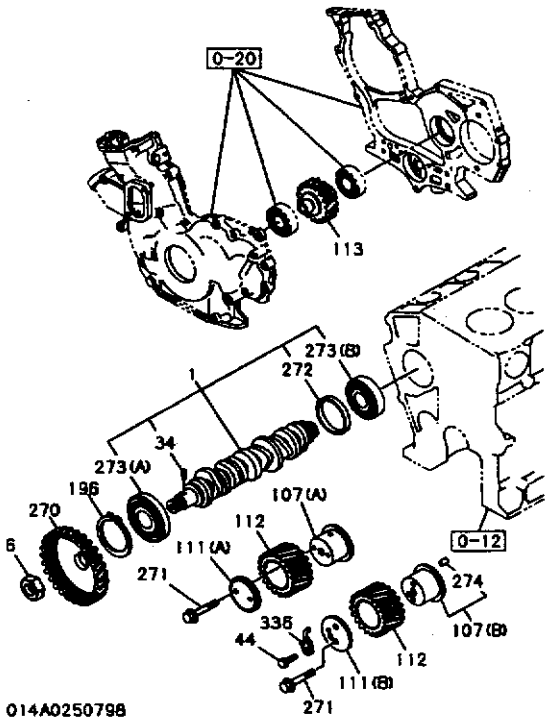


P-31

0-15 CRANKSHAFT, PISTON AND FLYWHEEL — FIG-NO.

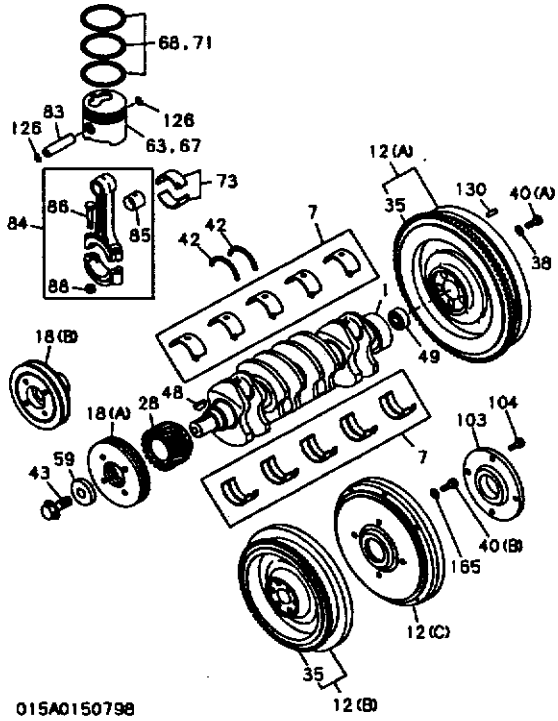


P-38

0-20 TIMING GEAR CASE AND FLYWHEEL HOUSING (NO. 1) — FIG-NO.

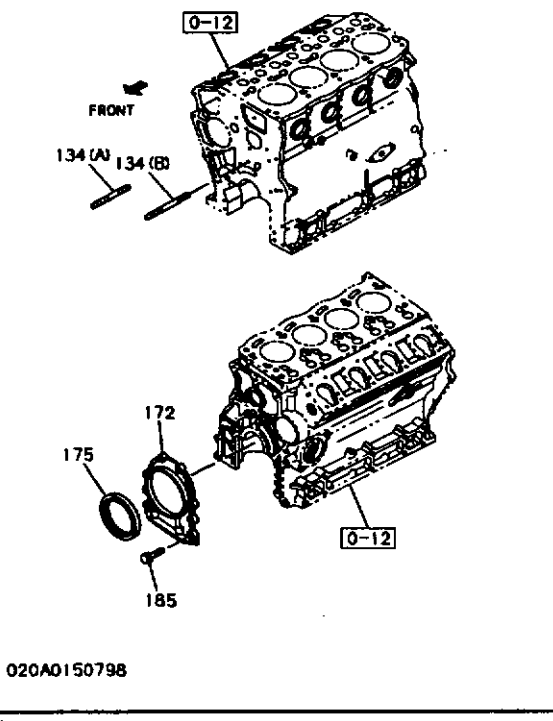

P-48


TIMING GEAR CASE AND FLYWHEEL HOUSING (NO. 2) — 0-20 FIG-NO.

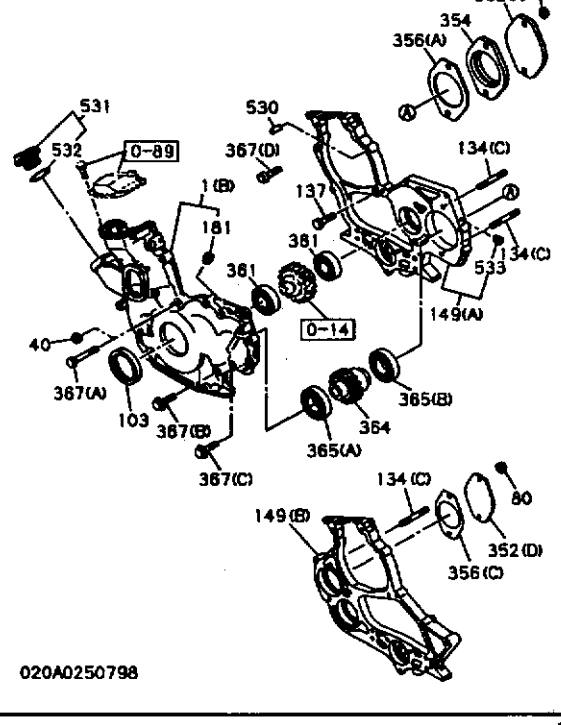

P-47

ILLUSTRATION INDEX


0-20	TIMING GEAR CASE AND FLYWHEEL HOUSING
FIG-NO.	(NO. 3)

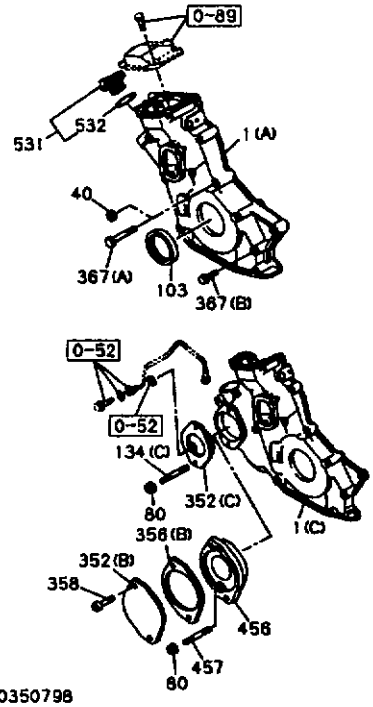

020A0350798

P-48


TIMING GEAR CASE AND FLYWHEEL HOUSING	0-20
(NO. 4)	FIG-NO.

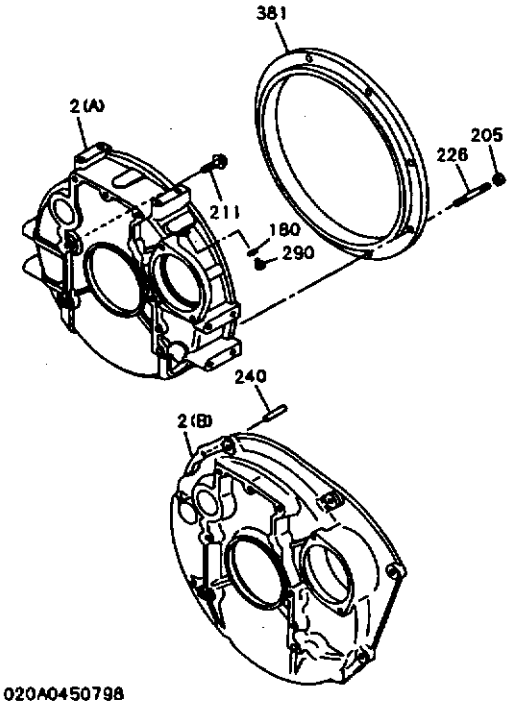

020A0450798

P-48


0-22	ENGINE MOUNTING
FIG-NO.	

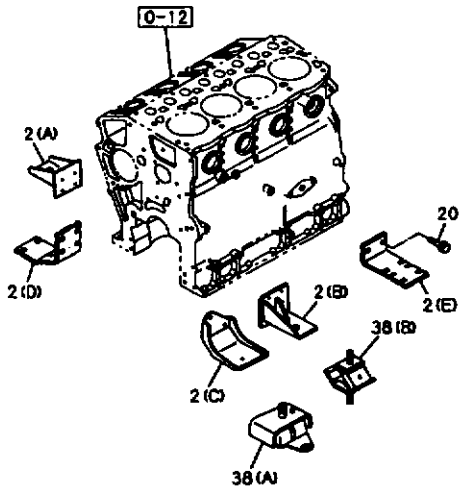

022A0150798

P-58

0-25	INLET MANIFOLD
FIG-NO.	

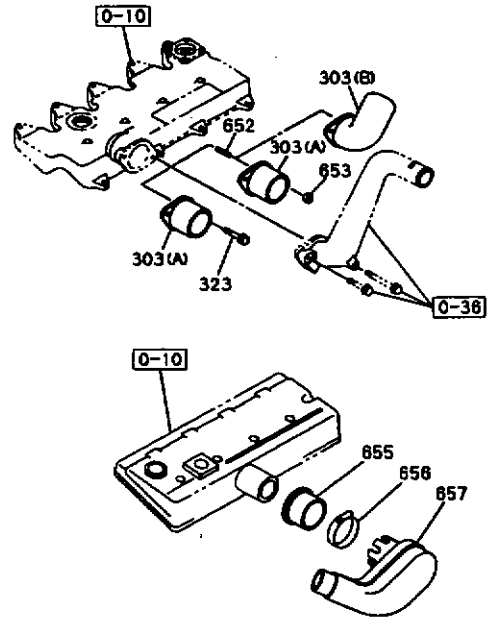


025A0150798

P-62

ILLUSTRATION INDEX


0-27	EXHAUST MANIFOLD
FIG-NO.	

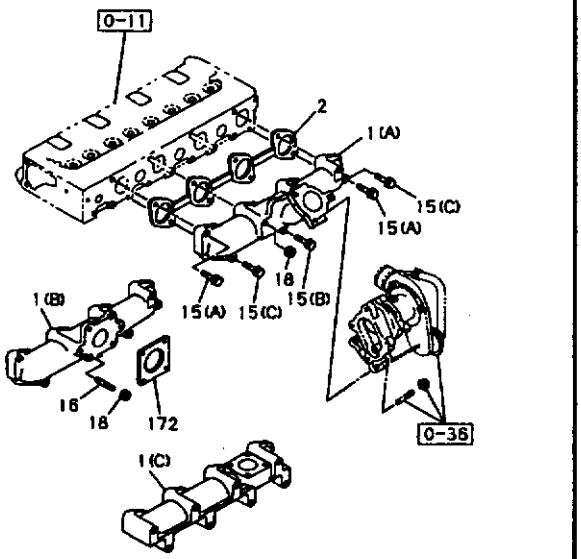

027A0150798

P -68


0-28	VENTILATION SYSTEM
FIG-NO.	

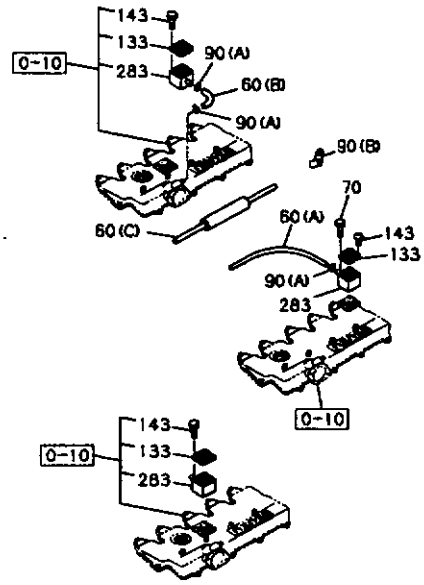

028A0150798

P -70


0-30	WATER PUMP AND CORROSION RESISTOR
FIG-NO.	

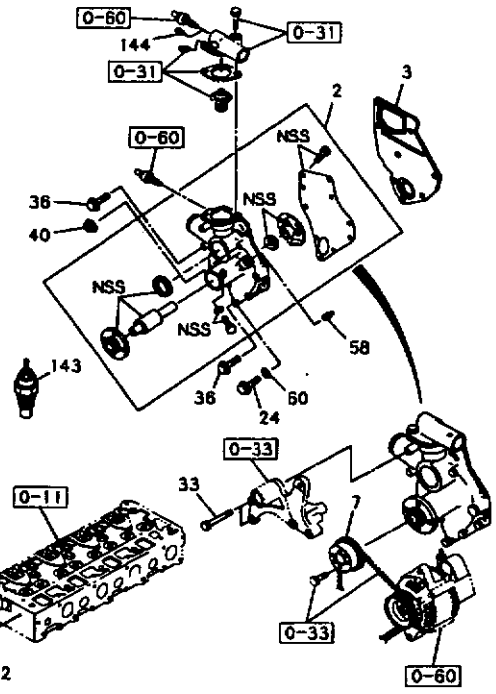

030A0150798

P -74

0-31	THERMOSTAT AND HOUSING
FIG-NO.	

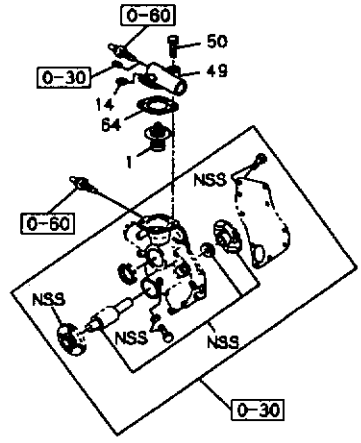


031A0150798

P -78

ILLUSTRATION INDEX


0-32	WATER PIPING: ENGINE
FIG-NO.	

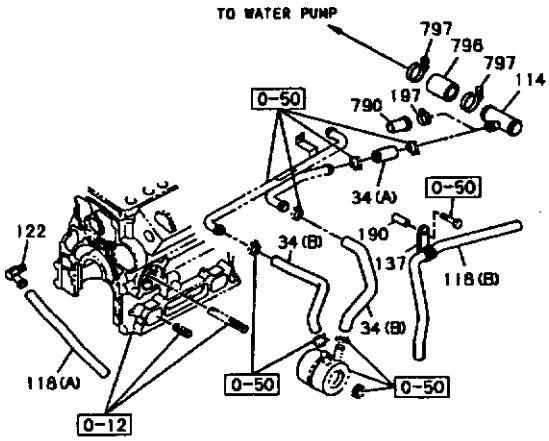

032A0150798

P-82


0-33	FAN AND FAN BELT
FIG-NO.	(NO. 1)

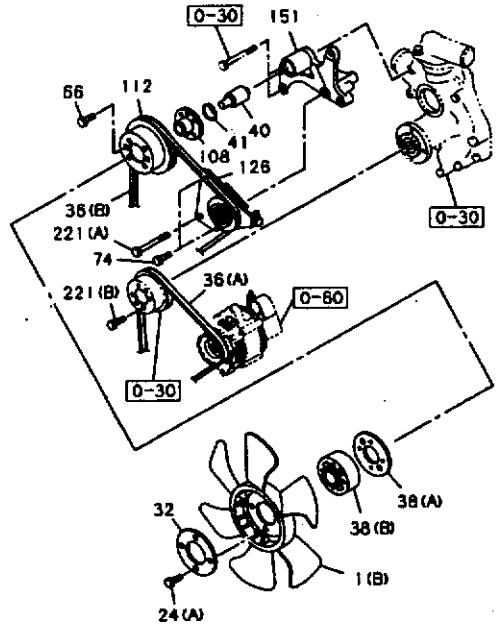

033A0150798

P-86


FAN AND FAN BELT	0-33
(NO. 2)	FIG-NO.

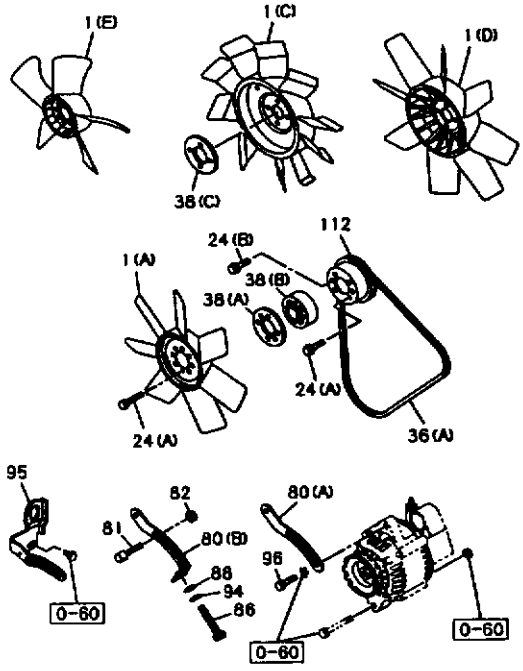

033A0250798

P-87


0-36	TURBOCHARGER SYSTEM
FIG-NO.	

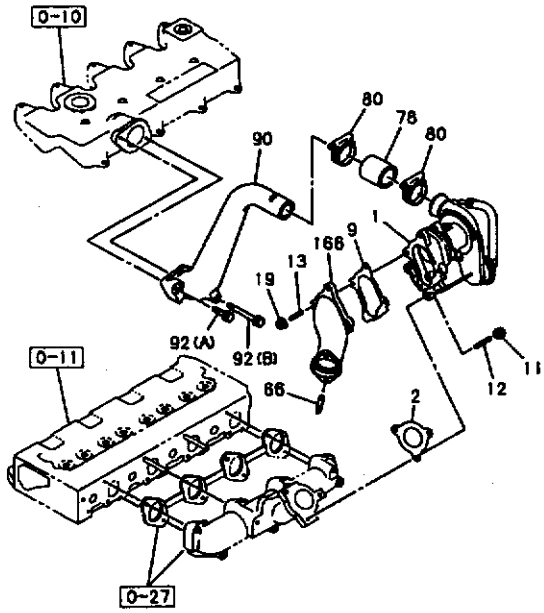


036A0150798

P-96


ILLUSTRATION INDEX

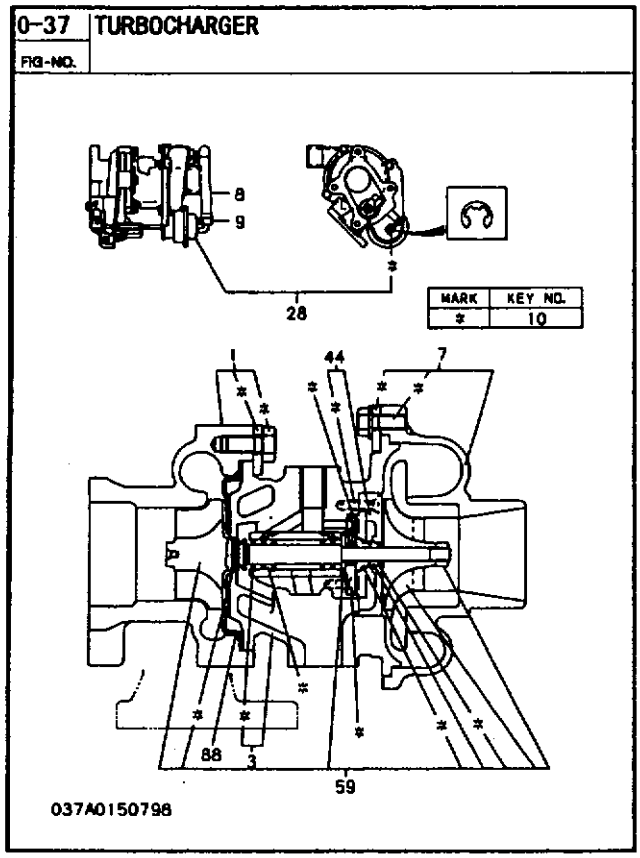


P -98

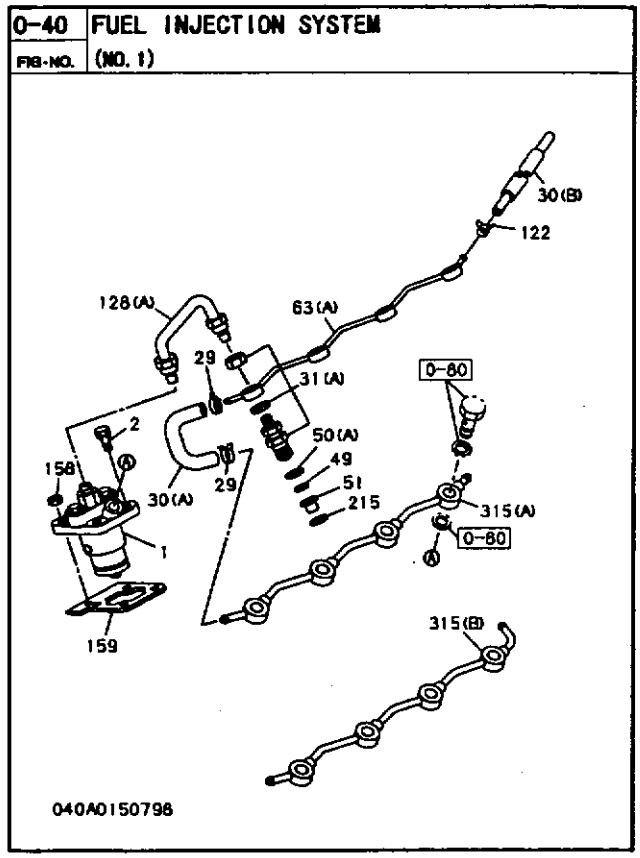

P -100

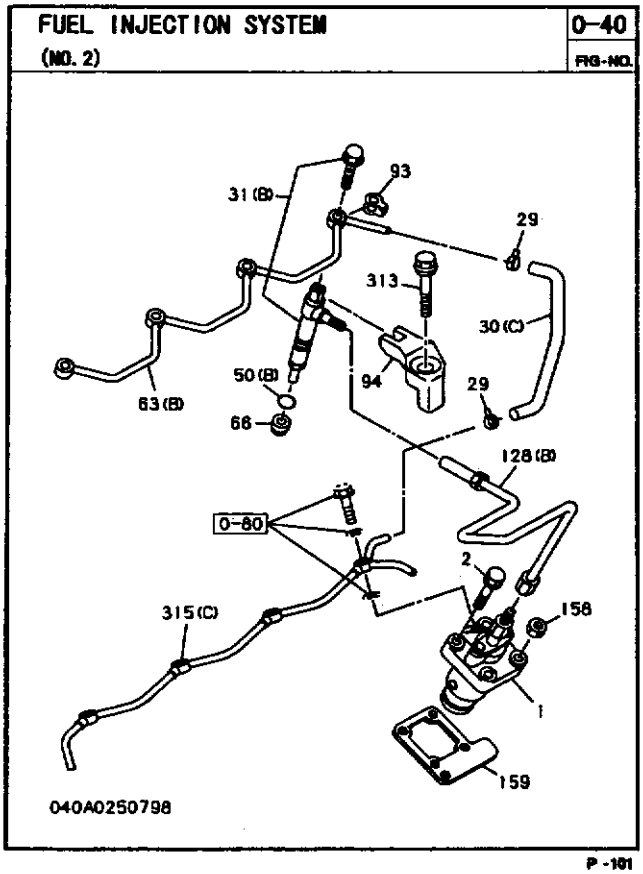


P -101

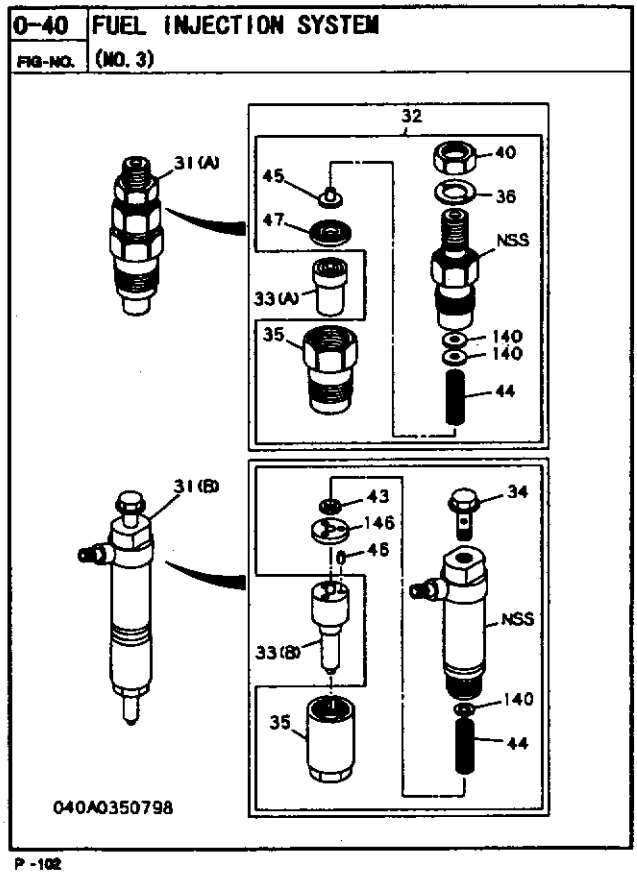

P -102


ILLUSTRATION INDEX

0-41	FUEL FILTER AND BRACKET
FIG-NO.	

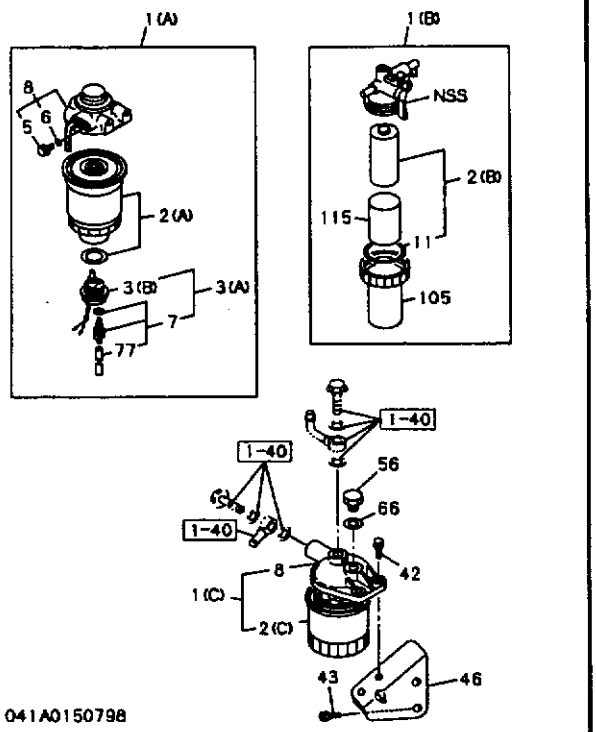


P-110

0-42	FUEL PUMP AND PIPE
FIG-NO.	

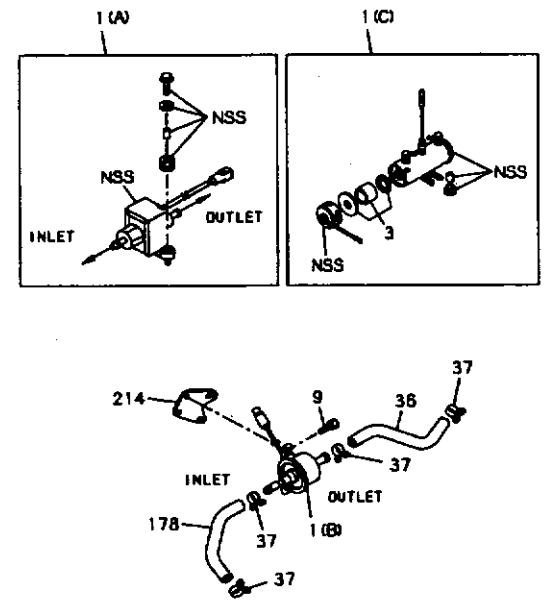


P-116

0-50	OIL COOLER AND OIL FILTER
FIG-NO.	

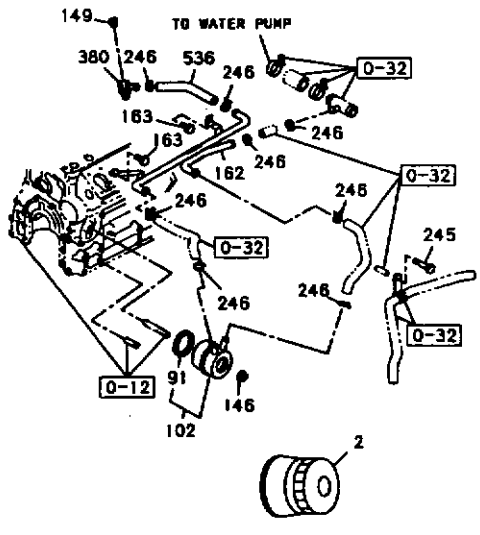


P-120

0-51	OIL PUMP AND OIL STRAINER
FIG-NO.	(NO. 1)

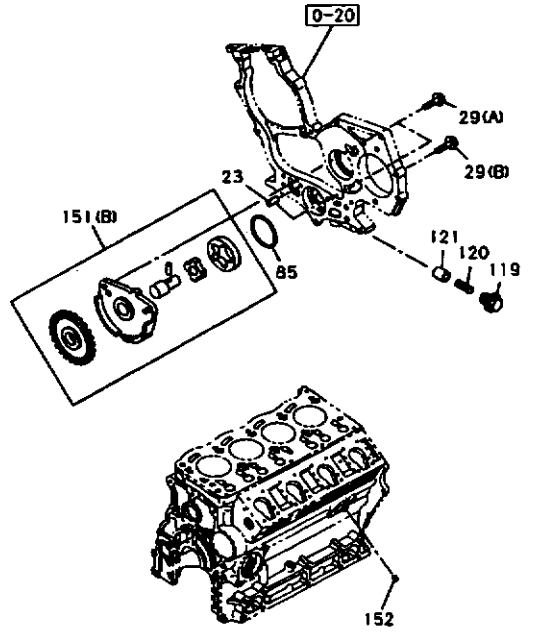


P-124


ILLUSTRATION INDEX

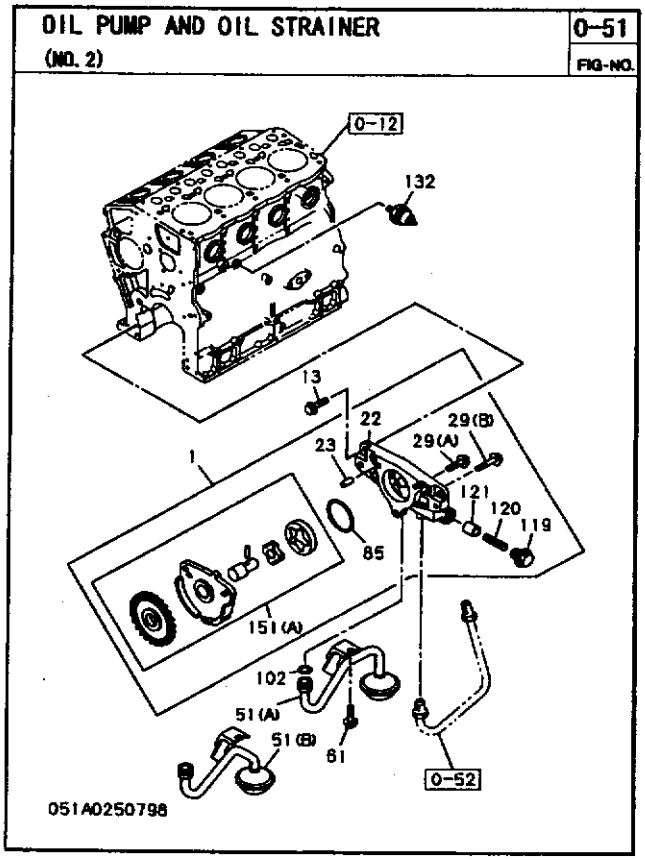


P-125

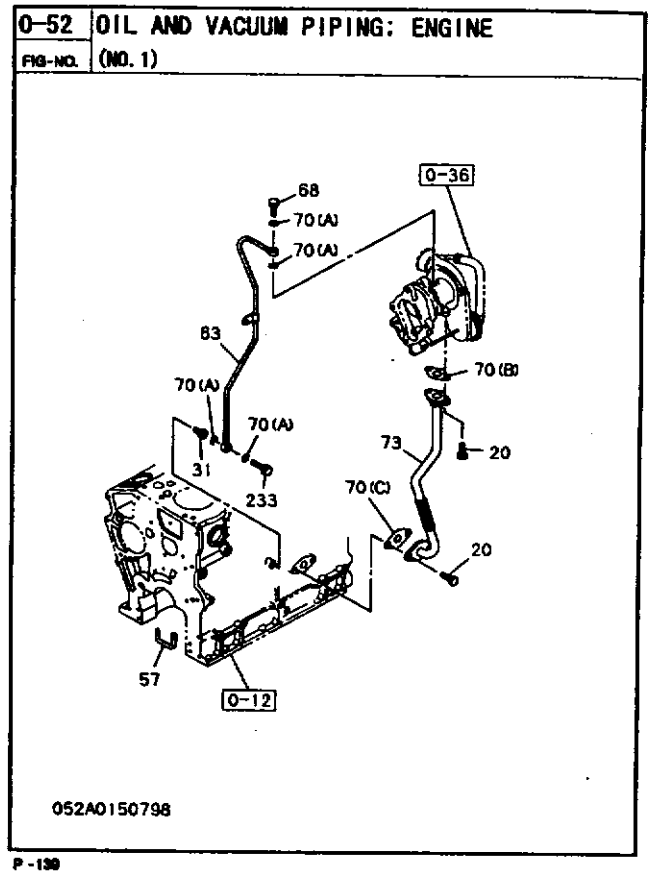

P-130

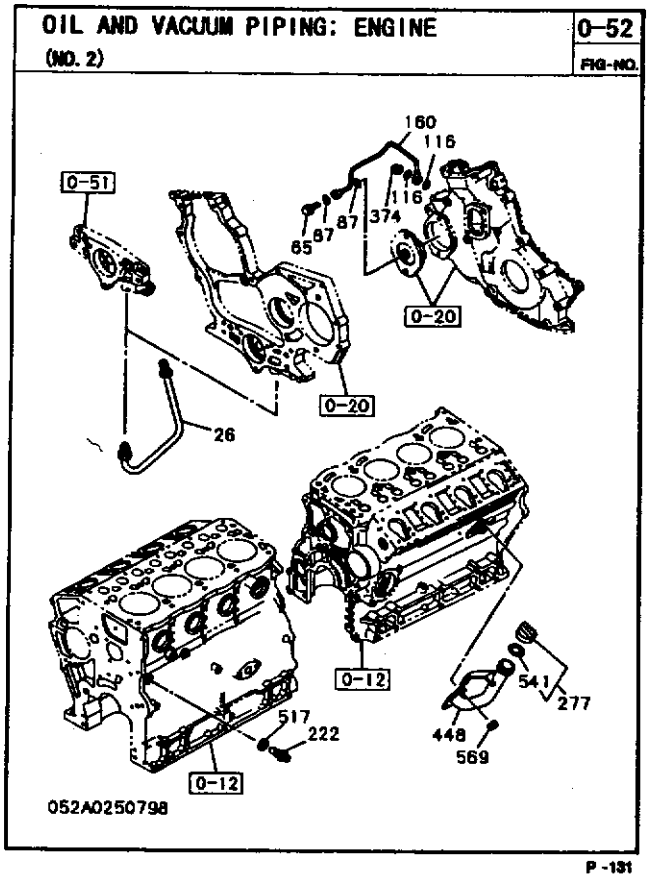


P-131

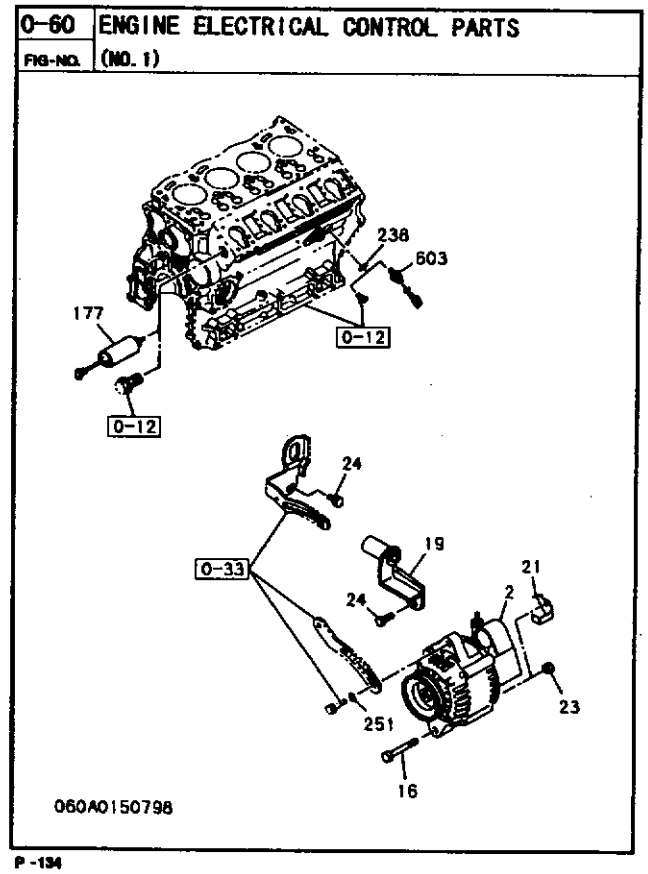

P-134

ILLUSTRATION INDEX

ENGINE ELECTRICAL CONTROL PARTS (NO. 2)	0-60 FIG-NO.

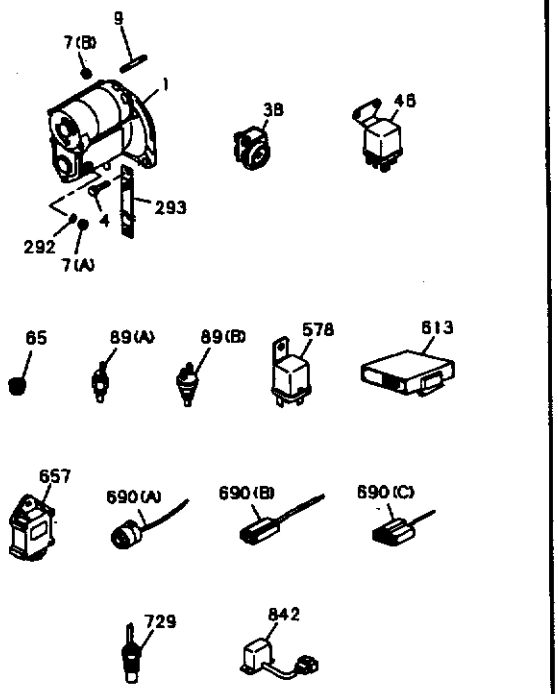


P-135

0-61 FIG-NO.	BATTERY AND BATTERY CABLE




P-142

0-65 FIG-NO.	STARTER (NO. 1)

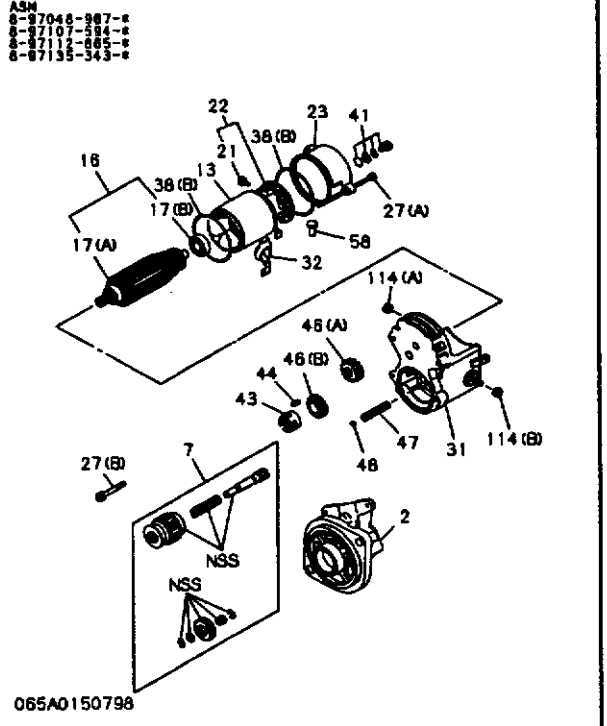

P-146


STARTER (NO. 2)	0-65 FIG-NO.

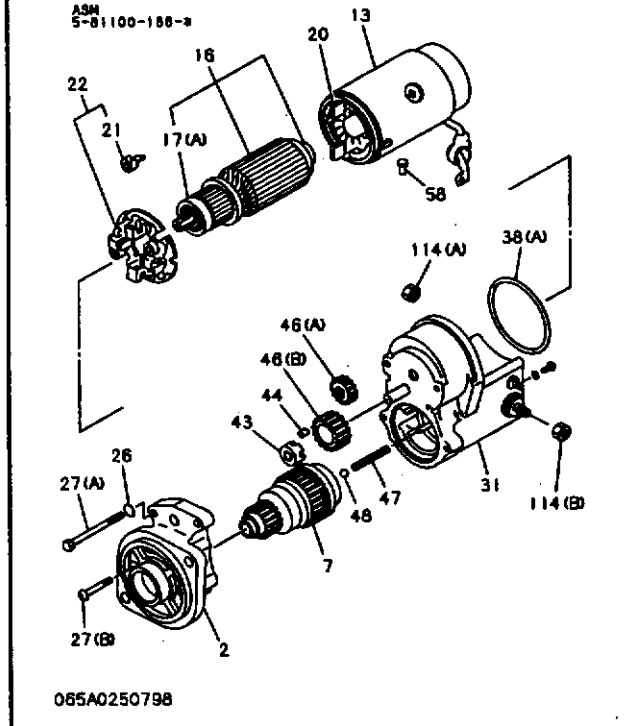

P-147


ILLUSTRATION INDEX

0-65 FIG-NO.	STARTER (NO. 3)

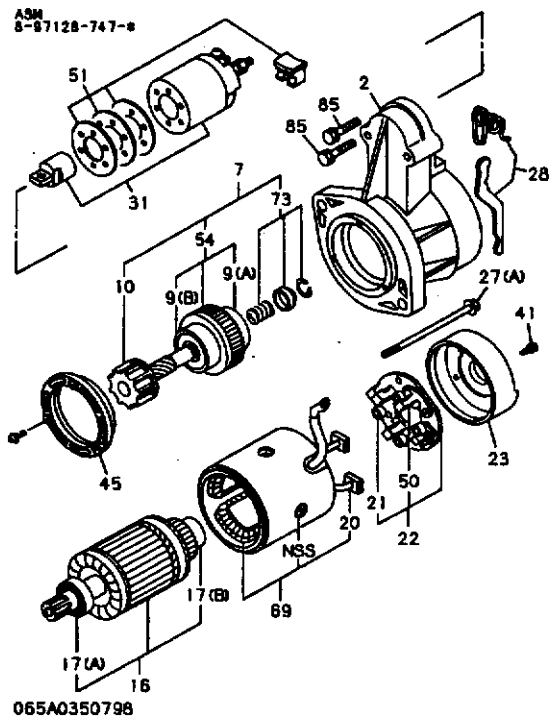


P-148

STARTER (NO. 4)	0-65 FIG-NO.

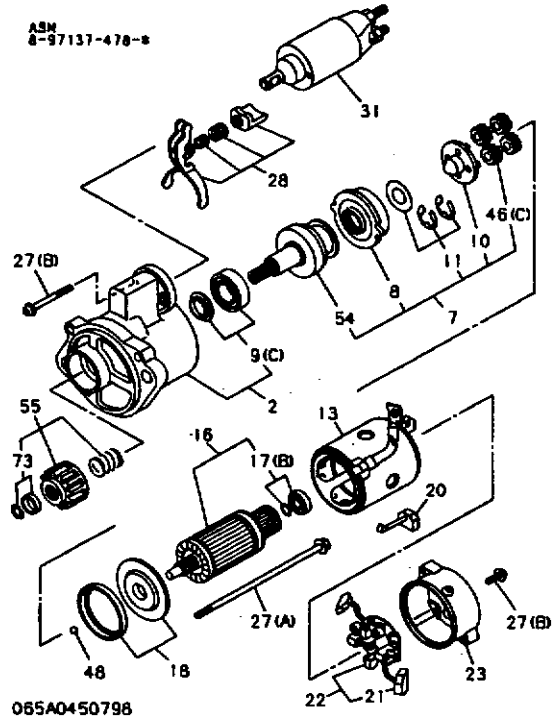


P-149

0-66 FIG-NO.	GENERATOR (NO. 1)

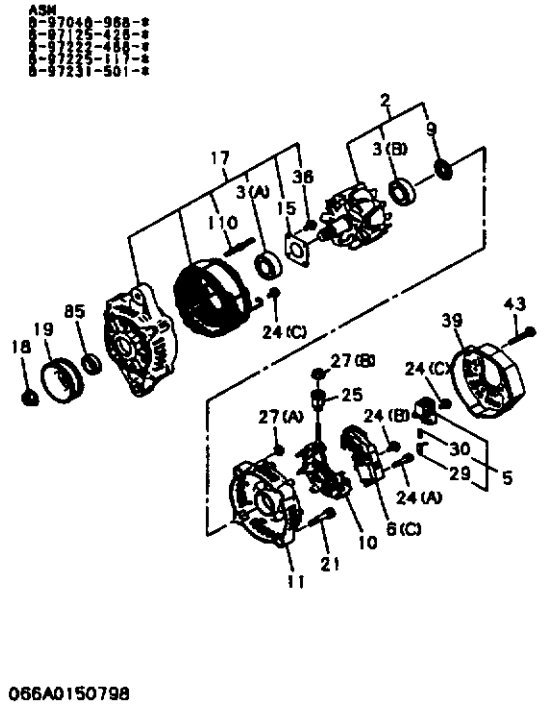

P-154


GENERATOR (NO. 2)	0-66 FIG-NO.

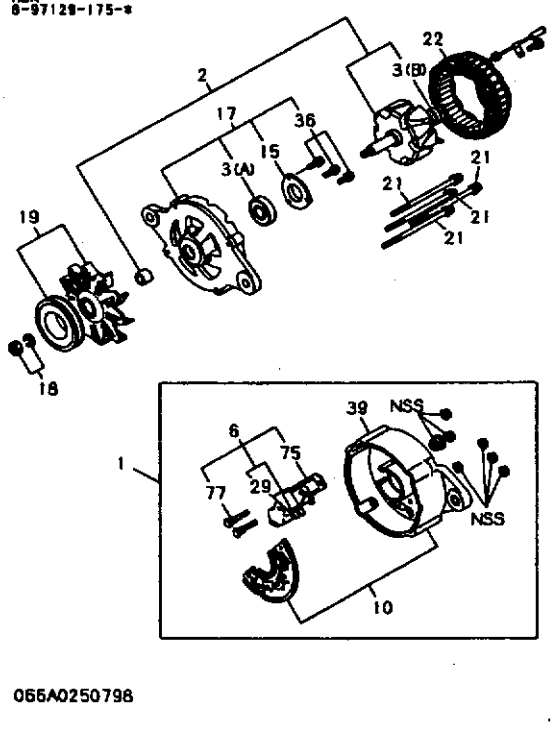

P-155


ILLUSTRATION INDEX

0-66	GENERATOR
FIG-NO.	(NO. 3)

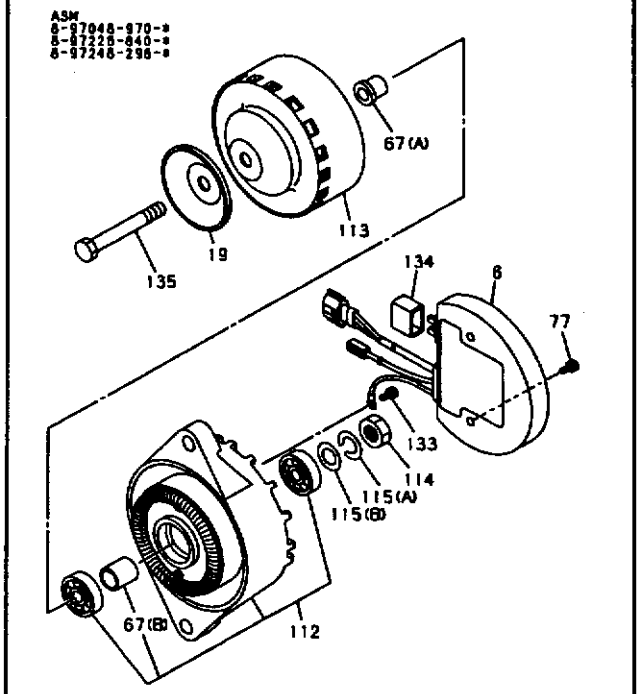


P -156

GENERATOR	0-66
(NO. 4)	FIG-NO.

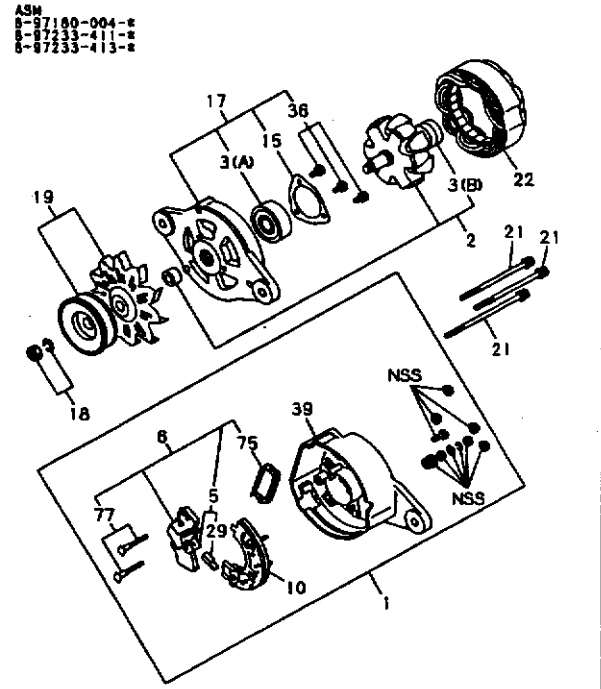


P -157

0-80	INJECTION PUMP
FIG-NO.	

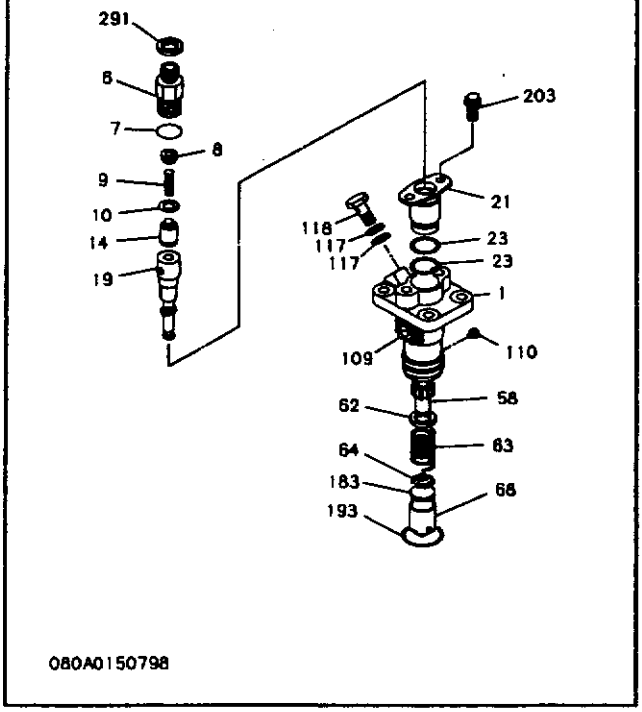

P -162


0-89	TIMING CHAIN CASE
FIG-NO.	(NO. 1)

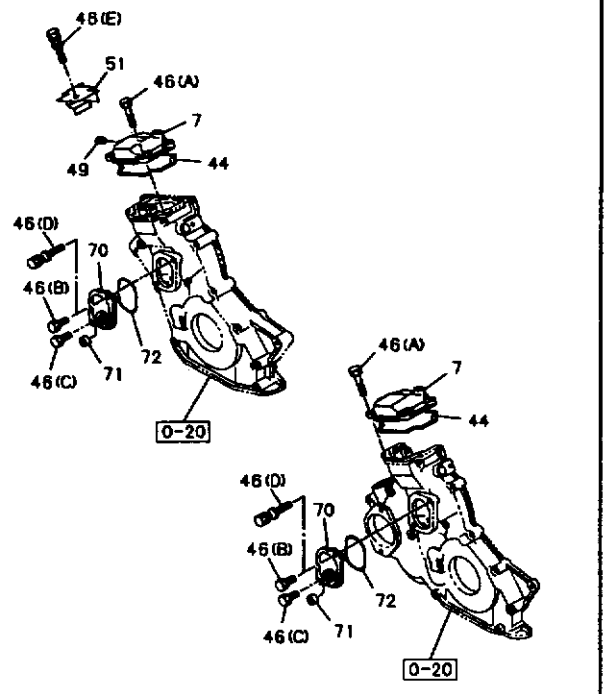

P -166

ILLUSTRATION INDEX


TIMING CHAIN CASE (NO. 2)	0-89 FIG-NO.

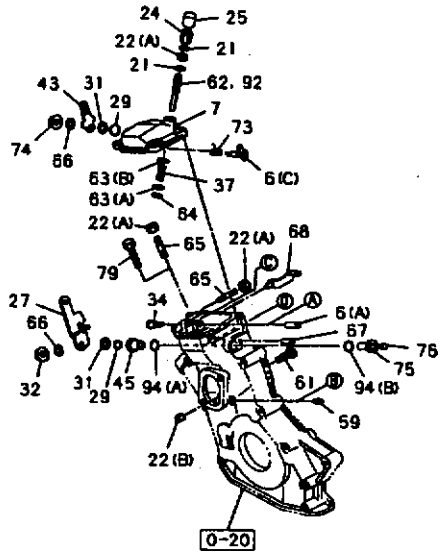

089A0250798

P-169


0-89 FIG-NO.	TIMING CHAIN CASE (NO. 3)

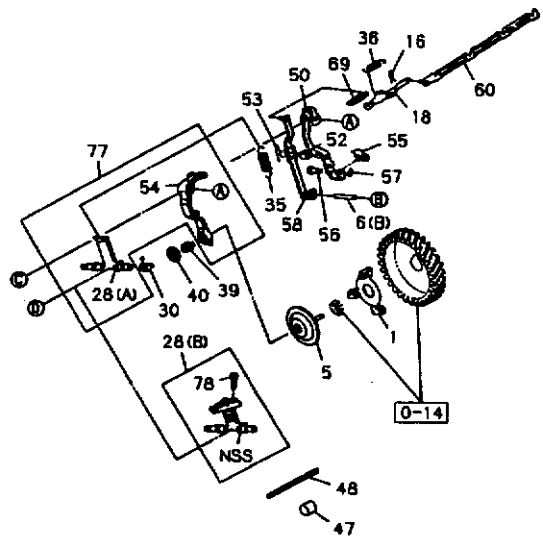

089A0350798

P-170


1-01 FIG-NO.	ACCELERATOR PEDAL AND CONTROL

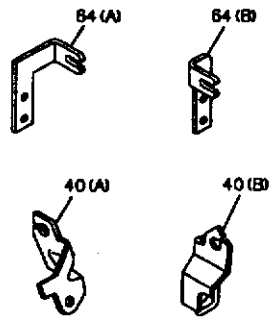

101A0150798

P-184

1-10 FIG-NO.	RADIATOR

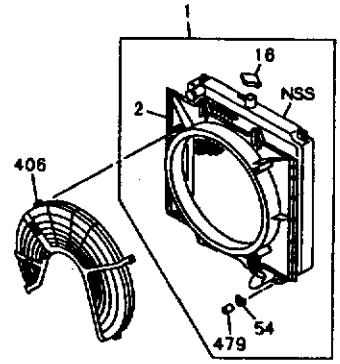


110A0150798

P-188

ILLUSTRATION INDEX


1-11	RADIATOR HOSE AND SUB TANK
FIG-NO.	

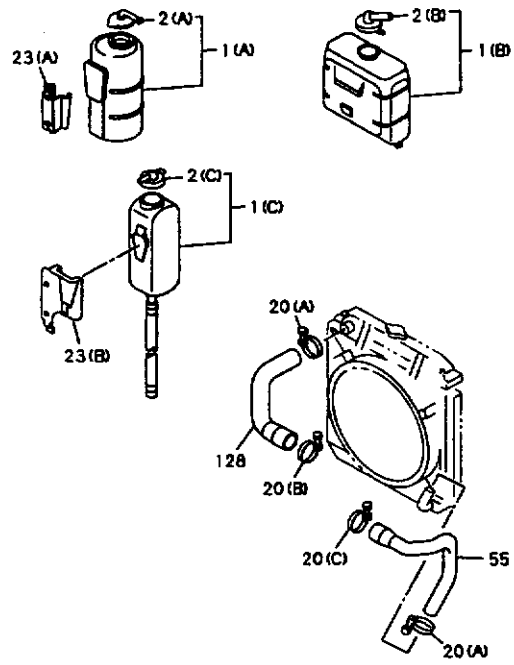

111A0150798

P-192


1-30	AIR CLEANER
FIG-NO.	(NO. 1)

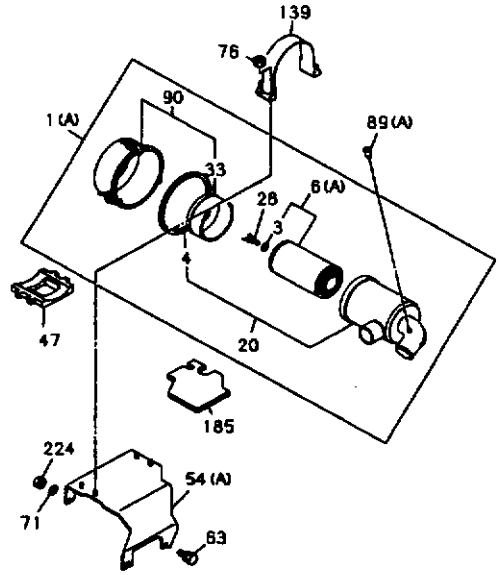

130A0150798

P-196


AIR CLEANER	1-30
(NO. 2)	FIG-NO.

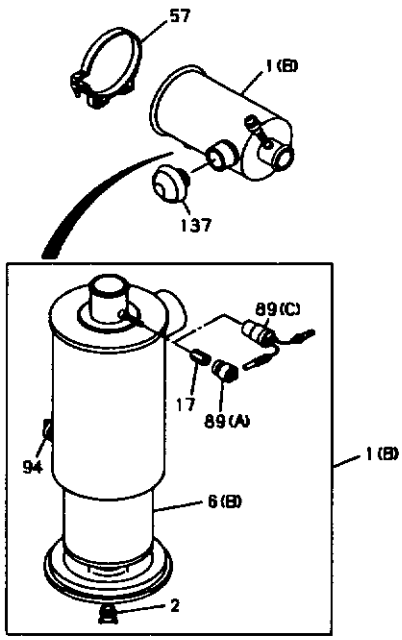

130A0250798

P-197

1-30	AIR CLEANER
FIG-NO.	(NO. 3)

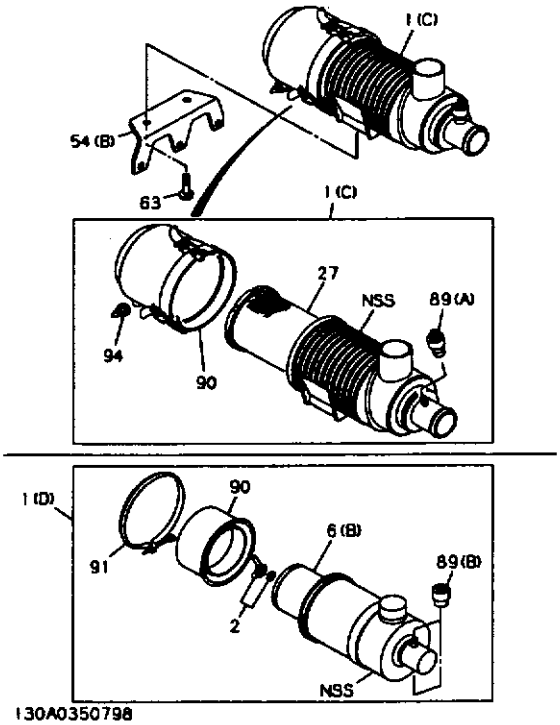


130A0350798

P-198

ILLUSTRATION INDEX

1-31 AIR DUCT

FIG-NO.

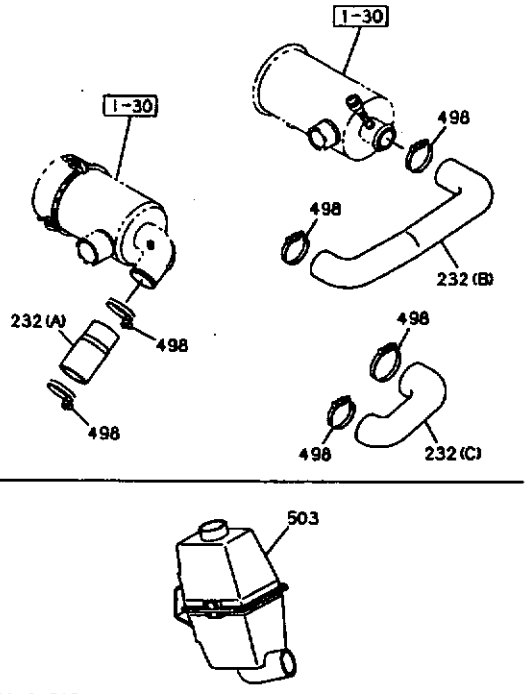


131A0150798

P -204

1-40 FUEL TANK

FIG-NO.

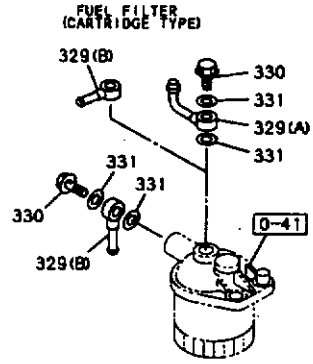


140A0150798

P -208

1-45 WATER SEDIMENTER; FUEL

FIG-NO.

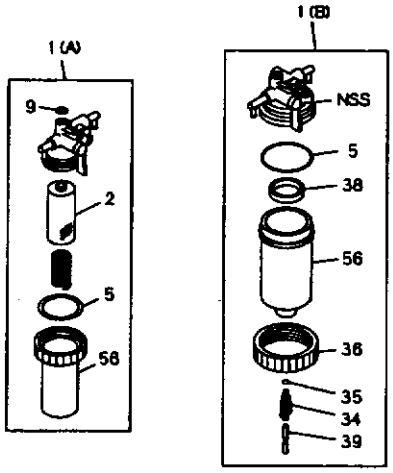


145A0150798

P -212

1-50 EXHAUST PIPE AND SILENCER

FIG-NO. (NO. 1)

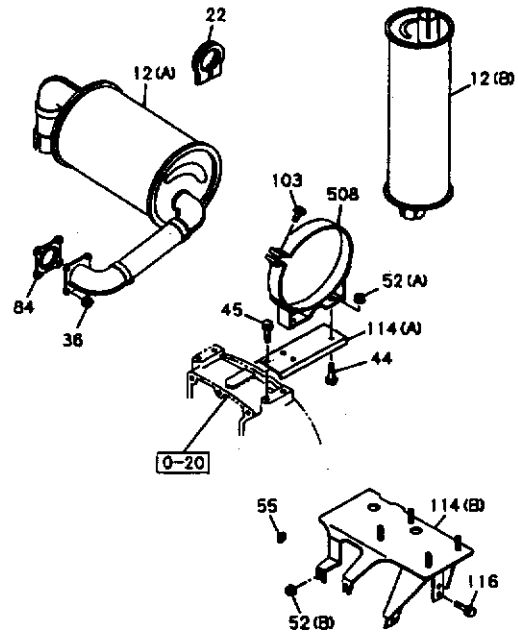


150A0150798

P -216

ILLUSTRATION INDEX


EXHAUST PIPE AND SILENCER (NO. 2) 1-50 FIG-NO.

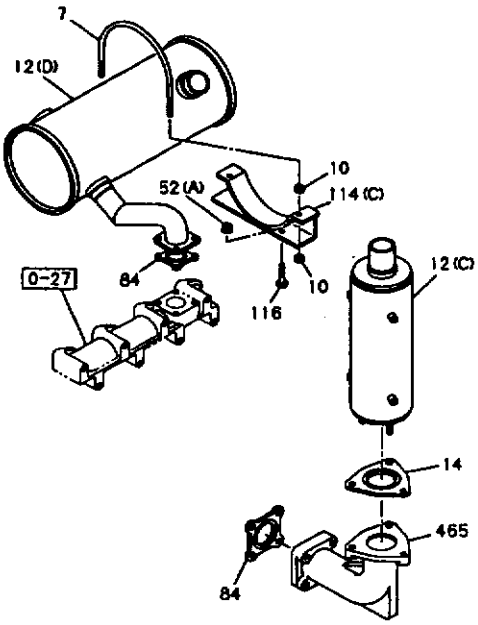

150A0250798

P -217


2-01 CLUTCH FIG-NO.

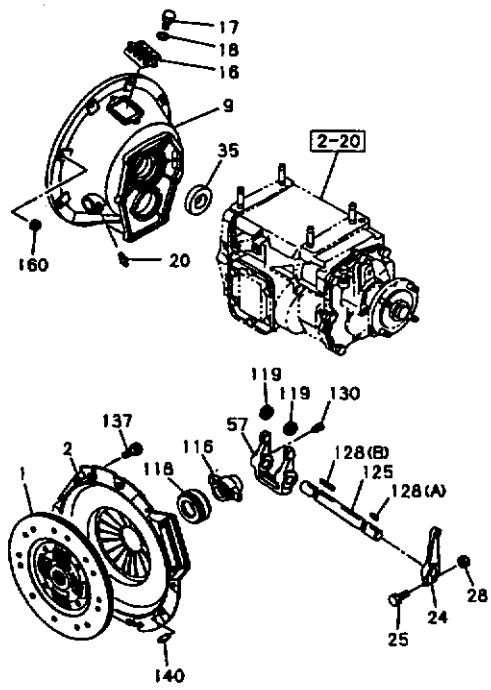

201A0150798

P -224


2-03 CLUTCH PEDAL AND CONTROL FIG-NO.

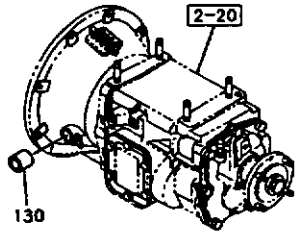

203A0150798

P -228

2-20 MANUAL TRANSMISSION ASM AND CASE FIG-NO.

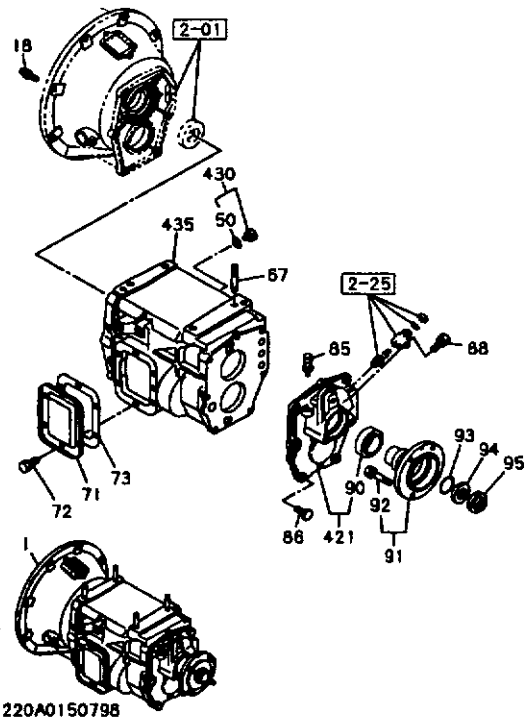


220A0150798

P -230

ILLUSTRATION INDEX


2-25	SPEEDOMETER DRIVEN GEAR
FIG-NO.	

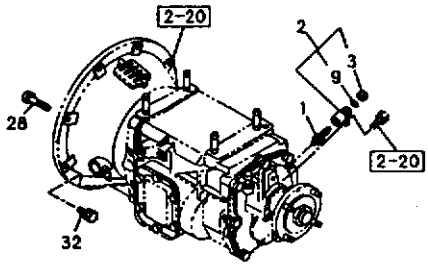

225A0150798

P -234


2-26	MANUAL TRANSMISSION GEAR
FIG-NO.	

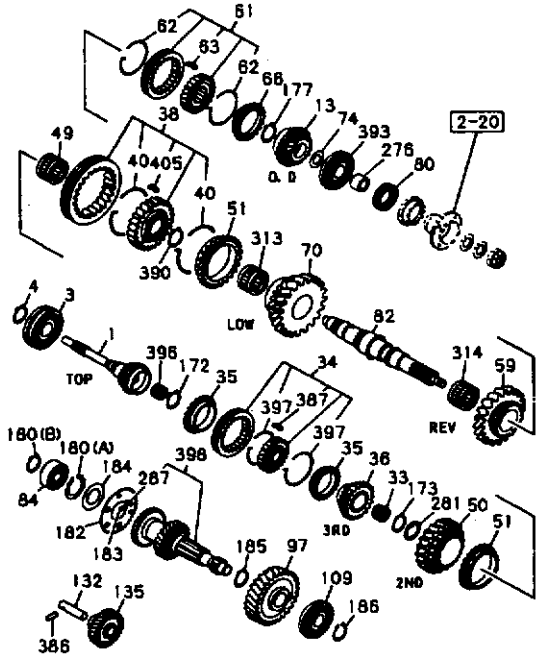

226A0150798

P -236

2-30	GEAR SHIFTER AND QUADRANT BOX
FIG-NO.	

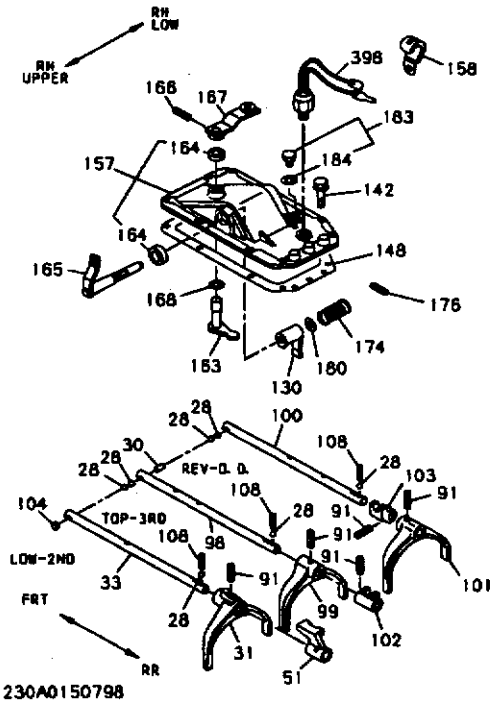

230A0150798

P -242

8-10	WIRING HARNESS AND FUSE
FIG-NO.	




810A0150798

P -246

ILLUSTRATION INDEX

8-21 METER ASM

FIG-NO.

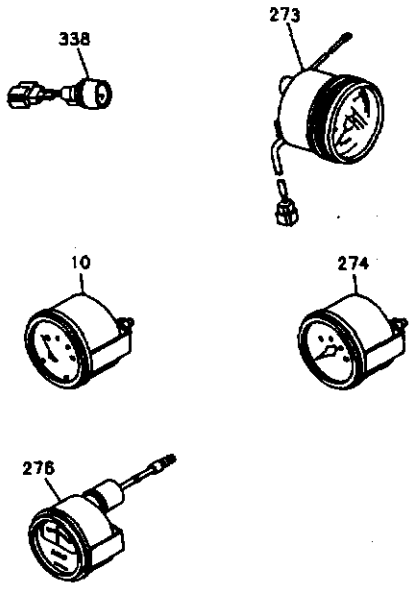


821A0150798

P -246

8-25 SWITCH AND RELAY: INSTRUMENT PANEL

FIG-NO.

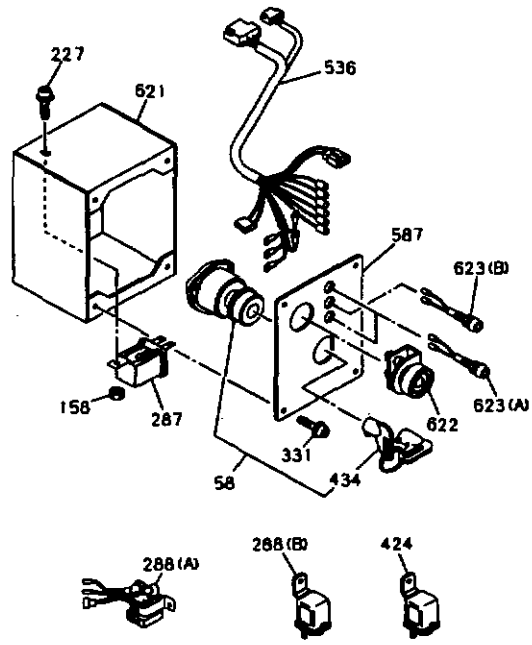

825A0150798

P -252

8-26 ELECTRICAL CONTROL AND OTHER PARTS


FIG-NO.




826A0150798

P -258

[redacted]

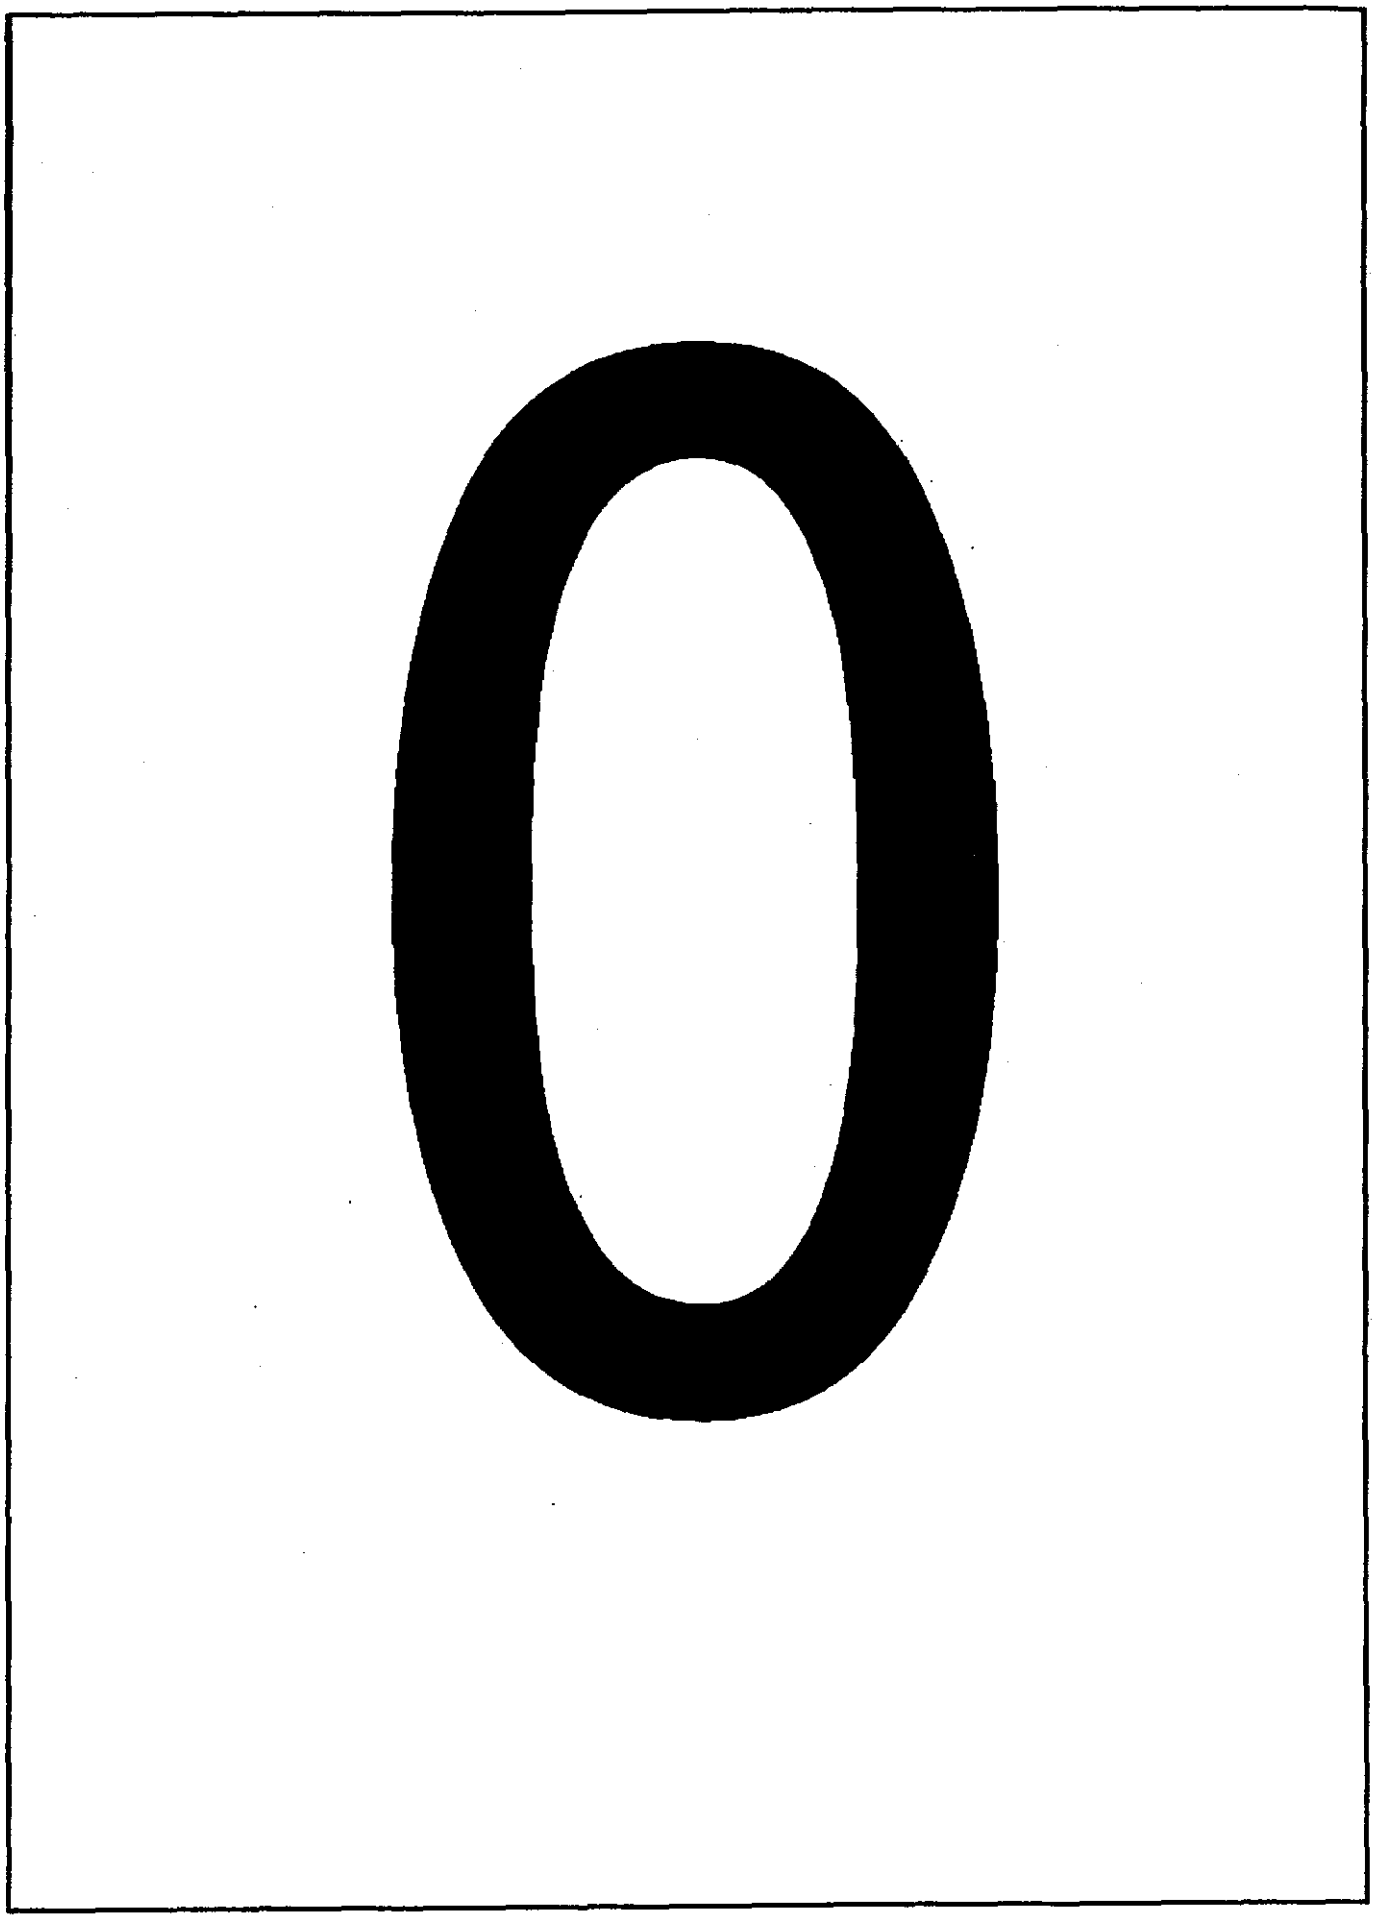
0

0-05	ENGINE GASKET KIT
FIG-NO.	

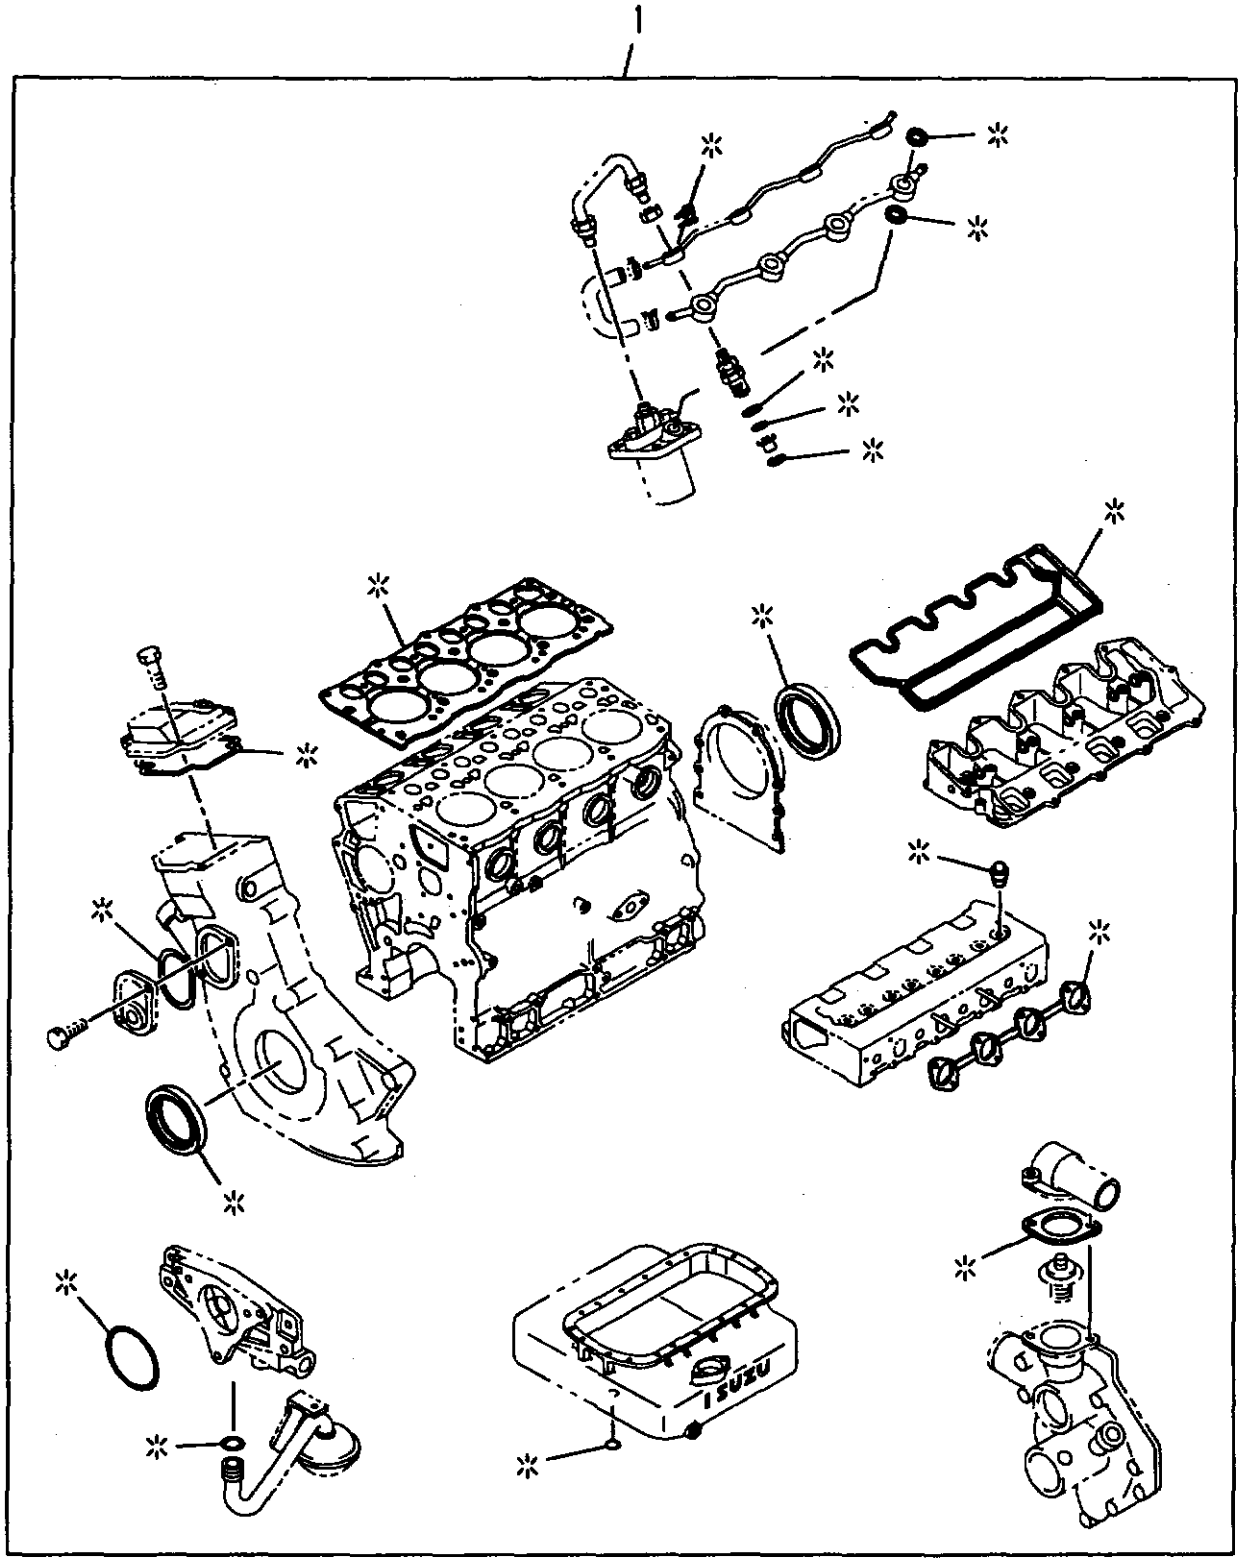

005A0150798

ENGINE GASKET KIT

FIG-NO. 0-05 A

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1		4LC1			4LE1					Remarks
						PA01 PA02 PA03 PA04 PA05	PA06 PA07 TPA TPA01 TPA02	PA PA01 PA02 PA03 PA04UG	PV01 PV02 PV03 PW01 PW02	PW03 PW04 PW05 CA CA01	DA DA01 DA02 DA03 DA04	DA05 DA06 DA07 DA08 DA09	PA PA01 PA02 PA03 PA04	PA05 PA07 PA08 PA09 PA10	PA11 PA12 PA13 PA14 PA15	
						ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
1	GASKET SET: ENG OVERHAUL															
	587812-6702		9404-		1		H I J									
	587812-6712		9404-		1	A B C D E	F G	K L M N O	P Q R S T	U V W						
	587812-8104		9404-		1					X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	


0-05 B ENGINE GASKET KIT

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1							4LE2			Remarks
						PA16 PA17 PA18 PA19 PA20	PA21 PA22 PA23 PA24 PA25	PA26 PV01 PV02 PV03 PV04	PV05 PV06 PV07 PW01 PW02	PW03 PW04 PW05 PW06 PW07	PW08 PW09 PW10 PW11 PW12	PW13 PW14 PW17 CA CA01	CA02 CA03 CA04 DA01 DA02	PA PA01 PA02 PA03 PW01	PW02 PW03 PW05 PW07 PW09	
						A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	
1	GASKET SET; ENG OVERHAUL															
	587812-8104		9404-		1	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G				
	587813-7320		9907-		1							H I	J K L M N	O P Q R S	T U V W X	

MEMO

0-10	CYLINDER HEAD COVER
FIG-NO.	

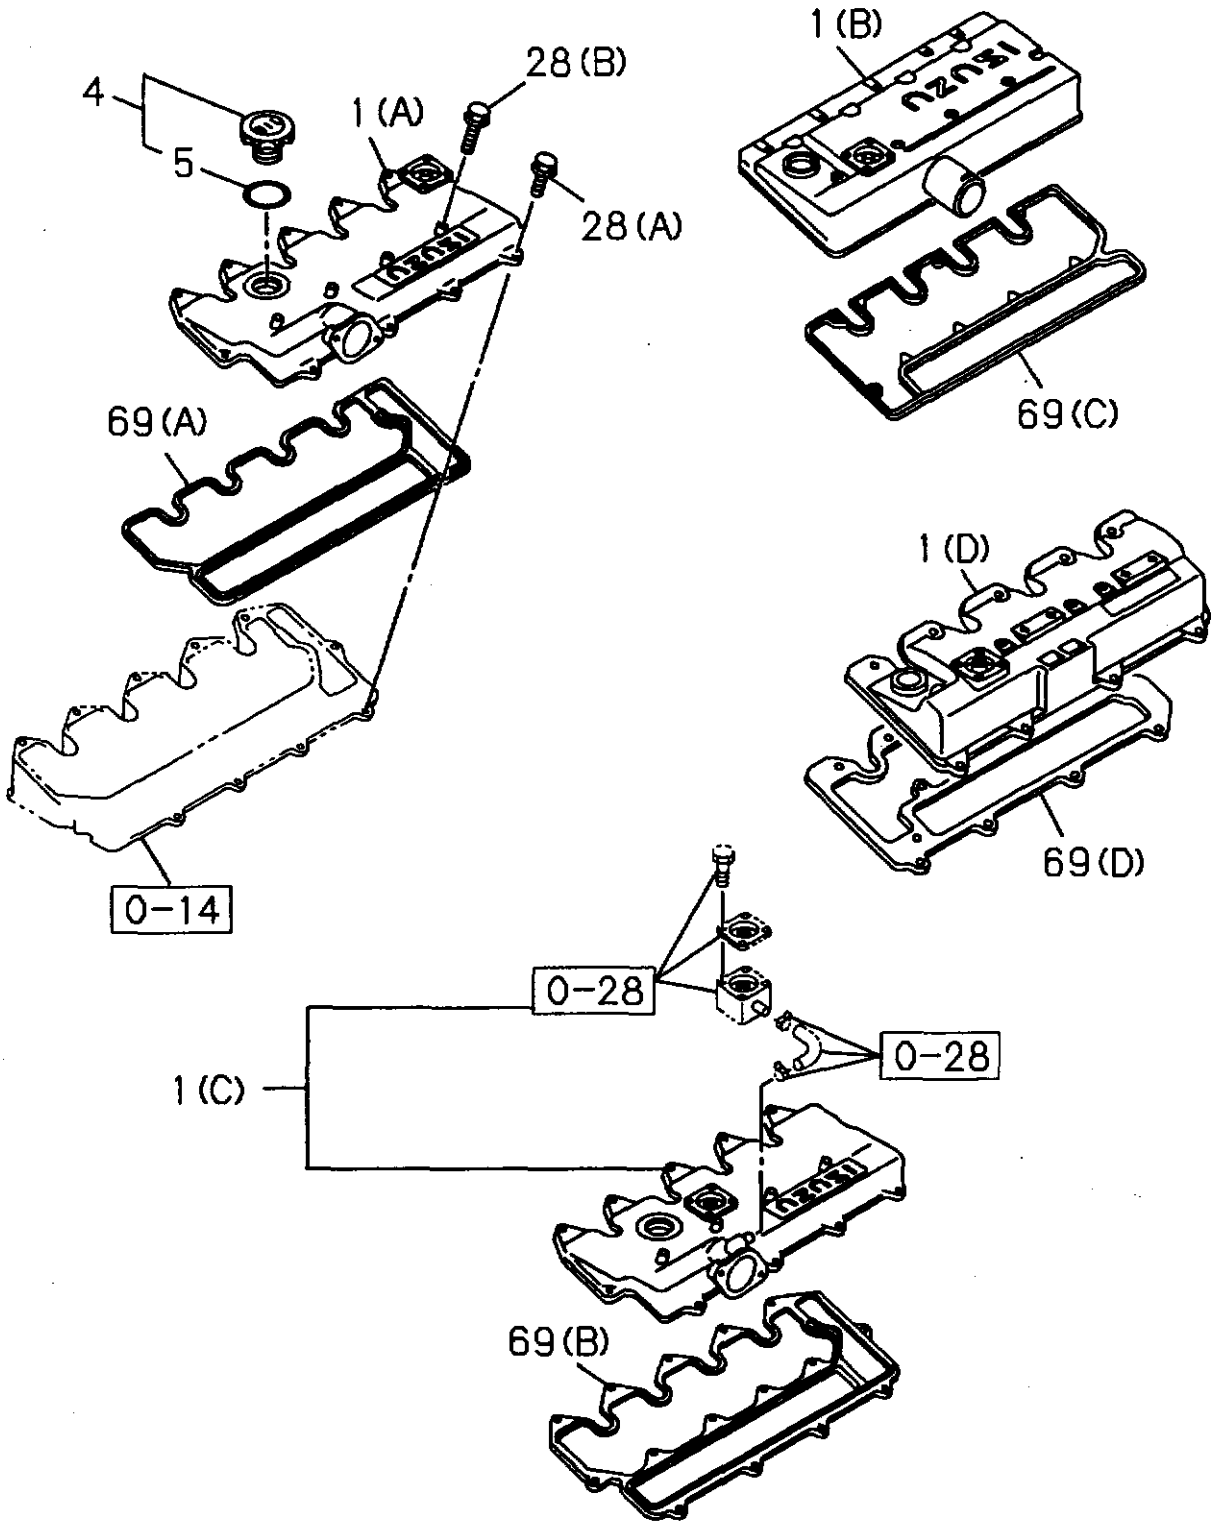

010A0150798

CYLINDER HEAD COVER

0-10 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
							PPPPPPPPTTTPPPPPPPPPPPPPPPCCDDDDDDDDDDPPPPPPPPPPPPPPPPPPPPP AAAAAAAAPPPAAAAAAVVVWWWWWAAAAAAAAAAAAAAAAAAAAAAAAAAAAA 0000000AAA 0000000000000 0 0000000000 0000000001111111 1234567 00 1234123123451 123456789 1234578901234 5 12 U A ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
1	COVER; CYL HD							
(A)	897082-0730	C	9404-9407		1		HI	
(C)	897117-6331		9408-		1		HIJ	
(C)	897117-6291		9404-		1	ABCDEFG	KLMNOPQRSTUVW	
(B)	897118-2052		9404-		1		XYZABCDEFGHIJ R&T X	
(B)	897123-2961		9404-		1		KLMNOPQ UVW	
4	CAP; OIL FILLER							
	894133-2075		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX		
5	GASKET; OIL FILLER						—ALSO INCLUDED IN GASKET SET(ENGINE)	
	894123-6231		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX		ID=32 OD=40
28	BOLT; HD COVER							
(A)	028080-6200		9404-		11	ABCDEFGHIJKLMNOPQRSTUVW		M6X20 FLANGE
(A)	028080-6200		9404-		5	XYZABCDEFGHIJKLMNOPQRSTUVWX		M6X20 FLANGE
(B)	028080-6400		9404-		4	ABCDEFGHIJKLMNOPQRSTUVW		M6X40 FLANGE
(B)	028080-6450		9404-		5	XYZABCDEFGHIJKLMNOPQRSTUVWX		M6X45 FLANGE
69	GASKET; HD TO COVER						—ALSO INCLUDED IN GASKET SET(ENGINE)	
(A)	897077-8090		9404-		1	HIJ		
(B)	897085-8860		9404-		1	ABCDEFG	KLMNOPQRSTUVW	
(C)	897119-2990		9404-		1	XYZABCDEFGHIJKLMNOPQRSTUVWX		


0-10 B CYLINDER HEAD COVER

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1																																4LE2																	Remarks
						PA16 A	PA17 B	PA18 C	PA19 D	PA20 E	PA21 F	PA22 G	PA23 H	PA24 I	PA25 J	PA26 K	PV01 L	PV02 M	PV03 N	PV04 O	PV05 P	PV06 Q	PV07 R	PW01 S	PW02 T	PW03 U	PW04 V	PW05 W	PW06 X	PW07 Y	PW08 Z	PW09 A	PW10 B	PW11 C	PW12 D	PW13 E	PW14 F	PW17 G	CA H	CA01 I	CA02 J	CA03 K	CA04 L	DA01 M	DA02 N	PA O	PA01 P	PA02 Q	PA03 R	PW01 S	PW02 T	PW03 U	PW05 V	PW07 W	PW09 X	
1	COVER; CYL HD																																																							
(B)	897118-2052		9404-		1			C		E		G					L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	A	B	C	D	E	F	G																		
(B)	897123-2961		9404-		1	A	B		D		F		H	I	J	K																																								
(D)	897220-0093		9907-		1																																									O	P	Q	R							
(D)	897200-1902		9912-		1																																		H	I	J	K	L	M	N					S	T	U	V	W	X	
4	CAP; OIL FILLER																																																							
	894133-2075		9404-		1	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	
5	GASKET; OIL FILLER —ALSO INCLUDED IN GASKET SET(ENGINE)																																																							
	894123-6231		9404-		1	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	ID=32 OD=40
28	BOLT; HD COVER																																																							
(A)	028080-6200		9404-		5	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	A	B	C	D	E	F	G																		M6X20 FLANGE
(A)	028080-6200		9907-		9																																		H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	M6X20 FLANGE
(B)	028080-6450		9404-		5	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	A	B	C	D	E	F	G																		M6X45 FLANGE
(B)	028080-6450		9907-		4																																		H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	M6X45 FLANGE
69	GASKET; HD TO COVER —ALSO INCLUDED IN GASKET SET(ENGINE)																																																							
(C)	897119-2990		9404-		1	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	A	B	C	D	E	F	G																		
(D)	897201-4661		9907-		1																																		H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	

MEMO

0-11	CYLINDER HEAD
FIG-NO.	

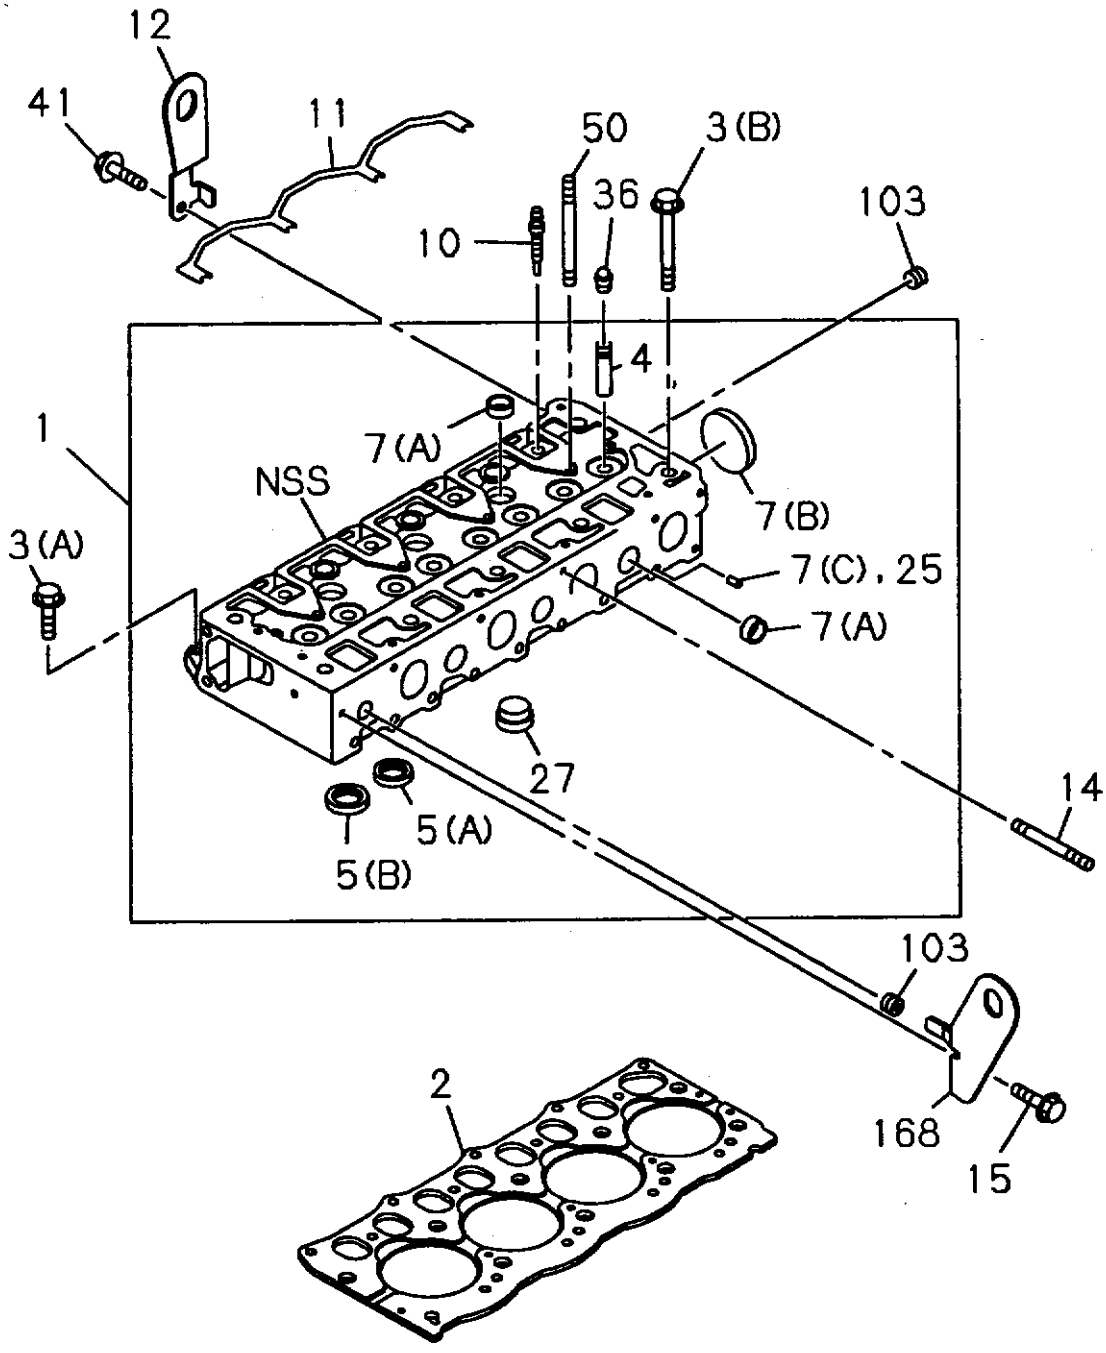

011A0150798

CYLINDER HEAD

0-11 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	I T C	APPLIED DATE	L R	Q T Y	4LB1 / 4LC1 / 4LE1	Remarks
							PPPPPPPPTTTTPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPP AAAAAAAAPPPAAAAAAVVVWWWWWAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA 00000000AAA 0000000000000 0 0000000000 0000000001111 1234567 00 1234123123451 1234567891 1234578901234 12 U G ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
1	HEAD ASM; CYL							
	897044-1792		9404-9610		1		HIJ	
	897163-4032		9611-		1		ABCDEFGHIJ	
	897044-2162		9404-9610		1		KLM	
	897163-4052		9611-		1		KLMNOPQRSTUVW	
	897114-7132		9404-		1		XYZABCDEFGHIJKLMNOPQRSTUVWX	
2	GASKET; CYL HD						—ALSO INCLUDED IN GASKET SET(ENGINE)	
	897077-7880		9404-		1		ABCDEFGHIJKLMNOPQRSTUVW	
	897136-3240	A	9404-9804		1		XYZABCD JKLMNOPQRSTUVW	
	897203-8170	C	9805-0107		1		XYZABCDEFGHIJKLMNOPQRSTUVWX	
	897322-5500		0108-		1		XYZABCDEFGHIJKLMNOPQRSTUVWX	
3	BOLT; CYL HD TO BLOCK							
(A)	894463-7840		9404-		5		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M8X25
(B)	897036-9591		9404-		10		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M12X89
4	GUIDE; VLV							
	897031-7490		9404-		8		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
5	SEAT; VLV INSERT							
(A)	897031-7102		9404-		4		ABCDEFGHIJKLMNOPQRSTUVW	INLET
(A)	897126-1390	C	9404-9908		4		XYZABCDEFG JKLMNOPQRSTUVWX	INLET
(A)	897045-3912		9909-		4		XYZABCDEFGHIJKLMNOPQRSTUVWX	INLET
(B)	897031-7110		9404-		4		ABCDEFGHIJKLMNOPQRSTUVW	EXHAUST
(B)	897045-3920		9404-		4		XYZABCDEFGHIJKLMNOPQRSTUVWX	EXHAUST
7	CUP; SEALING, CYL HEAD							
(A)	109600-0112	A	9404-9905		6		ABCDEFGHIJKLMNOPQ STU XYZABCDEFG JKLMNOPQRSTUVWX	OD=22
(A)	897209-6090		9906-		6		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	OD=22
(B)	109600-0051		9404-		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	OD=45
(C)	897233-4290		0002-		5		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
10	PLUG; GLOW							
	897106-5491		9404-		4		ABCDEFGHIJKL NOPQRSTUVWXYZABCDEFGHIJKLMNOPQ TUVWX	
	897126-2570	C	9404-9907		4		M RS	
	897232-9350		9908-		4		M RS	
11	CONNECTOR; GLOW PLUG							
	897085-8101		9404-		1		ABCDEFGHIJKLMNOPQRSTUVW	
	897126-3550	C	9404-9509		1		A KL	
	897138-6070	C	9510-9704		1		XYZABCD JKLMNO	
	897179-5361		9705-		1		XYZABCDEFGHIJKLMNOPQRSTUVWX	
12	HANGER; ENG, RR							
	897085-3900		9404-		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
14	STUD; EXH MANIF							
	509300-0650		9404-		2		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNO QRST X	M8X79 L=92
	509300-0650		9803-		3		W	M8X79 L=92
	509300-0650		9803-		4		P UV	M8X79 L=92
15	BOLT; HANGER, FRT							
	028080-8160		9404-		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M8X16 FLANGE

0-11 A CYLINDER HEAD

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1		4LC1			4LE1					Remarks
						PA01 PA02 PA03 PA04 PA05	PA06 PA07 TPA TPA01 TPA02	PA PA01 PA02 PA03UG PA04	PV01 PV02 PV03 PW01 PW02	PW03 PW04 PW05 CA CA01	DA DA01 DA02 DA03 DA04	DA05 DA06 DA07 DA08 DA09	PA PA01 PA02 PA03 PA04	PA05 PA07 PA08 PA09 PA10	PA11 PA12 PA13 PA14 PA15	
						A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	
25	PLUG: CYL HD															
	511119-0090		9404-0001		5	A B C D E	F G H I J	K L M N O	P Q S T	U X Y	Z A B C D	E F G	J K L M N	O P Q R S	T U V W X	D=8 TAPER 1/24
27	PLUG: HOT															
	897044-6351		9404-		4	A B C D E	F G H I J									
	897077-8140		9404-		4			K L M N O	P Q R S T	U V W						
	897115-3151		9404-		4					X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	
36	SEAL: OIL, VLV GUIDE —ALSO INCLUDED IN GASKET SET(ENGINE)															
	894110-5591		9404-		8	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	
41	BOLT: HANGER															
	028080-8160		9404-		1	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	M8X16 FLANGE
50	STUD: ROCKER SHAFT BRKT															
	897094-6411		9404-		6	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	
103	PLUG: HD															
	509605-0050		9404-		2	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	PT3/8
168	HANGER: ENG, FRT															
	897085-3890		9404-		1	A C D E	F G H I	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	

CYLINDER HEAD

0-11 B
FIG-NO.

KEY NO. / PART NAME

KEY NO.	PART NUMBER	I T C	APPLIED DATE	L R	QTY	PA16 PA17 PA18 PA19 PA20	PA21 PA22 PA23 PA24 PA25	PA26 PV01 PV02 PV03 PV04	PV05 PV06 PV07 PW01 PW02	PW03 PW04 PW05 PW06 PW07	PW08 PW09 PW10 PW11 PW12	PW13 PW14 PW17 CA CA01	CA02 CA03 CA04 DA01 DA02	PA PA01 PA02 PA03 PW01	PW02 PW03 PW05 PW07 PW09	Remarks
						4LE1						4LE2 (from CA)				
						ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
1	HEAD ASM; CYL															
	897114-7132		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFG				
	897195-2514		9907-		1							HI	JKLMN	OPQRS	TUVWX	
2	GASKET; CYL HD —ALSO INCLUDED IN GASKET SET(ENGINE)															
	897136-3240	A	9404-9804		1			LMN	ST	UVWX						
	897203-8170	C	9805-0107		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFG				
	897322-5500		0108-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFG				
	897235-2610		9907-		1							HI	JKLMN	OPQRS	TUVWX	
3	BOLT; CYL HD TO BLOCK															
(A)	894463-7840		9404-		5	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M8X25
(B)	897036-9591		9404-		10	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M12X89
4	GUIDE; VLV															
	897031-7490		9404-		8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
5	SEAT; VLV INSERT															
(A)	897126-1390	C	9404-9908		4	ABC	J	KLMNO	P ST	UVWXY	ZAB			OP		INLET
(A)	897045-3912		9909-		4	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	INLET
(B)	897045-3920		9404-		4	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	EXHAUST
7	CUP; SEALING, CYL HEAD															
(A)	109600-0112	A	9404-9905		6	ABC		LMNO	ST	UVWXY	Z					OD=22
(A)	897209-6090		9906-		6	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	OD=22
(B)	109600-0051		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	OD=45
(C)	897233-4290		0002-		5	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
10	PLUG; GLOW															
	897106-5491		9404-		4	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFG				
	897073-6410		9907-		4							HI	JKLMN	OPQRS	TUVWX	
11	CONNECTOR; GLOW PLUG															
	897138-6070	C	9510-9704		1			LMN	ST	UVW						
	897179-5361		9705-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFG				
	897229-3810		9907-		1							HI	JKLMN	OPQRS	TUVWX	
12	HANGER; ENG. RR															
	897085-3900		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
14	STUD; EXH MANIF															
	509300-0650		9404-		2	ABC E	FGHI	LMNO	PQRST	UVWXY	ZABCD	EFG				M8X79 L=92
	509300-0650		9803-		4	D	J	K				HI	JKLMN	OPQRS	TUVWX	M8X79 L=92
15	BOLT; HANGER, FRT															
	028080-8160		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M8X16 FLANGE
25	PLUG; CYL HD															
	511119-0090		9404-0001		5	ABC		LMNO	P ST	UVWXY	ZAB			OP		D=8 TAPER 1/24
27	PLUG; HOT															
	897115-3151		9404-		4	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFG				
36	SEAL; OIL, VLV GUIDE —ALSO INCLUDED IN GASKET SET(ENGINE)															
	894110-5591		9404-		8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	

0-11 B CYLINDER HEAD

FIG-NO.

Applicability columns (4LE1 / 4LE2):


	PPPPP	PPPPP	PPPPP	PPPPP	PPPPP	PPPPP	PPPCC	CCCDD	PPPPP	PPPPP
	AAAAA	AAAAA	AVVVV	VVVWW	WWWWW	WWWWW	WWWAA	AAAAA	AAAAW	WWWWW
	11112	22222	20000	00000	00000	00111	111 0	00000	0000	00000
	67890	12345	61234	56712	34567	89012	347 1	23412	1231	23579
	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX

(4LE1: columns A–D of the second alphabet group up to EFG; 4LE2 begins at column H of group EFGHI.)

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
41	BOLT; ENG HANGER	028080-8160		9404-		1	ABCDE FGHIJ KLMNO PQRST UVWXY ZABCD EFGHI JKLMN OPQRS TUVWX	M8X16 FLANGE
50	STUD; ROCKER SHAFT BRKT	897094-6411		9404-		6	ABCDE FGHIJ KLMNO PQRST UVWXY ZABCD EFGHI JKLMN OPQRS TUVWX	
103	PLUG; HD	509605-0050		9404-		1	ABCDE FGHIJ KLMNO PQRST UVWXY ZABCD EFG	PT3/8
		509605-0050		9404-		2	HI JKLMN OPQRS TUVWX	PT3/8
168	HANGER; ENG, FRT	897085-3890		9404-		1	ABCDE FGHIJ KLMNO PQRST UVWXY ZABCD EFGHI JKLMN OPQRS TUVWX	

MEMO


0-12	CYLINDER BLOCK
FIG-NO.	(NO.1)

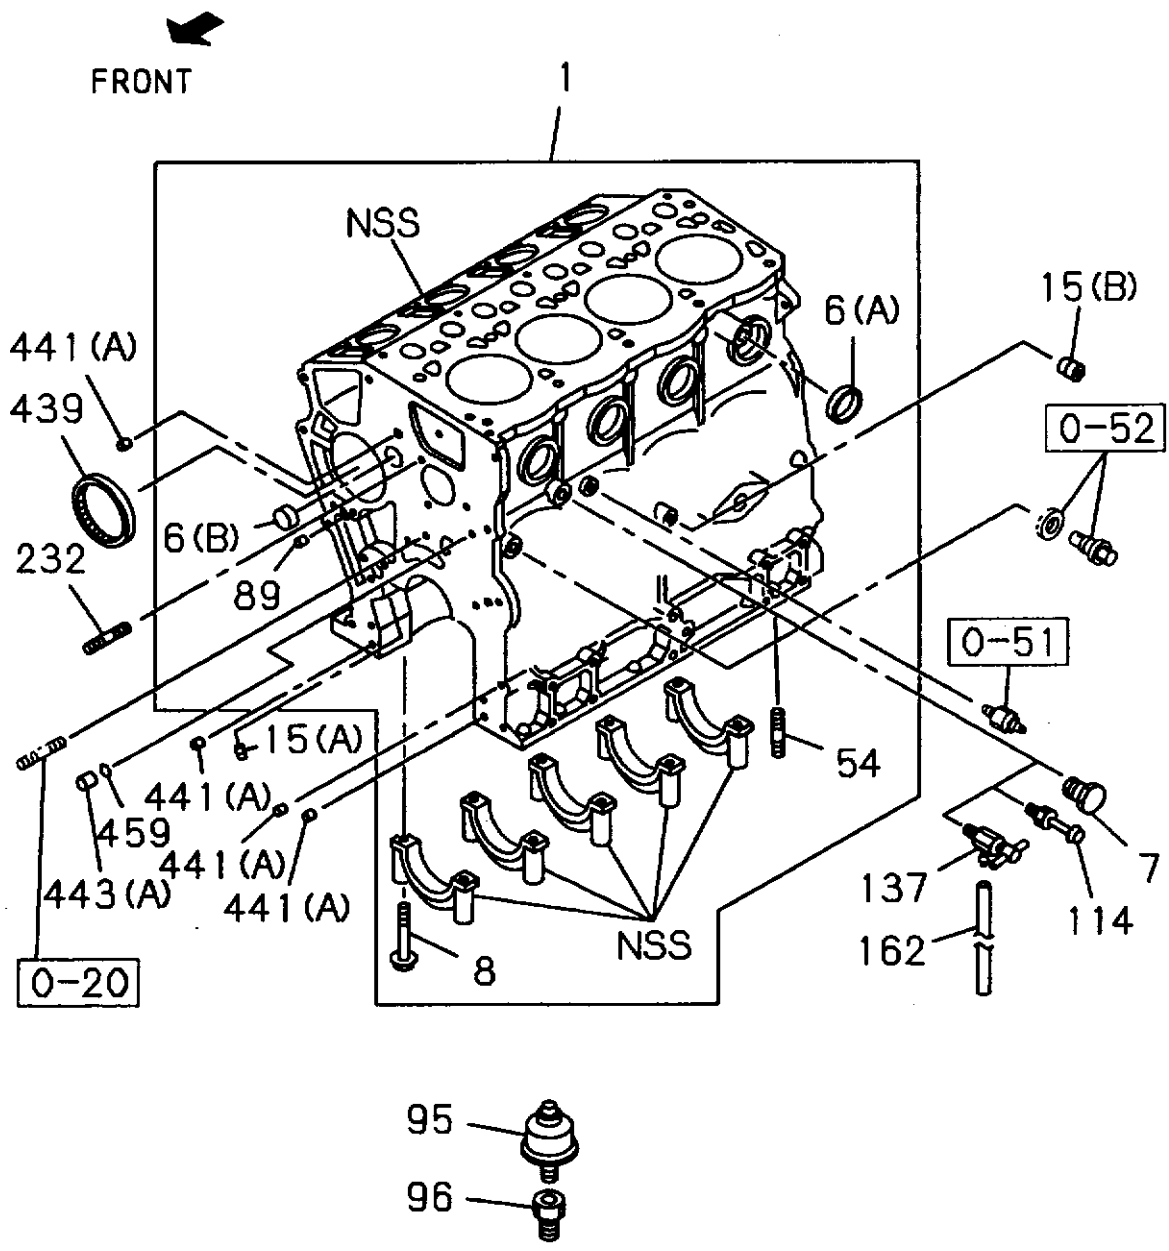

012A0150798

CYLINDER BLOCK
(NO.2)

0-12
FIG-NO.

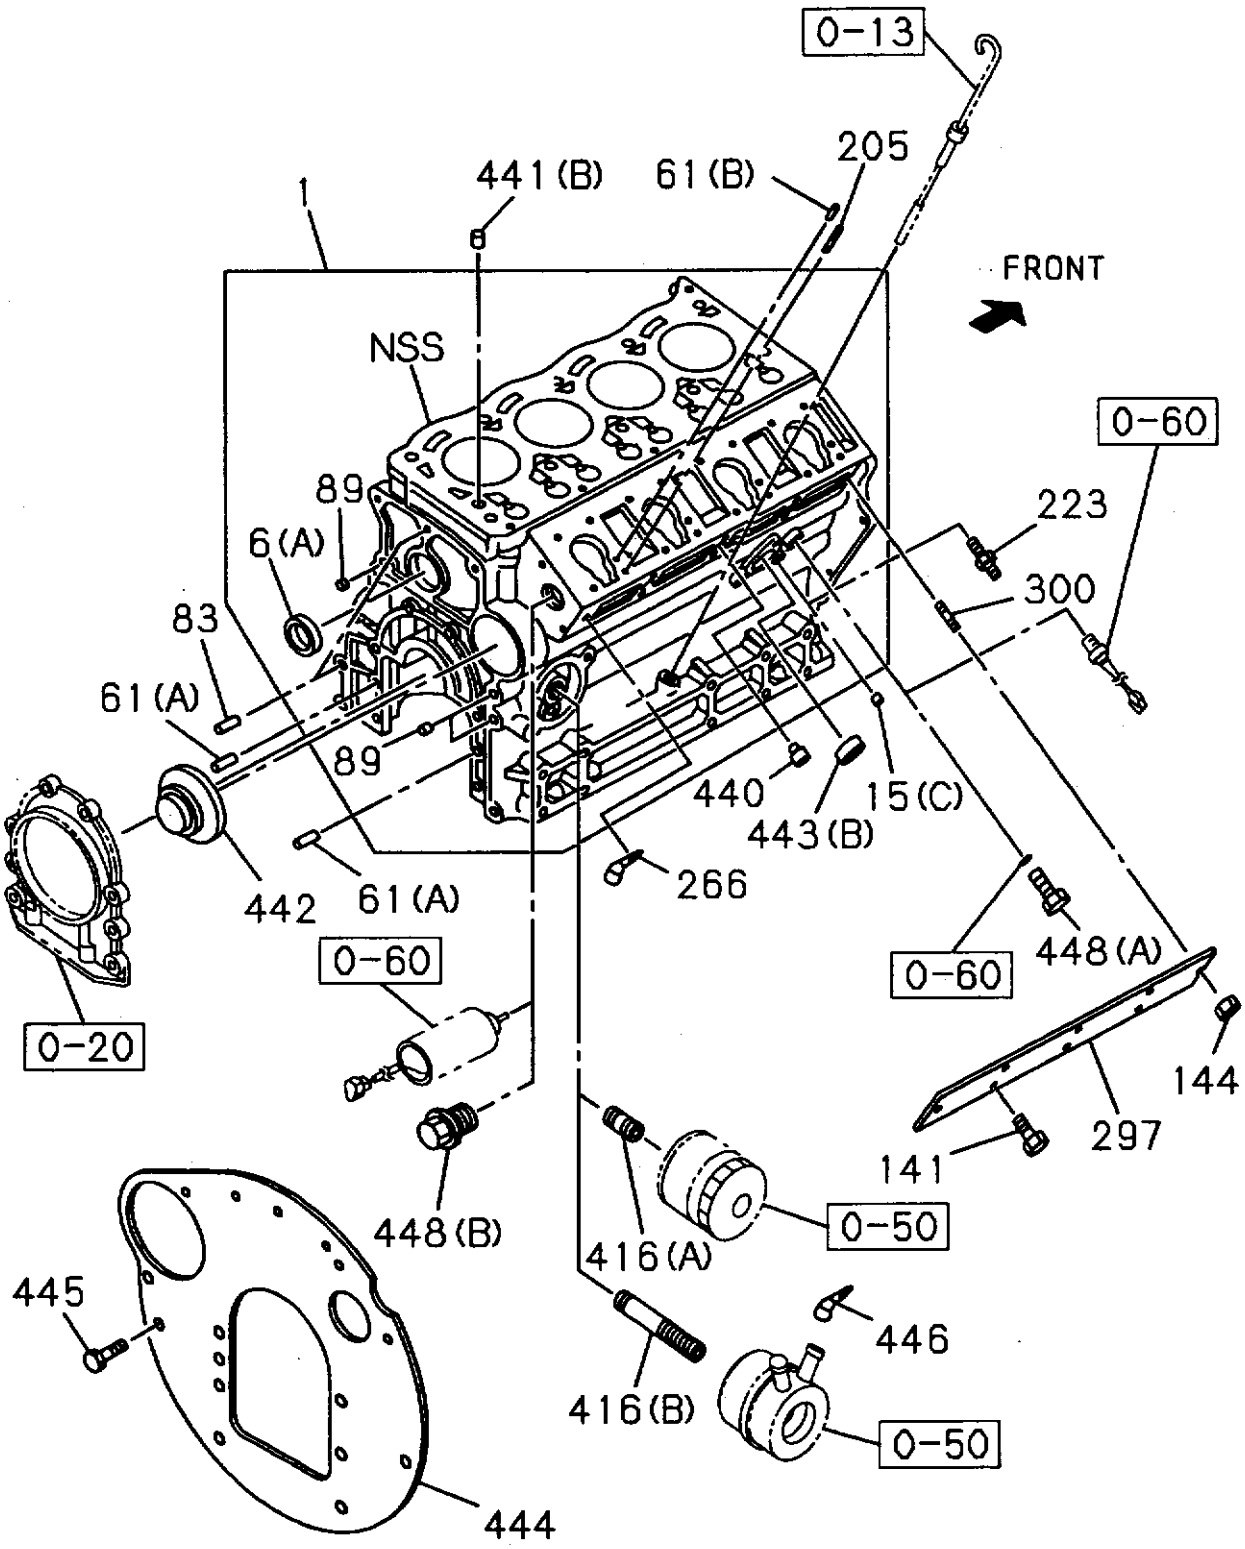

012A0250798

0-12 A CYLINDER BLOCK

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
							PPPPPPPPTTTPPPPPPPPPPPPPPPPCCDDDDDDDDDDPPPPPPPPPPPPPPPPPPPP AAAAAAAAPPPAAAAAAVVVWWWWWWAAAAAAAAAAAAAAAAAAAAAAAAAAA 0000000AAA 0000000000000 0 0000000000 0000000001111 1234567 00 1234123123451 1234567891 1234578901234 6 12 U ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
1	BLOCK ASM; CYL							
	897133-9210		9404-9703		1	ABCD		
	897169-1691		9704-0009		1	ABCDEFG		
	897231-5403		0010-		1	ABCDEFG		
	897044-2120	A	9404-9408		1	HI		
	897117-6802		9409-9506		1	HI		
	897133-9201		9507-9703		1	HIJ		
	897169-1741		9704-0009		1	HIJ		
	897231-5412		0010-		1	HIJ		
	897044-2141		9404-9703		1	KLM		
	897169-1791		9704-0009		1	KLMNOPQRSTUVW		
	897231-5423		0010-		1	KLMNOPQRSTUVW		
	897162-5260	A	9404-9703		1	XY		
	897169-1920	C	9704-9806		1	XY		
	897182-6992		9807-		1	XY		
	897136-5150	C	9404-9607		1	ZAB JKLMNO		
	897162-0540		9608-9703		1	ZABCD JKLMNO		
	897169-1880	C	9704-9806		1	ZABCD JKLMNOPQRSTUVWX		
	897182-6972		9807-		1	ZABCDEFGHI JKLMNOPQRSTUVWX		
6	CUP; SEALING							
(A)	894229-8530		9404-		5	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX		D=35 H=10
(B)	109600-0112	A	9404-9904		1	ABCDEFGHIJKLMNOPQ STU XYZABCDEFG JKLMNOPQRSTUVWX		OD=22
(B)	897209-6090		9905-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX		OD=22
7	PLUG; WATER DRAIN							
	909664-0010		9404-		1	ABCDEFGHIJKLMNOPQRSTUVW JKLMNOPQ TUVWX		PT1/4
8	BOLT; BRG CAP							
	894167-4711		9404-		10	ABCDEFGHIJKLMNOPQRSTUVW		
	894167-4701		9404-		10	XYZABCDEFGHIJKLMNOPQRSTUVWX		
15	PLUG; OIL GALLERY							
(A)	109605-0040		9404-9905		1	ABCDEFGHIJKLMNOPQ STU XYZABCDEFG JKLMNOPQRSTUVWX		PT1/8
(A)	909204-5100		9906-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX		
(B)	109605-0190		9404-		1	ABCDEFG KLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRS UVW		PT1/4
(C)	109605-0500		9404-		3	AB D GHIJKL OPQRSTUVW		PT1/8
(C)	109605-0500		9404-		2	C EF MN		PT1/8
(C)	109605-0500		9404-		1	XYZABCDEFGHIJKLMNOPQRSTUVWX		PT1/8
54	STUD; OIL PAN TO BLOCK							
	904110-6160		9404-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG IJKLMNOPQRSTUVWX		M6X16 L=25
	894343-8960		9404-		4	H		
61	PIN; STRAIGHT							
(A)	908160-6160		9404-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQ		OD=6 L=16
(A)	908160-6160	A	9404-9702		4	ABCD HIJKLM PQ ST		OD=6 L=16
(B)	909878-5320		9703-		4	ABCDEFGHIJKLMNOPQRSTUVW		OD=6 L=24
(A)	908160-6160	A	9404-9702		8	XYZABCD JKLMNO RSTUVWX		OD=6 L=16
(B)	909878-5320		9703-		8	XYZABCDEFGHIJKLMNOPQRSTUVWX		OD=6 L=24
83	PIN; FLYWHEEL HSG							
	908160-8160		9404-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX		

CYLINDER BLOCK

0-12 A
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	Remarks
						4LB1		4LC1		4LE1						
						PPPPP	PPTTT	PPPPP	PPPPP	PPPCC	DDDDD	DDDDD	PPPPP	PPPPP	PPPPP	
						AAAAA	AAPPP	AAAAA	VVVWW	WWWAA	AAAAA	AAAAA	AAAAA	AAAAA	AAAAA	
						00000	00AAA	000	00000	000 0	000	00000	000	00001	11111	
						12345	67 00	1234	12312	345 1	1234	56789	1234	57890	12345	
							12	U								
								G								
89	CUP; SEALING,OIL GALLERY															
	509600-0130		9404-		4	ABCDE	FG	KLMNO	PQRST	UVW	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	OD=12.3
	509600-0130		9404-		6		HIJ			XY						OD=12.3
95	UNIT; OIL PRESSURE															
	983140-1570		9404-		1						C	F I				
96	ADAPTER; PRESS UNIT & SW															
	909902-3040		9404-		1						C	F I				
	909902-2420		9404-		1										T X	
114	NIPPLE; WATER DRAIN															
	513721-0281		9404-		1					Y	A D	G		R		
137	COCK; DRAIN,WATER															
	894429-4210		9608-9701		1						BCD					
	894342-4140		9702-		1						BCD	EF HI		S		
141	BOLT; COVER															
	028080-6140		9404-		6	ABCD	GHIJ	KLMNO		XY	ZAB D	E G	J LMN	O		M6X14 FLANGE
	028080-6140		9404-		4	E	F						K	PQRS	TUVWX	M6X14 FLANGE
	028080-6160		9404-		2	E	F						K	PQ		M6X16 FLANGE
	028080-6140		9404-		5				PQRST	UVW	C	F HI				M6X14 FLANGE
	028080-6200		9404-		1				PQRST	UVW	C	F HI				M6X20 FLANGE
144	NUT; COVER FIX															
	091150-2060	A	9404-0104		2	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M6 FLANGE
	897137-8360		0105-		2	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
162	HOSE; WATER DRAIN,C/BL															
	909914-9090		9608-		1						BCD	EF HI		S		L=520
205	STUD; PUMP HOLE															
	109305-0050		9404-		8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M8X36
223	CONNECTOR; OIL PRESSURE															
	897134-5180		9404-		1	C E	F	MN							T X	
232	STUD; WATER PUMP															
	904110-8400	A	9404-0005		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGH	JKLMN	OPQRS	TUVWX	M8X40 L=52
	897262-1450		0006-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
266	CLIP; HOSE															
	909916-8931		9404-		1		HIJ									B=20 L=30 ID=15
297	COVER; CYL BLOCK															
	897077-7872		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVW						
	897118-9892		9404-		1					XY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
300	STUD; COVER															
	904110-6160		9404-9501		2		HI	KL								M6X16 L=25
	904110-6160	A	9404-0005		1	ABCDE	FGHIJ	KLMNO	PQ ST	U XY	ZABCD	EFG	JKLMN	OPQRS	TUVWX	M6X16 L=25
	897262-1471		0006-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M6X16 L=25

0-12 A CYLINDER BLOCK

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 4LC1 4LE1	Remarks
300	STUD; COVER							
		894343-8960	A	9404-0005		1	ABCDEFGHIJKLMNOPQ STU XYZABCDEFG JKLMNOPQRSTUVWX	M6X19 L=27
		897262-1481		0006-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M6X19 L=27
416	STUD; OIL FILTER							
(A)		894325-5950		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWX ZABCDEFGHIJK MNOPQRSTUVWX	
(B)		897102-5501		9404-		1	Y L	
439	BEARING; NEEDLE							
		897047-0560		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
440	PIN; CONT LINK							
		897039-4953		9404-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
441	DOWEL; CYL BLOCK							
(A)		911229-0581		9404-		4	H KL OPQRST V XYZABCDEFGHIJKLMNOPQRS UVW	OD=11 L=8
(A)		911229-0581		9404-		2	ABCDEFG IJ MN U W T X	OD=11 L=8
(B)		894200-8190		9404-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	OD=15.25
442	PLUG; THRUST							
		897047-1421		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
443	CAP; SEALING							
(A)		509600-0130		9404-		1	C EF H KLMNOPQRST V XYZABCDEFGHIJKLMNOPQRSTUVWX	OD=12.3
(B)		109600-0121		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQR TUVWX	OD=32
446	CLIP; LEAD WIRE							
		909524-6220		9404-		1	PQRSTUVW C F HI	ID=7
448	PLUG; C/BL							
(A)		509604-0160		9404-		1	AB HIJKL NOPQRSTUVWX Z E H JKLMNOPQR UVW	
(B)		897102-4510		9404-		1	H K X Z J	
459	GASKET; OIL GALLERY							
		909565-2130		9404-		1	AB D G U W	

CYLINDER BLOCK

0-12 B
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
1	**BLOCK ASM; CYL**						
	897162-5260	A	9404-9703		1	U	
	897169-1920	C	9704-9806		1	U W	
	897182-6992		9807-		1	U W YZA CDEFG	
	897136-5150	C	9404-9607		1	L S	
	897162-0540		9608-9703		1	LM ST	
	897169-1880	C	9704-9806		1	LMN ST V X	
	897182-6972		9807-		1	ABCDEFGHIJKLMNOPQRST V X B	
	897217-8031		9907-0008		1	HIJK OP STU	
	897232-2851		0009-		1	HIJKLMNOPQRSTUVWX	
6	**CUP; SEALING**						
(A)	894229-8530		9404-		5	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	D=35 H=10
(B)	109600-0112	A	9404-9904		1	ABC LMNOP STUVWXYZAB	OD=22
(B)	897209-6090		9905-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
7	**PLUG; WATER DRAIN**						
	909664-0010		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGH OPQRSTUVWX	PT1/4
8	**BOLT; BRG CAP**						
	894167-4701		9404-		10	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
15	**PLUG; OIL GALLERY**						
(A)	109605-0040		9404-9905		1	ABC LMNO STUVWXYZ	PT1/8
(A)	909204-5100		9906-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
(B)	109605-0190		9404-		1	AB D FGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	PT1/4
(C)	109605-0500		9404-		1	AB D FGHIJKLMNOPQRSTUVWXYZ BCDEFG	PT1/8
54	**STUD; OIL PAN TO BLOCK**						
	894343-8960		9404-		4	NO	M6X19 L=27
	904110-6160		9404-		2	ABCDEFGHIJKLM PQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M6X16 L=25
61	**PIN; STRAIGHT**						
(A)	908160-6160		9404-		6	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	OD=6 L=16
(A)	908160-6160	A	9404-9702		8	LM STU	OD=6 L=16
(B)	909878-5320		9703-		8	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	OD=6 L=24
(B)	909878-5320		9907-		4	HIJKLMNOPQRSTUVWX	OD=6 L=24
83	**PIN; FLYWHEEL HSG**						
	908160-8160		9404-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
89	**CUP; SEALING, OIL GALLERY**						
	509600-0130		9404-		4	ABCDEFGHIJKLMNOPQRST V X B HIJKLMNOPQRSTUVWX	OD=12.3
	509600-0130		9404-		6	U W YZA CDEFG	OD=12.3
96	**ADAPTER; PRESS UNIT & SW**						
	909902-2420		9404-		1	C E	
114	**NIPPLE; WATER DRAIN**						
	513721-0281		9404-		1	K MN	
137	**COCK; DRAIN, WATER**						
	894342-4140		9702-		1	IJ L	

0-12 B CYLINDER BLOCK

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 PPPPP AAAAA 11112 67890 ABCDE	PPPPP AAAAA 22222 12345 FGHIJ	PPPPP AVVVV 20000 61234 KLMNO	PPPPP VVVWW 00000 56712 PQRST	PPPPP WWWWW 00000 34567 UVWXY	PPPPP WWWWW 00111 89012 ZABCD	4LE2 PPPCC WWWAA 111 0 347 1 EFGHI	CCCDD AAAAA 00000 23412 JKLMN	PPPPP AAAAW 0000 1231 OPQRS	PPPPP WWWWW 00000 23579 TUVWX	Remarks
141	BOLT; COVER															
	028080-6140		9404-		6	BCDE	GHIJ	K N			D					M6X14 FLANGE
	028080-6140		9404-		5		F	LM O	PQRST	V X	B				VWX	M6X14 FLANGE
	028080-6200		9404-		1		F	LM O	PQRST	V X	B			S	TUVWX	M6X20 FLANGE
	028080-6140		9404-		4					U W Y	ZA C	EFGHI	JKLMN	OPQR		M6X14 FLANGE
	028080-6160		9404-		2									P		M6X16 FLANGE
	028080-6140		9404-		2							HI	JKLMN	O S	TU	M6X14 FLANGE
	028080-6200		9404-		2					U W Y	ZA C	EFG		QR		M6X20 FLANGE
	028080-6200		9404-		3									S	TU	M6X20 FLANGE
144	NUT; COVER FIX															
	091150-2060	A	9404-0104		2	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JK	OP S	TU	M6 FLANGE
	897137-8360		0105-		2	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
162	HOSE; WATER DRAIN, C/BL															
	909914-9090		9608-		1							I	J L			L=520
205	STUD; PUMP HOLE															
	109305-0050		9404-		8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M8X36
223	CONNECTOR; OIL PRESSURE															
	897134-5180		9404-		1	C E					A					
232	STUD; WATER PUMP															
	904110-8400	A	9404-0005		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JK	OP S	TU	M8X40 L=52
	897262-1451		0006-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M8X40 L=52
297	COVER; CYL BLOCK															
	897118-9892		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
300	STUD; COVER															
	904110-6160	A	9404-0005		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JK	OP S	TU	M6X16 L=25
	897262-1471		0006-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M6X16 L=25
	894343-8960	A	9404-0005		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JK	OP S	TU	M6X19 L=27
	897262-1481		0006-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M6X19 L=27
416	STUD; OIL FILTER															
	(A) 894325-5950		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	V X	B	HI	JKLMN	OPQRS	TUVWX	
	(B) 897102-5501		9404-		1					U W Y	ZA CD	EFG				
439	BEARING; NEEDLE															
	897047-0560		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
440	PIN; CONT LINK															
	897039-4953		9404-		2	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
441	DOWEL; CYL BLOCK															
	(A) 911229-0581		9404-		4	AB D	FGH J	KLMNO	PQRS	UVW	CD	E HI	JKLMN	OPQRS	T VWX	
	(A) 911229-0581		9404-		2	C E	I		T	XY	ZAB	FG			U	
	(B) 894200-8190		9404-		2	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
442	PLUG; THRUST															
	897047-1421		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	

CYLINDER BLOCK


0-12 B

FIG-NO.

4LE1: columns A (PA16) to G (PW17) · 4LE2: columns H (CA) to X (PW09)

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	PA16 A	PA17 B	PA18 C	PA19 D	PA20 E	PA21 F	PA22 G	PA23 H	PA24 I	PA25 J	PA26 K	PV01 L	PV02 M	PV03 N	PV04 O	PV05 P	PV06 Q	PV07 R	PW01 S	PW02 T	PW03 U	PW04 V	PW05 W	PW06 X	PW07 Y	PW08 Z	PW09 A	PW10 B	PW11 C	PW12 D	PW13 E	PW14 F	PW17 G	CA H	CA01 I	CA02 J	CA03 K	CA04 L	DA01 M	DA02 N	PA O	PA01 P	PA02 Q	PA03 R	PW01 S	PW02 T	PW03 U	PW05 V	PW07 W	PW09 X	Remarks
443	CAP: SEALING																																																							
(A)	509600-0130		9404-		1	A	B	C	D	E	F	G	H		J	K	L	M	N	O	P	Q	R	S		U	V	W	X			A		C	D	E			H	I	J	K	L	M	N	O	P	Q	R	S	T			W	X	OD=12.3
(B)	109600-0121		9404-		1	A	B	C	D	E	F	G		I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P			S	T	U	V	W	X	OD=32
444	PLATE: C/BL																																																							
	897251-7340		9710-		1																																														T					
445	BOLT: PLATE																																																							
	028181-0200		9710-		4																																														T					
446	CLIP: LEAD WIRE																																																							
	909524-6220		9404-		1						F						L	M		O	P	Q	R	S	T	U	V	W	X	Y	Z	A	B	C		E	F	G												S	T	U	V	W	X	ID=7
448	PLUG: C/BL																																																							
(A)	509604-0160		9404-		1	A	B		D						J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	A	B	C	D	E	F	G	H	I	J		L	M	N	O	P	Q	R	S	T	U	V	W	X	
(B)	897102-4510		9404-		1																																		H							O										
459	GASKET: OIL GALLERY																																																							
	909565-2130		9404-		1									I											T				X	Y	Z		B				F	G														U	V			

0-13	OIL PAN AND LEVEL GAUGE
FIG-NO.	(NO.1)

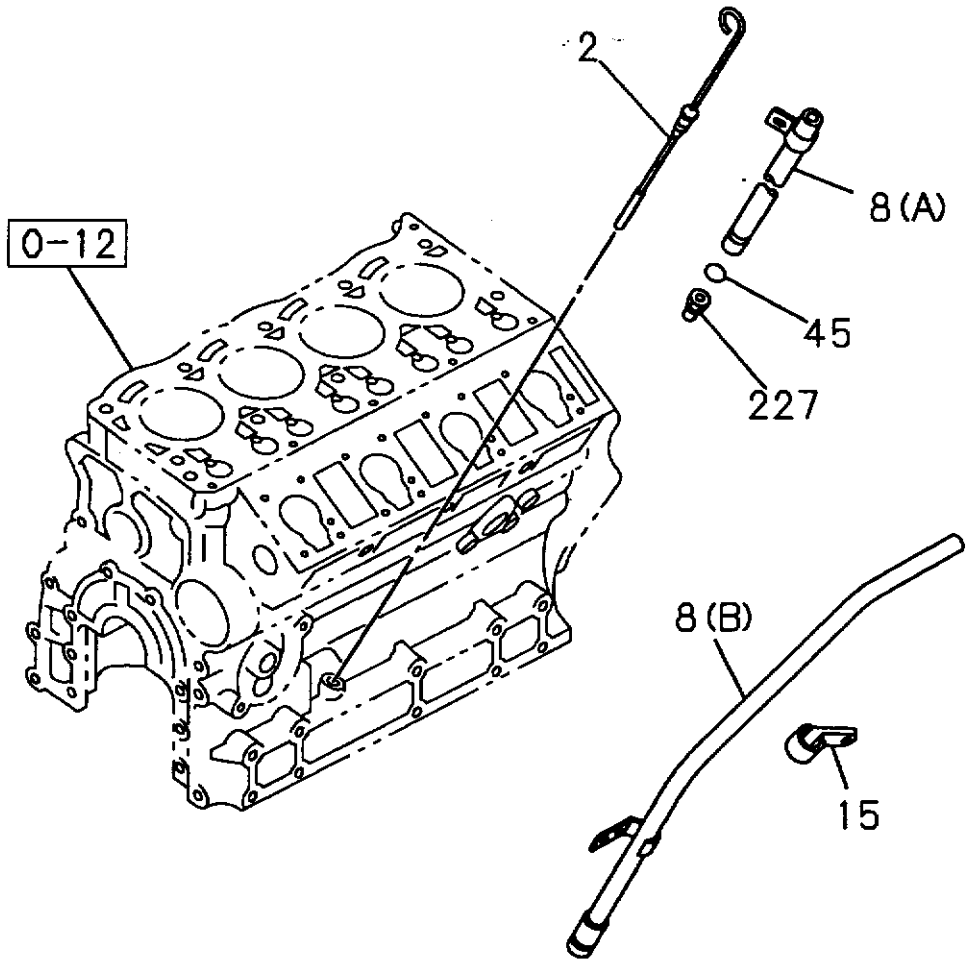


013A0150798

OIL PAN AND LEVEL GAUGE

(NO.2)

0-13

FIG-NO.

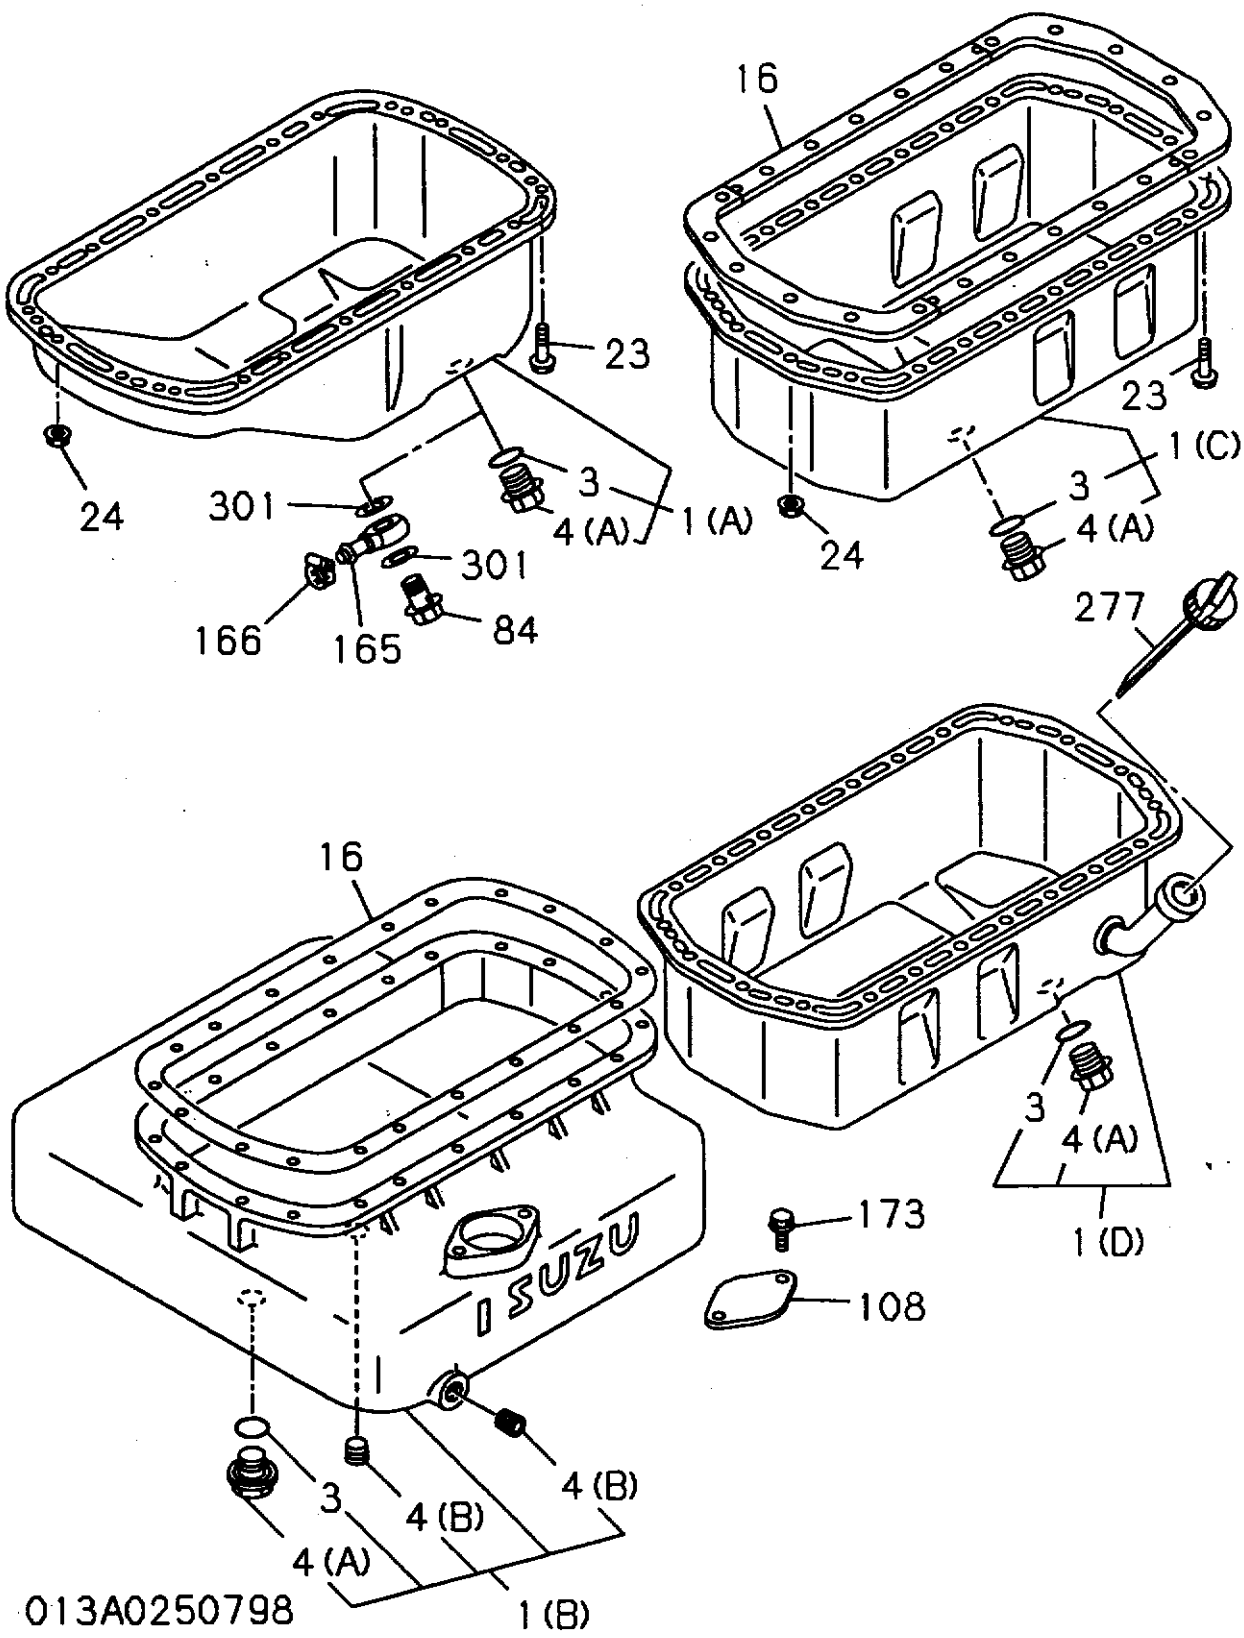

0-13 A OIL PAN AND LEVEL GAUGE

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
1	PAN ASM; OIL							
(A)		897077-7952		9404-		1	ABCDEFGHIJKLMNOPQRSTUVW	
(A)		897147-9990		9404-		1	XY CDEFG I PQRSTUVWX	
(A)		897114-7090	C	9404-9703		1	ZAB JKLMNO	
(A)		897147-9990		9704-		1	ZAB JKLMNO	
(B)		897182-0612		9311-0009		1	H	
(B)		897300-8950		0010-		1	H	
2	GAUGE; OIL LEVEL							
		897100-1600		9404-		1	H JKLMNO	
		894459-4011		9404-		1	AB DE G I TU	
		897207-0650		9807-		1	C F	
		897126-2630		9404-		1	PQRS VW	
		894422-5950		9404-		1	XYZABCDEFGHIJKLM PQR UVW	
		897088-8140		9404-9806		1	NO T X	
		897207-0660		9807-		1	NO T X	
		897191-4920		9404-		1	S	
3	GASKET; DRAIN PLUG						—ALSO INCLUDED IN GASKET SET(ENGINE)	
		109623-0570		9503-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
4	PLUG; DRAIN, OIL							
(A)		909662-0120		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
(B)		894390-5270		9311-		2	H	
8	TUBE; GUIDE, OIL LEVEL GAUGE							
(A)		897119-3060		9503-		1	ABCDEFG I R TUVW	
(A)		897096-7000		9404-		1	NO T X	
(B)		897191-7630		9404-		1	S	
15	CLIP; GUIDE TUBE							
		909525-2350		9404-		1	S	
16	GASKET; OIL PAN TO C/BL							
		897173-5690		9311-		1	H	
23	BOLT; OIL PAN							
		028080-6140	A	9404-9805		20	ABCDEF HIJKLMN PQ ST XYZABCD JKLMNOPQRST	M6X14 FLANGE
		897135-1410		9806-		20	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG IJKLMNOPQRSTUVWX	M6X13 W/WASHER
		028080-6600		9311-		4	H	
		028680-6250		9311-		14	H	
24	NUT; OIL PAN							
		091150-2060	A	9404-9805		2	ABCDEF HIJKLMN PQ ST XYZABCD JKLMNOPQRST	M6 FLANGE
		897137-8360		9806-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG IJKLMNOPQRSTUVWX	M6 W/LK WASHER
		091150-2060		9311-		4	H	
45	GASKET; GUIDE TUBE							
		509623-0020		9503-		1	ABCDEFG I R TUVW NO ST X	ID=11
84	BOLT; JOINT							
		589090-1040		9404-		1	C F T X	
108	COVER; OIL PAN							
		897026-6770		9311-		1	H	

OIL PAN AND LEVEL GAUGE

0-13 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
165	JOINT: OIL DRAIN	894151-8911		9404-		1	C F T X	
166	CLIP: RUBBER HOSE	109707-1310		9404-		1	C F T	ID=22
		109707-1310		9404-		2	X	ID=22
173	BOLT: COVER	028080-8160		9311-		2	H	M8X16 FLANGE
227	NIPPLE: GUIDE TUBE	894455-8940		9404-		1	A B C D E F G I R T U V W N O S T X	
301	GASKET: JOINT	909571-4200		9404-		2	C F T X	ID=20.5 OD=28.0

0-13 B OIL PAN AND LEVEL GAUGE

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	L/R	QTY	4LE1: PA16 PA17 PA18 PA19 PA20 (ABCDE)	PA21 PA22 PA23 PA24 PA25 (FGHIJ)	PA26 PV01 PV02 PV03 PV04 (KLMNO)	PV05 PV06 PV07 PW01 PW02 (PQRST)	PW03 PW04 PW05 PW06 PW07 (UVWXY)	PW08 PW09 PW10 PW11 PW12 (ZABCD)	PW13 PW14 PW17 / 4LE2: CA CA01 (EFGHI)	CA02 CA03 CA04 DA01 DA02 (JKLMN)	PA PA01 PA02 PA03 PW01 (OPQRS)	PW02 PW03 PW05 PW07 PW09 (TUVWX)	Remarks
1	PAN ASM; OIL															
(A)	897147-9990		9404-		1	ABCDE	FGHIJ	KLM	PQRST	UVWXY	ZABC	EFG				
(B)	897182-0612		9404-0009		1			NO								
(B)	897300-8950		0010-		1			NO								
(C)	897171-1260		9907-		1							HI	JKLMN	OP S	TUVWX	
(D)	897228-1540		0001-		1						D					
(C)	897314-9110		0106-		1									QR		
2	GAUGE; OIL LEVEL															
	894422-5950		9404-		1	D	G J	KLMNO	PQRS	V	B	HI	JKLMN	OP S	TUV X	
	897088-8140		9404-		1	AB	F HI		T	X		G			W	
	897207-0660		9807-		1	C E										
	897166-9600		9404-		1					U W Y	ZA CD	EF				
	897320-3640		0106-		1									QR		
3	GASKET; DRAIN PLUG —ALSO INCLUDED IN GASKET SET(ENGINE)															
	109623-0570		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
4	PLUG; DRAIN, OIL															
(A)	909662-0120		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
(B)	894390-5270		9404-		2			NO								
8	TUBE; GUIDE, OIL LEVEL GAUGE															
(A)	897096-7000		9404-		1	ABC E	F HI		T	X		G			W	
(A)	897320-1070		0106-		1									QR		
16	GASKET; OIL PAN TO C/BL															
	897173-5690		9712-		1			NO								
	897314-9140		0105-		1								MN	QR		
23	BOLT; OIL PAN															
	028080-6600		9404-		4			NO								M6X60
	028680-6250		9404-		14			NO								M6X25 FLANGE
	028080-6140	A	9404-9805		20			LM	T	U WXY						M6X14 FLANGE
	897135-1410		9806-		20	ABCDE	FGHIJ	KLM	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M6X13 W/WASHER
24	NUT; OIL PAN															
	091150-2060	A	9404-9805		2			LM	ST	UVWX						M6 FLANGE
	897137-8360		9806-		2	ABCDE	FGHIJ	KLM	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M6 W/LK WASHER
	091150-2060		9404-		4			NO								M6 FLANGE
45	GASKET; GUIDE TUBE															
	509623-0020		9404-		1	ABC E	F HI		T	X		G		QR	W	
84	BOLT; JOINT															
	589090-1040		9404-		1	C										
165	JOINT; OIL DRAIN															
	894151-8911		9404-		1	C										
166	CLIP; RUBBER HOSE															
	109707-1310		9404-		2	C										
227	NIPPLE; GUIDE TUBE															
	894455-8940		9404-		1	ABC E	F HI		T	X		G		QR	W	


OIL PAN AND LEVEL GAUGE

0-13 B

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
277	CAP: OIL FILLER	897228-1560		9905-		1	D	
301	GASKET: JOINT	909571-4200		9404-		2	C	ID=20.5 OD=28.0

0-14	CAMSHAFT AND VALVE
FIG-NO.	(NO.1)

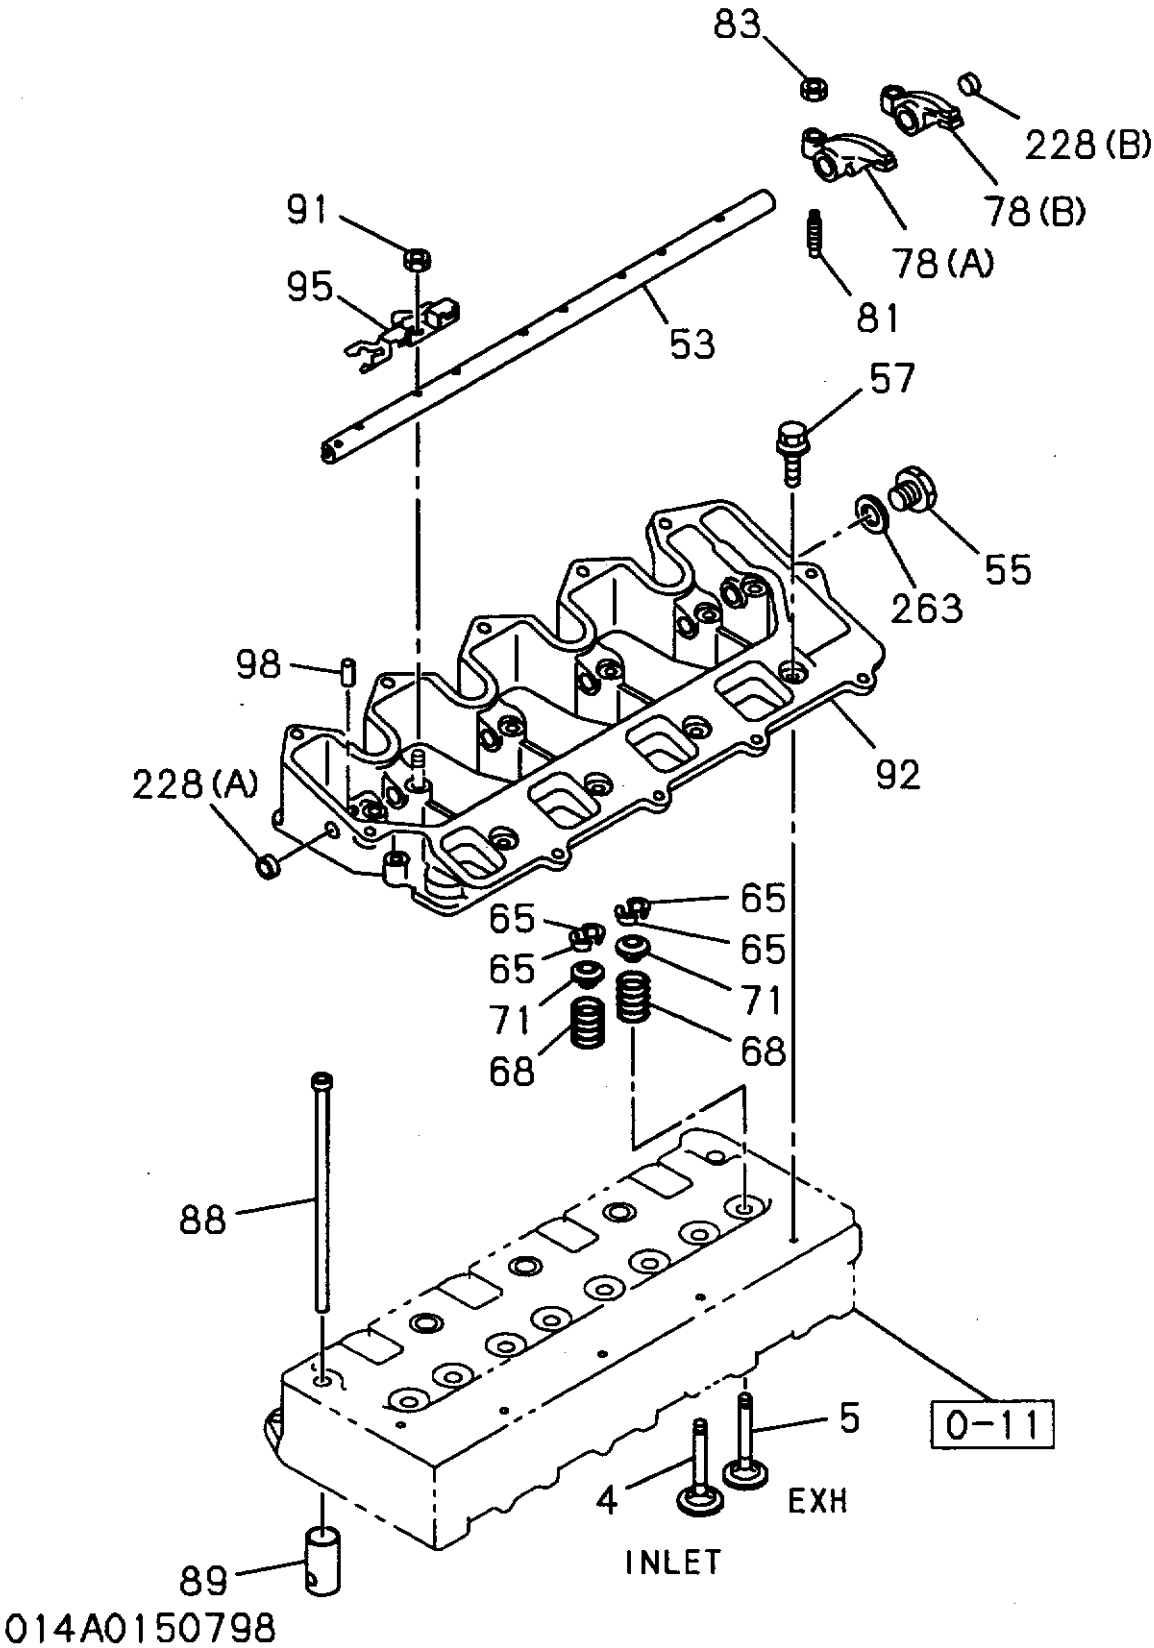


CAMSHAFT AND VALVE

(NO.2)

0-14

FIG-NO.

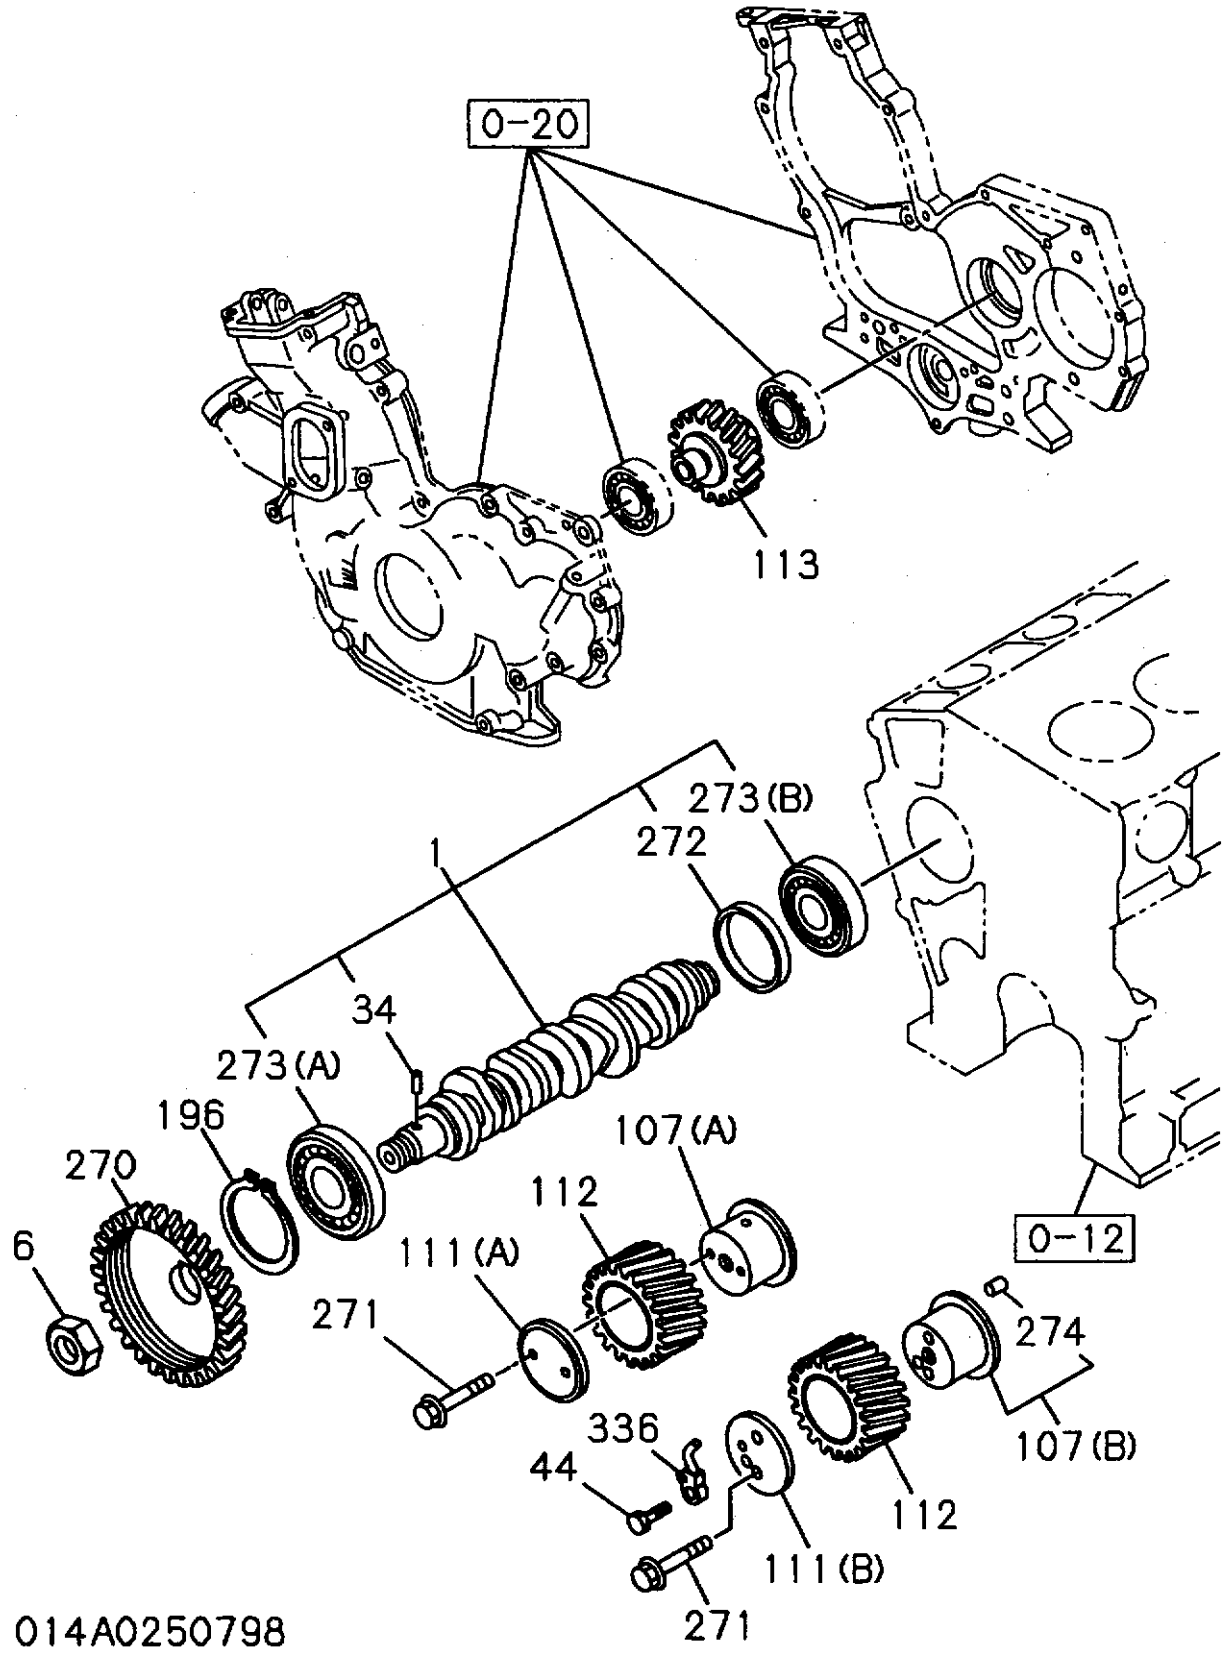

0-14 A CAMSHAFT AND VALVE

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	I T C	APPLIED DATE	L R	QTY	4LB1		4LC1			4LE1					Remarks
						PPPPP AAAAA 00000 12345 ABCDE	PPTTT AAPPP 00AAA 67 00 12 FGHIJ	PPPPP AAAAA 0000 1234 U G KLMNO	PPPPP VVVWW 00000 12312 PQRST	PPPCC WWWAA 000 0 345 1 UVWXY	DDDDD AAAAA 0000 1234 ZABCD	DDDDD AAAAA 00000 56789 EFGHI	PPPPP AAAAA 0000 1234 JKLMN	PPPPP AAAAA 00001 57890 OPQRS	PPPPP AAAAA 11111 12345 TUVWX	
1	CAMSHAFT															
	897077-8011		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVW						
	897126-1790	C	9404-9601		1						ZA		JKL			
	897145-1980		9602-		1					XY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
4	VALVE; INL															
	897102-1240		9404-		4	ABCDE	FGHIJ	KLMNO	PQRST	UVW						
	897102-1231		9404-		4					XY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
5	VALVE; EXH															
	897034-6283		9404-		4	ABCDE	FGHIJ	KLMNO	PQRST	UVW						
	897045-4103		9404-		4					XY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
6	NUT; CM/SHF GEAR															
	509400-0530		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
34	PIN; CM/SHF															
	909878-6260		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	OD=5 L=6
44	BOLT; OIL JET															
	909906-2051		0104-		1						ZABCD	EFGHI				
53	SHAFT; ROCKER ARM															
	897077-8130		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVW						
	897118-6561		9404-		1					XY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
55	PLUG; ROCKER SHAFT END															
	999202-3140		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M14X9
57	BOLT; ROCKER ARM BRKT															
	028080-6250		9404-		5	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M6X25 FLANGE
	028680-6160		9611-		5	ABCDE	FGHIJ	KLMNO	PQRST	UVW						M6X16
	028080-6500		9404-		5					XY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M6X50 FLANGE
65	COLLAR; SPLIT															
	894239-5010		9404-		16	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
68	SPRING; VLV															
	897034-6291		9404-		8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
71	SEAT; SPR															
	894251-0311		9404-		8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
78	ARM; ROCKER															
(A)	897066-8761	C	9404-9407		4		HI	K								INLET
(A)	897116-4480	C	9408-9806		4	ABCDE	F HIJ	KLMN	PQ ST	XY	ZABCD		JKLMN	OPQRS	TUVWX	INLET
(A)	897212-5180		9807-		4	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	INLET
(B)	897066-8781	C	9404-9407		4		HI	K								EXHAUST
(B)	897116-4500	C	9408-9806		4	ABCDE	F HIJ	KLMN	PQ ST	XY	ZABCD		JKLMN	OPQRS	TUVWX	EXHAUST
(B)	897212-5200		9807-		4	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	EXHAUST
81	SCREW; ADJ, ROCKER ARM															
	897010-4850		9404-		8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	

CAMSHAFT AND VALVE

0-14 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
83	NUT; ADJ SCREW, LK	909111-5060		9404-		8	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
88	ROD; PUSH	897066-8693		9404-		8	ABCDEFGHIJ	
		897069-5753		9404-		8	KLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
89	TAPPET; VLV	897034-6301	A	9404-9508		8	ABCDEF HI KLMN PQ ST	
		897124-3690		9509-		8	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
91	NUT; ROCKER SHAFT	091150-2060	C	9404-0104		6	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M6 FLANGE
		897137-8360		0105-		6	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M6 FLANGE
92	BRACKET; ROCKER ARM	897077-8111	C	9404-9610		1	ABCD HIJKLM PQ ST	
		897163-4194		9611-		1	ABCDEFGHIJKLMNOPQRSTUVW	
		897118-1966		9404-		1	XYZABCDEFGHIJKLMNOPQRSTUVWX	
95	SPRING; ROCKER SHAFT	897069-8871		9404-		4	ABCDEFGHIJKLMNOPQRSTUVW	
		897070-6982		9404-		4	XYZABCDEFGHIJKLMNOPQRSTUVWX	
98	PIN; SHAFT SET	909678-5100	A	9408-9502		1	KL	OD=5.4
		908160-5160		9503-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
107	SHAFT; IDLE GEAR	897072-8290		9404-		1	E MN X	
(A)		897072-8290		9404-9509		1	A HI KL P S	
(A)		897129-7801		9510-		1	AB D GHIJKL OPQRSTUVWXY JKLMNOPQRS UVW	
(A)		897147-4990		9404-		1	C F T	
(A)		897129-7801		9404-0103		1	ZABCDEFGHI	
(B)		897310-1221		0104-		1	ZABCDEFGHI	
111	COLLAR; THRUST, IDLE GEAR	512535-0051		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXY JKLMNOPQRSTUVWX	
(A)		512535-0051		9404-0103		1	ZABCDEFGHI	
(B)		897310-1771		0104-		1	ZABCDEFGHI	
112	GEAR; IDLE	897037-5940		9404-		1	E MN X	
		897129-7820		9404-		1	AB D GHIJKL OPQRSTUVWXYZABCDEFGHIJKLMNOPQRS UVW	
		897147-5010		9404-9905		1	C F T	
		897231-2130		9906-		1	C F T	
113	GEAR; IDLE	897081-9280		9404-		1	AB D G IJ U W	
		897046-0681		9404-		1	C EF MN T X	
196	RING; SNAP	909180-1620		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	

0-14 A CAMSHAFT AND VALVE

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
228	CUP; SEALING, CAMSHAFT							
(A)		911129-0830		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	OD=12
(B)		897039-5260	A	9404-0106		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	OD=8
(B)		897233-4290		0107-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	OD=8
263	GASKET; CAM END						—ALSO INCLUDED IN GASKET SET(ENGINE)	
		909571-4140		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	ID=14.2 OD=20.0
270	GEAR; INJ PUMP & VLV							
		897102-2881		9404-0105		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
		897307-4042		0106-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
271	BOLT; COLLAR							
		028090-8600		9404-		2	C EF MN T X	M8X60 FLANGE
		028090-8600		9404-9509		2	HI KL T X	M8X60 FLANGE
		028090-8450		9510-		2	HI KL	M8X45 FLANGE
		028090-8450		9404-		2	AB D G J OPQRSTUVWXYZABCDEFGHIJKLMNOPQRS UVW	M8X45 FLANGE
272	RING; CAMSHAFT							
		897062-0480		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
273	BEARING; CAMSHAFT							
(A)		900090-6100		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
(B)		900090-6570		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
274	PIN; IDLE SHAFT							
		908160-5100		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
336	PIPE; OIL JET							
		897310-1251		0104-		1	ZABCDEFGHI	

CAMSHAFT AND VALVE

0-14 B
FIG-NO.

Model columns (4LE1 / 4LE2), header rows as printed:

4LE1 → PPPPP PPPPP PPPPP PPPPP PPPPP PPPPP PPP (first half), 4LE2 → CC CCCDD PPPPP PPPPP
AAAAA AAAAA AVVVV VVVWW WWWWW WWWWW WWWAA AAAAA AAAAW WWWWW
11112 22222 20000 00000 00000 00111 111 0 00000 000 00000
67890 12345 61234 56712 34567 89012 347 1 23412 1231 23579
ABCDE FGHIJ KLMNO PQRST UVWXY ZABCD EFGHI JKLMN OPQRS TUVWX

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
1	CAMSHAFT						
	897145-1980		9404-		1	CDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	
	897211-7590		9404-		1	AB	
	897227-7251		9607-9905		1	OP	
	897231-0830		9906-		1	K OPQR W	
	897214-9881		9912-0003		1	HI	
	897227-7251		0004-		1	HIJ L STUV X	
	897320-3260		0105-		1	MN	
4	VALVE; INL						
	897102-1231		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
5	VALVE; EXH						
	897045-4103		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
6	NUT; CM/SHF GEAR						
	509400-0530		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKL OPQRSTUVWX	
	897303-2250		0105-		1	MN	
34	PIN; CM/SHF						
	909878-6260		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
44	BOLT; OIL JET						
	909906-2051		0104-		1	JKLMNOPQR MN	
53	SHAFT; ROCKER ARM						
	897118-6561		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
55	PLUG; ROCKER SHAFT END						
	999202-3140		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M14X9
57	BOLT; ROCKER ARM BRKT						
	028080-6250		9404-		5	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M6X25 FLANGE
	028080-6500		9404-		5	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M6X50 FLANGE
65	COLLAR; SPLIT						
	894239-5010		9404-		16	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
68	SPRING; VLV						
	897034-6291		9404-		8	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
71	SEAT; SPR						
	894251-0311		9404-		8	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
78	ARM; ROCKER						
(A)	897116-4480	C	9408-9806		4	B LM TU WXY	INLET
(A)	897212-5180		9807-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	INLET
(B)	897116-4500	C	9408-9806		4	B LM TU WXY	EXHAUST
(B)	897212-5200		9807-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	EXHAUST
81	SCREW; ADJ, ROCKER ARM						
	897010-4850		9404-		8	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
83	NUT; ADJ SCREW, LK						
	909111-5060		9404-		8	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	

0-14 B CAMSHAFT AND VALVE

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 PPPPP AAAAA 11112 67890	PPPPP AAAAA 22222 12345	PPPPP AVVVV 20000 61234	PPPPP VVVWW 00000 56712	PPPPP WWWWW 00000 34567	PPPPP WWWWW 00111 89012	PPP CC WWW AA 111 0 347 1 (4LE2)	CCCDD AAAAA 00000 23412	PPPPP AAAAW 0000 1231	PPPPP WWWWW 00000 23579	Remarks
						ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
88	ROD; PUSH															
	897069-5753		9404-		8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
89	TAPPET; VLV															
	897124-3690		9404-		8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
91	NUT; ROCKER SHAFT															
	091150-2060	C	9404-0104		6	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JK	OP S	TU	M6 FLANGE
	897137-8360		0105-		6	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQR	TUVWX	M6 FLANGE
92	BRACKET; ROCKER ARM															
	897118-1966		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFG				
	897195-2673		9907-		1							HI	JKLMN	OPQRS	TUVWX	
95	SPRING; ROCKER SHAFT															
	897070-6982		9404-		4	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
98	PIN; SHAFT SET															
	908160-5160		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
107	SHAFT; IDLE GEAR															
(A)	897129-7801		9404-		1	AB D	FGHIJ	K	ST	UVWXY	Z BCD	EFG	JK			
(A)	897129-7801		9404-0103		1			LMNO	PQR							
(B)	897310-1221		0104-		1			LMNO	PQR				MN			
(A)	897072-8290		9404-		1	C E					A					
(A)	897072-8290		9404-0003		1							HI		OP S	TU	
(A)	897129-7801		0004-		1							HI	L	OPQRS	TUVWX	
111	COLLAR; THRUST, IDLE GEAR															
(A)	512535-0051		9404-		1	ABCDE	FGHIJ	K	ST	UVWXY	ZABCD	EFGHI	JKL	OPQRS	TUVWX	
(A)	512535-0051		9404-0103		1			LMNO	PQR							
(B)	897310-1771		0104-		1			LMNO	PQR				MN			
112	GEAR; IDLE															
	897129-7820		9404-		1	AB D	FGHIJ	KLMNO	PQRST	UVWXY	Z BCD	EFG				
	897037-5940		9404-		1	C E					A					
	897229-3690		9907-0003		1							HI		OP S	TU	
	897217-8641		0004-		1							HI	JKLMN	OPQRS	TUVWX	
113	GEAR; IDLE															
	897081-9280		9404-		1		I		T	XY	Z B	FG			UV	
	897046-0681		9404-		1	C E					A					
196	RING; SNAP															
	909180-1620		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
228	CUP; SEALING, CAMSHAFT															
(A)	911129-0830		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	OD=12
(B)	897039-5260	A	9404-0106		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQ S	TU X	OD=8
(B)	897233-4290		0107-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
263	GASKET; CAM END — *ALSO INCLUDED IN GASKET SET (ENGINE)*															
	909571-4140		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	ID=14.2 OD=20.0


CAMSHAFT AND VALVE

0-14 B

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
270	GEAR: INJ PUMP & VLV							
		897102-2881		9404-		1	LMNOPQR	
		897102-2881		9404-0105		1	ABCDEFGHIJK STUVWXYZABCDEFG	
		897217-9570		9907-0105		1	HIJK OP STU	
		897307-4042		0106-		1	ABCDEFGHIJK STUVWXYZABCDEFGHIJKL OPQRSTUVWX	
		897321-5780		0105-		1	MN	
271	BOLT: COLLAR							
		028090-8450		9404-		2	AB D FGHIJKLMNOPQRSTUVWXYZ BCDEFG JKLMN QR VWX	M8X45 FLANGE
		028090-8600		9404-		2	C E A	M8X60 FLANGE
		028090-8600		9404-0003		2	H1 OP STU	M8X60 FLANGE
		028090-8450		0004-		2	H1 OP STU	M8X45 FLANGE
272	RING: CAMSHAFT							
		897062-0480		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
273	BEARING: CAMSHAFT							
(A)		900090-6100		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
(B)		900090-6570		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
274	PIN: IDLE SHAFT							
		908160-5100		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
336	PIPE:OIL JET							
		897310-1251		0104-		1	LMNOPQR MN	

0-15	CRANKSHAFT,PISTON AND FLYWHEEL
FIG-NO.	

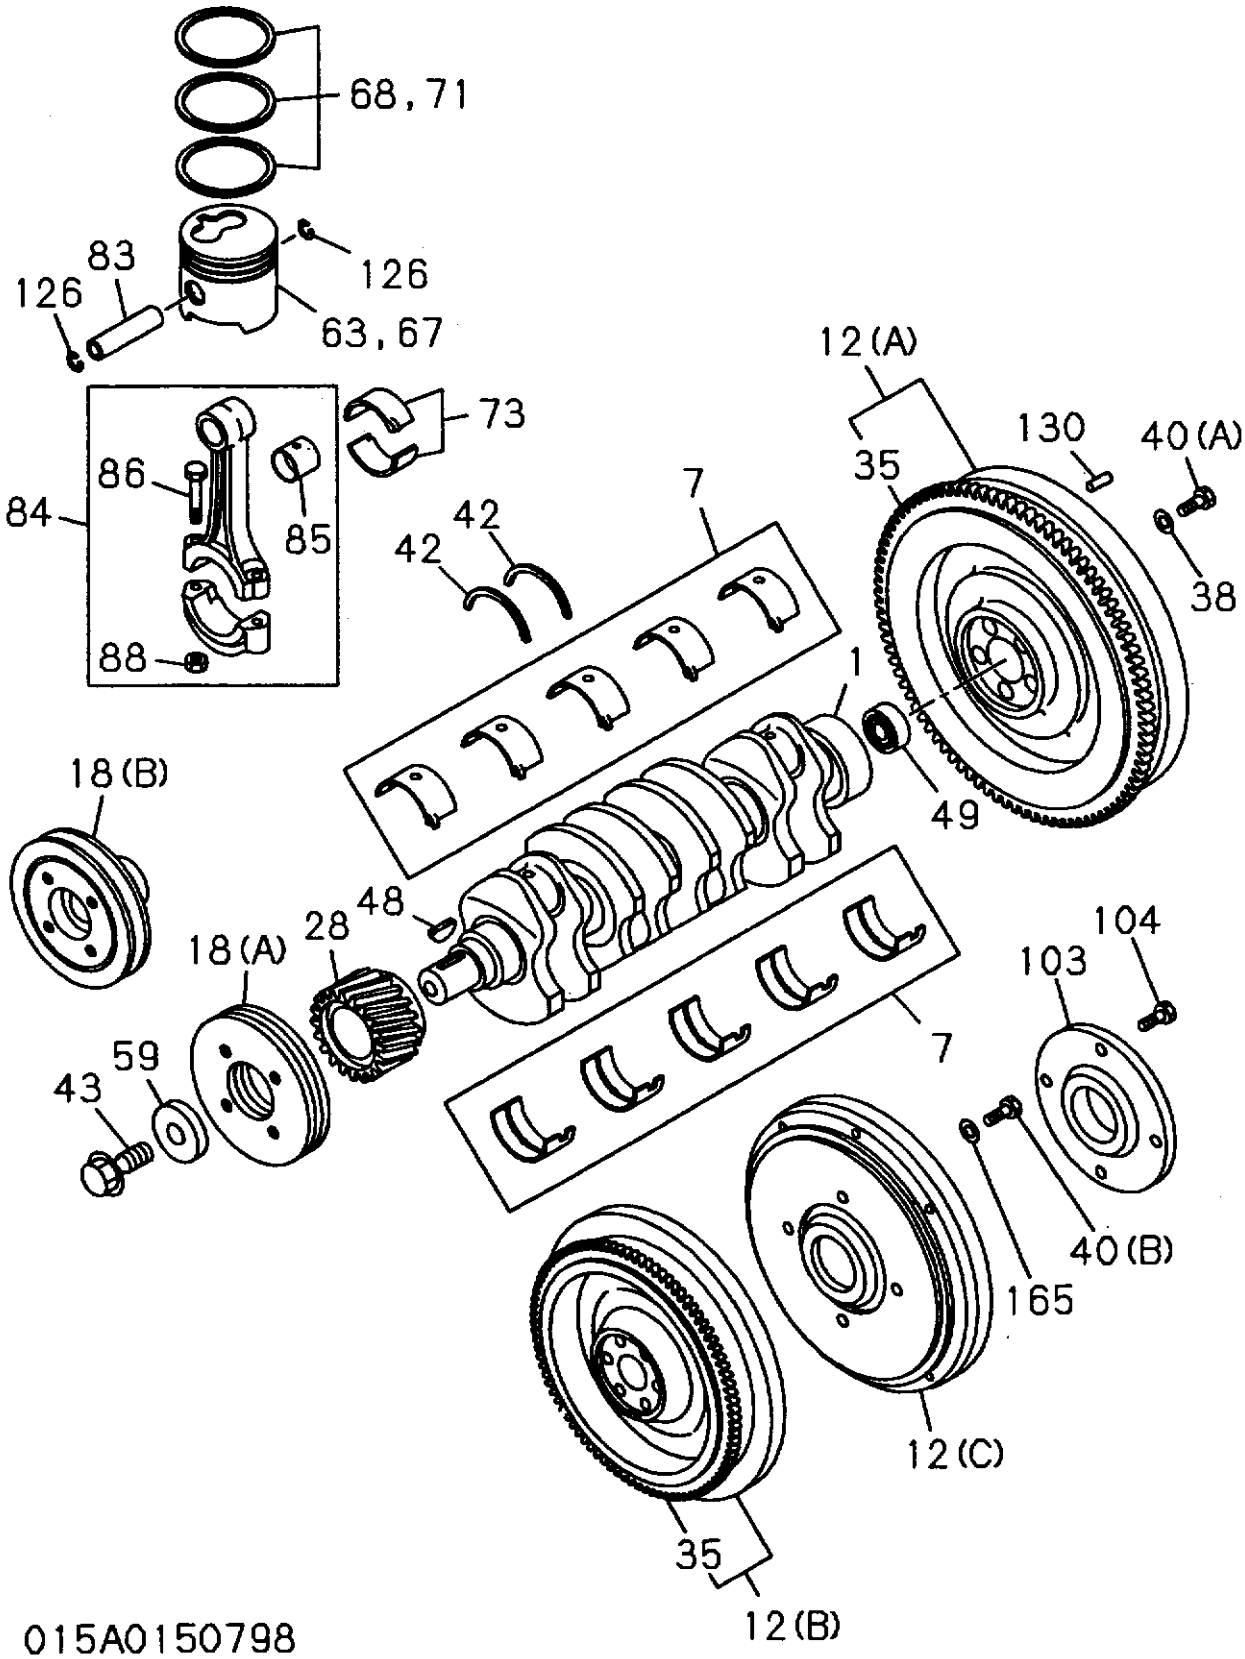

CRANKSHAFT,PISTON AND FLYWHEEL

0-15 A

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	I T C	APPLIED DATE	L R	QTY	4LB1 PPPPP AAAAA 00000 12345	PPTTT AAPPP 00AAA 67 00 12	4LC1 PPPPP AAAAA 0000 1234 U B	PPPPP VVVWW 00000 12312	PPPCC WWWAA 000 0 345 1	4LE1 DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	PPPPP AAAAA 0000 1234	PPPPP AAAAA 00001 57890	PPPPP AAAAA 11111 12345	Remarks
						ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
1	CRANKSHAFT															
	897081-7130	A	9404-9407		1		H									
	897046-3730		9408-		1	ABCDE	FGHIJ									
	897046-3740		9404-		1			KLMNO	PQRST	UVW						
	897115-1770		9404-		1					XY	ZABCD	EFGHI	JKLMN	OPQR	TUVWX	
	897146-9970		9404-		1									S		
7	METAL KIT: CRANKSHAFT, STANDARD															
	897077-7840		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVW						
	897141-2100		9404-		1					XY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
12	FLYWHEEL															
(A)	897119-3270		9404-		1	B	J									
(A)	897043-9340		9404-		1	DE	H	KLM O								
(A)	897171-2070		9404-		1	C	F								T X	
(A)	897218-6760		9404-		1		G									
(A)	897164-5300		9404-		1				PQRST	UVW	CD	FGHI				
(A)	897091-4101		9404-		1									S		
(A)	897174-4330	C	9404-9710		1			N								
(A)	897201-6390		9711-		1			N								
(B)	897089-5431	A	9404-9504		1		I									
(B)	897132-0110		9505-		1	A	I									
(A)	897133-5690		9404-		1					X	Z		JK M	PQR	UVW	
(A)	897201-9730		9404-		1					Y						
(A)	897130-1060	C	9404-9603		1						A					
(A)	897147-0000		9604-		1						A					
(B)	897135-4460		9404-0004		1						B	E				
(C)	894175-4091		9404-0004		1						B	E				
(A)	897252-4380		0005-		1						B	E				
(A)	897135-4570		9404-		1								L N	O		
18	PULLEY: CR/SHF															
(A)	897109-3722		9404-0004		1	A CDE	FGHI	KLMNO	PQRST	UVWX	Z BCD	EFG	J LM	R	T	
(A)	897226-9300		0005-		1	A CDE	FGHI	KLMNO	PQRST	UVWX	Z BCD	EFGHI	J LM	R	T	
(A)	897070-0690		9404-		1									S		
(B)	897093-5031		9404-		1	B	J									
(A)	897109-3722	A	9404-9712		1					Y	A		N			
(A)	897070-0690		9801-9910		1					Y	A		K N		UVWX	
(B)	897226-8300		9911-		1					Y	A		K	PQ	UVWX	
(A)	897225-1160		9911-		1								N			
(A)	897109-3722		9404-9712		1									O		
(A)	897070-0690		9801-9905		1									OPQ		
(A)	897070-0690		9906-9910		1									PQ		
(A)	897225-1160		9906-		1									O		
28	GEAR: CR/SHF															
	897034-5921		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
35	GEAR: RING															
	894419-6021		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
38	WASHER: FLYWHEEL															
	897023-2680		9404-		6	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	

0-15 A CRANKSHAFT,PISTON AND FLYWHEEL

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	I T C	APPLIED DATE	L R	Q T Y	4LB1 4LC1 4LE1	Remarks
							PPPPPPPPTTTTPPPPPPPPPPPPPPPPCCDDDDDDDDDDPPPPPPPPPPPPPPP AAAAAAAAPPPPAAAAAAVVVVWWWWAAAAAAAAAAAAAAAAAAAAAAAAA 0000000AAA 0000000000000 0 0000000000 0000000001111111 1234567 00 1234123123451 1234567890 1234578901234512 12 U G ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
40	BOLT; FLYWHEEL							
(A)	897093-3260		9404-			6	AB IJ	
(A)	894133-3281		9404-			6	CDEFGH KLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
(B)	902061-0320		9404-			4	B E	
42	WASHER; THRUST,CR/SHF							
	511599-0031		9404-			2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
43	BOLT; CR/SHF PULLEY							
	894386-0790		9404-			1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
48	KEY; WOODRUFF,CR/SHF							
	894201-6410		9404-			1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
49	BEARING; PILOT							
	509800-0780		9404-			1	A I	
	509800-0780	C	9404-9702			1	B J	
	897175-2640		9703-			1	B J	
	900090-6790		9404-			1	N	
59	WASHER; CR/SHF PULLEY							
	894134-7920		9404-			1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
63	PISTON							
	897176-8880		9404-			4	ABCDEFG	GRADE=NON
	897176-8860		9404-			4	HIJ	GRADE=NON
	897176-8840		9404-			4	KLMNOPQRSTUVW	GRADE=NON
	897187-5830		9404-0012			4	XY UVW	GRADE=NON
	897187-5820		9404-0012			4	ZABCDEFGH JKLMNOPQRST X	GRADE=NON
	897257-8760		0101-			4	XYZABCDEFGHIJKLMNOPQRSTUVWX	GRADE=NON
67	PISTON; O/S=0.25							
	897087-1050		9404-			4	ABCDEFG	
	897087-1220		9404-			4	HIJ	
	897148-0220		9404-			4	KLMNOPQRSTU	
	897170-4010		9404-0012			4	XY UVW	
	897087-1140		9404-0012			4	ZABCDEFGH JKLMNOPQRST X	
	897257-8750		0101-			4	XYZABCDEFGHIJKLMNOPQRSTUVWX	
68	RING SET; PISTON,STANDARD							
	897034-6090		9404-			4	ABCDEFGHIJKLMNOPQRSTUVW	
	897141-2080		9404-			4	XYZABCDEFGHIJKLMNOPQRSTUVWX	
71	RING SET; PISTON,O/S=0.25							
	897141-2070		9404-			4	ABCDEFGHIJKLMNOPQRSTU	
	897141-2090		9404-			4	XYZABCDEFGHIJKLMNOPQRSTUVWX	
73	METAL SET; CONN ROD,STANDARD							
	894380-5270		9404-			4	ABCDEFGHIJ	
	897077-7930		9404-			4	KLMNOPQRSTUVW	
	894156-0840		9404-			4	XYZABCDEFGHIJKLMNOPQRSTUVWX	
83	PIN; PISTON							
	894401-7511		9404-			4	ABCDEFG	

CRANKSHAFT,PISTON AND FLYWHEEL

0-15 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
83	PIN; PISTON							
		894114-0480		9404-		4	H I J K L M N O P Q R S T U V W	OD=25 L=60
		512211-0180		9404-		4	X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	OD=25
84	ROD ASM; CONN							
		897020-0670	C	9404-0104		4	A B C D E F G	
		897310-3530		0105-		4	A B C D E F G	
		897106-1101		9404-		4	H I J	
		897077-7903		9404-		4	K L M N O P Q R S T U V W	
		897047-0241	C	9404-0104		4	X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	
		897310-3510		0105-		4	X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	
85	BUSHING; CONNROD							
		894137-5220		9404-0104		4	A B C D E F G H I J	
		897310-3540		0105-		4	A B C D E F G H I J	
		894114-0540		9404-		4	K L M N O P Q R S T U V W	OD=28
		512251-0071		9404-0006		4	X Y Z A B C D E F G H J K L M N O P Q R S T U V W X	
		897219-1910	C	0007-0104		4	X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	
		897310-3520		0105-		4	X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	
86	BOLT; CONNROD							
		894107-5501		9404-		8	A B C D E F G H I J	
		894377-7841		9404-		8	K L M N O P Q R S T U V W	3/8-24 UNF
		894216-2064		9404-		8	X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	
88	NUT; CONNROD							
		894240-9020		9404-		8	A B C D E F G H I J	
		894377-7850		9404-		8	K L M N O P Q R S T U V W	3/8-24 UNF
		894224-2362		9404-		8	X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	
126	RING; SNAP, PISTON PIN							
		894401-7501		9404-		8	A B C D E F G	
		894114-0491		9404-		8	H I J K L M N O P Q R S T U V W X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	T=1.7 OD=27.8
130	PIN; STRAIGHT							
		908160-6160		9404-		2	A I	
165	WASHER; PL							
		909851-8660		9404-		4	B E	

0-15 B CRANKSHAFT,PISTON AND FLYWHEEL

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
							PPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPP AAAAAAAAAAAVVVVVVVWWWWWWWWWWWWWWWAAAAAAAAAAAAWWWWW 11112222222000000000000000001111111 0000000 0000000000 67890123456123456712345678901234 7 1234123 1231235790 ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
1	CRANKSHAFT							
	897115-1770		9404-			1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJ L OP STUV X	
	897255-3374		9711-			1	K MN QR W	
7	METAL KIT: CRANKSHAFT, STANDARD							
	897141-2100		9404-			1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
12	FLYWHEEL							
(A)	897171-2070		9404-			1	C E	
(A)	897164-5300		9404-			1	G MNOPQR AB EF V	
(A)	897133-5690		9404-			1	D H JK QR	
(B)	897135-4460		9404-0006			1	L S UVW YZ CD STU	
(C)	894175-4091		9404-0006			1	L S UVW YZ CD STU	
(A)	897252-4380		0007-			1	L S UVW YZ CD STU X	
(A)	897135-4570		9404-			1	AB F H OP	
(A)	897161-9662		9404-			1	T	
(A)	897161-9662		9711-0003			1	X	
(A)	897132-0110		0004-			1	X	
(A)	897218-6760		9607-			1	I	
(A)	897043-9340		9607-			1	G	
(A)	897233-5981		9607-			1	IJ L	
(A)	897288-1560		9711-			1	K	
(A)	897320-5470		0105-			1	MN	
(A)	897310-1000		0105-			1	W	
18	PULLEY: CR/SHF							
(A)	897109-3722		9404-9912			1	LMNOPQRSTUVW YZABCDEFG	
(A)	897226-9300		0001-			1	LMNOPQRSTUVW YZABCDEFG L	
(A)	897070-0690		9404-			1	E	
(A)	897070-0690		9404-9910			1	CD	
(B)	897226-8300		9911-			1	CD JK K MN	
(A)	897226-9300		9404-			1	FGHI HIJ OP STUVWX	
(A)	897070-0690		9404-9905			1	AB	
(A)	897225-1160		9906-			1	AB	
(B)	897314-9060		0106-			1	QR	
28	GEAR: CR/SHF							
	897034-5921		9404-			1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG JKLMN QR VWX	
	897217-8631		9907-0003			1	HI OP STU	
	897034-5921		0004-			1	HI OP STU	
35	GEAR: RING							
	894419-6021		9404-			1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
38	WASHER: FLYWHEEL							
	897023-2680		9404-			6	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
40	BOLT: FLYWHEEL							
(A)	894133-3281		9404-			6	ABCDEFGHIJKLMNOPQRSTUVW YZABCDEFGHIJKLMNOPQRSTUVWX	
(A)	894133-3281		9811-0003			6	X	
(A)	897093-3260		0004-			6	X	
(B)	902061-0320		9404-0006			4	L S UVW YZ CD STU	
42	WASHER: THRUST, CR/SHF							
	511599-0031		9404-			2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	

CRANKSHAFT,PISTON AND FLYWHEEL

0-15 B
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	Remarks
	(Model)					4LE1						4LE2				
						PA16 PA17 PA18 PA19 PA20	PA21 PA22 PA23 PA24 PA25	PA26 PV01 PV02 PV03 PV04	PV05 PV06 PV07 PW01 PW02	PW03 PW04 PW05 PW06 PW07	PW08 PW09 PW10 PW11 PW12	PW13 PW14 PW17 CA CA01	CA02 CA03 CA04 DA01 DA02	PA PA01 PA02 PA03 PW01	PW02 PW03 PW05 PW07 PW09	
43	BOLT; CR/SHF PULLEY															
	894386-0790		9404-		1	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	
48	KEY; WOODRUFF, CR/SHF															
	894201-6410		9404-		1	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	
49	BEARING; PILOT															
	509800-0780		0004-		1					X						
59	WASHER; CR/SHF PULLEY															
	894134-7920		9404-		1	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	
63	PISTON															
	897187-5830		9404-0012		4	D	I		T	U W Y	Z A C D	E F G				GRADE=NON
	897187-5820		9404-0012		4	A B C E	F G H	L M N O	P Q R S	V X	B					GRADE=NON
	897257-8760		0101-		4	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G				GRADE=NON
	897232-6040		9907-		4							H I	J K L M N	O P Q R S	T U V W X	GRADE=NON
67	PISTON; O/S=0.25															
	897170-4010		9404-0012		4	D	I		T	U W Y	Z A C D	E F G				
	897087-1140		9404-0012		4	A B C E	F G H	L M N O	P Q R S	V X	B					
	897257-8750		0101-		4	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G				
	897232-6030		9907-		4							H I	J K L M N	O P Q R S	T U V W X	
68	RING SET; PISTON, STANDARD															
	897141-2080		9404-		4	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	
71	RING SET; PISTON, O/S=0.25															
	897141-2090		9404-		4	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	
73	METAL SET; CONN ROD, STANDARD															
	894156-0840		9404-		4	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J L	O P S	T U V X	
	897077-7930		9711-		4								K M N	Q R	W	
83	PIN; PISTON															
	512211-0180		9404-		4	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	OD=25
84	ROD ASM; CONN															
	897047-0241		9404-0104		4	A B C D E	F G H I	L M N O	P Q R S T	U V W X Y	Z A B C D	E F G				
	897219-1890		9907-0006		4							H I		O P S	T U	
	897047-0241	C	0007-0104		4							H I	J	O P S	T U	
	897310-3510		0105-		4	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J L	O P S	T U V X	
	897077-7903		9404-		4								K M N	Q R	W	
85	BUSHING; CONNROD															
	512251-0071		9404-0006		4	A B C D E	F G H I	L M N O	P Q R S T	U V W X Y	Z A B C D	E F G				
	897219-1910		9907-0006		4							H I		O P S	T U	
	897219-1910	C	0007-0104		4	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J	O P S	T U	
	897310-3520		0105-		4	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J L	O P S	T U V X	
	894114-0540		9404-		4								K M N	Q R	W	
86	BOLT; CONNROD															
	894216-2064		9404-		8	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J L	O P S	T U V X	


0-15 B CRANKSHAFT,PISTON AND FLYWHEEL

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 PA16 PA17 PA18 PA19 PA20 (ABCDE)	PA21 PA22 PA23 PA24 PA25 (FGHIJ)	PA26 PV01 PV02 PV03 PV04 (KLMNO)	PV05 PV06 PV07 PW01 PW02 (PQRST)	PW03 PW04 PW05 PW06 PW07 (UVWXY)	PW08 PW09 PW10 PW11 PW12 (ZABCD)	PW13 PW14 PW17 CA CA01 (EFGHI)	4LE2 CA02 CA03 CA04 DA01 DA02 (JKLMN)	PA PA01 PA02 PA03 PW01 (OPQRS)	PW02 PW03 PW05 PW07 PW09 (TUVWX)	Remarks
86	BOLT; CONNROD															
	894377-7841		9404-		8								K MN	QR	W	
88	NUT; CONNROD															
	894224-2362		9404-		8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	J L	OP S	TUV X	
	894377-7850		9404-		8								K MN	QR	W	
103	HOLDER; BRG. FLYWHEEL															
	512339-0031		0007-		1			L	S	UVW Y	Z CD			S	TU X	
104	BOLT; HOLDER															
	028781-0300		0007-		4			L	S	UVW Y	Z CD			S	TU X	
126	RING; SNAP, PISTON PIN															
	894114-0491		9404-		8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	T=1.7 OD=27.8
130	PIN; STRAIGHT															
	908160-6160		9404-		2					X						
165	WASHER; PL															
	909851-8660		9404-0006		4			L	S	UVW Y	Z CD			S	TU	

MEMO

0-20	TIMING GEAR CASE AND FLYWHEEL HOUSING
FIG-NO.	(NO.1)

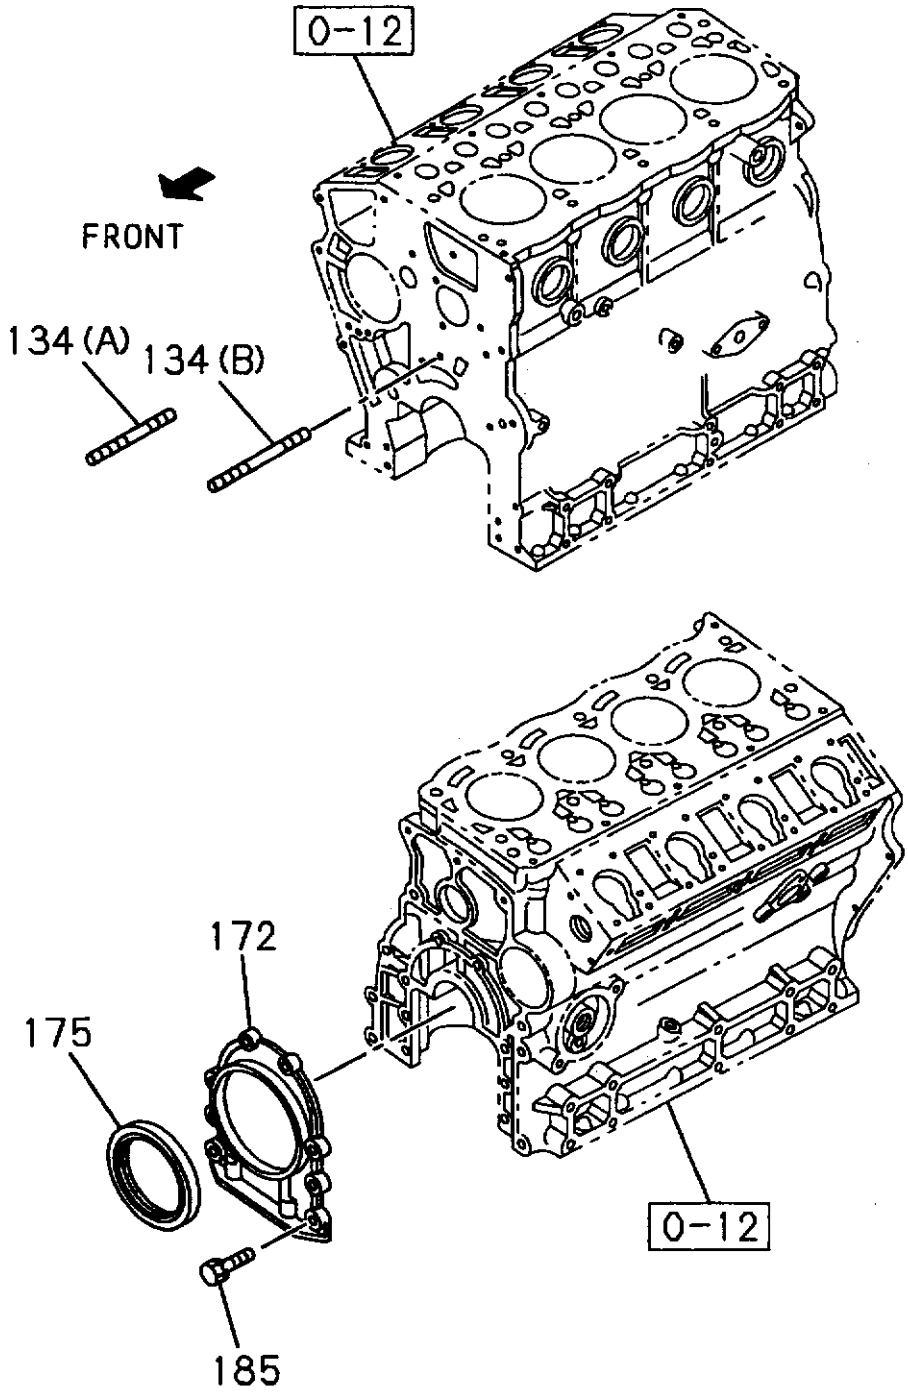


020A0150798

TIMING GEAR CASE AND FLYWHEEL HOUSING


(NO.2)

0-20

FIG-NO.

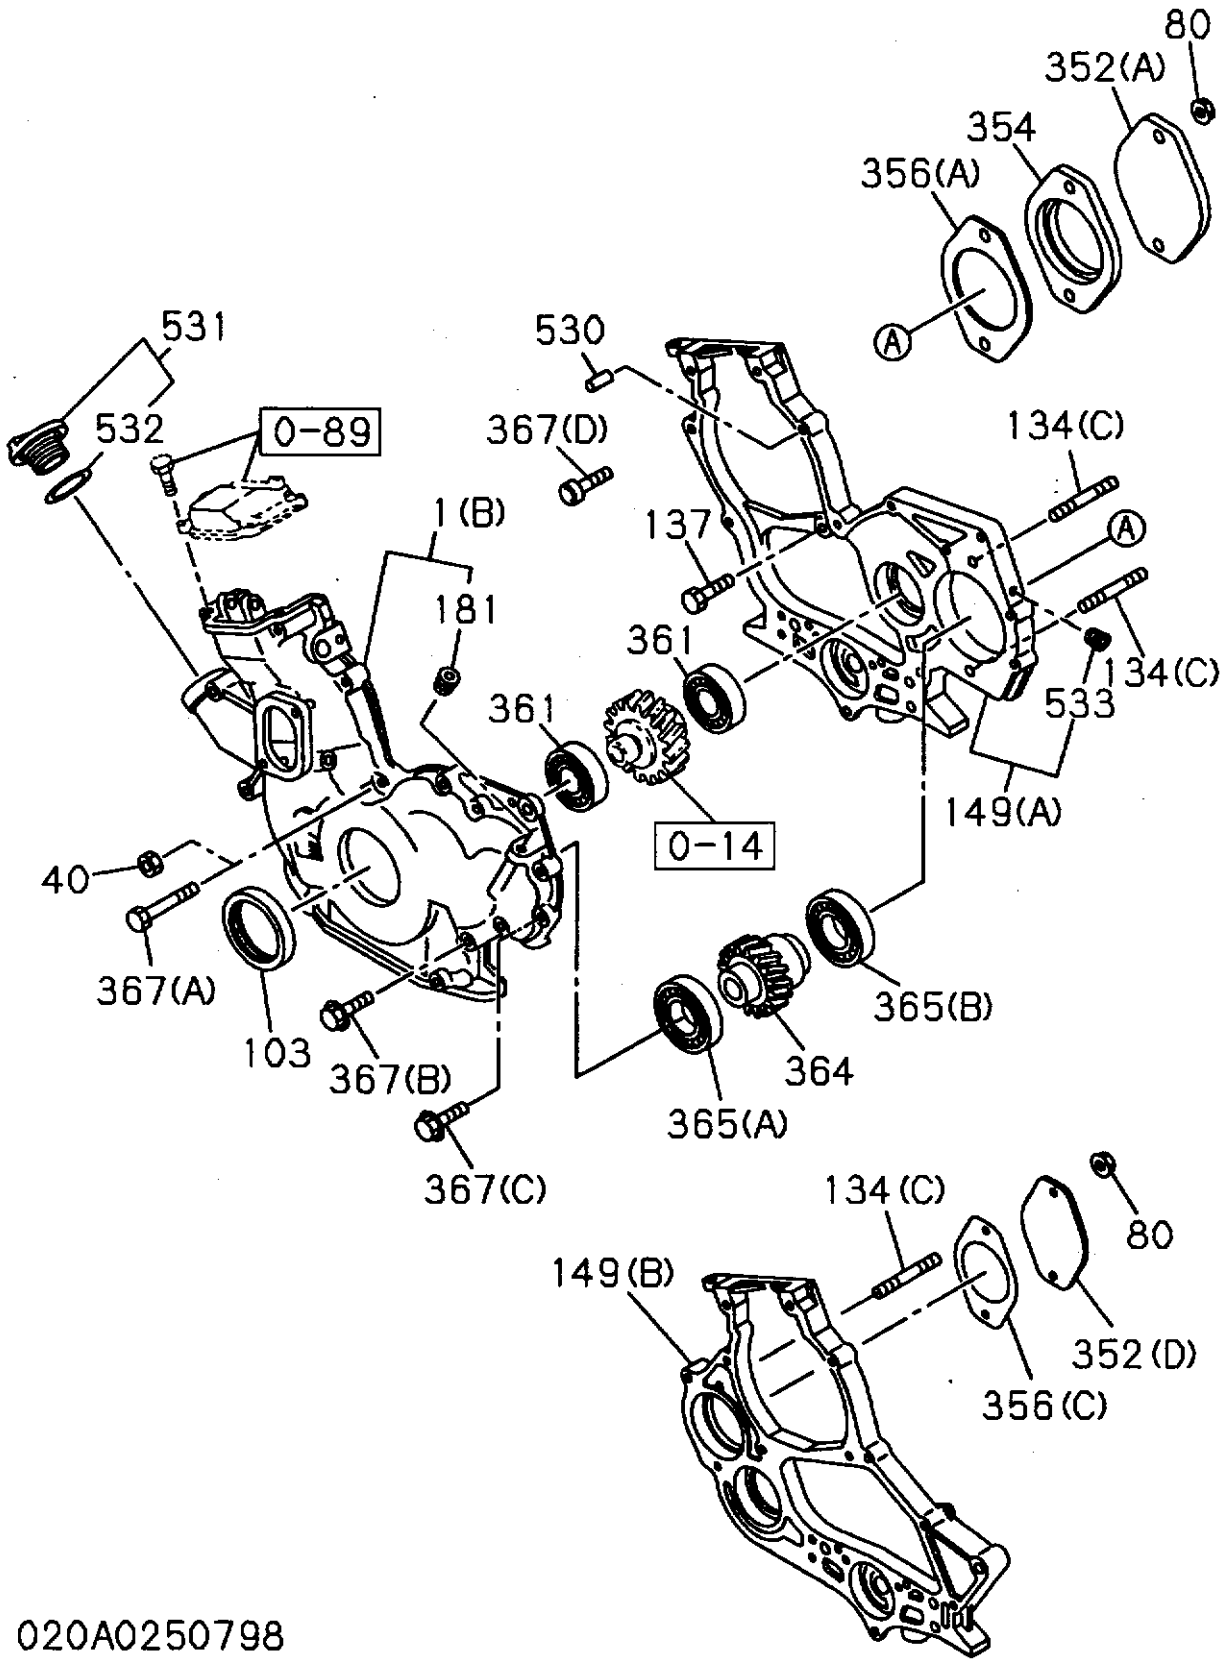

0-20	TIMING GEAR CASE AND FLYWHEEL HOUSING
FIG-NO.	(NO.3)

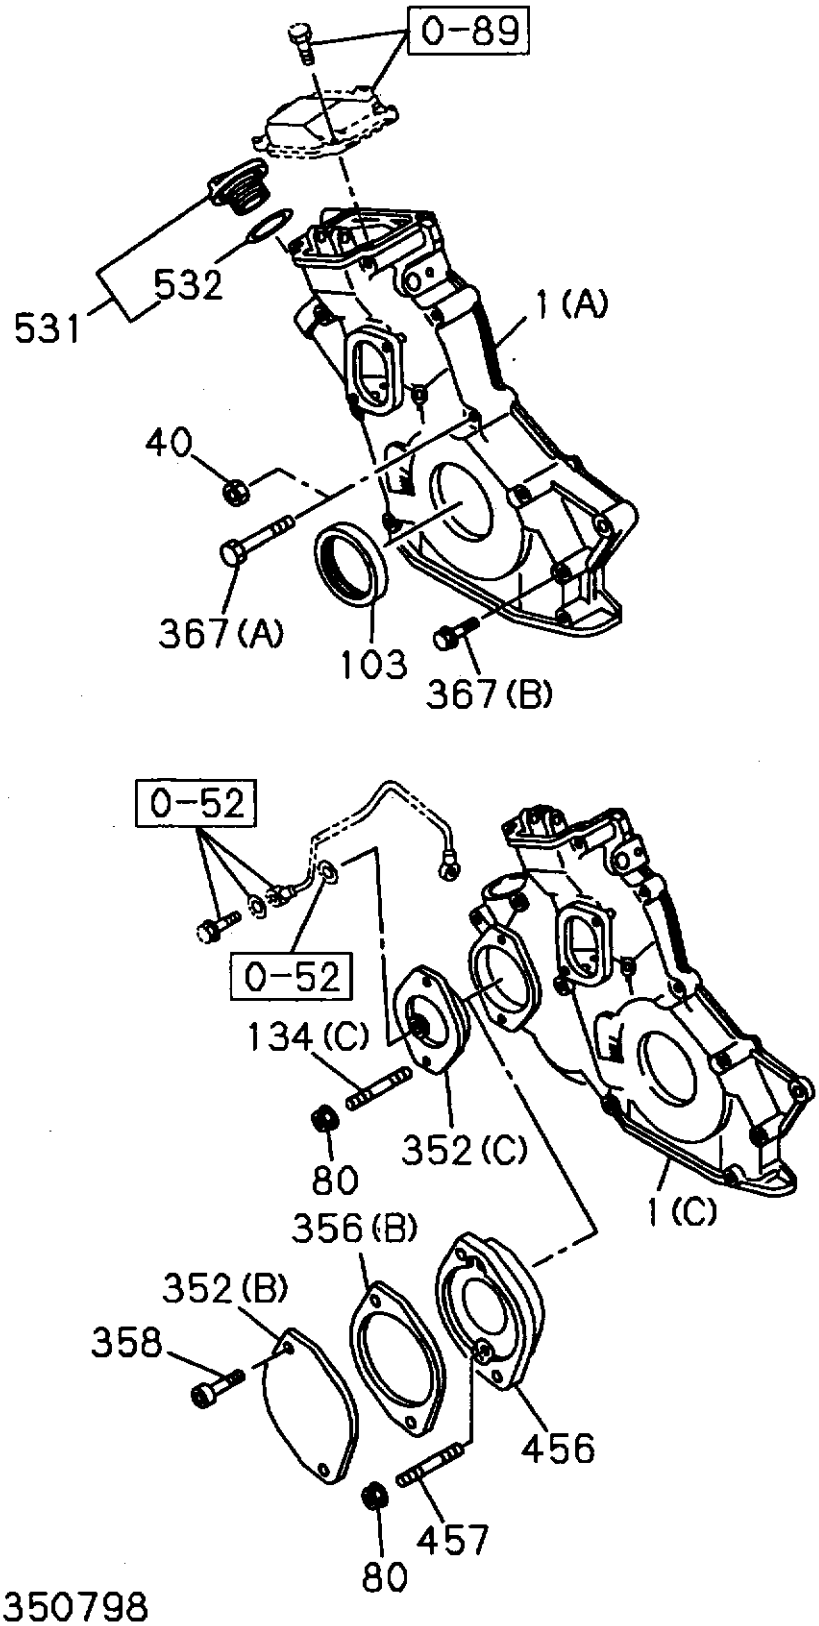


020A0350798

TIMING GEAR CASE AND FLYWHEEL HOUSING

(NO.4)

0-20

FIG-NO.

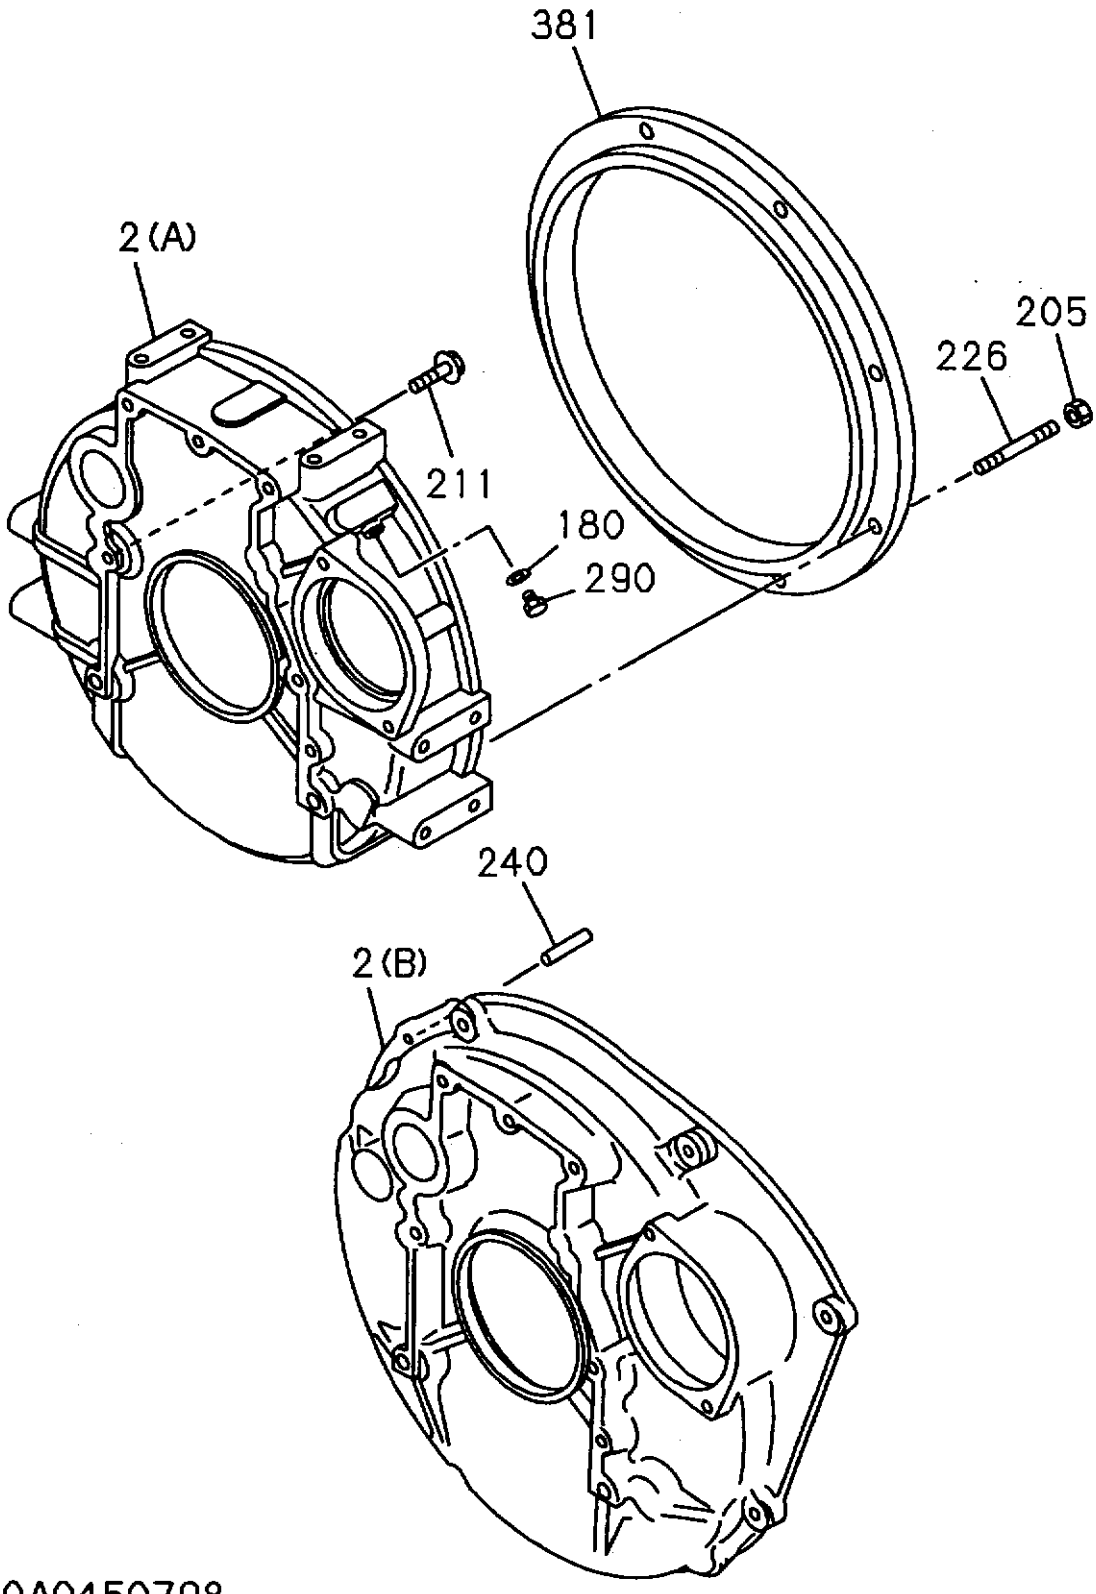

020A0450798

0-20 A TIMING GEAR CASE AND FLYWHEEL HOUSING

FIG-NO.

KEY NO. PART NAME

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 PPPPP / AAAAA / 00000 / 12345	PPTTT / AAPPP / 00AAA / 67 00 / 12	4LC1 PPPPP / AAAAA / 0000 / 1234 / U / G	PPPPP / VVVWW / 00000 / 12312	PPPCC / WWWAA / 000 0 / 345 1	4LE1 DDDDD / AAAAA / 0000 / 1234	DDDDD / AAAAA / 00000 / 56789	PPPPP / AAAAA / 0000 / 1234	PPPPP / AAAAA / 00001 / 57890	PPPPP / AAAAA / 11111 / 12345	Remarks
						ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
1	CASE: TIMING GEAR															
(A)	897085-1331	A	9404-9910		1		H	KL O	PQ ST	XY	ZABCD	EFG	JKLMN	OPQRS	UVW	
(A)	897226-8454		9911-0010		1		H	KL O	PQRST	V XY	ZABCD	EFGH	JKLMN	OPQRS	UVW	
(A)	897303-4110		0011-		1		H	KL O	PQRST	V XY	ZABCD	EFGHI	JKLMN	OPQRS	UVW	
(B)	897085-6612	A	9404-9910		1	AB D	G IJ			U						
(B)	897228-1763		9911-0010		1	AB D	G IJ			U W						
(B)	897303-4200		0011-		1	AB D	G IJ			U W						
(C)	897085-1343	A	9404-9910		1	C E	F	MN							T X	
(C)	897228-1753		9911-0010		1	C E	F	MN							T X	
(C)	897303-4120		0011-		1	C E	F	MN							T X	
2	HOUSING: FLYWHEEL															
(A)	897047-0234		9404-		1	CDE	F H	KLMNO		XY	ZA CD	G I	JKLMN	OPQRS	TUVWX	
(A)	897171-8381		9404-		1		G					H				
(A)	897171-8381		9404-0008		1				PQ ST	U						
(A)	897223-5801		9404-0008		1				R	VW						
(A)	897264-9610		0009-		1				PQRST	UVW						
(B)	897081-9273		9404-		1	A	I									
(B)	897118-3772		9404-		1	B	J									
(A)	897135-4471		9404-		1						B					
(A)	897135-4471		9404-0004		1							E				
(A)	897257-3331		0005-		1							E				
(A)	897225-3181		9801-		1							F				
40	NUT: GEAR CASE															
	091150-2080		9404-		2	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M8 FLANGE
80	NUT: COVER															
	091150-2100		9404-		2	AB D	G IJ			U W						M10 FLANGE
	091150-2100		9404-		4	C E	F	MN							T X	M10 FLANGE
103	SEAL: OIL, CR/SHF, FRT									—ALSO INCLUDED IN GASKET SET(ENGINE)						
	509625-0790		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
134	STUD: TIMING GEAR CASE															
(A)	509300-0650		9404-		1	ABCDE	FG IJ	MN		U W					T X	M8X79 L=92
(A)	904110-8600		9404-		1		H	KL O	PQRST	V XY	ZABCD	EFGHI	JKLMN	OPQRS	UVW	M8X60 L=72
(B)	904110-8500	A	9404-0005		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGH	JKLMN	OPQRS	UVW	M8X50 L=62
(B)	897262-1461		0006-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	UVW	
(C)	904411-0400		9404-		2	AB D	G IJ									M10X40 L=55
(C)	509302-0081		9404-		2					U W						M10X45 L=60 PLATING
(C)	904411-0250		9404-		1	C	F								T X	M10X25 L=40
(C)	904411-0450		9404-		1	C	F								T X	M10X45 L=60
(C)	904411-0250		9404-		2	E		MN								M10X25 L=40
137	BOLT: FRT PLATE															
	028080-8300		9404-		3	ABCDE	FG IJ	MN		U W					T X	M8X30 FLANGE
149	PLATE: FRT, C/BL															
(A)	897085-6600		9404-9703		1	AB D	IJ									
(A)	897169-1961		9704-		1	AB D	G IJ			U W						
(B)	897085-1352		9404-		1	C E	F	MN							T X	
172	RETAINER: CR/SHF															
	897044-7863	C	9404-0007		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	

TIMING GEAR CASE AND FLYWHEEL HOUSING

0-20 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	I T C	APPLIED DATE	L R	Q T Y	4LB1 / 4LC1 / 4LE1	Remarks
							PPPPPPPPTTTPPPPPPPPPPPPPPPPPCCDDDDDDDDDDPPPPPPPPPPPPPP AAAAAAAAPPPAAAAAAVVVWWWWWAAAAAAAAAAAAAAAAAAAAAAAAAA 0000000AAA0000000000000 0 0000000000 0000000000111111 1234567 00 1234123123451 1234567890 1234567890123456 12 U G ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
172	RETAINER; CR/SHF							
		897231-0301		0008-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
175	SEAL; OIL, CR/SHF, RR						—ALSO INCLUDED IN GASKET SET(ENGINE)	
		509625-0940		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
180	GASKET; PLUG							
		909571-4200		0005-		1	PQRSTUVW E	
		909571-4160		9905-		1	F	
181	PLUG; GEAR CASE							
		509605-0192		9404-		1	AB D G IJ U W	PT1/8
185	BOLT; RET TO C/BL							
		028080-6200		9404-		8	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M6X20 FLANGE
205	NUT; HSG							
		091150-2100		9404-		2	AB G IJ PQRSTUVW Z J	M10 FLANGE
		091250-2100		9404-		2	B E H	M10 FLANGE
211	BOLT; HSG							
		028181-0450		9404-		4	AB IJ	M10X45 FLANGE
		028181-0250		9404-		4	CDEFGH KLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M10X25 FLANGE
226	STUD; HSG							
		904411-0450		9404-		2	AB IJ	M10X45 L=60
		894127-7030		9404-		2	C EF H KLMNO XYZA CD FG IJKLMNOPQRSTUVWX	
		109302-1070		9404-		2	G PQRSTUVW H	M10X130 L=145
		904731-0800		9404-		2	B E	
240	PIN; FLYWHEEL HSG							
		908151-2200	A	9404-9706		1	AB IJ	OD=12 L=20
		908161-2200		9707-		1	AB IJ	OD=12 L=20
		908151-2280	A	9404-9706		1	AB IJ	OD=12 L=28
		908161-2250		9707-		1	AB IJ	OD=12 L=25
242	GASKET; PLUG							
		909571-4160		9905-		1	F	
290	PLUG; SENSOR HOLE							
		109605-0800		0005-		1	PQRSTUVW E	
		999202-3160		9404-		1	F	
352	COVER; HYDRAULIC PUMP							
(A)		511321-0360		9404-		1	AB D G IJ U W	
(B)		894471-2790		9404-		1	C F S	
(C)		897134-5060		9404-		1	E MN X	
(D)		511321-1570		9404-		1	C EF MN T X	
354	SPACER; HYDRAULIC PUMP							
		511321-0910		9404-		1	AB D G IJ U W	
356	GASKET; COVER							
(A)		511322-0180		9404-		1	AB D G IJ U W	

0-20 A TIMING GEAR CASE AND FLYWHEEL HOUSING

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
356	GASKET; COVER						
(B)	894471-2781		9404-		1	C F S T	
(C)	894381-1890		9404-		1	C F	
(C)	894381-1890		9404-		2	E M N T X	
358	BOLT; ADAPTER						
	905921-0250		9404-		2	C F T	
361	BEARING; IDLE GEAR						
	900006-0070		9404-		2	A B D G I J U W	
	897047-9320		9404-		2	C E F M N T X	
364	GEAR; PTO						
	897081-9301		9404-		1	A B D G I J	
	897143-2210		9404-9905		1	C F T	
	897231-2100		9906-		1	C F T	
	897034-5832		9404-		1	E M N X	
	897169-8890		9404-		1	U W	
365	BEARING; GEAR						
(A)	900006-0070		9404-		1	A B D E G I J M N U W X	
(A)	894477-8370		9404-		1	C F T	
(B)	900006-2070		9404-		1	A B D G I J U W	
(B)	900006-0060		9404-		1	C E F M N T X	
367	BOLT; GEAR CASE						
(A)	028080-8800		9404-		6	A B D G I J U W	M8X80 FLANGE
(A)	028080-8800		9404-		5	C E F M N T X	M8X80 FLANGE
(A)	028080-8800		9404-		2	H K L O P Q R S T V X Y Z A B C D E F G H I J K L M N O P Q R S U V W	M8X80 FLANGE
(B)	028090-8600		9404-		2	A B D G I J U W	M8X60 FLANGE
(B)	028090-8600		9404-		4	C E F M N T X	M8X60 FLANGE
(B)	028090-8600		9404-		6	H K L O P Q R S T V X Y Z A B C D E F G H I J K L M N O P Q R S U V W	M8X60 FLANGE
(C)	028080-8450		9404-		4	A B D G I J U W	M8X45 FLANGE
(D)	905820-6140		9404-		1	C E F M N T X	M6X14
381	SPACER; FLYWHEEL HSG						
	897090-6540		9404-9701		1	P Q S T	
456	ADAPTER; PTO						
	897143-2191		9404-		1	C F T	
457	STUD; ADAPTER						
	894126-2100		9404-		2	C F T	M10X36 L=48
530	DOWEL; TIMING CASE						
	911229-0581		9404-		1	A B C D E F G I J M N U W T X	
531	CAP; OIL FILLER						
	894425-6852		9404-		1	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	
532	GASKET; CAP						
	894123-6231		9404-		1	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	ID=32 OD=40
533	PLUG; FRT PLATE						
	509605-0192	A	9404-9703		1	A B D I J	PT1/8

TIMING GEAR CASE AND FLYWHEEL HOUSING

0-20 A

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1: PA01 PA02 PA03 PA04 PA05 (A B C D E)	PA06 PA07 TPA TPA01 TPA02 (F G H I J)	4LC1: PA PA01 PA02 PA03 PA04UG (K L M N O)	PV01 PV02 PV03 PW01 PW02 (P Q R S T)	PW03 PW04 PW05 CA CA01 (U V W X Y)	4LE1: DA DA01 DA02 DA03 DA04 (Z A B C D)	DA05 DA06 DA07 DA08 DA09 (E F G H I)	PA PA01 PA02 PA03 PA04 (J K L M N)	PA05 PA07 PA08 PA09 PA10 (O P Q R S)	PA11 PA12 PA13 PA14 PA15 (T U V W X)	Remarks
533	PLUG: FRT PLATE															
	109605-0500		9704-		1	A B D	G I J			U W						PT1/8

0-20 B TIMING GEAR CASE AND FLYWHEEL HOUSING

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 PPPPP AAAAA 11112 67890 ABCDE	PPPPP AAAAA 22222 12345 FGHIJ	PPPPP AVVVV 20000 61234 KLMNO	PPPPP VVVWW 00000 56712 PQRST	PPPPP WWWWW 00000 34567 UVWXY	PPPPP WWWWW 00111 89012 ZABCD	4LE2 PPPCC WWWAA 111 0 347 1 EFGHI	CCCDD AAAAA 00000 23412 JKLMN	PPPPP AAAAW 0000 1231 OPQRS	PPPPP WWWWW 00000 23579 TUVWX	Remarks
1	CASE; TIMING GEAR															
(A)	897085-1331		9404-9910		1	AB D		LMNO	P S	UVW						
(A)	897226-8454		9911-0010		1	AB D	FGH J	KLMNO	PQRS	UVW	CD	E HI	JK	OP S	T	
(A)	897303-4110		0011-		1	AB D	FGH J	KLMNO	PQRS	UVW	CD	E HI	JKLMN	OPQRS	T WX	
(A)	897085-1331		9710-9910		1					X						
(A)	897226-8454		9911-0003		1					X						
(B)	897228-1763		0004-0010		1					X						
(B)	897303-4200		0011-		1					X						
(B)	897085-6612		9404-9910		1				T	Y	Z B					
(B)	897228-1763		9911-0010		1		I		T	Y	Z B	FG			U	
(B)	897303-4200		0011-		1		I		T	Y	Z B	FG			UV	
(C)	897085-1343		9404-9910		1	C E					A					
(C)	897228-1753		9911-0010		1	C E					A					
(C)	897303-4120		0011-		1	C E					A					
2	HOUSING; FLYWHEEL															
(A)	897047-0234		9404-		1	ABCDE	FGH J	K NO	T					OPQR		
(A)	897171-8381		9404-		1		I		Q		AB	E				
(A)	897135-4471		9404-0008		1			L	S	UVW Y	Z CD			S	U	
(A)	897257-3331		0009-		1			L	S	UVW Y	Z CD			S	U X	
(A)	897171-8381		9404-0008		1			M								
(A)	897223-5801		9801-0008		1				P R			FG				
(A)	897264-9610		0009-		1			M	P R			FG			VW	
(A)	897223-2350		9912-		1							HI	JKLMN			
(A)	897171-8381		9710-0004		1					X						
(A)	897118-3772		0005-		1					X						
40	NUT; GEAR CASE															
	091150-2080		9404-		2	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M8 FLANGE
80	NUT; COVER															
	091150-2100		9404-		2		I		T	XY	Z B	FG			UV	M10 FLANGE
	091150-2100		9404-		4	C E					A					M10 FLANGE
103	SEAL; OIL, CR/SHF, FRT —ALSO INCLUDED IN GASKET SET(ENGINE)															
	509625-0790		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
134	STUD; TIMING GEAR CASE															
(A)	509300-0650		9404-		1	C E	I		T	XY	ZAB	FG				M8X79 L=92
(A)	904110-8600		9404-		1	AB D	FGH J	KLMNO	PQRS	UVWX	CD	E HI	JKLMN	OPQRS	TUVWX	M8X60 L=72
(B)	904110-8500		9404-0005		1	ABCDE	FGHI	LMNO	PQRST	UVWXY	ZABCD	EFGHI		OP S	TU	M8X50 L=62
(B)	897262-1461		0006-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M8X50 L=62
(C)	904411-0250		9404-		1	C E					A					M10X25 L=40
(C)	904411-0450		9404-		1	C E					A					M10X45 L=60
(C)	509302-0081		9404-		2		I		T	XY	Z B	FG			UV	M10X45 L=60 PLATING
137	BOLT; FRT PLATE															
	028080-8300		9404-		3	C E	I		T	XY	ZAB	FG			UV	M8X30 FLANGE
149	PLATE; FRT, C/BL															
(A)	897169-1961		9404-		1		I		T	XY	Z B	FG			UV	
(B)	897085-1352		9404-		1	C E					A					
172	RETAINER; CR/SHF															
	897044-7863	C	9404-0007		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JK	OP S	TU	

TIMING GEAR CASE AND FLYWHEEL HOUSING

0-20 B

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
							PPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPP AAAAAAAAAAAVVVVVVVVVWWWWWWWWWWWWWWWAAAAAAAAAAAAAWWWWWW 1111222222200000000000000000011111 0000000 0000000000 6789012345612345671234567890123477 1234123 1231235790 ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
172	RETAINER; CR/SHF							
	897231-0301	0008-			1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
175	SEAL; OIL, CR/SHF, RR						—ALSO INCLUDED IN GASKET SET(ENGINE)	
	509625-0940	9404-			1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
180	GASKET; PLUG							
	909571-4200	0009-			1		M P RS U FG S UVWX	
181	PLUG; GEAR CASE							
	509605-0192	9404-			1		I T XYZ B FG UV	PT1/8
185	BOLT; RET TO C/BL							
	028080-6200	9404-			8		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M6X20 FLANGE
205	NUT; HSG							
	091150-2100	9404-			2		I M PQR X AB EFG	M10 FLANGE
	091250-2100	9404-			2		L S UVW YZ CD S UVWX	M10 FLANGE
211	BOLT; HSG							
	028181-0250	9404-			4		ABCDEFGHIJKLMNOPQRSTUVW YZABCDEFG OPQRS UVWX	M10X25 FLANGE
	028181-0250	9404-			6		HIJKLMN	M10X25 FLANGE
	028181-0250	9811-0003			4		X	M10X25 FLANGE
	028181-0450	0004-			4		X	
226	STUD; HSG							
	894127-7030	9404-			2		ABCDEFGH JK NO T OPQR	
	109302-1070	9404-			2		I M PQR AB EFG VW	M10X130 L=145
	904731-0800	9404-			2		L S UVW YZ CD S U X	
	109302-1070	9811-0003			2		X	M10X130 L=145
	904411-0450	0004-			2		X	M10X45 L=60
240	PIN; FLYWHEEL HSG							
	908161-2200	0004-			1		X	L=20
	908161-2250	0004-			1		X	L=25
290	PLUG;SENSOR HOLE							
	109605-0800	0009-			1		M P RS U FG S UVWX	
352	COVER; HYDRAULIC PUMP							
(A)	511321-0360	9404-			1		I T XYZ B FG UV	
(C)	897134-5060	9404-			1		C E A	
(D)	511321-1570	9404-			1		C E A	
354	SPACER; HYDRAULIC PUMP							
	511321-0910	9404-			1		I T XYZ B FG UV	
356	GASKET; COVER							
(A)	511322-0180	9404-			1		I T XYZ B FG UV	
(C)	894381-1890	9404-			1		C E A	
361	BEARING; IDLE GEAR							
	900006-0070	9404-			2		I T XYZ B FG UV	


0-20 B TIMING GEAR CASE AND FLYWHEEL HOUSING

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
361	BEARING; IDLE GEAR	897047-9320		9404-		2	C E A	
364	GEAR; PTO	897031-9301		9404-		1	I T X	
		897034-5832		9404-		1	C E A	
		897169-8890		9404-		1	Y Z B F G U V	
365	BEARING; GEAR							
(A)		900006-0070		9404-		1	C E I T X Y Z A B F G U V	
(B)		900006-2070		9404-		1	I T X Y Z B F G U V	
(B)		900006-0060		9404-		1	C E A	
367	BOLT; GEAR CASE							
(A)		028080-8800		9404-		2	A B D F G H J K L M N O P Q R S U V W C D E H I L M N O P Q R S T W X	M8X80 FLANGE
(A)		028080-8800		9404-		5	C E A	M8X80 FLANGE
(A)		028080-8800		9404-		6	I T X Y Z B F G U V	M8X80 FLANGE
(B)		028090-8600		9404-		6	A B D F G H J K L M N O P Q R S U V W C D E H I L M N O P Q R S T W X	M8X60 FLANGE
(B)		028090-8600		9404-		4	C E A	M8X60 FLANGE
(B)		028090-8600		9404-		2	I T X Y Z B F G U V	M8X60 FLANGE
(C)		028080-8450		9404-		4	I T X Y Z B F G U V	M8X45 FLANGE
(D)		905820-6140		9404-		1	C E A	M6X14
381	SPACER; FLYWHEEL HSG	897090-6540		9404-9701		1	M	
530	DOWEL; TIMING CASE	911229-0581		9404-		1	C E I T X Y Z A B F G U V	
531	CAP; OIL FILLER	894425-6852		9404-		1	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	
532	GASKET; CAP	894123-6231		9404-		1	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	
533	PLUG; FRT PLATE	109605-0500		9404-		1	I T X Y Z B F G U V	PT1/8

MEMO

0-22	ENGINE MOUNTING
FIG-NO.	

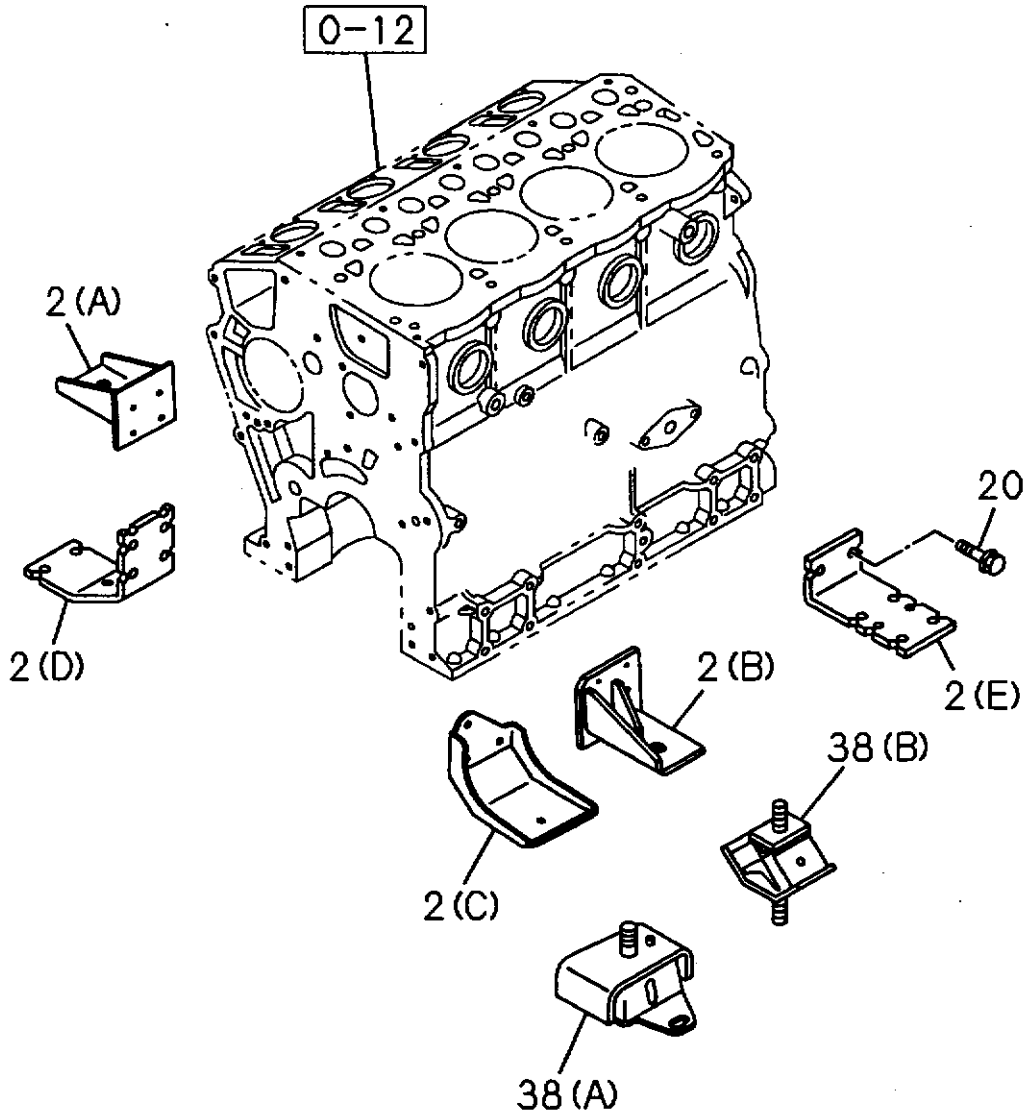

022A0150798

ENGINE MOUNTING

0-22 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
							PPPPPPPPTTTPPPPPPPPPPPPPPPPCCDDDDDDDDDDPPPPPPPPPPPPPPPPPP AAAAAAAAPPPAAAAAAVVVWWWWWWAAAAAAAAAAAAAAAAAAAAAAAAAA 0000000AAA0000000000000000000 0 0000000000000000000000000000 1234567 00 1234 123123345 1 1234567890 1234578901234S 12 UB ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
2	FOOT: ENG							
(A)	897109-3652	9404-			1		A I	
(B)	897109-3662	9404-			1		A I	
(C)	511771-1580	9404-			2		P S	
38	RUBBER: MTG, ENG							
(A)	953215-6020	9404-			4		S	


0-22 B ENGINE MOUNTING


FIG-NO. 0-22 B

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 PA16 PA17 PA18 PA19 PA20 (ABCDE)	PA21 PA22 PA23 PA24 PA25 (FGHIJ)	PA26 PV01 PV02 PV03 PV04 (KLMNO)	PV05 PV06 PV07 PW01 PW02 (PQRST)	PW03 PW04 PW05 PW06 PW07 (UVWXY)	PW08 PW09 PW10 PW11 PW12 (ZABCD)	PW13 PW14 PW17 CA CA01 (EFGHI)	4LE2 CA02 CA03 CA04 DA01 DA02 (JKLMN)	PA PA01 PA02 PA03 PW01 (OPQRS)	PW02 PW03 PW05 PW07 PW09 (TUVWX)	Remarks
2	FOOT; ENG															
(D)	897109-9821		9901-		2				Q		AB	E				FRONT
(E)	897109-9790		9901-		2				Q		AB	E				REAR
20	BOLT; ENG FOOT															
	028181-0250		9901-		16				Q		AB	E				
38	RUBBER; MTG, ENG															
(B)	897168-2080		9404-		2				T							WHITE MARK
(B)	897168-2090		9404-		2				T							RED MARK
(B)	897168-2090		0105-		4										W	RED MARK

MEMO

0-25	INLET MANIFOLD
FIG-NO.	

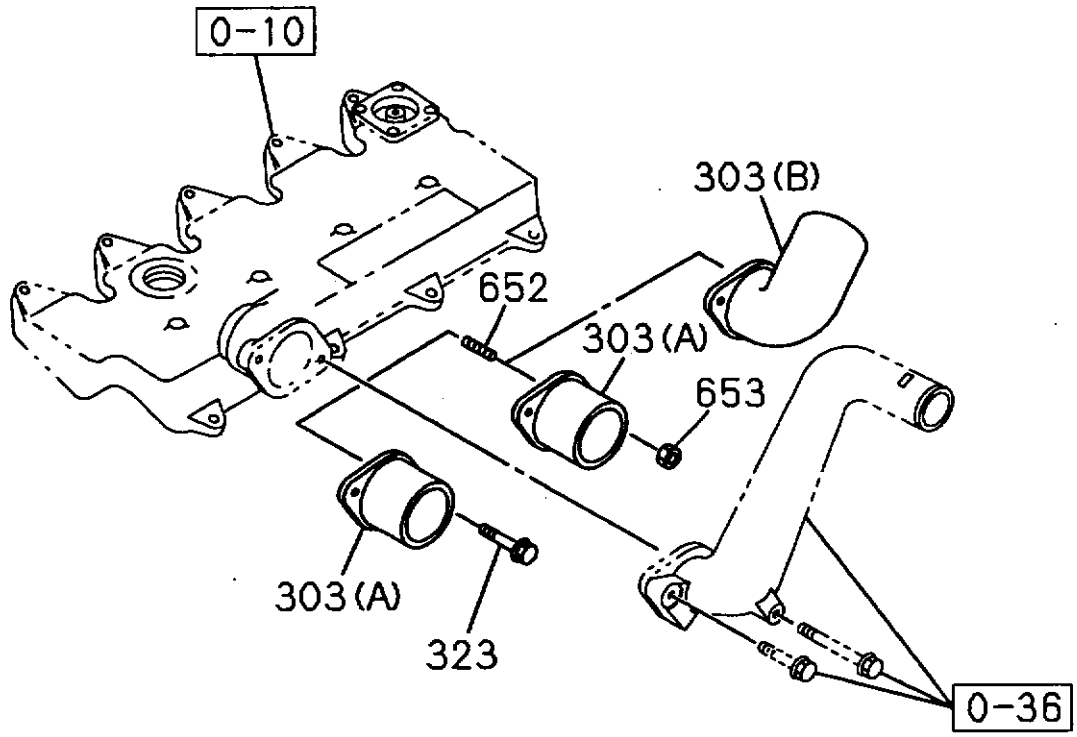

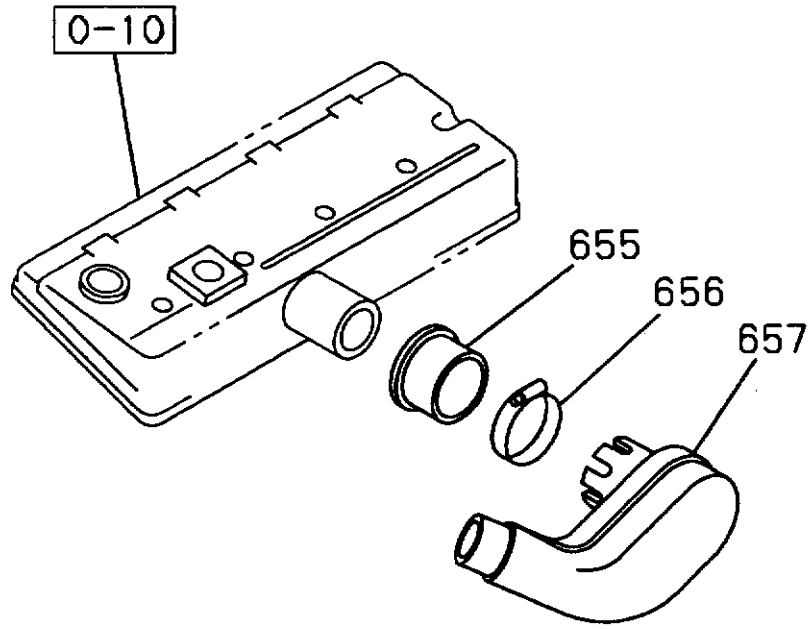

025A0150798

INLET MANIFOLD

0-25 A

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
303	PIPE; AIR						
(A)	897034-6140		9404-		1	A B C F K	
(B)	897041-7211		9404-		1	D E G L M N O P Q R S T U V W	
652	STUD; DUCT, AIR INLET						
	904110-6160		9404-		2	A B C D E F G K L M N O P Q R S T U V W	M6X16 L=25
653	NUT; DUCT, AIR INLET						
	091150-2060	A	9404-0104		2	A B C D E F G K L M N O P Q R S T U V W	M6 FLANGE
	897137-8360		0105-		2	A B C D E F G K L M N O P Q R S T U V W	M6 W/LK WASHER
655	SEAL; AIR INL						
	897180-4673		9404-		1	P W	
656	CLIP; AIR INL						
	894316-9910		9404-		1	P W	
657	PIPE; AIR INL						
	897180-4682		9404-		1	P W	

0-25 B INLET MANIFOLD

FIG-NO. 0-25 B

Model columns (letters A–Z, A–X), grouped:


4LE1: PA116 (A), PA117 (B), PA118 (C), PA119 (D), PA120 (E), PA221 (F), PA222 (G), PA223 (H), PA224 (I), PA225 (J), PA226 (K), PV021 (L), PV022 (M), PV023 (N), PV024 (O), PV025 (P), PV026 (Q), PV027 (R), PW011 (S), PW012 (T), PW013 (U), PW014 (V), PW015 (W), PW016 (X), PW017 (Y), PW008 (Z), PW009 (A), PW110 (B), PW111 (C), PW112 (D), PW113 (E), PW114 (F), PW117 (G)

4LE2: CA (H), CA01 (I), CA02 (J), CA03 (K), CA04 (L), DA01 (M), DA02 (N), PA (O), PA01 (P), PA02 (Q), PA03 (R), PW01 (S), PW02 (T), PW03 (U), PW05 (V), PW07 (W), PW09 (X)

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	Models (ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX)	Remarks
303	PIPE; AIR						
(A)	897217-8620		9907-		1	H OP	
(A)	897239-5940		0005-		1	RSTUVWX	
(B)	897227-6030		9912-		1	IJK	
(B)	897314-9170		0106-		1	Q	
323	BOLT; DUCT						
	028680-6160		9607-9906		2	H OP	
652	STUD; DUCT,AIR INLET						
	897094-6410		9607-		1	IJ	
	904110-6160		9607-		1	IJ	
	904110-6160		9907-		2	H K OPQRSTUVWX	
653	NUT; DUCT,AIR INLET						
	091150-2060	A	9607-0104		2	HIJK OP STU	M6 FLANGE
	897137-8360		0105-		2	HIJKLMNOPQRSTUVWX	
655	SEAL; AIR INL						
	897180-4673		9404-		1	D JK	
656	CLIP; AIR INL						
	894316-9910		9404-		1	D JK	ID=50-69
657	PIPE; AIR INL						
	897180-4682		9404-		1	D JK	

MEMO

0-27	EXHAUST MANIFOLD
FIG-NO.	

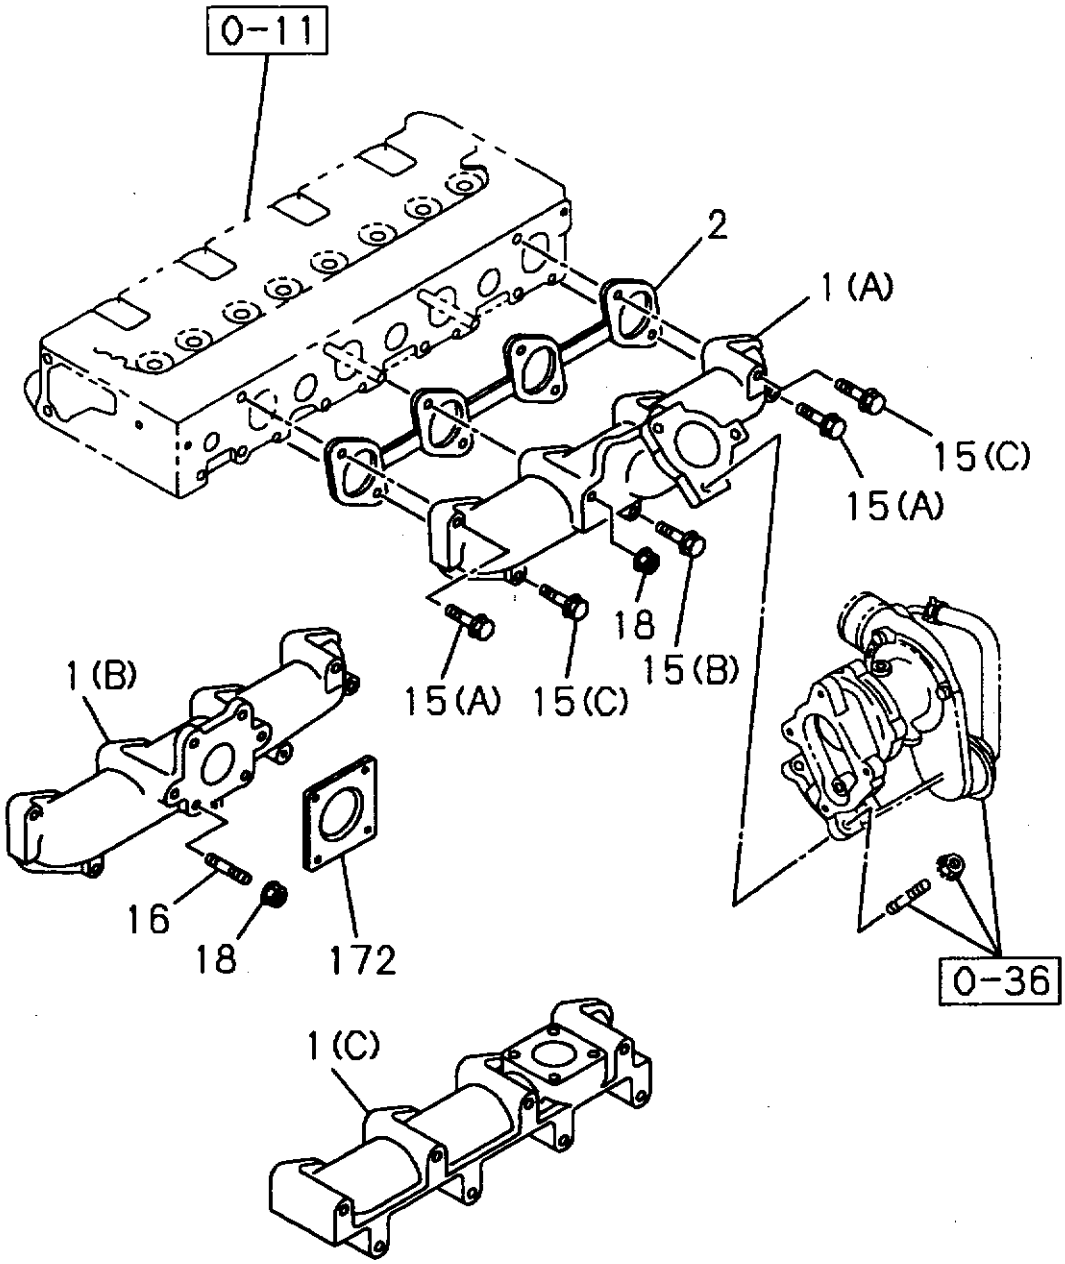

027A0150798

EXHAUST MANIFOLD

0-27 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 4LC1 4LE1	Remarks
							PPPPPPPPTTTTPPPPPPPPPPPPPPPCCDDDDDDDDDDDPPPPPPPPPPPPPPPPPPPPPP AAAAAAAAPPPPAAAAAAVVVVWWWWWAAAAAAAAAAAAAAAAAAAAAAAAAAAAA 0000000AAA 0000000000000 0 0000000000 0000000001111111 1234567 00 1234123123451 1234567891 1234578901234512 00 U G ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
1	MANIFOLD: EXHAUST							
(A)	897077-7990			9404-		1	H I J	
(B)	897085-3670			9404-		1	A B C D E F G K L M N O P Q R S T U V W	
(B)	897117-5901			9404-		1	X Y Z A B C D E F G H I J K L M N O Q R S T U V X	
(C)	897171-4010			9404-		1	P W	
2	GASKET: EXH MANIF TO HD						—ALSO INCLUDED IN GASKET SET(ENGINE)	
	897077-8000			9404-		1	A B C D E F G H I J K L M N O P Q R S T U V W	
	897126-1860			9404-		1	X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	
15	BOLT: EXH MANIF							
(A)	028080-8400			9404-		2	A B C D E F G H I J K L M N O P Q R S T U V W	M8X40 FLANGE
(B)	028080-8700			9404-		1	A B C D E F G H I J K L M N O P Q R S T U V W	M8X70 FLANGE
(C)	894458-4741			9404-		3	A B C D E F G H I J K L M N O P Q R S T U V W	M8X53 FLANGE
(A)	028080-8700			9404-		6	X Y Z A B C D E F G H I J K L M N O Q R S T U V X	M8X70 FLANGE
(A)	028080-8700			9404-		4	P W	M8X40 FLANGE
16	STUD: EXH PIPE TO MANIF							
	904110-8200			9404-		4	A B C D E F G K L M O P Q R S T U V W X Y Z A B D E G H J K L M N O P Q R S T W X	M8X20 L=32
	904110-8300			9709-		4	N C F I	
18	NUT: EXH MANIF							
	091150-2080			9404-		2	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z A B C D E F G H I J K L M N O Q R S T X	M8 FLANGE
	091150-2080			9404-		4	P W	M8 FLANGE
	091150-2080			9404-		3	U V	M8FLANGE
172	GASKET: EXH PIPE							
	897042-0280			9404-		1	B C D E F M N P Q R S T U V W X Y Z A B C D E F G H I J K L M N O P Q S T U V	


0-27 B EXHAUST MANIFOLD

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 PPPPP AAAAA 11112 67890 ABCDE	PPPPP AAAAA 22222 12345 FGHIJ	PPPPP AVVVV 20000 61234 KLMNO	PPPPP VVVWW 00000 56712 PQRST	PPPPP WWWWW 00000 34567 UVWXY	PPPPP WWWWW 00111 89012 ZABCD	PPPCC WWWAA 111 0 347 1 EFGHI	4LE2 CCCDD AAAAA 00000 23412 JKLMN	PPPPP AAAAW 0000 1231 OPQRS	PPPPP WWWWW 00000 23579 TUVWX	Remarks
1	MANIFOLD; EXHAUST															
(B)	897117-5901		9404-		1	ABC E	FGHI	LMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OP RS	TUVWX	
(C)	897171-4010		9404-		1	D	J	K						Q		
2	GASKET; EXH MANIF TO HD —ALSO INCLUDED IN GASKET SET(ENGINE)															
	897126-1860		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
15	BOLT; EXH MANIF															
(A)	028080-8700		9404-		6	ABC E	FGHI	LMNO	PQRST	UVWXY	ZABCD	EFG				M8X70 FLANGE
(A)	028080-8700		9404-		4	D	J	K				HI	JKLMN	OPQRS	TUVWX	M8X40 FLANGE
16	STUD; EXH PIPE TO MANIF															
	904110-8200		9404-		4	ABCDE	J	KLMNO	PQRST	UVWXY	ZABCD	EFG		OPQ S	TUVWX	M8X20 L=32
	904130-8200		9912-		4							HI	JKLMN			M8X20 L=32
18	NUT; EXH MANIF															
	091150-2080		9404-		2	ABC E	FGHI	LMNO	PQRST	UVWXY	ZABCD	EFG				M8 FLANGE
	091150-2080		9404-		4	D	J	K				HI	JKLMN	OPQRS	TUVWX	M8 FLANGE
172	GASKET; EXH PIPE															
	897042-0280		9404-		1	AB	F I	LMN	PQRST	UVWXY	ZABCD	EF I	JKLMN	QRS	TUVWX	
	897042-0280		9404-		2							G				
	897016-1010		9404-		2							G				

MEMO

0-28	VENTILATION SYSTEM
FIG-NO.	

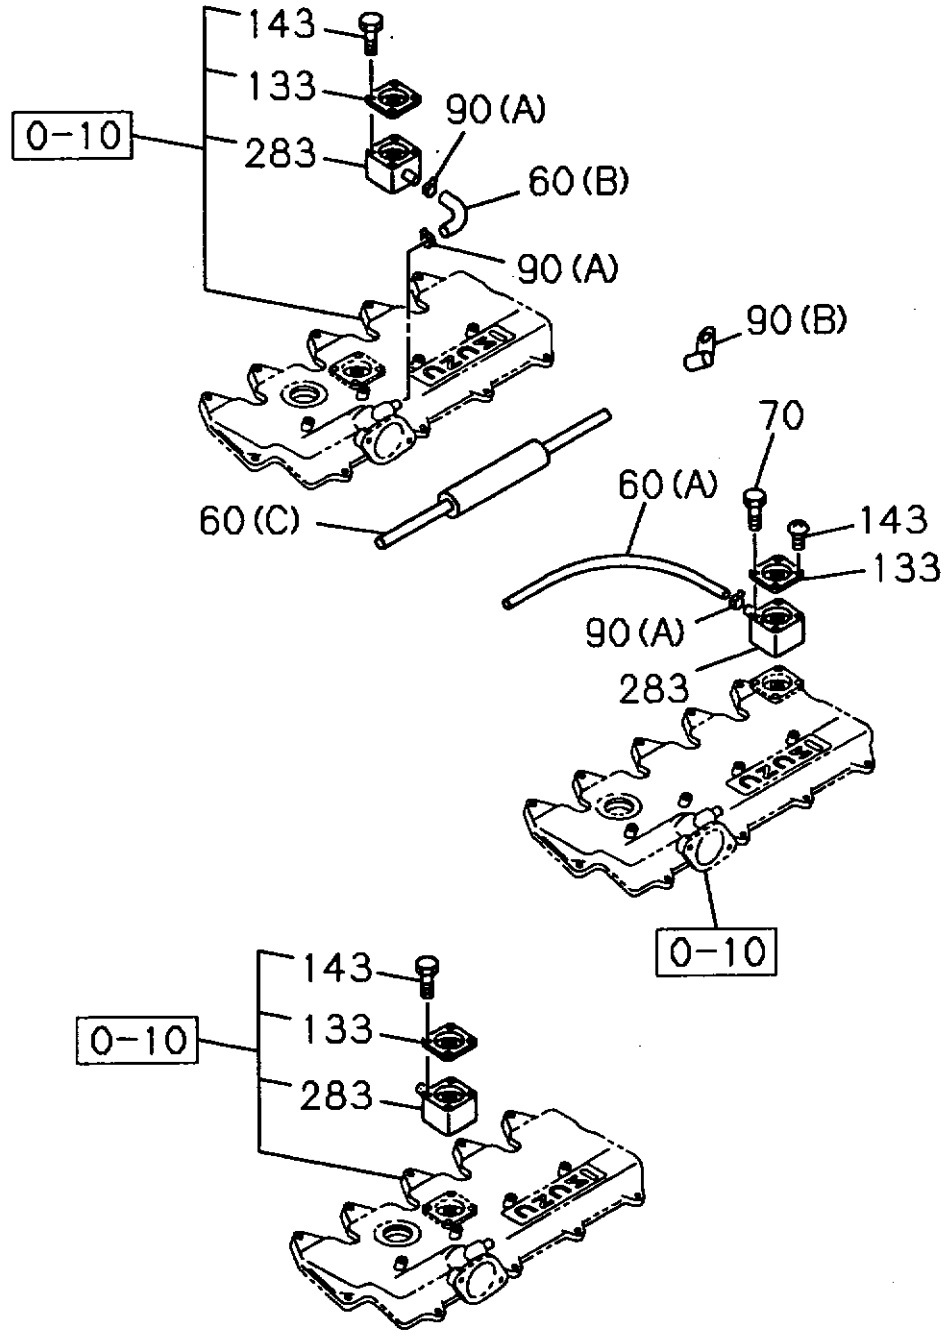

028A0150798

VENTILATION SYSTEM

0-28 A
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1: PA01 PA02 PA03 PA04 PA05 (A B C D E)	PA06 PA07 TPA TPA01 TPA02 (F G H I J)	4LC1: PA PA01 PA02 PA03 PA04UG (K L M N O)	PV01 PV02 PV03 PW01 PW02 (P Q R S T)	PW03 PW04 PW05 / 4LE1: CA CA01 (U V W X Y)	DA DA01 DA02 DA03 DA04 (Z A B C D)	DA05 DA06 DA07 DA08 DA09 (E F G H I)	PA PA01 PA02 PA03 PA04 (J K L M N)	PA05 PA07 PA08 PA09 PA10 (O P Q R S)	PA11 PA12 PA13 PA14 PA15 (T U V W X)	Remarks
60	HOSE; RUBBER, PCV															
(A)	002709-6000		9404-		1		H I J									
(B)	897117-6361		9404-		1	A B C D E	F G	K L M N O	P Q R S T	U V W						
(C)	897136-3420	C	9404-9509		1								K			
(C)	897138-7850		9510-		1								K M N	O P Q	U V W	
(C)	897136-3420	C	9404-9605		1								L			
(C)	897161-1340		9606-		1								L			
70	BOLT; PCV VLV															
	993490-4350		9405-9407		4		H I									
90	CLIP; RUBBER HOSE															
(A)	509707-0041		9404-		1		H I J						K L M N	O P Q	U V W	ID=14
(A)	509707-0041		9404-		2	A B C D E	F G	K L M N O	P Q R S T	U V W						ID=14
(B)	909916-8931		9404-		1								K L M N	O P Q	U V W	B=20 L=30 ID=15
133	VALVE; PCV															
	894329-5490		9404-		1	A B C D E	F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	
143	SCREW; PCV COVER															
	903910-4100		9404-		4					X Y	Z A B C D	E F G H I	J	R S	T X	M4X10
	993490-4350		9404-		4	A B C D E	F G H I J	K L M N O	P Q R S T	U V W			K L M N	O P Q	U V W	M4X35
283	HOUSING; PCV, CLY HD COVER															
	897085-3470		9404-		1	A B C D E	F G H I J	K L M N O	P Q R S T	U V W			K L M N	O P Q	U V W	


0-28 B VENTILATION SYSTEM

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2 PPPPP PPPPP PPPPP PPPPP PPPPP PPPPP PPPCC CCCDD PPPPP PPPPP AAAAA AAAAA AVVVV VVVWW WWWWW WWWWW WWWAA AAAAA AAAAW WWWWW 11112 22222 20000 00000 00000 00111 111 0 00000 0000 00000 67890 12345 61234 56712 34567 89012 347 1 23412 1231 23579 ABCDE FGHIJ KLMNO PQRST UVWXY ZABCD EFGHI JKLMN OPQRS TUVWX	Remarks
60	HOSE; RUBBER, PCV						
(C)	897138-7850		9510-		1	AB D F HIJ K	
(C)	897161-1340		9606-9906		1	OP	
(C)	897232-2870		9607-		1	OPQR	
90	CLIP; RUBBER HOSE						
(A)	509707-0041		9404-		1	AB D F HIJ K OPQR	ID=14
(B)	909916-8931		9404-		1	AB D F HIJ K OPQR	B=20 L=30 ID=15
133	VALVE; PCV						
	894329-5490		9404-		1	ABCDE FGHIJ KLMNO PQRST UVWXY ZABCD EFGHI JKLMN OPQRS TUVWX	
143	SCREW; PCV COVER						
	903910-4100		9404-		4	C E G LMNO PQRST UVWXY ZABCD EFGHI JKLMN S TUVWX	M4X10
	993490-4350		9404-		4	AB D F HIJ K OPQR	M4X35
283	HOUSING; PCV, CLY HD COVER						
	897085-3470		9404-		1	AB D F HIJ K OPQR	

MEMO

0-30	WATER PUMP AND CORROSION RESISTOR
FIG-NO.	

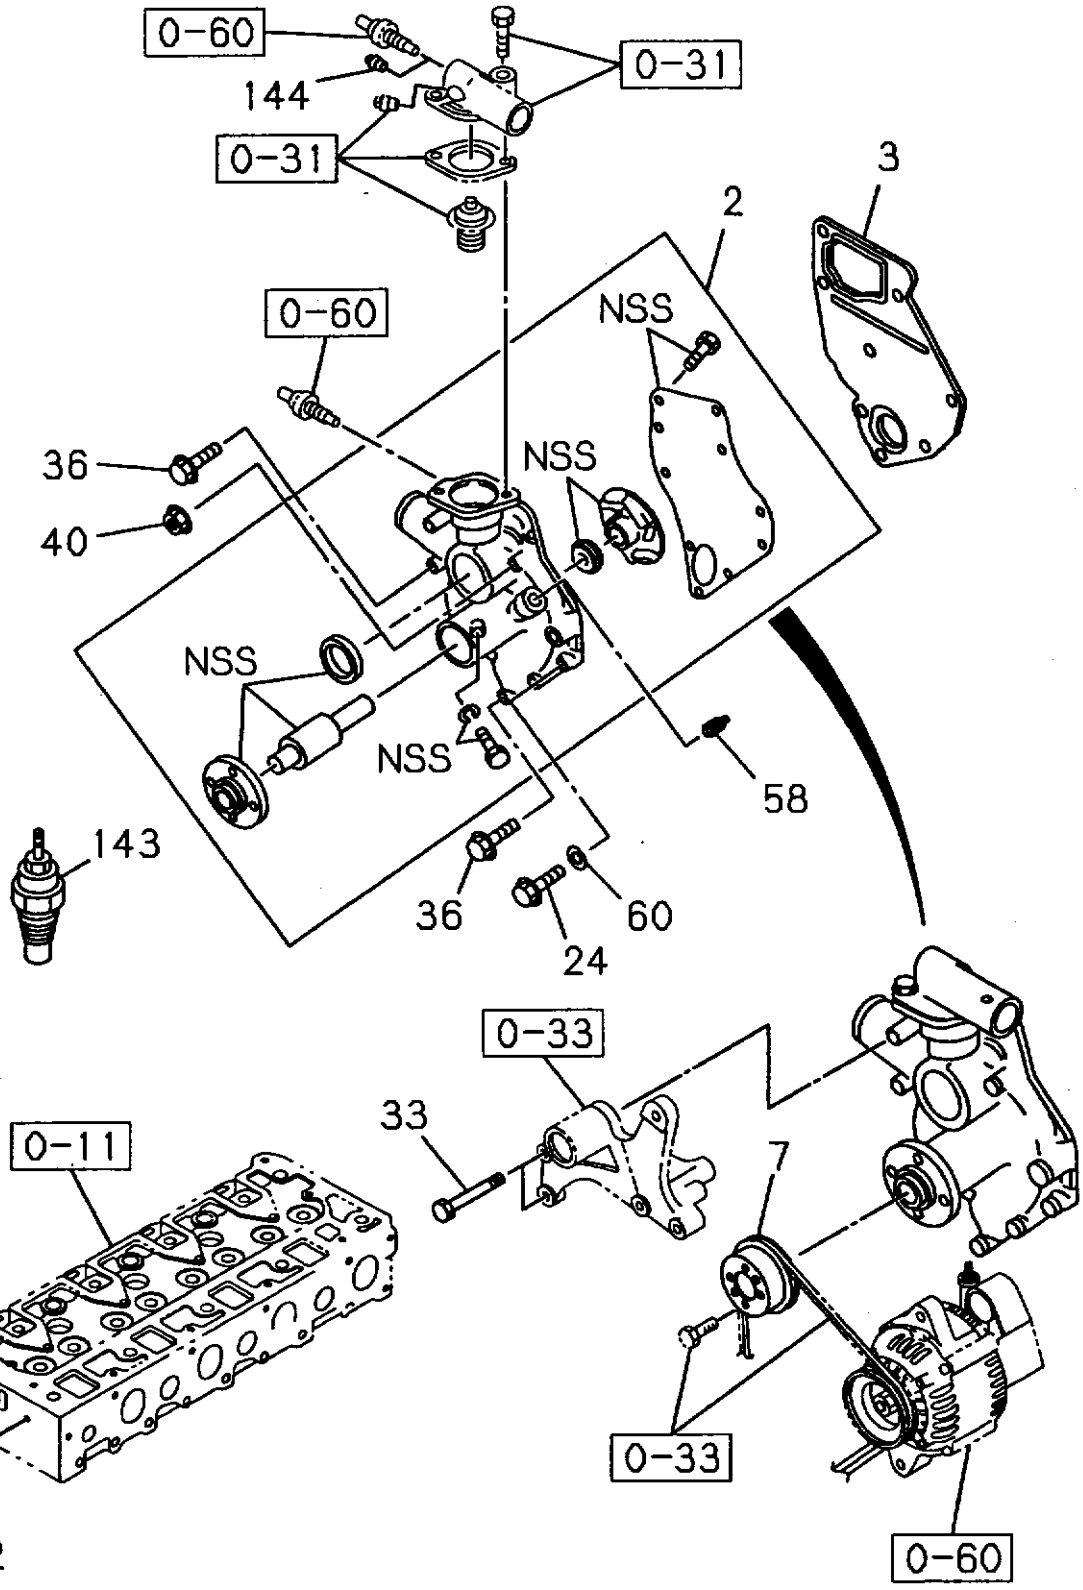

030A0150798

WATER PUMP AND CORROSION RESISTOR

0-30 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	I T C	APPLIED DATE	L R	Q T Y	4LB1	4LC1	4LE1	Remarks
							PPPPPPPPTTTPPPPPPPPPPPPPPPPPPCCDDDDDDDDDDPPPPPPPPPPPPPPPPPPPPPP			
							AAAAAAAAPPPAAAAAAVVVWWWWWAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA			
							0000000AAA 0000000000000 0 0000000000 0000000001			
							1234567 00 1234123123451 12345678901234567890112345			
							12 U			
							ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			
2	PUMP ASM; WATER									
	897069-8821	A	9404-9706		1		ABCD HIJ			
	897163-2590		9707-		1		ABCDEFGHIJ			
	897126-1890		9404-		1		KLMNO XYZA CD FG IJKLMNO RST X			
	897126-1890		9504-9903		1		PQ STU PQ			
	897182-8531		9904-		1		PQRSTUVW B E H PQ UVW			
7	PULLEY; WATER PUMP									
	897038-4030		9404-		1		B J			1-GROOVE
24	BOLT; WATER PUMP									
	028080-8450		9404-		1		C EF H KLMNOPQRST V XYZABCDEFGHIJKLMNOPQR TUVWX			M8X45 FLANGE
	028080-8400		9404-		1		S			M8X40FLANGE
33	BOLT; WATER PUMP									
	028080-8900		9404-		2		B J			M8X90 FLANGE
36	BOLT; WATER PUMP TO C/BL									
	028080-8400		9404-		2		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			M8X40 FLANGE
	028090-8600		9404-		2		A CDEFGHI KLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			M8X60 FLANGE
40	NUT; WATER PUMP									
	091150-2080		9404-		2		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			M8 FLANGE
42	STUD; WATER PUMP									
	904110-8400		9404-		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			M8X40 L=52
58	PLUG; HTR									
	509605-0050		9404-		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJK MNOPQRSTUVWX			PT3/8
60	SPACER; WATER PUMP									
	909164-7080		9404-		1		M R			ID=8 OD=22
143	UNIT; THERMOMETER									
	897106-2140		9404-		1		A I			
	897078-5920		9404-		1		BCD H JKLM O XYZABCDEFG IJKLMNOPQ			
	897142-4110		9404-		1		EFG TUVW			
144	PLUG; THERMOMETER									
	109605-0500		9404-		1		N PQRSTUVW H RS X			PT1/8


0-30 B WATER PUMP AND CORROSION RESISTOR

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
2	PUMP ASM: WATER						
	897126-1890	9404-			1	ABC EFGHI T AB	
	897182-8531	9404-			1	D JKLMNOPQRS UVWXYZ CDEFGHIJKL OP STUVWX	
	897254-1480	0105-			1	MN QR	
3	GASKET; PUMP TO COVER						
	897289-5430	0105-			1	MN QR	
24	BOLT; WATER PUMP						
	028080-8450	9404-			1	ABCDEFGH JKLMNOPQRS UVWX A CDE HIJKLMNOPQRSTU WX	M8X45 FLANGE
	028080-8400	9404-			1	I T XYZ B FG V	M8X40 FLANGE
36	BOLT; WATER PUMP TO C/BL						
	028080-8400	9404-			2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M8X40 FLANGE
	028090-8600	9404-			2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M8X60 FLANGE
40	NUT; WATER PUMP						
	091150-2080	9404-			2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M8 FLANGE
42	STUD; WATER PUMP						
	904110-8400	9404-0010			1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJK OP STU	M8X40 L=52
	904110-8450	0011-			1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M8X45 L=57
58	PLUG; HTR						
	509605-0050	9404-			1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	PT3/8
143	UNIT; THERMOMETER						
	897078-5920	9404-			1	AB EF H K P	
	897142-4110	9511-			1	D IJK X OR	
144	PLUG; THERMOMETER						
	109605-0500	9404-			1	C G LMNOPQRSTUVW YZABCDEFGHIJ LMNO STUVW	PT1/8

MEMO

0-31	THERMOSTAT AND HOUSING
FIG-NO.	

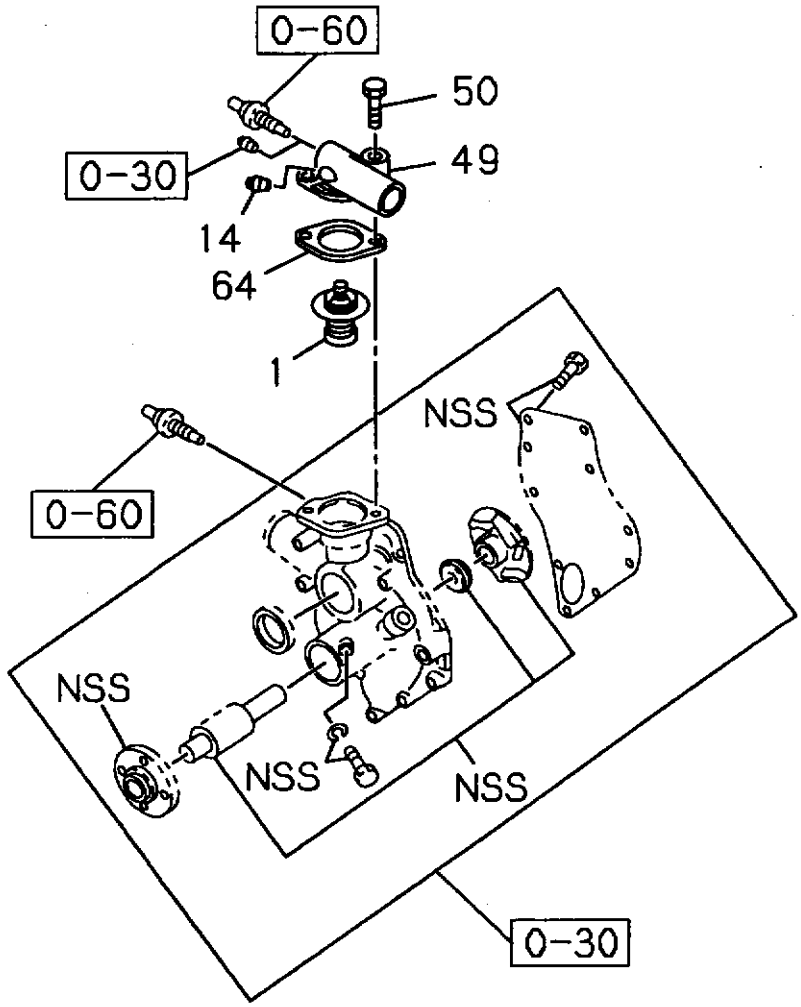

031A0150798

THERMOSTAT AND HOUSING

0-31 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
1	THERMOSTAT	894325-5131	C	9404-9612		1	A B C D H I J K L M X Y Z A C D J K L M N O	76.5°C
		897160-6540		9701-		1	A B C D E F G H I J K L M N O X Y Z A C D I J K L M N O	76.5°C
		897160-6540		9404-9903		1	P Q S T U B E	76.5°C
		897211-2090		9904-		1	P Q R S T U V W B E	82°C
		897160-6540		9404-		1	F G R S T X	76.5°C
		894382-5460		9311-		1	H U V W	76.5°C
		897160-6540		9404-9810		1	P Q	76.5°C
		894382-5460		9811-		1	P Q	76.5°C
14	PLUG; SW							
		509605-0050		9404-		1	A B C D E F H I J K L M O S T U X Y Z A B C D E F G H I J K L M N O P Q T	PT3/8
49	PIPE; WATER OUTLET							
		897104-7500		9404-		1	A B C D E F G H I J K L M N O X Z J L M O R S T X	
		897104-7500		9404-9903		1	P Q S T U	
		897139-7120		9904-		1	P Q R S T U V W	
		897258-4792		9311-		1	H	
		897095-8411		9404-		1	Y A C D F G I K M	
		897169-0151		9404-		1	E	
		897095-8411		9404-9911		1	B	
		897169-0151		9912-		1	B	
		897095-8411		9404-9802		1	P Q	
		897169-0151		9803-		1	P Q U V W	
50	BOLT; OUTLET PIPE							
		028080-8200		9404-		1	A B C D E F G H I J K L M N O X Y Z A C D F G J K L M N O R S T X	M8X20 FLANGE
		028080-8400		9404-		1	A B C D E F G H I J K L M N O X Y Z A C D F G J K L M N O R S T X	M8X40 FLANGE
		028080-8200		9404-9903		1	P Q S T U	M8X20 FLANGE
		028080-8400		9404-9903		1	P Q S T U	M8X40 FLANGE
		028080-8300		9904-		2	P Q R S T U V W	M8X30 FLANGE
		028680-8250		9404-		2	B E H P Q U V W	M8X20 FLANGE
64	GASKET; OUTLET PIPE TO HSG						—ALSO INCLUDED IN GASKET SET(ENGINE)	
		894325-9561		9404-		1	A B C D E F G H I J K L M N O X Y Z A C D F G I J K L M N O R S T X	
		894325-9561		9404-9903		1	P Q S T U B	
		894365-6741		9904-		1	P Q R S T U V W B E H	
		894325-9561		9404-9802		1	P Q	
		894365-6741		9803-		1	P Q U V W	


0-31 B THERMOSTAT AND HOUSING

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
1	THERMOSTAT	897160-6540		9404-		1	A B C E F G H I T A B	76.5°C
		894382-5460		9803-		1	D J K	76.5°C
		897160-6540		9404-9903		1	L M N O P S U V W X Y Z	76.5°C
		897211-2090		9904-		1	L M N O P Q R S U V W X Y Z C D E F G H I J K L M N O P Q R S T U V W X	82°C
14	PLUG; SW	509605-0050		9404-		1	E P S U V W Y Z Q S T U W	PT3/8
49	PIPE; WATER OUTLET	897104-7500		9404-		1	A B C E F I T A B	
		897169-0151		9404-		1	D J K F I J K L M N Q R	
		897095-8411		9803-		1	G H	
		897104-7500		9404-9903		1	L M N O P U V W X Y Z	
		897139-7120		9904-		1	L M N O P Q R S U V W X Y Z C D E G S T V X	
		913713-0641		9907-		1	H O P	
		913713-0641		9710-0001		1	U	
		897139-7120		0002-		1	U	
		897258-4792		0105-		1	W	
50	BOLT; OUTLET PIPE	028080-8200		9404-		1	A B C E F G H I T A B	M8X20 FLANGE
		028080-8400		9404-		1	A B C E F G H I T A B	M8X40 FLANGE
		028680-8250		9404-		2	D J K F H I J K L M N O P Q R W	M8X20 FLANGE
		028680-8300		9904-		2	L M N O P Q R S U V W X Y Z C D E G S T U V X	M8X30 FLANGE
64	GASKET; OUTLET PIPE TO HSG						—ALSO INCLUDED IN GASKET SET(EM8IME)	
		894325-9561		9404-		1	A B C E F G H I T A B	
		894365-6741		9404-		1	D J K P Q R C D E F G H I J K L M N O P Q R S T U V W X	
		894325-9561		9404-9903		1	L M N O S U V W X Y Z	
		894365-6741		9904-		1	L M N O S U V W X Y Z	

MEMO

0-32	WATER PIPING; ENGINE
FIG-NO.	

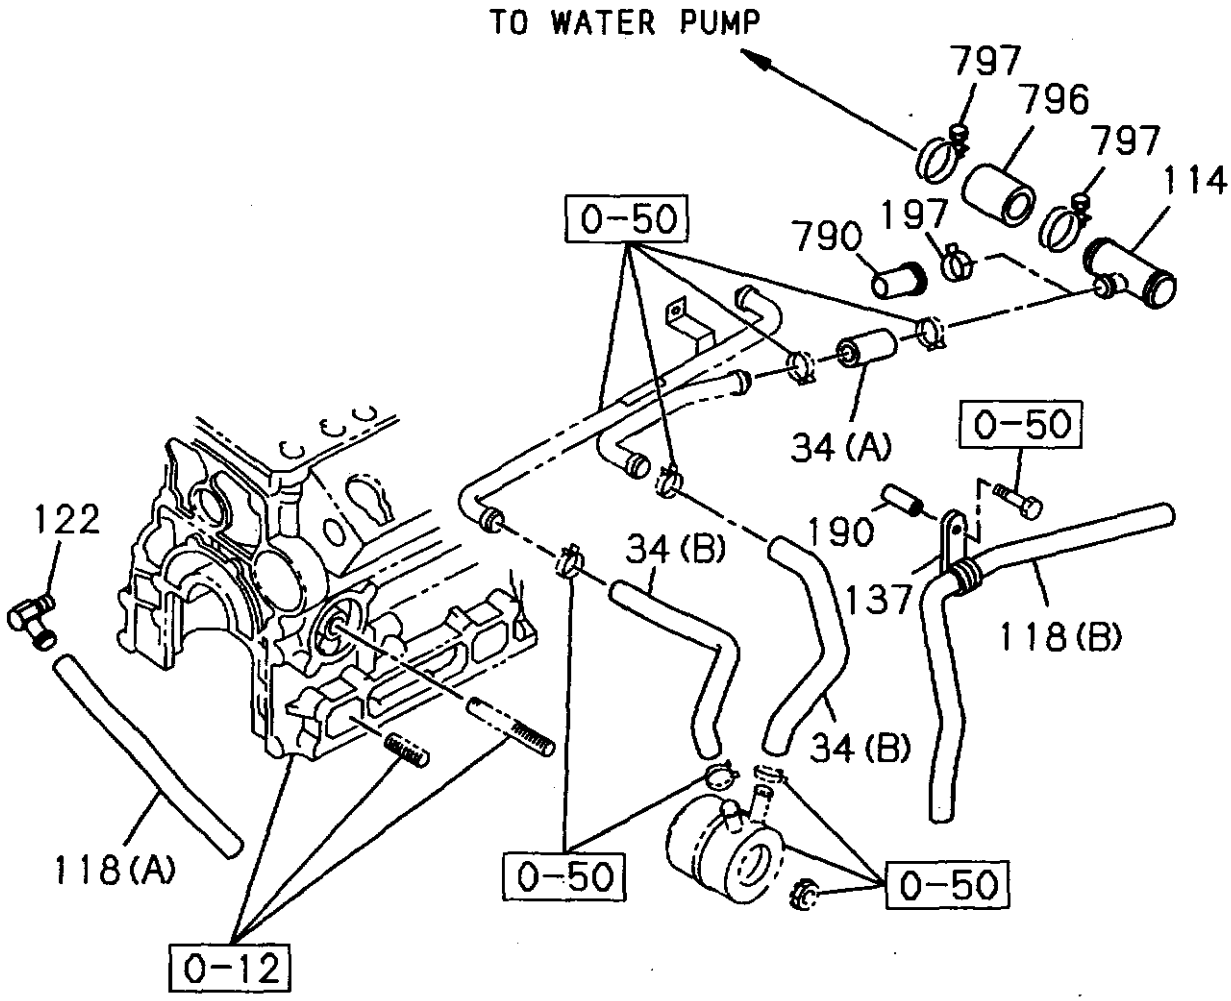

032A0150798

WATER PIPING; ENGINE

0-32 A

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
34	HOSE; RUBBER, WATER PIPE						
(A)	003266-3000		9404-		1	L	L=55
(B)	897138-3471		9404-		2	L	
114	JOINT; WATER PIPE						
	897102-3080		9404-		1	Y L UV	
118	HOSE; RUBBER, OIL COOLER TO CONNECTOR						
(A)	897148-3430		9404-		1	Y	
(B)	897148-3450		9404-		1	Y	
122	CONNECTOR; OIL COOLER						
	894241-9620		9404-		1	Y	
137	CLIP; HOSE, OIL COOLER						
	109701-0411		9404-		1	Y	ID=25
190	SPACER; CLIP						
	515419-0360		9404-		1	Y	ID=9.0 OD=20.0 T=2.0
197	CLIP; CAP						
	894466-3820		9404-		1	UV	
790	CAP						
	894107-6780		9404-		1	UV	
796	HOSE; RIBBER, CONNECTOR TO WATER PUMP						
	897102-8790		9404-		1	Y L UV	
797	CLIP; JOINT						
	909915-2811		9404-		2	Y L UV	ID=45


0-32 B WATER PIPING; ENGINE

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
114	JOINT; WATER PIPE						
	897102-3080		9404-		1	U W YZA CDEFG	
118	HOSE; RUBBER, OIL COOLER TO CONNECTOR						
(A)	897148-3430		9404-		1	U W YZA CDEFG	
(B)	897148-3450		9404-		1	U W YZA CDEFG	
122	CONNECTOR; OIL COOLER						
	894241-9620		9404-		1	U W YZA CDEFG	
137	CLIP; HOSE, OIL COOLER						
	109701-0411		9404-		1	U W YZA CDEFG	ID=25
190	SPACER; CLIP						
	515419-0360		9404-		1	U W YZA CDEFG	ID=9.0 OD=20.0 T=2.0
796	HOSE; RIBBER, CONNECTOR TO WATER PUMP						
	897102-8790		9404-		1	U W YZA CDEFG	
797	CLIP; JOINT						
	909915-2811		9404-		2	U W YZA CDEFG	ID=45

MEMO

0-33	FAN AND FAN BELT
FIG-NO.	(NO.1)

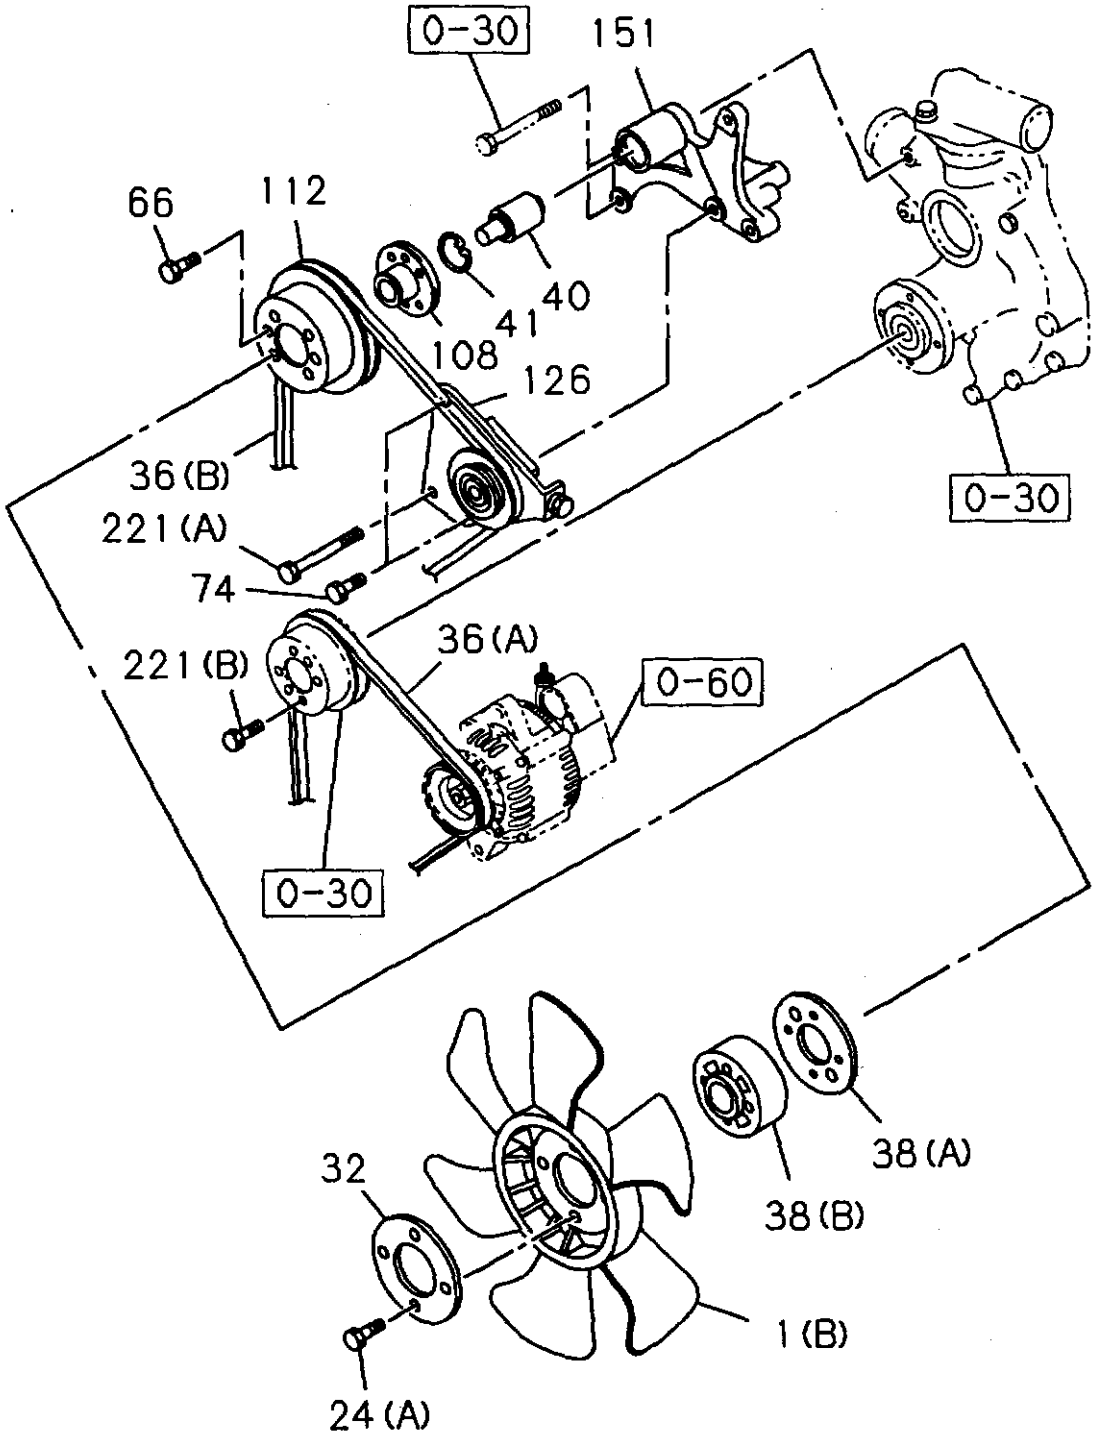


033A0150798

FAN AND FAN BELT

(NO.2)

0-33

FIG-NO.

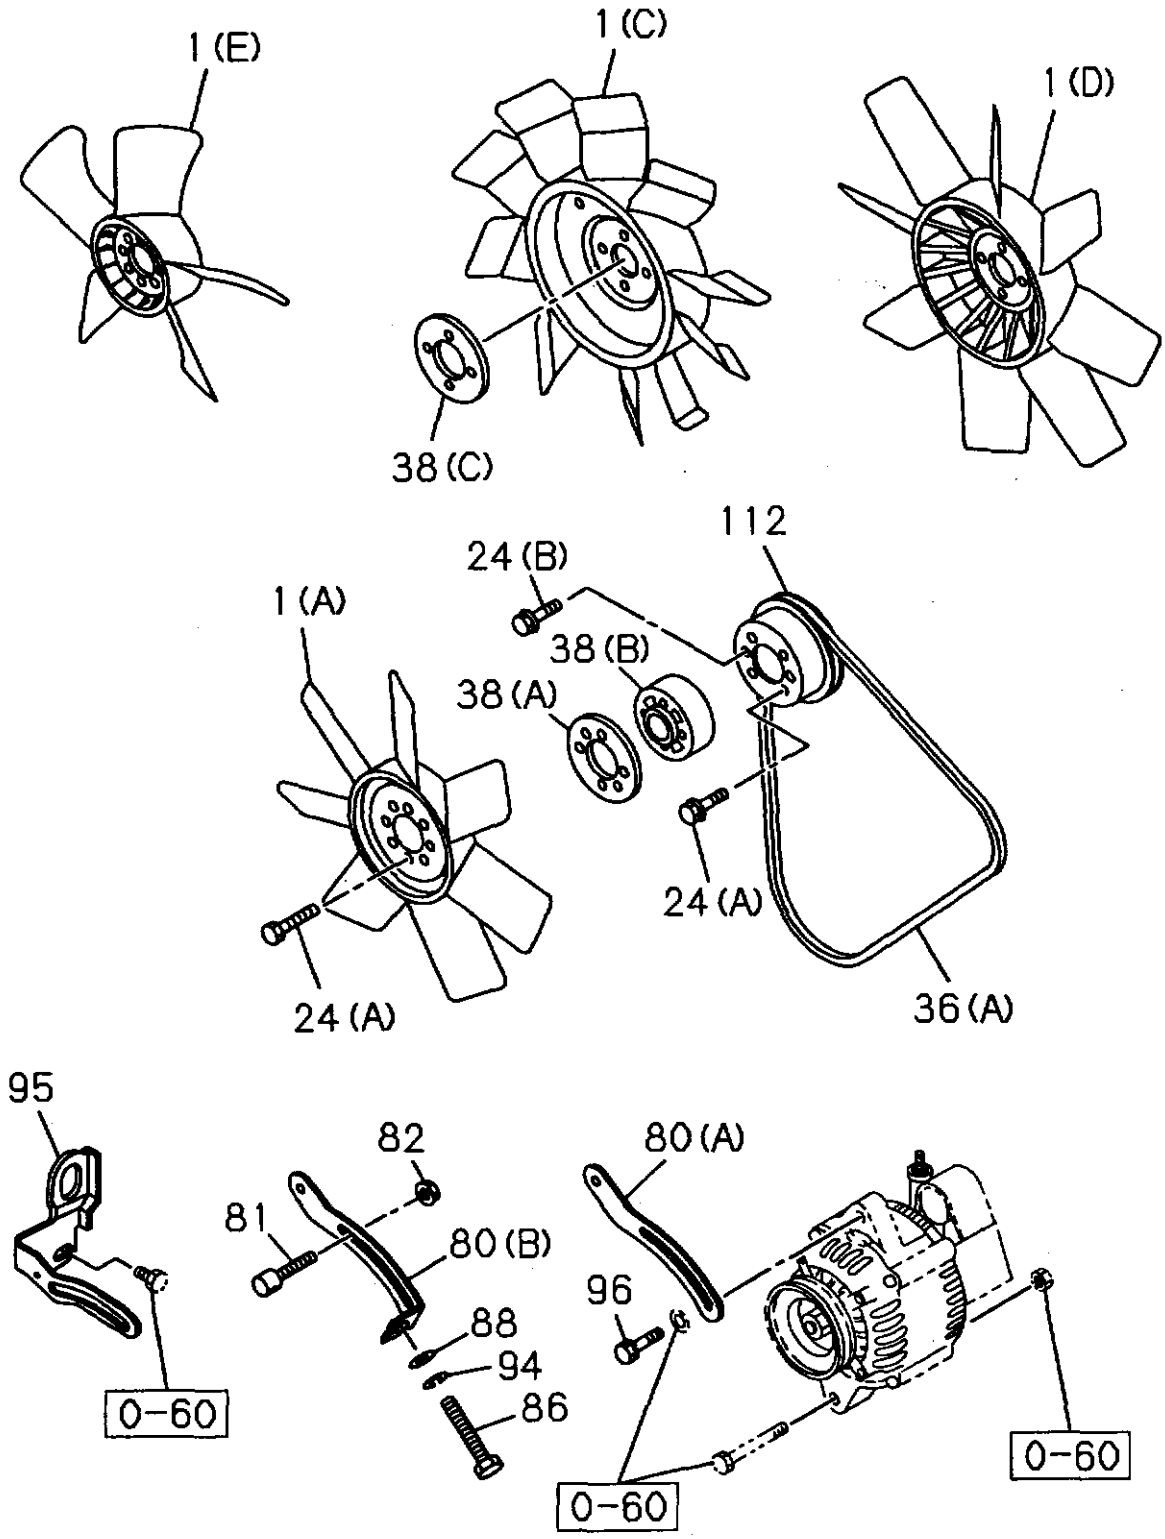

033A0250798

0-33 A FAN AND FAN BELT

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
							PPPPPPPPTTTTPPPPPPPPPPPPPPPPCCDDDDDDDDDDPPPPPPPPPPPPPPPPPPPPPPPPPPPPPP AAAAAAAAPPPPAAAAAVVVWWWWWWAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA 0000000000AAA 0000000000000 0 0000000000 0000000000 0000000001 1111111 1234567 00 1234123123451 1234567890 1234567890 12345 12 U 8 ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
1	FAN; COOLING							
(A)	897039-6510		9404-		1		D	D=360-7-SUCT-PP
(A)	897070-0750		9404-		1		H K	D=320-7-SUCT-PP
(A)	894450-7260		9404-		1		E G L M O S X J L	D=380-7-SUCT-PP
(B)	894470-5530		9404-		1	A	I	D=380-6-BLOW-PP
(B)	897022-8100		9404-		1	BC	N P Z	D=360-6-BLOW-PP
(B)	894483-8940		9404-		1	J	Y ABCDEFG I	D=430-6-BLOW-PP
(B)	513660-3080		9404-		1	QR	H R	D=400-6-BLOW-PP
(A)	894483-8971		9404-		1		S	D=550-7-BLOW-PP
(B)	513660-3040		9404-		1	TUVW	M	D=400-6-SUCT-PP
(B)	897022-8100		9404-9808		1	F	T	D=360-6-BLOW-PP
(E)	897210-1450		9809-		1	F	T	D=310-5-BLOW-PP
(C)	897134-2910		9404-9705		1		K MOP	D=380-10-SUCT-PP
(C)	897180-8771		9706-		1		K MOPQ	D=380-10-SUCT-PP
(D)	897205-1230		9404-		1		U W	D=430-8-SUCT-PP
(C)	897205-1260		9404-		1		V	D=430-10-SUCT-PP
(D)	513660-2860		9404-		1		X	D=390-8-SUCT-PP
24	BOLT; FAN							
(A)	028080-8200		9404-		4	A	H I K X H J	M8X20 FLANGE
(A)	028680-8350		9404-		4	B		M8X35 FLANGE
(A)	028080-8500		9404-		4		TU F I	M8X50 FLANGE
(A)	028080-8800		9404-		4	C	N	M8X80 FLANGE
(A)	028080-8800		9404-9808		4	F	T	M8X80 FLANGE
(A)	028080-8900		9809-		4	F	T	M8X90 FLANGE
(A)	028080-8450		9404-		4	DE G L M O QR VW Y AB DE G M R X		M8X45 FLANGE
(A)	028080-8700		9404-		4	J	KL PQ UVW	M8X70 FLANGE
(A)	028080-8220		9404-		4	P S	S	M8X22 FLANGE
(A)	028080-8500		9404-9705		4		MO	M8X50 FLANGE
(A)	028080-8600		9706-		4		MO	M8X60 FLANGE
(A)	028080-8450		9404-9610		4		C	M8X45 FLANGE
(A)	028080-8500		9611-		4		C	M8X50 FLANGE
(B)	020800-6120		9404-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX		M6X12
32	ADAPTER; FAN TO PULLEY							
		897210-6750		9809-		2	F	
		897210-6750		9311-0010		1	H T	
36	BELT; COOLING FAN							
(A)		913671-2661	C	9404-9611		1	I	1-PIECE, L=891
(A)		897164-8030	C	9612-9907		1	A G I	1-PIECE, L=876
(A)		897216-1320		9908-0004		1	A G I	1-PIECE, L=876
(A)		897245-7220		0005-		1	A G I	1-PIECE, L=895
(A)		513671-1400	C	9404-9611		1	J	1-PIECE, L=861
(A)		897164-8000	C	9612-9907		1	B J	1-PIECE, L=861
(A)		897216-1310		9908-		1	B J	1-PIECE, L=850
(A)		897164-8000	C	9404-9907		1	D	1-PIECE, L=861
(A)		897245-7210		9908-		1	D	1-PIECE, L=880
(A)		897040-7640	C	9404-9611		1	H	1-PIECE, L=826
(A)		897160-4370	C	9612-9907		1	H Y A CDEFG JKLMNOPQ T X	1-PIECE, L=826
(A)		897216-1280	C	9908-9911		1	H Y A CDEFG JKLMNOPQ T X	1-PIECE, L=826
(A)		897224-9990		9912-		1	H Y A CDEFGHI JKLMNOPQ T X	1-PIECE, L=836
(A)		897230-9380		9612-		1	EF	1-PIECE, L=825

FAN AND FAN BELT

0-33 A
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1 (ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX)	Remarks
36	BELT: COOLING FAN						
(A)	897068-7980	C	9404-9607		1	K Z	1-PIECE, L=836
(A)	897176-0670	C	9608-9907		1	C KL Z B UVW	1-PIECE, L=836
(A)	897211-3170	C	9908-9910		1	C KL T V Z B UVW	1-PIECE, L=836
(A)	897224-9990		9911-		1	C KL NOPQRST V Z B	1-PIECE, L=840
(A)	513671-1400	C	9404-9802		1	M	1-PIECE, L=861
(A)	897164-8000	C	9803-9907		1	M R	1-PIECE, L=861
(A)	897216-1310		9908-0004		1	M R	1-PIECE, L=850
(A)	897245-7200		0005-		1	M R	1-PIECE, L=865
(A)	897162-0810	C	9404-9907		1	U	1-PIECE, L=901
(A)	897216-1330		9908-0006		1	U W	1-PIECE, L=901
(A)	897160-4380	C	9404-9907		1	X	1-PIECE, L=851
(A)	897216-1290		9908-9910		1	X	1-PIECE, L=851
(A)	897230-9390		9911-		1	X UVW	1-PIECE, L=851
(B)	513670-0041	C	9404-9611		1	B J	1-PIECE, L=1080
(B)	897164-8060		9612-9907		1	B J	1-PIECE, L=1076
(B)	897216-1350		9908-		1	B J	1-PIECE, L=1065
38	SPACER: FAN						
(A)	897063-4003		9404-		1	ABCDEFGHIJKLMNOPQ STUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
(B)	989136-4230		9404-		1	B DE J QR VWXYZABCDEFGHIJKLMNOPQ VWX	
(B)	913642-0780		9404-		1	F J TU XYZABCDEFGHIJKLMNOPQ T	
(B)	913642-0780		9404-		2	C N	
(B)	913642-0770		9404-		1	FG LM O XYZABCDEFG JKLMNOPQR TU W	
(B)	913642-0780	C	9404-9905		1	N	
(B)	897225-1180		9906-		1	NO	
(C)	897181-6160		9706-		1	XYZABCDEFGHIJKLMNOPQ	
(C)	913642-0761		9607-		1	S	
40	BEARING: FAN DRIVE						
	897084-0710	A	9404-9511		1	J	
	897135-1030		9512-		1	B J	
41	RING: SNAP						
	909180-1300		9404-		1	B J	
66	BOLT: PULLEY						
	028080-8160		9404-		4	B J S	M8X16 FLANGE
74	BOLT: IDLE PULLEY						
	028080-8160		9404-		2	B J	M8X16 FLANGE
80	PLATE: ADJ						
(A)	897016-4720		9404-0004		1	A D G I X	
(A)	897233-5940		0005-		1	A D G I	
(A)	897040-5840		9404-9910		1	C EF H KL O T JKLM PQ TUVWX	
(B)	897222-4860		9911-		1	C EF H KL O T V X JKLM PQ TUVWX	
(A)	894327-3131		9404-		1	M	
(A)	513674-1041		9404-9910		1	N PQ S YZABCDEFG	
(A)	513674-1041		9911-0009		1	BCDEFG	
(A)	897231-5790		9911-		1	N PQRS YZA H	
(A)	897161-9690		9404-0009		1	U W	
(A)	897233-5950		0010-		1	U W	

0-33 A	FAN AND FAN BELT
FIG-NO.	

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1: PA01 PA02 PA03 PA04 PA05 (A B C D E)	4LB1: PA06 PA07 TPA TPA01 TPA02 (F G H I J)	4LC1: PA PA01 PA02 PA03UG PA04 (K L M N O)	4LC1: PV01 PV02 PV03 PW01 PW02 (P Q R S T)	4LC1: PW03 PW04 PW05 CA CA01 (U V W X Y)	4LE1: DA DA01 DA02 DA03 DA04 (Z A B C D)	4LE1: DA05 DA06 DA07 DA08 DA09 (E F G H I)	4LE1: PA PA01 PA02 PA03 PA04 (J K L M N)	4LE1: PA05 PA07 PA08 PA09 PA10 (O P Q R S)	4LE1: PA11 PA12 PA13 PA14 PA15 (T U V W X)	Remarks
80	PLATE; ADJ															
(A)	897040-5840		9404-9812		1								N	O		
(B)	897222-4860	C	9901-9902		1								N	O		
(B)	897226-7800		9903-		1								N	O		
81	PIECE; SLIDING															
	897086-2281		9901-0004		1	C	F	L NO		Y	A		KLMN	OPQ	TUVWX	
	897257-2230		0005-		1	A CDE	FGHI	KL NO	PQRST	UVWXY	ZA	H	JKLMN	OPQ	TUVWX	
82	NUT; ADJ PLATE															
	091150-2080		9901-		1	ABCDE	FGHIJ	KL NO	PQRST	UVWXY	ZA	H	JKLMN	OPQ	TUVWX	
86	BOLT; ADJ															
	894388-1780		9901-0010		1	ABCDE	FGHIJ	KL NO	PQRST	UVWXY	ZA	H	JKLMN	OPQ	TUVWX	
	897172-7201		0011-		1	A CDE	FGHI	KL NO	PQRST	UVWXY	ZA	H	JKLMN	OPQ	TUVWX	
88	WASHER; PL, ADJ PLATE															
	909160-5080		9901-0012		1	ABCDE	FGHIJ	KL NO	PQRST	UVWXY	ZA	H	JKLMN	OPQ	TUVWX	ID=8
	909164-7080		0101-		1	A CDE	FGHIJ	KL NO	PQRST	UVWXY	ZA	H	JKLMN	OPQ	TUVWX	ID=8
94	WASHER; LK, ADJ PLATE															
	909150-5080		0005-		1	A CDE	FGHI	KL NO	PQRST	UVWXY	ZA	H	JKLMN	OPQ	TUVWX	ID=8.2
95	BRACKET; ADJ PLATE															
	897094-6760		9404-		1	B	J									
96	BOLT; ADJ PLATE															
	028080-8200		9404-		1	ABCDE	FGHIJ	KLMNO	PQ ST	U XY	ZABCD	EFG I	JKLMN	O R		M8X20 FLANGE
108	CENTER; COOLING FAN															
	897034-5871		9404-		1	B	J									
112	PULLEY; FAN CENTER															
	897074-7120		9404-0004		1	A C	G I									1-GROOVE
	897226-8570		0005-		1	A C	G I									1-GROOVE
	897074-7130		9404-		1	B	J									1-GROOVE
	897226-8550		9911-		1	DE	F H	KLMNO	PQRST	UVW		HI				1-GROOVE
	897038-4030		9404-9910		1					X	Z BCD	FG	J LM	Q		1-GROOVE
	897226-8550		9911-		1					X	Z BCD	FG	J LM	QRS	T X	1-GROOVE
	897074-7130	C	9404-9910		1					Y				P	UVW	1-GROOVE
	897226-8560		9911-		1					Y				P	UVW	1-GROOVE
	897074-7120		9404-0004		1						A					1-GROOVE
	897226-8550		9911-		1						A					1-GROOVE
	897038-4030		9404-9910		1							E				1-GROOVE
	897226-8560		9911-		1							E				1-GROOVE
	897074-7130	C	9404-9510		1								K			1-GROOVE
	897038-4030		9511-9910		1								K			1-GROOVE
	897226-8550		9911-		1								K			1-GROOVE
	897038-4030		9404-9906		1								N	O		1-GROOVE
	894144-3024		9907-		1								N	O		1-GROOVE
126	PULLEY; IDLE															
	897132-1413		9404-		1	B	J									

FAN AND FAN BELT

0-33 A
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 PA01–PA05 (ABCDE)	PA06 PA07 TPA TPA01 TPA02 (FGHIJ)	4LC1 PA01–PA04 PA0UG (KLMNO)	PV01–PV03 PW01–PW02 (PQRST)	PA03–PA05 PC PC01 (UVWXY)	4LE1 PD01–PD04 (ZABCD)	DA05–DA09 (EFGHI)	PA01–PA04 (JKLMN)	PA05 PA07–PA09 PA10 (OPQRS)	PA11–PA15 (TUVWX)	Remarks
151	CASE; BRG															
	897084-0700		9404-		1	B	J									
221	BOLT; IDLE PULLEY															
(A)	028080-8900		9404-		1	B	J									M8X90 FLANGE
(B)	028080-8160		9404-		4	B	J									

0-33 B FAN AND FAN BELT

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
1	FAN; COOLING						
(B)	513660-3080		9404-		1	L PQR C E	D=400-6-BLOW-PP
(E)	897210-1450		9907-		1	H N	D=380-5-BLOW-PP
(D)	897205-1230		9404-		1	K QR X	D=430-8-SUCT-PP
(D)	513660-2860		9404-		1	C	D=390-8-SUCT-PP
(C)	897180-8771		9706-		1	AB D J	D=380-10-SUCT-PP
(B)	897022-8100		9404-		1	E M T P W	D=380-6-BLOW-PP
(B)	894433-1650		9404-		1	F VW	D=430-6-SUCT-PP
(B)	513660-3040		9404-		1	GH O S U YZAB D G STUV	D=400-6-SUCT-PP
(A)	894450-7260		9711-		1	I	D=380-7-SUCT-PP
(B)	894483-8940		0002-		1	IJKLM	D=430-6-BLOW-PP
(A)	897070-0750		9907-		1	O	D=320-7-SUCT-PP
24	BOLT; FAN						
(A)	028080-8200		9404-		4	O KLMNO Q X	M8X20 FLANGE
(A)	028080-8500		9404-		4	F Q S UVWXYZABC F IJ STU X	M8X50 FLANGE
(A)	028680-8300		0001-		4	H	M8X30 FLANGE
(A)	028080-8600		9706-		4	AB	M8X60 FLANGE
(A)	028080-8450		9404-		4	C E GH LMN P R T EFG P	M8X45 FLANGE
(A)	028080-8700		9404-		4	D JK D QR	M8X70 FLANGE
(A)	028080-8220		9404-		4	V	M8X22 FLANGE
(A)	028085-8110		9607-		4	I	M8X11 FLANGE
(A)	028680-8400		0105-		4	W	M8X40 FLANGE
(B)	020800-6120		9404-		2	CDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M6X12
32	ADAPTER; FAN TO PULLEY						
	897210-6750		9907-		2	HI N	
36	BELT; COOLING FAN						
(A)	897160-4370		9404-9910		1	ABC O Q S V	L=826
(A)	897224-9990		9911-		1	ABCD FGH O Q S V H K OPQRST WX	L=836
(A)	897176-0670	C	9404-9805		1	LMN P	L=836
(A)	897211-3170		9806-9910		1	LMN P R	L=836
(A)	897230-9390		9911-		1	JKLMN P R MN	L=851
(A)	897216-1280		9911-		1	E	L=826
(A)	897245-7230		0002-		1	I	L=905
(A)	897162-0810	C	9404-9907		1	T Y	L=901
(A)	897216-1330		9908-0009		1	T Y FG	L=901
(A)	897245-7230		0010-		1	T Y FG V	L=905
(A)	897160-4380	C	9404-9907		1	U W A	L=851
(A)	897216-1290		9908-0009		1	U W A CDE	L=851
(A)	897230-9390		9911-		1	U W A CDE	L=851
(A)	897160-4370	C	9404-9910		1	X	L=826
(A)	897216-1280		9911-0009		1	X	L=826
(A)	897245-7230		0010-		1	X	L=905
(A)	897162-0810	C	9404-9907		1	Z B	L=901
(A)	897216-1330		9908-0009		1	Z B	L=901
(A)	897245-7240		0010-		1	Z B	L=915
(A)	897224-9990		9912-0001		1	I	L=836
(A)	897230-9400		0002-		1	IJ L	L=860
(A)	897224-9990		9912-0001		1	U	L=836
(A)	897245-7230		0002-		1	U	L=905
38	SPACER; FAN						
(A)	897063-4003		9404-		1	CDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	

FAN AND FAN BELT

0-33 B
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1: PA16 PA17 PA18 PA19 PA20 (ABCDE)	PA21 PA22 PA23 PA24 PA25 (FGHIJ)	PA26 PV01 PV02 PV03 PV04 (KLMNO)	PV05 PV06 PV07 PW01 PW02 (PQRST)	PW03 PW04 PW05 PW06 PW07 (UVWXY)	PW08 PW09 PW10 PW11 PW12 (ZABCD)	PW13 PW14 PW17 / 4LE2: CA CA01 (EFGHI)	CA02 CA03 CA04 DA01 DA02 (JKLMN)	PA PA01 PA02 PA03 PW01 (OPQRS)	PW02 PW03 PW05 PW07 PW09 (TUVWX)	Remarks
38	SPACER; FAN															
(B)	989136-4230		9404-		1	CDE	J	KLMN	P R T		D	EFG	MN		W	
(B)	913642-0780		9404-		1				Q S	UVWXY	ZABC	FG I	J	S	TU X	
(B)	913642-0780	C	9404-9905		1	AB										
(B)	897225-1180		9906-		1	AB										
(C)	897181-6161		9706-		1	AB										
(B)	913642-0770		9404-		1	D	FGHIJ	K			D			P		
(B)	913642-0770		9404-		2								L	QR		
(B)	913642-0790		9710-		1		I									
(C)	913642-0761		9607-		1										V	
(C)	897181-6161		9706-		1	D	J									
80	PLATE; ADJ															
(A)	897040-5840		9404-9910		1	C		O	Q S	V						
(B)	897222-4860		9911-		1	CD	FGH J	K O	Q S	V				OPQRS	T VW	
(A)	897040-5840		9404-9812		1	AB										
(B)	897222-4860	C	9901-9902		1	AB										
(B)	897226-7800		9903-		1	AB										
(A)	897040-5840		9911-		1	E										
(B)	897233-5950		0002-		1		I									
(A)	513674-1041		9404-0009		1			LMN	P R							
(A)	897231-5790		0010-		1			LMN	P R							
(A)	897161-9690		9404-0009		1				T	Y	Z B	FG				
(B)	897233-5950		0010-		1				T	Y	Z B	FG			UV	
(A)	897016-4720		9404-0009		1					U W	A CD	E				
(B)	897222-4860		0010-		1					U W	A CD	E				
(A)	897040-5840		9404-0003		1					X						
(B)	897233-5950		0004-		1					X						
(A)	897228-1780		9607-9906		1							H				
(A)	897231-5790		9907-		1							HI	JKLMN			
81	PIECE; SLIDING															
	897086-2281		9901-0004		1	ABCD	FGHI					HI		OP S	TU	
	897257-2230		0005-		1	ABCD	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
82	NUT; ADJ PLATE															
	091150-2080		9901-		1	ABCD	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M8 FLANGE
86	BOLT; ADJ															
	894388-1780		9901-0010		1	ABCD	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JK	OP S	TU	
	897172-7201		0011-		1	ABCD	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M8X130 FLANGE
88	WASHER; PL, ADJ PLATE															
	909160-5080		9901-0101		1	ABCD	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JK	OP S	TU	ID=8
	909164-7080		0102-		1	ABCD	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	ID=8
94	WASHER; LK, ADJ PLATE															
	909150-5080		9901-		1	ABCD	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OP RS	TUVWX	ID=8.2
96	BOLT; ADJ PLATE															
	028080-8200		9404-		1	AB E		LMNO	PQRST	UVW Y	ZABCD	EFG				M8X20 FLANGE
112	PULLEY; FAN CENTER															
	897038-4030		9404-0009		1	C E		LMNO	PQRST	UVWXY	ZABCD	EFG				1-GROOVE


0-33 B FAN AND FAN BELT

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1: PA16 PA17 PA18 PA19 PA20 (ABCDE)	PA21 PA22 PA23 PA24 PA25 (FGHIJ)	PA26 PV01 PV02 PV03 PV04 (KLMNO)	PV05 PV06 PV07 PW01 PW02 (PQRST)	PW03 PW04 PW05 PW06 PW07 (UVWXY)	PW08 PW09 PW10 PW11 PW12 (ZABCD)	PW13 PW14 PW17 C A / 4LE2: CA01 (EFGHI)	CA02 CA03 CA04 DA01 DA02 (JKLMN)	PA PA01 PA02 PA03 PW01 (OPQRS)	PW02 PW03 PW05 PW07 PW09 (TUVWX)	Remarks
112	PULLEY; FAN CENTER															
	897226-8550		0010-		1	C D	F G H I	L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H	K	O P S	T U V W X	1-GROOVE
	897226-8560		9911-		1		J	K					M N	R		1-GROOVE
	897038-4030		9404-9906		1	A B										1-GROOVE
	894144-3024		9907-		1	A B										1-GROOVE
	897226-8570		0002-		1							I	J L			1-GROOVE

MEMO

0-36	TURBOCHARGER SYSTEM
FIG-NO.	

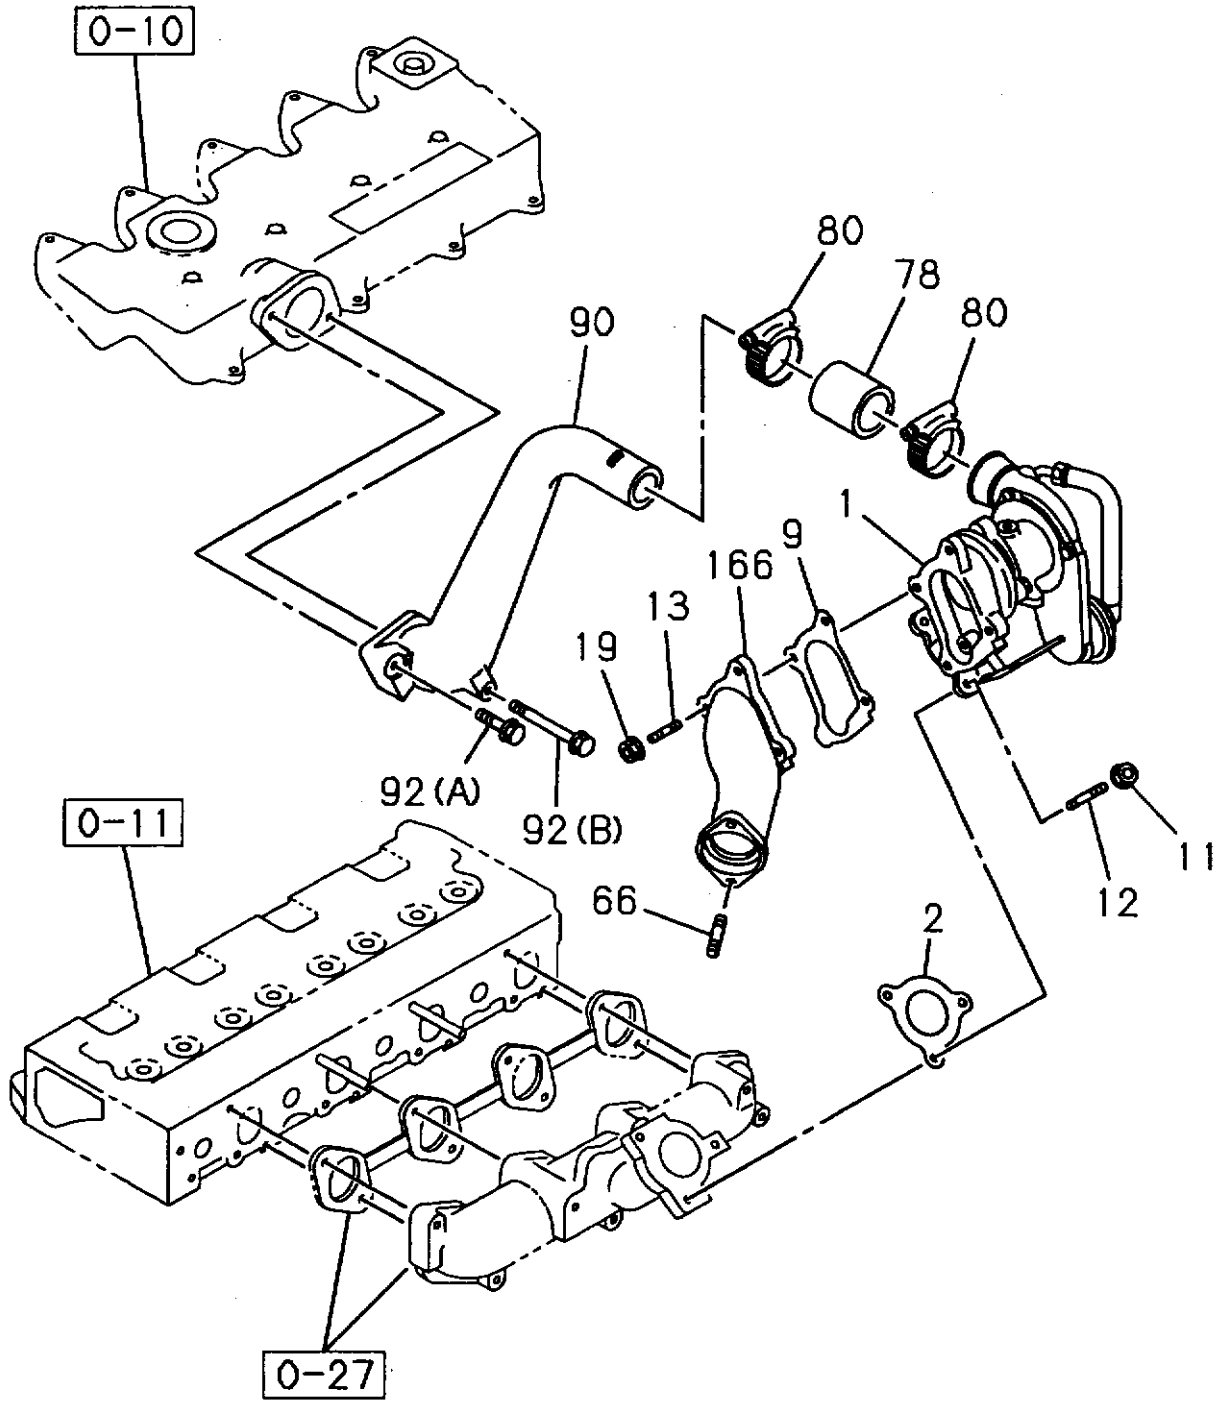

036A0150798

TURBOCHARGER SYSTEM

0-36 A
FIG-NO.


KEY NO. | PART NAME

Applicability columns (4LB1 / 4LC1 / 4LE1):


```
4LB1        4LC1            4LE1
PPPPPPPTTTPPPPPPPPPPPPPCCDDDDDDDDDDPPPPPPPPPPPPPPP
AAAAAAAPPPAAAAAVVVWWWWWAAAAAAAAAAAAAAAAAAAAAAAAAAA
0000000AAA 000000000000 0 000000000 000000001111111
1234567 00 123412312345 1 123456789 12345789012345
        12    U
              G
ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX
```

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	Applicability	Remarks
1	TURBOCHARGER ASM					—SEE FIG-NO 0-37 FOR COMPONENT.	
	897084-0720		9404-		1	H I J	
2	GASKET; TURBOCHARGER TO EXH MANIF					—ALSO INCLUDED IN GASKET SET(ENGINE)	
	894332-8380		9404-		1	H I J	
9	GASKET; TURBOCHARGER TO EXH DUCT					—ALSO INCLUDED IN GASKET SET(ENGINE)	
	894332-8370		9404-		1	H I J	
11	NUT; TURBOCHARGER						
	894170-4860	A	9404-0104		3	H I J	M8 FLANGE
	897061-4011		0105-		3	H I J	M8 FLANGE
12	STUD; TURBOCHARGER						
	894257-3190		9404-		3	H I J	M8X22 L=33
13	STUD; EXH PIPE						
	894476-2820		9404-		4	H I J	
19	NUT; EXH PIPE, TURBOCHARGER						
	894170-4860	A	9404-0104		4	H I J	M8 FLANGE
	897061-4011		0105-		4	H I J	M8 FLANGE
66	STUD; EXH PIPE						
	894111-6191		9404-		2	H I J	M8X30
78	HOSE; INL PIPE, TURBOCHARGER						
	897084-0751		9404-		1	H I J	
80	CLIP; CONN HOSE, TURBOCHARGER						
	109707-1320		9404-		2	H I J	
90	PIPE; INL, TURBOCHARGER TO MANIF						
	897106-2130		9404-		1	H I J	
92	BOLT; INL PIPE						
(A)	028080-6300		9404-		1	H I J	M6X30 FLANGE
(B)	028080-6600		9404-		1	H I J	M6X60
166	PIPE; EXH						
	897084-0741		9404-		1	H I J	

0-37	TURBOCHARGER
FIG-NO.	

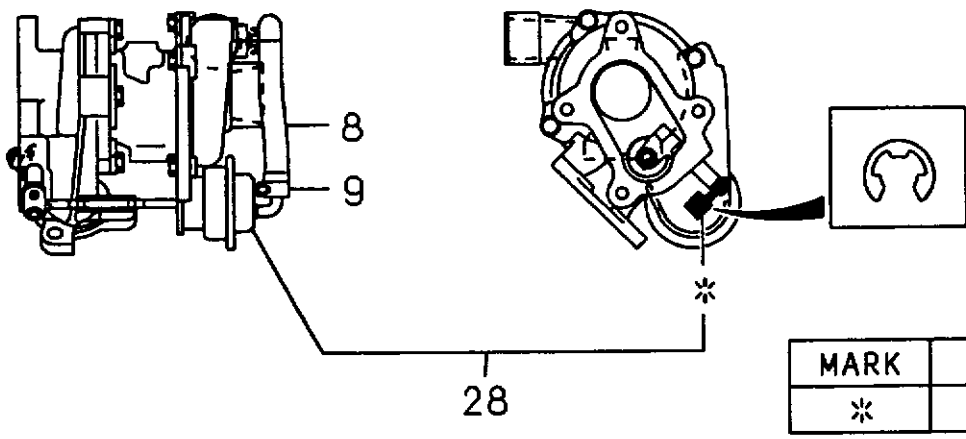

MARK	KEY NO.
*	10

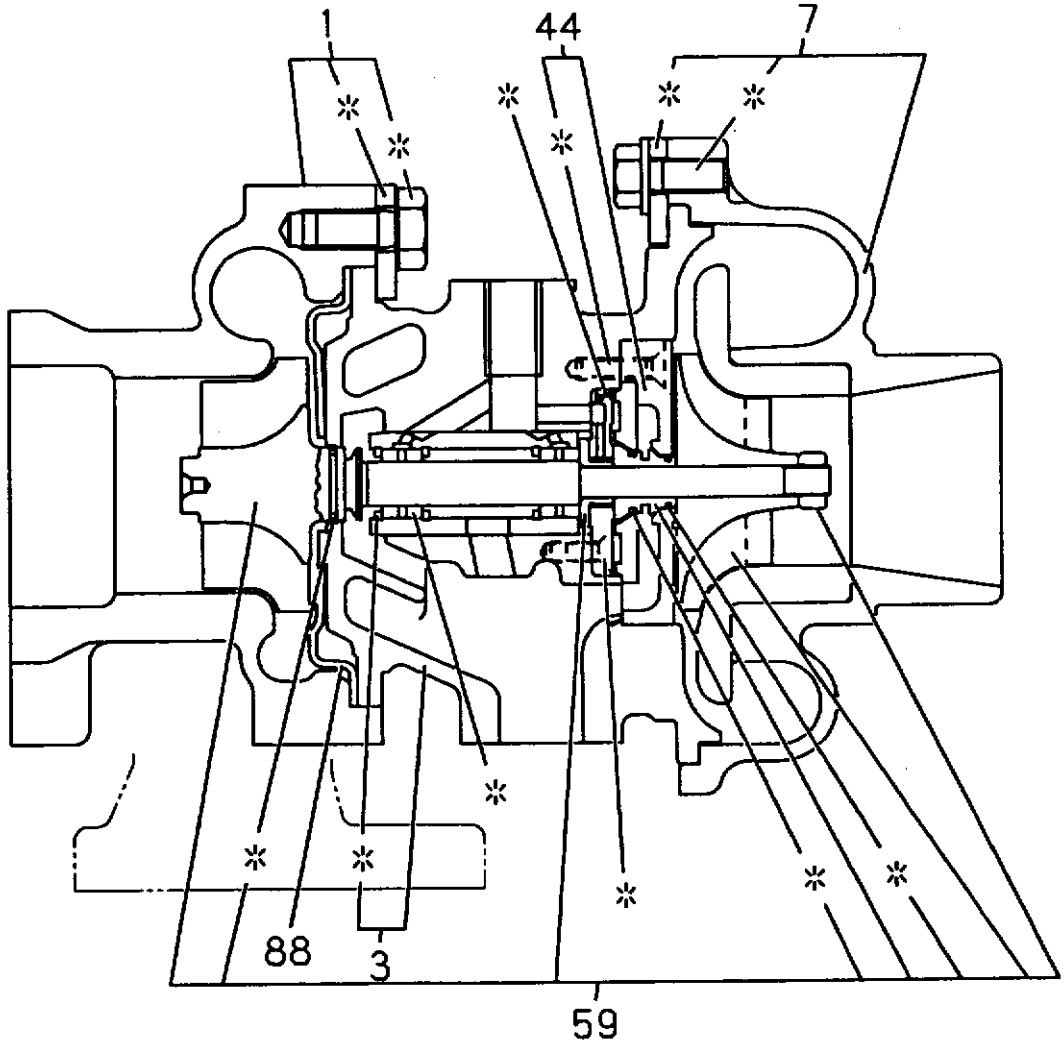


037A0150798

TURBOCHARGER

0-37
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	8970840720 ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	Remarks
1	HOUSING; TURBINE, TURBOCHARGER 897109-1960		9404-		1	A	
3	HOUSING; BRG, TURBOCHARGER 897109-1950		9404-		1	A	
7	HOUSING; BLOWER, TURBOCHARGER 897109-1980		9404-		1	A	
8	HOSE; ACTUATOR TO BLOWER HSG, TC 897109-2490		9404-		1	A	
9	CLIP; ACTUATOR HOSE, TURBOCHARGER 894372-9400		9404-		2	A	
10	REPAIR KIT; TURBOCHARGER 897109-1900		9404-		1	A	
28	CONTROL ASM; WASTE GATE, TURBOCHARGER 897109-1940		9404-		1	A	
44	PLATE; SEAL, TURBOCHARGER 897109-1930		9404-		1	A	
59	ROTOR; TURBOCHARGER 897109-2010		9404-		1	A	
88	SHIELD; RAD, TURBOCHARGER 894372-9360		9404-		1	A	

0-40	FUEL INJECTION SYSTEM
FIG-NO.	(NO.1)

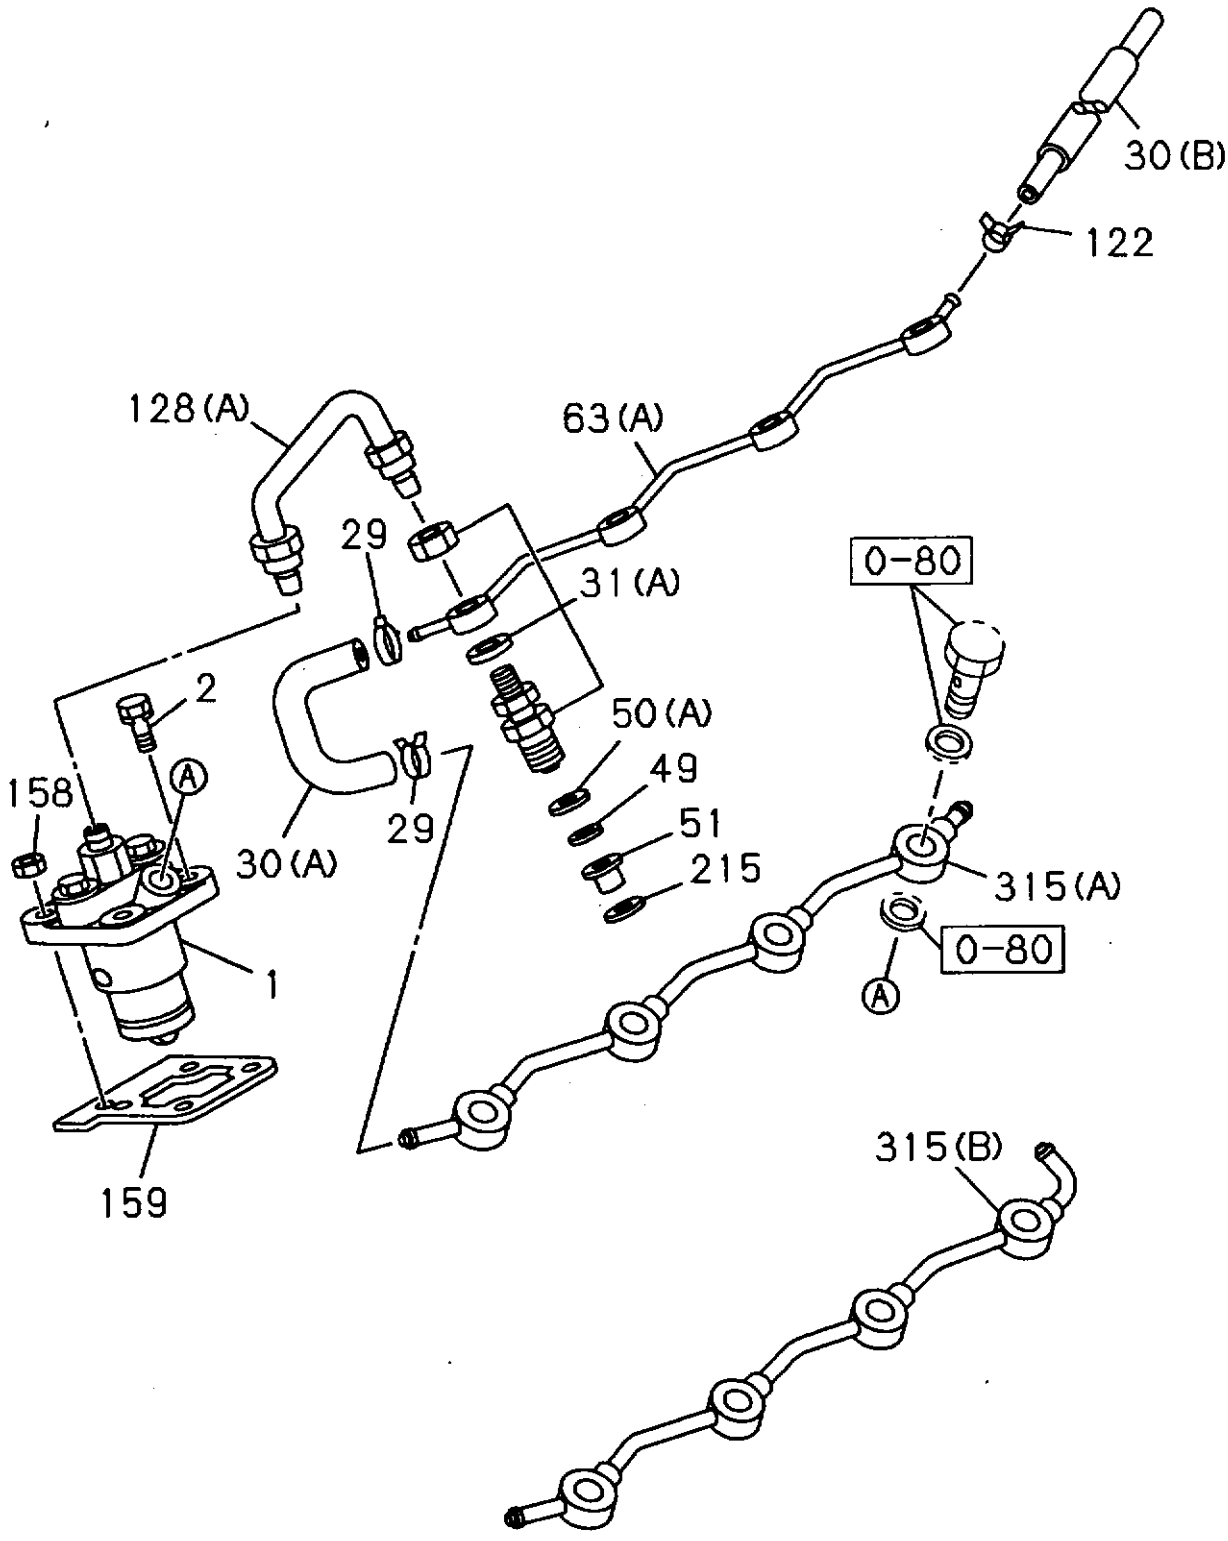


040A0150798

FUEL INJECTION SYSTEM

(NO.2)


0-40

FIG-NO.

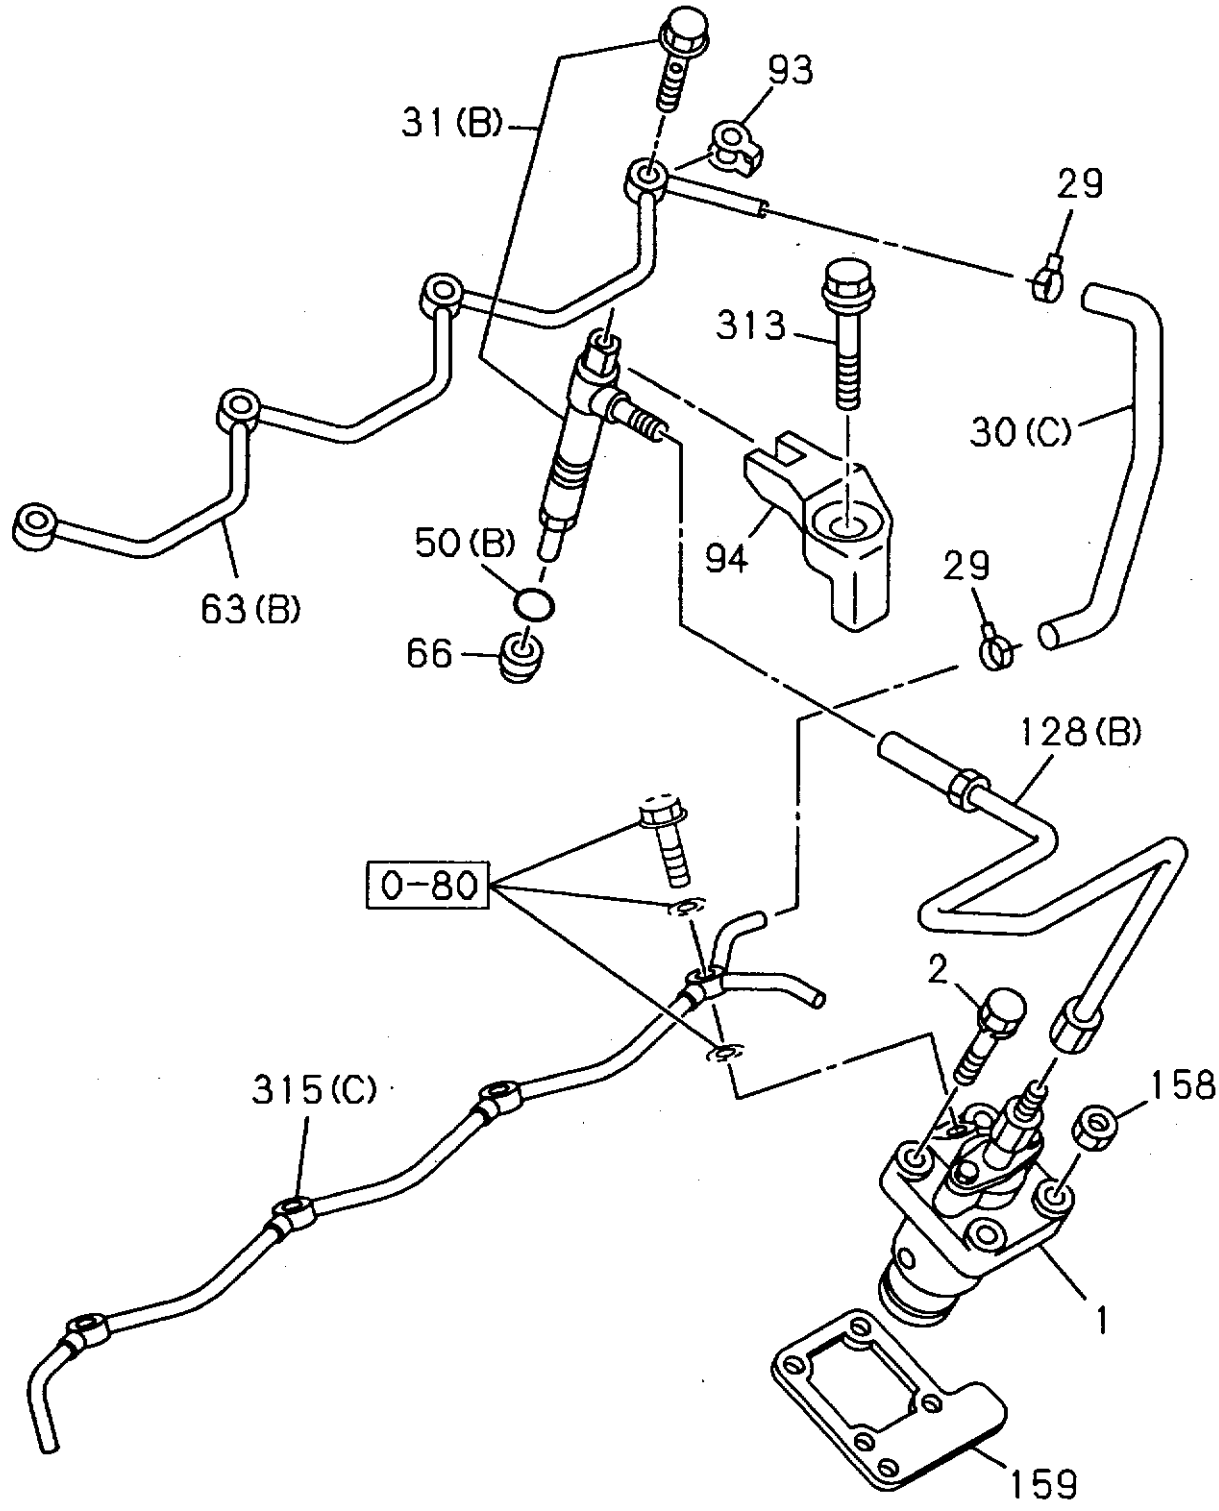

040A0250798

0-40	FUEL INJECTION SYSTEM
FIG-NO.	(NO.3)

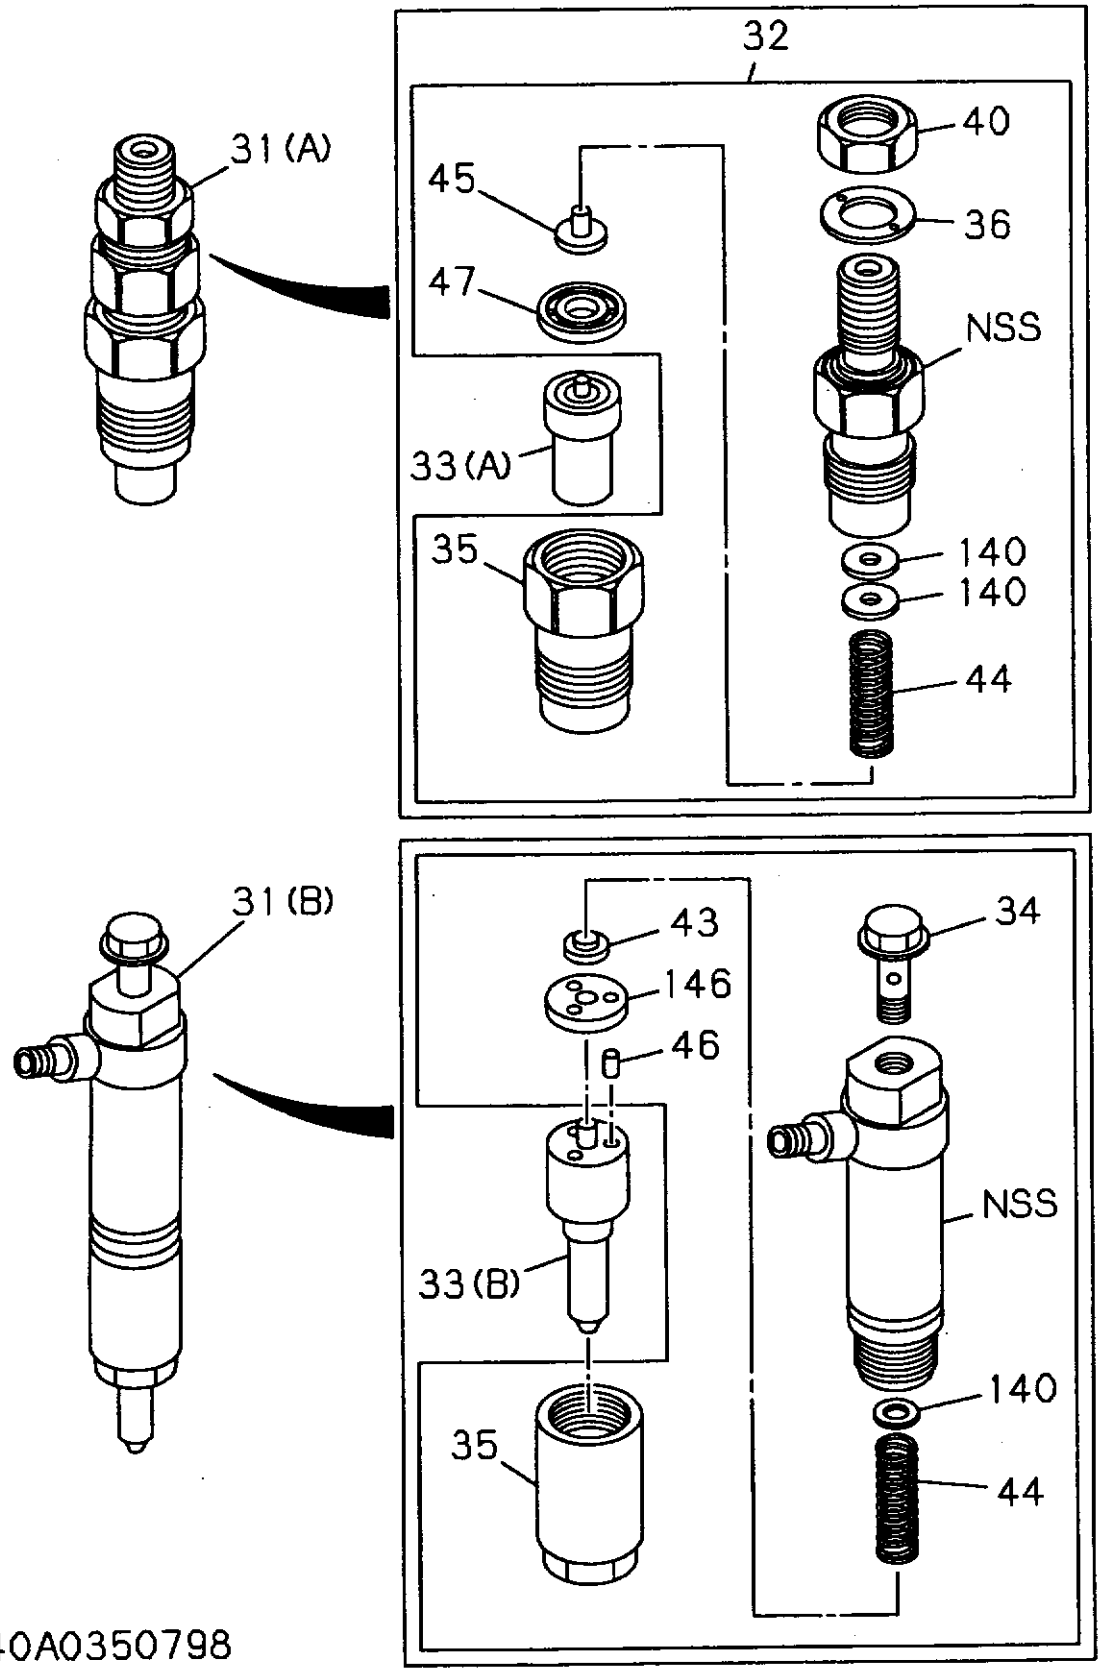

FUEL INJECTION SYSTEM

0-40 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	I T C	APPLIED DATE	L R	Q T Y	4LB1 / 4LC1 / 4LE1	Remarks
1	PUMP ASM; INJ						—SEE FIG-NO 0-80 FOR COMPONENT.	
		897034-5916		9404-		4	AB GHIJK MN ST UVW	
		897137-8351		9404-		4	L O	
		897115-6872		9404-		4	CDEF PQR	
		897147-5801		9404-		4	XY	
		897131-3570	C	9404-9601		4	ZA	
		897143-3321		9602-		4	ZABCDEFGHI	
		897115-2971		9404-		4	JK	
2	BOLT; INJ PUMP							
		028080-8200		9404-		8	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M8X20 FLANGE
29	CLIP; HOSE							
		509707-0051		9404-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	ID=11 WHITE
30	HOSE; RUBBER, FUEL LEAK							
(A)		897040-8091		9404-		1	ABCDEFGHIJ	
(A)		897046-7941		9404-		1	KLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
(B)		894152-9892		9404-		1	MO	
31	NOZZLE ASM; INJ							
(A)		897079-9760		9404-		4	CDEF HIJ XYZABCDEFGHIJKLMNOPQRSTUVWX	
(A)		897116-0990		9404-		4	AB G KLMNOPQRSTUVW	
32	HOLDER ASM; NOZZLE							
		897090-8420		9404-		4	CDEF HIJ XYZABCDEFGHIJKLMNOPQRSTUVWX	
		897116-1000		9404-		4	AB G KLMNOPQRSTUVW	
33	NOZZLE; INJ							
(A)		897116-1360		9404-		4	AB G KLMNOPQRSTUVW	
(A)		894130-5320		9404-		4	CDEF HIJ XYZABCDEFGHIJKLMNOPQRSTUVWX	
35	NUT; NOZZLE RET, NOZZLE HOLDER							
		897084-6170		9404-		4	CDEF HIJ XYZABCDEFGHIJKLMNOPQRSTUVWX	
		897130-5810		9404-		4	AB G KLMNOPQRSTUVW	
36	GASKET; RETURN PIPE, NOZZLE HOLDER						—ALSO INCLUDED IN GASKET SET(ENGINE)	
		894104-9930		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	ID=12 W/2-HOLE
40	NUT; ADJ SCREW, NOZZLE HOLDER							
		894129-0060		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
44	SPRING; NOZZLE, NOZZLE HOLDER							
		894128-9640		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
45	ROD; PUSH, NOZZLE HOLDER							
		894128-9630		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
47	SPACER; NOZZLE SPRING, NOZZLE HOLDER							
		897083-3580		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
49	WASHER; CORRUGATED, NOZZLE						—ALSO INCLUDED IN GASKET SET(ENGINE)	
		894106-0403		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	

0-40 A FUEL INJECTION SYSTEM

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1	4LC1	4LE1	Remarks
							PPPPPPPPTTTPPPPPPPPPPPPPPPCCDDDDDDDDDDPPPPPPPPPPPPPPPPP			
							AAAAAAAAPPPAAAAAAVVVWWWWWAAAAAAAAAAAAAAAAAAAAAAAAAAAAA			
							0000000AAA 0000000000000 0 0000000000 0000000001111			
							1234567 00 1234123123451 1234567891 1234578901234			
							12 U			
							G			
							ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			
50	GASKET; NOZZLE HOLDER						—ALSO INCLUDED IN GASKET SET(ENGINE)			
(A)	894257-5920			9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			
51	SHIELD; HEAT, INJ NOZZLE									
	894106-0551			9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			
63	PIPE; FUEL, NOZZLE LEAK OFF									
(A)	897077-8050			9404-		1	ABCDEFGHIJ			
(A)	897122-1250			9404-		1	KLMNOPQRSTUVW			
(A)	897126-1880			9404-		1	XYZABCDEFGHIJKLMNOP RST WX			
(A)	897192-0990			9404-		1	Q UV			
122	CLIP; LEAK OFF PIPE									
	894238-6100			9404-		2	MD			ID=12
128	PIPE ASM; INJ									
(A)	897034-6241			9404-		4	AB G			
(A)	897045-4931			9404-		4	HIJ			
(A)	897045-4921			9404-		4	CDEF			
(A)	897102-1371			9404-		4	KLMN XY LMND RST X			
(A)	897109-4681			9404-		4	OPQR			
(A)	897129-5990			9404-		4	STUVW			
(A)	897109-4681	C		9404-9601		4	ZA			
(A)	897145-5590			9602-		4	ZABCDEFGHI			
(A)	897045-4062			9404-		4	JK			
(A)	897180-9400			9803-		4	PQ UVW			
140	SHIM; NOZZLE SPRING, NOZZLE HOLDER									
	894176-9620			9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			T=0.10
	894176-9630			9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			T=0.20
	894176-9640			9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			T=0.30
	894176-9650			9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			T=0.40
	894176-9660			9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			T=0.50
	894176-9670			9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			T=0.52
	894176-9680			9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			T=0.54
	894176-9690			9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			T=0.56
	894176-9700			9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			T=0.58
	894176-9710			9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			T=0.80
158	NUT; INJ PUMP									
	091150-2080			9404-		B	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			M8 FLANGE
159	SHIM; INJ PUMP									
	897034-6152	C		9404-9512		AR	A HIJKLM P ST			T=0.2
	897126-3560	C		9601-9903		AR	ABCDEFGHIJKLMNOPQ STU XYZABCDEFG JKLMNOPQRSTUVWX			T=0.2
	897227-2821			9904-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			T=0.2
	897034-6162	C		9404-9512		AR	A HIJKLM P ST			T=0.3
	897126-3570	C		9601-9903		AR	ABCDEFGHIJKLMNOPQ STU XYZABCDEFG JKLMNOPQRSTUVWX			T=0.3
	897227-2831			9904-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			T=0.3
	897034-6172	C		9404-9512		AR	A HIJKLM P ST			T=0.4
	897126-3580	C		9601-9903		AR	ABCDEFGHIJKLMNOPQ STU XYZABCDEFG JKLMNOPQRSTUVWX			T=0.4
	897227-2841			9904-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX			T=0.4
	897034-6182	C		9404-9512		AR	A HIJKLM P ST			T=0.5

FUEL INJECTION SYSTEM

0-40 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
159	SHIM; INJ PUMP							
		897126-3590	C	9601-9903	AR		ABCDEFGHIJKLMNOPQ STU XYZABCDEFG JKLMNOPQRSTUVWX	T=0.5
		897227-2851		9904-	AR		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	T=0.5
		897034-6192	C	9404-9512	AR		A HIJKLM P ST	T=0.6
		897126-3600	C	9601-9903	AR		ABCDEFGHIJKLMNOPQ STU XYZABCDEFG JKLMNOPQRSTUVWX	T=0.6
		897227-2861		9904-	AR		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	T=0.6
		897034-6202	C	9404-9512	AR		A HIJKLM P ST	T=0.7
		897126-3610	C	9601-9903	AR		ABCDEFGHIJKLMNOPQ STU XYZABCDEFG JKLMNOPQRSTUVWX	T=0.7
		897227-2871		9904-	AR		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	T=0.7
		897034-6212	C	9404-9512	AR		A HIJKLM P ST	T=0.8
		897126-3620	C	9601-9903	AR		ABCDEFGHIJKLMNOPQ STU XYZABCDEFG JKLMNOPQRSTUVWX	T=0.8
		897227-2881		9904-	AR		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	T=0.8
		897034-6222	C	9404-9512	AR		A HIJKLM P ST	T=1.0
		897126-3630	C	9601-9903	AR		ABCDEFGHIJKLMNOPQ STU XYZABCDEFG JKLMNOPQRSTUVWX	T=1.0
		897227-2891		9904-	AR		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	T=1.0
		897034-6232	C	9404-9512	AR		A HIJKLM P ST	T=1.2
		897126-3640	C	9601-9903	AR		ABCDEFGHIJKLMNOPQ STU XYZABCDEFG JKLMNOPQRSTUVWX	T=1.2
		897227-2901		9904-	AR		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	T=1.2
215	GASKET; HEAT SHIELD						—ALSO INCLUDED IN GASKET SET(ENGINE)	
		894257-5930		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	ID=14.2 OD=17.3
315	PIPE; FUEL, SUCTION							
(A)		897077-8040		9404-9406		1	H	
(B)		897117-0920		9407-		1	ABCDEFGHIJKLMNOPQRSTUVW	
(A)		897126-1870		9404-		1	B E JK	
(A)		897126-1870	C	9404-9604		1	ZA L	
(B)		897144-7240		9605-		1	ZA I L	
(B)		897144-7240		9404-		1	XY CD FGH MNOP RST WX	
(C)		897192-0980		9404-		1	Q UV	

0-40 B FUEL INJECTION SYSTEM

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
1	PUMP ASM; INJ						—SEE FIG-NO 0-90 FOR COMPONENT.	
		897147-5801		9404-		4	ABCDEFGHIJK STUVWXYZABCDEFG	
		897143-3321		9602-		4	LMNOPQR	
		897229-3682		9907-		4	HIJKL OP STUVWX	
		897314-8962		0105-		4	MN	
		897314-8952		0106-		4	QR	
2	BOLT; INJ PUMP							
		028080-8200		9404-		8	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M8X20 FLANGE
29	CLIP; HOSE							
		509707-0051		9404-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	ID=11 WHITE
30	HOSE; RUBBER, FUEL LEAK							
(A)		897046-7941		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	
(C)		897229-2513		9907-		1	HIJKL OPQRSTUVWX	
(B)		894152-9892		9404-		1	AB	L=240
(C)		897247-9890		0105-		1	MN	
31	NOZZLE ASM; INJ							
(A)		897079-9760		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	
(B)		897229-3672		9907-		4	HIJKL OP STUVWX	
(B)		897289-2930		0105-		4	MN	
(B)		897314-8971		0106-		4	QR	
32	HOLDER ASM; NOZZLE							
		897090-8420		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	
		897314-8250		9907-		4	HIJKLMNOPQRSTUVWX	
33	NOZZLE; INJ							
(A)		894130-5320		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	
(B)		897229-9070		9907-		4	HIJKL OPQRSTUVWX	
(B)		897314-8260		0105-		4	MN	
34	BOLT; EYE NOZZLE HOLDER							
		897311-6830		9907-		4	HIJKLMNOPQRSTUVWX	
35	NUT; NOZZLE RET, NOZZLE HOLDER							
		897084-6170		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	
		894174-1840		9907-		4	HIJKLMNOPQRSTUVWX	
36	GASKET; RETURN PIPE, NOZZLE HOLDER						—ALSO INCLUDED IN GASKET SET(ENGINE)	
		894104-9930		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	ID=12 W/2-HOLE
40	NUT; ADJ SCREW, NOZZLE HOLDER							
		894129-0060		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	
43	SEAT; NOZZLE SPRING NOZZLE HOLDER							
		894312-7230		9907-		4	HIJKLMNOPQRSTUVWX	
44	SPRING; NOZZLE, NOZZLE HOLDER							
		894128-9640		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	
		894174-1410		9907-		4	HIJKLMNOPQRSTUVWX	

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
45	ROD; PUSH, NOZZLE HOLDER						
	894128-9630		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	
46	PIN; NOZZLE SET, NOZZLE HOLDER						
	894174-1390		9907-		4	HIJKLMNOPQRSTUVWX	
47	SPACER; NOZZLE SPRING, NOZZLE HOLDER						
	897083-3580		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	
49	WASHER; CORRUGATED, NOZZLE					—ALSO INCLUDED IN GASKET SET(ENGINE)	
	894106-0403		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	
50	GASKET; NOZZLE HOLDER					—ALSO INCLUDED IN GASKET SET(ENGINE)	
(A)	894257-5920		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	
(B)	894326-4390		9907-		4	HIJKLMNOPQRSTUVWX	
51	SHIELD; HEAT, INJ NOZZLE						
	894106-0551		9404-		4	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	
63	PIPE; FUEL, NOZZLE LEAK OFF						
(A)	897126-1880		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	
(B)	897217-2492		9907-		1	HIJKLMNOPQRSTUVWX	
66	GASKET; INJ NOZZLE						
	897171-3310		9907-		4	HIJKLMNOPQRSTUVWX	
93	GASKET; LEAK OFF PIPE						
	897232-3341		9907-		4	HIJKLMNOPQRSTUVWX	
94	BRACKET; INJ NOZZLE						
	897195-2591		9907-		4	HIJKLMNOPQRSTUVWX	
122	CLIP; LEAK OFF PIPE						
	894238-6100		9404-		2	AB	ID=12
128	PIPE ASM; INJ						
(A)	897102-1371		9404-		4	ABC EF I STUVWXYZABCDEFG	
(A)	897145-5590		9602-		4	LMNOPQR	
(A)	897180-9400		9803-		4	D GH JK	
(B)	897228-3860		9907-		4	HIJKLMNOP STUVWX	
(B)	897228-3850		0106-		4	QR	
140	SHIM; NOZZLE SPRING, NOZZLE HOLDER						
	894176-9620		9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	T=0.10
	894176-9630		9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	T=0.20
	894176-9640		9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	T=0.30
	894176-9660		9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	T=0.50
	894176-9670		9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	T=0.52
	894176-9680		9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	T=0.54
	894176-9690		9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	T=0.56
	894176-9700		9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	T=0.58
	894176-9710		9404-		AR	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	T=0.80
	897116-0290		9907-		AR	HIJKLMNOPQRSTUVWX	T=0.10


0-40 B FUEL INJECTION SYSTEM

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	I T C	APPLIED DATE	L R	QTY	4LE1 PA16 PA17 PA18 PA19 PA20	PA21 PA22 PA23 PA24 PA25	PA26 PV01 PV02 PV03 PV04	PV05 PV06 PV07 PW01 PW02	PW03 PW04 PW05 PW06 PW07	PW08 PW09 PW10 PW11 PW12	PW13 PW14 PW17 / 4LE2 CA CA01	CA02 CA03 CA04 DA01 DA02	PA PA01 PA02 PA03 PW01	PW02 PW03 PW05 PW07 PW09	Remarks
						ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
140	SHIM: NOZZLE SPRING, NOZZLE HOLDER															
	897116-0320		9907-		AR							HI	JKLMN	OPQRS	TUVWX	T=0.20
	897116-0330		9907-		AR							HI	JKLMN	OPQRS	TUVWX	T=0.30
	897116-0340		9907-		AR							HI	JKLMN	OPQRS	TUVWX	T=0.40
	897116-0350		9907-		AR							HI	JKLMN	OPQRS	TUVWX	T=0.50
	897116-0360		9907-		AR							HI	JKLMN	OPQRS	TUVWX	T=0.51
	897116-0370		9907-		AR							HI	JKLMN	OPQRS	TUVWX	T=0.52
	897116-0380		9907-		AR							HI	JKLMN	OPQRS	TUVWX	T=0.53
	897116-0390		9907-		AR							HI	JKLMN	OPQRS	TUVWX	T=0.54
	897116-0400		9907-		AR							HI	JKLMN	OPQRS	TUVWX	T=0.55
	897116-0410		9907-		AR							HI	JKLMN	OPQRS	TUVWX	T=0.56
	897116-0420		9907-		AR							HI	JKLMN	OPQRS	TUVWX	T=0.57
	897116-0430		9907-		AR							HI	JKLMN	OPQRS	TUVWX	T=0.58
	897116-0440		9907-		AR							HI	JKLMN	OPQRS	TUVWX	T=0.59
146	SPACER: NOZZLE															
	894344-4390		9907-		4							HI	JKLMN	OPQRS	TUVWX	
158	NUT: INJ PUMP															
	091150-2080		9404-		8	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M8 FLANGE
159	SHIM: INJ PUMP															
	897126-3560	C	9404-9903		AR	ABC		LMNO	P ST	UVWXY	ZAB					T=0.2
	897227-2821		9904-		AR	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	T=0.2
	897126-3570	C	9404-9903		AR	ABC		LMNO	P ST	UVWXY	ZAB					T=0.3
	897227-2831		9904-		AR	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	T=0.3
	897126-3580	C	9404-9903		AR	ABC		LMNO	P ST	UVWXY	ZAB					T=0.4
	897227-2841		9904-		AR	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	T=0.4
	897126-3590	C	9404-9903		AR	ABC		LMNO	P ST	UVWXY	ZAB					T=0.5
	897227-2851		9904-		AR	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	T=0.5
	897126-3600	C	9404-9903		AR	ABC		LMNO	P ST	UVWXY	ZAB					T=0.6
	897227-2861		9904-		AR	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	T=0.6
	897126-3610	C	9404-9903		AR	ABC		LMNO	P ST	UVWXY	ZAB					T=0.7
	897227-2871		9904-		AR	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	T=0.7
	897126-3620	C	9404-9903		AR	ABC		LMNO	P ST	UVWXY	ZAB					T=0.8
	897227-2881		9904-		AR	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	T=0.8
	897126-3630	C	9404-9903		AR	ABC		LMNO	P ST	UVWXY	ZAB					T=1.0
	897227-2891		9904-		AR	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	T=1.0
	897126-3640	C	9404-9903		AR	ABC		LMNO	P ST	UVWXY	ZAB					T=1.2
	897227-2901		9904-		AR	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	T=1.2
215	GASKET: HEAT SHIELD —ALSO INCLUDED IN GASKET SET(ENGINE)															
	894257-5930		9404-		4	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFG				ID=14.2 OD=17.3
313	BOLT: BRKT, INJ NOZZLE															
	894433-7171		9907-		4							HI	JKLMN	OPQRS	TUVWX	
315	PIPE: FUEL, SUCTION															
(B)	897144-7240		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFG				
(C)	897192-0980		9404-		1							HI	JKL	OPQRS	TUVWX	
(C)	897314-8610		0106-		1								MN			

MEMO

0-41	FUEL FILTER AND BRACKET
FIG-NO.	

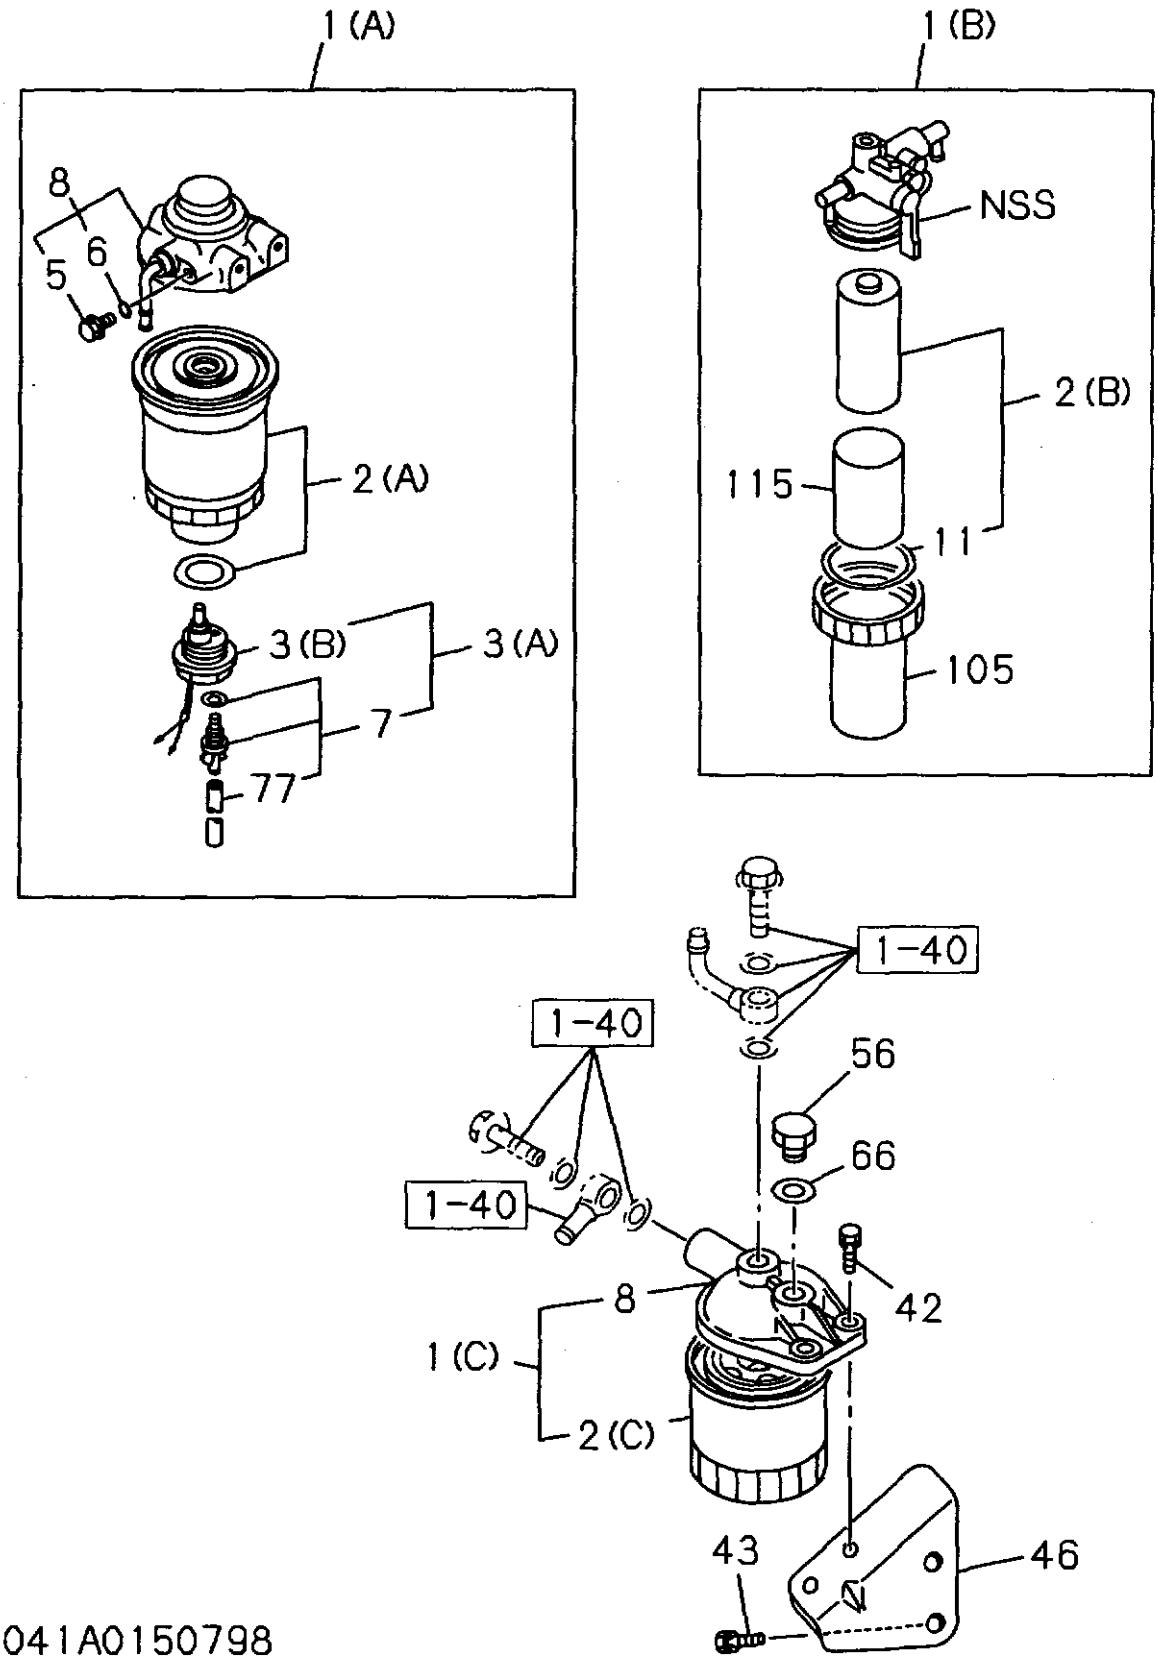

FUEL FILTER AND BRACKET

0-41 A
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	Applicability (4LB1: PA01–PA05, PA06, PA07, TPA00, TPA01, TPA02 / 4LC1: PA01–PA04, PA0U6, VA01–VA03, WA01, WA02, WA03–WA05, CA01 / 4LE1: DA01–DA04, DA05–DA09, PA01–PA04, PA05, PA07–PA10, PA11–PA15) — ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	Remarks
1	FILTER ASM; FUEL						
(A)	894367-2922		9404-		1	A B I J	
(B)	897081-6463		9404-		1	C E F R T X	
(B)	897077-9323		9404-		1	D L M N O	
(C)	897014-2040		9404-		1	G P Q R S T U V W X Y M S	
(B)	897104-1891		9404-		1	A	
(B)	894401-0832		9404-		1	D G H	
(B)	897077-9322		9501-9601		1	L	
(B)	897136-3191		9602-		1	L	
(B)	897136-3191		9404-		1	K M O Q U V	
(C)	897167-8110		9404-		1	B C E F I	
(B)	897178-8181		9404-		1	P W	
2	ELEMENT KIT; FUEL FILTER						
(A)	894369-2993		9404-		1	A B I J	
(B)	897071-3480		9404-		1	C E F	
(B)	897048-8470		9404-		1	D L M N O	
(C)	894132-9471		9404-		1	G P Q R S T U V W X Y M S	
(B)	897071-3480		9404-		1	A D G H K L M O P Q R T U V W X	
(C)	894394-0791		9404-		1	B C E F I	
3	SENSOR ASM; FUEL FILTER						
(A)	894367-2940		9404-		1	A B I J	
(B)	894450-1420		9404-		1	A B I J	
5	BOLT; FUEL FILTER						
	894132-6740		9404-		1	A B I J	
	999202-3140		9404-		1	G Y	
6	GASKET; FUEL FILTER						
	894132-6750		9404-		1	A B I J	
7	PLUG; SENSOR, FUEL FILTER						
	894367-9570		9404-		1	A B I J	
8	COVER; FUEL FILTER						
	894367-2933		9404-		1	A B I J	
	894132-9480		9811-		1	G P Q R S T U V W X Y M S	
	894396-6700		9811-		1	B C E F I	
11	GASKET; CASE TO BODY, FUEL FILTER						
	894155-1830		9404-		1	C D E F L M N O A D G H K L M O P Q R T U V W X	
42	BOLT; FUEL FILTER						
	028081-0300		9404-		2	P Q R S T U V W C F I	M10X30 FLANGE
43	BOLT; BRKT						
	028181-0200		9404-		2	P Q R S T U V W C F I	M10X20 FLANGE
46	BRACKET						
	897111-5520		9404-		1	P Q R S T U V W C F I	
56	PLUG; FUEL FILTER						
	999202-3140		9404-		1	G P Q R S T U V W X Y B C E F I M S	M14X9

0-41 A FUEL FILTER AND BRACKET

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 ABCDE (PA01 PA02 PA03 PA04 PA05)	FGHIJ (PA06 PA07 TPA TPA01 TPA02)	4LC1 KLMNO (PA PA01 PA02 PA03 PA04UG)	PQRST (PV01 PV02 PV03 PW01 PW02)	UVWXY (PW03 PW04 PW05 CA CA01)	4LE1 ZABCD (DA DA01 DA02 DA03 DA04)	EFGHI (DA05 DA06 DA07 DA08 DA09)	JKLMN (PA PA01 PA02 PA03 PA04)	OPQRS (PA05 PA07 PA08 PA09 PA10)	TUVWX (PA11 PA12 PA13 PA14 PA15)	Remarks
66	GASKET; PLUG, FUEL FILTER								—ALSO INCLUDED IN GASKET SET (ENGINE)							
	909571-4140		9404-9905		1		G		PQ ST	U Y	BC	EF	M	S		ID=14.2 OD=20.0
	909572-0140		9906-		1		G		PQRST	UVWXY	BC	EF I	M	S		ID=14.2 OD=23
77	HOSE; FUEL FILTER															
	894367-9560		9404-		1	AB	IJ									
105	CASE; FUEL FILTER															
	897042-1940		9404-		1	C E	F				A D	GH	KL M	OPQR	TUVWX	
	894360-2550		9404-		1	D		LMNO								
115	CUP; INNER															
	897048-8490		9404-		1	D		LMNO								
	897071-3470		9404-		1								KL M	OPQ	UVW	

FUEL FILTER AND BRACKET

0-41 B

FIG-NO.

Model code header (4LE1 / 4LE2):

PPPPP PPPPP PPPPP PPPPP PPPPP PPPPP PPPCC CCCDD PPPPP PPPPP
AAAAA AAAAA AVVVV VVVWW WWWWW WWWWW WWWAA AAAAA AAAAW WWWWW
11112 22222 20000 00000 00000 00111 111 0 00000 0000 00000
67890 12345 61234 56712 34567 89012 347 1 23412 1231 23579

ABCDE FGHIJ KLMNO PQRST UVWXY ZABCD EFGHI JKLMN OPQRS TUVWX

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	Applicable models	Remarks
1	FILTER ASM; FUEL						
(B)	897081-6463		9404-		1	C E I J L	
(B)	897136-3191		9404-		1	A B R	
(B)	897178-8181		9404-		1	D J K Q	
(B)	897136-3191		9404-9907		1	P	
(B)	897231-5350		9908-		1	P	
(C)	897014-2040		9404-		1	F HI LM PQRST UVWXY ZABCD EFG K STUVWX	
(B)	894401-0832		9607-		1	G	
(A)	894367-2922		0106-		1	MN	
2	ELEMENT KIT; FUEL FILTER						
(B)	897071-3480		9404-		1	ABCDE G JK IJ L QR	
(B)	897071-3480		9404-9907		1	P	
(B)	897240-0250		9908-		1	P	
(C)	894132-9471		9404-		1	F HI LM PQRST UVWXY ZABCD EFG K STUVWX	
(A)	894369-2993		0106-		1	MN	
3	SENSOR ASM; FUEL FILTER						
(A)	894367-2940		0106-		1	MN	
(B)	894450-1420		0106-		1	MN	
5	BOLT; FUEL FILTER						
	894132-6740		0106-		1	MN	
6	GASKET; FUEL FILTER						
	894132-6750		0106-		1	MN	
7	PLUG; SENSOR, FUEL FILTER						
	894367-9570		0106-		1	MN	
8	COVER; FUEL FILTER						
	894132-9480		9404-		1	F HI LM PQRST UVWXY ZABCD EFG K STUVWX	
	894367-2933		0106-		1	MN	
11	GASKET; CASE TO BODY, FUEL FILTER						
	894155-1830		9404-		1	ABCDE G JK IJ L QR	
	897240-0240		9907-		1	P	
42	BOLT; FUEL FILTER						
	028081-0300		9404-		2	F HI LM PQRST UVWXY ZABCD EFG STUV X	M10X30 FLANGE
43	BOLT; BRKT						
	028181-0200		9404-		2	F HI LM PQRST UVWXY ZABCD EFG STUV X	M10X20 FLANGE
46	BRACKET						
	897111-5520		9404-		1	F HI LM PQRST UVWXY ZABCD EFG STUV X	
56	PLUG; FUEL FILTER						
	999202-3140		9404-		1	F HI LM PQRST UVWXY ZABCD EFG K STU WX	M14X9
66	GASKET; PLUG, FUEL FILTER —ALSO INCLUDED IN GASKET SET(ENGINE)						
	909571-4140		9404-9906		1	LM P STUVWXY ZAB	ID=14.2 OD=20.0
	909572-0140		9907-		1	F HI LM PQRST UVWXY ZABCD EFG K STU WX	ID=14.2 OD=23.0

0-41 B FUEL FILTER AND BRACKET


FIG-NO.


	4LE1																																	4LE2															
Model	PA16	PA17	PA18	PA19	PA20	PA21	PA22	PA23	PA24	PA25	PA26	PV01	PV02	PV03	PV04	PV05	PV06	PV07	PW01	PW02	PW03	PW04	PW05	PW06	PW07	PW08	PW09	PW10	PW11	PW12	PW13	PW14	PW17	CA	CA01	CA02	CA03	CA04	DA01	DA02	PA	PA01	PA02	PA03	PW01	PW02	PW03	PW05	PW07	PW09
Code	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
77	HOSE; FUEL FILTER						
	894367-9560		0106-		1	MN	
105	CASE; FUEL FILTER						
	897042-1940		9404-		1	ABCDE G JK IJ L QR	
	897240-0220		9908-		1	P	
115	CUP; INNER						
	897071-3470		9404-		1	AB PQR	

MEMO

0-42	FUEL PUMP AND PIPE
FIG-NO.	

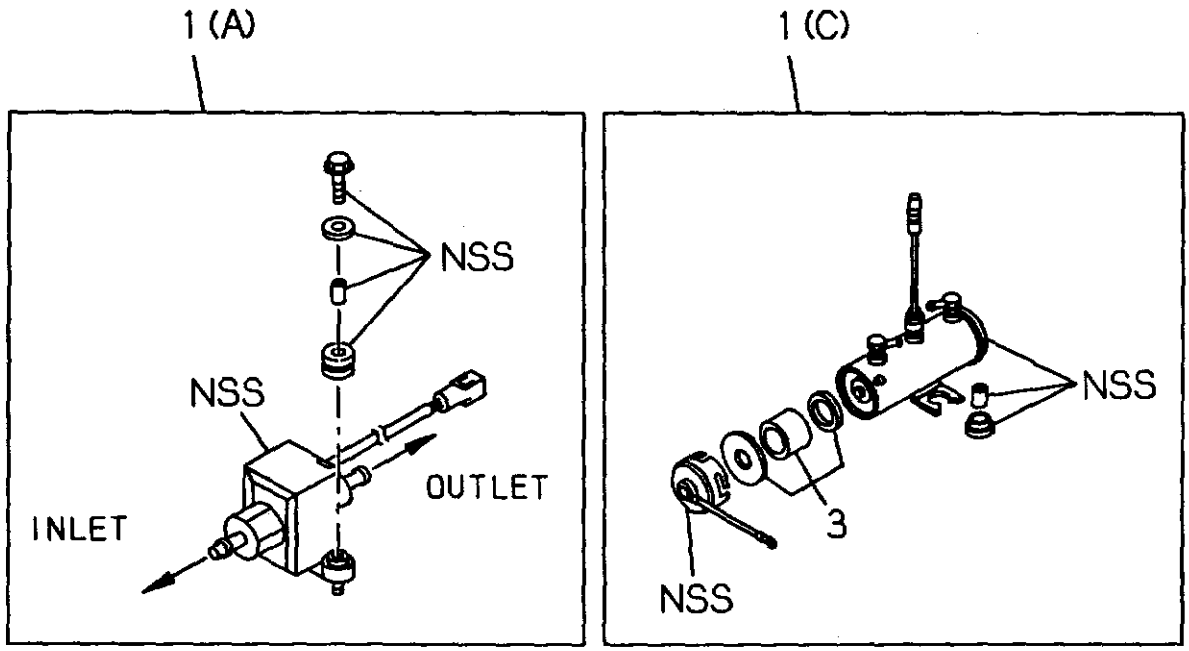

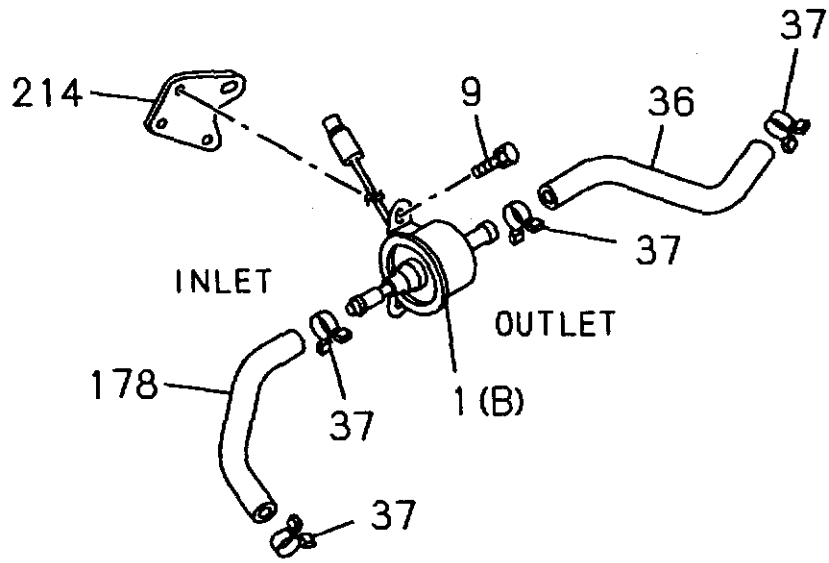

042A0150798

FUEL PUMP AND PIPE

0-42 A
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1		4LC1			4LE1					Remarks
						PA01 PA02 PA03 PA04 PA05	PA06 PA07 TPA TPA01 TPA02	PA PA01 PA02 PA03UG PA04	PV01 PV02 PV03 PW01 PW02	PW03 PW04 PW05 CA CA01	DA DA01 DA02 DA03 DA04	DA05 DA06 DA07 DA08 DA09	PA PA01 PA02 PA03 PA04	PA05 PA07 PA08 PA09 PA10	PA11 PA12 PA13 PA14 PA15	
						ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
1	PUMP ASM: FUEL															
(A)	894241-1792		9404-		1	A B C E	I J	N					K			
(A)	894425-7511		9404-		1			M						R S		
(A)	894241-1792		9404-9603		1			L					L			
(B)	897149-1820		9604-		1	D	F	L O		X Y	A D	E G	L M		T U V W X	
(B)	897036-8241		9404-		1		G				C	F H I	M	O		
(B)	897036-8241	C	9404-9807		1				P Q T	U						
(B)	897183-0130		9808-		1				P Q R S T	U V W						
(A)	894241-1792		9404-9611		1						B					
(B)	897149-1820		9612-		1						B					
(B)	894241-1792		9607-9706		1									P		
(B)	897149-1820		9707-		1									P Q		
9	BOLT; FUEL PUMP															
	028080-6120		9404-		2				P Q R S T	U V W	C	F H I				M6X12 FLANGE
36	HOSE; FUEL PUMP TO CARB															
	897111-5712		9404-		1				P Q R S T	U V W	C	F H I				
37	CLIP; FUEL HOSE															
	509707-0041		9404-		4				P Q R S T	U V W	C	F I				ID=14
	509707-0041		0010-		2							H				ID=14
178	HOSE; RUBBER															
	897111-5702		9404-		1				P Q R S T	U V W	C	F I				
214	BRACKET; FUEL PUMP															
	897111-5530		9404-		1				P Q R S T	U V W	C	F H I				


0-42 B FUEL PUMP AND PIPE

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
1	PUMP ASM: FUEL						
(B)	897149-1820		9604-		1	CDE G JK K PQR	
(B)	897036-8241	C	9404-9807		1	LM STU XY	
(B)	897183-0130		9808-		1	LM OPQRSTUVWXYZABCDEFG STUVWX	
(B)	897036-8241		9404-		1	AB F I	
(B)	515750-0570		9711-		1	H	
(B)	897149-1820		9604-0001		1	I	
(C)	897240-6750		0002-		1	IJ L	
(C)	897039-8340		0106-		1	MM	
3	REPAIR KIT; FUEL PUMP						
	894337-0220		0002-		1	IJ LMM	
9	BOLT; FUEL PUMP						
	028080-6120		9404-		2	F LM OPQRSTUVWXYZABC EFG STUVWX	M6X12 FLANGE
36	HOSE; FUEL PUMP TO CARB						
	897111-5712		9404-		1	F LM OPQRST V X B STUVWX	
	897166-4820		9404-		1	U W YZA C EFG	
37	CLIP; FUEL HOSE						
	509707-0041		9404-		4	F LM PQRSTUVWXYZABC EFG STUV X	ID=14
	509707-0041		9404-		2	O W	ID=14
178	HOSE; RUBBER						
	897111-5702		9404-		1	F LM PQRSTUVWXYZABC EFG STUV X	
214	BRACKET; FUEL PUMP						
	897111-5530		9404-		1	F LM OPQRST V X B STUVWX	
	897166-4750		9404-		1	U W YZA C EFG	

MEMO

0-50	OIL COOLER AND OIL FILTER
FIG-NO.	

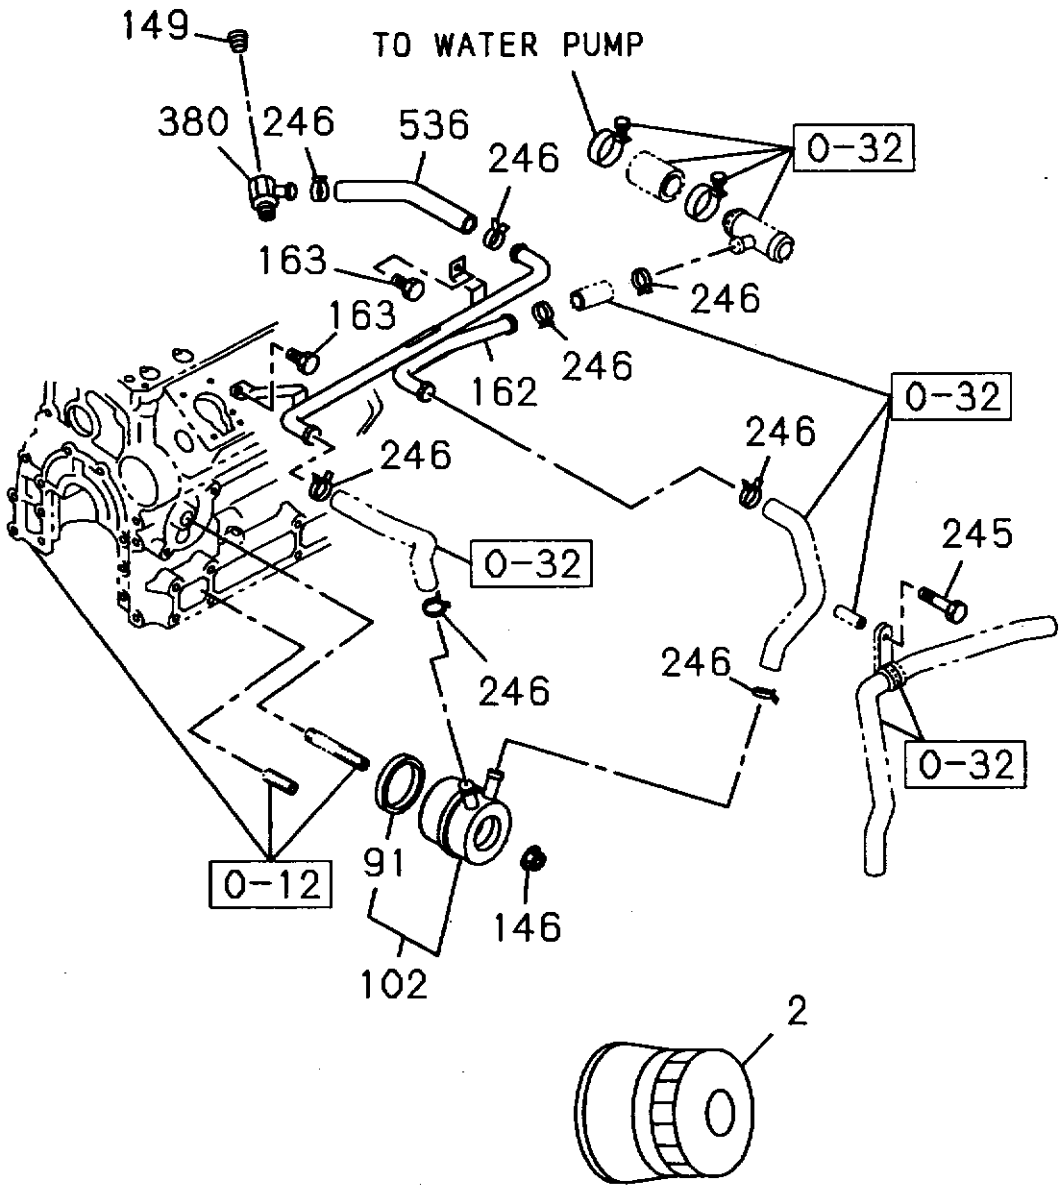

050A0150798

OIL COOLER AND OIL FILTER

0-50 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
2	ELEMENT; OIL FILTER	894456-7412		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
91	GASKET; OIL COOLER	894370-8280		9404-		1	Y L	
102	COOLER ASM; OIL	897102-3200		9404-		1	Y L	
146	NUT; STUD, OIL COOLER	894368-5010		9404-		1	Y L	
149	PLUG	509605-0050		9404-		1	L	
162	PIPE; WATER, OIL COOLER	897138-3311		9404-		1	L	
163	BOLT; WATER PIPE	028080-8120		9404-		2	L	M8X12 FLANGE
245	BOLT; CLIP, OIL COOLER HOSE	028080-8500		9404-		1	Y	M8X50 FLANGE
246	CLIP; OIL COOLER HOSE	894466-3820		9404-		4	Y	ID=22.7
		894466-3820		9404-		8	L	ID=22.7
380	CONNECTOR; WATER	897138-2951		9404-		1	L	
536	HOSE; RUBBER, CONN	897138-3460		9404-		1	L	


0-50 B OIL COOLER AND OIL FILTER

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
2	ELEMENT; OIL FILTER	894456-7412		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
91	GASKET; OIL COOLER	894370-8280		9404-		1	U W YZA CDEFG	
102	COOLER ASM; OIL	897102-3200		9404-		1	U W YZA CDEFG	
146	NUT; STUD, OIL COOLER	894368-5010		9404-		1	U W YZA CDEFG	
245	BOLT; CLIP, OIL COOLER HOSE	028080-8500		9404-		1	U W YZA CDEFG	M8X50 FLANGE
246	CLIP; OIL COOLER HOSE	894466-3820		9404-		4	U W YZA CDEFG	ID=22.7

MEMO

0-51	OIL PUMP AND OIL STRAINER
FIG-NO.	(NO.1)

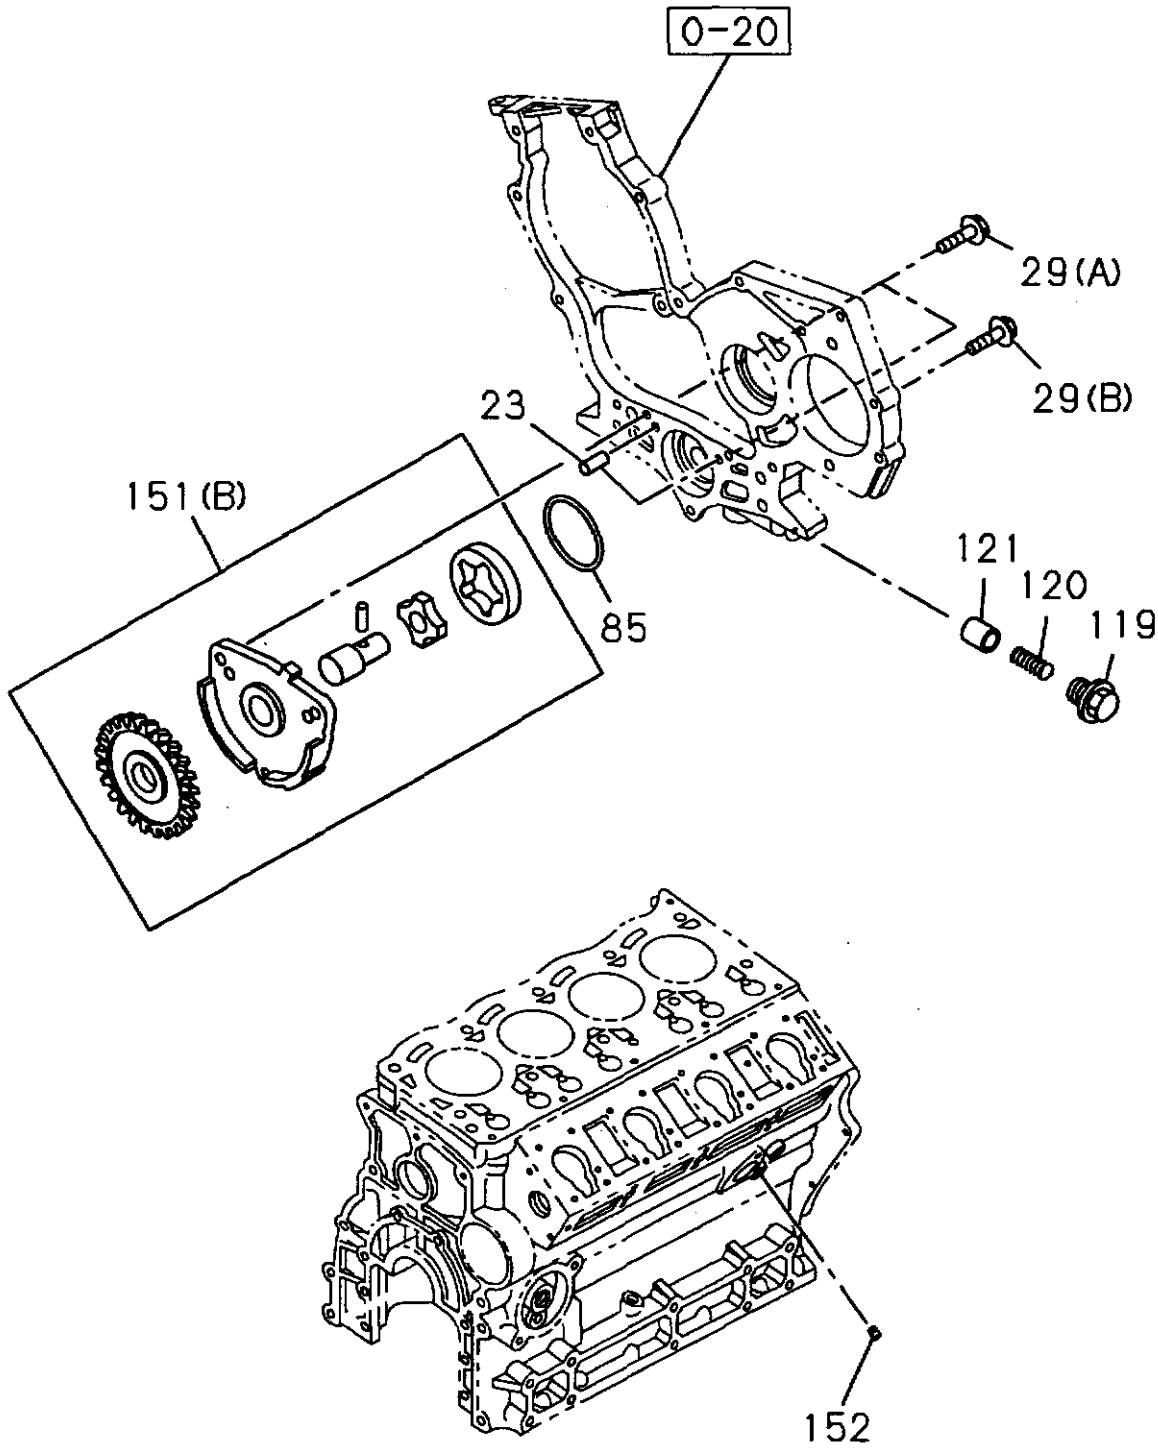


051A0150798

OIL PUMP AND OIL STRAINER

(NO.2)

0-51

FIG-NO.

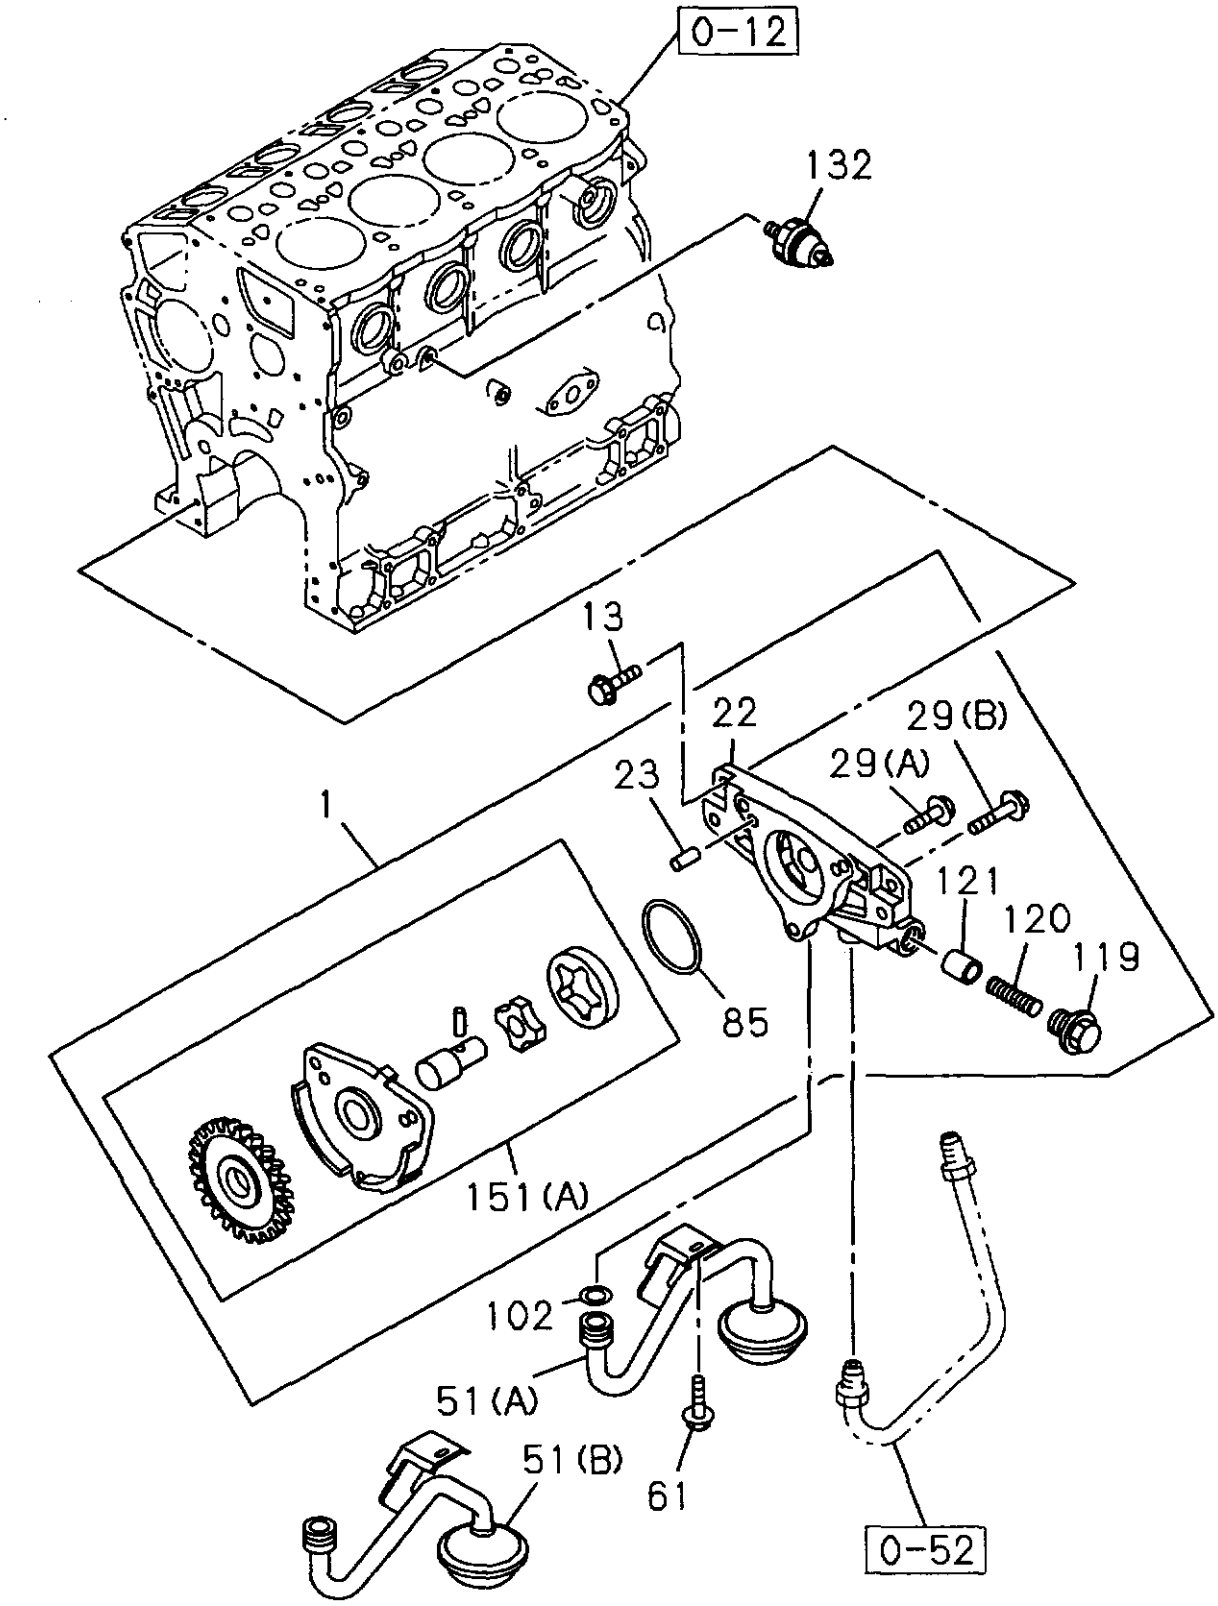

051A0250798

0-51 A OIL PUMP AND OIL STRAINER

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
1	PUMP ASM; OIL	897048-8095		9404-		1	C E F H K L M N O P Q R S T V X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	
13	BOLT; OIL PUMP TO C/BL	028080-8300		9404-		4	C E F H K L M N O P Q R S T V X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	M8X30 FLANGE
22	BODY ASM; OIL PUMP	897048-8104		9404-		1	C E F H K L M N O P Q R S T V X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	
23	PIN; BODY, OIL PUMP	908160-6160		9404-		2	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	
29	BOLT; OIL PUMP							
(A)		028080-6300		9404-		2	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	M6X30 FLANGE
(B)		028080-6500		9404-		1	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	M6X50 FLANGE
51	STRAINER & PIPE ASM; OIL							
(A)		897105-3390	C	9404-9410		1	H I K L	
(B)		897117-2990		9411-		1	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	
61	BOLT; OIL STRAINER	028080-8160		9404-		1	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	M8X16 FLANGE
85	GASKET; OIL PUMP	897109-6790		9404-		1	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	—ALSO INCLUDED IN GASKET SET (ENGINE)
102	GASKET; STRAINER	109623-4960		9404-		1	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	—ALSO INCLUDED IN GASKET SET (ENGINE)
119	PLUG; RELIEF VLV							
		894244-6550		9404-9411		1	H I K L	
		894104-6150		9412-		1	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	
120	SPRING; RELIEF VLV							
		894114-5120		9404-9411		1	H I K L	
		897113-3320		9412-		1	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	
121	VALVE; RELIEF, OIL PUMP	894235-5671		9404-		1	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	
132	SWITCH; OIL PRESSURE							
		182410-0082		9404-		1	A B C D E F H I J K L M N O K L M N O P Q R S T U V W X	
		982720-0690		9404-		1	G P Q R S T U V W C F G H I	
		582410-0361		9404-		1	Y A B E	
		582410-0361		9404-9804		1	D	
		982720-0690		9805-		1	D	
151	PUMP SUB ASM; OIL							
(A)		897044-8133		9404-		1	C E F H K L M N O P Q R S T V X Y Z A B C D E F G H I J K L M N O P Q R S T U V W X	ROTOR T=15
(B)		897083-5761		9404-		1	A B D G I J U W	ROTOR T=18
152	PLUG	109605-0500		9404-		3	X Z J	PT1/8

OIL PUMP AND OIL STRAINER

0-51 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
152	PLUG	109605-0500		9404-		2	Y	PT1/8


0-51 B OIL PUMP AND OIL STRAINER

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
1	PUMP ASM; OIL	897048-8095		9404-		1	ABCDEFGH JKLMNOPQRS UVW A CDE HIJKLMNOPQRST WX	
13	BOLT; OIL PUMP TO C/BL	028080-8300		9404-		4	ABCDEFGH JKLMNOPQRS UVW A CDE HIJKLMNOPQRST WX	M8X30 FLANGE
22	BODY ASM; OIL PUMP	897048-8104		9404-		1	ABCDEFGH JKLMNOPQRS UVW A CDE HIJKLMNOPQRST WX	
23	PIN; BODY,OIL PUMP	908160-6160		9404-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
29	BOLT; OIL PUMP							
(A)		028080-6300		9404-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M6X30 FLANGE
(B)		028080-6500		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M6X50 FLANGE
51	STRAINER & PIPE ASM; OIL							
(B)		897117-2990		9411-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
61	BOLT; OIL STRAINER	028080-8160		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M8X16 FLANGE
85	GASKET; OIL PUMP —ALSO INCLUDED IN GASKET SET(ENGINE)	897109-6790		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
102	GASKET; STRAINER —ALSO INCLUDED IN GASKET SET(ENGINE)	109623-4960		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
119	PLUG; RELIEF VLV	894104-6150		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
120	SPRING; RELIEF VLV	897113-3320		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
121	VALVE; RELIEF,OIL PUMP	894235-5671		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
132	SWITCH; OIL PRESSURE							
		182410-0082		9404-		1	ABCDEFGHIJK T X P R W	
		182410-0082		9404-9807		1	S UVW Y	
		982720-0690		9808-		1	LM O QRS UVW YZABCDEFG STUV X	
		582410-0361		9404-		1	IJK MN	
151	PUMP SUB ASM; OIL							
(A)		897044-8133		9404-		1	ABCDEFGH JKLMNOPQRS UVW A CDE HIJKLMNOPQRST WX	ROTOR T=15
(B)		897083-5761		9404-		1	I T XYZ B FG UV	ROTOR T=18
152	PLUG							
		109605-0500		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG	PT1/8
		109605-0500		9404-		2	HIJKLMNOPQRSTUVWX	PT1/8

MEMO

0-52	OIL AND VACUUM PIPING; ENGINE
FIG-NO.	(NO.1)

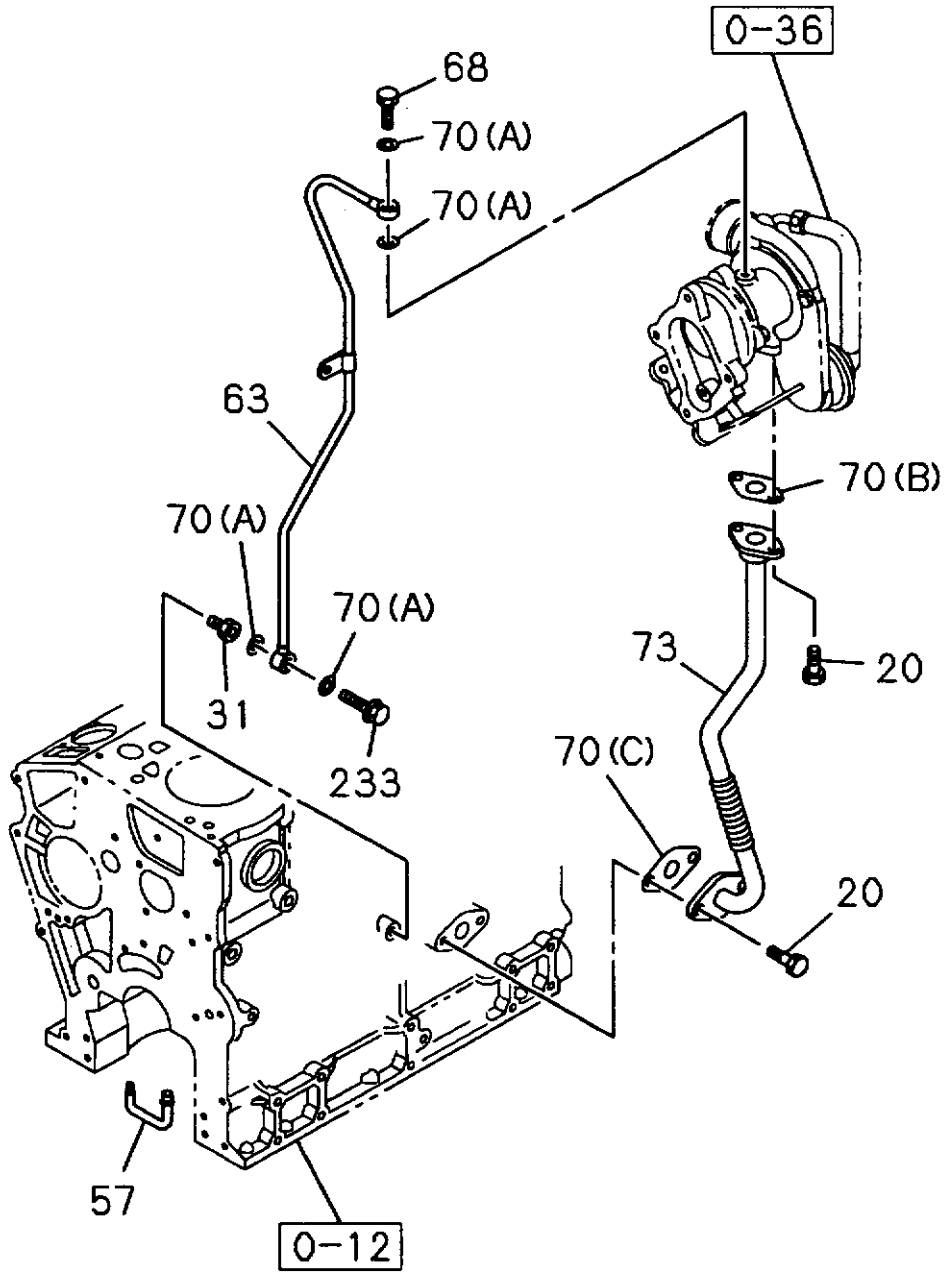


052A0150798

OIL AND VACUUM PIPING; ENGINE

(NO.2)

0-52

FIG-NO.

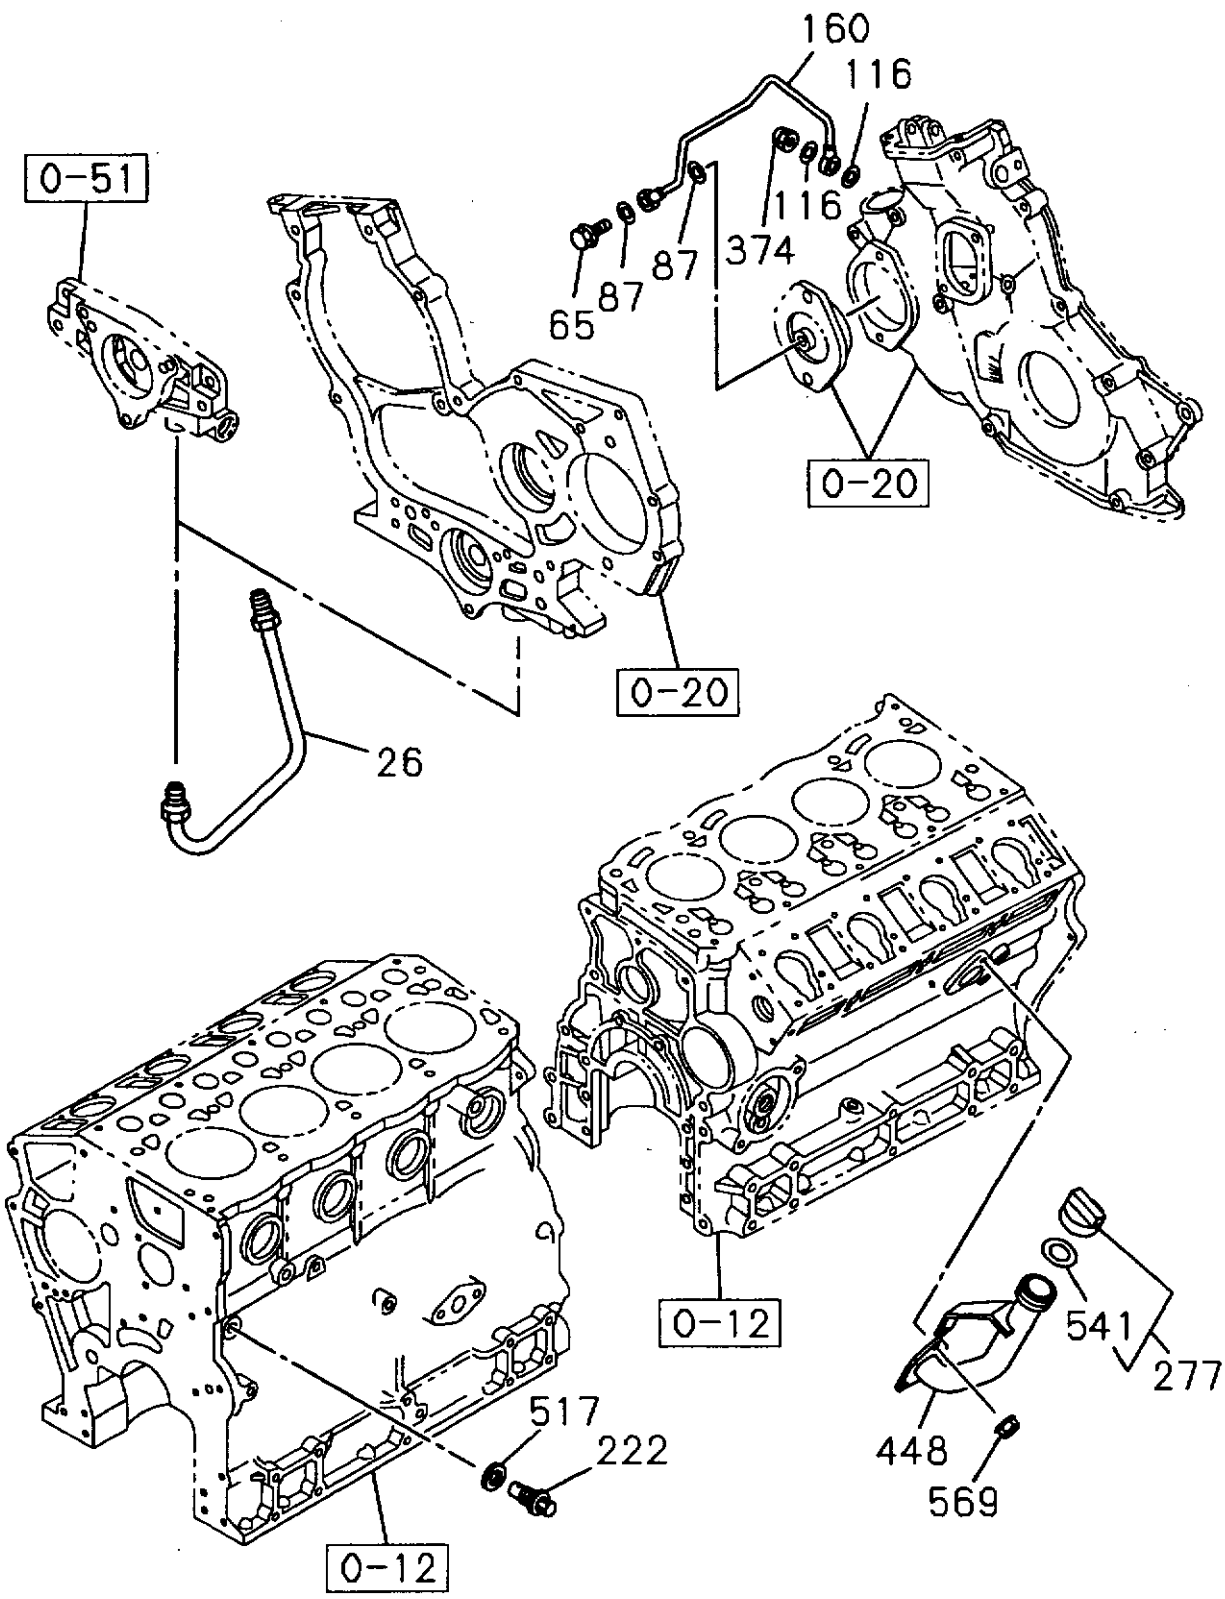

0-52 A OIL AND VACUUM PIPING; ENGINE

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 4LC1 4LE1	Remarks
20	BOLT; OIL PIPE TO TURBOCHARGER							
		028080-6160		9404-		4	HIJ	M6X16 FLANGE
26	PIPE; OIL, PUMP TO C/BL							
		897044-8430		9404-		1	ABCDEFGHIJKLMNOPQRSTUVW	
		897045-4000		9404-		1	XYZABCDEFGHIJKLMNOPQRSTUVWX	
31	NIPPLE; OIL PIPE							
		897084-9560		9404-		1	HIJ	
57	PIPE; OIL, OIL JET							
		897117-2670		9404-		4	HIJ	
		897102-3071		9404-		4	XY	
63	PIPE; OIL, TURBOCHARGER FEED							
		897084-0660		9404-		1	HIJ	
65	BOLT; JOINT, OIL PIPE							
		109675-0371		9404-		1	C EF MN T X	M8X18
68	BOLT; EYE, OIL PIPE, TURBOCHARGER SIDE							
		894155-1801		9404-		1	HIJ	M8X20
70	GASKET; OIL PIPE, TURBOCHARGER						—ALSO INCLUDED IN GASKET SET(ENGINE)	
(A)		909571-4080		9404-		4	HIJ	
(B)		894367-9780		9404-		1	HIJ	
(C)		894415-2390		9404-		1	HIJ	
73	PIPE ASM; OIL, TURBOCHARGER RETURN							
		897084-0670		9404-		1	HIJ	
87	GASKET; JOINT BOLT							
		909571-4080		9404-		2	C EF MN T X	ID=8.2 OD=14.0 T=1.0
116	GASKET; CAP NUT, OIL PIPE							
		909571-4080		9404-		2	C EF MN T X	ID=8.2 OD=14.0 T=1.0
160	PIPE; OIL, PARTIAL FILTER FEED							
		897162-7210		9404-		1	C F T	
		897134-5070	A	9404-9606		1	M	
		897146-2331		9607-		1	E MN X	
222	VALVE ASM; CHECK							
		897106-4150		9404-		1	HIJ XY	
233	BOLT; EYE							
		109675-2060		9404-		1	HIJ	
374	NUT; CAP, CONNECTOR							
		109984-1090	C	9404-9509		1	M	M8 FLANGE
		109984-1050		9510-		1	C EF MN T X	M8 FLANGE
517	GASKET; CHECK VLV						—ALSO INCLUDED IN GASKET SET(ENGINE)	
		909571-4160		9404-		1	HIJ XY	

OIL AND VACUUM PIPING; ENGINE


0-52 B
FIG-NO.

4LE1 / 4LE2

PPPPP PPPPP PPPPP PPPPP PPPPP PPPPP PPPCC CCCDD PPPPP PPPPP
AAAAA AAAAA AVVVV VVVWW WWWWW WWWWW WWWAA AAAAA AAAAW WWWWW
11112 22222 20000 00000 00000 00111 111 0 00000 0000 00000
67890 12345 61234 56712 34567 89012 347 1 23412 1231 23579
ABCDE FGHIJ KLMNO PQRST UVWXY ZABCD EFGHI JKLMN OPQRS TUVWX

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	Applicability	Remarks
26	PIPE; OIL,PUMP TO C/BL	897045-4000		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
57	PIPE; OIL,OIL JET	897102-3071		9404-		4	U W YZA CDEFG	
65	BOLT; JOINT,OIL PIPE	109675-0371		9404-		1	C E A	M8X18
87	GASKET; JOINT BOLT	909571-4080		9404-		2	C E A	ID=8.2 OD=14.0 T=1.0
116	GASKET; CAP NUT,OIL PIPE	909571-4080		9404-		2	C E A	ID=8.2 OD=14.0 T=1.0
160	PIPE; OIL,PARTIAL FILTER FEED	897146-2331		9404-		1	C E A	
222	VALVE ASM; CHECK	897106-4150		9404-		1	U W YZA CDEFG	
277	CAP; OIL FILLER	511750-0021		0106-		1	QR	
374	NUT; CAP,CONNECTOR	109984-1050		9510-		1	C E A	M8 FLANGE
448	FILLER; OIL	897314-9160		0106-		1	QR	
517	GASKET; CHECK VLV	909571-4160		9404-		1	—ALSO INCLUDED IN GASKET SET(ENGINE) U W YZA CDEFG	
541	GASKET; CAP, OIL FILLER	909920-6090		0106-		1	QR	
569	NUT; OIL FILLER	897137-8360		0106-		3	QR	

0-60	ENGINE ELECTRICAL CONTROL PARTS
FIG-NO.	(NO.1)

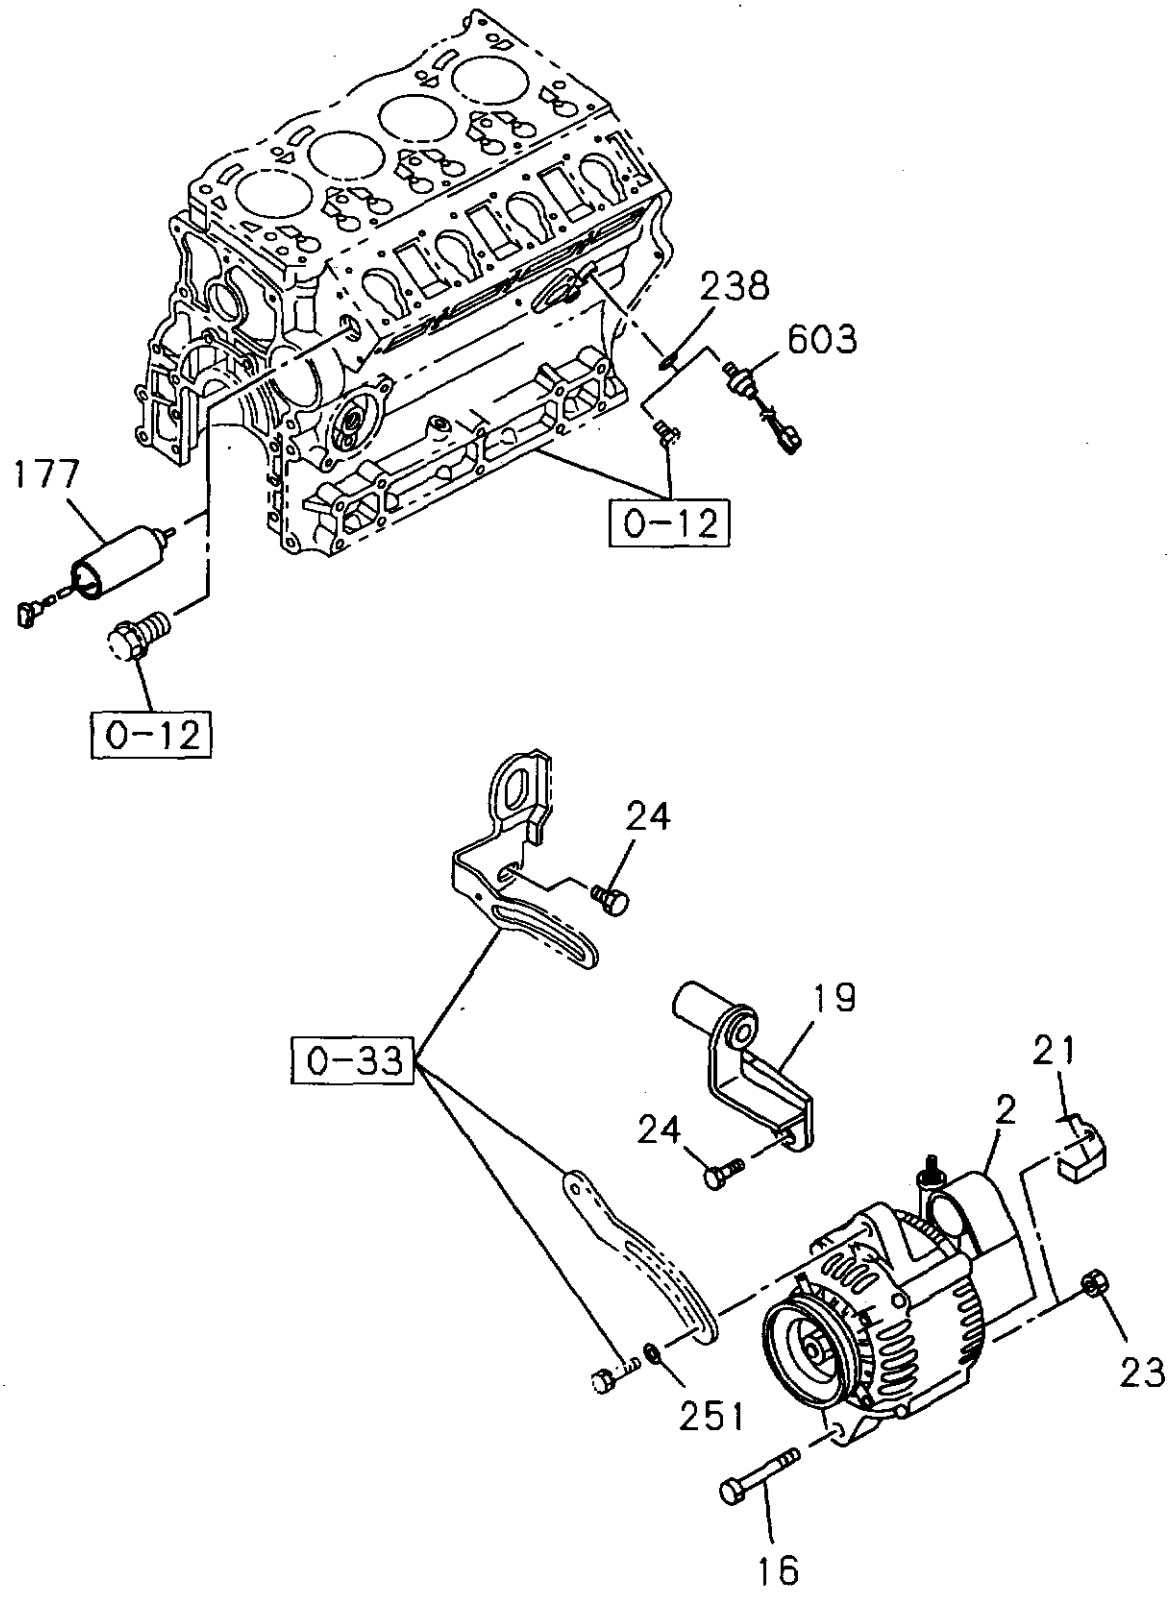


060A0150798

ENGINE ELECTRICAL CONTROL PARTS

(NO.2)

0-60

FIG-NO.

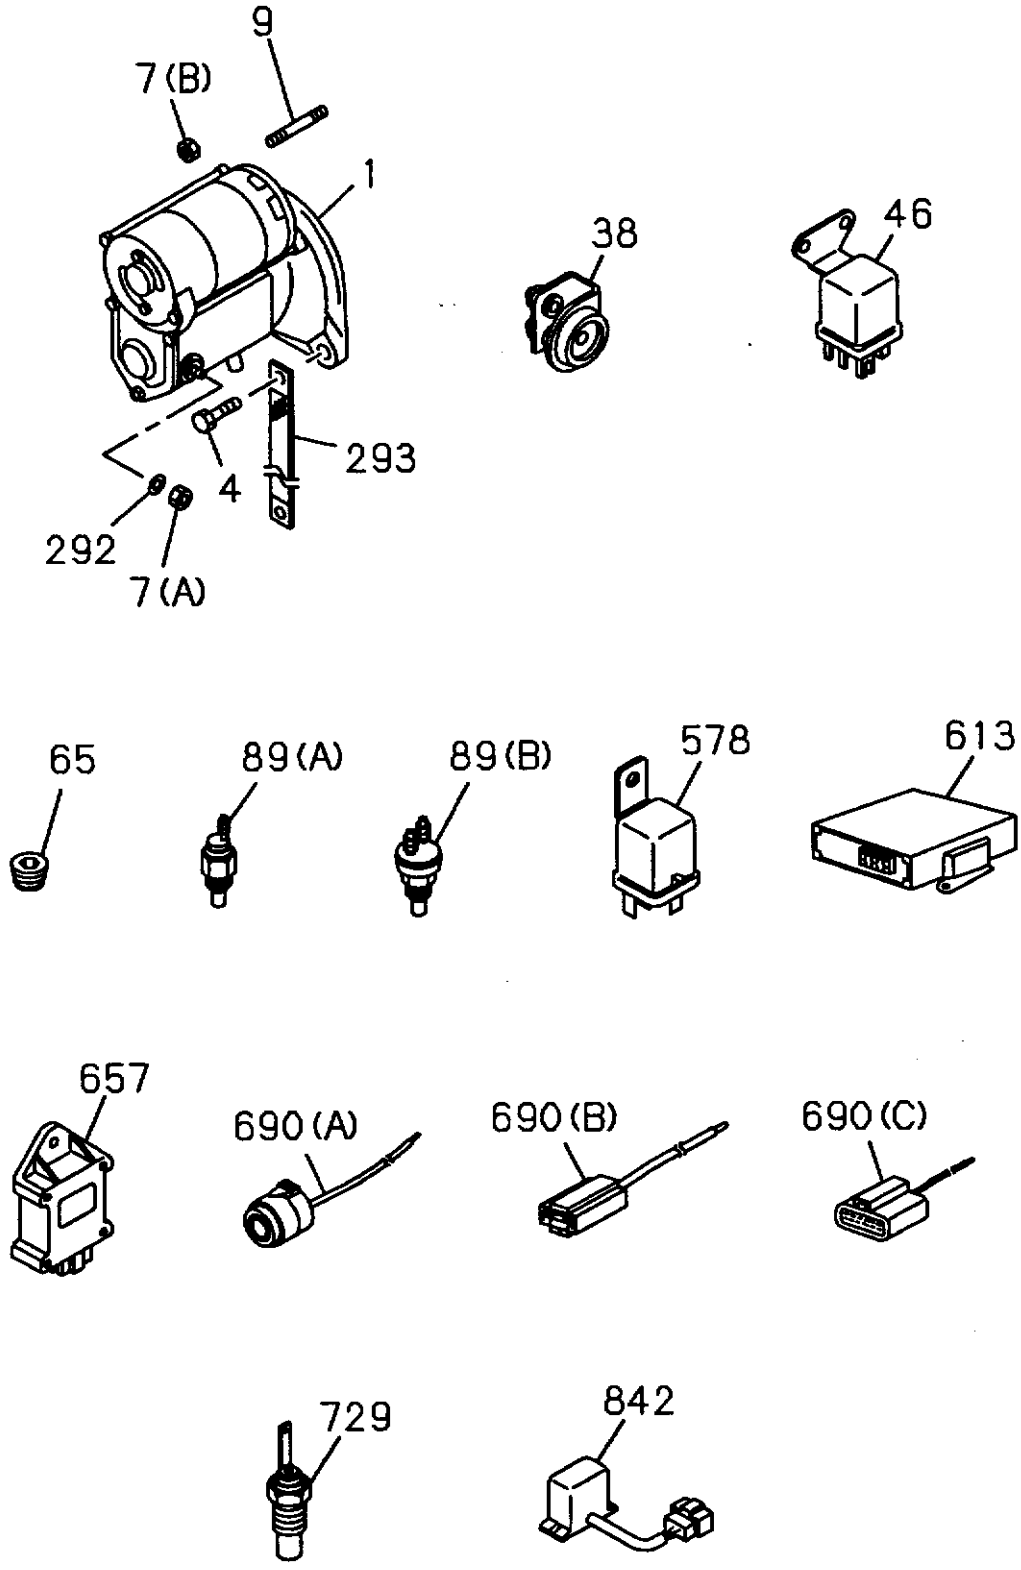

060A0250798

0-60 A ENGINE ELECTRICAL CONTROL PARTS

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 4LC1 4LE1	Remarks
							PPPPPPPTTTPPPPPPPPPPPPPPCCDDDDDDDDDDPPPPPPPPPPPPPPP AAAAAAAPPPAAAAAVVVWWWWWAAAAAAAAAAAAAAAAAAAAAAAAAAA 0000000AAA 0000000000 0 0000000000 0000000001111 1234567 00 1234123123451 1234567891 1234578901234 5 12 U 8 ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
1	STARTER ASM						—SEE FIG-NO 0-65 FOR COMPONENT.	
	897048-9673	9404-			1		AB GHIJKL NOPQRSTUVW	12V-1.4KW
	897135-3432	9404-9907			1		DE X BCDEFG	12V-1.8KW
	897112-8652	9908-			1		DE X BCDEFG	12V-2.0KW
	897107-5942	9404-			1		M S	24V-1.0KW
	897112-8652	9404-			1		C F HI NO T X	12V-2.0KW
	897135-3432	9404-			1		A	12V-1.8KW
	897128-7470	9404-			1		Y N PQ UVW	12V-2.0KW
	897112-8652	9404-9911			1		Z J	12V-2.0KW
	897128-7470	9912-			1		Z JK	12V-2.0KW
	581100-1662	C 9404-9603			1		L	12V-2.0KW
	897112-8652	9604-			1		L	12V-2.0KW
	897137-4781	9404-			1		R	24V-3.2KW
2	GENERATOR ASM						—SEE FIG-NO 0-66 FOR COMPONENT.	
	897048-9681	9404-0006			1		AB D GHIJKL O TUVWX JKLM PQ U W	12V-35A
	897225-1170	0007-			1		AB D GHI KL O TUVWX JKLM PQ U W	12V-35A
	897125-4260	9404-9910			1		C EF T V X	12V-60A
	897231-5010	9911-			1		C EF T V X	12V-60A
	897129-1750	9404-0004			1		M	24V-40A
	897233-4130	0005-			1		M	24V-40A
	897048-9701	9404-0009			1		N PQ S Z	12V-20A
	897226-8400	0010-			1		N PQRS Z	12V-20A
	897048-9701	9404-9910			1		Y A	12V-20A
	897048-9681	9911-0009			1		Y A	12V-35A
	897226-8400	0010-			1		Y A	12V-20A
	897048-9701	9404-0003			1		BCDEFG	12V-20A
	897248-2980	0004-			1		BCDEFG I	12V-20A
	897048-9681	9404-9812			1		NO	12V-35A
	897222-4880	9901-9905			1		NO	12V-35A
	897225-1170	9906-			1		NO	12V-35A
	897180-0040	9404-9911			1		R	24V-15A
	897233-4110	9912-			1		R	24V-15A
4	BOLT; STARTER							
	028181-2300	9404-			2		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M12X30 FLANGE
7	NUT; STARTER							
(A)	909111-4080	9404-			1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M8
16	BOLT; GEN							
	028081-0700	9404-			1		ABCDEFGHIJKL NOPQRSTUVWXYZABCDEFGHIJKLMNOPQ TUVWX	M10X70 FLANGE
	028086-0130	9404-			1		M R	M10X130
19	BRACKET; GEN							
	897129-1760	9404-			1		M	
	897185-4180	9404-			1		R	
21	BRACKET; GEN							
	897180-4661	9404-			1		P	
	897180-4661	9404-9802			1		Q	
	897188-1400	9803-			1		Q UVW	
23	NUT; GEN							
	091150-2100	9404-			1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNO R T X	M10 FLANGE

ENGINE ELECTRICAL CONTROL PARTS

0-60 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	I T C	APPLIED DATE	L R	Q T Y	4LB1 / 4LC1 / 4LE1	Remarks
24	BOLT; GEN BRKT							
		028080-6120		9404-		1	B J	M6X12 FLANGE
		028681-0200		9404-		1	M R	M10X20 FLANGE
38	RESISTOR; CONT, GLOW PLUG							
		897183-9480		9404-		1	N PQRSTUVW B E H	
46	RELAY; GLOW PLUG							
		894248-1610		9404-		1	AB DE IJ L O Y ABCDEFG I KLMNOPQ UVW	
		894258-0140		9404-		1	M R	
65	PLUG; SENSOR HOLE							
		109605-0500		9404-		1	C FGH K N PQRSTUVWX Z B E H J S T X	PT1/8
89	SWITCH; OVER HEAT WARNING							
(A)		897125-6001		9404-		1	G N R VW M X	
(B)		582450-0130		9404-		1	PQ	
(A)		894403-2410	C	9404-9805		1	AB	
(A)		894167-9410		9806-0009		1	AB E	
(A)		897302-2030		0010-		1	AB E	
(A)		894403-2410		9404-9805		1	D	
(B)		894132-3310		9806-		1	D	
(A)		894403-2410		9404-9802		1	Y	
(A)		897204-5501		9803-		1	Y	
(A)		897125-6001		9404-9712		1	K	
(B)		894132-3310		9801-		1	K	
(B)		894132-3310		9404-		1	C FGHI NOPQRS UVW	
177	SOLENOID ASM; ENG STOP							
		897183-0141		9404-		1	ABCDEFG OPQRSTUVW EFGHI	
		897070-1303		9404-9711		1	L N T X	
		897183-0141		9712-		1	L N T X	
		897124-1171	C	9404-9806		1	M RS	
		897209-1151		9807-		1	M RS	
		897115-2890		9506-		1	IJ	
		897115-2890	C	9404-9812		1	Y AB D K	
		897183-0141		9901-		1	Y AB D K	
		897070-1303		9404-9806		1	L	
		897183-0141		9807-		1	L	
		897115-2890	C	9501-9710		1	C M	
		897070-1303		9711-9806		1	C M	
		897183-0141		9807-		1	C M	
		897115-2890	C	9404-9708		1	NO	
		897070-1303		9709-9711		1	NOPQ	
		897183-0141		9712-		1	NOPQ UVW	
238	GASKET; PICKUP						—ALSO INCLUDED IN GASKET SET(ENGINE)	
		909572-0140		9404-		1	AB DE GHIJKLMNOPQRSTUVWX ZAB DE GH JKLMNOPQRS UVW	ID=14.2
		909571-4140		9404-		2	C F Y C F I T X	ID=14.2 OD=20.0
251	SPACER; GEN							
		894174-5370		9404-		1	C EF T V X	ID=8 T=3
		909160-6100		9404-		1	M R	ID=10 T=2.0

0-60 A ENGINE ELECTRICAL CONTROL PARTS

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 A B C D E	F G H I J	4LC1 K L M N O	P Q R S T	4LE1 U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	Remarks
292	WASHER: LK, STARTER															
	909150-5080		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	ID=8
293	CABLE: STARTER EARTH															
	982931-5110		9404-		1	CDE	FG	KLMNO					L N	O S	T X	
578	RELAY: CHARGE WARNING															
	894232-2250		9907-		1						B	E				
603	SENSOR: TACHO															
	894126-8220		9404-		1	CDE	FG	M		Y	ABCD	FG I		S	T X	
613	CONTROL UNIT: ENG															
	897160-6220		9811-		1					Y						
	897116-3140	C	9404-9512		1						A					
	897146-1050		9601-0002		1						A					
	897160-6220		0003-		1						A					
	897146-1050		9601-		1						B					
657	TIMER: GLOW PLUG															
	897040-5010		9404-		1	AB DE	IJ	L O			CD	FG I	KLMN	OPQ	UVW	
	897073-6430		9404-		1			M						R		
690	CONNECTOR															
(A)	897091-5400		9404-		1		G		T	UVW						
(B)	897105-4300		9404-		1				PQRS							
(C)	897105-4310		9404-		1				PQRS							
729	SENSOR: QOS THERMO															
	897063-3010		9404-		1	AB DE	IJ	LM O		Y	A CD	FG I	KLMN	OPQR	UVW	
842	TIMER ASM															
	897111-9621		9404-		1				PQ		B D	EFGHI				

ENGINE ELECTRICAL CONTROL PARTS

0-60 B

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
1	STARTER ASM						—SEE FIG-NO 0-65 FOR COMPONENT.	
		897112-8652		9404-		1	ABC EF I PQR AB DEFGHIJ LMNOPQRS TUVWX	12V-2.0KW
		897128-7470		9404-		1	D GH JK K	12V-2.0KW
		897135-3432		9404-9911		1	LMNO STUVWXYZ C	12V-1.8KW
		897112-8652		9912-		1	LMNO STUVWXYZ C	12V-2.0KW
2	GENERATOR ASM						—SEE FIG-NO 0-66 FOR COMPONENT.	
		897048-9681		9404-9812		1	AB	12V-35A
		897222-4880		9901-9901		1	AB	12V-35A
		897225-1170		9902-		1	AB	12V-35A
		897125-4260		9404-0009		1	C ZABCD	12V-35A
		897231-5010		0010-		1	C ZABCD R	12V-35A
		897048-9681		9404-0009		1	O Q STUVWXY EFG	12V-35A
		897225-1170		0010-		1	D FGHIJK O Q STUVWXY EFG OPQ STUVWX	12V-35A
		897125-4260		9911-		1	E	12V-60A
		897048-9701		9404-0009		1	LMN P R	12V-20A
		897226-8400		0010-		1	LMN P R HIJKLMN	12V-20A
4	BOLT; STARTER							
		028181-2300		9404-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOP S UVWX	M12X30 FLANGE
		028181-2300		0106-		1	QR	M12X30 FLANGE
		028181-2350		9607-		2	T	M12X35 FLANGE
7	NUT; STARTER							
(A)	909111-4080			9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRS UVWX	M8
(B)	091150-2120			9607-		2	T	M12 FLANGE
(B)	091150-1120			0106-		1	QR	M12 FLANGE
9	STUD; STARTER							
		994411-2330		0106-		1	QR	
16	BOLT; GEN							
		028081-0700		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRS TUVWX	M10X70 FLANGE
21	BRACKET; GEN							
		897188-1400		9404-		1	D JK PQR	
23	NUT; GEN							
		091150-2100		9404-		1	ABC EFGHI LMNOPQRSTUVWXYZABCDEFGHIJKLMNO S TUVWX	M10 FLANGE
38	RESISTOR; CONT. GLOW PLUG							
		894173-9480		9404-		1	F I L NO ST UVW YZ C EF Q STUVW	
46	RELAY; GLOW PLUG							
		894248-1610		9404-		1	AB DE GH JK Q X AB K MN PQR	
65	PLUG; SENSOR HOLE							
		109605-0500		9404-		1	C F I LMNOP RSTUVW YZ C EFGH O STU WX	PT1/8
89	SWITCH; OVER HEAT WARNING							
(B)	894132-3310			9404-		1	AB F	
(A)	897125-6001			9404-		1	C GHI O QR T VWX ABCDEFG VW	
(B)	894132-3310			9801-		1	D JK QR	

0-60 B ENGINE ELECTRICAL CONTROL PARTS

FIG-NO.


KEY NO. PART NAME

Model columns (4LE1 / 4LE2): A PA16, B PA17, C PA18, D PA19, E PA20, F PA21, G PA22, H PA23, I PA24, J PA25, K PA26, L PV01, M PV02, N PV03, O PV04, P PV05, Q PV06, R PV07, S PW01, T PW02, U PW03, V PW04, W PW05, X PW06, Y PW07, Z PW08, A PW09, B PW10, C PW11, D PW12, E PW13, F PW14, G PW17, H CA, I CA01, J CA02, K CA03, L CA04, M DA01, N DA02, O PA, P PA01, Q PA02, R PA03, S PW01, T PW02, U PW03, V PW05, W PW07, X PW09

KEY NO.	PART NUMBER	ITC	APPLIED DATE	LR	QTY	ABCDEFGHIJKLMNOPQRSTUVWXYZ	ABCDEFGHIJKLMNOPQRSTUVWX	Remarks
89	SWITCH; OVER HEAT WARNING							
(B)	582450-0130		9404-		1	L M		
(A)	894403-2410		9404-		1	N		
(A)	894167-9410		9708-0009		1		I J	
(A)	897302-2030		0010-		1		I J M N	
(B)	897204-5501		9711-		1		K	
(B)	582450-0330		0104-		1		X	
177	SOLENOID ASM; ENG STOP							
	897070-1303		9811-9812		1	C		
	897183-0141		9901-		1	C		
	897115-2890	C	9404-9804		1	L M T U X		
	897183-0141		9805-		1	A B D E F G H I J K L M N O P Q R S T U V W X Y Z	A B C D E F G I J K L M N P Q R S T U V W X	
238	GASKET; PICKUP					—ALSO INCLUDED IN GASKET SET(ENGINE)		
	909572-0140		9404-		1	A B D J K L M N O P Q R S T U V W X Y Z	A B C D E F G H I J L M N O P R S T U V W X	ID=14.2
	909571-4140		9701-		2	C E F G H I	K	ID=14.2 OD=20.0
251	SPACER; GEN							
	894174-5370		9404-		1	C E Z	A B C D R	ID=8 T=3
292	WASHER; LK, STARTER							
	909150-5080		9404-		1	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z	A B C D E F G H I J K L M N O P Q R S T U V W X	ID=8
293	CABLE; STARTER EARTH							
	982931-5110		9404-		1	A B C E F I	P	
578	RELAY; CHARGE WARNING							
	894232-2250		9710-		1		I	
603	SENSOR; TACHO							
	894126-8220		9404-		1	C E F G H I	K M N	
613	CONTROL UNIT; ENG							
	897160-6220		9710-0105		1		K	
	897319-9860		0106-		1		K M N	
657	TIMER; GLOW PLUG							
	897040-5010		9404-		1	A B D G H J K Q X	A B D	
	897040-5020		9907-		1		P Q R	
	897246-5100		0001-		1		I J L	
	897105-7900		0001-		1	E		
690	CONNECTOR							
(A)	897091-5400		9404-		1	F I O Q S T U V W X Y Z	A B C E F G S T U V W X	
(B)	897105-4300		9404-		1	L N P R		
(C)	897105-4310		9404-		1	L N P R		
729	SENSOR; QOS THERMO							
	897063-3010		9404-		1	A B D E G H J K Q X	A B D I J K L M N P Q R	
842	TIMER ASM							
	897111-9621		9404-		1	L M	I	

MEMO

0-61	BATTERY AND BATTERY CABLE
FIG-NO.	

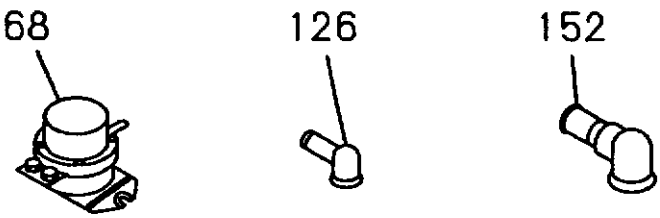

061A0150798

BATTERY AND BATTERY CABLE

0-61 A
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1: PA01 PA02 PA03 PA04 PA05 (A B C D E)	PA06 PA07 TPA TPA01 TPA02 (F G H I J)	4LC1: PA PA01 PA02 PA03UG PA04 (K L M N O)	PV01 PV02 PV03 PW01 PW02 (P Q R S T)	PW03 PW04 PW05 CA CA01 (U V W X Y)	4LE1: DA DA01 DA02 DA03 DA04 (Z A B C D)	DA05 DA06 DA07 DA08 DA09 (E F G H I)	PA PA01 PA02 PA03 PA04 (J K L M N)	PA05 PA07 PA08 PA09 PA10 (O P Q R S)	PA11 PA12 PA13 PA14 PA15 (T U V W X)	Remarks
126	CAP; TERMINAL, AC GEN															
	982951-3250		9404-		1	C	F	M							T X	
152	CAP; TERMINAL, STARTER															
	982951-3320	,	9404-		1	C	F	M							T X	

0-61 B BATTERY AND BATTERY CABLE

FIG-NO.


KEY NO. | PART NAME

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1: PA16 PA17 PA18 PA19 PA20 (A B C D E)	PA21 PA22 PA23 PA24 PA25 (F G H I J)	PA26 PV01 PV02 PV03 PV04 (K L M N O)	PV05 PV06 PV07 PW01 PW02 (P Q R S T)	PW03 PW04 PW05 PW06 PW07 (U V W X Y)	PW08 PW09 PW10 PW11 PW12 (Z A B C D)	PW13 PW14 PW17 CA CA01 (E F G H I)	4LE2: CA02 CA03 CA04 DA01 DA02 (J K L M N)	PA PA01 PA02 PA03 PW01 (O P Q R S)	PW02 PW03 PW05 PW07 PW09 (T U V W X)	Remarks
68	RELAY; BATTERY															
	897026-1600		9404-		1	E										
126	CAP; TERMINAL, AC GEN															
	982951-3250		9404-		1	C										
152	CAP; TERMINAL, STARTER															
	982951-3320		9404-		1	C										

MEMO


0-65	STARTER
FIG-NO.	(NO.1)

ASM
8-97048-967-*
8-97107-594-*
8-97112-865-*
8-97135-343-*

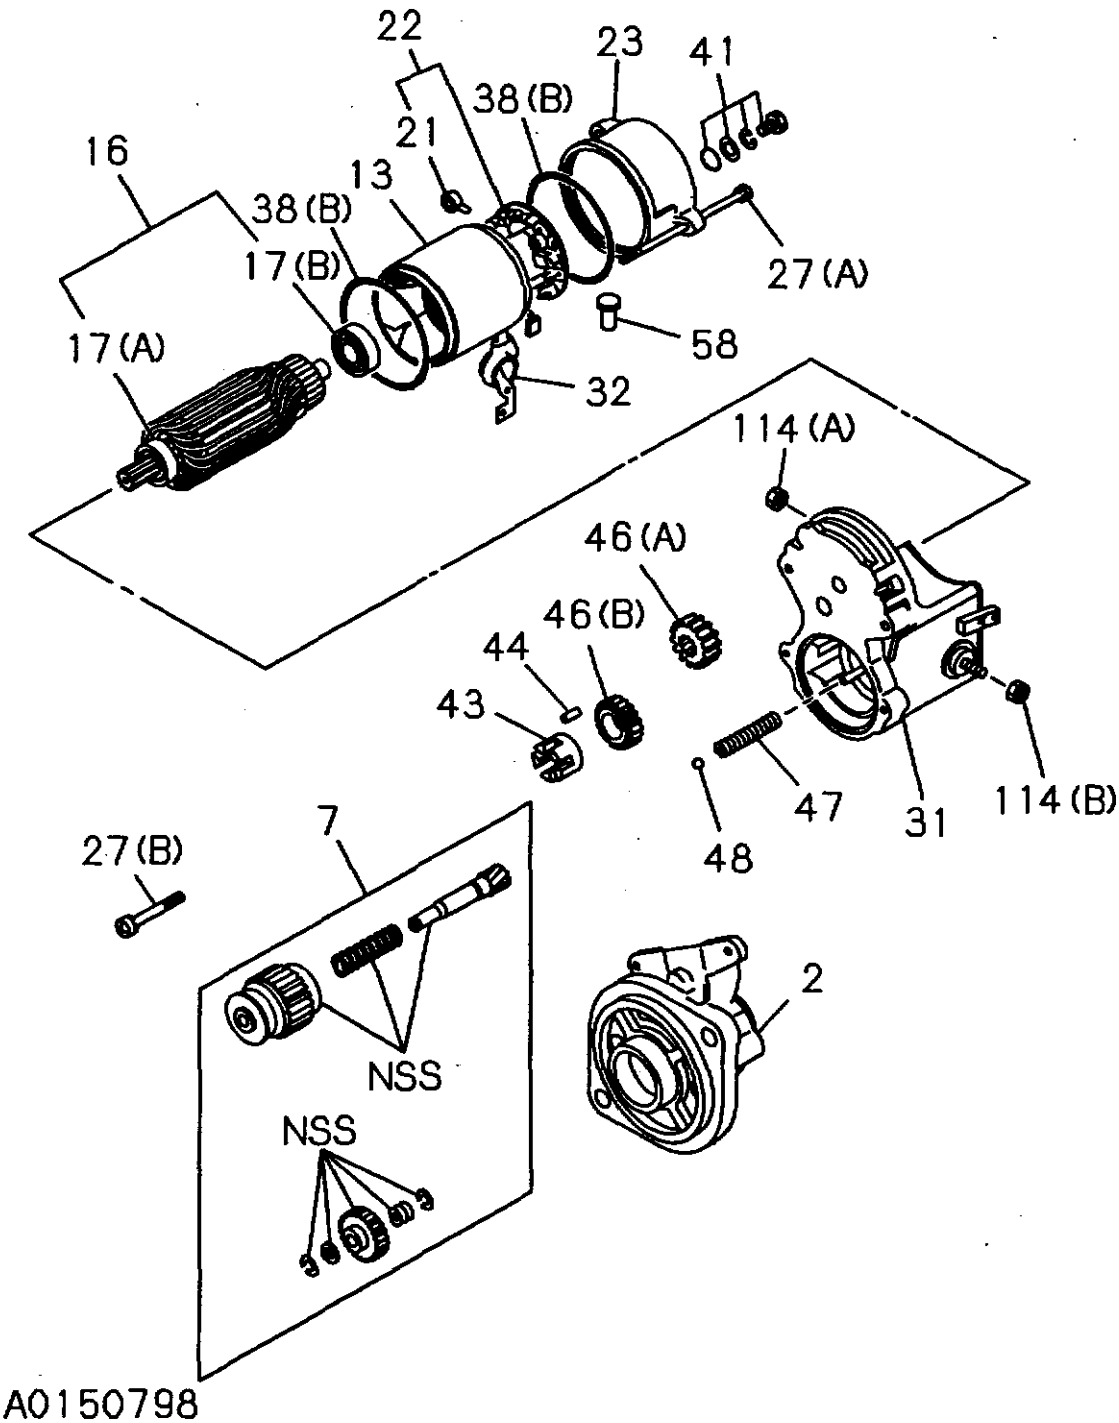


STARTER
(NO.2)

0-65
FIG-NO.

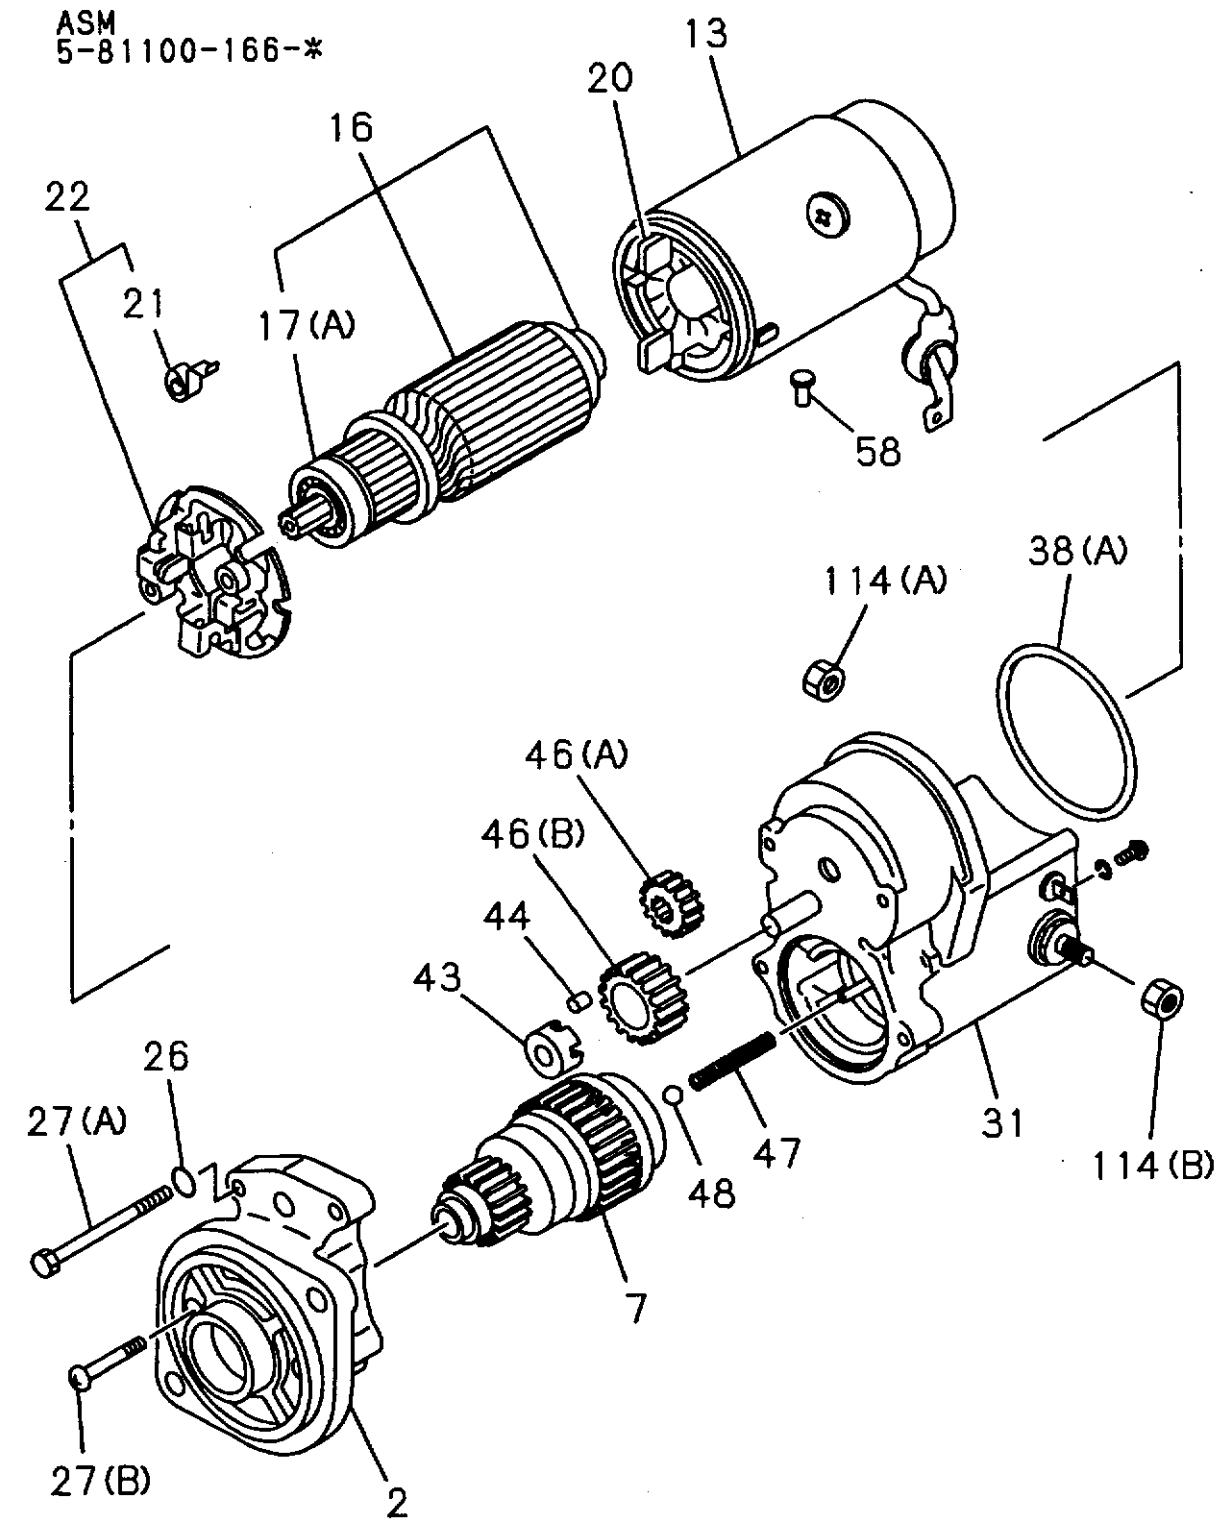


065A0250798

0-65	STARTER
FIG-NO.	(NO.3)

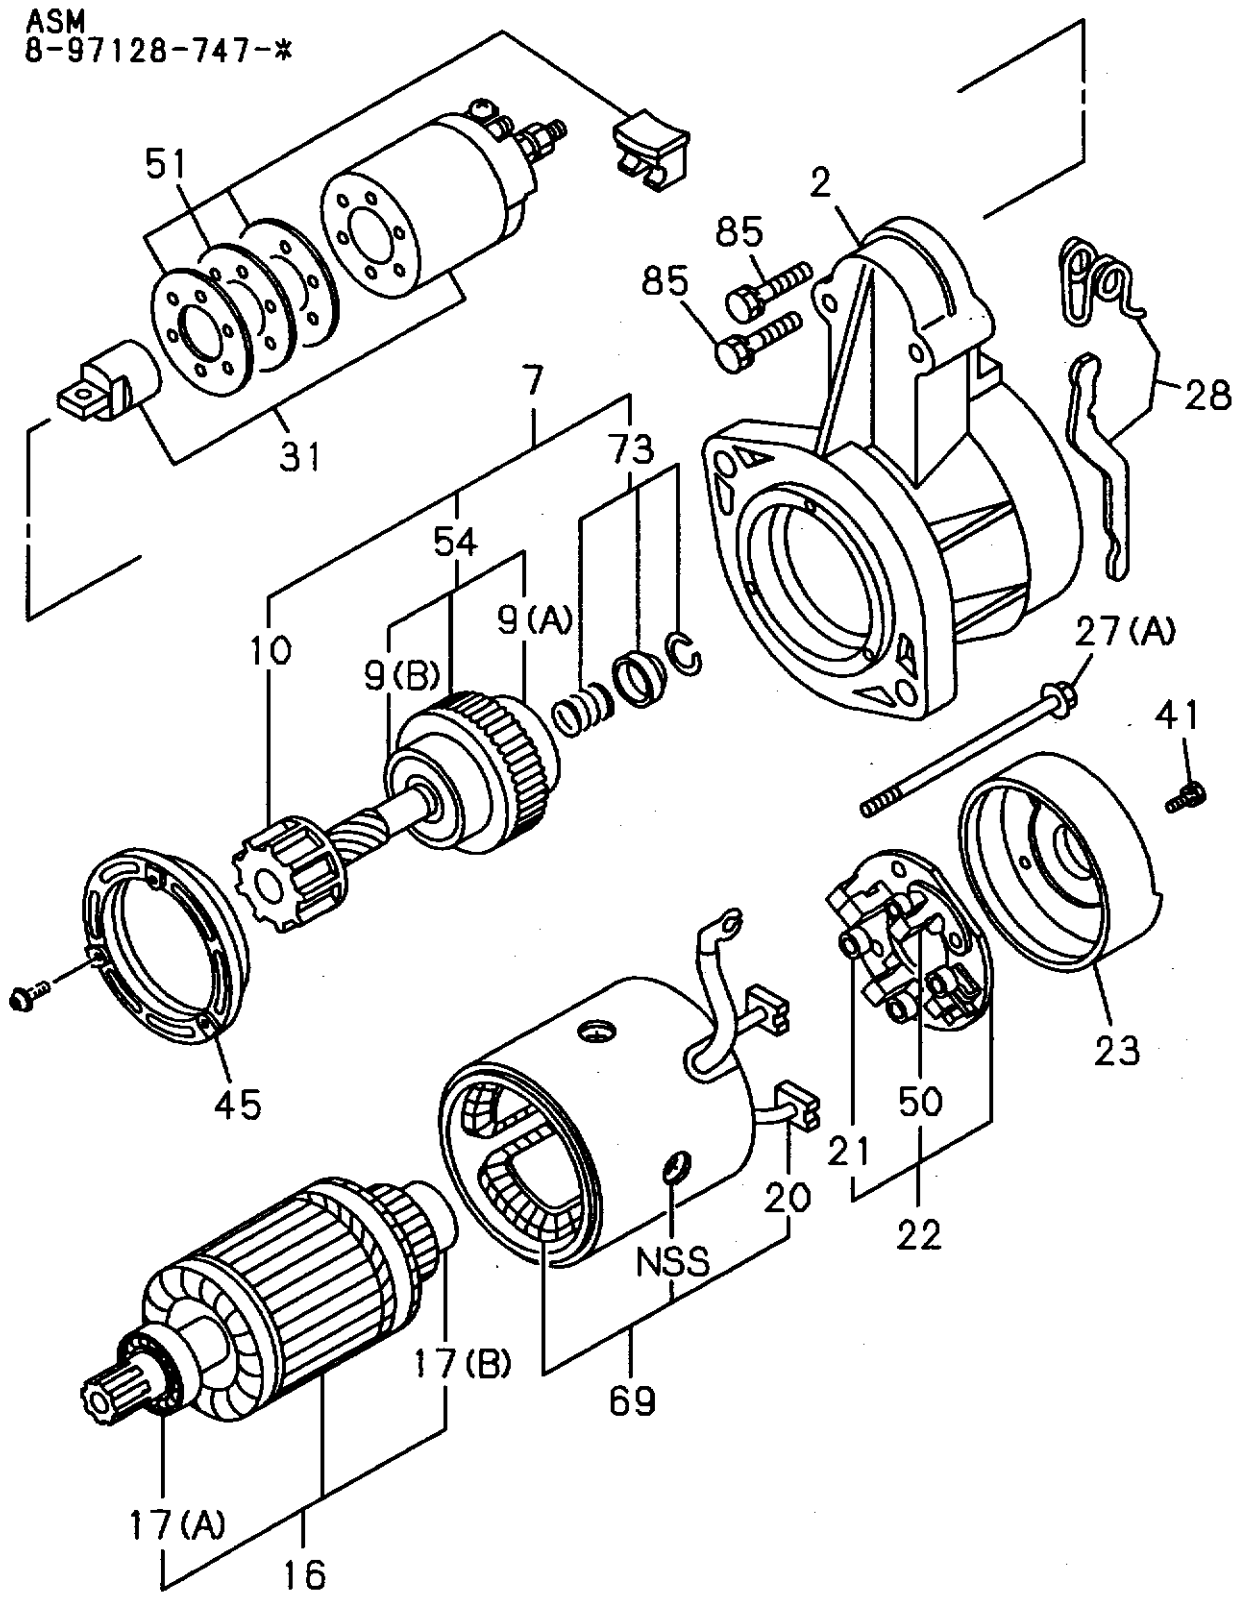

STARTER
(NO.4)

0-65
FIG-NO.

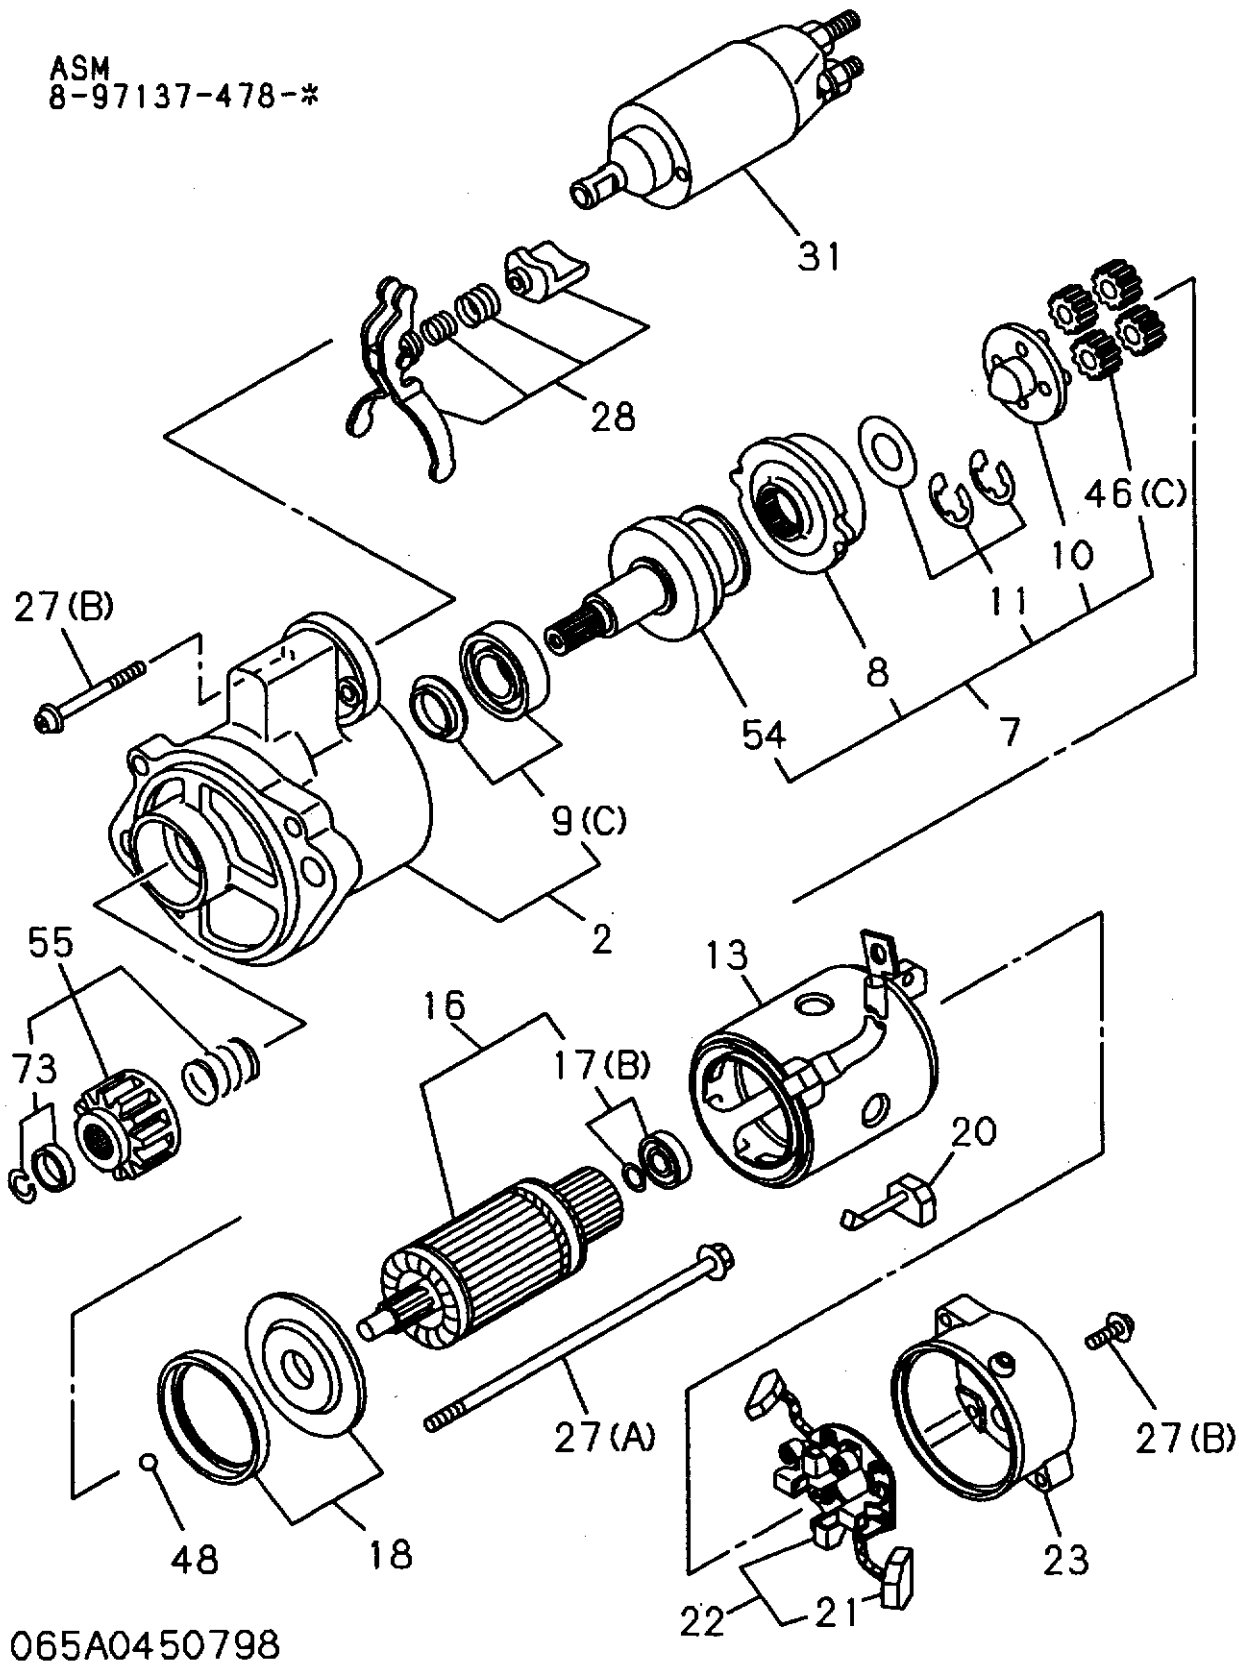

0-65 STARTER

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	5888888 8999999 1777777 1011111 0401233 0872857 1958734 6696447 6745738 2322021 ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	Remarks
2	CASE; PINION, STARTER							
		581113-0360		9404-		1	A	
		897078-6520		9404-		1	B	
		897078-6480		9404-		1	C	
		897112-8710		9404-		1	D F	
		897130-1870		9404-		1	E	
		897210-9160		9404-		1	G	
7	CLUTCH ASM; PINION, STARTER							
		897130-1910		9404-		1	E	
		897116-4820		9404-		1	G	
		581124-0031		9404-		1	A C	
		897078-6530		9404-		1	B	
		897112-8700		9404-		1	D F	
8	BRACKET; CENTER STARTER							
		897116-4850		9404-		1	G	
9	BEARING; GEAR SHAFT STARTER							
(A)		894228-4480		9404-		1	E	
(B)		894228-4490		9404-		1	E	
(C)		897116-4810		9404-		1	G	
10	SHAFT; GEAR STARTER							
		897130-1890		9404-		1	E	
		897116-4830		9404-		1	G	
11	WASHER; GEAR SHAFT STARTER							
		897116-4840		9404-		1	G	
13	YOKE; STARTER							
		581111-0100		9404-		1	A	
		894377-2540		9404-9503		1	B	
		897130-2580		9504-		1	B	
		897112-7340		9404-		1	C	
		897135-4970		9404-		1	D	
		897130-1950		9404-		1	E	
		897136-9090		9404-		1	F	
		897210-9180		9404-		1	G	
16	ARMATURE; STARTER							
		581121-0290		9404-		1	A	
		894377-2530		9404-		1	B	
		897112-7350		9404-		1	C	
		897112-8690		9404-		1	D	
		897113-2930		9404-		1	E	
		897136-9080		9404-		1	F	
		897116-5080		9404-9505		1	G	
		897231-2800		9906-		1	G	
17	BEARING; ARMATURE, STARTER							
(A)		509800-0810		9404-		1	A	

STARTER

0-65
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	58888888 89999999 17777777 10111111 04012333 08728557 19587347 66964477 67457388 23220221 ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	Remarks
17	BEARING; ARMATURE, STARTER						
(A)	894377-2400		9404-		1	B D F	
(A)	897112-7390		9404-		1	C	
(A)	894228-4360		9404-		1	E	
(B)	894228-4370		9404-		1	E	
(B)	894377-2410		9404-		1	B	
(B)	509800-0400		9404-		1	C	
(B)	897112-9540		9404-		1	D F	
(B)	897116-4910		9404-9905		1	G	
(B)	181129-8370		9906-		1	G	
18	WASHER; THRUST, ARMATURE, STARTER						
	897116-4890		9404-		1	G	
20	BRUSH; (+), STARTER						
	581116-0400		9404-		2	A	
	897130-1940		9404-		2	E	
	897116-5100		9404-		2	G	
21	SPRING; BRUSH HOLDER STARTER						
	581117-0150		9404-		4	A	
	894377-2440		9404-9506		4	B	
	581177-0070		9507-		4	B C	
	897112-8800		9404-		4	D F	
	894242-0640		9404-		4	E	
	897116-5160		9404-		4	G	
22	HOLDER; BRUSH STARTER						
	581118-0210		9404-		1	A	
	894377-2490		9404-		1	B	
	897112-7370		9404-		1	C	
	897112-8730		9404-		1	D F	
	897130-1920		9404-		1	E	
	897116-5110		9404-		1	G	
23	COVER; RR COVER STARTER						
	897088-0720		9404-		1	B	
	897112-7380		9404-		1	C	
	897112-8750		9404-		1	D F	
	897130-1930		9404-		1	E	
	897210-9170		9404-		1	G	
26	SEAL; THROUGH BOLT STARTER						
	581129-2110		9404-		2	A	
27	BOLT; THROUGH, STARTER						
(A)	894167-4330		9404-		2	A	
(A)	897041-4220		9404-		2	B	
(A)	581129-1830		9404-		2	C	
(A)	897112-9570		9404-		2	D	

0-65 STARTER

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	5888888 8999999 1777777 1011111 0401233 0872857 1958734 6696447 6745738 2322021 ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	Remarks
27	BOLT; THROUGH, STARTER							
(A)		897113-2970		9404-		2	E	
(A)		897136-9100		9404-		2	F	
(A)		897116-5140		9404-		1	G	
(B)		894167-4340		9404-		2	A	
(B)		894377-2430		9404-		2	B	
(B)		581129-1820		9404-		2	C	
(B)		897112-8810		9404-		2	D F	
28	LEVER; SHIFT, STARTER							
		897130-1860		9404-		1	E	
		897116-4920		9404-		1	G	
31	SWITCH; ENGAGE STARTER							
		581151-0401		9404-		1	A	
		897078-6510		9404-9503		1	B	
		897130-2570		9504-		1	B	
		897112-7360		9404-		1	C	
		897112-8720		9404-		1	D F	
		897130-1880		9404-		1	E	
		897116-4940		9404-		1	G	
32	COVER; RUBBER, STARTER							
		897088-0730		9404-		1	B C	
		581119-0290		9404-		1	D F	
38	GASKET; RR COVER, STARTER							
(A)		581129-2100		9404-		1	A	
(B)		894170-2140		9404-		2	B D F	
41	SCREW; RR COVER, STARTER							
		894170-2160		9504-9607		2	B	
		897125-8530		9608-		2	B	
		581129-1810		9404-		2	C	
	A	897112-8830		9404-9607		2	D F	
		897142-9030		9608-		2	D F	
		897113-2910		9404-		2	E	
		897116-4950		9404-		1	G	
43	RETAINER; PINION STARTER							
		581129-1000		9404-		1	A C	
		894377-2460		9404-		1	B D F	
44	ROLLER; PINION STARTER							
		581129-0990		9404-		5	A B C D F	
45	RETAINER; BEARING, STARTER							
		894435-5700		9404-		1	E	
46	GEAR; CLU STARTER							
(A)		581123-0100		9404-		1	A	


STARTER

0-65
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	58888888 89999999 17777777 10111111 04012333 08728857 19587344 66964477 67457388 23220221 ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	Remarks
46	GEAR; CLU STARTER						
(A)	897112-8790		9404-		1	B D F	
(B)	581123-0110		9404-		1	A C	
(B)	897078-6490		9404-		1	B D F	
(C)	897116-4900		9404-		4	G	
47	SPRING; PINION STARTER						
	581129-0960		9404-		1	A C	
	894377-2450		9404-		1	B D F	
48	BALL; PINION, STARTER						
	581129-0920		9404-		1	ABCD F	
	897116-5150		9404-		1	G	
50	BRUSH; (-), STARTER						
	897130-1940		9404-		2	E	
51	COVER SET; DUST ENGAGE SW STARTER						
	897130-1850		9404-		1	E	
54	CLUTCH; PINION, STARTER						
	897130-1900		9404-		1	E	
	897116-4880		9404-		1	G	
55	PINION; CLU, STARTER						
	897137-6060		9404-		1	G	
58	PIPE; DRAIN RR COVER STARTER						
	181129-6770		9404-		2	A	
	897041-4210		9404-9607		1	B D F	
	894377-2390		9608-		1	B D F	
73	STOPPER SET; PINION						
	894228-4500		9404-		1	E	
	894475-6880		9404-		1	G	
85	BOLT; ENGAGE SW FIX, STARTER						
	897117-1070		9404-		2	E	
114	NUT; TERMINAL						
(A)	909110-5080		9404-		1	A	
(A)	894109-7630		9404-		1	B D F	
(B)	509400-0420		9404-		1	A C	
(B)	894377-2380		9404-		1	BCD F	

0-66	GENERATOR
FIG-NO.	(NO.1)

ASM
8-97048-968-*
8-97125-426-*
8-97222-488-*
8-97225-117-*
8-97231-501-*

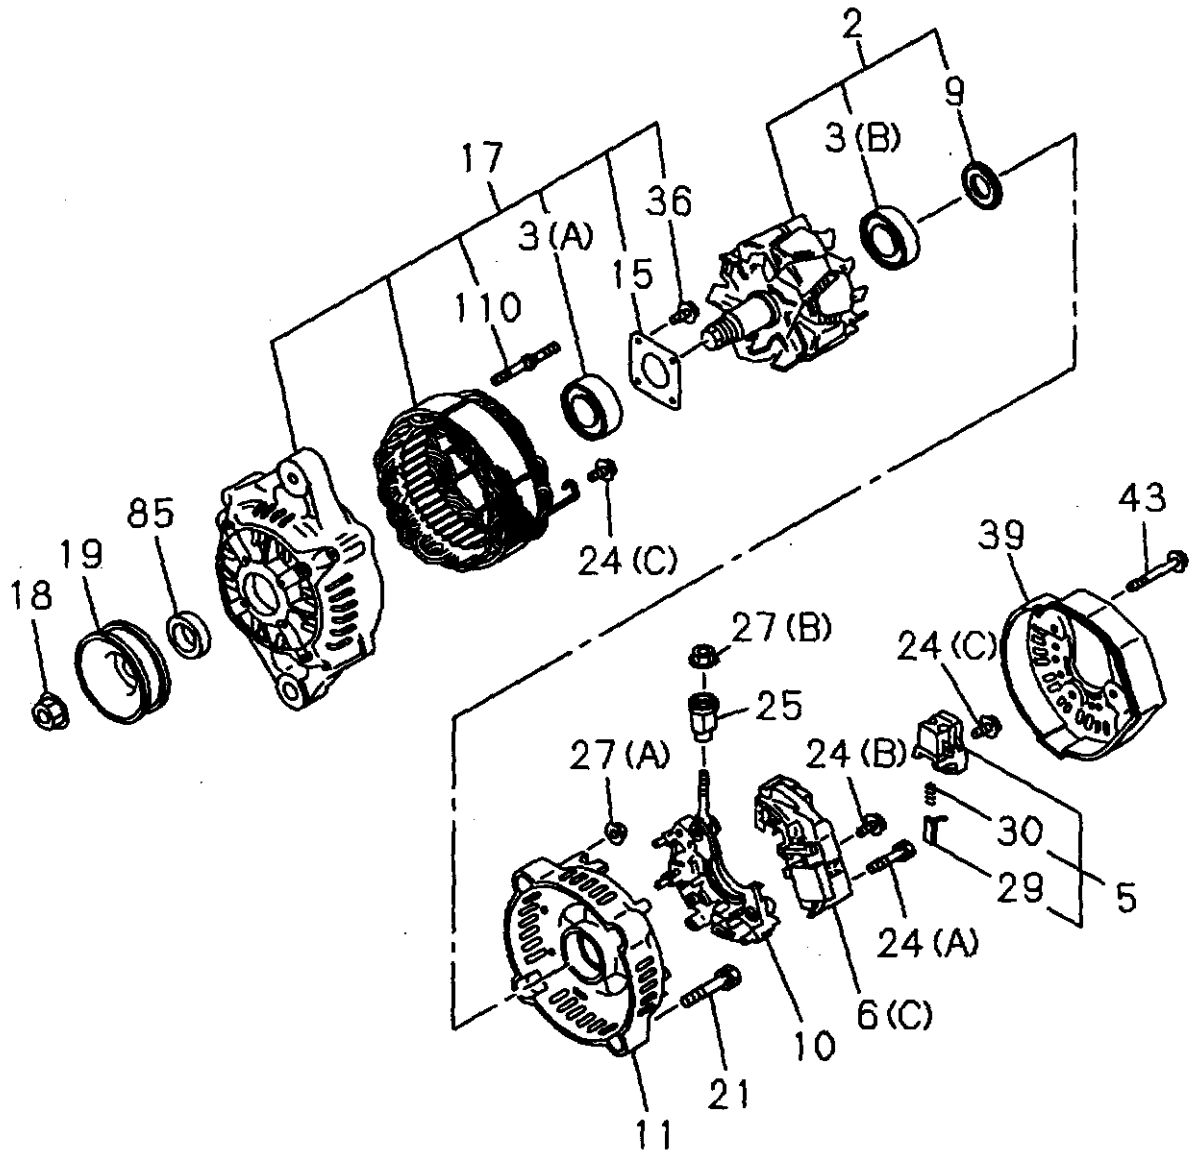


066A0150798

GENERATOR
(NO.2)

0-66
FIG-NO.


ASM
8-97129-175-*

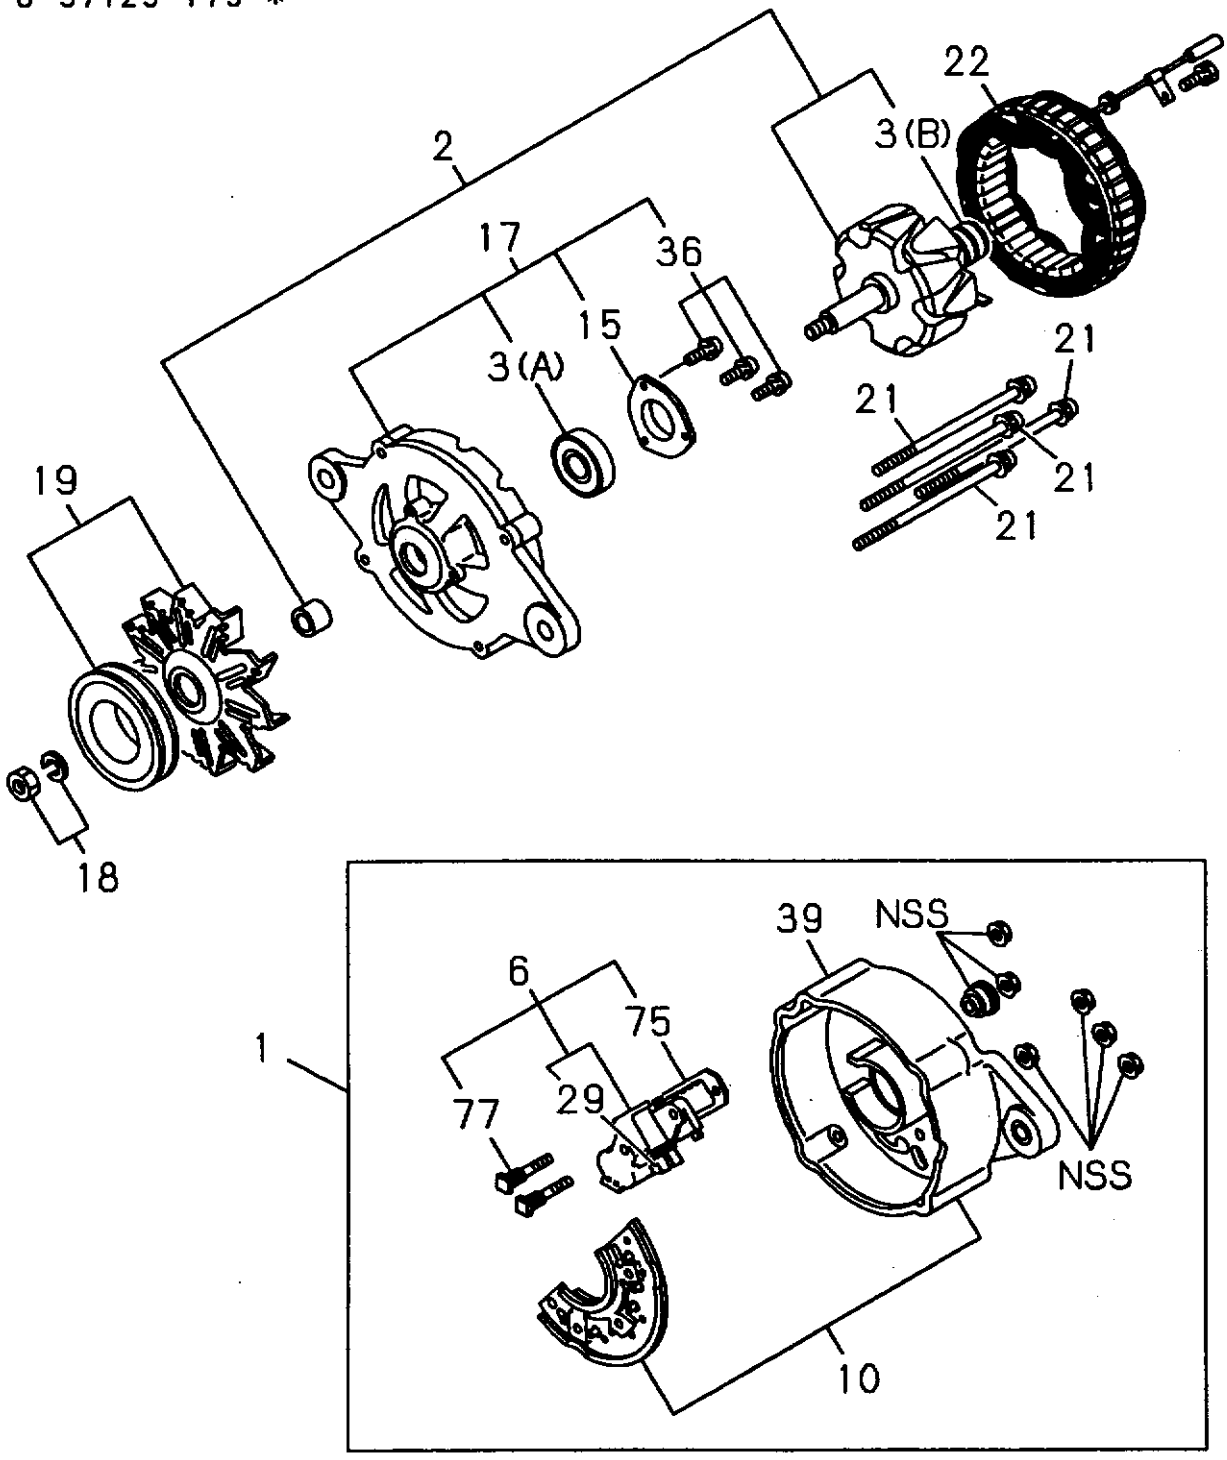

066A0250798

0-66	GENERATOR
FIG-NO.	(NO.3)

ASM
8-97048-970-*
8-97226-840-*
8-97248-298-*

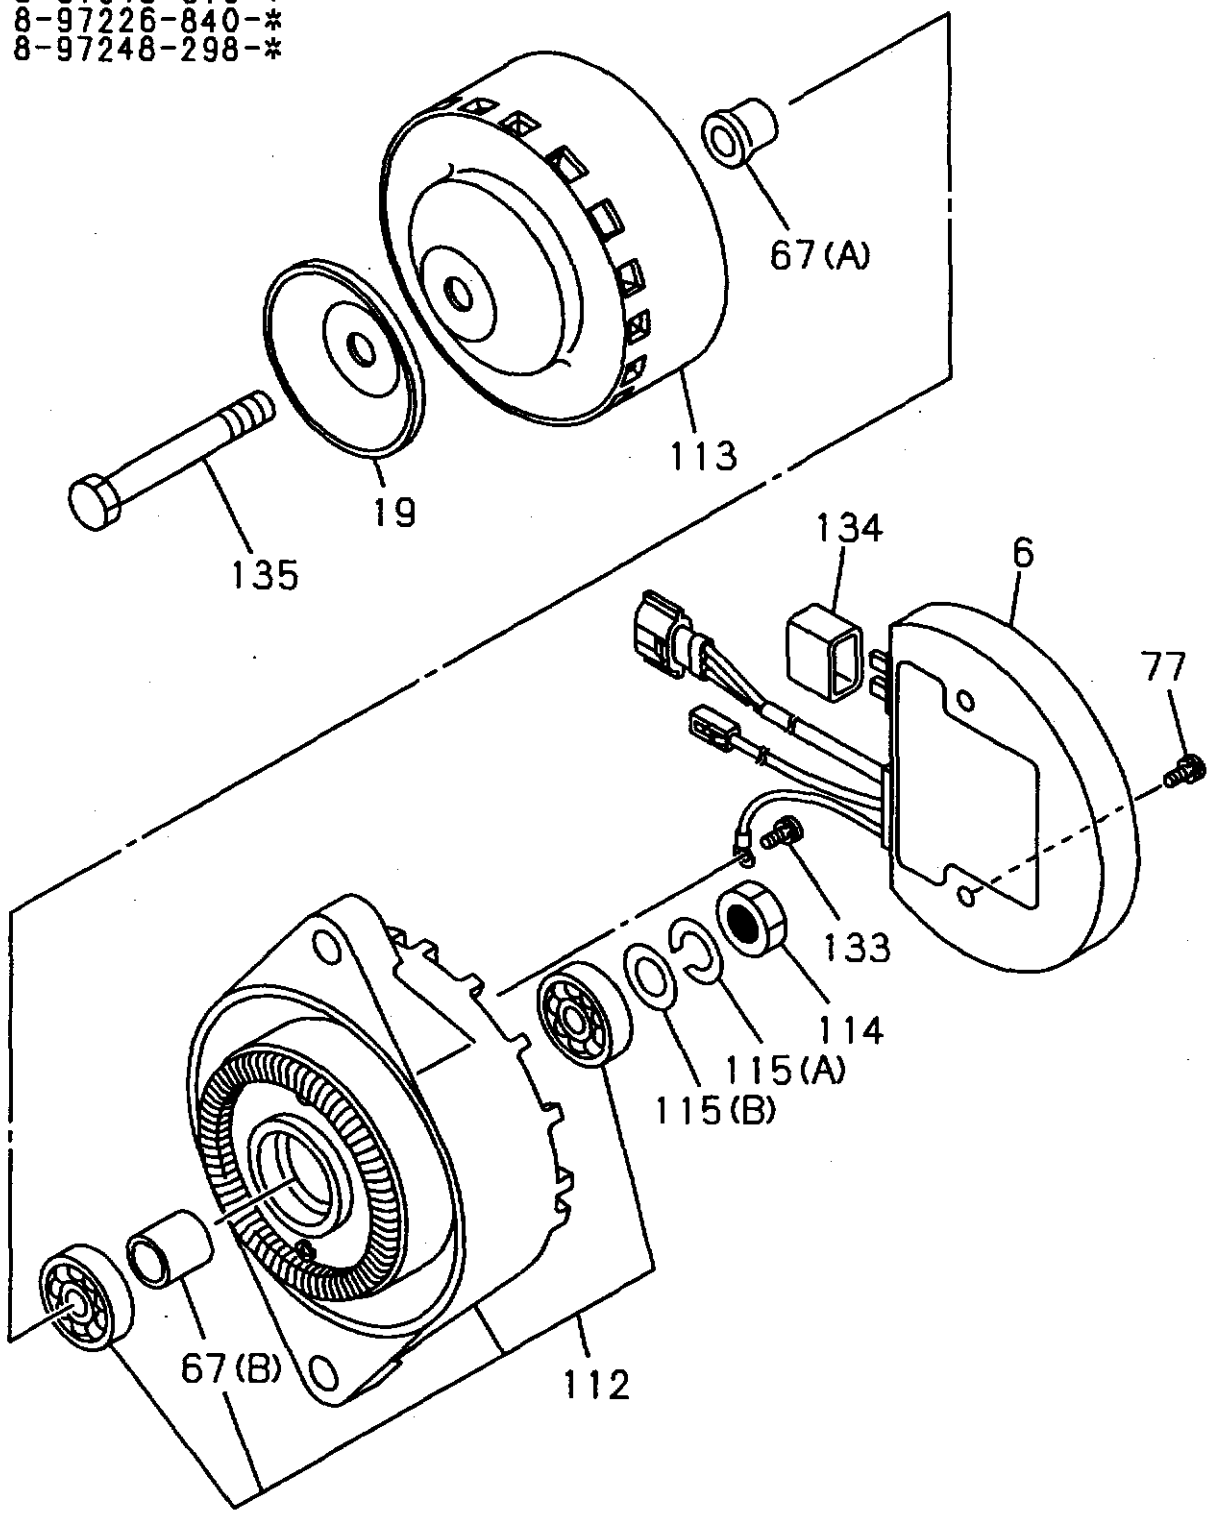

066A0350798


GENERATOR

(NO.4)

0-66

FIG-NO.

ASM
8-97180-004-*
8-97233-411-*
8-97233-413-*

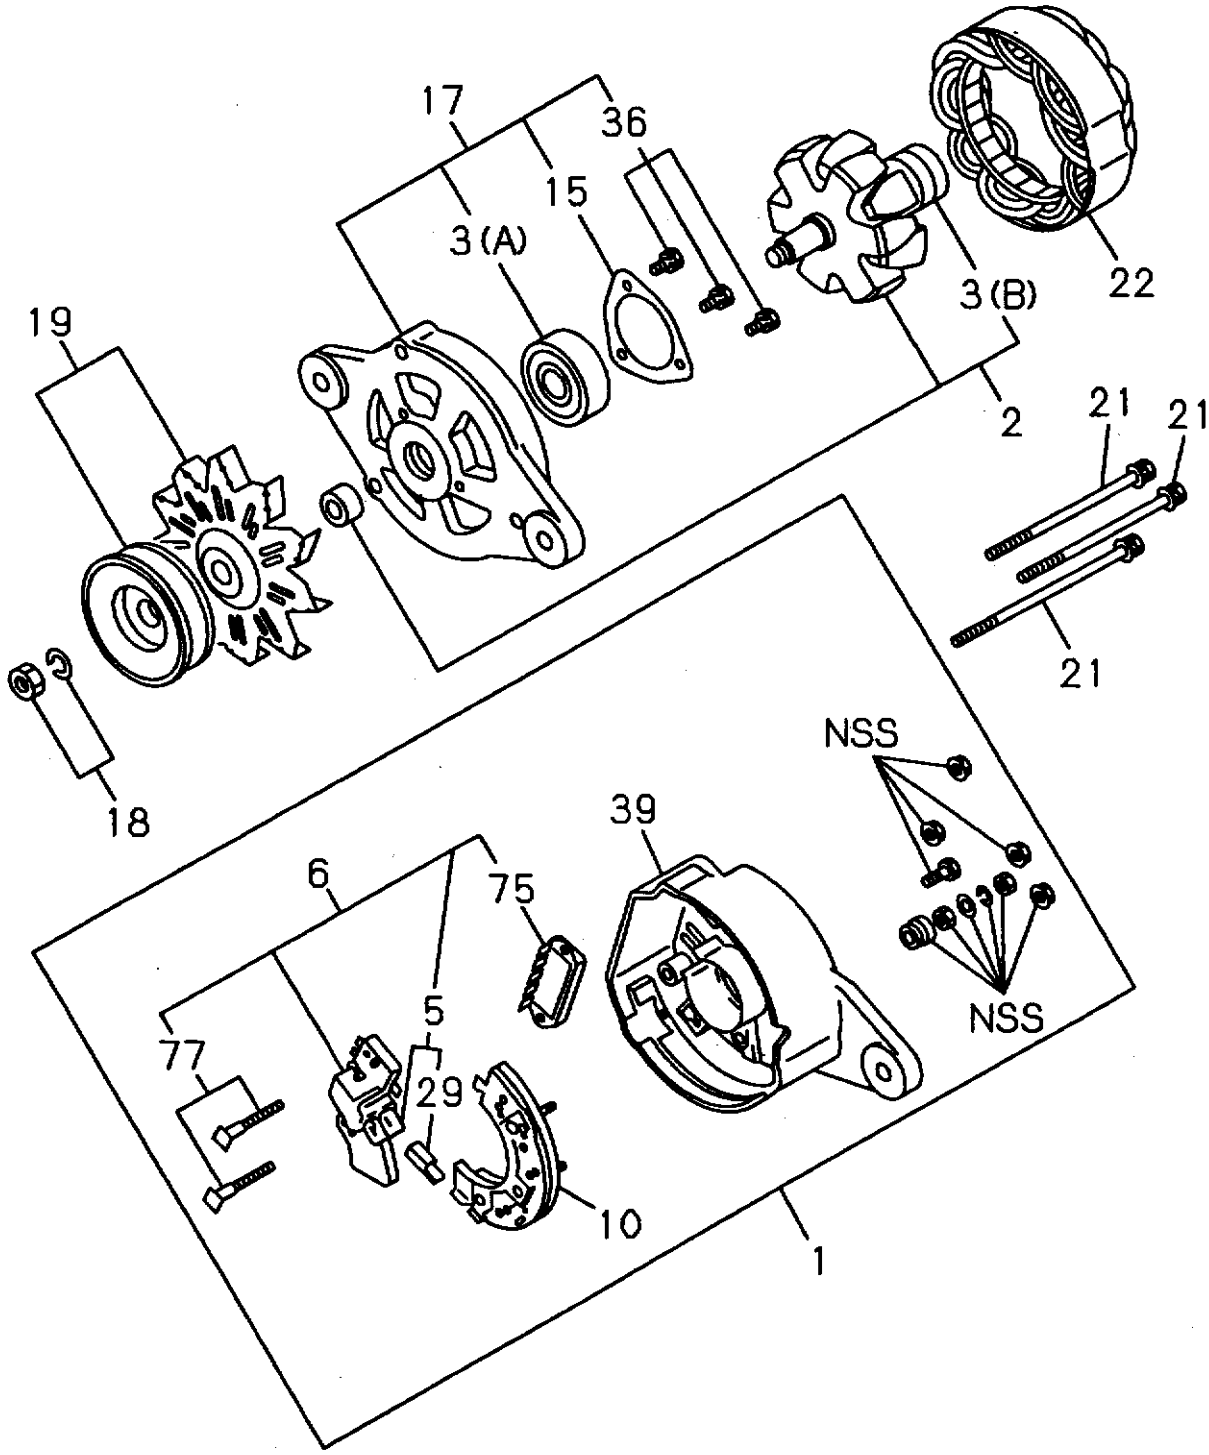

066A0450798

0-66 GENERATOR

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	88888888888888 99999999999999 77777777777777 00111222222222 44228222333334 88590256133838 99410418544219 67270814011919 80654870113838 11000000000000 ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	Remarks
1	COVER ASM; RR, GEN							
		897037-1700		9404-		1	D K	
		897189-1690		9404-		1	E J	
2	ROTOR; GEN							
		897072-8400		9404-		1	A FG	
		897127-1950		9404-		1	C I	
		897037-1670		9404-		1	D K	
		894453-2490		9404-		1	E J	
3	BEARING; ROTOR, GEN							
(A)		897072-8380		9404-		1	A C FG I	
(A)		894462-8590		9404-		1	D K	
(A)		897062-6540		9404-		1	E J	
(B)		894135-7530		9404-		1	A C FG I	
(B)		894333-5210		9404-		1	DE JK	
5	HOLDER; BRUSH, GEN							
		894159-7810		9404-		1	A F	
		897040-4940		9404-		1	C G I	
		894453-2540		9404-		1	E J	
6	REGULATOR ASM; VOLTAGE, GEN							
		897037-1720		9404-		1	D K	
		894453-2530		9404-		1	E J	
		894455-1600		9404-		1	A C FG I	
		897105-9600		9404-		1	B H L	
9	COVER; FELT WASHER, ROTOR, GEN							
		894123-0510		9404-		1	A C FG I	
10	RECTIFIER; GEN							
		897072-8420		9404-		1	A FG	
		897046-3380		9404-		1	C I	
		897037-1740		9404-		1	D K	
		894453-2550		9404-		1	E J	
11	COVER; RR GEN							
		897072-8410		9404-		1	A FG	
		897127-1960		9404-		1	C I	
15	RETAINER; ROTOR, GEN							
		894455-1540		9404-		1	A C FG I	
		894223-9740		9404-		1	DE JK	
17	COVER ASM; FRT, GEN							
		897075-9650		9404-		1	A	
		897127-1940		9404-		1	C	
		897189-1710		9404-		1	E J	
		897037-1690		9404-		1	D K	

GENERATOR

0-66
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	Remarks
17	COVER ASM; FRT, GEN					
	897226-9070		9404-		1 G	
	897241-5490		9404-		1 I	
18	NUT; PULLEY, GEN					
	897072-8350		9404-		1 A C FG I	
	897037-1750		9404-		1 D K	
	894156-6010		9404-		1 E J	
19	PULLEY; GEN					
	897072-8340		9404-		1 A C F	
	897130-7280		9404-		1 DE	
	897262-0570		9404-		1 B	
	897225-3340		9404-		1 G I	
	897229-7890		9404-		1 H L	
	897262-7040		9404-		1 JK	
21	BOLT; THROUGH, GEN					
	894455-1640		9404-		2 A C FG I	
	894116-4350		9404-		4 DE JK	
22	STATOR; GEN					
	897037-1680		9404-		1 D K	
	894453-2500		9404-		1 E J	
24	SCREW; RECTIFIER, GEN					
(A)	894123-0610		9404-		2 A C FG I	
(B)	894455-1620		9404-		1 A C FG I	
(C)	894455-1610		9404-		6 A C FG I	
25	BUSHING; INSULATION TERMINAL					
	894455-1660		9404-		1 A C FG I	
27	NUT; RECTIFIER, GEN					
(A)	894123-0640		9404-		2 A C FG I	
(B)	894206-1860		9404-		1 A C FG I	
29	BRUSH; GEN					
	894123-0560		9404-		2 A C FG I	
	897037-1730		9404-		2 D K	
	581215-0400		9404-		2 E J	
30	SPRING; BRUSH, GEN					
	894123-0570		9404-		2 A C FG I	
36	SCREW; FRT COVER					
	897072-8390		9404-		4 A C FG I	
	894233-6530		9404-		1 DE JK	
39	COVER; END, RR COVER, GEN					
	897072-8430		9404-		1 A FG	


0-66 GENERATOR

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	8888888888888 9999999999999 7777777777777 0011122222222 4422822233334 8859025613388 9941041854421 6727081401119 8065487011388 1100000000000 ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	Remarks
39	COVER; END, RR COVER, GEN							
		897189-1700		9404-		1	E J	
		894455-1650		9404-		1	C I	
		897037-1710		9404-		1	D K	
43	SCREW; RR END COVER							
		894455-1630		9404-		3	A C FG I	
67	COLLAR; SPACE, GEN							
(A)		897229-7830		9404-		1	B H L	
(B)		897229-7840		9404-		1	B H L	
75	REGULATOR; VOLTAGE, GEN							
		581251-0160		9404-		1	E J	
		581251-0160		9404-		1	D K	
77	SCREW; REG							
		903910-6200		9404-		2	B H L	
		897037-8870		9404-		2	D K	
		581229-1660		9404-		2	E J	
85	SPACER; PULLEY, GEN							
		897072-8360		9404-		1	A C FG I	
110	BOLT; THROUGH							
		894455-1560		9404-		2	A C FG I	
112	PLATE ASM; GEN							
		897262-0550		9404-		1	B	
		897229-7790		9404-		1	H	
		897262-7200		9404-		1	L	
113	FLYEHEEL ASM; GEN							
		897262-0560		9404-		1	B	
		897229-7850		9404-		1	H L	
114	NUT; FLYEHEEL, GEN							
		581229-1860		9404-		1	B H L	
115	WASHER; FLYWHEEL, GEN							
(A)		581229-1870		9404-		1	B H L	
(B)		581229-1880		9404-		1	B H L	
133	SCREW; TERMINAL, GENERATOR							
		903910-4100		9404-		1	B H L	
134	COVER; TERMINAL, GENERATOR							
		897229-7880		9404-		1	B H L	
135	SHAFT; GENERATOR							
		897229-7910		9404-		1	B H L	

MEMO

0-80	INJECTION PUMP
FIG-NO.	

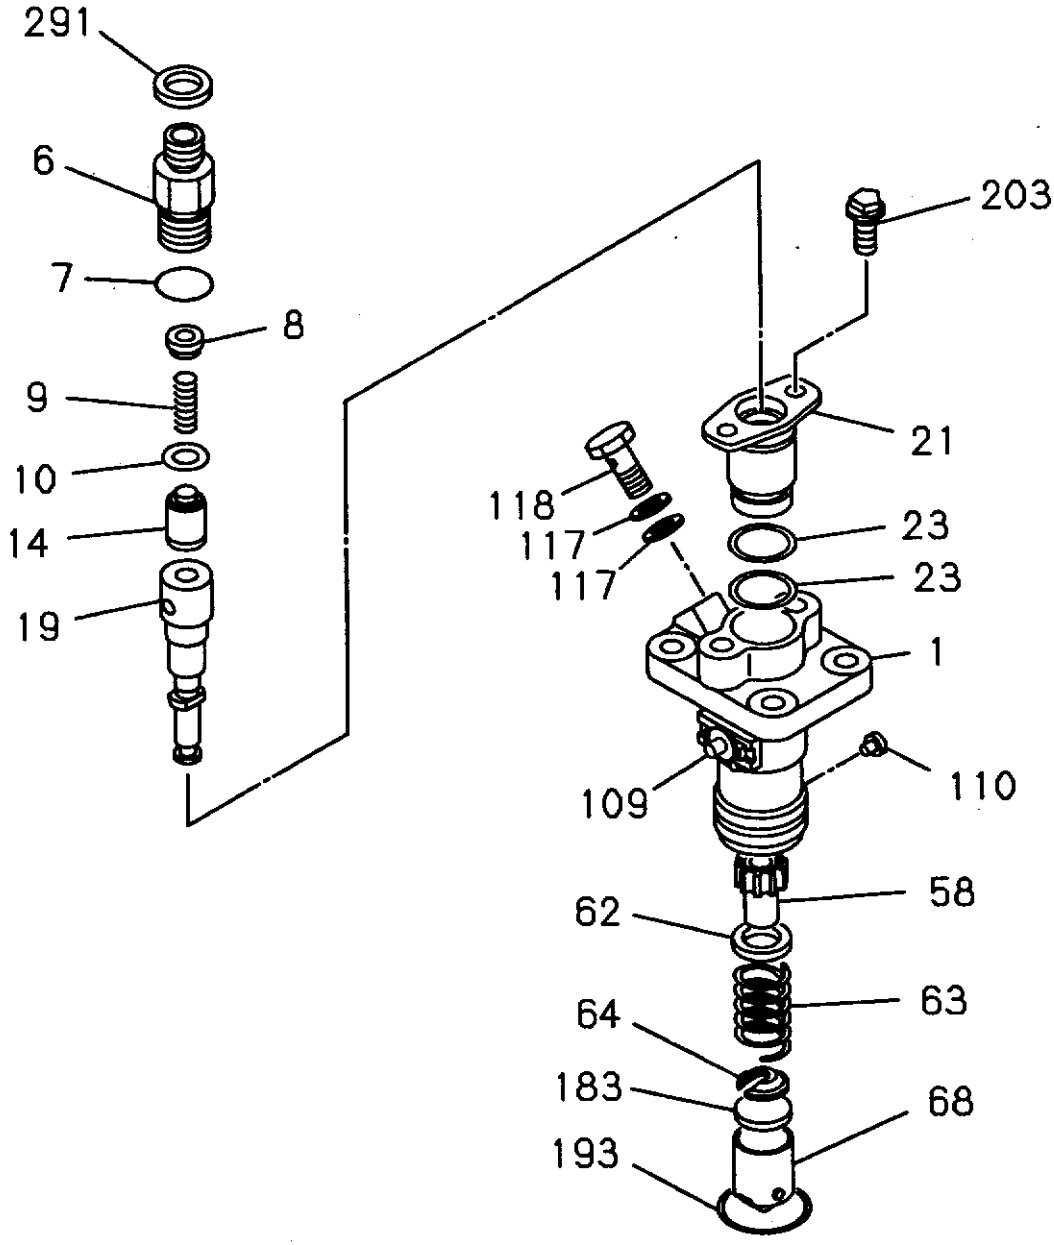

080A0150798

INJECTION PUMP

0-80
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	8888888888 9999999999 7777777777 0111111233 3113344211 4551737944 5263835388 9985338699 1775520856 6120111222 ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	Remarks
1	HOUSING; PUMP, FUEL INJ						
	897253-1510		9907-		3	HIJ	
6	HOLDER; DELIVERY VLV, INJ PUMP						
	894132-7461		9404-		3	ABCDEFG	
	894176-8840		9907-		3	H	
	897233-0890		0105-		3	IJ	
7	GASKET; HOLDER, DELIVERY VLV						
	894128-9150		9404-		3	ABCDEFG	
	897253-1530		9907-		3	HIJ	
8	STOPPER; DELIVERY VLV, INJ PUMP						
	894128-9141		9907-		3	H	
	897083-3470		9404-		3	ABCDEFG	
9	SPRING; DELIVERY VLV						
	894128-9110		9404-		3	ABCDEFG	
	894368-9340		9907-		3	H	
	894162-7580		0105-		3	IJ	
10	GASKET; DELIVERY VLV, INJ PUMP						
	894128-9120		9404-		3	ABCDEFGHIJ	
14	VALVE; DELIVERY, INJ PUMP						
	897322-3380		0105-		3	IJ	
	897083-3460		9404-		3	ABCDEFG	
	897223-4500		9907-		3	H	
19	PLUNGER ASM; INJ PUMP						
	897130-5800		9404-		3	C	
	897138-6490		9503-		3	A	
	897139-5510		9404-		3	B	
	897139-5520		9404-		3	D	
	897142-9710		9404-		3	E	
	897160-9010		9404-		3	F	
	897170-8680		9404-		3	G	
	897253-1520		9907-		3	H	
	897328-3750		0106-		3	I	
	897328-3760		0105-		3	J	
21	FLANGE; PLUNGER						
	897083-3480		9404-		3	ABCDEFGHIJ	
23	GASKET; PLUNGER, BARREL SIDE						
	894379-6920		9404-		6	ABCDEFG	
	897253-1540		9907-		6	HIJ	
58	SLEEVE; CONT, INJ PUMP						
	894128-9230		9404-		3	ABCDEFGH	

0-80 INJECTION PUMP

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	8888888888 9999999999 7777777777 0111111233 3113344211 4551737944 5263835388 9985338699 1777520856 6120111222 ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	Remarks
58	SLEEVE; CONT. INJ PUMP							
		897324-5170		0105-		3	IJ	
62	SEAT; PLUNGER SPRING, INJ PUMP							
		894128-9200		9404-		3	ABCDEFGHIJ	
63	SPRING; PLUNGER, INJ PUMP							
		894128-9190		9404-		3	ABCDEFGHIJ	
64	SEAT; PLUNGER SPRING LWR, INJ PUMP							
		894128-9210		9404-		3	ABCDEFGHIJ	
68	TAPPET; CM/SHF, INJ PUMP							
		894128-9160		9404-		3	ABCDEFG J	
		897223-4490		9907-		3	H	
		897233-0900		0106-		3	I	
109	RACK; CONT, INJ PUMP							
		897083-3553		9404-		3	ABCDEFGHIJ	
110	PIN; CONT RACK, INJ PUMP							
		897083-3490		9404-		3	ABCDEFGHIJ	
117	GASKET; EYE BOLT, INJ PUMP							
		115639-0080		9907-		6	HIJ	
		894144-5880		9404-		6	D	
118	BOLT; EYE, FUEL INL, INJ PUMP							
		894379-6880		9404-		3	D HIJ	
183	PLATE; TAPPET							
		894128-9310		9404-9811		AR	ABCDEFGH	T=2.60
		894128-9320		9404-9811		AR	ABCDEFGH	T=2.65
		894128-9330		9404-9811		AR	ABCDEFGH	T=2.70
		894128-9340		9404-9811		AR	ABCDEFGH	T=2.75
		894128-9350		9404-9811		AR	ABCDEFGH	T=2.80
		894128-9360		9404-9811		AR	ABCDEFGH	T=2.85
		894128-9370		9404-9811		AR	ABCDEFGH	T=2.90
		894128-9380		9404-9811		AR	ABCDEFGH	T=2.95
		894128-9390		9404-9811		AR	ABCDEFGH	T=3.00
		894128-9400		9404-9811		AR	ABCDEFGH	T=3.05
		894128-9410		9404-9811		AR	ABCDEFGH	T=3.10
		894128-9420		9404-9811		AR	ABCDEFGH	T=3.15
		894128-9430		9404-9811		AR	ABCDEFGH	T=3.20
		894128-9440		9404-9811		AR	ABCDEFGH	T=3.25
		894128-9450		9404-9811		AR	ABCDEFGH	T=3.30
		894128-9460		9404-9811		AR	ABCDEFGH	T=3.35
		894128-9470		9404-9811		AR	ABCDEFGH	T=3.40
		894128-9480		9404-9811		AR	ABCDEFGH	T=3.45
		894128-9490		9404-9811		AR	ABCDEFGH	T=3.50

INJECTION PUMP

0-80
FIG-NO.


KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	88888888888 99999999999 77777777777 01111111233 31133344211 45517379445 52638353883 99853386995 17775208566 61201112222 ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	Remarks
183	PLATE; TAPPET						
	894128-9500		9404-9811		AR	ABCDEFGH	T=3.55
	894128-9510		9404-9811		AR	ABCDEFGH	T=3.60
	894128-9520		9404-9811		AR	ABCDEFGH	T=3.65
	894128-9530		9404-9811		AR	ABCDEFGH	T=3.70
	894128-9540		9404-9811		AR	ABCDEFGH	T=3.75
	894128-9550		9404-9811		AR	ABCDEFGH	T=3.80
	894128-9560		9404-9811		AR	ABCDEFGH	T=3.85
	894128-9570		9404-9811		AR	ABCDEFGH	T=3.90
	894128-9580		9404-9811		AR	ABCDEFGH	T=3.95
	894128-9590		9404-9811		AR	ABCDEFGH	T=4.00
	894128-9600		9404-9811		AR	ABCDEFGH	T=4.05
	894128-9610		9404-9811		AR	ABCDEFGH	T=4.10
	897225-9550		9812-		AR	ABC EFGHIJ	T=2.62
	897225-9560		9812-		AR	ABC EFGHIJ	T=2.67
	897225-9570		9812-		AR	ABC EFGHIJ	T=2.77
	897225-9580		9812-		AR	ABC EFGHIJ	T=2.82
	897225-9590		9812-		AR	ABC EFGHIJ	T=2.82
	897225-9600		9812-		AR	ABC EFGHIJ	T=2.87
	897225-9610		9812-		AR	ABC EFGHIJ	T=2.92
	897225-9620		9812-		AR	ABC EFGHIJ	T=2.97
	897225-9640		9812-		AR	ABC EFGHIJ	T=3.02
	897225-9650		9812-		AR	ABC EFGHIJ	T=3.07
	897225-9660		9812-		AR	ABC EFGHIJ	T=3.12
	897225-9670		9812-		AR	ABC EFGHIJ	T=3.17
	897225-9680		9812-		AR	ABC EFGHIJ	T=3.22
	897225-9690		9812-		AR	ABC EFGHIJ	T=3.27
	897225-9700		9812-		AR	ABC EFGHIJ	T=3.32
	897225-9710		9812-		AR	ABC EFGHIJ	T=3.37
	897225-9720		9812-		AR	ABC EFGHIJ	T=3.42
	897225-9730		9812-		AR	ABC EFGHIJ	T=3.47
	897225-9740		9812-		AR	ABC EFGHIJ	T=3.52
	897225-9760		9812-		AR	ABC EFGHIJ	T=3.57
	897225-9770		9812-		AR	ABC EFGHIJ	T=3.62
	897225-9780		9812-		AR	ABC EFGHIJ	T=3.67
	897225-9790		9812-		AR	ABC EFGHIJ	T=3.72
	897225-9800		9812-		AR	ABC EFGHIJ	T=3.77
	897225-9810		9812-		AR	ABC EFGHIJ	T=3.82
	897225-9820		9812-		AR	ABC EFGHIJ	T=3.87
	897225-9830		9812-		AR	ABC EFGHIJ	T=3.92
	897225-9840		9812-		AR	ABC EFGHIJ	T=3.97
	897225-9850		9812-		AR	ABC EFGHIJ	T=4.02
	897225-9860		9812-		AR	ABC EFGHIJ	T=4.07
193	RING; SNAP						
	897083-3500		9404-		3	ABCDEFGHIJ	
203	BOLT; FUEL INL						
	894379-6910		9404-		6	ABCDEFGHIJ	
291	RING; DELIVERY VLV						
	897082-9720		9404-		3	D	

0-80	INJECTION PUMP
FIG-NO.	

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	8888888888 9999999991 7777777777 0111111233 3113344211 4551737944 5263835388 9985338699 1775208566 6120111222 ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	Remarks
291	RING; DELIVERY VLV							
		897142-9720		9404-		3	E	
		897160-9040		9404-		3	F	
		897170-8690		9404-		3	G	

MEMO


0-89	TIMING CHAIN CASE
FIG-NO.	(NO.1)

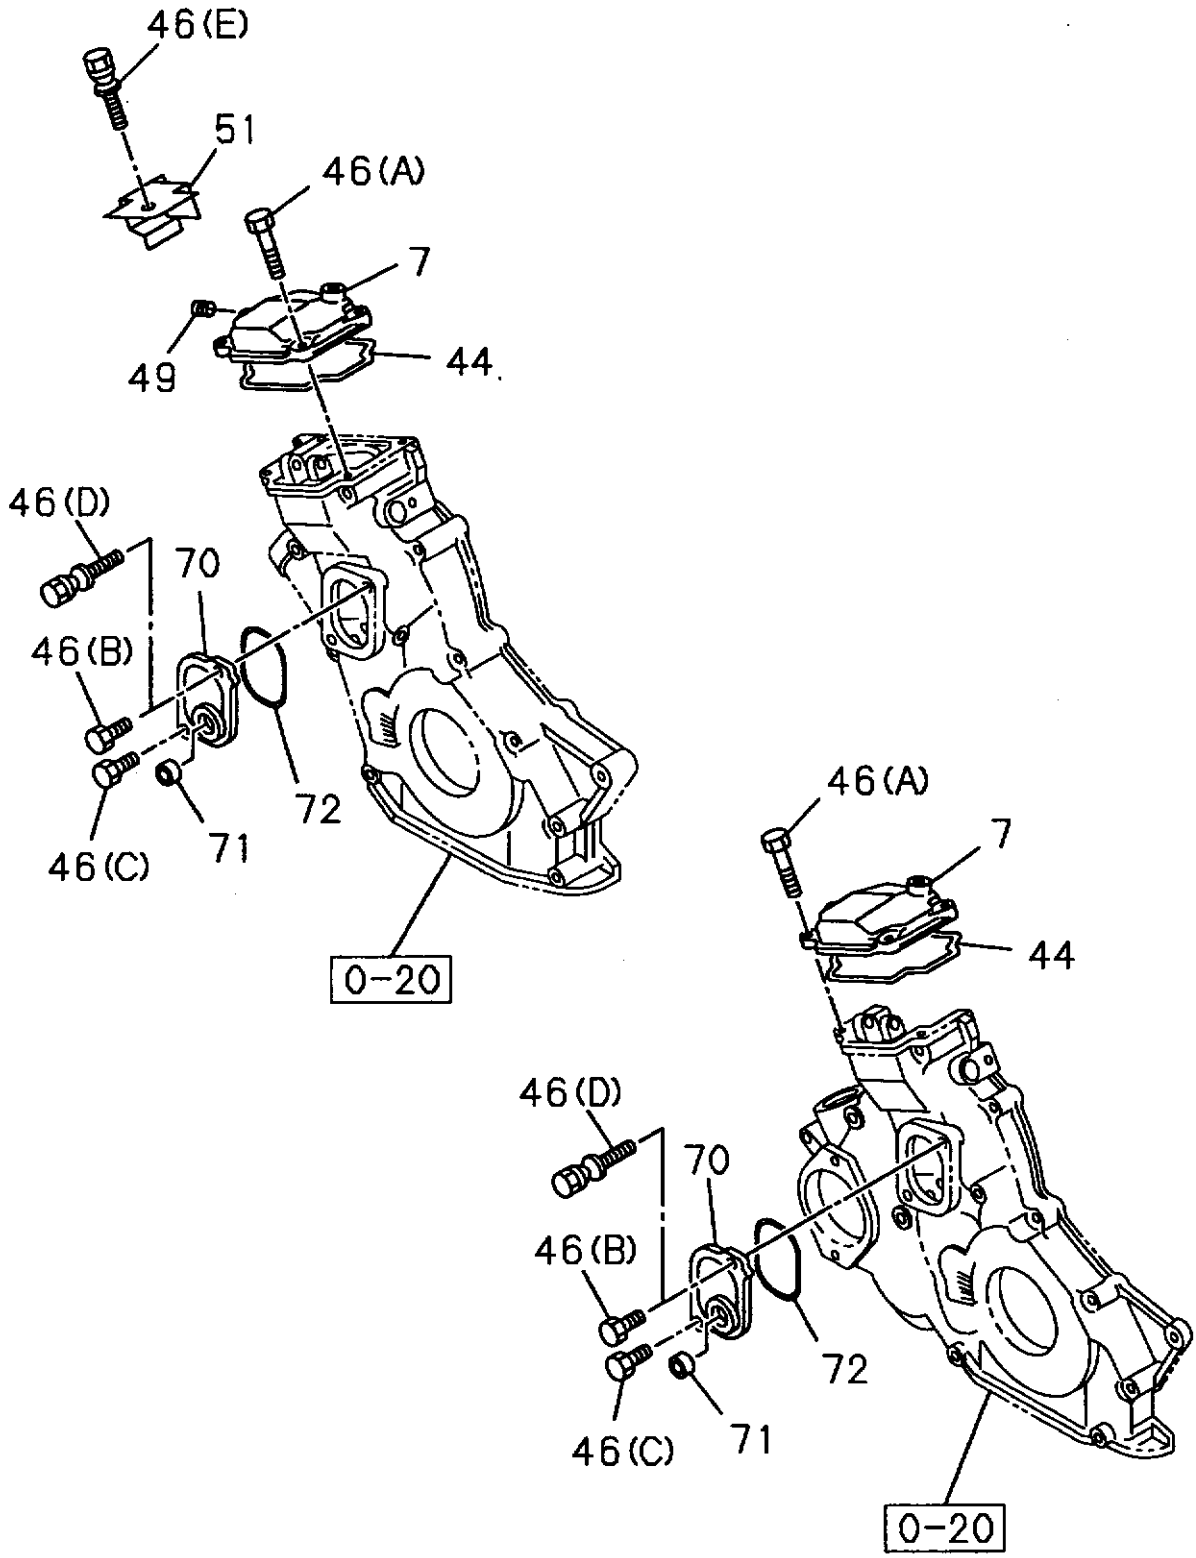

089A0150798


TIMING CHAIN CASE
(NO.2)

0-89
FIG-NO.

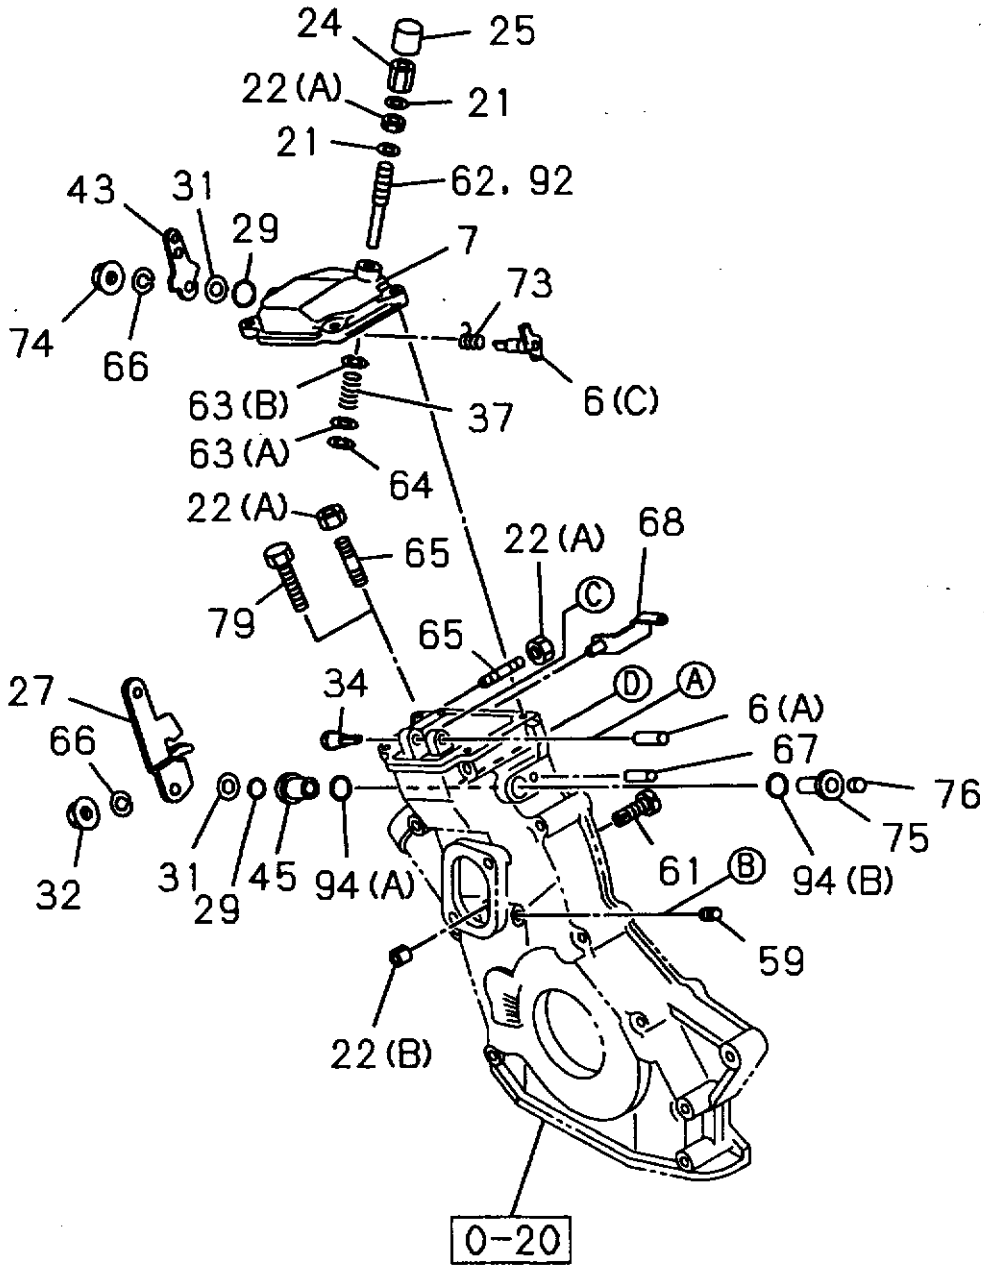

089A0250798

0-89	TIMING CHAIN CASE
FIG-NO.	(NO.3)

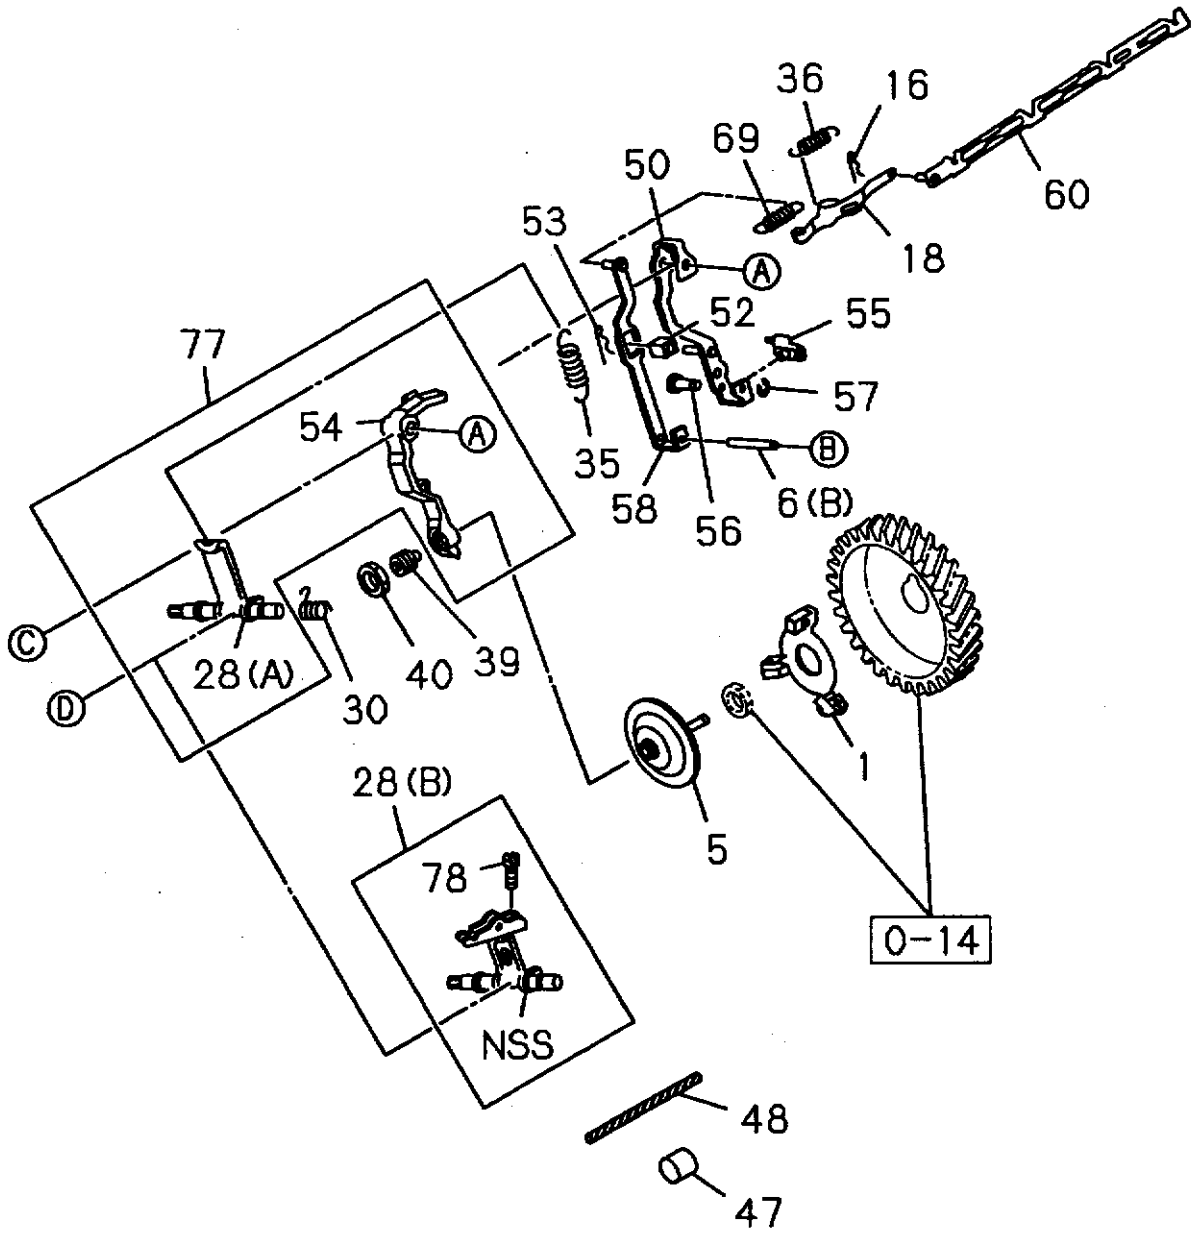

089A0350798

TIMING CHAIN CASE

0-89 A
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 PPPPP AAAAA 00000 12345 ABCDE	PPTTT AAPPP 00AAA 67 00 12 FGHIJ	4LC1 PPPPP AAAAA 0000 1234 U G KLMNO	PPPPP VVVWW 00000 12312 PQRST	4LE1 PPPCC WWWAA 000 0 345 1 UVWXY	DDDDD AAAAA 0000 1234 ZABCD	DDDDD AAAAA 00000 56789 EFGHI	PPPPP AAAAA 0000 1234 JKLMN	PPPPP AAAAA 00001 57890 OPQRS	PPPPP AAAAA 11111 12345 TUVWX	Remarks
1	FLYWEIGHT															
	897045-6175		9404-9912		1	AB	GHIJ	KLMNO	ST	U XY			JKLMN	O RS		
	897247-9011		0001-0105		1	AB	GHIJ	KLMNO	ST	UVWXY			JKLMN	O RS		
	897318-3720		0106-		1			KLMNO	ST	UVWXY			JKLMN	O RS		
	897116-1031	C	9404-0101		1	CDE	F							PQ	TUVWX	
	897307-4150		0102-0105		1	CDE	F							PQ	TUVWX	
	897310-4521		0106-		1	CDE	F							PQ	TUVWX	
	897116-1031	C	9404-9812		1				PQ							
	897215-3581		9901-		1				PQR							
	897116-1031		9404-9604		1						ZAB					
	897148-5460	C	9605-9805		1						ZABCD					
	897210-7871		9806-0001		1						ZABCD	EFGHI				
	897309-6710		0002-		1						ZABCD	EFGHI				
5	SLEEVE; FLYWEIGHT															
	897084-9771	C	9404-9603		1	AB	HIJ	KLM	PQ ST		ZAB		JKL			
	897147-4892		9604-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
6	SHAFT; LEVER															
(A)	908160-8500		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
(B)	908160-5450		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
(C)	897016-4460		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
7	COVER; GOV SHAFT															
	897034-6362		9404-9701		1	ABCD	HIJ	KLM	PQ ST	XY			JKLMN	O		
	897117-6720	A	9404-9701		1						ZABCD					
	897161-7640		9702-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
16	PIN; LEVER TO LINK PLATE															
	109747-0020		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	L=17.9
18	PLATE; LINK, LEVER TO PUMP															
	897034-6393		9404-9604		1	ABCD	HIJ	KLM	PQ ST		ZAB		JKL			
	897148-5500		9605-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
21	GASKET; SCREW									—ALSO INCLUDED IN GASKET SET(ENGINE)						
	509503-1321		9404-		2	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
22	NUT; SCREW															
(A)	909111-4060		9404-		3	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M6
(B)	909110-4060		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M6
24	NUT; CAP, SCREW															
	509400-0480		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
25	CAP; IDLE SET															
	515669-0021		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
27	LEVER; CONT															
	897049-3281		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
28	LEVER; MAIN SPR															
(A)	897034-6424		9404-		1	ABCDE	FGHIJ	KLMNO	ST	UVWXY			JKLMN	OPQRS	TUVWX	

0-89 A TIMING CHAIN CASE

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
							PPPPPPPPTTTPPPPPPPPPPPPPPCCDDDDDDDDDDPPPPPPPPPPPPPP AAAAAAAAPPPAAAAAAVVVWWWWWAAAAAAAAAAAAAAAAAAAAAAAA 0000000AAA0000000000000000 0000000000000000000000000 1234567 00 1234123123451 1234567891234567890123451 12 U 6	
							ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
28	LEVER; MAIN SPR							
(B)		897105-9061	C	9404-9604		1	PQ ZA	
(B)		897160-5721		9605-		1	PQR ZABCDEFGHI	
29	GASKET; SHAFT, CONT						—ALSO INCLUDED IN GASKET SET(ENGINE)	
		109623-0550		9404-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	ID=9.8
30	SPRING; RETURN, CONT							
		897016-9400		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
31	WASHER; THRUST, LEVER							
		509503-1350		9404-		2	ABCDEF HIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
32	NUT; LEVER TO SHAFT							
		909110-5080		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M8
34	EYE; START SPR							
		515729-2392		9404-		1	H KL OPQRST V XYZABCDEFGHIJKLMNOPQRS UVW	
35	SPRING; MAIN, LEVER							
		897076-6401	C	9404-9610		1	AB L Y	
		897167-9740		9611-		1	AB G L O Y	
		897171-2420		9404-		1	CDEF	
		897076-9030		9404-		1	HIJ S	
		897069-8911		9404-		1	K MN K	
		897131-4730		9404-		1	PQR	
		897076-9040		9404-		1	STUVW Q X	
		897069-8901		9404-		1	J LMNO R	
		897076-9050		9803-		1	X P UVW	
		897131-4740		9404-9604		1	ZA	
		897148-5570		9605-		1	ZABCDEFGHI T	
36	SPRING; START							
		897120-4860		9404-		1	A G	
		897034-6432		9404-		1	B HIJ MN PQRSTUVW	
		897084-3250		9404-		1	KL O JKLMNO RS	
		897149-6020		9404-		1	CDEF T	
		897034-6432		9404-9610		1	XY	
		897084-3250		9611-		1	XY	
		897034-6432		9404-9604		1	ZA	
		897149-6030		9605-		1	ZABCDEFGHI	
		897184-0980		9404-		1	PQ UVWX	
37	SPRING; IDLE							
		897082-1140		9404-		1	AB HIJ JK MNO R	
		897016-9361		9404-		1	G KLMNOPQR XY D G S	
		897171-2430		9404-		1	CDEF EF HI T	
		897109-0780		9404-		1	STUVW	
		897016-9361		9605-9801		1	ZABC	
		897171-2430		9802-		1	ZABC	
		897016-9361	C	9404-9603		1	L	
		897082-1140		9604-		1	L	
		897137-5641		9404-9910		1	PQ X	

TIMING CHAIN CASE

0-89 A
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	L R	QTY	4LB1 PPPPP AAAAA 00000 12345 ABCDE	PPTTT AAPPP 00AAA 67 00 12 FGHIJ	4LC1 PPPPP AAAAA 0000 1234 U G KLMNO	PPPPP VVVWW 00000 12312 PQRST	4LE1 PPPCC WWWAA 000 0 345 1 UVWXY	DDDDD AAAAA 0000 1234 ZABCD	DDDDD AAAAA 00000 56789 EFGHI	PPPPP AAAAA 0000 1234 JKLMN	PPPPP AAAAA 00001 57890 OPQRS	PPPPP AAAAA 11111 12345 TUVWX	Remarks
37	SPRING; IDLE															
	897244-7700		9911-		1									PQ	UVW	
39	ANGLEICH KIT															
	897120-4300		9404-		1	AB	G									
	897171-2450		9404-		1	CDE	F									
	897113-9490	C	9404-9406		1		H									
	897117-0840		9407-		1		HI									
	897069-8960	C	9404-9409		1			K								
	897120-5130		9410-		1			K MN								
	897120-5130	C	9410-9511		1			L								
	897142-3410		9512-		1			L O								
	897129-6010		9404-		1				ST	UVW						
	897164-3340	C	9404-9612		1					XY						
	897170-1660		9701-		1					XY						
	897073-2411		9404-		1								J			
	897134-3830		9404-		1								K			
	897162-0280		9404-		1								LMN	O QR	UV X	
	897204-4100		9404-		1										T	
	897180-4640		9404-9706		1									P		
	897184-0800		9707-		1									P	W	
40	NUT; HOLDER															
	894130-4380		9404-		1	ABCDE	FGHI	KLMNO	ST	UVWXY			JKLMN	OPQR	TUVWX	
43	LEVER; FUEL CUT															
	897016-4492		9404-0001		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
	897303-4540		0002-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
44	GASKET; COVER															—ALSO INCLUDED IN GASKET SET(ENGINE)
	897064-6881		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
45	BUSHING; GEAR CASE TO CONT LEVER															
	894369-5450		9404-0010		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
	897262-8830		0011-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
46	BOLT; COVER															
(A)	028080-6200		9404-		4	ABCDE	FGHIJ	KLMN	P RS	VWXY	ZABCD	HI	JKL N	OPQRS	UVWX	M6X20 FLANGE
(A)	028080-6200		9404-9810		4				Q T	U						M6X20 FLANGE
(A)	028080-6200		9811-		3			O	Q T	U		EFG	M		T	M6X20 FLANGE
(B)	028080-6140		9404-		1	ABCDE	FGHIJ	KLMN	P RS	VWXY	ZABCD	HI	JKL N	OPQRS	UVWX	M6X14 FLANGE
(B)	028080-6140		9404-9810		1				Q T	U						M6X14 FLANGE
(C)	897072-8300		9404-9810		1				Q T	U				RS	UVWX	M6X16
(D)	897132-2912		9811-		2			O	Q T	U		EFG	M		T	M6X16
(C)	897072-8300		9404-		1	ABCDE	FGHIJ	KLMN	P RS	VWXY	ZABCD	HI	JKL N	OPQRS	UVWX	M6X16
(E)	897132-2922		9811-		1			O	Q T	U		EFG	M		T	M6X22
47	SEAL; LEAD															
	115739-0020		9404-		2	ABCDE	FGHIJ	KLMN	PQRST	UVWXY	ZABCD	HI	JKLMN	OPQRS	UVWX	
48	WIRE; LEAD SEAL															
	981325-4460		9404-		2	ABCDE	FGHIJ	KLMN	P RS	VWXY	ZABCD	HI	JKL N	OPQRS	UVWX	
	981325-4460		9404-9810		2				Q T	U					T	

0-89 A TIMING CHAIN CASE

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	I T C	APPLIED DATE	L R	QTY	4LB1 4LC1 4LE1	Remarks
49	PLUG; COVER, GOV	109605-0190		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	PT1/4
50	LEVER; GUIDE	897034-5945		9404-0010		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
		897303-5772		0011-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
51	COVER; ADJ	897125-9740		9811-		1	O Q TU EFG M T	
52	PIECE; GUIDE	897112-2650		9404-0010		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
		897303-5830		0011-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
53	PIN; GUIDE LEVER	109747-0020		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
54	LEVER; TENSION, GOV	897034-6376		9404-		1	ABCDEFGHIJKLMNO STUVWXY JKLMNOPQRSTUVWX	
		897105-9100		9404-9606		1	PQ Z	
		897160-5742		9607-		1	PQR ZABCDEFGHI	
55	SHIFTER; GOV	897034-6383		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
56	SHAFT; SHIFTER	908213-6250		9404-0010		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
		897303-6670		0011-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
57	RING; SNAP, SHAFT	909185-4040		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	ID=4
58	LEVER; FLOATING	897062-4222		9404-9604		1	AB HIJKLM PQ ST ZA JKL	
		897148-5480		9605-0010		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
		897303-5802		0011-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
59	PLUG; SHAFT, FLOATING LEVER	109605-0500		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	PT1/8
60	LINK; CONT, INJ PUMP	897077-8021		9404-		1	ABCDEFGHIJKLMNOPQRSTUVW	
		897119-8160	C	9404-9604		1	X ZA JKL	
		897148-8650		9605-		1	XYZABCDEFGHIJKLMNOPQRSTUVWX	
61	SCREW; SET, FULL LOAD	897039-5841		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
62	SCREW; SET, IDLE SPR	897016-4410		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
63 (A)	WASHER; IDLE SPR	909160-5040		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	ID=4

TIMING CHAIN CASE

0-89 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 4LC1 4LE1	Remarks
							PPPPPPPPTTTPPPPPPPPPPPPPPCCDDDDDDDDDDPPPPPPPPPPPPPPP AAAAAAAPPPAAAAAAVVVWWWWAAAAAAAAAAAAAAAAAAAAAAAAA 0000000AAA 0000000000000 0 0000000000 0000000011111 1234567 00 1234123123451 1234567890 1234578901234512 U 6 ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
63	WASHER; IDLE SPR							
(B)	909160-7040		9404-		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	ID=4
64	RING; SNAP, SET SCREW							
	909185-4030		9404-		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
65	SCREW; CONT SET SPEED							
	894317-6381		9404-		2		KL OPQRSTUVWXYZABCDEFG IJ LMNO RS	L=38
	894317-6381		9404-		1		ABCDEFGHIJ MN H K PQ TUVWX	L=38
	509120-0151		9510-		1		ABCDEFGHIJ MN K PQ TUVWX	L=28
66	WASHER; LK							
	909150-5080		9404-		2		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	ID=8
67	PIN; SPR, CONT							
	908160-4360		9404-		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
68	BRACKET; START SPR							
	897047-0521		9404-		1		ABCDEFG IJ MN U WX ZAB JKL T X	
69	SPRING; SET							
	897083-7140		9404-		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
70	COVER; ANGLEICH							
	897039-2644		9404-9910		1		ABCDEFGHIJKLMNOPQ STU XYZABCDEFG JKLMNOPQRSTUVWX	
	897226-8411		9911-0105		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
	897307-4671		0106-		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
71	CUP; SEALING							
	511129-0060		9404-		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	OD=16
72	GASKET; COVER, ANGLEICH						—ALSO INCLUDED IN GASKET SET(ENGINE)	
	909561-2530		9404-9910		1		ABCDEFGHIJKLMNOPQ STU XYZABCDEFG JKLMNOPQRSTUVWX	
	897226-8421		9911-		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFG IJKLMNOPQRSTUVWX	
73	SPRING; FUEL CUT							
	897039-5461		9404-		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
74	NUT; SHAFT							
	909110-5080		9404-		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M8
75	BUSHING; LEVER, MAIN SPR							
	897038-8021		9404-0010		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
	897262-8170		0011-		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
76	CUP; SEALING, BUSHING							
	894454-6150		9404-		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
77	LEVER KIT; GOV							
	897093-5494		9404-		1		ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
78	ADJUSTER; GOV							
	897105-9090		9404-		1		PQR ZABCDEFGHI	

0-89 A TIMING CHAIN CASE

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 PPPPP AAAAA 00000 12345	PPTTT AAPPP 00AAA 67 00 12	4LC1 PPPPP AAAAA 0000 1234 U G	PPPPP VVVWW 00000 12312	PPPCC WWWAA 000 0 345 1	4LE1 DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	PPPPP AAAAA 0000 1234	PPPPP AAAAA 00001 57890	PPPPP AAAAA 11111 12345	Remarks
						ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
94	GASKET; BUSH															
(A)	909565-1140		0011-		1		H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	
(B)	909565-1160		0011-		1		H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X	

TIMING CHAIN CASE

0-89 B
FIG-NO.

4LE1 / 4LE2

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	Applicable models (ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX)	Remarks
1	FLYWEIGHT						
	897045-6175		9404-9912		1	AB STUVWXYZAB	
	897247-9011	C	0001-0101		1	AB EFGHI STUVWXYZABCDEFG	
	897220-6740		9907-9912		1	HI OP U	
	897247-9011		0001-0006		1	HI OP STU	
	897263-8680	C	0007-0101		1	HIJK OP STU	
	897309-5500		0102-0105		1	AB EFGHI STUVWXYZABCDEFGHIJK OP STU	
	897318-3720		0106-		1	AB EFGHI STUVWXYZABCDEFGHIJKL OP STUVWX	
	897116-1031	C	9404-0101		1	CD JK	
	897307-4150		0102-0105		1	CD JK	
	897310-4521		0106-		1	CD JK QR	
	897148-5460	C	9804-9807		1	LMN	
	897210-7871		9808-0101		1	LMNOPQR	
	897309-6710		0102-		1	LMNOPQR	
	897321-5720		0106-		1	MN	
5	SLEEVE; FLYWEIGHT						
	897147-4892		9404-		1	ABCDEFGHIJK MNOPQR TUVWXYZABCDEFGHIJKL OPQRSTUVWX	
	897084-9771	C	9404-9603		1	L S	
	897147-4892		9604-		1	L S	
	897321-5750		0106-		1	MN	
6	SHAFT; LEVER						
(A)	908160-8500		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
(B)	908160-5450		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
(C)	897016-4460		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
7	COVER; GOV SHAFT						
	897161-7640		9404-		1	ABCDEFGHIJK NOPQR VWXYZABCDEFGHIJKLMNOPQRSTUVWX	
	897117-6720	A	9404-9701		1	LM	
	897034-6362		9404-9701		1	STU	
	897161-7640		9702-		1	LM STU	
16	PIN; LEVER TO LINK PLATE						
	109747-0020		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
18	PLATE; LINK, LEVER TO PUMP						
	897148-5500		9404-		1	ABCDEFGHIJK MNOPQR TUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
	897034-6393		9404-9604		1	L S	
	897148-5500		9605-		1	L S	
21	GASKET; SCREW — ALSO INCLUDED IN GASKET SET(ENGINE)						
	509503-1321		9404-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
22	NUT; SCREW						
(A)	909111-4060		9404-		3	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M6
(B)	909110-4060		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M6
24	NUT; CAP, SCREW						
	509400-0480		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
25	CAP; IDLE SET						
	515669-0021		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	

0-89 B TIMING CHAIN CASE

FIG-NO.

KEY NO. PART NAME

Applicability columns — 4LE1 / 4LE2:
PPPPP PPPPP PPPPP PPPPP PPPPP PPPPP PPPCC CCCDD PPPPP PPPPP
AAAAA AAAAA AVVVV VVVWW WWWWW WWWWW WWWAA AAAAA AAAAW WWWWW
11112 22222 20000 00000 00000 00111 111 0 00000 0000 00000
67890 12345 61234 56712 34567 89012 347 1 23412 1231 23579
ABCDE FGHIJ KLMNO PQRST UVWXY ZABCD EFGHI JKLMN OPQRS TUVWX

KEY NO.	PART NAME / PART NUMBER	I T C	APPLIED DATE	L R	QTY	Applicability (4LE1 / 4LE2)	Remarks
27	LEVER: CONT						
	897049-3281		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJ LMNOPQRSTUVWX	
	897300-8010		9711-		1	K	
28	LEVER: MAIN SPR						
(A)	897034-6424		9404-		1	ABCDEFGHIJK STUVWXYZABCDEFGHIJKL OPQRSTUVWX	
(B)	897105-9061	C	9404-9604		1	L	
(B)	897160-5721		9605-		1	LMNOPQR MN	
29	GASKET: SHAFT, CONT					—ALSO INCLUDED IN GASKET SET(ENGINE)	
	109623-0550		9404-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	ID=9.8
30	SPRING: RETURN, CONT						
	897016-9400		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOP STUVWX	
	897307-0610		0106-		1	QR	
31	WASHER: THRUST, LEVER						
	509503-1350		9404-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
32	NUT: LEVER TO SHAFT						
	909110-5080		0002-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	M8
34	EYE: START SPR						
	515729-2392		9404-		1	AB D FGH JKLMNOPQRS UVW CDE HIJKLMNOPQRST WX	
35	SPRING: MAIN, LEVER						
	897069-8901		9404-		1	AB FGH S V X B K O	
	897076-9030		9404-		1	P	
	897076-9040		9404-		1	C E U W YZA CDEFGHIJ L STUV X	
	897076-9050		9404-		1	D IJK T	
	897148-5570		9605-		1	LMNOPQR	
	897321-3480		0105-		1	MN	
	897171-2420		0106-		1	QR	
	897109-7590		0105-		1	W	
36	SPRING: START						
	897084-3250		9404-		1	AB GH HIJKLMN P R W	
	897034-6432		9404-		1	EF I STUVWXYZABCDEFG O Q STUV X	
	897149-6030		9605-		1	LMNOPQR	
	897184-0980		9404-		1	CD JK	
37	SPRING: IDLE						
	897082-1140		9404-		1	AB	
	897016-9361		9404-		1	FGH LMNOPQRS UVWXYZABCDEFGH OP	
	897171-2430		9802-		1	E IJKL STUV X	
	897137-5641		9404-		1	C I T	
	897244-7700		9911-		1	D JK QR W	
39	ANGLEICH KIT						
	897164-3340		9404-		1	U W YZA CDEFG	
	897025-9600		9404-		1	I T	
	897162-0280		9404-		1	ABC FGH S V X B	
	897184-0800		9404-		1	D JK	

TIMING CHAIN CASE

0-89 B

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
39	ANGLEICH KIT							
		897069-8960		9907-		1	P	
		897231-7170		0001-		1	E	
		897321-3502		0106-		1	QR	
40	NUT; HOLDER							
		894130-4380		9404-		1	ABCDEFGHIJK ST UVWXYZABCDEFG PQR	
43	LEVER; FUEL CUT							
		897016-4492		9404-0102		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJK OP STU	
		897303-4540		0103-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
44	GASKET; COVER						—ALSO INCLUDED IN GASKET SET(ENGINE)	
		897064-6881		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
45	BUSHING; GEAR CASE TO CONT LEVER							
		894369-5450		9404-0010		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJK OP STU	
		897262-8830		0011-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
46	BOLT; COVER							
(A)		028080-6200		9404-		4	AB EFGHIJK QR X AB E GHI K MNO	M6X20 FLANGE
(A)		028080-6200		9801-		3	CD LMNOP STUVW YZ CD F J L PQRSTUVWX	M6X20 FLANGE
(B)		028080-6140		9404-		1	AB EFGHIJK QR X AB E GHI K MNO	M6X14 FLANGE
(C)		897072-8300		9404-		1	AB EFGHIJK QR X AB E GHI K MNO	M6X16
(D)		897132-2912		9801-		2	CD LMNOP STUVW YZ CD F J L PQRSTUVWX	M6X16
(E)		897132-2922		9801-		1	CD LMNOP STUVW YZ CD F J L PQRSTUVWX	M6X22
47	SEAL; LEAD							
		115739-0020		9404-		2	AB EFGHIJK QR X AB E GHI K MNO	
48	WIRE; LEAD SEAL							
		981325-4460		9404-		2	AB EFGHIJK QR X AB E GHI K MNO	
49	PLUG; COVER, GOV							
		109605-0190		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	PT1/4
		909862-0420		0105-		1	MN	
50	LEVER; GUIDE							
		897034-5945		9404-0010		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJK OP STU	
		897303-5772		0011-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
51	COVER; ADJ							
		897125-9740		9801-		1	CD LMNOP STUVW YZ CD F J L PQRSTUVWX	
52	PIECE; GUIDE							
		897112-2650		9404-0103		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJK OP STU	
		897303-5830		0104-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
53	PIN; GUIDE LEVER							
		109747-0020		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
54	LEVER; TENSION, GOV							
		897034-6376		9404-		1	ABCDEFGHIJK ST UVWXYZABCDEFGHIJKL OPQRSTUVWX	

0-89 B TIMING CHAIN CASE

FIG-NO.


KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
54	LEVER; TENSION, GOV	897160-5742		9607-		1	LMNOPQR MN	
55	SHIFTER; GOV	897034-6383		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKL OPQRSTUVWX	
		897321-3350		0105-		1	MN	
56	SHAFT; SHIFTER	908213-6250		9404-0103		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJK OP STU	
		897303-6670		0104-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
57	RING; SNAP, SHAFT	909185-4040		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	ID=4
58	LEVER; FLOATING	897148-5480		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJK OP STU	
		897303-5802		0105-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
59	PLUG; SHAFT, FLOATING LEVER	109605-0500		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	PT1/8
60	LINK; CONT, INJ PUMP	897148-8650		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
61	SCREW; SET, FULL LOAD	897039-5841		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
62	SCREW; SET, IDLE SPR	897016-4410		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKL OPQRSTUVWX	
63	WASHER; IDLE SPR	909160-5040		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKL OPQRSTUVWX	ID=4
(A)								
(B)		909160-7040		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKL OPQRSTUVWX	ID=4
64	RING; SNAP, SET SCREW	909185-4030		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKL OPQRSTUVWX	
65	SCREW; CONT SET SPEED	894317-6381		9404-		2	AB EFGHI LMN PQRSTUVWXYZABCDEFGHIJKLMNOP STUVWX	L=38
		894317-6381		9510-		1	CD JK QR	L=38
		509120-0151		9510-		1	CD JK QR	L=28
66	WASHER; LK	909150-5080		9404-		2	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	ID=8
67	PIN; SPR, CONT	908160-4360		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
68	BRACKET; START SPR	897047-0521		9404-		1	C E I T XYZAB FG UV	
69	SPRING; SET	897083-7140		9404-		1	ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	

TIMING CHAIN CASE


0-89 B
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 PPPPP AAAAA 11112 67890 ABCDE	PPPPP AAAAA 22222 12345 FGHIJ	PPPPP AVVVV 20000 61234 KLMNO	PPPPP VVVWW 00000 56712 PQRST	PPPPP WWWWW 00000 34567 UVWXY	PPPPP WWWWW 00111 89012 ZABCD	4LE2 PPPCC WWWAA 111 0 347 1 EFGHI	CCCDD AAAAA 00000 23412 JKLMN	PPPPP AAAAW 0000 1231 OPQRS	PPPPP WWWWW 00000 23579 TUVWX	Remarks
70	COVER; ANGLEICH															
	897039-2644		9404-9910		1	ABC		LMNO	P ST	UVWXY	ZAB					
	897226-8411		9911-0104		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JK	OP S	TU	
	897307-4671		0105-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKL	OPQRS	TUVWX	
	897318-6150		0106-		1								MN			
71	CUP; SEALING															
	511129-0060		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	OD=16
72	GASKET; COVER, ANGLEICH					—ALSO INCLUDED IN GASKET SET(ENGINE)										
	909561-2530		9404-9910		1	ABC		LMNO	P ST	UVWXY	ZAB					
	897226-8421		9911-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
73	SPRING; FUEL CUT															
	897039-5461		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
74	NUT; SHAFT															
	909110-5080		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	M8
75	BUSHING; LEVER, MAIN SPR															
	897038-8021		9404-0010		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JK	OP S	TU	
	897262-8170		0011-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
76	CUP; SEALING, BUSHING															
	894454-6150		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
77	LEVER KIT; GOV															
	897093-5494		9404-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
78	ADJUSTER; GOV															
	897105-9090		9404-		1			LMNO	PQR				MN			
79	BOLT; CONT SET SPEED															
	020800-6550		9711-		1			MNO	P							
92	SCREW; SET															
	906023-6250		0106-		1								MN			
94	GASKET; BUSH															
(A)	909565-1140		0011-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
(B)	909565-1160		0011-		1	ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	

MEMO

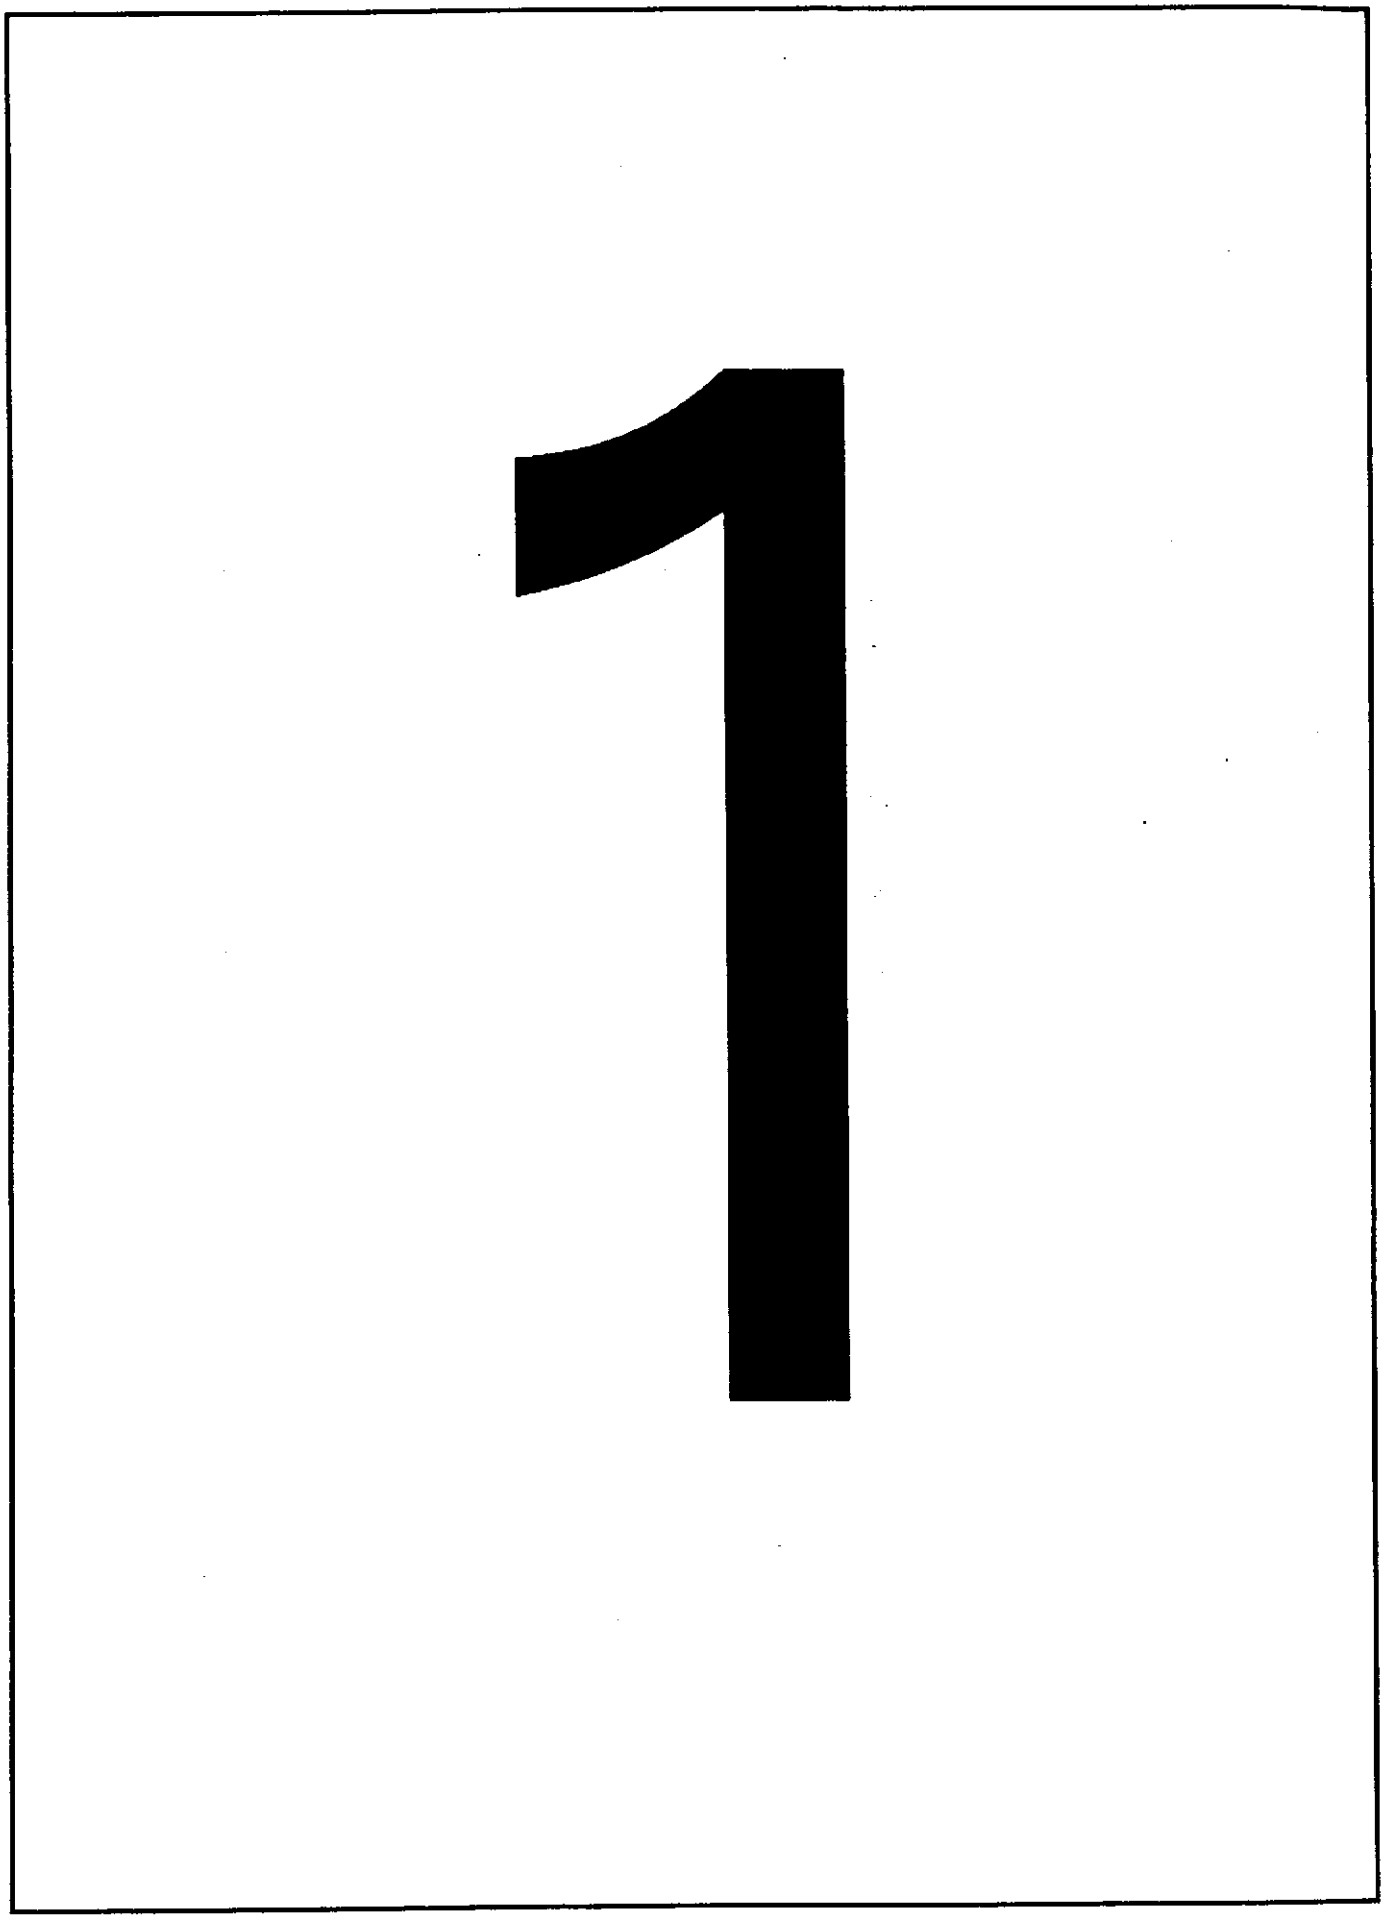
1

1-01	ACCELERATOR PEDAL AND CONTROL
FIG-NO.	

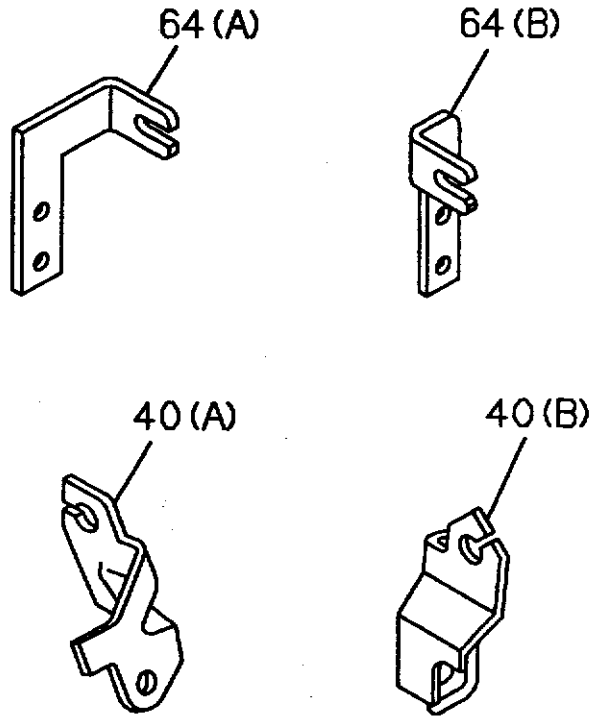

101A0150798

ACCELERATOR PEDAL AND CONTROL

1-01 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
40	BRACKET; ENG CONT CABLE							
(A)	897094-2011		C	9404-9410		1	I	
(B)	897118-4560			9411-		1	ABC 8 IJ	
64	BRACKET; ENG CONT CABLE							
(A)	897130-8791			9404-		1	EF K PQ TUVWX	


1-01 B ACCELERATOR PEDAL AND CONTROL

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1						4LE2				Remarks
						PPPPP AAAAA 11112 67890 ABCDE	PPPPP AAAAA 22222 12345 FGHIJ	PPPPP AVVVV 20000 61234 KLMNO	PPPPP VVVWW 00000 56712 PQRST	PPPPP WWWWW 00000 34567 UVWXY	PPPPP WWWWW 00111 89012 ZABCD	PPPCC WWWAA 111 0 347 1 EFGHI	CCCDD AAAAA 00000 23412 JKLMN	PPPPP AAAAW 0000 1231 OPQRS	PPPPP WWWWW 00000 23579 TUVWX	
64	BRACKET; ENG CONT CABLE															
(A)	897130-8791		9404-		1	CDE	J	K						QR		
(B)	897219-3160		9907-		1									P		

MEMO

1-10	RADIATOR
FIG-NO.	

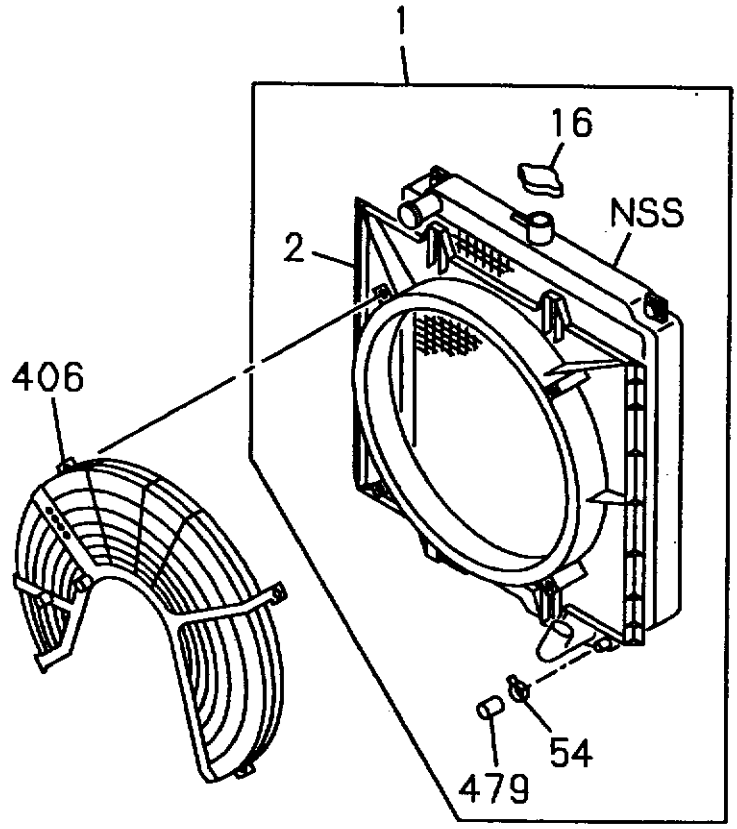

110A0150798

RADIATOR

1-10 A
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 PA01 PA02 PA03 PA04 PA05 (A B C D E)	4LB1 PA06 PA07 TPA TPA01 TPA02 (F G H I J)	4LC1 PA PA01 PA02 PA03UG PA04 (K L M N O)	4LC1 PV01 PV02 PV03 PW01 PW02 (P Q R S T)	4LC1 PW03 PW04 PW05 CA CA01 (U V W X Y)	4LE1 DA DA01 DA02 DA03 DA04 (Z A B C D)	4LE1 DA05 DA06 DA07 DA08 DA09 (E F G H I)	4LE1 PA PA01 PA02 PA03 PA04 (J K L M N)	4LE1 PA05 PA07 PA08 PA09 PA10 (O P Q R S)	4LE1 PA11 PA12 PA13 PA14 PA15 (T U V W X)	Remarks
1	RADIATOR ASM															
	897126-4654		9404-		1		G									
	897259-2860		9404-0006		1							H				
	897264-0100		0007-		1							H				
2	GUIDE; FAN															
	897226-0400		9404-		1		G									
	897256-5310		0007-		1							H				
16	CAP; RAD															
	897225-9470		9404-		1		G									
	897225-9470		9404-0006		1							H				
	897264-0110		0007-		1							H				
54	CLAMP; WIRE, HOSE															
	897225-9750		9404-		1		G									
406	GUARD; FAN															
	897127-5942		9404-		1		G									
479	CAP; RUBBER															
	897225-9630		9404-		1		G									


1-10 B RADIATOR

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
1	RADIATOR ASM	897264-0100		9711-		1		
2	GUIDE; FAN	897256-5310		9711-		1		
16	CAP; RAD	897264-0110		9711-		1		

MEMO

1-11	RADIATOR HOSE AND SUB TANK
FIG-NO.	

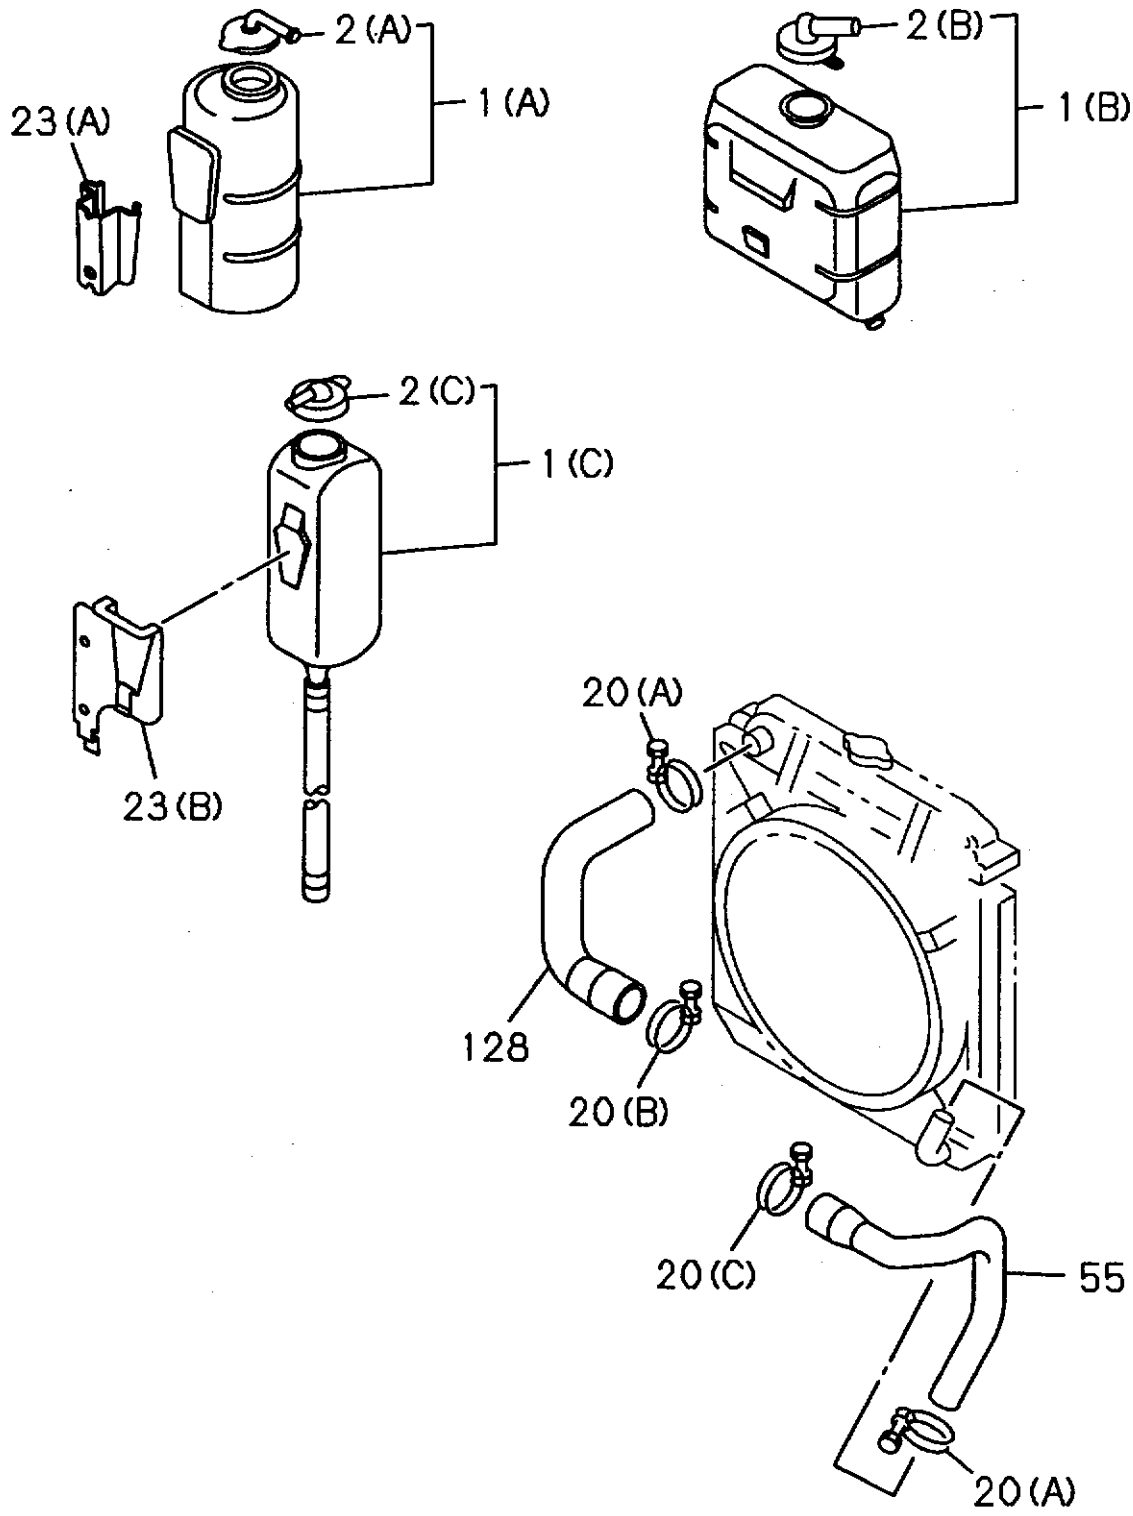

111A0150798

RADIATOR HOSE AND SUB TANK

1-11 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
1	TANK; SURGE, RAD							
(A)		894370-4500		9404-		1	C F HI M R	
(B)		894440-9690		9512-		1	D G L	
(C)		897127-5911		9404-		1	G	
2	CAP; SURGE TANK							
(A)		894370-5220		9404-		1	C F HI M R	
(B)		894449-3630		9512-		1	D G L	
(C)		897307-2700		9404-		1	G	
20	CLIP; HOSE, RAD							
(A)		909704-0313		9404-		2	G	ID=38
(B)		909704-0480		9404-		1	G H	ID=42
(C)		909915-0421		9404-		1	G	ID=44
(C)		909915-0361		0007-		2	H	
(C)		909915-2811		0007-		1	H	ID=45
23	BRACKET; RESERVE TANK							
(A)		897041-0220		9404-		1	C F HI M R	
(B)		897127-5921		9404-		1	G	
55	HOSE; WATER, RAD OUTLET							
		897131-3140		9404-		1	G	
		897131-3160		9311-0005		1	H	
		897256-5672		0006-		1	H	
128	HOSE; WATER, RAD INL							
		897131-2950		9404-		1	G	
		897131-3150		9311-0005		1	H	
		897256-5661		0006-		1	H	


1-11 B RADIATOR HOSE AND SUB TANK

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
1	TANK; SURGE, RAD							
(A)		894370-4500		9404-		1	G	
(B)		894440-9690		9404-		1	I J L	
2	CAP; SURGE TANK							
(A)		894370-5220		9404-		1	G	
(B)		894449-3630		9404-		1	I J L	
20	CLIP; HOSE, RAD							
(A)		909915-0361		9404-		2	I	
(B)		909704-0480		9404-		1	I	
(C)		909915-2811		9404-		1	I	
23	BRACKET; RESERVE TANK							
(A)		897041-0220		9404-		1	G	
55	HOSE; WATER, RAD OUTLET							
		897131-3160		9701-		1	T	
		897256-5672		9607-		1	I	
128	HOSE; WATER, RAD INL							
		897131-3150		9701-		1	T	
		897256-5661		9607-		1	I	

MEMO

1-30	AIR CLEANER
FIG-NO.	(NO.1)

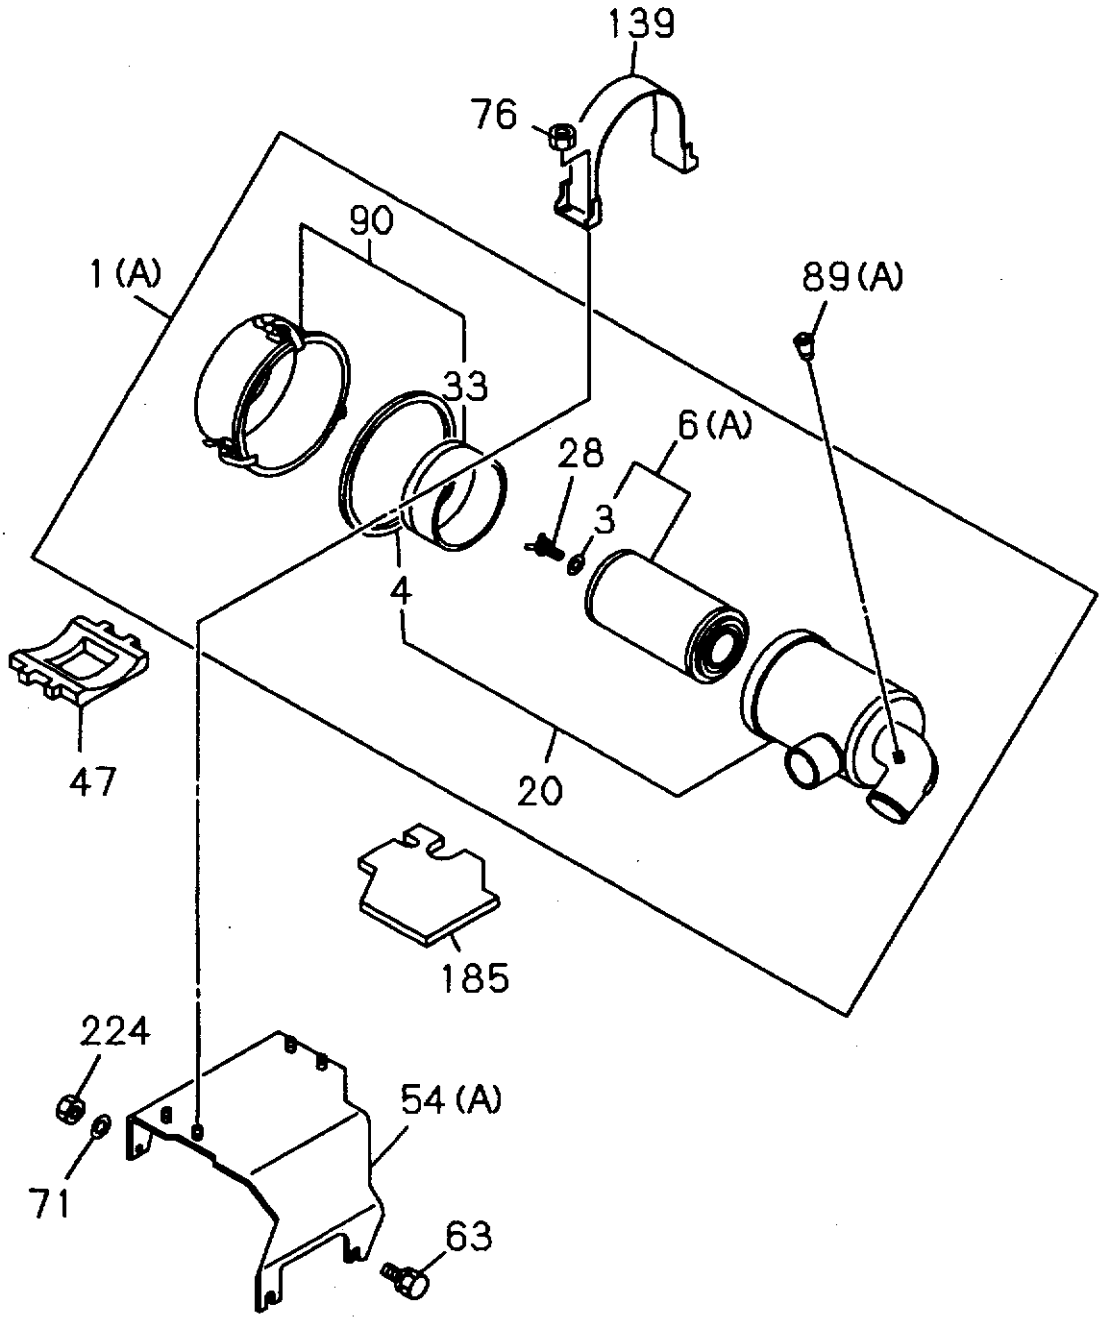


130A0150798

AIR CLEANER

(NO.2)


1-30

FIG-NO.

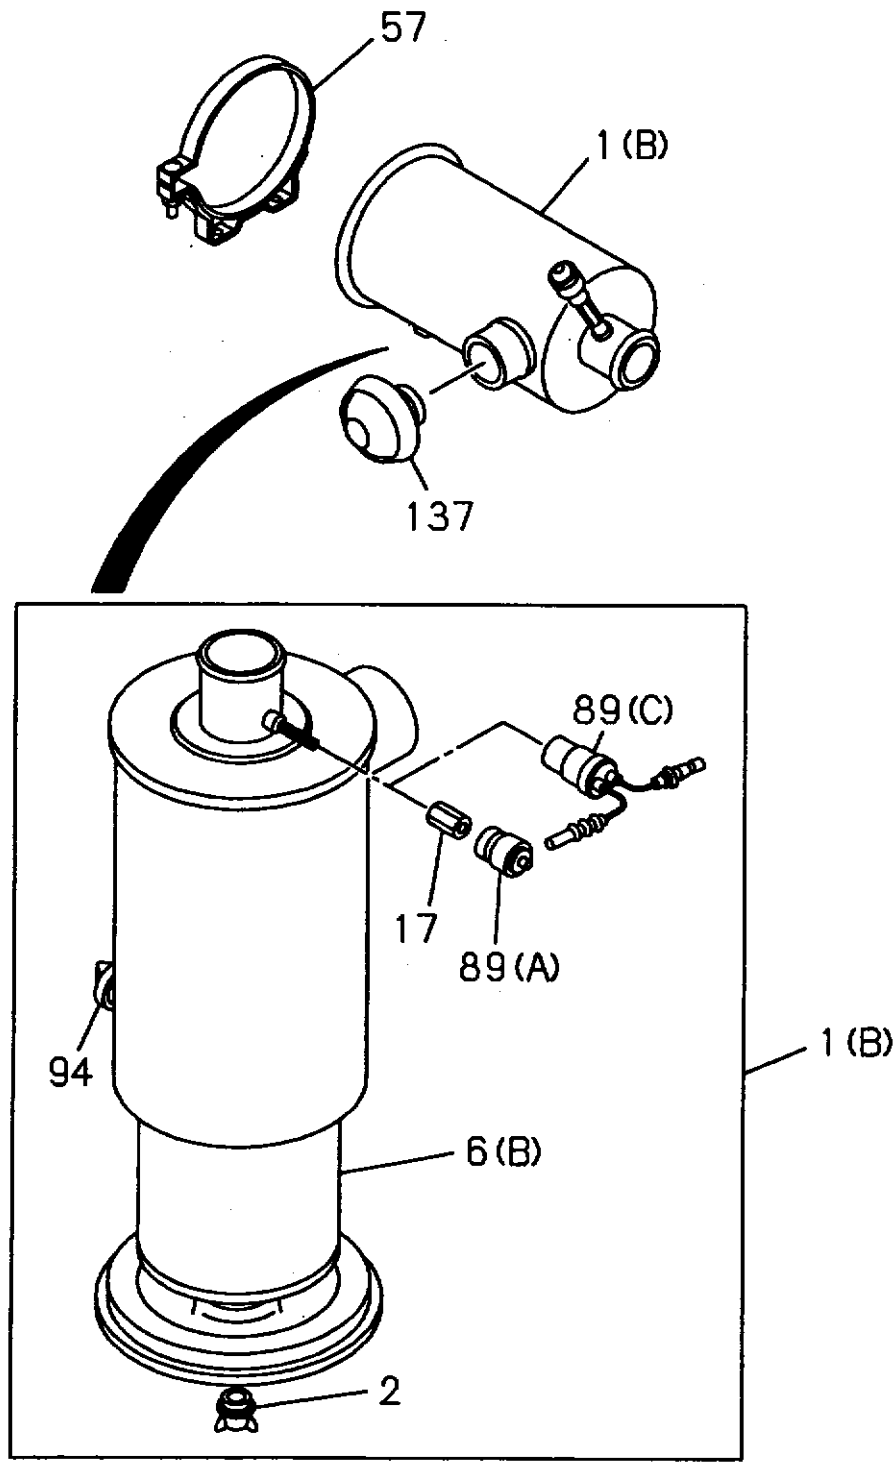

130A0250798

1-30	AIR CLEANER
FIG-NO.	(NO.3)

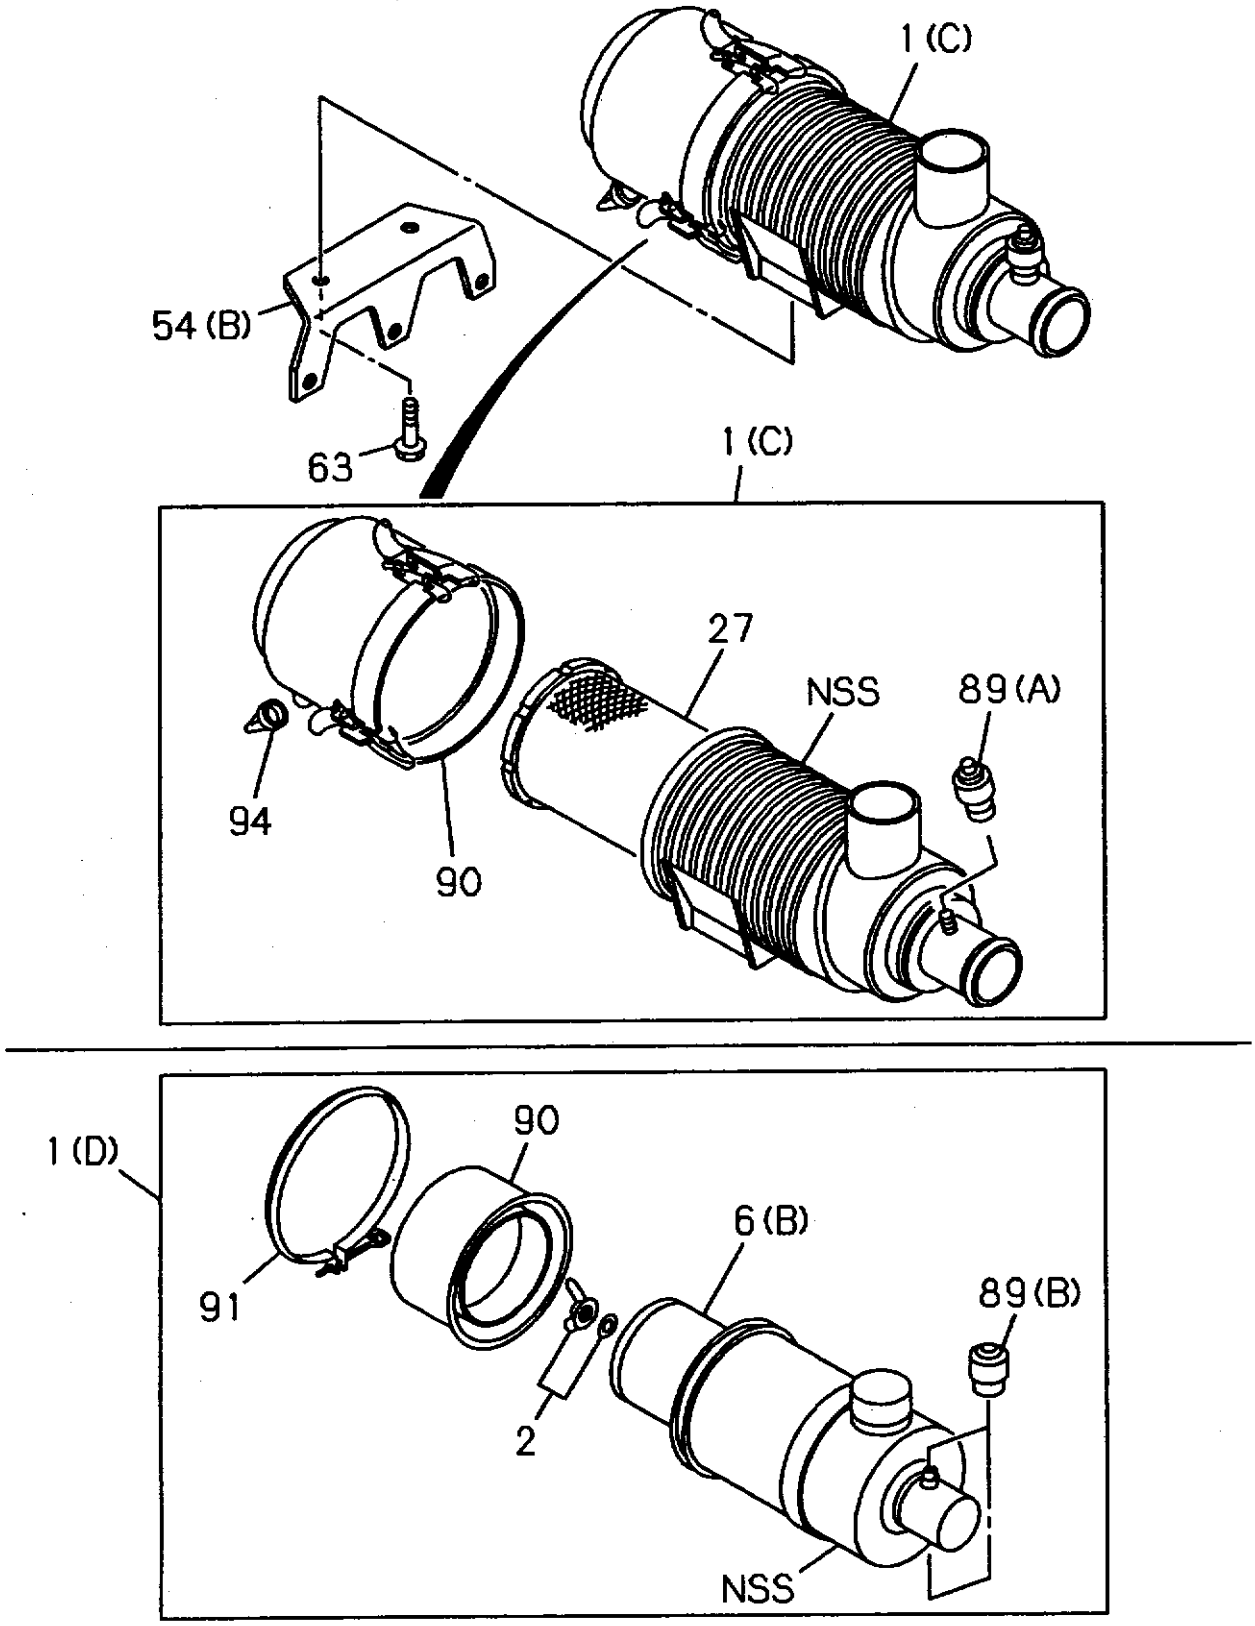

130A0350798

AIR CLEANER

1-30 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1	4LC1	4LE1	Remarks
							PPPPPAAAAA00000 12345	PPTTTAAPPP00AAA 67 00 12	PPPPPPAAAAA0000 1234 U G	PPPPPPVVVWWWW00000 12312	PPPPPWWWAA000 345	PPPCC0 1	DDDDDAAAAA0000 1234	DDDDDAAAAA0000 5678 9	PPPPPAAAAA0000 1234	PPPPPAAAAA0000 5678 9	PPPPPAAAAA1111 1234 6	
							ABCDEFGHIJ	KLMNOPQRST	UVWXYZ	ABCDEFGHIJ	KLMNOPQRST	UVWX						
1	CLEANER ASM; AIR																	
(A)	897096-6970	9404-				1	E											
(A)	897112-9650	9404-				1			LMNO									
(A)	897045-4181	9404-				1		G										
(B)	897164-5570	9404-				1							CD	F I				
(B)	897164-5570	9404-0103				1								G				
(B)	897311-8350	0104-				1								G				
(B)	897144-3310	9404-				1									L			
(B)	897164-7131	9404-				1									M			
(D)	894152-1130	9311-				1								H				
(B)	897186-4120	9404-				1										R		
2	NUT; WING, ELEMENT																	
	114217-0330	9404-9810				1							CD	FG	LM			
	114217-0360	9811-				1							CD	FG I	LM	R		
	914217-0620	9311-				1								H				
3	WASHER; SEAL, WING NUT																	
	514219-0400	9404-				1			LMNO									
	897076-3950	9404-				1	E	G										
4	GASKET; COVER TO BODY																	
	894320-4850	9404-				1	E	G	LMNO									
6	FILTER; ACL																	
(A)	894320-4870	9404-				1			LMNO									
(A)	897076-3960	9404-				1	E	G										
(B)	897175-8620	9404-				1									LM			
(B)	897168-3060	9404-				1							CD	FG I		R		
(B)	514215-0140	9311-				2								H				
17	JOINT; ACL																	
	894380-2310	9404-				1									L			
	894436-0760	9404-				1									M			
20	CASE ASM; ACL																	
	897113-3830	9404-				1			LMNO									
28	BOLT; WING, ACL																	
	514219-0390	9404-				1			LMNO									
	897076-3940	9404-				1	E	G										
33	BAFFLE; ACL																	
	894320-4860	9404-				1	E	G	LMNO									
47	CUSHION; ACL																	
	897048-9720	9404-				1		G	LMNO							P		W
54	BRACKET; ACL																	
(A)	897123-7810	9404-				1		G	LMNO									
(A)	897180-4651	9404-				1										P		W
57	BAND; ACL																	
	894365-1280	9404-				2	E						CD	FG I				

1-30 A AIR CLEANER

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 PPPPP AAAAA 00000 12345 ABCDE	PPTTT AAPPP 00AAA 67 00 12 FGHIJ	4LC1 PPPPP AAAAA 0000 1234 U G KLMNO	PPPPP VVVWW 00000 12312 PQRST	PPPCC WWWAA 000 0 345 1 UVWXY	4LE1 DDDDD AAAAA 0000 1234 ZABCD	DDDDD AAAAA 00000 56789 EFGHI	PPPPP AAAAA 0000 1234 JKLMN	PPPPP AAAAA 00001 57890 OPQRS	PPPPP AAAAA 11111 12345 TUVWX	Remarks
63	BOLT; BRKT															
	028080-8160		9404-		2		G	LMNO						P	W	M8X16 FLANGE
71	WASHER; PL, BRKT															
	909164-5080		9404-		2		G	LMNO								ID=8
76	NUT; BRKT TO ACL															
	091150-2080		9404-		4		G	LMNO						P	W	M8 FLANGE
89	INDICATOR; ACL															
(A)	181530-0050	C	9404-9705		1	E										
(A)	897166-4100		9706-		1	E										
(A)	114219-2120		9404-		1		G	LMNO					L			
(A)	897166-4100		9404-		1								M	R		
(C)	181530-0150		9404-		1						CD	FG I				
(B)	914219-1410		9311-		1							H				
90	CUP; ACL															
	897075-9980		9404-		1	E	G	LMNO								
	894159-1510		9311-		1							H				
94	VALVE; VACUATOR															
	114219-1020		9404-		1						CD	FG I	LM	R		
139	BAND; ACL															
	897048-9711		9404-		1		G	LMNO						P	W	
	514234-0450		9404-		2								LM			
	897049-7220		9404-		2									R		
185	INSULATOR; HEAT															
	897094-4641		9404-		1		G	LMNO								
224	NUT; BRKT															
	091150-2080		9404-		2		G	LMNO								M8 FLANGE
	091150-2080		9404-		1									P	W	M8 FLANGE

AIR CLEANER

1-30 B
FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
1	CLEANER ASM; AIR							
(B)		897185-4120		9404-		1	E	
(B)		897164-7131		9607-		1	GH	
(D)		894152-1130		9607-		1	F	
(C)		897217-8581		9907-		1	P	
(A)		897112-9650		9607-		1	I	
2	NUT; WING, ELEMENT							
		114217-0360		9811-		1	E GH	
		914217-0620		9607-		1	F	
3	WASHER; SEAL, WING NUT							
		514219-0400		9607-		1	I	
4	GASKET; COVER TO BODY							
		894320-4850		9607-		1	I	
6	FILTER; ACL							
(B)		897168-3060		9404-		1	E	
(B)		514215-0140		9607-		1	F	
(B)		897175-8620		9607-		1	GH	
(A)		894320-4870		9607-		1	I	
17	JOINT; ACL							
		894436-0760		9607-		1	GH	
20	CASE ASM; ACL							
		897113-3830		9607-		1	I	
27	FILTER; ACL, OUTER							
		897231-5320		9907-		1	P	
28	BOLT; WING, ACL							
		514219-0390		9607-		1	I	
33	BAFFLE; ACL							
		894320-4860		9607-		1	I	
47	CUSHION; ACL							
		897048-9720		9404-		1	DEF IJK	
54	BRACKET; ACL							
(A)		897180-4651		9404-		1	D JK	
(B)		897217-9560		9607-9905		1	P	
(A)		897131-3620		9607-0005		1	E	
(A)		897314-9181		0106-		1	Q	
63	BOLT; BRKT							
		028080-8160		9404-		2	D JK Q	M8X16 FLANGE
		028080-8160		9404-9905		3	P	M8X16 FLANGE
71	WASHER; PL, BRKT							
		909164-5080		0106-		1	Q	


1-30 B AIR CLEANER


FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
76	NUT: BRKT TO ACL							
		091150-2080		9404-		4	D J K	M8 FLANGE
89	INDICATOR: ACL							
(B)		914219-1410		9404-		1	F	
(A)		897166-4100		9404-		1	E	
(A)		114219-2120		9607-		1	I P	
90	CUP: ACL							
		894159-1510		9607-		1	F	
		897075-9980		9607-		1	I	
		897240-0200		9607-		1	P	
91	CLAMP: ACL							
		514217-0040		9607-		1	F	
94	VALVE: VACUATOR							
		114219-1020		9404-		1	E G H	
		897221-6530		9607-		1	P	
137	CAP: ACL							
		894457-3440		9404-		1	E	
139	BAND: ACL							
		897048-9711		9404-		1	D E F I J K	
		514234-0450		9607-		2	G H	
224	NUT: BRKT							
		091150-2080		9404-		1	D J K Q	M8 FLANGE

MEMO

1-31	AIR DUCT
FIG-NO.	

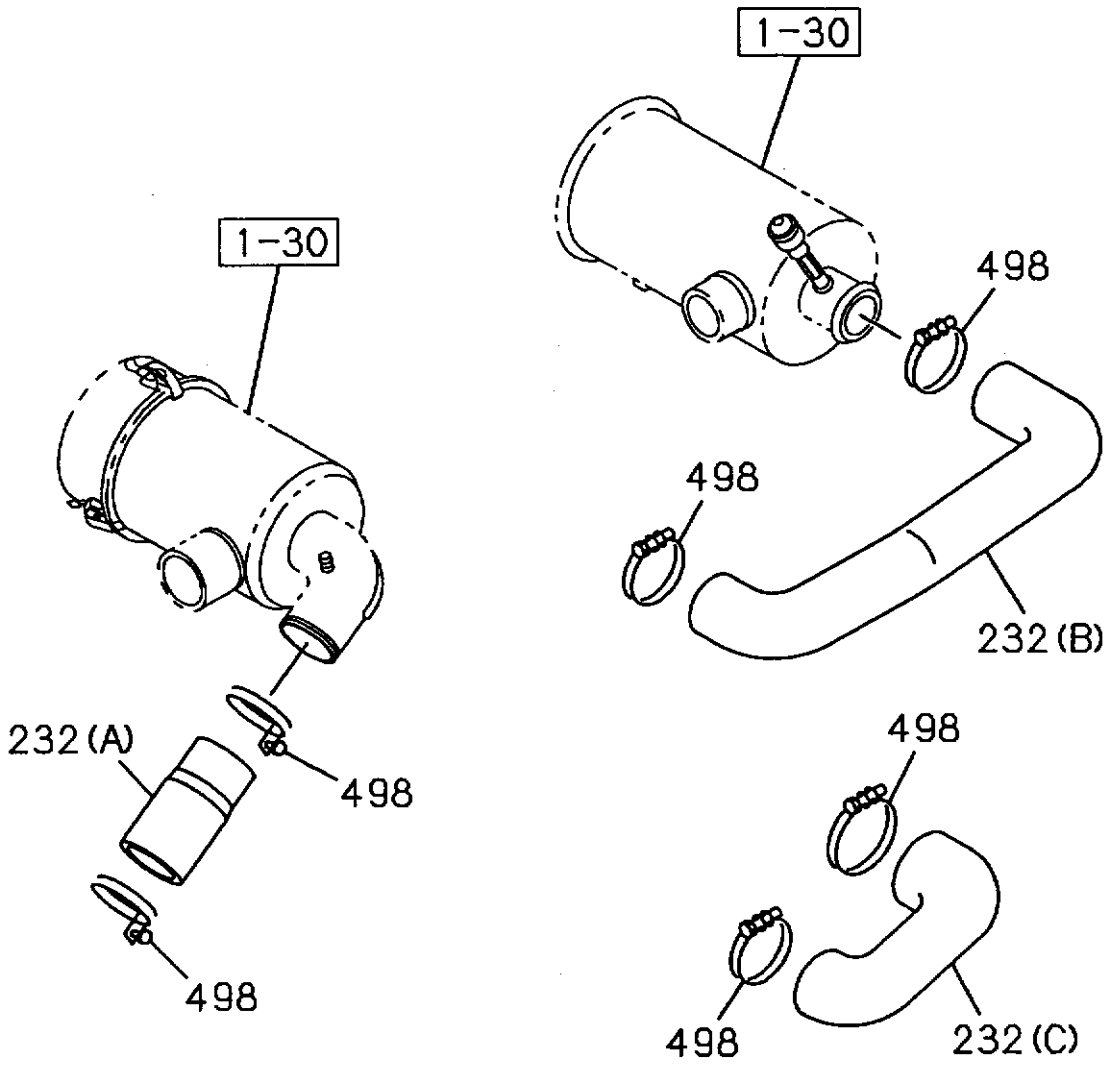

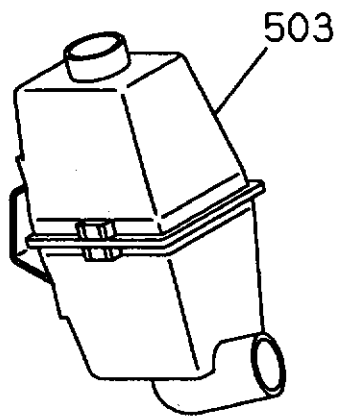

131A0150798

AIR DUCT

1-31 A
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1		4LC1			4LE1					Remarks
						PPPPP	PPTTT	PPPPP	PPPPP	PPPCC	DDDDD	DDDDD	PPPPP	PPPPP	PPPPP	
						AAAAA	AAPPP	AAAAA	VVVWW	WWWAA	AAAAA	AAAAA	AAAAA	AAAAA	AAAAA	
						00000	00AAA	0000	00000	000 0	0000	00000	0000	00001	11111	
						12345	67 00	1234	12312	345 1	1234	56789	1234	57890	12345	
							12	U								
								G								
						ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
232	HOSE; CONN															
(A)	897049-0590		9404-		1		G	LMNO								L=138
(B)	897145-2440		9404-		1								L			
498	CLIP; CONN HOSE															
	909915-4121		9404-		1		G	LMNO								ID=54
	909915-2651		9404-		1		G	LMNO								ID=60
	109704-0680		9404-		2								L			ID=72
503	SILENCER; INTAKE															
	514260-0032		9404-		1							I				


1-31 B AIR DUCT

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
232	HOSE; CONN							
(C)		897217-8780		9907-		1	P	
498	CLIP; CONN HOSE							
		909915-0691		9907-		1	P	
		909915-0721		9907-		1	P	

MEMO

1-40	FUEL TANK
FIG-NO.	

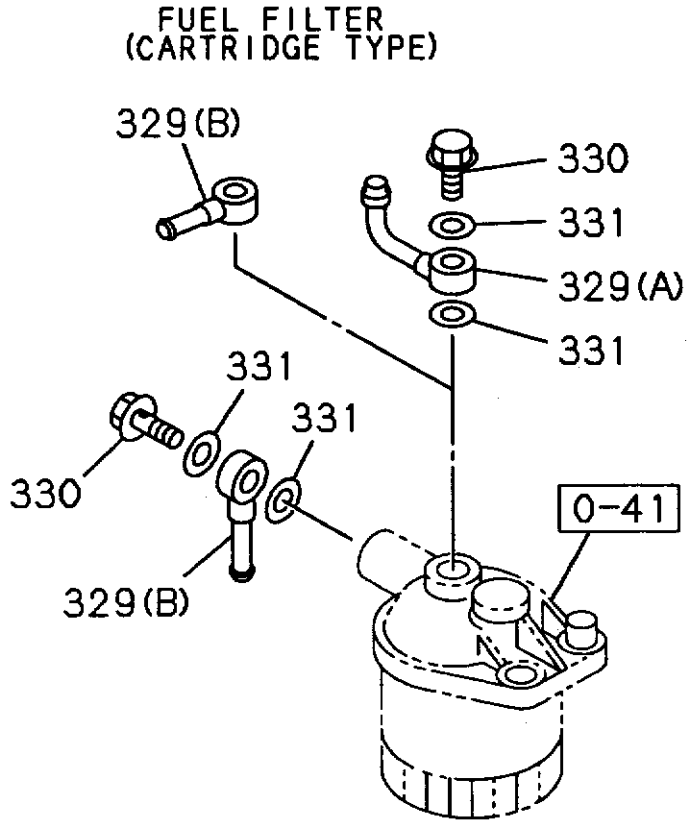

140A0150798

FUEL TANK

1-40 A FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 A–E	F–J	4LC1 K–O	P–T	U–Y (4LE1 from X)	Z–D	E–I	J–N	O–S	T–X	Remarks
329	JOINT ASM; EYE. FUEL PIPE															
(A)	509674-0810		9404-		1				PQRST	UVW	C	F I				
(B)	894148-3900		9404-		1				PQRST	UVW	C	F I				
(B)	894148-3900		9404-		2		G			Y	B	E	M	S		
330	BOLT; EYE. JOINT															
	909906-3251		9404-		2		G		PQRST	UVW Y	BC	EF I	M	S		M14X29 EYE BOLT
331	GASKET; EYE JOINT															
	909572-0140		9404-		4		G		PQRST	UVW Y	BC	EF I	M	S		ID=14.2


1-40 B FUEL TANK

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
329	JOINT ASM; EYE, FUEL PIPE							
(A)		509674-0810		9404-		1	F LM PQRSTUVWXYZABCDEFG STUV X	
(B)		894148-3900		9404-		1	F LM PQRSTUVWXYZABCDEFG STUV X	
(B)		894148-3900		9404-		2	HI K W	
330	BOLT; EYE, JOINT							
		909906-3251		9404-		2	F HI LM PQRSTUVWXYZABCDEFG K STUVWX	M14X29 EYE BOLT
331	GASKET; EYE JOINT							
		909572-0140		9404-		4	F HI LM PQRSTUVWXYZABCDEFG K STUVWX	ID=14.2

MEMO

1-45	WATER SEDIMENTER; FUEL
FIG-NO.	

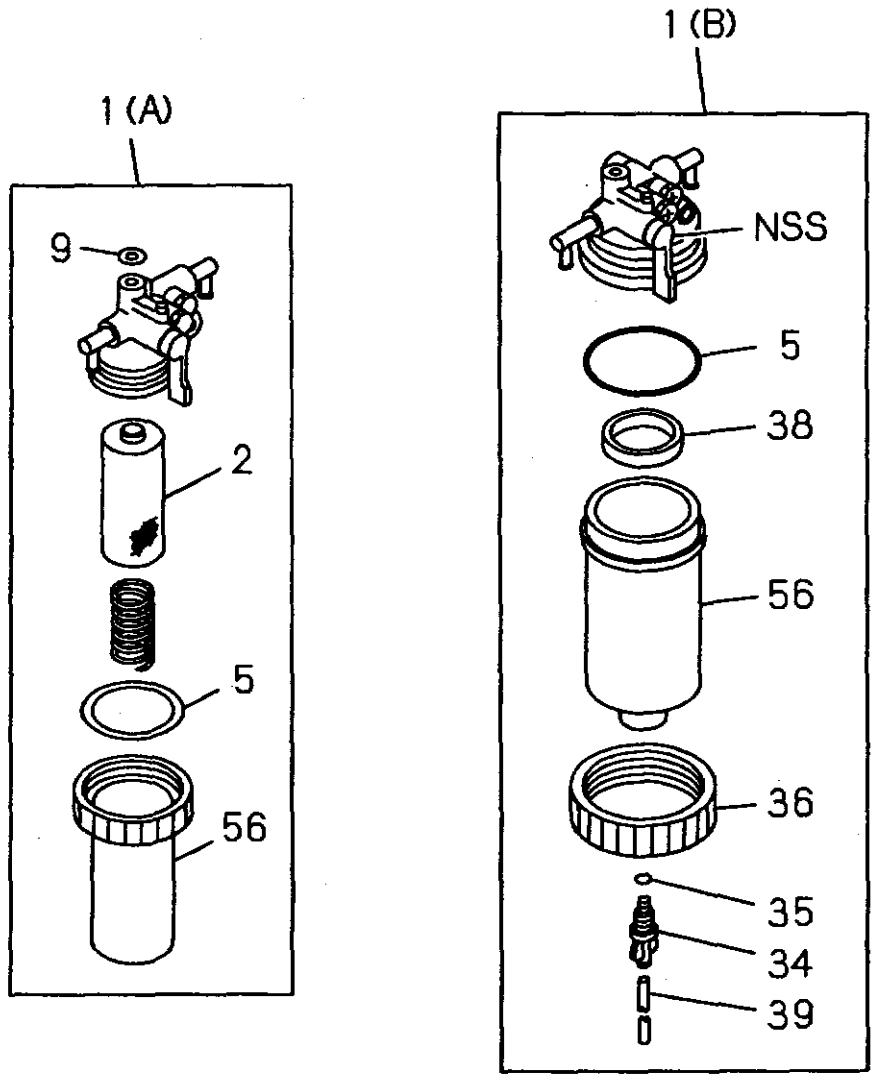

145A0150798

WATER SEDIMENTER; FUEL

1-45 A
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1		4LC1		4LE1						Remarks
						PPPPP AAAAA 00000 12345	PPTTT AAPPP 00AAA 67 00 12	PPPPP AAAAA 0000 1234 U 6	PPPPP VVVWW 00000 12312	PPPCC WWWAA 000 0 345 1	DDDDD AAAAA 0000 1234	DDDDD AAAAA 00000 56789	PPPPP AAAAA 0000 1234	PPPPP AAAAA 00001 67890	PPPPP AAAAA 11111 12345	
						ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX	
1	SEDIMENTER; FUEL															
(A)	897086-2453		9404-		1					Y	C	EF I	M	PQRS	UVW	
(A)	897037-7413		9404-		1						B					
2	ELEMENT; FUEL FILTER															
	897213-3810		9404-		1					Y	BC	EF I	M	PQRS	UVW	
5	GASKET; UPR COVER, SEDIMENTER															
	894155-1830		9404-		1					Y	BC	EF I	M	PQRS	UVW	
9	GASKET; DRAIN PLUG & CONNECTOR															
	897308-9880		9404-		2					Y	BC	EF I	M	PQRS	UVW	
56	CASE; FUEL SEDIMENTER															
	894360-2550		9404-		1					Y	BC	EF I	M	PQRS	UVW	

1-45 B WATER SEDIMENTER; FUEL

FIG-NO.


Model columns: 4LE1 / 4LE2

PPPPP	PPPPP	PPPPP	PPPPP	PPPPP	PPPPP	PPPCC	CCCDD	PPPPP	PPPPP
AAAAA	AAAAA	AVVVV	VVVWW	WWWWW	WWWWW	WWWAA	AAAAA	AAAAW	WWWWW
11112	22222	20000	00000	00000	00111	111 0	00000	0000	00000
67890	12345	61234	56712	34567	89012	347 1	23412	1231	23579
ABCDE	FGHIJ	KLMNO	PQRST	UVWXY	ZABCD	EFGHI	JKLMN	OPQRS	TUVWX

KEY NO.	PART NAME / PART NUMBER	I T C	APPLIED DATE	L R	QTY	Applicability	Remarks
1	SEDIMENTER; FUEL						
(A)	897086-2453		9404-		1	D GH JK X K P	
(A)	894335-5703		9912-		1	IJ L	
(B)	897311-2541		0106-		1	OR	
2	ELEMENT; FUEL FILTER						
	897213-3810		9404-		1	D GH JK X IJKL PQR	
5	GASKET; UPR COVER, SEDIMENTER						
	894155-1830		9404-		1	D GH JK X IJKL PQR	
9	GASKET; DRAIN PLUG & CONNECTOR						
	897308-9880		9404-		2	D GH JK X IJKL PQR	
34	PLUG; DRAIN						
	897289-1320		0106-		1	QR	
35	GASKET; DRAIN PLUG						
	897289-1330		0106-		1	QR	
36	RING; BODY TO CASE						
	897289-1310		0106-		1	QR	
38	FLOAT; WATER SEDIMENTER						
	897289-1250		0106-		1	QR	
39	HOSE; DRAIN						
	897289-1360		0106-		1	QR	
56	CASE; FUEL SEDIMENTER						
	894360-2550		9404-		1	D GH JK X IJKL P	
	897289-1180		0106-		1	QR	

MEMO

1-50	EXHAUST PIPE AND SILENCER
FIG-NO.	(NO.1)

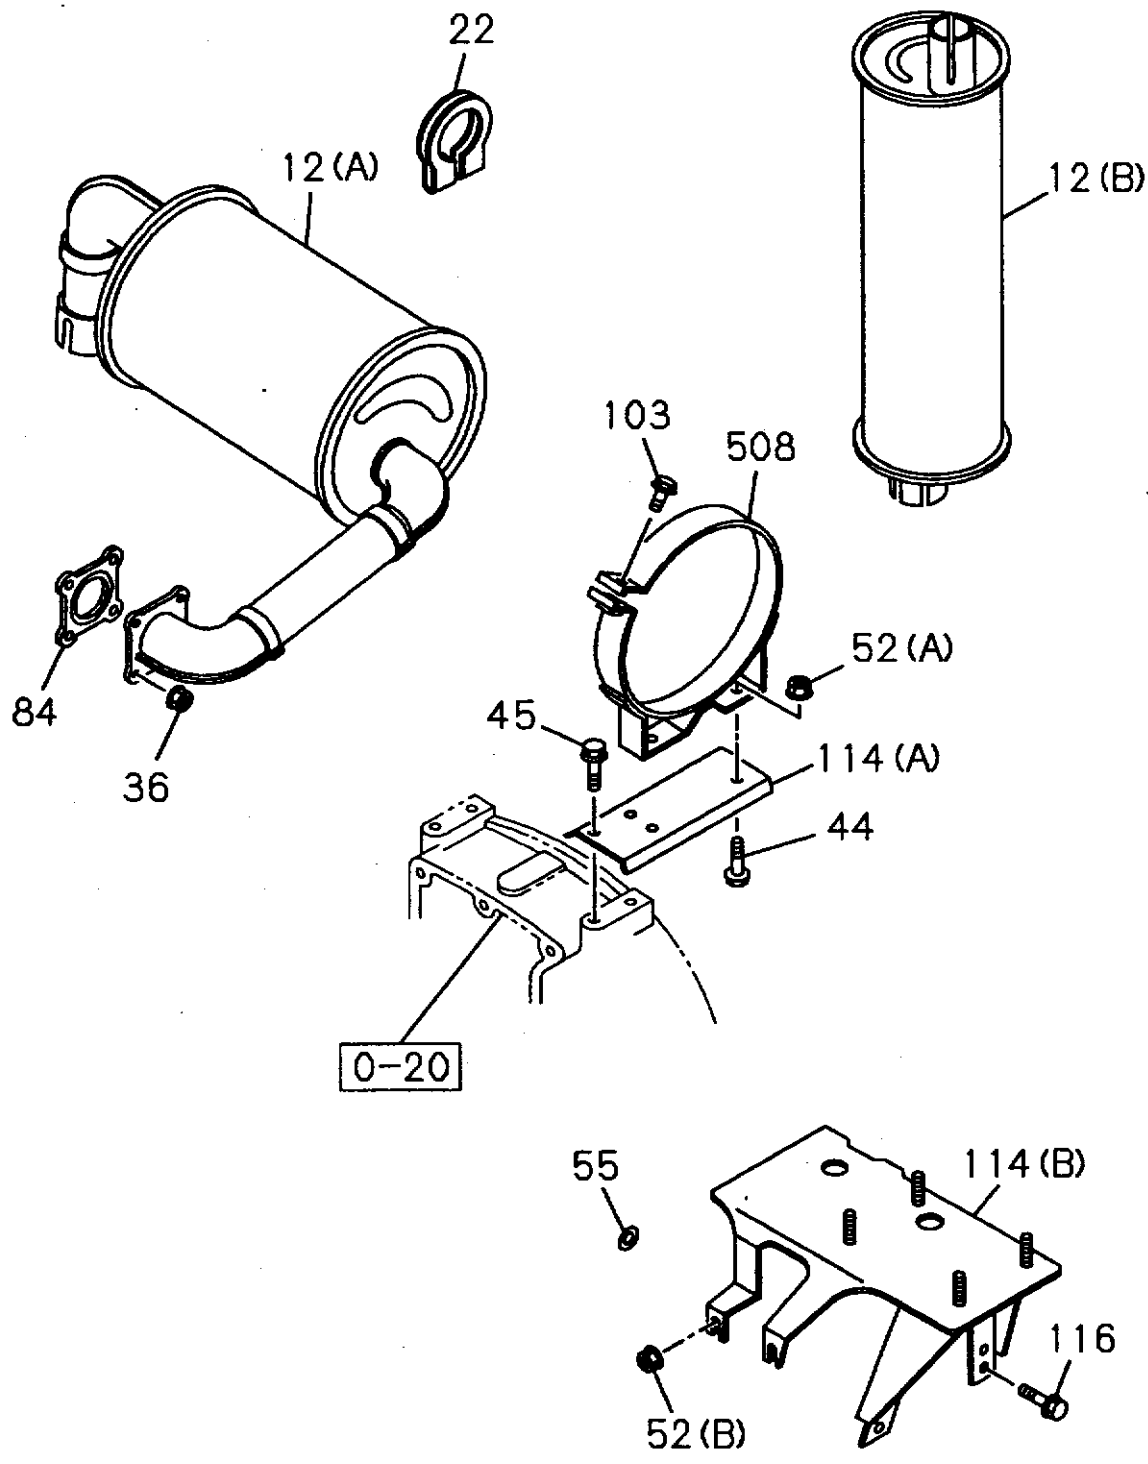


150A0150798

EXHAUST PIPE AND SILENCER

(NO.2)

1-50

FIG-NO.

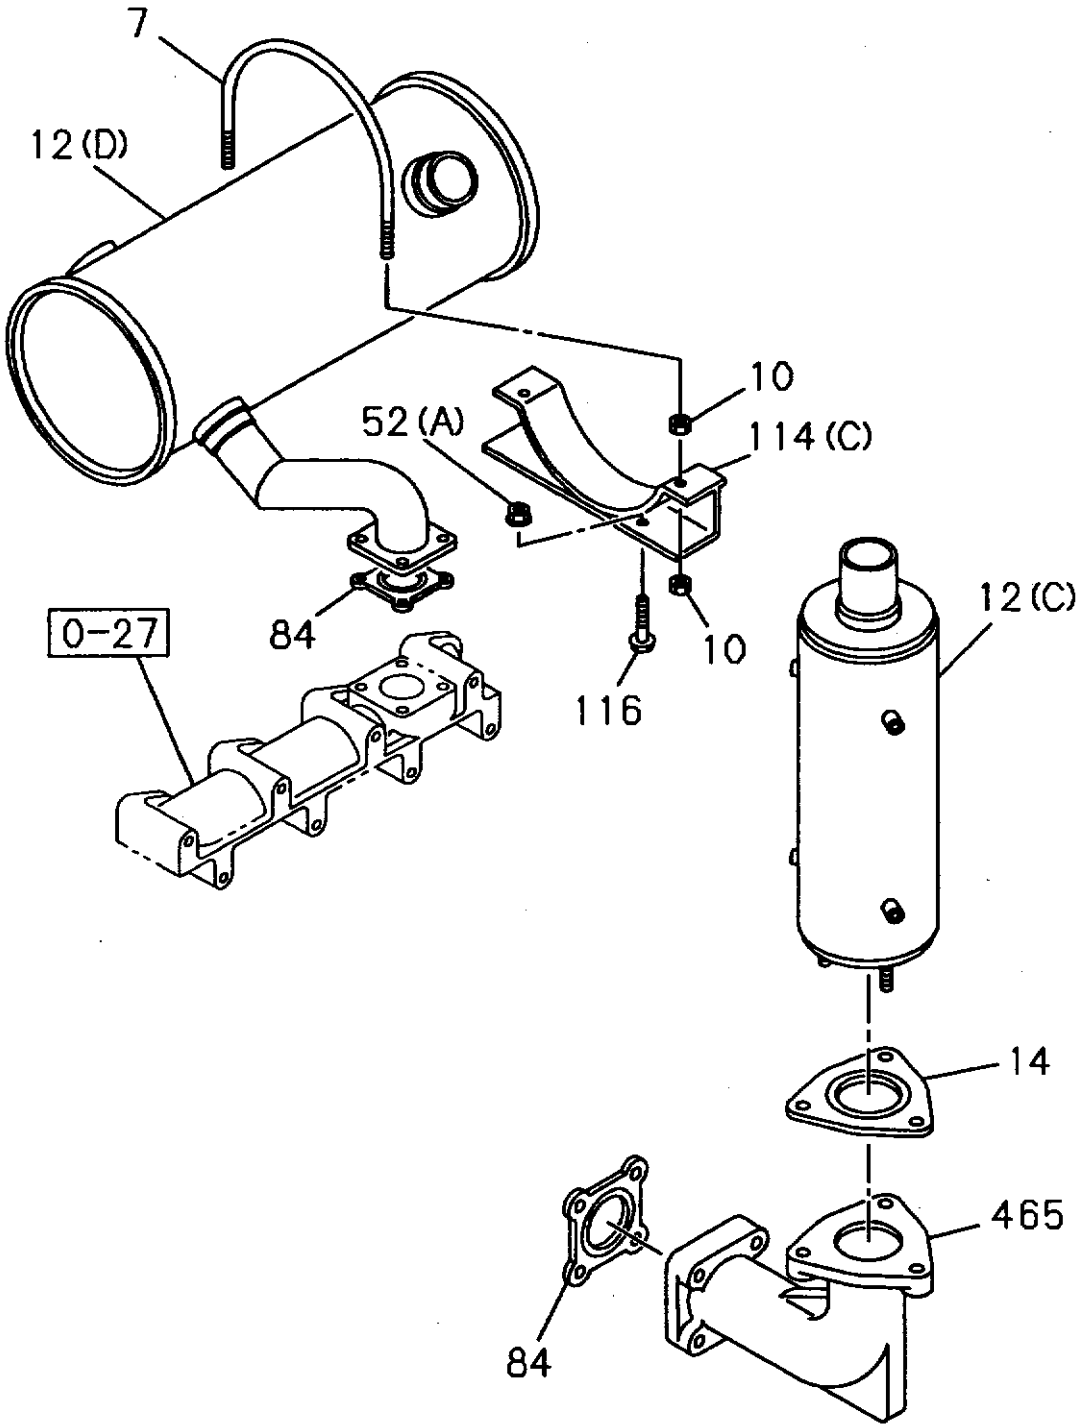

150A0250798

1-50 A EXHAUST PIPE AND SILENCER

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 PPPPPAAAAA 0000012345	PPPTTAAPPP 0067 00 12	4LC1 PPPPPAAAAA 0000 1234 U 6	PPPPPVVVVW 0000012312	PPPPWWWWA 0000345	PPPCCAA 0 0 1	4LE1 DDDDDAAAAA 0000012345	DDDDDAAAAA 0000056789	PPPPPAAAAA 0000012345	PPPPPAAAAA 0000057890	PPPPPAAAAA 0000112345	Remarks
							A B C D E F G H I J	K L M N O	P Q R S T	U V W X Y	Z A B C D	E F G H I	J K L M N	O P Q R S	T U V W X			
12	SILENCER ASM; EXH																	
(A)	897134-7410	9404-			1				L O									
(B)	897123-0070	9404-			1		D											
(B)	894314-2970	9404-			1				M									
(C)	897107-7140	9404-			1			G										
(A)	897136-4540	9404-			1										L M	R		
(B)	897164-7120	9404-0005			1								C	F H				
(B)	897262-8160	0006-			1								C	F H				
(A)	897182-6811	9404-9804			1											P		
(A)	897205-8040	9805-			1											P	W	
(A)	897208-9930	9404-			1												X	
14	GASKET; SILENCER TO EXH PIPE																	
	914145-0760	9404-			1			G										
22	CLAMP; EXH PIPE																	
	894473-5630	9404-			1				K L						M	P		
	894473-5630	9404-			2								C	F H I				
36	NUT; EXH PIPE																	
	091150-2080	9404-			4				L O						L M	P R	W X	M8 FLANGE
44	BOLT; BRKT																	
	028081-0200	9404-			4				L O									M10X20 FLANGE
	028681-0250	9404-			4										L M	P R	X	M10X25 FLANGE
45	BOLT; BRKT																	
	028181-0200	9404-			4				L O									M10X20 FLANGE
	028781-0200	9404-			4										L M	R	X	M10X20 FLANGE
52	NUT; BRKT																	
(A)	091150-2100	9404-			4				L O						L M	P R	W X	M10 FLANGE
(B)	091150-2080	9404-			2											P	W	M10 FLANGE
55	WASHER; PL, BRKT																	
	909164-5080	9906-			2											P	W	
84	GASKET; EXH PIPE																	
	897042-0280	9404-			1				L O						L M	P R	W X	
	897111-4490	9404-			1			G										
103	BOLT; SILENCER BRKT FIX																	
	028080-8300	9404-9509	C		2				L									M8X30 FLANGE
	028080-8450	9510-9706			2				L						L M			M8X45 FLANGE
	028680-8400	9707-			2				L O						L M	P R	W X	M8X45 FLANGE
114	BRACKET; EXH SILENCER																	
(A)	897046-7372	9404-			2				L O						L M	R	X	
(B)	897187-7181	9710-			1											P	W	
116	BOLT; BRKT																	
	028080-8160	9811-			2											P	W	M8X16 FLANGE
	028680-8300	9811-			2											P	W	M8X30 FLANGE

EXHAUST PIPE AND SILENCER

1-50 A
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	I T C	APPLIED DATE	L R	QTY	4LB1 PA01 PA02 PA03 PA04 PA05 (A B C D E)	PA06 PA07 TPA TPA01 TPA02 (F G H I J)	4LC1 PA PA01 PA02 PA03UG PA04 (K L M N O)	PV01 PV02 PV03 PW01 PW02 (P Q R S T)	PW03 PW04 PW05 CA CA01 (U V W X Y)	4LE1 DA DA01 DA02 DA03 DA04 (Z A B C D)	DA05 DA06 DA07 DA08 DA09 (E F G H I)	PA PA01 PA02 PA03 PA04 (J K L M N)	PA05 PA07 PA08 PA09 PA10 (O P Q R S)	PA11 PA12 PA13 PA14 PA15 (T U V W X)	Remarks
116	BOLT; BRKT															
	028680-8350		9811-		2									P	W	M8X35 FLANGE
465	PIPE; EXH, SILENCER CONNECTOR															
	897218-6800		9404-		1		G									
508	BAND; EXHAUST SILENCER															
	897062-7432		9404-9706		2			L					L M			
	897180-9130		9707-		2			L					L M	R		
	897062-7432		9807-		2	D		O							X	
	897187-1660		9404-		2									P	W	

1-50 B EXHAUST PIPE AND SILENCER

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
7	U-BOLT; EXH PIPE	897322-8810		0106-		2	Q	
10	NUT; U-BOLT	091150-2080		0106-		8	Q	
12	SILENCER ASM; EXH							
(A)		897136-4540		9404-		1	G P	
(A)		897205-8040		9805-		1	D J K	
(A)		897208-9930		9404-		1	C E H	
(B)		897164-7120		9607-0005		1	F	
(B)		897262-8160		0006-		1	F	
(C)		897107-7140		9607-		1	I	
(D)		897322-8760		0106-		1	Q	
14	GASKET; SILENCER TO EXH PIPE	914145-0760		9404-		1	I	
22	CLAMP; EXH PIPE	894473-5630		9707-		1	G H	
36	NUT; EXH PIPE	091150-2080		9404-		4	C D E G H J K P Q	M8 FLANGE
44	BOLT; BRKT	028681-0250		9404-		4	C E G H P	M10X25 FLANGE
45	BOLT; BRKT	028781-0200		9404-		4	C E G H P	M10X20 FLANGE
52	NUT; BRKT							
(A)		091150-2100		9404-		4	C D E G H J K P Q	M10 FLANGE
(B)		091150-2080		9404-		2	D J K	M10 FLANGE
55	WASHER; PL, BRKT	909164-5080		9906-		2	D J K	
		909164-5080		0106-		1	Q	
84	GASKET; EXH PIPE	897042-0280		9404-		1	C D E G H J K P Q	
103	BOLT; SILENCER BRKT FIX	028680-8400		9707-		2	C D E G H J K P	M8X45 FLANGE
114	BRACKET; EXH SILENCER							
(A)		897046-7372		9404-		2	C E G H P	
(B)		897187-7181		9710-		1	D J K	
(C)		897322-8810		0106-		1	Q	
116	BOLT; BRKT	028080-8160		9811-		2	D J K	M8X16 FLANGE
		028680-8300		9811-		2	D J K	M8X30 FLANGE
		028680-8350		9811-		2	D J K	M8X35 FLANGE


EXHAUST PIPE AND SILENCER

1-50 B


FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
116	BOLT; BRKT							
		028681-0250		0106-		2	Q	M10X25 FLANGE
508	BAND; EXHAUST SILENCER							
		897180-9130		9707-		2	G	
		897187-1660		9404-		2	D JK P	
		897062-7432		9404-		2	C E H	

MEMO

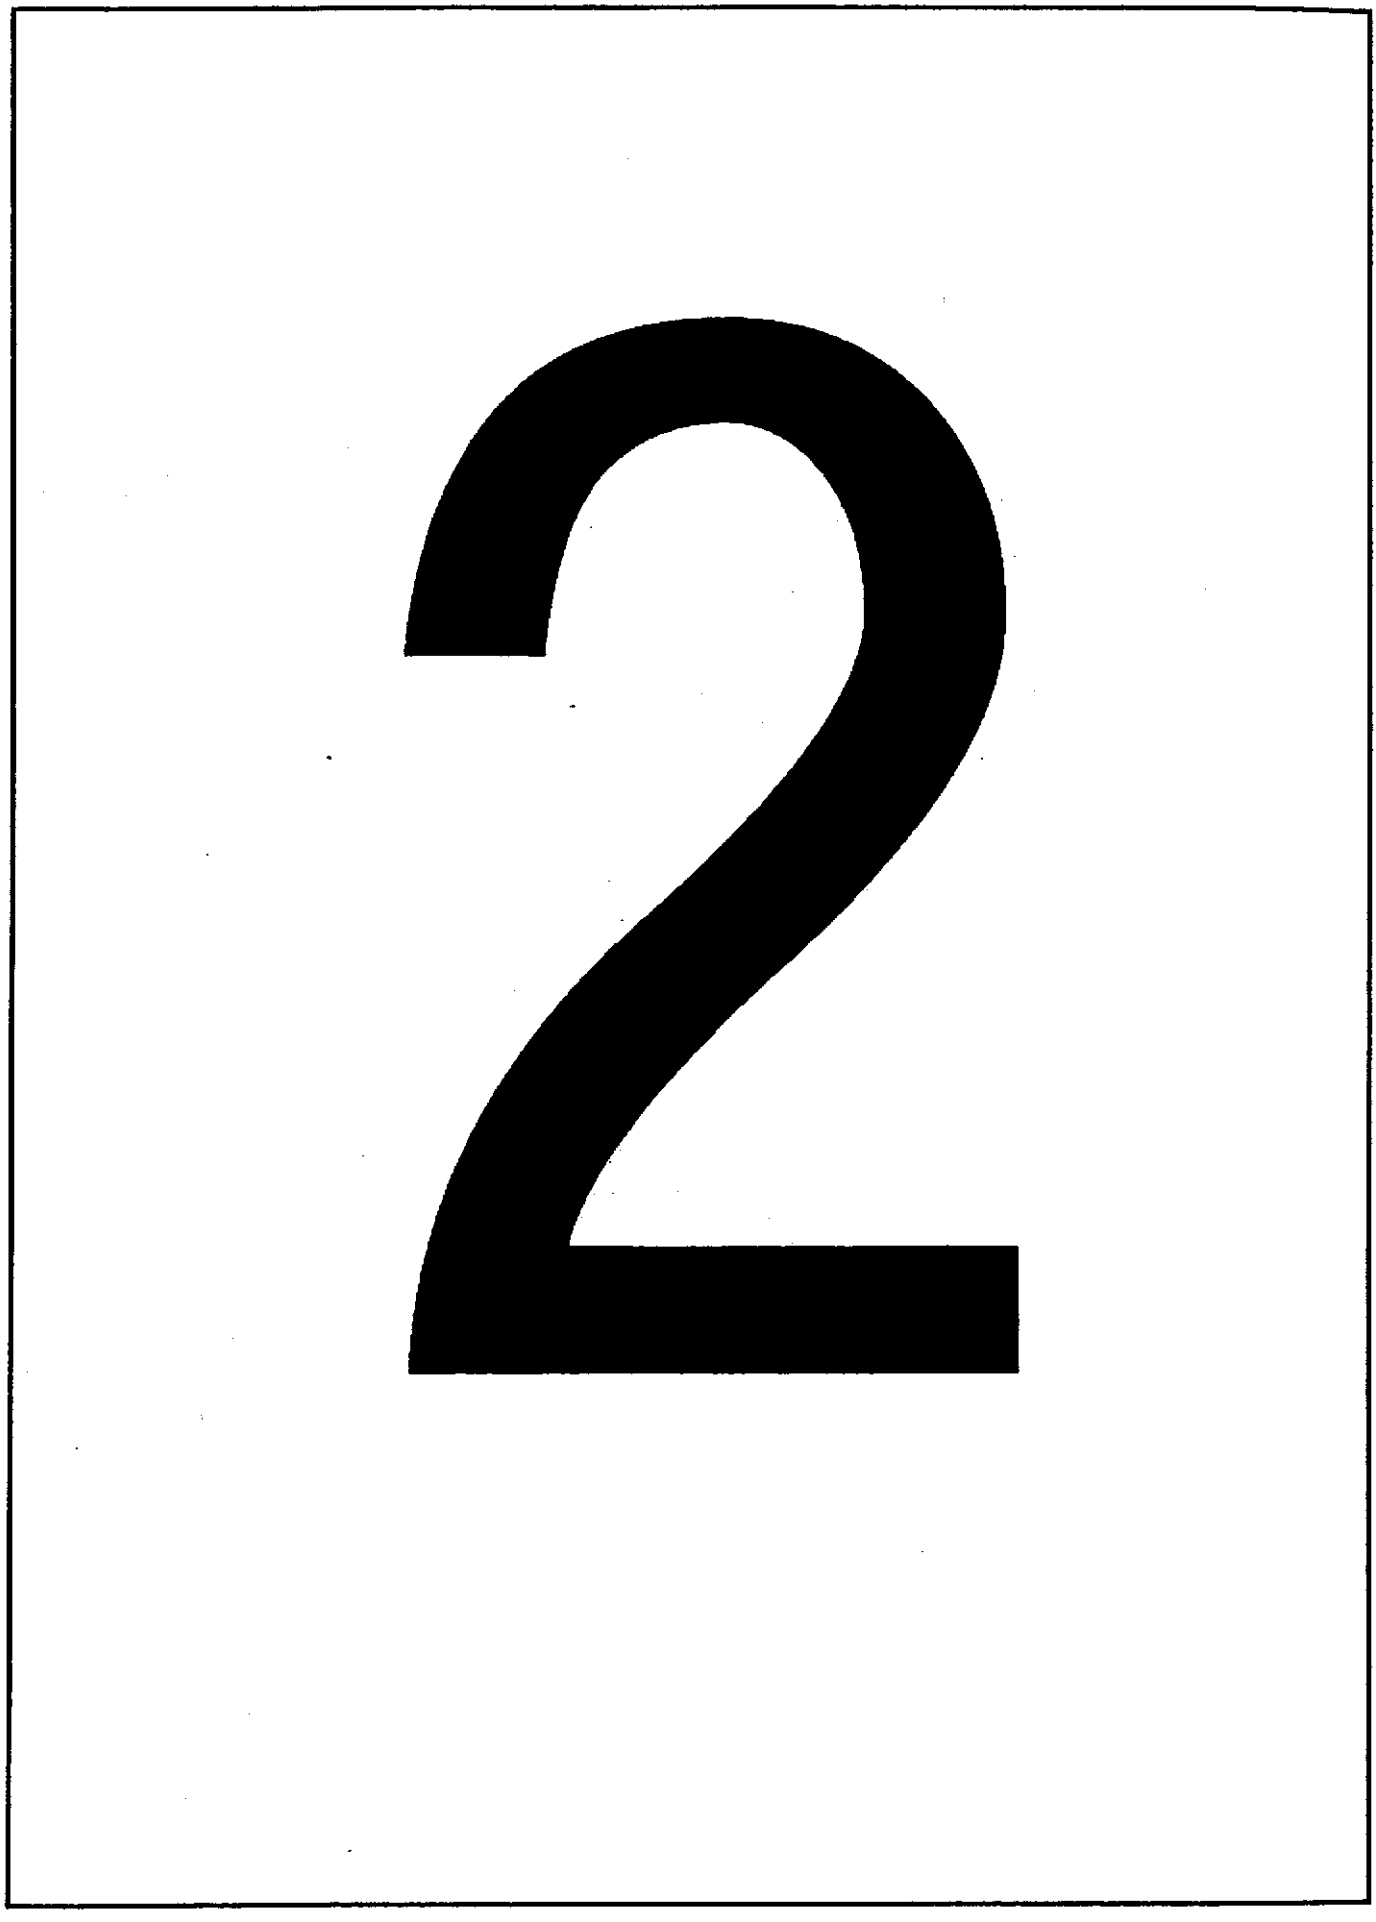
2

2-01	CLUTCH
FIG-NO.	

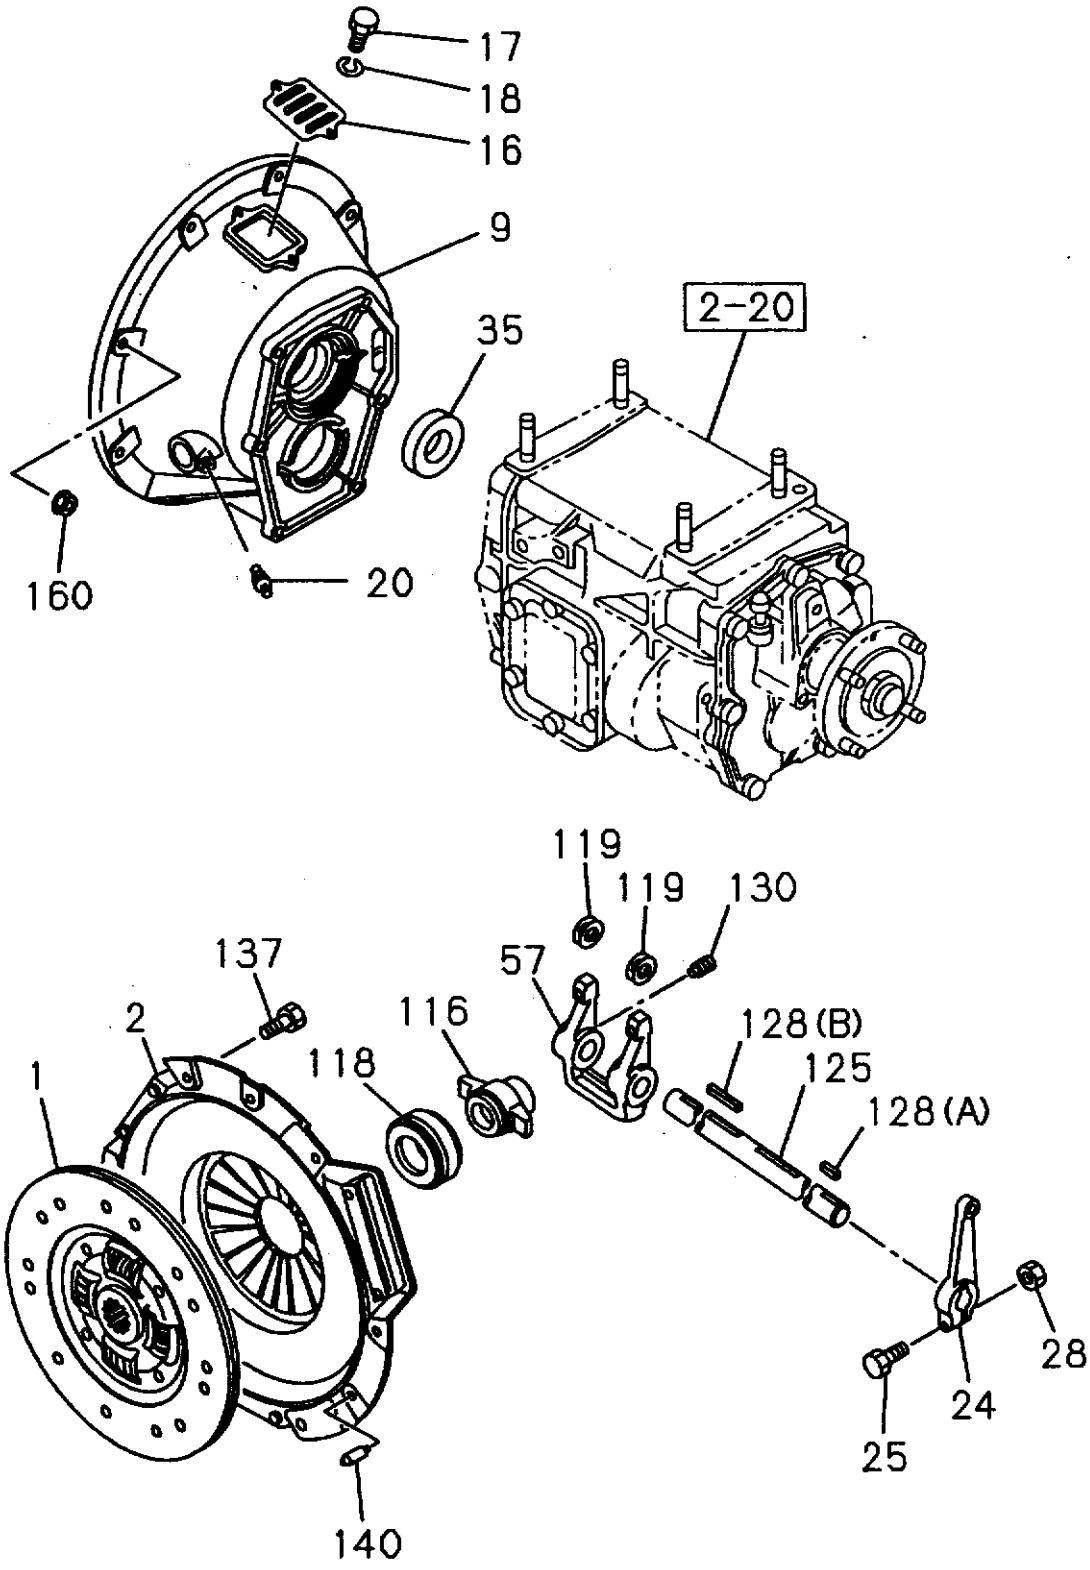

201A0150798

CLUTCH

2-01 A
FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1	4LC1	4LE1	Remarks
							PPPPPPPPTTTTPPPPPPPPPPPPPPPPCCDDDDDDDDDDPPPPPPPPPPPPPPPPPPPPPP AAAAAAAAPPPPAAAAAAVVVVWWWWWWAAAAAAAAAAAAAAAAAAAAAAAAAAAAAA 0000000AAA 0000000000000 0 0000000000 0000000001111 1234567 0012 1234U8 12312345 1 1234567890 1234578901234	
							ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
1	DISC; CLUTCH	897042-6830	9404-		1		N	
2	PLATE ASM; PRESSURE, CLU	931220-6111	9404-		1		N	
		894203-3542	9404-		1		8	
9	HOUSING; CLU, W/BUSHING	897029-1040	9404-		1		N	
16	COVER; PLATE, CLU HSG	931131-0240	9404-		1		N	
17	BOLT; COVER TO HSG	020800-5120	9404-		2		N	M5X12
18	WASHER; LK, COVER TO HSG	909150-5050	9404-		2		N	ID=5
20	NIPPLE; GREASE	909031-0100	9404-		2		N	PT1/8-k=20
24	BLOCK; SHIFT FORK SHAFT	931421-0220	9404-		1		N	
25	BOLT; CLU SHAFT	028081-0500	9404-		1		N	M10X50
28	NUT; CLU SHIFT FORK	091150-1100	9404-		1		N	M10 FLANGE
35	SEAL; OIL	894326-4410	9404-		1		N	
57	FORK; SHIFT, CLU	931341-0280	9404-		1		N	
116	BLOCK; SHIFT, CLU	589313-2040	9404-		1		N	
118	BEARING; CLU RELEASE	900095-0381	9404-		1		N	
119	SPRING; SHIFT FORK	131329-0100	9404-	R	1		N	
		131329-0110	9404-	L	1		N	
125	SHAFT; CLU	931342-0290	9404-		1		N	
128	KEY; FEATHER, CLU SHAFT							
(A)		908030-7180	9404-		2		N	
(B)		908030-7300	9404-		2		N	


2-01 A CLUTCH

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
130	SCREW: SHIFT FORK	906000-8120		9404-		1	N	
137	BOLT: CLU COVER	028680-8200		9404-		6	N	M8X20 FLANGE
140	PIN: STRAIGHT	909878-5320		9404-		2	N	OD=6 L=24
160	NUT	091250-2100		9404-		2	N	

MEMO

2-03	CLUTCH PEDAL AND CONTROL
FIG-NO.	

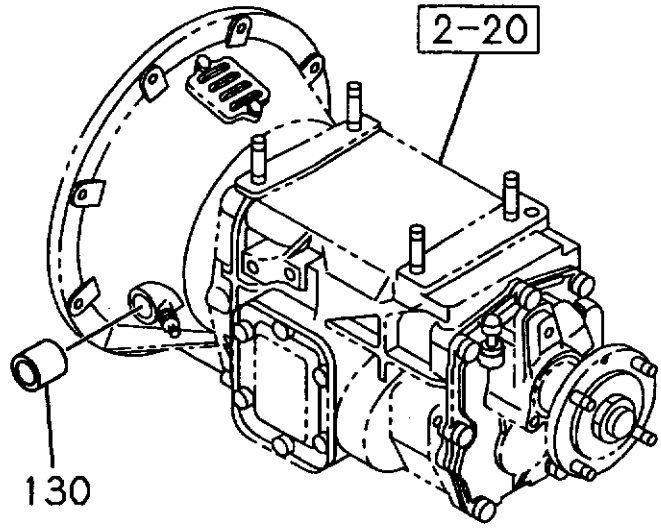

203A0150798


CLUTCH PEDAL AND CONTROL

2-03 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
130	BUSHING: CLU HSG	989311-1130		9404-		2	N	

2-20	MANUAL TRANSMISSION ASM AND CASE
FIG-NO.	

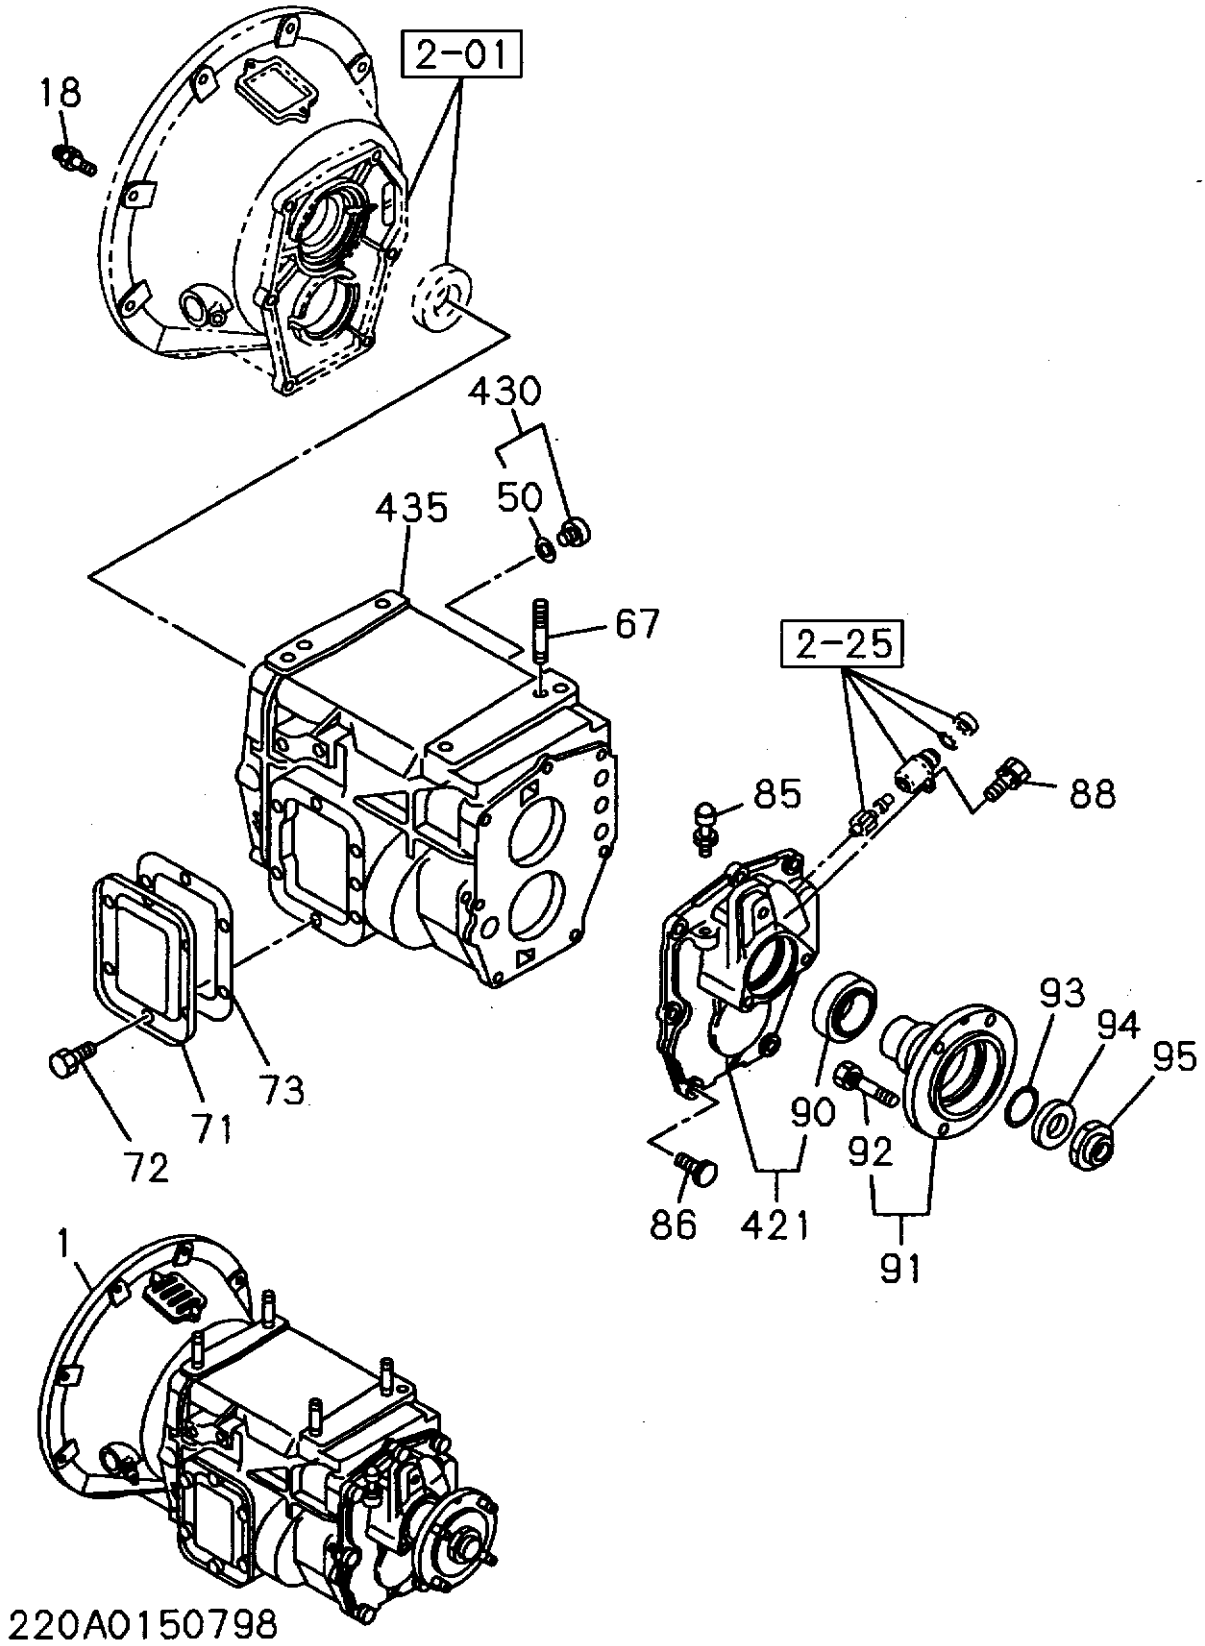

MANUAL TRANSMISSION ASM AND CASE

2-20 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 PPPPPPAAAAA00000012345	PPTTTPPAAPPP00AAA0012	4LC1 PPPPPPAAAAA0000012346U6	PPPPPPVVVWW00000012312	PPPCC WWWAA000 01345	DDDDDDAAAAA0000012345	DDDDDDAAAAA0000056789	PPPPPPAAAAA0000012345	PPPPPPAAAAA0000078901	PPPPPPAAAAA1111112345	Remarks
							ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX										
1	TRANSMISSION ASM: MANUAL																
	897075-5590		9404-			1			N								
18	SUPPORT; WITH DRAW LEVER																
	531345-0021		9404-9903			1			N								
	897225-4691		9904-			1			N								
50	GASKET; DRAIN PLUG																
	894336-5110		9404-			1			N								ID=15.3
67	STUD; CASE TRANS																
	909631-0040		9404-9905			4			N								
	909631-0040		9906-			6			N								
71	COVER; SIDE, TRANS CASE																
	933141-6012		9404-			1			N								
72	BOLT; SIDE COVER																
	894128-7910		9404-			6			N								
73	GASKET; SIDE COVER TO TRANS CASE																
	933142-6010		9404-			1			N								
85	BREATHER; RR COVER																
	897165-9390		9404-			1			N								
86	BOLT; RR COVER																
	894128-7860		9404-			7			N								M8X25
88	SCREW; SPEEDOMETER BUSHING																
	894128-7850		9404-			1			N								M8X12
90	SEAL; OIL, RR COVER																
	897074-6510		9404-0008			1			N								NOK
	897257-2960		0009-			1			N								NOK
91	DRIVER; COUPLING																
	897011-3462		9404-9905			1			N								
	897207-2150		9906-			1			N								
92	BOLT; COUPLING DRIVER																
	897109-6961		9404-			4			N								
93	GASKET; COUPLING DRIVER																
	894421-5760		9404-9905			1			N								
	894178-7250		9906-			1			N								
94	WASHER; COUPLING DRIVER																
	894249-2400		9404-			1			N								
95	NUT; MAINSHAFT																
	897087-7500		9404-			1			N								M24 FLANGE
421	COVER; RR, TRANS																
	897112-9862		9404-			1			N								


2-20 A MANUAL TRANSMISSION ASM AND CASE

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Remarks
							4LB1										4LC1													4LE1																											
							PA01	PA02	PA03	PA04	PA05	PA06	PA07	TPA	TPA01	TPA02	PA	PA01	PA02	PA03UG	PA04	PV01	PV02	PV03	PW01	PW02	PW03	PW04	PW05	CA	CA01	DA	DA01	DA02	DA03	DA04	DA05	DA06	DA07	DA08	DA09	PA	PA01	PA02	PA03	PA04	PA05	PA07	PA08	PA09	PA10	PA11	PA12	PA13	PA14	PA15	
430	PLUG: OIL DRAIN																																																									
		894336-5121		9404-		1														N																																					
435	CASE: TRANS																																																									
		897072-0040		9404-9905		1														N																																					
		897206-0050		9906-0110		1														N																																					
		897240-8470		0111-		1														N																																					

MEMO

2-25	SPEEDOMETER DRIVEN GEAR
FIG-NO.	

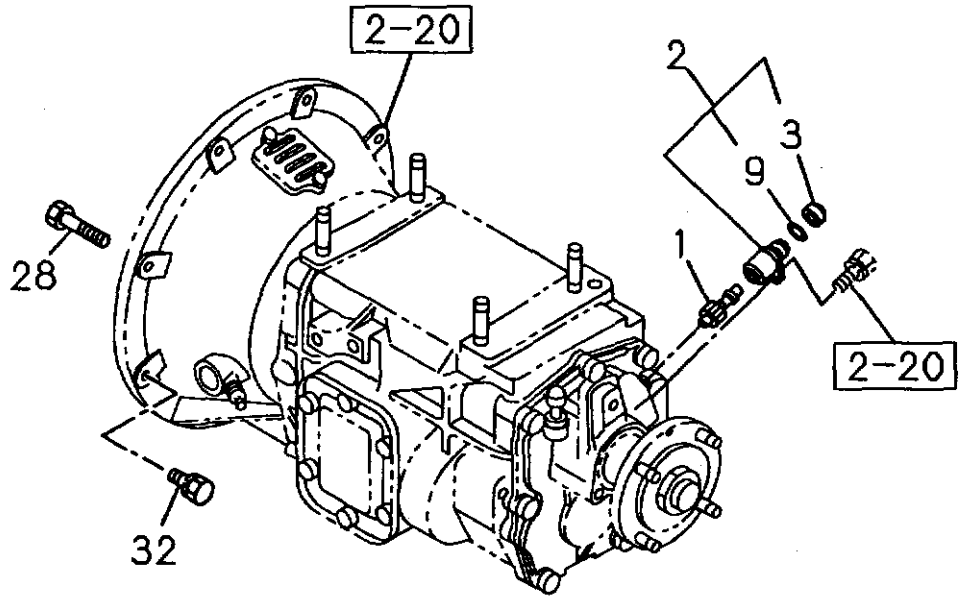


225A0150798

SPEEDOMETER DRIVEN GEAR

2-25 A
FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 PA01 (A)	PA02 (B)	PA03 (C)	PA04 (D)	PA05 (E)	PA06 (F)	PA07 (G)	TPA (H)	TPA01 (I)	TPA02 (J)	4LC1 PA (K)	PA01 (L)	PA02 (M)	PA03U6 (N)	PA04 (O)	PV01 (P)	PV02 (Q)	PV03 (R)	PW01 (S)	PW02 (T)	PW03 (U)	PW04 (V)	PW05 (W)	CA (X)	CA01 (Y)	4LE1 DA (Z)	DA01 (A)	DA02 (B)	DA03 (C)	DA04 (D)	DA05 (E)	DA06 (F)	DA07 (G)	DA08 (H)	DA09 (I)	PA (J)	PA01 (K)	PA02 (L)	PA03 (M)	PA04 (N)	PA05 (O)	PA07 (P)	PA08 (Q)	PA09 (R)	PA10 (S)	PA11 (T)	PA12 (U)	PA13 (V)	PA14 (W)	PA15 (X)	Remarks
1	GEAR; DRIVEN,SPD	894249-0630		9404-		1														M																																					Z=15
2	BUSHING; DRIVEN GEAR,SPEEDOMETER	897080-3611		9404-		1														M																																					Z=15 MARK "5"
3	GASKET; BUSHING	909920-8520		9404-		1														M																																					
9	SEAL; OIL,DRIVEN GEAR	897080-5070		9404-		1														M																																					
28	BOLT; TRANS CASE TO HSG	894249-2460		9404-		6														M																																					
32	BOLT; CLU HSG TO FLYWHEEL HSG	028781-0350		9404-		6														M																																					M10X35 FLANGE

2-26	MANUAL TRANSMISSION GEAR
FIG-NO.	

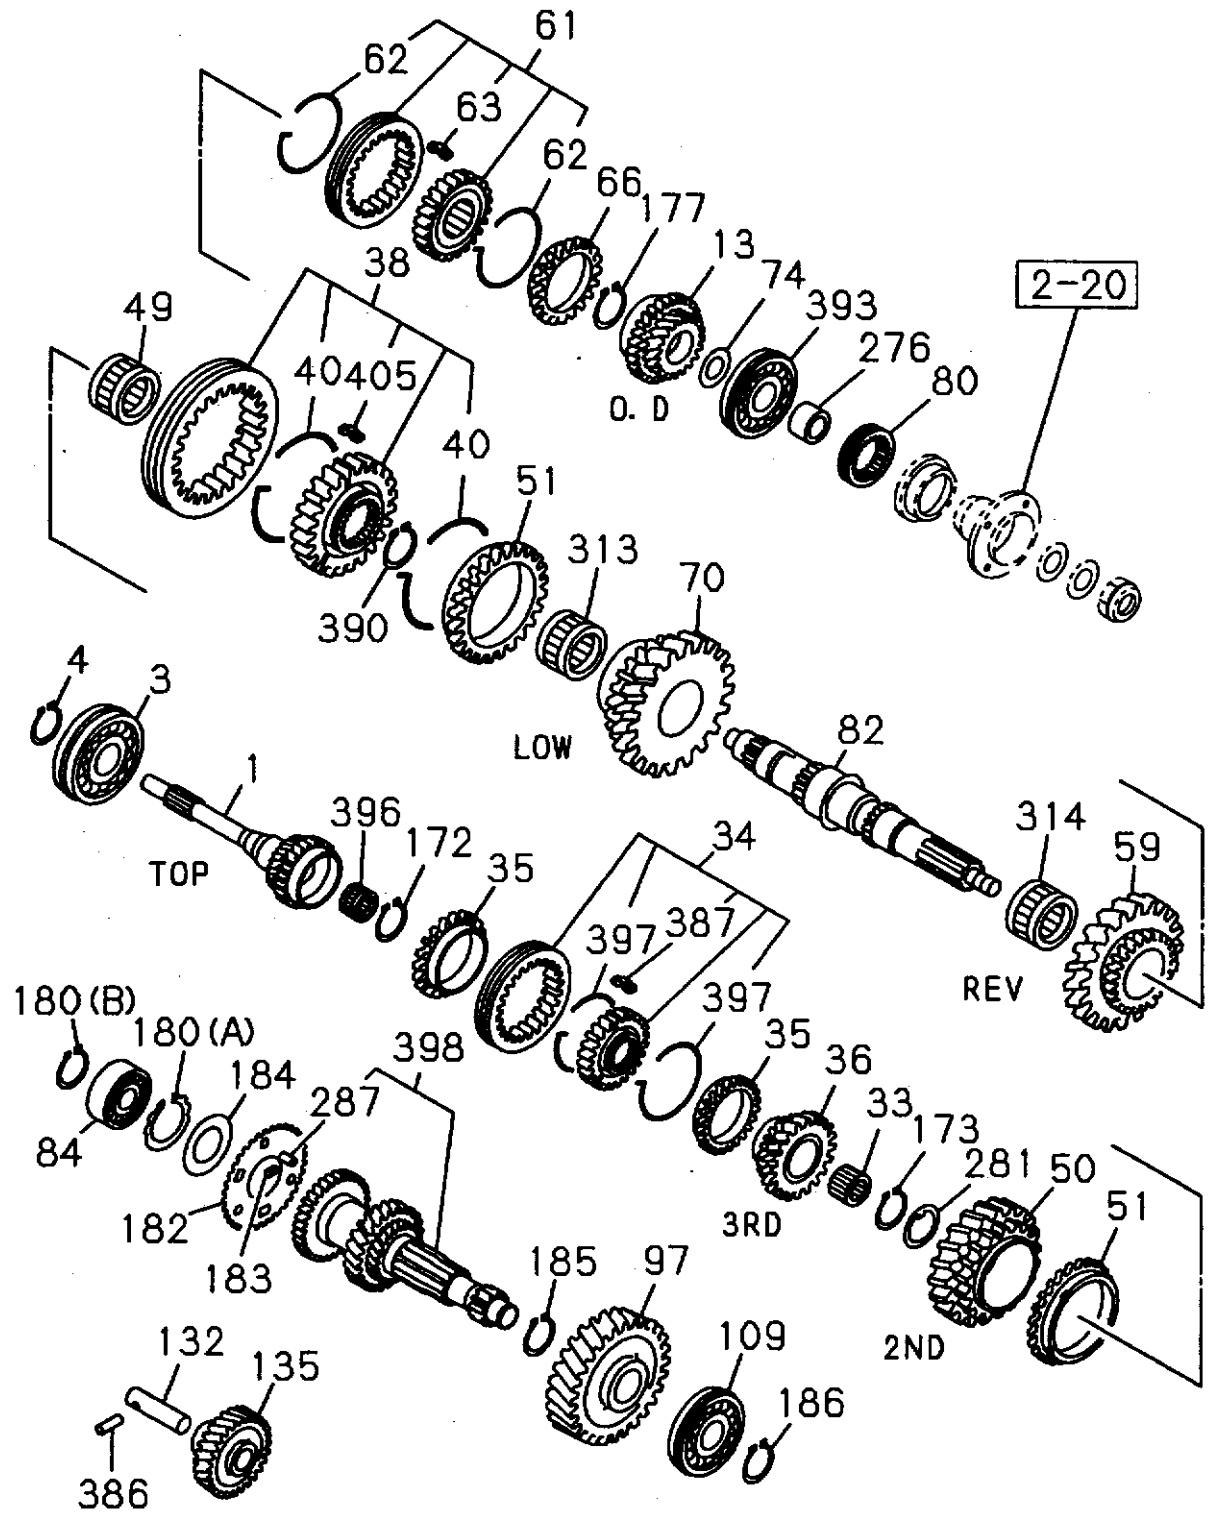

226A0150798

MANUAL TRANSMISSION GEAR

FIG-NO. 2-26 A

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	A (4LB1) PA01	B PA02	C PA03	D PA04	E PA05	F PA06	G PA07	H TPA	I TPA01	J TPA02	K (4LC1) PA	L PA01	M PA02	N PA03U6	O PA04	P PV01	Q PV02	R PV03	S PW01	T PW02	U PW03	V PW04	W PW05	X (4LE1) CA	Y CA01	Z DA	A DA01	B DA02	C DA03	D DA04	E DA05	F DA06	G DA07	H DA08	I DA09	J PA	K PA01	L PA02	M PA03	N PA04	O PA05	P PA07	Q PA08	R PA09	S PA10	T PA11	U PA12	V PA13	W PA14	X PA15	Remarks
1	SHAFT; TOP GEAR, TRANS																																																							
	897103-6320		9404-		1														N																																					Z=30
3	BEARING; TOP GEAR SHAFT																																																						
	894178-7321		9404-		1														N																																					NSK
	894462-6150		9404-		1														N																																					KOYO
4	RING; SNAP, BRG TO TOP GEAR SHAFT																																																						
	909180-0400		9404-		1														N																																					ID=37
13	GEAR; 5TH, MAINSHAFT																																																						
	897147-8170		9404-9905		1														N																																					Z=25
	897206-0120		9906-		1														N																																					Z=25
33	BEARING; NEEDLE, 3RD GEAR																																																						
	894317-1580		9404-		1														N																																					
34	SYNCHRONIZER; 4TH & 3RD																																																						
	897048-7452		9404-		1														N																																					
35	RING; BLOCK, 4TH & 3RD																																																						
	894128-7752		9404-		2														N																																					
36	GEAR; 3RD, MAINSHAFT																																																						
	894316-7612		9404-		1														N																																					Z=33
38	SYNCHRONIZER; LOW & 2ND																																																						
	897048-7480		9404-		1														N																																					
40	SPRING; INSERT, LOW & 2ND																																																						
	897023-7080		9404-		2														N																																					
49	BEARING; NEEDLE, 2ND GEAR																																																						
	509811-0140		9404-		1														N																																					NSK
	509811-0150		9404-		1														N																																					NTN
50	GEAR; 2ND, MAINSHAFT																																																						
	897014-0342		9404-		1														N																																					Z=36
51	RING; BLOCK, LOW & 2ND																																																						
	897074-6192		9404-		2														N																																					
59	GEAR; REV MAINSHAFT																																																						
	897115-7770		9404-9905		1														N																																					
	897206-0060		9906-		1														N																																					
61	SYNCHRONIZER; REV & 5TH																																																						
	897048-7500		9404-9905		1														N																																					
	897206-0100		9906-		1														N																																					
62	SPRING; INSERT, REV & 5TH																																																						
	897023-7100		9404-		2														N																																					
63	INSERT; SYN, REV & 5TH																																																						
	933263-6130		9404-		3														N																																					

2-26 A MANUAL TRANSMISSION GEAR

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1	4LC1	4LE1	Remarks
						PPPPPPPPTTTTPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPPP AAAAAAAAPPPPAAAAAAVVVVWWWWWWAAAAAAAAAAAAAAAAAAAAAAAAAAAA 0000000AAA 0000000000000 0 0000000000000000000000000000000 1234567 00 1234 12312345 1 123456789 123457890123451 2 U 6	
						ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
66	RING; BLOCK, SYN								
	894128-7752		9404-		1		N		
70	GEAR; 1ST, MAINSHAFT								
	897014-0333		9404-		1		N		Z=43
74	WASHER; THRUST, REV GEAR								
	933271-6071		9404-9905		1		N		
	897207-1760		9906-		1		N		
80	GEAR; SPD DRIVE								
	897011-3500		9404-9905		1		N		Z=4
	897207-1460		9906-		1		N		Z=4
82	SHAFT; MAIN, TRANS								
	897045-9321		9404-9911		1		N		
	897207-1190		9912-		1		N		
84	BEARING; COUNTER SHAFT, FRT								
	894462-6170		9404-		1		N		KOYO
	509800-0621		9404-		1		N		NSK
97	GEAR; 5TH, COUNTER								
	897077-3411		9404-		1		N		Z=53
109	BEARING; COUNTER SHAFT, RR								
	897095-9130		9404-		1		N		
132	SHAFT; REV								
	933351-6041		9404-		1		N		
135	GEAR; REV IDLER								
	897081-5393		9404-		1		N		Z=29
172	RING; SNAP, CLU HUB								
	894402-4050		9404-		1		N		T=1.75
	894402-4060		9404-		1		N		T=1.80
	894402-4070		9404-		1		N		T=1.85
173	RING; SNAP, OVERDRIVE GEAR								
	894151-5220		9404-		1		N		T=1.85
	894151-5230		9404-		1		N		T=1.90
	894151-5240		9404-		1		N		T=1.95
	894157-7470		9404-		1		N		T=2.00
177	RING; SNAP, CLU HUB								
	894402-4050		9404-9905		1		N		T=1.75
	894402-4060		9404-9905		1		N		T=1.80
	894402-4070		9404-9905		1		N		T=1.85
	509589-0100		9906-		1		N		T=1.75
180	RING; SNAP, CLUSTER GEAR								
(A)	894146-4830		9404-		1		N		ID=38.5

MANUAL TRANSMISSION GEAR

2-26 A
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
						PPPPPPPPTTTTPPPPPPPPPPPPPPPPCCDDDDDDDDDDPPPPPPPPPPPPPPPPPPPPP AAAAAAAAPPPPAAAAAAVVVWWWWWWAAAAAAAAAAAAAAAAAAAAAAAAAAAAA 0000000067 00AAA 0000000000000 0 0000000000 0000000000 0000000001111111111 1234567 00 12 12345 U 6 12312345 1 1234567890 1234567890 1234567890 12345 ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX	
180	RING; SNAP, CLUSTER GEAR						
(B)	909180-0350		9404-		1	N	ID=32.2
182	PLATE; CLUSTER GEAR						
	897095-9840		9404-		1	N	
183	SPRING; PLATE, CLUSTER GEAR						
	894132-1680		9404-		3	N	
184	SPRING; CLUSTER GEAR						
	894128-7901		9404-		1	N	
185	RING; SNAP, CLUSTER GEAR						
	909180-0450		9404-		1	N	
186	RING; SNAP, CLUSTER GEAR						
	909180-0320		9404-		1	N	ID=29.6
276	SPACER; BRG TO DRIVE GEAR						
	933235-6061		9404-9905		1	N	
	897207-1750		9906-		1	N	
281	WASHER; THRUST, MAINSHAFT						
	533271-0070		9404-		1	N	
287	PIN; COUNTER GEAR						
	894402-4620		9404-		3	N	
313	BEARING; NEEDLE, LOW GEAR						
	894317-1610		9404-		1	N	NSK
	897010-5470		9404-		1	N	KOYO
314	BEARING; NEEDLE, REV GEAR						
	509811-0150		9404-9905		1	N	NTN
	509811-0140		9404-9905		1	N	NSK
	897207-1740		9906-		1	N	NTN
386	PIN; REV SHAFT						
	894128-7940		9404-		1	N	
387	INSERT; SYN, 4TH & 3RD						
	533263-0010		9404-		3	N	
390	RING; SNAP, CLU HUB						
	894151-5200		9404-		1	N	T=1.75
	894151-5210		9404-		1	N	T=1.80
	894151-5220		9404-		1	N	T=1.85
393	BEARING; MAINSHAFT END						
	897095-9130		9404-9905		1	N	
	897207-5120		9906-		1	N	
396	BEARING; NEEDLE, MAINSHAFT						
	900096-6021		9404-		1	N	NTN


2-26 A MANUAL TRANSMISSION GEAR

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
396	BEARING; NEEDLE, MAINSHAFT						
	900096-6350		9404-		1	N	KOYO
	900096-6060		9404-		1	N	NSK
397	SPRING; INSERT, 4TH & 3RD						
	897023-7100		9404-		2	N	
398	GEAR; COUNTER						
	897077-3370		9404-		1	N	
405	INSERT; SYN. LOW & 2ND						
	533263-0010		9404-		3	N	

MEMO

2-30	GEAR SHIFTER AND QUADRANT BOX
FIG-NO.	

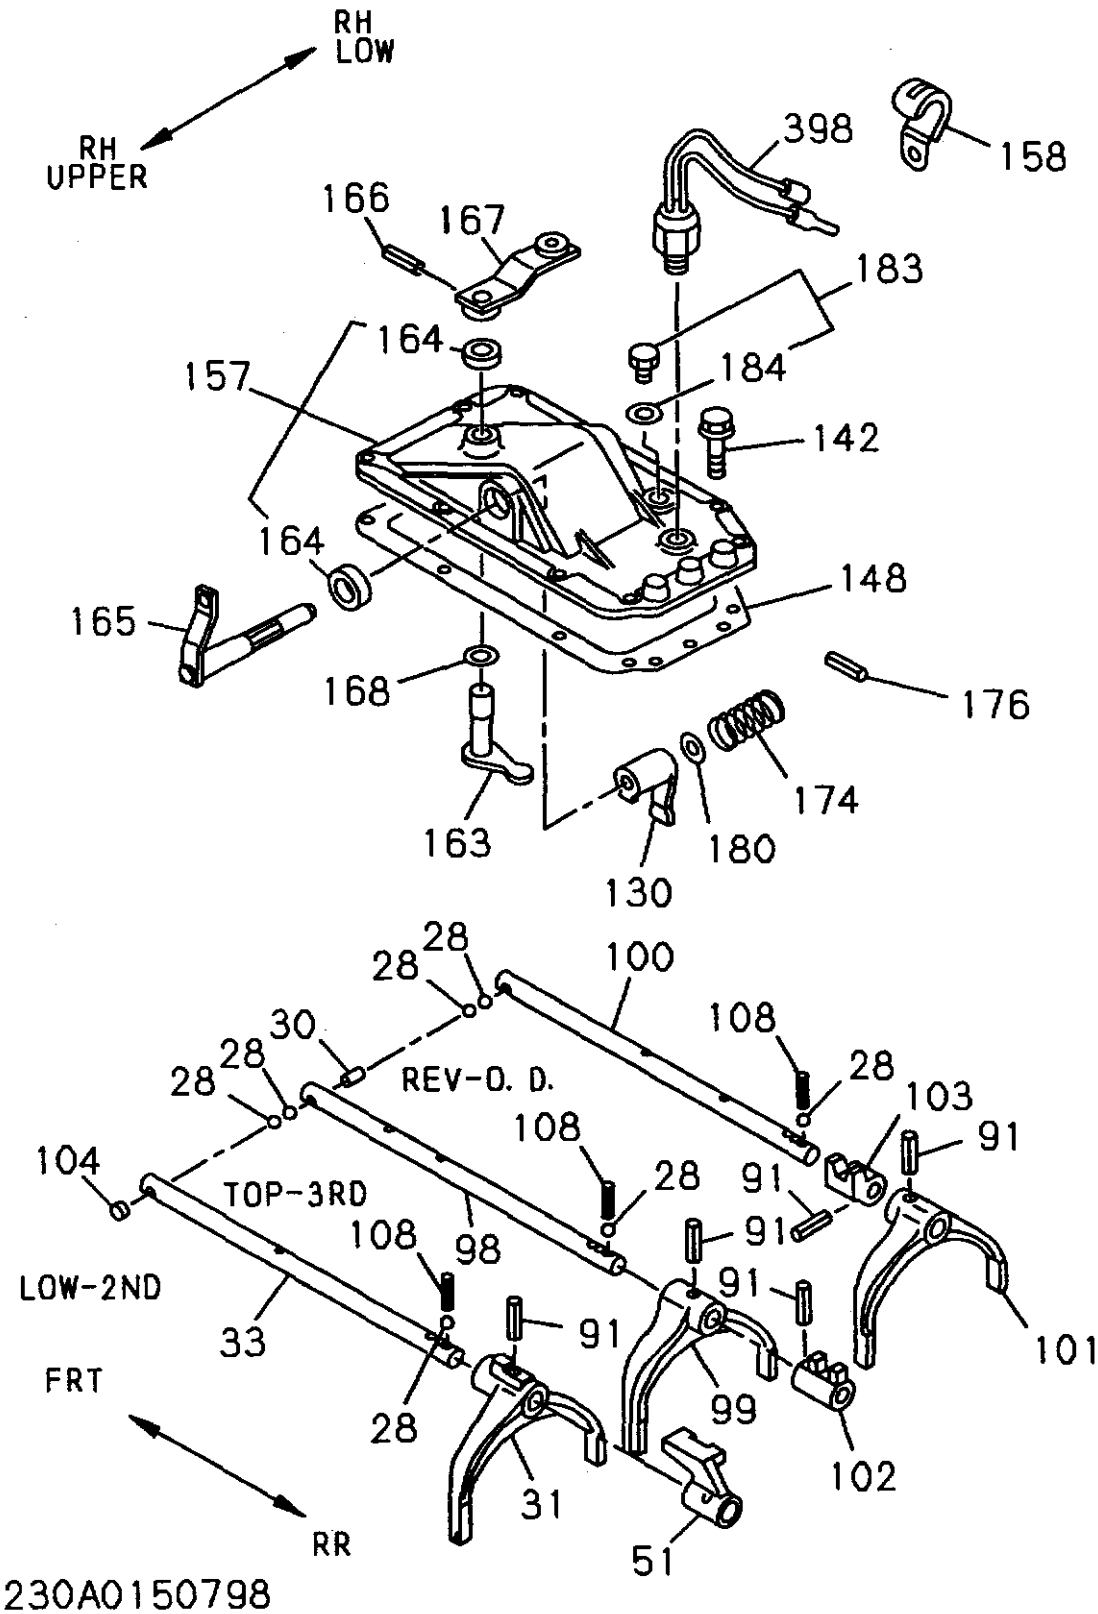

GEAR SHIFTER AND QUADRANT BOX

2-30 A


FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
28	BALL; INTER LK	900097-0100		9404-		7	N	
30	PIN; INTER LK	533534-0010		9404-		1	N	
31	ARM; SHIFT, LOW & 2ND	897011-3651		9404-		1	N	
33	ROD; SHIFT, LOW & 2ND	897011-3701		9404-		1	N	
51	BLOCK; SHIFT, 1ST & 2ND	897022-8372		9404-		1	N	
91	PIN; SPR, SHIFT ARM	894135-7710		9404-		6	N	L=25
98	ROD; SHIFT, TOP & 3RD	897011-3711		9404-		1	N	
99	ARM; SHIFT, 4TH & 3RD	897011-3661		9404-		1	N	
100	ROD; SHIFT, REV & 5TH	894316-9230		9404-		1	N	
101	ARM; SHIFT, REV & 5TH	897107-5450		9404-		1	N	
102	BLOCK; SHIFT, 3RD & 4TH	897017-5731		9404-		1	N	
103	BLOCK; SHIFT, REV TO OD	894135-7194		9404-		1	N	
104	PLUG; PLATE	909201-3160		9404-		1	N	
108	SPRING; LOCK BALL	909740-1140		9404-		3	N	OD=6.8 L=31.6
130	LEVER; SHIFT, INTERNAL	894105-1412		9404-		1	N	
142	BOLT; QUAD BOX	894128-7860		9404-		10	N	M8X25
148	GASKET; QUAD BOX	894257-1620		9404-		1	N	
157	BOX; QUAD, TRANS	894340-1460		9404-		1	N	


2-30 A GEAR SHIFTER AND QUADRANT BOX

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
158	CLIP; HARNESS	509700-2750		9404-		1	N	ID=8.5
163	LEVER; SELECT, INTERNAL	894159-2681		9404-		1	N	
164	SEAL; OIL, QUAD BOX	894128-7840		9404-0011		2	N	OD=27
		897304-0680		0012-		2	N	OD=27
165	LEVER; SHIFT	894128-7810		9404-		1	N	
166	PIN; SPR, SELECT LEVER	894135-7710		9404-		1	N	L=25
167	LEVER; SELECT, EXTERNAL	894159-2692		9404-		1	N	
168	WASHER; LK, SELECT LEVER	894249-2501		9404-		1	N	
174	SPRING; REV	894158-3850		9404-		1	N	
176	PIN; SPR, STOPPER	909678-5490		9404-		1	N	
180	WASHER; REV STOP SPRING	894249-2440		9404-		1	N	
183	PLUG; SCREW, OIL FILTER	894337-9461		9404-		1	N	
184	GASKET; FILLER PLUG	894336-5110		9404-		1	N	ID=15.3
398	SWITCH; REV LAMP	897138-6350		9404-		1	N	

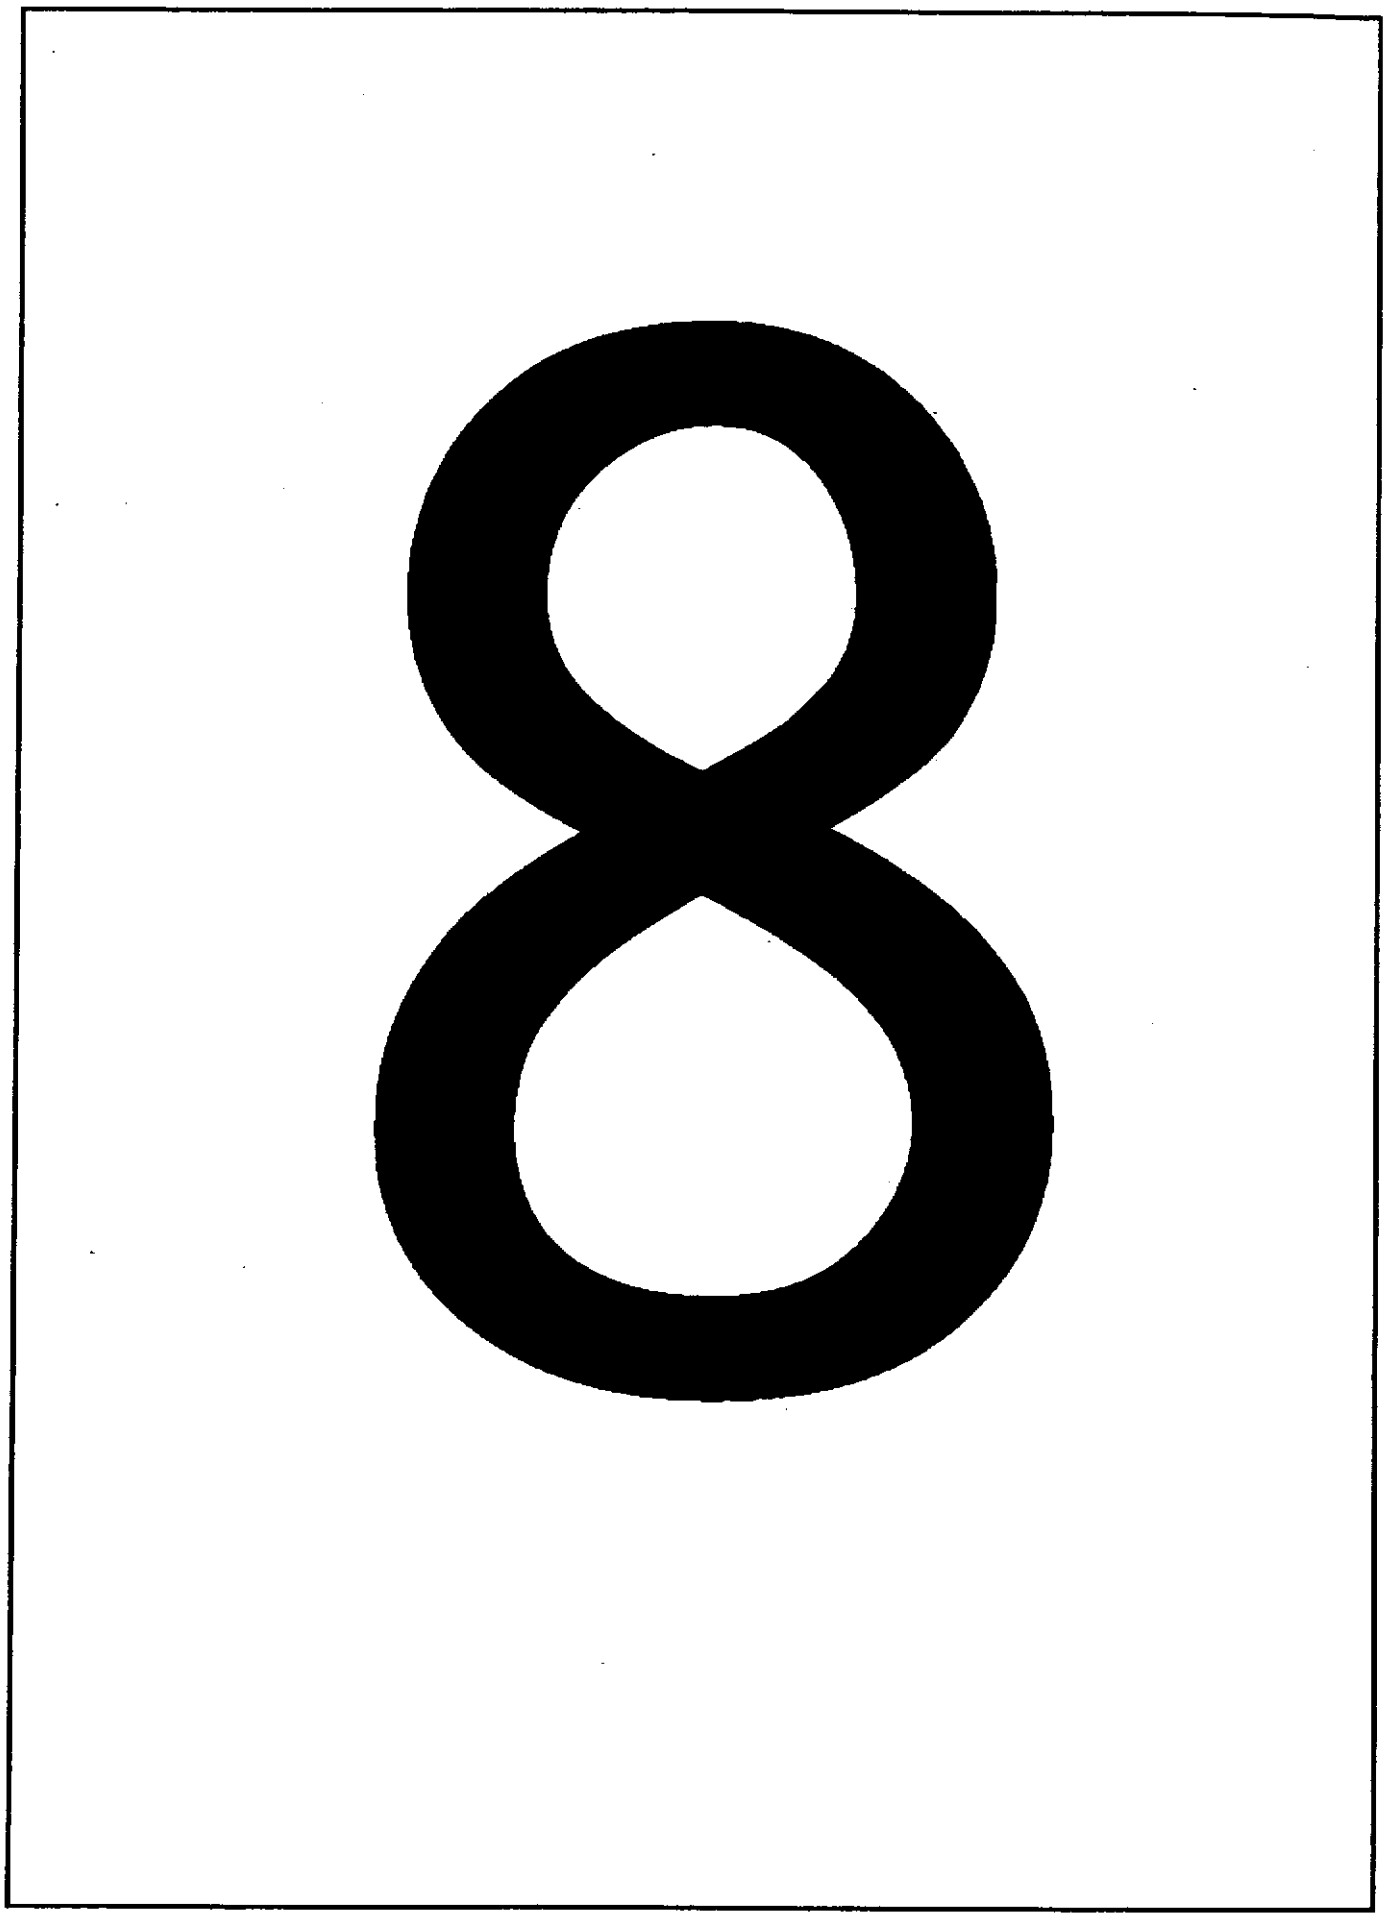
8

8-10	WIRING HARNESS AND FUSE
FIG-NO.	

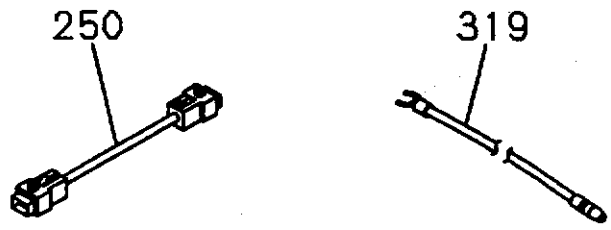

810A0150798


WIRING HARNESS AND FUSE

8-10 A

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 / 4LC1 / 4LE1	Remarks
250	WIRE; FUSIBLE LINK	894331-1310		9806-		1	D G	
319	HARNESS; CABLE, OIL PRESSURE	582650-0930		9404-		1	A B I J	

8-21	METER ASM
FIG-NO.	

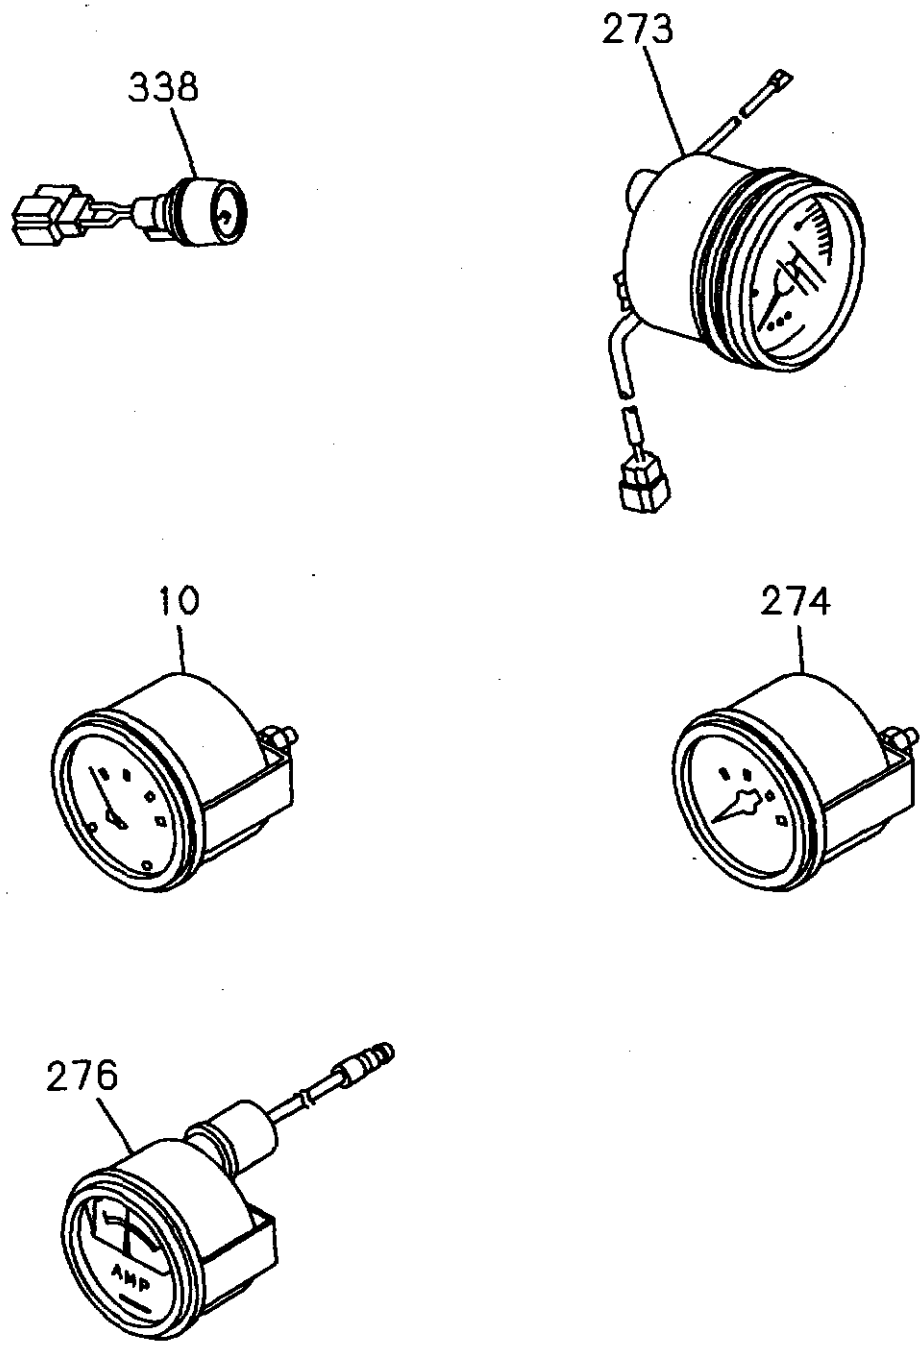

821A0150798

METER ASM

8-21 A

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	I T C	APPLIED DATE	L R	Q T Y	4LB1 PPPPPAAAAA00000 12345	PPTTTAAPPP00AAA 67 00 12	4LC1 PPPPPAAAAA0000 1234 U 6	PPPPPVVVVV00000 12312	PPPPPWWWWW000 0 345 1	PPPCCAA 00	4LE1 DDDDDAAAAA0000 1234	DDDDDAAAAA00000 56789	PPPPPAAAAA0000 1234	PPPPPAAAAA00001 57890	PPPPPAAAAA11111 12345	Remarks
						ABCDEFGHIJKLMNOPQRSTUVWXYZABCDEFGHIJKLMNOPQRSTUVWX											
10	METER; THERMO																
	983150-2040		9404-		1		G										
	897045-2121		9404-		1							C	F I				
273	METER ASM; TACHO																
	894425-7491	C	9404-0008		1	C E	G										X
	897238-6280		0009-		1	C E	G										X
	894427-4542	C	9404-9908		1			M									
	897234-5040		9909-		1			M									
	894343-2860		9404-9908		1							C	F				
	897238-6280		9909-0008		1							C	F				
	897238-6270		0009-		1							C	F I				
274	METER; OIL PRESSURE																
	983140-1870		9404-9906		1							C	F				
	183140-0551		9907-		1							C	I				
276	AMMETER																
	183130-0030		9501-		1								F				
338	INDICATOR; GLOW																
	582250-0091		9404-		1			M									
	582250-0082		9404-		1							CD	F G I				


8-21 B METER ASM

FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	L R	QTY	4LE1: PA16 PA17 PA18 PA19 PA20 (A B C D E)	PA21 PA22 PA23 PA24 PA25 (F G H I J)	PA26 PV21 PV22 PV23 PV24 (K L M N O)	PV25 PV26 PV27 PW01 PW02 (P Q R S T)	PW03 PW04 PW05 PW06 PW07 (U V W X Y)	PW08 PW09 PW10 PW11 PW12 (Z A B C D)	PW13 PW14 PW17 CA CA01 (E F G H I)	4LE2: CA02 CA03 CA04 DA01 DA02 (J K L M N)	PA PA01 PA02 PA03 PW01 (O P Q R S)	PW02 PW03 PW05 PW07 PW09 (T U V W X)	Remarks
10	METER; THERMO															
	983150-2040		9404-		1		I									
273	METER ASM; TACHO															
	894425-7491		9404-9908		1	C E										
	897238-6280		9909-		1	C	F G I									
	897238-6270		9607-		1		H									

MEMO

8-25	SWITCH AND RELAY; INSTRUMENT PANEL
FIG-NO.	

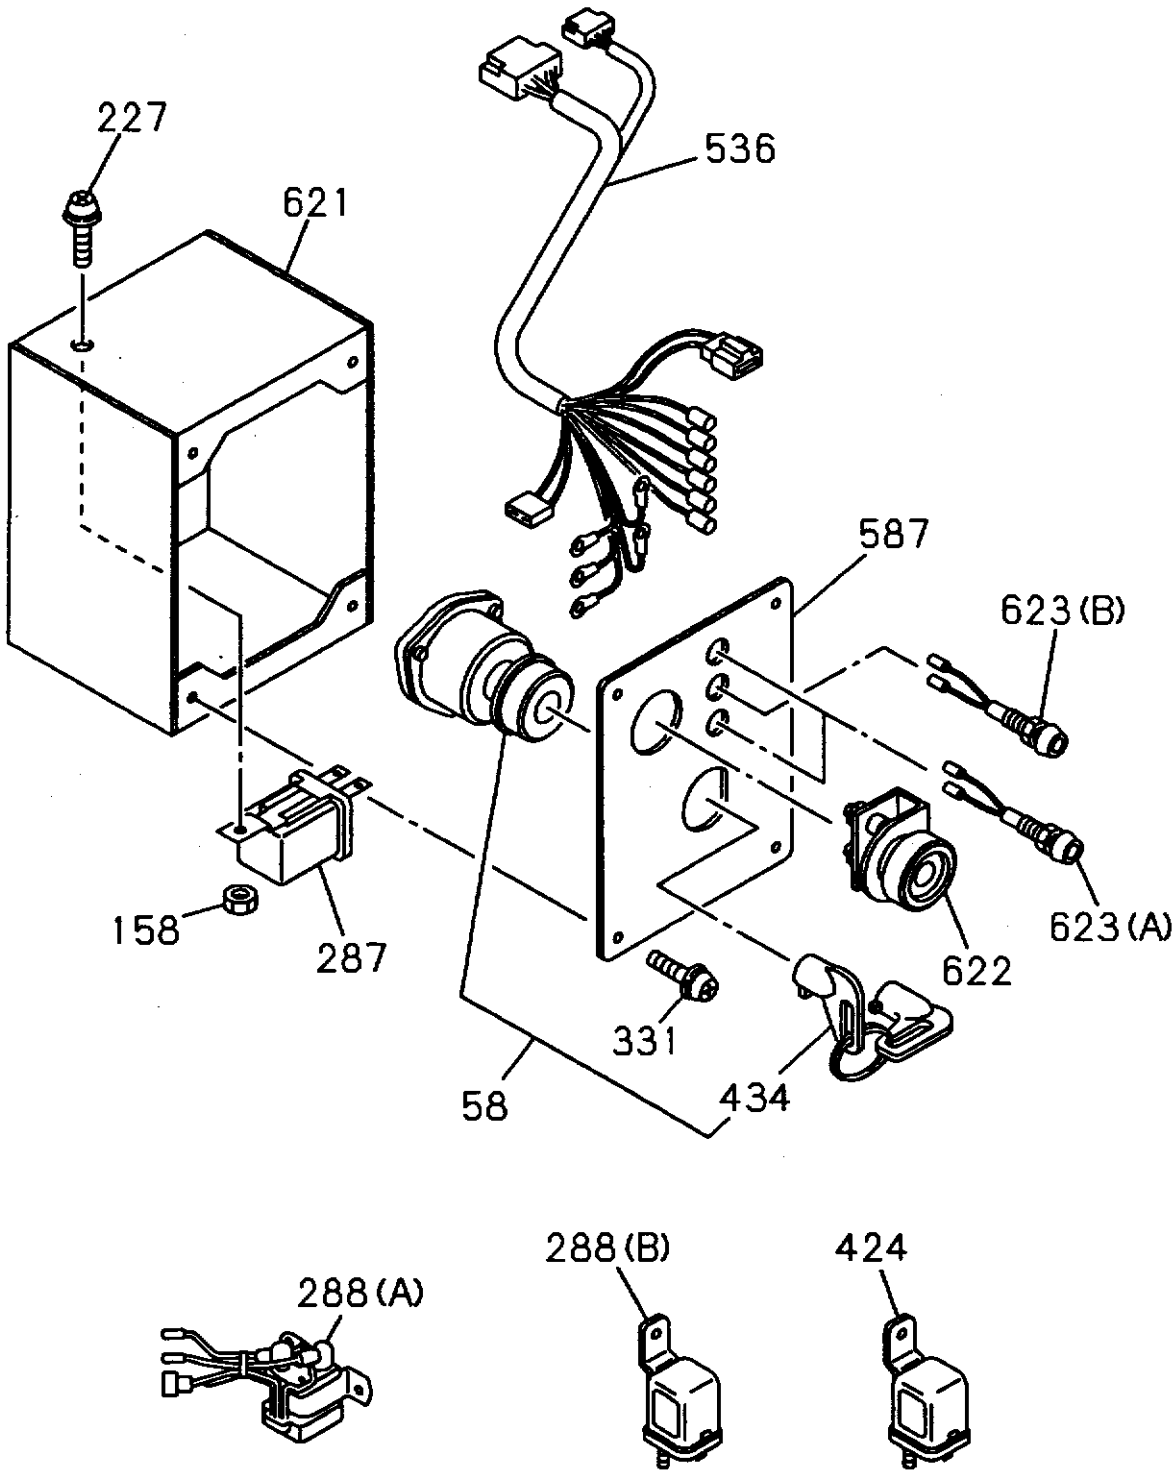

825A0150798

SWITCH AND RELAY; INSTRUMENT PANEL

8-25 A
FIG-NO.

KEY NO.	PART NAME	PART NUMBER	I T C	APPLIED DATE	L R	Q T Y	4LB1 PPPPPAAAAA0000012345	PPTTTAAPPP00AAA6700 12	4LC1 PPPPPAAAAA0000012345 U 6	PPPPPVVVVV0000012312	PPPPPWWWWW0000012345	PPPCCAA0 1	4LE1 DDDDDAAAAA0000012345	DDDDDAAAAA0000056789	PPPPPAAAAA0000012345	PPPPPAAAAA0000057890	PPPPPAAAAA1111112345	Remarks
							ABCDEFGHIJ	KLMNOPQRSTUVWXYZ	ABCDEFGHIJ	KLMNOPQRSTUVWX								
58	SWITCH: IGNITION																	
	182310-0060		9404-		1			I										
	897044-4180		9404-		1				M			Y	A					
	894402-5000		9404-		1		G		N	PQ	STU		BC	EFG	I			
	897044-4180		9404-9805		1								D					
	894402-5000		9806-		1								D					
158	NUT; RELAY																	
	909110-4060		9404-		1		G											
227	SCREW; RELAY																	
	903920-6120		9404-		1		G											
287	RELAY ASM																	
	582550-0290		9404-		1		G					Y	ABCD	E G	JKLM			
288	RELAY; SAFETY																	
(A)	182553-0390	A	9404-9903		1				M									
(A)	182553-0440		9904-		1				M									
(A)	182553-0400	A	9404-9903		1											N		
(A)	182553-0430		9904-		1											NO		
(B)	582550-0290		9904-		1		DE		L	NOPQ	STU	Y	AB	DE	GHI	KLM	PQ	UVW
(A)	182553-0400		9404-		1											NO		
(B)	582550-0300		9404-		1												S	
(A)	897115-2341		9404-		1												R	
331	SCREW																	
	903920-5100		9404-		4		G											
424	RELAY																	
	582550-0290		9404-		1	A		I		PQ			A	D	FGH			
	582550-0290		9404-		3								B	E				
	582550-0290		9404-		2							Y						
434	KEY; STARTER SW																	
	182316-0070		9404-		1				M			Y	A	D				
	894402-4980		9404-		1		G		N	PQ	STU		BCD	EFG	I			
536	HARNESS; SW																	
	897107-6952		9404-		1		G											
587	PANEL; SW																	
	897110-8562		9404-		1		G											
621	BOX; SW																	
	897110-8550		9404-		1		G											
622	RESISTANCE; CONTROL																	
	894173-9480		9404-		1		G											
623	LAMP ASM; PILOT																	
(A)	894131-5230		9404-		2		G											RED
(B)	894131-7230		9404-		1		G											AMBER


8-25 B SWITCH AND RELAY; INSTRUMENT PANEL

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
58	SWITCH; IGNITION							
		897044-4180		9404-		1	E I JKLMN	
		894402-5000		9404-		1	I L Q S UVWXY ZABC E STUV X	
		897094-3710		9607-		1	F	
288	RELAY; SAFETY							
(A)		182553-0400		9404-		1	AB H	
(A)		182553-0430		9904-		1	AB H	
(B)		582550-0290		9404-		1	DEFG IJKL S U XYZ C EF IJ MN P STUV	
424	RELAY							
		582550-0290		9404-		1	L O Q J R	
		582550-0290		9607-		4	I K	
434	KEY; STARTER SW							
		182316-0070		9404-		1	E I JKLMN	
		894402-4980		9404-		1	I L Q S UVWXY ZABC E STUV X	

MEMO

8-26	ELECTRICAL CONTROL AND OTHER PARTS
FIG-NO.	

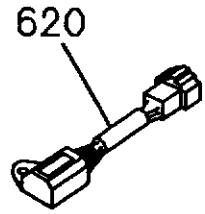

826A0150798

ELECTRICAL CONTROL AND OTHER PARTS

8-26 A
FIG-NO.

KEY NO.	PART NAME / PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LB1 PPPPP AAAAA 00000 12345 ABCDE	PPTTT AAPPP 00AAA 67 00 12 FGHIJ	4LC1 PPPPP AAAAA 0000 1234 UG KLMNO	PPPPP VVVWW 00000 12312 PQRST	PPPCC WWWAA 000 0 345 1 UVWXY	4LE1 DDDDD AAAAA 0000 1234 ZABCD	DDDDD AAAAA 00000 56789 EFGHI	PPPPP AAAAA 0000 1234 JKLMN	PPPPP AAAAA 00001 57890 OPQRS	PPPPP AAAAA 11111 12345 TUVWX	Remarks
620	SAFETY UNIT															
	897068-7781		9404-		1	DE		L O	T	U			KLM	PQ	UVW	
	897191-3780		9404-		1									S		

8-26 B ELECTRICAL CONTROL AND OTHER PARTS

FIG-NO.

KEY NO.	PART NAME	PART NUMBER	ITC	APPLIED DATE	LR	QTY	4LE1 / 4LE2	Remarks
620	SAFETY UNIT	897068-7781		9404-		1	DEFG IJK S U XYZABC EF P RSTUV X	

NUMERICAL INDEX

NUMERICAL INDEX

002709-6000 - 109605-0800

PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE
002709-6000	71	028080-8200	79	028090-8600	37	091150-2080	68
003266-3000	83	8200	80	8600	52	2080	75
020800-5120	225	8200	88	8600	56	2080	76
6120	88	8200	90	8600	75	2080	90
6120	92	8200	92	8600	76	2080	93
6550	181	8200	93	028181-0200	23	2080	104
028080-6120	117	8200	103	0200	111	2080	108
6120	118	8200	106	0200	113	2080	200
6120	137	8220	88	0200	218	2080	202
6140	19	8220	92	0250	51	2080	218
6140	22	8300	50	0250	55	2080	220
6140	26	8300	54	0250	60	2100	50
6140	28	8300	79	0450	51	2100	51
6140	173	8300	126	0450	55	2100	54
6140	179	8300	128	2300	136	2100	55
6160	19	8300	218	2300	139	2100	136
6160	22	8400	67	2350	139	2100	139
6160	132	8400	75	028680-6160	32	2100	218
6200	7	8400	76	6160	64	2100	220
6200	8	8400	79	6250	26	2120	139
6200	19	8400	80	6250	28	091250-2100	51
6200	22	8450	52	8200	226	2100	55
6200	51	8450	56	8250	79	2100	226
6200	55	8450	75	8250	80	109302-1070	51
6200	173	8450	76	8300	80	1070	55
6200	179	8450	88	8300	92	109305-0050	19
6250	32	8450	92	8300	218	0050	22
6250	35	8450	218	8300	220	109600-0051	11
6300	97	8500	88	8350	88	0051	13
6300	126	8500	92	8350	219	0112	11
6300	128	8500	121	8350	220	0112	13
6400	7	8500	122	8400	92	0112	18
6450	7	8600	88	8400	218	0112	21
6450	8	8600	92	8400	220	0121	20
6500	32	8700	67	028681-0200	137	0121	23
6500	35	8700	68	0250	218	109605-0040	18
6500	126	8700	88	0250	220	0040	21
6500	128	8700	92	0250	221	0190	18
6600	26	8800	52	028781-0200	218	0190	21
6600	28	8800	56	0200	220	0190	174
6600	97	8800	88	0300	44	0190	179
8120	121	8900	75	0350	235	0500	18
8160	11	8900	88	091150-1100	225	0500	21
8160	12	8900	91	1120	139	0500	53
8160	13	028081-0200	218	2060	19	0500	56
8160	14	0300	111	2060	22	0500	75
8160	27	0300	113	2060	26	0500	76
8160	89	0500	225	2060	28	0500	126
8160	91	0700	136	2060	33	0500	128
8160	126	0700	139	2060	36	0500	137
8160	128	028085-8110	92	2060	63	0500	139
8160	200	028086-0130	136	2060	64	0500	174
8160	201	028090-8450	34	2080	50	0500	180
8160	218	8450	37	2080	54	0800	51
8160	220	8600	34	2080	67	0800	55

NUMERICAL INDEX

PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE
109623-0550	172	509300-0650	50	509811-0150	237	531345-0021	231
0550	178	0650	54	0150	239	533263-0010	239
0570	26	509302-0081	50	511119-0090	12	0010	240
0570	28	0081	54	0090	13	533271-0070	239
4960	126	509400-0420	153	511129-0060	175	533534-0010	243
4960	128	0480	171	0060	181	581100-1662	136
109675-0371	132	0480	177	511321-0360	51	581111-0100	150
0371	133	0530	32	0360	55	581113-0360	150
2060	132	0530	35	0910	51	581116-0400	151
109701-0411	83	509503-1321	171	0910	55	581117-0150	151
0411	84	1321	177	1570	51	581118-0210	151
109704-0680	205	1350	172	1570	55	581119-0290	152
109707-1310	27	1350	178	511322-0180	51	581121-0290	150
1310	28	509589-0100	238	0180	55	581123-0100	152
1320	97	509600-0130	19	511599-0031	40	0110	153
109747-0020	171	0130	20	0031	42	581124-0031	150
0020	174	0130	21	511750-0021	133	581129-0920	153
0020	177	0130	23	511771-1580	59	0960	153
0020	179	509604-0160	20	512211-0180	41	0990	152
109984-1050	132	0160	23	0180	43	1000	152
1050	133	509605-0050	12	512251-0071	41	1810	152
1090	132	0050	14	0071	43	1820	152
114217-0330	199	0050	75	512339-0031	44	1830	151
0360	199	0050	76	512535-0051	33	2100	152
0360	201	0050	79	0051	36	2110	151
114219-1020	200	0050	80	513660-2860	88	581151-0401	152
1020	202	0050	121	2860	92	581177-0070	151
2120	200	0192	51	3040	88	581215-0400	159
2120	202	0192	52	3040	92	581229-1660	160
115639-0080	164	0192	55	3080	88	1860	160
115739-0020	173	509623-0020	26	3080	92	1870	160
0020	179	0020	28	513670-0041	89	1880	160
131329-0100	225	509625-0790	50	513671-1400	88	581251-0160	160
0110	225	0790	54	1400	89	582250-0082	249
181129-6770	153	0940	51	513674-1041	89	0091	249
8370	151	0940	55	1041	93	582410-0361	126
181530-0050	200	509674-0810	209	513721-0281	19	0361	128
0150	200	0810	210	0281	21	582450-0130	137
182310-0060	253	509700-2750	244	514215-0140	199	0130	140
182316-0070	253	509704-0313	193	0140	201	0330	140
0070	254	0480	193	514217-0040	202	582550-0290	253
182410-0082	126	0480	194	514219-0390	199	0290	254
0082	128	509707-0041	71	0390	201	0300	253
182553-0390	253	0041	72	0400	199	582650-0930	247
0400	253	0041	117	0400	201	587812-6702	3
0400	254	0041	118	514234-0450	200	6712	3
0430	253	0051	103	0450	202	8104	3
0430	254	0051	106	514260-0032	205	587813-7320	4
0440	253	509800-0400	151	515419-0360	83	589090-1040	26
183130-0030	249	0621	238	0360	84	1040	28
183140-0551	249	0780	40	515669-0021	171	589313-2040	225
509120-0151	175	0780	43	0021	177	894104-6150	126
0151	180	0810	150	515729-2392	172	6150	128
509300-0650	11	509811-0140	237	2392	178	9930	103
0650	13	0140	239	515750-0570	118	9930	106

NUMERICAL INDEX

894105-1412 - 894240-9020

PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE
894105-1412	243	894128-9350	164	894134-7920	40	894174-1840	106
894106-0403	103	9360	164	7920	43	5370	137
0403	107	9370	164	894135-7194	243	5370	140
0551	104	9380	164	7530	158	894175-4091	39
0551	107	9390	164	7710	243	4091	42
894107-5501	41	9400	164	7710	244	894176-8840	163
6780	83	9410	164	894137-5220	41	9620	104
894109-7630	153	9420	164	894144-3024	90	9620	107
894110-5591	12	9430	164	3024	94	9630	104
5591	13	9440	164	5880	164	9630	107
894111-6191	97	9450	164	894146-4830	238	9640	104
894114-0480	41	9460	164	894148-3900	209	9640	107
0491	41	9470	164	3900	210	9650	104
0491	44	9480	164	894151-5200	239	9660	104
0540	41	9490	164	5210	239	9660	107
0540	43	9500	165	5220	238	9670	104
5120	126	9510	165	5220	239	9670	107
894116-4350	159	9520	165	5230	238	9680	104
894123-0510	158	9530	165	5240	238	9680	107
0560	159	9540	165	8911	27	9690	104
0570	159	9550	165	8911	28	9690	107
0610	159	9560	165	894152-1130	199	9700	104
0640	159	9570	165	1130	201	9700	107
6231	7	9580	165	9892	103	9710	104
6231	8	9590	165	9892	106	9710	107
6231	52	9600	165	894155-1801	132	894178-7250	231
6231	56	9610	165	1830	111	7321	237
894126-2100	52	9630	103	1830	113	894200-8190	20
8220	138	9630	107	1830	213	8190	22
8220	140	9640	103	1830	214	894201-6410	40
894127-7030	51	9640	106	894156-0840	40	6410	43
7030	55	894129-0060	103	0840	43	894203-3542	225
894128-7752	237	0060	106	6010	159	894206-1860	159
7752	238	894130-4380	173	894157-7470	238	894216-2064	41
7810	244	4380	179	894158-3850	244	2064	43
7840	244	5320	103	894159-1510	200	894223-9740	158
7850	231	5320	106	1510	202	894224-2362	41
7860	231	894131-5230	253	2681	244	2362	44
7860	243	7230	253	2692	244	894228-4360	151
7901	239	894132-1680	239	7810	158	4370	151
7910	231	3310	137	894162-7580	163	4480	150
7940	239	3310	139	894167-4330	151	4490	150
9110	163	6740	111	4340	152	4500	153
9120	163	6740	113	4701	18	894229-8530	18
9141	163	6750	111	4701	21	8530	21
9150	163	6750	113	4711	18	894232-2250	138
9160	164	7461	163	9410	137	2250	140
9190	164	9471	111	9410	140	894233-6530	159
9200	164	9471	113	894170-2140	152	894235-5671	126
9210	164	9480	111	2160	152	5671	128
9230	163	9480	113	4860	97	894238-6100	104
9310	164	894133-2075	7	894173-9480	139	6100	107
9320	164	2075	8	9480	253	894239-5010	32
9330	164	3281	40	894174-1390	107	5010	35
9340	164	3281	42	1410	106	894240-9020	41

NUMERICAL INDEX

PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE
894241-1792	117	894337-0220	118	894377-7841	44	894449-3630	194
9620	83	9461	244	7850	41	894450-1420	111
9620	84	894340-1460	243	7850	44	1420	113
894242-0640	151	894342-4140	19	894379-6880	164	7260	88
894244-6550	126	4140	21	6910	165	7260	92
894248-1610	137	894343-2860	249	6920	163	894453-2490	158
1610	139	8960	18	894380-2310	199	2500	159
894249-0630	235	8960	20	5270	40	2530	158
2400	231	8960	21	894381-1890	52	2540	158
2440	244	8960	22	1890	55	2550	158
2460	235	894344-4390	108	894382-5460	79	894454-6150	175
2501	244	894360-2550	112	5460	80	6150	181
894251-0311	32	2550	213	894386-0790	40	894455-1540	158
0311	35	2550	214	0790	43	1560	160
894257-1620	243	894365-1280	199	894388-1780	90	1600	158
3190	97	6741	79	1780	93	1610	159
5920	104	6741	80	894390-5270	26	1620	159
5920	107	894367-2922	111	5270	28	1630	160
5930	105	2922	113	894394-0791	111	1640	159
5930	108	2933	111	894396-6700	111	1650	160
894258-0140	137	2933	113	894401-0832	111	1660	159
894312-7230	106	2940	111	0832	113	8940	27
894314-2970	218	2940	113	7501	41	8940	28
894316-7612	237	9560	112	7511	40	894456-7412	121
9230	243	9560	114	894402-4050	238	7412	122
9910	63	9570	111	4060	238	894457-3440	202
9910	64	9570	113	4070	238	894458-4741	67
894317-1580	237	9780	132	4620	239	894459-4011	26
1610	239	894368-5010	121	4980	253	894462-6150	237
6381	175	5010	122	4980	254	6170	238
6381	180	9340	163	5000	253	8590	158
894320-4850	199	894369-2993	111	5000	254	894463-7840	11
4850	201	2993	113	894403-2410	137	7840	13
4860	199	5450	173	2410	140	894466-3820	83
4860	201	5450	179	894415-2390	132	3820	121
4870	199	894370-4500	193	894419-6021	39	3820	122
4870	201	4500	194	6021	42	894470-5530	88
894325-5131	79	5220	193	894421-5760	231	894471-2781	52
5950	20	5220	194	894422-5950	26	2790	51
5950	22	8280	121	5950	28	894473-5630	218
9561	79	8280	122	894425-6852	52	5630	220
9561	80	894372-9360	99	6852	56	894475-6880	153
894326-4390	107	9400	99	7491	249	894476-2820	97
4410	225	894377-2380	153	7491	250	894477-8370	52
894327-3131	89	2390	153	7511	117	894483-8940	88
894329-5490	71	2400	151	894427-4542	249	8940	92
5490	72	2410	151	894429-4210	19	8971	88
894331-1310	247	2430	152	894433-1650	92	897010-4850	32
894332-8370	97	2440	151	7171	108	4850	35
8380	97	2450	153	894435-5700	152	5470	239
894333-5210	158	2460	152	894436-0760	199	897011-3462	231
894335-5703	214	2490	151	0760	201	3500	238
894336-5110	231	2530	150	894440-9690	193	3651	243
5110	244	2540	150	9690	194	3661	243
5121	232	7841	41	894449-3630	193	3701	243

NUMERICAL INDEX

897011-3711 - 897068-7781

PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE
897011-3711	243	897034-6232	105	897040-5010	140	897046-7372	220
897014-0333	238	6241	104	5020	140	7941	103
0342	237	6283	32	5840	89	7941	106
2040	111	6291	32	5840	90	897047-0234	50
2040	113	6291	35	5840	93	0234	54
897016-1010	68	6301	33	7640	88	0241	41
4410	174	6362	171	8091	103	0241	43
4410	180	6362	177	897041-0220	193	0521	175
4460	171	6376	174	0220	194	0521	180
4460	177	6376	179	4210	153	0560	20
4492	173	6383	174	4220	151	0560	22
4492	179	6383	180	7211	63	1421	20
4720	89	6393	171	897042-0280	67	1421	22
4720	93	6393	177	0280	68	9320	52
9361	172	6424	171	0280	218	9320	56
9361	178	6424	178	0280	220	897048-7452	237
9400	172	6432	172	1940	112	7480	237
9400	178	6432	178	1940	114	7500	237
897017-5731	243	897036-8241	117	6830	225	8095	126
897020-0670	41	8241	118	897043-9340	39	8095	128
897022-8100	88	9591	11	9340	42	8104	126
8100	92	9591	13	897044-1792	11	8104	128
8372	243	897037-1670	158	2120	18	8470	111
897023-2680	39	1680	159	2141	18	8490	112
2680	42	1690	158	2162	11	9673	136
7080	237	1700	158	4180	253	9681	136
7100	237	1710	160	4180	254	9681	139
7100	240	1720	158	6351	12	9701	136
897025-9600	178	1730	159	7863	50	9701	139
897026-1600	144	1740	158	7863	54	9711	200
6770	26	1750	159	8133	126	9711	202
897029-1040	225	5940	33	8133	128	9720	199
897031-7102	11	5940	36	8430	132	9720	201
7110	11	7413	213	897045-2121	249	897049-0590	205
7490	11	8870	160	3912	11	3281	171
7490	13	897038-4030	75	3912	13	3281	178
9301	56	4030	90	3920	11	7220	200
897034-5832	52	4030	93	3920	13	897061-4011	97
5832	56	4030	94	4000	132	897062-0480	34
5871	90	8021	175	4000	133	0480	37
5916	103	8021	181	4062	104	4222	174
5921	39	897039-2644	175	4103	32	6540	158
5921	42	2644	181	4103	35	7432	219
5945	174	4953	20	4181	199	7432	221
5945	179	4953	22	4921	104	897063-3010	138
6090	40	5260	34	4931	104	3010	140
6140	63	5260	36	6175	171	4003	89
6152	104	5461	175	6175	177	4003	92
6162	104	5461	181	9321	238	897064-6881	173
6172	104	5841	174	897046-0681	33	6881	179
6182	104	5841	180	0681	36	897066-8693	33
6192	105	6510	88	3380	158	8761	32
6202	105	8340	118	3730	39	8781	32
6212	105	897040-4940	158	3740	39	897068-7781	257
6222	105	5010	138	7372	218	7781	258

NUMERICAL INDEX

PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE
897068-7980	89	897076-9050	172	897083-5761	126	897091-5400	138
897069-5753	33	9050	178	5761	128	5400	140
5753	36	897077-3370	240	7140	175	897093-3260	40
8821	75	3411	238	7140	180	3260	42
8871	33	7840	39	897084-0660	132	5031	39
8901	172	7872	19	0670	132	5494	175
8901	178	7880	11	0700	91	5494	181
8911	172	7903	41	0710	89	897094-2011	185
8960	173	7903	43	0720	97	3710	254
8960	179	7930	40	0741	97	4641	200
897070-0690	39	7930	43	0751	97	6410	64
0690	42	7952	26	3250	172	6411	12
0750	88	7990	67	3250	178	6411	14
0750	92	8000	67	6170	103	6760	90
1303	137	8011	32	6170	106	897095-8411	79
1303	140	8021	174	9560	132	8411	80
6982	33	8040	105	9771	171	9130	238
6982	36	8050	104	9771	177	9130	239
897071-3470	112	8090	7	897085-1331	50	9840	239
3470	114	8111	33	1331	54	897096-6970	199
3480	111	8130	32	1343	50	7000	26
3480	113	8140	12	1343	54	7000	28
897072-0040	232	9322	111	1352	50	897100-1600	26
8290	33	9323	111	1352	54	897102-1231	32
8290	36	897078-5920	75	3470	71	1231	35
8300	173	5920	76	3470	72	1240	32
8300	179	6480	150	3670	67	1371	104
8340	159	6490	153	3890	12	1371	107
8350	159	6510	152	3890	14	2881	34
8360	160	6520	150	3900	11	2881	37
8380	158	6530	150	3900	13	3071	132
8390	159	897079-9760	103	6600	50	3071	133
8400	158	9760	106	6612	50	3080	83
8410	158	897080-3611	235	6612	54	3080	84
8420	158	5070	235	8101	11	3200	121
8430	159	897081-5393	238	8860	7	3200	122
897073-2411	173	6463	111	897086-2281	90	4510	20
6410	13	6463	113	2281	93	4510	23
6430	138	7130	39	2453	213	5501	20
897074-6192	237	9273	50	2453	214	5501	22
6510	231	9280	33	897087-1050	40	8790	83
7120	90	9280	36	1140	40	8790	84
7130	90	9301	52	1140	43	897103-6320	237
897075-5590	231	897082-0730	7	1220	40	897104-1891	111
9650	158	1140	172	7500	231	7500	79
9980	200	1140	178	897088-0720	151	7500	80
9980	202	9720	165	0730	152	897105-3390	126
897076-3940	199	897083-3460	163	8140	26	4300	138
3950	199	3470	163	8140	28	4300	140
3960	199	3480	163	897089-5431	39	4310	138
6401	172	3490	164	897090-6540	52	4310	140
9030	172	3500	165	6540	56	7900	140
9030	178	3553	164	8420	103	9061	172
9040	172	3580	103	8420	106	9061	178
9040	178	3580	107	897091-4101	39	9090	175

NUMERICAL INDEX

897105-9090 - 897127-5911

PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE
897105-9090	181	897112-7390	151	897116-1031	171	897119-8160	174
9100	174	8652	136	1031	177	897120-4300	173
9600	158	8652	139	1360	103	4860	172
897106-1101	41	8690	150	3140	138	5130	173
2130	97	8700	150	4480	32	897122-1250	104
2140	75	8710	150	4480	35	897123-0070	218
4150	132	8720	152	4500	32	2961	7
4150	133	8730	151	4500	35	2961	8
5491	11	8750	151	4810	150	7810	199
5491	13	8790	153	4820	150	897124-1171	137
897107-5450	243	8800	151	4830	150	3690	33
5942	136	8810	152	4840	150	3690	36
6952	253	8830	152	4850	150	897125-4260	136
7140	218	9540	151	4880	153	4260	139
7140	220	9570	151	4890	151	6001	137
897109-0780	172	9650	199	4900	153	6001	139
1900	99	9650	201	4910	151	8530	152
1930	99	9862	231	4920	152	9740	174
1940	99	897113-2910	152	4940	152	9740	179
1950	99	2930	150	4950	152	897126-1390	11
1960	99	2970	152	5080	150	1390	13
1980	99	3320	126	5100	151	1790	32
2010	99	3320	128	5110	151	1860	67
2490	99	3830	199	5140	152	1860	68
3652	59	3830	201	5150	153	1870	105
3662	59	9490	173	5160	151	1880	104
3722	39	897114-7090	26	897117-0840	173	1880	107
3722	42	7132	11	0920	105	1890	75
4681	104	7132	13	1070	153	1890	76
6790	126	897115-1770	39	2670	132	2570	11
6790	128	1770	42	2990	126	2630	26
6961	231	2341	253	2990	128	3550	11
7590	178	2890	137	5901	67	3560	104
9790	60	2890	140	5901	68	3560	108
9821	60	2971	103	6291	7	3570	104
897110-8550	253	3151	12	6331	7	3570	108
8562	253	3151	13	6361	71	3580	104
897111-4490	218	6872	103	6720	171	3580	108
5520	111	7770	237	6720	177	3590	105
5520	113	897116-0290	107	6802	18	3590	108
5530	117	0320	108	897118-1966	33	3600	105
5530	118	0330	108	1966	36	3600	108
5702	117	0340	108	2052	7	3610	105
5702	118	0350	108	2052	8	3610	108
5712	117	0360	108	3772	50	3620	105
5712	118	0370	108	3772	54	3620	108
9621	138	0380	108	4560	185	3630	105
9621	140	0390	108	6561	32	3630	108
897112-2650	174	0400	108	6561	35	3640	105
2650	179	0410	108	9892	19	3640	108
7340	150	0420	108	9892	22	4654	189
7350	150	0430	108	897119-2990	7	897127-1940	158
7360	152	0440	108	2990	8	1950	158
7370	151	0990	103	3060	26	1960	158
7380	151	1000	103	3270	39	5911	193

NUMERICAL INDEX

PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE
897127-5921	193	897134-5060	55	897139-7120	79	897148-8650	180
5942	189	5070	132	7120	80	897149-1820	117
897128-7470	136	5180	19	897141-2070	40	1820	118
7470	139	5180	22	2080	40	6020	172
897129-1750	136	7410	218	2080	43	6030	172
1760	136	897135-1030	89	2090	40	6030	178
5990	104	1410	26	2090	43	897160-4370	88
6010	173	1410	28	2100	39	4370	92
7801	33	3432	136	2100	42	4380	89
7801	36	3432	139	897142-3410	173	4380	92
7820	33	4460	39	4110	75	5721	172
7820	36	4460	42	4110	76	5721	178
897130-1060	39	4471	50	9030	152	5742	174
1850	153	4471	54	9710	163	5742	180
1860	152	4570	39	9720	166	6220	138
1870	150	4570	42	897143-2191	52	6220	140
1880	152	4970	150	2210	52	6540	79
1890	150	897136-3191	111	3321	103	6540	80
1900	153	3191	113	3321	106	9010	163
1910	150	3240	11	897144-3310	199	9040	166
1920	151	3240	13	7240	105	897161-1340	71
1930	151	3420	71	7240	108	1340	72
1940	151	4540	218	897145-1980	32	7640	171
1940	153	4540	220	1980	35	7640	177
1950	150	5150	18	2440	205	9662	42
2570	152	5150	21	5590	104	9690	89
2580	150	9080	150	5590	107	9690	93
5800	163	9090	150	897146-1050	138	897162-0280	173
5810	103	9100	152	2331	132	0280	178
7280	159	897137-4781	136	2331	133	0540	18
8791	185	5641	172	9970	39	0540	21
897131-2950	193	5641	178	897147-0000	39	0810	89
3140	193	6060	153	4892	171	0810	92
3150	193	8351	103	4892	177	5260	18
3150	194	8360	19	4990	33	5260	21
3160	193	8360	22	5010	33	7210	132
3160	194	8360	26	5801	103	897163-2590	75
3570	103	8360	28	5801	106	4032	11
3620	201	8360	33	8170	237	4052	11
4730	172	8360	36	9990	26	4194	33
4740	172	8360	63	9990	28	897164-3340	173
897132-0110	39	8360	64	897148-0220	40	3340	178
0110	42	8360	133	3430	83	5300	39
1413	90	897138-2951	121	3430	84	5300	42
2912	173	3311	121	3450	83	5570	199
2912	179	3460	121	3450	84	7120	218
2922	173	3471	83	5460	171	7120	220
2922	179	6070	11	5460	177	7131	199
897133-5690	39	6070	13	5480	174	7131	201
5690	42	6350	244	5480	180	8000	88
9201	18	6490	163	5500	171	8000	89
9210	18	7850	71	5500	177	8030	88
897134-2910	88	7850	72	5570	172	8060	89
3830	173	897139-5510	163	5570	178	897165-9390	231
5060	51	5520	163	8650	174	897166-4100	200

NUMERICAL INDEX

897166-4100 - 897225-1170

PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE
897166-4100	202	897178-8181	113	897191-4920	26	897211-3170	92
4750	118	897179-5361	11	7630	26	7590	35
4820	118	5361	13	897192-0980	105	897212-5180	32
9600	28	897180-0040	136	0980	108	5180	35
897167-8110	111	4640	173	0990	104	5200	32
9740	172	4651	199	897195-2514	13	5200	35
897168-2080	60	4651	201	2591	107	897213-3810	213
2090	60	4661	136	2673	36	3810	214
3060	199	4673	63	897200-1902	8	897214-9881	35
3060	201	4673	64	897201-4661	8	897215-3581	171
897169-0151	79	4682	63	6390	39	897216-1280	88
0151	80	4682	64	9730	39	1280	92
1691	18	8771	88	897203-8170	11	1290	89
1741	18	8771	92	8170	13	1290	92
1791	18	9130	219	897204-4100	173	1310	88
1880	18	9130	221	5501	137	1310	89
1880	21	9400	104	5501	140	1320	88
1920	18	9400	107	897205-1230	88	1330	89
1920	21	897181-6160	89	1230	92	1330	92
1961	50	6161	93	1260	88	1350	89
1961	54	897182-0612	26	8040	218	897217-2492	107
8890	52	0612	28	8040	220	8031	21
8890	56	6811	218	897206-0050	232	8581	201
897170-1660	173	6972	18	0060	237	8620	64
4010	40	6972	21	0100	237	8631	42
4010	43	6992	18	0120	237	8641	36
8680	163	6992	21	897207-0650	26	8780	206
8690	166	8531	75	0660	26	9560	201
897171-1260	28	8531	76	0660	28	9570	37
2070	39	897183-0130	117	1190	238	897218-6760	39
2070	42	0130	118	1460	238	6760	42
2420	172	0141	137	1740	239	6800	219
2420	178	0141	140	1750	239	897219-1890	43
2430	172	9480	137	1760	238	1910	41
2430	178	897184-0800	173	2150	231	1910	43
2450	173	0800	178	5120	239	3160	186
3310	107	0980	172	897208-9930	218	897220-0093	8
4010	67	0980	178	9930	220	6740	177
4010	68	897185-4120	199	897209-1151	137	897221-6530	202
8381	50	4120	201	6090	11	897222-4860	89
8381	54	4180	136	6090	13	4860	90
897172-7201	90	897187-1660	219	6090	18	4860	93
7201	93	1660	221	6090	21	4880	136
897173-5690	26	5820	40	897210-1450	88	4880	139
5690	28	5820	43	1450	92	897223-2350	54
897174-4330	39	5830	40	6750	88	4490	164
897175-2640	40	5830	43	6750	92	4500	163
8620	199	7181	218	7871	171	5801	50
8620	201	7181	220	7871	177	5801	54
897176-0670	89	897188-1400	136	9160	150	897224-9990	88
0670	92	1400	139	9170	151	9990	89
8840	40	897189-1690	158	9180	150	9990	92
8860	40	1700	160	897211-2090	79	897225-1160	39
8880	40	1710	158	2090	80	1160	42
897178-8181	111	897191-3780	257	3170	89	1170	136

NUMERICAL INDEX

PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE
897225-1170	139	897226-8560	94	897231-2100	52	897247-9890	106
1180	89	8570	90	2130	33	897248-2980	136
1180	93	8570	94	2800	150	897251-7340	23
3181	50	9070	159	5010	136	897252-4380	39
3340	159	9300	39	5010	139	4380	42
4691	231	9300	42	5320	201	897253-1510	163
9470	189	897227-2821	104	5350	113	1520	163
9550	165	2821	108	5403	18	1530	163
9560	165	2831	104	5412	18	1540	163
9570	165	2831	108	5423	18	897254-1480	76
9580	165	2841	104	5790	89	897255-3374	42
9590	165	2841	108	5790	93	897256-5310	189
9600	165	2851	105	7170	179	5310	190
9610	165	2851	108	897232-2851	21	5661	193
9620	165	2861	105	2870	72	5661	194
9630	189	2861	108	3341	107	5672	193
9640	165	2871	105	6030	43	5672	194
9650	165	2871	108	6040	43	897257-2230	90
9660	165	2881	105	9350	11	2230	93
9670	165	2881	108	897233-0890	163	2960	231
9680	165	2891	105	0900	164	3331	50
9690	165	2891	108	4110	136	3331	54
9700	165	2901	105	4130	136	8750	40
9710	165	2901	108	4290	11	8750	43
9720	165	6030	64	4290	13	8760	40
9730	165	7251	35	4290	34	8760	43
9740	165	897228-1540	28	4290	36	897258-4792	79
9750	189	1560	29	5940	89	4792	80
9760	165	1753	50	5950	89	897259-2860	189
9770	165	1753	54	5950	93	897262-0550	160
9780	165	1763	50	5981	42	0560	160
9790	165	1763	54	897234-5040	249	0570	159
9800	165	1780	93	897235-2610	13	1450	19
9810	165	3850	107	897238-6270	249	1451	22
9820	165	3860	107	6270	250	1461	50
9830	165	897229-2513	106	6280	249	1461	54
9840	165	3672	106	6280	250	1471	19
9850	165	3682	106	897239-5940	64	1471	22
9860	165	3690	36	897240-0200	202	1481	20
897226-0400	189	3810	13	0220	114	1481	22
7800	90	7790	160	0240	113	7040	159
7800	93	7830	160	0250	113	7200	160
8300	39	7840	160	6750	118	8160	218
8300	42	7850	160	8470	232	8160	220
8400	136	7880	160	897241-5490	159	8170	175
8400	139	7890	159	897244-7700	173	8170	181
8411	175	7910	160	7700	178	8830	173
8411	181	9070	106	897245-7200	89	8830	179
8421	175	897230-9380	88	7210	88	897263-8680	177
8421	181	9390	89	7220	88	897264-0100	189
8454	50	9390	92	7230	92	0100	190
8454	54	9400	92	7240	92	0110	189
8550	90	897231-0301	51	897246-5100	140	0110	190
8550	94	0301	55	897247-9011	171	9610	50
8560	90	0830	35	9011	177	9610	54

NUMERICAL INDEX

897288-1560 - 909180-0320

PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE	PART NUMBER	PAGE
897288-1560	42	897310-3520	43	900096-6021	239	908160-5450	171
897289-1180	214	3530	41	6060	240	5450	177
1250	214	3540	41	6350	240	6160	18
1310	214	4521	171	900097-0100	243	6160	21
1320	214	4521	177	902061-0320	40	6160	41
1330	214	897311-2541	214	0320	42	6160	44
1360	214	6830	106	903910-4100	71	6160	126
2930	106	8350	199	4100	72	6160	128
5430	76	897314-8250	106	4100	160	8160	18
897300-8010	178	8260	106	6200	160	8160	21
8950	26	8610	108	903920-5100	253	8500	171
8950	28	8952	106	6120	253	8500	177
897302-2030	137	8962	106	904110-6160	18	908161-2200	51
2030	140	8971	106	6160	19	2200	55
897303-2250	35	9060	42	6160	21	2250	51
4110	50	9110	28	6160	22	2250	55
4110	54	9140	28	6160	63	908213-6250	174
4120	50	9160	133	6160	64	6250	180
4120	54	9170	64	8200	67	909031-0100	225
4200	50	9181	201	8200	68	909110-4060	171
4200	54	897318-3720	171	8300	67	4060	177
4540	173	3720	177	8400	19	4060	253
4540	179	6150	181	8400	22	5080	153
5772	174	897319-9860	140	8400	75	5080	172
5772	179	897320-1070	28	8400	76	5080	175
5802	174	3260	35	8450	76	5080	178
5802	180	3640	28	8500	50	5080	181
5830	174	5470	42	8500	54	909111-4060	171
5830	179	897321-3350	180	8600	50	4060	177
6670	174	3480	178	8600	54	4080	136
6670	180	3502	179	904130-8200	68	4080	139
897304-0680	244	5720	177	904411-0250	50	5060	33
897307-0610	178	5750	177	0250	54	5060	35
2700	193	5780	37	0400	50	909150-5050	225
4042	34	897322-3380	163	0450	50	5080	90
4042	37	5500	11	0450	51	5080	93
4150	171	5500	13	0450	54	5080	138
4150	177	8760	220	0450	55	5080	140
4671	175	8810	220	904731-0800	51	5080	175
4671	181	897324-5170	164	0800	55	5080	180
897308-9880	213	897328-3750	163	905820-6140	52	909160-5040	174
9880	214	3760	163	6140	56	5040	180
897309-5500	177	900006-0060	52	905921-0250	52	5080	90
6710	171	0060	56	906000-8120	226	5080	93
6710	177	0070	52	906023-6250	181	6100	137
897310-1000	42	0070	55	908030-7180	225	7040	175
1221	33	0070	56	7300	225	7040	180
1221	36	2070	52	908151-2200	51	909164-5080	200
1251	34	2070	56	2280	51	5080	201
1251	37	900090-6100	34	908160-4360	175	5080	218
1771	33	6100	37	4360	180	5080	220
1771	36	6570	34	5100	34	7080	75
3510	41	6570	37	5100	37	7080	90
3510	43	6790	40	5160	33	7080	93
3520	41	900095-0381	225	5160	36	909180-0320	239

NUMERICAL INDEX

PART NUMBER	PAGE
909180-0350	239
0400	237
0450	239
1300	89
1620	33
1620	36
909185-4030	175
4030	180
4040	174
4040	180
909201-3160	243
909204-5100	18
5100	21
909524-6220	20
6220	23
909525-2350	26
909561-2530	175
2530	181
909565-1140	176
1140	181
1160	176
1160	181
2130	20
2130	23
909571-4080	132
4080	133
4140	34
4140	36
4140	112
4140	113
4140	137
4140	140
4160	51
4160	132
4160	133
4200	27
4200	29
4200	51
4200	55
909572-0140	112
0140	113
0140	137
0140	140
0140	209
0140	210
909631-0040	231
909662-0120	26
0120	28
909664-0010	18
0010	21
909678-5100	33
5490	244
909740-1140	243
909851-8660	41
8660	44
909862-0420	179
909878-5320	18
5320	21
5320	226
6260	32
6260	35
909902-2420	19
2420	21
3040	19
909906-2051	32
2051	35
3251	209
3251	210
909914-9090	19
9090	22
909915-0361	193
0361	194
0421	193
0691	206
0721	206
2651	205
2811	83
2811	84
2811	193
2811	194
4121	205
909916-8931	19
8931	71
8931	72
909920-6090	133
8520	235
911129-0830	34
0830	36
911229-0581	20
0581	22
0581	52
0581	56
913642-0761	89
0761	93
0770	89
0770	93
0780	89
0780	93
0790	93
913671-2661	88
913713-0641	80
914145-0760	218
0760	220
914217-0620	199
0620	201
914219-1410	200
1410	202
931131-0240	225
931220-6111	225
931341-0280	225
931342-0290	225
931421-0220	225
933141-6012	231
933142-6010	231
933235-6061	239
933263-6130	237
933271-6071	238
933351-6041	238
953215-6020	59
981325-4460	173
4460	179
982720-0690	126
0690	128
982931-5110	138
5110	140
982951-3250	143
3250	144
3320	143
3320	144
983140-1570	19
1870	249
983150-2040	249
2040	250
989136-4230	89
4230	93
989311-1130	229
993490-4350	71
4350	72
994411-2330	139
999202-3140	32
3140	35
3140	111
3140	113
3160	51

不許複製

ISUZU DIESEL ENGINE

GENUINE

PARTS CATALOG

4LB1/4LC1/4LE1/4LE2

(ESP-246)

いすゞ自動車株式会社
パワートレイン営業室
パワートレインサービス・部品部

〒140-8722　東京都品川区南大井６－２６－１
大森ベルポートＡ館
ＴＥＬ　０３－５４７１－１１１１

07986　　112-01K

ISUZU