

PARTS LIST No. E18712 00704L

部 品 表
PARTS LIST

型 式
MODEL

DIS-90SB

 **デンヨー株式会社**
Denyo Co., Ltd.

適用製造番号
SERIAL No. 3683859~

パーツリストご使用について

1. このパーツリストは、DIS-90SB型エンジンコンプレッサの部品を収録してあります。

2. 部品をご注文の際は、下記の事項をご指示願います。

1) 機械型式および製造番号

2) 部品番号および部品名称

3) 所要数量

3. 実施号機械欄に製造番号が記載されている部品は、変更された部品です。
貴社の機械の製造番号を確認のうえご注文ください。

4. 編集順序は、構成装置毎になっております。挿絵は各グループの最初の頁に挿入してあります。挿絵には、部品を索引するための見出番号が附されており、見出番号は本文各頁の左欄見出番号と一致いたします。

5. 部品番号は、10桁の数字とアルファベットで表してあります。部品メーカーの部品番号等は、備考欄に記載してあります。

6. 見出番号に*印のつけてあるもの、および記載されていない部品は単体では取扱っておりませんからアセンブリでご注文ください。

7. このパーツリストには下記の略号、記号を使用しています。

- ALL : 当該機種に共通
 - p. : 頁
 - Re. : 後
 - Fr. : 前
 - L.H. : 左
 - R.H. : 右
 - STD : 標準型
 - No. : 番号
 - O.P. : 選択部品
- : 変更追加部品記載ページの指示

なお、上記の他に「一台分數」欄に「A」「B」「C」の分類があります。「A」「B」「C」の分類を使用している場合は、その内容を各グループ本文の最初の部分に示してあります。製品の仕様により部品が変わる場合がありますので、お客様にご使用いただいている製品の仕様（電圧、周波数、型式等）をご確認のうえご注文ください。

8. このパーツリストに使用している左（L.H.）および右（R.H.）はエアエンブ側よりエンジンを見た場合を表しています。

9. このパーツリストに記載されていないエンジン部品については、「株式会社 クボタ D1005 ディーゼルエンジン部品カタログ」を参照願います。

HOW TO USE THE PARTS LIST

1. This parts list covers the parts for Engine Driven Compressor Model DIS-90SB.
2. When placing orders, specify the following details;
 - 1) Model Number and Serial Number.
 - 2) Parts Number and Parts Name.
 - 3) Quantity required.
3. The parts listed with a serial number are new parts.
Please place an order with us after confirmation of serial number for machine at your side.
4. The sequence of this parts list is by machine structure. Each group of parts has an illustration on the first page of the parts list. Parts can be identified on the parts list, using the key number on the illustration. These key number, on the illustration, are also shown on the left-hand column in the parts list.
5. The parts number are shown as 10 digits and alphabet. The parts number of the parts makes are shown in the remark column.
6. The parts marked with an asterisk and the parts not listed are not available as a single part, and orders must be placed for them as an assembly.
7. This parts list uses the following abbreviations and symbols:

All :Some parts differ
from unit to unit
Ass'y :Assembly
Fr. :Front
L.H. :Left
No. :Number
O.P. :Optional Parts

P. :Page
Re. :Rear
R.H. :Right
STD :Standard
→ :Indication of the page
where the modified or additional
parts are listed.


Each symbol 「A」 「B」 「C」 listed in a part of Q'ty shows the appropriate parts number for the unit you purchased. The meaning of the symbol 「A」 「B」 「C」 is listed on the first top place of each assembly group.


Please check the specification of the unit such as frequency, voltage, model No. etc. before placing orders.

8. Left (L.H.) and Right (R.H.) used in this parts list show the direction when you look at the engine from the air end side.
9. For the engine parts not listed in this parts list, refer to " KUBOTA Corporation D1005 Diesel Engine Parts Catalogue."

目 次
I N D E X

名 称 N a m e	頁 Page
エンジンコンプレッサセット..... Engine Compressor Set	1－1
エアエンド組立（その１）..... Air End Ass'y(Part 1)	2－1
エアエンド組立（その２）..... Air End Ass'y(Part 2)	3－1
オイルチャンバ組立..... Oil Chamber Ass'y	4－1
スピードレギュレータ組立..... Speed Regulator Ass'y	5－1
配管組立（その１）..... Piping Ass'y(Part 1)	6－1
配管組立（その２）..... Piping Ass'y(Part 2)	7－1
エンジン・ラジエータ組立..... Engine & Radiator Ass'y	8－1
エンジン操作盤組立..... Engine Operating Panel Ass'y	9－1
バッテリー組立..... Battery Ass'y	10－1
マフラー組立..... Muffler Ass'y	11－1
燃料タンク組立..... Fuel Tank Ass'y	12－1
ボンネット組立（その１）..... Bonnet Ass'y(Part 1)	13－1
ボンネット組立（その２）..... Bonnet Ass'y(Part 2)	14－1
銘 板 組 立..... Name Plate Ass'y	15－1



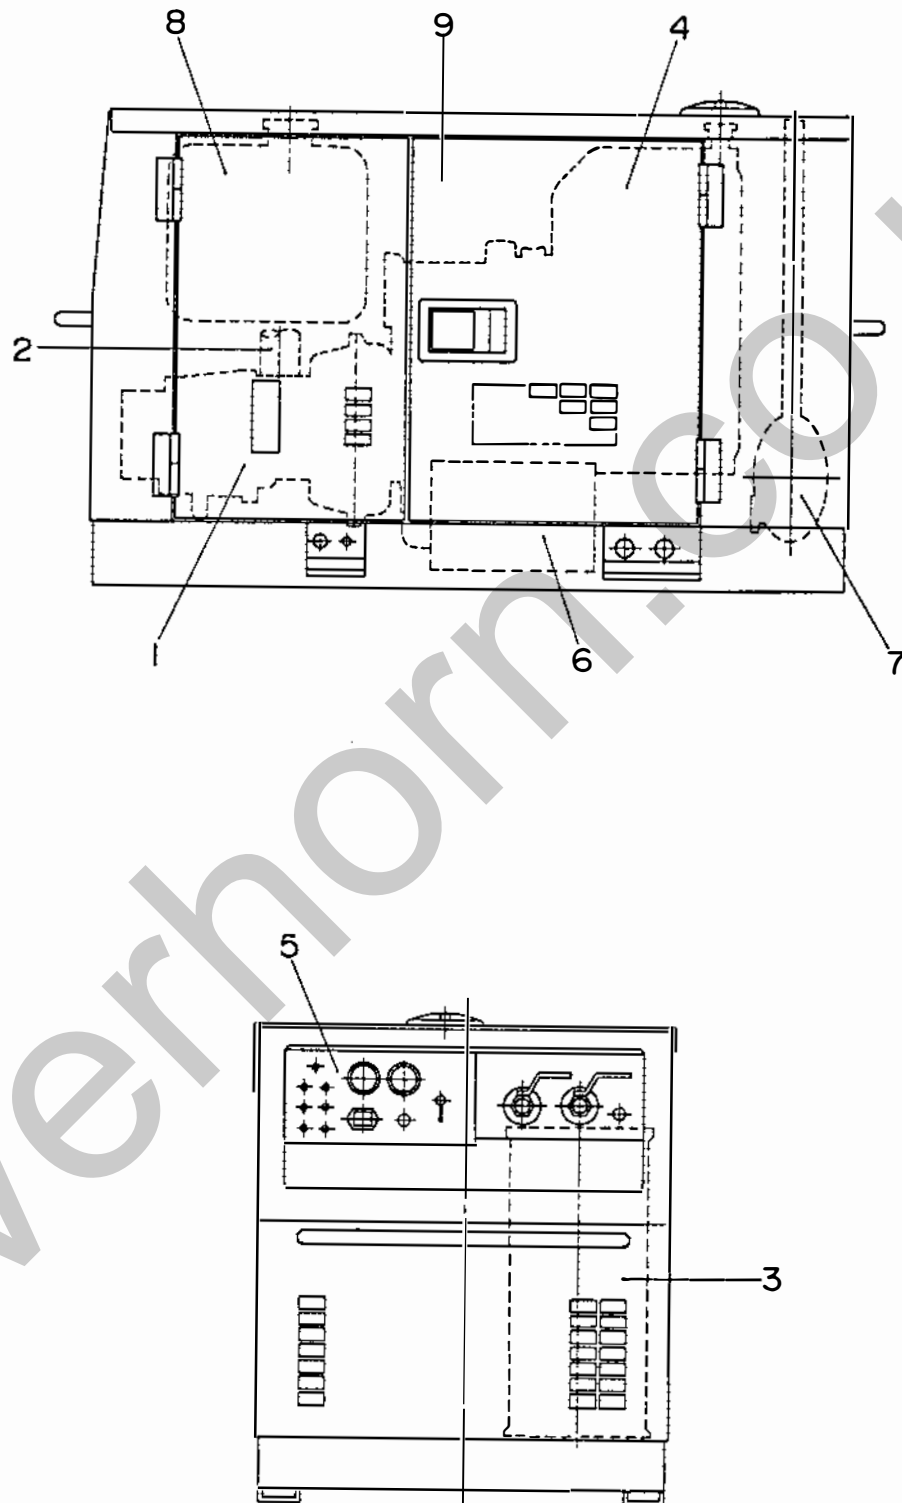


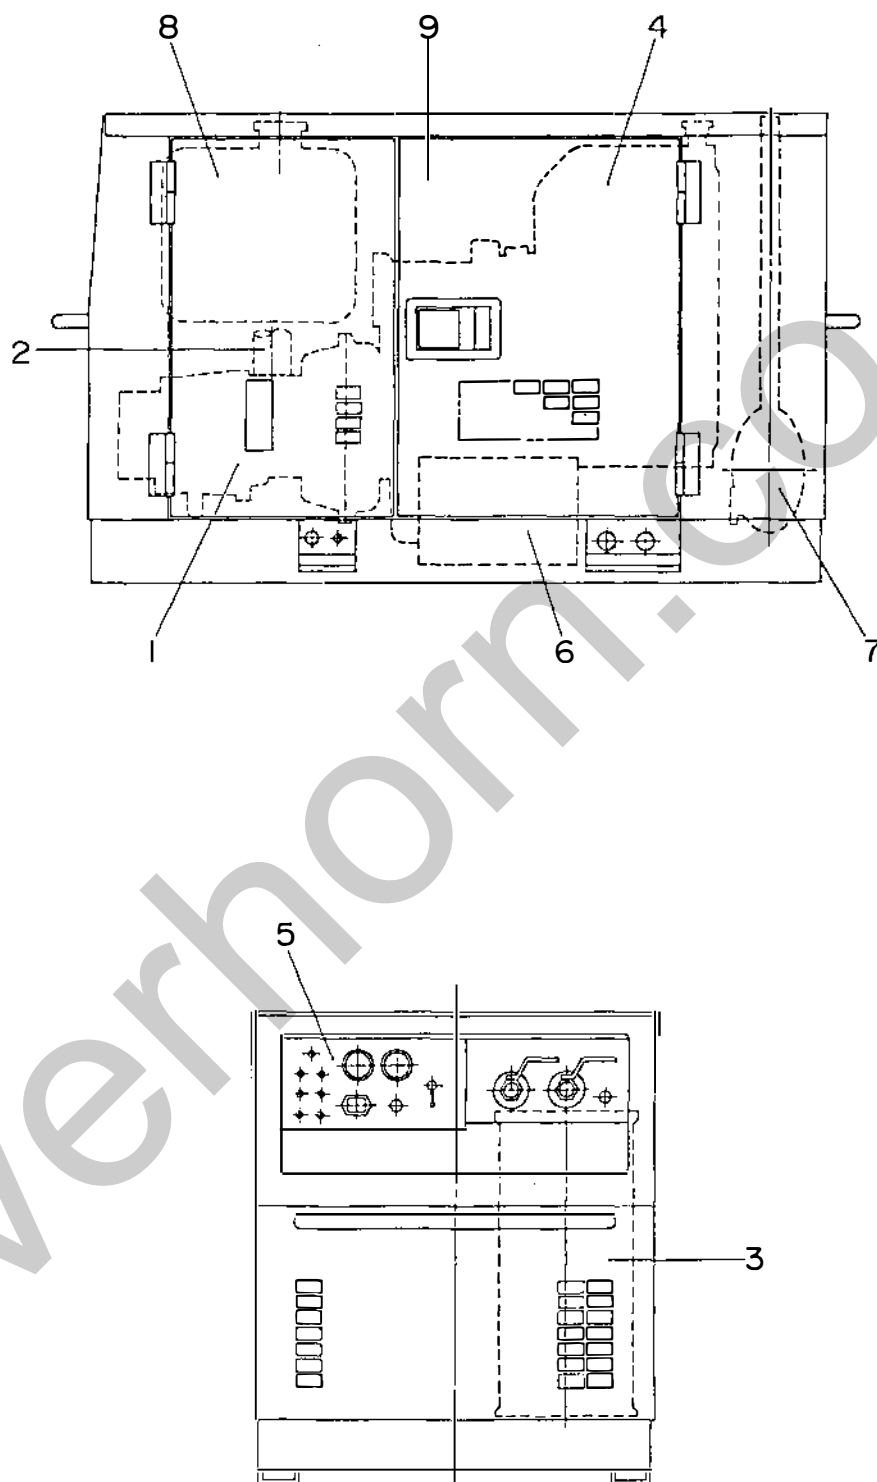

見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
1		エアエンド組立 (その1) Air End Ass'y (Part 1)	p. 2-1, 2-2参照 Refer to p. 2-1, 2-2						
2		エアエンド組立 (その2) Air End Ass'y (Part 2)	p. 3-1参照 Refer to p. 3-1						
3		オイルチャンバ組立 Oil Chamber Ass'y	p. 4-1参照 Refer to p. 4-1						
		スピードレギュレータ組立 Speed Regulator Ass'y	p. 5-1参照 Refer to p. 5-1						
		配管組立 (その1) Piping Ass'y (Part 1)	p. 6-1参照 Refer to p. 6-1						~3831106
		配管組立 (その1) Piping Ass'y (Part 1)	p. 6-1-1参照 Refer to p. 6-1-1						3831107~
		配管組立 (その2) Piping Ass'y (Part 2)	p. 7-1参照 Refer to p. 7-1						~3698272
		配管組立 (その2) Piping Ass'y (Part 2)	p. 7-1-1参照 Refer to p. 7-1-1						3698273~
4		エンジン・ラジエータ組立 Engine & Radiator Ass'y	p. 8-1参照 Refer to p. 8-1						~3690837
		エンジン・ラジエータ組立 Engine & Radiator Ass'y	p. 8-1-1参照 Refer to p. 8-1-1						3690838~ 3783554
		エンジン・ラジエータ組立 Engine & Radiator Ass'y	p. 8-1-2参照 Refer to p. 8-1-2						3783555~
5		エンジン操作盤組立 Engine Operating Panel Ass'y	p. 9-1参照 Refer to p. 9-1						~3698272
		エンジン操作盤組立 Engine Operating Panel Ass'y	p. 9-1-1参照 Refer to p. 9-1-1						3698273~ 3831106
		エンジン操作盤組立 Engine Operating Panel Ass'y	p. 9-1-2参照 Refer to p. 9-1-2						3831107~
6		バッテリー組立 Battery Ass'y	p. 10-1参照 Refer to p. 10-1						~3685608
		バッテリー組立 Battery Ass'y	p. 10-1-1参照 Refer to p. 10-1-1						3685609~
7		マフラ組立 Muffler Ass'y	p. 11-1参照 Refer to p. 11-1						
8		燃料タンク組立 Fuel Tank Ass'y	p. 12-1参照 Refer to p. 12-1						
9		ボンネット組立 (その1) Bonnet Ass'y (Part 1)	p. 13-1参照 Refer to p. 13-1						~3689600
		ボンネット組立 (その1) Bonnet Ass'y (Part 1)	p. 13-1-1参照 Refer to p. 13-1-1						3689601~ 3693368
		ボンネット組立 (その1) Bonnet Ass'y (Part 1)	p. 13-1-2参照 Refer to p. 13-1-2						3693369~ 3746179
		ボンネット組立 (その1) Bonnet Ass'y (Part 1)	p. 13-1-3参照 Refer to p. 13-1-3						3746180~ 3783554


見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
		ボンネット組立 (その1) Bonnet Ass'y (Part 1)	p. 13-1-4参照 Refer to p. 13-1-4						3783555~
		ボンネット組立 (その2) Bonnet Ass'y (Part 2)	p. 14-1参照 Refer to p. 14-1						~3684960
		ボンネット組立 (その2) Bonnet Ass'y (Part 2)	p. 14-1-1参照 Refer to p. 14-1-1						3684961~ 3685608
		ボンネット組立 (その2) Bonnet Ass'y (Part 2)	p. 14-1-2参照 Refer to p. 14-1-2						3685609~
		銘 板 組 立 Name Plate Ass'y	p. 15-1参照 Refer to p. 15-1						~3746179
		銘 板 組 立 Name Plate Ass'y	p. 15-1-1参照 Refer to p. 15-1-1						3746180~
	E 13540 00103	エンジン結線図 Engine Wiring Diagram							
	E 18412 01114	取扱説明書 (和文) Instruction Manual (Japanese)							
	E 18442 00104	取扱説明書 (英文) Instruction Manual (English)							

SECTION X - X

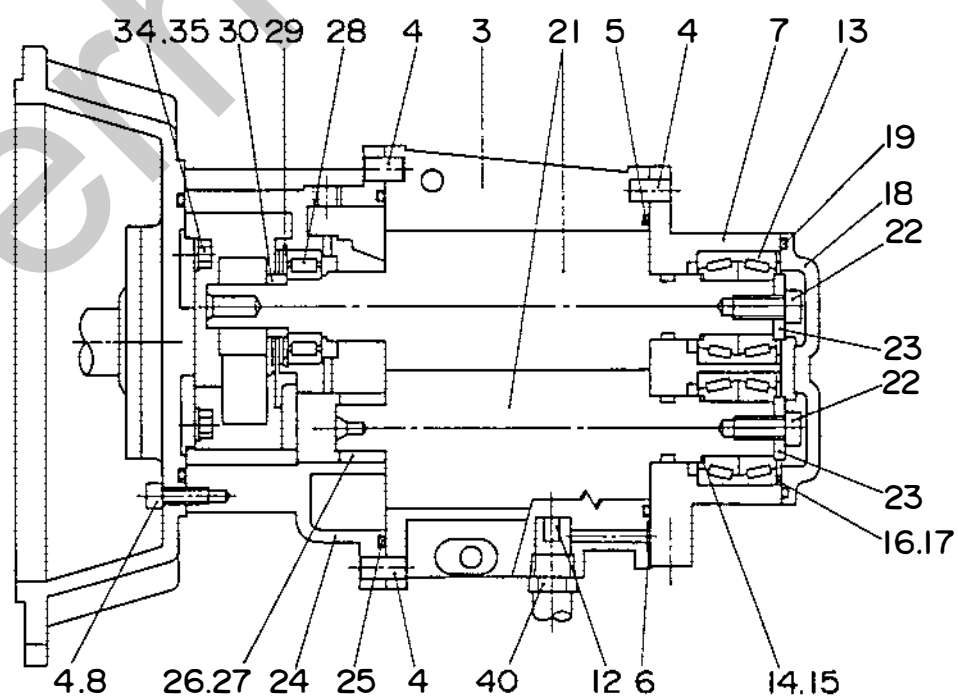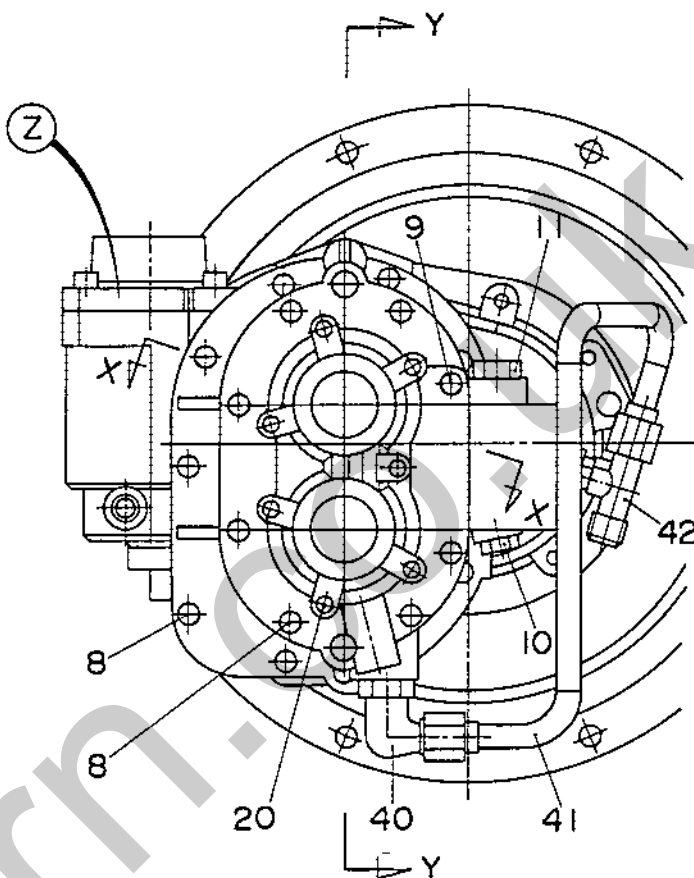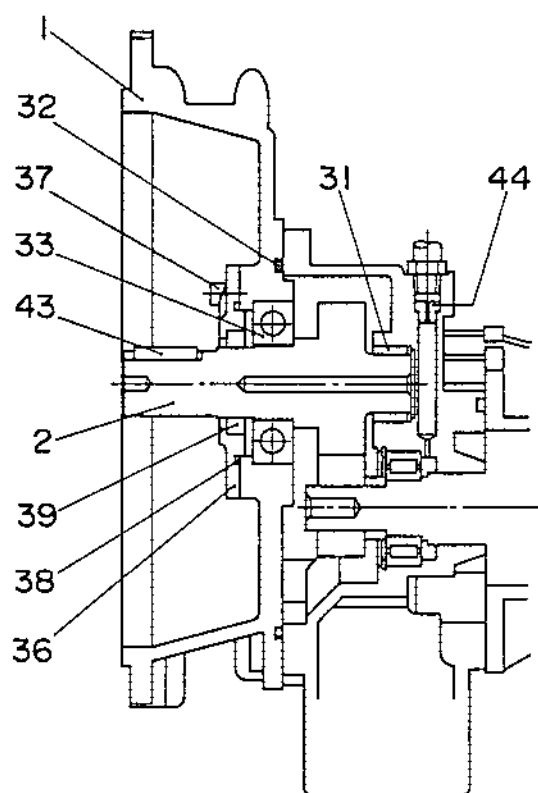

SECTION Y - Y


VIEW - Z

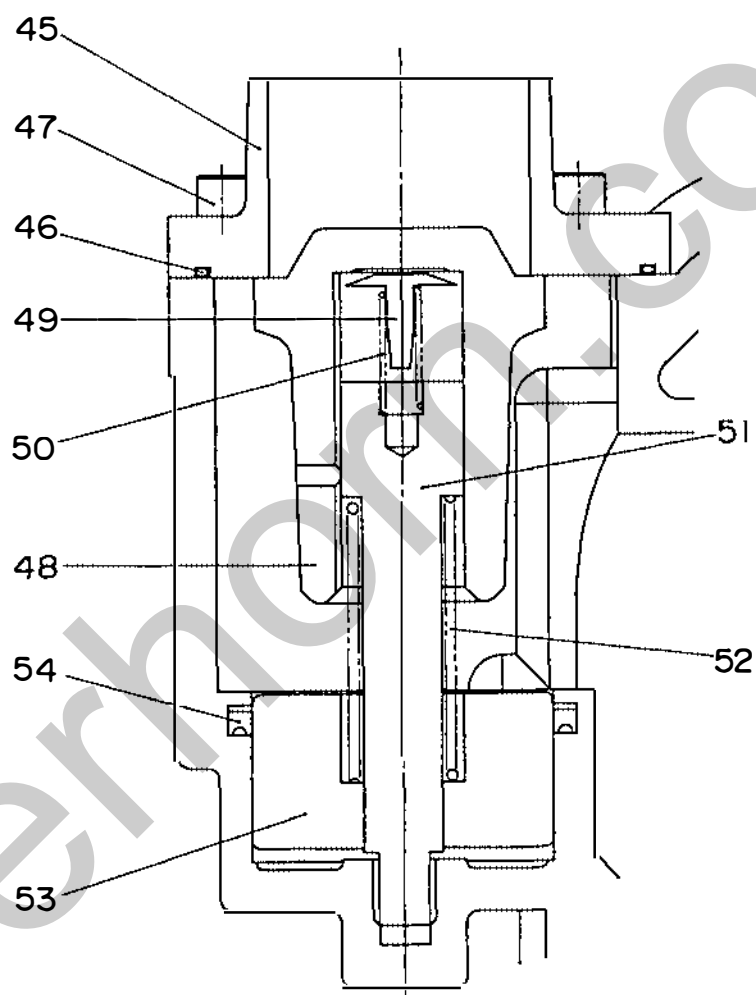


見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数量Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
		A=DIS-55SB B=DIS-70SB C=DIS-90SB, SBI							
1	06030 40601	ギアケース カバー Cover, gearcase	39877659		1				
	06030 41101	ギアケース カバー Cover, gearcase	39885157			1			
	06030 41631	ギアケース カバー Cover, gearcase	39885173				1		
2	06030 40602	ギア セット Gear Set	39886106		1				
	06030 41102	ギア セット Gear Set	39886130			1			
	06030 41640	ギア セット Gear Set	39886155				1		
3	06030 41601	ロータ ハウジング Rotor Housing	36759983	1					
4	06030 41602	ピン Pin	95078531	6					
5	06030 41603	O リング O Ring	95060745	1					
6	06030 41604	O リング O Ring	95045092	1					
7	06030 41605	ベアリング ハウジング Housing, rear bearing	36754265	1					
8	06030 41606	六角穴付ボルト Hex. Socket Head Cap Screw	96708060	28					
9	06030 41607	六角穴付ボルト Hex. Socket Head Cap Screw	35612134	1					
10	06030 41609	プラグ Plug	35287556	1					
11	06030 41610	プラグ Plug	95938213	1					
12	06030 41611	オリフィス Orifice	39323027	1					
13	06030 41612	ベアリング Bearing	35366038	4					
14	06030 41613	シム Shim	35373935	6					
15	06030 41614	シム Shim	35378314	6					
16	06030 41615	シム Shim	35366087	2					
17	06030 41616	ウェーブ スプリング Spring, wave	35366079	2					

見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
18	06030 41617	ベアリング カバー Cover, bearing	36506442	1					
19	06030 41618	○ リング O Ring	95023115	1					
20	06030 41619	六角穴付ボルト Hex. Socket Head Cap Screw	35611953	7					
21	06030 41620	ロータ セット Rotor Set	42428870	1					
22	06030 41621	六角ボルト Hex. Head Bolt	36846988	2					
23	06030 41622	押え板 Clamp Plate	35612100	2					
24	06030 41623	ギア ケース Gearcase	39882535	1					
25	06030 41624	○ リング O Ring	95852281	1					
26	06030 41625	ベアリング 外輪 Bearing, outer race	35375401	1					
27	06030 41626	ベアリング 内輪 Bearing, inner race	35612001	1					
28	06030 41627	ベアリング Bearing	35366061	1					
29	06030 41628	止め輪 Snap Ring	95223004	1					
30	06030 41629	スペーサ Spacer	35367184	1					
31	06030 41630	ベアリング Bearing	35375419	1					
32	06030 41632	○ リング O Ring	95870432	1					
33	06030 41633	ベアリング Bearing	35286004	1					
34	06030 41634	六角ボルト Hex. Head Bolt	36791689	2					
35	06030 41635	座金 Washer	95094306	2					
36	06030 40605	シール カバー Cover, Seal	39588413	1					
37	06030 41637	六角穴付ボルト Hex. Socket Head Cap Screw	35611961	4					
38	06030 41638	○ リング O Ring	95022331	1					
39	06030 41639	シール Seal	35375369	1					
40	06030 41650	エルボ 継手 Elbow Joint	35286442	1					


見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 - 備 考 Parts Name - Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
			All	A	B	C		
41	06030 41651	オイル インジェクション パイプ 39322193 Tube Ass'y	1					
42	06030 41652	T 継手 39480306 T Joint	1					
43	06030 41656	キー 39246954 Key	1					
44	06030 41657	オリフィス 39324983 Orifice	1					
45	06030 41641	カバー 39585187 Cover	1					
46	06030 41642	O リング 95961215 O Ring	1					
47	06030 41606	六角穴付ボルト 96708060 Hex. Socket Head Cap Screw	4					
48	06030 41643	アンローダ バルブ 36585625 Unloader Valve	1					
49	06030 41644	スプリング クリップ 35379817 Clip, spring	1					
50	06030 41645	スプリング 35376342 Spring	1					
51	06030 41646	ピストン軸 35611557 Stem, piston	1					
52	06030 40604	スプリング 39327143 Spring	1					
53	06030 40603	ピストン 39589296 Piston	1					
54	06030 41649	シール 35376359 Seal	1					

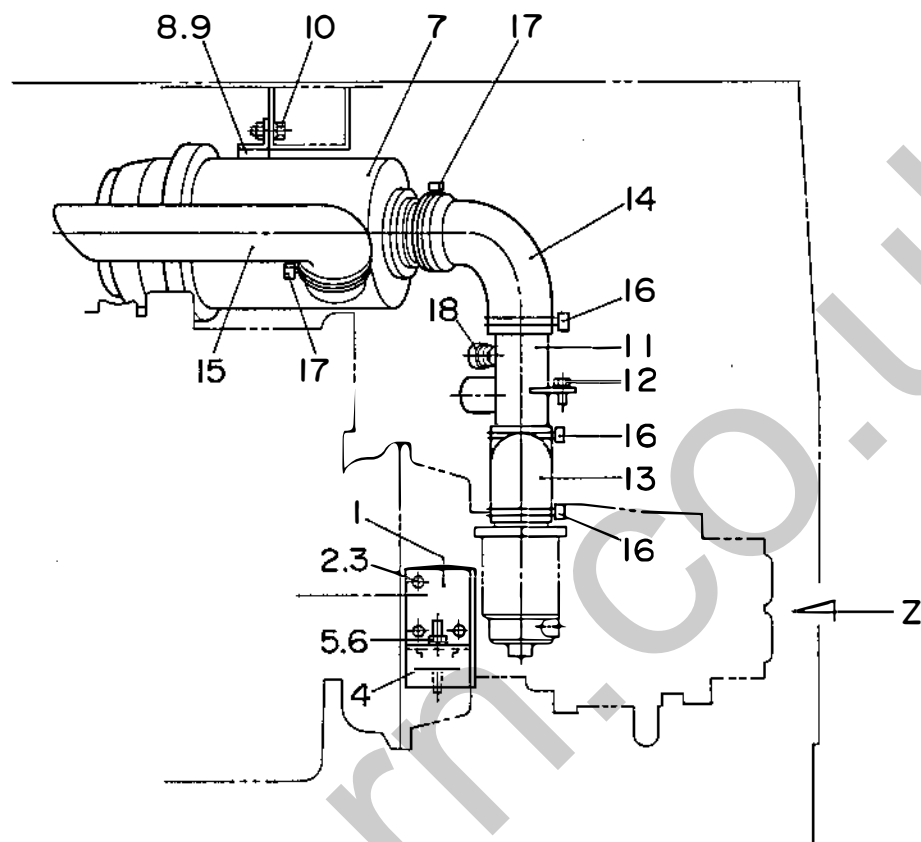

Piping Ass'y (Part 2), X

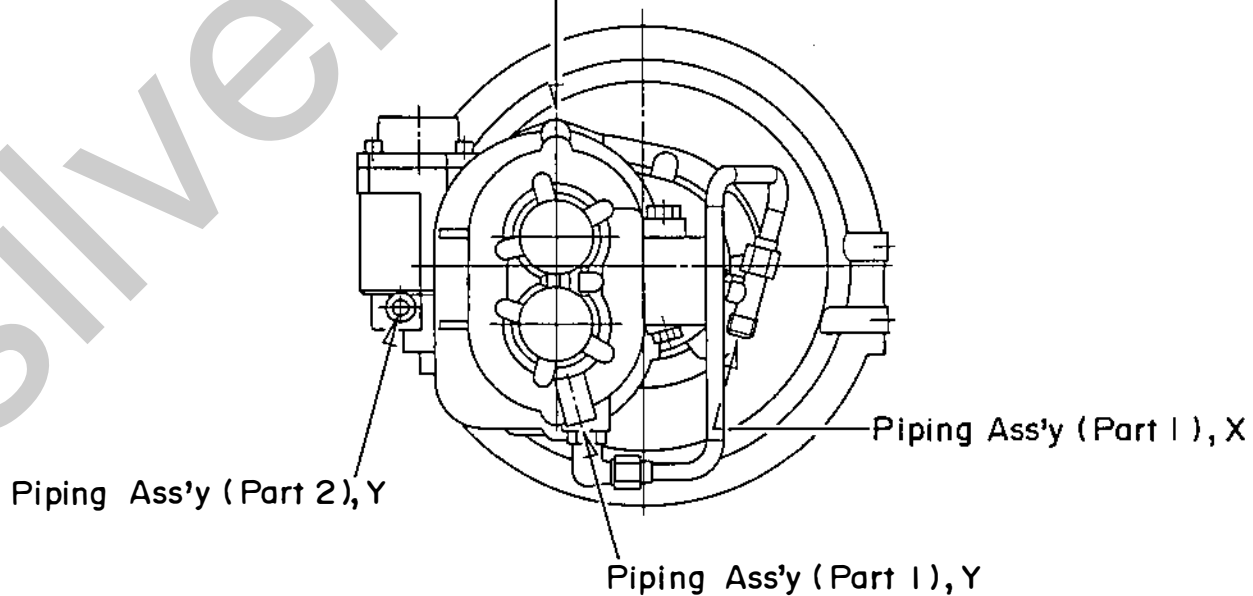


見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 - 備 考 Parts Name - Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
			All	A	B	C		
1	E 11501 00004	コンプレッサ フット (左) Compressor Foot, left side	1					
	E 11501 00103	コンプレッサ フット (右) Compressor Foot, right side	1					
2	00103 10020	六角ボルト Hex. Head Bolt	6					
3	00425 10000	バネ座金 Spring Washer	6					
4	06050 00045	防振ゴム Rubber Suspension	2					
		EA4005						
5	00300 08000	六角ナット Hex. Nut	2					
6	00400 08000	バネ座金 Spring Washer	2					
7	06020 46257	エア クリーナ Air Cleaner	1					
	06020 46366	エア クリーナ エレメント Element, air cleaner	(1)					
		P82-7653						
8	E 11401 00004	エア クリーナ ブラケット Bracket, air cleaner	1					
9	00171 08016	六角ボルト Hex. Head Bolt	2					
10	00171 08020	六角ボルト Hex. Head Bolt	2					
11	E 11403 00004	エア クリーナ パイプ Pipe, air cleaner	1					
12	00171 08020	六角ボルト Hex. Head Bolt	1					
13	E 11405 00104	エア クリーナ ホース Hose, air cleaner	1					
14	E 11405 00004	エア クリーナ ホース Hose, air cleaner	1					
15	E 11415 00603	エア クリーナ ホース Hose, air cleaner	1					
16	06055 15002	ホース バンド Hose Band	3					
		φ 75						
17	06055 15008	ホース バンド Hose Band	2					
		φ 90						
18	06020 40655	ダスト インジゲータ Indicator, dust	1					
		11304-6000						

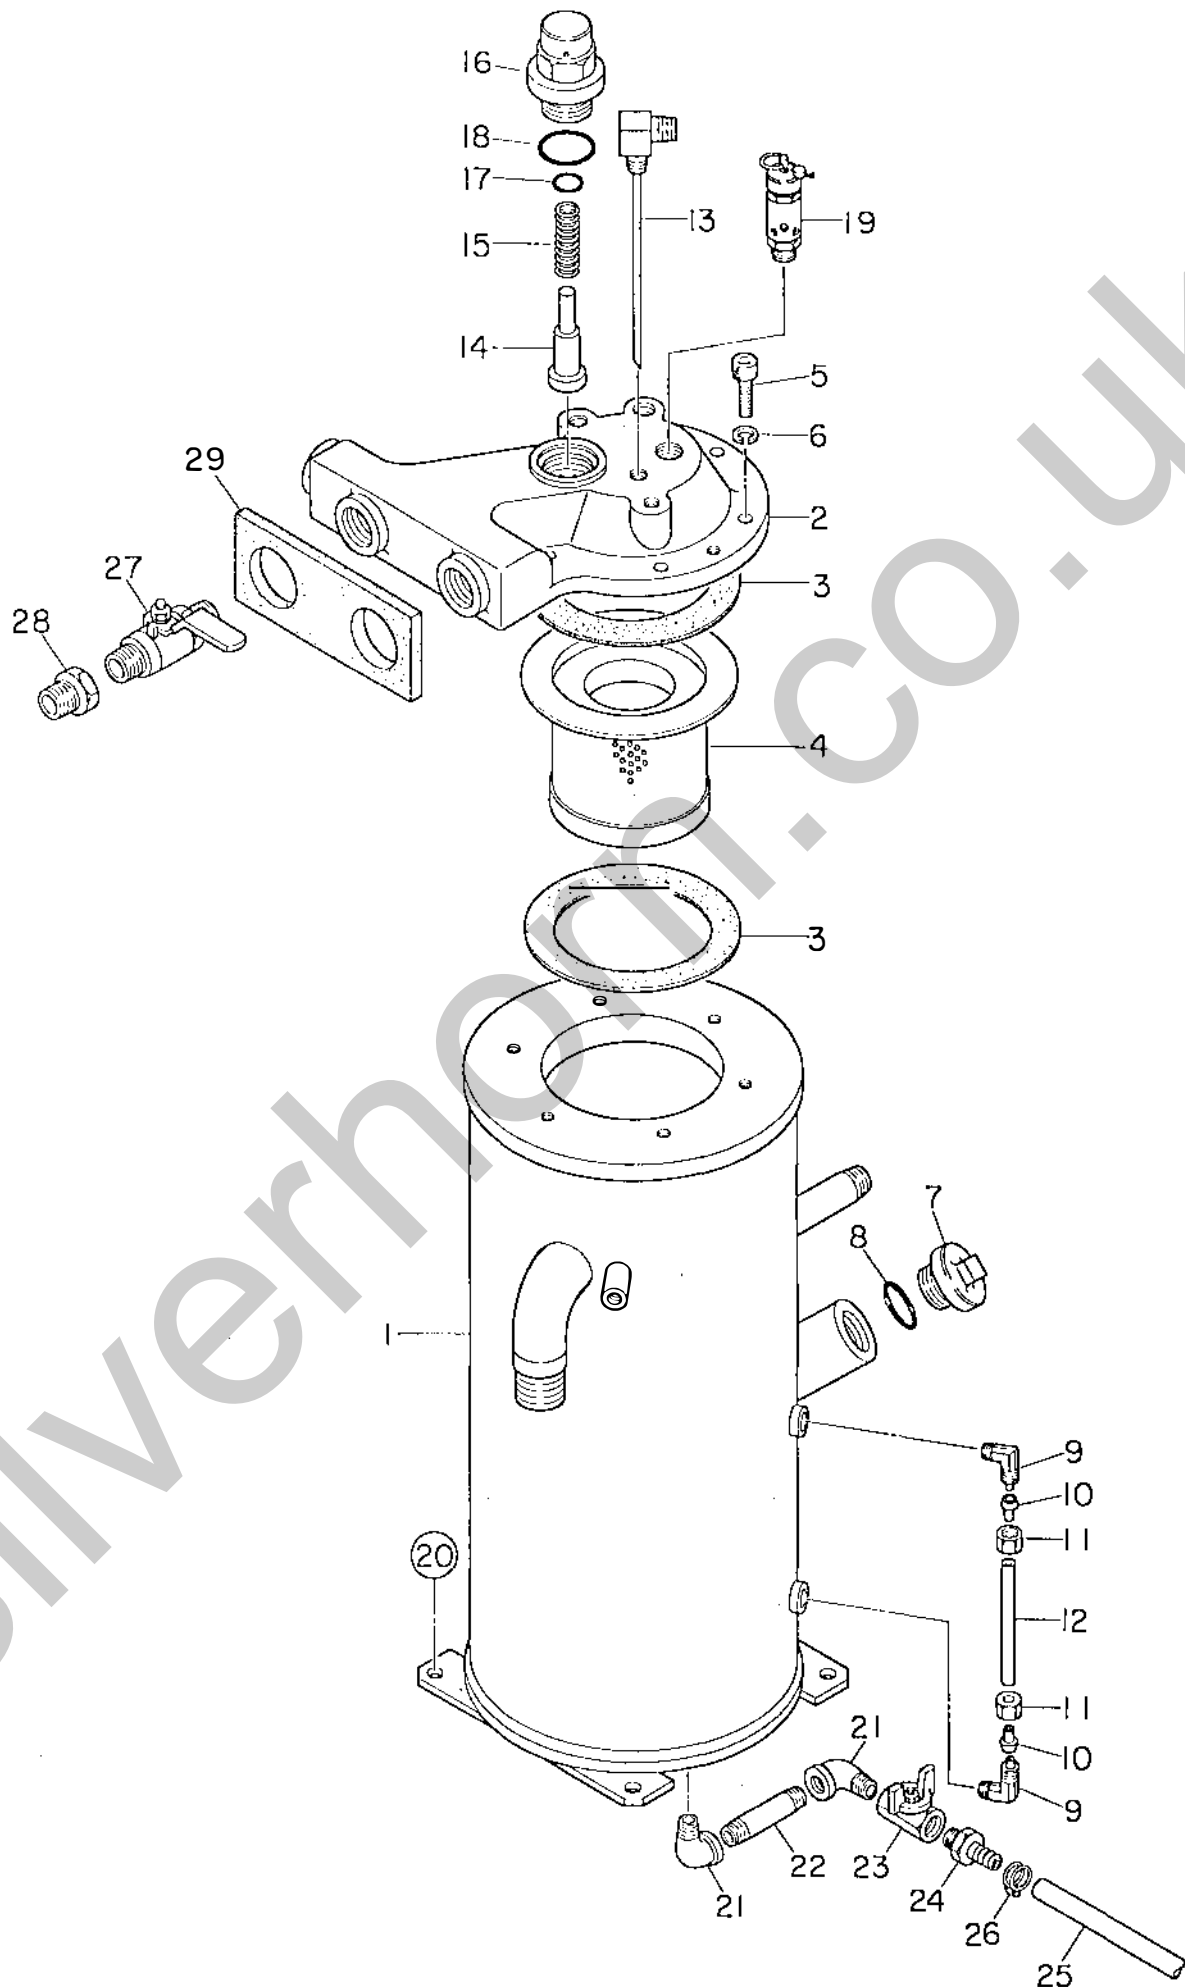



見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
1	E 16230 00002	チャンバ ボディ Body, chamber		1					
2	E 16241 00003	チャンバ カバー Cover, chamber		1					
3	E 93040 02104	ガスケット Gasket		2					
4	Y 06032 10043	オイル セパレータ Oil Separator	P837551	1					
5	Y 00153 10040	六角穴付ボルト Hex. Socket Head Cap Screw		6					
6	Y 00426 10000	バネ座金 Spring Washer		6					
7	W 08450 32804	オイル フィラ キャップ Cap, oil filler		1					
8	Y 01500 00044	O リング O Ring	P44	1					
9	Y 06033 01032	エルボ ユニオン Elbow Union	L4N8×6-PT1/4	2					
10	Y 06033 02021	スリーブ Sleeve		2					
11	Y 06033 03021	ナット Nut		2					
12	Y 01904 00145	ナイロン パイプ Nylon Pipe		1					
13	E 16245 00304	戻りパイプ Return Pipe		1					
14	E 16310 00104	バルブ Valve		1					
15	E 16310 00204	スプリング Spring		1					
16	E 16310 00004	保圧弁カバー Cover, minimum pressure valve		1					
17	Y 01505 00020	O リング O Ring	D P20	1					
18	Y 01500 00042	O リング O Ring	A P42	1					
19	Y 06032 00233	安全弁 Safety Valve	SF-50 NPT1/2 125PSI	1					~3687115
	E 19241 00044	安全弁 Safety Valve	SF-50 NPT1/2 130PSI	1					3687116~
20	Y 00171 10025	六角ボルト Hex. Head Bolt		4					
21	Y 01302 04000	めすおす エルボ Street Elbow	3/8	2					
22	Y 01343 04080	ロング ニップル Long Nipple	3/8	1					

見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	・ 備 考 Remarks	1台分数量Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
23	Y 06033 25013	バルブ Valve	BBS-77-10 3/8	1					
24	Y 06020 22750	ホース ジョイント Hose Joint	KH-124	1					
25	Y 01973 00080	ホース Hose		1					
26	Y 06055 15014	ホース バンド Hose Band	φ20	1					
27	Y 06033 25000	バルブ Valve	RBS-15-20 1×3/4	2					~3701732
	E 19241 00144	バルブ Valve	825-001355	2					3701733~
28	W 60133 83004	スパッド Spad		2					
29	E 14914 00004	ラバー シール Rubber Seal		1					

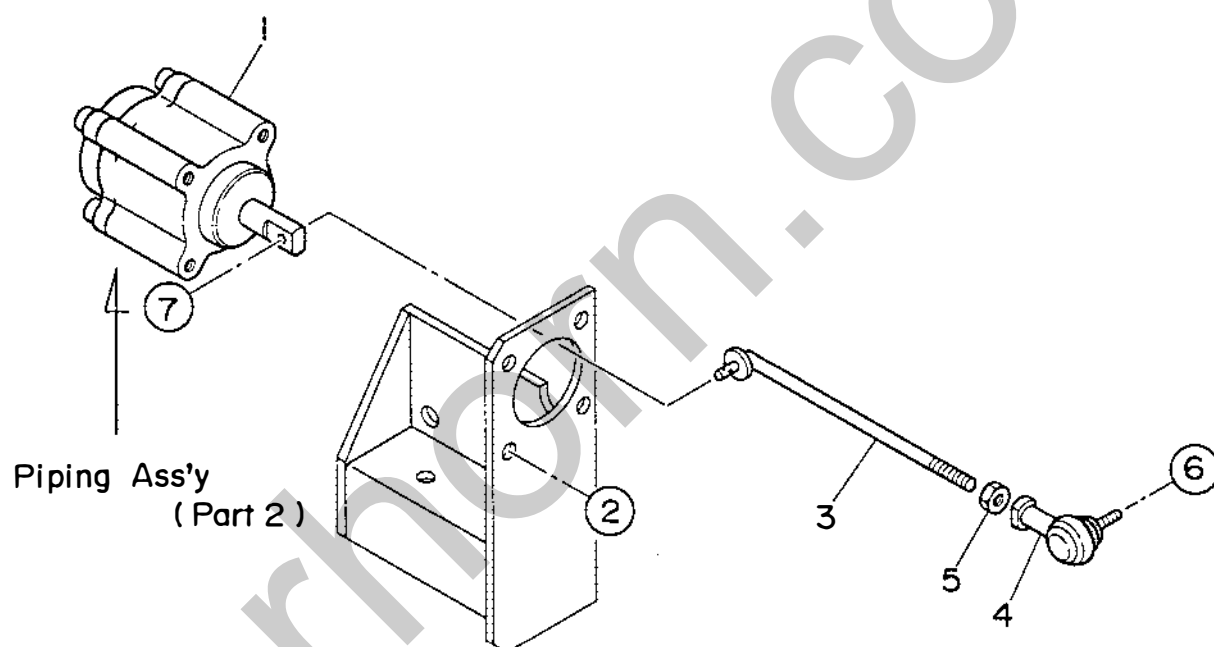


見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
1	E 19241 00104	スピード レギュレータ Speed Regulator	FCS-DNYK-50 -30-S (C)	1					
	06034 00004	ペロフラム Bellofram	DM1-50-40 -T3NN501	(1)					
2	00171 08020	六角ボルト Hex. Head Bolt		4					
3	E 12113 00504	ガバナ ロッド Governor Rod		1					
4	06021 80105	ボール ジョイント Ball Joint	LHSA8 DE38A	1					
5	00300 08000	六角ナット Hex. Nut		1					
6	02070 08000	六角ナット Hex. Nut		1					
	00412 08000	平座金 Plain Washer		1					
7	06050 10502	スナップ ピン Snap Pin	SSP-6	1					
	00412 06000	平座金 Plain Washer		1					

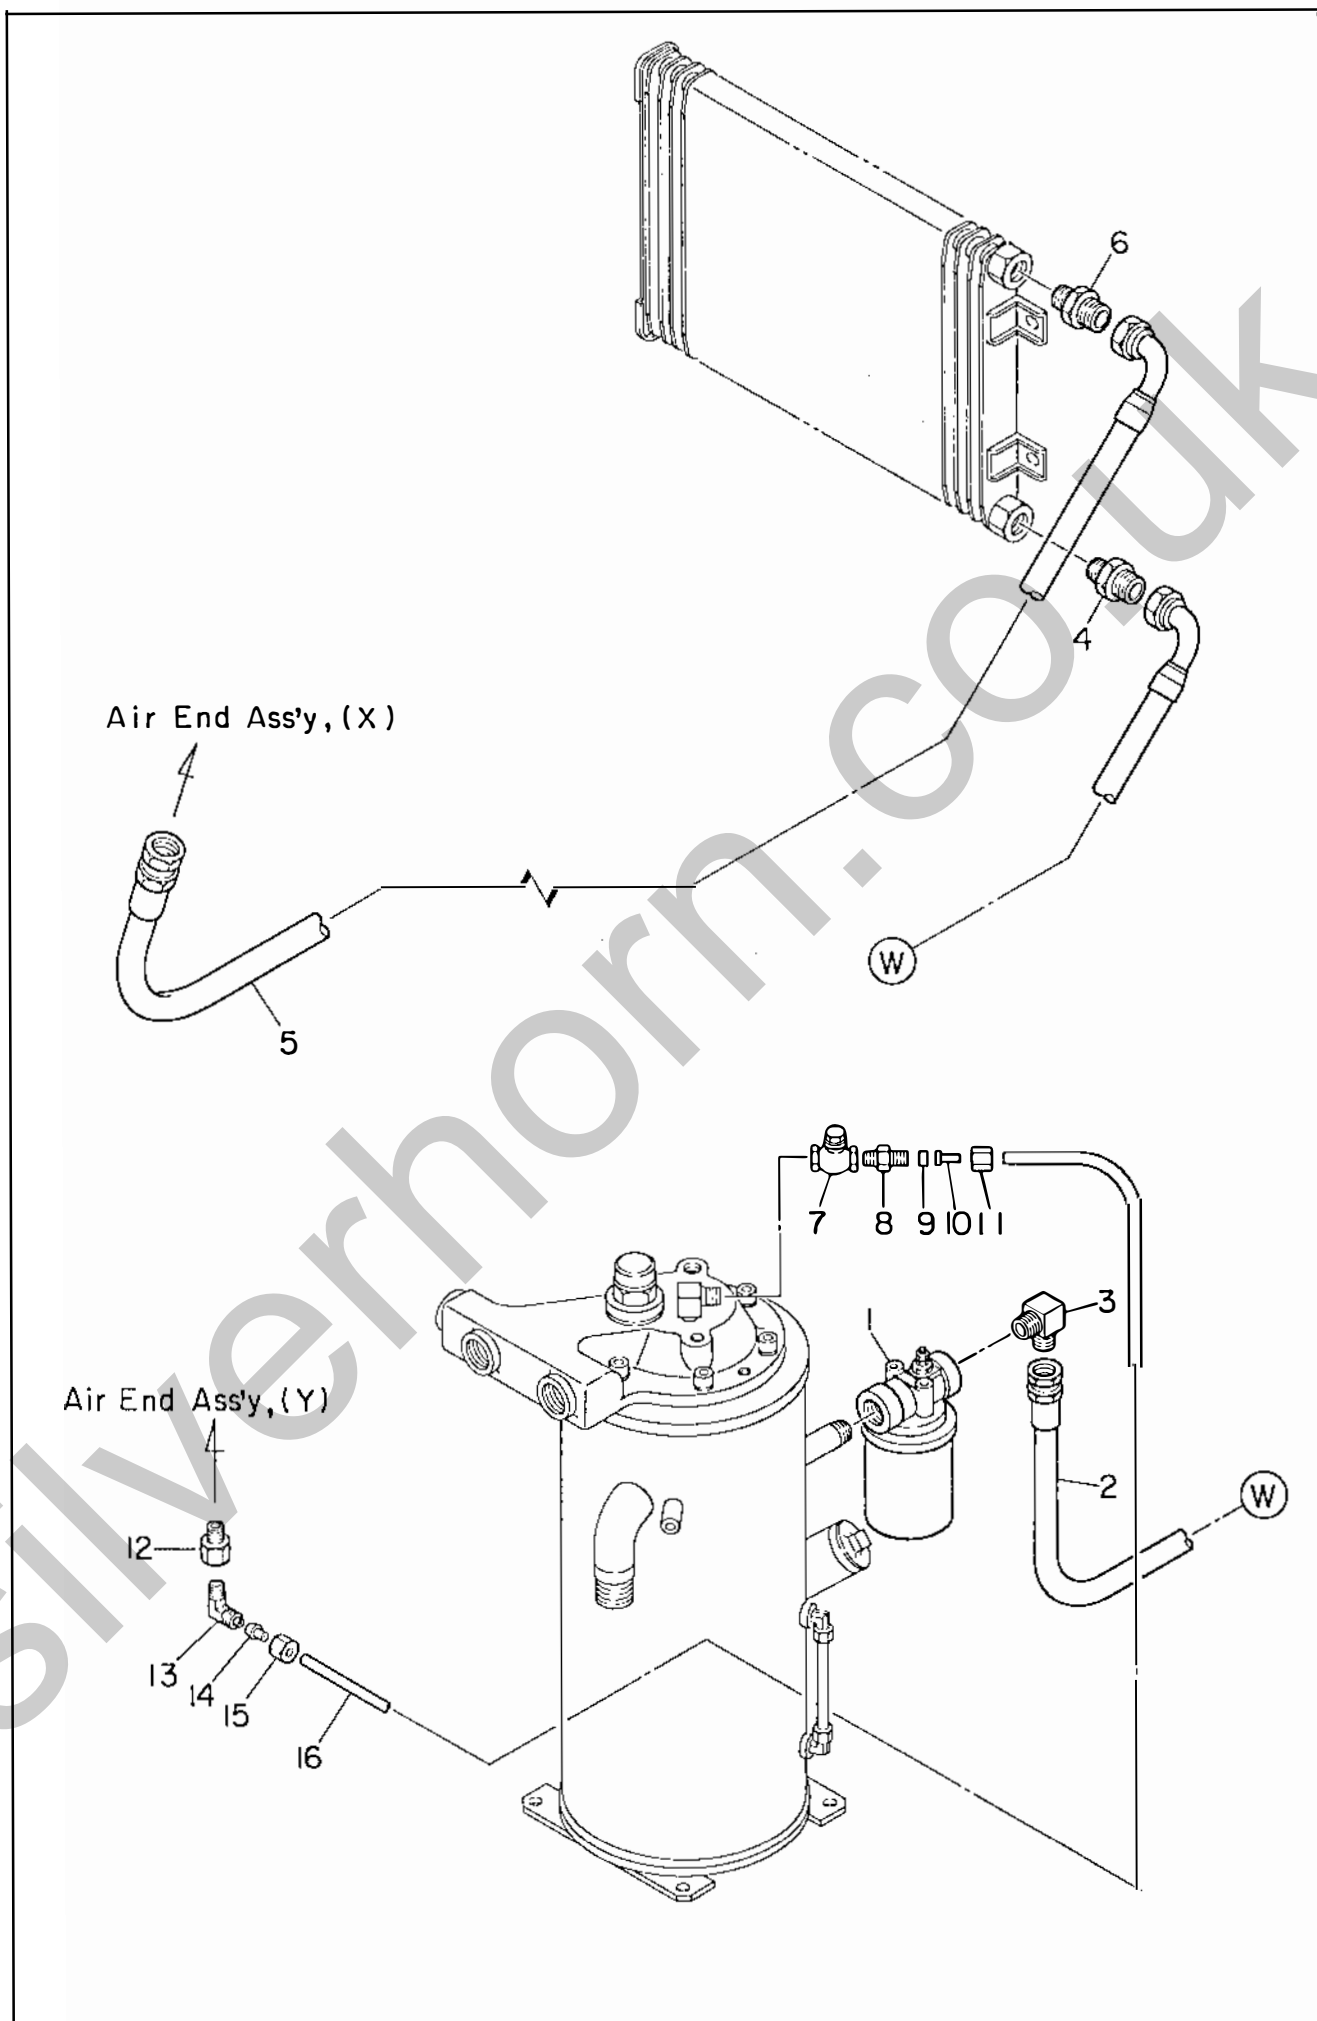


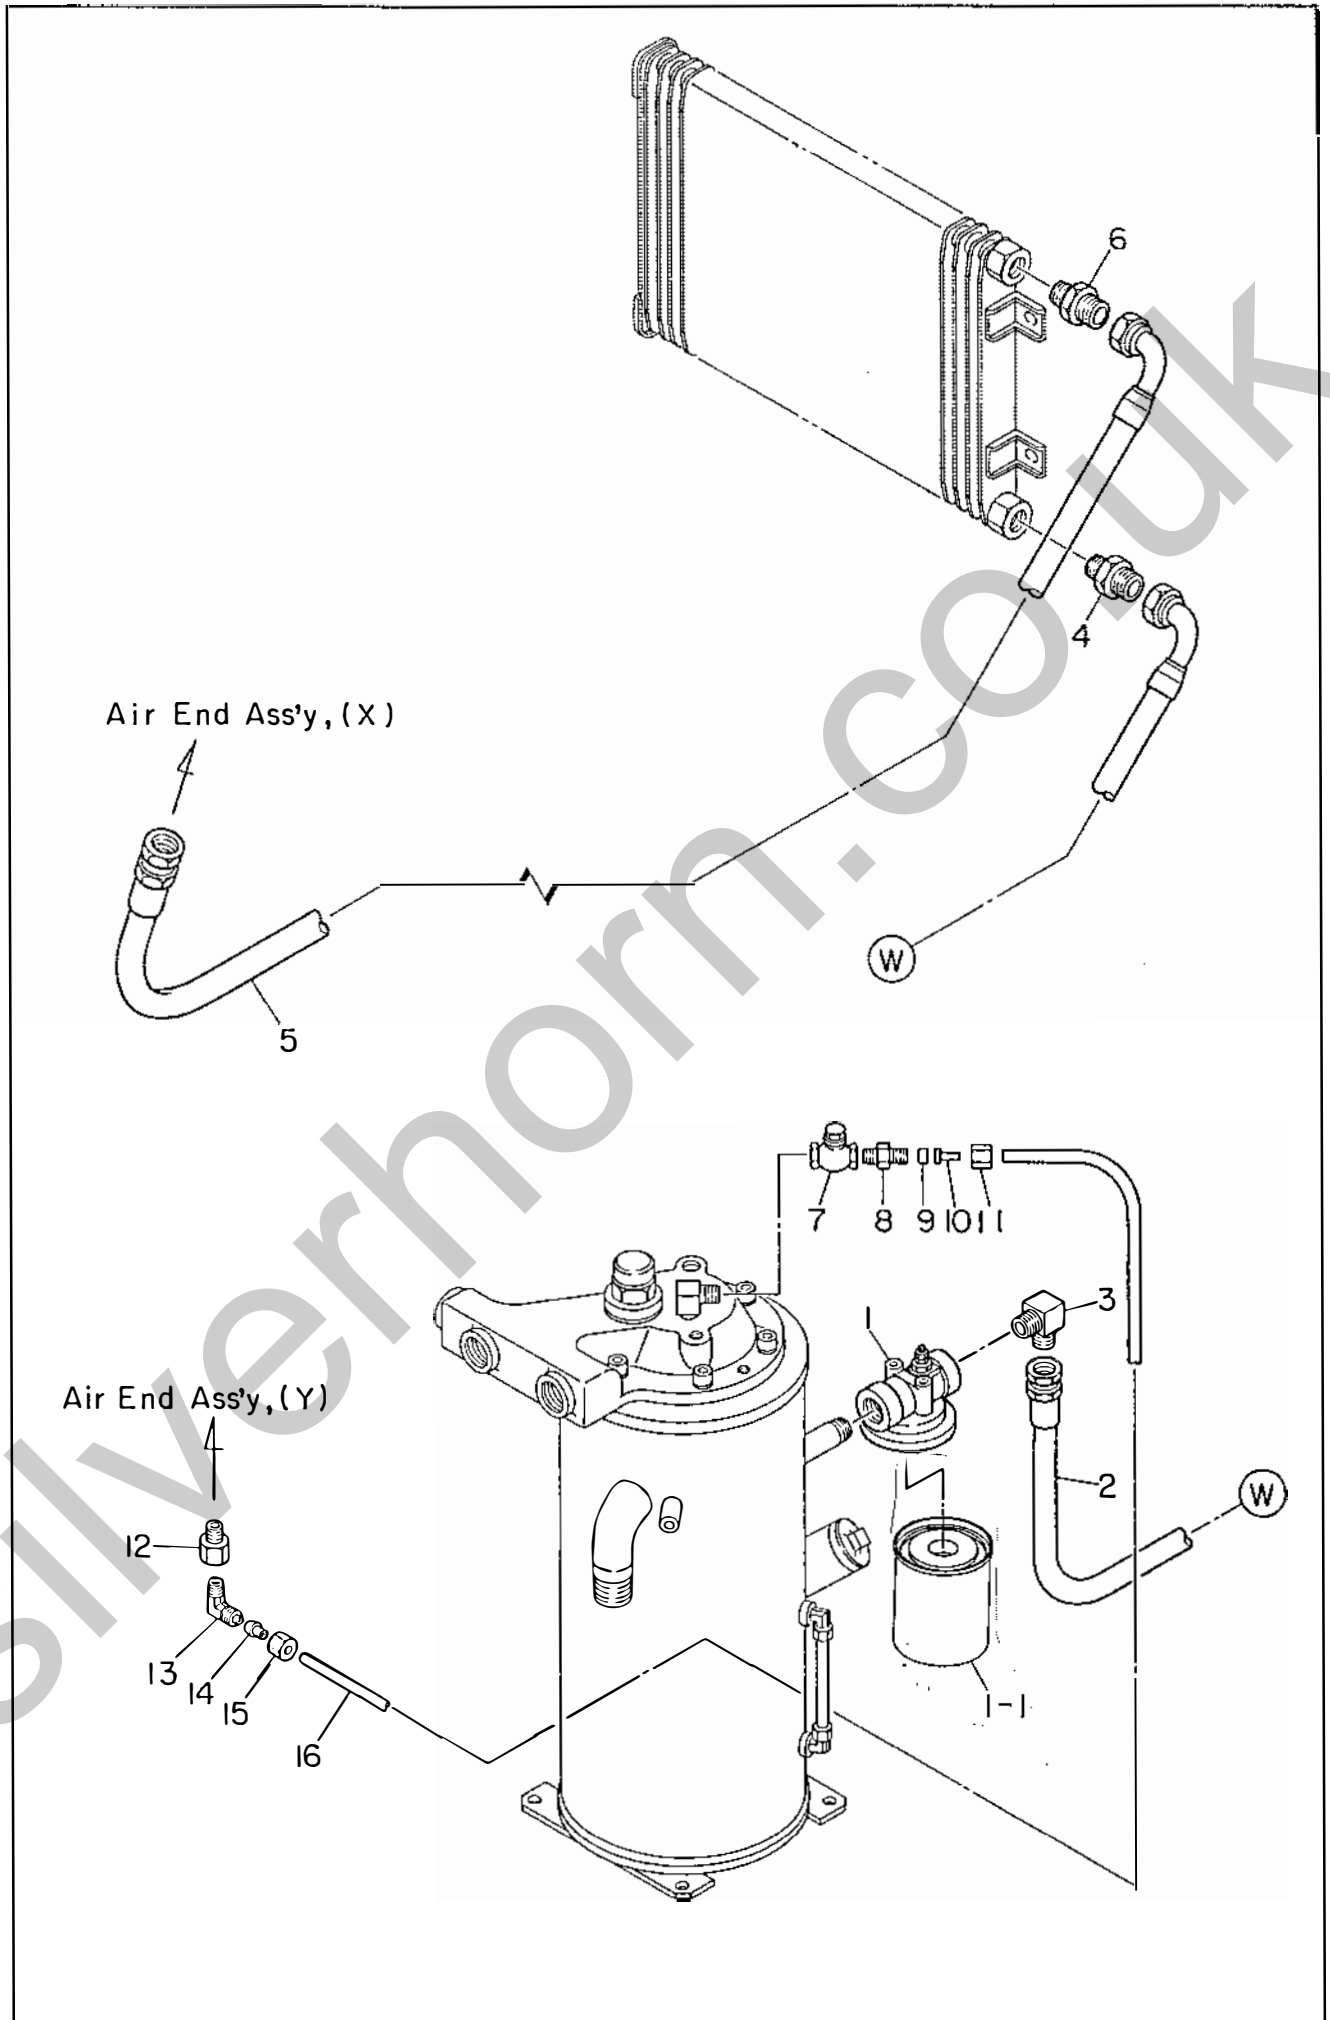

見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数量Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
		A=国内向 (Japanese) B=海外向 (English)							
1	Y 06033 10082	オイル フィルタ Oil Filter	30124 0000		1				~3831106
	Y 06033 10083	オイル フィルタ Oil Filter	30129 0000			1			~3831106
	Y 06033 10182	オイル フィルタ カートリッジ Cartridge, oil filter	30124 2000		(1)				~3831106
	Y 06033 10183	オイル フィルタ カートリッジ Cartridge, oil filter	30124 7000			(1)			~3831106
	Y 06033 10282	フィルタヘッド組立 Filter Head Ass'y	1-7KDEQ803	1					3831107~
1- 1	Y 06033 10182	オイル フィルタ カートリッジ Cartridge, oil filter	30124 2000		1				3831107~
	Y 06033 10183	オイル フィルタ カートリッジ Cartridge, oil filter	30124 7000			1			3831107~
2	E 16032 00104	ラバー ホース Rubber Hose		1					
3	Y 06033 06068	エルボ アダプタ Elbow Adapter		1					
4	Y 06033 05045	ストレート アダプタ Straight Adapter		1					~3687801
	Y 06033 05121	ストレート アダプタ Straight Adapter	SS0-09-19	1					3687802~
5	E 16032 00004	ラバー ホース Rubber Hose		1					
6	Y 06033 06535	ストレート アダプタ Straight Adapter	1009-12	1					~3687801
	Y 06033 05120	ストレート アダプタ Straight Adapter	SS0-09-12	1					3687802~
7	Y 01203 04005	逆止弁 Check Valve	3/8	1					
8	Y 06033 10087	フィルタ Filter	30148 0000	1					
9	Y 06033 02001	スリーブ Sleeve		1					
10	Y 06033 04000	インサート Insert		1					
11	Y 06033 03001	ナット Nut		1					
12	E 16148 00804	アダプタ Adapter		1					
13	Y 06033 01032	エルボ ユニオン Elbow Union	L4N8×6-PT1/4	1					
14	Y 06033 02021	スリーブ Sleeve		1					


見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
15	Y 06033 03021	ナット Nut		1					
16	Y 01904 01100	ナイロン パイプ Nylon Pipe		1					

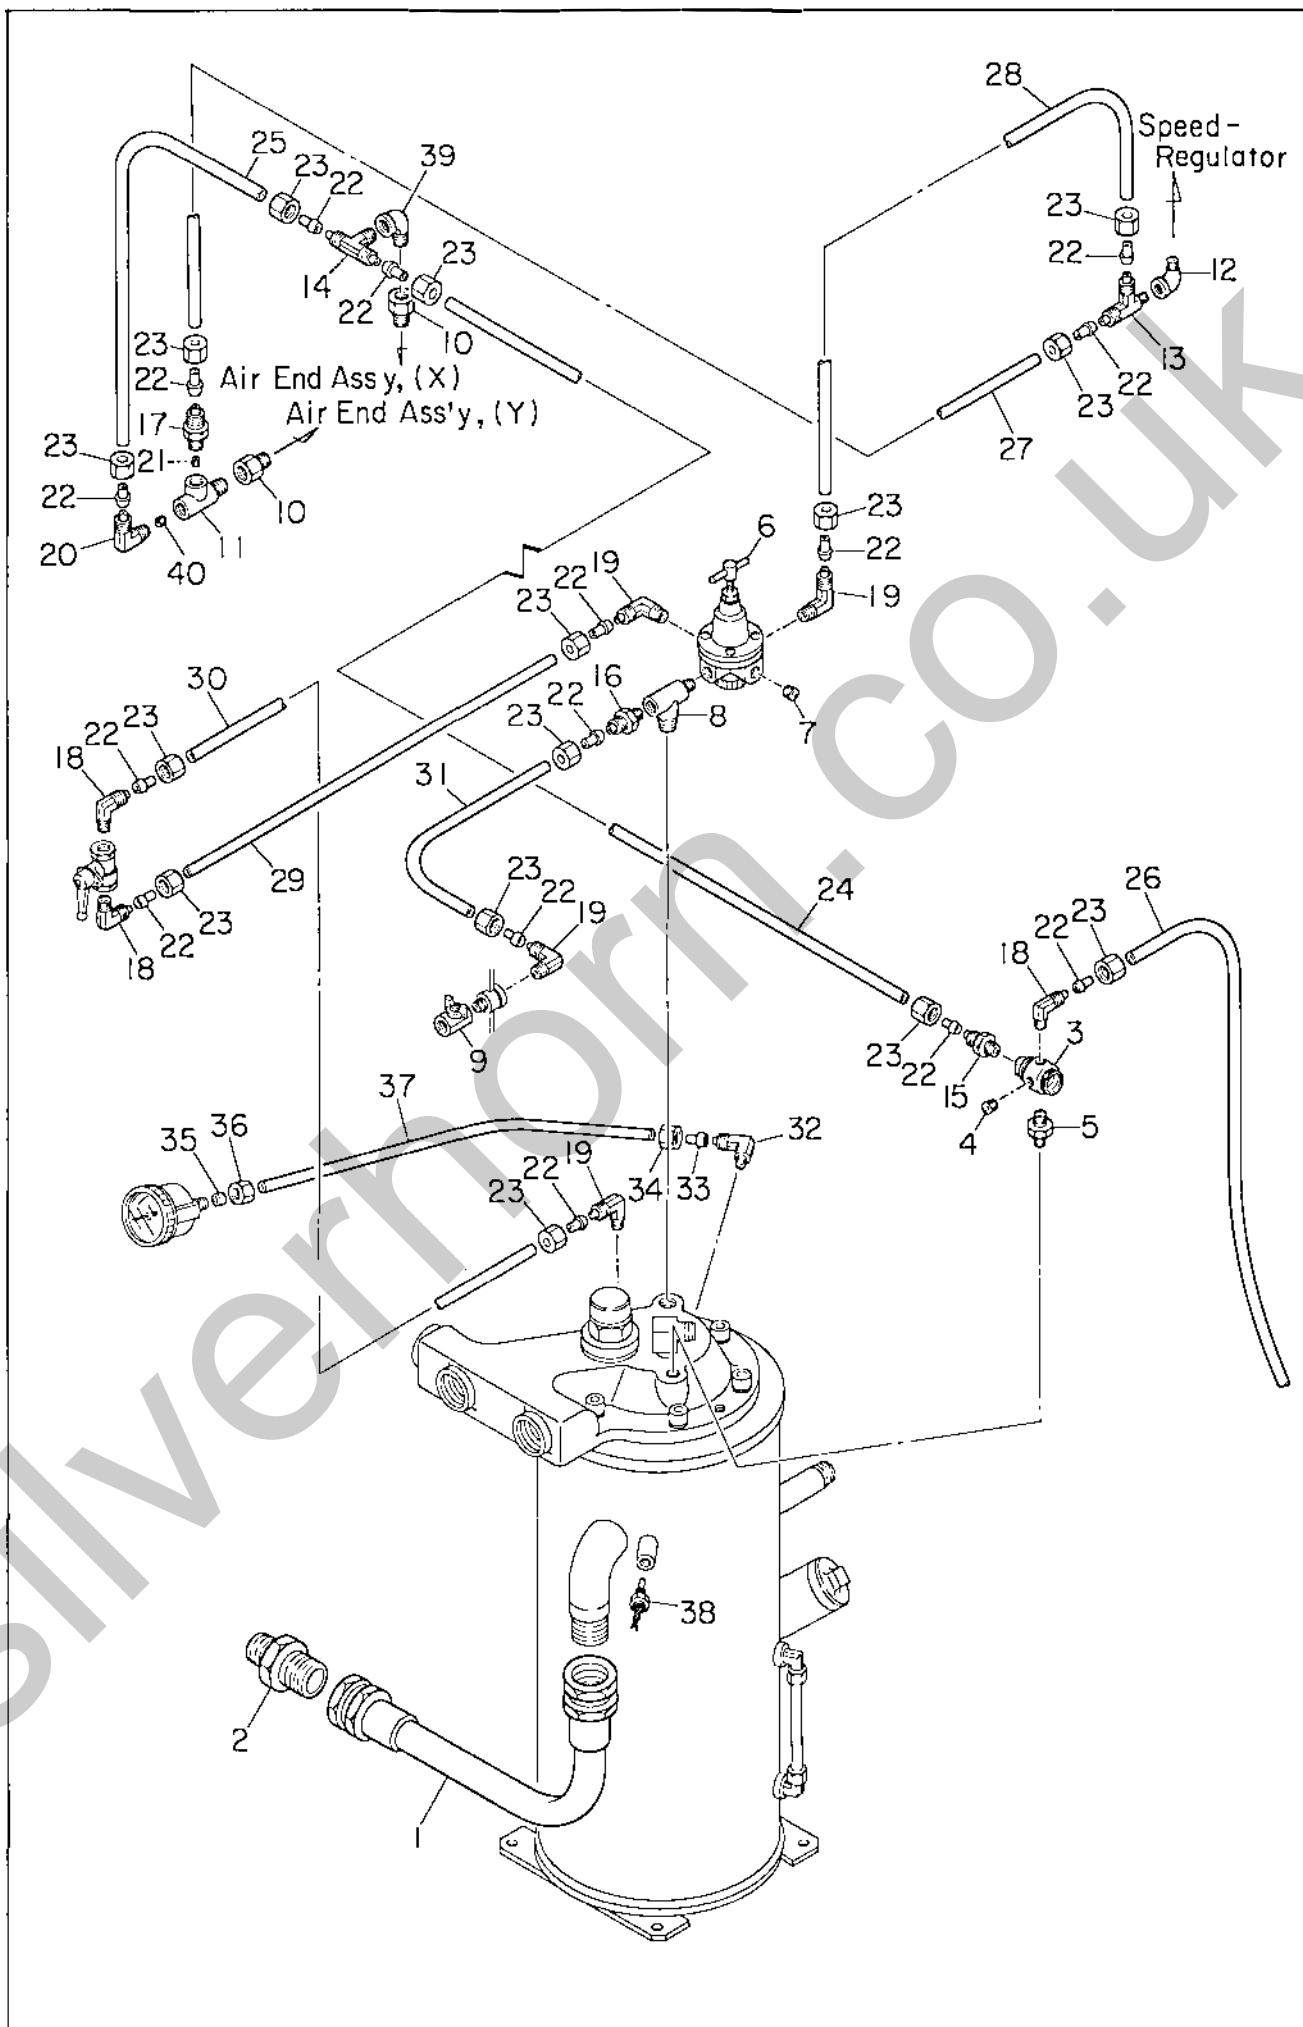


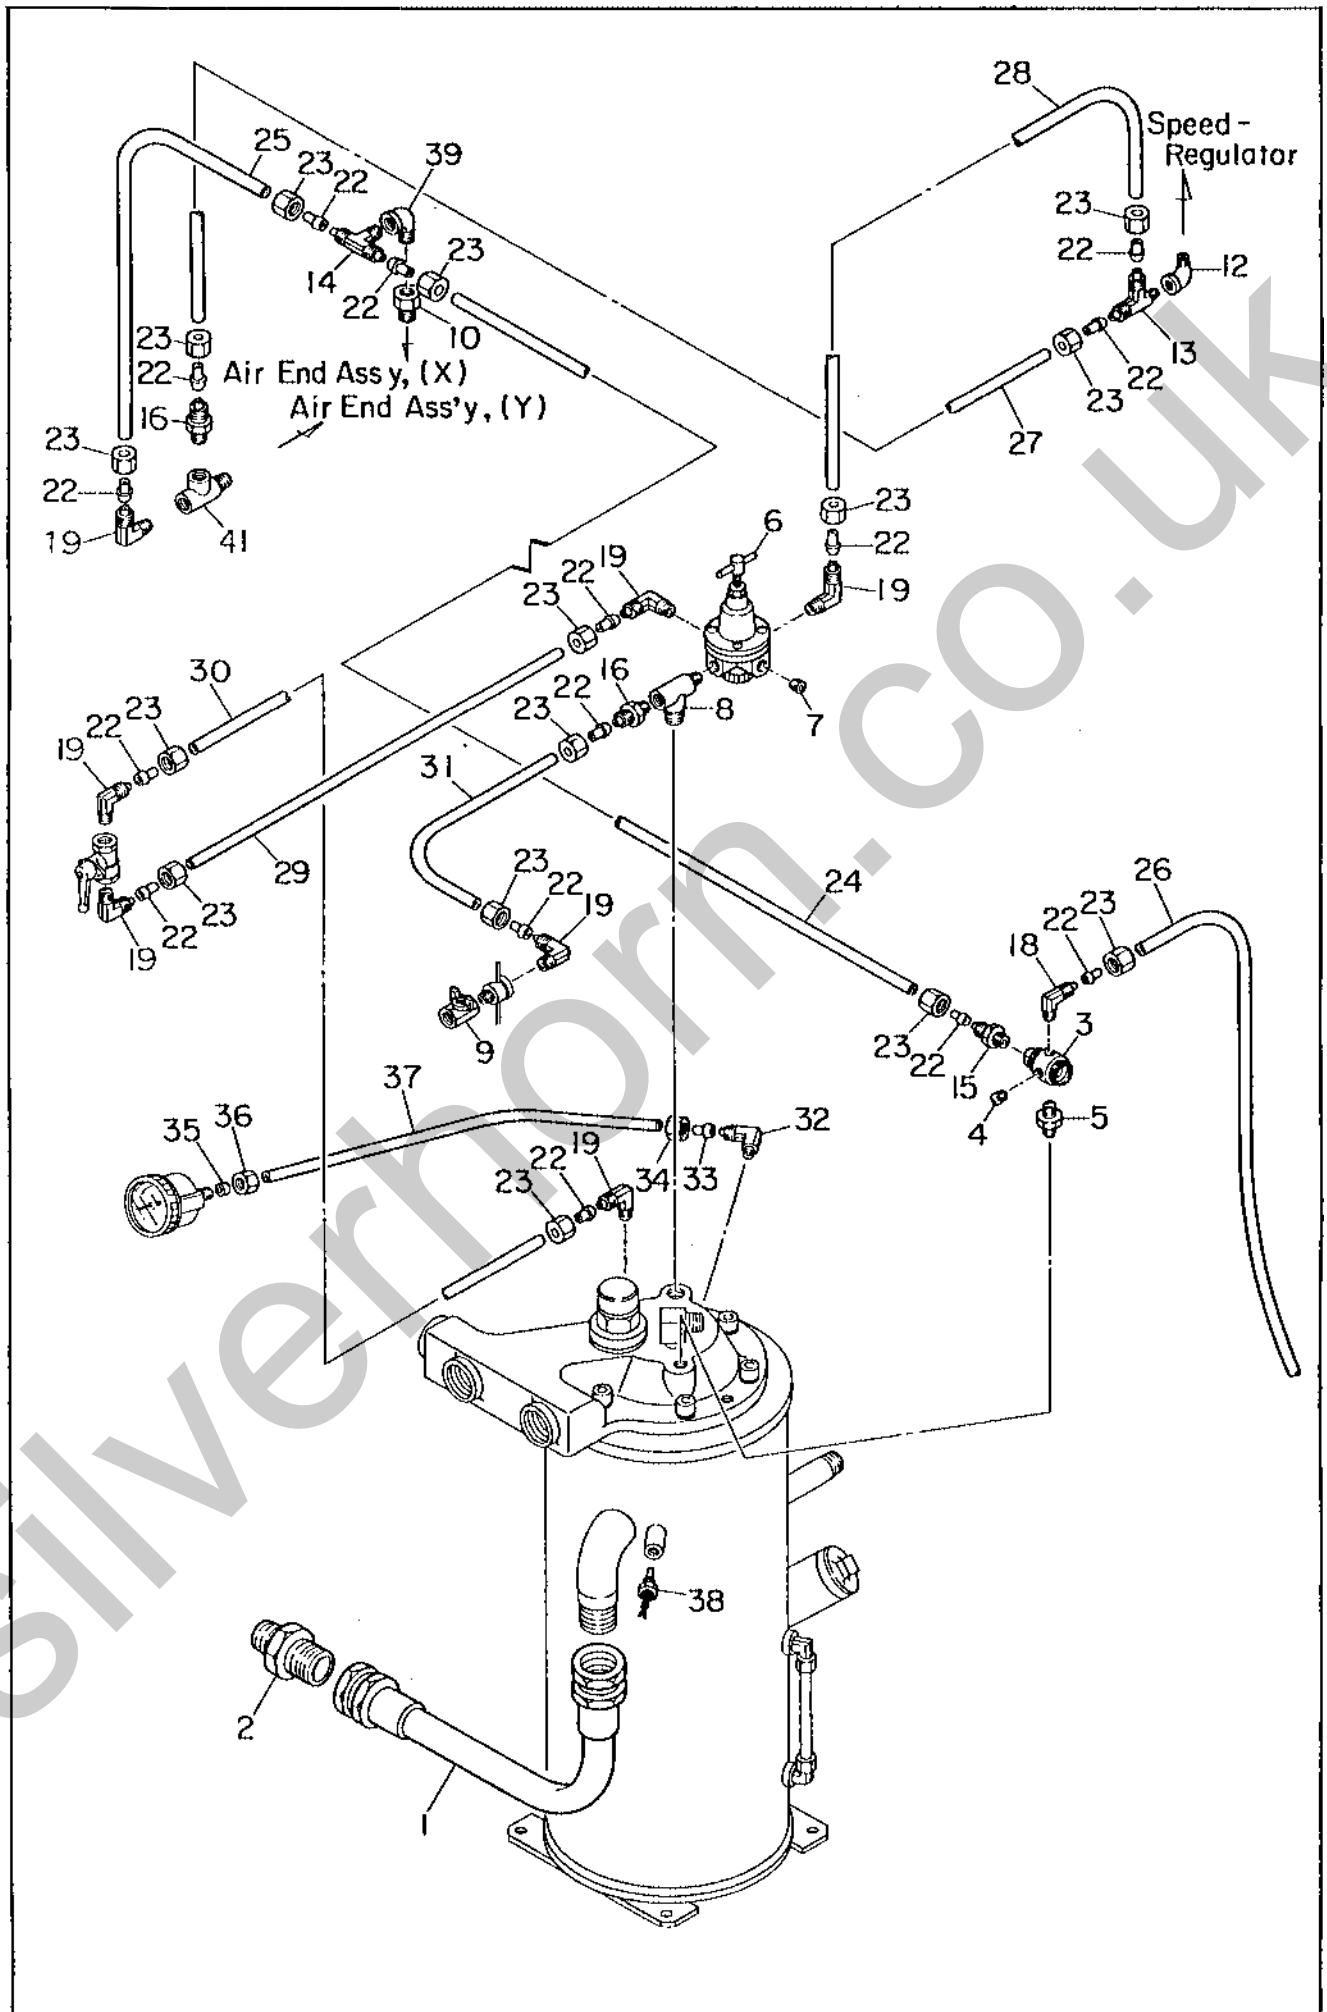


見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 - 備 考 Parts Name - Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
			All	A	B	C		
1	E 16062 00004	ディスチャージ パイプ Discharge Pipe	1					
2	E 16148 00704	アダプタ Adapter	1					
3	Y 06033 24283	パイロット バルブ Pilot Valve	1					
4	Y 01324 00000	プラグ Plug	1					
5	Y 01315 00000	ニップル Nipple	1					
6	Y 06055 11064	圧力調整弁 Pressure Regulating Valve	1					
	Y 06034 00010	ダイヤフラム アッセイ Diaphragm Ass'y	(1)					
7	Y 01324 02000	プラグ Plug	1					
8	E 16148 01004	T 継手 T Joint	1					
9	Y 06033 25010	バルブ Valve	1					
10	E 16148 00904	アダプタ Adapter	2					~3698272
	E 16148 00904	アダプタ Adapter	1					3698273~
11	Y 01305 04000	めすおす T Service T	1					~3698272
12	Y 01302 00000	めすおす エルボ Street Elbow	1					
13	Y 06033 06612	T 継手 T Joint	1					
14	Y 06033 06655	T 継手 T Joint	1					
15	Y 06033 00041	ハーフ ユニオン Half Union	1					
16	Y 06033 00042	ハーフ ユニオン Half Union	1					~3698272
	Y 06033 00042	ハーフ ユニオン Half Union	2					3698273~
17	E 16100 00104	ハーフ ユニオン Half Union	1					~3698272
18	Y 06033 01031	エルボ ユニオン Elbow Union	3					~3698272
	Y 06033 01031	エルボ ユニオン Elbow Union	1					3698273~
19	Y 06033 01032	エルボ ユニオン Elbow Union	4					~3698272

見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
	Y 06033 01032	エルボ ユニオン Elbow Union	L4N8×6-PT1/4	7					3698273~
20	E 16100 00004	エルボ ユニオン Elbow Union	L4N8×6-PT3/8	1					~3698272
21	W 62833 87104	オリフィス Orifice		1					~3698272
22	Y 06033 02021	スリーブ Sleeve		15					
23	Y 06033 03021	ナット Nut		15					
24	Y 01907 00900	ナイロン パイプ Nylon Pipe		1					
25	Y 01907 00240	ナイロン パイプ Nylon Pipe		1					
26	Y 01907 01150	ナイロン パイプ Nylon Pipe		1					
27	Y 02611 00605	ナイロン パイプ Nylon Pipe		1					
28	Y 02611 00510	ナイロン パイプ Nylon Pipe		1					
29	Y 02613 00600	ナイロン パイプ Nylon Pipe		1					
30	Y 02613 00400	ナイロン パイプ Nylon Pipe		1					
31	Y 02613 00300	ナイロン パイプ Nylon Pipe		1					
32	Y 06033 01030	エルボ ユニオン Elbow Union	L4N4×3-PT1/8	1					
33	Y 06033 02020	スリーブ Sleeve		1					
34	Y 06033 03020	ナット Nut		1					
35	Y 06033 02000	スリーブ Sleeve		1					
36	Y 06033 03000	ナット Nut		1					
37	Y 01906 00650	ナイロン パイプ Nylon Pipe		1					
38	Y 06032 10230	空気温度センサ Sensor, air temperature	TEK-84 N027	1					
39	Y 01302 04000	めすおす エルボ Street Elbow	3/8	1					
40	E 16158 00004	オリフィス Orifice		1					~3698272
41	E 16148 02004	オリフィス T Orifice T		1					3698273~

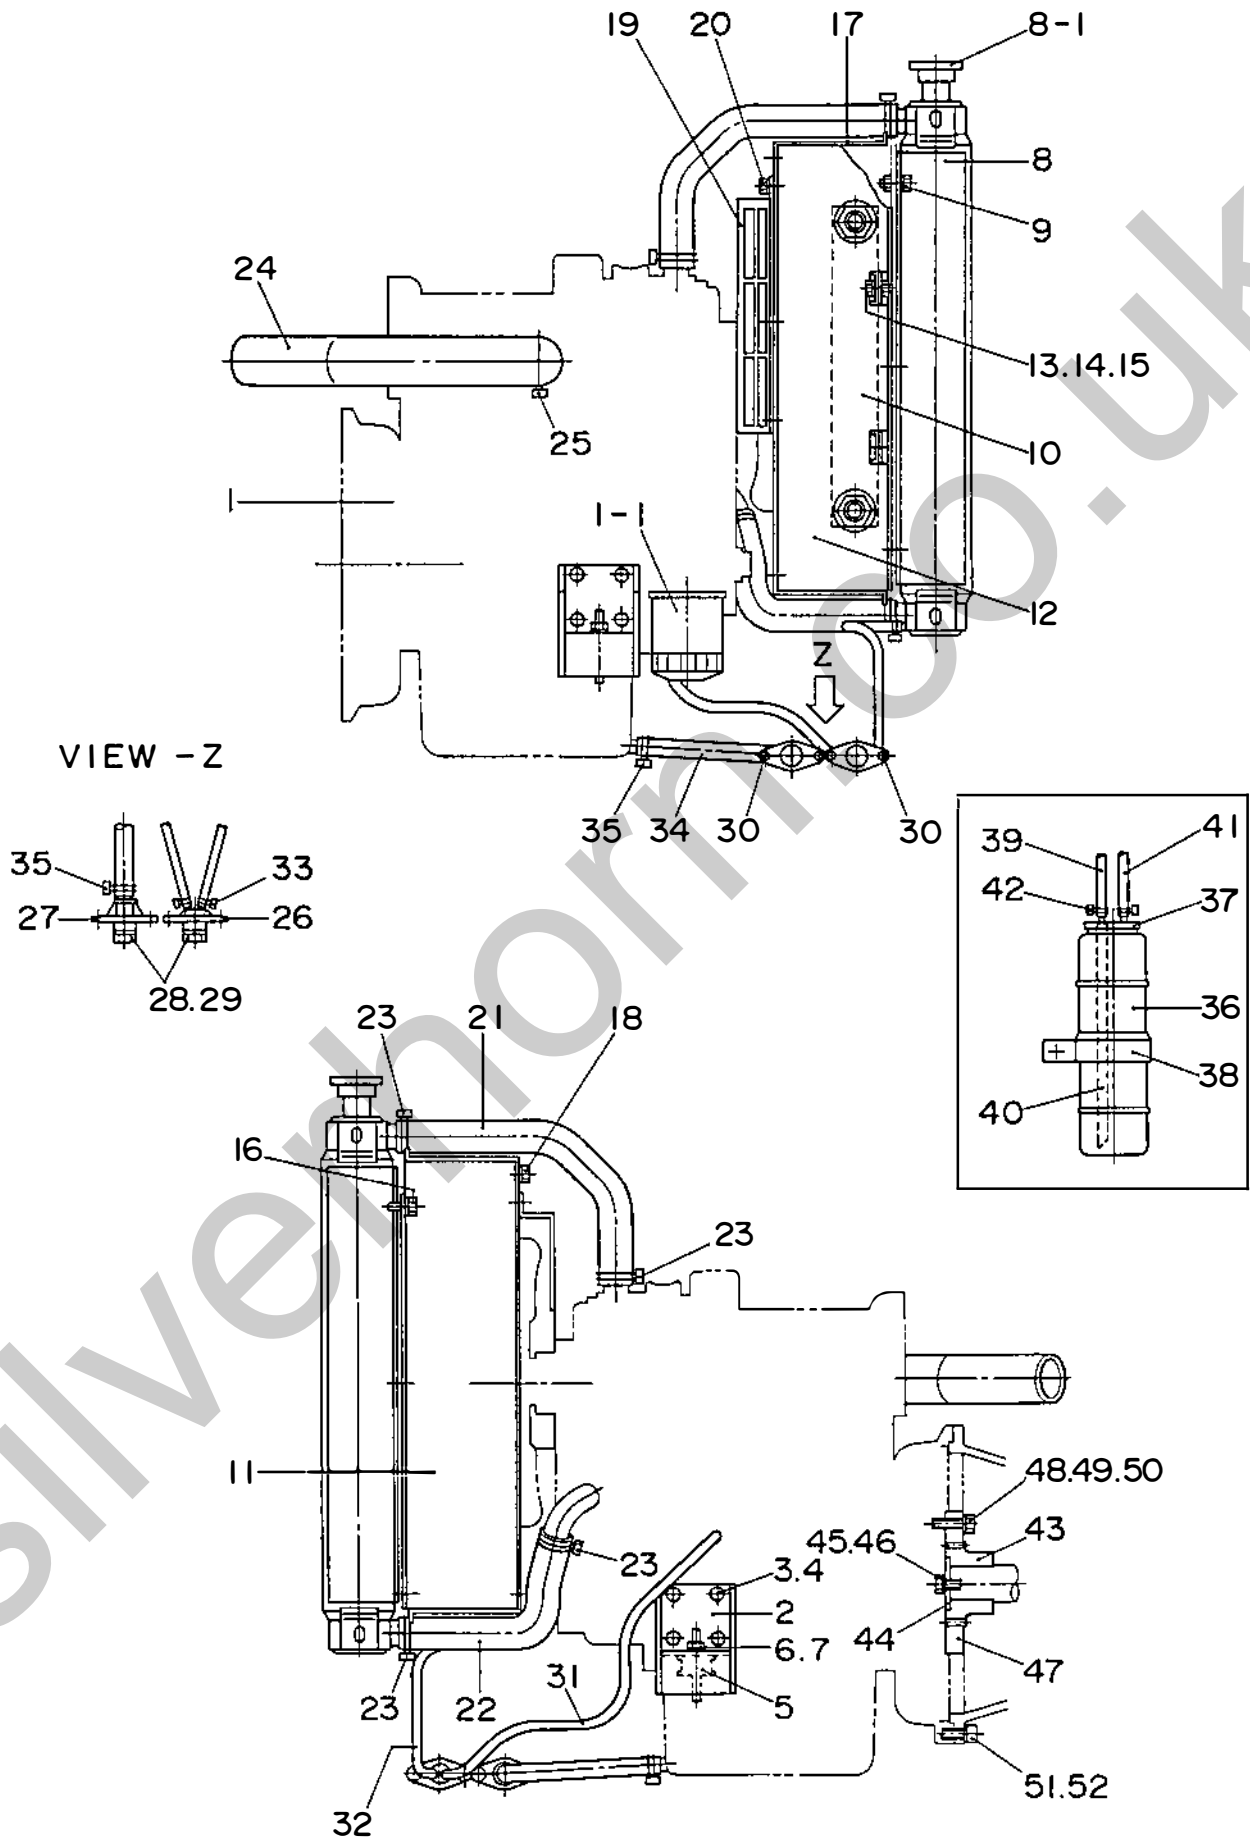

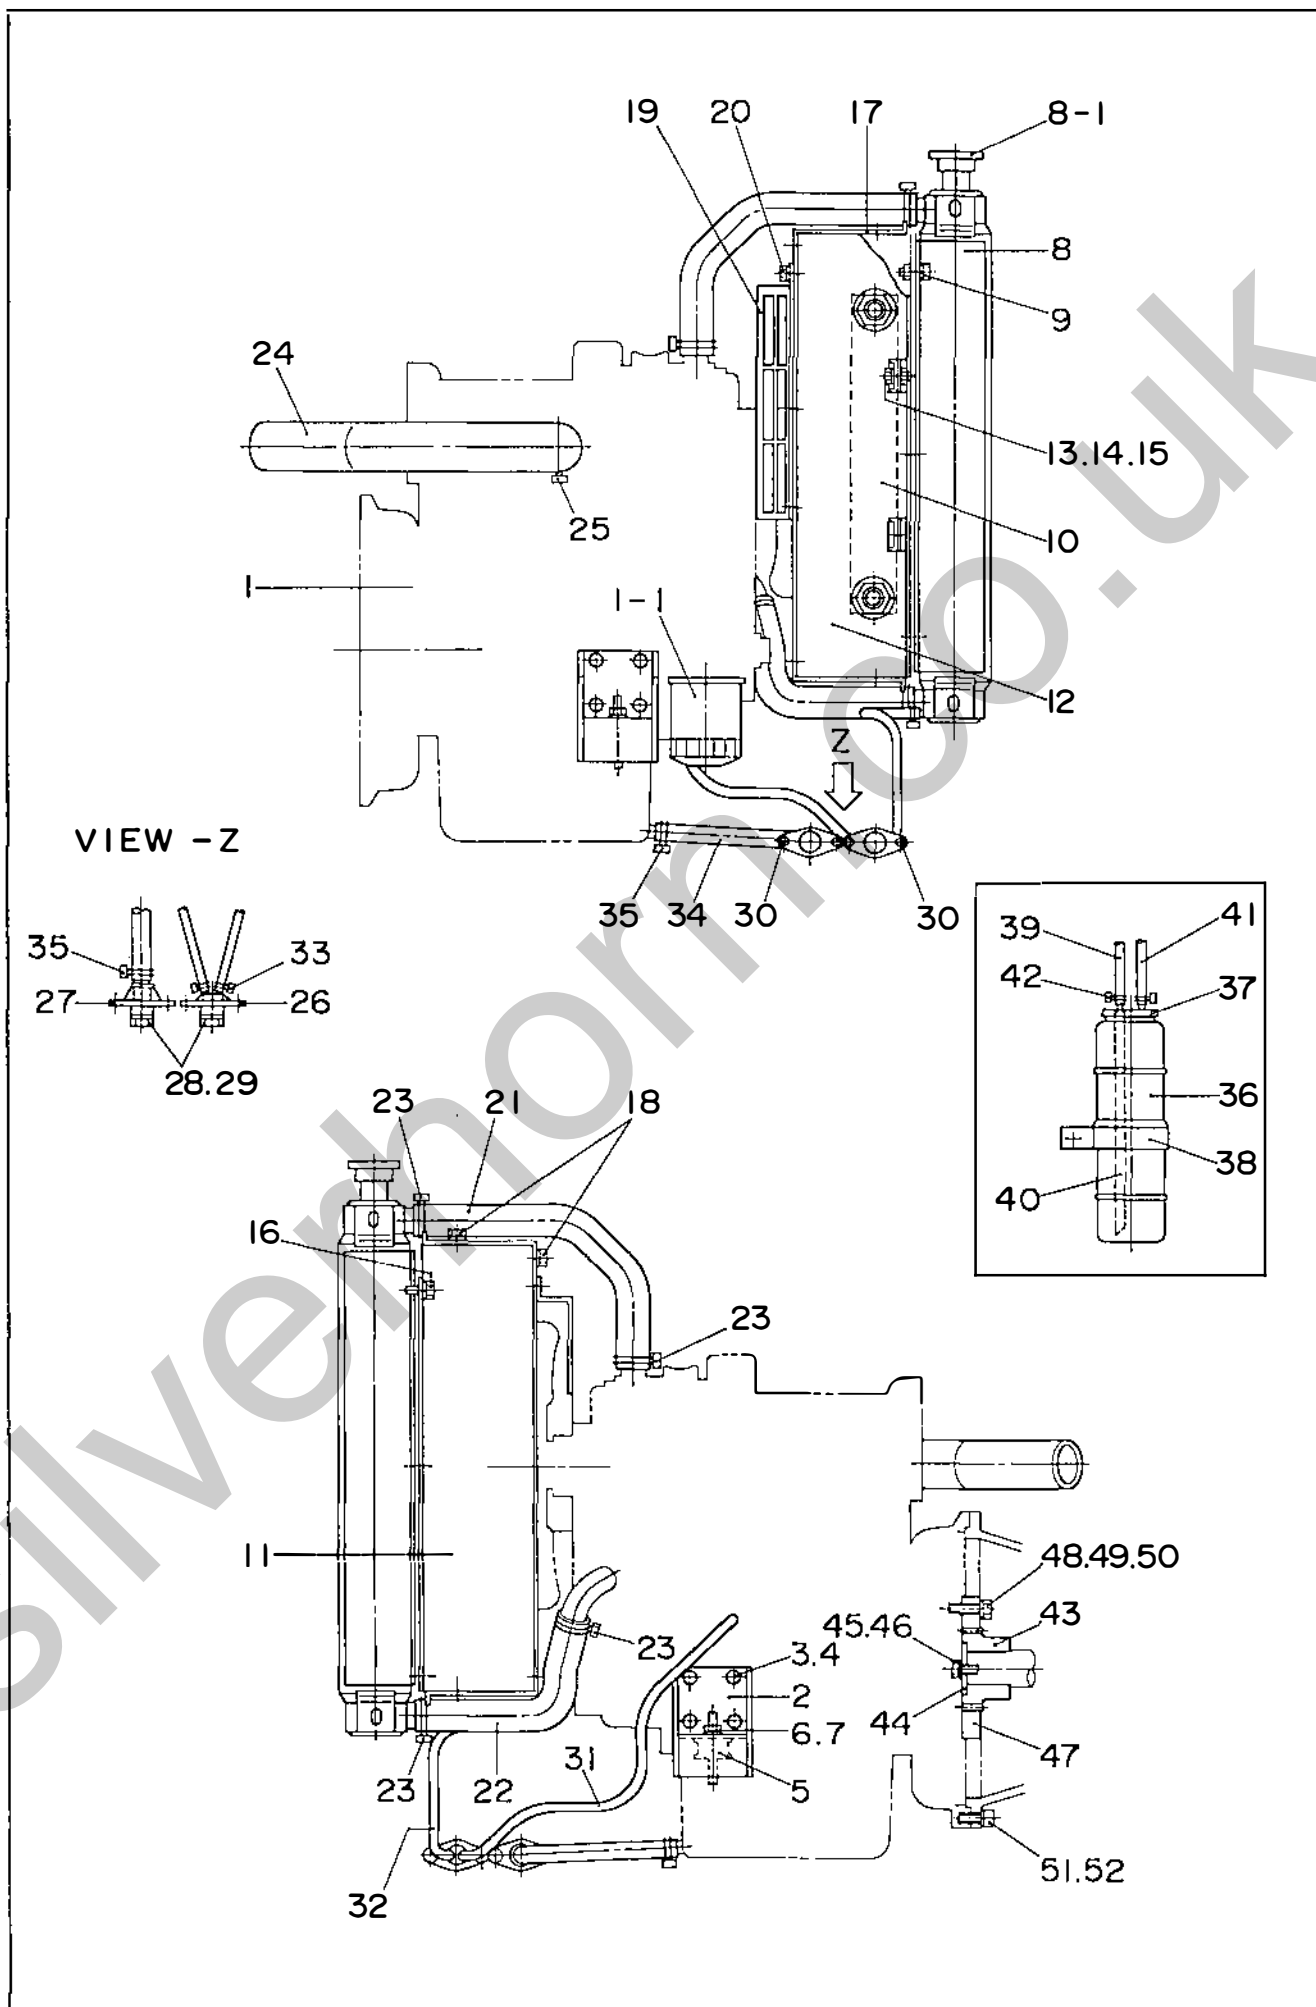

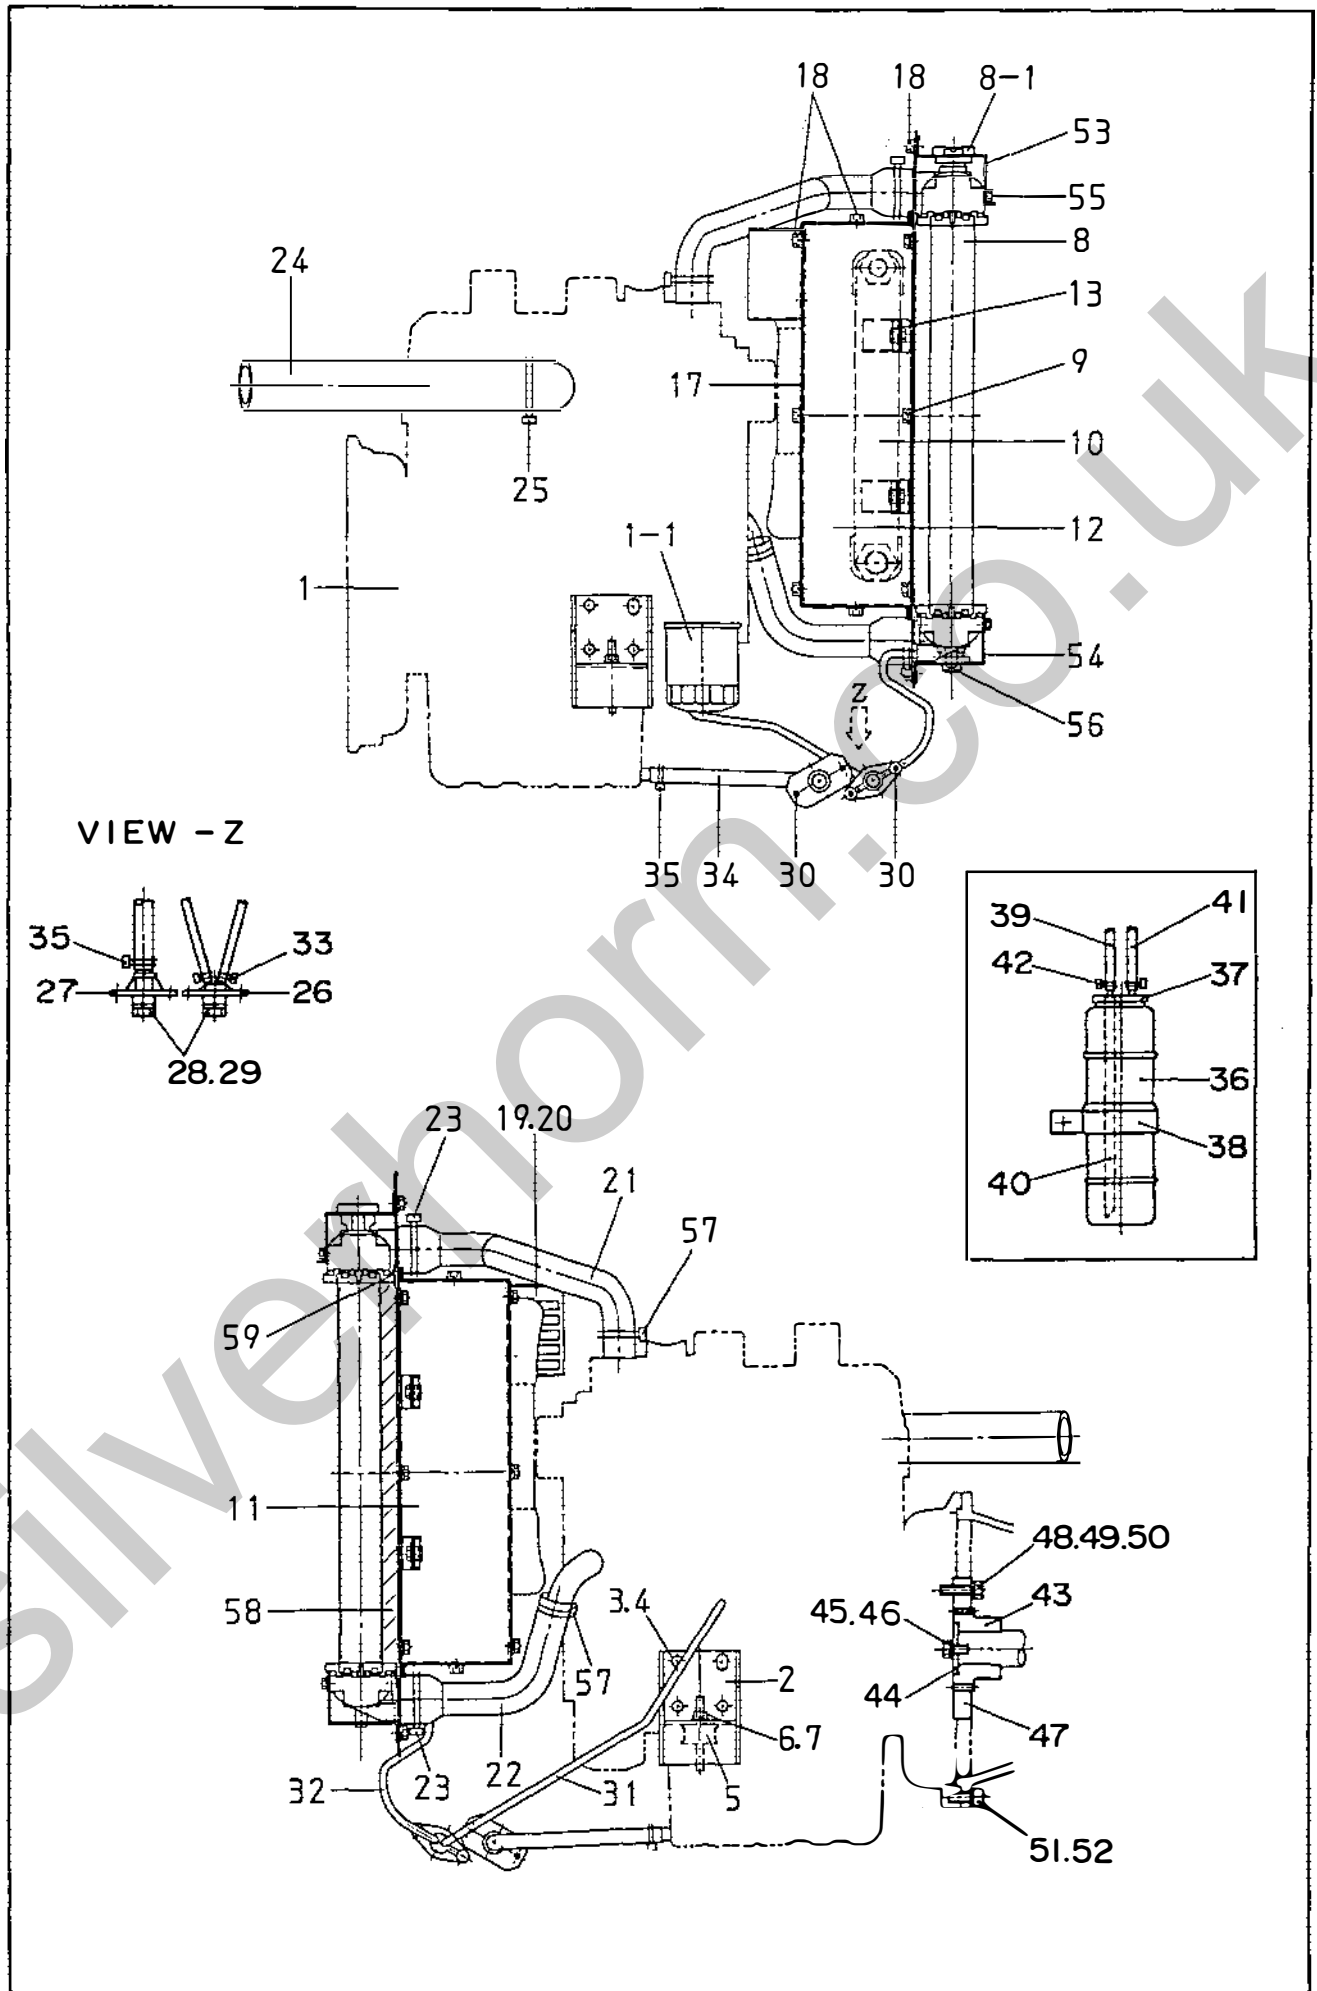



見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
1	E 19232 00014	エンジン Engine	KUBOTA D1005	1					
	Y 06020 11472	ファン ベルト Fan Belt	KUBOTA 16282-97011	(1)					
1- 1	Y 06020 41174	オイル フィルタ カートリッジ Cartridge, oil filter	KUBOTA 16271-32091	(1)					
2	E 13042 00804	エンジン フット Engine Foot		2					
3	Y 00107 10020	六角ボルト Hex. Head Bolt		8					
4	Y 00425 10000	バネ座金 Spring Washer		8					
5	Y 06050 00045	防振ゴム Rubber Suspension	EA4005	2					
6	Y 00300 08000	六角ナット Hex. Nut		2					
7	Y 00400 08000	バネ座金 Spring Washer		2					
8	E 19242 00072	ラジエータ Radiator	232000-1210	1					~3783554
	E 19242 00534	ラジエータ Radiator	2951-314-0000	1					3783555~
8- 1	Y 06020 11084	ラジエータ キャップ Cap, radiator	102600-0220	(1)					~3783554
	Y 06020 11079	ラジエータ キャップ Cap, radiator	6713-092-0901	(1)					3783555~
9	Y 00171 08020	六角ボルト Hex. Head Bolt		4					~3783554
	Y 00171 08020	六角ボルト Hex. Head Bolt		6					3783555~
10	E 19232 00004	オイルクーラ Oil Cooler	124100-2920	1					~3687801
	E 19241 00074	オイルクーラ Oil Cooler	124100-3080	1					3687802~
11	E 13131 00304	オイル クーラ ブラケット Bracket, oil cooler		1					~3783554
	E 13141 03204	オイル クーラ ブラケット Bracket, oil cooler		1					3783555~
	E 14947 00014	吸音材 Lining		1					~3783554
12	E 13131 00204	オイル クーラ ブラケット Bracket, oil cooler		1					~3783554
	E 13141 03104	オイル クーラ ブラケット Bracket, oil cooler		1					3783555~
	E 14947 00014	吸音材 Lining		1					~3783554


見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数量Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
	E 14947 01304	吸音材 Lining		1					3783555~
13	Y 00101 08015	六角ボルト Hex. Head Bolt		4					~3783554
	Y 00171 08016	六角ボルト Hex. Head Bolt		4					3783555~
14	Y 00400 08000	バネ座金 Spring Washer		4					~3783554
15	Y 00412 08000	平座金 Plain Washer		4					~3783554
16	Y 00171 08020	六角ボルト Hex. Head Bolt		6					~3783554
17	E 13103 00003	シュラウド Shroud		1					~3690837
	E 13103 00013	シュラウド Shroud		1					3690838~ 3783554
	E 13113 01303	シュラウド Shroud		1					3783555~
	Y 02294 00530	ラバー シール Rubber Seal		2					3783555~
18	Y 00171 08020	六角ボルト Hex. Head Bolt		6					~3690837
	Y 00171 08020	六角ボルト Hex. Head Bolt		10					3690838~ 3783554
	Y 00171 08020	六角ボルト Hex. Head Bolt		15					3783555~
19	E 13104 00003	ファン ガード Fan Guard		1					~3783554
	E 13114 01104	ファン ガード Fan Guard		1					3783555~
20	Y 00171 08020	六角ボルト Hex. Head Bolt		2					
21	E 19242 00093	ラジエータ ホース Radiator Hose	102091-7980	1					~3783554
	E 13116 00003	ラジエータ ホース Radiator Hose		1					3783555~
22	E 19242 00103	ラジエータ ホース Radiator Hose	102091-7990	1					~3783554
	E 13116 00103	ラジエータ ホース Radiator Hose		1					3783555~
23	Y 06020 14347	ホース バンド Hose Band	9764-03620A	4					~3783554
	Y 06055 15138	ホース バンド Hose Band	HS-28	2					3783555~
24	E 13731 00004	エア クリーナ ホース Hose, air cleaner		1					

見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数量Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
25	Y 06055 15115	ホース バンド Hose Band	φ 55	2					
26	W 16220 14103	水 ドレイン ジョイント Drain Joint, water		1					
27	E 92010 00103	オイル ドレイン ジョイント Drain Joint, oil		1					
28	W 08020 11104	プラグ Plug		2					
29	Y 01500 00018	O リング O Ring	A P18	2					
30	Y 00171 06020	六角ボルト Hex. Head Bolt		4					
31	Y 01999 00900	ドレイン ホース Drain Hose		1					
32	Y 01999 00350	ドレイン ホース Drain Hose		1					
33	Y 06055 15106	ホース バンド Hose Band	RS-8006	4					
34	Y 01921 00510	ドレイン ホース Drain Hose		1					
35	Y 06055 15073	ホース バンド Hose Band	HS-10	2					
36	W 08020 81403	補助タンク Reserve Tank		1					
37	W 08020 81104	補助タンク キャップ Cap, reserve tank		1					
38	W 62620 82304	補助タンク ブラケット Bracket, reserve tank		1					
39	Y 01999 00620	ホース Hose		1					~3783554
	Y 01999 00780	ホース Hose		1					3783555~
40	Y 01999 00235	ホース Hose		1					~3783554
	Y 01999 00215	ホース Hose		1					3783555~
41	Y 01940 00900	ホース Hose		1					~3783554
	Y 01940 01000	ホース Hose		1					3783555~
42	Y 06055 15013	ホース バンド Hose Band	φ 12	4					
43	E 11641 00403	ドリブン ギア Driven Gear		1					
44	W 62716 56004	カップリング プレート Coupling Plate		1					~3802094

見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 ・ 備 考 Parts Name ・ Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
			All	A	B	C		
	E 11648 00304	カップリング プレート Coupling Plate	1					3802095~
45	Y 00103 10025	六角ボルト Hex. Head Bolt	1					
46	Y 00426 10000	バネ座金 Spring Washer	1					
47	E 11642 00003	ドライブ ギア Drive Gear	1					
48	Y 00107 10040	六角ボルト Hex. Head Bolt	4					
49	Y 00426 10000	バネ座金 Spring Washer	4					
50	Y 00416 10000	平座金 Plain Washer	4					
51	Y 00153 10030	六角穴付ボルト Hex. Socket Head Cap Screw	8					
52	Y 00426 10000	バネ座金 Spring Washer	8					
53	E 13112 00403	ラジエータ ブラケット Bracket, radiator	1					3783555~
54	E 13112 00503	ラジエータ ブラケット Bracket, radiator	1					3783555~
55	Y 00171 06015	六角ボルト Hex. Head Bolt	4					3783555~
56	W 87020 14004	インシュレータ Insulator	4					3783555~
57	Y 06055 15135	ホース バンド Hose Band	2					3783555~
58	E 13111 00304	シール Seal	1					3783555~
59	Y 02251 00530	ラバー シール Rubber Seal	2					3783555~ 3838984
	Y 03120 00530	ラバー シール Rubber Seal	2					3838985~

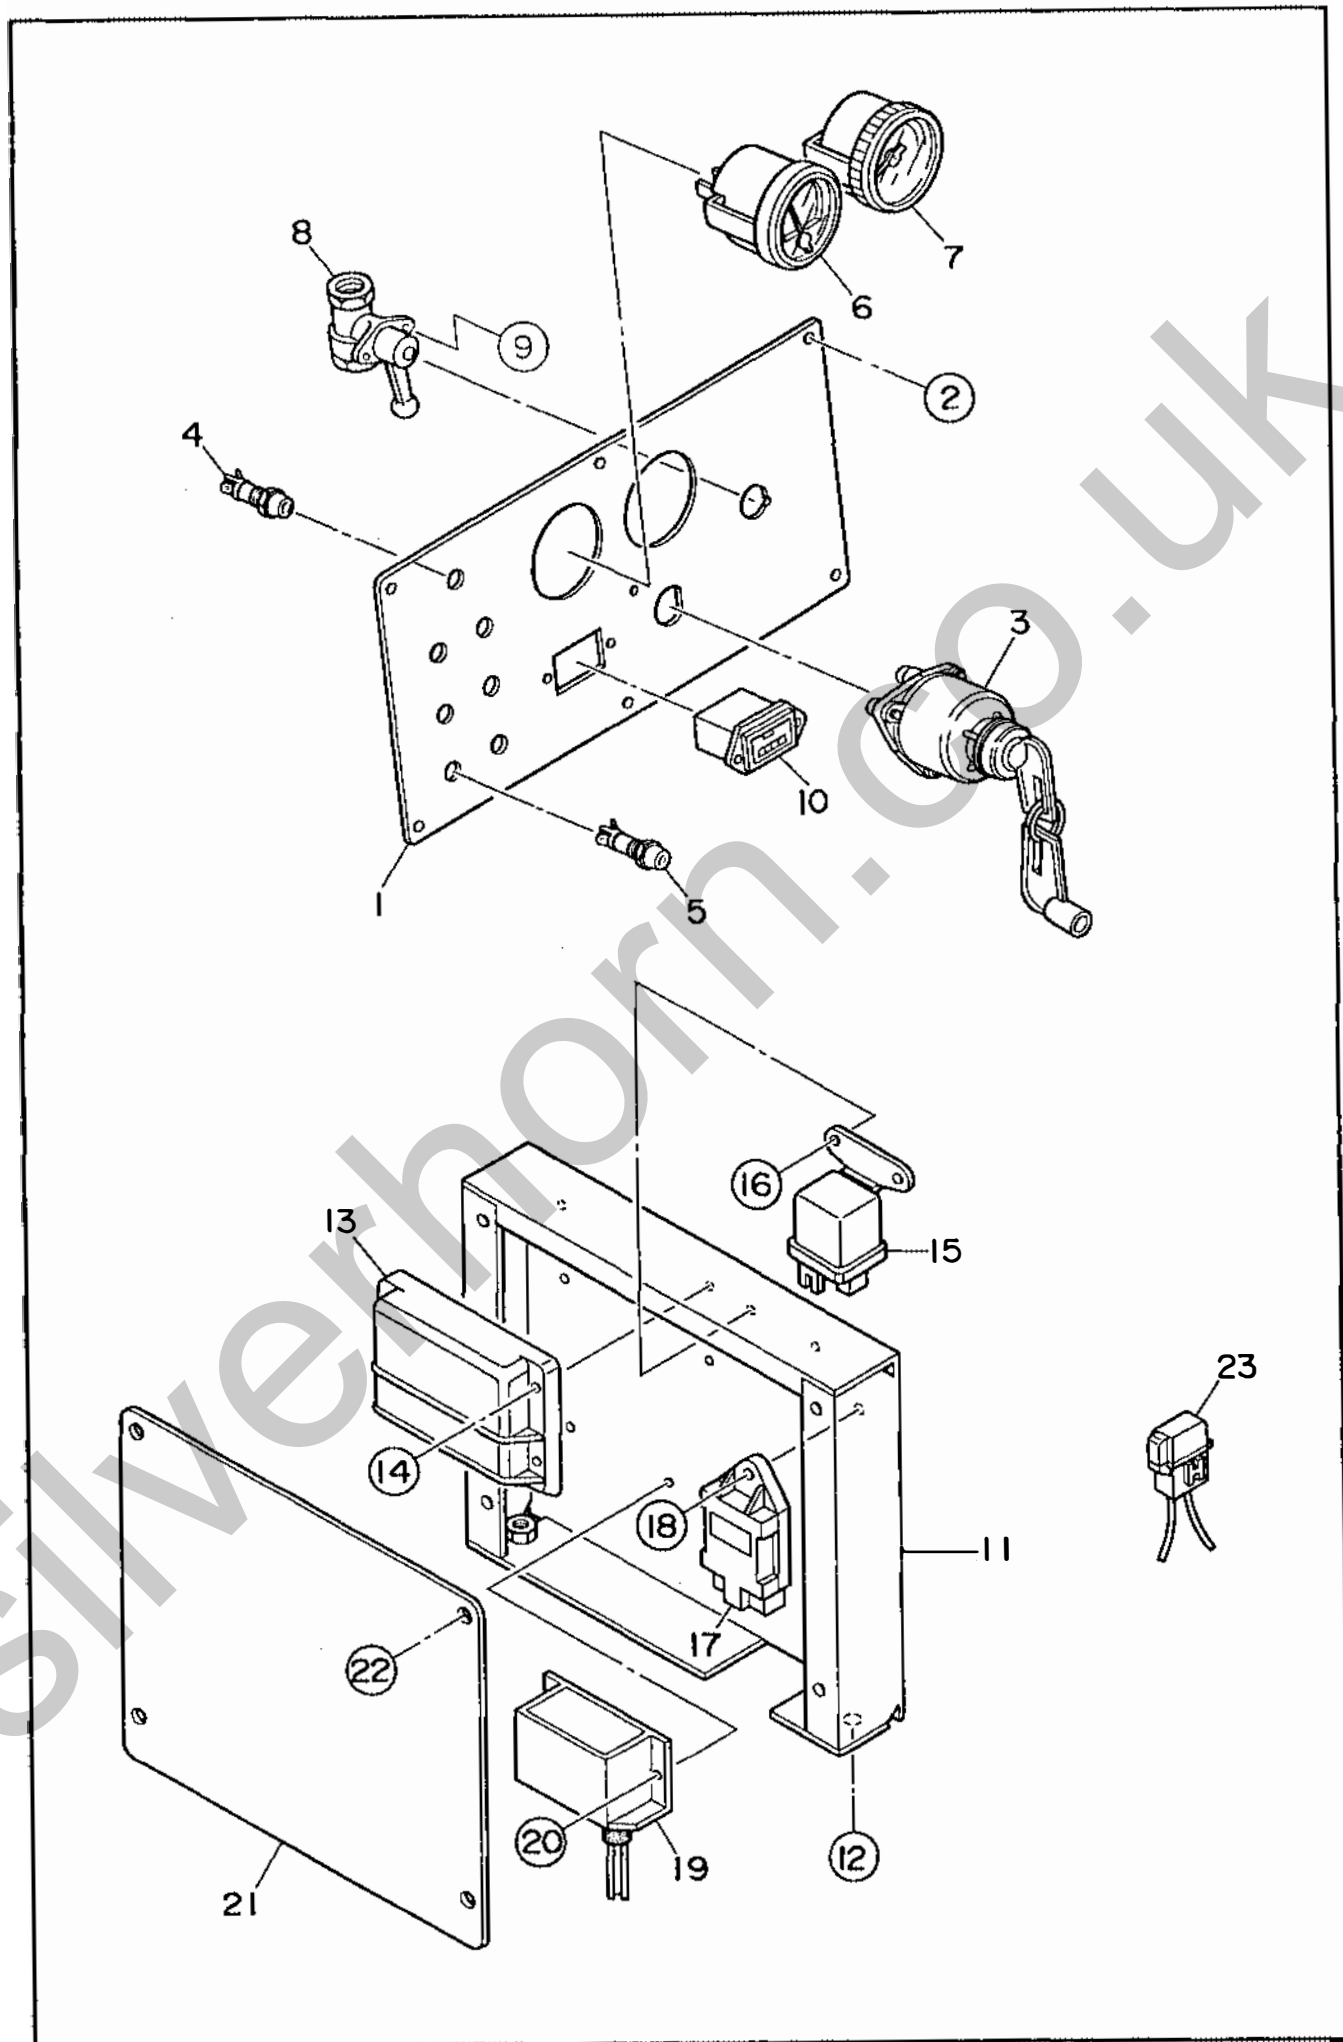


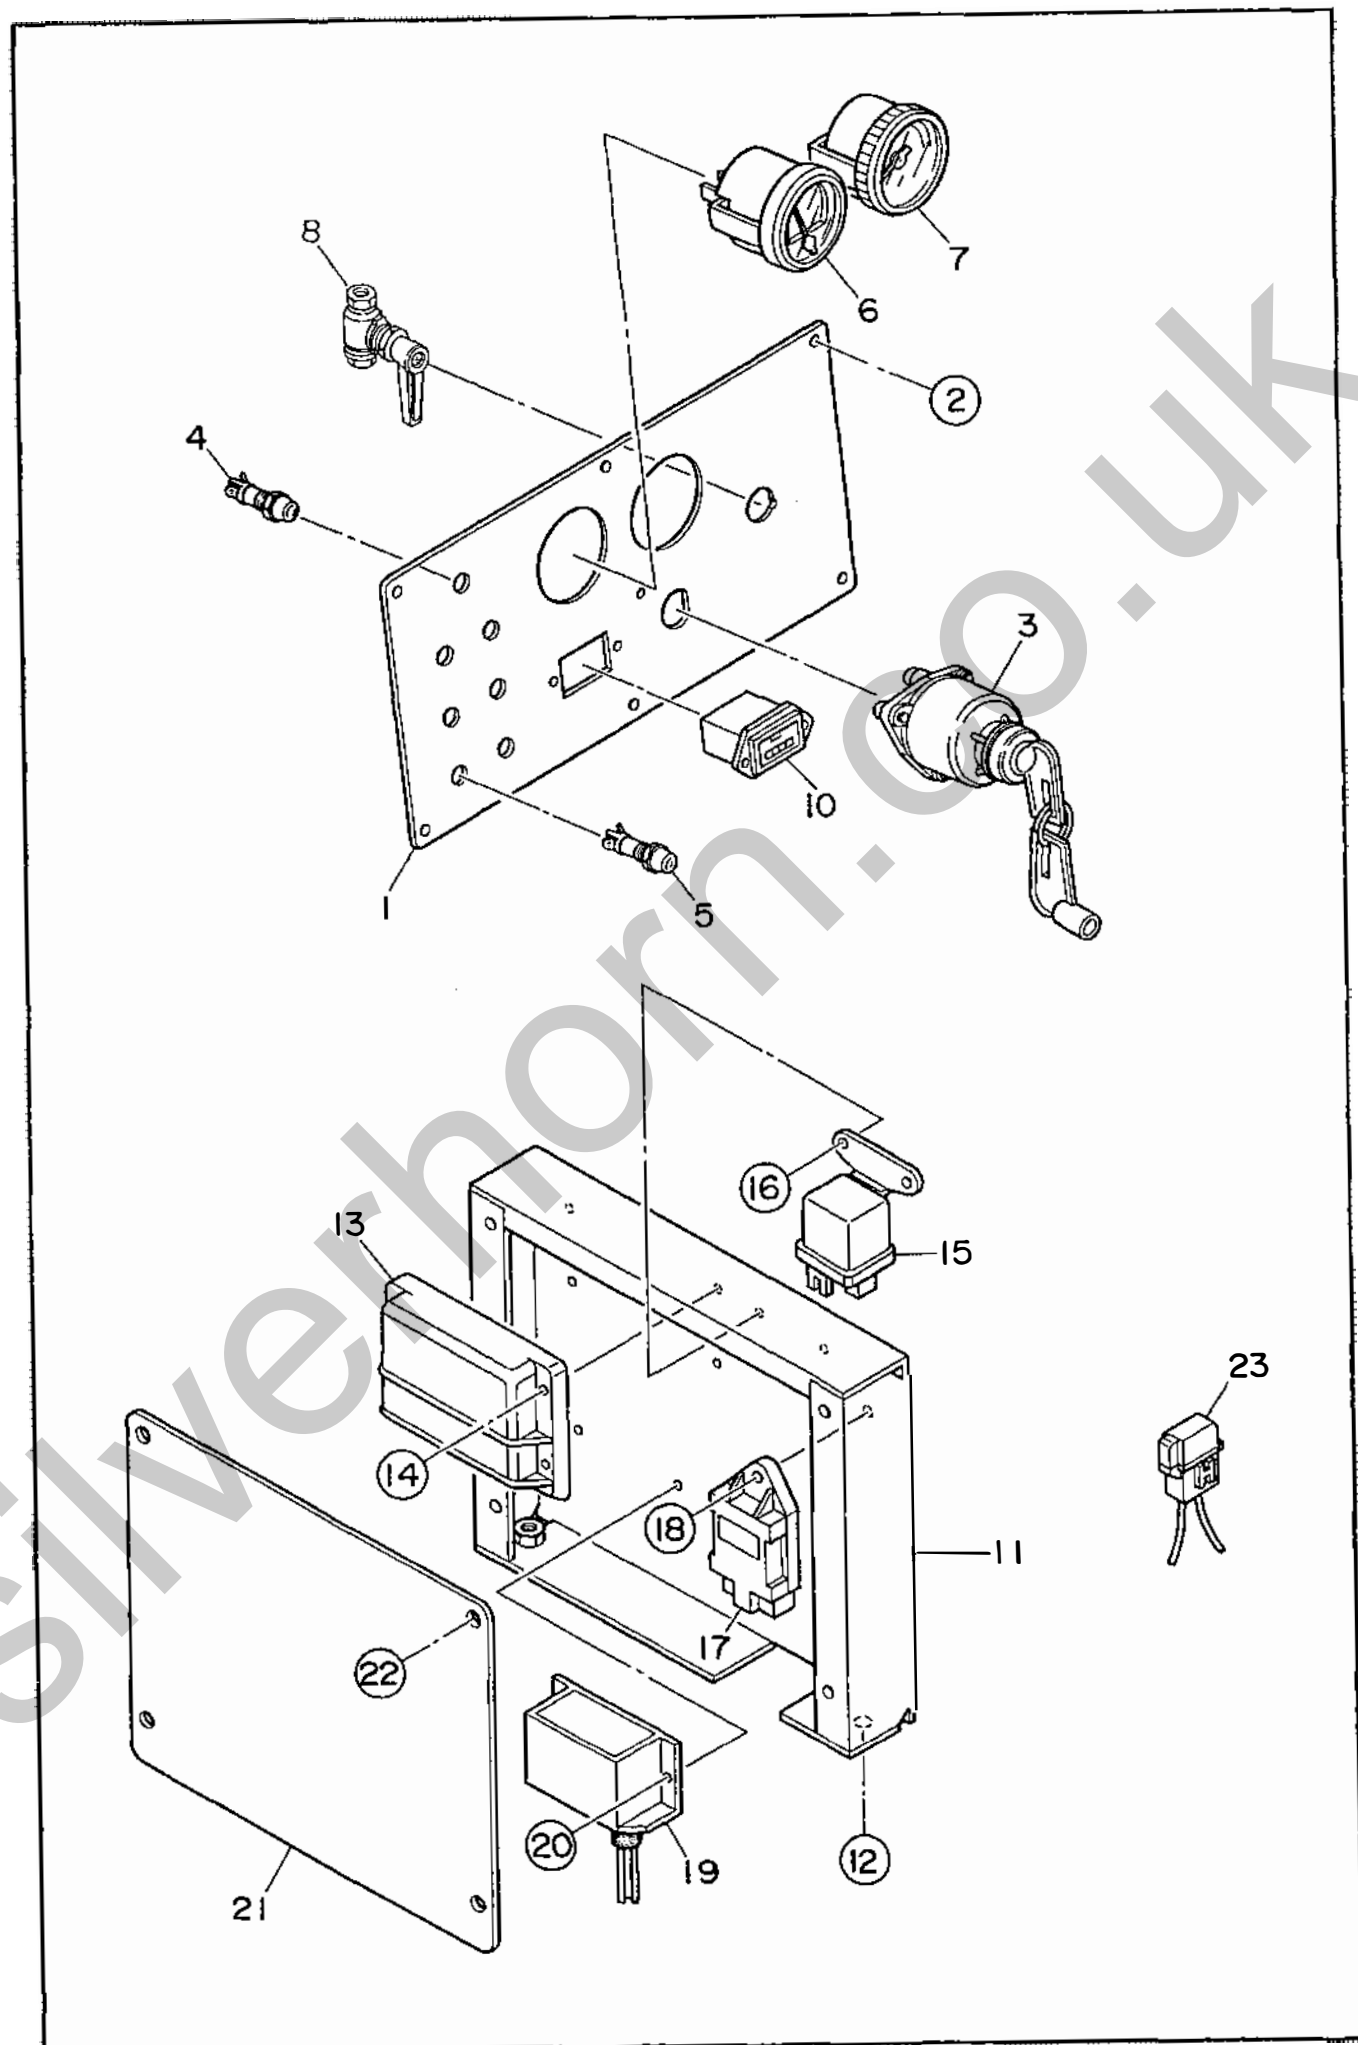


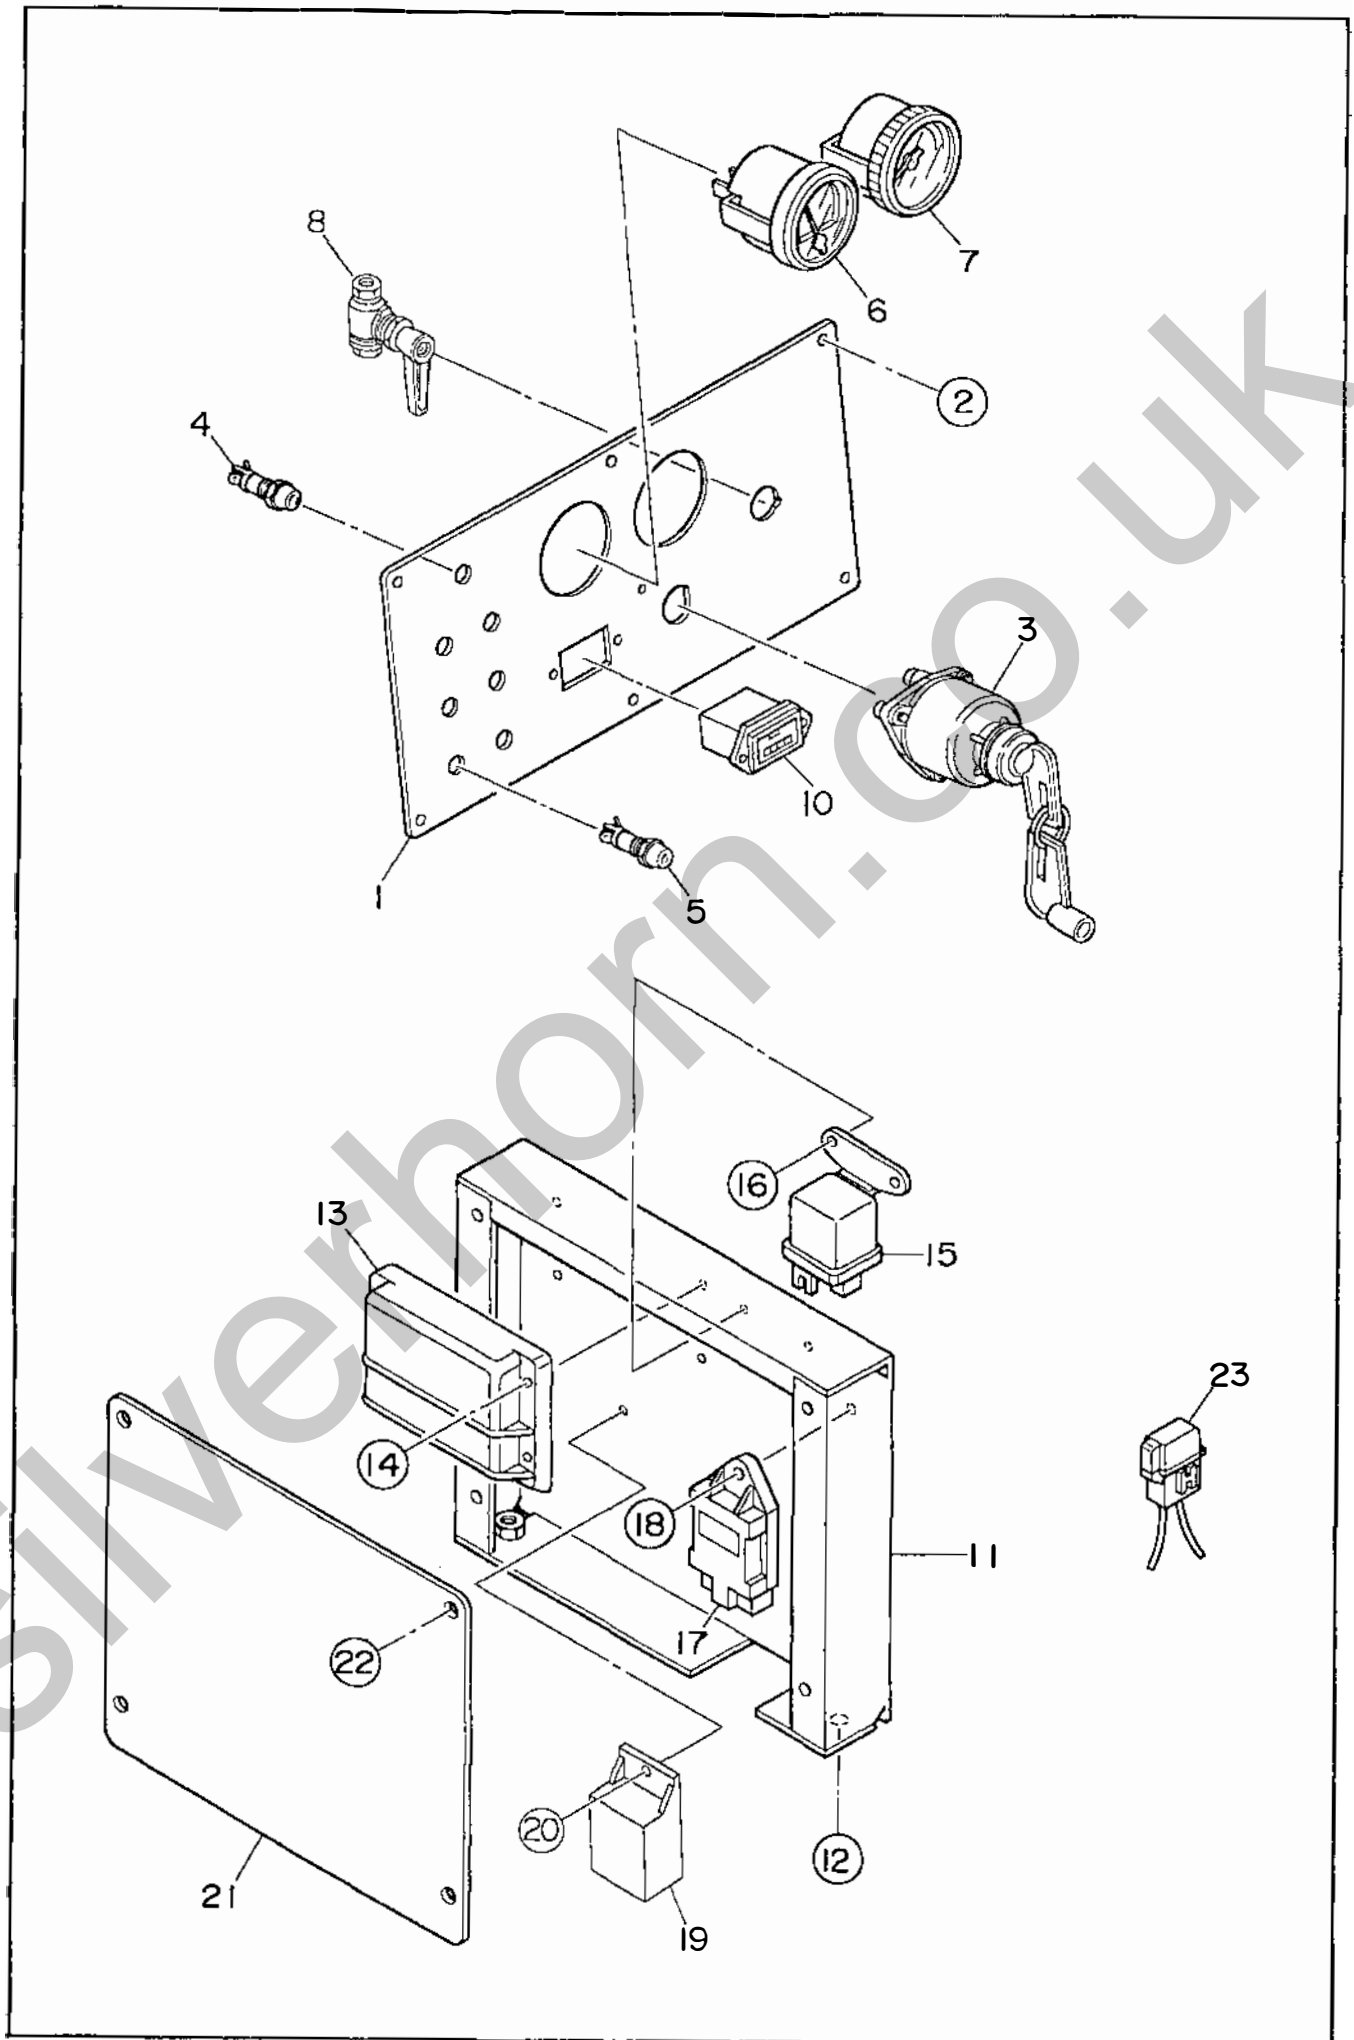


見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
1	E 15112 01802	操作板 Operating Panel		1					~3698272
	E 15112 01812	操作板 Operating Panel		1					3698273~
2	Y 00250 05016	小ネジ Machine Screw		6					
	Y 00423 05000	バネ座金 Spring Washer		6					
	Y 00424 05000	平座金 Plain Washer		6					
3	Y 06021 00057	スタータ スイッチ Starter Switch	KUBOTA 17422-63591	1					
4	Y 06018 10539	予熱表示灯 Preheat Lamp	CTL-970W	1					
5	Y 06018 10538	警報灯 Alarm Lamp	CTL-970W	6					
6	Y 06021 25055	燃料計 Fuel Level Gauge	GP0818	1					
7	E 19241 00004	圧力計 Air Pressure Gauge	NKS-E1	1					~3687115
	E 19241 00014	圧力計 Air Pressure Gauge		1					3687116~ 3698272
	E 29241 00014	圧力計 Air Pressure Gauge	NKS-A2	1					3698273~
8	Y 06033 25021	アンローダ バルブ Unloader Valve	6402 04 10	1					~3698272
	E 19241 00134	アンローダ バルブ Unloader Valve	825-001236	1					3698273~
9	Y 00271 04010	小ネジ Machine Screw		2					~3698272
10	Y 06018 00681	時間計 Hour Meter		1					
11	E 13516 00104	電装品ブラケット Bracket, electric parts		1					~3831106
	E 13516 00114	電装品ブラケット Bracket, electric parts		1					3831107~
12	Y 00171 08020	六角ボルト Hex. Head Bolt		2					
13	Y 06022 00475	エマージェンシ ユニット Emergency Unit	KUBOTA 17472-60601	1					
14	Y 00271 05020	小ネジ Machine Screw		4					
15	Y 06022 02563	グロー リレー Glow Relay	KUBOTA 16415-65601	1					
16	Y 00271 05016	小ネジ Machine Screw		2					

見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
17	Y 06022 02564	コントローラ Controller	KUBOTA 16415-65661	1					
18	Y 00271 05020	小ネジ Machine Screw		1					
19	Y 06032 10224	空気温度スイッチ Air Temperature Switch	CLE-D6B0-ASAB	1					~3831106
	E 99248 00034	サーミスタスイッチ Thermistor Switch	TH01-110A1	1					3831107~
20	Y 00271 04016	小ネジ Machine Screw		2					~3831106
	Y 00271 05020	小ネジ Machine Screw		1					3831107~
21	E 13517 00004	電装品カバー Cover, electric parts		1					
22	Y 00171 08020	六角ボルト Hex. Head Bolt		4					
23	Y 06018 06642	ヒューズ Fuse	5A	1					
	Y 06018 06643	ヒューズ Fuse	15A	1					

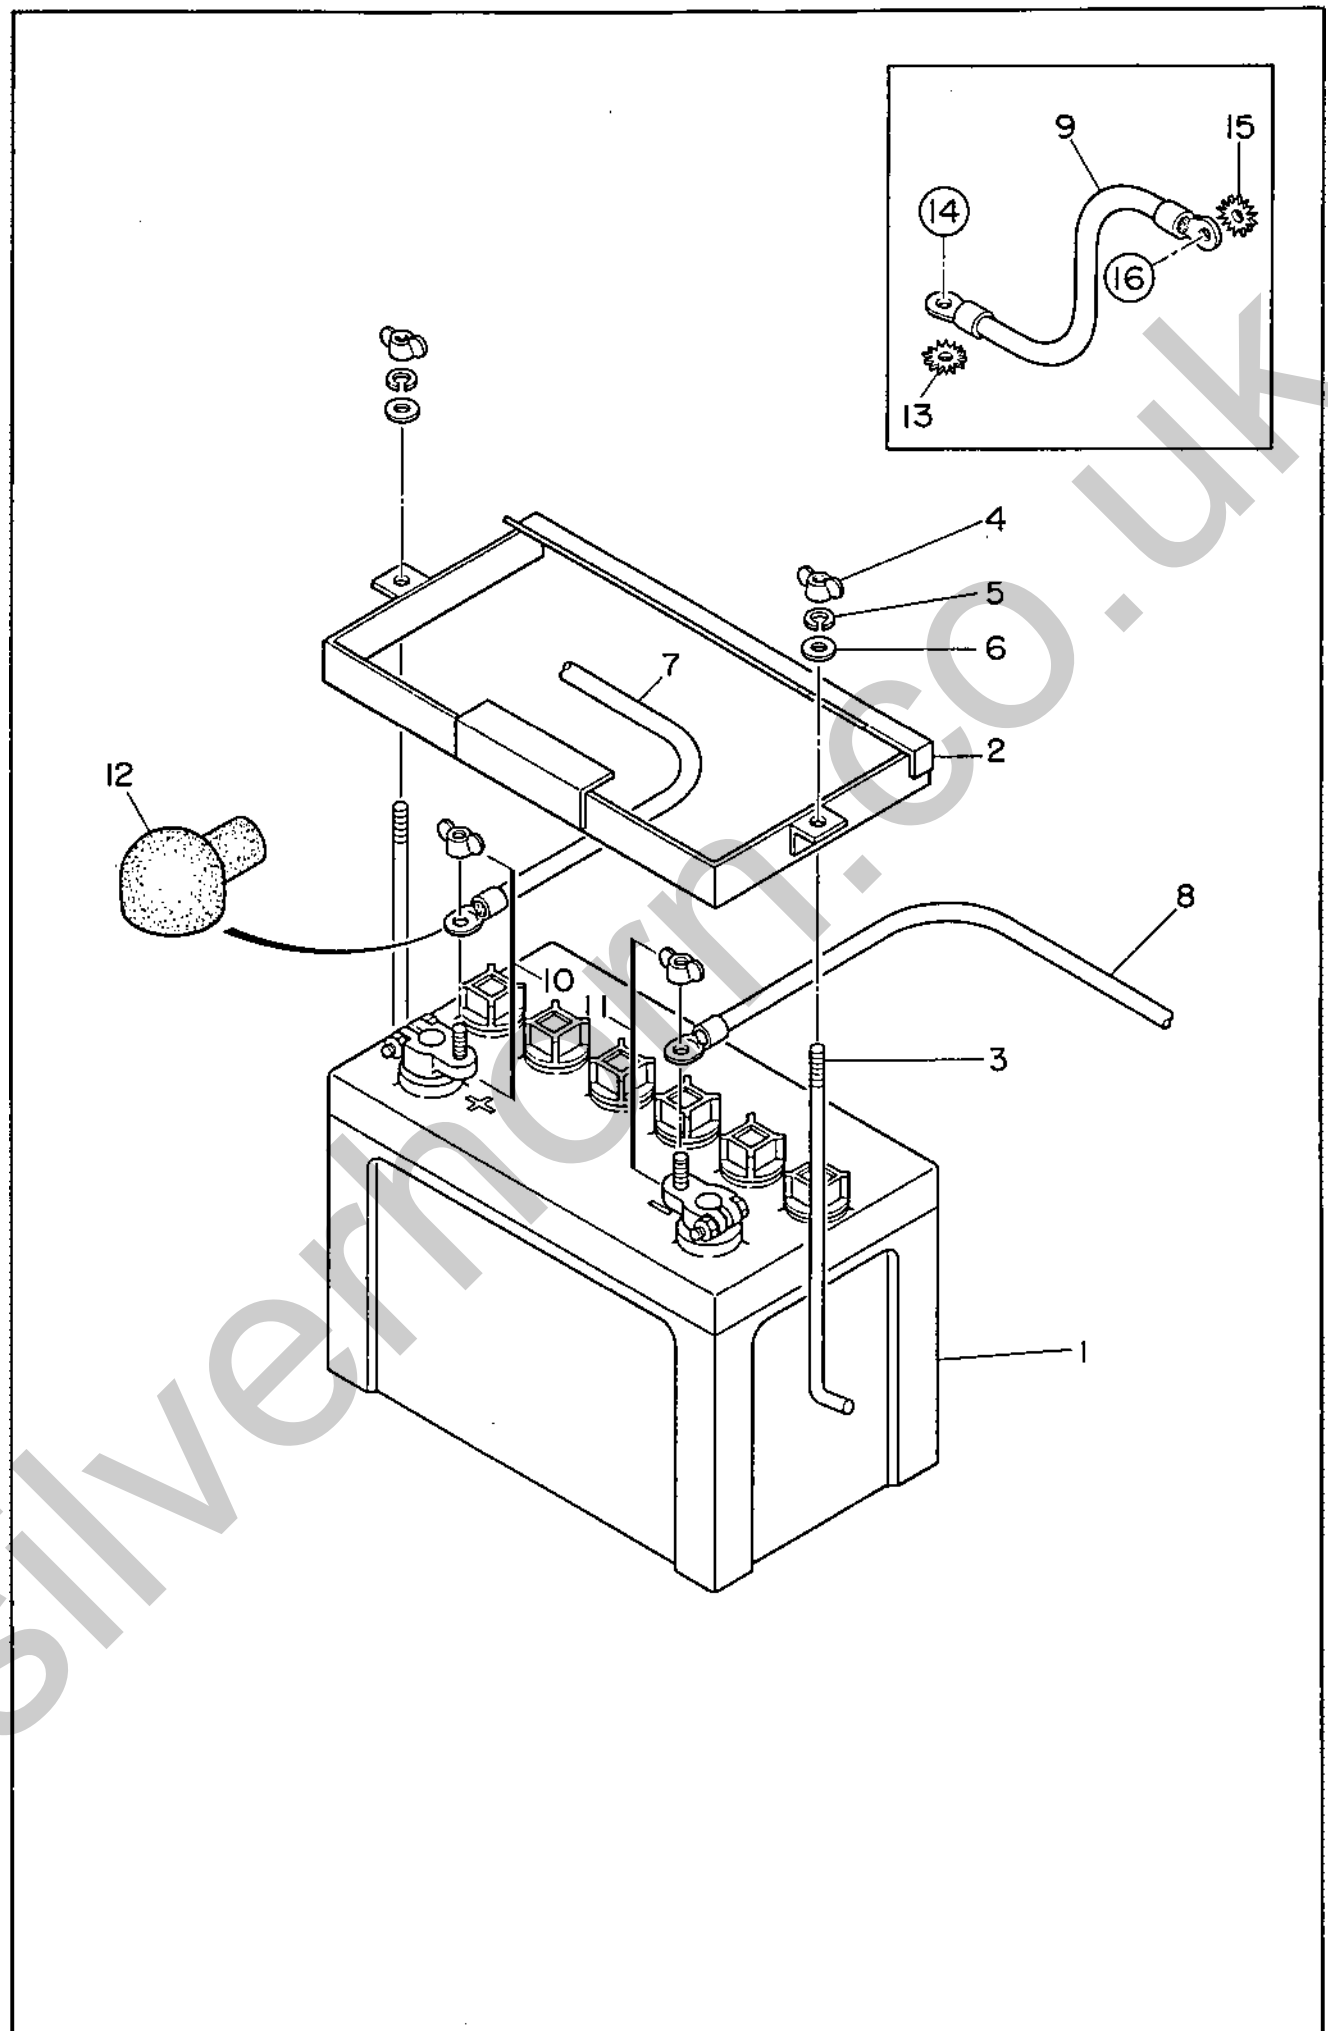


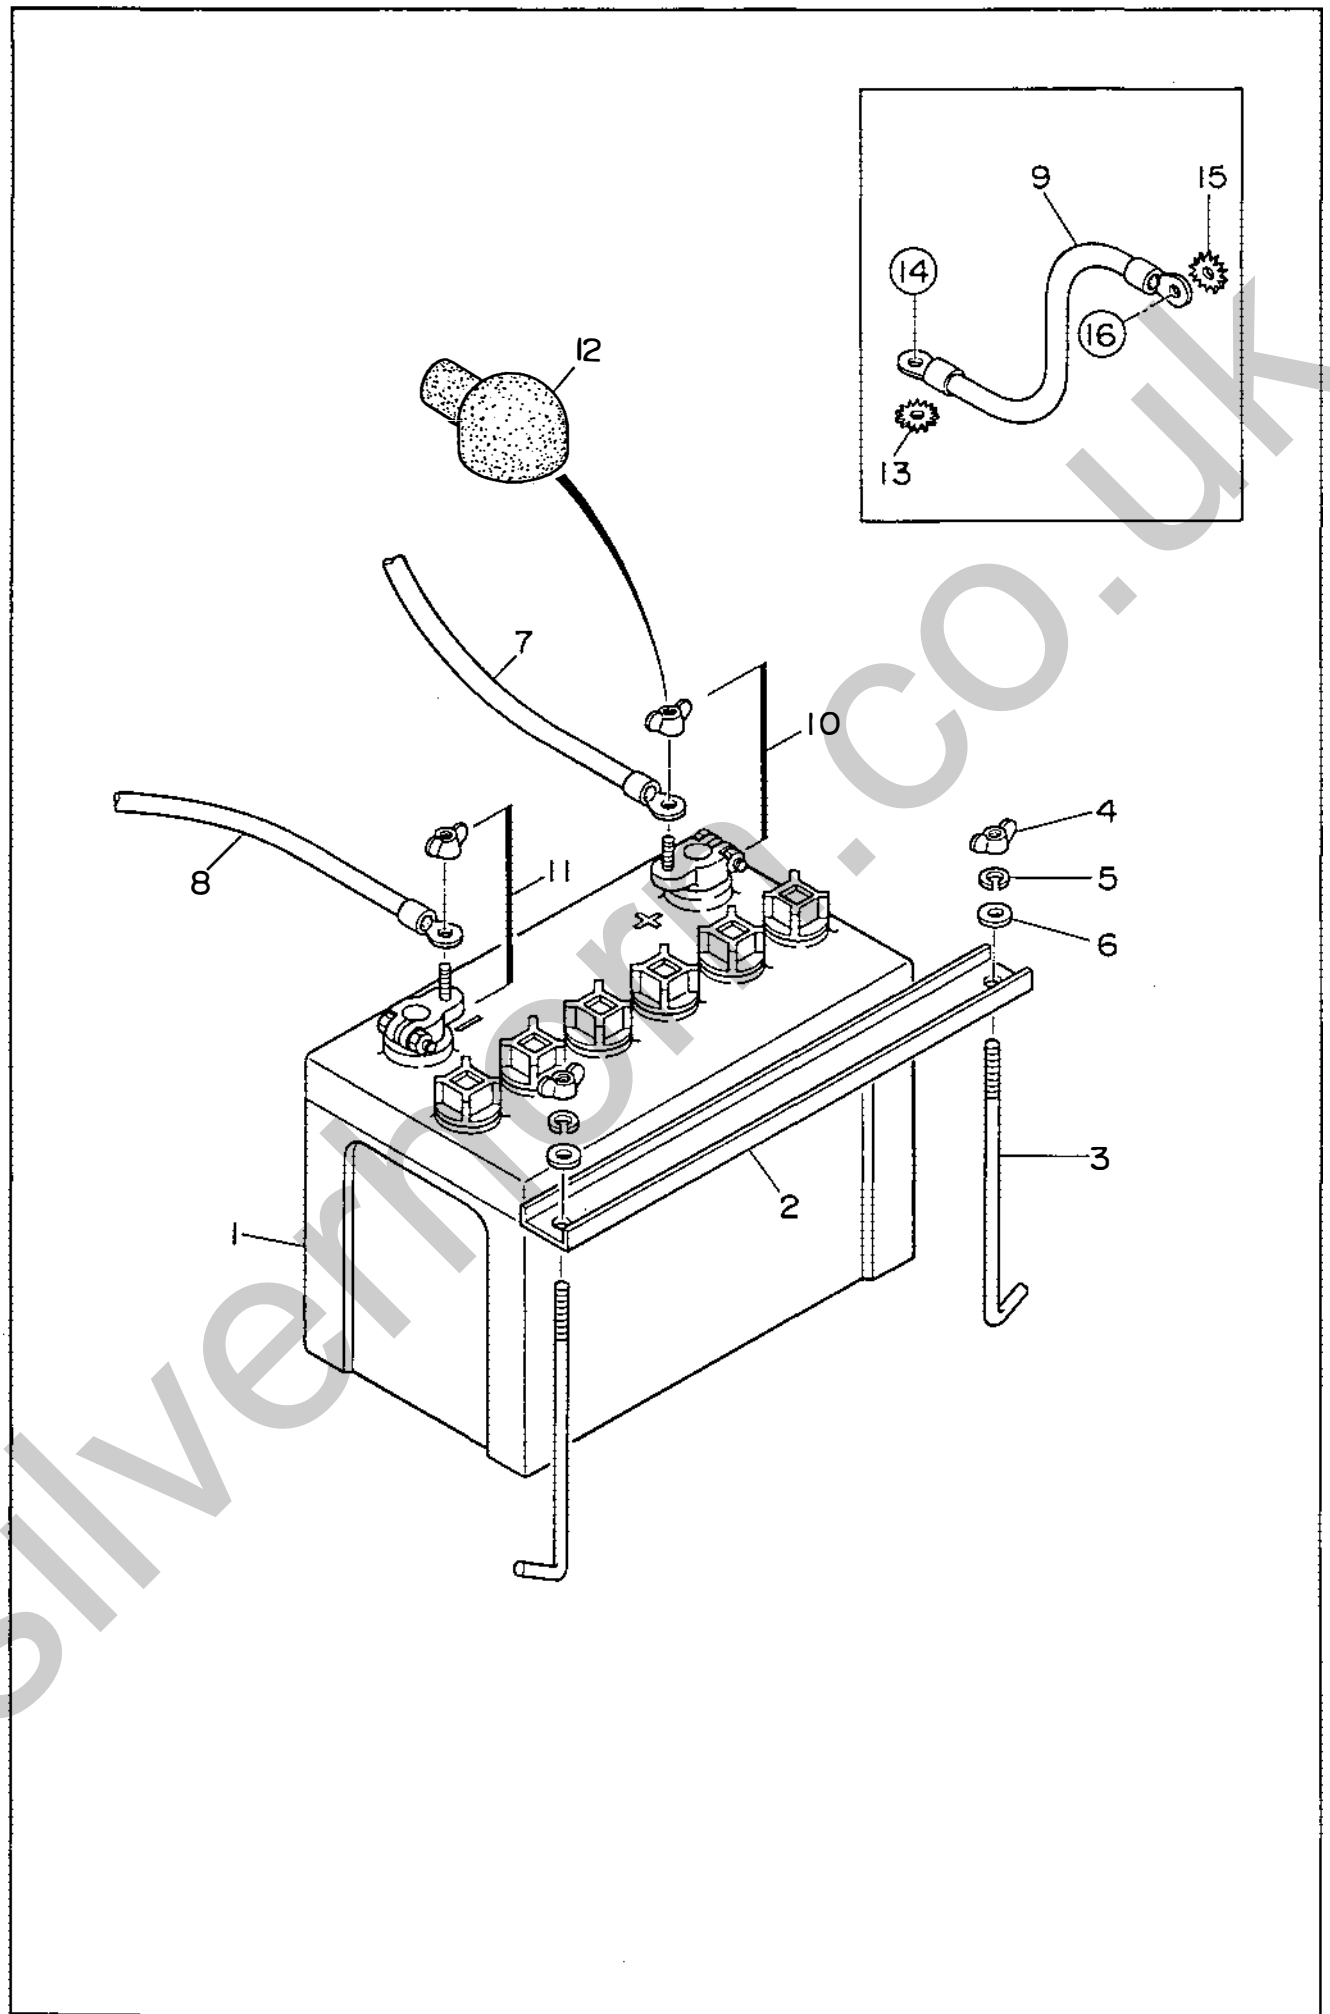

見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
1	01653 08531	バッテリー Battery	85D31R	1					~3713088
	01653 09531	バッテリー Battery	95D31R	1					3713089~
2	62622 50003	バッテリー バンド Battery Band		1					~3685608
	61422 50004	バッテリー バンド Battery Band		1					3685609~
3	80022 52104	バッテリー 締付ボルト Battery Bolt		2					
4	00378 08000	蝶ナット Wing Nut		2					
5	00400 08000	バネ座金 Spring Washer		2					
6	00416 08000	平座金 Plain Washer		2					
7	E 13471 00404	バッテリー ケーブル Battery Cable		1					
8	02452 22045	バッテリー ケーブル Battery Cable		1					~3703065
	02452 22030	バッテリー ケーブル Battery Cable		1					3703066~
9	E 13470 00004	アース ケーブル Earth Cable		1					
10	06022 20310	バッテリー端子 Terminal Ass'y	No.9P	1					
11	06022 20311	バッテリー端子 Terminal Ass'y	No.9N	1					
12	08450 40414	端子キャップ Terminal Cap		1					
13	00405 08000	歯付座金 Toothed Washer		1					
14	00171 08020	六角ボルト Hex. Head Bolt		1					
15	00405 10000	歯付座金 Toothed Washer		1					
16	00107 10020	六角ボルト Hex. Head Bolt		1					
	00400 10000	バネ座金 Spring Washer		1					
	00412 10000	平座金 Plain Washer		1					

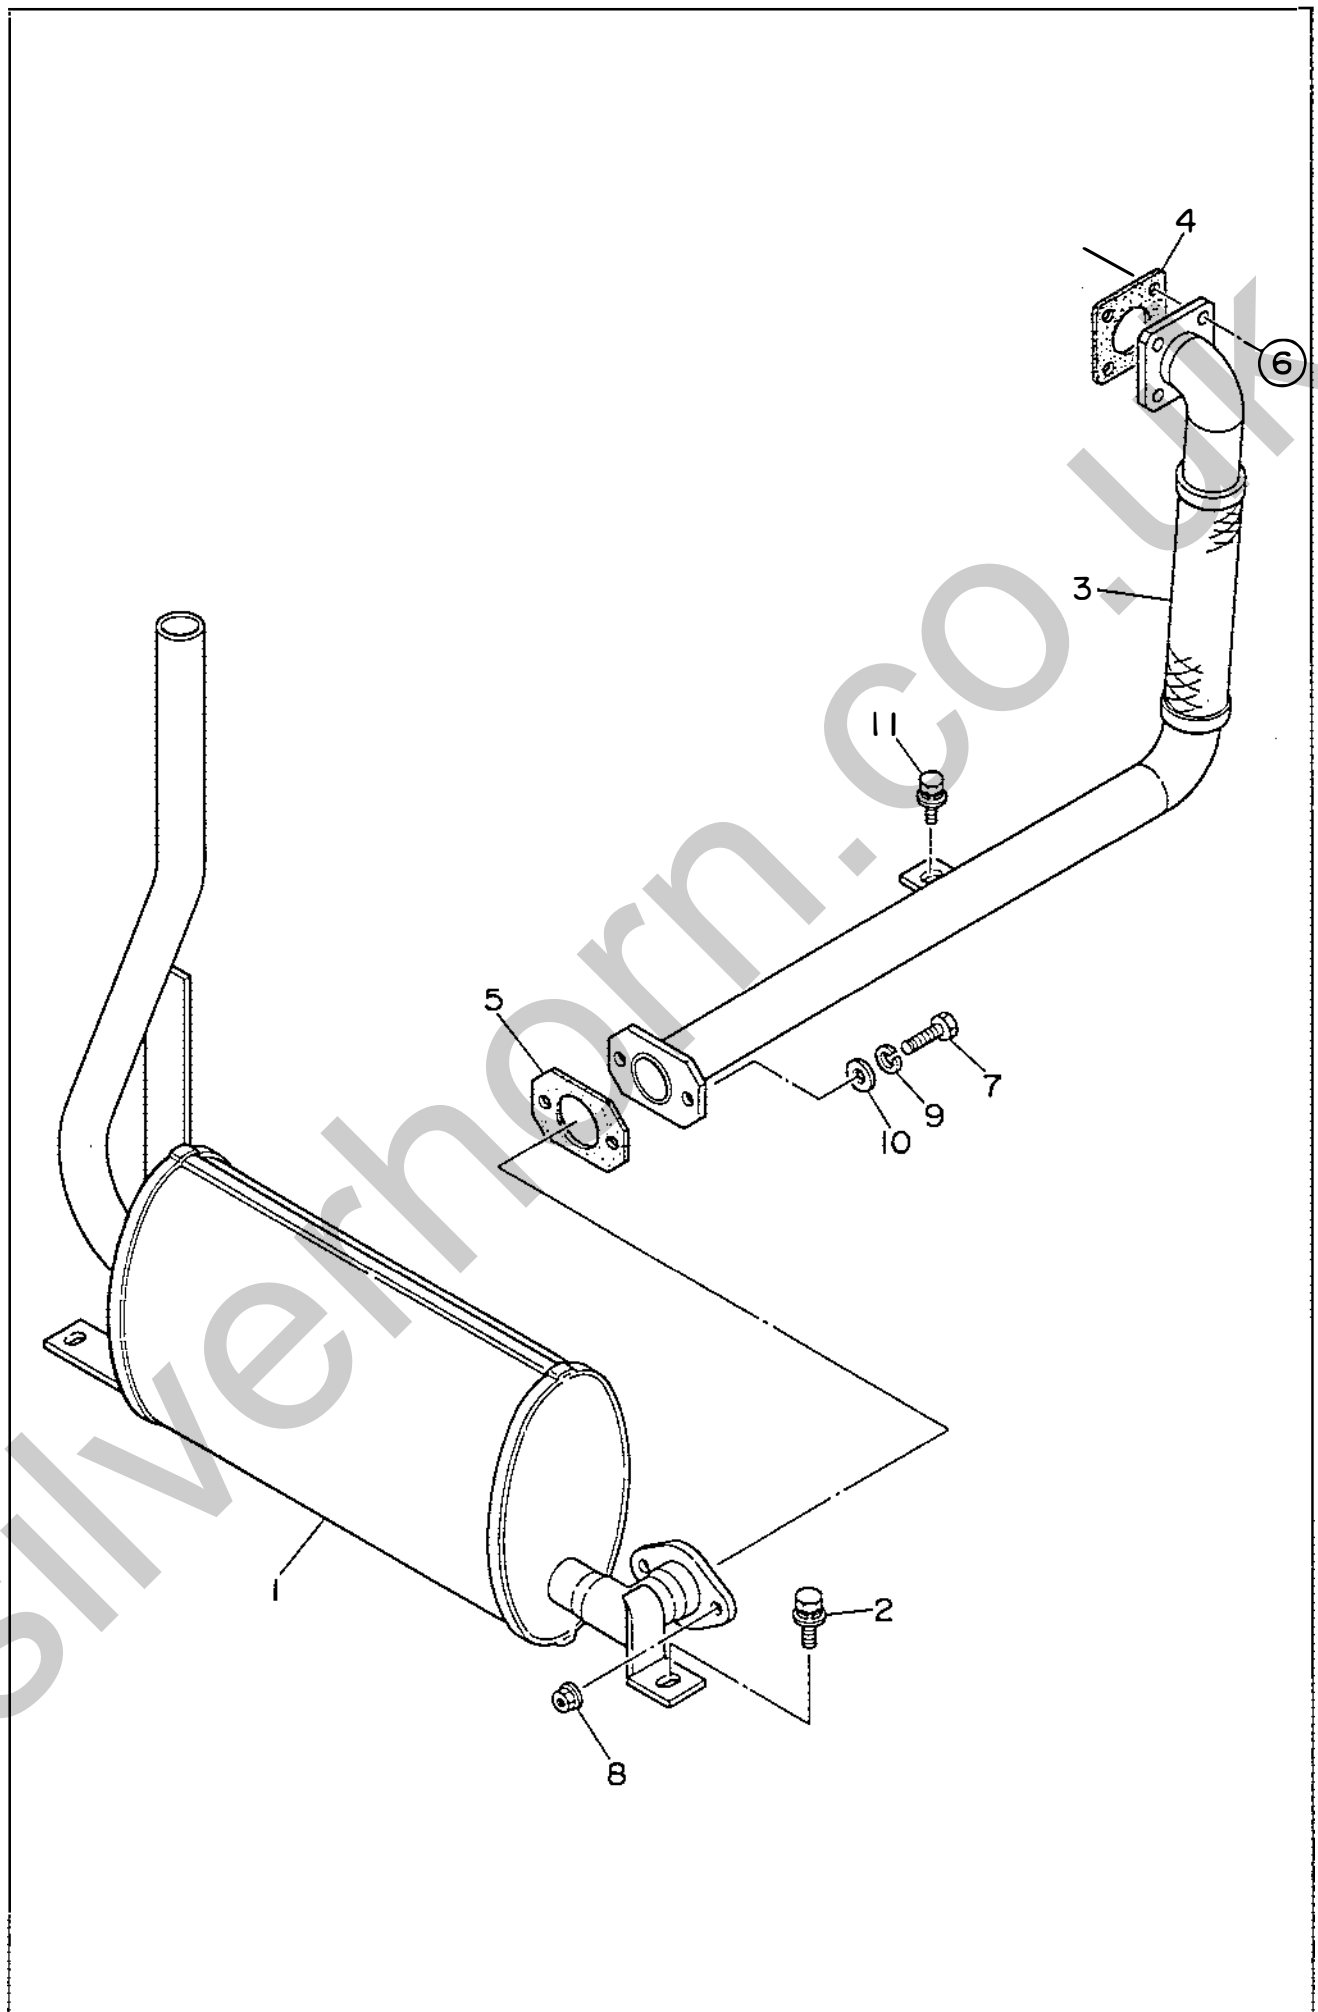



見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
1	E 13301 00002	マフラ Muffler		1					
2	00171 10025	六角ボルト Hex. Head Bolt		2					
3	E 13340 00003	エキゾースト パイプ Exhaust Pipe		1					
4	06023 20071	ガスケット Gasket	KUBOTA 15371-12371	1					
5	E 93040 02004	ガスケット Gasket		1					
6	02092 08000	六角ナット Hex. Nut		4					
7	00103 08030	六角ボルト Hex. Head Bolt		2					
8	02070 08000	六角ナット Hex. Nut		2					
9	00426 08000	バネ座金 Spring Washer		2					
10	00412 08000	平座金 Plain Washer		2					
11	00171 08020	六角ボルト Hex. Head Bolt		1					

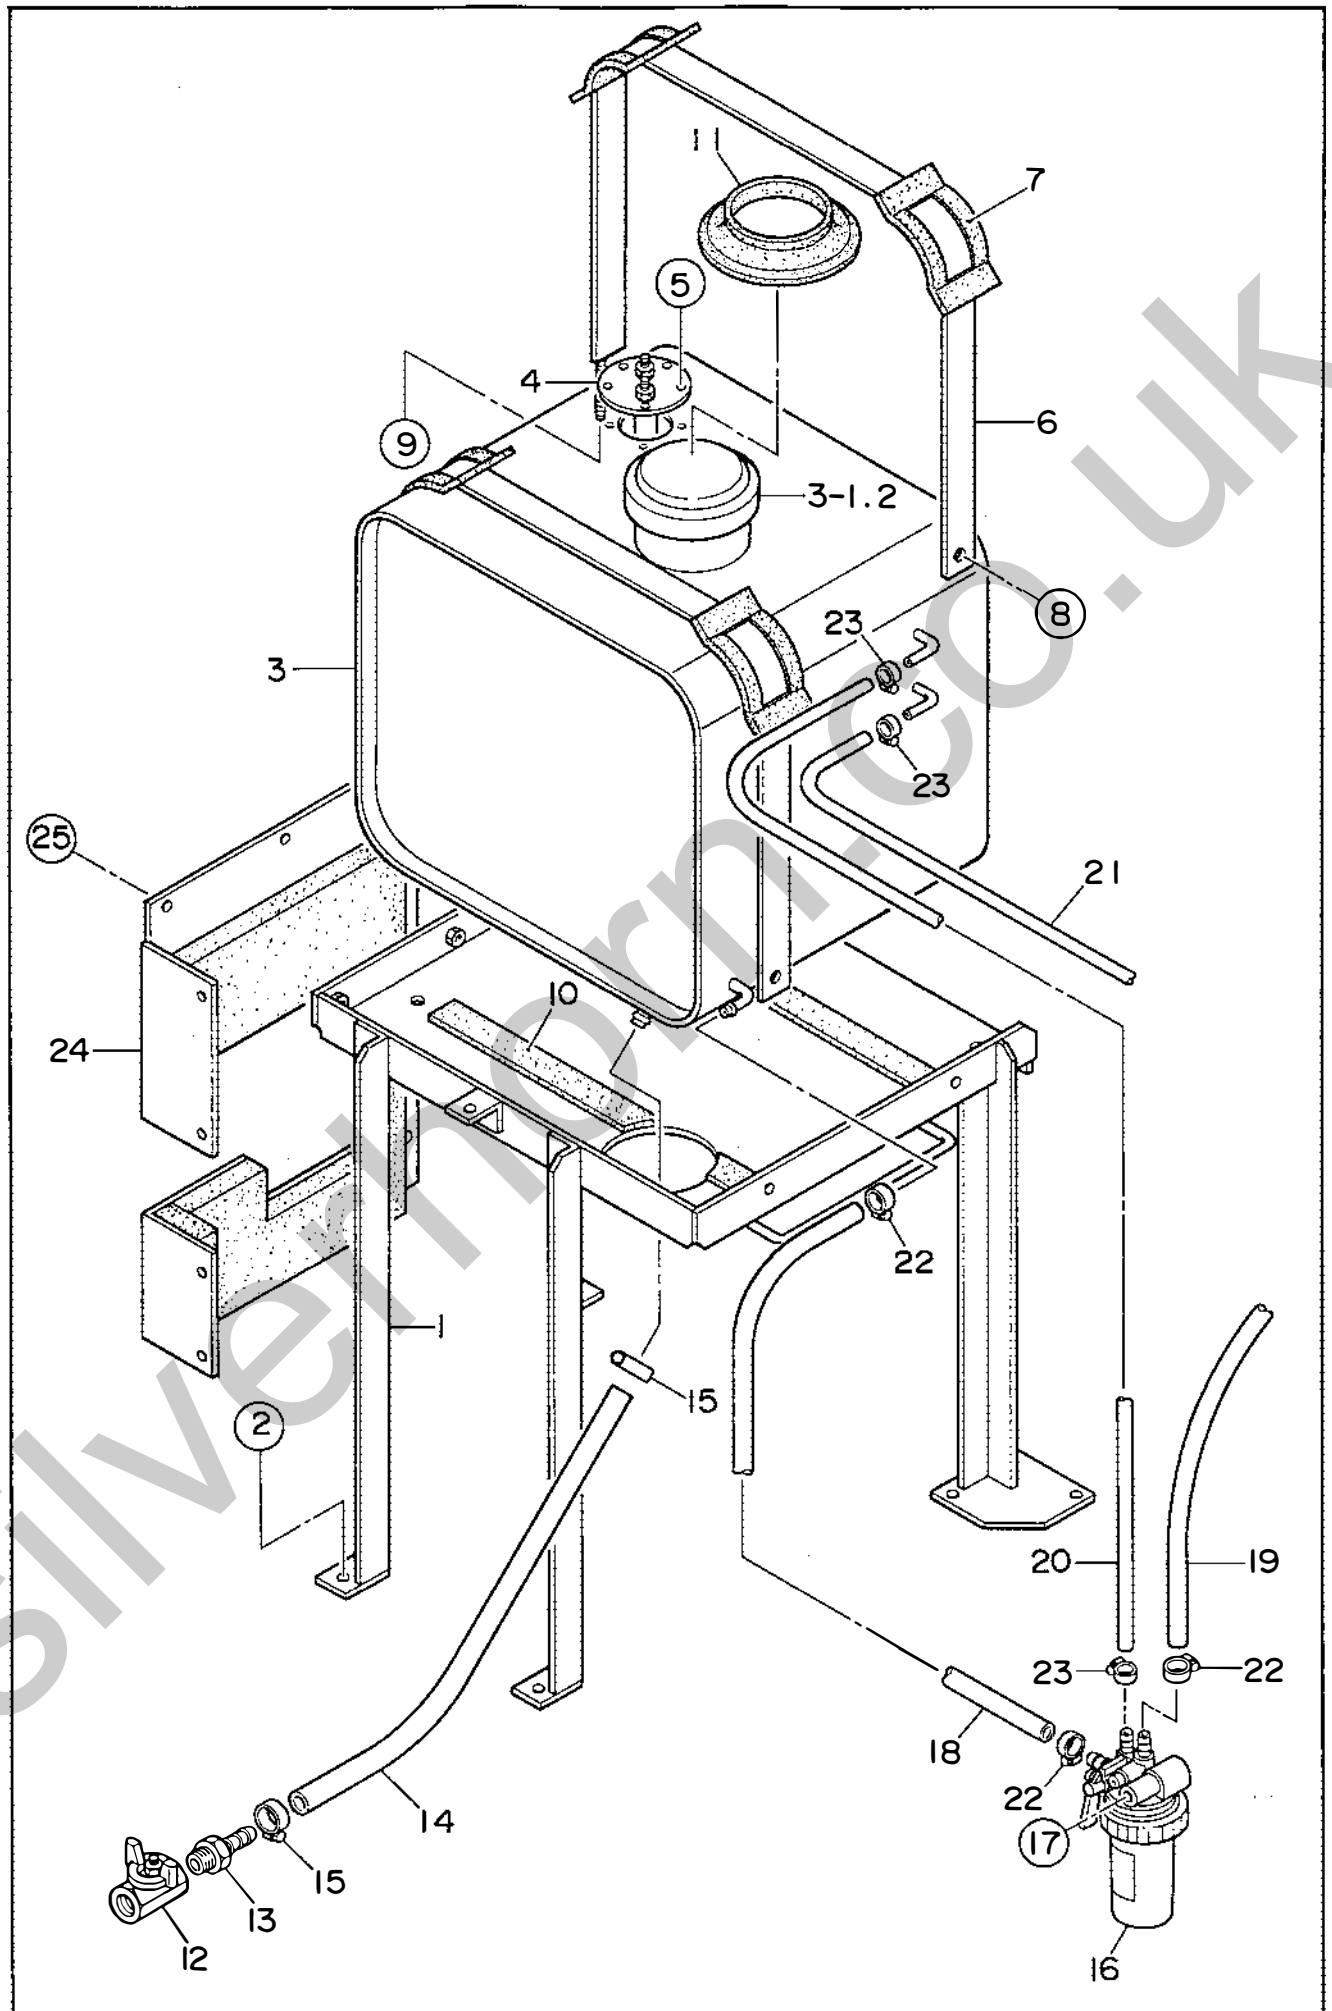



見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数量Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
1	E 14830 00003	サポート レッグ Support Leg		1					
2	00171 08020	六角ボルト Hex. Head Bolt		5					
3	E 13630 00003	燃料タンク Fuel Tank		1					
3- 1	08455 00104	燃料タンク キャップ Cap, fuel tank		(1)					
3- 2	08101 05400	燃料フィルタ Fuel Filter		(1)					
4	E 19243 00174	燃料計センダ Sender, fuel gauge	M237	1					
5	00229 05015	小ネジ Machine Screw		5					
6	E 13632 00004	タンク バンド Tank Band		2					
7	08050 03414	タンク バンド パット Pad, tank band		4					
8	00171 08016	六角ボルト Hex. Head Bolt		2					
9	02070 08000	六角ナット Hex. Nut		2					
	00300 08000	六角ナット Hex. Nut		2					
10	02251 00200	タンク シート Tank Sheet		2					
11	08450 39604	ラバー シール Rubber Seal		1					
12	06033 25013	バルブ Valve	BBS-77-10 PT3/8	1					
13	06020 22706	ホース ジョイント Hose Joint	WHN-18	1					
14	01914 00720	ホース Hose		1					
15	06055 15157	ホース バンド Hose Band	φ24	2					
16	06020 42066	燃料フィルタ Fuel Filter	KUBOTA 16271-43012	1					
	06020 42176	燃料フィルタ エレメント Element, fuel filter	KUBOTA 16271-43561	(1)					
17	00171 08070	六角ボルト Hex. Head Bolt		1					
18	01991 00500	サクション ホース Suction Hose		1					
19	01991 00500	サクション ホース Suction Hose		1					


見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
20	01990 00740	リターン ホース Return Hose		1					
21	01990 00450	リターン ホース Return Hose		1					
22	06055 15170	ホース バンド Hose Band	φ12	4					
23	06055 15005	ホース バンド Hose Band	φ9	4					
24	E 14832 00004	遮音板 Cover		1					
	E 14934 00604	吸音材 Lining		1					
25	00171 06016	六角ボルト Hex. Head Bolt		9					

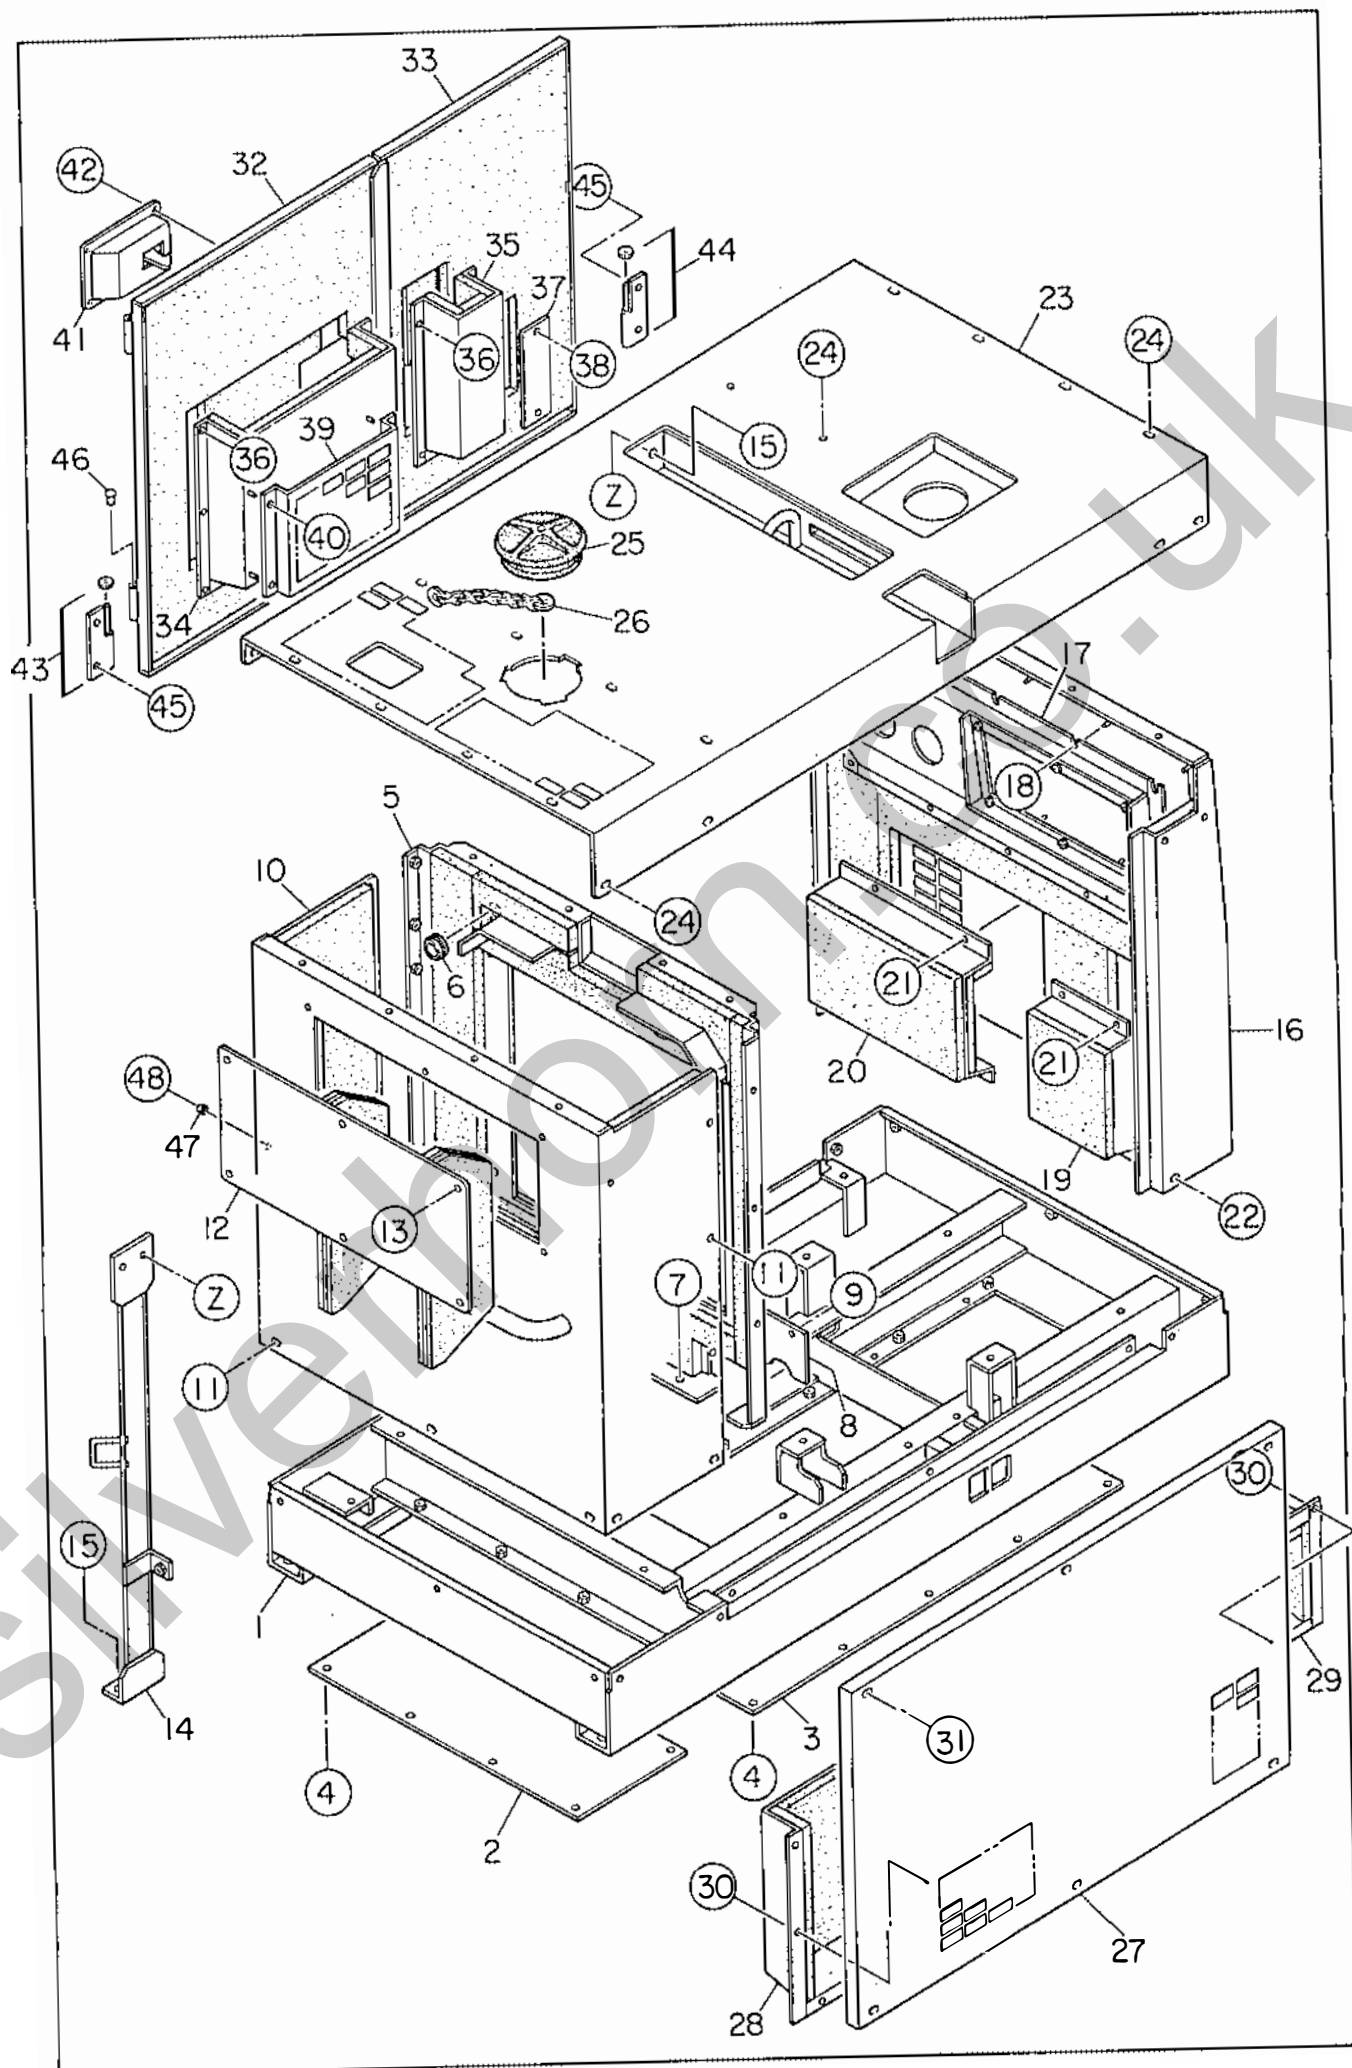

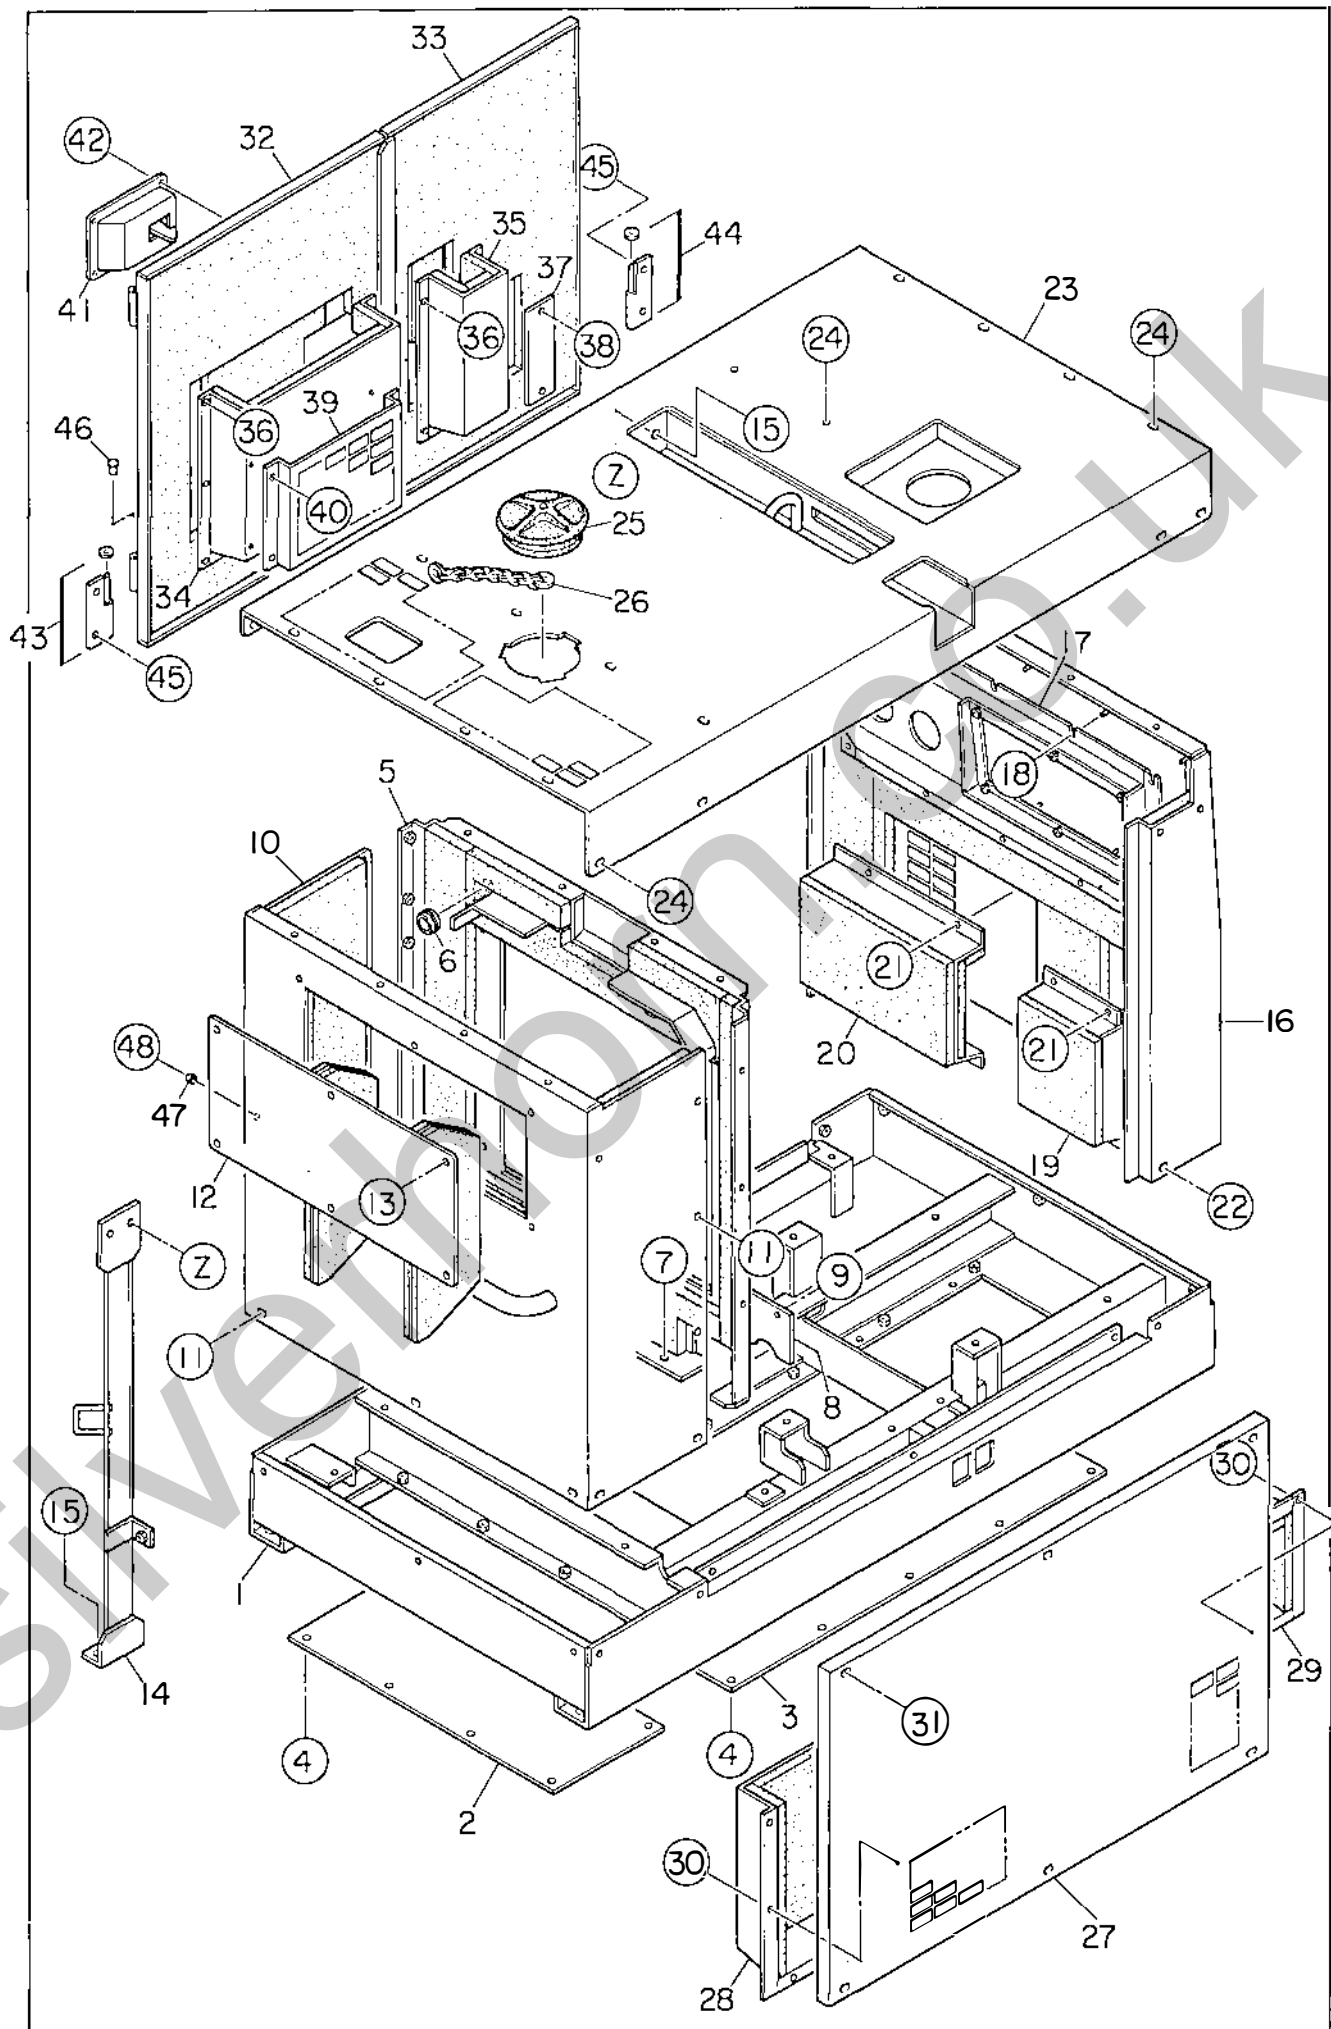

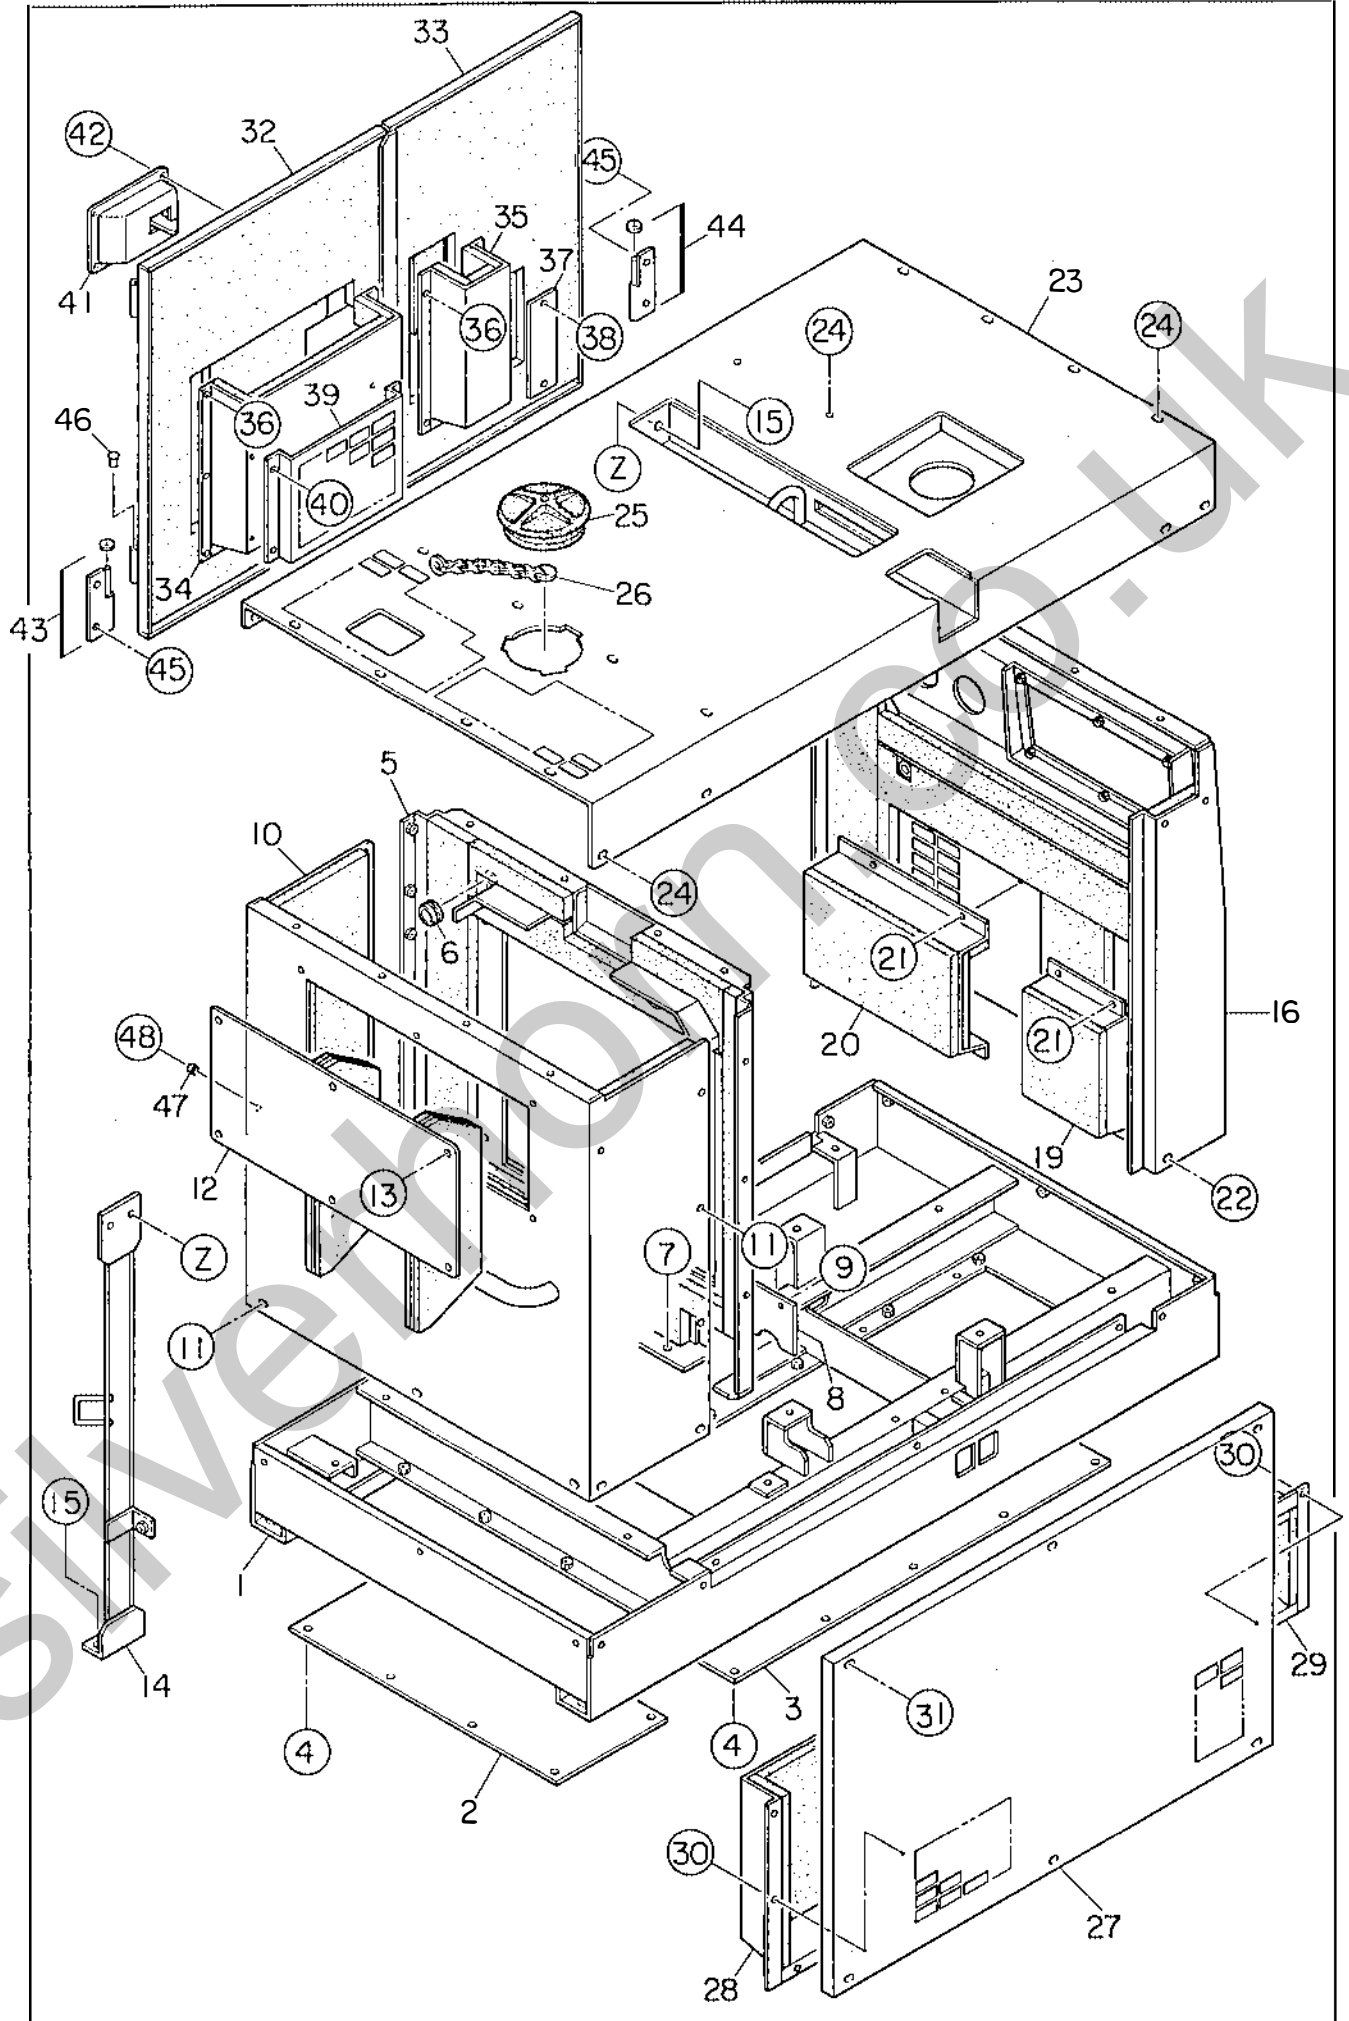

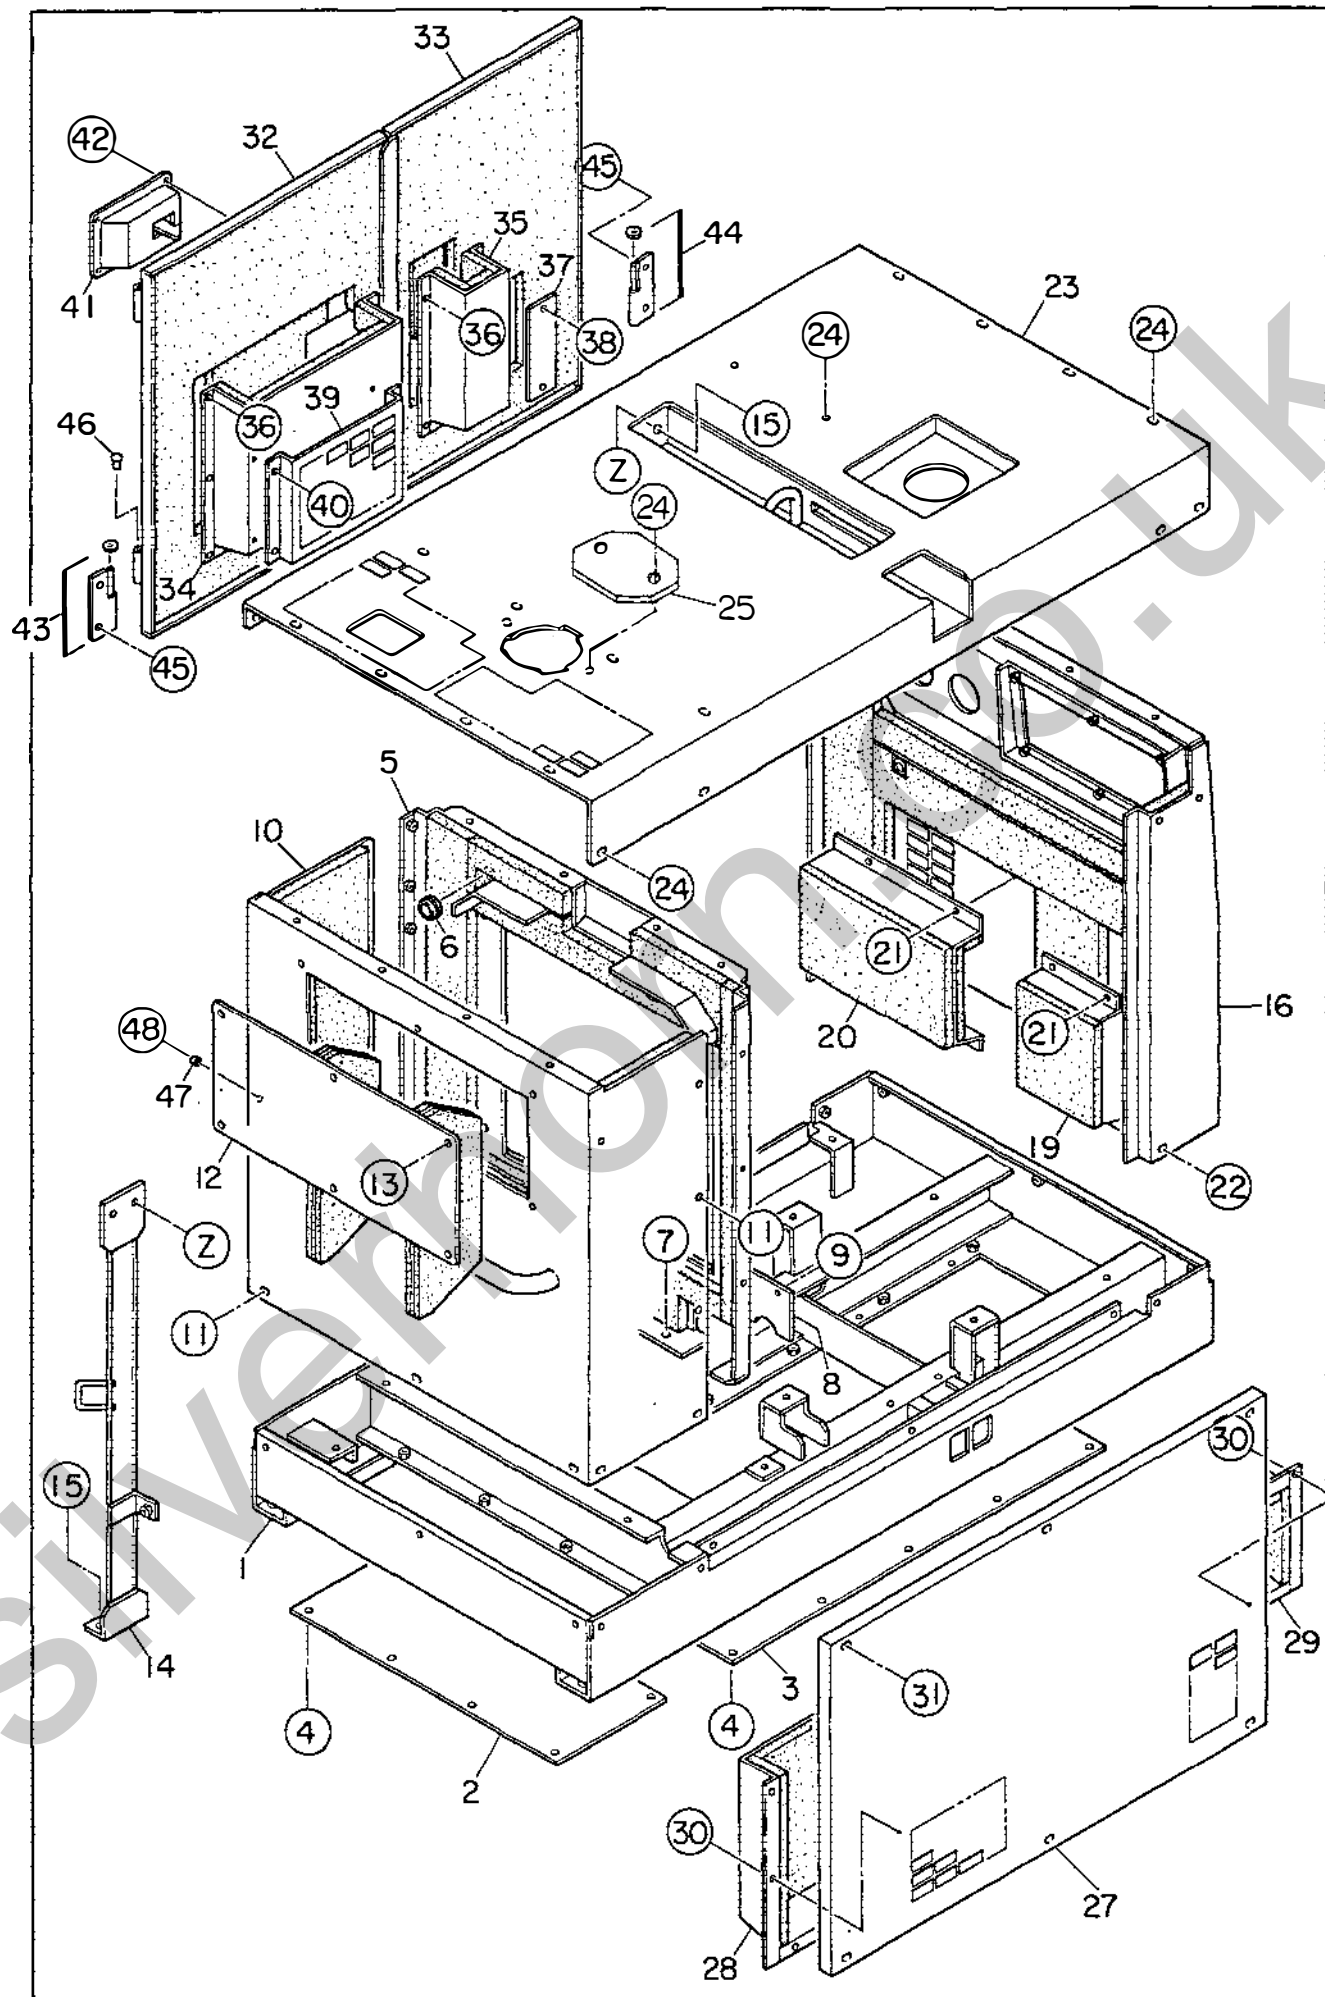



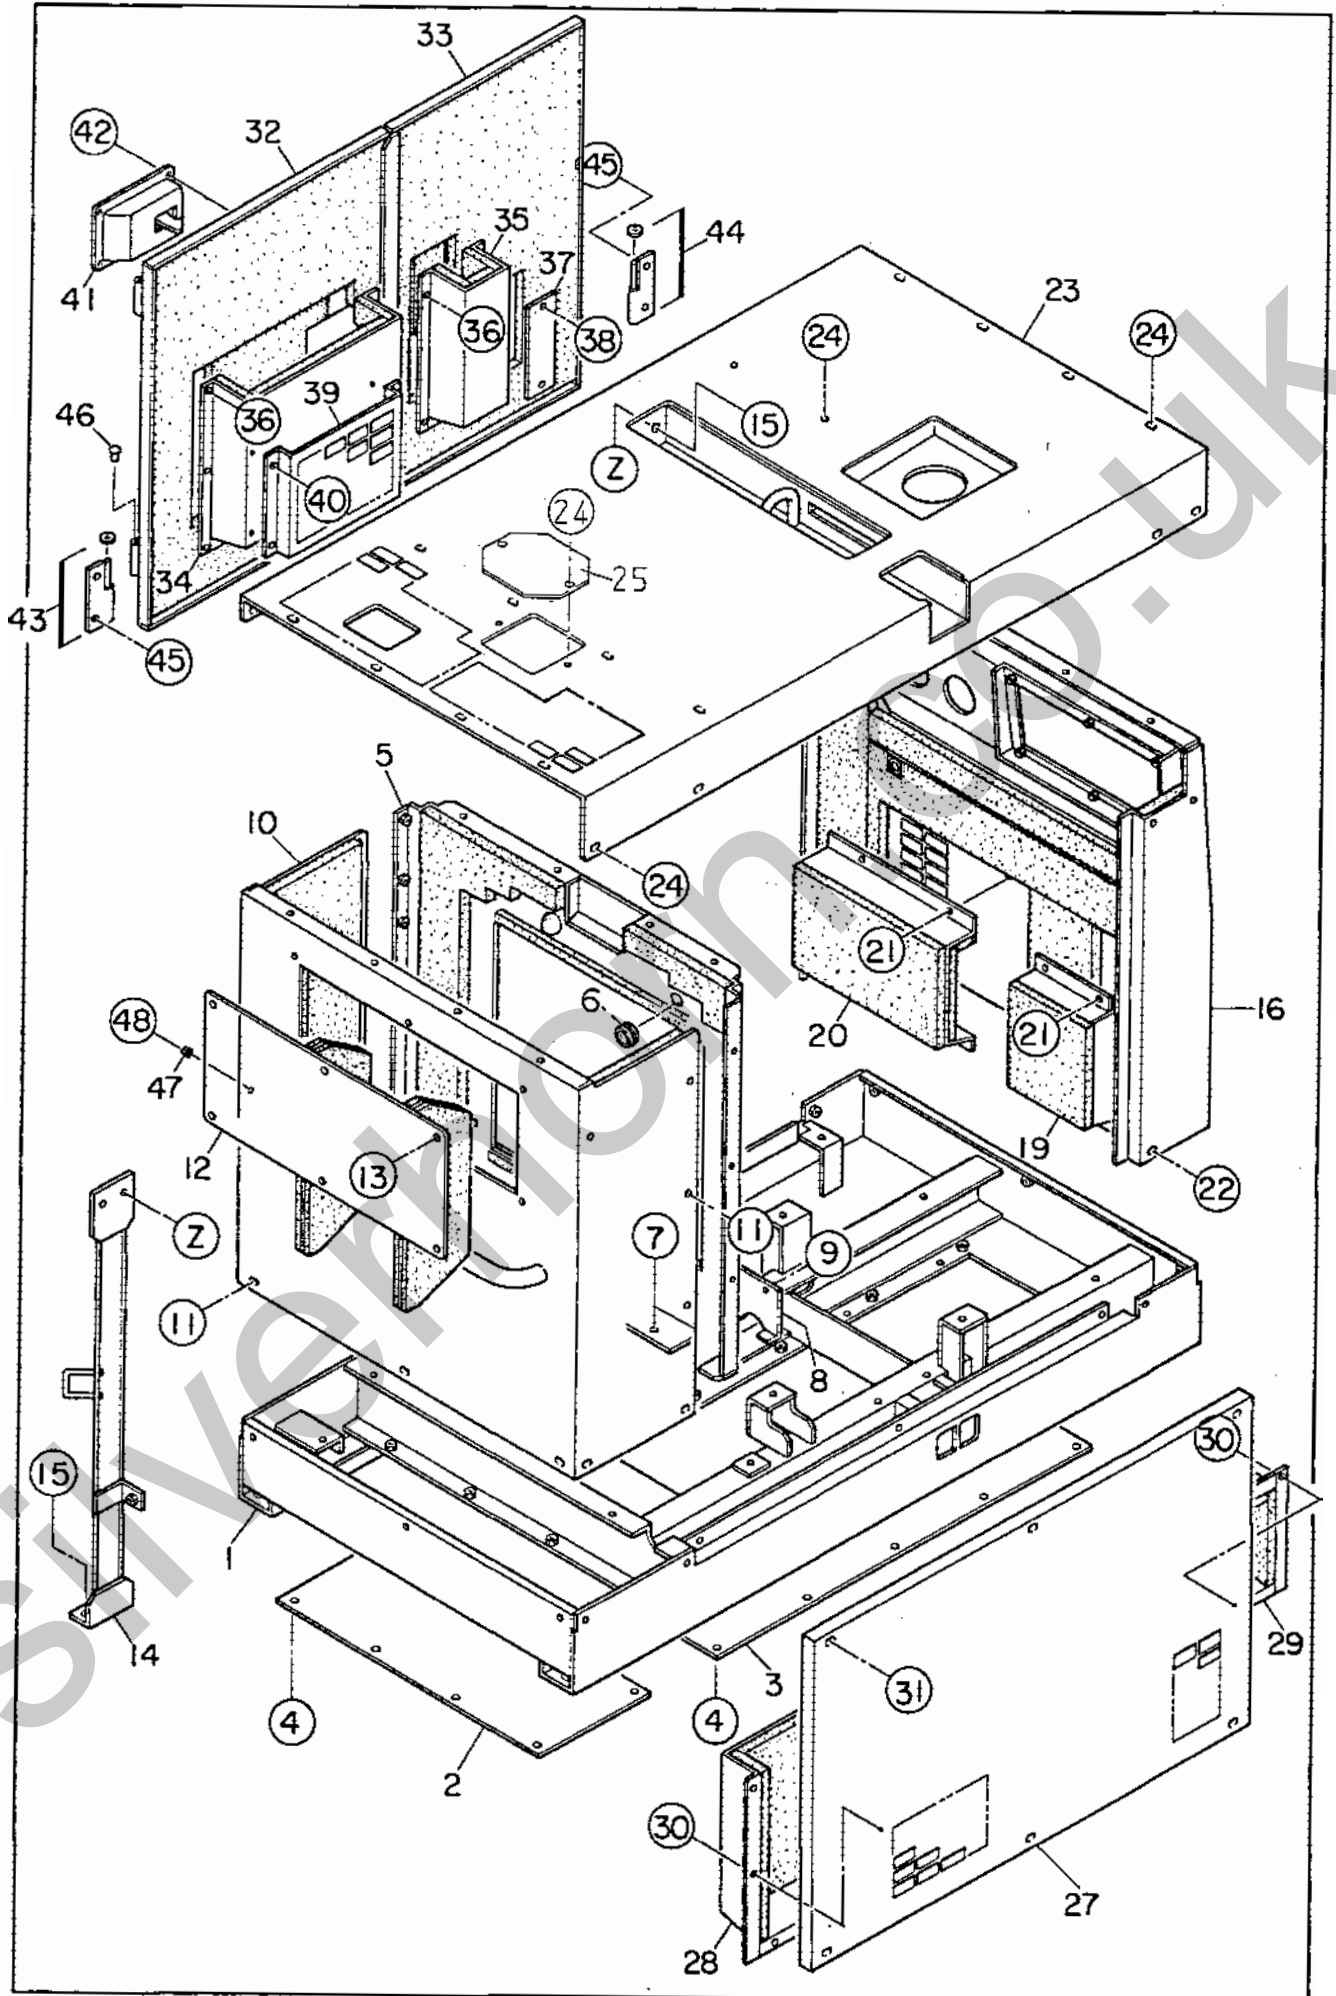





見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数量Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
1	E 14130 00002	ベース Base		1					
2	E 14141 00004	床板 Floor Panel		1					
3	E 14141 00404	床板 Floor Panel		1					
4	00171 08020	六角ボルト Hex. Head Bolt		18					
5	E 13102 00003	フロント フレーム Front Frame		1					~3783554
	E 14243 01103	フロント フレーム Front Frame		1					3783555~
	E 14932 00204	吸音材 Lining		1					~3783554
	E 14942 02504	吸音材 Lining		1					3783555~
6	06018 50264	グロメット Grommet	SG-24A	1					
7	00171 08020	六角ボルト Hex. Head Bolt		2					
8	E 13138 00004	カバー Cover		1					~3783554
	E 14242 00804	カバー Cover		1					3783555~
9	00171 08020	六角ボルト Hex. Head Bolt		2					
10	E 14230 00003	フロント フレーム Front Frame		1					
	E 14932 00004	吸音材 Lining		1					
11	00171 08020	六角ボルト Hex. Head Bolt		10					
12	E 14242 00103	フロント フレーム カバー Cover, front frame		1					
	E 14942 00604	吸音材 Lining		1					
13	00171 08020	六角ボルト Hex. Head Bolt		6					
14	E 14333 00003	吊り金具 Hanger		1					
15	00171 10025	六角ボルト Hex. Head Bolt		4					
16	E 14430 00002	リア フレーム Rear Frame		1					~3693368
	E 14430 00012	リア フレーム Rear Frame		1					3693369~




見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
	E 14934 00004	吸音材 Lining		1					
17	E 14460 00003	マニホールド カバー Cover, manifold		1					~3693368
18	02070 06000	六角ナット Hex. Nut		10					~3693368
19	E 14468 00104	ダクト Duct		1					
	E 14934 00304	吸音材 Lining		1					
20	E 14468 00004	ダクト Duct		1					
	E 14934 00204	吸音材 Lining		1					
21	02070 06000	六角ナット Hex. Nut		8					
22	00171 08020	六角ボルト Hex. Head Bolt		5					
23	E 14630 00002	ルーフ パネル Roof Panel		1					~3783554
	E 14640 01202	ルーフ パネル Roof Panel		1					3783555~
	E 14936 00004	吸音材 Lining		1					
24	00171 08020	六角ボルト Hex. Head Bolt		22					~3746179
	00171 08020	六角ボルト Hex. Head Bolt		24					3746180~
25	E 93110 00003	フィラ カバー Filler Cover		1					~3746179
	E 91191 00504	フィラ カバー Filler Cover		1					3746180~
26	16251 65204	鎖 Chain		1					~3746179
27	E 14531 00003	サイド パネル Side Panel		1					
	E 14935 00204	吸音材 Lining		1					
28	E 14568 00004	ダクト Duct		1					
	E 14935 00304	吸音材 Lining		1					
29	E 14568 00104	ダクト Duct		1					
	E 14935 00404	吸音材 Lining		1					

見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
30	02070 06000	六角ナット Hex. Nut		12					
31	00171 08040	六角ボルト Hex. Head Bolt		6					
32	E 14530 00003	サイド ドア Side Door		1					
	E 14935 00004	吸音材 Lining		1					
33	E 14530 00103	サイド ドア Side Door		1					
	E 14935 00104	吸音材 Lining		1					
34	E 14533 00004	ダクト Duct		1					
	E 14935 00504	吸音材 Lining		1					
35	E 14533 00104	ダクト Duct		1					
	E 14935 00604	吸音材 Lining		1					
36	02070 06000	六角ナット Hex. Nut		11					
37	E 14578 00004	ウィンド プレート Window Plate		1					
38	02070 06000	六角ナット Hex. Nut		2					
39	E 91145 00004	ドア ポケット Door Pocket		1					
40	02070 06000	六角ナット Hex. Nut		4					~3689600
	00171 06016	六角ボルト Hex. Head Bolt		4					3689601~
41	06050 10225	ドア ハンドル Door Handle		1					
	06018 50531	キー Key	001LKZ 6001	(1)					
42	00218 06016	小ネジ Machine Screw		4					
43	08450 47204	蝶番 Hinge		2					
	08450 45004	座金 Washer		2					
44	08450 47104	蝶番 Hinge		2					
	08450 45004	座金 Washer		2					


見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 ・ 備 考 Parts Name ・ Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
			All	A	B	C		
45	00171 08020	六角ボルト Hex. Head Bolt	8					
46	08450 31504	キャップ Cap	4					
47	06018 50097	ストッパ Stopper	2					
48	00210 08020	小ネジ Machine Screw	2					

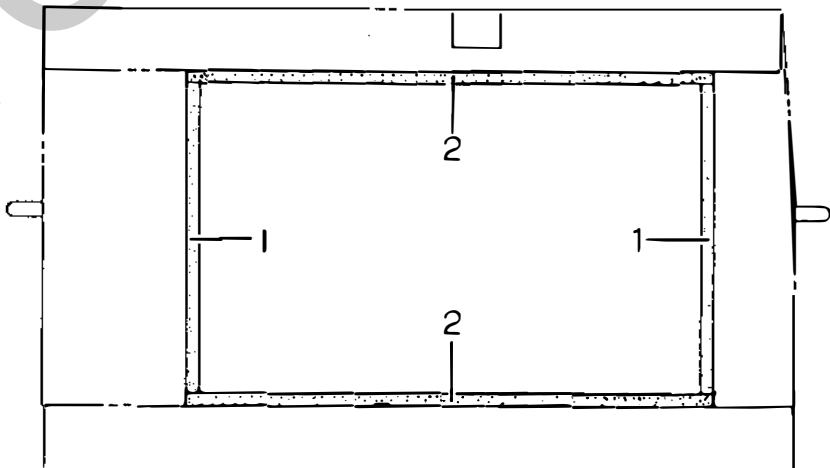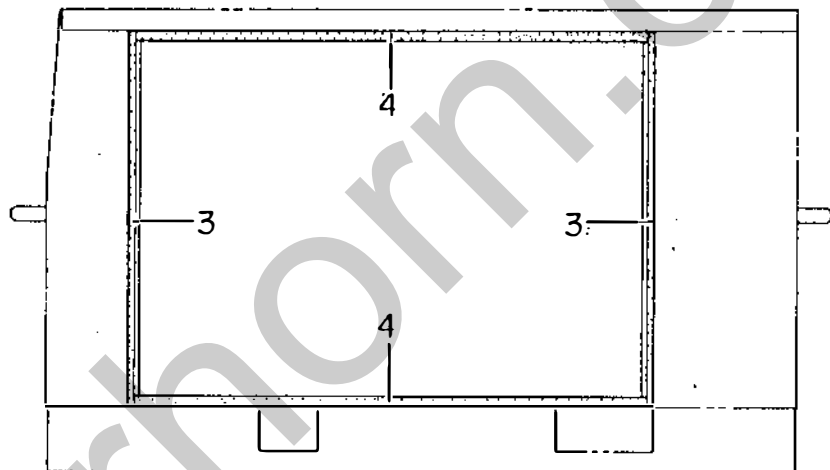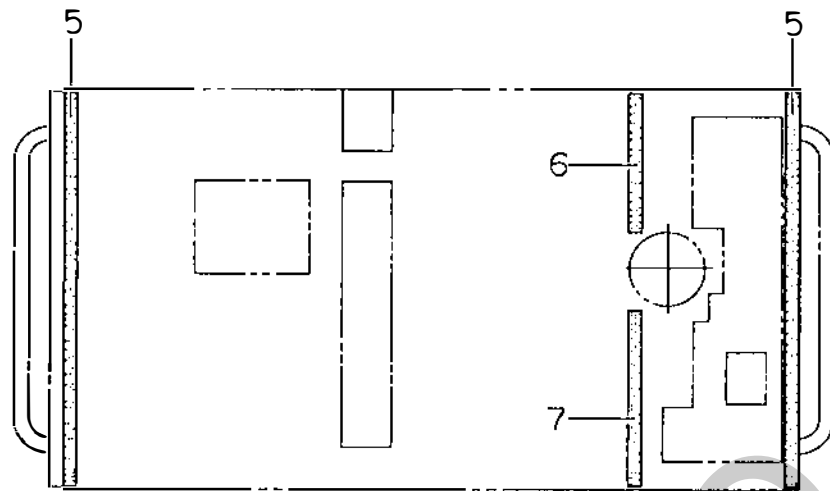


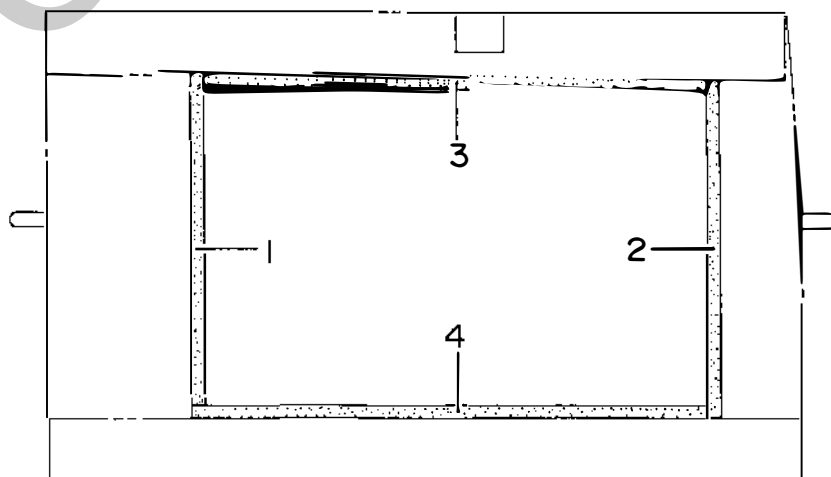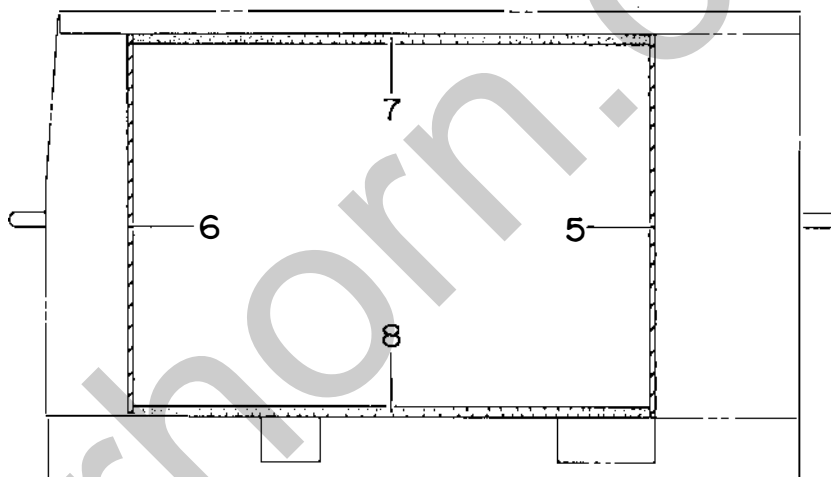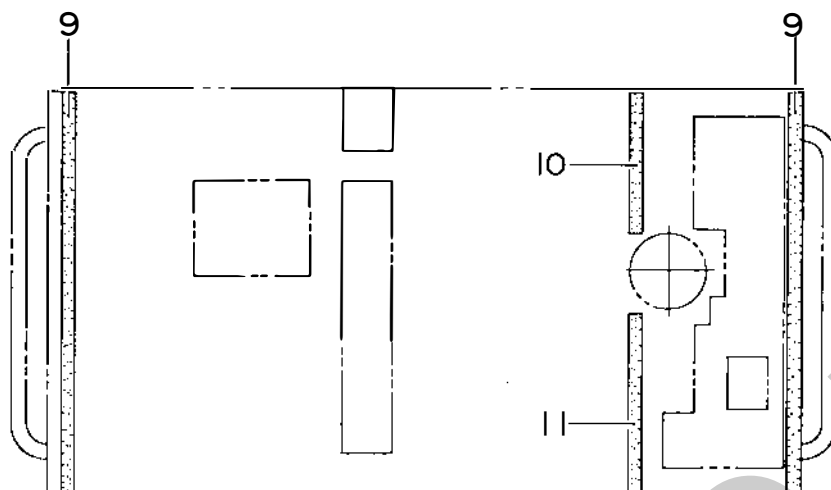

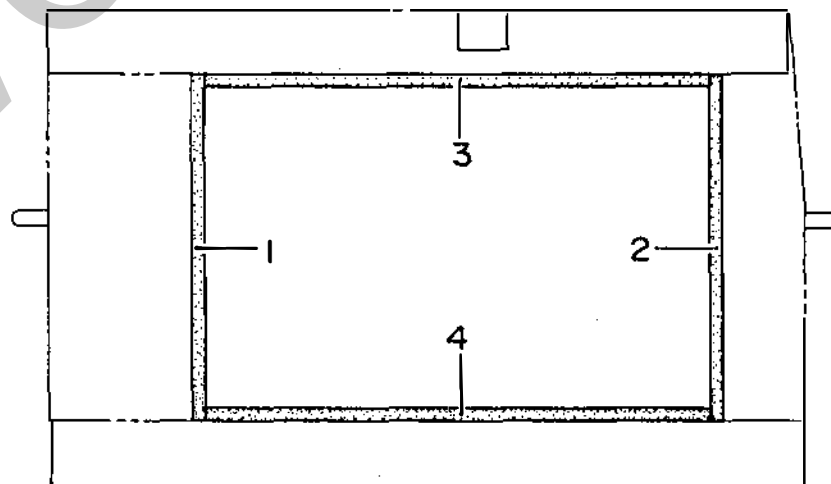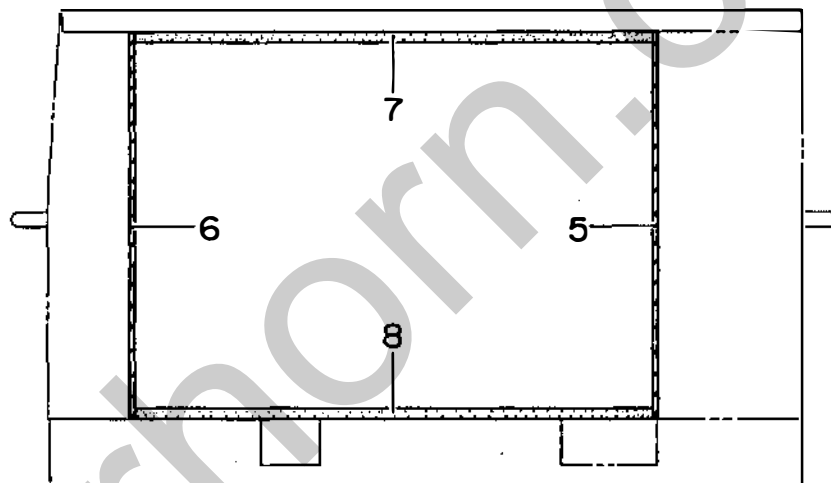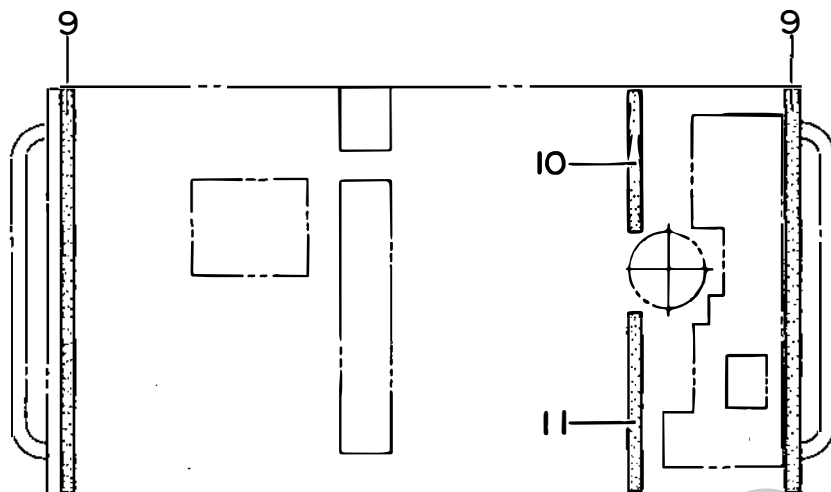

見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数量Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
1	Y 02251 00625	ラバー シール Rubber Seal		1					~3685608
	Y 02250 00650	ラバー シール Rubber Seal		1					3685609~
2	Y 02251 00650	ラバー シール Rubber Seal		1					~3685608
	Y 02250 00650	ラバー シール Rubber Seal		1					3685609~
3	Y 02251 00940	ラバー シール Rubber Seal		1					~3685608
	Y 02251 00950	ラバー シール Rubber Seal		1					3685609~
4	Y 02251 00965	ラバー シール Rubber Seal		1					~3685608
	Y 02251 00950	ラバー シール Rubber Seal		1					3685609~
5	Y 02294 00710	ラバー シール Rubber Seal		1					~3684960
	Y 02294 00730	ラバー シール Rubber Seal		1					3684961~
6	Y 02294 00730	ラバー シール Rubber Seal		1					
7	Y 02294 00950	ラバー シール Rubber Seal		1					~3684960
	Y 02294 00975	ラバー シール Rubber Seal		1					3684961~
8	Y 02294 00970	ラバー シール Rubber Seal		1					~3684960
	Y 02294 00975	ラバー シール Rubber Seal		1					3684961~
9	Y 02283 00760	ラバー シール Rubber Seal		2					
10	Y 02292 00265	ラバー シール Rubber Seal		1					~3783554
	Y 02283 00255	ラバー シール Rubber Seal		1					3783555~
11	Y 02292 00345	ラバー シール Rubber Seal		1					~3783554
	Y 02283 00365	ラバー シール Rubber Seal		1					3783555~

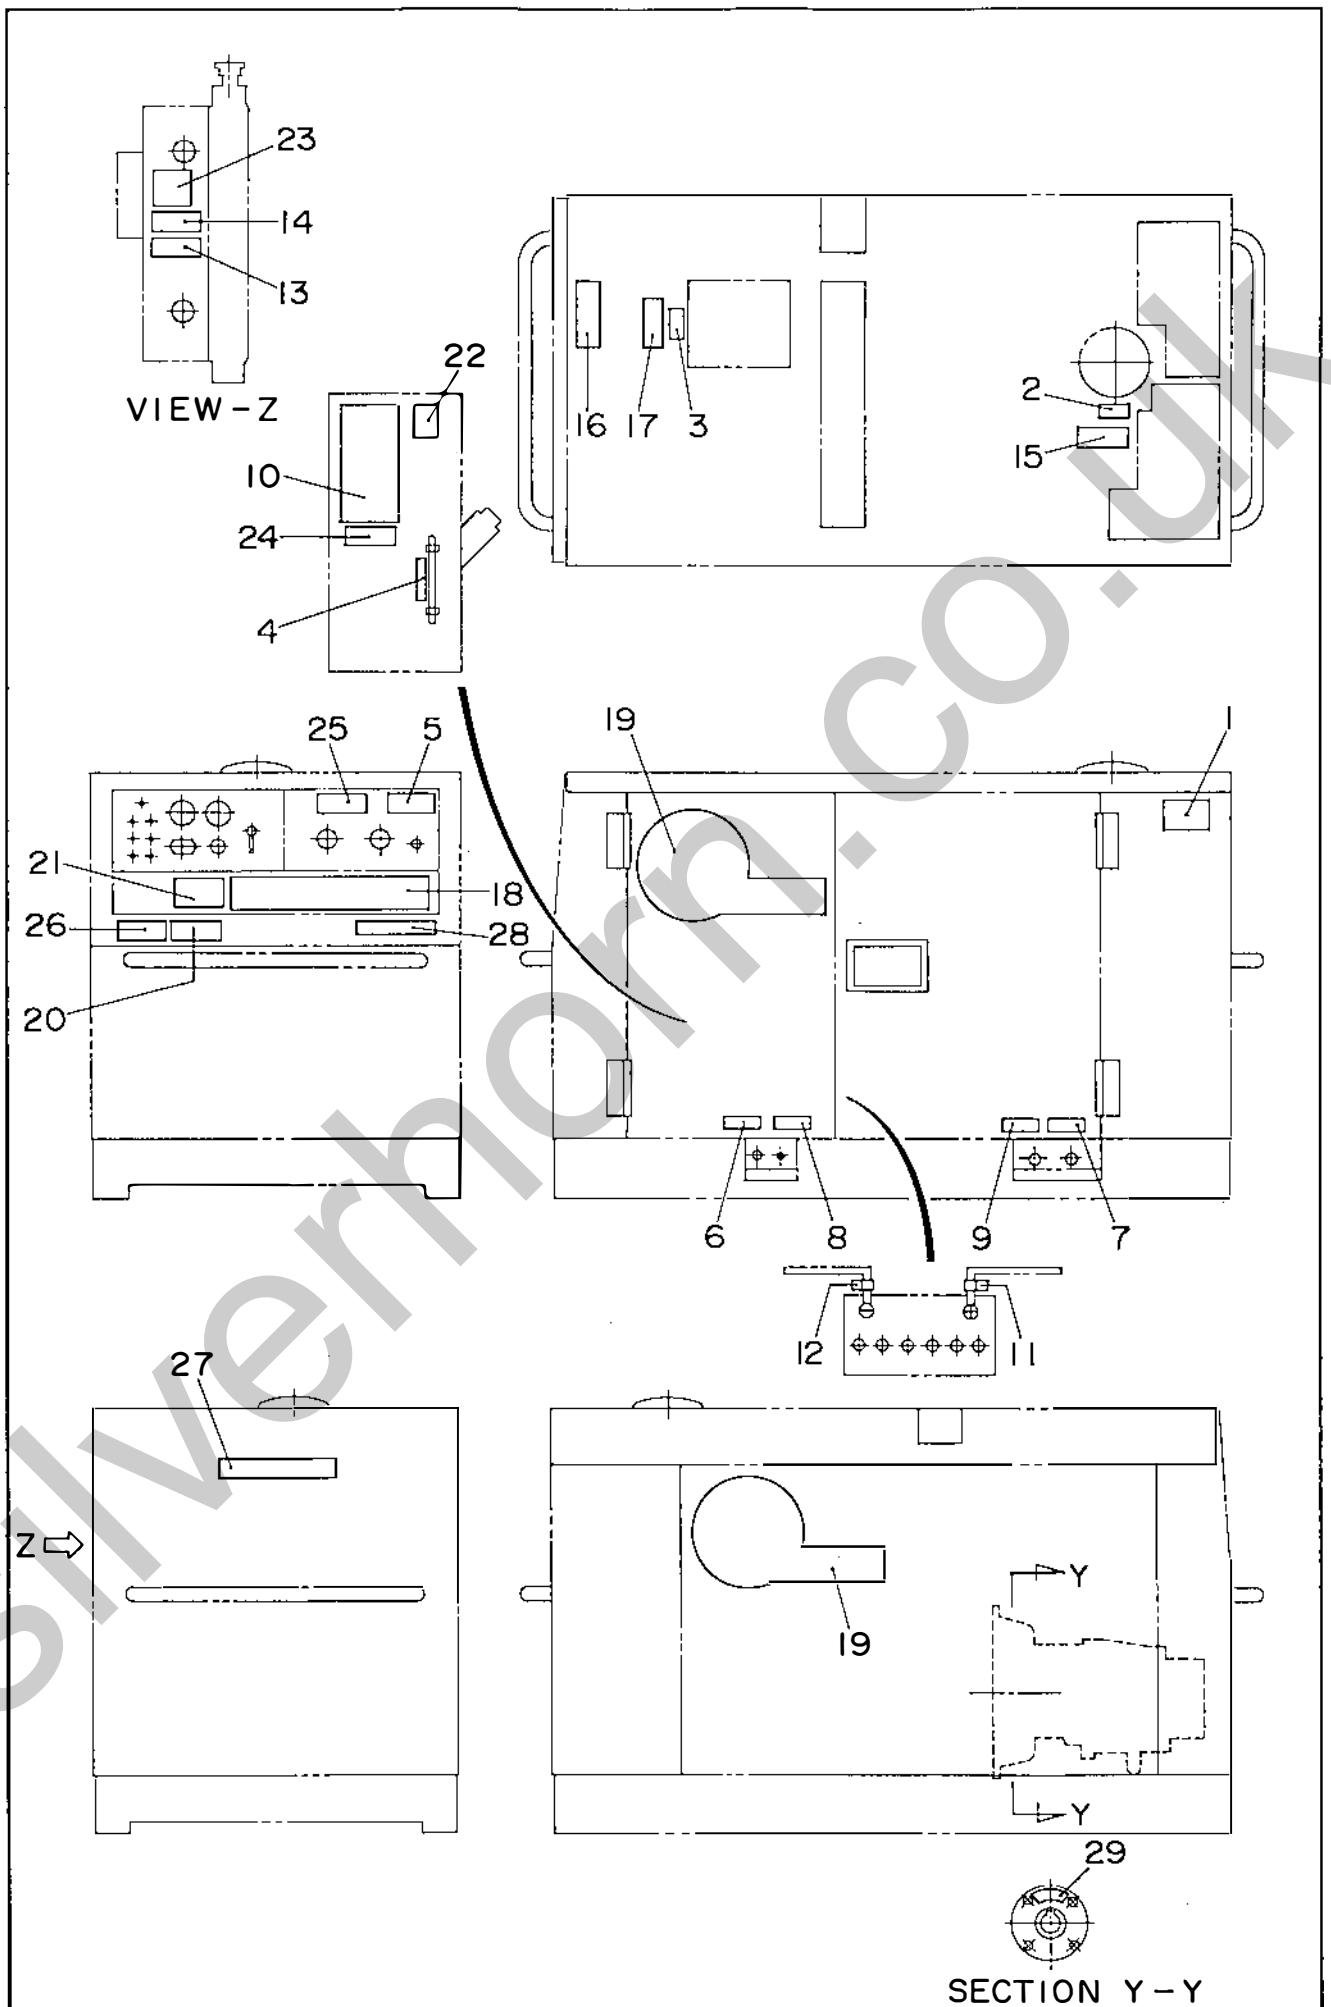

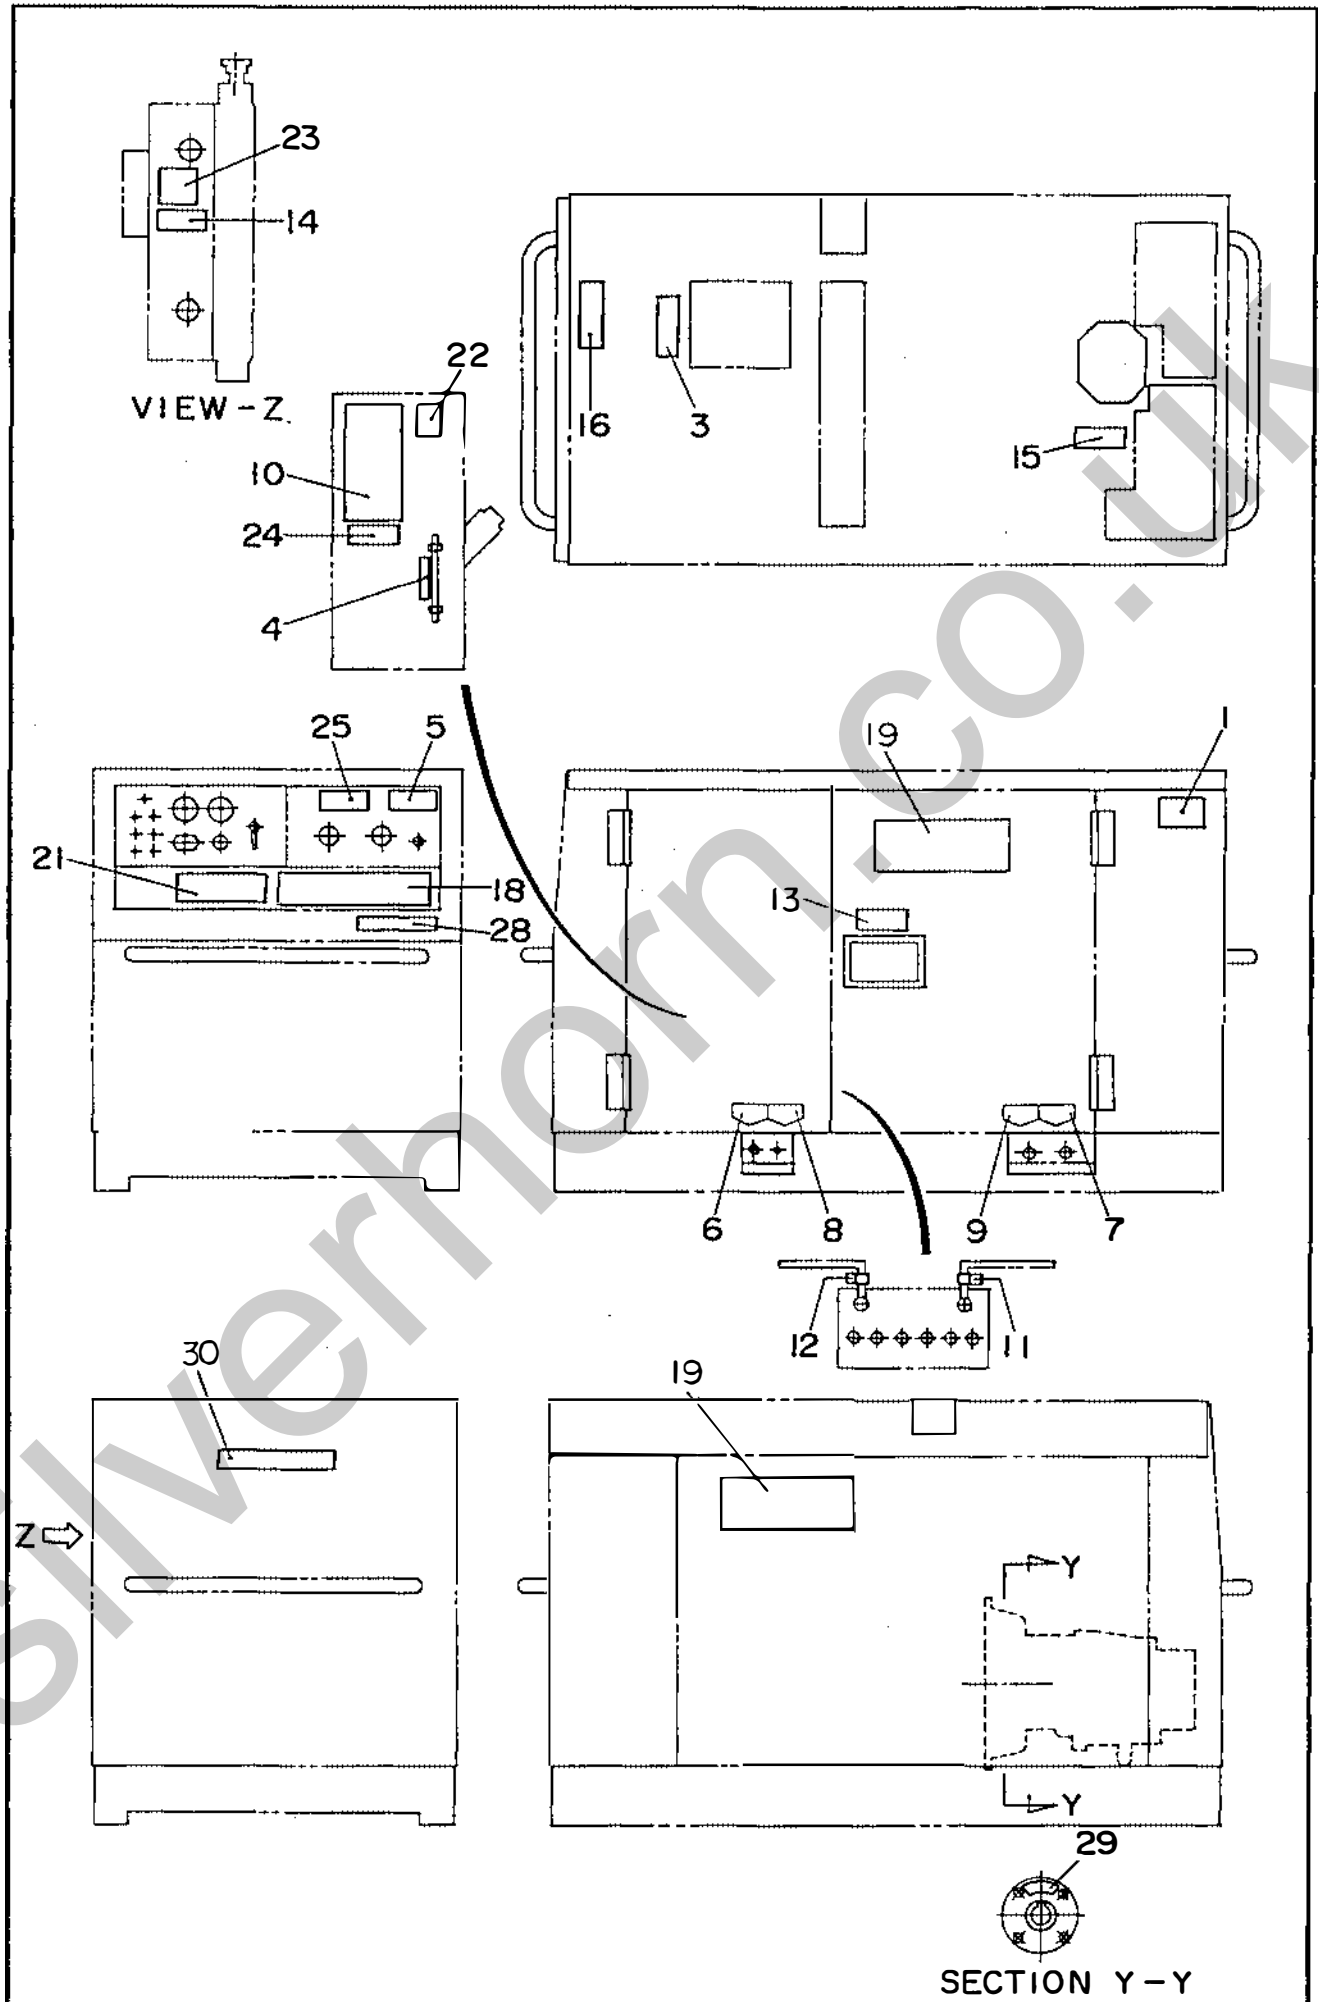

見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数量Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
1	08006 41004	排気ガスに注意 銘板 Decal:Caution Against Exhaust Gas	S-842A	1					~3746179
	B 95052 00004	排気ガスに注意 銘板 Decal:Caution Against Exhaust Gas	B9052 0000	1					3746180~
2	08006 89104	冷却水 銘板 Decal:Cooling Water	S-891	1					~3746179
3	08006 80204	軽油 銘板 Decal:No.2 Diesel Fuel	S-892A	1					~3746179
	E 15510 00904	軽油 銘板 Decal:No.2 Diesel Fuel	E1510 0090	1					3746180~
4	61506 20004	オイルレベルゲージ 銘板 Decal:Oil Level Gauge	S-1278	1					
5	61906 15014	寒冷時始動放出弁 銘板 Decal	S-1533A	1					~3746179
	E 95412 00204	寒冷時始動放出弁 銘板 Decal	E9412 0020	1					3746180~
6	08006 44304	コンプレッサーオイルドレン 銘板 Decal:Compressor Oil Drain	S-1637	1					~3746179
	E 95410 00004	コンプレッサーオイルドレン 銘板 Decal:Compressor Oil Drain	E9410 0000	1					3746180~
7	08006 41404	冷却水ドレン 銘板 Decal:Cooling Water Drain	S-1639	1					~3746179
	B 95420 00604	冷却水ドレン 銘板 Decal:Cooling Water Drain	B9420 0060	1					3746180~
8	08006 42404	燃料ドレン 銘板 Decal:Fuel Drain	S-1640	1					~3746179
	B 95420 00404	燃料ドレン 銘板 Decal:Fuel Drain	B9420 0040	1					3746180~
9	08006 43404	エンジンオイルドレン 銘板 Decal:Engine Oil Drain	S-1641	1					~3746179
	B 95420 00504	エンジンオイルドレン 銘板 Decal:Engine Oil Drain	B9420 0050	1					3746180~
10	08006 44423	コンプレッサー潤滑油注意 銘板 Decal:Caution	S-1642C	1					
11	08006 89404	+ 銘板 Decal:+	S-2090	1					
12	08006 89504	- 銘板 Decal:-	S-2091	1					
13	B 95040 00004	注意 高温部！ 火傷！ 銘板 Decal	B9040 0000	1					~3746179
	B 95052 00104	注意 高温部！ 火傷！ 銘板 Decal	B9052 0010	1					3746180~
14	B 95040 00204	注意 回転部！ 巻き込み！ 銘板 Decal	B9040 0020	1					~3746179
	B 95050 00104	注意 回転部！ 巻き込み！ 銘板 Decal	B9050 0010	1					3746180~

見出番号 Key No.	部 品 番 号 Parts No.	部 品 名 称 Parts Name	備 考 Remarks	1台分数Q'ty				記 号 Symbol	実施号機 Serial No.
				All	A	B	C		
15	B 95041 00004	注意 熱水・蒸気の噴出！ 銘板 Decal	B9041 0000	1					~3746179
	B 95051 00204	注意 熱水・蒸気の噴出！ 銘板 Decal	B9051 0020	1					3746180~
16	B 95311 00404	積み重ね注意！ 銘板 Decal	B9311 0040	1					~3746179
	B 95121 00104	積み重ね注意！ 銘板 Decal	B9121 0010	1					3746180~
17	C 95045 00004	注意 燃料による火災！ 銘板 Decal	C9045 0000	1					~3746179
18	E 15510 00302	取扱注意 銘板 Decal	E1510 0030	1					~3746179
	E 15510 00603	取扱注意 銘板 Decal	E1510 0060	1					3746180~
19	E 15610 01404	Denyo 90 銘板 Decal : Denyo 90	E1610 0140	2					~3746179
	E 15610 02603	90SB 銘板 Decal : 90SB		2					3746180~
20	E 95042 00004	危険 排気ガスによる中毒！ 銘板 Decal	E9042 0000	1					~3746179
21	E 95111 00104	安全にご使用 銘板 Decal	E9111 0010	1					~3746179
	E 95111 01003	安全にご使用 銘板 Decal	E9111 0100	1					3746180~
22	E 95411 00004	吐出空気中に 銘板 Decal	E9411 0000	1					
23	E 95411 00104	注意 オイルクーラに 銘板 Decal	E9411 0010	1					
24	E 95411 00204	注意 高圧！ 怪我！ 銘板 Decal	E9411 0020	1					~3746179
	E 95411 00904	注意 高圧！ 怪我！ 銘板 Decal	E9411 0090	1					3746180~
25	E 95411 00304	注意 残圧！ 怪我！ 銘板 Decal	E9411 0030	1					~3746179
	E 95411 01004	注意 残圧！ 怪我！ 銘板 Decal	E9411 0100	1					3746180~
26	E 95411 00404	危険 吐出空気を 銘板 Decal	E9411 0040	1					~3746179
27	E 95112 00804	D e n y o 銘板 Decal : Denyo		1					~3746179
28	E 95112 01404	D e n y o 銘板 Decal : Denyo		1					
29	E 95311 00104	ギヤや入力軸を 銘板 Decal : Never Hammer	E9311 0010	1					
30	B 95122 00203	エンブレム Emblem	B9122 0020	1					3746180~